


AIR BIKE


Assault

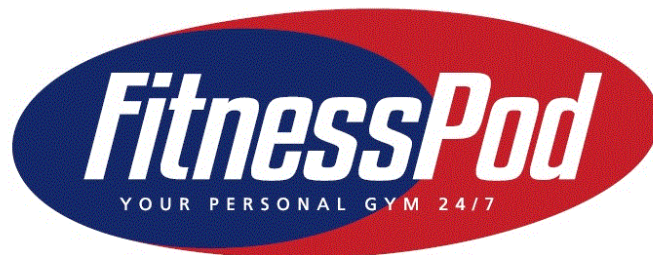

ASSAULT

ASSAULT CONSOLE OVERVIEW


Console Layout

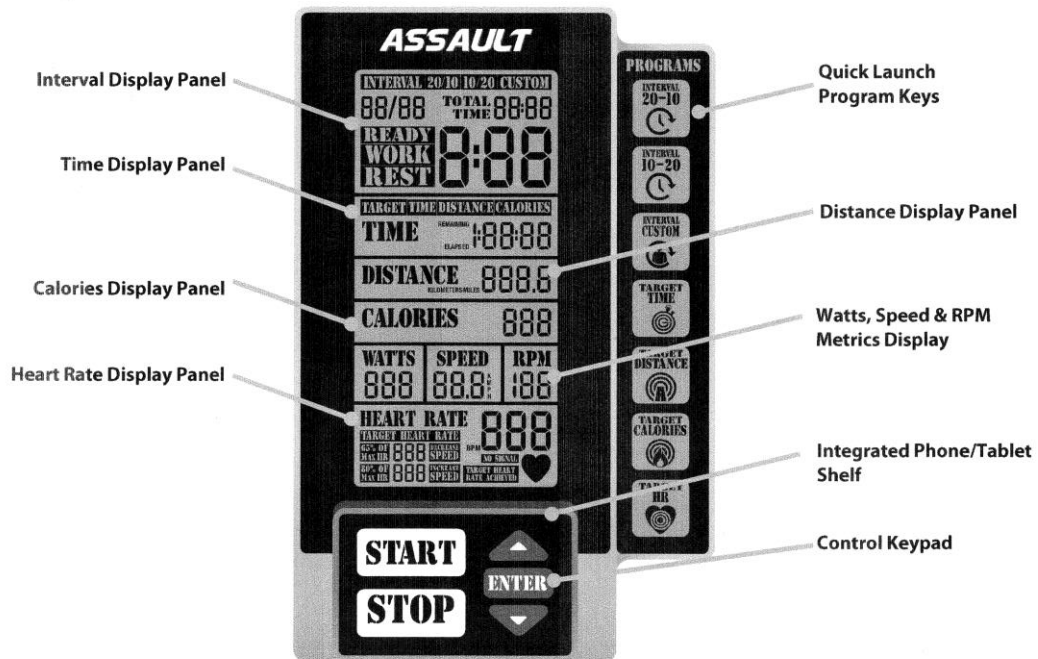

12

ASSAULT AirBike Owner's Manual

Interval Display Panel

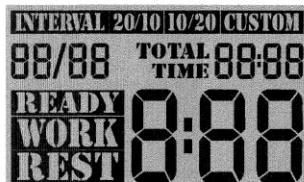


The Interval Display Panel will provide all display details for the *Interval 20/10*, *Interval 10/20* and *Interval Custom* programs.

The upper banner will signal which interval program is running. This display will communicate whether the currently running interval is a Work or Rest period.

The *Total Time* display will count up the total program run time while the large numeric display will count up the Work or Rest segment time.

The 88/88 Display will show the current interval and the total number of intervals in the program

Target Time, Distance & Calories Display Panel

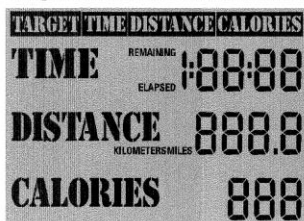

The Target Display Panel will track Time, Distance and Calories during all programs.

A banner across the top will signify if one of the three *Target* programs is running.

The *Time* display will alternate between the remaining and elapsed values throughout the program.

Total distance will be displayed in miles or kilometers depending upon how the console was programmed during the initial setup.

The *Calories* display field will track the number of calories burned during the workout.

Watts / Speed / RPM Display



Watts, Speed and RPM will be displayed during all programs.

Watts are a measurement of energy generation and are frequently used to track the amount of work generated at any given time during a workout.

The *Speed* display will post a value which simulates that of riding a standard bicycle and is derivative of the current RPM or pedal speed. The value will be given in miles-per-hour or kilometers-per-hour, depending upon which units were selected during the console setup process. *RPM* or revolutions-per-minute relates to the speed at which the cranks are spinning.

13

Heart Rate Display Panel



This panel will post a variety of information relating the user's heart rate.

When a signal is detected by the wireless monitor, the user's heart rate will be displayed in the large, three-digit *BPM* (beats-per-minute) field and the *Heart* icon will flash. Conversely, when a signal is not detected, the *No Signal* banner will post and the *Heart* icon will not light.

When the target heart rate program is running, the console help the user maintain a *BPM* range to build cardio-vascular endurance. The upper and lower values of the target range will post next to the *65% of Max HR* and *80% of Max HR* banners and the *Decrease Speed* or *Increase Speed* banners will flash to signal that an increased or decreased pedal speed is needed to bring the heart rate into the desired range. When the user's heart rate is within the target range, the *Target Heart Rate Achieved* banner will post.

CONSOLE KEYS

START Key



The **START** key will launch a program and restart a paused program.

STOP Key



Use the **STOP** key to *end* a program or temporarily pause a running program.

ENTER Key



The **ENTER** key is used to confirm a value to be entered while making adjustments to a program

UP/DOWN Arrow Keys



The **UP/DOWN** Arrow keys allow the user to increase and decrease console values.

Program Quick Keys



The **Program Quick Keys** will launch the associated programs immediately.

ASSAULT

Elapsed Time and Remaining Time Switching

While running a program, the Total Time and Segment Time values will switch between *elapsed* and *remaining*. The user may stop the switching and display the current view by pressing the *Right Arrow* key. Pressing the key again will return the display to switching mode.

Program Quick Launch

The Assault AirBike console allows the user to change the program with the touch of a single key. At any time during the workout, press a **Program Quick Key** to launch the associated program immediately.

Workout Summary

For additional user feedback, the Assault AirBike console provides a brief **Workout Summary** immediately following the completion of the workout session. All metrics such as total time, total distance and total Watts will post for thirty (30) seconds.

PROGRAM OPERATION

Default Program (Quick Start)

The **Quick Start** program option is for users who wish to bypass the onboard programming and begin their workout immediately. The **Quick Start** program will launch as soon as the pedals begin to move. The console will begin to display all metrics, including the user's heart rate if a signal is detected. The program will run continuously until the pedals stop moving. To end the program and view the **Workout Summary**, press the **STOP** key.

INTERVAL 20/10 & INTERVAL 10/20 Programs

The **Interval 20/10** and **Interval 10/20** programs offer the user a series of eight (8) high-intensity workout intervals with preset time segments. This training protocol is commonly known as *Tabata®* or (*High Intensity Interval Training (H.I.I.T.)*). The program will automatically signal the start of each *work* and *rest* interval.

Interval 20/10 Program Number of Intervals: 8 Work Interval Length: 20 seconds Rest Interval Length: 10 seconds	Interval 10/20 Program Number of Intervals: 8 Work Interval Length: 10 seconds Rest Interval Length: 20 seconds
---	---

Cont....

Launch: To start the Interval 20/10 or Interval 10/20 programs, press the appropriate program key.

Run: The time will count down from three to signal the start of each *work* interval.

End: The program will run until the last of the rest segments end. To end the program at any time, press the STOP key. The Workout Summary will launch and post a record of the workout data.

INTERVAL CUSTOM Program

The Interval Custom program is similar to the Interval 20/10 Program except the user has the ability to set the length of the *work* and *rest* intervals as well as the total number of intervals.

Launch: Press the Interval Custom program key.

Setup: When running the Interval Custom program for the first time (or after the console has been reset), the user will be required to enter the total number of intervals. Adjust the displayed value by pressing the UP or DOWN keys, followed by the ENTER key to confirm. The default work interval will then post. Adjust the display value with the UP or DOWN keys. Confirm by pressing ENTER. The default rest interval will post. Adjust the value and confirm by pressing ENTER.

Run: The timer will count down from three to signal the start of each work interval and the program will run immediately.

End: The program will end automatically when all intervals segments have been run. To end the program at any time, press the STOP key. The Workout Summary will launch and post a record of the workout data.

TARGET TIME, TARGET DISTANCE and TARGET CALORIES Programs

The Target Time, Target Distance and Target Calories programs each operate in the identical manner. In each program, the user has the ability to define a set value and the program will continue until that goal has been achieved.

Launch: Press the desired Target program key.

Setup: When running the Target programs for the first time (or after the console has been reset), the display will flash with the default value. Adjust the displayed value by pressing the UP or DOWN keys, followed by the ENTER key to confirm. The program will begin automatically.

Run: The display fields will light and begin to track the progress of the user.

If the Target Time program has been selected, the time target will begin to count down.

If the Target Distance program is running, the console will track the progress toward that goal.

When the Target Calories program has been selected, console will track calories.

End: The program will end automatically when the selected target has been achieved. To end the program at any time, press the STOP key. The Workout Summary will launch and post a record of the workout data.

17

TARGET HEART RATE Program

The Assault AirBike Target Heart Rate Program offers users the ability to target a BPM (beats-per-minute range) for maximum cardiovascular training. With one piece of information (the user's age), the console will automatically calculate the Calculated Maximum Heart Rate as well as the optimized training range (65% of Max Bpm to 80% of Max Bpm).

Launch: Press the Target Heart Rate program key to launch the program.

Setup: When running the Target HR programs for the first time (or after the console has been reset), the AGE? Banner and default age value will flash. Adjust the user's age by pressing the UP or DOWN keys, followed by the ENTER key to confirm. The program will begin automatically.

Run: The display fields will light and begin to track the progress of the user.

If the user's heart rate is below the calculated 65% of max HR range, the SPEED UP banner will flash to indicate that more effort is required to maintain the optimal heart rate.

If the user's heart rate exceeds 80% of the calculated maximum heart rate, the SLOW DOWN banner will flash signaling that the user is working too hard.

End: The Target Heart Rate program will run continuously until ended manually by the user. To end the program at any time, press the STOP key. The Workout Summary will be displayed

HEART RATE TRAINING

Heart Rate is an Important Key to Your Exercise

The Surgeon General also released a report on physical activity and health. This report dictates that exercise and fitness are beneficial for a person's health and reiterated the need for exercise as a key component for disease prevention and healthier living.

The best way to determine exercise intensity is to monitor your pulse rate. Your heart rate can easily be determined by counting the number of heart beats per minute at the chest, wrist or the carotid artery on your neck. It is difficult however to count your own pulse while exercising as it is not possible to count fast enough to accurately track the number of beats per minute. To aid in heart rate training, the Assault AirBike is equipped with a wireless heart rate receiver which can detect a HR signal being transmitted by a wireless chest strap (not included).

Maximum User Weight 350lb / 158.8KG