SYSMAC CJ-series CJ2H (Built-in EtherNet/IP) CPU Units

CJ2H-CPU6□-EIP

CSM_CJ2H-CPU-EIP_DS_E_10_2

Flagship PLCs with Built-in Multifunctional Ethernet Port

• Small, Fast, Flexible:

The CJ2 CPU Units inherit and improve CJ1 features while also adding EtherNet/IP as a standard feature for high-speed, high-capacity Ethernet-based networking.



CJ2H-CPU6□-EIP

Features

- High-speed, high-capacity EtherNet/IP is built into every model.
- The CIP communications protocol is supported for direct access to multivendor devices.
- Tag memory provided for easy access from host PCs and PTs.
- Even more program memory and data memory.
- Superior high-speed control performance: LOAD instructions execute in 16 ns, SINE instructions in 0.59 us.
- The more advanced motion control by the lower cost: Synchronous Unit Operation
- Increased I/O throughput speed by Immediate refreshing instructions with direct processing.

Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. EtherNet/IP TM and DeviceNet TM are trademarks of the ODVA.

Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

Ordering Information

International Standards

- The standards are abbreviated as follows: U: UL, U1: UL (Class I Division 2 Products for Hazardous Locations), C: CSA, UC: cULus, UC1: cULus (Class I Division 2 Products for Hazardous Locations), CU: cUL, N: NK, L: Lloyd, and CE: EC Directives.
- Contact your OMRON representative for further details and applicable conditions for these standards.

CJ2H (Built-in EtherNet/IP) CPU Units

		Specifications						
Product name	I/O capacity/Mountable Units (Expansion Racks)	Program capacity	Upita memory canacity		5 V	24 V	Model	Standards
	2,560 points / 40 Units (3 Expansion Racks max.)	400K steps	832K words DM: 32K words EM: 32K words × 25 banks		0.82*		CJ2H-CPU68-EIP	UC1, N, L, CE
CJ2H (Built-in EtherNet/IP) CPU Units		250K steps	512K words DM: 32K words EM: 32K words × 15 banks	0.016 μs			CJ2H-CPU67-EIP	
CPO UNITS		150K steps	352K words DM: 32K words EM: 32K words × 10 banks			-	CJ2H-CPU66-EIP	
		100K steps	160K words DM: 32K words EM: 32K words × 4 banks				CJ2H-CPU65-EIP	
		50K steps	160K words DM: 32K words EM: 32K words × 4 banks				CJ2H-CPU64-EIP	

^{*}Add 0.15 A per Adapter when using NT-AL001 RS-232C/RS-422A Adapters. Add 0.04 A per Adapter when using CJ1W-CIF11 RS-422A Adapters.

Accessories

The following accessories come with CPU Unit:

Item	Specification				
Battery	CJ1W-BAT01				
End Cover	CJ1W-TER01 (necessary to be mounted at the right end of CPU Rack)				
End Plate	PFP-M (2 pcs)				
Serial Port (RS-232C) Connector	Connector set for serial port connection (D-SUB 9-pin male connector)				

General Specifications

	N		CJ2H-				
	Item	CPU64-EIP	CPU65-EIP	CPU66-EIP	CPU67-EIP	CPU68-EIP	
Enclosure		Mounted in a pane	el				
Grounding		Less than 100 Ω					
CPU Rack Dimension	ns	90 mm × 65 mm ×	< 80 mm (H × D × V	V)			
Weight *		280 g or less					
Current Consumption	on	5 VDC, 0.82 A					
	Ambient Operating Temperature	0 to 55°C					
	Ambient Operating Humidity	10% to 90% (with	no condensation)				
	Atmosphere	Must be free from corrosive gases.					
	Ambient Storage Temperature	-20 to 70°C (excluding battery)					
	Altitude	2,000 m or less					
	Pollution Degree	2 or less: Conforms to JIS B3502 and IEC 61131-2.					
Use Environment	Noise Immunity	2 kV on power supply line (Conforms to IEC 61000-4-4.)					
OCC ENVIRONMENT	Overvoltage Category	Category II: Conforms to JIS B3502 and IEC 61131-2.					
	EMC Immunity Level	Zone B					
	Vibration Resistance	Conforms to IEC60068-2-6. 5 to 8.4 Hz with 3.5-mm amplitude, 8.4 to 150 Hz Acceleration of 9.8 m/s ² for 100 min in X, Y, and Z directions (10 sweeps of 10 min each 100 min total)					
	Shock Resistance	Conforms to IEC60068-2-27. 147 m/s², 3 times in X, Y, and Z directions (100 m/s² for Relay Output Units)			ts)		
	Life	5 years at 25°C					
Battery	Weight	Approx. 10 g					
	Model	CJ1W-BAT01					
Applicable Standard	ls	Conforms to cULus, NK, LR and EC Directives.					

^{*} Includes wight of end covers and battery.

Performance Specifications

	Items				CJ2H-				
			CPU64-EIP	CPU65-EIP	CPU66-EIP	CPU67-EIP	CPU68-EIP		
User Memory			50K steps	100K steps	150K steps	250K steps	400K steps		
I/O Bits	Overhead F	Processing Time	2,560 bits Normal Mode: 200 μs (If tag data links are used with EtherNet/IP, add the following to the above time: 100 μs + Number of transferred words × (0.33 μs or 0.87 μs *)) * When High-speed interrupt function is used						
Processina	Execution Time		Basic Instructions: 0	0.016 μs min.;	4004				
Speed		I/O Interrupts and External Interrupts	Interrupt task startup Return time to cyclic	o time : 26 μs or 17 μ	s * (30 μs in unit Ver. * (15 μs in unit Ver.1.0 used				
	Interrupts	Scheduled Interrupts	Interrupt task startup time: 22 μs or 13 μs * (27 μs in unit Ver.1.0) Return time to cyclic task: 11 μs or 8 μs * (15 μs in unit Ver.1.0) * When High-speed interrupt function is used						
Maximum Numl	per of Conne	ctable Units	Total per CPU Rack Total per PLC: 40 U	or Expansion Rack: nits max.	10 Units max.;				
Maximum Numl	per of Expans	sion Racks	3 max.						
	I/O Area		2,560 bits (160 word	ds): Words CIO 0000	to CIO 0159				
	Link Area		3,200 bits (200 word	ds): Words CIO 1000	to CIO 1199				
	Synchrono	us Data Refresh Area	1,536 bits (96 words	s): Words CIO 1200 t	o CIO 1295				
	CPU Bus U	nit Area	,	ds): Words CIO 1500					
CIO Area	Special I/O		, ,	rds): Words CIO 200					
	DeviceNet A		,	ds): Words CIO 3200					
	Internal I/O	Area		ds): Words CIO 1300 vords): Words CIO 38 external I/O.					
Work Area	1		8,192 bits (512 word	ds): Words W000 to Vexternal I/O.	W511				
Holding Area			8,192 bits (512 words): Words H000 to H511 Bits in this area maintain their ON/OFF status when PLC is turned OFF or operating mode is changed. Words H512 to H1535: These words can be used only for function blocks. They can be used only for function block instances (i.e., they are allocated only for internal variables in function blocks).						
Auxiliary Area			Read-only: 31,744 bits (1,984 words) • 7,168 bits (448 words): Words A0 to A447 • 24,576 bits (1,536 words): Words A10000 to A11535 * Read/write: 16,384 bits (1,024 words) in words A448 to A1471 * * A960 to A1471 and A10000 to A11535 cannot be accessed by CPU Bus Units, Special I/O Units, PTs, and Support Software that do not specifically support the CJ2 CPU Units.						
Temporary Area	1		16 bits: TR0 to TR15						
Timer Area			4,096 timer numbers (T0000 to T4095 (separate from counters))						
Counter Area			4,096 counter numbers (C0000 to C4095 (separate from timers))						
DM Area			32k words * DM Area words for Special I/O Units: D20000 to D29599 (100 words × 96 Units) DM Area words for CPU Bus Units: D30000 to D31599 (100 words × 16 Units) * Bits in the EM Area can be addressed either by bit or by word. These bits cannot be addressed by CPU Bus Units, Special I/O Units, PTs, and Support Software that do not specifically support the CJ2 CPU Units.						
EM Area			32k words/bank × 25 banks max.: E00_00000 to E18_32767 max. *1 *2 *1. Bits in the EM Area can be addressed either by bit or by word. These bits cannot be addressed by CPL Bus Units, Special I/O Units, PTs, and Support Software that do not specifically support the CJ2 CPU Units. *2. EM banks D to 18 cannot be accessed by CPU Bus Units, Special I/O Units, PTs, and Support Software that do not specifically support the CJ2 CPU Units. *3. Force-set/reset to the EM Area is enabled by specifying a start bank in parameter settings. (unit versior 1.2 or higher)						
			32K words × 4 banks	32K words × 4 banks	32K words × 10 banks	32K words × 15 banks	32K words × 25 banks		
	Force-S/R	When EM force-S/R function is used *3	Bank 0 to 3	Bank 0 to 3	Bank 0 to 9	Bank 0 to E	Bank 0 to 18		
	Enabled Banks	When automatic address allocation is specified	Bank 3	Bank 3	Bank 6 to 9	Bank 7 to E	Bank 11 to 18		
Index Registers					_C memory addresses sk or so that they are s		g. (Index Registers ca		
Cyclic Task Fla	g Area		128 flags						
Memory Card			128 MB, 256 MB, or	512 MB					
Operating Mode	es		PROGRAM Mode: Programs are not executed. Preparations can be executed prior to program execution in this mode. MONITOR Mode: Programs are executed, and some operations, such as online editing, and changes to present values in I/O memory, are enabled in this mode.						
					ed. This is the normal of				
Execution Mode	9		Normal Mode						

		CJ2H-							
	Items	CPU64-EIP	CPU65-EIP	CPU66-EIP	CPU67-EIP	CPU68-EIP			
Programming	Languages	Ladder Logic (LD), Sequential Function Charts (SFC), Structured Text (ST), and Instruction Lists (IL)							
Function	Maximum number of definitions	2,048							
Blocks	Maximum number of instances	2,048							
	Type of Tasks	Cyclic tasks Interrupt tasks (Power OFF interrupt tasks, scheduled interrupt tasks, I/O interrupt tasks, and external interrupt tasks)							
Tasks	Number of Tasks	Cyclic tasks: 128 Interrupt tasks: 256 (Interrupt tasks can be defined as cyclic tasks to create extra cyclic tasks. Therefore, the total number of cyclic tasks is actually 384 max.)							
	Type of Symbols	Global symbols: 0		s in the PLC.	LC. ternally accessed usin	g symbols, depending			
Symbols (Variables)	Data Type of Symbols	BOOL (bit) UINT (one-word unsigned binary) UDINT (two-word unsigned binary) ULINT (four-word unsigned binary) UINT (one-word signed binary) UINT (two-word signed binary) UINT (tour-word signed binary) UINT BCD (one-word unsigned BCD) *1 UDINT BCD (two-word unsigned BCD) *1 ULINT BCD (four-word unsigned BCD) *1 REAL (two-word floating-point) REAL (two-word floating-point) LREAL (four-word floating-point) CHANNEL (word) *1 NUMBER (constant or number) *1 WORD (one-word hexadecimal) DWORD (two-word hexadecimal) STRING (1 to 255 ASCII characters) TIMER (timer) *2 COUNTER (counter) *2 User defined data types (data structures) *3 *1. Cannot be used only in Function blocks *2. Can be used only in Function blocks							
	Maximum Size of Symbol	32k words							
	Array Symbols (Array Variables)	One-dimensional arr	ays						
	Number of Array Elements	32,000 elements max.							
	Number of Registrable Network Symbols (Tags)	20,000 max.							
	Length of Network Symbol (Tag) Name	255 bytes max.							
	Encoding of Network Symbols (Tags)	UTF-8							
		8,000 words		16,000 words	32,000 words				
	Memory Capacity	(The EM Area can b	e specified from the CX the CPU Unit model.)	-	up to 32K words multip	olied by the number of			
	Number of Samplings	Bits = 31, one-word	data =16, two-word da	ta = 8, four-word data	= 4				
Data Tari	Sampling Cycle	1 to 2,550 ms (Unit:	1 ms)						
Data Tracing	Trigger Conditions	ON/OFF of specified bit Data comparison of specified word Data size: 1 word, 2 words, 4 words Comparison Method: Equals (=), Greater Than (>), Greater Than or Equals (≥), Less Than (<), Less Than (Equals (≤), Not Equal (≠)							
	Delay Value	-32,768 to +32,767 ms							
File Memory		Memory Card (128, 256, or 512 Mbytes) (Use the Memory Cards provided by OMRON.) EM file memory (Part of the EM Area can be converted for use as file memory.)							
Source/ Comment Memory	Program sources, comments, program indexes, symbol tables	Capacity: 3.5 Mbytes							

			Item		CPU64-EIP	CPU65-EIP	CJ2H- CPU66-EIP	CPU67-EIP	CPU68-EIP
				Logical Ports	8 ports (Used for SEN				CPU66-EIP
		Logical Ports Communications Logical Ports Extended Logical Ports		o ports (Osed for SEIV	D, NECV, CIVIND,	FINION, TADO, and	HADO INSTRUCTIONS.)		
	Comr			64 ports (Used for SEI	ND2, RECV2, CMN	ND2, and PMCR2 in	structions.)		
	CIP	mun	nications	Class 3 (Connection Type)	Number of connections	s: 64			
	Specification UCMM (Non-connection Type)		Maximum number of c Maximum number of s						
	Peripheral (USB) Port				USB 2.0-compliant B-t	ype connector			
	Ba	aud	Rate		12 Mbps max.				
	Tr	ans	mission Dist	ance	5 m max.				
	Serial Port				Interface: Conforms to	EIA RS-232C.			
		_	nunications N		Half-duplex				
			hronization M	lethod	Start-stop				
			Rate		0.3, 0.6, 1.2, 2.4, 4.8, 9	9.6, 19.2, 38.4, 57	.6, or 115.2 (kbps)		
			mission Dist	ance	15 m max.				
		EtherNet/IP Port		-					
	Suo	IVI NA	edia Access	Metnoa	CSMA/CD Baseband				
	cati	T.	ransmission l	Datha	Star				
	Specifications	B	aud Rate	rauis	100 Mbps (100Base-T	·V\			
	Sp	- E	ransmission l	Media	Shielded twisted-pair (,	iories: 5, 5e		
	loi	T			100 m (between hub a	, ,	jones. 5, 50		
	Transmission	N	Transmission Distance Number of Cascade Connections		No restrictions if switch	·			
		CI	IP Communic	ations: Tag Data Links	-				
			Number of 0	Connections	256				
Commu-			Packet Inter	val (Refresh period)	0.5 to 10,000 ms (Unit Can be set for each co of nodes.)		ill be refreshed at th	e set interval, regardle	ess of the number
nications			Maximum al	lowed communications per Unit	6,000 to 12,000 pps *	1 *2			
			Number of F	Registerable Tag	256				
			Type of Tag	s	CIO, DM, EM, HR, WF	R, and Network syr	mboles		
				Tags per Connection	8 (Seven tags if PLC status is included in the segment.)				
			Maximum Li	ink Data Size per Node	184,832 words				
				ata Size per Connection	252 or 722 words *3 (Data is synchronized	within each conne	ction.)		
	ons		Number of F	Registrable Tag Set	256 (1 connection = 1	· '			
	Specification			umber of Tags	722 words (One word Output/send (CPU Uni			n the segment.)	
			CPU Unit *4		Input/receive (EtherNe	et/IP to CPU Unit):	256		
	Communications		Cycle of CP		Output/send (CPU to E Input/receive (EtherNe				
	munic		Settings du	ag Data Link Parameter ring Operation	OK * 5				
	E			acket Filter *6	OK				
		0	IP Communic essages	ations: Explicit	_				
			Class 3 (Co	nnection Type)	Number of connections	s: 128			
			UCMM (Non	-connection Type)	Maximum number of c Maximum number of s				
			CIP Routing	l	OK (CIP routing is enabled for the following remote Units: CJ1W-EIP21, CJ2H-CPU6□-EIP, CJ2M-CPU3□, and CS1W-EIP21.)				P, CJ2M-CPU3□,
		FI	NS Commun	ications	-				
			FINS/UDP		OK				
			FINS/TCP		16 connections max.				
		Et	therNet/IP Co	nformance Test	Conforms to A5.				
		Et	therNet/IP Int	erface	10Base-T/100Base-TX Auto Negotiation/Fixed				

- *1. "Packets per second" is the number of communications packets that can be processed per second.
- *2. When using the EtherNet/IP Unit with version 3.0 or later. When using the EtherNet/IP Unit with version 2.1 or earlier, the maximum allowed communications bandwidth per Unit is 6,000 pps. When using the EtherNet/IP Unit with version 3.0 or later, the Network Configurator with version 3.57 or higher is required.
- *3. Large Forward Open (CIP optional specification) must be supported in order for 505 to 1,444 bytes to be used as the data size. Application is supported between CS/CJ-series PLCs. When connecting to devices from other manufacturers, make sure that the devices support the Large Forward Open specification.
- *4. If the maximum number is exceeded, refreshing will require more than one CPU Unit cycle.
- ***5.** When changing parameters, however, the EtherNet/IP port where the change is made will be restarted. In addition, a timeout will temporarily occur at the other node that was communicating with that port, and it will then recover automatically.
- *6. The EtherNet/IP port supports an IGMP client, so unnecessary multicast packets are filtered by using a switching hub that supports IGMP snooping.

Function Specifications

	ı	Functions		Description		
Cycle Time	Minimum Cycle Time			A minimum cycle time can be set. (0.2 to 32,000 ms; Unit: 0.1 ms) The minimum cycle time setting can be changed in MONITOR mode. (Unit version 1.1 or higher)		
Management	Cycle Time Mo	nitoring		The cycle time is monitored. (0.01 to 40,000 ms; Unit: 0.01 ms)		
	Background Pr	rocessing		Instructions with long execution times can be executed over multiple cycles to prevent fluctuations in the cycle time.		
	Basic I/O		Cyclic Refreshing	Cyclic refreshing of Basic I/O Units, Special I/O Units, and CPU Bus Units		
	Units, Special I/O Units, and	I/O Refreshing	Immediate Refreshing	I/O refreshing by immediate refreshing instructions		
	CPU Bus		Refreshing by IORF	I/O refreshing by IORF instruction		
	Units	Unit Recogn	ition at Startup	The number of units recognized when the power is turned ON is displayed.		
		Input Respo	nse Time Setting	The input response times can be set for Basic I/O Units. The response time can be increased to reduce the effects of chattering and noise at input contacts. The response time can be decreased to enable detecting shorter input pulses.		
	Basic I/O Units	Load OFF Function		All of the outputs on Basic I/O Units can be turned OFF when an error occurs in RUN of MONITOR mode.		
Unit (I/O)		Basic I/O Unit Status Monitoring		Alarm information can be read from Basic I/O Units and the number of Units recognized can be read.		
Management ·		Unit Restart Bits to Restart Units		A Special I/O Unit or CPU Bus Unit can be restarted.		
	Special I/O Units and CPU Bus Units	Synchronous Unit Operation		The start of processing for all the specified Units can be synchronized at a fixed interval. Maximum number of Units: 10 Units (Only Units that support Synchronous Operation Mode can be used.) Synchronous operation cycle: 0.5 to 10 ms (default: 2 ms) Maximum number of words for synchronous data refreshing: 96 words (total of all Units)		
		Automatic I/O Allocation at Startup		I/O words can be automatically allocated to the Basic I/O Units that are connected in the PLC to start operation automatically without registering Units into I/O tables.		
	Configuration Management			The current unit configuration can be registered in I/O tables to prevent it from being changed, to reserve words, and to set words.		
				The first words allocated to a Units on the Racks can be set.		
	Holding I/O Me	mory when C	hanging Operating Modes	The status of I/O memory can be held when the operating mode is changed or power is turned ON. The forced-set/reset status can be held when the operating mode is changed or power is turned ON.		
	File Memory			Files (such as program files, data files, and symbol table files) can be stored in Memory Card, EM File Memory, or Comment Memory.		
Memory Management	Built-in Flash N	Memory		The user program and Parameter Area can be backed up to an internal flash memory when they are transferred to the CPU Unit.		
	EM File Function	on		Parts of the EM Area can be treated as file memory.		
	Storing Comments			I/O comments can be stored as symbol table files in a Memory Card, EM file memory, or comment memory.		
	EM Configuration			EM Area can be set as trace memory or EM file memory.		
	Automatic File	Transfer at S	tartup	A program file and parameter files can be read from a Memory Card when the power is turned ON.		
Memory Cards	Program Repla	cement durin	g PLC Operation	The whole user program can be read from a Memory Card to CPU Unit during operation.		
	Function for Reading and Writing Data from a Memory Card			Data in I/O memory in the CPU Unit can be written to a Memory Card in CSV/TXT format. Data in CSV/TXT format in the Memory Card can be read to I/O memory in the CPU Unit.		

Communication	Funct	tion	Description				
Communication	Peripheral (USB)		Bus for communications with various kinds of Support Software running on a personal computer. High-speed communications are supported.				
	Serial Port		_				
	Host Link (SYSWAY) Communications No-protocol Communications NT Link Communications Peripheral Bus		Host Link commands or FINS commands placed between Host Link headers and terminators can be sent from a host computer or PT to read/write I/O memory, read/control the operating mode, and perform other operations for PLC. I/O instructions for communications ports (such as TXD/RXD instructions) can be used for data transfer with peripheral devices such as bar code readers and printers.				
			I/O memory in the PLC can be allocated and directly linked to various PT functions, includi status control areas, status notification areas, touch switches, lamps, memory tables, and other objects.				
			Bus for communications with various kinds of Support Software running on a personal computer. High-speed communications are supported.				
	Serial Gateway	,	This gateway enables receiving and automatically converting FINS to the CompoWay/F.				
	EtherNet/IP Port		100Base-TX/10Base-T Protocols: TCP/IP, UDP, ARP, ICMP (ping only), BOOTP Applications: FINS, CIP, SNTP, DNS (Client), FTP (Server)				
	CIP	Tag Data Links	Programless cyclic data exchanges with the devices on the EtherNet/IP network.				
	Communications	Message Communications	Any CIP commands can be received from the devices on the EtherNet/IP network.				
	Service FINS	moodago communicationo	This of communication and the received from the devices of the Enterview from the month.				
	Communications Service	Message Communications	Any FINS commands can be transferred with the devices on the EtherNet/IP network.				
	Scheduled Interrup	pts	Tasks can be executed at a specified interval (minimum of 0.2 ms or 0.1 ms *, Unit: 0.1 ms). * When High-speed interrupt function is used.				
	Power OFF Interru	pts	A task can be executed when CPU Unit's power turns OFF.				
Interrupt	I/O Interrupt Tasks	1	A task can be executed when an input signal is input to an Interrupt Input Unit.				
	External Interrupt	Tasks	A task can be executed when interrupts are requested from a Special I/O Unit or a CPU Bus Unit.				
	High-speed Interru	upt Function	Improves performance for executing interrupt tasks with certain restrictions. (Unit version 1.1 or later.)				
	Clock Function		Clock data is stored in memory. Accuracy (Accuracy depends on the temperature.) Ambient temperature of 55°C: -3.5 to +0.5 min error per month Ambient temperature of 25°C: -1.5 to +1.5 min error per month Ambient temperature of 0°C: -3 to +1 min error per month				
	Operation Start Tir	me Storage	The time when operating mode was last changed to RUN mode or MONITOR mode is stored.				
Clock	Operation Stop Time Storage		The last time a fatal error occurred or the last time the operating mode was changed to PROGRAM mode is stored.				
	Startup Time Storage		The time when the power was turned ON is stored.				
	Power Interruption	Time Storage	The time when the power is turned OFF is stored.				
	Total Power ON Ti	me Calculation	The total time that the PLC has been ON is stored in increments of 10 hours.				
	Power ON Clock D	ata Storage	A history of the times when the power was turned ON is stored.				
	User Program Ove	rwritten Time Storage	The time that the user program was last overwritten is stored.				
	Parameter Date Sto	orage	The time when the Parameter Area was overwritten is stored.				
Power	Memory Protection		Holding Area data, DM Area data, EM Area data, Counter Completion Flags, and counter present values are held even when power is turned OFF. CIO Area, Work Area, some Auxiliary Area data, and Timer Completion Flags, timer present values, index registers, and data registers can be protected by turning ON the IOM Hold Bit in the Auxiliary Area, and by also setting the IOM Hold Bit to "Hold" in the PLC Setup.				
Supply Management	Power OFF Detecti	ion Time Setting	The detection time for power interruptions can be set. AC power supply: 10 to 25 ms (variable) DC power supply: 2 to 5 ms (CJ1W-PD022) or 2 to 20 ms (CJ1W-PD025)				
	Power OFF Detecti	ion Delay Time	The detection of power interruptions can be delayed: 0 to 10 ms (Not supported by the CJ1W-PD022.)				
	Number of Power I	Interruptions Counter	The number of times power has been interrupted is counted.				
Function Bloc	ks		Standard programming can be encapsulated as function blocks.				
	Languages in Fund	ction Block Definitions	Ladder programming or structured text				
	Online Editing		The program can be changed during operation (in MONITOR or PROGRAM mode), except for block programming areas.				
	Force-Set/Reset		Specified bits can be set or reset. Force-set/reset to the EM Area is enabled by specifying a start bank in parameter setting. (unit version 1.2 or higher)				
	Differentiate Monit	toring	ON/OFF changes in specified bits can be monitored.				
Debugging	Data Tracing		The specified I/O memory data can be stored in the trace memory in the CPU Unit. The triggers can be set. • The trace data can be uploaded during data tracing using CX-Programmer, which enables continuously logging the data by constantly uploading the trace data (trace data uploading during tracing). • Data tracing can be automatically started when operation is started (i.e., when the operating mode is changed from PROGRAM mode to MONITOR or RUN mode).				
	Storing Location o	of Error when an Error Occurs	The location and task number where execution stopped for a program error is recorded.				
	Program Check		The programs can be checked for items such as no END instruction and FALS/FAL errors at startup.				
			· · · · · · · · · · · · · · · · · · ·				

	Funct	tion	Description
	Error Log		A function is provided to store predefined error codes in CPU Unit, error information, and time at which the error occurred.
	CPU Error Detection	on	CPU Unit WDT errors are detected.
	User-defined Failu	re Diagnosis	Errors can be generated for user-specified conditions: Non-fatal errors (FAL) and fatal errors (FALS). Program section time diagnosis and program section logic diagnosis are supported (FPD
	Land OFF Franchisco		instruction). This function turns OFF all outputs from Output Units when an error occurs.
	RUN Output		The RUN output from the CJ1W-PA205R turns ON while CPU Unit is in RUN mode or MONITOR mode.
	Basic I/O Load She	ort-circuit Detection	This function provides alarm information from Basic I/O Units that have load short-circuit protection.
	Failure Point Detection		The time and logic of an instruction block can be analyzes using the FPD instruction.
	CPU Standby Dete		This function indicates when the CPU Unit is on standby because all Special I/O Units and CPU Bus Units have not been recognized at the startup in RUN or MONITOR mode.
	System FAL Error Detection (User-defined non-fatal error)		This function generates a non-fatal (FAL) error when the user-defined conditions are met in program.
		Duplicate Refreshing Error Detection	This function detects an error when an immediate refreshing Instruction in an interrupt task is competing with I/O refreshing of a cyclic task.
		Basic I/O Unit Error Detection	
		Backup Memory Error Detection	This function detects errors in the memory backup of the user programs and parameter area (backup memory).
		PLC Setup Error Detection	This function detects setting errors in the PLC Setup.
	Non-fatal Error Detection	CPU Bus Unit Error Detection	This function detects an error when there is an error in data exchange between the CPU Unit and a CPU Bus Unit.
		Special I/O Unit Error Detection	This function detects an error when there is an error in data exchange between the CPU Unit and a Special I/O Unit.
		Tag Memory Error Detection	This function detects errors in tag memory.
		Battery Error Detection	This function detects an error when a battery is not connected to the CPU Unit or when the battery voltage drops.
		CPU Bus Unit Setting Error Detection	This function detects an error when the model of a CPU Bus Unit in the registered I/O tables does not agree with the model that is actually mounted in the PLC.
		Special I/O Unit Setting Error Detection	This function detects an error when the model of a Special I/O Unit in the registered I/O tables does not agree with the model of Unit that is actually mounted.
Self- diagnosis		Memory Error Detection	This function detects errors that occur in memory of the CPU Unit.
and Restoration	I/O Bus Error Detection		This function detects when an error occurs in data transfers between the Units mounted in Rack slots and the CPU Unit and detects when the End Cover is not connected to the CPU Rack or an Expansion Rack.
		Unit/Rack Number Duplication Error	This function detects an error when the same unit number is set for two or more Units, the same word is allocated to two or more Basic I/O Units, or the same rack number is set for two or more Racks.
		Too Many I/O Points Error Detection	This function detects an error when the total number of I/O points set in the I/O tables or the number of Units per Rack exceeds the specified range.
		I/O Setting Error Detection	This function detects an error when the number of Units in the registered I/O tables does not agree with the actual number of Units that is mounted, or an Interrupt Unit has been connected in the wrong position, i.e., not in slot 0 to 3.
		Program Error Detection	This function detects errors in programs.
	Fatal Error	Instruction Processing Error Detection	This function detects an error when the given data value is invalid when executing an instruction, or execution of instruction between tasks was attempted.
	Detection	Indirect DM/EM BCD Error Detection	This function detects an error when an indirect DM/EM address in BCD mode is not BCD.
		Illegal Area Access Error Detection	This function detects an error when an attempt is made to access an illegal area with an instruction operand.
		No END Error Detection	This function detects an error when there is no END instruction at the end of the program.
		Task Error Detection	This function detects an error when there are no tasks that can be executed in a cycle, there is no program for a task, or the execution condition for an interrupt task was met but there is no interrupt task with the specified number.
		Differentiation Overflow Error Detection	This function detects an error when too many differentiated instructions are entered or deleted during online editing (131,072 times or more).
		Invalid Instruction Error Detection	This function detects an error when an attempt is made to execute an instruction that is not defined in the system.
		User Program Area Overflow Error Detection	This function detects an error when instruction data is stored after the last address in user program area.
		Cycle Time Exceeded Error Detection	This function monitors the cycle time (10 to 40,000 ms) and stops the operation when the set value is exceeded.
	Fatal Error	System FALS Error Detection (User-defined Fatal Error)	This function generates a fatal (FALS) error when the user-defined conditions are met in program.
	Detection (Continued from	Version Error Detection	This function detects an error when a user program includes a function that is not supported by the current unit version.
	previous page)	Memory Card Transfer Error Detection	This function detects an error when the automatic file transfer from Memory Card fails at startup.
	Memory Self-restoration Function		This function performs a parity check on the user program area and self-restoration data.

Function			Description		
	Simple Backup Function		This function collectively backs up the data in CPU Unit (user programs, parameters, and I/O memory) and internal backup data in the I/O Units.		
	Unsolicited Communications		A function that allows the PLC to use Network Communications Instruction to send required FINS commands to a computer connected via a Host Link		
Maintenance	ance Remote Programming and Monitoring		Host Link communications can be used for remote programming and remote monitoring through a Controller Link, Ethernet, DeviceNet, or SYSMAC LINK Network. Communications across network layers can be performed. Controller Link or Ethernet: 8 layers DeviceNet or SYSMAC LINK: 3 layers		
	Automatic Online Connection via Network Direct Serial Connection		This function enables automatically connecting to the PLC online when the CX-Programmer is directly connected by a serial connection (peripheral (USB) port or serial port).		
	Network	Via Networks	This function enables connecting the CX-Programmer online to a PLC that is connected via an EtherNet/IP network.		
	Read Protection using Password		This function protects reading and displaying programs and tasks using passwords. Write protection: Set using the DIP switch. Read protection: Set a password using the CX-Programmer.		
Canusitus	FINS Write Protection		This function prohibits writing by using FINS commands sent over the network.		
Security	Unit Name Function		This function allows the users to give any names to the Units. Names are verified at online connection to prevent wrong connection		
	Hardware ID Using Lot Numbers		This function sets operation protection by identifying hardware using the user programs according to lot numbers stored in the Auxiliary Area.		

Unit Versions

Units	Models	Unit version
		CPU: Unit version 1.4 EIP: Unit version 2. ☐ / Unit version 3. ☐
		CPU: Unit version 1.3 EIP: Unit version 2.0
CJ2H CPU Units	CJ2H-CPU6□-EIP	CPU: Unit version 1.2 EIP: Unit version 2.0
		CPU: Unit version 1.1 EIP: Unit version 2.0
		CPU: Unit version 1.0 EIP: Unit version 2.0

Function Support by Unit Version

Unit Version 1.4 or Later

CX-Programmer version 9.3 or higher must be used to enable using the functions added for unit version 1.4.

Unit	CJ2H CPU Unit		
Model	CJ2H-CPU6□-EIP		
Unit version Item	Unit version 1.4 or higher	Unit version 1.3 or earlier	
Synchronous unit operation function Position Control Units with EtherCAT interface CJ1W-NC□82 work for synchronous unit operation.	Supported.	Not supported.	

Unit Version 1.3 or Later

CX-Programmer version 9.1 or higher must be used to enable using the functions added for unit version 1.3.

	Unit	CJ2H CPU Unit		
Model		CJ2H-CPU6□-EIP		
Item	Unit version	Unit version 1.3 or later	Unit version 1.2 or earlier	
Special instructions for certain	CJ1W-NC281/NC481/NC881 Position Control Units: PCU HIGH-SPEED POSITIONING (NCDMV(218))	Supported.	Not supported.	
Special I/O Units	CJ1W-NC281/NC481/NC881 Position Control Units: PCU POSITIONING TRIGGER (NCDTR(219))	Supported.	Not supported.	
New special instructions	SIGNED AREA RANGE COMPARE: ZCPS(088)	Supported.	Not supported.	
	DOUBLE SIGNED AREA RANGE COMPARE: ZCPSL(116)	Supported.	Not supported.	

Unit Version 1.2 or Later

CX-Programmer version 8.3 or higher must be used to enable using the functions added for unit version 1.2.

Unit	CJ2H CPU Unit	
Model	CJ2H-CPU6□-EIP	
Unit version	Unit version 1.2 or higher	Unit version 1.1 or earlier
Item	Office voroion the of higher	One vortion in or damer
EM force-set/reset function	Supported.	Not supported.

Note: User programs that use functions of CJ2H CPU Units with unit version 1.2 or later cannot be used with CJ2H CPU Units with unit version 1.1 or earlier. If an attempt is made to transfer a program that uses any of these functions from the CX-Programmer to a CPU Unit with unit version 1.1 or earlier, an error will be displayed and it will not be possible to download to the CPU Unit.

Unit Version 1.1 or Later

CX-Programmer version 8.1 or higher must be used to enable using the functions added for unit version 1.1.

Unit	CJ2H CPU Unit		
Model	CJ2H-CPU6□-EIP		
Unit version Item	Unit version 1.1 or higher	Unit version 1.0	
High-speed interrupt function Decreased overhead time for interrupt tasks Minimum interval setting of 0.1 ms for Scheduled Interrupt Task	Supported.	Not supported.	
Changing the minimum cycle time setting in MONITOR mode	Supported.	Not supported.	
Synchronous unit operation function Position Control Units (High-speed type) CJ1W-NC□□4 work for synchronous unit operation.	Supported.	Not supported.	
Addition of Immediate refreshing instruction only for specific Special I/O Units and CPU Bus Units For CJ1W-AD042: Analog Input Direct Convert AIDC (216) For CJ1W-DA042V: Analog Output Direct Convert AODC (217) For CJ1W-SCU22/32/42: Direct Receive Via Serial Communications Unit DRXDU (261) Direct Transmit Via Serial Communications Unit DTXDU (262)	Supported.	Not supported.	

Note: User programs that use functions of CJ2H CPU Units with unit version 1.1 or later cannot be used with CJ2H CPU Units with unit version 1.0. If an attempt is made to transfer a program that uses any of these functions from the CX-Programmer to a CPU Unit with unit version 1.0, an error will be displayed and it will not be possible to download to the CPU Unit. If a program file (extension: .OBJ) that uses any of these functions is transferred to a CPU Unit with unit version 1.0, a program error will occur when operation starts or when the function starts and operation of the CPU Unit will stop.

Unit Versions and Programming Devices

The following tables show the relationship between unit versions and CX-Programmer versions.

Unit Versions and Programming Devices

	CPU Unit Functions		Required Programming Device						
CPU Unit			CX-Programmer CX-Programmer					Drawamina	
0.00			Ver. 7.1 or lower	Ver.8.0	Ver.8.1/ Ver.8.2	Ver. 8.3	Ver. 9.1/ Ver.9.2	Ver. 9.3 or higher	Programming Console
CJ2H-CPU6□-EIP	Functions	Using new functions	-	ı	-	-	_	OK	
Unit version 1.4	added for unit version 1.4	Not using new functions	_	OK * 1	OK *1	OK	ОК	ок	
CJ2H-CPU6□-EIP	Functions added for unit version 1.3	Using new functions	-	-	-	-	OK	OK	1
Unit version 1.3		Not using new functions	_	OK *1	OK *1	OK	OK	ОК	
C IOLL CRUICE FIR	Functions	Using new functions	-	-	-	OK	OK	OK	– * 3
CJ2H-CPU6□-EIP Unit version 1.2	added for unit version 1.2	Not using new functions	_	OK *1	OK *1	OK	OK	OK	
CJ2H-CPU6□-EIP	Functions added for unit version 1.1	Using new functions	-	-	OK *2	OK	OK	OK	
Unit version 1.1		Not using new functions	_	OK *1	OK	OK	OK	ОК	
CJ2H-CPU6□-EIP Unit version 1.0	Functions for unit version 1.0		-	ОК	ОК	OK	ОК	ОК	

^{*1.} It is not necessary to upgrade the version of the CX-Programmer if functionality that was enhanced for the upgrade of the CPU Unit will not be used.

Device Type Setting

The unit version does not affect the setting made for the device type on the CX-Programmer. Select the device type as shown in the following table regardless of the unit version of the CPU Unit.


Series	CPU Unit group	CPU Unit model	Device type setting on CX-Programmer Ver. 8.0 or higher
CJ Series	CJ2H CPU Units	CJ2H-CPU6□-EIP	CJ2H

^{*2.} CX-Programmer version 8.2 or higher is required to use the added functions in CJ2H CPU Units (CJ2H-CPU6□-EIP) with unit version 1.1. However only High-speed interrupt function and Changing the minimum cycle time setting in MONITOR mode are supported in CX-Programmer version 8.02.

^{*3.} A Programming Console cannot be used with a CJ2H CPU Unit.

External Interface

A CJ2H CPU Unit (CJ2H-CPU6□-EIP) provides three communications ports for external interfaces: a peripheral (USB) port, a serial port and an EtherNet/IP port.

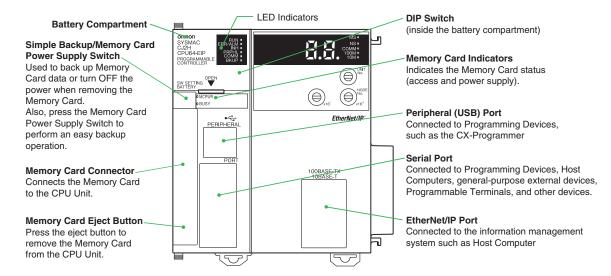


Peripheral (USB) Port

Item	Specification	
Baud Rate	12 Mbps max.	
Transmission Distance 5 m max.		
Interface	USB 2.0-compliant B-type connector	
Protocol	Peripheral Bus	

Serial Port

Item	Specification
Communications method	Half duplex
Synchronization Start-stop	
Baud rate 0.3/0.6/1.2/2.4/4.8/9.6/19.2/38.4/57.6/115.2 kbps *	
Transmission distance 15 m max.	
Interface EIA RS-232C	
rotocol Host Link, NT Link, 1:N, No-protocol, or Peripheral Bus	

^{*}Baud rates for the RS-232C are specified only up to 19.2 kbps. The CJ Series supports serial communications from 38.4 kbps to 115.2 kbps, but some computers cannot support these speeds. Lower the baud rate if necessary.

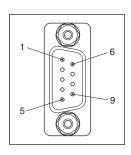

Pin No.	Signal	Name	Direction
1	FG	Protection earth	-
2	SD (TXD)	Send data	Output
3	RD (RXD)	Receive data	Input
4	RS (RTS)	Request to send	Output
5	CS (CTS)	Clear to send	Input
6	5 V	Power supply	_
7	DR (DSR)	Data set ready	Input
8	ER (DTR)	Data terminal ready	Output
9	SG (0 V)	Signal ground	_
Connector hood	FG	Protection earth	_

Note: Do not use the 5-V power from pin 6 of the RS-232C port for anything but CJ1W-CIF11 RS-422A Conversion Adapter, NT-AL001 RS-232C/RS-422A Conversion Adapter and NV3W-M□20L(-V1) Programmable Terminal. The external device or the CPU Unit may be damaged.


EtherNet/IP Port


Item	Specification
Media Access Method	CSMA/CD
Modulation	Baseband
Transmission Paths Star	
Baud Rate 100 Mbps (100Base-TX)	
Transmission Media Shielded twisted-pair (STP) cable; Categories: 5, 5e	
Transmission Distance 100 m (between hub and node)	
Number of Cascade Connections No restrictions if switching hub is used.	
Communications (tag data links, Explicit Messages). FINS communications	

Dimensions (Unit: mm)

CJ2H CPU Unit CJ2H-CPU6□-EIP



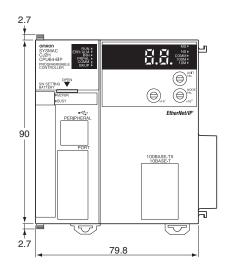

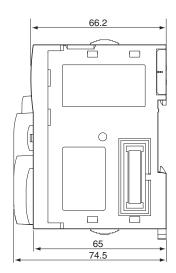

Related Manuals

Cat. No.	Model	Manual	Application	Description
W472	CJ2H-CPU6□-EIP CJ2H-CPU6□ CJ2M-CPU□□	CJ-series CJ2 CPU Unit Hardware User's Manual	Hardware specifications for CJ2 CPU Units	Describes the following for CJ2 CPU Units: Overview and features Basic system configuration Part nomenclature and functions Mounting and setting procedure Remedies for errors Also refer to the Software User's Manual (W473).
W473	CJ2H-CPU6□-EIP CJ2H-CPU6□ CJ2M-CPU□□	CJ-series CJ2 CPU Unit Software User's Manual	Software specifications for CJ2 CPU Units	Describes the following for CJ2 CPU Units: • CPU Unit operation • Internal memory • Programming • Settings • Functions built into the CPU Unit Also refer to the Hardware User's Manual (W472)
W474	CJ2H-CPU6 -EIP CJ2H-CPU6 CJ2M-CPU1 CS1G/H-CPU H CS1G/H-CPU OH CJ1G/H-CPU OH CJ1M-CPU OH CJ1M-CPU OH	CS/CJ/NSJ-series Instructions Reference Manual	Information on instructions	Describes each programming instruction in detail. Also refer to the <i>Software User's Manual</i> (W473) when you do programming.
W342	CJ2H-CPU6 -EIP CJ2H-CPU6 CJ2H-CPU6 CJ2M-CPU CS1G/H-CPU CS1D-CPU CS1D-CPU CS1D-CPU CS1W-SCU CJ1H-CPU CJ1H-CPU CJ1H-CPU CJ1G-CPU CJ1W-SCU CJ1W-SCU CJ1W-SCU CJ1W-SCU CJ1W-SCU CJ1W-SCU CJ1H-XA CP1H-XA NSJ NSJ	CS/CJ/CP/NSJ-series Communications Command Reference Manual	Information on communications for CS/CJ/CP-series CPU Units and NSJ-series Controllers	Describes C-mode commands and FINS commands Refer to this manual for a detailed description of commands for communications with the CPU Unit using C mode commands or FINS commands. Note: This manual describes the communications commands that are addressed to CPU Units. The communications path that is used is not relevant and can include any of the following: serial ports on CPU Units, communications ports on Serial Communications Units/Boards, and Communications Units. For communications commands addressed to Special I/O Units or CPU Bus Units, refer to the operation manual for the related Unit.
W463	CXONE-AL D-V	CX-One Setup Manual	Installing software from the CX- One	Provides an overview of the CX-One FA Integrated Tool Package and describes the installation procedure.
W446		CX-Programmer Operation Manual		
W447	WS02-CXPC□-V□	CX-Programmer Operation Manual Functions Blocks/ Structured Text	Support Software for Windows computers CX-Programmer operating	Describes operating procedures for the CX-Programmer. Also refer to the <i>Software User's Manual</i> (W473) and <i>Instructions Reference Manual</i> (W474) when you do programming.
W469		CX-Programmer Operation Manual SFC Programming	procedure	programming.
W366	WS02-SIMC1-E	CS/CJ/CP/NSJ-series CX-Simulator Operation Manual	Operating procedures for CX- Simulator Simulation Support Software for Windows computers Using simulation in the CX- Programmer with CX- Programmer version 6.1 or higher	Describes the operating procedures for the CX-Simulator. When you do simulation, also refer to the CX-Programmer Operation Manual (W446), Software User's Manual (W473), and CS/CJ/NSJ series Instructions Reference Manual (W474).
W464	CXONE-AL□□D-V□	CS/CJ/CP/NSJ-series CX-Integrator Network Configuration Software Operation Manual	Network setup and monitoring	Describes the operating procedures for the CX-Integrator.

Terms and Conditions Agreement

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

<u>Errors and Omissions.</u> <u>Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is accurate.</u> assumed for clerical, typographical or proofreading errors or omissions.

2016.4

In the interest of product improvement, specifications are subject to change without notice.

