

## **Digital Timer** H5CX-□-N

### **Ultra-compact Timer Provides Advanced Functions and Security Settings.**

#### **Basic Features**

- Short body with depth of only 59 mm (for 24-VAC / 12 to 24-VDC Models with Screw Terminals). \*1
- Character height of 12 mm for better readability (on models with 4 digits).
- The present value display characters can be switched between red, green, and orange. \*2

#### Safety and Reliability

- Power supply circuit and input circuits are isolated for safety and reliability. \*3
- New set value limit and output counter functions have been added. \*\*

#### **Other Features**

- Front Panel can be changed to white or light gray. \*5
- Models with instantaneous contact output added to the series.
- \*1. For 100 to 240 VAC Models with Screw Terminals 78 mm, Models with Sockets: 63.7 mm (case dimension).
  The H5CX-A11, H5CX-L8 and H5CX-B Timers have only red characters.
- \*3. Specifications: 100 to 240 VAC
- The value of the output counter can only be monitored. It cannot be reset
- Replacement Front Panels sold separately



For the most recent information on models that have been certified for safety standards, refer to your OMRON website



Refer to "Safety Precautions" on page 41.


### **Features**

### **Basic Features Ultra Short Body**

The body depth has been greatly reduced. Helps in making thinner control panels. (Models with Screw Terminals)

24-VAC / 12 to 24-VDC Models with Screw Terminals: 59 mm 100 to 240-VAC / VDC Models with Screw Terminals: 78 mm \* Models with Sockets: 63.7 mm (case dimension)

The shortest body for a timer with isolated power supply and input circuits and a maximum ambient temperature of 55°C (according to OMRON investigation in June 2009).



### **Easier to Read**


For better readability, the character height for the present value display is 12 mm (on models with 4 digits), the largest class in the industry. The wide viewing angle and brightness provide excellent visibility.

The number of display segments has also been increased to make settings easier to understand, and the present value display can be switched between red, green and orange so that output status can be seen from a distance.

#### Model with 4 Digits Model with 6 Digits









Easy to read from the top, bottom, and sides!

Note: The H5CX-A11 and H5CX-L8 Timers have only red characters.

### The Easiest Operation

Operation is simplified by the Up/Down Keys for each digit on 4-digit models and Up Keys for each digit on 6-digit models.






### Safety and Reliability Isolated Power Supply and Input Circuits \*1

Power supply circuit and input circuits are isolated for safety and reliability.

Previous non-isolated timers had wiring restrictions and could be damaged if wired incorrectly. The New H5CX removes these worries.

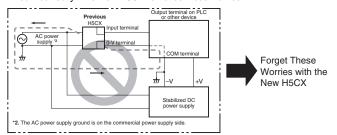

\*1. New Models (H5CX-□-N) with 100 to 240-VAC specifications.

#### Set Value Limit

You can set an upper limit for the set value to prevent unexpected operation of output devices caused by setting mistakes.




### **Output Counter**

An output counter counts the number of times that the output turns ON. (An alarm can be set and the value of the output counter can be monitored, Unit: 1,000 operations.) This counter is useful in managing the service life of the Timer or the load.

### **Other Features**

### **Change the Front Panel Color**

The Front Panel can be replaced with an optional Front Panel (order separately) with a different color to match the installation site. Select from black, white, and light gray.

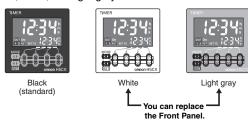

### **Models with Instantaneous Contact Output**

Models with instantaneous contact outputs have been added to the lineup for use with self-holding circuits and as auxiliary relays. These models are also convenient when replacing analog timers.

### **Universal NPN/PNP Input**

DC 2-wire sensors can be connected for a wide range of input devices.

## Waterproof, Dust-proof Structure (UL508 Type 4X and IP66)

Worry-free application is possible in locations subject to water. **Note:** When the Y92S-29 Waterproof Packing is used.

#### **Key Protection**

Select from any of seven protection patterns. Use the best one for the application.

#### **New Modes**

Modes, such as a stopwatch mode (Mode S), have been added. Select any of 15 modes.

### **Model Number Structure**

### **Model Configuration**

		H5CX Series				
		Standard Type H5CX-A Series		Economy Type H5CX-L Series		Six-digit Type
Туре					123V50 123V50	
Model		H5CX-A□-N	H5CX-A11□-N	H5CX-L8□-N	H5CX-L8E□-N	H5CX-BWSD-N
	Timer	Yes		Yes		No
Function	Twin timer	Yes		Yes		No
	Two-stage settings/ forecast output	No		No		Yes
Operating modes		Timer Mode: 11 modes Twin Timer Mode: 4 modes		es	Timer Mode : 4 modes Twin Timer Mode : 2 modes	Timer Mode: 2 modes
Input		NPN/PN	NP input	NPN input None		NPN/PNP input
External	connections	Screw terminal block	11-pin socket	8-pin socket		Screw terminal block
Present value display character color		Red, green, or orange	Red			
Number of display digits		4				6
Instantaneous contacts			None		Provided	None
Gate input		Supp	orted	Not su	pported	Supported
DIP switch settings		Prov	rided	No	one	Provided
Power supply voltage			100 to 240 VAC or 24	4 VAC/12 to 24 VDC		12 to 24 VDC

### Model Number Legend (Not all possible combinations of functions are available.)

### 

### 1. Type Classifier

Symbol	Meaning
Α	Standard type
В	6-digit type
L	Economy type

#### 2. External Connections

Symbol	Meaning
None	Screw terminals
8	8-pin socket
11	11-pin socket

### 3. Settings

Symbol	Meaning
None	One stage
W	Two stages

### 4. Output type

Symbol	Meaning		
None	Contact output (time-limit SPDT)		
Е	Contact output (time-limit SPDT + instantaneous SPDT) *		
S	Transistor output		

<sup>5.</sup> Supply voltage

Symbol	Meaning
None	100 to 240 VAC 50/60 Hz
D	12 to 24 VDC/24 VAC 50/60 Hz *
D	12 to 24 VDC/24 VAC 50/60 Hz

<sup>\*</sup> The H5CX-BWSD-N is available only for 12 to 24 VDC.

Note: Estimates can be provided for coatings and other specifications that are not given in the datasheet. Ask your OMRON representative for details.

### **Ordering Information**

### **List of Models**

Туре	Time specifications	Operating modes	External connections	Inputs	Outputs	Supply voltage	Models		
		Timer Mode A: Signal ON Delay I A-1: Signal ON Delay II A-2: Power ON Delay I A-3: Power ON Delay II	Screw terminals	Signal, Reset,	Contact output (time-limit SPDT)	100 to 240 VAC	H5CX-A-N		
						12 to 24 VDC/ 24 VAC	H5CX-AD-N		
					Transistor output (SPST)	100 to 240 VAC	H5CX-AS-N		
H5CX-A						12 to 24 VDC/ 24 VAC	H5CX-ASD-N		
пэсх-а		b: Repeat cycle 1		Gate (NPN/ PNP inputs)	Contact output	100 to 240 VAC	H5CX-A11-N		
	0.001 to 9.999 s	b-1: Repeat cycle 2 d: Signal OFF Delay E: Interval	11-pin socket	,	(time-limit SPDT)	12 to 24 VDC/ 24 VAC	H5CX-A11D-N		
	0.001 to 99.99 s	F: Cumulative	11-pin socket		Transistor output (SPST)	100 to 240 VAC	H5CX-A11S-N		
	0.1 to 999.9 s 1 to 9999 s	Z: ON/OFF-duty-adjustable flicker S: Stopwatch				12 to 24 VDC/ 24 VAC	H5CX-A11SD-N		
	0.1 to 999.9 min 1 to 9999 min 1 min to 99 h 59 min 0.1 to 999.9 h 1 to 999.9 h  Time A-2 b: F E: I Z: C Twin toff:	Twin Timer Mode toff: Flicker OFF Start 1 ton: Flicker ON Start 1 toff-1: Flicker OFF Start 2 ton-1: Flicker ON Start 2	8-pin socket	Signal, Reset (NPN inputs)	Contact output (time-limit SPDT)	100 to 240 VAC	H5CX-L8-N		
						12 to 24 VDC/ 24 VAC	H5CX-L8D-N		
					Transistor output (SPST)	100 to 240 VAC	H5CX-L8S-N		
						12 to 24 VDC/ 24 VAC	H5CX-L8SD-N		
H5CX-L		Timer Mode A-2: Power ON Delay I b: Repeat cycle 1 E: Interval Z: ON/OFF-duty-adjustable flicker		8-pin socket	8-pin socket	None	Contact output (time-limit SPDT + instantaneous SPDT)	100 to 240 VAC	H5CX-L8E-N
		Twin Timer Mode toff: Flicker OFF Start 1 ton: Flicker ON Start 1			Models with instantaneous contact outputs	12 to 24 VDC/ 24 VAC	H5CX-L8ED-N		
H5CX-B	0.01 to 9999.99 s 1 s to 99 h 59 min 59 s 0.1 to 99999.9 min 0.1 to 99999.9 h	A: Signal ON Delay I F-1: Cumulative	Screw terminals	Signal, Reset, Gate (NPN/ PNP inputs)	Transistor output (DPST)	12 to 24 VDC	H5CX-BWSD-N		

Note: 1. The functions that are provided depend on the model. Check detailed specifications before ordering.

2. Refer to page 33 and later for information on H5CX-B Timers (6-digit display).

<sup>\*</sup> Can be used as a time-limit DPDT output.

### **Accessories (Order Separately)**

### **Front Panels (Replacement Parts)**

Models	Color	Applicable Timers	Page
Y92P-CXT4G	Light gray (5Y7/1)		
Y92P-CXT4S	White (5Y9.2 / 0.5)	Four-digit models	12
Y92P-CXT4B	Black (N1.5)		

Note: 1. You can change the color of the front panel when mounting the Timer. The Timer is shipped with a black (N1.5) Front Panel.

2. "TIMER" is printed on the front of Replacement Front Panels.

### **Soft Cover**

Models	Remarks	Page
Y92A-48F1		12

### **Hard Cover**

Models	Remarks	Page
Y92A-48		12

### **Flush Mounting Adapter**

Models Remarks		Page
Y92F-30	Included with models with terminal blocks.	_
Y92F-45	Use this Adapter to install the Timer in a cutout previously made for a DIN 72 x 72 mm device (panel cutout: 68 x 68 mm).	12

### **Waterproof Packing**

Models	Models Remarks	
Y92S-29	Included with models with terminal blocks.	12

### **Connection Sockets**

Models	Туре	Connectable Timers	Remarks	Page
P2CF-08	Front Connecting Socket			
P2CF-08-E	Front Connecting Socket (Finger-safe Type)	H5CX-L8□	Round crimp terminals cannot be used on Finger-safe Sockets. Use forked crimp terminals.	
P2CF-11	Front Connecting Socket			13
P2CF-11-E	Front Connecting Socket (Finger-safe Type)		Round crimp terminals cannot be used on Finger-safe Sockets. Use forked crimp terminals.	
P3G-08	Back Connecting Socket	H5CX-L8□	A Y92A-48G Terminal Cover can be used with the	
P3GA-11	- back Connecting Socket	H5CX-A11□	Socket to create a finger-safe construction.	

### Terminal Covers for P3G-08 and P3GA-11 Back-connecting Sockets

Models	Remarks	Page
Y92A-48G		14

### H5CX-A□-N/-L□-N Digital Timers

- Switch the display color
   \* between red, green, and orange to see the output status from a distance.
- Up/Down Keys for each digit enable easy operation.
- Cyclic control is easy with the Twin Timer and Variable ON/OFF Duty modes.
- **\*** Not supported by the H5CX-A11 $\square$  or H5CX-L8 $\square$ .





For the most recent information on models that have been certified for safety standards, refer to your OMRON website.

### **Specifications**

### **Ratings**

Item	Models	H5CX-A□-N	H5CX-A11□-N	H5CX-L8□-N		
Classific	cation	Standard Type		Economy Type		
	Power supply voltage *1	• 100 to 240 VAC 50/60 Hz • 12 to 24 VDC/24 VAC 50/60 Hz				
Ratings Operating voltage fluctuation range		85% to 110% of rated supply voltage (90%	,			
Power consumption		Approx. 6.2 VA at 100 to 240 VAC, Approx. 5.1 VA/2.4 W at 24 VAC/12 to 24 VDC *2				
Mounting	g method	Flush mounting	Flush mounting, surface mounting, DIN tra	ack mounting		
External	l connections	Screw terminals	11-pin socket	8-pin socket		
Degree o	of protection	IEC IP66, UL508 Type 4X (indoors) for par	nel surface only and when Y92S-29 Waterp	roof Packing is used		
Digits		4 digits				
Time ran	nges		to 999.9 s, 1 s to 9999 s, 1 s ti 99 min 59 s nin to 99 h 59 min, 0.1 h to 999.9 h, 1 h to 9			
Timer me	ode	Elapsed time (Up), remaining time (Down)	(selectable)			
	Input signals	Signal, Reset, Gate		Signal, Reset (no inputs on models with instantaneous contact outputs)		
Inputs	Input method	No-voltage Input ON impedance: $1  \text{k}\Omega \text{ max.}$ (Leakage current: $12 \text{ mA}$ when $0 \Omega$ ) ON residual voltage: $3  \text{V}$ max. OFF impedance: $100  \text{k}\Omega \text{ min.}$ Voltage Input High (logic) level: $4.5 \text{ to } 30 \text{ VDC}$ Low (logic) level: $0 \text{ to } 2 \text{ VDC}$ (Input resistance: approx. $0 \text{ A} \text{ approx}$ ON residual voltage: $0 \text{ VDC}$ ON residual voltage: $0 \text{ VDC}$ OFF impedance: $0 \text{ VDC}$ OFF im				
	Signal, reset, gate	Minimum input signal width: 1 or 20 ms (se	electable, same for all input)	1		
Reset sy	ystem	Power reset (depending on output mode), external reset, manual reset, automatic reset (depending on output mode)				
Power re		Minimum power-opening time: 0.5 s (exception)	pt for A-3, b-1, F, ton-1, and toff-1 mode)	· · · · · · · · · · · · · · · · · · ·		
Reset vo	oltage	10% max. of rated supply voltage				
Sensor v	waiting time	250 ms max. (Control output is turned OFF and no input is accepted during sensor waiting time.)				
	Output modes	Delay II, b: Repeat Cycle 1, b-1: Repeat C	cker, S: Stopwatch, toff: Flicker OFF Start 1,	Models with Instantaneous Contact Output A-2: Power ON Delay I, b: Repeat Cycle 1, E Interval, Z: ON/OFF-duty-adjustable flicker, toff: Flicker OFF Start 1, ton: Flicker ON Start		
Output	One-shot output time	0.01 to 99.99 s				
	Control output	Models with Contact Outputs     A at 250 VAC/30 VDC, resistive load (c Minimum applied load: 10 mA at 5 VDC ( Contact materials : AgSnIn     Transistor output: NPN open collector, 100 mA at 30 VDC max., residual voltage		rrent: 0.1 mA max.		
Display method *3 (switchable between red, Present value: 12-mm-high ch		7-segment, negative transmissive LCD; Present value: 12-mm-high characters, re Set value: 6-mm-high characters, gre				
Memory backup EEPROM (overwrites: 100,000 times min.) that can store data for 10 years min.						
Operating temperature range -10 to 55°C (-10 to 50°C if counters are mounted side by side) (with no icing or condensation)			nsation)			
Storage temperature range -25 to 70°C (with no icing or condensation)						
•	ng humidity range	25% to 85%				
Case col	lor	Black (N1.5) (Optional Front Panels are av	vailable to change the Front Panel color to li	ght gray or white.)		
Attachm	nents	Waterproof packing, flush mounting adapter, label for DIP switch settings	Label for DIP switch settings			

\*1. Do not use the output from an inverter as the power supply. The ripple must be 20% maximum for DC power.
\*2. Inrush current will flow for a short time when the power supply is turned ON.
Inrush Current (Reference Values)

Voltage	Applied voltage	Inrush current (peak value)	Time
100 to 240 VAC	264 VAC	5.3 A	0.4 ms
12 to 24 VDC/24 VAC	26.4 VAC	6.4 A	1.4 ms
12 to 24 VDO/24 VAO	26.4 VDC	4.4 A	1.7 ms


**\*3.** The display is lit only when the power is ON. Nothing is displayed when power is OFF.

### **Characteristics**

Accuracy of operating time and setting error (including temperature and voltage influences)		Power-ON start: ±0.01% ±50 ms max. (See note 1.) Signal start: ±0.005%±30 ms max. (See note 1.) Signal start for transistor output model: ±0.005%±3 ms max. (See note 1 and 2.) If the set value is within the sensor waiting time at startup the control output of the H5CX will not turn ON until the sensor waiting time passes.  Note: 1. The values are based on the set value. 2. The value is applied for a minimum pulse width of 1 ms.	
Insulation resis	stance	$100~M\Omega$ min. (at 500 VDC) between current-carrying terminal and exposed non-current-carrying metal parts, and between non-continuous contacts	
Dielectric strength		2,000 VAC, 50/60 Hz for 1 min between current-carrying metal parts and non-current-carrying metal parts 2,000 VAC, 50/60 Hz for 1 min between power supply and input circuits for the models other than H5CX-□D-N 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for H5CX-□SD-N 2,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuits for other models 1,000 VAC, 50/60 Hz for 1 min between non-continuous contacts	
Impulse withsta	and voltage	5 kV (between power terminals) for 100 to 240 VAC, 1 kV for 24 VAC/12 to 24 VDC 5 kV (between current-carrying terminal and exposed non-current-carrying metal parts) for 100 to 240 VAC 1.5 kV for 24 VAC/12 to 24 VDC	
Noise immunity	/	±1.5 kV (between power terminals) and ±600 V (between input terminals), square-wave noise by noise simulator (pulse width: 100 ns/ 1 µs, 1-ns rise)	
Static immunity	/	Malfunction: 8 kV Destruction: 15 kV	
Vibration	Destruction	10 to 55 Hz with 0.75-mm single amplitude each in three directions for 2 h each	
resistance	Malfunction	10 to 55 Hz with 0.35-mm single amplitude each in three directions for 10 min each	
Shock	Destruction	300 m/s <sup>2</sup> in three directions, three cycles	
resistance	Malfunction	100 m/s² in three directions, three cycles	
Life	Mechanical	10,000,000 operations min. (under no load at 1,800 operations/h and ambient temperature of 23°C)	
expectancy	Electrical	100,000 operations min. (5 A at 250 VAC, resistive load at 1,800 operations/h and ambient temperature of 23°C) *	
Weight		Approx. 115 g (Timer only)	

<sup>\*</sup> Refer to Life-test Curve.

## Life-test Curve (Reference Values)

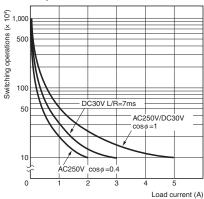

A maximum current of 0.15 A can be switched at 125 VDC ( $\cos\phi$  =1) and a maximum current of 0.1 A can be switched if L/R is 7 ms. In both cases, a life of 100,000 operations can be expected.

### **Applicable Standards**

Approved safety standards	UL508/Listing, UL508 Type 4X for indoor use (enclosure rating), CSA C22.2 No. 14 *1, conforms to EN61812-1 (Pollution degree 2/overvoltage category III) B300 PILCD DUTY 1/4 HP 120 VAC, 1/3 HP, 240 VAC, 5 A resistive load VDE0106/P100 CCC: Pollution degree 2, Overvoltage category II *2		
EMC	(EMI) Emission Enclosure: Emission AC mains: (EMS) Immunity ESD: Immunity RF-interference: Immunity Burst: Immunity Surge: Immunity Conducted Disturbance: Immunity Voltage Dip/Interruption:	EN61812-1 EN55011 Group 1 class A EN55011 Group 1 class A EN61812-1 IEC61000-4-2 IEC61000-4-3 IEC61000-4-4 IEC61000-4-5 IEC61000-4-6 IEC61000-4-11	

 <sup>★1.</sup> The following safety standards apply to models with sockets (H5CX-A11□ or H5CX-L8□). cUL (Listing): Applicable when an OMRON P2CF (-E) Socket is used. cUR (Recognition): Applicable when any other socket is used.
 ★2. Excluding the H5CX-ASD-N/-A11SD-N/-L8SD-N.

### I/O Functions

For details, refer to the timing charts on page 20 and page 29.

	Start signal	Normally functions to start timing. In modes A-2 and A-3, disable timing. In mode S, starts and stops timing.
Inputs *1	Reset  Re	
	Gate *2	Disables timing. (If a reset occurs while the gate input is ON, a reset will be performed.)
Outputs	Control output (OUT) Outputs take place according to designated operating mode when timer reaches corresponding set value.	

**<sup>★1.</sup>** The H5CX-L8E does not have an input.

### **Response Delay Time When Resetting (Transistor Output)**


The following table shows the delay from when the reset signal is input until the output is turned OFF. (Reference value)

Minimum reset signal width	Output delay time
1 ms	0.8 to 1.2 ms
20 ms	15 to 25 ms

**<sup>\*2.</sup>** The H5CX-L does not have a gate input.

### **Connections**


### **Block Diagram**



Note: Basic insulation is provided between the power supply circuit and the input circuits. However, basic insulation is not provided in the H5CX-D-N.

### **Terminal Arrangement**

Confirm that the power supply meets specifications before use.

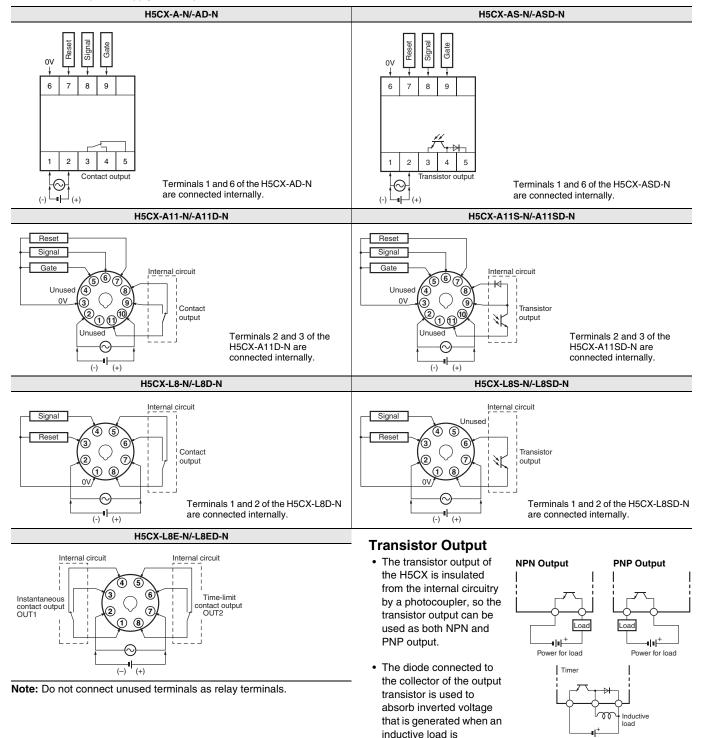

Power for load


connected to the H5CX.

### **Input Circuits**

### Signal, Reset, and Gate Input

### **No-voltage Inputs (NPN Inputs)**

### Voltage Inputs (PNP Inputs)






### **Input Connections**

The inputs are no-voltage (closed or open) inputs or voltage inputs except for the H5CX-L8□. (The inputs of the H5CX-L8□ are no-voltage inputs only. The H5CX-L8E□ does not have an input.)

### No-voltage Inputs (NPN Inputs)

### **Open Collector**


#### PLC or tinput Signal input input 0 V for inputs Gate H5CX-A□ 6 8 H5CX-A11□ 3 7 6 5 H5CX-L8□ 1 3 4

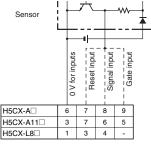



Note: Operate with transistor ON


**Voltage Output** 

### **Contact Input**



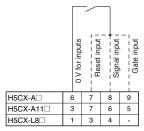



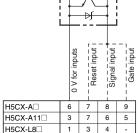

Note: Operate with transistor ON

#### No-voltage Input Signal Levels

Note: Operate with transistor ON

### No-contact input

- Short-circuit level Transistor ON
- Residual voltage: 3 V max.
- Impedance when ON: 1 kΩ max.

(The leakage current is approx. 12 mA when the impedance is  $0 \Omega$ .)

Open level Transistor OFF

• Impedance when OFF: 100 kΩ min.

Contact input Use contacts which can adequately switch 5 mA at 10 V

Note: The DC voltage must be 30 VDC max.

#### Applicable Two-wire Sensor

- Leakage current: 1.5 mA max.
- · Switching capacity: 5 mA min.
- Residual voltage: 3.0 VDC max.
- Operating voltage: 10 VDC


Voltage Inputs (PNP Inputs) The inputs of the H5CX-L8□ are no-voltage inputs only.

### **No-contact Input (NPN Transistor)**




Note: Operate with transistor OFF

### **No-contact Input (PNP Transistor)**

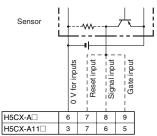

Note: Operate with transistor ON

### **Contact Input**



Note: Operate with relay ON

### Voltage Input Signal Levels

High level (Input ON): 4.5 to 30 VDC Low level (Input OFF): 0 to 2 VDC

The DC voltage must be 30 VDC max. Input resistance: Approx. 4.7 k $\Omega$ 

### H5CX-A□-N/-L□-N

### **Nomenclature**

#### **Display Section**

- 1. Key Protect Indicator (orange)
- 2. Control Output Indicator (orange)
- 3. Reset Indicator (orange)
- Present Value Display (Main display)
   (Character height: 12 mm, red \*)
   \* Characters on models with screw terminals
   (H5CX-A□) can be switched between red,
   green, and orange.
- 5. Time Unit Indicators

(Color is same as present value display.) (If the time range is 0 min, 0 h, 0.0 h, or 0 h 0 min, these indicators flash to indicate timing operation.)

**6. Set Value Display** (Sub-display) (Character height: 6 mm, green)

7. Set Value 1, 2 Indicator (green)

Character Size for Present Value Display Character Size for Set Value Display







Front View



### **Operation Key**

8. Mode Key

(Changes modes and setting items)


9. Reset Key

(Resets present value and output)

- 10. Up Keys 1 to 4
- 11. Down Keys 1 to 4

#### **Switches**

#### 12. Key-protect Switch



#### 13. DIP Switch




Note: There is no DIP switch on the H5CX-L8□.

(unit: mm)

**Dimensions** 


**Digital Timers** 

## Digital Timers H5CX-A-N/-AS-N (Flush Mounting Models)

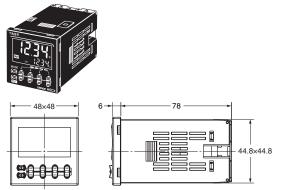


Note: M3.5 terminal screw (effective length: 6 mm)

### H5CX-AD-N/-ASD-N (Flush Mounting Models)

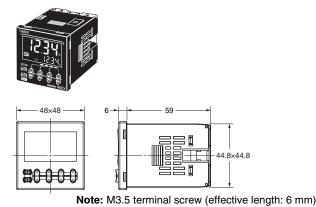

H5CX-L8□-N (Flush Mounting/Surface Mounting Models)


### H5CX-A11□-N (Flush Mounting/Surface Mounting Models)

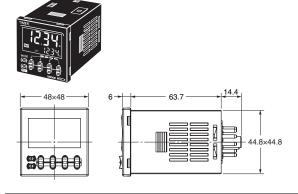




48×48

2000




### **Dimensions with Flush Mounting Adapter**


### H5CX-A-N/-AS-N (Provided with Adapter and Waterproof Packing)

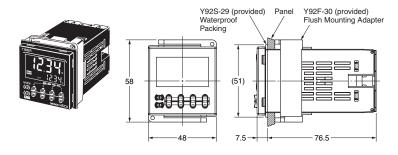


#### H5CX-AD-N/-ASD-N (Provided with Adapter and Waterproof Packing)

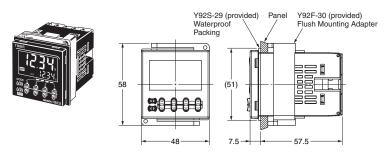

#### H5CX-A11□-N (Adapter and Waterproof Packing Ordered Separately)

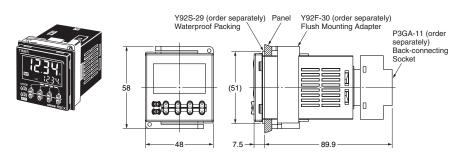


#### H5CX-L8□-N (Adapter and Waterproof Packing Ordered Separately)

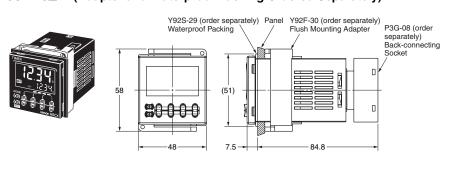


#### **Panel Cutouts**

Panel cutouts areas shown below. (according to DIN43700).




**Note: 1.** The mounting panel thickness should be 1 to 5 mm.

- To allow easier operation, it is recommended that Adapters be mounted so that the gap between sides with hooks is at least 15 mm (i.e., with the panel cutouts separated by at least 60 mm).
- 3. It is possible to horizontally mount Timers side by side. Attach the Flush Mounting Adapters so that the surfaces without hooks are on the sides of the Timers. (However, if Timers are mounted side by side, water resistance will be lost.)



 $A=(48n-2.5)^{+0.1}_{-0}$  With Y92A-48F1 attached.  $A=\{48n-2.5+(n-1)\times 4\}^{+0.1}_{-0}$  With Y92A-48 attached.  $A=(51n-5.5)^{+0.1}_{-0}$ 

## Dimensions with Front Connecting Socket



P2CF-11(-E) (order separately) Front Connecting Socket



P2CF-08(-E) (order separately) Front Connecting Socket

These dimensions vary with the type of DIN track (reference value).

### **Accessories (Order Separately)**

#### Note:

Depending on the operating environment, the condition of resin products may deteriorate, and may shrink or become harder. Therefore, it is recommended that resin products are replaced regularly.

### Front Panel (Replacement Part)

You can change the color of the front panel when mounting the Timer. The Timer is shipped with a black (N1.5) Front Panel.

#### Y92P-CXT4S

Cover for Timer with 4 Digits White (5Y9.2/0.5)

#### Y92P-CXT4G


Cover for Timer with 4 Digits Light gray (5Y7/1)



#### Y92P-CXT4B

Cover for Timer with 4 Digits Black (N1.5)

#### Replacement Method

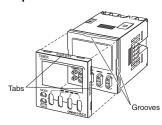

The Front Panel is attached to the Terminal with tabs in four locations. To remove the Front Panel, open the tabs and pull the Front Panel forward.

To attach the Front Panel, press it onto the Timer so that all four tabs lodge into the groves on the

body of the Timer.

### Soft Cover Y92A-48F1



### Hard Cover Y92A-48



#### Protecting the Timer in Environments Subject to Oil

The H5CX's panel surface is water-resistive (IP $\square$ 6, UL Type 4X) and so even if drops of water penetrate the gaps between the keys, there will be no adverse effect on internal circuits. If, however, there is a possibility of oil being present on the operator's hands, use the Soft Cover. The Soft Cover ensures protection equivalent to IP54 against oil. Do not, however, use the H5CX in locations where it would come in direct contact with oil.

#### Flush Mounting Adapter Y92F-30

Order the Flush Mounting Adapter separately if it is lost or damaged. **Note:** A Flush Mounting

Mounting Adapter is included with models with screw terminals.



### Y92F-45

Use this Adapter to install the Timer in a cutout previously made for a DIN 72 x72 mm device (panel cutout: 68 x 68 mm).



### Waterproof Packing Y92S-29

Note: The Waterproof Packing is

Waterproof Packing is included with models with screw terminals.




Order the Waterproof Packing separately if it is lost or damaged. The Waterproof Packing can be used to achieve IP66 protection.

The Waterproof Packing will deteriorate, harden, and shrink depending on the application environment. To ensure maintaining the IP□6, UL Type 4X waterproof level, periodically replace the Waterproof Packing. The periodic replacement period will depend on the application environment. You must confirm the proper replacement period. Use 1 year or less as a guideline. If the Waterproof Packing is not replaced periodically, the waterproof level will not be maintained.


It is not necessary to mount the Waterproof Packing if waterproof construction is not required.

## **Connection Sockets**Front-connecting Sockets

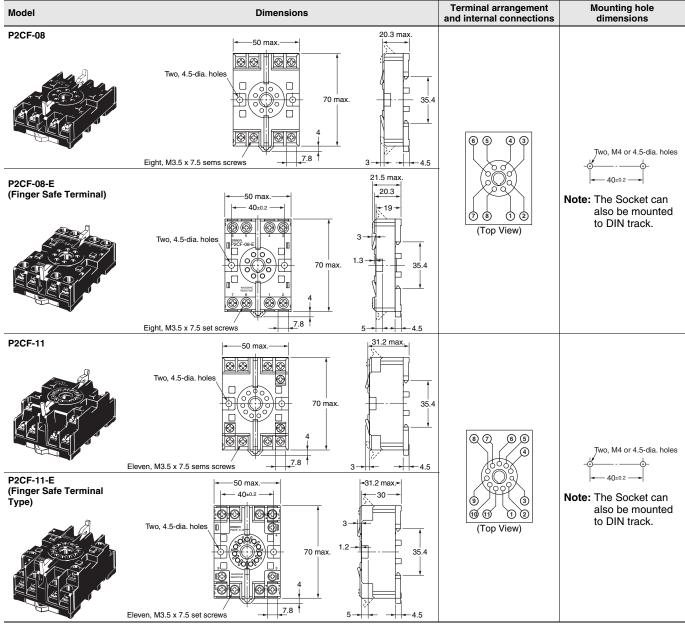

Note: Round crimp terminals cannot be used on Finger-safe Sockets. Use forked crimp terminals.


#### **Back-connecting Sockets**

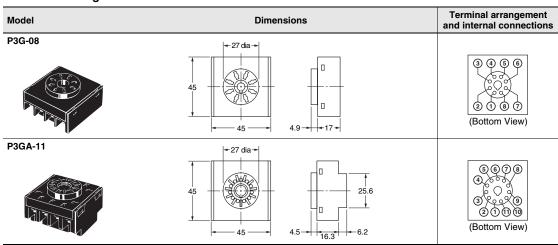

Note: A Y92A-48G Terminal Cover can be used with the Socket to create a finger-safe construction.


### H5CX-A□-N/-L□-N

### Terminal Covers for P3G-08 and P3GA-11 Back-connecting Sockets

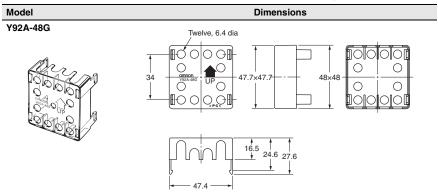

Note: The Terminal Cover can be used with a Back-mounting Socket (P3G-08 or P3GA-11) to create a finger-safe construction.

### **Optional Products for Track Mounting**

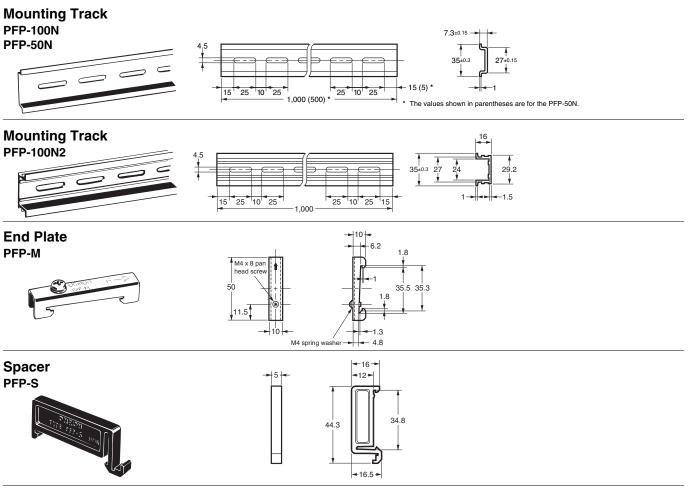

Note: Order Spacers in increments of 10.

### **Operating Procedures**

### **Setting Procedure Guide**

**Settings for Timer Operation** \*

Use the following settings.

### **Settings for Twin Timer Operation** \*

Refer to page 25.


\* It is not necessary to mount the Waterproof Packing if waterproof construction is not required.

### **Operating Procedures for Timer Function**



Settings for basic functions can be performed with just the DIP switch.

Note: There is no DIP switch on the H5CX-L8□. Go to Step2.

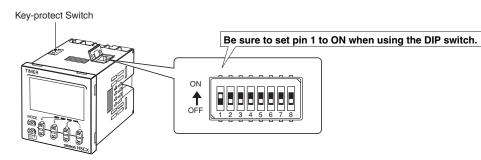

	Item	OFF	ON
1	DIP switch settings	Disabled	Enabled
2	'		
3	Time range	Refer to the table on the right.	
4			
5	Output modes	Refer to the table on	
6	Output modes	the ri	ght.
7	Timer mode UP DOWN Input signal width 20 ms 1 ms		DOWN
8			1 ms

Note: All the pins are factory-set to OFF.

- Be sure to turn ON pin 1 of the DIP switch.
- Changes to DIP switch settings are enabled when the power is turned ON.


(Set the DIP switch while the power is OFF.)


	Pin 2	Pin 3	Pin 4	Time range
	ON	ON	ON	0.001 s to 9.999 s
	OFF	OFF	OFF	0.01 s to 99.99 s
•	ON	OFF	OFF	0.1 s to 999.9 s
	OFF	ON	OFF	1 s to 9999 s
	ON	ON	OFF	0 min 01 s to 99 min 59 s
	OFF	OFF	ON	0.1 min to 999.9 min
	ON	OFF	ON	0 h 01 min to 99 h 59 min
	OFF	ON	ON	0.1 h to 999.9 h

	Pin 5	Pin 6	Output mode
	OFF	OFF	Mode A: Signal ON delay 1 (Timer resets when power comes ON.)
<b>&gt;</b>	ON	OFF	Mode A-2: Power ON delay 1 (Timer resets when power comes ON.)
	OEE ON	Mode E: Interval (Timer resets when power comes ON.)	
	ON	ON	Mode F: Cumulative (Timer does not reset when power comes ON.)



After making DIP switch settings for basic operation, advanced functions can be added using the operation keys on the front panel. Refer to Step2 on page 16 for details.

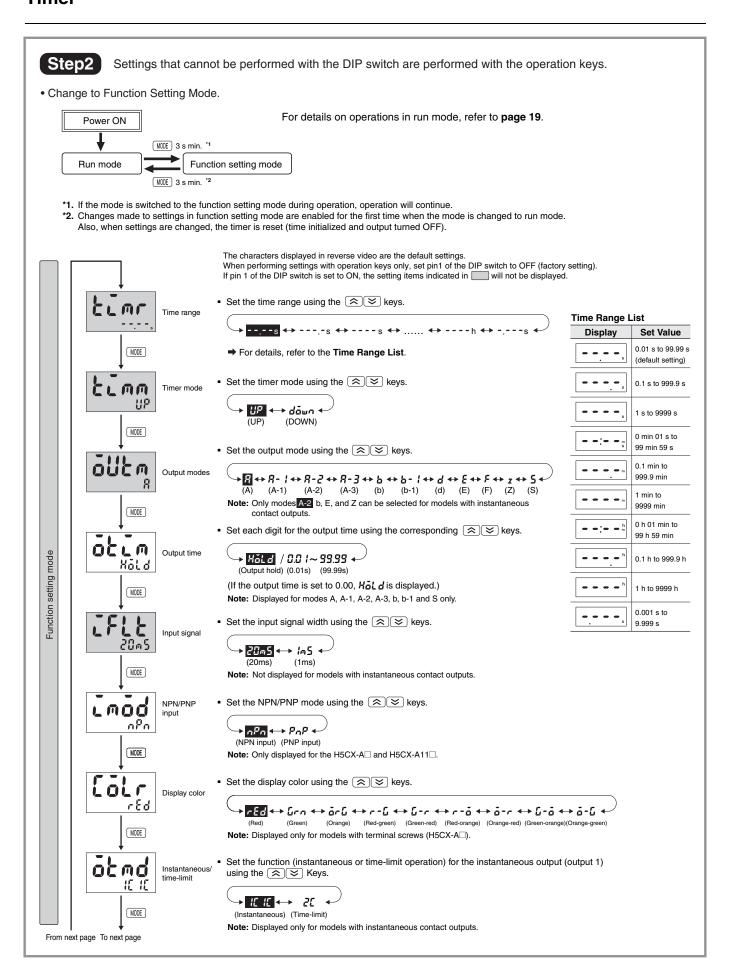

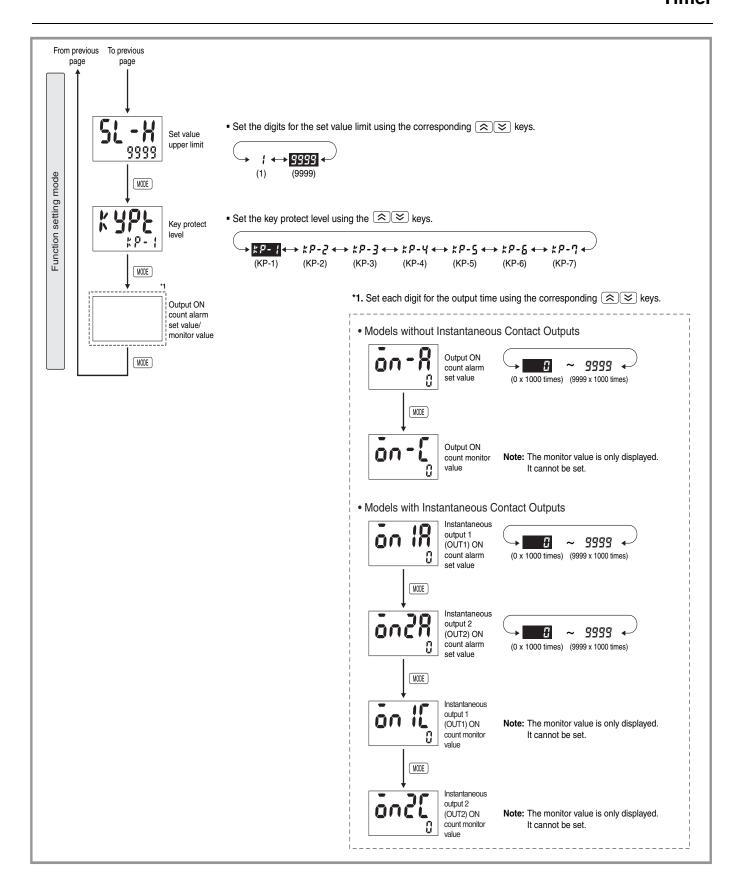

### H5CX-A□-N/-L□-N Timer

## Explanation of Functions Operating Procedures for Timer Function

Items marked with stars (★) can be set using the DIP switch.

#### Time Range (ヒ೭̄ạ̄c)★

Set the range to be timed in the range 0.001 s to 9,999 h. Settings of type ---- h (9,999 h) and ---- min (9,999 min) cannot be made with the DIP switch. Use the operation keys if these settings are required.

#### Timer Mode (ヒ೭̄ạạ)★

Set either the elapsed time (UP) or remaining time (DOWN) mode. In UP mode, the elapsed time is displayed, and in DOWN mode, the remaining time is displayed.

#### Output Mode (Ճ೭೬೯)★

Set the output mode.

The possible settings are A, A-1, A-2, A-3, b, b-1, d, E, F, Z and S. Only output modes A, A-2, E, and F can be set using the DIP switch. Use the operation keys if a different setting is required.

(For details on output mode operation, refer to "Timing Charts" on page 20.)

### Output Time ( ¿¿ [ ])

When using one-shot output, set the output time for one-shot output (0.01 to 99.99 s).

One-shot output can be used only if the selected output mode is A, A-1, A-2, A-3, b, b-1 or S.

If the output time is set to 0.00,  $\emph{H}\ddot{\textbf{a}} \emph{L} \textbf{d}$  is displayed, and the output is held.

#### Input Signal Width (LFLE)★

Set the minimum signal input width (20 ms or 1 ms) for signal, reset, and gate inputs.

The same setting is used for all external inputs (signal, reset, and gate inputs).

If contacts are used for the input signal, set the input signal width to 20 ms.

Processing to eliminate chattering is performed for this setting.

#### NPN/PNP Input Mode (Land)

Select either NPN input (no-voltage input) or PNP input (voltage input) as the input format.

Set an NPN input when using a 2-wire sensor.

For details on input connections, refer to "Input Connections" on page 9.

#### Display Color ([alr)

#### (Terminal block model: H5CX-A□ only)

Set the color used for the present value.

	Output OFF	Output ON
rEd	Red (	fixed)
Gra	Green	(fixed)
ŏrū	Orange	e (fixed)
r-5	Red Green	
<u> 5</u>	Green	Red
r-ā	Red	Orange
ŏ-r	Orange	Red
ű-ő	Green	Orange
ŏ-G	Orange Green	

#### Key Protect Level (# 남부분)

Set the key protect level.

Refer to "Key Protect Level" on page 32.

#### Instantaneous/Time-limit (るとのは)

Set the contact output to time-limit SPDT + instantaneous SPDT or time-limit SPDT operation.

#### Set Value Upper Limit (5L -H)

Set the upper limit for the set value when it is set in Run Mode.

The limit can be set to between 1 and 9999.

This setting does not apply to the ON duty in Z mode.

### Output ON Count Alarm Set Value (an-R)

Set the alarm value for the output ON count.

The limit can be set to between  $\underline{0}$  x 1000 (0 times) and  $\underline{9999}$  x 1000 (9,999,000 times). Only the underlined values are set. The alarm will be disabled if 0 is set.

If the total ON count of the output exceeds the alarm set value,  $\boldsymbol{\mathcal{E}}$ 3 will be displayed on the Timer to indicate that the output ON count alarm value was exceeded. Refer to "Self-diagnostic Function" on page 32 for information on the  $\boldsymbol{\mathcal{E}}$ 3 display.

## ON Count Alarm Set Values for Outputs 1 and 2 (OUT1 and OUT2) (อัก เริ and อักะัริ)

Set the ON count alarm values for the outputs 1 and 2.

The limit can be set to between  $\underline{0}$  x 1000 (0 times) and  $\underline{9999}$  x 1000 (9,999,000 times). Only the underlined values are set. The alarm will be disabled if 0 is set.

If the total ON count of instantaneous output 1 or 2 exceeds the alarm set value,  $\mathcal{E}$  3 will be displayed on the Timer to indicate that the output ON count alarm value was exceeded. Refer to "Self-diagnostic Function" on page 32 for information on the  $\mathcal{E}$  3 display.


### Output ON Count Monitor Value (an-L)

The monitor value is only displayed. It cannot be set. The output ON count will be 1,000 times the displayed value.

## ON Count Monitor Values for Outputs 1 and 2 (OUT1 and OUT2) (an IE and an EE)

The monitor value for output 1 or 2 is only displayed. It cannot be set. The output ON count will be 1,000 times the displayed value.

# Operation in Run Mode Operating Procedures for Timer Function

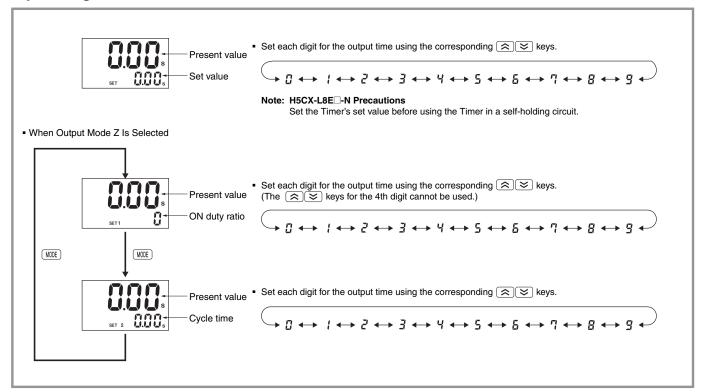

#### **Present Value and Set Value**

These items are displayed when the power is turned ON. The present value is displayed in the main display and the set value is displayed in the sub-display.

The values displayed will be determined by the settings made for the time range and the timer mode in function setting mode.

#### Present Value and ON Duty Ratio (Output Mode = Z)

The present value is displayed in the main display and the ON duty ratio is displayed in the sub-display. Set the ON duty ratio used in ON/ OFF-duty-adjustable flicker mode (Z) as a percentage.

The output accuracy will vary with the time range, even if the ON duty ratio setting is the same. Therefore, if fine output time adjustment is required, it is recommended that the time range for the cycle time is set as small as possible.

Examples: 1. When Time Range = - - - s (9999 s)

$$20(s) \times \frac{31(\%)}{100} = 6.2(s)$$

Rounded off to the nearest integer (because of the time range setting)  $\rightarrow$  ON time = 6 s

2. When Time Range = - -. - s (99.99 s)


$$20.00(s) \times \frac{31(\%)}{100} = 6.200(s)$$

Rounded off to 2 decimal places (because of the time range setting)  $\rightarrow$  ON time = 6.20 s

If a cycle time is set, cyclic control can be performed in ON/OFF-duty-adjustable flicker mode simply by changing the ON duty ratio.

### Present Value and Cycle Time (Output Mode = Z)

The present value is displayed in the main display and the cycle time is displayed in the sub-display. Set the cycle time.

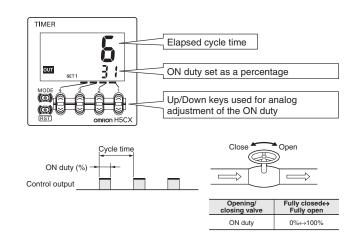


### Timing Charts

### **Operating Procedures for Timer Function**

### **Models without Instantaneous Contact Outputs**

The gate input is not included in the H5CX-L8□ models.


Either one-shot output or sustained output can be selected.



\* Start signal input is disabled during timing.

Timing starts when the start signal goes ON. While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF. The control output is controlled using a sustained or one-shot time period.


Note: Output is instantaneous when setting is 0.

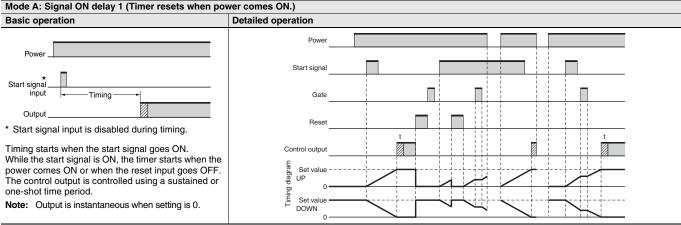

Mode A-1: Signal ON delay 2 (Timer resets when power comes ON.)


**Basic operation** 





Timing starts when the start signal goes ON, and resets when the start signal goes OFF. While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF. The control output is controlled using a sustained or one-shot time period.


Note: Output is instantaneous when setting is 0.

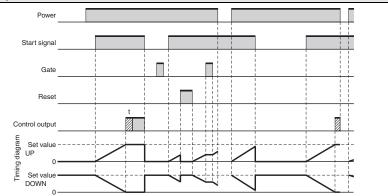

Mode A-2: Power ON delay 1 (Timer resets when power comes ON.)

Basic operation






Timing starts when the reset input goes OFF. The start signal disables the timing function (i.e., same function as the gate input).

The control output is controlled using a sustained or one-shot time period.

**Note:** Output is instantaneous when setting is 0.

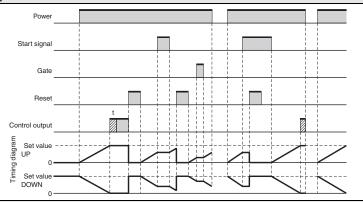


Mode A-3: Power ON delay 2 (Timer does not reset when power comes ON.) **Basic operation** 



Timing starts when the reset input goes OFF. The start signal disables the timing function (i.e., same function as the gate input).

The control output is controlled using a sustained or one-shot time period.

Note: Output is instantaneous when setting is 0.

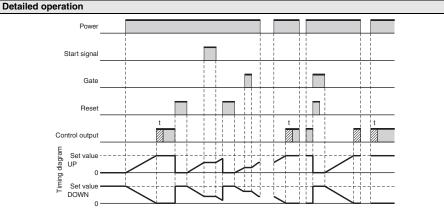

### Mode b: Repeat cycle 1 (Timer resets when power comes ON.) Basic operation

## input Timing --- Timing Output


\* Start signal input is disabled during timing.

Timing starts when the start signal goes ON. The status of the control output is reversed when time is up (OFF at start).

While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.

Note: Normal output operation will not be possible if the set time is too short

Set the value to at least 100 ms (contact output type).




\* Start signal input is disabled during timing.

Timing starts when the start signal goes ON. The control output is turned ON when time is up. While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.


Note: Normal output operation will not be possible if the set time is too short.

Set the value to at least 100 ms (contact output type).

#### **Detailed operation**

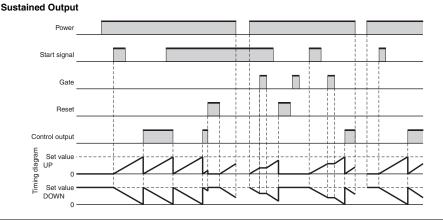



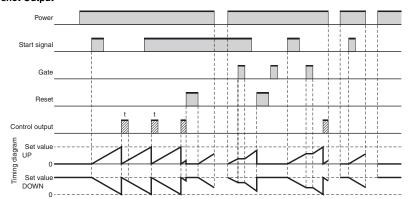

### Mode b-1: Repeat cycle 2 (Timer does not reset when power comes ON.)

#### **Basic operation**

## **Detailed operation**




\* Start signal input is disabled during timing.

Timing starts when the start signal goes ON. The status of the control output is reversed when time is up (OFF at start).

While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF. Note: Normal output operation will not be possible if

the set time is too short. Set the value to at least 100 ms (contact output type).



\* Start signal input is disabled during timing.


Output

Timing starts when the start signal goes ON. The control output is turned ON when time is up. While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.


Note: Normal output operation will not be possible if the set time is too short.

Set the value to at least 100 ms (contact output type).


#### Sustained Output

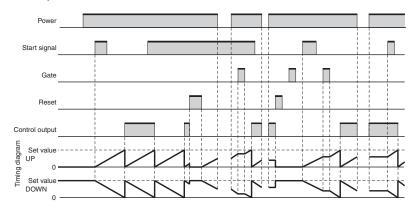

#### One-shot Output

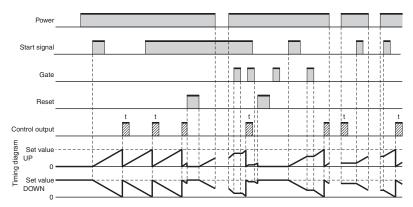

### H5CX-A□-N/-L□-N Timer




Start signal -Timing → Output

Start signal input is enabled during timing.


The control output is ON when the start signal is ON (except when the power is OFF or the reset is ON). The timer resets when the time is up.

Note: Output functions only during start signal input when setting is 0.

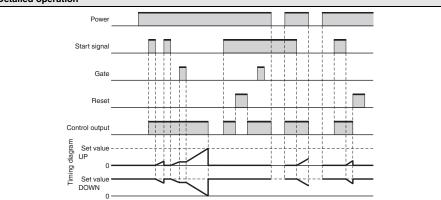

#### Mode E: Interval (Timer resets when power comes ON.)


# **Basic operation**



\*Start signal input is enabled during timing.


Timing starts when the start signal comes ON. The timer resets when the time is up. While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.

Note: Output is disabled when the setting is 0.

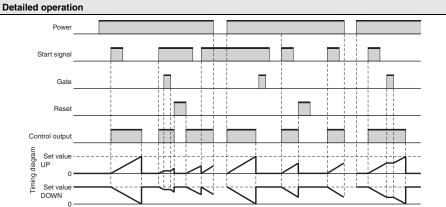

#### Mode F: Cumulative (Timer does not reset when power comes ON.)


#### Detailed operation **Basic operation**



Start signal enables timing (timing is stopped when the start signal is OFF or when the power is OFF). A sustained control output is used.


**Note:** Output is instantaneous when setting is 0.

When the H5CX is used with power start, there will be a timer error (approximately 100 ms each time the H5CX is turned ON) due to the characteristics of the internal circuitry. Use the H5CX with signal start if timer accuracy is required.

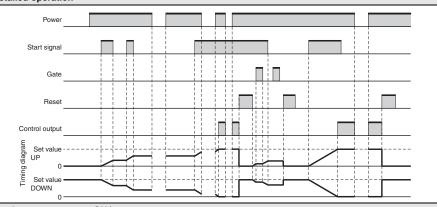

### Mode Z: ON/OFF-duty-adjustable flicker (Timer resets when power comes ON.)

#### **Basic operation Detailed operation**




\*Start signal input is disabled during timing.


Timing starts when the start signal goes ON. The status of the control output is reversed when time is up (ON at start).

While the start signal is ON, the timer starts when power comes ON or when the reset input goes OFF.

Note: Normal output operation will not be possible if the set time is too short.
Set the value to at least 100 ms (contact output

type).

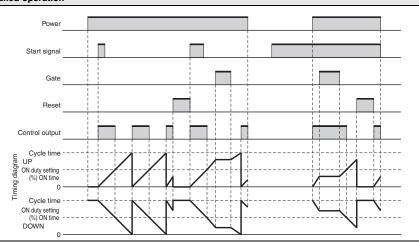


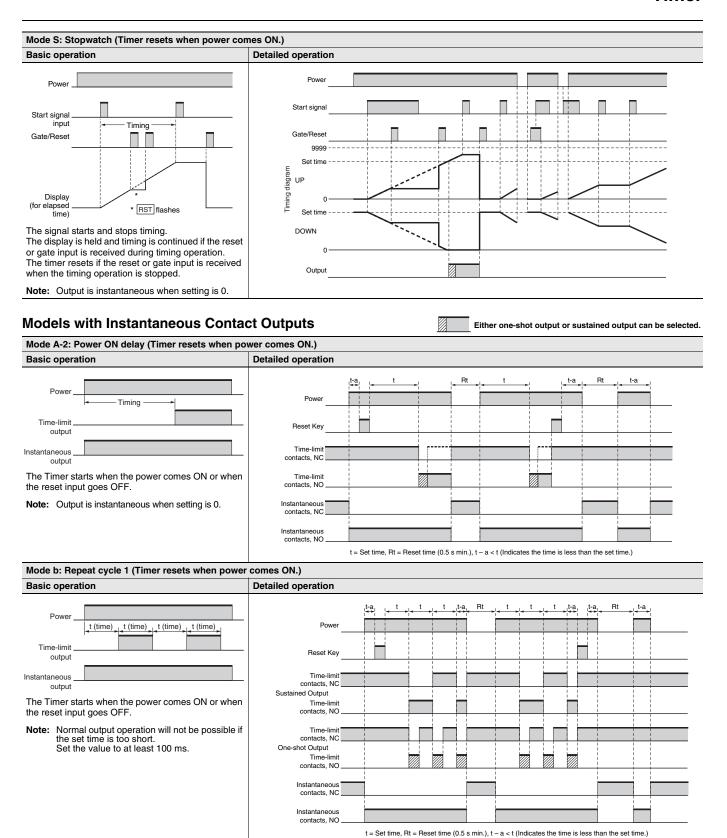

Note: H5CX-L8E□-N Precautions


Set the Timer's set value before using the Timer in a self-holding circuit.

### H5CX-A□-N/-L□-N **Timer**

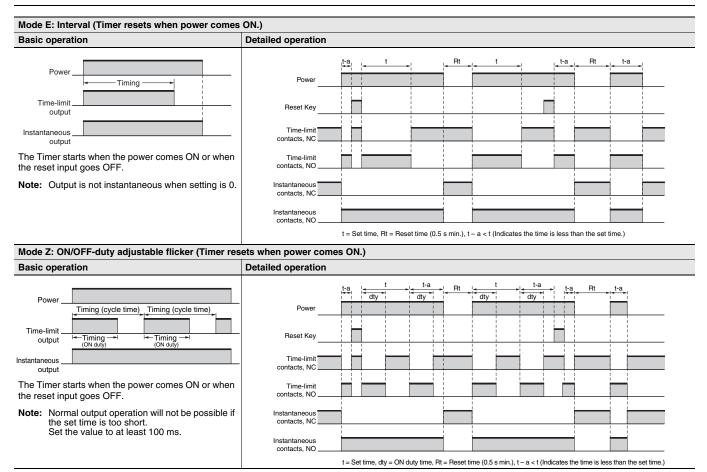

Note: H5CX-L8E□-N Precautions
Set the Timer's set value before using the Timer in a self-holding circuit.

### **Setting Procedure Guide Operating Procedures for Twin Timer Function**

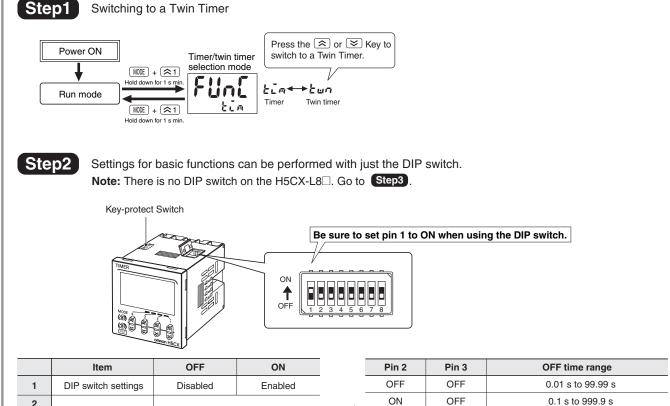

	Item	OFF	ON		
1	DIP switch settings	Disabled	Enabled		
2	OFF time range	Refer to the tak	ole on the right		
3	Of 1 time range	Refer to the table on the right.			
4	ON time range	Refer to the table on the right.			
5	ON time range	Tieler to the tax	ne on the right.		
6	Output mode	Flicker OFF start	Flicker ON start		
7	Timer mode	UP	DOWN		
8	Input signal width	20 ms 1 ms			

Note: All the pins are factory-set to OFF.

of S	time range
FF 0.0	1 s to 99.99 s
F 0.1	1 s to 999.9 s
N 1	s to 9999 s
N 0 min 0	1 s to 99 min 59 s
	FF 0.0 FF 0.1 N 1

Pin 4	Pin 5	ON time range
OFF	OFF	0.01 s to 99.99 s
ON	OFF	0.1 s to 999.9 s
OFF	ON	1 s to 9999 s
ON	ON	0 min 01 s to 99 min 59 s


- Be sure to turn ON pin 1 on the DIP switch.
- Changes to DIP switch settings are enabled when the power is turned ON. (Perform DIP switch settings while the power is OFF.)




After making DIP switch settings for basic operation, advanced functions can be added using the operation keys on the front panel. Refer to Step3 on page 26 for details.

### H5CX-A□-N/-L□-N Twin Timer

To switch to twin timer operation, use the procedure given below. For details, refer to page 31.

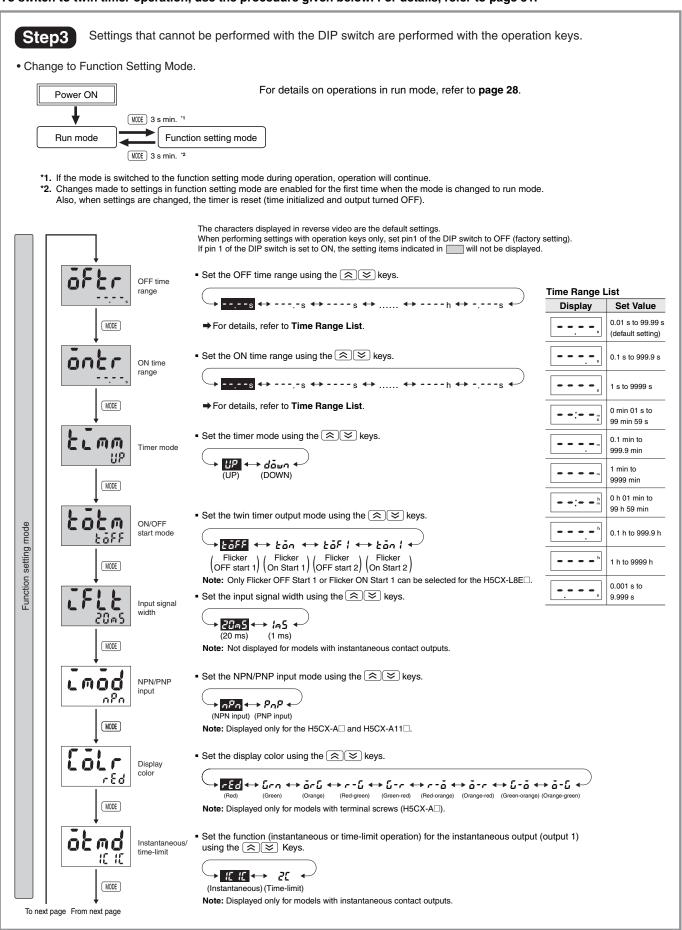

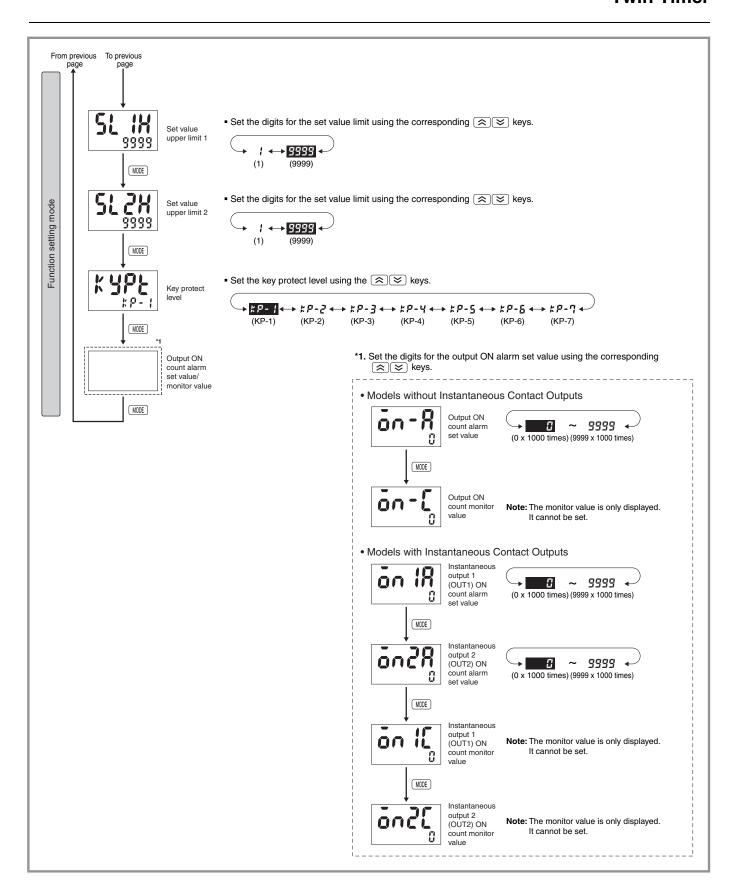

### **Explanation of Functions**

### **Operating Procedures for Twin Timer Function**

Items marked with stars (★) can be set using the DIP switch.

#### OFF Time Range (oFtr)★

Set the time range for the OFF time in the range  $0.000 \, s$  to  $9,999 \, h$ . Only settings of type --.-- s  $(99.99 \, s)$ , ---- s  $(999.9 \, s)$ , ---- s  $(99.99 \, s)$ , and -- min -- s  $(99 \, min \, 59 \, s)$  can be made with the DIP switch. Use the operation keys if another type of setting is required.

#### ON Time Range (ōnとr)★

Set the time range for the ON time in the range 0.001 s to 9,999 h. Only settings of type --.-- s (99.99 s), ---- s (999.9 s), ---- s (999.9 s), and -- min -- s (99 min 59 s) can be made with the DIP switch. Use the operation keys if another type of setting is required.

#### Timer Mode (ピムạạ)★

Set either the elapsed time (UP) or remaining time (DOWN) mode. In UP mode, the elapsed time is displayed, and in DOWN mode, the remaining time is displayed.

### ON/OFF Start Mode (₺፩₺雨)★

Set the output mode.

Set either flicker OFF start or flicker ON start. (For details on output mode operation, refer to "Timing Charts" on page 29.)

#### Input Signal Width (LFLE)★

Set the minimum signal input width (20 ms or 1 ms) for signal, reset, and gate inputs.

The same setting is used for all external inputs (signal, reset, and gate inputs).

If contacts are used for the input signal, set the input signal width to 20 ms

Processing to eliminate chattering is performed for this setting.

### NPN/PNP Input Mode ( [ mod)

Select either NPN input (no-voltage input) or PNP input (voltage input) as the input format. Set an NPN input when using a 2-wire sensor. The same setting is used for all external inputs.

For details on input connections, refer to "Input Connections" on page 9.

#### Display Color (Lalr)

### (Terminal black model: H5CX-A□ only)

Set the color used for the present value.

	Output OFF	Output ON
rEd	Red (	fixed)
Gra	Green	(fixed)
٥٠۵	Orange	e (fixed)
r-G	Red	Green
G-r	Green	Red
r-ŏ	Red Orange	
ŏ-r	Orange	Red
ű-ő	Green	Orange
ŏ-ū	Orange	Green


#### Key Protect Level (ドソワと)

Set the key protect level.

Refer to "Key Protect Level" on page 32.

### Operation in Run Mode

### **Operating Procedures for Twin Timer Function**

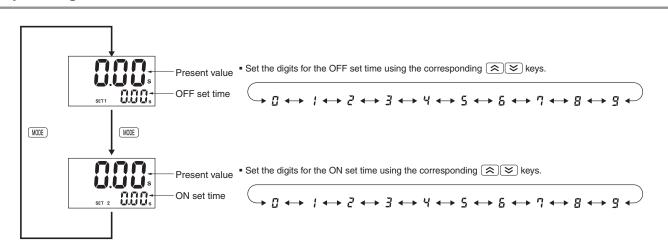

Note: 1. The display will automatically show the OFF set time when the OFF time is being timed and the ON set time when the ON time is being timed.

Note: 2. H5CX-L8E□-N Precautions

Set the Timer's set value before using the Timer in a self-holding circuit.

#### **Present Value and OFF Set Time**

The present value is displayed in the main display and the OFF set time is displayed in the sub-display. Set the OFF time.

### **Present Value and ON Set Time**

The present value is displayed in the main display and the ON set time is displayed in the sub-display. Set the ON time.

### **Timing Charts**

### **Operating Procedures for Timer Function**

### **Models without Instantaneous Contact Outputs**

The gate input is not included in the H5CX-L8□ models.

### Mode toff: Flicker OFF start 1 (Timer resets when power comes ON.)

### Basic operation

Output


## ON OFF ON

\* Start signal input is disabled during timing.

Timing starts when the start signal goes ON. The status of the control output is reversed when time is up (OFF at start).

While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.


Note: Normal output operation will not be possible if the set time is too short.
Set the value to at least 100 ms (contact output

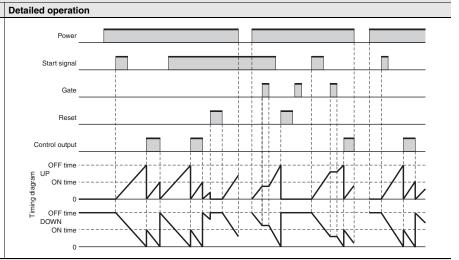

### Mode ton: Flicker OFF start 1 (Timer resets when power comes ON.)

#### **Basic operation**

Output




\* Start signal input is disabled during timing.

Timing starts when the start signal goes ON. The status of the control output is reversed when time is up (ON at start).

While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.

Note: Normal output operation will not be possible if the set time is too short.

Set the value to at least 100 ms (contact output type).

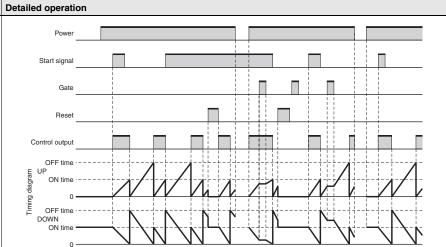

#### Mode toff-1: Flicker OFF start 2 (Timer does not reset when power comes ON.)

### **Basic operation**




\* Start signal input is disabled during timing.

Timing starts when the start signal goes ON. The status of the control output is reversed when time is up (OFF at start).


While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.

Note: Normal output operation will not be possible if

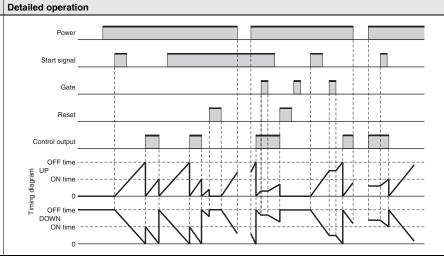

the set time is too short.
Set the value to at least 100 ms (contact output

### H5CX-A□-N/-L□-N Twin Timer



(a + b = OFF time)

Basic operation Start signal input Timing ∙ ON Timing OFF

\* Start signal input is disabled during timing.


Output

Timing starts when the start signal goes ON. The status of the control output is reversed when time is

up (ON at start). While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.

Note: Normal output operation will not be possible if the set time is too short.

Set the value to at least 100 ms (contact output type).

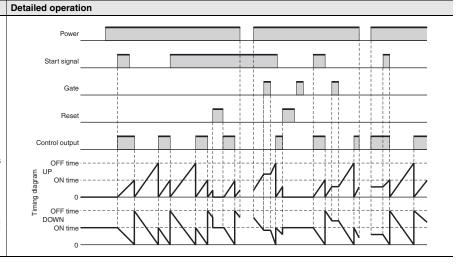


### **Models with Instantaneous Contact Outputs**

### Mode toff: Flicker OFF start 1 (Timer resets when power comes ON.) **Basic operation** Toff time Ton time Toff time Time-limit Instantaneous


The Timer starts when the power comes ON or when the reset input goes OFF.

Note: Normal output operation will not be possible if the set time is too short. Set the ON time and OFF time to at least 100

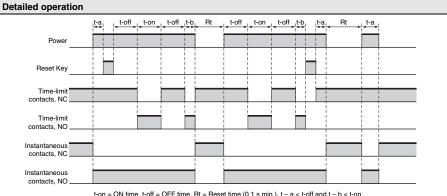


t-on = ON time, t-off = OFF time, Rt = Reset time (0.1 s min.), t – a < t-off and t – b < t-on (Indicates the time is less than the set time.)

### Mode ton: Flicker ON start 1 (Timer resets when power comes ON.)



The Timer starts when the power comes ON or when the reset input goes OFF

Note: Normal output operation will not be possible if the set time is too short.
Set the ON time and OFF time to at least 100

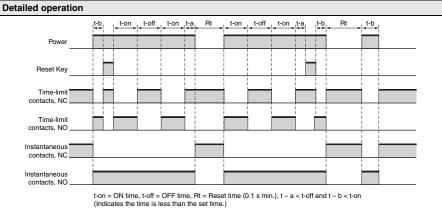


H5CX-L8E□-N Precautions Note:

Set the Timer's set value before using the Timer in a self-holding circuit.

### Timer/Twin Timer Selection Mode (Function Selection)

Select whether the H5CX is used as a timer or a twin timer in timer/twin timer selection mode.

The H5CX is also equipped with a DIP switch monitor function, a convenient function that enables the settings of the DIP switch pins to be confirmed using the front display.

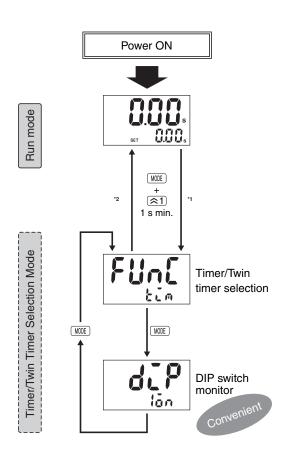



#### Caution

To change the mode to timer/twin timer selection mode, hold down the  $\boxed{\text{$\approx$1}}$  key for 1 s min. with the  $\boxed{\text{$\text{$\text{WOE}$}}}$  key held down. The  $\boxed{\text{$\approx$1}}$  key must be pressed before the key. If the key is pressed first, the mode will not change.


Select either <code>Lim</code> timer operation or <code>Lum</code> twin timer operation using the

Note: The H5CX is factory-set for timer operation.

Confirm the status of DIP switch pins 1 to 8 using the 🕱 😸 keys.

**Note: 1.** This display is not supported with H5CX-L8□-N.

This display is only possible when DIP switch pin 1 (DIP switch settings enable/disable) is set to ON (enable).

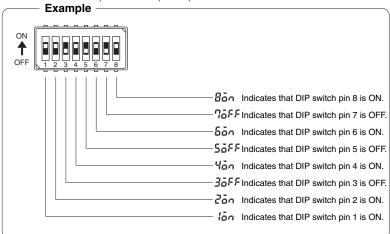


- \*1. When the mode is changed to timer/twin timer selection mode, the present value is reset and output turns OFF. Timing operation is not performed in timer/twin timer selection mode.
- \*2. Setting changes made in timer/twin timer selection mode are enabled when the mode is changed to run mode. If settings are changed, the HC5X is automatically reset (present value initialized, output turned OFF).

### **Key Protect Level**

When the key-protect switch is set to ON, it is possible to prevent setting errors by prohibiting the use of certain operation keys by specifying the key protect level (KP-1 to KP-7).

The key protect indicator is lit while the key-protect switch is set to ON.

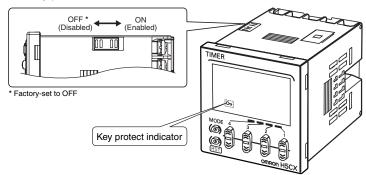

		Details			
Level	Meaning	Changing mode*	Switching display during operation	Reset Key	Up/down key
KP-1 (default setting)	MODE A STATE OF THE PARTY OF TH	Invalid	Valid	Valid	Valid
KP-2	MODE A STATE OF THE PARTY OF TH	Invalid	Valid	Invalid	Valid
КР-3	MODE 4  OTHER HECK	Invalid	Valid	Valid	Invalid
KP-4	MODE OF THE STATE	Invalid	Valid	Invalid	Invalid
KP-5	MODE OF THE STATE	Invalid	Invalid	Invalid	Invalid
KP-6	MODE OTHER HECK	Invalid	Invalid	Valid	Valid
KP-7	MODE A STATE OF THE STATE OF TH	Invalid	Invalid	Invalid	Valid

<sup>\*</sup> Changing mode to Timer/Twin Timer Selection Mode or Function Setting Mode.

### **Self-diagnostic Function**

The following displays will appear if an error occurs.

Main display	Sub-display	Error	Output status	Correction method	Set value after reset
E! Not lit		CPU	OFF	Either press the reset key or reset the power supply.	No change
E2 Not lit		Memory error (RAM)	OFF	Reset the power supply.	No change
E2 SUm Memo		Memory error EEPROM *1	OFF	Reset Key	Factory setting
No change Output ON count alarm set value exceeded		No change	Reset Key	No change	

<sup>\*1.</sup> This includes times when the life of the EEPROM has expired.

<sup>\*2.</sup> The normal display and £3 will appear alternately.
When the Reset Key is pressed, £3 will no longer be displayed even if the alarm set value is exceeded. (Monitoring is possible, however, because the Timer will continue without clearing the output ON count.)

### **Digital Timer H5CX-BWSD-N**

- H5CX Digital Timers with 6-digit Display, 2-stage Setting, and Forecast Output (DIN 48 x 48-mm)
- Times the daily operating hours of machinery and tools, predicting and notifying when maintenance is required.
- Easy-to-read backlit negative LCD with 6 digits (displays to 99999.9 h).
- The 2-stage settings and forecast output are ideal for maintenance applications.





For the most recent information on models that have been certified for safety standards, refer to your OMRON website.

### **Specifications**

### **Ratings**

	,•			
Classification		Digital Timer with 6-digit display, 2-stage setting, and forecast output		
	Power supply voltage 12 to 24 VDC			
Ratings	Operating voltage fluctuation range	90% to 110% rated supply voltage		
	Power consumption	Approx. 2.3 W *1		
Mounting	method	Flush mounting		
External c	onnections	Screw terminals		
Degree of	protection	IEC IP66, UL508 Type 4X (indoors) for panel front surface only and only when Y92S-29 Waterproof Packing is used		
Digits		6 digits		
Time rang	е	0.01 s to 9999.99 s, 1 s to 99 h 59 min 59 s, 0.1 min to 99999.9 min, 0.1 h to 99999.9 h		
Timer mod	de	Elapsed time (Up)		
	Input signals	Signal, reset, gate		
Inputs	Input method	No-voltage Input ON impedance : $1 \text{ k}\Omega$ max. (Leakage current: $12 \text{ mA}$ when $0 \Omega$ ) ON residual voltage : $3 \text{ V}$ max. OFF impedance : $100 \text{ k}\Omega$ min. Voltage Input High (logic) level : $4.5 \text{ to } 30 \text{ VDC}$ Low (logic) level : $0 \text{ to } 2 \text{ VDC}$ (Input resistance: approx. $0 \text{ A} \text{ C} \text{ VDC}$ No-voltage (NPN) input/voltage (PNP) input (switchable)		
	Signal, reset, gate	Minimum input signal width: 1 or 20 ms (selectable, same for all input)		
Reset system		Power resets (only for A mode), external and manual reset		
Power res	et	Minimum power-opening time: 0.5 s (except for F-1 mode)		
Reset volt	age	10% max. of rated supply voltage		
Sensor wa	aiting time	250 ms max. (Control output is turned OFF and no input is accepted during sensor waiting time.)		
	Output modes	A, F-1		
Outputs  Output type  Transistor output: NPN open collector, 100 mA at 30 VDC max. residual voltage: 1.5 VDC max. (Application of the collection) and the collection of the co		Transistor output: NPN open collector, 100 mA at 30 VDC max. residual voltage: 1.5 VDC max. (Approx. 1 V) Leakage current: 0.1 mA max.		
Display		7-segment, negative transmissive LCD; Present value: 10-mm-high characters, red Set value: 6-mm-high characters, green *2		
Memory backup		EEPROM (overwrites: 100,000 times min.) that can store data for 10 years min.		
Operating temperature range		-10 to 55°C (-10 to 50°C if counters are mounted side by side) (with no icing or condensation)		
Storage temperature range		-25 to 70°C (with no icing or condensation)		
Operating	humidity range	25 to 85%		
Case colo	r	Black (N1.5)		
Attachme	nts	Waterproof packing, flush mounting adapter, unit label		

\*1. Inrush current will flow for a short time when the power supply is turned ON. Inrush Current (Reference Values)

Voltage Applied voltage		Inrush current (peak value)	Time
12 to 24 VDC	26.4 VDC	4.4 A	1.7 ms

**\*2.** The display is lit only when the power is ON.

### **Characteristics**

Accuracy of operating time and setting error (including temperature and voltage influences)		Power-ON start: ±0.01% ±50 ms max. (See note 1.) Signal start: ±0.005%±0.03 ms max. (See note 1.) Signal start for transistor output model: ±0.005%±3 ms max. (See note 1 and 2.) If the set value is within the sensor waiting time at startup the control output of the H5CX will not turn ON until the sensor waiting time passes.  Note: 1. The values are based on the set value.  2. The value is applied for a minimum pulse width of 1 ms.
Insulation resis	tance	100 MΩmin. (at 500 VDC) between current-carrying terminal and exposed non-current-carrying metal parts
Dielectric strength		2,000 VAC, 50/60 Hz for 1 min between current-carrying metal parts and non-current-carrying metal parts 1,000 VAC, 50/60 Hz for 1 min between control output, power supply, and input circuit
Impulse withstand voltage		1.0 kV (between power terminals) 1.5 kV (between current-carrying terminal and exposed non-current-carrying metal parts)
Noise immunity		±480 V (between power terminals) and ±600 V (between input terminals), square-wave noise by noise simulator (pulse width: 100 ns/1 μs, 1-ns rise)
Static immunity		Destruction: 15 kV Malfunction: 8 kV
Vibration	Destruction	10 to 55 Hz with 0.75-mm single amplitude in three directions for 2 h each
resistance	Malfunction	10 to 55 Hz with 0.35-mm single amplitude in three directions for 10 min each
Shock	Destruction	300 m/s² in three directions, three cycles
resistance	Malfunction	100m/s² in three directions, three cycles
Weight		Approx. 105 g (Timer only)

### **Applicable Standards**

Approved safety standards	UL508/Listing, CSA C22.2 No. 14, conforms to EN 61812-1 (pollution degree 2/overvoltage category III) Conforms to VDE0106/P100 (finger protection).	
ЕМС	(EMI) Emission Enclosure: (EMS) Immunity ESD: Immunity RF-interference: Immunity Burst: Immunity Surge: Immunity Conducted Disturbance: Immunity Voltage Dip/Interruption:	EN61812-1 EN55011 Group 1 class A EN61812-1 IEC61000-4-2 IEC61000-4-3 IEC61000-4-4 IEC61000-4-5 IEC61000-4-6 IEC61000-4-11

### **I/O Functions**

	Start signal		Starts timing.
Inputs	Reset		Resets present value. (The present value returns to 0.) Timing stops and control output turns OFF while reset input is ON. Reset indicator is lit while reset input is ON.
	Gate		Inhibits timer operation.
	Forecast value	Control output (OUT2)	Turns ON when the present value reaches the set value.
Outnuto	setting	Forecast output (OUT1)	Turns ON when the present value reaches the forecast value.
Outputs	Absolute value	Control output 2 (OUT2)	Turns ON when the present value reaches set value 2.
	setting	Control output 1 (OUT1)	Turns ON when the present value reaches set value 1.

### **Response Delay Time When Resetting (Transistor Output)**


The following table shows the delay from when the reset signal is input until the output is turned OFF.

(Reference value)


	(
Minimum reset signal width	Output delay time
1 ms	0.8 to 1.2 ms
20 ms	15 to 25 ms

### Connections

### **Block Diagram**



### **Terminal Arrangement**

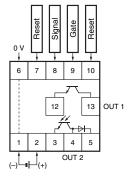


- Note: 1. The power supply and input circuit are not isolated.
  - 2. Terminals 1 and 6 are connected internally.
  - Terminals 7 and 10 have the same reset function. The same function will be performed whichever terminal is connected. Terminals 7 and 10 are not connected internally, however, so do not use them for cross-over wiring.

### **Input Circuits**

### Signal, Reset, and Gate Input


No-voltage Inputs (NPN Inputs) Voltage Inputs (PNP Inputs)





### **Transistor Output**

- · The transistor output of the H5CX is insulated from the internal circuitry by a photocoupler, so the transistor output can be used as both NPN and PNP output.
- The diode connected to the collector of the output transistor is used to absorb inverted voltage that is generated when an inductive load is connected to the H5CX.

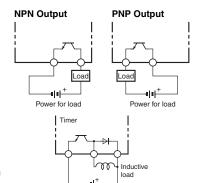


Power for load

### **Input Connections**

The inputs of the H5CX-B are no-voltage (short-circuit or open) inputs or voltage inputs.

### No-voltage Inputs (NPN Inputs)


### **Open Collector**



0 V for i


7 8 9 Note: Operate with transistor ON

# **Voltage Output**




Note: Operate with transistor ON

### **Contact Input**



**DC Two-wire Sensor** 

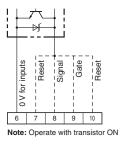

#### **No-voltage Input Signal Levels**

No-contact input	$\label{eq:Short-circuit level (Transistor ON)} \textbf{ Residual voltage: 3 V max.} \\ \textbf{ Impedance when ON: 1 k} \Omega \text{ max.} \\ \textbf{ (The leakage current is approx. 12 mA when the impedance is 0 } \Omega.) \\        $
·	Open level (Transistor OFF) • Impedance when OFF: 100 kΩ min.
Contact input	Use contacts which can adequately switch 5 mA at 10 V


### Applicable Two-wire Sensor

 Leakage current: 1.5 mA max. • Switching capacity: 5 mA min. Residual voltage: 3.0 VDC max.


### Operating voltage: 10 VDC

### **Voltage Inputs (PNP Inputs)**


#### **No-contact Input (NPN Transistor)**

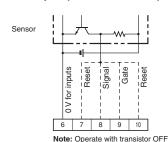

### **No-contact Input (PNP Transistor)**

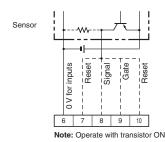

### **Contact Input**



Note: Operate with relay ON

### **Voltage Input Signal Levels**

High level (Input ON): 4.5 to 30 VDC

Low level (Input OFF): 0 to 2 VDC

The DC voltage must be 30 VDC max. Input resistance: Approx.  $4.7 \text{ k}\Omega$ 

### H5CX-BWSD-N

### Nomenclature

#### **Display Section**

1. Key Protection Indicator (orange) Lit when the reset input or Reset Key is ON.

#### 2. Control Output Indicator (orange)

Forecast value setting
Forecast output ON: OUT 1 is lit. Control output ON: OUT 2 is lit. Absolute value setting Control output 1 ON: OUT 1 is lit. Control output 2 ON: OUT 2 is lit.

### 3. Reset Indicator (orange)

Lit when the reset input or Reset Key is ON.

### 4. Present Value Display (red)

Character height: 10 mm If the time range is 0.0 min or 0.0 h, the decimal point flashes to indicate timing operation.

#### 5. Time Unit Indicators (green)

6. Set Value (green) Character height: 6 mm


#### 7. Set Value 1, 2 Indicator (green)



Character Size for Set Value Display



## TIMER 2 8 Sixth digit First digit

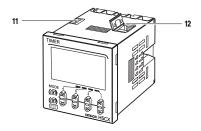

#### **Operation Key**

#### 8. Mode Key

(Changes modes and setting items)

#### Reset Key

Resets present value and output.

### 10. Up Keys 1 to 6

#### **Switches**

### 11. Key-protect Switch



#### 12. DIP Switch



### **Key Protect Level**

When the Key-protect Switch is ON, key operations are prohibited according to the settings for DIP switch pins 6 to 8, thus preventing

The Key-protect Switch can be turned ON and OFF while the power is ON.

The Key Protection Indicator is lit orange when the Key-protect Switch is ON.

If the key protect switch is ON, you will not be able to switch to Function Setting Mode.

**Dimensions** (unit: mm)


### **Digital Timers**

### **Digital Timers**

### **H5CX-BWSD-N (Flush Mounting Models)**








Note: M3.5 terminal screw (effective length: 6 mm)


### **Panel Cutouts**

Panel cutouts areas shown below. (according to DIN43700)

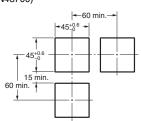

Note: 1.


- The mounting panel thickness should be 1 to 5 mm.
  To allow easier operation, it is recommended that Adapters be mounted so that the gap between sides with hooks is at least 15 mm (i.e., with the panel cutouts separated by at least 60 mm). It is possible to mount Timers side by
- side, but only in the direction without the hooks. However, if Timers are mounted side by side, water resistance will be lost.



With Y92A-48F1 attached.  $A=\{48n-2.5+(n-1)\times 4\}_{-1}^{+1}$ With Y92A-48 attached.  $A = (51n - 5.5)^{+1}_{-0}$ 

### **Dimensions with Flush Mounting Adapter** H5CX-BWSD-N (Provided with Adapter and Waterproof Packing)



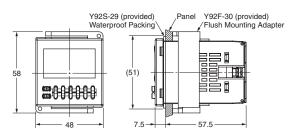

### **Accessories (Order Separately)**

Refer to page 12 for details.


### **Operating Procedures**

### **DIP Switch Settings**

All functions are set using the DIP switch.

	Item	OFF	ON
1	Time range	Refer to the table on the right.	
3	Output modes	F-1 mode	A mode
4	Input signal width	20 ms	1 ms
5	NPN/PNP input mode	NPN (no-voltage)	PNP (voltage)
6	Reset Key protection	Disabled	Enabled
7	Up Key protection	Disabled	Enabled
8	Mode Key protection	Disabled	Enabled

Pin 1	Pin 2	Time range			
OFF	OFF	0.1 h to 99999.9 h			
ON	OFF	0.01 s to 9999.99 s			
OFF	ON	0 h 00 min 01 s to 99 h 59 min 59 s			
ON	ON	0.1 min to 99999.9 min			

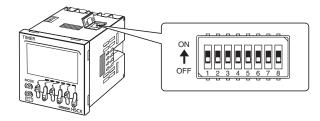


2. DIP switch settings are effective when the power is turned ON again. (Set the DIP switch before installation and power-up.)

### **Operation in Run Mode**


Set the digits for the set values using the corresponding ( Key.

$$\bigcirc 0 \rightarrow 1 \rightarrow 2 \rightarrow 3 \rightarrow 4 \rightarrow 5 \rightarrow 6 \rightarrow 7 \rightarrow 8 \rightarrow 9 \rightarrow 9$$

### **Forecast Value Setting**

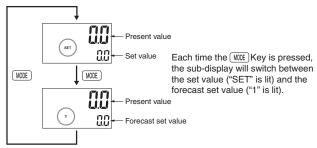

### **Absolute Value Setting**

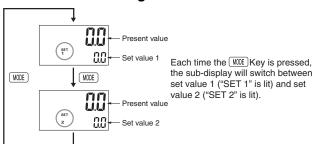


Note: 1. All the pins are factory-set to OFF.


### Operation in Function Setting Mode

Settings that cannot be performed with the DIP switch are performed with the operation keys.

• Change to Function Setting Mode.



\*1. If the mode is switched to the function setting mode during operation, operation will continue.

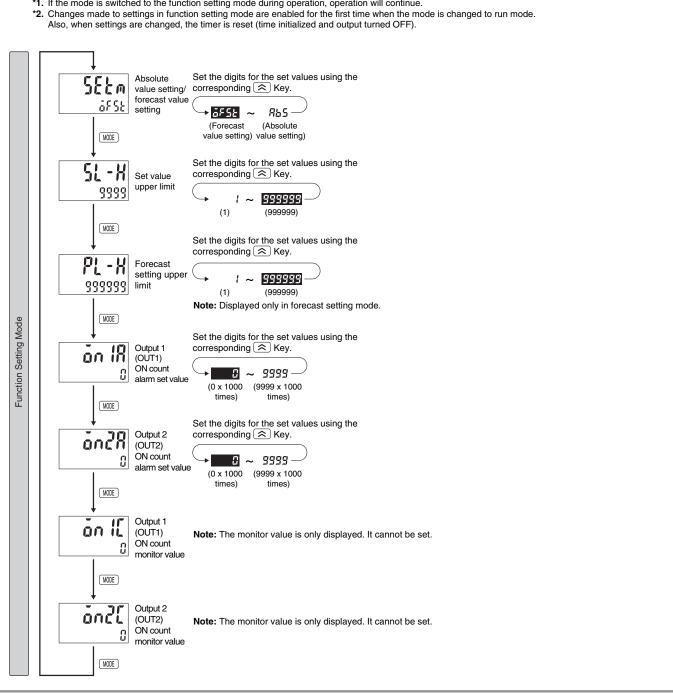


### **Explanation of Functions**

### Absolute value setting/forecast value setting (SEŁm)

Set value 1 can be set as the forecast value setting (5F5E) or the absolute value setting (865).


### Forecast Value Setting

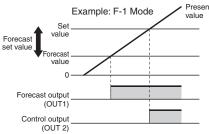

- OUT1 (forecast output) turns ON when the present value reaches the forecast value.

  Forecast value = Set value - Forecast set value
- Note: The forecast set value is used to set the deviation for the set value.
- OUT2 (control output) turns ON when the present value reaches the set value.
- If the forecast set value ≥ set value, OUT1 (forecast output) will turn ON as soon as timing starts.

### **Absolute Value Setting**

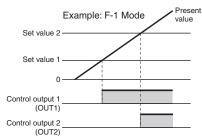

- OUT1 (control output 1) turns ON when the present value reaches set valùe 1.
- OUT2 (control output 2) turns ON when the present value reaches set value 2.

Refer to pages 18 and 28 for information on other functions.

### **Self-diagnostic Function**

The following displays will appear if an error occurs.

Main display	lay Sub-display Error		Output status	Correction method	Set value after reset
E I	Not lit	Not lit CPU OFF Either press the Reset Key or reset the power supply.		No change	
E2	Not lit	Memory error (RAM)	OFF	Reset the power supply.	No change
E2	SUm	Memory error EEPROM *1	OFF	Reset Key.	Factory setting
£ 3 *2	No change	Output ON count alarm set value exceeded	No change	Reset Key	No change

- **\*1.** This includes times when the life of the EEPROM has expired.
- **★2.** The normal display and **£ 3** will appear alternately.

When the Reset Key is pressed, £3 will no longer be displayed even if the alarm set value is exceeded. (Monitoring is possible, however, because the Timer will continue without clearing the output ON count.)


### **Timing Charts**

### Mode A: Signal ON delay (Timer resets when power comes ON.)

## **Basic operation** Start signal input Forecast output OUT1 output OUT1 Control output 2 output 2 OUT2 OUT2 OUT2 ( ) The names in parentheses are used for the absolute value setting. Control


- \*Start signal input is disabled during timing.
- Timing starts when the start signal goes ON. • While the start signal is ON, the timer starts when the power comes ON or when the reset input goes OFF.
- A sustained control output is used.
- Timing stops when the time is up.

Note: Output is instantaneous when the set value is 0.

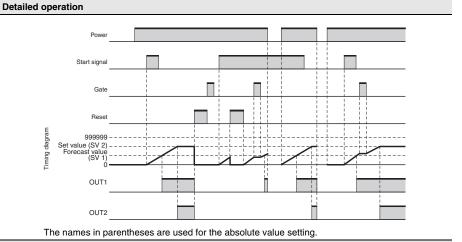

#### Mode F-1: Cumulative (Timer does not reset when power comes ON.)


#### **Basic operation Detailed operation**

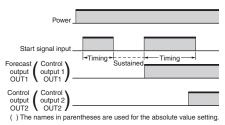

- Start signal enables timing (timing is stopped when the start signal is OFF or when the power is OFF).
- A sustained control output is used.
- Timing continues even after the time is up.

Note: Output is instantaneous when the set value is

When the  ${
m H5CX}$  is used with power start, there will be a timer error (approximately 100 ms each time the H5CX is turned ON) due to the characteristics of the internal circuitry. Use the H5CX with signal start if timer accuracy is required.

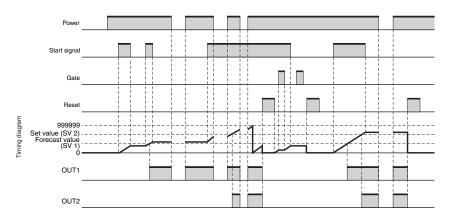

The names in parentheses are used for the absolute value setting.

The forecast value = set value - forecast set value
 The forecast set value is used to set the deviation for the set value.

### Safety Precautions for All H5CX Series (Common)

### **⚠** CAUTION

Do not allow pieces of metal, wire clippings, or fine metallic shavings or fillings from installation to enter the product. Doing so may occasionally result in electric shock, fire, or malfunction.



Minor injury due to explosion may occasionally occur. Do not use the Timer where subject to flammable or explosive gas.



Fire may occasionally occur. Tighten the terminal screws to the rated torque.



H5CX terminals: 6.55 to 7.97 lb-in (0.74 to 0.90 N·m) P2CF Socket terminals: 4.4 lb-in (0.5 N·m)

Minor injury due to electric shock may occasionally occur. Do not touch any of the terminals while power is being supplied. Be sure to mount the terminal cover after wiring.




The life expectancy of the output relay varies considerably according to its usage. Use the output relay within its rated load and electrical life expectancy. If the output relay is used beyond its life expectancy, its contacts may become fused or there may be a risk of fire. Also, be sure that the load current does not exceed the rated load current and when using a heater, be sure to use a thermal switch in the load circuit.

Minor electric shock, fire, or malfunction may occasionally occur. Do not disassemble, modify, or repair the Timer or touch internal components.




#### **Precautions for Safe Use**

 The panel surface of the H5CX is water-resistant (conforming to NEMA4, IP66, UL Type 4X (Indoor Use Only). To protect the internal circuits from water penetration through the space between the H5CX and operating panel, waterproof packing is included. Attach the Y92F-30 Adapter with sufficient pressure with the reinforcing screws so that water does not penetrate the panel.



- When mounting the Timer to a panel, tighten the two mounting screws alternately, a little at a time, so as to keep them at an equal tightness. If the panel screws are tightened unequally, water may enter the panel.
- Store the Timer at the specified temperature. If the Time has been stored at a temperature of less than -10°C, allow the Time to stand at room temperature for at least 3 hours before use.
- Mounting the Timer side-by-side may reduce the life expectancies of internal components.
- Use the Timer within the specified ranges for the ambient operating temperature and humidity.
- Do not use in the following locations:
  - Locations subject to sudden or extreme changes in temperature.
  - Locations where high humidity may result in condensation.
- Do not use the Timer outside of the rated ranges for vibration, shock, water exposure, and oil exposure.
- Do not use this Timer in dusty environments, in locations where corrosive gasses are present, or in locations subject to direct sunlight.
- Install the Timer well away from any sources of static electricity, such as pipes transporting molding materials, powders, or liquids.

- Internal elements may be destroyed if a voltage outside the rated voltage range is applied.
- Be sure that polarity is correct when wiring the terminals.
- Separate the Timer from sources of noise, such as devices with input signals from power lines carrying noise, and wiring for I/O signals.
- Do not connect more than two crimp terminals to the same terminal.
- Up to two wires of the same size and type can be inserted into a single terminals.
- Use the specified wires for wiring. Applicable Wires: AWG 18 to AWG 22, solid or twisted, copper.
- Install a switch or circuit breaker that allows the operator to immediately turn OFF the power, and label it to clearly indicate its function.
- When the Timer is operated with no-voltage input (NPN input), approximately 14 V is output from the input terminals. Use a sensor that contains a diode.



- Use a switch, relay, or other contact so that the rated power supply voltage will be reached within 0.1 seconds. If the power supply voltage is not reached quickly enough, the Timer may malfunction or outputs may be unstable.
- Use a switch, relay, or other contact to turn the power supply OFF instantaneously. Outputs may malfunction and memory errors may occur if the power supply voltage is decreased gradually.
- H5CX-A□-N/-L□-N:

When changing the set value during a timing operation, the output will turn ON if the set value is changed as follows because of the use of a constant read-in system:

Elapsed time (UP) mode: Present value  $\geq$  Set value Remaining time (DOWN) mode: Elapsed time  $\geq$  Set value (The present value is set to 0.)

When in the remaining time mode, the amount the set value is changed is added to or subtracted from the present value. Operation with a set value of 0 will vary with the output mode. Refer to the timing charts on **page 20**.

H5CX-B□-N:

When changing the set value during a timing operation, the output will turn ON if the set value is changed as follows because of the use of a constant read-in system:


- 1. Forecast Value Setting
  - When the present value  $\geq$  the set value, OUT2 (control output) turns ON.
  - When the present value ≥ the forecast value (forecast value = set value forecast set value), OUT1 (forecast output) turns ON.
- 2. Absolute Value Setting
  - When the present value  $\geq$  set value 2, OUT2 (control output 2) turns ON.
  - When the present value  $\geq$  the forecast value (forecast value = set value forecast set value), OUT1 (control output 1) turns ON.
  - When the set value is 0, the output turns ON the moment the signal is input. The reset operation turns OFF the output.
- Do not use organic solvents (such as paint thinners or benzine), strong alkali, or strong acids. They will damage the external finish.
- Confirm that indications are working normally, including the backlight LED, and LCD. The indicator LEDs, LCD, and resin parts may deteriorate more quickly depending on the application environment, preventing normal indications. Periodic inspection and replacement are required.
- The waterproof packing may deteriorate, shrink, or harden depending on the application environment. Periodic inspection and replacement are required.

#### **Precautions for Correct Use**

- H5CX models with a 24-VDC/12 to 24-VDC power supply use a transformer-free power supply method in which the power supply terminals are not isolated from the signal input terminals. If a nonisolating DC power supply is used, unwanted current paths may occasionally burn or destroy internal components depending on the wiring. Always check the wiring sufficiently before use.
- An inrush current of approx. 10 A will flow for a short time when the power supply is turned ON. If the capacity of the power supply is not sufficient, the Timer may not start. Be sure to use a power supply with sufficient capacity.
- Maintain voltage fluctuations in the power supply within the specified operating voltage range.
- When turning the power ON and OFF, input signal reception is possible, unstable, or impossible as shown in the diagram below.

Power ON supply OFF.							
	200ms	0 to 5	0 ms	5ms	C	to 500	ms
Input	Impossible	Unstable	Po	ssible		Unstable	Impossible

- To allow for the startup time of peripheral devices (sensors, etc.), the Timer starts timing operation between 200 to 250 ms after power is turned ON. For this reason, in operations where timing starts from power ON, the time display will actually start from 249 ms. If the set value is 249 ms or less, the time until output turns ON will be a fixed value between 200 and 250. The present value display will start from 250 ms. (Normal operation is possible for set values of 250 ms or more.) In applications where a set value of 249 ms or less is required, use start timing with signal input.
- Inrush current generated by turning ON or OFF the power supply may deteriorate contacts on the power supply circuit. Turn ON or OFF to a device with the rated current of more than 10 A.
- Make sure that all settings are appropriate for the application.
   Unexpected operation resulting in property damage or accidents may occur if the settings are not appropriate.
- Do not leave the Timer for long periods at a high temperature with output current in the ON state. Doing so may result in the premature deterioration of internal components (e.g., electrolytic capacitors).
- EEPROM is used as backup memory when the power is interrupted. The write life of the EEPROM is 100,000 writes.
   The EEPROM is written at the following times:
  - When the power supply is turned OFF
  - When switching from Timer/Twin Timer Selection Mode or Function Setting Mode to Run Mode
- Dispose of the product according to local ordinances as they apply.
- Attach the front panel when using the Timer. The tabs in the middle
  of each of four sides secure the front panel to the main body. To
  remove the panel, widen the four tabs and pull the panel toward
  you. To mount the panel, fit all four tabs correctly into the grooves
  on the main body.

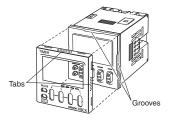

### Conformance to EN/IEC Standards

- When conforming to EMC standards, refer to the information provided in this datasheet for cable selection and other conditions.
- This is a class A product. In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce interference.
- H5CX-A□-N/-L□-N:

Basic insulation is provided between the power supply and input terminals. (No insulation is provided between the power supply and input terminals for the H5CX-□D-N.)

Basic insulation is provided between power supply and output terminals, and between input and output terminals.

H5CX-B□-N:

No insulation is provided between the power supply and input terminals.

Basic insulation is provided between the power supply and output terminals.

- When double insulation or reinforced insulation is required, apply double insulation or reinforced insulation as defined in IEC 60664 that is suitable for the maximum operating voltage with clearances or solid insulation.
- Connect the input and output terminals to devices that do not have any exposed charged parts.

### **Warranty and Application Considerations**

### **Read and Understand This Catalog**

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

### **Warranty and Limitations of Liability**

#### **WARRANTY**

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED

#### LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS, OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted. IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

### **Application Considerations**

### **SUITABILITY FOR USE**

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used.

Know and observe all prohibitions of use applicable to this product.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

### **Disclaimers**

#### **PERFORMANCE DATA**

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON *Warranty and Limitations of Liability.* 

#### **CHANGE IN SPECIFICATIONS**

Product specifications and accessories may be changed at any time based on improvements and other reasons. Consult with your OMRON representative at any time to confirm actual specifications of purchased product.

#### **DIMENSIONS AND WEIGHTS**

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

#### ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

**OMRON Corporation Industrial Automation Company** 

Tokyo, JAPAN

Contact: www.ia.omron.com

Regional Headquarters OMRON EUROPE B.V.

Wegalaan 67-69-2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD.

No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

**OMRON ELECTRONICS LLC** 

One Commerce Drive Schaumburg, IL 60173-5302 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD.
Room 2211, Bank of China Tower,
200 Yin Cheng Zhong Road,
PuDong New Area, Shanghai, 200120, China
Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

**Authorized Distributor:** 

© OMRON Corporation 2009 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

Printed in Japan CSM\_5\_1\_0614 Cat. No. L111-E1-01 0709