E3X-HD

CSM_E3X-HD_DS_E_7_2

Easy and optimum settings for anyone Smart Fiber Amplifier Unit with Long-term Stable Detection

- Equipped with Smart Tuning, which automatically configures the settings to their optimum values with the press of a single button.
- Highly usable design enables anyone to configure the settings easily.
- Detects dirt, vibrations, and LED deterioration, and automatically compensates the incident level and the light intensity.
- Unparalleled best-in-class power provides stable detections for lowreflective workpieces and large workpieces (equipped with GIGA RAY II).




Refer to the Fiber Sensors Technical Guide and Safety Precautions on page 9.



For the most recent information on models that have been certified for safety standards, refer to your OMRON website.

Features

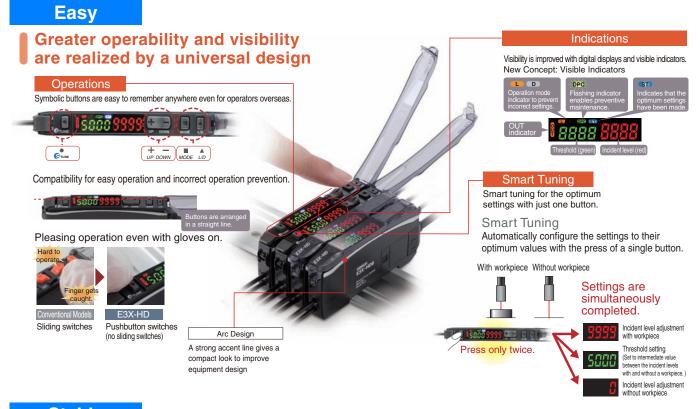


Stable

Long-term stable detection with no maintenance

Smart Power Control

Maintenance-free operation by double compensation of light intensity



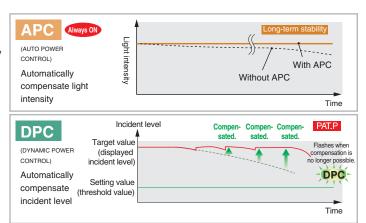

Ordering Information

Fiber Amplifier Units

Standard models (Dimensions → page 12)

Appearance	Connecting method	Мос	dels
Appearance	Connecting method	NPN output	PNP output
	Pre-wired (2 m)	E3X-HD11 2M	E3X-HD41 2M
	Wire-saving Connector	E3X-HD6	E3X-HD8
	M8 Connector	E3X-HD14	E3X-HD44

Model for Sensor Communications Unit (Dimensions → page 12)

Appearance	Model	Applicable Sensor Communications Unit
	E3X-HD0	E3X-ECT
	E3X-FIDU	E3X-CRT

Accessories (sold separately)

Wire-saving connectors (Required for models for Wire-saving Connectors.)

Connectors are not provided with the Fiber Amplifier Unit and must be ordered separately. * Protective stickers: provided.

Туре	Appearance	Cable length	Number of conductors	Models
Master Connector	*	2 m	3	E3X-CN11
Slave Connector		2 m	1	E3X-CN12

Sensor I/O Connectors (Required for models with M8 Connectors.)

Connectors are not provided with the Fiber Amplifier Unit and must be ordered separately.

Size	Cable	Appearance		Cable	type	Models
		Straight		2 m		XS3F-M421-402-A
Mo	Ctondord	3		5 m	4	XS3F-M421-405-A
IVIO	M8 Standard	L-shaped	2 m	4-wire	XS3F-M422-402-A	
		L shaped		5 m		XS3F-M422-405-A

Mounting Bracket

A Mounting Bracket is not provided with the Fiber Amplifier Unit and must be ordered separately as required.

Appearance	Model	Quantity
	E39-L143	1

DIN Track

A Din Track is not provided with the Fiber Amplifier Unit and must be ordered separately as required.

Appearance	Туре	Models	Quantity
	Shallow type, total length: 1 m	PFP-100N	
	Shallow type, total length: 0.5 m	PFP-50N	1
	Deep type, total length: 1 m	PFP-100N2	·

End Plate

Two End Plates are provided with the Sensor Communications Unit. End Plates are not provided with the Fiber Amplifier Unit and must be ordered separately as required.

Appearance	Model	Quantity
5	PFP-M	1

Ratings and Specifications

		Туре		Standard		Model for Sensor Communications Unit *1			
		NPN output	E3X-HD11	E3X-HD6	E3X-HD14	E3X-HD0			
		PNP output	E3X-HD41	E3X-HD8	E3X-HD44	LOX-11D0			
Item	Connecting method		Pre-wired	Wire-saving Connector *2	M8 Connector	Connector for Sensor Communications Unit			
Light sour	ce (wavele	ngth)	Red, 4-element LED	(625 nm)					
Power sup	ply voltag	е	12 to 24 VDC ±10%,	ripple (P-P) 10% max.		Supplied from the connector through the Sensor Communications Unit			
D	Normal m	ode	720 mW max. (Curre	nt consumption: 30 mA	max. at 24 VDC, 60 r	nA max. at 12 VDC)			
Power consump	Eco ON		530 mW max. (Curre	nt consumption: 22 mA	max. at 24 VDC, 44 r	nA max. at 12 VDC)			
tion	Eco LO		640 mW max. (Current at 12 VI	consumption: 26 mA max DC)	. at 24 VDC, 53 mA max.	-			
Control ou	tput		Load current: Groups Groups Residual voltage: At le	oltage: 26.4 VDC max., s of 1 to 3 Amplifier Un s of 4 to 16 Amplifier U pad current of less that pad current of 10 to 10 max.	-				
Protection	circuits			e polarity protection, ou reverse polarity protec		Power supply reverse polarity protection and output short-circuit protection			
	Super-hig mode (SH		NPN outputs: Operate PNP outputs: Operate			-			
Response time	High-spee	d mode (HS)	Operate or reset: 250 μs (default setting)						
		mode (Stnd)	Operate or reset: 1 ms						
	Giga-power	r mode (GIGA)	Operate or reset: 16 ms						
Maximum connectable Units		le Units	16 units		with E3X-CRT: 16 units with E3X-ECT: 30 units				
Mutual inte	<u> </u>		Possible for up to 10 units (optical communications sync) *3						
Auto powe	er control (APC)	Always ON						
Other func	tions		Power tuning, differential detection, DPC, timer (OFF-delay, ON-delay, or one-shot), zero reset, resetting settings, and Eco mode						
Ambient ill (Receiver		l	Incandescent lamp: 20,000 lx max., Sunlight: 30,000 lx max.						
Ambient te	emperature	e range	Operating: Groups of 1 to 2 Amp Groups of 3 to 10 Am Groups of 11 to 16 An Storage: -30 to 70°C (with no icing or cond	plifiers: –25 to 50°C, mplifiers: –25 to 45°C	Operating: Groups of 1 to 2 Amplifiers: 0 to 55°C, Groups of 3 to 10 Amplifiers: 0 to 50°C, Groups of 11 to 16 Amplifiers: 0 to 45°C, Groups of 17 to 30 Amplifiers: 0 to 40°C Storage: –30 to 70°C (with no icing or condensation)				
Ambient h	umidity ra	nge	Operating and storage: 35% to 85% (with no condensation)						
Insulation	resistance	• 	20 MΩ min. (at 500 VDC)						
Dielectric	strength		1,000 VAC at 50/60 H						
Vibration resistance (destruction)			10 to 55 Hz with a 1.5 Y, and Z directions	-mm double amplitude	10 to 150 Hz with a 0.7-mm double amplitude for 80 minutes each in X, Y, and Z directions				
Shock resi	stance (de	estruction)	500 m/s ² for 3 times 6	each in X, Y, and Z dire	150 m/s² for 3 times each in X, Y, and Z directions				
Degree of protection		IEC 60529 IP50 (with	Protective Cover attac	ched)					
Weight (pa	cked state	e/unit only)	Approx. 105 g/ Approx. 65 g	Approx. 60 g/ Approx. 20 g	Approx. 70 g/ Approx. 25 g	Approx. 65 g/Approx. 25 g			
	Case		Polycarbonate (PC)			Heat-resistant ABS (connector: PBT)			
Materials	Cover		Polycarbonate (PC)						
	Cable		PVC		_				
Accessorie	es		Instruction Manual						

The E3X-ECT EtherCAT Sensor Communications Unit and the E3X-CRT CompoNet Sensor Communications Unit can be used.

Use either the E3X-CN11 (master connector, 3 conductors) or the E3X-CN12 (slave connector, 1 conductor).

The communications function and mutual interference prevention function are disabled when the detection mode is set to Super-high-speed mode (SHS). When including E3X-DA-S with activated power tuning, mutual interference prevention is possible for up to 6 units.

When including E3X-MDA with activated power tuning, mutual interference prevention is possible for up to 5 units.

Sensing Distances

Threaded Models

Concina				Sensing distance (mm)			
Sensing method	Sensing direction	Size	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode
	Right-angle		E32-T11N 2M	2,000	1,000	700	280
	night-angle		E32-LT11N 2M	4,000 *	3,500	2,300	920
Through-beam		M4	E32-T11R 2M	2,000	1,000	700	280
	Straight		E32-LT11 2M	4,000 *	4,000 *	2,700	1,080
			E32-LT11R 2M	4,000 *	3,500	2,300	920
	Right-angle	M3	E32-C31N 2M	110	50	46	14
		IVIS	E32-C21N 2M	290	130	90	39
		M4	E32-D21N 2M	840	350	240	100
		M6	E32-C11N 2M	780	350	320	100
			E32-LD11N 2M	840	350	240	100
			E32-D21R 2M	140	60	40	16
Reflective		M3	E32-C31 2M	330	150	100	44
			E32-C31M 1M	330	150	100	44
	Ctroight	M4	E32-D211R 2M	140	60	40	16
	Straight		E32-D11R 2M	840	350	240	100
		M6	E32-CC200 2M	1,400	600	400	180
			E32-LD11 2M	860	360	250	110
			E32-LD11R 2M	840	350	240	100

^{*} The fiber length is 2 m on each side, so the sensing distance is given as 4,000 mm.

Cylindrical Models

Sensing				Sensing distance (mm)			
method	Size	Sensing direction	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode
	1 dia.		E32-T223R 2M	450	250	150	60
Through boom	1.5 dia.	Top-view	E32-T22B 2M	680	400	220	90
Through-beam	3 dia.		E32-T12R 2M	2,000	1,000	700	280
		Side-view	E32-T14LR 2M	750	450	260	100
	1.5 dia.		E32-D22B 2M	140	60	40	16
	1.5 dia. + 0.5 dia.		E32-D43M 1M	28	12	8	4
Reflective		Tan view	E32-D22R 2M	140	60	40	16
Reflective	3 dia.	Top-view	E32-D221B 2M	300	140	90	40
			E32-D32L 2M	700	300	200	90
	3 dia. + 0.8 dia.		E32-D33 2M	70	30	20	8

Flat Models

Sensing			Sensing distance (mm)				
method	Sensing direction	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode	
	Top-view	E32-T15XR 2M	2,000	1,000	700	280	
Through-beam	Side-view	E32-T15YR 2M	750	450	260	100	
	Flat-view	E32-T15ZR 2M	750				
	Top-view	E32-D15XR 2M	840	350	240	100	
Reflective	Side-view	E32-D15YR 2M	200	100	50	0.4	
	Flat-view	E32-D15ZR 2M	200	100	52	24	

Sleeve Models

0				Sensing distance (mm)				
Sensing method	Sensing direction	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode		
	Side-view	E32-T24R 2M	170	100	50	20		
	Side-view	E32-T24E 2M	450	250	150	60		
Through-beam		E32-T33 1M	150	90	50	20		
	Top-view	E32-T21-S1 2M	510	300	170	68		
		E32-TC200BR 2M	2,000	1,000	700	280		
	Side-view	E32-D24R 2M	70	30	20	8		
		E32-D24-S2 2M	120	53	45	14		
		E32-D43M 1M	28	12	8	4		
		E32-D331 2M	14	6	4	2		
		E32-D33 2M	70	30	20	8		
Reflective		E32-D32-S1 0.5M	63	27	18	7		
Reliective	Ton view	E32-D31-S1 0.5M	- 63	21	16	/		
	Top-view	E32-DC200F4R 2M	140	60	40	16		
		E32-D22-S1 2M	050	110	72	30		
		E32-D21-S3 2M	250	110	72	30		
		E32-DC200BR 2M	840	350	240	100		
		E32-D25-S3 2M	250	110	72	30		

Small-spot, Reflective Models

		Center			Sensing dis	tance (mm)		
Туре	Spot diameter	distance (mm)	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode	
Variable spot	0.1 to 0.6 dia.	6 to 15	E32-C42 1M+E39-F3A	Spot diameter of	0.1 to 0.6 mm at 6	to 15 mm.		
variable spot	0.3 to 1.6 dia.	10 to 30	E32-C42 1M+E39-F17	32-C42 1M+E39-F17 Spot diameter of 0.3 to 1.6 mm at 10 to 30 m				
Porollol light	4 dia	0 to 20	E32-C31 2M+E39-F3C	Cnot diameter of	4 mm may at 0 to	20 mm		
raraller light	Parallel light 4 dia. 0 to		E32-C31N 2M+E39-F3C	Spot diameter of 4 mm max. at 0 to 20 mm.				
Integrated lane	0.1 dia.	5	E32-C42S 1M	Spot diameter of 0.1 mm at 5 mm.				
integrated tens	Integrated lens 6 dia. 50		E32-L15 2M	Spot diameter of 6 mm at 50 mm.				
	0.1 dia.		E32-C41 1M+E39-F3A-5	Spot diameter of	0.1 mm at 7 mm.			
	0.5 dia.	7	E32-C31 2M+E39-F3A-5	Cnot diameter of	0.E.mm.at.7.mm			
	0.5 dia.		E32-C31N 2M+E39-F3A-5	Spot diameter of 0.5 mm at 7 mm.				
Small-spot	0.2 dia.		E32-C41 1M+E39-F3B	Spot diameter of	0.2 mm at 17 mm.			
Siliali-spot	O.F. dia	17	E32-C31 2M+E39-F3B	Coat diameter of	0.5 mm at 17 mm			
	0.5 dia.		E32-C31N 2M+E39-F3B	Spot diameter of	0.5 mm at 17 mm.			
	O dia	F0	E32-CC200 2M+E39-F18	Spot diameter of 3 mm at 50 mm.				
	3 dia.	50	E32-C11N 2M+E39-F18					

High-power Beam Models

		Aperture		Sensing distance (mm)				
Туре	Sensing direction	angle	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode	
	Right-angle	15°	E32-LT11N 2M	4,000 *2	3,500	2,300	920	
Through-beam		10°	E32-T17L 10M	20,000 *1	20,000 *1	20,000 *1	8,000	
models with	Top-view	15°	E32-LT11 2M	4,000 *2	4,000 *2	2,700	1,080	
integrated lens		15	E32-LT11R 2M	4,000 *2	3,500	2,300	920	
	Side-view	30°	E32-T14 2M	4,000 *2	4,000 *2	4,000 *2	1,800	
	Right-angle	12°	E32-T11N 2M+E39-F1	4,000 *2	4,000 *2	4,000 *2	2,000	
	nigrit-arigie	6°	E32-T11N 2M+E39-F16	4,000 *2	4,000 *2	4,000 *2	3,600	
	Top-view	12°	E32-T11R 2M+E39-F1	4,000 *2	4,000 *2	4,000 *2	2,000	
	rop-view	6°	E32-T11R 2M+E39-F16	4,000 *2	4,000 *2	4,000 *2	3,600	
	Side-view	60°	E32-T11R 2M+E39-F2	1,450	800	500	200	
	Top-view	12°	E32-T11 2M+E39-F1	4,000 *2	4,000 *2	4,000 *2	1,860	
		6°	E32-T11 2M+E39-F16	4,000 *2	4,000 *2	4,000 *2	4,000 *2	
	Side-view	60°	E32-T11 2M+E39-F2	2,300	1,320	860	320	
Through-beam	Top-view	12°	E32-T51R 2M+E39-F1	4,000 *2	4,000 *2	3,900	1,500	
models with		6°	E32-T51R 2M+E39-F16	4,000 *2	4,000 *2	4,000 *2	4,000 *2	
lenses	Side-view	60°	E32-T51R 2M+E39-F2	1,400	720	500	200	
	Top-view	12°	E32-T81R-S 2M+E39-F1	4,000 *2	4,000 *2	2,700	1,000	
	Top-view	6°	E32-T81R-S 2M+E39-F16	4,000 *2	4,000 *2	4,000 *2	1,800	
	Side-view	60°	E32-T81R-S 2M+E39-F2	1,000	550	360	140	
	Tan view	12°	E32-T61-S 2M+E39-F1	4,000 *2	4,000 *2	4,000 *2	1,800	
	Top-view	6°	E32-T61-S 2M+E39-F16	4,000 *2	4,000 *2	4,000 *2	3,100	
	Side-view	60°	E32-T61-S 2M+E39-F2	1,680	900	600	240	
	Tan view	12°	E32-T51 2M+E39-F1-33	4,000 *2	4,000 *2	2,300	1,400	
	Top-view	6°	E32-T51 2M+E39-F16	4,000 *2	4,000 *2	4,000 *2	4,000 *2	
Reflective models with integrated lens	Top-view	4°	E32-D16 2M	40 to 2,800	40 to 1,400	40 to 900	40 to 480	

^{*1.} The fiber length is 10 m on each side, so the sensing distance is given as 20,000 mm.
*2. The fiber length is 2 m on each side, so the sensing distance is given as 4,000 mm.

Narrow View Models

Sensing	Sensing direction	Aperture angle	Model	Sensing distance (mm)			
method				Giga mode	Standard mode	High-speed mode	Super-high- speed mode
		1.5°	E32-A03 2M	3,220	1.780	1.000	500
	0:1	1.5	E32-A03-1 2M	3,220	1,700	1,200	500
Through hoom		3.4°	E32-A04 2M	1,280	680	450	200
Through-beam	Side-view	1	E32-T24SR 2M	4,000 *	2,200	1,460	580
			E32-T24S 2M	4,000 *	2,600	1,740	700
			E32-T22S 2M	4,000 *	3,800	2,500	1,000

^{*} The fiber length is 2 m on each side, so the sensing distance is given as 4,000 mm.

Models for Detection without Background Interference

			Sensing distance (mm)			
Sensing method	Sensing direction	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode
	Flat-view	E32-L16-N 2M	0 to 15 0 to -			0 to 12
Limited-reflective		E32-L24S 2M	0 to 4			
	Side-view	E32-L25L 2M	5.4 to 9 (center 7.2)			

Transparent Object Detection (Retro-reflective Models)

		Size	Model	Sensing distance (mm)				
Sensing method	Feature			Giga mode	Standard mode	High-speed mode	Super-high- speed mode	
	Film detection	M3	E32-C31 2M +E39-F3R +E39-RP37	250		200		
Retro-reflective	Square		E32-R16 5M	150 to		1,500		
	Threaded		E32-R21 2M	10 to 250				
	Hex-shaped	M6	E32-LR11NP 2M +E39-RP1	1,350	1,200	1,000	550	

Transparent Object Detection (Limited-reflective Models)

		Sensing direction	Model	Sensing distance (mm)					
Sensing method	Feature			Giga mode	Standard mode	High-speed mode	Super-high- speed mode		
	Small size		E32-L24S 2M		0 to 4				
	Standard	Flat-view	E32-L16-N 2M	0 to 15			0 to 12		
Limited-reflective	Glass substrate alignment, 70°C		E32-A08 2M	10 to 20					
Limited-reflective	Standard/long-distance		E32-A12 2M	12 to 30					
	Side-view form	Side-view	E32-L25L 2M	5.4 to 9 (center 7.2)					
	Glass substrate mapping, 70°C	Top-view	E32-A09 2M	15 to 38					

Chemical-resistant, Oil-resistant Models

Camalan					Sensing dis	tance (mm)	
Sensing method	Туре	Sensing direction	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode
	Oil-resistant	Right-angle	E32-T11NF 2M	4,000 *1	4,000 *1	4,000 *1	2,200
		Topyriour	E32-T12F 2M	4,000 *1	4,000 *1	4,000 *1	1,600
Through-	Chemical/oil-resistant	Top-view	E32-T11F 2M	4,000 *1	4,000 *1	2,600	1,000
Chemical/oil-resist 150°C		Side-view	E32-T14F 2M	1,400	800	500	200
	Chemical/oil-resistant at 150°C	Top-view	E32-T51F 2M	4,000 *1	2,800	1,800	700
	Semiconductors: Cleaning, developing, and etching; 60°C		E32-L11FP 5M		of lens (Recommended nter of mounting hole A		
Reflective	Semiconductors: Resist stripping; 85°C	Top-view	E32-L11FS 5M		of lens (Recommended nter of mounting hole A		
	Chemical/oil-resistant		E32-D12F 2M	*2	190	130	60
	Chemical-resistant cable		E32-D11U 2M	840	350	240	100

Bending-resistant Models

		Model	Sensing distance (mm)				
Sensing method	Size		Giga mode	Standard mode	High-speed mode	Super-high- speed mode	
	1.5 dia.	E32-T22B 2M	680	400	220	90	
Through-beam	M3	E32-T21 2M	000	400	220	90	
	M4	E32-T11 2M	2,500	1,350	900	360	
	Square	E32-T25XB 2M	500	300	170	70	
	1.5 dia.	E32-D22B 2M	140	60	40	16	
	M3	E32-D21 2M	140	60	40		
Reflective	3 dia.	E32-D221B 2M	300	140	90	40	
hellective	M4	E32-D21B 2M	300	140	90	40	
	M6	E32-D11 2M	840	350	240	100	
	Square	E32-D25XB 2M	240	100	60	30	

^{*1.} The fiber length is 2 m on each side, so the sensing distance is given as 4,000 mm.
*2. Even if there is no sensing object, the Sensor will detect light that is reflected by the fluororesin.

Heat-resistant Models

				Sensing dis	tance (mm)	
Sensing method	Size	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode
	100°C	E32-T51R 2M	1,600	800	560	225
Through-beam	150°C	E32-T51 2M	2,800	1,500	1,000	400
rnrougn-beam	200°C	E32-T81R-S 2M	1,000	550	360	140
	350°C	E32-T61-S 2M	1,680	900	600	240
	100°C	E32-D51R 2M	670	280	190	80
	150°C	E32-D51 2M	1,120	450	320	144
	200°C	E32-D81R-S 2M	420	180	120	54
Reflective	300°C	E32-A08H2 2M		10 to 20		
Hellective	300°C	E32-A09H2 2M	20 to 30 (center 25)			
	350°C	E32-D611-S 2M	420	180	120	54
	350°C	E32-D61-S 2M		180	120	54
	400°C	E32-D73-S 2M	280	120	80	36

Area Detection Models

		Sensing width	Model	Sensing distance (mm)			
Sensing method	Туре			Giga mode	Standard mode	High-speed mode	Super-high- speed mode
	Area	11 mm	E32-T16PR 2M	3,100	1,700	1,120	440
Through-beam			E32-T16JR 2M	2,750	1,500	960	380
		30 mm	E32-T16WR 2M	4,000 *	2,600	1,700	680
Reflective	Array	11 mm	E32-D36P1 2M	700	300	200	90

^{*} The fiber length is 2 m on each side, so the sensing distance is given as 4,000 mm.

Liquid-level Detection Models

				Sensing distance (mm)				
Sensing method	Tube diameter	Feature	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode	
	3.2, 6.4, or 9.5 dia.	Stable residual quantity detection	E32-A01 5M	Applicable tube: Transparent tube with a diameter of 3.2, 6.4, or 9.5 mm, Recommended wall thickness: 1 mm				
Tube-mounting	8 to 10 dia.	Mounting at multiple levels	E32-L25T 2M	Applicable tube: Transparent tube with a diameter of 8 to 10 mm, Recommended wall thickness: 1 mm				
	No restrictions	Large tubes	E32-D36T 5M	Applicable tube: T	ransparent tube (no	restrictions on diame	eter)	
Liquid contact (heat-resistant up to 200°C)			E32-D82F1 4M	Liquid-contact type				

Vacuum-resistant Models

			Sensing distance (mm)				
Sensing method	Heat-resistant temperature	Model	Giga mode	Standard mode	High-speed mode	Super-high- speed mode	
Through-beam	120°C	E32-T51V 1M	720	400	260	100	
	120 C	E32-T51V 1M+E39-F1V	2,000 *	2,000 *	1,360	520	
	200°C	E32-T84SV 1M	1,760	950	640	260	

^{*} The fiber length is 1 m on each side, so the sensing distance is given as 2,000 mm.

Models for FPD, Semiconductors, and Solar Cells

Sensing method		Operating temperature	Model	Sensing distance (mm)			
	Application			Giga mode	Standard mode	High-speed mode	Super-high- speed mode
Limited-reflective	Glass presence detection	70°C	E32-L16-N 2M	0 to 15 0 to 12			0 to 12
	Glass substrate alignment	70.0	E32-A08 2M	10 to 20			
		300°C	E32-A08H2 3M				
		70°C	E32-A12 2M	12 to 30			
	Glass substrate mapping	70 C	E32-A09 2M	15 to 38			
		300°C	E32-A09H2 2M	20 to 30 (center 25)			
	Wet processes: Cleaning, Resist developing and etching	60°C	E32-L11FP 5M	8 to 20 mm from tip of lens (Recommended sensing distance: 11 mm), 19 to 31 mm from center of mounting hole A (Recommended sensing distance: 22 mm			,,
	Wet process: Resist stripping	85°C	E32-L11FS 5M	8 to 20 mm from tip of lens (Recommended sensing distance: 11 mm), 32 to 44 mm from center of mounting hole A (Recommended sensing distance: 35 mm			
Through-beam	Wafer mapping	70°C	E32-A03 2M	3,220	1,780	1,200	500
			E32-A03-1 2M				500
			E32-A04 2M	1,280	680	450	200
			E32-T24SR 2M	4,000 *	2,200	1,460	580
			E32-T24S 2M	4,000 *	2,600	1,740	700


^{*} The fiber length is 2 m on each side, so the sensing distance is given as 4,000 mm.


I/O Circuit Diagrams

NPN Output

Models	Operation mode	Timing chart	L/D indicators	Output circuit
E3X-HD11 E3X-HD6	Light-ON	Incident light No incident light OUT indicator Lit (orange) Not lit Output ON transistor OFF Load Set (e.g., relay) Reset (Between blue and black leads)	L lit.	Display OUT indicator (orange) Brown Black Control output T 24 VDC
E3X-HD14	Dark-ON	Incident light No incident light OUT indicator Lit (orange) Not lit Output ON transistor OFF Load Set (e.g., relay) Reset (Between blue and black leads)	D lit.	M8 Connector Pin Arrangement Note: Pin 2 is not used. Blue 3 Blue 3 Blue


PNP Output

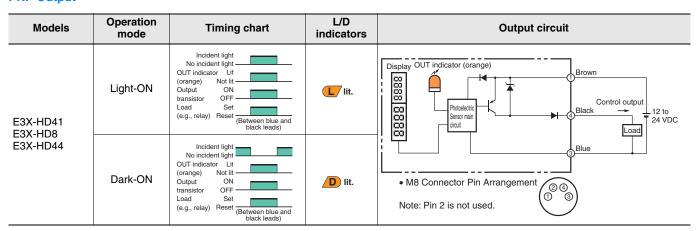



Note: Timing Charts for Timer Settings (T: Set Time)


Plug (Sensor I/O Connector)



Wire color	Connection pin	Application
Brown	1	Power supply (+V)
White	2	
Blue	3	Power supply (0 V)
Black	4	Output

Note: Pin 2 is not used.

Nomenclature

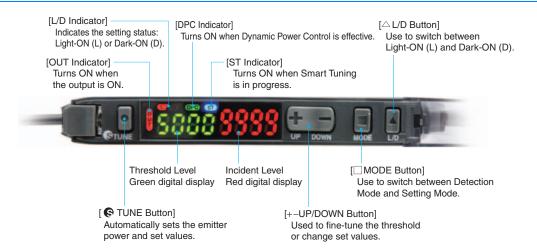

Safety Precautions

Refer to the Fiber Sensors Technical Guide for precautions that apply to all Fiber Sensors.

Marning

This product is not designed or rated for ensuring safety of persons either directly or indirectly. Do not use it for such purposes.



Do not use the product with voltage in excess of the rated voltage.

Excess voltage may result in malfunction or fire.



Never use the product with AC power supply. Otherwise, explosion may result.



Precautions for Safe Use


The following precautions must be observed to ensure safe operation of the product. Doing so may cause damage or fire.


- 1. Do not install the product in the following locations.
 - · Locations subject to direct sunlight
 - · Locations subject to condensation due to high humidity
 - · Locations subject to corrosive gas
 - Locations subject to vibration or mechanical shocks exceeding the rated values
 - · Locations subject to exposure to water, oil, chemicals
 - · Locations subject to stream
 - · Locations subjected to strong magnetic field or electric field
- Do not use the product in environments subject to flammable or explosive gases.
- To secure the safety of operation and maintenance, do not install the product close to high-voltage devices and power devices.
- 4. High-Voltage lines and power lines must be wired separately from this product. Wiring them together or placing them in the same duct may cause induction, resulting in malfunction or damage.
- Do not apply load exceeding the ratings. Otherwise, damage or fire may result.
- 6. Do not short the load. Otherwise, damage or fire may result.
- 7. Connect the load correctly.
- **8.** Do not miswire such as the polarity of the power supply.
- 9. Do not use the product if the case is damaged.
- 10. Burn injury may occur. The product surface temperature rises depending on application conditions, such as the ambient temperature and the power supply voltage. Attention must be paid during operation or cleaning.
- When setting the Sensor, be sure to check safety, such as by stopping the equipment.
- Be sure to turn off the power supply before connecting or disconnecting wires.
- Do not attempt to disassemble, repair, or modify the product Unit in any way.
- 14. When disposing of the product, treat it as industrial waste.
- 15. Do not use the Sensor in water, rainfall, or outdoors.

Precautions for Correct Use

- Be sure to mount the unit to the DIN track until it clicks.
- Use an extension cable with a minimum thickness of 0.3 mm² and less than 100 m long.
- Do not subject the cable to more than the following forces.
 Pull: 40 N; torque: 0.1 N·m; pressure: 20 N; bending: 29.4 N
- The Sensor is ready to operate 200 ms after the power supply is turned ON
- When using Amplifier Units with Wire-saving Connectors, attach
 the protective stickers (provided with E3X-CN-series Connectors)
 on the unused power pins to prevent electrical shock and short
 circuiting.

When using Amplifier Units with Connectors for Communications Units, attach the protective caps (provided with E3X-CRT/ECT Sensor Communications Unit).





Amplifier Unit with Connector for Communications Unit



- Output pulses may occur when the power supply is turned OFF. Turn OFF the power supply to the load or load line first.
- Excessive incident light cannot be sufficiently handled by the mutual interference prevention function and may cause malfunction. To prevent this, set a higher threshold level.
- Make sure that the power supply is turned OFF before connecting, separating, or adding Amplifier Units.
- Do not pull on or apply excessive pressure or force to the Fiber Unit when it is attached to the Amplifier Unit.
- The E3X-MC11, E3X-MC11-SV2 and E3X-MC11-S Mobile Consoles cannot be used.
- Mutual interference prevention on the E3X-HD Series does not function among the E3NX-FA, E3X-DA-N, E3X-SD, or E3X-NA Fiber Amplifier Units.
- Mutual interference prevention on the E3X-HD Series does function among the E3X-DA-S and E3X-MDA Fiber Amplifier Units.
- The E3X-CRT and E3X-ECT Sensor Communications Unit can be used with the E3X-HD0, but the E3X-DRT21-S and E3NW-ECT Sensor Communications Units cannot be used.
- Always keep the protective cover in place when using the Amplifier
 Light
- Do not use thinner, benzine, acetone, and kerosene for cleaning.

For technical information and product FAQs, refer to the *Technical Guide* on your OMRON website.

Mounting the Fiber Amplifier Units

■ Mounting on DIN Track


1. Let the hook on the Amplifier Unit's Fiber Unit connection side catch the track and push the unit until it clicks.



■ Removing from DIN Track


- 1. Push the unit in the direction 1.
- 2. Lift it up in the direction 2.

Note: Refer to I/O Circuit Diagrams or check the side of the unit for wire color and role indications.



■ Mounting Amplifier Units in Group (Connector Type Models)

- 1. Mount the Fiber Amplifier units one at a time onto the DIN track and push them until they click.
- 2. Slide the Fiber Amplifier units in the direction 2.
- 3. Use End Plates (PFP-M: separately sold) at the both ends of the grouped Fiber Amplifier units to prevent them from separating due to vibration or other cause.
- 4. Tighten the screw on the End Plates using a driver.

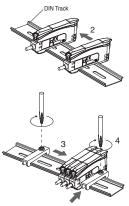

Tighten the screw while pressing the End Plate

- Under environments such as vibration, use an end plates even with a single Fiber Amplifier Unit
- The maximum numbers of connectable Amplifier Units are given in the following table.

		Maximum number of interconnected	Maximum number of mutual interference prevention	
E3X-HD series standard models (E3X-HD11/HD41/HD6/HD8)		16	10	
E3X-HD0	With E3X-ECT	30	10	
E3X-11D0	With E3X-CRT	16	10	

- The mutual interference prevention function cannot be used if the detection mode is set to super-high-speed mode (SHS).
- If Units are to be connected, the allowable ambient temperature will change with the number of Units that are connected. Check the Ratings and Specifications
- Always turn OFF the power before connecting or disconnecting Units.

Mounting Fiber Units

■ Use Fiber Cutter


Cut a thin fiber as follows.

For standard fibers, insert to the desired cutting position and cut.


1.	The fiber is shipped loosely tightened as shown in the figure at the right.	Thin Fiber Attachment (E39-F9) Loosely tighten.
2.	Adjust the fiber to the desired length and fully tighten.	
3.	Insert the Fiber Unit into E39-F4 and cut it.	Fiber Cutter E39-F4 Thin-diameter Fiber Unit Hole × 2 Standard Fiber Unit Hole (dia. 2.2 mm) × 3
4.	Finished state. (Correctly cut end)	About 0.5 mm Insertion direction Note: The insertion direction into the Fiber Amplifier Unit is shown in the above figure.

■ Mount Fiber Unit

- 1. Open the protective cover.
- 2. Raise the lock lever.
- 3. Insert the Fiber Unit in the fiber unit hole to the bottom.
- 4. Return the lock lever to the original position and fix the Fiber Unit.



• When mounting a coaxial reflective Fiber Unit, insert the single-core Fiber Unit to the upper hole (Emitter side) and the multi-core Fiber Unit to the lower hole (Receiver side). The cables for the Single-core Fiber Single Core (Units (Emitters) have identification marks. Refer to the dimensions diagrams for details.




• When removing the Fiber Unit, follow the above steps in reverse order. To maintain the characteristics of the Fiber Unit, make sure the lock is released before removing the Fiber Unit.

Dimensions

Fiber Amplifier Units


Pre-wired Amplifier Units

E3X-HD11 E3X-HD41

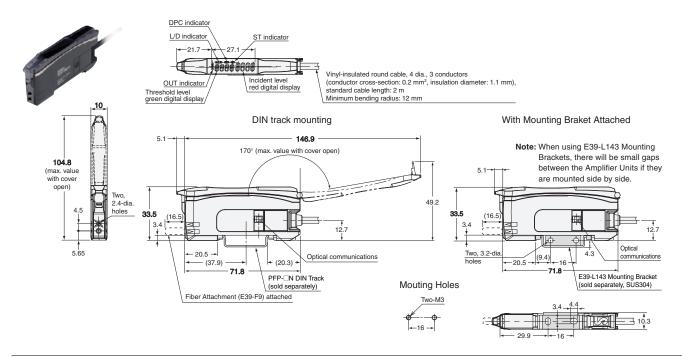


Amplifier Units with Wire-saving Connectors

E3X-HD6 E3X-HD8

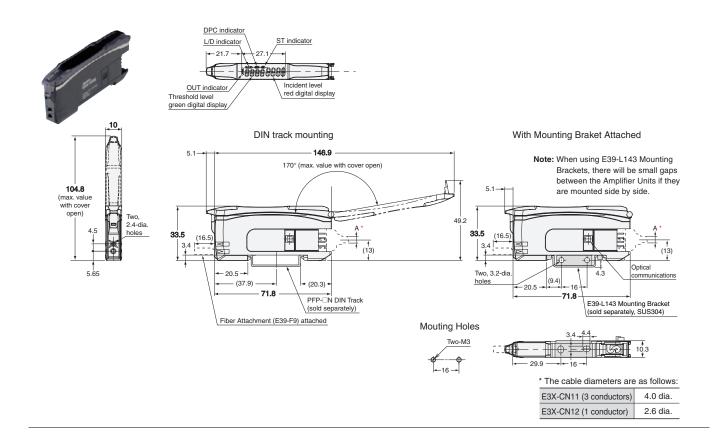


Amplifier Units with M8 Connectors

E3X-HD14 E3X-HD44

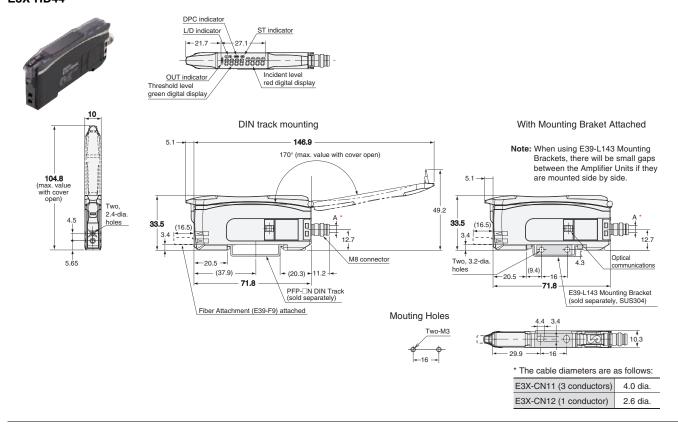

Amplifier Unit with Connector for Sensor Communications Unit

E3X-HD0

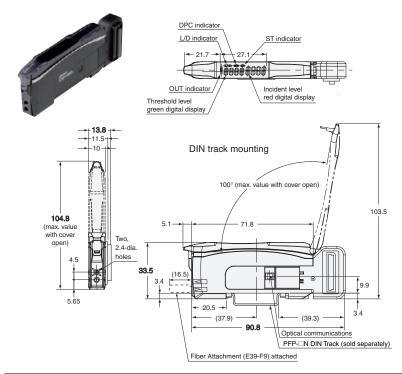

Refer to E32 Series for details on Fiber Units.

Terms and Conditions Agreement

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

<u>Errors and Omissions.</u> <u>Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is accurate.</u> assumed for clerical, typographical or proofreading errors or omissions.

2016.6

In the interest of product improvement, specifications are subject to change without notice.

