WAVLINK

see the world

QUICK START GUIDE

Thunderbolt™ 5 13 in 1 Triple Display Ultra Docking Station

www.wavlink.com/en_us/product/PuraDockM


Enter the Link to View the Full User Guide

WAVLINK (@WavlinkOfficial)
WAVLINK SUPPORT (@WavlinkTechSupport)


EN

PuraDockM

OVERVIEW

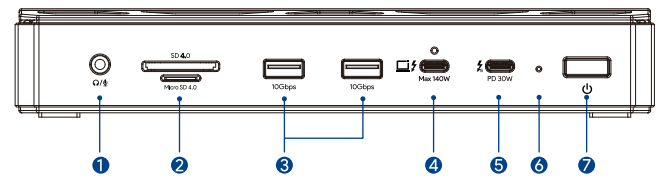

❶ Combo Audio Jack
❷ SD/Micro SD Card Reader (UHS- Ⅱ , SD 4.0)
❸ USB-A(10Gbps)
❹ TBT 5 UFP (Host, Max. 140W Charging, Video)
❺ TBT 5 DFP (80Gbps, Video, PD 30W)
❻ Status Indicator
❼ Power Switch

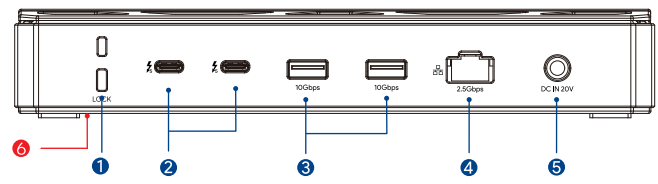


❶ Lock
❷ TBT 5 DFP (80Gbps, Video, Charging)
❸ USB-A (10Gbps)
❹ RJ45 Ethernet
❺ DC IN (20V)
❻ M.2 Slot (Open at the Bottom)

The M.2 SSD is only compatible with laptops featuring USB4/ Thunderbolt 4/5 connectivity.


HOW TO INSTALL/USE

To install SSD in the M.2 slot, follow steps 1-9; if not using the M.2 slot, refer to steps 6-9.


1. Use a screwdriver to unscrew the screws on the top lid of the enclosure.
2. Lift the top lid of the enclosure from the end and remove it.

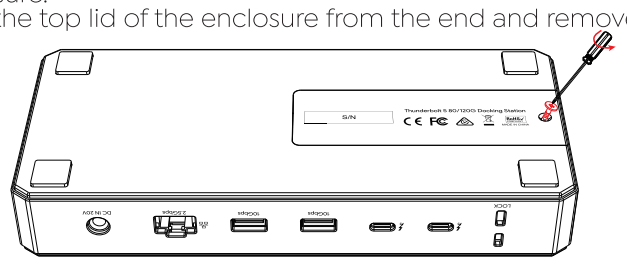


3. At a 45°angle, slide in your SSD until it is fully seated align with the edge. Align the screw with the mounting interface on the SSD and screw it into place using screwdriver.

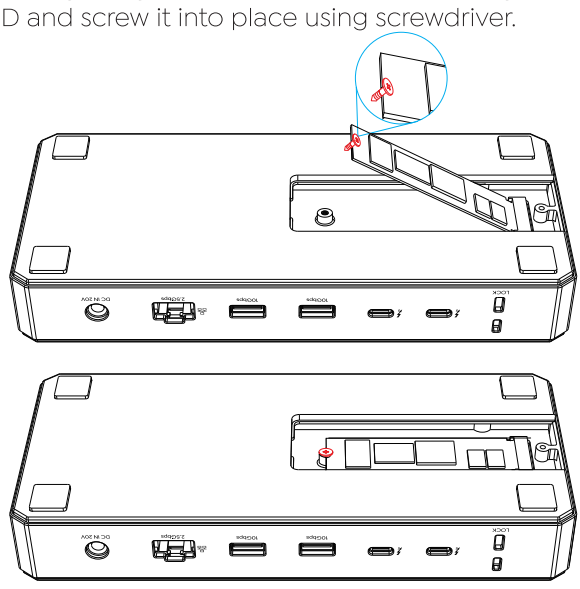


4. Peel off the protective films on both sides of thermal silicone pad and stick it to SSD.

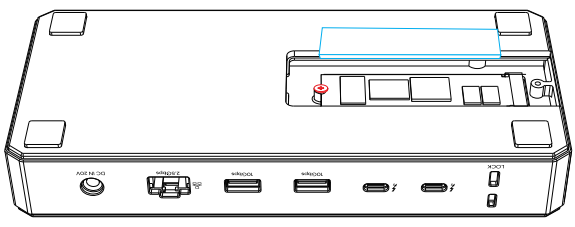


5. Reassemble the lid after aligning the contacts, then screw the screws on the top lid of the enclosure.

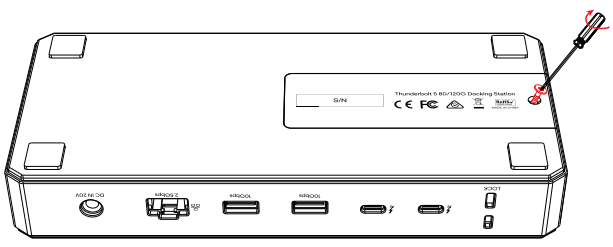

6. Power On
6.1 Plug one end of the equipped Power Adapter into the DC IN 20V port on the Docking Station.
6.2 Plug the other end of the Power Adapter to a Power Outlet.

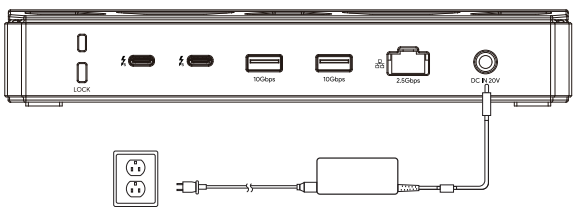


7. Connecting to the Host
7.1 Use the provided USB-C cable to connect the USB-C Host port on the Docking Station to the Thunderbolt port on your laptop.
7.2 The power switch on the docking station is used to turn on/off the dock. In the initial state, when there is no host connected, the power indicator light on the docking station will display red.
7.3 After successfully connecting the docking station to your laptop, the power indicator will turn green, indicating a successful connection to the Host.

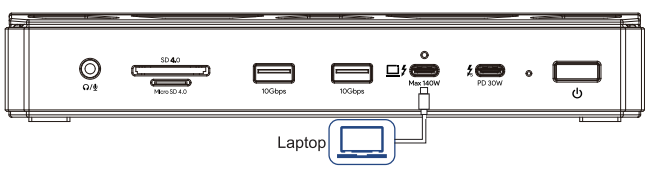

Make sure the cable is securely plugged in and ensure that the docking station is correctly connected to your laptop to ensure a successful connection and normal operation of the docking station.

8. Cable Holder
The cable holder is designed to tighten the USB-C cable. If you are worried that the USB-C cable might loosen, please follow the following steps to install the cable holder to the dock.
8.1 Insert the cable into the cable holder according to the arrow direction.
8.2 Align the bolt with the fixing hole, then please connect it to the USB-C Host port.
8.3 Tighten the screw on the cable holder to secure the cable, you can use a screwdriver as shown, tighten clockwise or loosen and remove counter-clockwise.

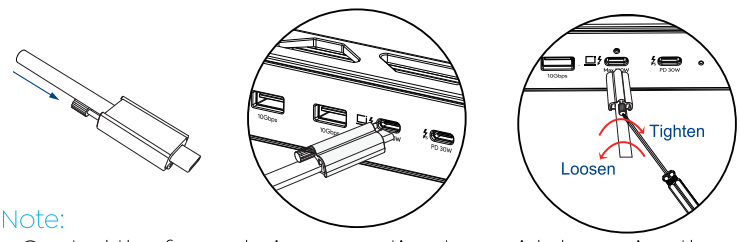

Note:
- Control the force during operation to avoid damaging the screw.
- The Cable Holder just is used for fixing the cable to prevent accidental touch and loosening. After assembling it, please do not pull it hard to avoid damage to the interface, please follow the above instructions if you need to disassemble it.

9. Connecting to the Monitor
Three Thunderbolt 5 downstream ports support data transfer, PD power supply, the maximum resolution and refresh rate specifications are as follows:

Single Display (DSC)	Dual Display (DSC)		Triple Display (DSC)		
7680*4320@60Hz	For Windows: 7680*4320@60Hz For Mac: 6144*3456@60Hz		3840*2160@144Hz		
1	1	2	1	2	3
①	①	②	①	②	③
②	①	③			
③	②	③			

Note:
- The host computer must support Thunderbolt 5 and DP2.1 to output three display. If it only supports one or two video outputs, the product will also output accordingly.
- The actual output capability may vary depending on your computer's system, software, hardware and others.
- M-series(M1/M2/M3 non-Pro/Max)support single external display via Thunderbolt 5.
- M-series(M4/Pro/Max/Ultra) support dual external display via Thunderbolt 5.

PARTITION AND FORMAT

To use the product's M.2 slot, please create a new partition as the system-specific instruction, the instruction is for reference only and may vary depending on the computer system version. Scan the QR code or visit the link on the manual's first page for detailed formatting and partitioning steps.

FAQ

Q1. Why Thunderbolt™3 PCs can not recognize the Thunderbolt ™5 docking station?
A1. Thunderbolt™5 is an innovation which was not available at the time Thunderbolt™3 PCs were developed. Thunderbolt™ 3 PCs launched in previous years do not support this new technology.

Q2. Why does this Enclosure have different performance when used on different computers?
A2. The actual speed depends on your computer's performance including hardware interfaces, system, drivers, etc.

Q3. What should I do if the dock cannot deliver power to my host laptop?
A3. Please make sure that your laptop supports USB-C power delivery.

Q4. Why can't the video downstream ports of this docking station reach 8K resolution when the Thunderbolt™5 docking station works with my computer?
A4. This Thunderbolt™5 docking station can reach up to 8K resolution, and the resolution and refresh rate of the docking station's video downstream ports depends on the graphics card capability of your computer.

Q5. Why doesn't the 2.5Gbps Ethernet port achieve its full 2500Mbps speed?
A5. Due to the bandwidth limitation of Intel Thunderbolt, the maximum speed is limited about 1300-2000Mbps.

Thank you for purchasing WAVLINK product!

Need help?

We're here for you!

www.wavlink.com

Online support: wavlink.com
Available Mon-Fri 8:30 am-5:30pm (UTC+8)

support@wavlink.com
Available Mon-Fri 8:30 am-5:30pm (UTC+8)

+1 8889730883
Mon-Fri 9:00 am - 6:00 pm (UTC-5)