NOTE

1. The MGSD Aerial LED kit sold on Amazon includes only **15 LEDs**.


2. The tutorial below shows the full 25-LED installation.

3. The LEDs highlighted in red on pages 1 and 3 are not included. All LEDs on page 4 (backpack) and page 5 (weapons) are also excluded.


4. These 10 LEDs are omitted because the rear lights are not visible and the weapon lighting effects are poor.

5. Model kit not included.

HEAD UNIT

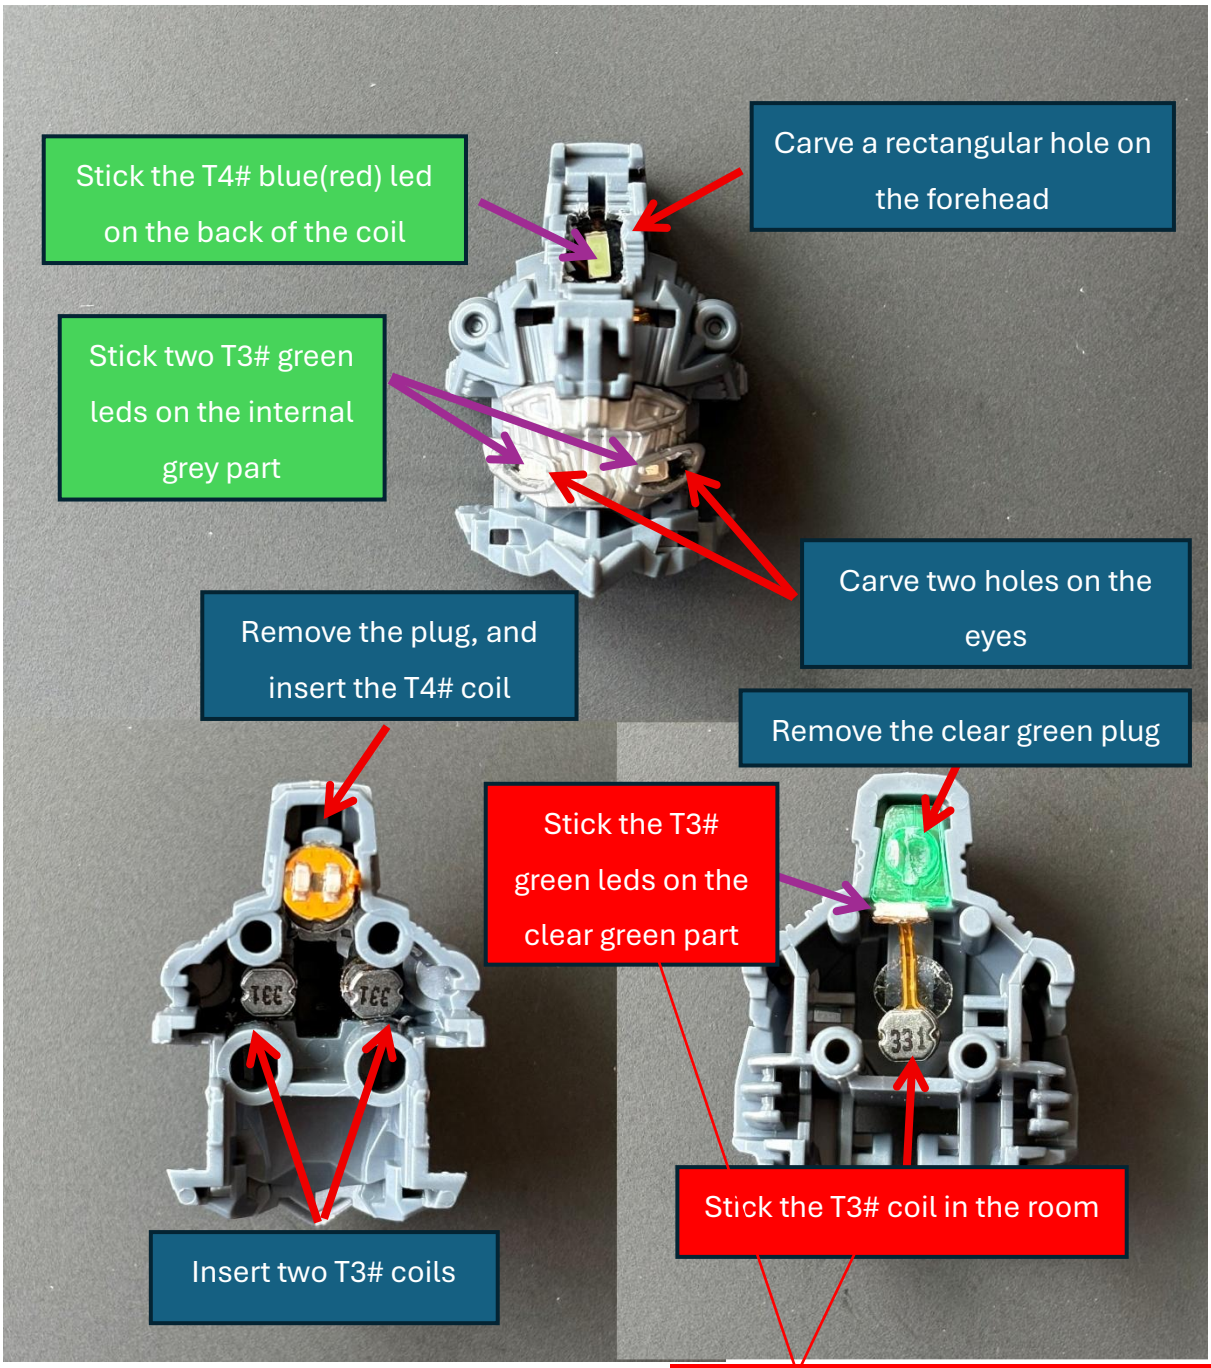


BODY UNIT

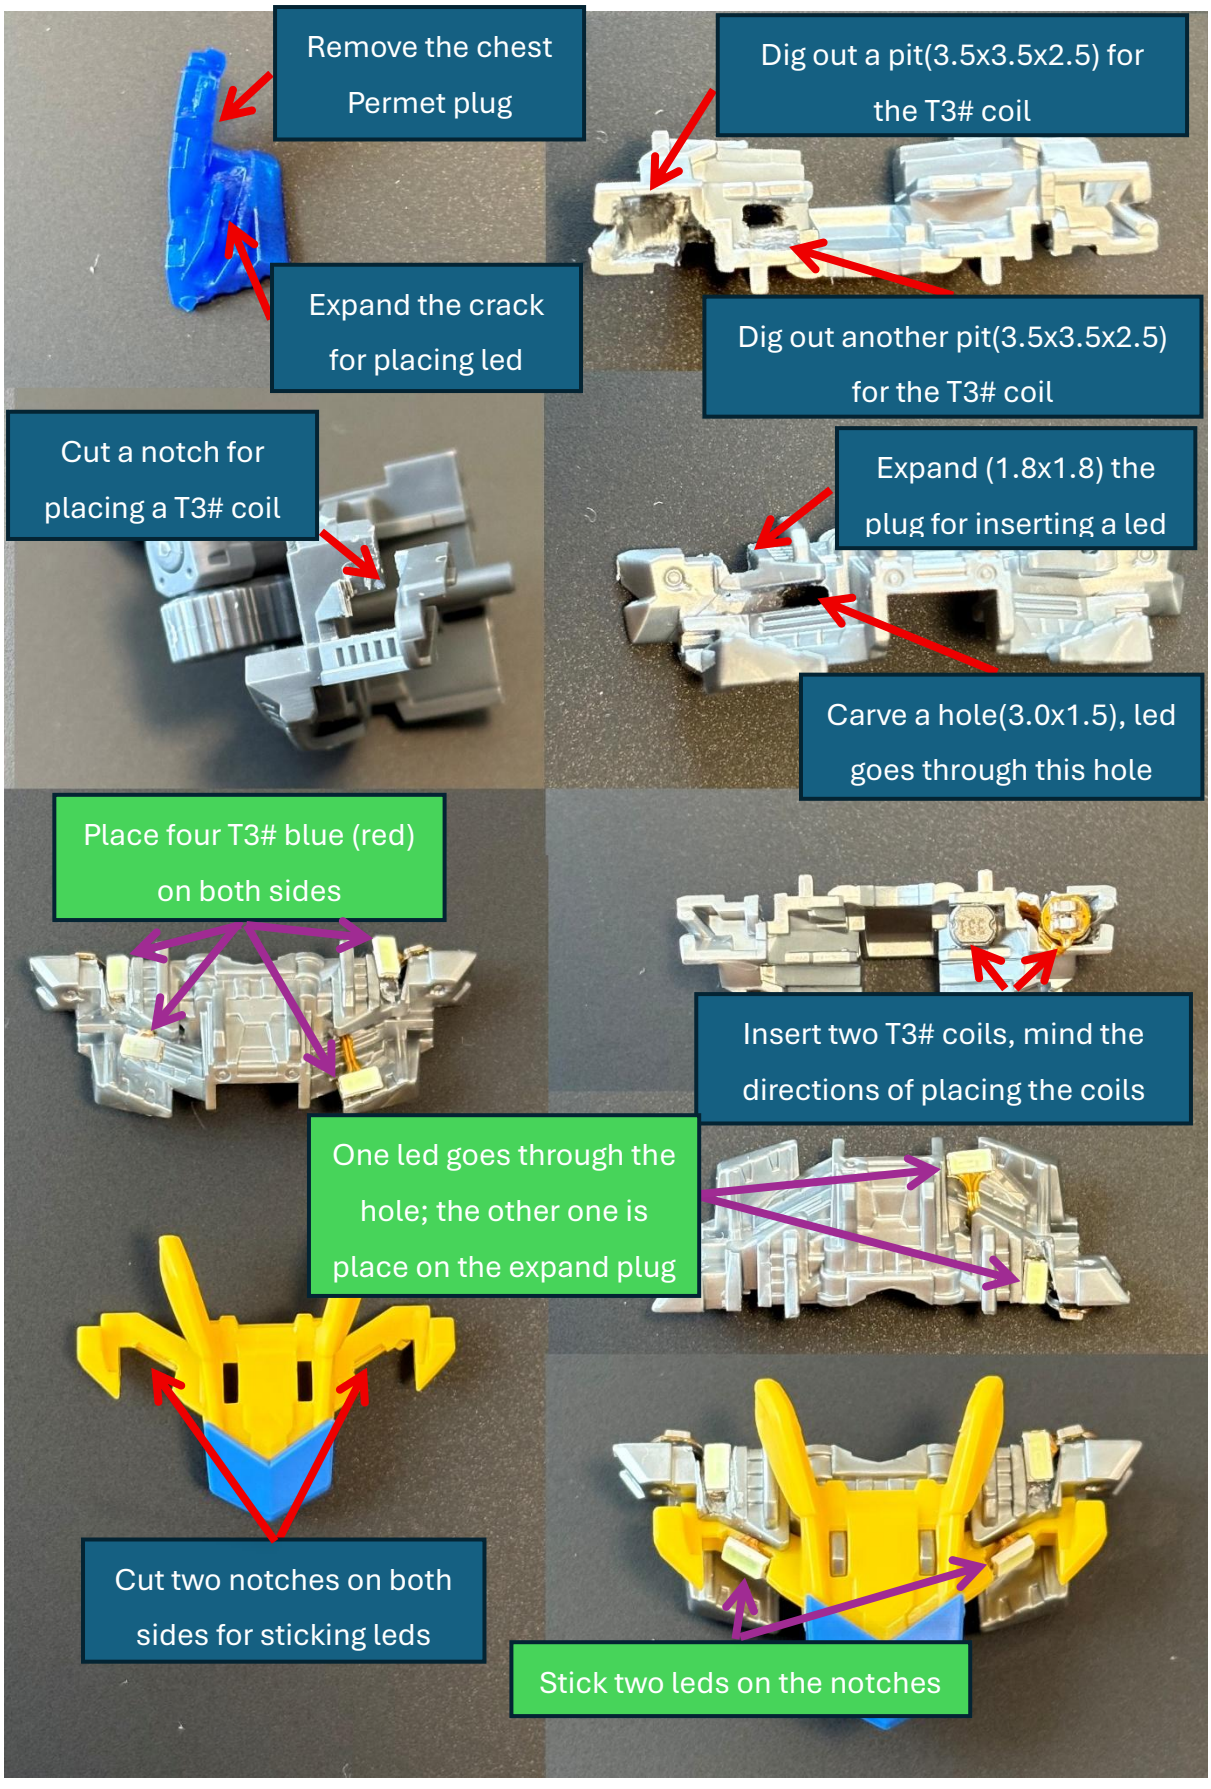
Remove the chest Permet plug
Dig out a pit(3.5x3.5x2.5) for the T3# coil
Expand the crack for placing led
Dig out another pit(3.5x3.5x2.5) for the T3# coil
Cut a notch for placing a T3# coil
Expand (1.8x1.8) the plug for inserting a led
Carve a hole(3.0x1.5), led goes through this hole
Place four T3# blue (red) on both sides
Insert two T3# coils, mind the directions of placing the coils
One led goes through the hole; the other one is place on the expand plug
Cut two notches on both sides for sticking leds
Stick two leds on the notches

LEG UNIT

Carve a hole on the inner frame of the thigh

Stick a T3# coil on the knee inner frame

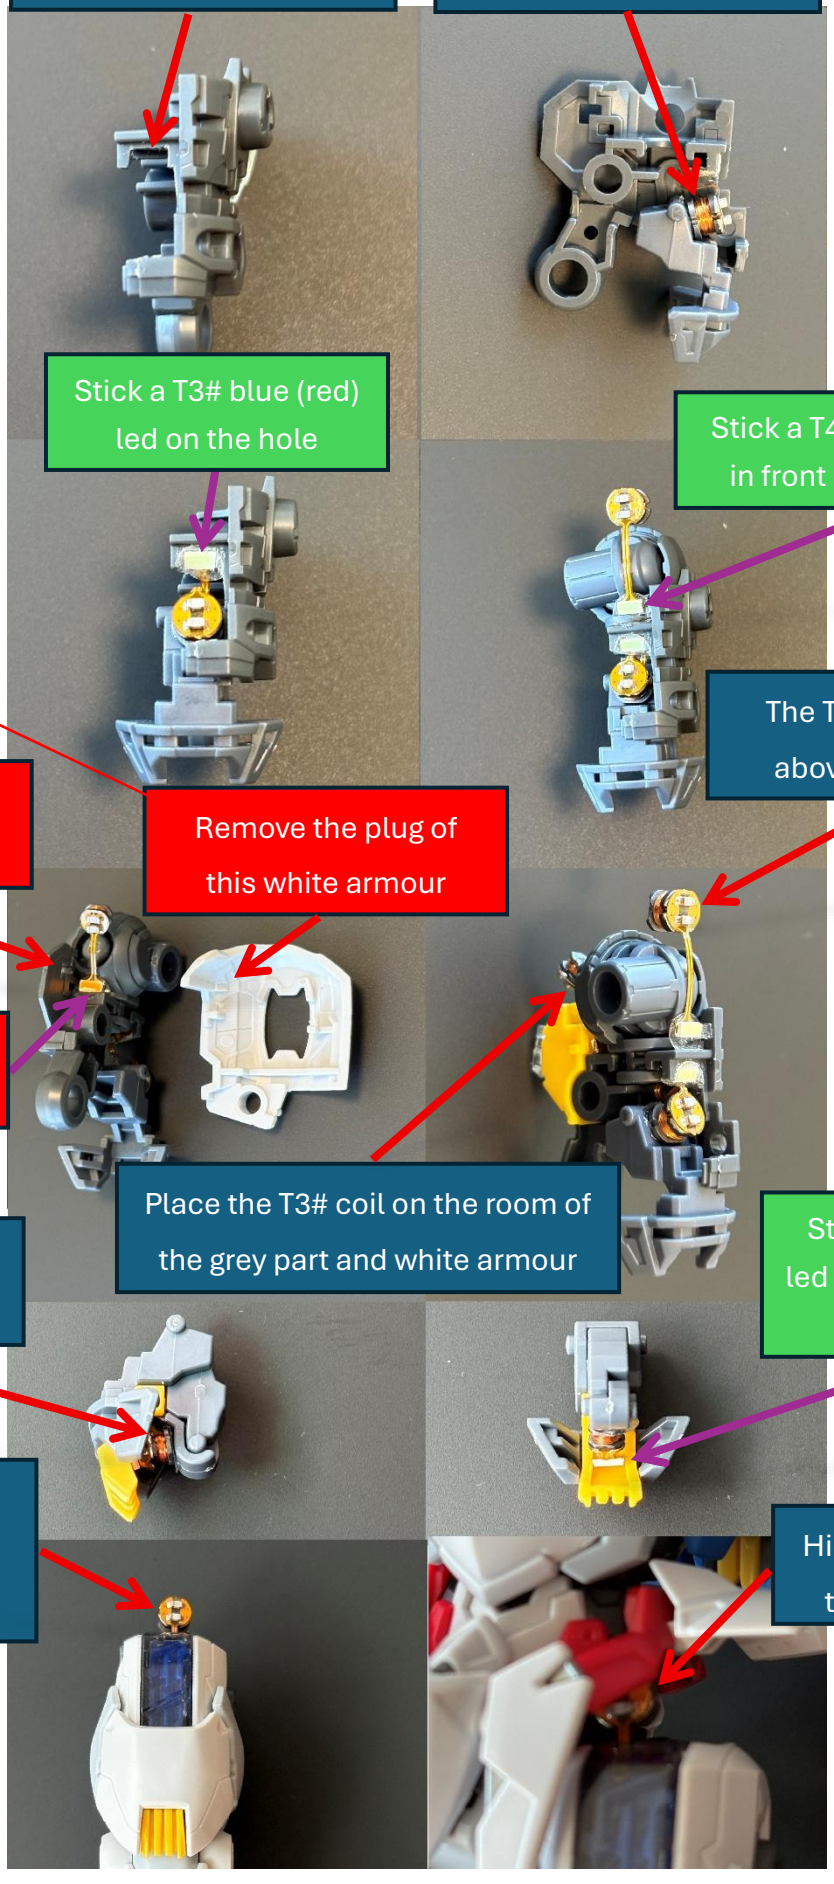

Stick a T3# blue (red) led on the hole

Stick a T4# blue (red) led in front of the hip joint

Please skip this step

Rernove the grey support on this part

Remove the plug of this white armour

The T4# coil is hung above the hip joint

Stick a T3# gold led on the back of the hip joint

Place the T3# coil on the room of the grey part and white armour

Stick a T3# coil on the grey part of the knee


Stuck the T3# gold led on the back of the yellow part

The T4# coil is hung above the hip joint outside the armour

Hide the coil inside the skirt armour


Please skip this entire page

BACKPACK UNIT

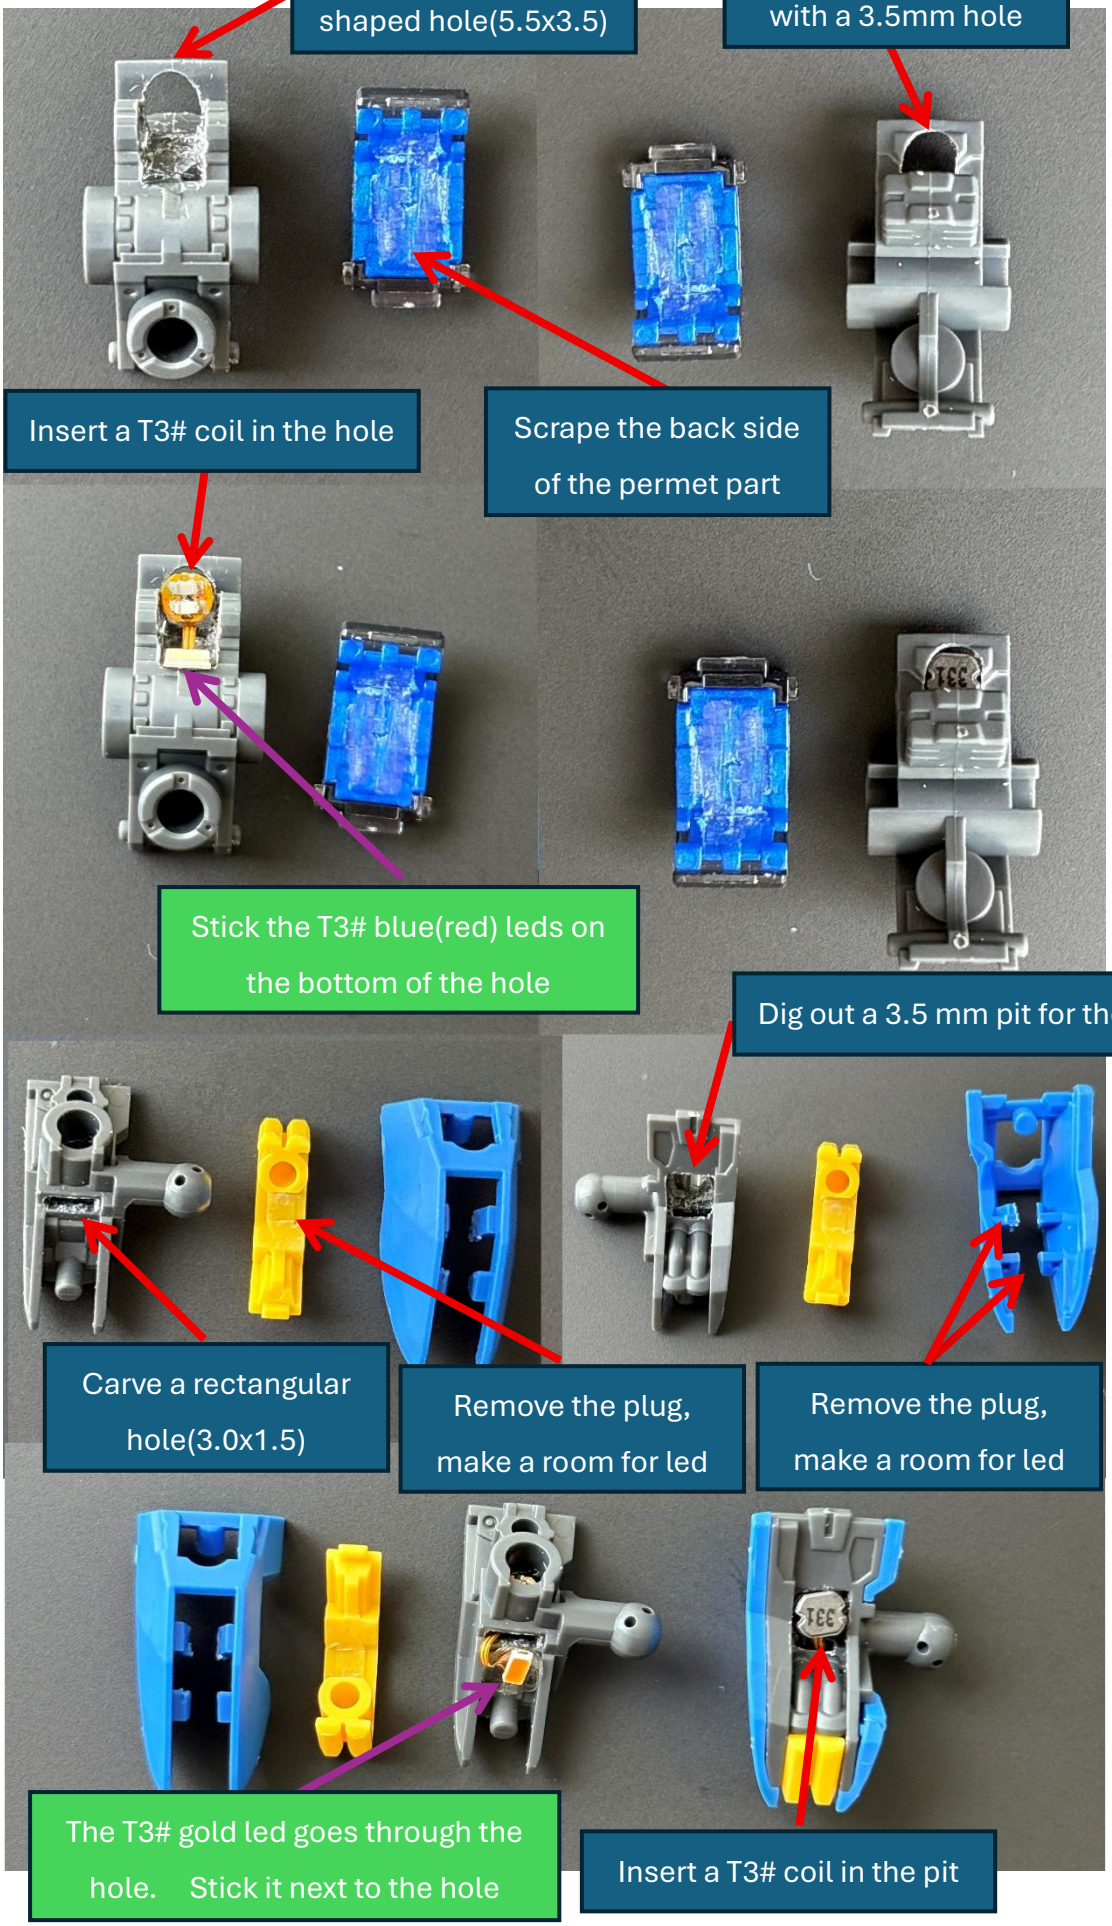

Please skip this entire page

SHOULDER UNIT

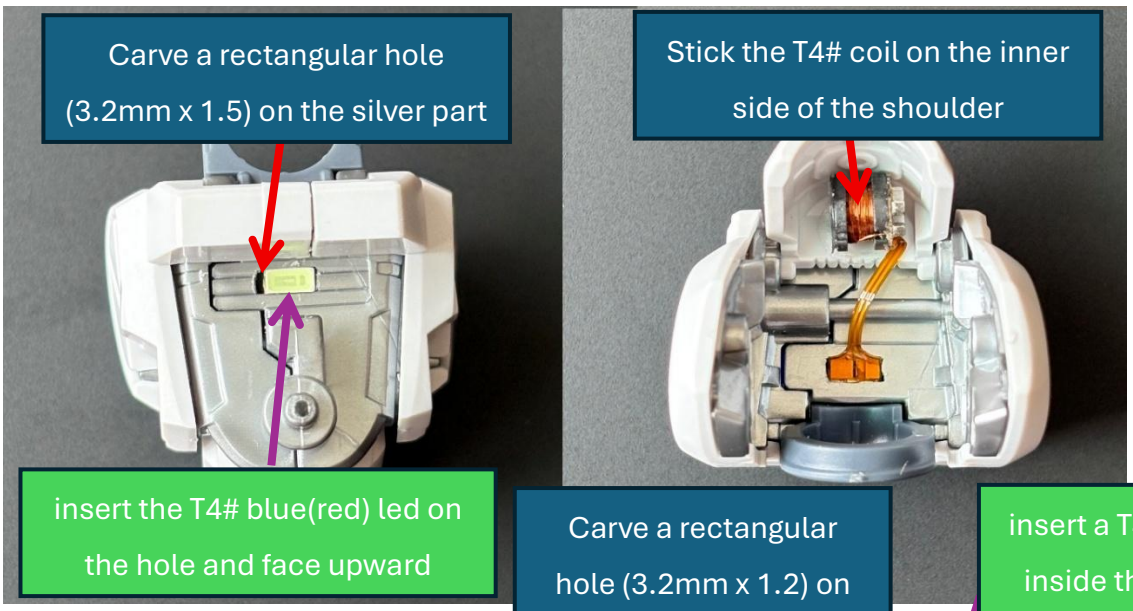

WEAPON UNITS

