
SA16C-02

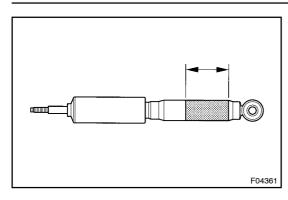

DISPOSAL

w/o AHC System:

DISCARD SHOCK ABSORBER

Before discarding the shock absorber, drill a hole of 2 — 3 m m (0.079 — 0.118 in.) in diameter at the location shown in the illustration to discharge the gas inside.

CAUTION:

- When drilling, chips may fly out, work carefully.
- The gas is colorless, odorless and non -poisonous