
DI1AR\_1

DTC B279 1/99 Key Unlock Warning SW OFF Malfunction

## **CIRCUIT DESCRIPTION**

DTC No.	DTC Detecting Condition	Trouble Area
B2791/99	Open circuit in key unlock warning switch circuit.  Key unlock warning switch adheres to OFF position.	Key unlock warning switch     Wire harness

## **WIRING DIAGRAM**

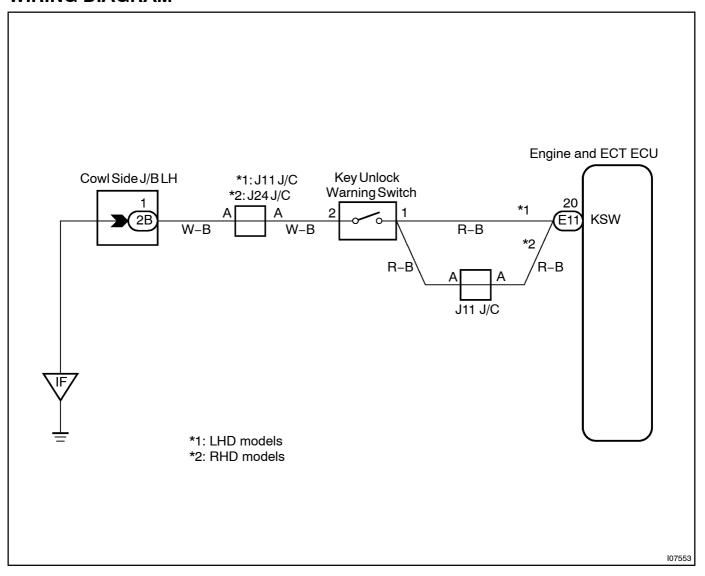

## **INSPECTION PROCEDURE**

1 Check key unlock warning switch (See page BE-20).

NG

Replace key unlock warning switch.

OK

2 Check harness and connector between key unlock warning switch and Engine and ECT ECU.

NG

Repair or replace the harness or connector.

OK

Replace Engine and ECT ECU.