LEKN(C1) Assembly Manual V2.0

3. WorkAreaAssembly

Materials			
Electronic Parts	Frame Parts	Hardware Parts	Fasteners Parts
	Workbench*4	2020 Angle-Connector	M5-T-Nut *32
	(2080V-520mm)	*16	
			M5-8mm Screw*32




[Step1] Install 2 T-nuts at each end of the workbench , fix 2020 Angle-Connector to workbench with M5-8mm screw. (2 2020 Angle-Connectors at each end)




LEKN(C1) Assembly Manual V2.0

[Step2] Install 8 T-nuts in Y-axis baseboard.

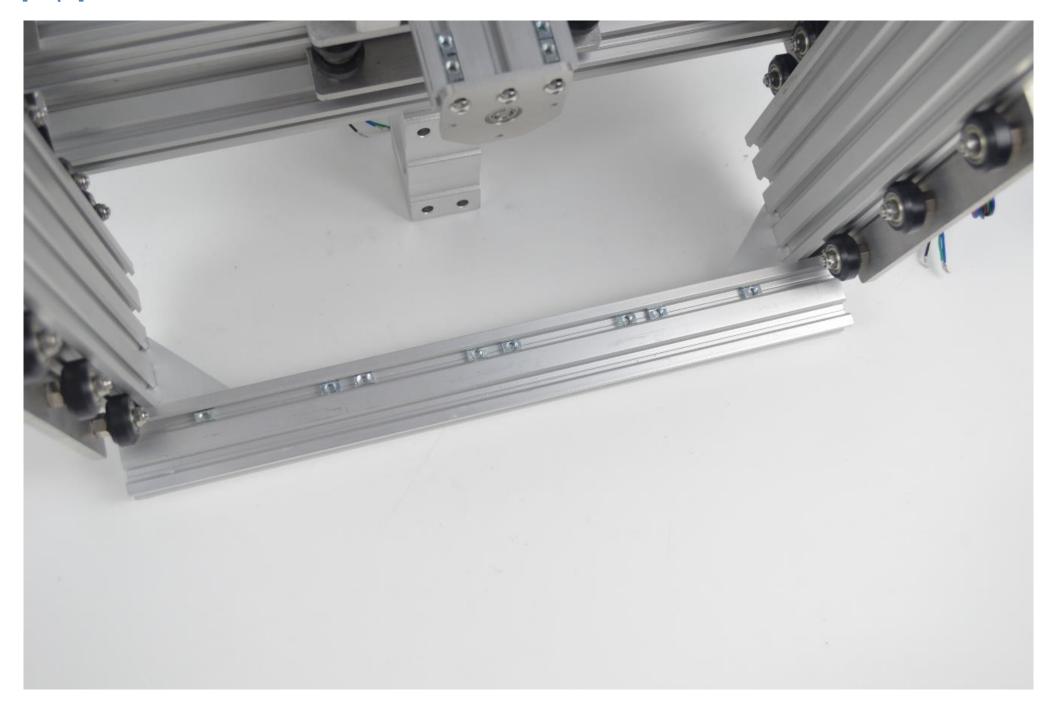

[Step3] Install the workbench to the Y-axis baseboard with M5-8mm screws.

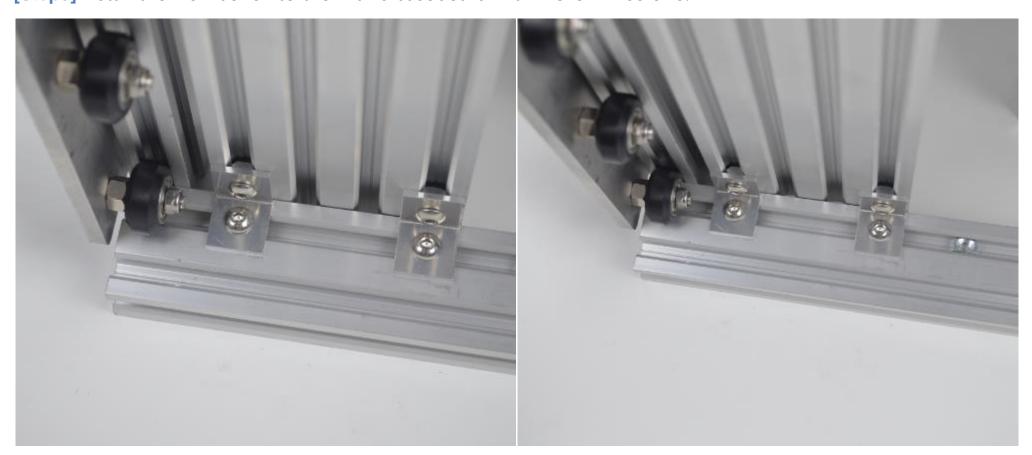

LEKN(C1) Assembly Manual V2.0

Install other workbench in the same way.



The installed effect is as shown in the figure .(some clearance on both sides of the panel)

