LEKN(C1) Assembly Manual V2.0

2_1. Y-AxisWheelAssembly

Materials			
Electronic Parts	Frame Parts	Hardware Parts	Fasteners Parts
	y-carriage aluminum *2	Pom-Wheel *14	M5-30mm-Screw*14
		6mm	M5 Washer*14
		Aluminum-Spacer *8	
		Eccentric-Column *6	M5 Nyloc-Nut *14




[Step1] Install M5-30mm screw into y-carriage aluminum, install 6mm aluminum-spacer and M5 washer in 4 screws at the upper end, install 3 Eccentric Columns and M5 washer in 3 screws at the lower end.



LEKN(C1) Assembly Manual V2.0

[Step2] Install one Pom-Wheel into screw and fixed with M5 Nyloc-Nut.

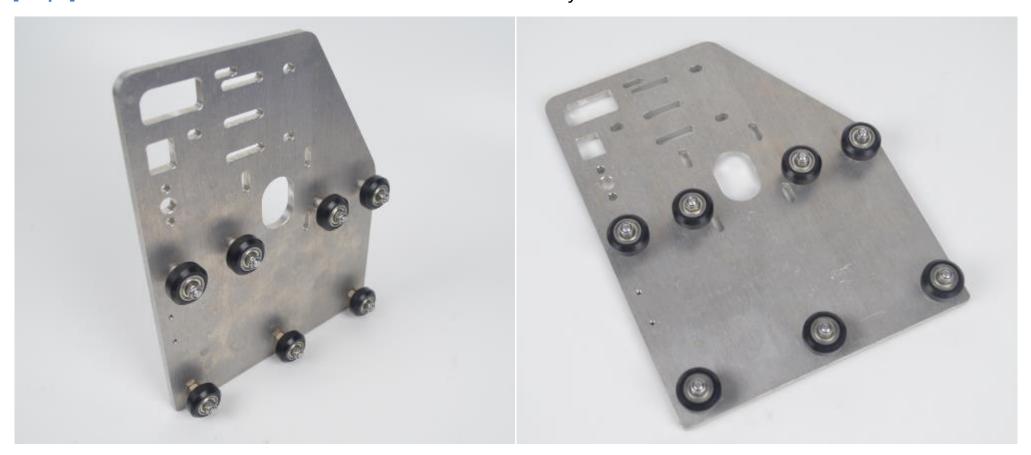

The assembled effect of y-carriage aluminum is as shown in the figure.

