






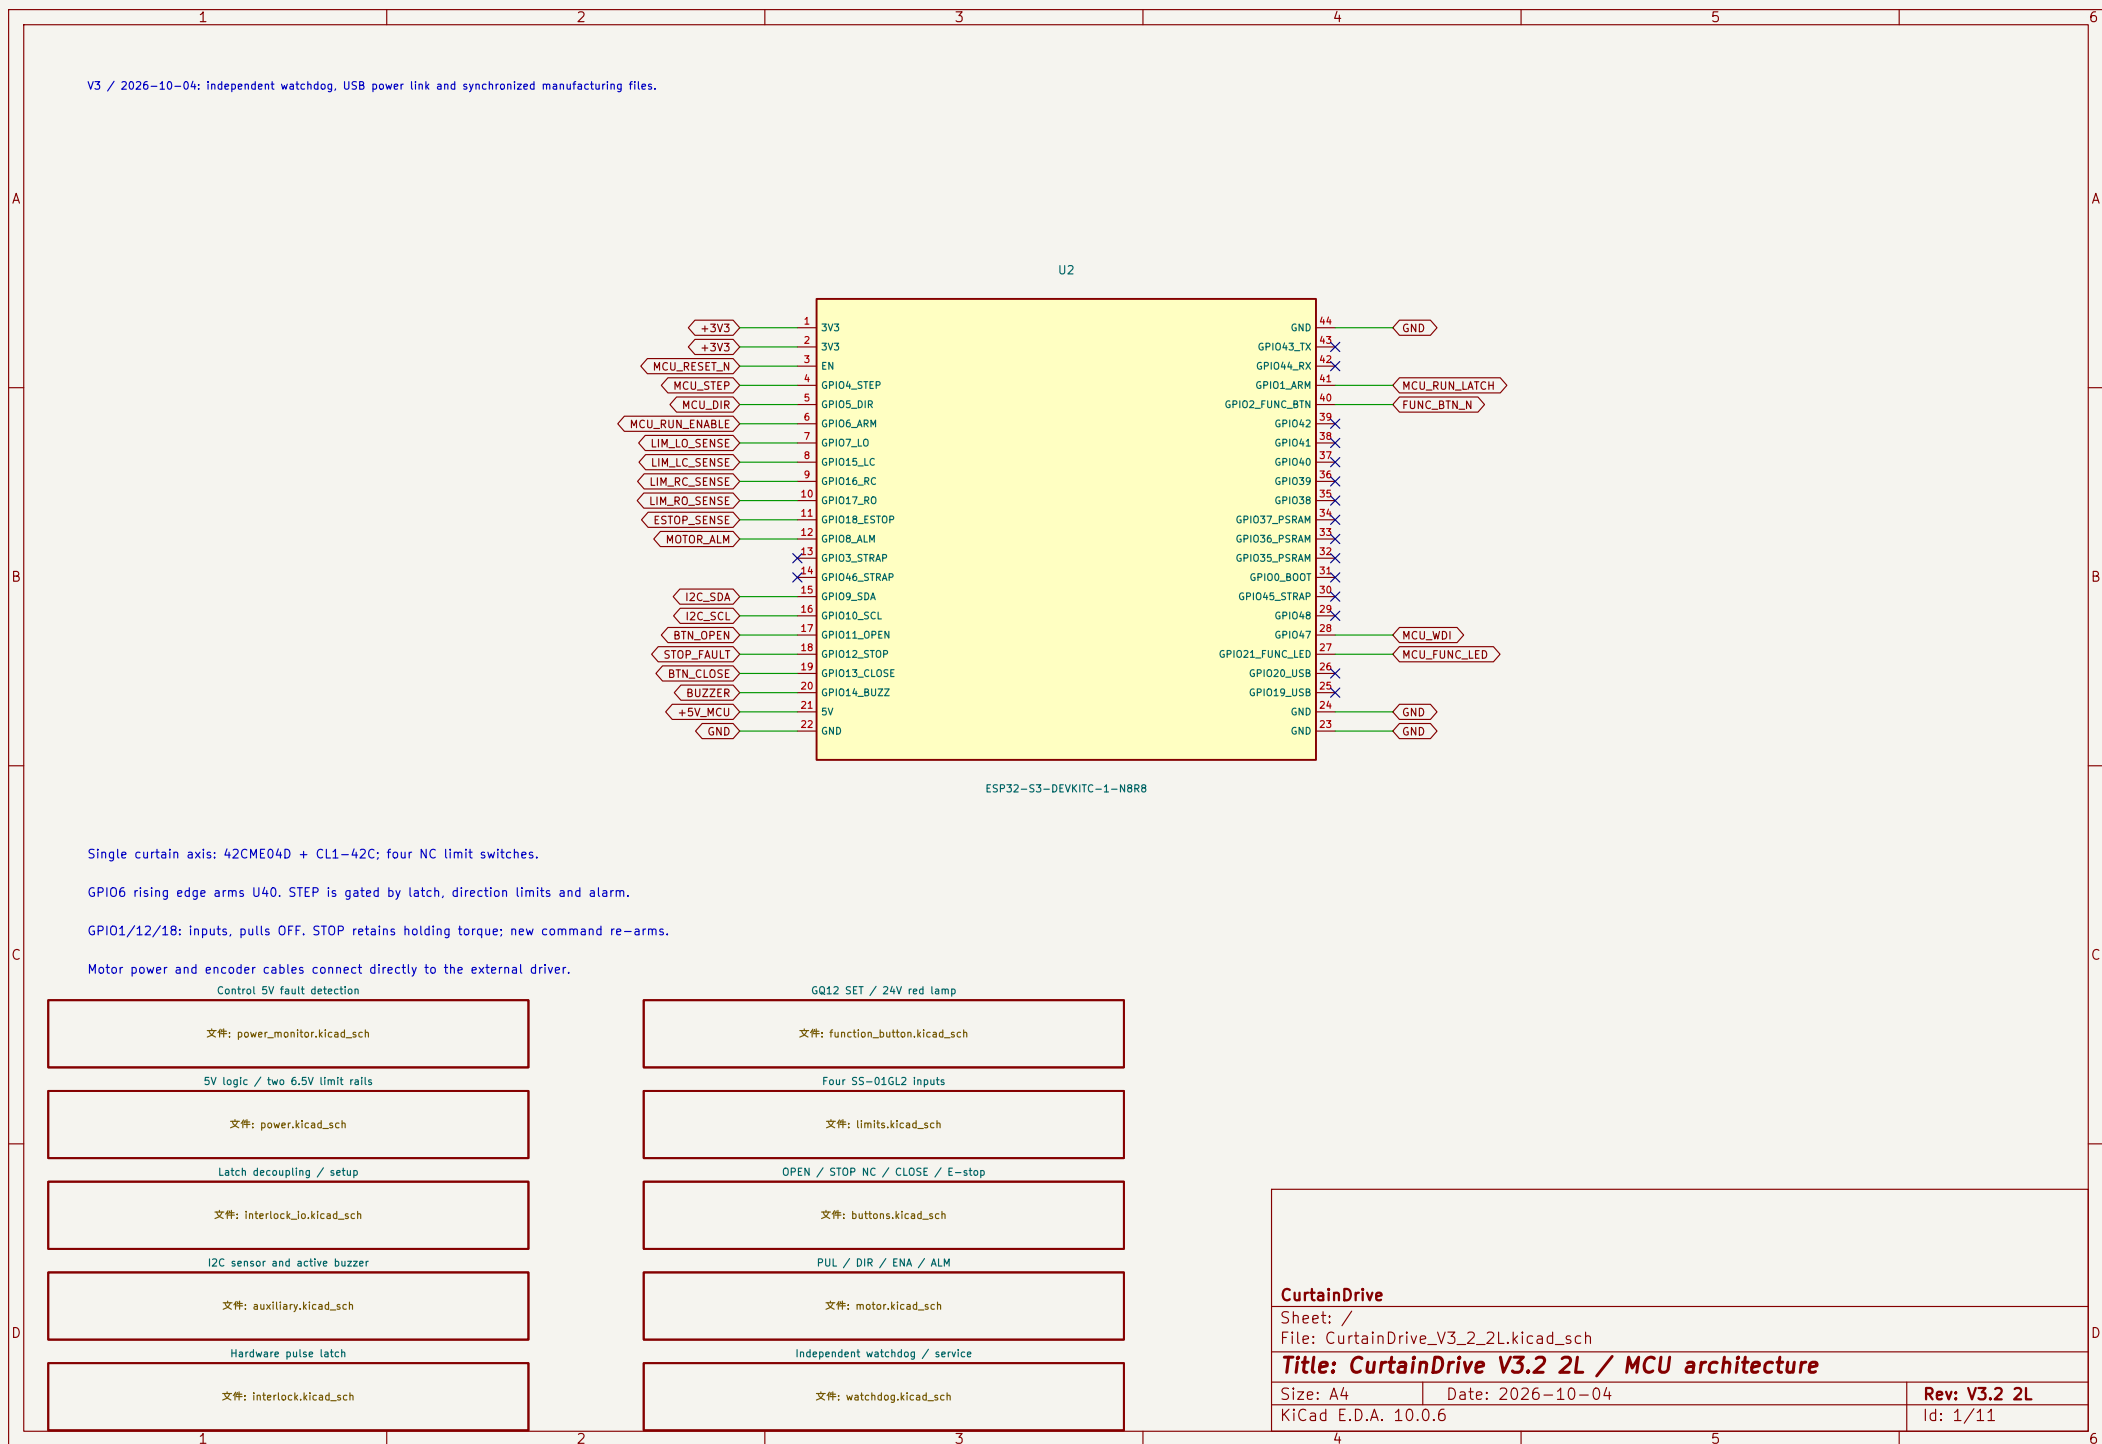


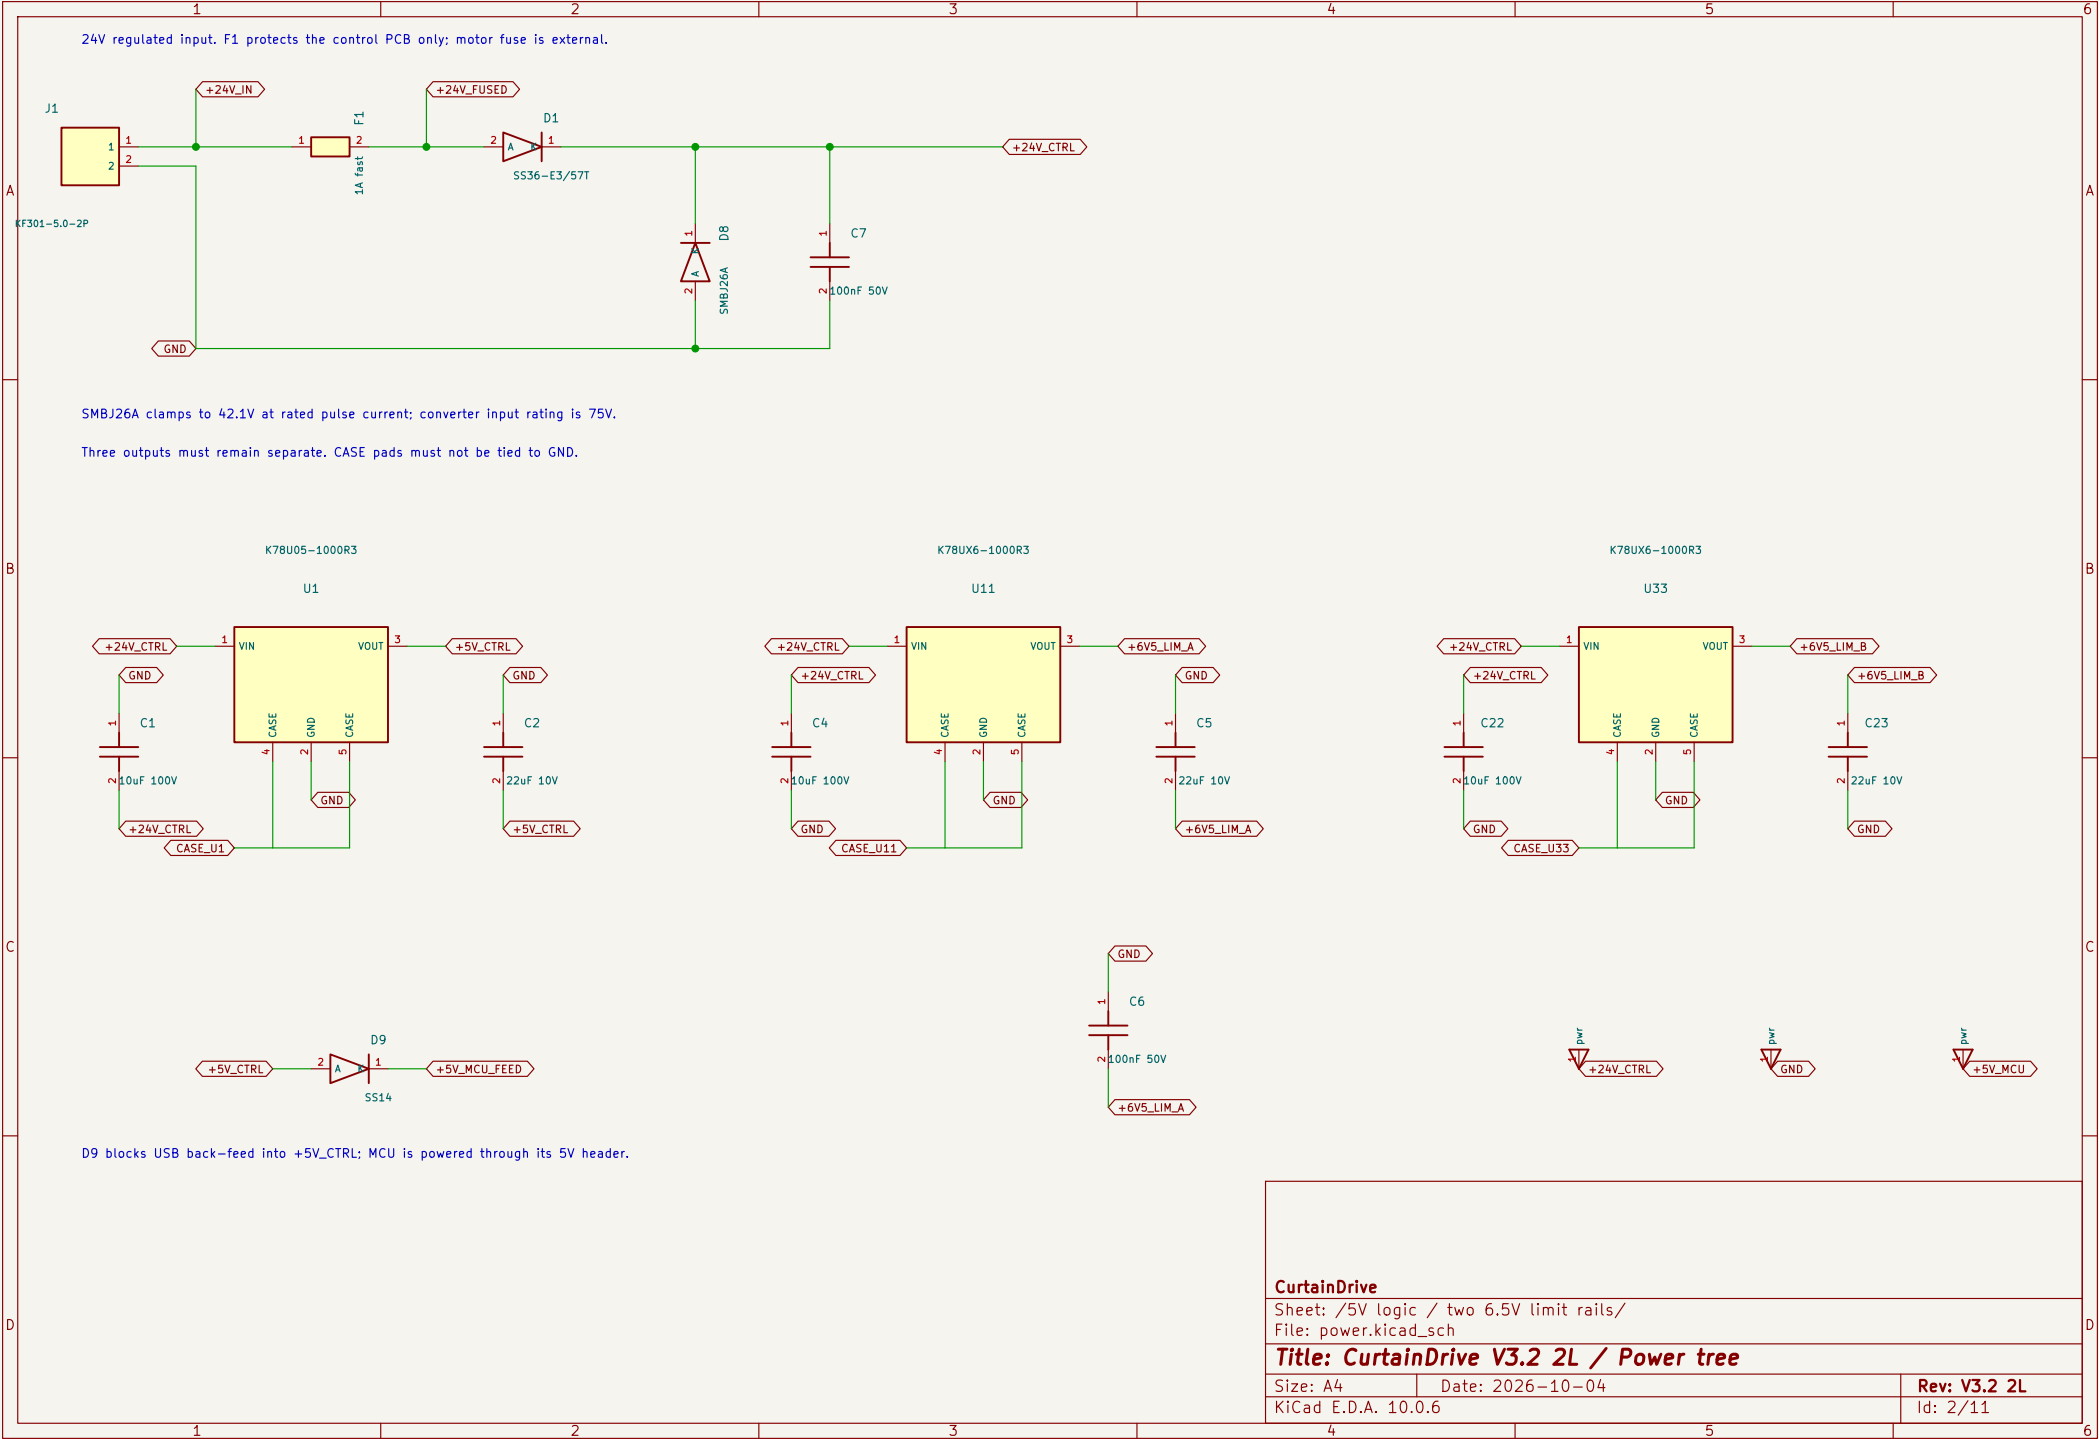


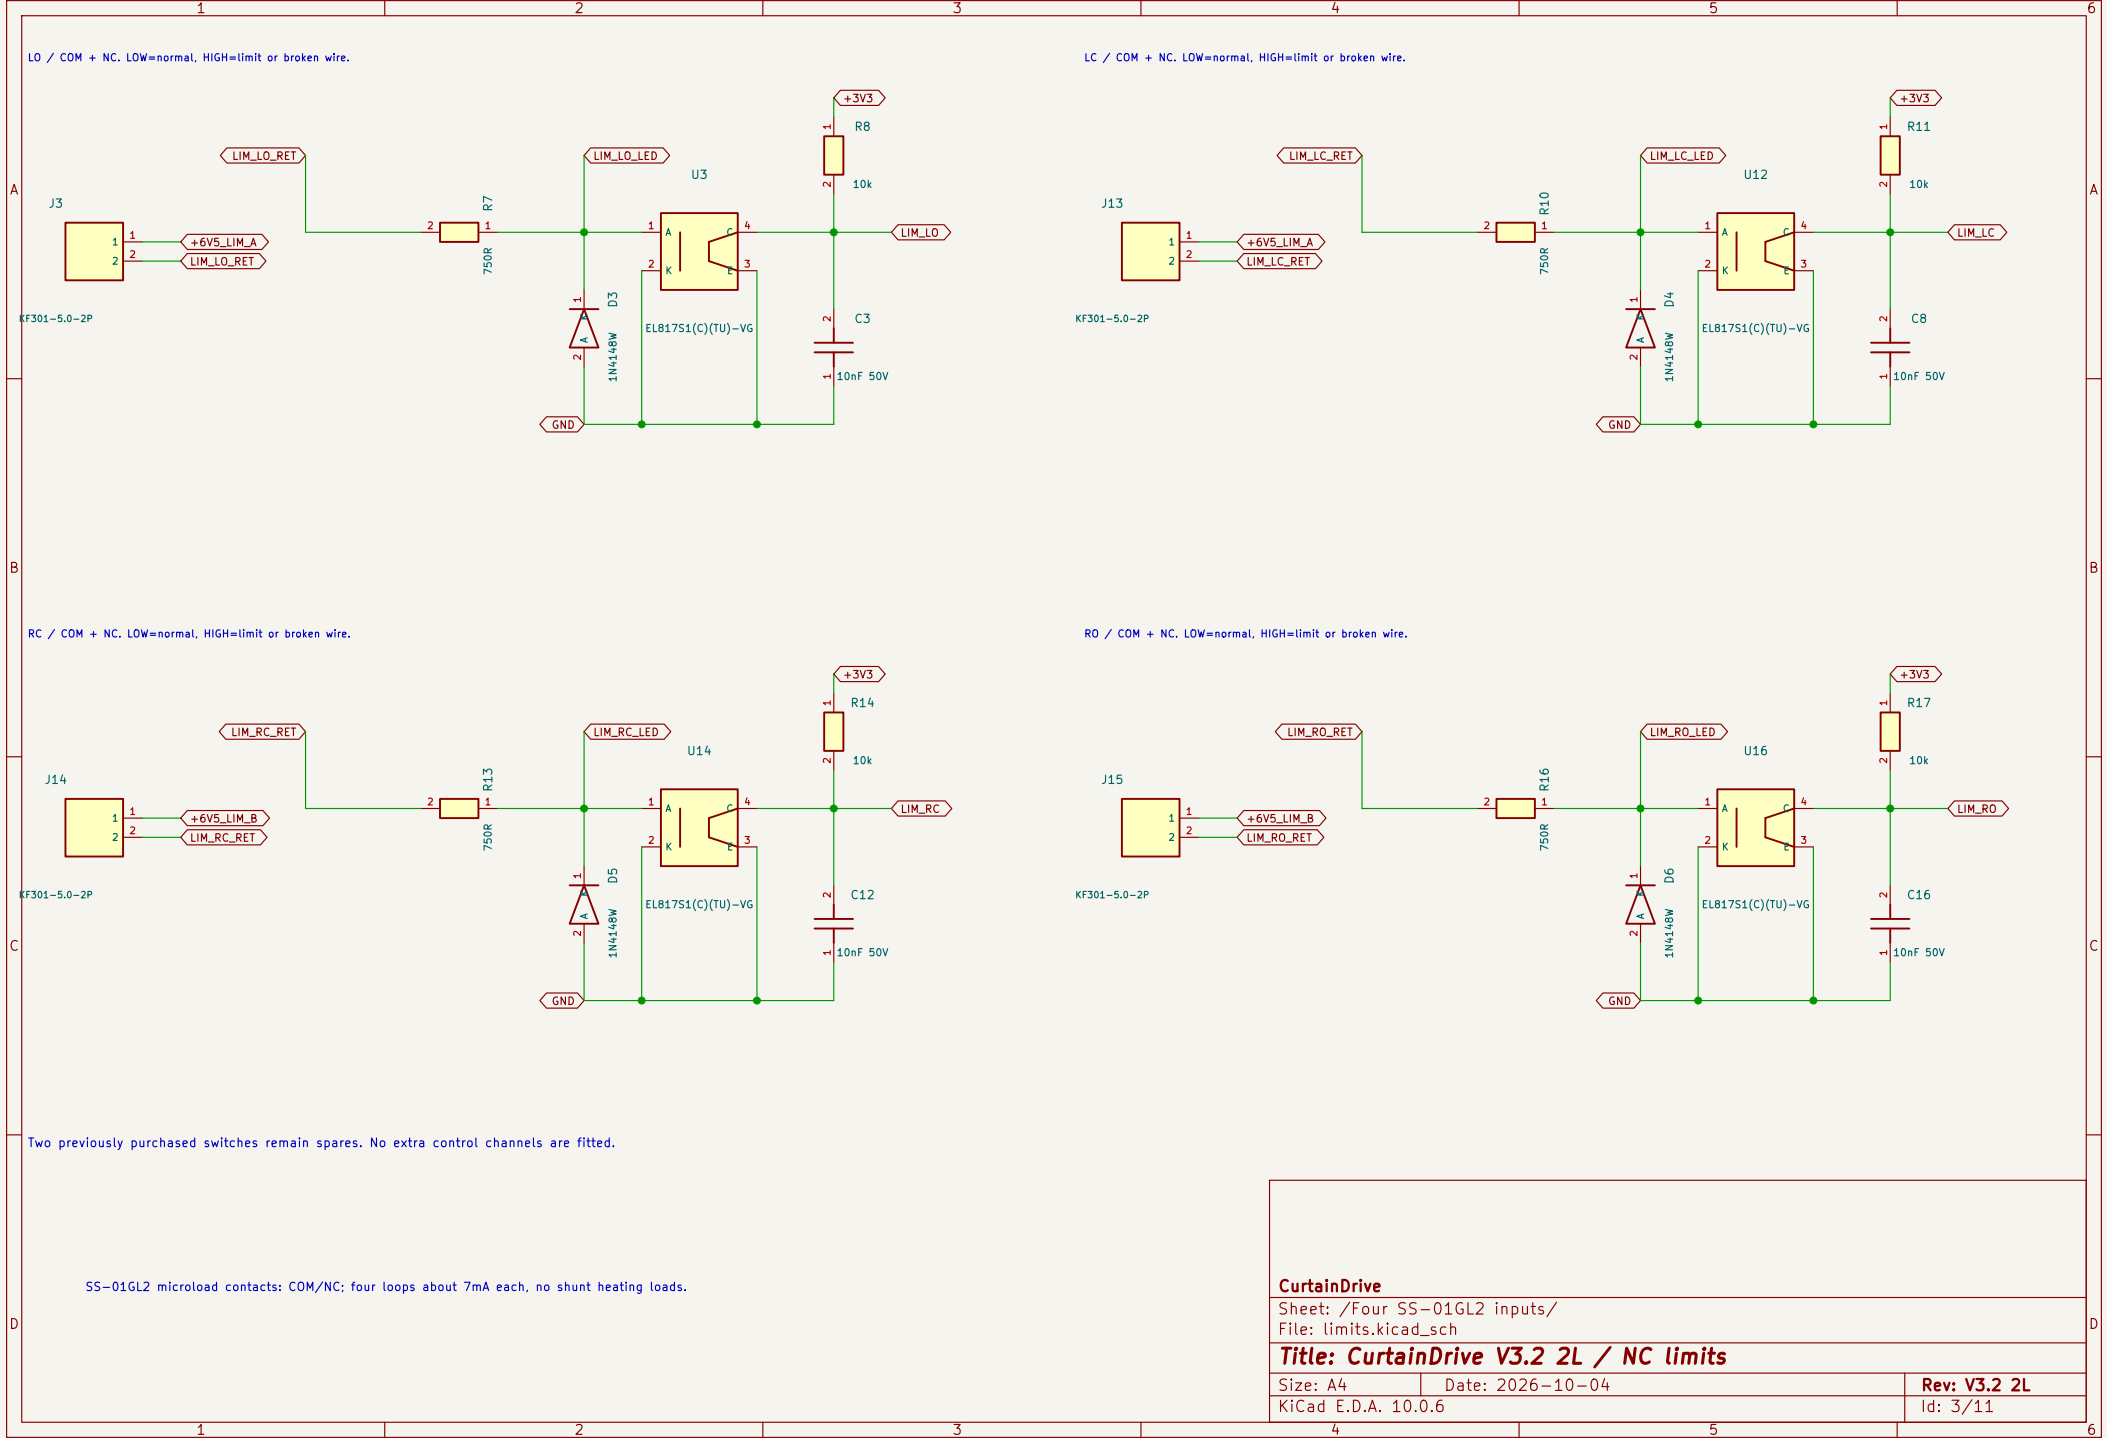

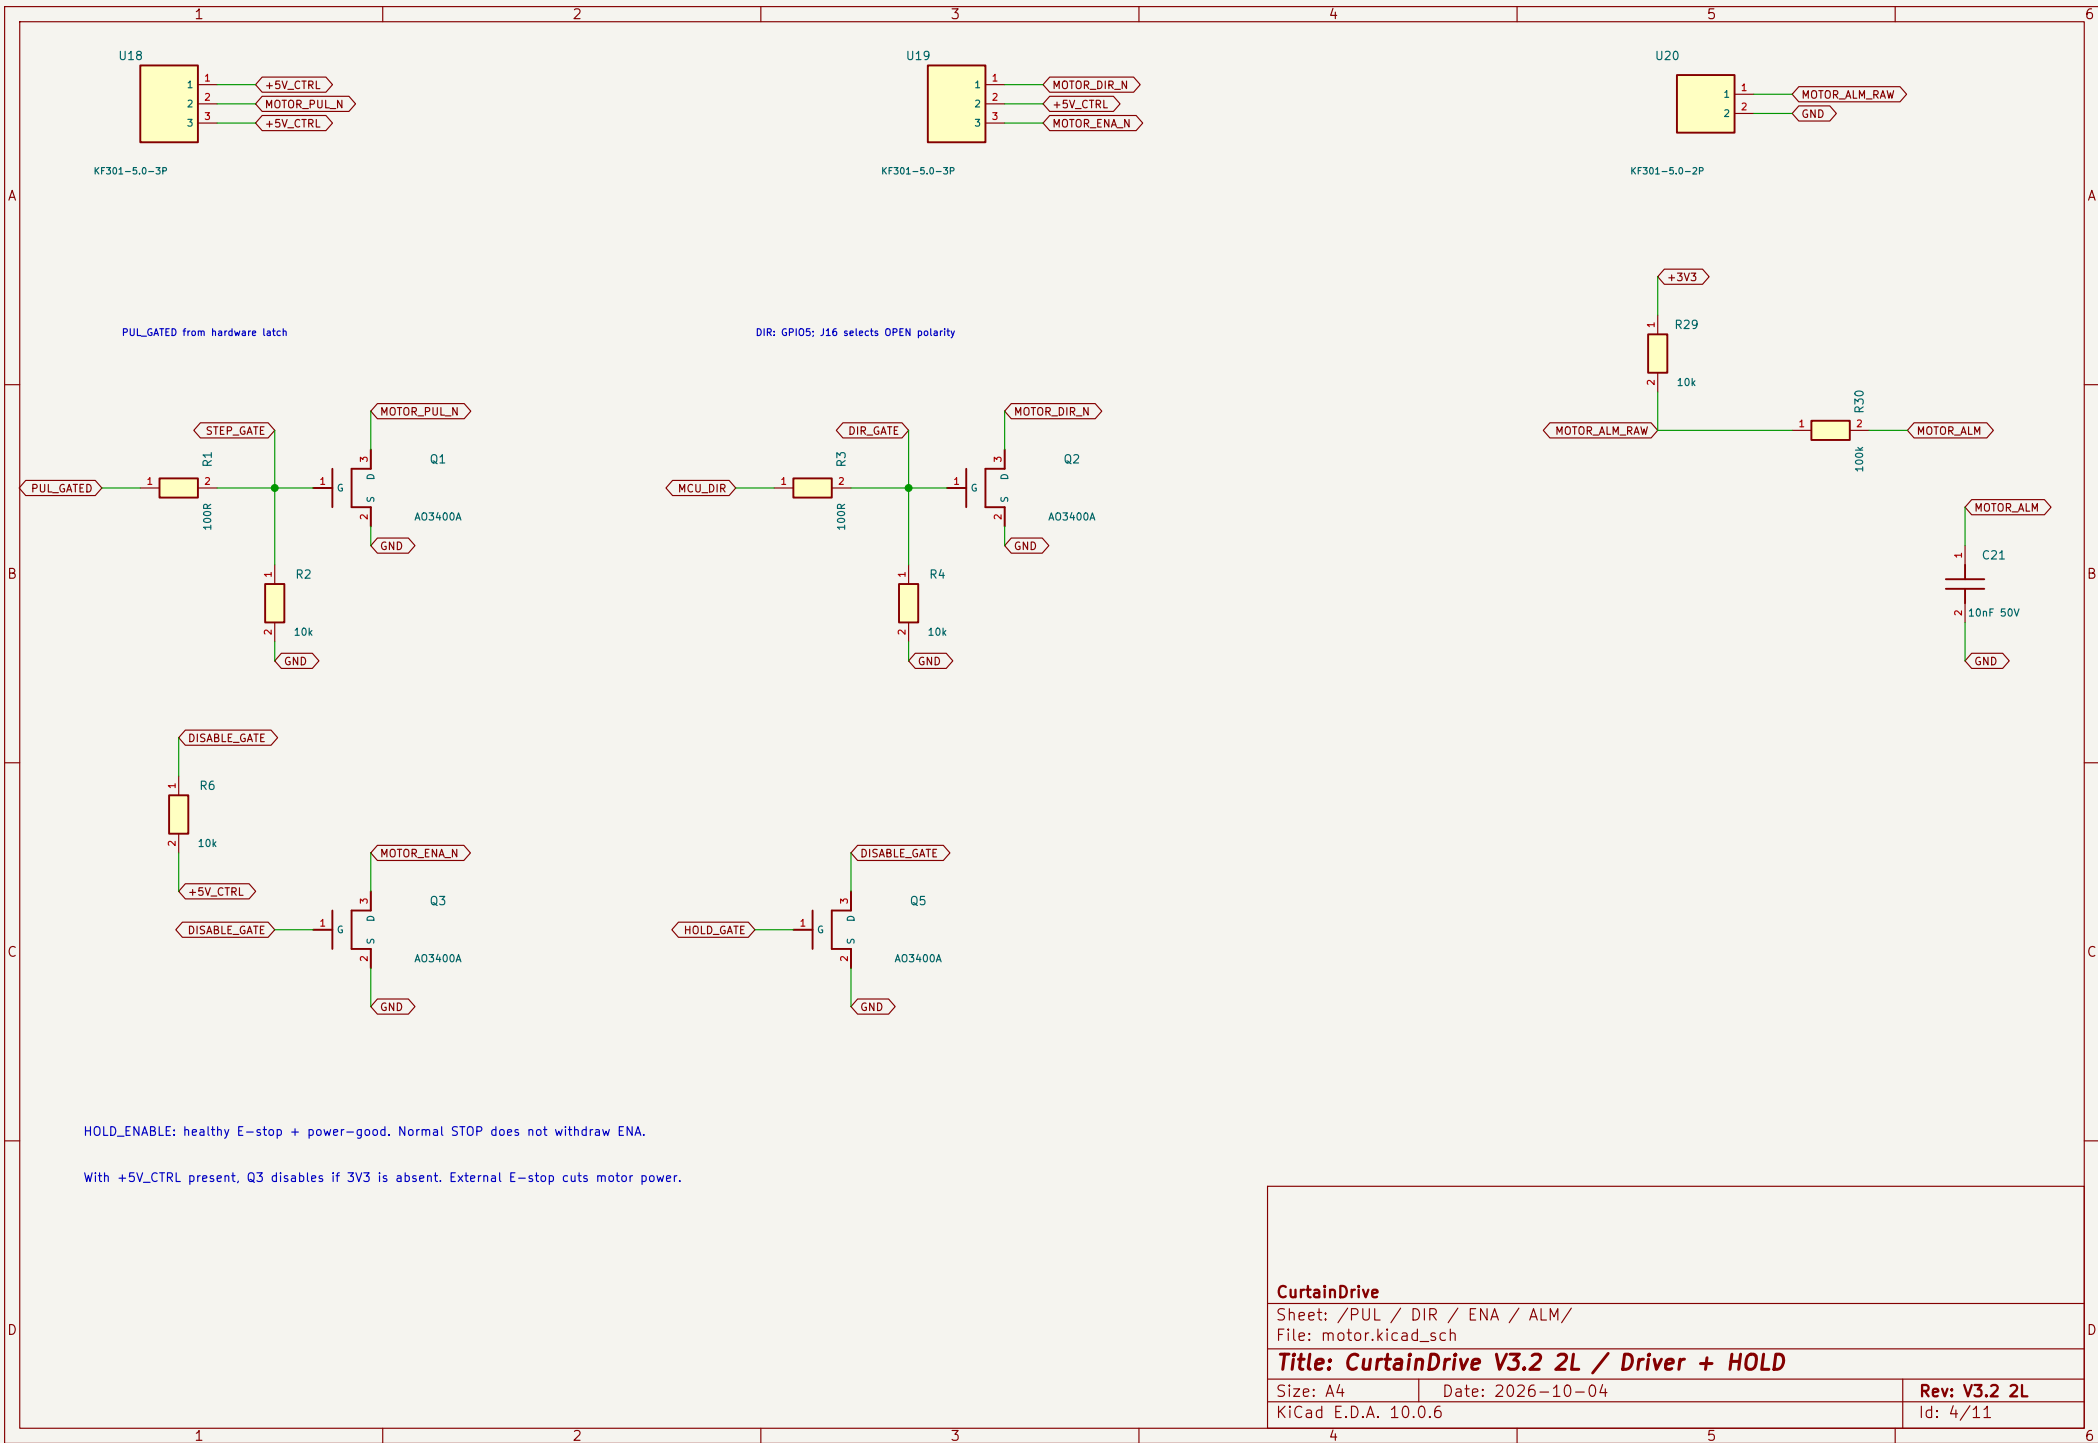

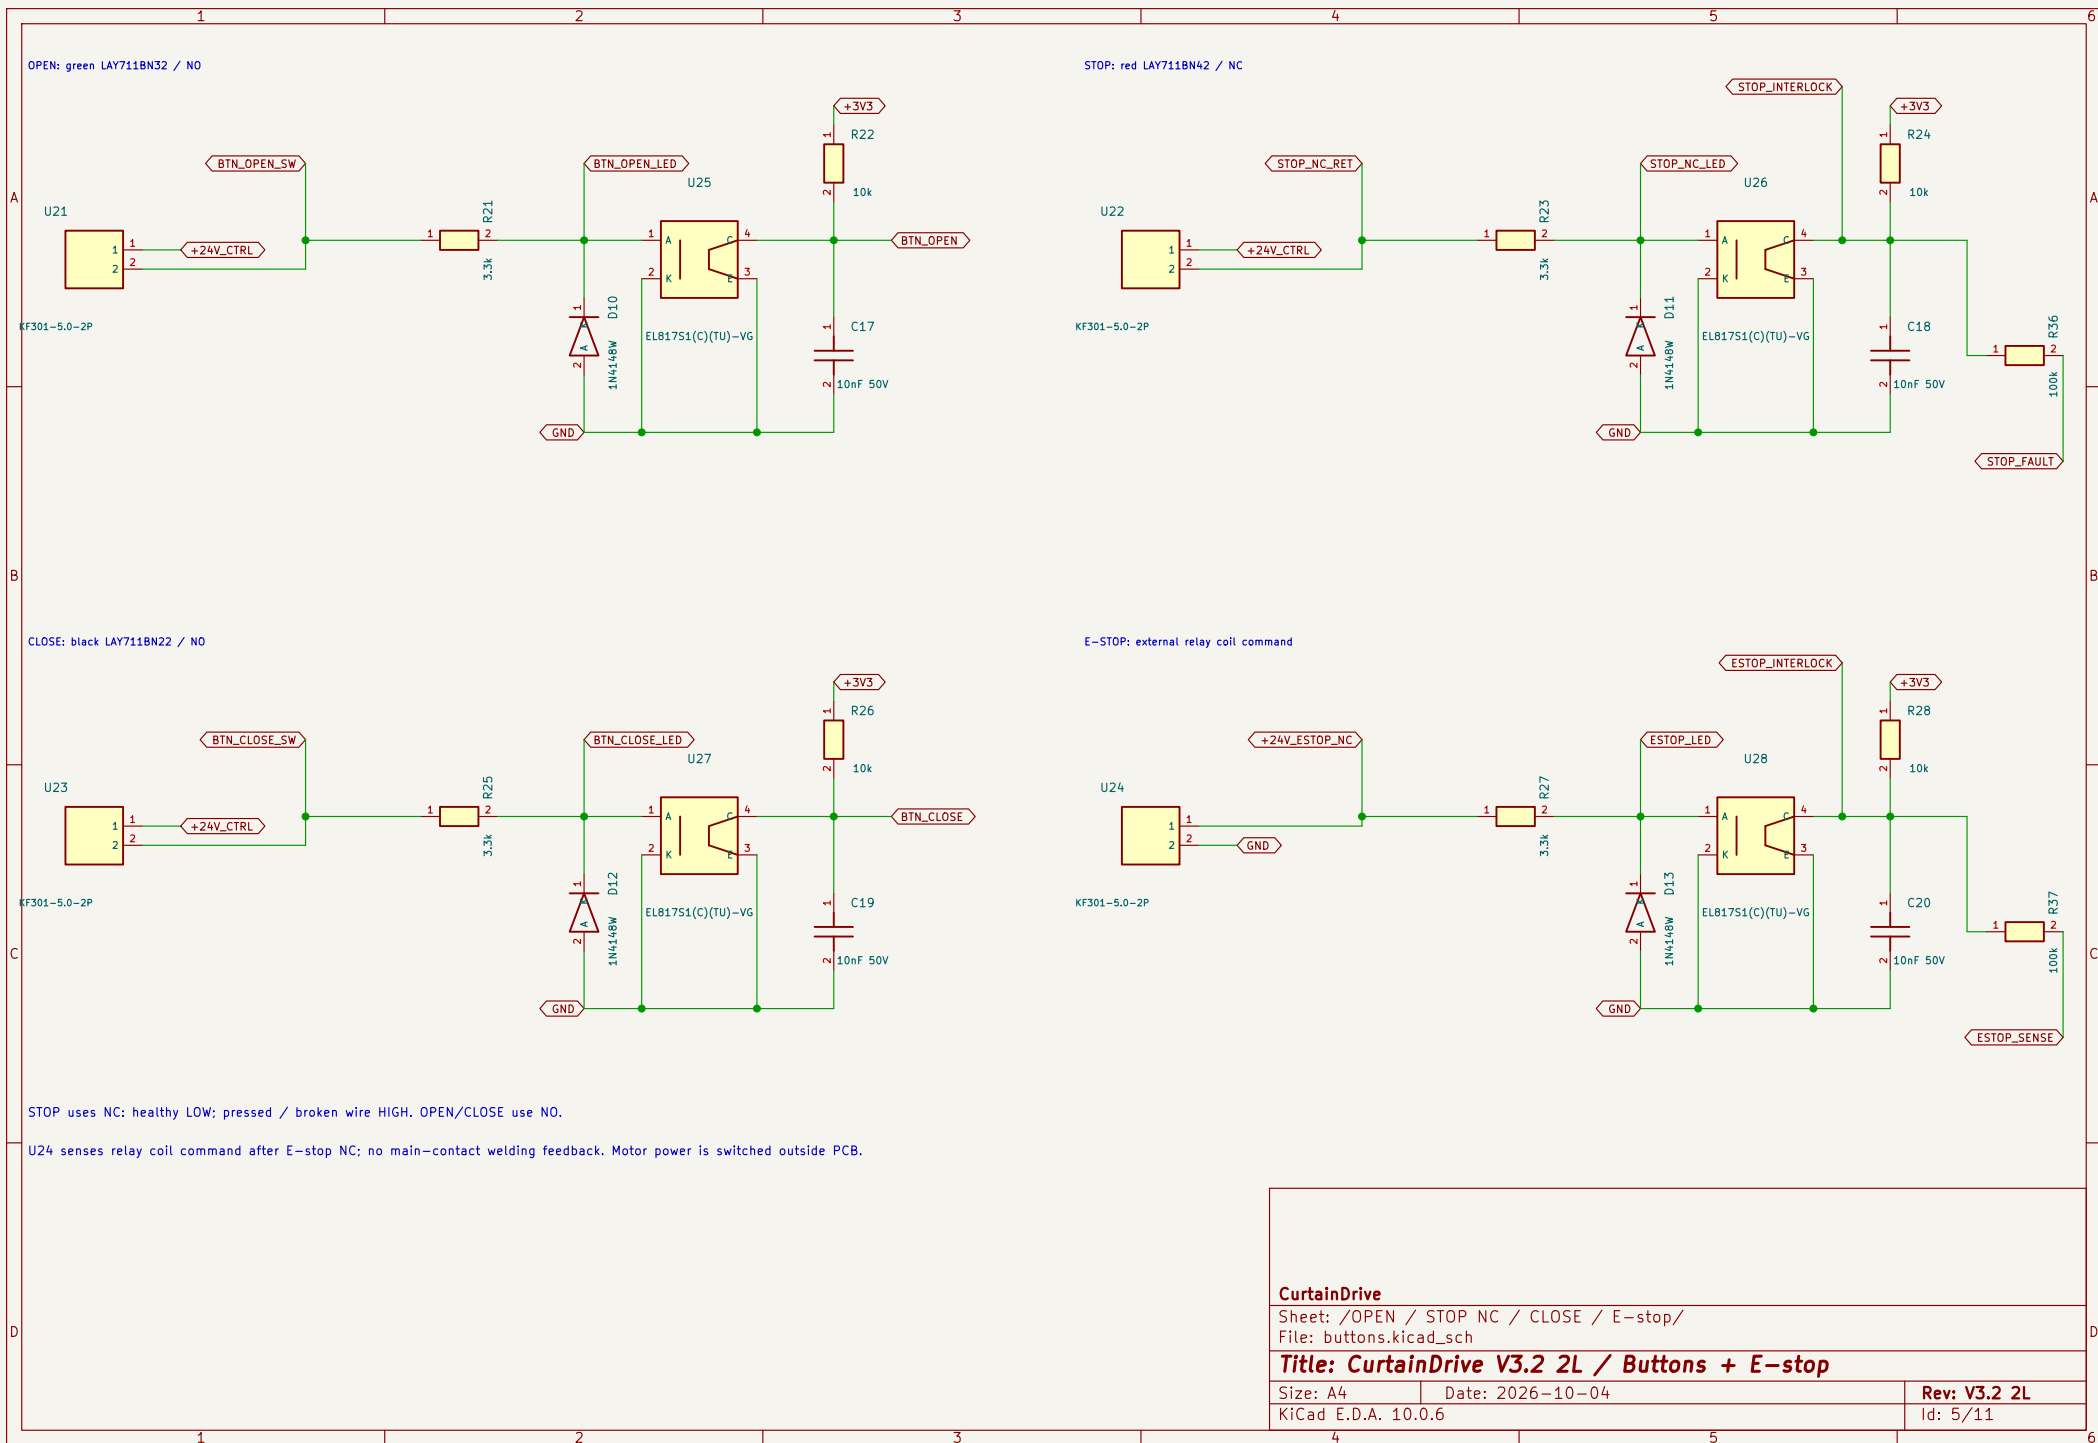

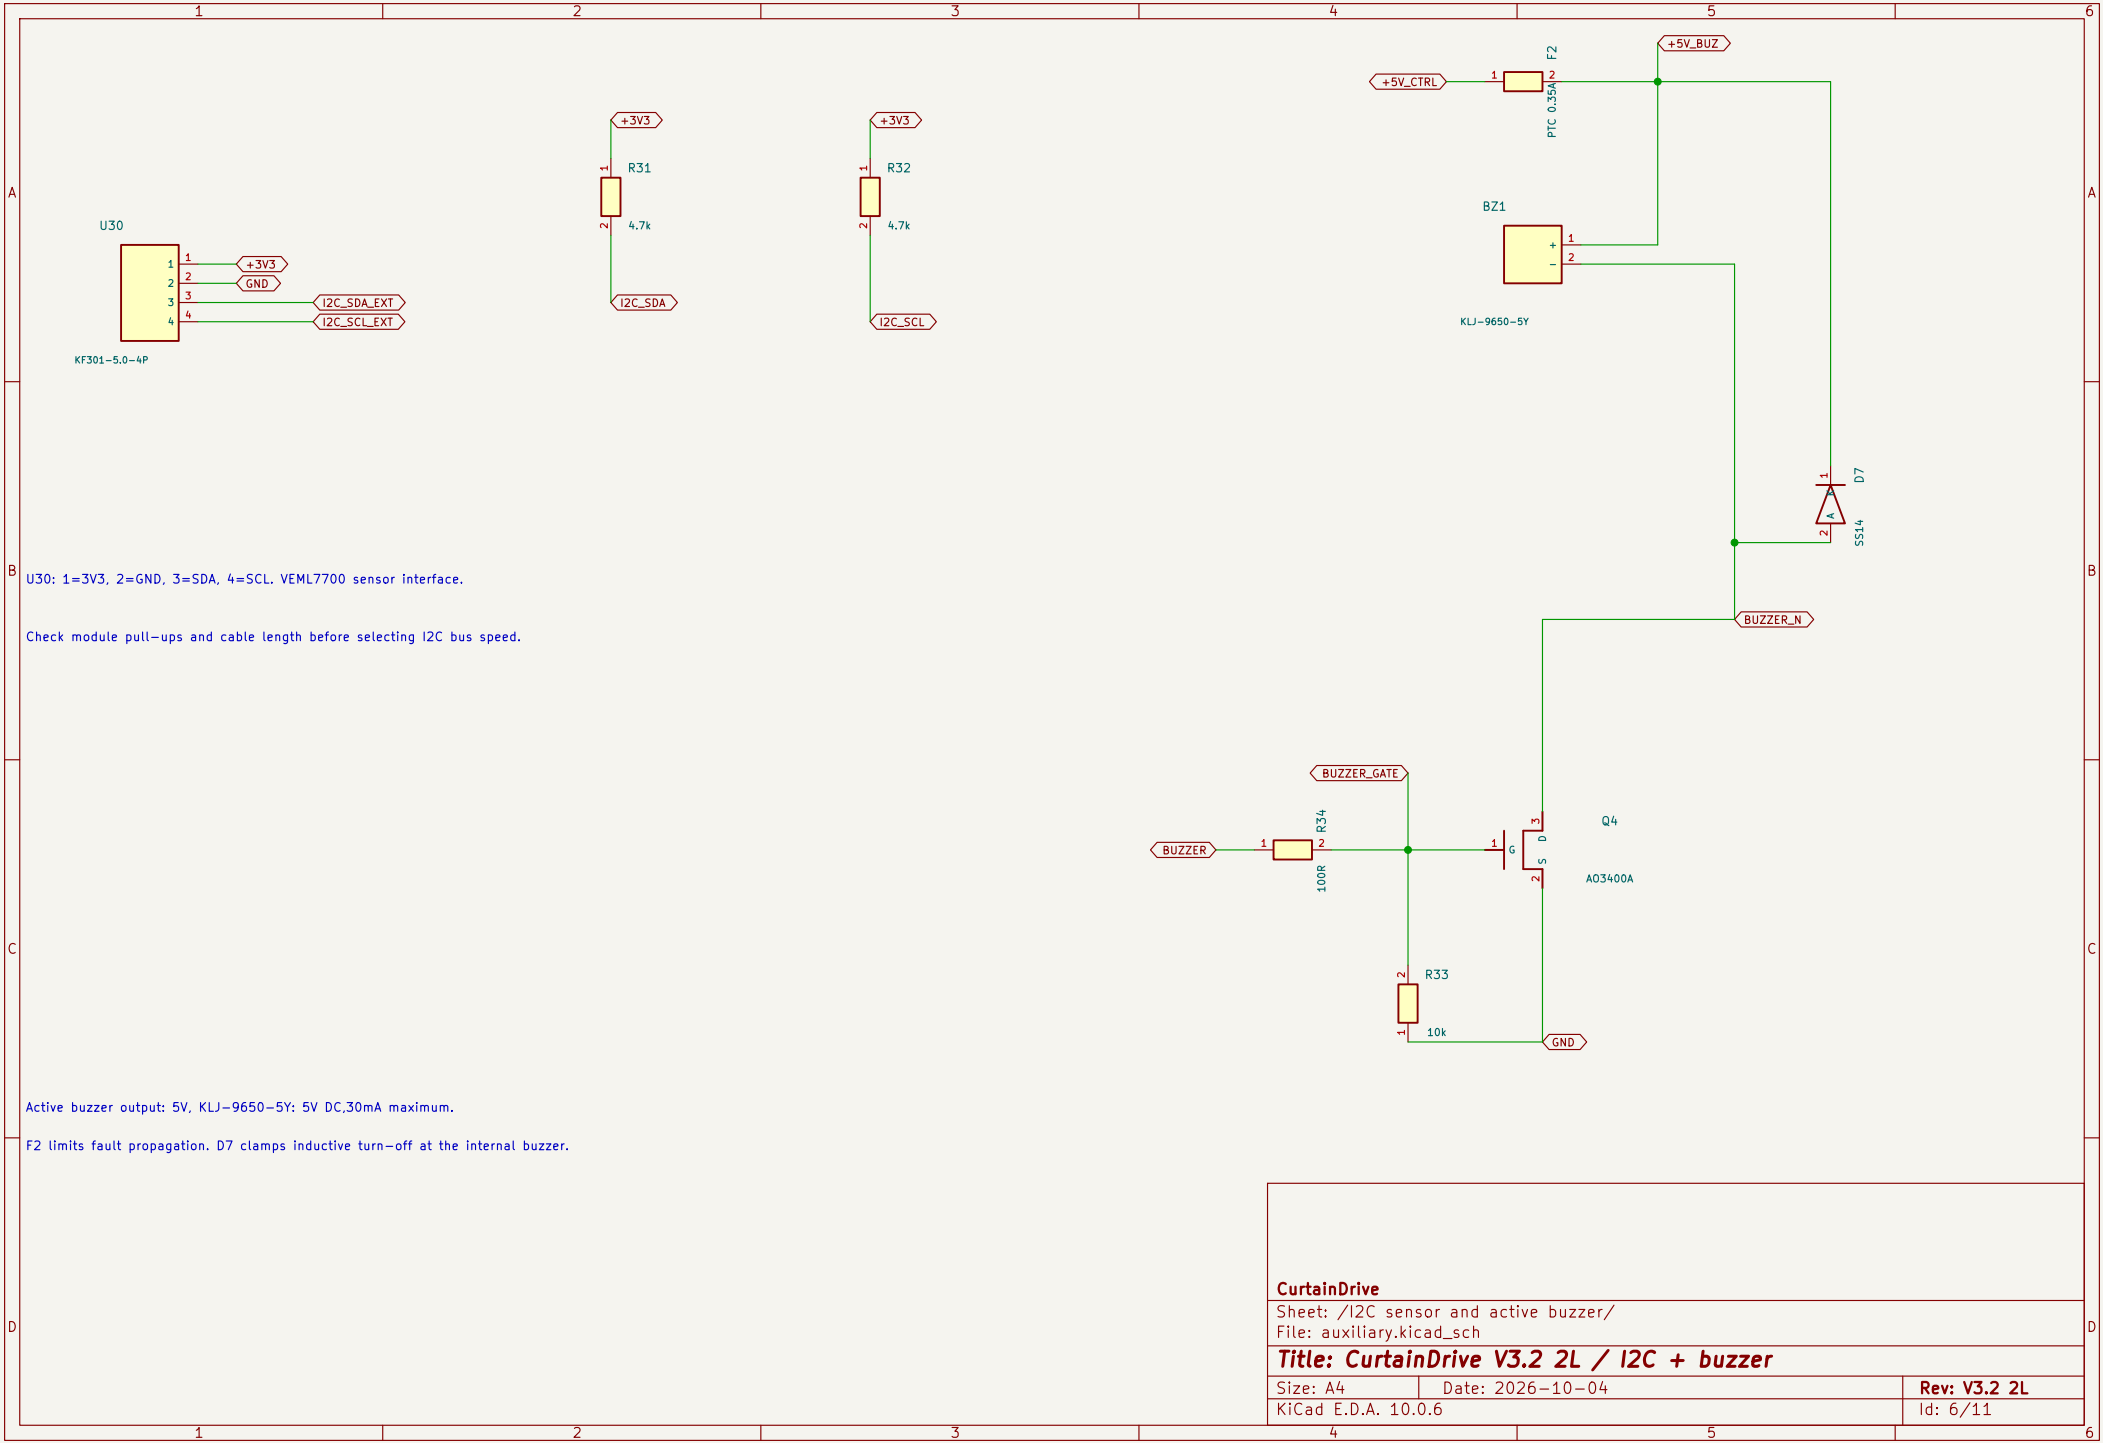

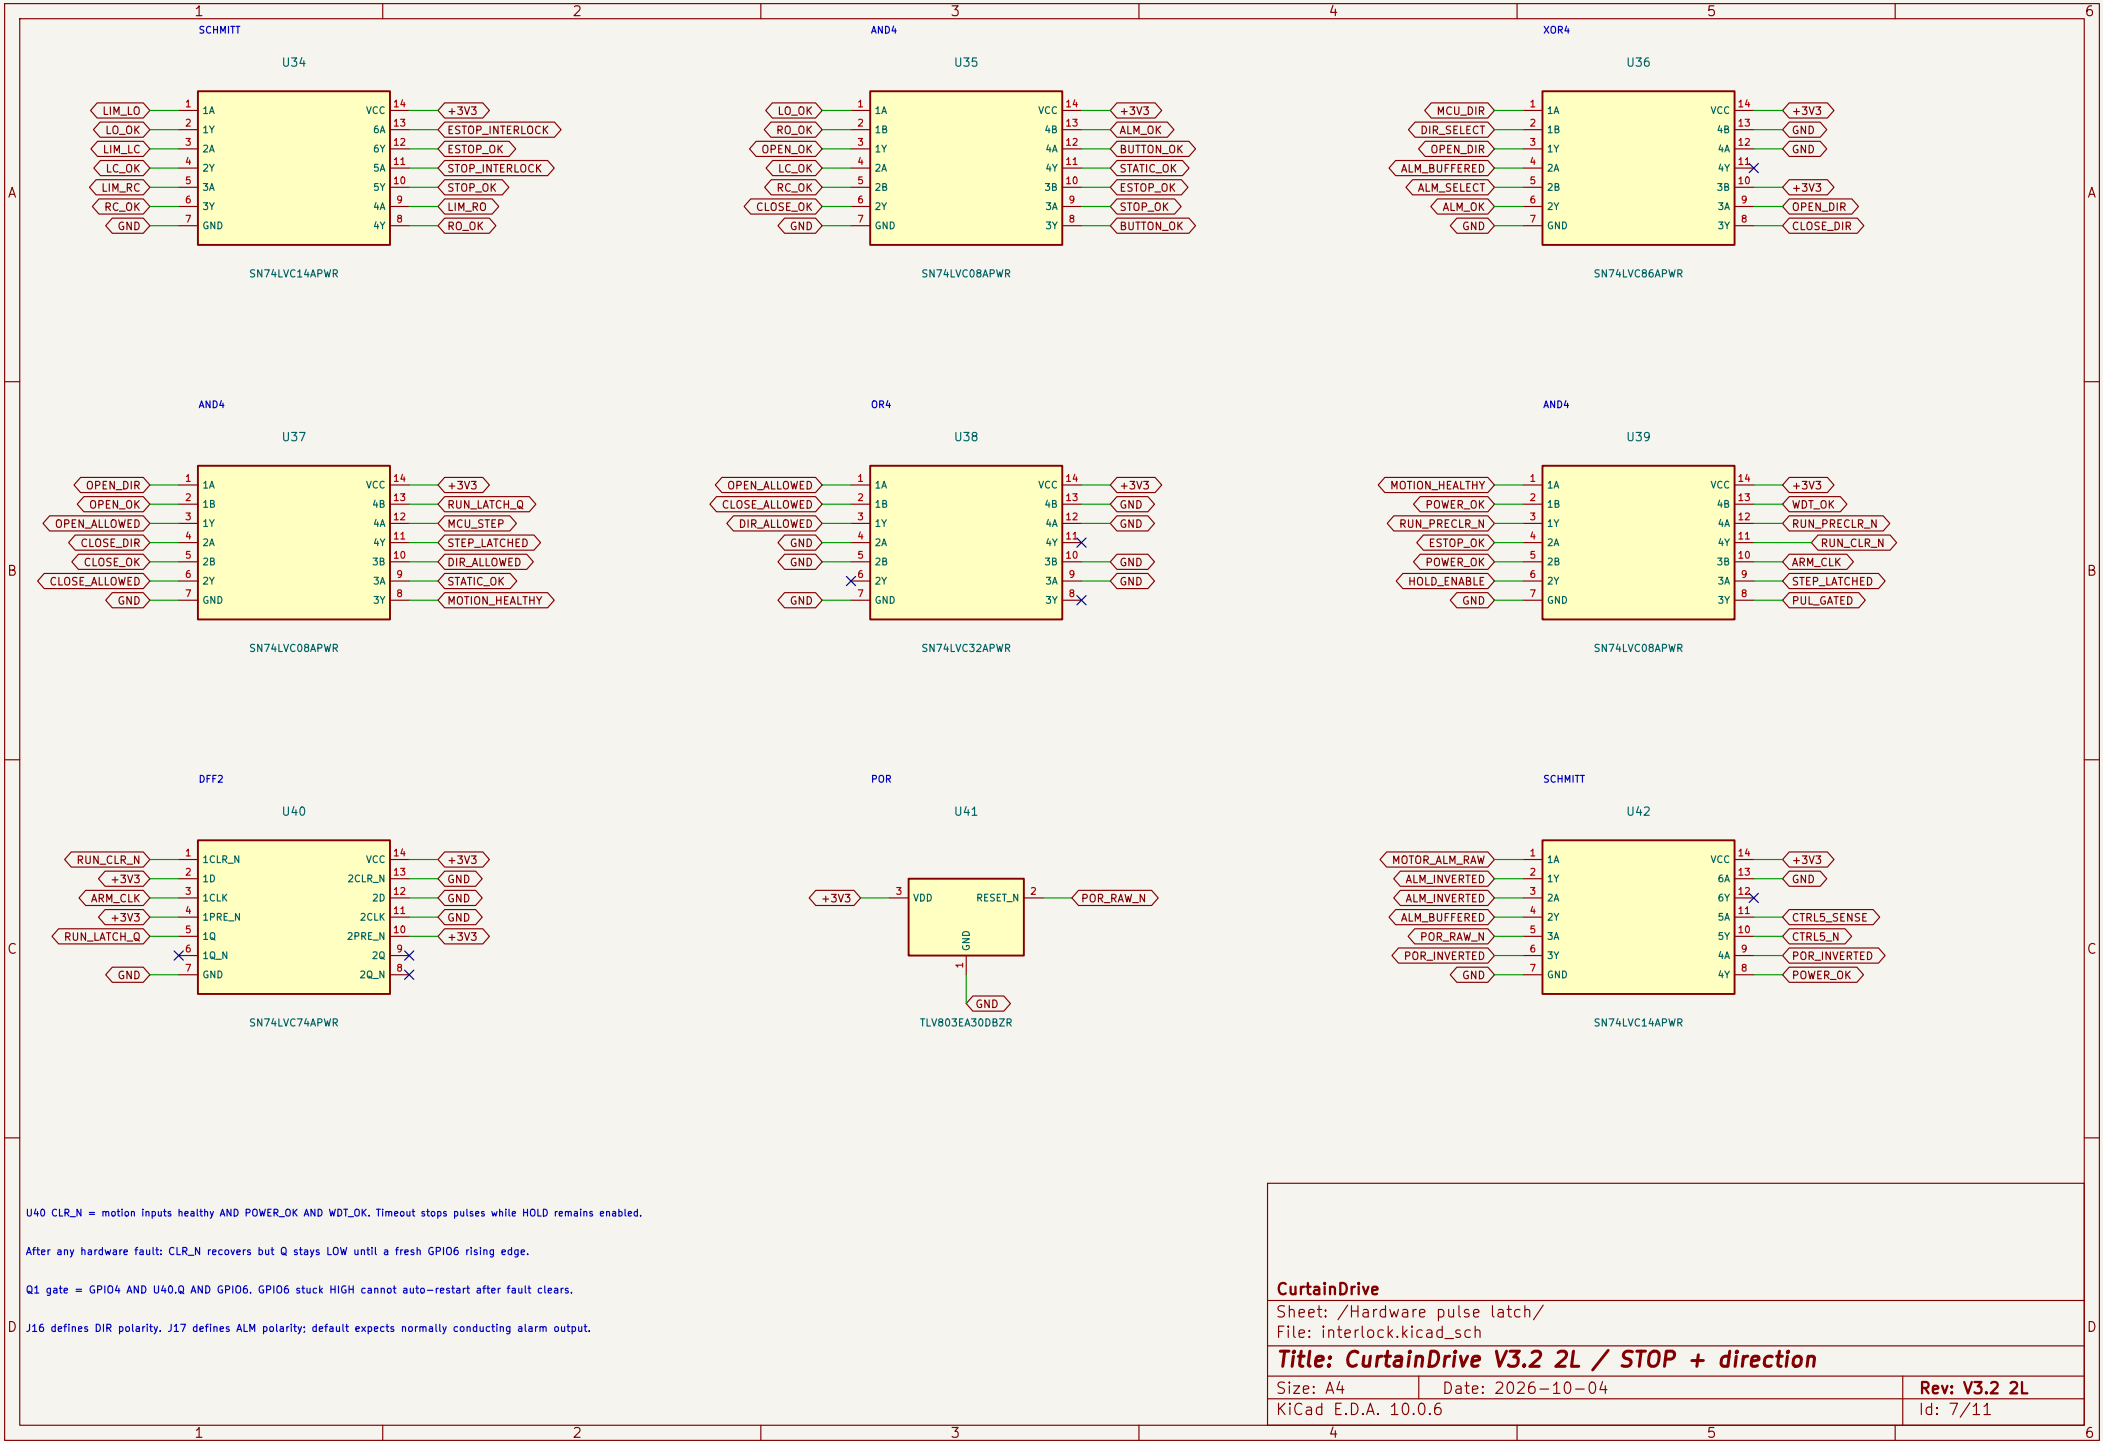


CurtainDrive

Sheet: /Hardware pulse latch/
File: interlock.kicad_sch

Title: CurtainDrive V3.2 2L / STOP + direction

Size: A4	Date: 2026-10-04	Rev: V3.2 2L
KiCad E.D.A. 10.0.6		Id: 7/11

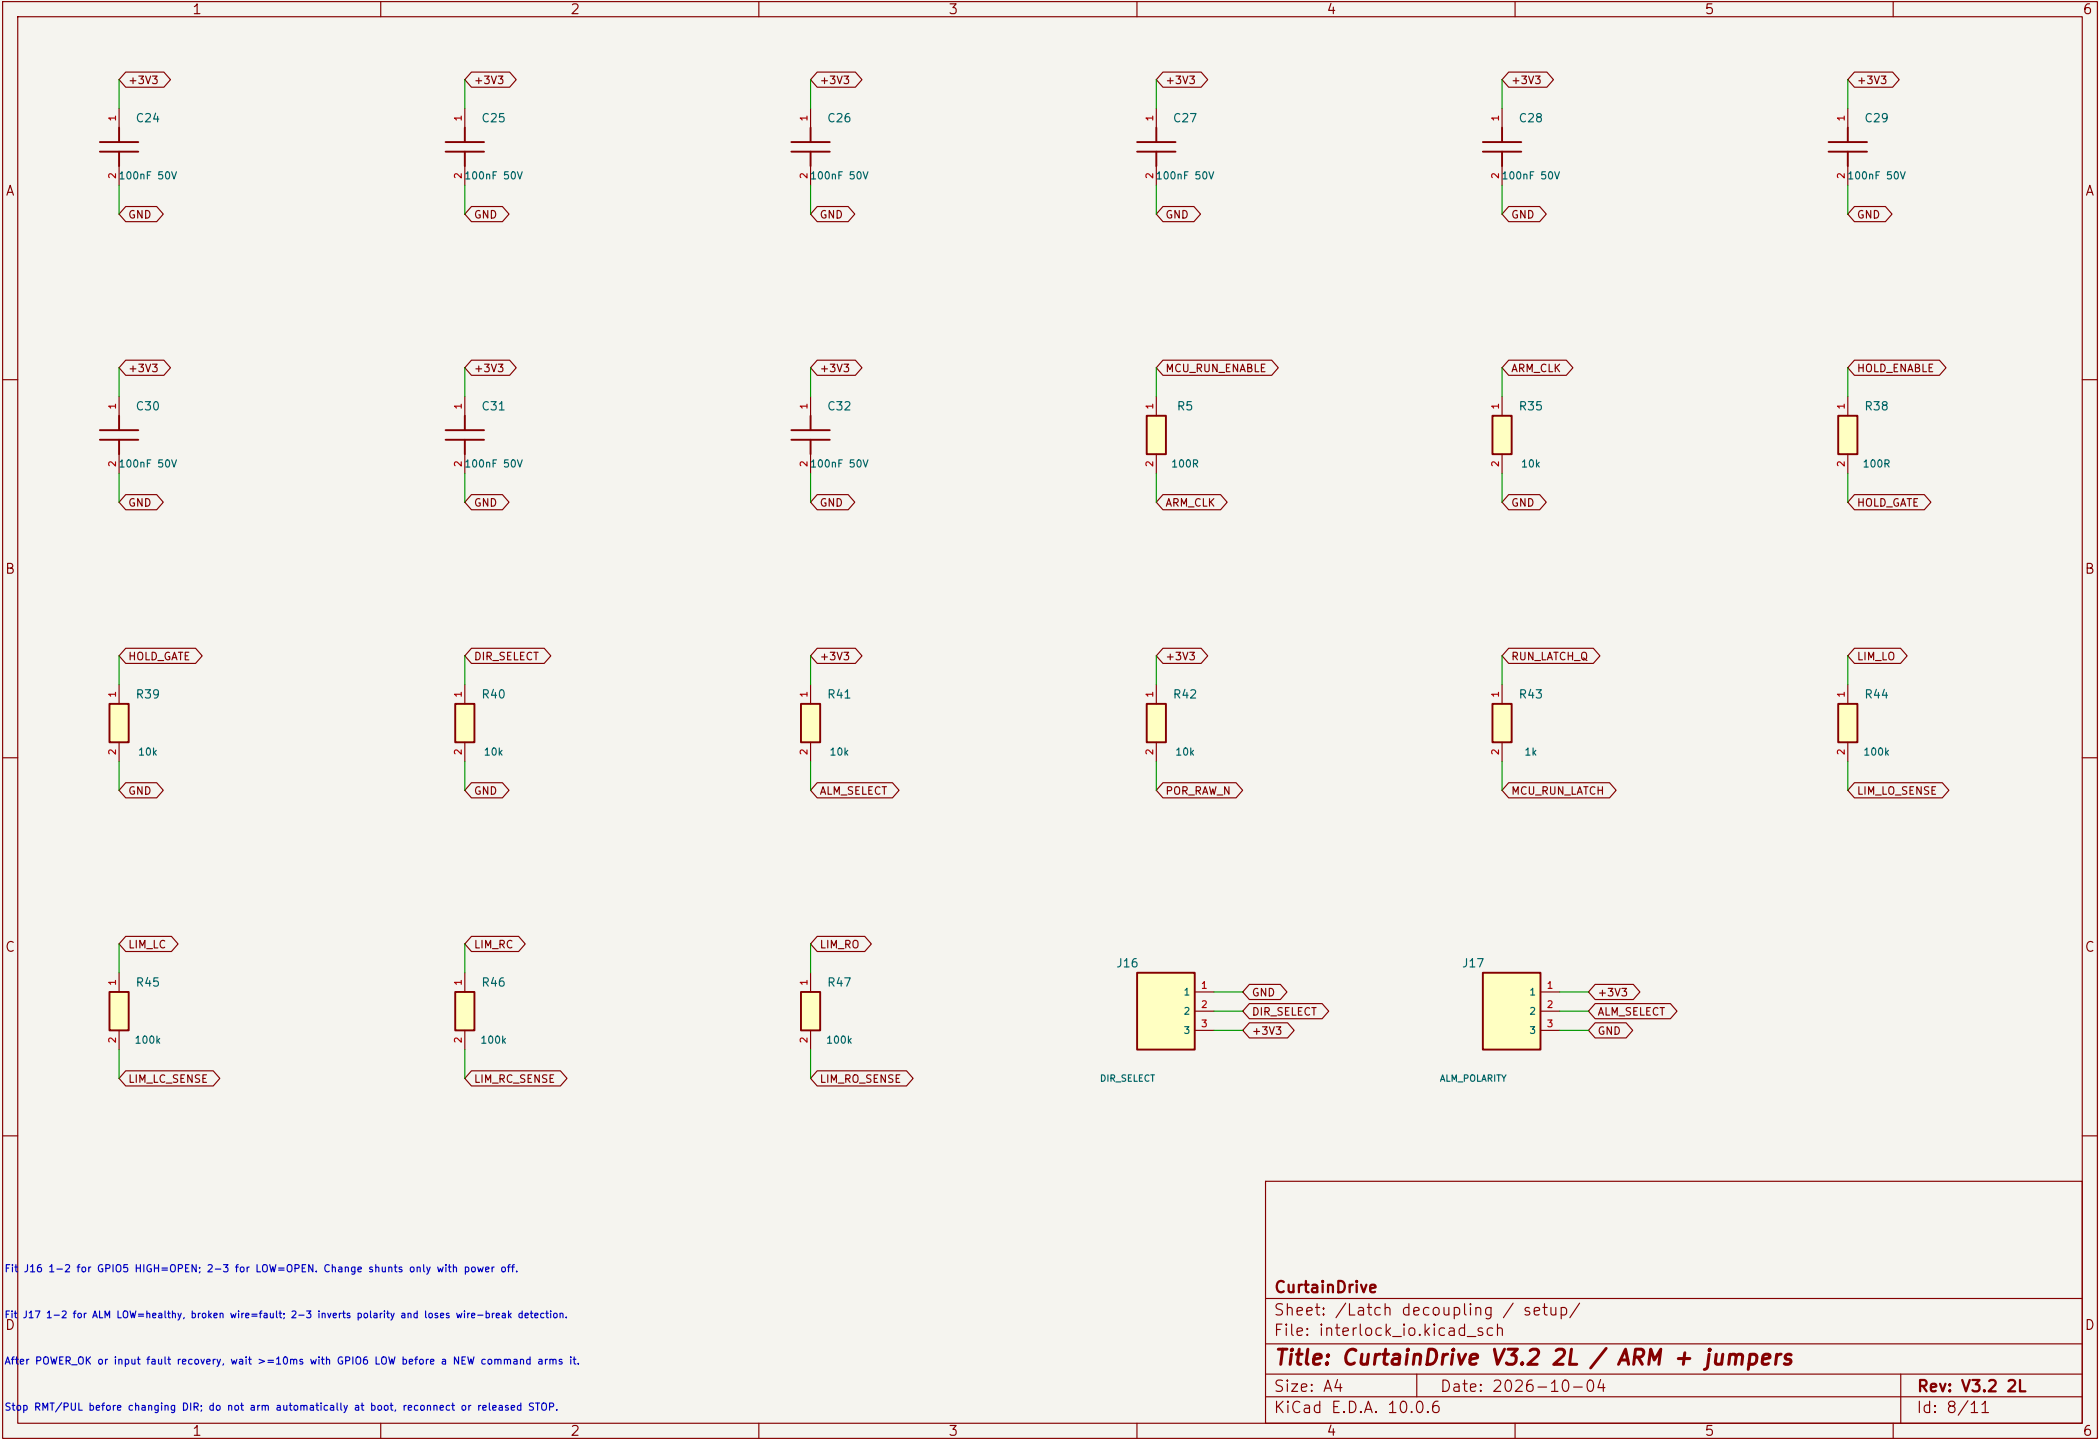

Fit J16 1-2 for GPIO5 HIGH=OPEN; 2-3 for LOW=OPEN. Change shunts only with power off.

Fit J17 1-2 for ALM LOW=healthy, broken wire=fault; 2-3 inverts polarity and loses wire-break detection.

After POWER_OK or input fault recovery, wait >=10ms with GPIO6 LOW before a NEW command arms it.

Stop RMT/PUL before changing DIR; do not arm automatically at boot, reconnect or released STOP.

CurtainDrive

Sheet: /Latch decoupling / setup/
File: interlock_io.kicad_sch

Title: CurtainDrive V3.2 2L / ARM + jumpers

Size: A4	Date: 2026-10-04	Rev: V3.2 2L
KiCad E.D.A. 10.0.6		Id: 8/11

