
Objective

The objective of this lab is to introduce you to the Quartus II software, design entry using Verilog and circuit simulation.

Part 1: Setting up a project in Quartus and running a testbench


- 1. Select an appropriate working directory for your project. I would recommend selecting your network drive.
 - a. Create a new folder lab1,
 - b. Create another folder within lab1 called andgate2,
 - c. Download and gate 2.v and and gate 2_tb.v from Canvas,
 - d. Save these files in andgate2 directory.
- 2. Start Quartus II 18.1 (64-bit).
 - a. If you are prompted by a License Setup choose the free option. You may need to restart Quartus if this happens.
- 3. Select File -> New Project Wizard.
- 4. In the **Directory**, **Name**, **Top-Level Entity** page of the New Project Wizard pop-up:
 - a. To the right of the "What is the working directory" box click the ... button.
 - b. In the Select Folder pop-up, navigate so you can see the andgate2 directory created in step 1,
 - c. Select the andgate2 folder, click Select Folder,
 - d. In the "What is the name of this project" field type and gate 2
 - e. click Next.
- 5. In the **Project Type** page of the New Project Wizard pop-up:
 - a. Select the $Empty\ project$ radio button,
 - b. click Next.
- 6. In the Add Files page of the New Project Wizard pop-up:
 - a. Click the ... button to the right of File name,

- b. In the Select File pop-up, navigate to, and select, and gate2.v and and gate2_tb.v, click Open,
- c. The file should appear in the window below,
- d. Click Next
- 7. In the **Family & Device Settings** page of the New Project Wizard pop-up:
 - a. Device family, Family: Cyclone V
 - b. Package: FBGA
 - c. Pin Count: 672
 - d. Speed Grade: 7_H6
 - e. Select Specific device selected in 'Available devices' list
 - f. From the list of available devices, select: 5CGXFC5C6F27C7
 - g. Click Next
- 8. In the **EDA Tool Settings** page of the New Project Wizard pop-up:
 - a. In the Simulation row
 - i. Tool Name column: ModelSim-Altera
 - ii. Formats column: Verilog HDL
 - b. Leave other defaults alone
 - c. Click Next
- 9. In the **Summary** page of the New Project Wizard pop-up:
 - a. Review information,
 - b. Click Finish.
- 10. Back in the main Quartus II window, Click Tools -> Options...
- 11. In the Options pop-up:
 - a. Select EDA Tool Options from the Category menu,
 - b. If the last row, "ModelSim-Altera" is blank, click on the ... button at right and navigate to the $C: |intelFPGA_lite| 18.1 | modelsim_ase|$, select the win32aloem folder, the click Select Folder,
 - c. Click Ok.

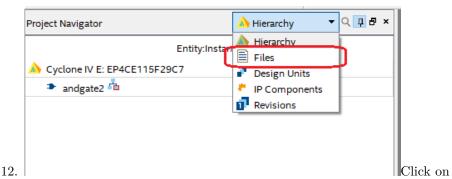

the Files tab in the *Project Navigator* pane.


- 13. Right click on and gate 2_tb in the Project Navigator pane and select Set as Top-Level entity.
- 14. Double click on andgate2.
- 15. If you added the Verilog file in the correct directory and included it in the project, a Verilog file should pop up on the right.
- 16. In the main Quartus II window, click on *Processing -> Start -> Start Analysis & Elaboration*. This may take some time, so be patient.
- 17. If you did everything correctly you should
 - a. Notice that and gate_tb is the new top-level entity in the Hierarchy pane. Expand the and gate2_tb by clicking on the ">" arrow to see the entities inside it.
 - b. You should see the following messages in the console area, the bottom pane.

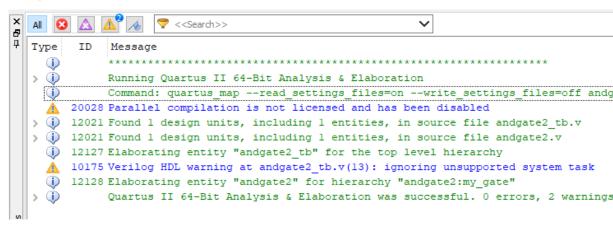


18. In the main Quartus II window, click $Tools \rightarrow Run\ Simulation\ Tool \rightarrow RTL\ Simulation$. The ModelSim program will launch. This may take a

few moments, be patient. If you get a pop-up Nativelink Error window, then go back and check and fix the directory in step 11.


- 19. In ModelSim, click Simulate -> Start Simulation
- 20. In the Start Simulation pop-up, expand the *work* library by clicking on the "+" at left. click on *andgate2_tb* and click *Ok*.
- 21. In the sim pane, right mouse click on uut and select Add Wave.

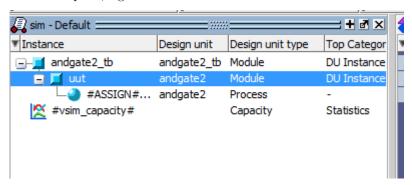

- 22. Choose Simulate -> Run -> Run 100. You should see inputs and output from andgate2. If you see only a small green portion of the waveform on the left margin of the timing diagram, you will need to zoom in on the waveform as follows. First click somewhere in the timing diagram (area under "Undocking tool" in the image below) and then click on the "Zoom all tool" shown in following image.
- 23. Save this waveform as an image as follows:
 - a. Undock the Wave pane by clicking the undocking tool icon.

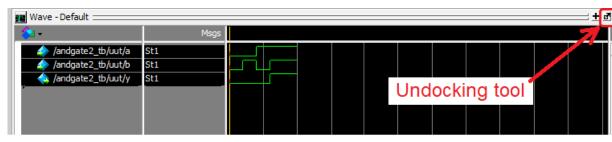

b. Resize the undocked Wave window vertically by grabbing its top edge and dragging down. Make the window tall enough to fit all the waves with a little room to spare.

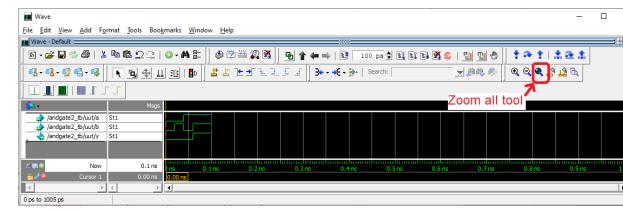

- c. Click the Zoom all tool to file the available horizontal space with the waveform.
- d. Click File -> Export -> Image

If this does not work, you can take a screen shot of the window by pressing Alt-Print Screen. The "Alt" captures the currently active window into the graphics buffer.

- e. Navigate to your project directory, provide a File name, then click Save
- f. Exit Modelsim using File -> Quit. Do not save wave commands.
- 24. Back in Quartus, close your current project using File -> Close Project. Save if needed.

Part 2: Symbolic to Verilog, Timing Diagram, Truth Table.

Write Verilog code to realize the function $f02=a^{\prime}+bc^{\prime}$ Note that this symbolic expression is written using the notation used in class. This is not a valid Verilog expression.

- 1. Create a new project folder within your lab1 directory called function 02.
- 2. Download function02.v and $function02_tb.v$ from Canvas to the project directory.
- 3. Create a project for these two files using the steps above.
- 4. Modify the line of code that starts with assign to realize the function f02 shown above.
- 5. Modify function02_tb.v so that f02 is run through every combination of inputs. Assert the inputs in increasing binary numbering order starting from 0,0,0 and going to 1,1,1.

- 6. Perform simulation using the given testbench as described in previous steps. You will need to "run 100" twice as the simulation is over 100ns long.
- 7. Save this waveform as an image as done in the previous section. If the waveform is missing, you can add it back in using View -> Waveform.
- 8. From the information in the timing diagram, produce a truth table for f02. Remember that a truth table is an enumeration of every possible input and the associated output. Please look at Chapter 2 in the textbook for some examples if you are unclear about how to setup a truth table.

Part 3: Verilog to Symbolic, Truth Table, Circuit Diagram


The Verilog code in the file function 03 contains a complete circuit for f03. You will use the Quartus tools to get a timing diagram for the function and, by looking at the Verilog code, determine the symbolic form and circuit diagram.

- 1. Create a new project folder within your lab1 directory called function03.
- 2. Download function 03.v and function 03_tb.v from Canvas to the project directory.
- 3. Create a project for these two files using the steps above.
- 4. Modify $function03_tb.v$ so that f03 is run through every combination of inputs. Assert the inputs in increasing binary numbering order starting from 0,0,0 and going to 1,1,1.
- 5. Perform simulation using this test bench as described in previous steps. You will need to "run 100" twice as the simulation is over 100ns long.
- 6. Save this waveform as an image, but with the following changes.
 - a. Resize the area containing the names of the signals by grabbing the right vertical bar of the name area and moving it right.
 - b. Re-order the waves so that f03 is lowest. Do this by grabbing the name "/function03_tb/uut/f03 and moving it below all the other signals.
 - c. Color the intermediate signals (p1, p2, p4, p7) yellow by right clicking on them, selecting properties. In the View tab of the Wave Properties pop-up, click the Colors... button for Wave Color and choose Yellow, click Close, then OK.
 - d. Change the color of f03 to red.

- 7. From the information in the timing diagram, produce a truth table.
- 8. From the information in function 03.v draw the circuit diagram for f03.
- 9. From the information in function 03.v write down the symbolic form for f03.

Part 4: Circuit Diagram to Verilog, Symbolic, Truth Table

Write Verilog code to realize the function f04 shown in the circuit diagram below.

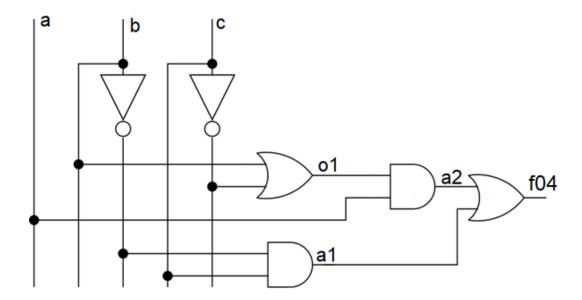

- 1. Create a new project folder within your lab1 directory called function04.
- 2. Download function04.v and $function04_$ tb.v from Canvas to the project directory.
- 3. Create a project for these two files using the steps above.
- 4. Modify function 04.v by writing an assignment statement for each of o1, a1, a2, and f04.
- 5. Modify $function04_tb.v$ so that f04 is run through every combination of inputs. Assert the inputs in increasing binary numbering order starting from 0,0,0 and going to 1,1,1.
- 6. Perform simulation using this test bench as described in previous steps. You will need to "run 100" twice as the simulation is over 100ns long.
- 7. Save this waveform as an image as done in a previous section. Color intermediate signals (01, a1, a2) yellow and output red.

8. From the information in the timing diagram, produce a truth table.

Turn in:

Make a record of your response to numbered items below and turn them in a single copy as your team's solution on Canvas using the instructions posted there. Include the names of both team members at the top of your solutions. Use complete English sentences to introduce what each of the following listed items (below) is and how it was derived.

- Part 1: Step 2-3 Timing diagram of AND gate
- Part 2: Step 4 Verilog code for f02
- Part 2: Step 7 Timing diagram of f02
- Part 2: Step 8 Truth table of f02
- Part 3: Step 6 Timing diagram of f03
- Part 3: Step 8 Truth table of f03
- Part 3: Step 9 Circuit Diagram of f03
- Part 3: Step 10 Symbolic form of f03
- Part 4: Step 6 Timing diagram of f04
- Part 4: Step 8 Truth table of f04
- Part 4: Step 9 Just the 4 Verilog assign statement for o1, a1, a2, and f04.