# Troubleshooting Guide

Overview on the connection between ONT, Dual WAN Router, Modem and Wi-Fi Router:

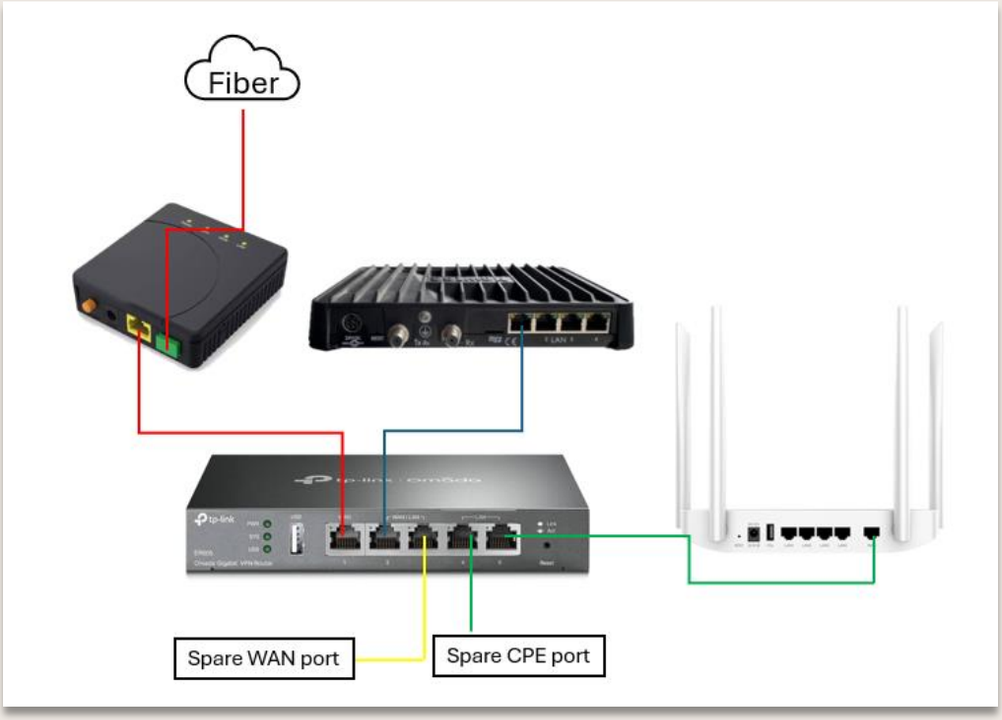


Overview on the connection between ONT and Wi-Fi Router.

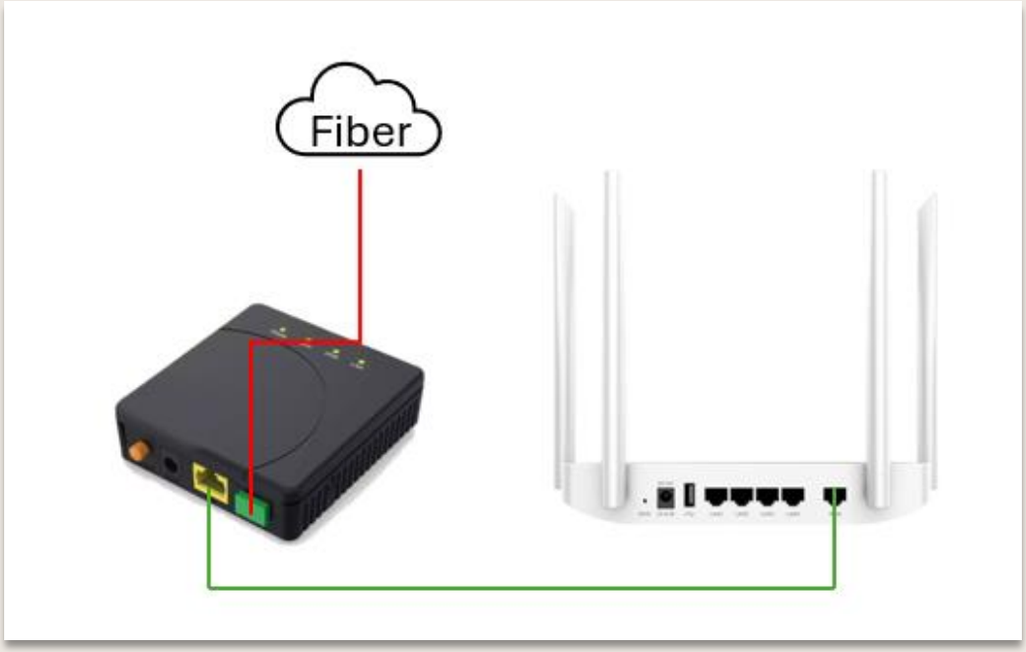

Choose the Broadband Issue You Are Experiencing:

## 1) Issue 1 – No Internet Connection

| | | |
|---|---|---|
| **Step 1** | Step 1: Check the RF Cable for Damage or Loose Connections<br><br>• Ensure the RF cable has no kinks, cuts, or physical damage.<br>• Make sure all cables are securely connected to the modem and transceiver:<br>  ○ Screw in the RF cable fully by turning it clockwise.<br>  ○ Gently shake the connection—it should be firm and not loose. | <br> 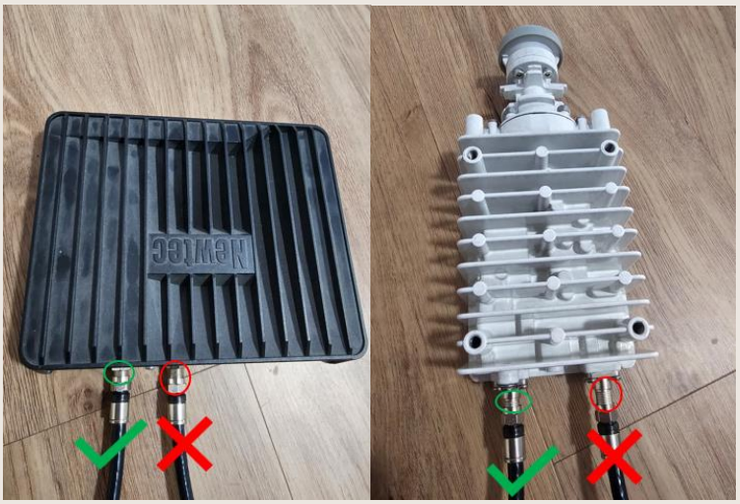 |
| **Step 2** | Restart (Power Cycle) the VSAT Modem, Dual WAN Router and Wi-Fi Router<br><br>• Turn off the VSAT modem, ONT, Dual WAN Router and Wi-Fi router by turning the off the power supply.<br>• Wait 2 minutes before turning them back on. | |

<table>
<tr>
<td>Step 3</td>
<td>Ensure that all the connected ports have flashing green LED.
<ul>
<li>Make sure all the device connected are power on.</li>
<li>Check connection and replace ethernet cable if necessary.</li>
<li>If above steps did not resolve the issue, for port 1 or 2 that is faulty, please connect the ethernet cable to port 3 and reach out to Volt Broadband Support to activate port 3.</li>
<li>If port 4 is faulty, you may use port 5.</li>
</ul></td>
<td>

<table>
<tr><th>Port</th><th>Description</th></tr>
<tr><td>1</td><td>Fiber Connection</td></tr>
<tr><td>2</td><td>VSAT Connection</td></tr>
<tr><td>3</td><td>Spare WAN port</td></tr>
<tr><td>4</td><td>Wi-Fi Router connection</td></tr>
<tr><td>5</td><td>Spare Customer premise equipment port.</td></tr>
</table></td>
</tr>
<tr>
<td>Step 4</td>
<td>Ensure the connection is to WAN Port of the Wi-Fi Router
<ul>
<li>Connect Dual WAN router to the WAN/Internet port on your Wi-Fi router using an Ethernet (RJ45) cable.</li>
<li>The WAN/Internet port is usually labelled on the router.</li>
<li>For normal operation, Power, Wi-Fi should have a solid LED, while WAN should have a flashing LED.</li>
</ul></td>
<td>
</td>
</tr>
</table>

<table>
<tr><td></td><td></td><td>
</td></tr>
<tr><td>Step 4</td><td>Check your Modem LED status.</td><td>


LED Indicators and Descriptions

<table>
<tr><th></th><th>Lighting Warning</th><th>Description</th></tr>
<tr><td>1</td><td>Power LED</td><td>White continuous - when powered up.</td></tr>
<tr><td>2</td><td>RX indicator LED</td><td>White continuous - forward satellite signalling receiving.</td></tr>
<tr><td>3</td><td>TX indicator LED</td><td>White blinking / continuous - traffic transmitted via the satellite link.</td></tr>
<tr><td>4</td><td>Warning LED</td><td>Yellow continuous - when the terminal is not logged on to the satellite network.</td></tr>
</table></td></tr>
</table>

## Issue 2 – Slow Internet Speed

| | | |
|---|---|---|
| Step 1 | Perform a Kacific Speed Test<br><br>• Connect your laptop directly to the modem via an Ethernet cable, or use Wi-Fi (ensure your device is close to the router).<br>• Open your web browser and go to http://172.18.2.10/speedtest/<br>• If you get a security warning, click "Advanced" and then "Proceed to 172.18.2.10". | 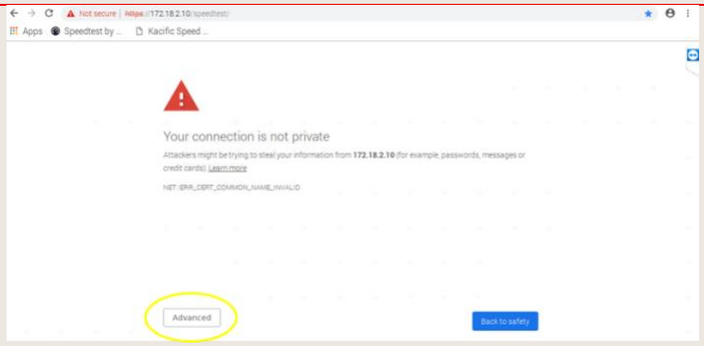 <br> 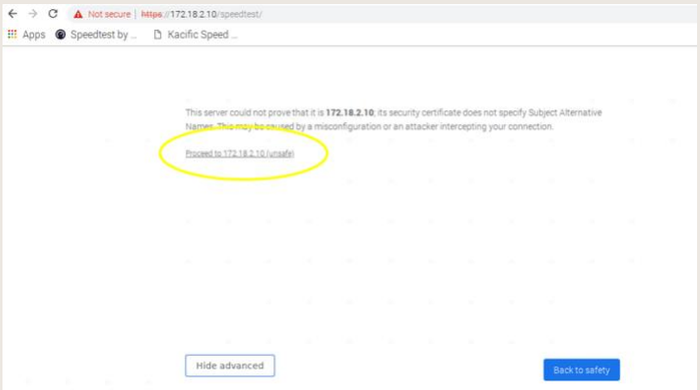 |
| Step 2 | • Connect your laptop directly to the modem via an Ethernet cable, or use Wi-Fi (ensure your device is close to the router).<br><br>• Open your web browser and go to http://172.18.2.10/speedtest/.<br><br>• If you get a security warning, click "Advanced" and then "Proceed to 172.18.2.10". | 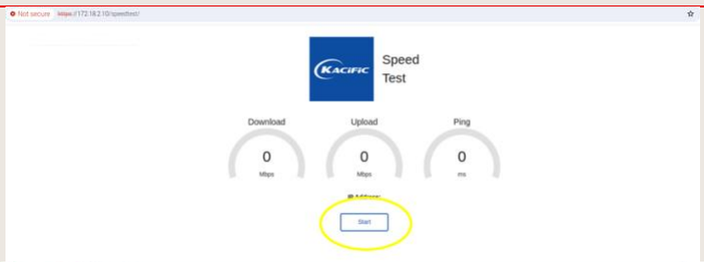 <br> 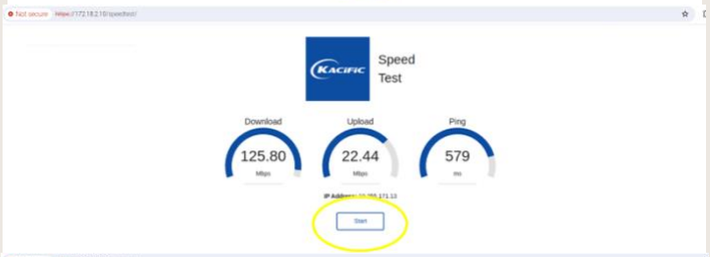 <br> 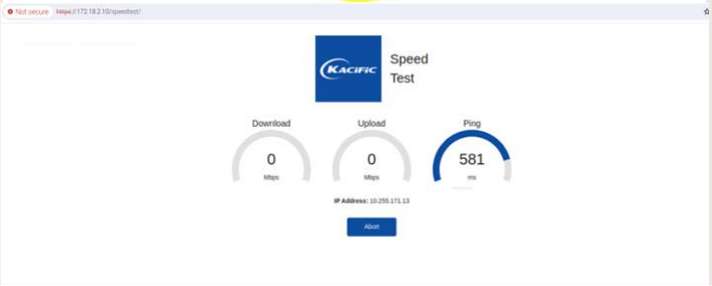 |

| | | |
|---|---|---|
| Step 3 | Improve Your Speed if Results Are Unsatisfactory<br><br>• **Disconnect unnecessary devices** from the network and rerun the test.<br>• **Optimize Wi-Fi placement**:<br>  ○ Place the Wi-Fi router in a **central location**, away from metal objects and electronics.<br>  ○ Avoid placing it near thick walls or obstructions.<br>• **Check Wi-Fi signal strength**:<br>  ○ Weak signals cause slow speeds. Use apps like **Wi-Fi Analyzer** to check signal strength.<br>  ○ If the signal strength is below **-70 dBm**, try moving closer to the router or adjusting its placement. | |

## Issue 3 – Frequent Disconnection

| | | |
|---|---|---|
| Step 1 | Check for Overheating<br><br>• Touch the equipment—if it feels hot, overheating may be the issue.<br>• Ensure at least **30x30x30 cm of free space** around the equipment for proper heat dissipation. | 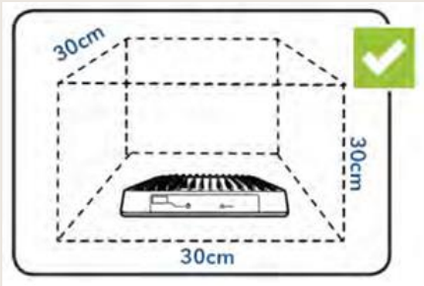 |

## Issue 4 – Problems with the Satellite Modem

| | | |
|---|---|---|
| Step 1 | Check for Rain Fade or Signal Loss<br><br>• **Heavy rain** can weaken the satellite signal, causing slow speeds or disconnections. The connection should improve once the weather clears.<br>• **Check the antenna's line of sight**:<br>  ○ Ensure there are **no obstructions** (trees, buildings, etc.).<br>  ○ Clear **snow or debris** from the antenna if necessary. | <br> 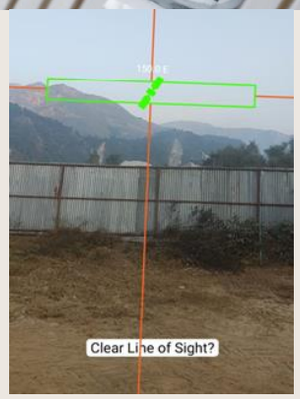 |

| | | |
|---|---|---|
| Step 2 | Access the Modem GUI for Further Diagnostics<br><br>• **Connect your laptop directly to the modem** via Ethernet, or use Wi-Fi through the connected router.<br>• Open a web browser and enter **192.168.1.1** to access the modem's **GUI (Graphical User Interface)**.<br>• Navigate to the **Summary Page** and **share the status details** with our support team. | 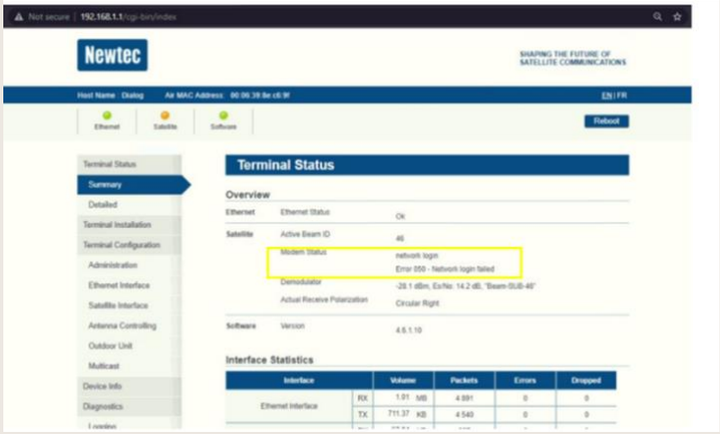 |

For further assistance, contact **Volt Broadband Support**:
**support@voltbroadband.co.nz**