


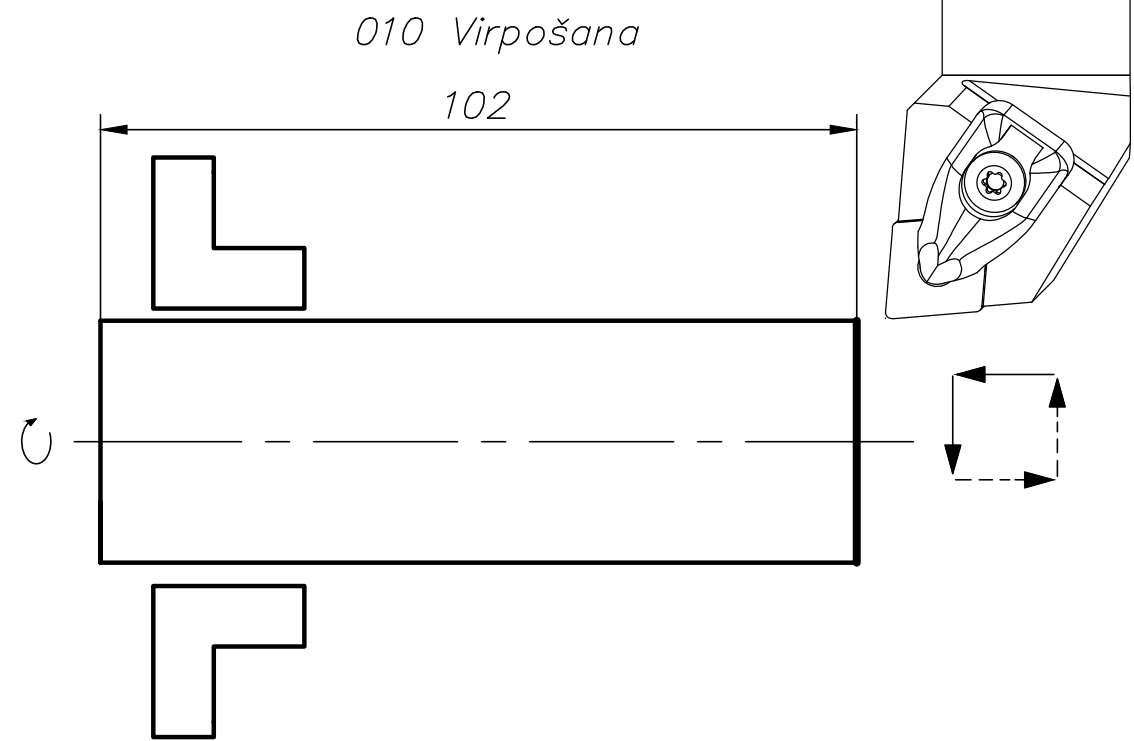


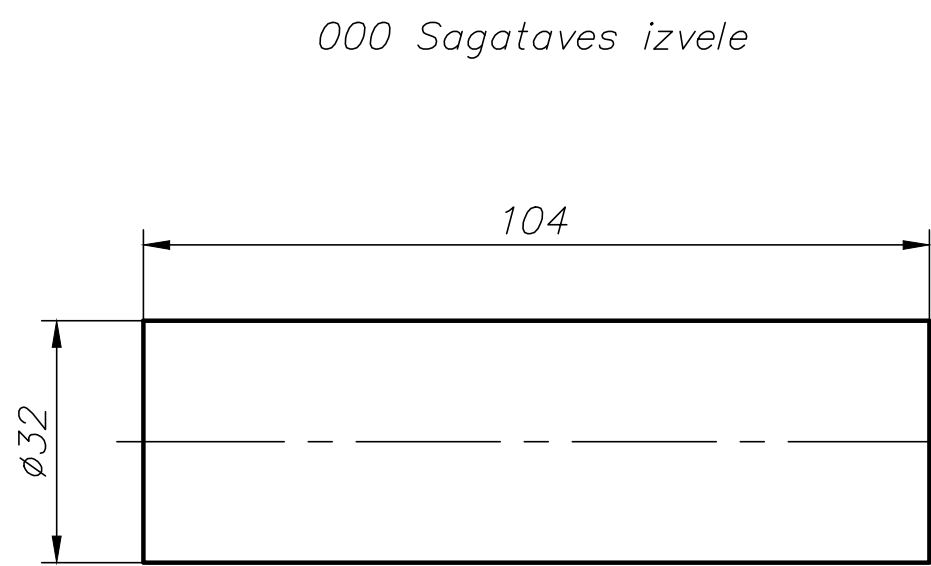



Pāreja	i	$n_{apgr/min}$	V_m/min	$f_{mm/apgr}$	$f_{a/mm}$	Instruments
Gala plevirpošana	1	3200	321,5	0,30	2,0	DCLMP 2520M 12 + CNC12 120408-PM 4425

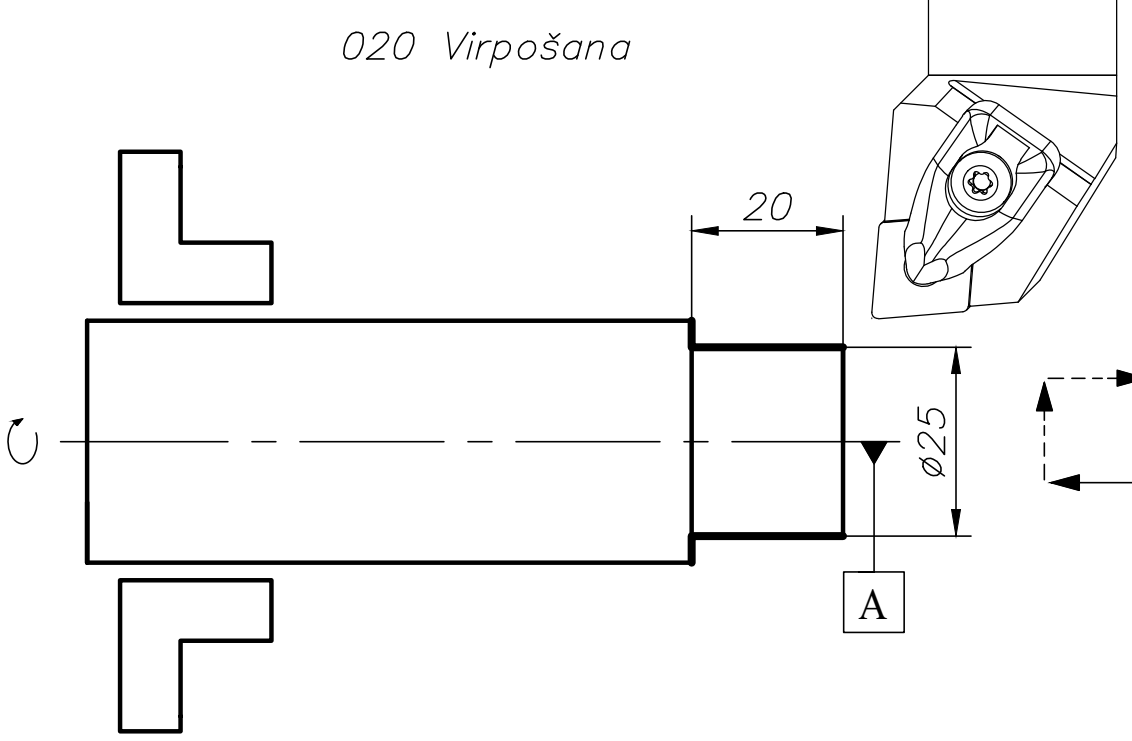


Pāreja	i	$n_{apgr/min}$	V_m/min	$f_{mm/apgr}$	$f_{a/mm}$	Instruments
Rūpja virpošana $\varnothing 32 \rightarrow \varnothing 26$	1	2500	249,1	0,40	3,0	DCLMP 2520M 12 + CNC12 120408-PM 4425
Tīra virpošana $\varnothing 26 \rightarrow S \varnothing 25$	1	4800	391,9	0,20	0,5	DCLMP 2520M 16 + CNC12 1204 16-PM 4415

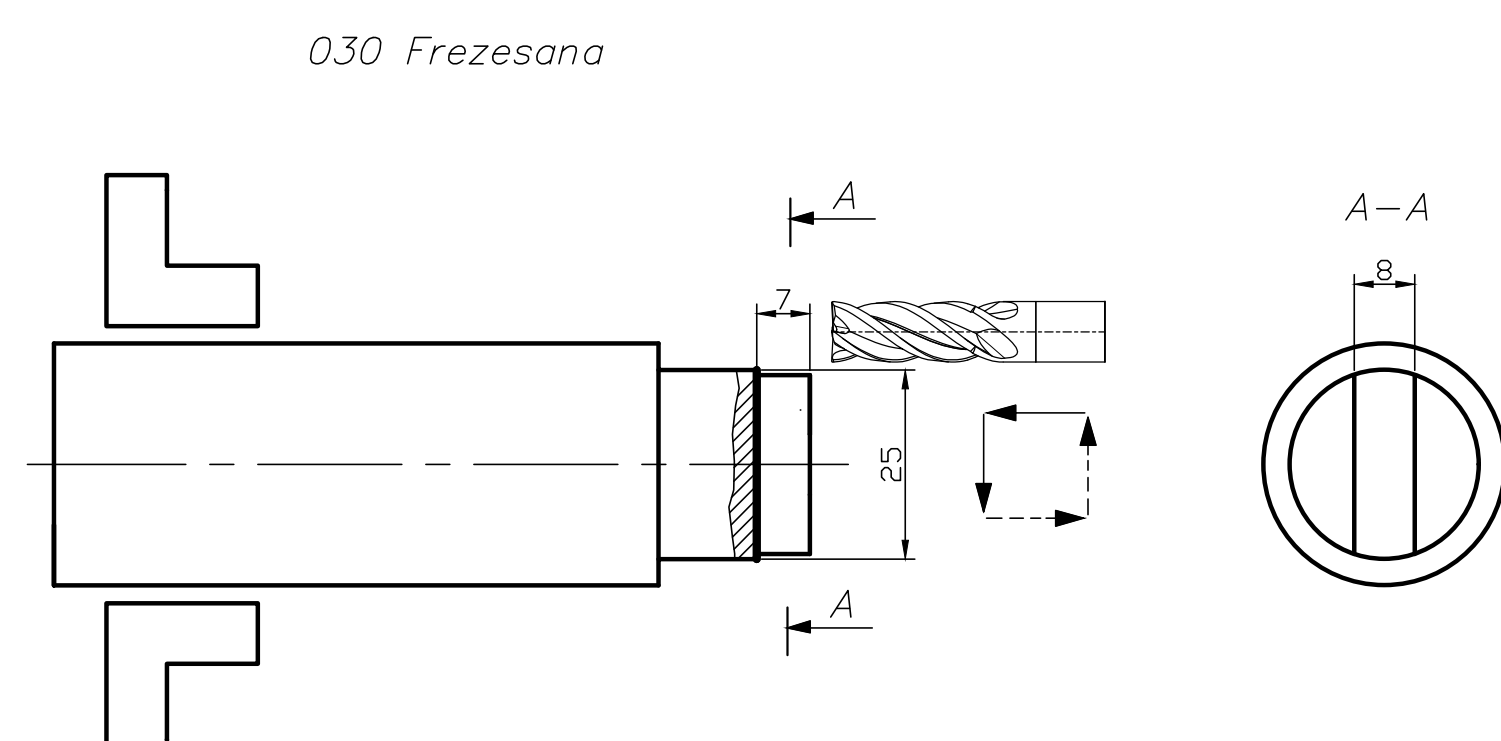


Pāreja	i	$n_{apgr/min}$	V_m/min	$f_{mm/apgr}$	$f_{a/mm}$	Instruments
Rievos frezesana $8 \times 17 \times 25$	3	3600	90,5	540	2,5	Corwin Plus SP342-0802 80

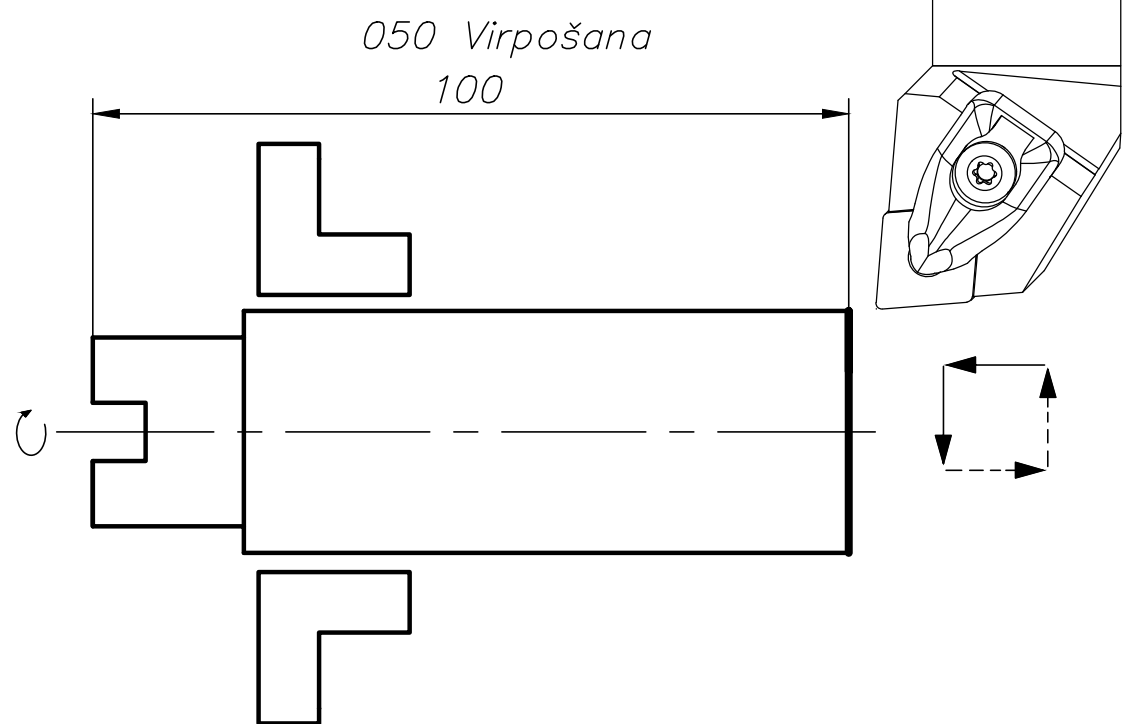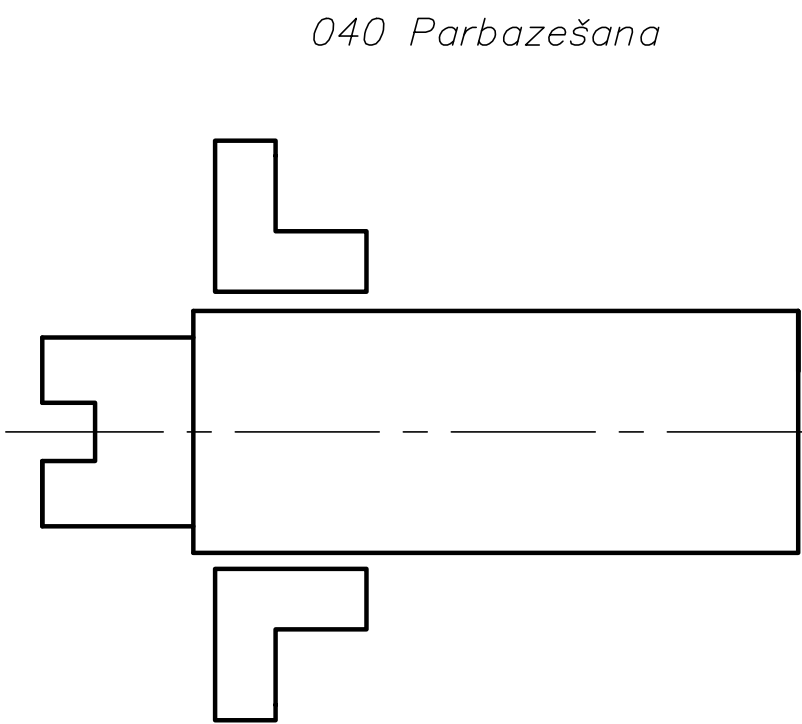


Pāreja	i	$n_{apgr/min}$	V_m/min	$f_{mm/apgr}$	$f_{a/mm}$	Instruments
Gala plevirpošana	1	3200	321,5	0,30	2,0	DCLMP 2520M 12 + CNC12 120408-PM 4425

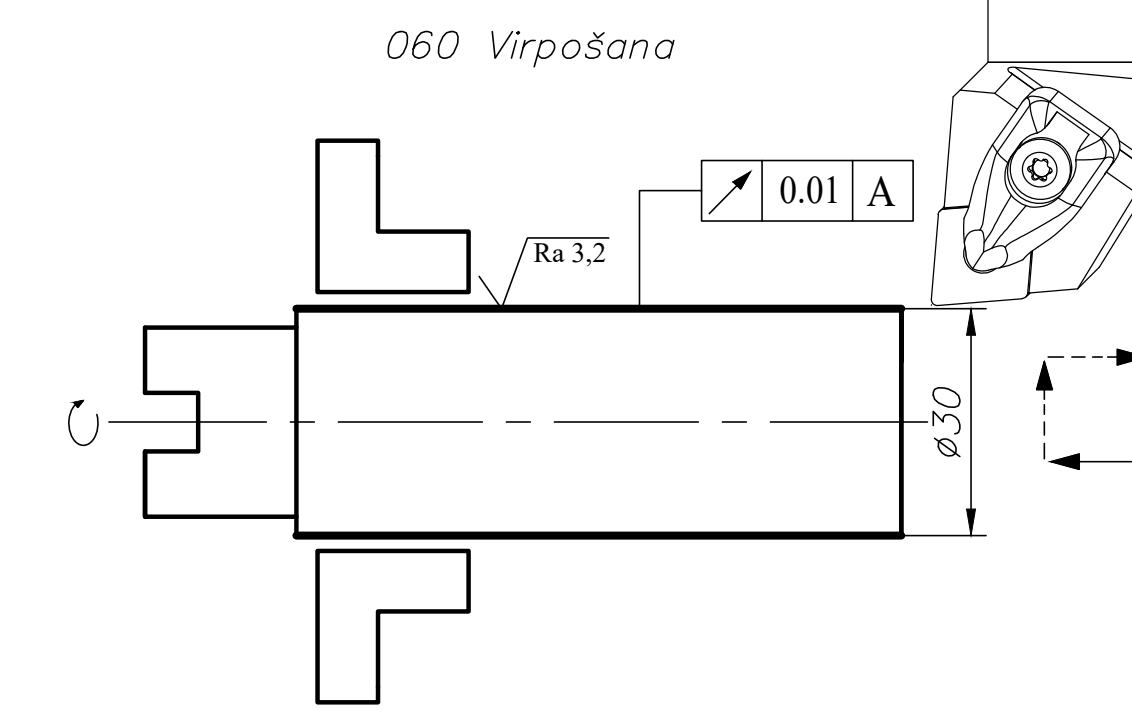


Pāreja	i	$n_{apgr/min}$	V_m/min	$f_{mm/apgr}$	$f_{a/mm}$	Instruments
Virpošana $\varnothing 32 \rightarrow \varnothing 30$	1	3200	321,5	0,30	1,0	DCLMP 2520M 12 + CNC12 120408-PM 4425

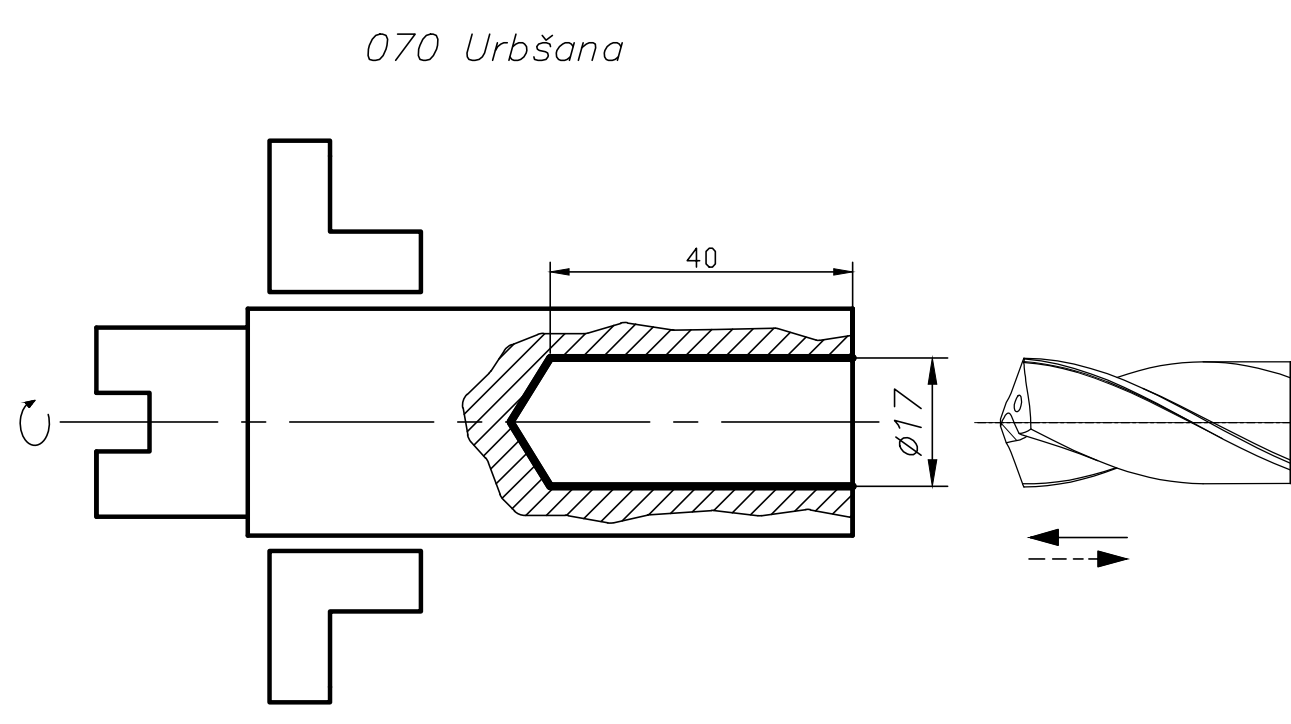


Pāreja	i	$n_{apgr/min}$	V_m/min	$f_{mm/apgr}$	$f_{a/mm}$	Instruments
Urbšana $\varnothing 17$	3	425	22,7	0,30	8,5	Corwin 860-QM 817

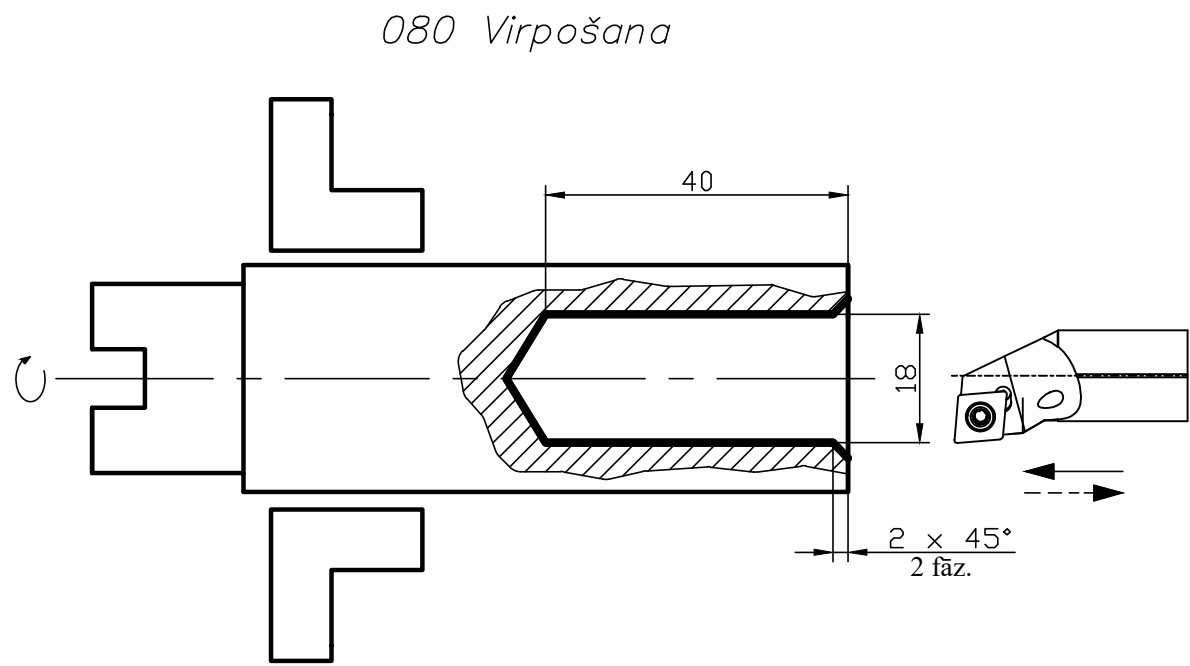


Pāreja	i	$n_{apgr/min}$	V_m/min	$f_{mm/apgr}$	$f_{a/mm}$	Instruments
Urbuma novirpošana $\varnothing 18$	1	5000	267,0	0,15	0,5	COMT 0813 12-PM

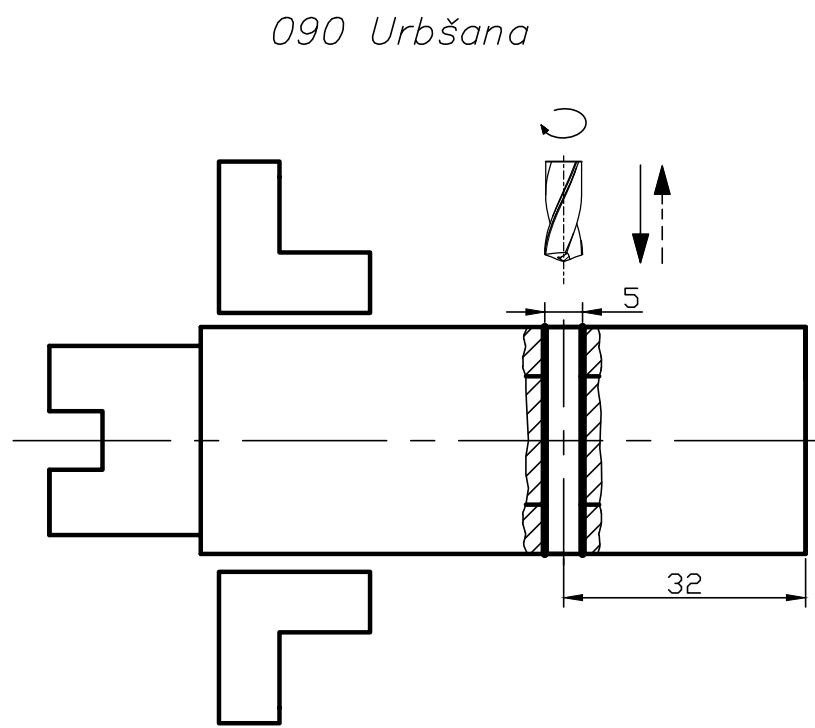

Pāreja	i	$n_{apgr/min}$	V_m/min	$f_{mm/apgr}$	$f_{a/mm}$	Instruments
Urbšana $\varnothing 5$	1	2400	37,7	0,08	2,5	Corwin 860-QM 85

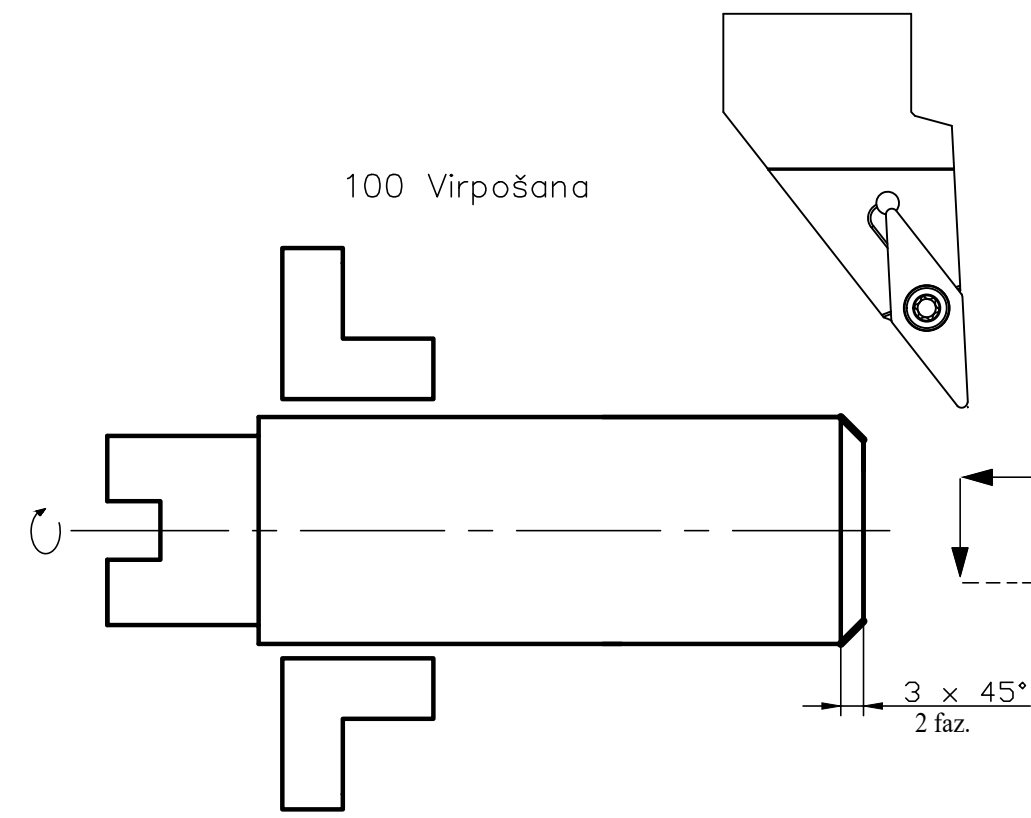

Pāreja	i	$n_{apgr/min}$	V_m/min	$f_{mm/apgr}$	$f_{a/mm}$	Instruments
Pāzēšana $\varnothing 5$	2	3200	320	0,15	3,0	SVAMP 2520M 16

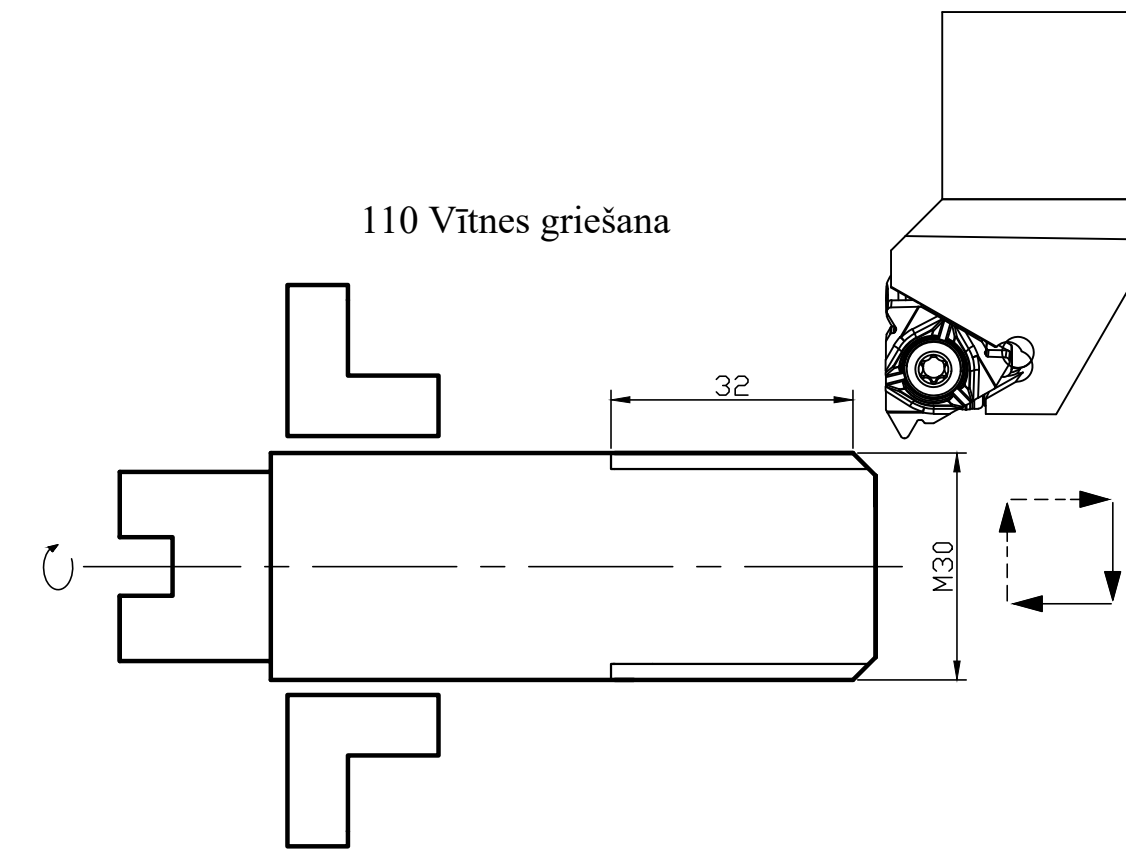

Pāreja	i	$n_{apgr/min}$	V_m/min	$f_{mm/apgr}$	$f_{a/mm}$	Instruments
Vītnes griešana M30	8	482	45	3,5	2,15	266R1-220M1250M 1120

						ME.001.00.001	
						Detaļa 4.7	Projekcijas metode Merogs
						Tērauds C45	1:1
							Lapa Lapas
							RTU RMCE01