Lab 5: Processor Design

1 Introduction

A processor is a digital circuit that executes instructions that are stored in memory. In lab 4, you used the Nios II processor to execute code as well as to control peripherals such as memory and the floating point multiplier.

In this lab, you will design and build your own processor that uses the base RISC-V instruction set (RV32I). You will be provided with a specification of this Instruction Set Architecture (ISA) and an external signal interface. Your task will be to implement the processor as a set of Verilog/SystemVerilog modules according to these specifications. You will *not* be required to synthesize your processor with Quartus Prime on the DE1-SoC board in this lab but your code should still be synthesizable¹. Instead, you will simulate it in a provided ModelSim testbench, which will contain a (simulated) memory block holding the program code for the processor to execute. The source code and assembled hex files for several small programs will be available, which you can use to test your processor, along with an assembler that can compile these and other programs.

2 Processor Architecture

2.1 Registers

Figure 1: The processor's registers

Like the Nios II, the processor you are building has registers, instructions, and a datapath that are 32 bits wide. Figure 1 shows an overview of the set of programmer-visible registers. There are 32 32-bit general-purpose registers namely x0-x31 that can be directly manipulated by instructions. Register x0 however is always zero.


The Program Counter (PC) register contains the *byte address* of the currently executing instruction, and is always an even number (the lowest bit is 0). The PC should automatically increment by 4 after each executed instruction unless the instruction is a jump or taken branch which adds an immediate value to the PC.

2.2 Instruction Set

In the base RV32I ISA, there are six core instruction formats (R/I/S/B/U/J), as shown in Table 1. All are a fixed 32 bits in length and must be aligned on a four-byte (32-bits) boundary in memory. Each of the formats corresponds to different types of instructions. All instructions of the same format share the same encoding with regard to the placement of their values in the 32 bits.

For simplicity in the decoding process, the opcode is in the same place [6:0] across all formats. The same is true for the source (rs1, rs2) and destination (rd) operands in the formats that use them. Operands rd, rs1 and rs2 are *placeholders* for the *names* of one of the 32 general-purpose registers (i.e. if rs1 is 00001 then

¹You will use your code for lab 7 as well, where you will be required to synthesize it.

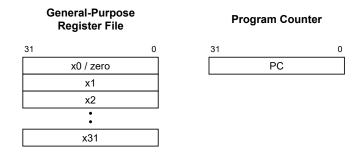

ood 78763

Figure 1: The processor's registers.

it refers to register x1). The funct3 and funct7 values serve the purpose of differentiating instructions that have the same opcode.

Immediate values. The place of the immediate value (imm) differs across formats and may require some manipulation before it can be used. All immediate values are sign-extended to 32 bits.

													7011	
31	27	26	25	24	20	19	15	14	12	11	7	6	0	
	fun	ct7		rs	2	rs1		fun	ct3		rd	opco	ode	R-type
	imm[11:0]				rs1	fun	ct3		rd	opcode		I-type		
ir	imm[11:5] rs2		rs1		funct3		imm[4:0]		opco	ode	S-type			
imı	imm[12 10:5] rs2		rs1	fun	ct3	imm[4:1 11]		opco	ode	B-type				
imm[31:12]									rd		opcode			
imm[20 10:1 11 19:12]									rd	opco	ode	J-type		

Table 1: Instruction Formats

Table 2¹ lists the 37 instructions that the processor can understand and execute². The first column is the **instruction** itself, while the second column is its **name**. The third and fourth columns give the instruction **format** and the **opcode** respectively. The fifth and sixth columns show the **funct3** and **funct7** values. You can see that funct3 values repeat across instructions belonging to different formats, but are unique for sameformat ones. The second-to-last column provides a **description** of the operation performed by the instruction. The last column provides **notes** about converting the result of specific instructions to 32 bits (e.g., a Load Half Unsigned instruction loads a 16-bit value from memory but is padded with zeroes in the upper 16 bits so as to create a 32-bit value).

As an example, the word 000000000001|00101|000|00111|000|00111 (hex 0x00128393) decodes to 'addi x7, x5, 0x001', and would add the immediate value 0x00000001 to the value in register x5 and store the result in register x7. The rest of this section describes the instructions in more detail.

2.2.1 Arithmetic Instructions

There are ten arithmetic instructions (add sub xor or and sll srl sra slt sltu) that use register values as operands and their equivalents that substitute one register with an immediate value, resulting in a total of nineteen instructions (there is no subi instruction). These are the only instructions that make use of the funct7 value to differentiate among them. The result of these instructions is stored in a destination register (rd). You should be **careful** when implementing the different shift instructions, especially the distinction between logical shift and arithmetic shift. The sll(i) instruction is a logical left shift (zeros are shifted into the lower bits); srl(i) is a logical right shift (zeros are shifted into the upper bits); and sra(i) is an

¹RISC-V Card source

²The full RV32I instruction set includes three other instructions (fence ecall ebreak) which you do **not** need to implement.

							12 N 1	
	Inst	Name	FMT	0pcode	funct3	funct7	Description	Note
- 8	add	ADD	R	0110011	0x0	0x00	rd = rs1 + rs2	
	sub	SUB	R	0110011	0x0	0x20	rd = rs1 - rs2	
	xor	XOR	R	0110011	0x4	0x00	rd = rs1 ^ rs2	
	or	OR	R	0110011	0x6	0x00	rd = rs1 rs2	
	and	AND	R	0110011	0x7	0x00	rd = rs1 & rs2	
	sll	Shift Left Logical	R	0110011	0x1 🥕	0x00	rd = rs1 << rs2[4:0]	
	srl	Shift Right Logical	R	0110011	0x5	0x00	rd = rs1 >> rs2[4:0]	
	sra	Shift Right Arithmetic	R	0110011	0x5	0x20	rd = rs1 >> rs2[4:0]	msb-extends
	slt	Set Less Than	R	0110011	0x2 🥕	0x00	rd = (rs1 < rs2) ? 1 : 0	
	sltu	Set Less Than (U)	R	0110011	0x3 🖊	0x00	rd = (rs1 < rs2) ? 1 : 0	zero-extends
	addi	ADD Immediate	I	0010011	0x0		ro = rs1 + imm	
	xori	XOR Immediate	I	0010011	0x4 /		rd = rs1 ^ imm	
	ori	OR Immediate	I	0010011	0x6 🖊		rd = rs1 imm	
	andi	AND Immediate	I	0010011	0x7 🖊		rd = rs1 & imm	
V	slli	Shift Left Logical Imm	I	0010011	0x1	imm[11:5]=0x00	rd = rs1 << imm[4:0]	
•	srli	Shift Right Logical Imm	I	0010011	0x5	imm[11:5]=0x00	rd = rs1 >> imm[4:0]	
	srai	Shift Right Arithmetic Imm	I	0010011	0x5	imm[11:5]=0x20	rd = rs1 >> imm[4:0]	msb-extends
	slti	Set Less Than Imm	I	0010011	0x2		rd = (rs1 < imm)?1:0	
	sltiu	Set Less Than Imm (U)	I	0010011	0x3		rd = (rs1 < imm)?1:0	zero-extends
	lb	Load Byte	I	0000011	0x0		rd = M[rs1+imm][7:0]	
	lh	Load Half	I	0000011	0x1		rd = M[rs1+imm][15:0]	
	lw	Load Word	I	0000011	0x2		rd = M[rs1+imm][31:0]	
	lbu	Load Byte (U)	I	0000011	0x4		rd = M[rs1+imm][7:0]	zero-extends
	1hu	Load Half (U)	I	0000011	0x5		rd = M[rs1+imm][15:0]	zero-extends
	sb	Store Byte	S	0100011	0x0		Murs1+imm][7:0] = rs2[7:0]	
	sh	Store Half	S	0100011	0x1		M[rs1+imm][15:0] = rs2[15:0]	
	SW	Store Word	S	0100011	0x2		M[rs1+imm][31:0] = rs2[31:0]	
	lui	Load Upper Immediate	U	0110111			M = imm << 12	
J	auipc	Add Upper Imm to PC	U	0010111			rd = PC + (imm << 12)	
	beq	Branch ==	В	1100011	0x0		PC = (rs1 == rs2) ? PC+imm : PC+4	
	bne	Branch !=	В	1100011	0x1		PC = (rs1 != rs2) ? PC+imm : PC+4	
	blt	Branch <	В	1100011	0x4		PC = (rs1 < rs2) ? PC+imm : PC+4	
V	bge	Branch ≥	В	1100011	0x5		$PC = (rs1 \ge rs2) ? PC+imm : PC+4$	
	bltu	Branch < (U)	В	1100011	0x6		PC = (rs1 < rs2) ? PC+imm : PC+4	zero-extends
<u>.</u> [bgeu	Branch \geq (U)	В	1100011	0x7		PC = (rs1 >= rs2) ? PC+imm : PC+4	zero-extends
	jal	Jump And Link	J	1101111			rd = PC+4; PC += imm	
, [jalr	Jump And Link Reg	I	1100111	0x0		rd = PC+4; $PC = rs1 + imm$	

Table 2: Base Integer Instructions

arithmetic right shift (the original sign bit is copied into the vacated upper bits). Lastly, note that the slt(i) and slt(i)u store a 1 or a 0 in the destination register depending on the result of the comparison of the first source operand to either the second source operand or an immediate value. The difference between them is that slt(i)u assumes that the values are always unsigned (the immediate is sign extended as normal before being treated as unsigned).

2.2.2 Loads and Stores

The load (1b 1h 1w 1bu 1hu) and store (sb sh sw) instructions transfer a value between the registers and memory. Loads are encoded in the I-type format and stores in the S-type. The effective address is obtained by adding register rs1 to the sign-extended 12-bit offset. Loads copy a value from memory to register rd. Stores copy the value in register rs2 to memory. Important: be careful when copying values that are less than 32-bit long. Depending on the instruction you may need to either sign-extend (e.g., 1h) or zero-extend them (e.g., 1hu).

2.2.3 LUI and AUIPC

The lui instruction does **not** access memory. It uses the U-type format. LUI places the U-immediate value in the top 20 bits of the destination register rd, filling the lowest 12 bits with zeros.

The auipc instruction (add upper immediate to PC) is used to build PC-relative addresses and uses the U-type format. It forms a 32-bit offset by combining the 20-bit U-immediate with 12 trailing zero bits and adds this offset to the address of itself. The result of this is stored in register rd. It does **not** modify the PC.

2.2.4 Control Flow Instructions

The last eight instructions in Table 2 change the value of the PC and thus alter the control flow of the program. All branch instructions use the B-type instruction format. They compare the two source registers (rs1 and rs2) and depending on the result and the specific branch instruction they either increment the PC by 4 or they add the immediate value to the PC. For example, **beq** branches only when the values of rs1 and rs2 match. The 12-bit B-immediate encodes signed offsets. The offset is sign-extended and added to the address of the branch instruction to give the target address.

The jump and link (JAL) instruction uses the J-type format, where the J-immediate encodes a signed offset. The offset is sign-extended and added to the address of the jump instruction to form the jump target address. JAL stores the address of the instruction following the jump (PC+4) into register rd. The indirect jump instruction JALR (jump and link register) uses the I-type encoding. The target address is obtained by adding the sign-extended 12-bit I-immediate to the register rs1, then setting the least-significant bit of the result to zero. The address of the instruction following the jump (PC+4) is written to register rd.

2.3 Operation

Upon reset, the contents of registers PC and x0-x31 shall be set to 0. After coming out of reset, the processor will continue to execute instructions forever. This involves:

- 1. Fetching the 32-bit word from memory at address = PC.
- 2. Incrementing PC by 4 if the instruction is not a jump or taken branch.
- 3. Based on the encoding of the fetched 32-bit word, performing the corresponding operation(s) in Table 2.
- 4. Going back to step 1.

The number of cycles required to perform each step is an implementation detail, and up to you to decide. Some instructions, such as lw, may require an additional clock cycle(s) to complete. For this lab, it is recommended to only perform one step at a time, and to have only one instruction being executed at a time. A simple design can execute one instruction every 3 or 4 clock cycles. To simplify the processor's design, the behavior is *undefined* when trying to execute an instruction that does not exist in Table 2. You can do as you wish. Tip: In lab 7, you will be asked to pipeline the processor you design in this lab to have 4 stages. Thus you may want to design your processor with that in mind.

2.4 Signal Interface

Your processor can not work in isolation – it must be connected to a memory bus in order to fetch instructions and to access data (and in the next lab, I/O devices) via loads and stores. Table 3 lists the required signals. Your processor writes to memory by asserting address, writedata, and the write enable. For reads, read data will be returned to you one cycle after you assert address and the read enable. Take this timing into account when fetching instructions or performing loads.

Signal	Direction	Width	Description
clk	input	1	Clock
reset	input	1	Active-high reset
o_pc_addr	output	32	Address (in bytes)
o_pc_rd	output	1	PC Read enable
i_pc_rddata	input	32	PC Read data
o_ldst_addr	output	32	Address (in bytes)
o_ldst_rd	output	1	Load/Store Read enable
i_ldst_rddata	input	32	Load/Store Read data
o_ldst_wr	output	1	Load/Store Write enable
o_ldst_wrdata	output	32	Load/Store Write data
o_tb_regs	output	32 x 32	Register values

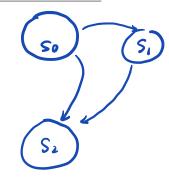


Table 3: Processor signal interface

3 Testing Your Processor

3.1 Testbench

Included with the starter kit is a SystemVerilog testbench (tb.sv) that instantiates your processor and connects it to a memory block. The memory block is initialized with a .hex file containing the machine code and data for a compiled program. Five programs are included but you can compile your own too. You can add other programs by modifying the PROGRAMS array. You select which of these programs to run by invoking the do_test function (with the index of the test in the PROGRAMS array) in the initial block at the bottom of the testbench file.

The testbench treats writes to certain memory addresses in a special way. When the program writes a value to address 0×1000 , the testbench will print out this number in the ModelSim console. When the program writes a value to address 0×1002 , the value is treated as a pointer to a null-terminated string, and the string is printed out.

3.2 Included Programs

Five programs are included to help you test all of the instructions of your processor. These are reduced versions of the programs that will be used to test the correctness of your implementation. Each has source code in a .s file, and an assembled version ready to be used by the testbench in a corresponding .hex file.

- **O_basic:** Contains a sequence of basic independent instructions. Try this one first.
- 1 arithdep: Contains A sequence of dependent arithmetic instructions.
- 2_branch_nottaken: This program tests conditional branches that are not taken.
- 3 branch taken: This program test branches, conditional or not, that are always taken.
- 4 memdep: This program test loads and stores from/to memory.

3.3 Writing Your Own Programs

We provide an assembler with the starter kit that can compile programs for your processor, written with the instruction set from Table 2. It outputs a .hex memory initialization file that can be used by Quartus Prime or ModelSim to initialize the contents of a Verilog memory block. The assembler comes with a README file that guides you through setting everything up and using it.

You are not required to write or submit your own programs, but keep in mind that the provided programs do not test all instructions and cases. The automarker will use additional programs that may test additional instructions so you are expected to test out all the instructions you implement.

4 Submission

To help you move forward in stages, this lab is split into three parts, with each part requiring you to implement a subset of the instructions presented in Table 2.

- Part 1: Implement the arithmetic instructions (first two sets in Table 2) along with lui and auipc. Your processor should be able to pass tests **0 basic** and **1 arithdep**. (2 marks)
- Part 2: Implement branch and jump instructions. Your processor should be able to pass tests 2_branch_nottaken and 3_branch_taken. (2 marks)
- Part 3: Implement load and store instructions. Your processor should be able to pass the 4_memdep test. (2 marks)

This is just a suggestion so feel free to implement as you see fit. For the automarker you can simply submit a single file which is your processor. All the test programs will be run for that processor.

Important: You do not need to implement three different versions of your processor. You can design a single processor and add functionality as you work on each new part. In the end you will submit just a single file for marking.

You will submit a single file with all your code using the following command: submitece342s 5 part1.sv

Frequently Asked Questions

In this section, questions from previous years have been collected and answered. Please check here first before posting a question on Piazza or Quercus.

Q1: Should we take care of overflows in the ADD/SUB instructions?

A1: No, you can just let them overflow. Commercial processors have a separate overflow flag for this, but you do not need to implement this.

Q2: Do we need to optimize this processor to use the minimum number of cycles possible?

A2: No. For this lab, your processor can be a single-stage multi-cycle processor.

RISC-V Assembler: Usage Instructions

Introduction

This document outlines using the RISC-V assembler to convert your own assembly files into HEX files that can be used with your CPU for labs 5 onwards.

The assembler is available in two formats: the python source code file you can run locally using a python3 compiler and an assembly file you can run on any windows machine (your own or on ECF).

This assembler is provided to you to help you test instructions which are not tested by the provided tester testbench programs. It is your responsibility to test out all the instructions shown in the lab handout. The automarker may test any of these instructions.

Usage

The assembler can be invoked using the following


assembler.exe [-h] [-o PATH] [-x] [-L N] input_file


The function of each flag is detailed below:

- h : displays help information on how to use the assembler.
- o : specifies the output file. If not provided, defaults to input file name + lab number.
- x : Skips including source line comments.
- L : Specifies the lab number. Allowed options: -L5 or -L7.

To familiarize yourself with the assembler, it is recommended that you first try to run one of the provided s files to generate the corresponding .hex file for your CPU.

1. Fetch Instrution

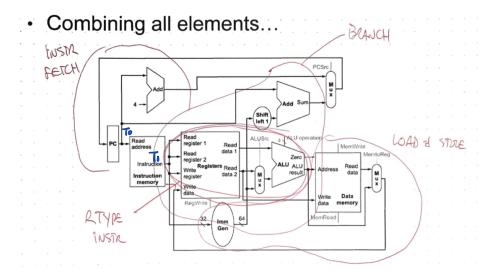

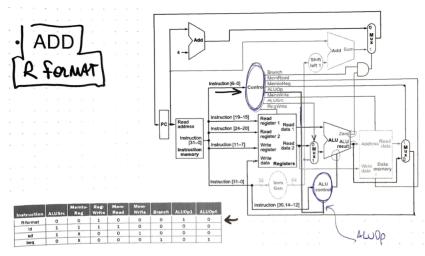

ECE342 - Computer Hardware


31	27	26	25	24	20	19	15	14	12	11	7	6	0	
funct7			rs	s2	rs1		funct3		rd		opcode		R-type	
	imm[11:0]			rs1	fun	ct3		rd	opcode		I-type			
ir	imm[11:5] rs2		rs1		fun	ct3	imm[4:0]		opcode		S-type			
imı	imm[12 10:5] rs2		rs1		fun	ct3	imm[4:1 11]		opco	ode	B-type			
	imm[31:12]								rd		opcode		U-type	
	i	mm	[20 1	10:1	11 19:1	2]				rd	opco	ode	J-type	

Table 1: Instruction Formats

The Edward S. Rogers Sr. Department of Electrical & Computer Engineering UNIVERSITY OF TORONTO

Datapath - RISC-V

Comments on Lab05

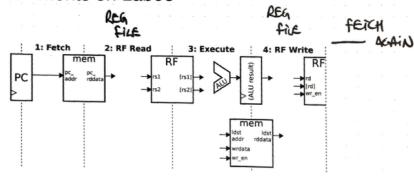

	31	27	26	25	24	20	19	15	14	12	11	7	6	0
	funct7			rs	2	rs1		funct3		rd		opcode		
imm[11:0]							rs1	fun	ct3		rd	opcode		
	imm[11:5]				rs	$\overline{2}$	rs1	fun	ct3	im	m[4:0]	opcode		
imm[12 10:5] rs2						<u> </u>	rs1	fun	ct3	imm	[4:1 11]	opcode		
imm[31:12]											rd	opcode		
	imm[20 10:1 11 19:12]											ode		

R-type I-type S-type B-type U-type J-type

ווווווו סעל

Table 1: Instruction Formats

1100100

3. Hex

$$\begin{array}{c}
x_{18} \longrightarrow -4 \\
x_{19} \longrightarrow -1 \\
x_{20} \longrightarrow 0 \\
x_{21} \longrightarrow \nu \\
x_{22} \longrightarrow \gamma \\
x_{29} \longrightarrow 0 + 1 \quad x_{18} == x_{19}? \\
x_{29} \longrightarrow +1
\end{array}$$