

Opentrons Python API V2 Documentation

Release 4.6.2

Opentrons Labworks

Oct 08, 2021

Contents

1	Getting Started				
2	Troubleshooting				
3	Overview 3.1 How it Looks	2 2 3			
4	Feature Requests	5			
5	5.4 Hardware Modules 5.5 Pipettes 5.6 Building Block Commands 5.7 Complex Commands 5.8 API Version 2 Reference 5.9 Examples	5 6 9 13 19 31 40 49 66 105 108			
Ру	ython Module Index	111			
In	ndex :	112			

The OT-2 Python Protocol API is a simple Python framework designed to make writing automated biology lab protocols easy.

We've designed it in a way we hope is accessible to anyone with basic Python and wetlab skills. As a bench scientist, you should be able to code your automated protocols in a way that reads like a lab notebook.

Version 2 of the API is a new way to write Python protocols. It is more reliable, simpler, and better able to be supported. Unlike version 1, it has support for new modules like the Thermocycler. While version 1 will still recieve bug fixes, new features and improvements will land in version 2. For a guide on transitioning your protocols from version 1 to version 2 of the API, see this article on migration¹. For a more in-depth discussion of why version 2 of the API was developed and what is different about it compared to version 1, see this article on why we wrote API V2².

1 Getting Started

New to Python? Check out our *Using Python For Protocols* (page 6) page first before continuing. To get a sense of the typical structure of our scripts, take a look at our *Examples* (page 105) page.

To simulate protocols on your laptop, check out *Simulating Your Scripts* (page 7). When you're ready to run your script on a robot, download our latest desktop app³.

2 Troubleshooting

If you encounter problems using our products please take a look at our support docs⁴ or contact our team via intercom on our website at opentrons.com⁵.

3 Overview

3.1 How it Looks

The design goal of this API is to make code readable and easy to understand. For example, below is a short set of instructions to transfer from well 'A1' to well 'B1' that even a computer could understand:

This protocol is by me; it's called Opentrons Protocol Tutorial and is used for demonstrating the OT-2 Python Protocol API. It uses version 2.0 of this API.

Begin the protocol

Add a 96 well plate, and place it in slot '2' of the robot deck

Add a 300 µL tip rack, and place it in slot '1' of the robot deck

Add a single-channel 300 µL pipette to the left mount, and tell it to use that tip rack

Transfer 100 µL from the plate's 'A1' well to its 'B2' well

If we were to rewrite this with the Python Protocol API, it would look like the following:

¹ http://support.opentrons.com/en/articles/3425727-switching-your-protocols-from-api-version-1-to-version-2

² http://support.opentrons.com/en/articles/3418212-opentrons-protocol-api-version-2

³ https://www.opentrons.com/ot-app

⁴ https://support.opentrons.com/en/

⁵ https://opentrons.com

```
from opentrons import protocol_api
# metadata
metadata = {
    'protocolName': 'My Protocol',
    'author': 'Name <email@address.com>',
    'description': 'Simple protocol to get started using OT2',
    'apiLevel': '2.11'
# protocol run function. the part after the colon lets your editor know
# where to look for autocomplete suggestions
def run(protocol: protocol_api.ProtocolContext):
    # labware
   plate = protocol.load_labware('corning_96_wellplate_360ul_flat', '2')
   tiprack = protocol.load_labware('opentrons_96_tiprack_300ul', '1')
    # pipettes
   left_pipette = protocol.load_instrument(
         'p300_single', 'left', tip_racks=[tiprack])
    # commands
   left_pipette.pick_up_tip()
   left_pipette.aspirate(100, plate['A1'])
    left_pipette.dispense(100, plate['B2'])
    left_pipette.drop_tip()
```

3.2 How it's Organized

When writing protocols using the Python Protocol API, there are generally five sections:

- 1) Metadata and Version Selection
- 2) Run function
- 3) Labware
- 4) Pipettes
- 5) Commands

Metadata and Version Selection

Metadata is a dictionary of data that is read by the server and returned to client applications (such as the Opentrons App). Most metadata is not needed to run a protocol, but if present can help the Opentrons App display additional data about the protocol currently being executed. These optional (but recommended) fields are ("protocolName", "author", and "description").

The required element of the metadata is "apilevel". This must contain a string specifying the major and minor version of the Python Protocol API that your protocol is designed for. For instance, a protocol written for version 2.0 of the Python Protocol API (only launch version of the Protocol API should have in its metadata "apilevel": "2.0".

For more information on Python Protocol API versioning, see Versioning (page 9).

The Run Function and the Protocol Context

Protocols are structured around a function called run (protocol), defined in code like this:

```
from opentrons import protocol_api

metadata = { 'apiLevel': '2.11'}

def run(protocol: protocol_api.ProtocolContext):
    pass
```

This function must be named exactly run and must take exactly one mandatory argument (its name doesn't matter, but we recommend protocol since this argument represents the protocol that the robot will execute).

The function run is the container for the code that defines your protocol.

The object protocol is the *protocol context*, which represents the robot and its capabilities. It is always an instance of the <code>opentrons.protocol_api.contexts.ProtocolContext</code> (page 67) class (though you'll never have to instantiate one yourself - it is always passed in to run()), and it is tagged as such in the example protocol to allow most editors to give you autocomplete.

The protocol context has two responsibilities:

- 1) Remember, track, and check the robot's state
- 2) Expose the functions that make the robot execute actions

The protocol context plays the same role as the robot, labware, instruments, and modules objects in past versions of the API, with one important difference: it is only one object; and because it is passed in to your protocol rather than imported, it is possible for the API to be much more rigorous about separating simulation from reality.

The key point is that there is no longer any need to import opentrons at the top of every protocol, since the *robot* now *runs the protocol*, rather than the *protocol running the robot*. The example protocol imports the definition of the protocol context to provide editors with autocomplete sources.

Labware

The next step is defining the labware required for your protocol. You must tell the protocol context about what should be present on the deck, and where. You tell the protocol context about labware by calling the method protocol. load_labware(name, slot) and saving the result.

The name of a labware is a string that is different for each kind of labware. You can look up labware to add to your protocol on the Opentrons Labware Library⁶.

The slot is the labelled location on the deck in which you've placed the labware. The available slots are numbered from 1-11.

Our example protocol above loads

• a Corning 96 Well Plate⁷ in slot 2:

```
plate = protocol.load_labware('corning_96_wellplate_360ul_flat', 2)
```

• an Opentrons 300µL Tiprack⁸ in slot 1:

```
tiprack = protocol.load_labware('opentrons_96_tiprack_300ul', 1)
```

⁶ https://labware.opentrons.com

⁷ https://labware.opentrons.com/corning_96_wellplate_360ul_flat

⁸ https://labware.opentrons.com/opentrons_96_tiprack_300ul

These labware can be referenced later in the protocol as plate and tiprack respectively. Check out the Python docs⁹ for further clarification on using variables effectively in your code.

You can find more information about handling labware in the *Labware* (page 13) section.

Pipettes

After defining labware, you define the instruments required for your protocol. You tell the protocol context about which pipettes should be attached, and which slot they should be attached to, by calling the method protocol. load_instrument(model, mount, tip_racks) and saving the result.

The model of the pipette is the kind of pipette that should be attached; the mount is either "left" or "right"; and tip_racks is a list of the objects representing tip racks that this instrument should use. Specifying tip_racks is optional, but if you don't then you'll have to manually specify where the instrument should pick up tips from every time you try and pick up a tip.

See *Pipettes* (page 31) for more information on creating and working with pipettes.

Our example protocol above loads a P300 Single-channel pipette ('p300_single') in the left mount ('left'), and uses the Opentrons 300 µL tiprack we loaded previously as a source of tips (tip_racks=[tiprack]).

Commands

Once the instruments and labware required for the protocol are defined, the next step is to define the commands that make up the protocol. The most common commands are <code>aspirate()</code>, <code>dispense()</code>, <code>pick_up_tip()</code>, and <code>drop_tip()</code>. These and many others are described in the <code>Building Block Commands</code> (page 40) and <code>Complex Commands</code> (page 49) sections, which go into more detail about the commands and how they work. These commands typically specify which wells of which labware to interact with, using the labware you defined earlier, and are methods of the instruments you created in the pipette section. For instance, in our example protocol, you use the pipette you defined to:

- 1) Pick up a tip (implicitly from the tiprack you specified in slot 1 and assigned to the pipette): pipette. pick_up_tip()
- 2) Aspirate 100 μ L from well A1 of the 96 well plate you specified in slot 2: pipette.aspirate(100, plate['A1'])
- 3) Dispense 100 μ L into well A2 of the 96 well plate you specified in slot 2: pipette.dispense(100, plate['A2'])
- 4) Drop the tip (implicitly into the trash at the back right of the robot's deck): pipette.drop_tip()

4 Feature Requests

Have an interesting idea or improvement for our software? Create a ticket on GitHub by following these guidelines. 10

5 Developer's guide

Do you want to contribute to our open-source API? You can find more information on how to be involved here. 11

⁹ https://docs.python.org/3/index.html

¹⁰ https://github.com/Opentrons/opentrons/blob/edge/CONTRIBUTING.md#opening-issues

¹¹ https://github.com/Opentrons/opentrons/blob/edge/CONTRIBUTING.md

5.1 Using Python For Protocols

Writing protocols in Python requires some up-front design before seeing your liquid handling automation in action. At a high-level, writing protocols with the OT-2 Python Protocol API looks like:

- 1) Write a Python protocol
- 2) Test the code for errors
- 3) Repeat steps 1 & 2
- 4) Calibrate labware on your OT-2
- 5) Run your protocol

These sets of documents aim to help you get the most out of steps 1 & 2, the "design" stage.

Python for Beginners

If Python is new to you, we suggest going through a few simple tutorials to acquire a base understanding to build upon. The following tutorials are a great starting point for working with the Protocol API (from learnpython.org 12):

- 1) Hello World¹³
- 2) Variables and Types¹⁴
- 3) Lists¹⁵
- 4) Basic Operators¹⁶
- 5) Conditions¹⁷
- 6) Loops¹⁸
- 7) Functions¹⁹
- 8) Dictionaries²⁰

After going through the above tutorials, you should have enough of an understanding of Python to work with the Protocol API and start designing your experiments! More detailed information on Python can always be found at the Python docs²¹

Working with Python

Using a popular and free code editor, like Visual Studio Code²², is a common method for writing Python protocols. Download onto your computer, and you can now write Python scripts.

¹² http://www.learnpython.org/

¹³ http://www.learnpython.org/en/Hello%2C_World%21

¹⁴ http://www.learnpython.org/en/Variables_and_Types

¹⁵ http://www.learnpython.org/en/Lists

¹⁶ http://www.learnpython.org/en/Basic_Operators

¹⁷ http://www.learnpython.org/en/Conditions

¹⁸ http://www.learnpython.org/en/Loops

¹⁹ http://www.learnpython.org/en/Functions

²⁰ http://www.learnpython.org/en/Dictionaries

²¹ https://docs.python.org/3/index.html

²² https://code.visualstudio.com/

Note: Make sure that when saving a protocol file, it ends with the .py file extension. This will ensure the Opentrons App and other programs are able to properly read it.

For example, my_protocol.py

Simulating Python Protocols

In general, the best way to simulate a protocol is to simply upload it to your OT-2 through the Opentrons App. When you upload a protocol via the app, the OT-2 simulates the protocol and the app displays any errors. However, if you want to simulate protocols without being connected to an OT-2, you can download the Opentrons Python package.

Installing

To install the Opentrons package, you must install it from Python's package manager, *pip*. The exact method of installation is slightly different depending on whether you use Jupyter on your computer (note: you do not need to do this if you want to use the *Robot's Jupyter Notebook* (page 9), ONLY for your locally-installed notebook) or not.

Non-Jupyter Installation

First, install Python 3.7.6 (Windows x64²³, Windows x86²⁴, OS X²⁵) or higher on your local computer.

Once the installer is done, make sure that Python is properly installed by opening a terminal and doing python --version. If this is not higher than 3.7.6, you have another version of Python installed; this happens frequently on OS X and sometimes on Windows. We recommend using a tool like pyenv²⁶ to manage multiple Python versions. This is particularly useful on OS X, which has a built-in install of Python 2.7 that should not be removed.

Once Python is installed, install the opentrons package²⁷ using pip:

```
$ pip install opentrons
```

You should see some output that ends with Successfully installed opentrons-4.6.2.

Jupyter Installation

You must make sure that you install the opentrons package for whichever kernel and virtual environment the notebook is using. A generally good way to do this is

```
>>> import sys
>>> !sys.executable -m pip install opentrons
```

Simulating Your Scripts

From the Command Line

Once the Opentrons Python package is installed, you can simulate protocols in your terminal using the opentrons_simulate command:

²³ https://www.python.org/ftp/python/3.7.6/python-3.7.6-amd64.exe

²⁴ https://www.python.org/ftp/python/3.7.6/python-3.7.6.exe

²⁵ https://www.python.org/ftp/python/3.7.6/python-3.7.6-macosx10.6.pkg

²⁶ https://github.com/pyenv/pyenv

²⁷ https://pypi.org/project/opentrons/

```
$ opentrons_simulate.exe my_protocol.py
or, on OS X or Linux,
$ opentrons_simulate my_protocol.py
```

The simulator will print out a log of the actions the protocol will cause, similar to the Opentrons App; it will also print out any log messages caused by a given command next to that list of actions. If there is a problem with the protocol, the simulation will stop and the error will be printed.

The simulation script can also be invoked through python:

```
$ python -m opentrons.simulate /path/to/protocol
```

opentrons_simulate has several command line options that might be useful. Most options are explained below, but to see all options you can run

```
$ opentrons_simulate --help
```

Using Custom Labware

By default, opentrons_simulate will load custom labware definitions from the directory in which you run it. You can change the directory opentrons_simulate searches for custom labware with the --custom-labware-path option:

```
python.exe -m opentrons.simulate --custom-labware-path="C:\Custom Labware"
```

In the Python Shell

The Opentrons Python package also provides an entrypoint to use the Opentrons simulation package from other Python contexts such as an interactive prompt or Jupyter. To simulate a protocol in Python, open a file containing a protocol and pass it to <code>opentrons.simulate.simulate()</code> (page 103):

```
from opentrons.simulate import simulate, format_runlog
# read the file
protocol_file = open('/path/to/protocol.py')
# simulate() the protocol, keeping the runlog
runlog, _bundle = simulate(protocol_file)
# print the runlog
print(format_runlog(runlog))
```

The opentrons.simulate.simulate() (page 103) method does the work of simulating the protocol and returns the run log, which is a list of structured dictionaries. opentrons.simulate.format_runlog() (page 102) turns that list of dictionaries into a human readable string, which is then printed out. For more information on the protocol simulator, see *Simulating Your Scripts* (page 7).

Using Jupyter

In your Jupyter notebook, you can use the Python Protocol API simulator by doing

```
from opentrons import simulate
protocol = simulate.get_protocol_api('2.11')
p300 = protocol.load_instrument('p300_single', 'right')
# ...
```

The protocol object, which is an instance of *ProtocolContext* (page 67), is the same thing that gets passed to your protocol's run function, but set to simulate rather than control an OT-2. You can call all your protocol's functions on that object.

If you have a full protocol, wrapped inside a run function, defined in a Jupyter cell you can also use *opentrons*. simulate.simulate() (page 103) as described above to simulate the protocol.

These instructions also work on the OT-2's Jupyter notebook. This can also be used in the Python interactive shell.

Configuration and Local Storage

The Opentrons Python package uses a folder in your user directory as a place to store and read configuration and changes to its internal data. This location is ~/.opentrons on Linux or OSX and C:\Users\%USERNAME%\.opentrons on Windows.

Robot's Jupyter Notebook

Your OT-2 also has a Jupyter notebook, which you can use to develop and execute protocols. For more information on how to execute protocols using the OT-2's Jupyter notebook, please see *Advanced Control* (page 108). To simulate protocols on the OT-2's Jupyter notebook, use the instructions above.

5.2 Versioning

The OT-2 Python Protocol API has its own versioning system, which is separated from the version of the OT-2 software or of the Opentrons App. This separation allows you to specify the Protocol Api version your protocol requires without being concerned with what OT-2 software versions it will work with, and allows Opentrons to version the Python Protocol API based only on changes that affect protocols.

The API is versioned with a major and minor version, expressed like this: major.minor. For instance, major version 2 and minor version 0 is written as 2.0. Versions are not decimal numbers. Major version 2 and minor version 10 is written as 2.10, while 2.1 means major version 2 and minor version 1.

Major and Minor Version

The major version of the API is increased whenever there are signficant structural or behavioral changes to protocols. For instance, major version 2 of the API was introduced because protocols must now have a run function that takes a protocol argument rather than importing the robot, instruments, and labware modules. A similar level of structural change would require a major version 3. Another major version bump would be if all of the default units switched to nanoliters instead of microliters (we won't do this, it's just an example). This major behavioral change would also require a major version 3.

The minor version of the API is increased whenever we add new functionality that might change the way a protocol is written, or when we want to make a behavior change to an aspect of the API but not the whole thing. For instance, if we added support for a new module, added an option for specifying volume units in the aspirate and dispense functions, or added a way to queue up actions from multiple different modules and execute them at the same time, we would increase the minor version of the API. Another minor version bump would be if we added automatic liquid level tracking, and the position at which the OT-2 aspirated from wells was now dynamic - some people might not want that change appearing suddenly in their well-tested protocol, so we would increase the minor version.

Expressing Versions

You must specify the API version you are targeting at the top of your Python protocol. This is done in the metadata block, using the key 'apiLevel':

```
from opentrons import protocol_api

metadata = {
    'apiLevel': '2.11',
    'author': 'A. Biologist'}

def run(protocol: protocol_api.ProtocolContext):
    pass
```

This key exists alongside the other elements of the metadata.

Version specification is required by the system. If you do not specify your target API version, you will not be able to simulate or run your protocol.

The version you specify determines the features and behaviors available to your protocol. For instance, if Opentrons adds the ability to set the volume units in a call to aspirate in version 2.1, then you must specify version 2.1 in your metadata. A protocol like this:

```
from opentrons import protocol_api

metadata = {
    'apiLevel': '2.0',
    'author': 'A. Biologist'}

def run(protocol: protocol_api.ProtocolContext):
    tiprack = protocol.load_labware('opentrons_96_tiprack_300ul', '1')
    plate = protocol.load_labware('corning_96_wellplate_380ul', '2')
    left = protocol.load_instrument('p300_single', 'left', tip_racks=[tiprack])

    left.pick_up_tip()
    left.aspirate(volume=50000, location=plate['Al'], units='nanoliters')
```

would cause an error, because the units argument is not present in API version 2.0. This protects you from accidentally using features not present in your specified API version, and keeps your protocol portable between API versions.

In general, you should closely consider what features you need in your protocol, and keep your specified API level as low as possible. This makes your protocol work on a wider range of OT-2 software versions.

Determining What Version Is Available

Since version 3.15.0 of the OT-2 software and Opentrons App, the maximum supported API level of your OT-2 is visible in the Information card in the Opentrons App for your OT-2.

This maximum supported API level is the highest API level you can specify in a protocol. If you upload a protocol that specifies a higher API level than the OT-2 software supports, the OT-2 cannot simulate or run your protocol.

Determining What Features Are In What Version

As you read the documentation on this site, you will notice that all documentation on features, function calls, available properties, and everything else about the Python Protocol API notes which API version it was introduced in. Keep this information in mind when specifying your protocol's API version. The version statement will look like this:

New in version 2.0.

API and OT-2 Software Versions

This table lists the correspondence between Protocol API versions and robot software versions.

API Version	Introduced In OT-2 Software
1.0	3.0.0
2.0	3.14.0
2.1	3.15.2
2.2	3.16.0
2.3	3.17.0
2.4	3.17.1
2.5	3.19.0
2.6	3.20.0
2.7	3.21.0
2.8	4.0.0
2.9	4.1.0
2.10	4.3.0
2.11	4.4.0

Changes in API Versions

Version 2.1

• When loading labware onto a module, you can now specify a label with the label parameter of MagneticModuleContext.load_labware() (page 95), TemperatureModuleContext.load_labware() (page 97), just like you can when loading labware onto the deck with ProtocolContext.load_labware() (page 69).

Version 2.2

- You should now specify magnetic module engage height using the height_from_base parameter, which specifies the height of the top of the magnet from the base of the labware. For more, see *Engage* (page 23).
- Return tip will now use pre-defined heights from hardware testing. For more information, see *Return Tip* (page 41).
- When using the return tip function, tips are no longer added back into the tip tracker. For more information, see *Return Tip* (page 41).

Version 2.3

- Magnetic Modules GEN2 and Temperature Modules GEN2 are now supported; you can load them with the names "magnetic module gen2" and "temperature module gen2", respectively
- All pipettes will return tips to tipracks from a higher position to avoid possible collisions
- During a *Mix* (page 45), the pipette will no longer move up to clear the liquid in between every dispense and following aspirate
- You can now access the temperature module's status via TemperatureModuleContext.status (page 93).

Version 2.4

- The following improvements were made to the *touch_tip* command:
 - The speed for touch_tip can now be lowered down to 1 mm/s
 - touch_tip no longer moves diagonally from the X direction -> Y direction
 - Takes into account geometry of the deck and modules

Version 2.5

- New *Utility Commands* (page 46) were added:
 - ProtocolContext.set_rail_lights() (page 72): turns robot rail lights on or off
 - ProtocolContext.rail_lights_on (page 72): describes whether or not the rail lights are on
 - ProtocolContext.door_closed (page 68): describes whether the robot door is closed

Version 2.6

- GEN2 Single pipettes now default to flow rates equivalent to 10 mm/s plunger speeds
 - Protocols that manually configure pipette flow rates will be unaffected
 - For a comparison between API Versions, see *Defaults* (page 37)

Version 2.7

• You can now move both pipettes simultaneously on the robot! See InstrumentContext.pair_with() (page 78) for further information on how to use this new feature.

Note: This feature is still under development.

• Calling InstrumentContext.has_tip() (page 77) will return whether a particular instrument has a tip attached or not.

Version 2.8

- You can now pass in a list of volumes to distribute and consolidate. See List of Volumes (page 59) for more information.
 - Passing in a zero volume to any Complex Commands (page 49) will result in no actions taken for aspirate or dispense
- Well.from_center_cartesian() (page 88) can be used to find a point within a well using normalized distance from the center in each axis.
 - Note that you will need to create a location object to use this function in a protocol. See Labware and Wells (page 83) for more information.
- You can now pass in a blowout location to transfer, distribute, and consolidate with the blowout_location parameter. See InstrumentContext.transfer() (page 82) for more detail!

Version 2.9

• You can now access certain geometry data regarding a labware's well via a Well Object. See *Well Properties* (page 18) for more information.

Version 2.10

• In Python protocols requesting API version 2.10, moving to the same well twice in a row with different pipettes no longer results in strange diagonal movements.

Version 2.11

In Python protocols requesting API version 2.11, attempting to aspirate from or dispense to tip racks will raise
an error.

Version 2.12

• ProtocolContext.resume () (page 72) has been deprecated.

5.3 Labware

When writing a protocol, you must inform the Protocol API about the labware you will be placing on the OT-2's deck.

When you load labware, you specify the name of the labware (e.g. 'corning_96_wellplate_360ul_flat'), and the slot on the OT-2's deck in which it will be placed (e.g. '2'). The first place to look for the names of labware should always be the Opentrons Labware Library²⁸, where Opentrons maintains a database of labware, their names in the API, what they look like, manufacturer part numbers, and more. In this example, we'll use 'corning_96_wellplate_360ul_flat' (an ANSI standard 96-well plate²⁹) and 'opentrons_96_tiprack_300ul' (the Opentrons standard 300 µL tiprack³⁰).

In the example given in the *Overview* (page 2) section, we loaded labware like this:

```
plate = protocol.load_labware('corning_96_wellplate_360ul_flat', '2')
tiprack = protocol.load_labware('opentrons_96_tiprack_300ul', '1')
```

which informed the protocol context that the deck contains a 300 µL tiprack in slot 1 and a 96 well plate in slot 2.

A third optional argument can be used to give the labware a nickname to be displayed in the Opentrons App.

Labware is loaded into a protocol using ProtocolContext.load_labware() (page 69), which returns opentrons.protocol_api.labware.Labware (page 83) object.

²⁸ https://labware.opentrons.com

²⁹ https://labware.opentrons.com/corning_96_wellplate_360ul_flat

³⁰ https://labware.opentrons.com/opentrons_96_tiprack_300ul

Finding Labware

Default Labware

The OT-2 has a set of labware well-supported by Opentrons defined internally. This set of labware is always available to protocols. This labware can be found on the Opentrons Labware Library³¹. You can copy the load names that should be passed to protocol.load_labware statements to get the correct definitions.

Custom Labware

If you have a piece of labware that is not in the Labware Library, you can create your own definition using the Opentrons Labware Creator³². Before using the Labware Creator, you should read the introduction article here³³.

Once you have created your labware and saved it as a .json file, you can add it to the Opentrons App by clicking "More" and then "Labware". Once you have added your labware to the Opentrons App, it will be available to all Python Protocol API version 2 protocols uploaded to your robot through that Opentrons App. If other people will be using this custom labware definition, they must also add it to their Opentrons App. You can find a support article about this custom labware process here³⁴.

Accessing Wells in Labware


Well Ordering

When writing a protocol, you will need to select which wells to transfer liquids to and from.

Rows of wells (see image below) on a labware are typically labeled with capital letters starting with 'A'; for instance, an 8x12 96 well plate will have rows 'A' through 'H'.

Columns of wells (see image below) on a labware are typically labeled with numerical indices starting with '1'; for instance, an 8x12 96 well plate will have columns '1' through '12'.

For all well accessing functions, the starting well will always be at the top left corner of the labware. The ending well will be in the bottom right, see the diagram below for further explanation.

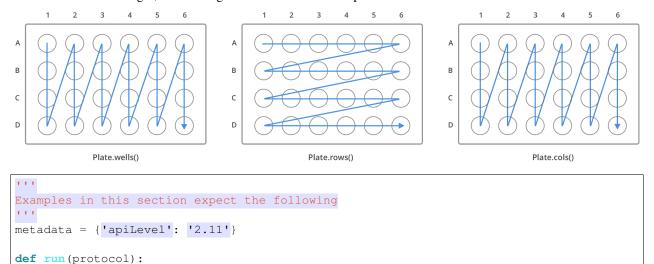

(continues on next page)

³¹ https://labware.opentrons.com

³² https://labware.opentrons.com/create/

³³ https://support.opentrons.com/en/articles/3136504-creating-custom-labware-definitions

³⁴ https://support.opentrons.com/en/articles/3136506-using-labware-in-your-protocols

```
plate = protocol.load_labware('corning_24_wellplate_3.4ml_flat', location='1')
```

New in version 2.0.

Accessor Methods

There are many different ways to access wells inside labware. Different methods are useful in different contexts. The table below lists out the methods available to access wells and their differences.

Method Name	Returns		
Labware.wells()	List of all wells, i.e. [labware:A1, labware:B1, labware:C1]		
(page 86)			
Labware.rows()	List of a list ordered by row, i.e [[labware:A1, labware:A2],		
(page 86)	[labware:B1, labware:B2]]		
Labware.columns()	List of a list ordered by column, i.e. [[labware:A1, labware:B1],		
(page 84)	[labware:A2, labware:B2]]		
Labware.	Dictionary with well names as keys, i.e. {'Al': labware:Al, 'Bl':		
wells_by_name()	labware:B1}		
(page 87)			
Labware.	Dictionary with row names as keys, i.e. {'A': [labware:A1,		
rows_by_name()	labware:A2], 'B': [labware:B1, labware:B2]}		
(page 86)			
Labware.	Dictionary with column names as keys, i.e. {'1': [labware:A1,		
columns_by_name()	labware:B1], '2': [labware:A2, labware:B2]}		
(page 84)			

Accessing Individual Wells

Dictionary Access

Once a labware is loaded into your protocol, you can easily access the many wells within it by using dictionary indexing. If a well does not exist in this labware, you will receive a KeyError. This is equivalent to using the return value of Labware.wells_by_name() (page 87):

```
a1 = plate['A1']
d6 = plate.wells_by_name()['D6']
```

New in version 2.0.

List Access From wells

Wells can be referenced by their name, as demonstrated above. However, they can also be referenced with zero-indexing, with the first well in a labware being at position 0.

```
plate.wells()[0] # well A1
plate.wells()[23] # well D6
```

Tip: You may find well names (e.g. "B3") to be easier to reason with, especially with irregular labware (e.g. opentrons_10_tuberack_falcon_4x50ml_6x15ml_conical (Labware Library³⁵). Whichever well access method you use, your protocol will be most maintainable if you use only one access method consistently.

New in version 2.0.

Accessing Groups of Wells

When describing a liquid transfer, you can point to groups of wells for the liquid's source and/or destination. Or, you can get a group of wells and loop (or iterate) through them.

You can access a specific row or column of wells by using the <code>Labware.rows_by_name()</code> (page 86) and <code>Labware.columns_by_name()</code> (page 84) methods on a labware. These methods both return a dictionary with the row or column name as the keys:

```
row_dict = plate.rows_by_name()['A']
row_list = plate.rows()[0] # equivalent to the line above
column_dict = plate.columns_by_name()['1']
column_list = plate.columns()[0] # equivalent to the line above

print('Column "1" has', len(column_dict), 'wells')
print('Row "A" has', len(row_dict), 'wells')
```

will print out...

```
Column "1" has 4 wells
Row "A" has 6 wells
```

Since these methods return either lists or dictionaries, you can iterate through them as you would regular Python data structures.

For example, to access the individual wells of row 'A' in a well plate, you can do:

```
for well in plate.rows()[0]:
    print(well)
```

or,

```
for well_obj in plate.rows_by_name()['A'].values():
    print(well_obj)
```

and it will return the individual well objects in row A.

New in version 2.0.

Specifying Position Within Wells

The functions listed above (in the *Accessing Wells in Labware* (page 14) section) return objects (or lists, lists of lists, dictionaries, or dictionaries of lists of objects) representing wells. These are <code>opentrons.protocol_api.labware.Well</code> (page 87) objects. <code>Well</code> (page 87) objects have some useful methods on them, which allow you to more closely specify the location to which the OT-2 should move <code>inside</code> a given well.

Each of these methods returns an object called a opentrons.types.Location (page 99), which encapsulates a position in deck coordinates (see *Deck Coordinates* (page 105)) and a well with which it is associated. This lets

³⁵ https://labware.opentrons.com/opentrons_10_tuberack_falcon_4x50ml_6x15ml_conical

you further manipulate the positions returned by these methods. All InstrumentContext (page 72) methods that involve positions accept these Location (page 99) objects.

Position Modifiers

Top

The method Well.top() (page 88) returns a position at the top center of the well. This is a good position to use for *Blow Out* (page 44) or any other operation where you don't want to be contacting the liquid. In addition, Well.top() (page 88) takes an optional argument z, which is a distance in mm to move relative to the top vertically (positive numbers move up, and negative numbers move down):

```
plate['A1'].top()  # This is the top center of the well
plate['A1'].top(z=1)  # This is 1mm above the top center of the well
plate['A1'].top(z=-1)  # This is 1mm below the top center of the well
```

New in version 2.0.

Bottom

The method <code>Well.bottom()</code> (page 87) returns a position at the bottom center of the well. This is a good position to start when considering where to aspirate, or any other operation where you want to be contacting the liquid. In addition, <code>Well.bottom()</code> (page 87) takes an optional argument z, which is a distance in mm to move relative to the bottom vertically (positive numbers move up, and negative numbers move down):

Warning: Negative z arguments to Well.bottom() (page 87) may cause the tip to collide with the bottom of the well. The OT-2 has no sensors to detect this, and if it happens, the pipette that collided will be too high in z until the next time it picks up a tip.

Note: If you are using this to change the position at which the robot does *Aspirate* (page 43) or *Dispense* (page 44) throughout the protocol, consider setting the default aspirate or dispense offset with *InstrumentContext*. well bottom clearance (page 83) (see *Default Positions Within Wells* (page 35)).

New in version 2.0.

Center

The method Well.center() (page 87) returns a position centered in the well both vertically and horizontally. This can be a good place to start for precise control of positions within the well for unusual or custom labware.

```
plate['Al'].center() # This is the vertical and horizontal center of the well
```

New in version 2.0.

Manipulating Positions

The objects returned by the position modifier functions are all instances of opentrons.types.Location (page 99), which are named tuples³⁶ representing the combination of a point in space (another named tuple) and a reference to the associated Well (page 87) (or Labware (page 83), or slot name, depending on context).

To adjust the position within a well, you can use Location.move() (page 99). Pass it a opentrons.types. Point (page 100) representing a 3-dimensional offset. It will return a new location, representing the original location with that offset applied.

For example:

```
from opentrons import types

metadata = {'apiLevel': '2.11'}

def run(protocol):
    plate = protocol.load_labware(
        'corning_24_wellplate_3.4ml_flat', location='1')

# Get the center of well Al.
    center_location = plate['Al'].center()

# Get a location 1 mm right, 1 mm back, and 1 mm up from the center of well Al.
    adjusted_location = center_location.move(types.Point(x=1, y=1, z=1))

# Move to 1 mm right, 1 mm back, and 1 mm up from the center of well Al.
    pipette.move_to(adjusted_location)
```

New in version 2.0.

Well Properties

Sometimes you may need access to information about a given well in a labware, such as the depth or diameter.

Depth

The distance, in mm, between the very top of the well and the very bottom. For example, if you have a conical shaped well the depth is measured from the top to bottom-center of the cone well.

```
metadata = { 'apiLevel': '2.11'}

def run(protocol):
   plate = protocol.load_labware('corning_96_wellplate_360ul_flat', '1')
   depth = plate['A1'].depth
```

Diameter

The diameter of a given well, in mm, which is only relevant for labware with circular wells. If the well is not circular, the value returned will be None.

³⁶ https://docs.python.org/3/library/collections.html#collections.namedtuple

```
metadata = {'apiLevel': '2.11'}

def run(protocol):
    plate = protocol.load_labware('corning_96_wellplate_360ul_flat', '1')
    depth = plate['A1'].diameter
```

Length

The length of a given well, which is only relevant for labware with square wells. If the well is not rectangular, the value returned will be None.

```
metadata = { 'apiLevel': '2.11'}

def run(protocol):
   plate = protocol.load_labware('nest_12_reservoir_15ml', '1')
   length = plate['Al'].length
```

Width

The width of a given well, which is only relevant for labware with square wells. If the well is not rectangular, the value returned will be None.

```
metadata = { 'apiLevel': '2.11'}

def run(protocol):
    plate = protocol.load_labware('nest_12_reservoir_15ml', '1')
    width = plate['Al'].width
```

These properties can be used for different applications, such as customizing tip location or calculating the volume of a well.

New in version 2.9.

5.4 Hardware Modules

Modules are peripherals that attach to the OT-2 to extend its capabilities.

We currently support the Temperature, Magnetic and Thermocycler Modules.

Module Setup

Loading Your Module Onto the Deck

Like labware and pipettes, you must inform the Protocol API of the modules you will use in your protocol.

Use ProtocolContext.load_module() (page 70) to load a module. It will return an object representing the module.

```
from opentrons import protocol_api

metadata = { 'apiLevel': '2.11'}
```

(continues on next page)

(continued from previous page)

```
def run(protocol: protocol_api.ProtocolContext):
    # Load a Magnetic Module GEN2 in deck slot 1.
    magnetic_module = protocol.load_module('magnetic module gen2', 1)

# Load a Temperature Module GEN1 in deck slot 3.
    temperature_module = protocol.load_module('temperature module', 3)
```

Note: When you load a module in a protocol, you inform the OT-2 that you want the specified module to be present. Even if you do not use the module anywhere else in your protocol, the Opentrons App and the OT-2 will not let your protocol proceed until all modules loaded with load_module are attached to the OT-2.

New in version 2.0.

Available Modules

The first parameter to <code>ProtocolContext.load_module()</code> (page 70), the module's *load name*, specifies the kind of module to load. Check the table below for the proper load name to use for each kind of module.

Some modules were added to the Protocol API later than others. Make sure you use a *Protocol API version* (page 9) high enough to support all the modules you want to use.

Module		Load name		Minimum API version (page 9)	
Temperature Module	GEN1	'temperature module' or	r	2.0	
		'tempdeck'			
	GEN2	'temperature module		2.3	
		gen2'			
Magnetic Module	GEN1	'magnetic module' or	r	2.0	
		'magdeck'			
	GEN2	'magnetic module gen2'		2.3	
Thermocycler Module		'thermocycler module' or	r	2.0	
		'thermocycler'			

GEN1 vs. GEN2 Modules

GEN2 modules are newer. They have improvements that make them more reliable and easier to use.

Identifying a GEN2 Module

You can determine if your module is a GEN2 model by inspecting the sides of the device for a label that specifies GEN2.

Changes with the GEN2 Temperature Module

The GEN2 Temperature Module has a plastic insulating rim around the plate, and plastic insulating shrouds designed to fit over our aluminum blocks. This mitigates an issue where the GEN1 Temperature Module would have trouble cooling to very low temperatures, especially if it shared the deck with a running Thermocycler.

Changes with the GEN2 Magnetic Module

The GEN2 Magnetic Module uses smaller magnets than the GEN1 version. This mitigates an issue where beads would be attracted even when the magnets were retracted.

This means it will take longer for the GEN2 module to attract beads.

Recommended Magnetic Module GEN2 bead attraction time:

- Total liquid volume <= 50 uL: 5 minutes
- Total liquid volume > 50 uL: 7 minutes

Loading Labware Onto Your Module

Like specifying labware that will be present on the deck of the OT-2, you must specify labware that will be present on the module you have just loaded. You do this using module.load_labware(). For instance, to load a Temperature Module and specify an aluminum block for 2 mL tubes³⁷, you would do:

See MagneticModuleContext.load_labware() (page 95), TemperatureModuleContext.load_labware() (page 92), or ThermocyclerContext.load_labware() (page 97).

Notice that when you load labware on a module, you don't specify the labware's deck slot. The labware is loaded on the module, on whichever deck slot the module occupies.

New in version 2.0.

Module and Labware Compatibility

It's up to you to make sure that the labware and module you chose make sense together. The Protocol API won't stop you from making nonsensical combinations, like a tube rack on a Thermocycler.

See: What labware can I use with my modules?³⁸

Loading Custom Labware Into Your Module

Any custom labware added to your Opentrons App (see *Custom Labware* (page 14)) is accessible when loading labware onto a module.

New in version 2.1.

Note: In API version 2.0, module.load_labware() only took a load_name argument. In API version 2.1 (introduced in Robot Software version 3.15.2) or higher you can now specify a label, version, and namespace (though

³⁷ https://labware.opentrons.com/opentrons_24_aluminumblock_generic_2ml_screwcap?category=aluminumBlock

https://support.opentrons.com/en/articles/3540964-what-labware-can-i-use-with-my-modules

Using a Temperature Module

The Temperature Module acts as both a cooling and heating device. It can control the temperature of its deck between 4 °C and 95 °C with a resolution of 1 °C.

Temperature Modules are represented in code by TemperatureModuleContext (page 92) objects.

The Temperature Module has the following methods that can be accessed during a protocol. For the purposes of this section, assume we have the following already:

```
from opentrons import protocol_api

metadata = {'apiLevel': '2.11'}

def run(protocol: protocol_api.ProtocolContext):
    temp_mod = protocol.load_module('temperature module', '1')
    plate = temp_mod.load_labware('corning_96_wellplate_360ul_flat')
    # The code from the rest of the examples in this section goes here
```

New in version 2.0.

Set Temperature

To set the Temperature Module to 4 °C do the following:

```
temp_mod.set_temperature(4)
```

This function will pause your protocol until your target temperature is reached.

Note: This is unlike version 1 of the Python API, in which you would have to use the separate function wait_for_temperature to block protocol execution until the Temperature Module was ready.

New in version 2.0.

Read the Current Temperature

You can read the current real-time temperature of the Temperature Module using the TemperatureModuleContext.temperature (page 94) property:

```
temp_mod.temperature
```

New in version 2.0.

Read the Target Temperature

You can read the current target temperature of the Temperature Module using the <code>TemperatureModuleContext.target</code> (page 93) property:

```
temp_mod.target
```

New in version 2.0.

Check the Status

The TemperatureModuleContext.status (page 93) property is a string that is one of 'heating', 'cooling', 'holding at target' or 'idle'.

```
temp_mod.status
```

Deactivate

This function will stop heating or cooling and will turn off the fan on the Temperature Module.

```
temp_mod.deactivate()
```

Note: You can also deactivate your temperature module through the Opentrons App by clicking on the Pipettes & Modules tab. Your Temperature Module will automatically deactivate if another protocol is uploaded to the app. Your Temperature Module will *not* deactivate automatically when the protocol ends, is cancelled, or is reset.

After deactivating your Temperature module, you can later call *TemperatureModuleContext*. set temperature() (page 93) to heat or cool phase again.

New in version 2.0.

Using a Magnetic Module

The Magnetic Module controls a set of permanent magnets which can move vertically. When the magnets are raised or engaged, they induce a magnetic field in the labware on the module. When they are lowered or disengaged, they do not.

The Magnetic Module is represented by a Magnetic Module Context (page 94) object.

For the purposes of this section, assume we have the following already:

```
from opentrons import protocol_api

metadata = {'apiLevel': '2.11'}

def run(protocol: protocol_api.ProtocolContext):
    mag_mod = protocol.load_module('magnetic module', '1')
    plate = mag_mod.load_labware('nest_96_wellplate_100ul_pcr_full_skirt')
    # The code from the rest of the examples in this section goes here
```

New in version 2.0.

Engage

The MagneticModuleContext.engage() (page 94) function raises the magnets to induce a magnetic field in the labware on top of the Magnetic Module. The height of the magnets can be specified in several different ways, based on internally stored default heights for labware:

• If neither height_from_base, height nor offset is specified and the labware is supported on the Magnetic Module, the magnets will raise to a reasonable default height based on the specified labware.

```
mag_mod.engage()
```

New in version 2.0.

• The recommended way to specify the magnets' position is to utilize the height_from_base parameter, which allows you to raise the height of the magnets relative to the base of the labware.

```
mag_mod.engage(height_from_base=13.5)
```

A mag_mod.engage(height_from_base=0) call should move the tops of the magnets to level with base of the labware.

New in version 2.2.

Note: There is a +/- 1 mmm variance across magnetic module units, using height_from_base=0 might not be able to get the magnets to completely flush with base of the labware. Please test before carrying out your experiment to ensure the desired engage height for your labware.

• You can also specify height, which should be a distance in mm from the home position of the magnets.

```
mag_mod.engage(height=18.5)
```

New in version 2.0.

• An offset can be applied to move the magnets relatively from the default engage height of the labware, **if** the labware is supported on the Magnetic Module.

```
mag_mod.engage(offset=-2)
```

New in version 2.0.

Note: Only certain labwares have defined engage heights for the Magnetic Module. If a labware that does not have a defined engage height is loaded on the Magnetic Module (or if no labware is loaded), then height_from_labware (since version 2.2) or height, must be specified.

New in version 2.0.

Disengage

```
mag_mod.disengage()
```

The Magnetic Module will disengage when the device is turned on. It will not auto-disengage otherwise unless you call MagneticModuleContext.disengage() (page 94) in your protocol.

New in version 2.0.

Check the Status

The MagneticModuleContext.status (page 96) property is a string that is one of 'engaged' or 'disengaged'.

```
mag_mod.status
```

Using a Thermocycler Module

The Thermocycler Module allows users to perform complete experiments that require temperature sensitive reactions such as PCR.

There are two heating mechanisms in the Thermocycler. One is the block in which samples are located; the other is the lid heating pad.

The block can control its temperature between 4 °C and 99 °C to the nearest 1 °C.

The lid can control its temperature between 37 °C to 110 °C. Please see our support article³⁹ on controlling the Thermocycler in the Opentrons App.

For the purposes of this section, assume we have the following already:

```
from opentrons import protocol_api

metadata = { 'apiLevel': '2.11' }

def run(protocol: protocol_api.ProtocolContext):
    tc_mod = protocol.load_module('Thermocycler Module')
    plate = tc_mod.load_labware('nest_96_wellplate_100ul_pcr_full_skirt')
```

Note: When loading the Thermocycler, it is not necessary to specify a slot. This is because the Thermocycler has a default position that covers Slots 7, 8, 10, and 11. This is the only valid location for the Thermocycler on the OT-2 deck.

New in version 2.0.

Lid Motor Control

The Thermocycler can control its temperature with the lid open or closed. When the lid of the Thermocycler is open, the pipettes can access the loaded labware. You can control the lid position with the methods below.

Open Lid

```
tc_mod.open_lid()
```

New in version 2.0.

Close Lid

```
tc_mod.close_lid()
```

New in version 2.0.

Lid Temperature Control

You can control when a lid temperature is set. It is recommended that you set the lid temperature before executing a Thermocycler profile (see *Thermocycler Profiles* (page 27)). The range of the Thermocycler lid is 37 °C to 110 °C.

³⁹ https://support.opentrons.com/en/articles/3469797-thermocycler-module

Set Lid Temperature

ThermocyclerContext.set_lid_temperature() (page 99) takes one parameter: the temperature you wish the lid to be set to. The protocol will only proceed once the lid temperature has been reached.

```
tc_mod.set_lid_temperature(temperature)
```

New in version 2.0.

Block Temperature Control

To set the block temperature inside the Thermocycler, you can use the method <code>ThermocyclerContext.set_block_temperature()</code> (page 98). It takes five parameters: temperature, hold_time_seconds, hold_time_minutes, ramp_rate and block_max_volume. Only temperature is required; the two hold_time parameters, ramp_rate, and block_max_volume are optional.

Temperature

If you only specify a temperature in °C, the Thermocycler will hold this temperature indefinitely until powered off.

```
tc_mod.set_block_temperature(4)
```

New in version 2.0.

Hold Time

If you set a temperature and a hold_time, the Thermocycler will hold the temperature for the specified amount of time. Time can be passed in as minutes or seconds.

With a hold time, it is important to also include the block_max_volume parameter. This is to ensure that the sample reaches the target temperature before the hold time counts down.

In the example below, the Thermocycler will hold the 50 µl samples at the specified temperature for 45 minutes and 15 seconds.

If you do not specify a hold time the protocol will proceed once the temperature specified is reached.

```
tc_mod.set_block_temperature(4, hold_time_seconds=15, hold_time_minutes=45, block_max_ \( \to \) volume=50)
```

New in version 2.0.

Block Max Volume

The Thermocycler's block temperature controller varies its behavior based on the amount of liquid in the wells of its labware. Specifying an accurate volume allows the Thermocycler to precisely track the temperature of the samples. The block_max_volume parameter is specified in μL and is the volume of the most-full well in the labware that is loaded on the Thermocycler's block. If not specified, it defaults to 25 μL .

```
tc_mod.set_block_temperature(4, hold_time_seconds=20, block_max_volume=80)
```

New in version 2.0.

Ramp Rate

Lastly, you can modify the ramp_rate in °C/sec for a given temperature.

```
tc_mod.set_block_temperature(4, hold_time_seconds=60, ramp_rate=0.5)
```

```
Warning: Do not modify the ramp_rate unless you know what you're doing.
```

New in version 2.0.

Thermocycler Profiles

The Thermocycler can rapidly cycle through temperatures to execute heat-sensitive reactions. These cycles are defined as profiles.

Thermocycler profiles are defined for the Protocol API as lists of dicts. Each dict should have a temperature key, which specifies the temperature of a profile step, and either or both of hold_time_seconds or hold_time_minutes, which specify the duration of the step. For instance, this profile commands the Thermocycler to drive its temperature to $10\,^{\circ}\text{C}$ for $30\,\text{seconds}$, and then $60\,^{\circ}\text{C}$ for $45\,\text{seconds}$:

Once you have written your profile, you command the Thermocycler to execute it using <code>ThermocyclerContext.execute_profile()</code> (page 96). This function executes your profile steps multiple times depending on the repetitions parameter. It also takes a <code>block_max_volume</code> parameter, which is the same as that of the <code>ThermocyclerContext.set_block_temperature()</code> (page 98) function.

For instance, you can execute the profile defined above 100 times for a 30 µL-per-well volume like this:

Note: Temperature profiles only control the temperature of the *block* in the Thermocycler. You should set a lid temperature before executing the profile using *ThermocyclerContext.set_lid_temperature()* (page 99).

New in version 2.0.

Thermocycler Status

Throughout your protocol, you may want particular information on the current status of your Thermocycler. Below are a few methods that allow you to do that.

Basic Status

The ThermocyclerContext.status property is one of the strings 'holding at target', 'cooling', 'heating', or 'idle'.

tc_mod.status

New in version 2.0.

Lid Position

The current status of the lid position. It can be one of the strings 'open', 'closed' or 'in_between'.

```
tc_mod.lid_position
```

New in version 2.0.

Heated Lid Temperature Status

The current status of the heated lid temperature controller. It can be one of the strings 'holding at target', 'heating', 'idle', or 'error'.

```
tc_mod.lid_temperature_status
```

New in version 2.0.

Block Temperature Status

The current status of the well block temperature controller. It can be one of the strings 'holding at target', 'cooling', 'heating', 'idle', or 'error'.

```
tc_mod.block_temperature_status
```

New in version 2.0.

Thermocycler Deactivate

At some points in your protocol, you may want to deactivate specific temperature controllers of your Thermocycler. This can be done with three methods, ThermocyclerContext.deactivate() (page 96), ThermocyclerContext.deactivate_lid() (page 96), ThermocyclerContext.deactivate_block() (page 96).

Deactivate

This deactivates both the well block and the heated lid of the Thermocycler.

```
tc mod.deactivate()
```

Deactivate Lid

This deactivates only the heated lid of the Thermocycler.

```
tc_mod.deactivate_lid()
```

New in version 2.0.

Deactivate Block

This deactivates only the well block of the Thermocycler.

tc_mod.deactivate_block()


New in version 2.0.

Using Multiple Modules of the Same Type

To use this feature, you must be running software version 4.3 or higher. Currently, you can only use multiple Magnetic Modules or multiple Temperature Modules. You won't be able to load multiple Thermocycler Modules.

The following diagram shows the mapping of two Temperature Modules on the robot.



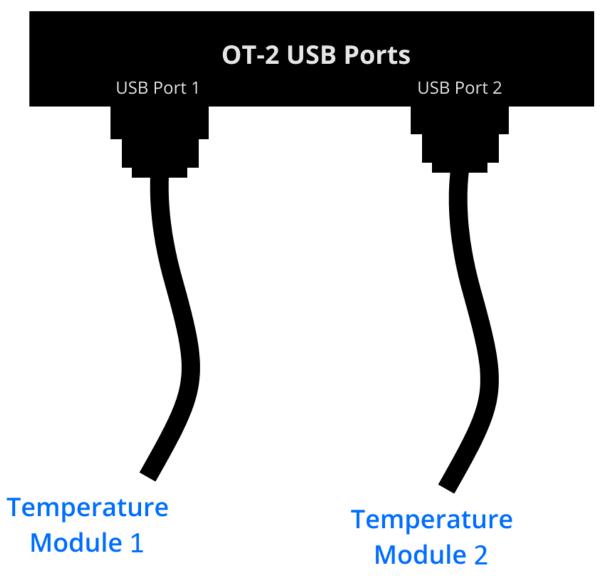

In a protocol, the diagram would map to your modules as found below.

```
from opentrons import protocol_api

metadata = { 'apiLevel': '2.11' }

def run(protocol: protocol_api.ProtocolContext):
    # Load Temperature Module 1 in deck slot 1 on port 1 of the robot.
    temperature_module_1 = protocol.load_module('temperature module gen2', 1)

# Load Temperature Module 2 in deck slot 3 on port 2 of the robot.
    temperature_module_2 = protocol.load_module('temperature module gen2', 3)
```

Referencing the diagram, you should make sure that Temperature Module 1 in slot 1 is plugged into port 1 of the robot and Temperature Module 1 in slot 3 is plugged into port 2 of the robot. If for whatever reason you want to plug Temperature Module 2 into a port to the left of Temperature Module 1, you should switch the modules physically on your robot.

For detailed information, please refer to Using Multiple Modules of the Same Type⁴⁰ in our help center.

5.5 Pipettes

When writing a protocol, you must inform the Protocol API about the pipettes you will be using on your OT-2. The Protocol API then creates software objects called <code>InstrumentContext</code> (page 72), that represent the attached pipettes.

Pipettes are loaded into a specific mount ('left' or 'right') on the OT-2 using the function ProtocolContext.load_instrument() (page 68) from the ProtocolContext (page 67) class. This will return an InstrumentContext (page 72) object. See Building Block Commands (page 40) and Complex Commands (page 49) for liquid handling commands from the InstrumentContext (page 72) class.

Loading A Pipette

Pipettes are specified in a protocol using the method <code>ProtocolContext.load_instrument()</code> (page 68). This method requires the model of the instrument to load, the mount to load it in, and (optionally) a list of associated tipracks:

New in version 2.0.

Note: When you load a pipette in a protocol, you inform the OT-2 that you want the specified pipette to be present. Even if you do not use the pipette anywhere else in your protocol, the Opentrons App and the OT-2 will not let your protocol proceed until all pipettes loaded with load_instrument are attached to the OT-2.

Multi-Channel Pipettes

All building block and advanced commands work with both single-channel (like 'p20_single_gen2') and multichannel (like 'p20_multi_gen2') pipettes. To keep the interface to the Opentrons API consistent between single and multi-channel pipettes, commands treat the *backmost channel* (furthest from the door) of a multi-channel pipette as the location of the pipette. Location arguments to building block and advanced commands are specified for the backmost channel. This also means that offset changes (such as <code>Well.top()</code> (page 88) or <code>Well.bottom()</code> (page 87)) can be applied to the single specified well, and each channels of the pipette will be at the same position relative to the well that it is over.

 $^{^{40}\} https://support.opentrons.com/en/articles/5167312-using-modules-of-the-same-type-on-the-ot-2$

Because there is only one motor in a multi-channel pipette, multi-channel pipettes will always aspirate and dispense on all channels simultaneously.

For instance, to aspirate from the first column of a 96-well plate you would write:

```
from opentrons import protocol_api
metadata = {'apiLevel': '2.11'}
def run(protocol: protocol_api.ProtocolContext):
    # Load a tiprack for 300uL tips
   tiprack1 = protocol.load_labware('opentrons_96_tiprack_300ul', 1)
    # Load a wellplate
   plate = protocol.load_labware('corning_96_wellplate_360ul_flat')
    # Load a P300 Multi GEN2 on the right mount
   right = protocol.load_instrument(
        'p300_multi_gen2', 'right', tip_rack=tiprack1)
    # Specify well A1 for pick_up_tip. The backmost channel of the
    # pipette moves to A1, which means the rest of the wells are above the
    # rest of the wells in column 1.
   right.pick_up_tip(tiprack1['A1'])
    # Similarly, specifying well A2 for aspirate means the pipette will
    # position its backmost channel over well A2, and the rest of the
    # pipette channels are over the rest of the wells of column 1
    right.aspirate(300, plate['A2'])
    # Dispense into column 3 of the plate with all 8 channels of the
    # pipette at the top of their respective wells
    right.dispense(300, plate['A3'].top())
```

In general, you should specify wells in the first row of a labware when you are using multi-channel pipettes. One common exception to this rule is when using 384-well plates. The spacing between the wells in a 384-well plate and the space between the nozzles of a multi-channel pipette means that a multi-channel pipette accesses every other well in a column. Specifying well A1 accesses every other well starting with the first (rows A, C, E, G, I, K, M, and O); specifying well B1 similarly accesses every other well, but starting with the second (rows B, D, F, H, J, L, N, and P).

(continues on next page)

```
# Dispense in wells B1, D1, F1, H1, J1, L1, N1, and P1
right.dispense(300, plate['B1'])
```

This pattern of access applies to both building block commands and advanced commands.

Pipette Models

This table lists the model names, which are passed to ProtocolContext.load_instrument() (page 68), for each model of pipette sold by Opentrons.

Pipette Type	Model Name
P20 Single GEN2 (1 - 20 μL)	'p20_single_gen2'
P300 Single GEN2 $(20-300\mu L)$	'p300_single_gen2'
P1000 Single GEN2 $(100 - 1000 \mu L)$	'p1000_single_gen2'
P300 Multi GEN2 (20-300 μL)	'p300_multi_gen2'
P20 Multi GEN2 (1-20 μL)	'p20_multi_gen2'
P10 Single (1 - 10 μL)	'p10_single'
P10 Multi(1-10 μL)	'p10_multi'
P50 Single (5 - 50 μL)	'p50_single'
P50 Multi (5 - 50 μL)	'p50_multi'
P300 Single (30 - 300 μL)	'p300_single'
P300 Multi (30 - 300 μL)	'p300_multi'
P1000 Single (100 - 1000 μL)	'p1000_single'

GEN2 Pipette Backward Compatibility

GEN2 pipettes have different volume ranges than GEN1 pipettes. However, each GEN2 pipette covers one or two GEN1 pipette volume ranges. For instance, with a range of $1 - 20 \,\mu\text{L}$, the P20 Single GEN2 covers the P10 Single GEN1 ($1 - 10 \,\mu\text{L}$). If your protocol specifies a GEN1 pipette but you have a GEN2 pipette attached to your OT-2 with a compatible volume range, you can still run your protocol. The OT-2 will consider the GEN2 pipette to have the same minimum volume as the GEN1 pipette, so any advanced commands have the same behavior as before.

Specifically, the P20 GEN2s (single and multi) cover the entire P10 GEN1 range; the P300 Single GEN2 covers the entire P300 Single GEN1 range; and the P1000 Single GEN2 covers the entire P1000 Single GEN1 range.

If you have a P50 Single specified in your protocol, there is no automatic backward compatibility. If you want to use a GEN2 Pipette, you must change your protocol to load either a P300 Single GEN2 (if you are using volumes between 20 and 50 μ L) or a P20 Single GEN2 (if you are using volumes below 20 μ L).

If your protocol specifies a pipette and you attach a compatible pipette, the protocol will run, and the pipette will act the same as the pipette specified in your protocol - altering parameters like its minimum volume if necessary.

For instance, if your protocol specifies a P300 Multi, and you connect a P300 Multi GEN2, the pipette will act like a P300 Multi - it will set its minimum volume to 30 µL.

Adding Tip Racks

When you load a pipette, you can optionally specify a list of tip racks you will use to supply the pipette. This is done with the optional parameter tip_racks to <code>ProtocolContext.load_instrument()</code> (page 68). This parameter accepts a <code>list</code> of tiprack labware objects, allowing you to specify as many tipracks as you want. Associating tipracks with your pipette allows for automatic tip tracking throughout your protocol. This removes the need to specify tip locations in <code>InstrumentContext.pick_up_tip()</code> (page 79).

For instance, in this protocol you can see the effects of specifying tipracks:

```
from opentrons import protocol_api
metadata = { 'apiLevel': '2.11'}
def run (protocol: protocol_api.ProtocolContext):
    tiprack_left = protocol.load_labware('opentrons_96_tiprack_300ul', '1')
   tiprack_right = protocol.load_labware('opentrons_96_tiprack_300ul', '2')
   left_pipette = protocol.load_instrument('p300_single', 'left')
    right_pipette = protocol.load_instrument(
        'p300_multi', 'right', tip_racks=[tiprack_right])
    # You must specify the tip location for the left pipette, which was
    # loaded without specifying tip_racks
    left_pipette.pick_up_tip(tiprack['A1'])
    left_pipette.drop_tip()
    # And you have to do it every time you call pick_up_tip, doing all
    # your own tip tracking
   left_pipette.pick_up_tip(tiprack['A2'])
   left_pipette.drop_tip()
   left_pipette.pick_up_tip(tiprack['A3'])
   left_pipette.drop_tip()
    # Since you specified tip_racks when loading the right pipette, it will
    # automatically pick up from Al of its associated tiprack
   right_pipette.pick_up_tip()
   right_pipette.drop_tip()
    # And further calls to pick_up_tip will automatically progress through
    # the tips in the rack
   right_pipette.pick_up_tip()
    right_pipette.drop_tip()
    right_pipette.pick_up_tip()
    right_pipette.drop_tip()
```

This is further discussed in Building Block Commands (page 40) and Complex Commands (page 49).

New in version 2.0.

Modifying Pipette Behaviors

The OT-2 has many default behaviors that are occasionally appropriate to change for a particular experiment. This section details those behaviors.

Plunger Flow Rates

Opentrons pipettes aspirate or dispense at different rates. These flow rates can be changed on a loaded InstrumentContext (page 72) at any time, in units of $\mu L/sec$ by altering $InstrumentContext.flow_rate$ (page 76). This has the following attributes:

- InstrumentContext.flow_rate.aspirate: The aspirate flow rate, in $\mu L/s$
- InstrumentContext.flow_rate.dispense: The dispense flow rate, in $\mu L/s$
- InstrumentContext.flow rate.blow out: The blow out flow rate, in μL/s

Each of these attributes can be altered without affecting the others.

```
from opentrons import protocol_api
metadata = {'apiLevel': '2.11'}
def run(protocol: protocol_api.ProtocolContext):
   tiprack = protocol.load_labware('opentrons_96_tiprack_300ul', '1')
   pipette = protocol.load_instrument(
        'p300_single', 'right', tip_racks=[tiprack])
   plate = protocol.load_labware('opentrons_96_tiprack_300ul', 3)
   pipette.pick_up_tip()
    # Aspirate at the default flowrate of 150 ul/s
   pipette.aspirate(50, plate['A1'])
    # Dispense at the default flowrate of 300 ul/s
   pipette.dispense(50, plate['A1'])
    # Change default aspirate speed to 50ul/s, 1/3 of the default
   pipette.flow_rate.aspirate = 50
    # this aspirate will be at 50ul/s
   pipette.aspirate(50, plate['A1'])
   # this dispense will be the default 300 ul/s
   pipette.dispense(50, plate['A1'])
    # Slow down dispense too
   pipette.flow_rate.dispense = 50
    # This is still at 50 ul/s
   pipette.aspirate(50, plate['A1'])
    # This is now at 50 ul/s as well
   pipette.dispense(50, plate['A1'])
    # Also slow down the blow out flowrate from its default
   pipette.flow_rate.blow_out = 100
   pipette.aspirate(50, plate['A1'])
   # This will be much slower
   pipette.blow_out()
   pipette.drop_tip()
```

InstrumentContext. speed (page 80) offers the same functionality, but controlled in units of mm/s of plunger speed. This does not have a linear transfer to flow rate and should only be used if you have a specific need.

New in version 2.0.

Default Positions Within Wells

By default, the OT-2 will aspirate and dispense 1mm above the bottom of a well. This may not be suitable for some labware geometries, liquids, or experimental protocols. While you can specify the exact location within a well in direct calls to <code>InstrumentContext.aspirate()</code> (page 73) and <code>InstrumentContext.dispense()</code> (page 74) (see the <code>Specifying Position Within Wells</code> (page 16) section), you cannot use this method in complex commands like <code>InstrumentContext.transfer()</code> (page 82), and it can be cumbersome to specify the position every time.

Instead, you can use the attribute InstrumentContext.well_bottom_clearance (page 83) to specify the height above the bottom of a well to either aspirate or dispense:

- 1) Editing pipette.well_bottom_clearance.aspirate changes the height of aspiration
- 2) Editing pipette.well_bottom_clearance.dispense changes the height of dispense

Changing these attributes will affect all aspirates and dispenses, even those executed as part of a transfer.

```
from opentrons import protocol_api, types
metadata = {'apiLevel': '2.11'}
def run(protocol: protocol_api.ProtocolContext):
   tiprack = protocol.load_labware('opentrons_96_tiprack_300ul', '1')
   pipette = protocol.load_instrument('p300_single', 'right')
   plate = protocol.load_labware('opentrons_96_tiprack_300ul', 3)
   pipette.pick_up_tip()
    # Aspirate 1mm above the bottom of the well
   pipette.aspirate(50, plate['A1'])
    # Dispense 1mm above the bottom of the well
   pipette.dispense(50, plate['A1'])
    # Aspirate 2mm above the bottom of the well
   pipette.well_bottom_clearance.aspirate = 2
   pipette.aspirate(50, plate['A1'])
    # Still dispensing 1mm above the bottom
   pipette.dispense(50, plate['A1'])
   pipette.aspirate(50, plate['A1'])
    # Dispense high above the well
    pipette.well_bottom_clearance.dispense = 10
    pipette.dispense(50, plate['A1'])
```

New in version 2.0.

Gantry Speed

The OT-2's gantry usually moves as fast as it can given its construction; this makes protocol execution faster and saves time. However, some experiments or liquids may require slower, gentler movements over protocol execution time. In this case, you can alter the OT-2 gantry's speed when a specific pipette is moving by setting <code>InstrumentContext.default_speed</code> (page 74). This is a value in mm/s that controls the overall speed of the gantry. Its default is 400 mm/s.

Warning: The default of 400 mm/s was chosen because it is the maximum speed Opentrons knows will work with the gantry. Your specific robot may be able to move faster, but you shouldn't make this value higher than the default without extensive experimentation.

```
from opentrons import protocol_api, types

metadata = {'apiLevel': '2.11'}

def run(protocol: protocol_api.ProtocolContext):
    pipette = protocol.load_instrument('p300_single', 'right')
    # Move to 50mm above the front left of slot 5, very quickly
    pipette.move_to(protocol.deck.position_for('5').move(types.Point(z=50)))
    # Slow down the pipette
    pipette.default_speed = 100
    # Move to 50mm above the front left of slot 9, much more slowly
    pipette.move_to(protocol.deck.position_for('9').move(types.Point(z=50)))
```

New in version 2.0.

Per-Axis Speed Limits

In addition to controlling the overall speed of motions, you can set per-axis speed limits for the OT-2's axes. Unlike the overall speed, which is controlled per-instrument, axis speed limits take effect for both pipettes and all motions. These can be set for the X (left-and-right gantry motion), Y (forward-and-back gantry motion), Z (left pipette up-and-down motion), and A (right pipette up-and-down motion) using ProtocolContext.max_speeds (page 71). This works like a dictionary, where the keys are axes, assigning to a key sets a max speed, and deleting a key or setting it to None resets that axis's limit to the default:

```
metadata = {'apiLevel': '2.11'}

def run(protocol):
    protocol.max_speeds['X'] = 50  # limit x axis to 50 mm/s
    del protocol.max_speeds['X']  # reset x axis limit
    protocol.max_speeds['A'] = 10  # limit a axis to 10 mm/s
    protocol.max_speeds['A'] = None  # reset a axis limit
```

You cannot set limits for the pipette plunger axes with this mechanism; instead, set the flow rates or plunger speeds as described in *Plunger Flow Rates* (page 34).

New in version 2.0.

Defaults

Head Speed: 400 mm/s **Well Bottom Clearances**

• Aspirate default: 1mm above the bottom

• Dispense default: 1mm above the bottom

p20 single gen2

- Aspirate Default:
 - On API Version 2.5 and previous: 3.78 μL/s
 - On API Version 2.6 and subsequent: 7.56 μL/s
- Dispense Default:
 - On API Version 2.5 and previous: 3.78 μL/s
 - On API Version 2.6 and subsequent: $7.56 \mu L/s$
- Blow Out Default:
 - On API Version 2.5 and previous: $3.78~\mu\text{L/s}$
 - On API Version 2.6 and subsequent: 7.56 μL/s
- Minimum Volume: 1 µL
- Maximum Volume: 20 μL

p300 single gen2

- Aspirate Default:
 - On API Version 2.5 and previous: 46.43 µL/s
 - On API Version 2.6 and subsequent: 92.86 μL/s
- Dispense Default:
 - On API Version 2.5 and previous: 46.43 μL/s

- On API Version 2.6 and subsequent: 92.86 μL/s

• Blow Out Default:

- On API Version 2.5 and previous: 46.43 μL/s
- On API Version 2.6 and subsequent: 92.86 µL/s
- Minimum Volume: 20 µL
- Maximum Volume: 300 μL

p1000_single_gen2

• Aspirate Default:

- On API Version 2.5 and previous: 137.35 μ L/s
- On API Version 2.6 and subsequent: 274.7 μL/s

• Dispense Default:

- On API Version 2.5 and previous: 137.35 μL/s
- On API Version 2.6 and subsequent: 274.7 μL/s

• Blow Out Default:

- On API Version 2.5 and previous: 137.35 μL/s
- On API Version 2.6 and subsequent: 274.7 μL/s
- Minimum Volume: 100 μL
- Maximum Volume: 1000 µL

p20_multi_gen2

- Aspirate Default: 7.6 µL/s
- Dispense Default: 7.6 µL/s
- Blow Out Default: 7.6 µL/s
- Minimum Volume: 1 μL
- Maximum Volume: 20 µL

p300_multi_gen2

- Aspirate Default: 94 µL/s
- Dispense Default: 94 µL/s
- Blow Out Default: 94 µL/s
- Minimum Volume: 20 µL
- Maximum Volume: 300 µL

p10_single

- Aspirate Default: 5 µL/s
- Dispense Default: 10 µL/s
- Blow Out Default: 1000 µL/s
- Minimum Volume: 1 µL
- Maximum Volume: 10 μL

p10_multi

• Aspirate Default: 5 µL/s

• Dispense Default: 10 µL/s

• Blow Out Default: 1000 µL/s

• Minimum Volume: 1 μL

• Maximum Volume: 10 μL

p50_single

• Aspirate Default: 25 μL/s

• Dispense Default: 50 μL/s

• Blow Out Default: 1000 µL/s

• Minimum Volume: 5 µL

• Maximum Volume: 50 μL

p50_multi

• Aspirate Default: 25 µL/s

• Dispense Default: 50 μL/s

• Blow Out Default: 1000 µL/s

• Minimum Volume: 5 µL

• Maximum Volume: 50 μL

p300_single

• Aspirate Default: 150 μL/s

• Dispense Default: 300 µL/s

• Blow Out Default: 1000 µL/s

• Minimum Volume: 30 µL

• Maximum Volume: 300 µL

p300_multi

• Aspirate Default: 150 µL/s

• Dispense Default: 300 µL/s

• Blow Out Default: 1000 µL/s

• Minimum Volume: 30 μL

• Maximum Volume: 300 µL

p1000_single

• Aspirate Default: 500 µL/s

• Dispense Default: 1000 µL/s

• Blow Out Default: 1000 µL/s

• Minimum Volume: 100 μL

• Maximum Volume: 1000 μL

5.6 Building Block Commands

Building block, or basic, commands are the smallest individual actions that can be completed on an OT-2. For example, the complex command transfer (see *Complex Commands* (page 49)) executes a series of pick_up_tip(), aspirate(), dispense() and drop_tip() basic commands.

The examples in this section would be added to the following:

```
from opentrons import protocol_api

metadata = {'apiLevel': '2.11'}

def run(protocol: protocol_api.ProtocolContext):
    tiprack = protocol.load_labware('corning_96_wellplate_360ul_flat', 2)
    plate = protocol.load_labware('opentrons_96_tiprack_300ul', 3)
    pipette = protocol.load_instrument('p300_single_gen2', mount='left')
    # the example code below would go here, inside the run function
```

This loads a Corning 96 Well Plate⁴¹ in slot 2 and a Opentrons 300 μ L Tiprack⁴² in slot 3, and uses a P300 Single GEN2 pipette.

Tip Handling

When the OT-2 handle liquids with, it constantly exchanges old, used tips for new ones to prevent cross-contamination between wells. Tip handling uses the functions <code>InstrumentContext.pick_up_tip()</code> (page 79), <code>InstrumentContext.drop_tip()</code> (page 75), and <code>InstrumentContext.return_tip()</code> (page 80).

Pick Up Tip

Before any liquid handling can be done, your pipette must have a tip on it. The command InstrumentContext. pick_up_tip() (page 79) will move the pipette over to the specified tip, then press down into it to create a vacuum seal. The below example picks up the tip at location 'A1' of the tiprack previously loaded in slot 3.

```
pipette.pick_up_tip(tiprack['A1'])
```

If you have associated a tiprack with your pipette such as in the *Pipettes* (page 31) or *Protocols and Instruments* (page 67) sections, then you can simply call

```
pipette.pick_up_tip()
```

This will use the next available tip from the list of tipracks passed in to the tip_racks argument of ProtocolContext.load_instrument() (page 68).

New in version 2.0.

Drop Tip

Once finished with a tip, the pipette will remove the tip when we call <code>InstrumentContext.drop_tip()</code> (page 75). You can specify where to drop the tip by passing in a location. The below example drops the tip back at its original location on the tip rack. If no location is specified, the OT-2 will drop the tip in the fixed trash in slot 12 of the deck.

⁴¹ https://labware.opentrons.com/corning_96_wellplate_360ul_flat

⁴² https://labware.opentrons.com/opentrons_96_tiprack_300ul

```
pipette.pick_up_tip()
pipette.drop_tip(tiprack['A1']) # drop back in A1 of the tiprack
pipette.pick_up_tip()
pipette.drop_tip() # drop in the fixed trash on the deck
```

New in version 2.0.

Return Tip

To return the tip to the original location, you can call <code>InstrumentContext.return_tip()</code> (page 80). The example below will automatically return the tip to 'A3' on the tip rack.

```
pipette.pick_up_tip(tiprack['A3'])
pipette.return_tip()
```

In API version 2.2 or above:

In API version 2.0 and 2.1:

Iterating Through Tips

For this section, instead of using the protocol defined above, consider this setup:

This loads a Corning 96 Well Plate⁴³ in slot 2 and two Opentrons 300ul Tiprack⁴⁴ in slots 3 and 4 respectively, and uses a P300 Single GEN2 pipette.

When a list of tip racks is associated with a pipette in its tip_racks argument, the pipette will automatically pick up the next unused tip in the list whenever you call <code>InstrumentContext.pick_up_tip()</code> (page 79). The pipette will first use all tips in the first tiprack, then move on to the second, and so on:

```
pipette.pick_up_tip() # picks up tip_rack_1:A1
pipette.return_tip()
pipette.pick_up_tip() # picks up tip_rack_1:A2
pipette.drop_tip() # automatically drops in trash

# use loop to pick up tips tip_rack_1:A3 through tip_rack_2:H12
tips_left = 94 + 96 # add up the number of tips leftover in both tipracks
for _ in range(tips_left):
    pipette.pick_up_tip()
    pipette.return_tip()
```

If you try to <code>InstrumentContext.pick_up_tip()</code> (page 79) again when all the tips have been used, the Protocol API will show you an error:

```
# this will raise an exception if run after the previous code block
pipette.pick_up_tip()
```

To change the location of the first tip used by the pipette, you can use InstrumentContext.starting_tip (page 81):

```
pipette.starting_tip = tip_rack_1.well('C3')
pipette.pick_up_tip() # pick up C3 from "tip_rack_1"
pipette.return_tip()
```

To reset the tip tracking, you can call InstrumentContext.reset_tipracks() (page 80):

```
# Use up all tips
for _ in range(96+96):
    pipette.pick_up_tip()
    pipette.return_tip()

# Reset the tip tracker
pipette.reset_tipracks()

# Picks up a tip from well A1 of the first tip rack
pipette.pick_up_tip()
```

New in version 2.0.

To check whether you should pick up a tip or not, you can utilize InstrumentContext.has_tip() (page 77):

```
for block in range(3):
    if block == 0 and not pipette.has_tip:
        pipette.pick_up_tip()
    else:
        m300.mix(mix_repetitions, 250, d)
        m300.blow_out(s.bottom(10))
        m300.return_tip()
```

New in version 2.7.

⁴³ https://labware.opentrons.com/corning_96_wellplate_360ul_flat

⁴⁴ https://labware.opentrons.com/opentrons_96_tiprack_300ul

Liquid Control

This section describes the InstrumentContext (page 72) 's liquid-handling commands.

The examples in this section should be inserted in the following:

This loads a Corning 96 Well Plate⁴⁵ in slot 2 and a Opentrons 300ul Tiprack⁴⁶ in slot 3, and uses a P300 Single GEN2 pipette.

Aspirate

To aspirate is to pull liquid up into the pipette's tip. When calling InstrumentContext.aspirate() (page 73) on a pipette, you can specify the volume to aspirate in μL , where to aspirate from, and how fast to aspirate liquid.

```
pipette.aspirate(50, plate['Al'], rate=2.0) # aspirate 50uL from plate:A1
```

Now the pipette's tip is holding 50 µL.

The location parameter is either a well (like plate['Al']) or a position within a well, like the return value of plate['Al'].bottom.

The rate parameter is a multiplication factor of the pipette's default aspiration flow rate. The default aspiration flow rate for all pipettes is in the *Defaults* (page 37) section.

You can also simply specify the volume to aspirate, and not mention a location. The pipette will aspirate from its current location (which we previously set as plate['Al']).

```
pipette.aspirate(50) # aspirate 50uL from current position
```

Now our pipette's tip is holding 100 µL.

Note: In version 1 of this API, aspirate (and dispense) would inspect the types of the volume and location arguments and do the right thing if you specified only a location or specified location and volume out of order. In this and future versions of the Python Protocol API, this is no longer true. Like any other Python function, if you are specifying arguments by position without using their names, you must always specify them in order.

Note: By default, the OT-2 will move to 1mm above the bottom of the target well before aspirating. You can change this by using a well position function like Well.bottom() (page 87) (see Specifying Position Within Wells (page 16)) every time you call aspirate, or - if you want to change the default throughout your protocol - you

⁴⁵ https://labware.opentrons.com/corning_96_wellplate_360ul_flat

⁴⁶ https://labware.opentrons.com/opentrons_96_tiprack_300ul

can change the default offset with InstrumentContext.well_bottom_clearance (page 83) (see Default Positions Within Wells (page 35)).

New in version 2.0.

Dispense

To dispense is to push out liquid from the pipette's tip. The usage of InstrumentContext.dispense() (page 74) in the Protocol API is similar to InstrumentContext.aspirate() (page 73), in that you can specify volume in μL and location, or only volume.

```
pipette.dispense(50, plate['B1'], rate=2.0) # dispense 50uL to plate:B1 at twice the 

→ normal rate

pipette.dispense(50) # dispense 50uL to current position at the normal 

→ rate
```

The location parameter is either a well (like plate['Al']) or a position within a well, like the return value of plate['Al'].bottom.

The rate parameter is a multiplication factor of the pipette's default dispense flow rate. The default dispense flow rate for all pipettes is in the *Defaults* (page 37) section.

Note: By default, the OT-2 will move to 1mm above the bottom of the target well before dispensing. You can change this by using a well position function like Well.bottom() (page 87) (see Specifying Position Within Wells (page 16)) every time you call dispense, or - if you want to change the default throughout your protocol - you can change the default offset with InstrumentContext.well_bottom_clearance (page 83) (see Default Positions Within Wells (page 35)).

Note: In version 1 of this API, dispense (and aspirate) would inspect the types of the volume and location arguments and do the right thing if you specified only a location or specified location and volume out of order. In this and future versions of the Python Protocol API, this is no longer true. Like any other Python function, if you are specifying arguments by position without using their names, you must always specify them in order.

New in version 2.0.

Blow Out

To blow out is to push an extra amount of air through the pipette's tip, to make sure that any remaining droplets are expelled.

When calling InstrumentContext.blow_out() (page 73), you can specify a location to blow out the remaining liquid. If no location is specified, the pipette will blow out from its current position.

New in version 2.0.

Touch Tip

To touch tip is to move the pipette's currently attached tip to four opposite edges of a well, to knock off any droplets that might be hanging from the tip.

When calling InstrumentContext.touch_tip() (page 81) on a pipette, you have the option to specify a location where the tip will touch the inner walls.

InstrumentContext.touch_tip() (page 81) can take up to 4 arguments: touch_tip(location, radius, v_offset, speed).

New in version 2.0.

Mix

To mix is to perform a series of aspirate and dispense commands in a row on a single location. Instead of having to write those commands out every time, you can call InstrumentContext.mix() (page 77).

The mix command takes up to three arguments: mix (repetitions, volume, location):

```
# mix 4 times, 100uL, in plate:A2
pipette.mix(4, 100, plate.['A2'])
# mix 3 times, 50uL, in current location
pipette.mix(3, 50)
# mix 2 times, pipette's max volume, in current location
pipette.mix(2)
```

Note: In API Versions 2.2 and earlier, mixes consist of aspirates and then immediate dispenses. In between these actions, the pipette moves up and out of the target well. In API Version 2.3 and later, the pipette will not move between actions.

New in version 2.0.

Air Gap

When dealing with certain liquids, you may need to aspirate air after aspirating the liquid to prevent it from sliding out of the pipette's tip. A call to $InstrumentContext.air_gap()$ (page 72) with a volume in μL will aspirate that much air into the tip. air_gap takes up to two arguments: air_gap (volume, height):

```
pipette.aspirate(100, plate['B4'])
pipette.air_gap(20)
pipette.drop_tip()
```

New in version 2.0.

Utility Commands

Move To

You can use InstrumentContext.move_to() (page 78) to move a pipette to any location on the deck.

For example, you can move to the first tip in your tip rack:

```
pipette.move_to(tiprack['A1'].top())
```

Unlike commands that require labware, like *Aspirate* (page 43) or *Dispense* (page 44), *InstrumentContext.move_to()* (page 78) deals with *types.Location* (page 99) instances, which combine positions in *Deck Coordinates* (page 105) and associated *Labware* (page 83) instances. You don't have to create them yourself; this is what is returned from methods such as *Well.top()* (page 88) and *Well.bottom()* (page 87). It does mean, however, that you can't move to a well directly; you must use *Well.top()* (page 88) or build a *types.Location* (page 99) yourself.

You can also specify at what height you would like the robot to move to inside of a location using Well.top() (page 88) and Well.bottom() (page 87) methods on that location (more on these methods and others like them in the *Specifying Position Within Wells* (page 16) section):

```
pipette.move_to(plate['A1'].bottom()) # move to the bottom of well A1
pipette.move_to(plate['A1'].top()) # move to the top of well A1
pipette.move_to(plate['A1'].bottom(2)) # move to 2mm above the bottom of well A1
pipette.move_to(plate['A1'].top(-2)) # move to 2mm below the top of well A1
```

The above commands will cause the robot's head to first move upwards, then over to above the target location, then finally downwards until the target location is reached. If instead you would like the robot to move in a straight line to the target location, you can set the movement strategy to 'direct'.

```
pipette.move_to(plate['A1'].top(), force_direct=True)
```

Warning: Moving without an arc will run the risk of colliding with things on your deck. Be very careful when using this option.

Usually the above option is useful when moving inside of a well. Take a look at the below sequence of movements, which first move the head to a well, and use 'direct' movements inside that well, then finally move on to a different well.

```
pipette.move_to(plate['A1'].top())
pipette.move_to(plate['A1'].bottom(1), force_direct=True)
pipette.move_to(plate['A1'].top(-2), force_direct=True)
pipette.move_to(plate['A2'].top())
```

New in version 2.0.

Delay for an Amount of Time

Sometimes you need to wait as a step in your protocol, for instance to wait for something to incubate. You can use <code>ProtocolContext.delay()</code> (page 68) to wait your protocol for a specific amount of time. delay is a method of <code>ProtocolContext</code> (page 67) since it concerns the protocol and the OT-2 as a whole.

The values passed into delay () specify the number of minutes and seconds that the OT-2 will wait until moving on to the next command.

```
protocol.delay(seconds=2)  # delay for 2 seconds
protocol.delay(minutes=5)  # delay for 5 minutes
protocol.delay(minutes=5, seconds=2)  # delay for 5 minutes and 2 seconds
```

Pause Until Resumed

The method *ProtocolContext.pause()* (page 71) will pause protocol execution at a specific step. You can resume by pressing 'resume' in your Opentrons App. You can optionally specify a message that will be displayed in the Opentrons App when protocol execution pauses.

```
from opentrons import protocol_api

metadata = { 'apiLevel': '2.11'}

def run(protocol: protocol_api.ProtocolContext):
    # The start of your protocol goes here...

# The OT-2 stops here until you press resume. It will display the message in
    # the Opentrons App. You do not need to specify a message, but it makes things
    # more clear.
    protocol.pause('Time to take a break')
```

New in version 2.0.

Homing

You can manually request that the OT-2 home during protocol execution. This is typically not necessary; however, if at any point you will disengage motors or move the gantry with your hand, you may want to command a home afterwards.

To home the entire OT-2, you can call ProtocolContext.home () (page 68).

To home a specific pipette's Z axis and plunger, you can call InstrumentContext.home () (page 77).

To home a specific pipette's plunger only, you can call InstrumentContext.home plunger() (page 77).

None of these functions take any arguments:

```
from opentrons import protocol_api, types

metadata = { 'apiLevel': '2.11' }

def run(protocol: protocol_api.ProtocolContext):
    pipette = protocol.load_instrument('p300_single', 'right')
    protocol.home() # Homes the gantry, z axes, and plungers
    pipette.home() # Homes the right z axis and plunger
    pipette.home_plunger() # Homes the right plunger
```

New in version 2.0.

Comment

The method ProtocolContext.comment () (page 67) lets you display messages in the Opentrons App during protocol execution:

```
from opentrons import protocol_api, types

metadata = {'apiLevel': '2.11'}

def run(protocol: protocol_api.ProtocolContext):
        protocol.comment('Hello, world!')
```

New in version 2.0.

Control and Monitor Robot Rail Lights

You can turn the robot rail lights on or off in the protocol using ProtocolContext.set_rail_lights() (page 72):

```
from opentrons import protocol_api

metadata = { 'apiLevel': '2.11' }

def run(protocol: protocol_api.ProtocolContext):
    # turn on robot rail lights
    protocol.set_rail_lights(True)

# turn off robot rail lights
    protocol.set_rail_lights(False)
```


New in version 2.5.

You can also check whether the rail lights are on or off in the protocol using ProtocolContext. rail_lights_on(page 72):

New in version 2.5.

Monitor Robot Door

The door safety switch feature flag has been added to the OT-2 software since the 3.19.0 release. Enabling the feature flag allows your robot to pause a running protocol and prohibit the protocol from running when the robot door is open.

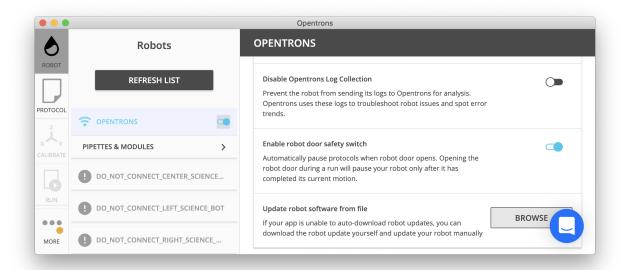

You can also check whether or not the robot door is closed at a specific point in time in the protocol using ProtocolContext.door_closed (page 68):

```
protocol.door_closed # return True when the door is closed,
# False when the door is open
```

Note: Both the top window and the front door must be closed in order for the robot to report the door is closed.

Warning: If you chose to enable the door safety switch feature flag, you should only use ProtocolContext. $door_closed$ (page 68) as a form of status check, and should not use it to control robot behavior. If you wish to implement custom method to pause or resume protocol using $ProtocolContext.door_closed$ (page 68), make sure you have first disabled the feature flag.

New in version 2.5.

5.7 Complex Commands

Overview

The commands in this section execute long or complex series of the commands described in the *Building Block Commands* (page 40) section. These advanced commands make it easier to handle larger groups of wells and repetitive actions.

The examples in this section will use the following set up:

```
from opentrons import protocol_api

metadata = { 'apiLevel': '2.11'}

def run(protocol: protocol_api.ProtocolContext):
    plate = protocol.load_labware('corning_96_wellplate_360ul_flat', 1)
```

(continues on next page)

(continued from previous page)

This loads a Corning 96 Well Plate⁴⁷ in slot 1 and a Opentrons 300 μ L Tiprack⁴⁸ in slot 2 and 3, and uses a P300 Single pipette and a P300 Multi pipette.

You can follow along and simulate the protocol using our protocol simulator, which can be installed by following the instructions at *Using Python For Protocols* (page 6).

There are three complex liquid handling commands:


Method	One source well to a group of destination wells	Many source wells to a group of destination wells	Many source wells to one destination well
InstrumentContext.	Yes	Yes	Yes
transfer() (page 82)			
InstrumentContext.	Yes	Yes	No
distribute()(page 75)			
InstrumentContext.	No	Yes	Yes
consolidate()			
(page 74)			

You can also refer to these images for further clarification.


⁴⁷ https://labware.opentrons.com/corning_96_wellplate_360ul_flat


⁴⁸ https://labware.opentrons.com/opentrons_96_tiprack_300ul

Transfer

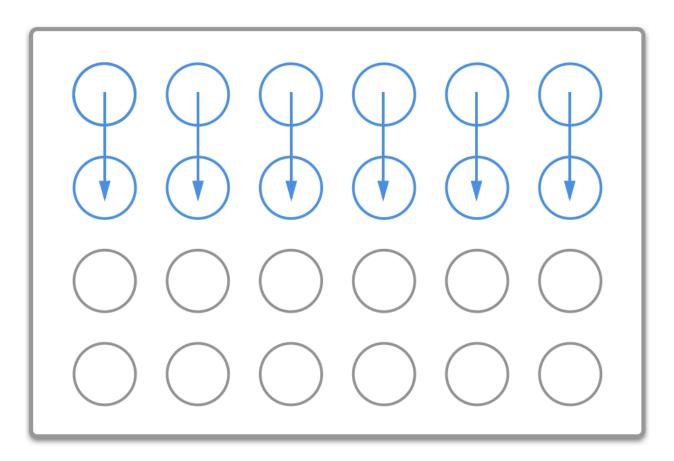


Distribute

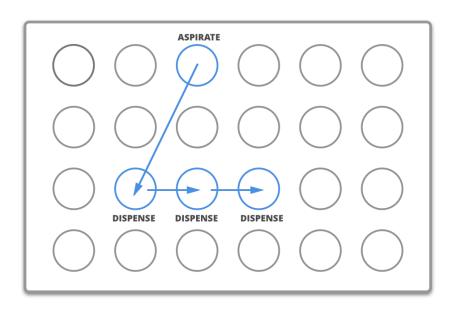

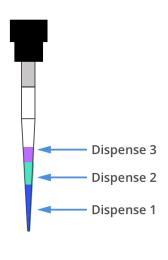

Consolidate

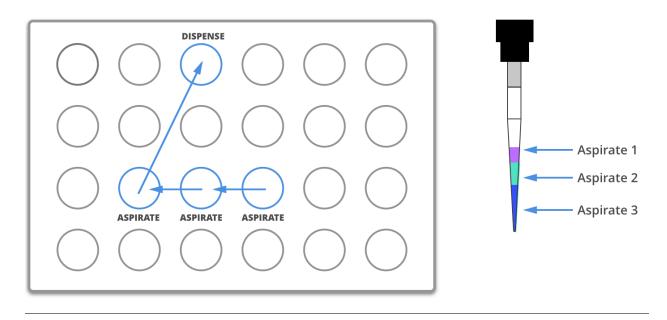

Parameters

Parameters for the complex liquid handling are listed here in order of operation. Check out the *Complex Liquid Handling Parameters* (page 60) section for examples on how to use these parameters.

Parameter(s)	Options	Transfer Defaults	Distribute Defaults	Consolidate De- faults	
new_tip	'always',	'once'	'once'	'once'	
_	'never',				
	'once'				
mix_before,	mix_before	No mixing either	No mixing before	Mixing before aspi-	
mix_after	and mix_after	before aspirate or	aspirate, mixing af-	rate is ignored, no	
	require a tuple	after dispense	ter dispense is ig-	mix after dispense	
	of (repetitions,		nored	by default	
	volume)				
touch_tip	True or False, if	No touch tip by de-	No touch tip by de-	No touch tip by de-	
	true touch tip on	fault	fault	fault	
	both source and des-				
	tination wells	0			
air_gap	Volume in µL	-	0	0	
blow_out	True or False, if true and no lo-	False	False	False	
	cation specified it				
	will blow out in the				
	trash.				
	Note: 1. If the				
	pipette tip is empty,				
	and no location is				
	specified, the pipette				
	will blow out in the				
	trash. 2. If the				
	pipette tip is not				
	empty, and no loca-				
	tion is specified, the				
	pipette will blow out				
	into the source well.				
blowout_location		There is no location	There is no location	There is no location	
	trash,	by default. Please	by default. Please	by default. Please	
	source	see blow_out	see blow_out	see blow_out	
	well,	above for default	above for default	above for default	
	destination	behavior.	behavior.	behavior.	
	well				
	Note: If				
	blow_out is				
	set to False this				
	parameter will be				
trash	ignored. True or False, if	True	True	True	
CLASII	false return tip to	1 T M G	1146	1146	
	tiprack				
carryover	True or False, if	True	False	False	
	true split volumes				
	that exceed max vol-				
	ume of pipette into				
	smaller quantities				
disposal_volume		0	10% of pipette max	0	
	μL to hold in tip		volume		
	while dispensing;				
	better accuracies in				
	multi-dispense				
53					

Transfer

The most versatile complex liquid handling function is <code>InstrumentContext.transfer()</code> (page 82). For a majority of use cases you will most likely want to use this complex command.

Below you will find a few scenarios using the InstrumentContext.transfer() (page 82) command. New in version 2.0.

Basic

This example below transfers $100~\mu L$ from well 'A1' to well 'B1' using the P300 Single pipette, automatically picking up a new tip and then disposing of it when finished.

```
pipette.transfer(100, plate.wells_by_name()['A1'], plate.wells_by_name()['B1'])
```

When you are using a multi-channel pipette, you can transfer the entire column (8 wells) in the plate to another using:

```
pipette.transfer(100, plate.wells_by_name()['A1'], plate.wells_by_name()['A2'])
```

Note: In API Versions 2.0 and 2.1, multichannel pipettes could only access the first row of a 384 well plate, and access to the second row would be ignored. If you need to transfer from all wells of a 384-well plate, please make sure to use API Version 2.2

Note: Multichannel pipettes can only access a limited number of rows in a plate during *transfer*, *distribute* and *consolidate*: the first row (wells A1 - A12) of a 96-well plate, and (since API Version 2.2) the first two rows (wells A1 - B24) for a 384-well plate. Wells specified outside of the limit will be ignored.

Transfer commands will automatically create entire series of InstrumentContext.aspirate() (page 73), InstrumentContext.dispense() (page 74), and other InstrumentContext (page 72) commands.

Large Volumes

Volumes larger than the pipette's max_volume (see *Defaults* (page 37)) will automatically divide into smaller transfers

```
pipette.transfer(700, plate.wells_by_name()['A2'], plate.wells_by_name()['B2'])
```

will have the steps...

```
Transferring 700 from well A2 in "1" to well B2 in "1"

Picking up tip well A1 in "2"

Aspirating 300.0 uL from well A2 in "1" at 1 speed

Dispensing 300.0 uL into well B2 in "1"

Aspirating 200.0 uL from well A2 in "1" at 1 speed

Dispensing 200.0 uL into well B2 in "1"

Aspirating 200.0 uL from well A2 in "1" at 1 speed

Dispensing 200.0 uL from well A2 in "1" at 1 speed

Dispensing 200.0 uL into well B2 in "1"

Dropping tip well A1 in "12"
```

One to One

Transfer commands are most useful when moving liquid between multiple wells. This will be a one to one transfer from where well A1's contents are transferred to well A2, well B1's contents to B2, and so on. This is the scenario displayed in the *Transfer* (page 51) visualization.

```
pipette.transfer(100, plate.columns_by_name()['1'], plate.columns_by_name()['2'])
```

will have the steps...

```
Transferring 100 from wells A1...H1 in "1" to wells A2...H2 in "1"
Picking up tip well A1 in "2"
Aspirating 100.0 uL from well A1 in "1" at 1 speed
Dispensing 100.0 uL into well A2 in "1"
Aspirating 100.0 uL from well B1 in "1" at 1 speed
Dispensing 100.0 uL into well B2 in "1"
Aspirating 100.0 uL from well C1 in "1" at 1 speed
Dispensing 100.0 uL into well C2 in "1"
Aspirating 100.0 uL from well D1 in "1" at 1 speed
Dispensing 100.0 uL into well D2 in "1"
Aspirating 100.0 uL from well E1 in "1" at 1 speed
Dispensing 100.0 uL into well E2 in "1"
Aspirating 100.0 uL from well F1 in "1" at 1 speed
Dispensing 100.0 uL into well F2 in "1"
Aspirating 100.0 uL from well G1 in "1" at 1 speed
Dispensing 100.0 uL into well G2 in "1"
Aspirating 100.0 uL from well H1 in "1" at 1 speed
Dispensing 100.0 uL into well H2 in "1"
Dropping tip well A1 in "12"
```

New in version 2.0.

One to Many

You can transfer from a single source to multiple destinations, and the other way around (many sources to one destination).

```
pipette.transfer(100, plate.wells_by_name()['A1'], plate.columns_by_name()['2'])
```

will have the steps...

```
Transferring 100 from well A1 in "1" to wells A2...H2 in "1"

Picking up tip well A1 in "2"

Aspirating 100.0 uL from well A1 in "1" at 1 speed

Dispensing 100.0 uL into well A2 in "1"

Aspirating 100.0 uL from well A1 in "1" at 1 speed

Dispensing 100.0 uL into well B2 in "1"

Aspirating 100.0 uL from well A1 in "1" at 1 speed

Dispensing 100.0 uL into well C2 in "1"

Aspirating 100.0 uL from well A1 in "1" at 1 speed

Dispensing 100.0 uL into well D2 in "1"

Aspirating 100.0 uL into well D2 in "1"

Aspirating 100.0 uL from well A1 in "1" at 1 speed

Dispensing 100.0 uL into well E2 in "1"

Aspirating 100.0 uL into well E2 in "1"

Aspirating 100.0 uL from well A1 in "1" at 1 speed

Dispensing 100.0 uL into well F2 in "1"

Aspirating 100.0 uL into well F2 in "1"

Aspirating 100.0 uL from well A1 in "1" at 1 speed
```

(continues on next page)

(continued from previous page)

```
Dispensing 100.0 uL into well G2 in "1"
Aspirating 100.0 uL from well A1 in "1" at 1 speed
Dispensing 100.0 uL into well H2 in "1"
Dropping tip well A1 in "12"
```

New in version 2.0.

List of Volumes

Instead of applying a single volume amount to all source/destination wells, you can instead pass a list of volumes.

```
pipette.transfer(
   [20, 40, 60],
   plate['A1'],
   [plate.wells_by_name()[well_name] for well_name in ['B1', 'B2', 'B3']])
```

will have the steps...

```
Transferring [20, 40, 60] from well Al in "1" to wells Bl...B3 in "1"

Picking up tip well Al in "2"

Aspirating 20.0 uL from well Al in "1" at 1 speed

Dispensing 20.0 uL into well Bl in "1"

Aspirating 40.0 uL from well Al in "1" at 1 speed

Dispensing 40.0 uL into well B2 in "1"

Aspirating 60.0 uL from well Al in "1" at 1 speed

Dispensing 60.0 uL into well B3 in "1"

Dropping tip well Al in "12"
```

Skipping Wells

If you only wish to transfer to certain wells from a column, you can use a list of volumes to skip over certain wells by setting the volume to zero.

```
pipette.transfer(
   [20, 0, 60],
   plate['A1'],
   [plate.wells_by_name()[well_name] for well_name in ['B1', 'B2', 'B3']])
```

will have the steps...

```
Transferring [20, 40, 60] from well A1 in "1" to wells B1...B3 in "1"

Picking up tip well A1 in "2"

Aspirating 20.0 uL from well A1 in "1" at 1 speed

Dispensing 20.0 uL into well B1 in "1" at 1 speed

Dispensing 60.0 uL from well A1 in "1" at 1 speed

Dispensing 60.0 uL into well B3 in "1"

Dropping tip well A1 in "12"
```

New in version 2.0.

Distribute and Consolidate

InstrumentContext.distribute() (page 75) and InstrumentContext.consolidate() (page 74) are similar to InstrumentContext.transfer() (page 82), but optimized for specific uses. InstrumentContext.distribute() (page 75) is optimized for taking a large volume from a single (or a small number) of source wells, and distributing it to many smaller volumes in destination wells. Rather than using one-to-one transfers, it dispense many times for each aspirate. InstrumentContext.consolidate() (page 74) is optimized for taking small volumes from many source wells and consolidating them into one (or a small number) of destination wells, aspirating many times for each dispense.

Consolidate

Volumes going to the same destination well are combined within the same tip, so that multiple aspirates can be combined to a single dispense. This is the scenario described by the *Consolidate* (page 52) graphic.

```
pipette.consolidate(30, plate.columns_by_name()['2'], plate.wells_by_name()['A1'])
```

will have the steps...

```
Consolidating 30 from wells A2...H2 in "1" to well A1 in "1"

Transferring 30 from wells A2...H2 in "1" to well A1 in "1"

Picking up tip well A1 in "2"

Aspirating 30.0 uL from well A2 in "1" at 1 speed

Aspirating 30.0 uL from well B2 in "1" at 1 speed

Aspirating 30.0 uL from well D2 in "1" at 1 speed

Aspirating 30.0 uL from well D2 in "1" at 1 speed

Aspirating 30.0 uL from well E2 in "1" at 1 speed

Aspirating 30.0 uL from well E2 in "1" at 1 speed

Aspirating 30.0 uL from well E2 in "1" at 1 speed

Aspirating 30.0 uL from well E2 in "1" at 1 speed

Aspirating 30.0 uL from well H2 in "1" at 1 speed

Dispensing 240.0 uL into well A1 in "1"

Dropping tip well A1 in "12"
```

If there are multiple destination wells, the pipette will not combine the transfers - it will aspirate from one source, dispense into the target, then aspirate from the other source.

```
pipette.consolidate(
   30,
   plate.columns_by_name()['1'],
   [plate.wells_by_name()[well_name] for well_name in ['A1', 'A2']])
```

will have the steps...

```
Consolidating 30 from wells A1...H1 in "1" to wells A1...A2 in "1"

Transferring 30 from wells A1...H1 in "1" to wells A1...A2 in "1"

Picking up tip well A1 in "2"

Aspirating 30.0 uL from well A1 in "1" at 1 speed

Aspirating 30.0 uL from well C1 in "1" at 1 speed

Aspirating 30.0 uL from well D1 in "1" at 1 speed

Aspirating 30.0 uL from well D1 in "1" at 1 speed

Dispensing 120.0 uL into well A1 in "1"

Aspirating 30.0 uL from well E1 in "1" at 1 speed

Aspirating 30.0 uL from well F1 in "1" at 1 speed

Aspirating 30.0 uL from well G1 in "1" at 1 speed

Aspirating 30.0 uL from well H1 in "1" at 1 speed

Dispensing 120.0 uL into well A2 in "1"

Dropping tip well A1 in "12"
```

New in version 2.0.

Distribute

Volumes from the same source well are combined within the same tip, so that one aspirate can provide for multiple dispenses. This is the scenario in the *Distribute* (page 51) graphic.

```
pipette.distribute(55, plate.wells_by_name()['A1'], plate.rows_by_name()['A'])
```

will have the steps...

```
Distributing 55 from well A1 in "1" to wells A1...A12 in "1"
Transferring 55 from well A1 in "1" to wells A1...A12 in "1"
Picking up tip well A1 in "2"
Aspirating 250.0 uL from well Al in "1" at 1 speed
Dispensing 55.0 uL into well A1 in "1"
Dispensing 55.0 uL into well A2 in "1"
Dispensing 55.0 uL into well A3 in "1"
Dispensing 55.0 uL into well A4 in "1"
Blowing out at well A1 in "12"
Aspirating 250.0 uL from well Al in "1" at 1 speed
Dispensing 55.0 uL into well A5 in "1"
Dispensing 55.0 uL into well A6 in "1"
Dispensing 55.0 uL into well A7 in "1"
Dispensing 55.0 uL into well A8 in "1"
Blowing out at well A1 in "12"
Aspirating 250.0 uL from well Al in "1" at 1 speed
Dispensing 55.0 uL into well A9 in "1"
Dispensing 55.0 uL into well A10 in "1"
Dispensing 55.0 uL into well All in "1"
Dispensing 55.0 uL into well A12 in "1"
Blowing out at well A1 in "12"
Dropping tip well A1 in "12"
```

The pipette will aspirate more liquid than it intends to dispense by the minimum volume of the pipette. This is called the disposal_volume, and can be specified in the call to distribute.

If there are multiple source wells, the pipette will never combine their volumes into the same tip.

```
pipette.distribute(
   30,
   [plate.wells_by_name()[well_name] for well_name in ['A1', 'A2']],
   plate.rows()['A'])
```

will have the steps...

```
Distributing 30 from wells A1...A2 in "1" to wells A1...A12 in "1"

Transferring 30 from wells A1...A2 in "1" to wells A1...A12 in "1"

Picking up tip well A1 in "2"

Aspirating 210.0 uL from well A1 in "1"

Dispensing 30.0 uL into well A1 in "1"

Dispensing 30.0 uL into well A2 in "1"

Dispensing 30.0 uL into well A3 in "1"

Dispensing 30.0 uL into well A4 in "1"

Dispensing 30.0 uL into well A5 in "1"

Dispensing 30.0 uL into well A6 in "1"

Blowing out at well A1 in "12"
```

(continues on next page)

(continued from previous page)

```
Aspirating 210.0 uL from well A2 in "1" at 1 speed
Dispensing 30.0 uL into well A7 in "1"
Dispensing 30.0 uL into well A8 in "1"
Dispensing 30.0 uL into well A9 in "1"
Dispensing 30.0 uL into well A10 in "1"
Dispensing 30.0 uL into well A11 in "1"
Dispensing 30.0 uL into well A12 in "1"
Blowing out at well A1 in "12"
Dropping tip well A1 in "12"
```

New in version 2.0.

List of Volumes

Instead of applying a single volume amount to all source/destination wells, you can instead pass a list of volumes to either consolidate or distribute.

For example, this distribute command

```
pipette.distribute(
   [20, 40, 60],
   plate['A1'],
   [plate.wells_by_name()[well_name] for well_name in ['B1', 'B2', 'B3']])
```

will have the steps...

```
Distributing [20, 40, 60] from well Al in "1" to wells Bl...B3 in "1"
Picking up tip well Al in "2"
Aspirating 150.0 uL from well Al in "1" at 1 speed
Dispensing 20.0 uL into well Bl in "1"
Dispensing 40.0 uL into well B2 in "1"
Dispensing 60.0 uL into well B3 in "1"
Blowing out in well Al in "12"
Dropping tip well Al in "12"
```

and this consolidate command

```
pipette.consolidate(
    [20, 40, 60],
    [plate.wells_by_name()[well_name] for well_name in ['B1', 'B2', 'B3']],
    plate['A1'])
```

will have the steps...

```
Consolidating [20, 40, 60] from wells B1...B3 in "1" to well A1 in "1"

Picking up tip well A1 in "2"

Aspirating 20.0 uL from well B1 in "1"

Aspirating 40.0 uL into well B2 in "1"

Aspirating 60.0 uL into well B3 in "1"

Dispensing 120.0 uL into well A1 in "1"

Dropping tip well A1 in "12"
```

Skipping Wells

If you only wish to distribute or consolidate certain wells from a column, you can use a list of volumes to skip over certain wells by setting the volume to zero.

```
pipette.distribute(
    [20, 40, 60, 0, 0, 50, 100],
    plate['Al'],
    plate.columns_by_name()['2'])
```

will have the steps...

```
Distributing [20, 40, 60] from well Al in "1" to column 2 in "1"

Picking up tip well Al in "2"

Aspirating 300.0 uL from well Al in "1" at 1 speed

Dispensing 20.0 uL into well Al in "1"

Dispensing 40.0 uL into well Bl in "1"

Dispensing 60.0 uL into well Cl in "1"

Dispensing 50.0 uL into well Gl in "1"

Dispensing 100.0 uL into well Hl in "1"

Blowing out in well Al in "12"

Dropping tip well Al in "12"
```

Warning: This functionality is only available in Python API Version 2.8 or later.

New in version 2.8.

Order of Operations In Complex Commands

Parameters to complex commands add behaviors to the generated complex command in a specific order which cannot be changed. Specifically, advanced commands execute their atomic commands in this order:

- 1. Tip logic
- 2. Mix at source location
- 3. Aspirate + Any disposal volume
- 4. Touch tip
- 5. Air gap
- 6. Dispense
- 7. Touch tip
- <----Repeat above for all wells---->
 - 8. Empty disposal volume into trash, if any
 - 9. Blow Out

Notice how blow out only occurs after getting rid of disposal volume. If you want blow out to occu after every dispense, you should not include a disposal volume.

Complex Liquid Handling Parameters

Below are some examples of the parameters described in the *Parameters* (page 52) table.

new_tip

This parameter handles tip logic. You have options of the strings 'always', 'once' and 'never'. The default for every complex command is 'once'.

If you want to avoid cross-contamination and increase accuracy, you should set this parameter to 'always'.

New in version 2.0.

Always Get a New Tip

Transfer commands will by default use the same tip for each well, then finally drop it in the trash once finished.

The pipette can optionally get a new tip at the beginning of each aspirate, to help avoid cross contamination.

```
pipette.transfer(
   100,
   [plate.wells_by_name()[well_name] for well_name in ['A1', 'A2', 'A3']],
   [plate.wells_by_name()[well_name] for well_name in ['B1', 'B2', 'B3']],
   new_tip='always')  # always pick up a new tip
```

will have the steps...

```
Transferring 100 from wells Al...A3 in "1" to wells Bl...B3 in "1"

Picking up tip well Al in "2"
Aspirating 100.0 uL from well Al in "1"
Dropping tip well Al in "12"
Picking up tip well Bl in "2"
Aspirating 100.0 uL from well A2 in "1" at 1 speed
Dispensing 100.0 uL into well B2 in "1"
Dropping tip well Al in "12"
Picking up tip well Al in "12"
Picking up tip well Cl in "2"
Aspirating 100.0 uL from well A3 in "1"
Dropping tip well Al in "12"
Dropping tip well A1 in "12"
Dropping tip well A1 in "11"
Dropping tip well A1 in "12"
```

Never Get a New Tip

For scenarios where you instead are calling pick_up_tip() and drop_tip() elsewhere in your protocol, the transfer command can ignore picking up or dropping tips.

```
pipette.pick_up_tip()
...
pipette.transfer(
    100,
    [plate.wells_by_name()[well_name] for well_name in ['A1', 'A2', 'A3']],
    [plate.wells_by_name()[well_name] for well_name in ['B1', 'B2', 'B3']],
    new_tip='never') # never pick up or drop a tip
...
pipette.drop_tip()
```

will have the steps...

```
Picking up tip well A1 in "2"
...

Transferring 100 from wells A1...A3 in "1" to wells B1...B3 in "1"

Aspirating 100.0 uL from well A1 in "1" at 1 speed

Dispensing 100.0 uL into well B1 in "1"

Aspirating 100.0 uL from well A2 in "1" at 1 speed

Dispensing 100.0 uL into well B2 in "1"

Aspirating 100.0 uL from well A3 in "1" at 1 speed

Dispensing 100.0 uL into well B3 in "1"
...

Dropping tip well A1 in "12"
```

Use One Tip

The default behavior of complex commands is to use one tip:

```
pipette.transfer(
    100,
    [plate.wells_by_name()[well_name] for well_name in ['A1', 'A2', 'A3']],
    [plate.wells_by_name()[well_name] for well_name in ['B1', 'B2', 'B3']],
    new_tip='once') # use one tip (default behavior)
```

will have the steps...

```
Picking up tip well A1 in "2"

Transferring 100 from wells A1...A3 in "1" to wells B1...B3 in "1"

Aspirating 100.0 uL from well A1 in "1" at 1 speed

Dispensing 100.0 uL into well B1 in "1"

Aspirating 100.0 uL from well A2 in "1" at 1 speed

Dispensing 100.0 uL into well B2 in "1"

Aspirating 100.0 uL from well A3 in "1"

Dropping tip well A1 in "12"
```

trash

By default, compelx commands will drop the pipette's tips in the trash container. However, if you wish to instead return the tip to its tip rack, you can set trash=False.

```
pipette.transfer(
    100,
    plate['A1'],
    plate['B1'],
    trash=False) # do not trash tip
```

will have the steps...

```
Transferring 100 from well A1 in "1" to well B1 in "1"

Picking up tip well A1 in "2"

Aspirating 100.0 uL from well A1 in "1" at 1 speed

Dispensing 100.0 uL into well B1 in "1"

Returning tip

Dropping tip well A1 in "2"
```

New in version 2.0.

touch_tip

A Touch Tip (page 45) can be performed after every aspirate and dispense by setting touch tip=True.

```
pipette.transfer(
    100,
    plate['A1'],
    plate['A2'],
    touch_tip=True) # touch tip to each well's edge
```

will have the steps...

```
Transferring 100 from well A1 in "1" to well A2 in "1"
Picking up tip well A1 in "2"
Aspirating 100.0 uL from well A1 in "1" at 1 speed
Touching tip
Dispensing 100.0 uL into well A2 in "1"
Touching tip
Dropping tip well A1 in "12"
```

New in version 2.0.

blow_out

A *Blow Out* (page 44) into the trash can be performed after every dispense that leaves the tip empty by setting blow_out=True.

```
pipette.transfer(
    100,
    plate['A1'],
    plate['A2'],
    blow_out=True) # blow out droplets when tip is empty
```

will have the steps...

```
Transferring 100 from well A1 in "1" to well A2 in "1"

Picking up tip well A1 in "2"

Aspirating 100.0 uL from well A1 in "1" at 1 speed

Dispensing 100.0 uL into well A2 in "1"

Blowing out

Dropping tip well A1 in "12"
```

New in version 2.0.

The robot will automatically dispense any left over liquid that is *not* from using disposal_volume into the source well of your transfer function.

```
pipette.pick_up_tip()
pipette.aspirate(10, plate['A1'])
pipette.transfer(
    100,
    plate['A1'],
    plate['A2'],
    blow_out=True,  # blow out droplets into the source well (A1 of "plate")
    new_tip='never')
```

New in version 2.8.

blowout location

Starting in Python API Version 2.8 and above, you can specify the well type you would like your pipette to blow out in. Specifying a location will override any defaults from the blow_out argument.

The code below is the same default behavior you would see utilizing blow_out=True only. It will blow out for every transfer into the trash.

```
pipette.transfer(
    100,
    plate['A1'],
    plate['A2'],
    blow_out=True,
    blowout_location='trash') # blow out droplets into the trash
```

New in version 2.8.

The same is true even if you have extra liquid left in your tip shown below.

```
pipette.pick_up_tip()
pipette.aspirate(10, plate['A1'])
pipette.transfer(
    100,
    plate['A1'],
    plate['A2'],
    blow_out=True,
    blowout_location='trash',  # blow out droplets into the trash
    new_tip='never')
```

New in version 2.8.

If you wish to blow out in the source or destination well you can do so by specifying the location as either source well or destination well. For example, to blow out in the destination well you can do the following:

```
pipette.transfer(
    100,
    plate['A1'],
    plate.wells(),
    blow_out=True,
    blowout_location='destination well') # blow out droplets into each_
    destination well (this will blow out in wells `A1`, `B1`, `C1`..etc)
```

New in version 2.8.

Note: You *must* specify blow_out=True in order to utilize the new argument blowout_location

mix_before, mix_after

A *Mix* (page 45) can be performed before every aspirate by setting mix_before=, and after every dispense by setting mix_after=. The value of mix_before= or mix_after= must be a tuple; the first value is the number of repetitions, the second value is the amount of liquid to mix.

```
pipette.transfer(
    100,
    plate['Al'],
    plate['A2'],
```

(continues on next page)

(continued from previous page)

```
mix\_before=(2, 50), # mix 2 times with 50uL before aspirating mix\_after=(3, 75)) # mix 3 times with 75uL after dispensing
```

will have the steps...

```
Transferring 100 from well A1 in "1" to well A2 in "1"
Picking up tip well A1 in "2"
Mixing 2 times with a volume of 50ul
Aspirating 50 uL from well Al in "1" at 1.0 speed
Dispensing 50 uL into well A1 in "1"
Aspirating 50 uL from well A1 in "1" at 1.0 speed
Dispensing 50 uL into well A1 in "1"
Aspirating 100.0 uL from well Al in "1" at 1 speed
Dispensing 100.0 uL into well A2 in "1"
Mixing 3 times with a volume of 75ul
Aspirating 75 uL from well A2 in "1" at 1.0 speed
Dispensing 75.0 uL into well A2 in "1"
Aspirating 75 uL from well A2 in "1" at 1.0 speed
Dispensing 75.0 uL into well A2 in "1"
Aspirating 75 uL from well A2 in "1" at 1.0 speed
Dispensing 75.0 uL into well A2 in "1"
Dropping tip well A1 in "12"
```

New in version 2.0.

air_gap

An Air Gap (page 45) can be performed after every aspirate by setting air_gap=volume, where the value is the volume of air in μ L to aspirate after aspirating the liquid. The entire volume in the tip, air gap and the liquid volume, will be dispensed all at once at the destination specified in the complex command.

```
pipette.transfer(
    100,
    plate['A1'],
    plate['A2'],
    air_gap=20) # add 20uL of air after each aspirate
```

will have the steps...

```
Transferring 100 from well A1 in "1" to well A2 in "1"
Picking up tip well A1 in "2"
Aspirating 100.0 uL from well A1 in "1" at 1.0 speed
Air gap
Aspirating 20 uL from well A1 in "1" at 1.0 speed
Dispensing 120.0 uL into well A2 in "1"
Dropping tip well A1 in "12"
```

New in version 2.0.

disposal_volume

When dispensing multiple times from the same tip in <code>InstrumentContext.distribute()</code> (page 75), it is recommended to aspirate an extra amount of liquid to be disposed of after distributing. This added <code>disposal_volume</code> can be set as an optional argument.


The default disposal volume is the pipette's minimum volume (see *Defaults* (page 37)), which will be blown out at the trash after the dispenses.

```
pipette.distribute(
    30,
    [plate.wells_by_name()[well_name] for well_name in ['A1', 'A2']],
    plate.columns_by_name()['2'],
    disposal_volume=60) # include extra liquid to make dispenses more accurate, 20%_
    of total volume
```

will have the steps...

```
Distributing 30 from wells A1...A2 in "1" to wells A2...H2 in "1"
Transferring 30 from wells A1...A2 in "1" to wells A2...H2 in "1"
Picking up tip well A1 in "2"
Aspirating 130.0 uL from well A1 in "1" at 1 speed
Dispensing 30.0 uL into well A2 in "1"
Dispensing 30.0 uL into well B2 in "1"
Dispensing 30.0 uL into well C2 in "1"
Dispensing 30.0 uL into well D2 in "1"
Blowing out at well A1 in "12"
Aspirating 130.0 uL from well A2 in "1" at 1 speed
Dispensing 30.0 uL into well E2 in "1"
Dispensing 30.0 uL into well F2 in "1"
Dispensing 30.0 uL into well G2 in "1"
Dispensing 30.0 uL into well H2 in "1"
Blowing out at well A1 in "12"
Dropping tip well A1 in "12"
```

See this image for example,

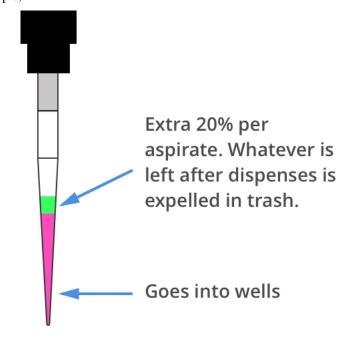

New in version 2.0.

5.8 API Version 2 Reference

Protocols and Instruments

The Context class is a container for the state of a protocol.

It encapsulates many of the methods formerly found in the Robot class, including labware, instrument, and module loading, as well as core functions like pause and resume.

Unlike the old robot class, it is designed to be ephemeral. The lifetime of a particular instance should be about the same as the lifetime of a protocol. The only exception is the one stored in .legacy_api.api.robot, which is provided only for back compatibility and should be used less and less as time goes by.

New in version 2.0.

property api_version

Return the API version supported by this protocol context.

The supported API version was specified when the protocol context was initialized. It may be lower than the highest version supported by the robot software. For the highest version supported by the robot software, see protocol_api.MAX_SUPPORTED_VERSION.

New in version 2.0.

Build an API instance for the specified parsed protocol

This is used internally to provision the context with bundle contents or api levels.

property bundled_data

Accessor for data files bundled with this protocol, if any.

This is a dictionary mapping the filenames of bundled datafiles, with extensions but without paths (e.g. if a file is stored in the bundle as data/mydata/aspirations.csv it will be in the dict as 'aspirations.csv') to the bytes contents of the files.

New in version 2.0.

cleanup(self)

Finalize and clean up the protocol context.

clear_commands (self)

New in version 2.0.

commands (self)

New in version 2.0.

```
comment (self, msg) \rightarrow 'None'
```

Add a user-readable comment string that will be echoed to the Opentrons app.

The value of the message is computed during protocol simulation, so cannot be used to communicate real-time information from the robot's actual run.

New in version 2.0.

```
connect (self, hardware: 'Union[ThreadManager, SynchronousAdapter]')
```

Connect to a running hardware API.

This can be either a simulator or a full hardware controller.

Note that there is no true disconnected state for a ProtocolContext (page 67); disconnect() (page 68) simply creates a new simulator and replaces the current hardware with it.

New in version 2.0.

property deck

The object holding the deck layout of the robot.

This object behaves like a dictionary with keys for both numeric and string slot numbers (for instance, protocol.deck[1] and protocol.deck['1'] will both return the object in slot 1). If nothing is loaded into a slot, None will be present. This object is useful for determining if a slot in the deck is free. Rather than filtering the objects in the deck map yourself, you can also use <code>loaded_labwares</code> (page 70) to see a dict of labwares and <code>loaded_modules</code> (page 71) to see a dict of modules. For advanced control you can delete an item of labware from the deck with e.g. <code>del protocol.deck['1']</code> to free a slot for new labware. (Note that for each slot only the last labware used in a command will be available for calibration in the OpenTrons UI, and that the tallest labware on the deck will be calculated using only currently loaded labware, meaning that the labware loaded should always reflect the labware physically on the deck (or be higher than the labware on the deck).

New in version 2.0.

delay (self, seconds=0, minutes=0, msg=None)

Delay protocol execution for a specific amount of time.

Parameters

- **seconds** (float⁴⁹) A time to delay in seconds
- minutes $(float^{50})$ A time to delay in minutes

If both seconds and minutes are specified, they will be added.

New in version 2.0.

disconnect (self)

Disconnect from currently-connected hardware and simulate instead

New in version 2.0.

property door_closed

Returns True if the robot door is closed

New in version 2.5.

property fixed_trash

The trash fixed to slot 12 of the robot deck.

It has one well and should be accessed like labware in your protocol. e.g. protocol. fixed trash['A1']

New in version 2.0.

home (self)

Homes the robot.

New in version 2.0.

$is_simulating(self) \rightarrow bool'$

New in version 2.0.

load_instrument (self, instrument_name: 'str', mount: 'Union[types.Mount, str]', tip_racks: 'List[Labware]' = None, replace: 'bool' = False) \rightarrow "'InstrumentContext'" Load a specific instrument required by the protocol.

 $^{^{49}\} https://docs.python.org/3/library/functions.html\#float$

⁵⁰ https://docs.python.org/3/library/functions.html#float

This value will actually be checked when the protocol runs, to ensure that the correct instrument is attached in the specified location.

Parameters

- instrument_name (str⁵¹) The name of the instrument model, or a prefix. For instance, 'p10_single' may be used to request a P10 single regardless of the version.
- mount (types. Mount (page 99) or str^{52}) The mount in which this instrument should be attached. This can either be an instance of the enum type types. Mount (page 99) or one of the strings 'left' and 'right'.
- tip_racks (List[Labware (page 83)]) A list of tip racks from which to pick tips if InstrumentContext.pick_up_tip() (page 79) is called without arguments.
- replace $(bool^{53})$ Indicate that the currently-loaded instrument in *mount* (if such an instrument exists) should be replaced by *instrument name*.

New in version 2.0.

load labware (self, load name: 'str', location: 'types.DeckLocation', label: 'Optional[str]' = None, $namespace: 'Optional[str]' = None, version: 'Optional[int]' = None) \rightarrow 'Labware'$ Load a labware onto the deck given its name.

For labware already defined by Opentrons, this is a convenient way to collapse the two stages of labware initialization (creating the labware and adding it to the protocol) into one.

This function returns the created and initialized labware for use later in the protocol.

Parameters

- load_name A string to use for looking up a labware definition
- location $(int^{54} \ or \ str^{55})$ The slot into which to load the labware such as 1 or
- label (str^{56}) An optional special name to give the labware. If specified, this is the name the labware will appear as in the run log and the calibration view in the Opentrons
- namespace (str^{57}) The namespace the laborate definition belongs to. If unspecified, will search 'opentrons' then 'custom beta'
- **version** (int^{58}) The version of the labware definition. If unspecified, will use version

New in version 2.0.

```
load_labware_by_name (self, load_name: 'str', location: 'types.DeckLocation', label: 'Op-
                                 tional[str]' = None, namespace: 'Optional[str]' = None, version: 'int'
     =1) \rightarrow 'Labware' Deprecated since version 2.0: Use <code>load_labware()</code> (page 69) instead.
```

New in version 2.0.

```
load_labware_from_definition(self,
                                                                "'LabwareDefinition'",
                                              labware_def:
                                                                                        location:
                                        'types.DeckLocation', label: 'Optional[str]' = None) \rightarrow
                                        'Labware'
```

Specify the presence of a piece of labware on the OT2 deck.

⁵¹ https://docs.python.org/3/library/stdtypes.html#str

⁵² https://docs.python.org/3/library/stdtypes.html#str

⁵³ https://docs.python.org/3/library/functions.html#bool

⁵⁴ https://docs.python.org/3/library/functions.html#int

⁵⁵ https://docs.python.org/3/library/stdtypes.html#str

⁵⁶ https://docs.python.org/3/library/stdtypes.html#str

⁵⁷ https://docs.python.org/3/library/stdtypes.html#str

⁵⁸ https://docs.python.org/3/library/functions.html#int

This function loads the labware definition specified by *labware_def* to the location specified by *location*.

Parameters

- labware_def The labware definition to load
- location $(int^{59} \ or \ str^{60})$ The slot into which to load the labware such as 1 or '1'
- label (str⁶¹) An optional special name to give the labware. If specified, this is the name the labware will appear as in the run log and the calibration view in the Opentrons app.

New in version 2.0.

load_module (self, $module_name$: 'str', location: 'Optional[types.DeckLocation]' = None, configuration: 'Optional[str]' = None) \rightarrow 'ModuleTypes' Load a module onto the deck given its name.

This is the function to call to use a module in your protocol, like <code>load_instrument()</code> (page 68) is the method to call to use an instrument in your protocol. It returns the created and initialized module context, which will be a different class depending on the kind of module loaded.

A map of deck positions to loaded modules can be accessed later using loaded modules (page 71).

Parameters

- module_name (str^{62}) The name or model of the module.
- **location** (str^{63} or int^{64} or $None^{65}$) The location of the module. This is usually the name or number of the slot on the deck where you will be placing the module. Some modules, like the Thermocycler, are only valid in one deck location. You do not have to specify a location when loading a Thermocycler it will always be in Slot 7.
- **configuration** Used to specify the slot configuration of the Thermocycler. Only Valid in Python API Version 2.4 and later. If you wish to use the non-full plate configuration, you must pass in the key word value *semi*

Returns The loaded and initialized module—a TemperatureModuleContext (page 92), ThermocyclerContext (page 96), or MagneticModuleContext (page 94), depending on what you requested with module_name.

New in version 2.0.

property loaded_instruments

Get the instruments that have been loaded into the protocol.

This is a map of mount name to instruments previously loaded with <code>load_instrument()</code> (page 68). It is not necessarily the same as the instruments attached to the robot - for instance, if the robot has an instrument in both mounts but your protocol has only loaded one of them with <code>load_instrument()</code> (page 68), the unused one will not be present.

Returns A dict mapping mount name ('left' or 'right') to the instrument in that mount. If a mount has no loaded instrument, that key will be missing from the dict.

New in version 2.0.

⁵⁹ https://docs.python.org/3/library/functions.html#int

⁶⁰ https://docs.python.org/3/library/stdtypes.html#str

⁶¹ https://docs.python.org/3/library/stdtypes.html#str

⁶² https://docs.python.org/3/library/stdtypes.html#str

⁶³ https://docs.python.org/3/library/stdtypes.html#str

⁶⁴ https://docs.python.org/3/library/functions.html#int

⁶⁵ https://docs.python.org/3/library/constants.html#None

property loaded_labwares

Get the labwares that have been loaded into the protocol context.

Slots with nothing in them will not be present in the return value.

Note: If a module is present on the deck but no labware has been loaded into it with module. load_labware(), there will be no entry for that slot in this value. That means you should not use loaded_labwares to determine if a slot is available or not, only to get a list of labwares. If you want a data structure of all objects on the deck regardless of type, see deck (page 68).

Returns Dict mapping deck slot number to labware, sorted in order of the locations.

New in version 2.0.

property loaded modules

Get the modules loaded into the protocol context.

This is a map of deck positions to modules loaded by previous calls to <code>load_module()</code> (page 70). It is not necessarily the same as the modules attached to the robot - for instance, if the robot has a Magnetic Module and a Temperature Module attached, but the protocol has only loaded the Temperature Module with <code>load_module()</code> (page 70), only the Temperature Module will be present.

Returns Dict[str, ModuleContext] Dict mapping slot name to module contexts. The elements may not be ordered by slot number.

New in version 2.0.

property max_speeds

Per-axis speed limits when moving this instrument.

Changing this value changes the speed limit for each non-plunger axis of the robot, when moving this pipette. Note that this does only sets a limit on how fast movements can be; movements can still be slower than this. However, it is useful if you require the robot to move much more slowly than normal when using this pipette.

This is a dictionary mapping string names of axes to float values limiting speeds. To change a speed, set that axis's value. To reset an axis's speed to default, delete the entry for that axis or assign it to None.

For instance,

New in version 2.0.

$pause(self, msg=None) \rightarrow 'None'$

Pause execution of the protocol until it's resumed.

A human can resume the protocol through the Opentrons App.

This function returns immediately, but the next function call that is blocked by a paused robot (anything that involves moving) will not return until the protocol is resumed.

Parameters msg (stx^{66}) – An optional message to show to connected clients. The Opentrons App will show this in the run log.

New in version 2.0.

property rail_lights_on

Returns True if the rail lights are on

New in version 2.5.

```
resume (self) \rightarrow 'None'
```

Resume the protocol after pause () (page 71).

Deprecated since version 2.12: The Python Protocol API supports no safe way for a protocol to resume itself. See https://github.com/Opentrons/opentrons/issues/8209. If you're looking for a way for your protocol to resume automatically after a period of time, use <code>delay()</code> (page 68).

New in version 2.0.

```
set_rail_lights (self, on: 'bool')
```

Controls the robot rail lights

Parameters on $(bool^{67})$ – If true, turn on rail lights; otherwise, turn off.

New in version 2.5.

 $\textbf{temp_connect} \ (\textit{self}, \textit{hardware: 'Union[ThreadManager, SynchronousAdapter]'})$

Connect temporarily to the specified hardware controller.

This should be used as a context manager:

```
with ctx.temp_connect(hw):
    # do some tasks
    ctx.home()
# after the with block, the context is connected to the same
# hardware control API it was connected to before, even if
# an error occurred in the code inside the with block
```

A context for a specific pipette or instrument.

This can be used to call methods related to pipettes - moves or aspirates or dispenses, or higher-level methods.

Instances of this class bundle up state and config changes to a pipette - for instance, changes to flow rates or trash containers. Action methods (like aspirate() (page 73) or distribute() (page 75)) are defined here for convenience.

In general, this class should not be instantiated directly; rather, instances are returned from <code>ProtocolContext.load_instrument()</code> (page 68).

New in version 2.0.

```
air_gap (self, volume: 'Optional[float]' = None, height: 'Optional[float]' = None) → 'Instrument-Context'
Pull air into the pipette current tip at the current location
```

⁶⁶ https://docs.python.org/3/library/stdtypes.html#str

⁶⁷ https://docs.python.org/3/library/functions.html#bool

Parameters

- **volume** (float⁶⁸) The amount in uL to aspirate air into the tube. (Default will use all remaining volume in tip)
- **height** (float⁶⁹) The number of millimiters to move above the current Well to airgap aspirate. (Default: 5mm above current Well)

Raises NoTipAttachedError - if no tip is attached to the pipette

Raises RuntimeError⁷⁰ – If location cache is None. This should happen if *touch_tip* is called without first calling a method that takes a location (eg, *aspirate()* (page 73), *dispense()* (page 74))

Returns This instance

Note: Both volume and height are optional, but unlike previous API versions, if you want to specify only height you must do it as a keyword argument: pipette.air_gap (height=2). If you call air_gap with only one unnamed argument, it will always be interpreted as a volume.

New in version 2.0.

property api_version

New in version 2.0.

aspirate (self, volume: 'Optional[float]' = None, location: 'Union[types.Location, Well]' = None, rate: 'float' = 1.0) \rightarrow 'InstrumentContext'

Aspirate a given volume of liquid from the specified location, using this pipette.

Parameters

- **volume** $(int^{71} \ or \ float^{72})$ The volume to aspirate, in microliters (μL). If 0 or unspecified, defaults to the highest volume possible with this pipette and its currently attached tip.
- **location** Where to aspirate from. If *location* is a *Well* (page 87), the robot will aspirate from *well_bottom_clearance.aspirate* (page 83) mm above the bottom of the well. If *location* is a *Location* (page 99) (i.e. the result of *Well.top()* (page 88) or *Well.bottom()* (page 87)), the robot will aspirate from the exact specified location. If unspecified, the robot will aspirate from the current position.
- rate (float⁷³) A relative modifier for how quickly to aspirate liquid. The flow rate for this aspirate will be rate * flow_rate.aspirate (page 76). If not specified, defaults to 1.0.

Returns This instance.

Note: If aspirate is called with a single argument, it will not try to guess whether the argument is a volume or location - it is required to be a volume. If you want to call aspirate with only a location, specify it as a keyword argument: instr.aspirate(location=wellplate['Al'])

New in version 2.0.

 $^{^{68}\} https://docs.python.org/3/library/functions.html#float$

⁶⁹ https://docs.python.org/3/library/functions.html#float

⁷⁰ https://docs.python.org/3/library/exceptions.html#RuntimeError

⁷¹ https://docs.python.org/3/library/functions.html#int

⁷² https://docs.python.org/3/library/functions.html#float

⁷³ https://docs.python.org/3/library/functions.html#float

blow_out (*self*, *location*: 'Union[types.Location, Well]' = None) \rightarrow 'InstrumentContext' Blow liquid out of the tip.

If <code>dispense</code> (page 74) is used to completely empty a pipette, usually a small amount of liquid will remain in the tip. This method moves the plunger past its usual stops to fully remove any remaining liquid from the tip. Regardless of how much liquid was in the tip when this function is called, after it is done the tip will be empty.

Parameters location (Well (page 87) or Location (page 99) or None) – The location to blow out into. If not specified, defaults to the current location of the pipette

Raises RuntimeError⁷⁴ – If no location is specified and location cache is None. This should happen if *blow_out* is called without first calling a method that takes a location (eg, aspirate() (page 73), dispense() (page 74))

Returns This instance

New in version 2.0.

property channels

The number of channels on the pipette.

New in version 2.0.

Move liquid from multiple wells (sources) to a single well(destination)

Parameters

- **volume** The amount of volume to consolidate from each source well.
- **source** List of wells from where liquid will be aspirated.
- **dest** The single well into which liquid will be dispensed.
- **kwargs** See *transfer()* (page 82). Some arguments are changed. Specifically, mix_before, if specified, is ignored and disposal_volume is ignored and set to 0.

Returns This instance

New in version 2.0.

property current_volume

The current amount of liquid, in microliters, held in the pipette.

New in version 2.0.

property default_speed

The speed at which the robot's gantry moves.

By default, 400 mm/s. Changing this value will change the speed of the pipette when moving between labware. In addition to changing the default, the speed of individual motions can be changed with the speed argument to InstrumentContext.move_to() (page 78).

New in version 2.0.

delay (self)

New in version 2.0.

dispense (self, volume: 'Optional[float]' = None, location: 'Union[types.Location, Well]' = None, rate: 'float' = 1.0) \rightarrow 'InstrumentContext'

Dispense a volume of liquid (in microliters/uL) using this pipette into the specified location.

⁷⁴ https://docs.python.org/3/library/exceptions.html#RuntimeError

If only a volume is passed, the pipette will dispense from its current position. If only a location is passed (as in instr.dispense (location=wellplate['Al'])), all of the liquid aspirated into the pipette will be dispensed (this volume is accessible through *current volume* (page 74)).

Parameters

- **volume** (*int*⁷⁵ or *float*⁷⁶) The volume of liquid to dispense, in microliters. If 0 or unspecified, defaults to *current_volume* (page 74).
- location Where to dispense into. If *location* is a *Well* (page 87), the robot will dispense into *well_bottom_clearance.dispense* (page 83) mm above the bottom of the well. If *location* is a *Location* (page 99) (i.e. the result of *Well.top()* (page 88) or *Well.bottom()* (page 87)), the robot will dispense into the exact specified location. If unspecified, the robot will dispense into the current position.
- rate (float⁷⁷) A relative modifier for how quickly to dispense liquid. The flow rate for this dispense will be rate * flow_rate.dispense (page 76). If not specified, defaults to 1.0.

Returns This instance.

Note: If dispense is called with a single argument, it will not try to guess whether the argument is a volume or location - it is required to be a volume. If you want to call dispense with only a location, specify it as a keyword argument: instr.dispense(location=wellplate['Al'])

New in version 2.0.

distribute (self, volume: 'Union[float, Sequence[float]]', source: 'Well', dest: 'List[Well]', *args, **kwargs) → 'InstrumentContext'

Move a volume of liquid from one source to multiple destinations.

Parameters

- **volume** The amount of volume to distribute to each destination well.
- source A single well from where liquid will be aspirated.
- **dest** List of Wells where liquid will be dispensed to.
- **kwargs** See *transfer()* (page 82). Some arguments are changed. Specifically, mix_after, if specified, is ignored and disposal_volume, if not specified, is set to the minimum volume of the pipette

Returns This instance

New in version 2.0.

$$\label{eq:drop_tip} \begin{split} \texttt{drop_tip} \ (\textit{self, location: 'Union[types.Location, Well]'} = \textit{None, home_after: 'bool'} = \textit{True}) \ \rightarrow \text{'InstrumentContext'} \\ \text{Drop the current tip.} \end{split}$$

If no location is passed, the Pipette will drop the tip into its trash_container (page 83), which if not specified defaults to the fixed trash in slot 12.

The location in which to drop the tip can be manually specified with the *location* argument. The *location* argument can be specified in several ways:

• If the only thing to specify is which well into which to drop a tip, *location* can be a Well (page 87). For instance, if you have a tip rack in a variable called *tiprack*, you can drop a tip into a specific well

⁷⁵ https://docs.python.org/3/library/functions.html#int

⁷⁶ https://docs.python.org/3/library/functions.html#float

⁷⁷ https://docs.python.org/3/library/functions.html#float

on that tiprack with the call $instr.drop_tip(tiprack.wells()[0])$. This style of call can be used to make the robot drop a tip into arbitrary labware.

• If the position to drop the tip from as well as the Well (page 87) to drop the tip into needs to be specified, for instance to tell the robot to drop a tip from an unusually large height above the tiprack, *location* can be a *types.Location* (page 99); for instance, you can call *instr.drop_tip(tiprack.wells()[0].top())*.

Parameters

- **location** (*types.Location* (page 99) or *Well* (page 87) or None) The location to drop the tip
- home_after Whether to home this pipette's plunger after dropping the tip. Defaults to True.

Setting home_after=False saves waiting a couple of seconds after the pipette drops the tip, but risks causing other problems.

Warning: Only set home_after=False if:

- You're using a GEN2 pipette, not a GEN1 pipette.
- You've tested home_after=False extensively with your particular pipette and your particular tips.
- You understand the risks described below.

The ejector shroud that pops the tip off the end of the pipette is driven by the plunger's stepper motor. Sometimes, the strain of ejecting the tip can make that motor *skip* and fall out of sync with where the robot thinks it is.

Homing the plunger fixes this, so, to be safe, we normally do it after every tip drop.

If you set home_after=False to disable homing the plunger, and the motor happens to skip, you might see problems like these until the next time the plunger is homed:

- The run might halt with a "hard limit" error message.
- The pipette might aspirate or dispense the wrong volumes.
- The pipette might not fully drop subsequent tips.

GEN1 pipettes are especially vulnerable to this skipping, so you should never set home_after=False with a GEN1 pipette.

Even on GEN2 pipettes, the motor can still skip. So, always extensively test home_after=False with your particular pipette and your particular tips before relying on it.

Returns This instance

New in version 2.0.

property flow_rate

The speeds (in uL/s) configured for the pipette.

This is an object with attributes aspirate, dispense, and blow_out holding the flow rates for the corresponding operation.

Note: This property is equivalent to *speed* (page 80); the only difference is the units in which this property is specified. specifiying this property uses the units of the volumetric flow rate of liquid into or out of the tip, while *speed* (page 80) uses the units of the linear speed of the plunger inside the pipette.

Because *speed* (page 80) and *flow_rate* (page 76) modify the same values, setting one will override the other.

For instance, to change the flow rate for aspiration on an instrument you would do

```
instrument.flow_rate.aspirate = 50
```

New in version 2.0.

property has_tip

Return whether this instrument has a tip attached or not.

New in version 2.7.

home (self) \rightarrow 'InstrumentContext'

Home the robot.

Returns This instance.

New in version 2.0.

 $home_plunger(self) \rightarrow 'InstrumentContext'$

Home the plunger associated with this mount

Returns This instance.

New in version 2.0.

property hw_pipette

View the information returned by the hardware API directly.

Raises a types.PipetteNotAttachedError (page 99) if the pipette is no longer attached (should not happen).

New in version 2.0.

property max_volume

The maximum volume, in microliters (μ L), that this pipette can hold.

The maximum volume that you can actually aspirate might be lower than this, depending on what kind of tip is attached to this pipette. For example, a P300 Single-Channel pipette always has a max_volume of 300 µL, but if it's using a 200 µL filter tip, its usable volume would be limited to 200 µL.

New in version 2.0.

property min_volume

New in version 2.0.

```
mix (self, repetitions: 'int' = 1, volume: 'Optional[float]' = None, location: 'Union[types.Location, Well]' = None, rate: 'float' = 1.0) → 'InstrumentContext'

Mix a volume of liquid (uL) using this pipette, by repeatedly aspirating and dispensing in the same place.
```

Parameters

- repetitions how many times the pipette should mix (default: 1)
- **volume** number of microliters to mix. If 0 or unspecified, defaults to the highest volume possible with this pipette and its currently attached tip.
- **location** (types.Location (page 99)) a Well or a position relative to well. e.g, *plate.rows*()[0][0].bottom(). If unspecified, the pipette will mix from its current position.
- rate A relative modifier for how quickly to aspirate and dispense liquid during this mix. When aspirating, the flow rate will be rate * flow_rate.aspirate (page 76), and when dispensing, it will be rate * flow_rate.dispense (page 76).

Raises NoTipAttachedError – if no tip is attached to the pipette.

Returns This instance

Note: All the arguments to mix are optional; however, if you do not want to specify one of them, all arguments after that one should be keyword arguments. For instance, if you do not want to specify volume, you would call pipette.mix(1, location=wellplate['A1']). If you do not want to specify repetitions, you would call pipette.mix(volume=10, location=wellplate['A1']). Unlike previous API versions, mix will not attempt to guess your inputs; the first argument will always be interpreted as repetitions, the second as volume, and the third as location unless you use keywords.

New in version 2.0.

property model

The model string for the pipette (e.g. 'p300_single_v1.3')

New in version 2.0.

property mount

Return the name of the mount this pipette is attached to

New in version 2.0.

move_to (self, location: 'types.Location', force_direct: 'bool' = False, minimum_z_height: 'Optional[float]' = None, speed: 'Optional[float]' = None, publish: 'bool' = True) → 'InstrumentContext'

Move the instrument.

Parameters

- location (types.Location (page 99)) The location to move to.
- **force_direct** If set to true, move directly to destination without arc motion.
- minimum_z_height When specified, this Z margin is able to raise (but never lower) the mid-arc height.
- **speed** The speed at which to move. By default, <code>InstrumentContext.default_speed</code> (page 74). This controls the straight linear speed of the motion; to limit individual axis speeds, you can use <code>ProtocolContext.max_speeds</code> (page 71).
- publish Whether a call to this function should publish to the runlog or not.

New in version 2.0.

property name

The name string for the pipette (e.g. 'p300_single')

New in version 2.0.

 $pair_with (self, instrument: 'InstrumentContext') \rightarrow 'PairedInstrumentContext'$ Pair this pipette with another one so you can use both simultaneously.

Warning: Pipette pairing was an experimental feature intended for Opentrons' own internal use.

We no longer support this method in any way. We can't help you if you use it and run into any problems.

We keep this documentation here for the benefit of people working with old protocols. New protocols shouldn't use this method.

In a future robot software update, we might change pipette pairing in a way that isn't backwards-compatible, or even remove it entirely. We might do this without advance warning, and without leaving a way for you to restore the old behavior by lowering your protocol's *apiLevel* (page 9).

Limitations:

- Only building block commands (page 40) are supported, not complex commands (page 49).
- Only pipettes of the same type are supported. For example, you can't pair a P1000 Single-Channel with a P300 Single-Channel.
- All positioning is based on the *primary pipette* only. (See below for the difference between the primary pipette and the secondary pipette.) The physical offset between the two pipettes is assumed to match an idealized value. The OT-2's pipette offset calibration is not taken into account.

If the physical offset does not exactly match the ideal, then the secondary pipette will always be off-position. The OT-2 hardware does not provide an easy way of adjusting the physical offset to fix this.

The InstrumentContext (page 72) on which you call this method is designated the primary pipette, and the InstrumentContext (page 72) that you provide as an argument is designated the secondary pipette.

Parameters instrument – The secondary pipette that you wish to use.

Raises UnsupportedInstrumentPairingError – if you try to pair pipettes that are not currently supported together.

Returns A PairedInstrumentContext. This is the object you will call commands on. The building block commands are the same as an individual pipette's building block commands found at *Building Block Commands* (page 40), and when you want to move pipettes simultaneously you need to use the PairedInstrumentContext.

```
from opentrons import protocol_api
# metadata
metadata = {
    'protocolName': 'My Protocol',
    'author': 'Name <email@address.com>',
    'description': 'Simple paired pipette protocol,
    'apiLevel': '2.11'
def run(ctx: protocol_api.ProtocolContext):
   right_pipette = ctx.load_instrument(
       'p300_single_gen2', 'right')
   left_pipette = ctx.load_instrument('p300_single_gen2', 'left')
    # In this scenario, the right pipette is the primary pipette
    # while the left pipette is the secondary pipette. All XY
    # locations will be based on the right pipette.
   right_paired_with_left = right_pipette.pair_with(left_pipette)
   right_paired_with_left.pick_up_tip()
   right_paired_with_left.drop_tip()
    # In this scenario, the left pipette is the primary pipette
    # while the right pipette is the secondary pipette. All XY
    # locations will be based on the left pipette.
   left_paired_with_right = left_pipette.pair_with(right_pipette)
   left_paired_with_right.pick_up_tip()
   left_paired_with_right.drop_tip()
```

New in version 2.7.

Pick up a tip for the pipette to run liquid-handling commands with

If no location is passed, the Pipette will pick up the next available tip in its InstrumentContext. tip_racks (page 81) list.

The tip to pick up can be manually specified with the *location* argument. The *location* argument can be specified in several ways:

- If the only thing to specify is which well from which to pick up a tip, *location* can be a Well (page 87). For instance, if you have a tip rack in a variable called *tiprack*, you can pick up a specific tip from it with instr.pick_up_tip(tiprack.wells()[0]). This style of call can be used to make the robot pick up a tip from a tip rack that was not specified when creating the *InstrumentContext* (page 72).
- If the position to move to in the well needs to be specified, for instance to tell the robot to run its pick up tip routine starting closer to or farther from the top of the tip, *location* can be a *types.Location* (page 99); for instance, you can call instr.pick_up_tip(tiprack.wells()[0].top()).

Parameters

- **location** (*types.Location* (page 99) or *Well* (page 87) to pick up a tip from.) The location from which to pick up a tip.
- **presses** (int⁷⁸) The number of times to lower and then raise the pipette when picking up a tip, to ensure a good seal (0 [zero] will result in the pipette hovering over the tip but not picking it up–generally not desireable, but could be used for dry-run).
- **increment** (float⁷⁹) The additional distance to travel on each successive press (e.g.: if *presses=3* and *increment=1.0*, then the first press will travel down into the tip by 3.5mm, the second by 4.5mm, and the third by 5.5mm).

Returns This instance

New in version 2.0.

reset tipracks (self)

Reload all tips in each tip rack and reset starting tip

New in version 2.0.

property return_height

The height to return a tip to its tiprack.

New in version 2.2.

return_tip (*self*, *home_after*: 'bool' = True) → 'InstrumentContext'

If a tip is currently attached to the pipette, then it will return the tip to it's location in the tiprack.

It will not reset tip tracking so the well flag will remain False.

Returns This instance

Parameters home after – See the home after parameter in drop tip (page 75).

New in version 2.0.

property speed

The speeds (in mm/s) configured for the pipette plunger.

This is an object with attributes aspirate, dispense, and blow_out holding the plunger speeds for the corresponding operation.

⁷⁸ https://docs.python.org/3/library/functions.html#int

⁷⁹ https://docs.python.org/3/library/functions.html#float

Note: This property is equivalent to flow_rate (page 76); the only difference is the units in which this property is specified. Specifying this attribute uses the units of the linear speed of the plunger inside the pipette, while flow_rate (page 76) uses the units of the volumetric flow rate of liquid into or out of the tip. Because speed (page 80) and flow_rate (page 76) modify the same values, setting one will override the other.

For instance, to set the plunger speed during an aspirate action, do

```
instrument.speed.aspirate = 50
```

New in version 2.0.

property starting_tip

The starting tip from which the pipette pick up

New in version 2.0.

property tip_racks

The tip racks that have been linked to this pipette.

This is the property used to determine which tips to pick up next when calling pick_up_tip() (page 79) without arguments.

New in version 2.0.

```
touch_tip (self, location: 'Optional[Well]' = None, radius: 'float' = 1.0, v_offset: 'float' = -1.0, speed: 'float' = 60.0) \rightarrow 'InstrumentContext'
```

Touch the pipette tip to the sides of a well, with the intent of removing left-over droplets

Parameters

- **location** (Well (page 87) or None) If no location is passed, pipette will touch tip at current well's edges
- radius (float⁸⁰) Describes the proportion of the target well's radius. When *radius=1.0*, the pipette tip will move to the edge of the target well; when *radius=0.5*, it will move to 50% of the well's radius. Default: 1.0 (100%)
- **v_offset** (float⁸¹) The offset in mm from the top of the well to touch tip A positive offset moves the tip higher above the well, while a negative offset moves it lower into the well Default: -1.0 mm
- **speed** (float⁸²) The speed for touch tip motion, in mm/s. Default: 60.0 mm/s, Max: 80.0 mm/s, Min: 20.0 mm/s

Raises NoTipAttachedError - if no tip is attached to the pipette

Raises RuntimeError⁸³ – If no location is specified and location cache is None. This should happen if *touch_tip* is called without first calling a method that takes a location (eg, aspirate() (page 73), dispense() (page 74))

Returns This instance

Note: This is behavior change from legacy API (which accepts any Placeable as the location parameter)

New in version 2.0.

⁸⁰ https://docs.python.org/3/library/functions.html#float

⁸¹ https://docs.python.org/3/library/functions.html#float

⁸² https://docs.python.org/3/library/functions.html#float

⁸³ https://docs.python.org/3/library/exceptions.html#RuntimeError

transfer (self, volume: 'Union[float, Sequence[float]]', source: 'AdvancedLiquidHandling', dest: 'AdvancedLiquidHandling', trash=True, **kwargs) → 'InstrumentContext'

Transfer will move a volume of liquid from a source location(s) to a dest location(s). It is a higher-level command, incorporating other <code>InstrumentContext</code> (page 72) commands, like <code>aspirate()</code> (page 73) and <code>dispense()</code> (page 74), designed to make protocol writing easier at the cost of specificity.

Parameters

- **volume** The amount of volume to aspirate from each source and dispense to each destination. If volume is a list, each volume will be used for the sources/targets at the matching index. If volumes is a tuple with two elements, like (20, 100), then a list of volumes will be generated with a linear gradient between the two volumes in the tuple.
- **source** A single well or a list of wells from where liquid will be aspirated.
- dest A single well or a list of wells where liquid will be dispensed to.
- **kwargs See below

Keyword Arguments

- new_tip (string) -
 - 'never': no tips will be picked up or dropped during transfer
 - 'once': (default) a single tip will be used for all commands.
 - 'always': use a new tip for each transfer.
- *trash* (boolean) If *True* (default behavior), tips will be dropped in the trash container attached this *Pipette*. If *False* tips will be returned to tiprack.
- touch_tip (boolean) If True, a touch_tip() (page 81) will occur following each aspirate() (page 73) and dispense() (page 74). If set to False (default behavior), no touch_tip() (page 81) will occur.
- blow_out (boolean) If True, a blow_out() (page 73) will occur following each dispense() (page 74), but only if the pipette has no liquid left in it. If set to False (default), no blow_out() (page 73) will occur.
- blowout_location (string) -
 - 'source well': blowout excess liquid into source well
 - 'destination well': blowout excess liquid into destination well
 - 'trash': blowout excess liquid into the trash

If no blowout_location specified, no disposal_volume specified, and the pipette contains liquid, a blow_out() (page 73) will occur into the source well.

If no blowout_location specified and either disposal_volume is specified or the pipette is empty, a $blow_out()$ (page 73) will occur into the trash.

If blow_out is set to False, this parameter will be ignored.

- mix_before (tuple) The tuple, if specified, gives the amount of volume to mix() (page 77) preceding each aspirate() (page 73) during the transfer. The tuple is interpreted as (repetitions, volume).
- mix_after (tuple) The tuple, if specified, gives the amount of volume to mix() (page 77) after each dispense() (page 74) during the transfer. The tuple is interpreted as (repetitions, volume).
- disposal_volume (float) (distribute() (page 75) only) Volume of liquid to be disposed off after distributing. When dispensing multiple times from the same tip, it is recommended to aspirate an extra amount of liquid to be disposed off after distributing.

- carryover (boolean) If True (default), any volume that exceeds the maximum volume
 of this Pipette will be split into multiple smaller volumes.
- gradient (lambda) Function for calculating the curve used for gradient volumes. When *volume* is a tuple of length 2, its values are used to create a list of gradient volumes. The default curve for this gradient is linear (lambda x: x), however a method can be passed with the gradient keyword argument to create a custom curve.

Returns This instance

New in version 2.0.

property trash_container

The trash container associated with this pipette.

This is the property used to determine where to drop tips and blow out liquids when calling $drop_tip()$ (page 75) or $blow_out()$ (page 73) without arguments.

New in version 2.0.

property type

One of 'single' or 'multi'.

New in version 2.0.

property well_bottom_clearance

The distance above the bottom of a well to aspirate or dispense.

This is an object with attributes aspirate and dispense, describing the default heights of the corresponding operation. The default is 1.0mm for both aspirate and dispense.

When aspirate() (page 73) or dispense() (page 74) is given a Well (page 87) rather than a full Location (page 99), the robot will move this distance above the bottom of the well to aspirate or dispense.

To change, set the corresponding attribute. For instance,

```
instr.well_bottom_clearance.aspirate = 1
```

New in version 2.0.

Labware and Wells

opentrons.protocol_api.labware: classes and functions for labware handling

This module provides things like Labware (page 83), and Well (page 87) to encapsulate labware instances used in protocols and their wells. It also provides helper functions to load and save labware and labware calibration offsets. It contains all the code necessary to transform from labware symbolic points (such as "well al of an opentrons tiprack") to points in deck coordinates.

```
class opentrons.protocol_api.labware.Labware (implementation: opentrons.protocols.context.labware.AbstractLabware, api\_level: Optional[opentrons.protocols.api\_support.types.APIVersion] = None)
```

This class represents a labware, such as a PCR plate, a tube rack, reservoir, tip rack, etc. It defines the physical geometry of the labware, and provides methods for accessing wells within the labware.

It is commonly created by calling ProtocolContext.load_labware().

To access a labware's wells, you can use its well accessor methods: wells_by_name() (page 87), wells() (page 86), columns() (page 84), rows() (page 86), rows_by_name() (page 86), and

columns_by_name() (page 84). You can also use an instance of a labware as a Python dictionary, accessing wells by their names. The following example shows how to use all of these methods to access well A1:

```
labware = context.load_labware('corning_96_wellplate_360ul_flat', 1)
labware['A1']
labware.wells_by_name()['A1']
labware.wells()[0]
labware.rows()[0][0]
labware.columns()[0][0]
labware.rows_by_name()['A'][0]
labware.columns_by_name()[0][0]
```

property api_version

New in version 2.0.

property calibrated_offset

New in version 2.0.

```
\textbf{columns} (\textit{self}, *\textit{args}) \rightarrow List[List[opentrons.protocol\_api.labware.Well]]
```

Accessor function used to navigate through a labware by column.

With indexing one can treat it as a typical python nested list. To access row A for example, simply write: labware.columns()[0] This will output ['A1', 'B1', 'C1', 'D1'...].

Note that this method takes args for backward-compatibility, but use of args is deprecated and will be removed in future versions. Args can be either strings or integers, but must all be the same type (e.g.: self.columns(1, 4, 8) or self.columns('1', '2'), but self.columns('1', 4) is invalid.

Returns A list of column lists

New in version 2.0.

$columns_by_index$ (self) \rightarrow Dict[str, List[opentrons.protocol_api.labware.Well]]

Deprecated since version 2.0: Use columns_by_name () (page 84) instead.

New in version 2.0.

$columns_by_name (self) \rightarrow Dict[str, List[opentrons.protocol_api.labware.Well]]$

Accessor function used to navigate through a labware by column name.

With indexing one can treat it as a typical python dictionary. To access row A for example, simply write: labware.columns_by_name()['1'] This will output ['A1', 'B1', 'C1', 'D1'...].

Returns Dictionary of Well lists keyed by column name

New in version 2.0.

property highest_z

The z-coordinate of the tallest single point anywhere on the labware.

This is drawn from the 'dimensions'/'zDimension' elements of the labware definition and takes into account the calibration offset.

New in version 2.0.

property is_tiprack

New in version 2.0.

property load_name

The API load name of the labware definition

New in version 2.0.

property magdeck_engage_height

New in version 2.0.

property name

Can either be the canonical name of the labware, which is used to load it, or the label of the labware specified by a user.

New in version 2.0.

next_tip (self, num_tips: int = 1, starting_tip: Union[opentrons.protocol_api.labware.Well, None-Type] = None) \rightarrow Union[opentrons.protocol_api.labware.Well, NoneType] Find the next valid well for pick-up.

Determines the next valid start tip from which to retrieve the specified number of tips. There must be at least *num_tips* sequential wells for which all wells have tips, in the same column.

Parameters

- num_tips (int⁸⁴) target number of sequential tips in the same column
- **starting_tip** (Well (page 87)) The Well (page 87) from which to start search. for an available tip.

Returns the Well (page 87) meeting the target criteria, or None

property parameters

Internal properties of a labware including type and quirks

New in version 2.0.

property parent

The parent of this labware. Usually a slot name.

New in version 2.0.

previous_tip (self, num_tips : int = 1) \rightarrow Union[opentrons.protocol_api.labware.Well, NoneType] Find the best well to drop a tip in.

This is the well from which the last tip was picked up, if there's room. It can be used to return tips to the tip tracker.

Parameters num_tips (int⁸⁵) – target number of tips to return, sequential in a column

Returns The Well (page 87) meeting the target criteria, or None

property quirks

Quirks specific to this labware.

New in version 2.0.

reset (self)

Reset all tips in a tiprack

New in version 2.0.

return_tips (*self*, *start_well: opentrons.protocol_api.labware.Well*, *num_channels: int = 1*)

Re-adds tips to the tip tracker

This method should be called when a tip is dropped in a tiprack. It should be called with num_channels=1 or num_channels=8 for single- and multi-channel respectively. If returning more than one channel, this method will automatically determine which tips are returned based on the start well, the number of channels, and the tiprack geometry.

Note that unlike use_tips() (page 86), calling this method in a way that would drop tips into wells with tips in them will raise an exception; this should only be called on a valid return of previous_tip() (page 85).

⁸⁴ https://docs.python.org/3/library/functions.html#int

⁸⁵ https://docs.python.org/3/library/functions.html#int

- start_well (Well (page 87)) The Well (page 87) into which to return a tip.
- num_channels (int⁸⁶) The number of channels for the current pipette

rows (self, *args) \rightarrow List[List[opentrons.protocol_api.labware.Well]]

Accessor function used to navigate through a labware by row.

With indexing one can treat it as a typical python nested list. To access row A for example, simply write: labware.rows()[0]. This will output ['A1', 'A2', 'A3', 'A4'...]

Note that this method takes args for backward-compatibility, but use of args is deprecated and will be removed in future versions. Args can be either strings or integers, but must all be the same type (e.g.: self.rows(1, 4, 8) or self.rows('A', 'B'), but self.rows('A', 4) is invalid.

Returns A list of row lists

New in version 2.0.

 $rows_by_index$ (self) \rightarrow Dict[str, List[opentrons.protocol_api.labware.Well]]

Deprecated since version 2.0: Use rows_by_name () (page 86) instead.

New in version 2.0.

 $rows_by_name(self) \rightarrow Dict[str, List[opentrons.protocol_api.labware.Well]]$

Accessor function used to navigate through a labware by row name.

With indexing one can treat it as a typical python dictionary. To access row A for example, simply write: labware.rows_by_name()['A'] This will output ['A1', 'A2', 'A3', 'A4'...].

Returns Dictionary of Well lists keyed by row name

New in version 2.0.

set_calibration (self, delta: opentrons.types.Point)

Called by save calibration in order to update the offset on the object.

property tip_length

New in version 2.0.

property uri

A string fully identifying the labware.

Returns The uri, "namespace/loadname/version"

New in version 2.0.

use_tips (*self*, *start_well: opentrons.protocol_api.labware.Well*, *num_channels: int* = 1) Removes tips from the tip tracker.

This method should be called when a tip is picked up. Generally, it will be called with *num_channels=1* or *num_channels=8* for single- and multi-channel respectively. If picking up with more than one channel, this method will automatically determine which tips are used based on the start well, the number of channels, and the geometry of the tiprack.

Parameters

- **start_well** (Well (page 87)) The Well (page 87) from which to pick up a tip. For a single-channel pipette, this is the well to send the pipette to. For a multi-channel pipette, this is the well to send the back-most nozzle of the pipette to.
- num_channels (int⁸⁷) The number of channels for the current pipette

well (self, idx) \rightarrow opentrons.protocol_api.labware.Well

Deprecated—use result of wells or wells_by_name

New in version 2.0.

⁸⁶ https://docs.python.org/3/library/functions.html#int

⁸⁷ https://docs.python.org/3/library/functions.html#int

wells (*self*, **args*) \rightarrow List[opentrons.protocol api.labware.Well]

Accessor function used to generate a list of wells in top -> down, left -> right order. This is representative of moving down *rows* and across *columns* (e.g. 'A1', 'B1', 'C1'...'A2', 'B2', 'C2')

With indexing one can treat it as a typical python list. To access well A1, for example, simply write: labware.wells()[0]

Note that this method takes args for backward-compatibility, but use of args is deprecated and will be removed in future versions. Args can be either strings or integers, but must all be the same type (e.g.: self.wells(1, 4, 8) or self.wells('A1', 'B2'), but self.wells('A1', 4) is invalid.

Returns Ordered list of all wells in a labware

New in version 2.0.

wells_by_index (self) \rightarrow Dict[str, opentrons.protocol_api.labware.Well]

Deprecated since version 2.0: Use wells_by_name() (page 87) or dict access instead.

New in version 2.0.

$wells_by_name (self) \rightarrow Dict[str, opentrons.protocol_api.labware.Well]$

Accessor function used to create a look-up table of Wells by name.

With indexing one can treat it as a typical python dictionary whose keys are well names. To access well A1, for example, simply write: labware.wells_by_name()['A1']

Returns Dictionary of well objects keyed by well name

New in version 2.0.

```
exception opentrons.protocol_api.labware.OutOfTipsError
exception opentrons.protocol_api.labware.TipSelectionError
```

```
class opentrons.protocol_api.labware.Well(well_implementation:
```

open-

trons. protocols. context. well. Well Implementation,

api_level: Op-

tional[opentrons.protocols.api_support.types.APIVersion]

The Well class represents a single well in a Labware (page 83)

It provides functions to return positions used in operations on the well such as top() (page 88), bottom() (page 87)

property api_version

New in version 2.0.

bottom (*self*, *z*: *float* = 0.0) \rightarrow opentrons.types.Location

Parameters z – the z distance in mm

Returns a Point corresponding to the absolute position of the bottom-center of the well (with the front-left corner of slot 1 as (0,0,0)). If z is specified, returns a point offset by z mm from bottom-center

New in version 2.0.

center (self) \rightarrow opentrons.types.Location

Returns a Point corresponding to the absolute position of the center of the well relative to the deck (with the front-left corner of slot 1 as (0,0,0))

New in version 2.0.

property depth

The depth of a well in a labware.

New in version 2.9.

property diameter

New in version 2.0.

from_center_cartesian (self, x: float, y: float, z: float) \rightarrow opentrons.types.Point

Specifies an arbitrary point in deck coordinates based on percentages of the radius in each axis. For example, to specify the back-right corner of a well at 1/4 of the well depth from the bottom, the call would be from_center_cartesian(1, 1, -0.5).

No checks are performed to ensure that the resulting position will be inside of the well.

Parameters

- \mathbf{x} a float in the range [-1.0, 1.0] for a percentage of half of the radius/length in the X axis
- y a float in the range [-1.0, 1.0] for a percentage of half of the radius/width in the Y axis
- **z** a float in the range [-1.0, 1.0] for a percentage of half of the height above/below the center

Returns a opentrons.types.Point (page 100) representing the specified location in absolute deck coordinates

New in version 2.8.

property has_tip

New in version 2.0.

property length

The length of a well, if the labware has square wells.

New in version 2.9.

property parent

New in version 2.0.

top (self, z: float = 0.0) \rightarrow opentrons.types.Location

Parameters z – the z distance in mm

Returns a Point corresponding to the absolute position of the top-center of the well relative to the deck (with the front-left corner of slot 1 as (0,0,0)). If z is specified, returns a point offset by z mm from top-center

New in version 2.0.

property well_name

New in version 2.7.

property width

The width of a well, if the labware has square wells.

New in version 2.9.

```
opentrons.protocol_api.labware.get_all_labware_definitions() \rightarrow List[str]
```

Return a list of standard and custom labware definitions with load_name + name_space + version existing on the robot

```
opentrons.protocol_api.labware.get_labware_definition (load_name: str, namespace: Union[str, NoneType] = None, version: Union[int, NoneType] = None, bundled_defs: Dict[str, ForwardRef('LabwareDefinition')] = None, extra_defs: Dict[str, ForwardRef('LabwareDefinition')] = None, open version: Vnion[int, NoneType] = None, bundled_defs: Dict[str, ForwardRef('LabwareDefinition')] = None, extra_defs: Dict[str, ForwardRef('LabwareDefinition')] = None) \rightarrow 'LabwareDefinition'
```

Look up and return a definition by load name + namespace + version and return it or raise an exception

Parameters

- load name (str^{88}) corresponds to 'loadName' key in definition
- namespace (str⁸⁹) The namespace the labware definition belongs to. If unspecified, will search 'opentrons' then 'custom_beta'
- **version** (int^{90}) The version of the labware definition. If unspecified, will use version 1.
- bundled_defs A bundle of labware definitions to exlusively use for finding labware definitions, if specified
- extra_defs An extra set of definitions (in addition to the system definitions) in which to search

```
opentrons.protocol_api.labware.load (load_name: str, parent: opentrons.types.Location, label: Union[str, NoneType] = None, namespace: Union[str, NoneType] = None, version: int = 1, bundled_defs: Union[Dict[str, ForwardRef('LabwareDefinition')], NoneType] = None, extra_defs: Union[Dict[str, ForwardRef('LabwareDefinition')], NoneType] = None, api_level: Union[opentrons.protocols.api_support.types.APIVersion, NoneType] = None) \rightarrow opentrons.protocol_api.labware.Labware
```

Return a labware object constructed from a labware definition dict looked up by name (definition must have been previously stored locally on the robot)

- load_name A string to use for looking up a labware definition previously saved to disc.
 The definition file must have been saved in a known location
- parent A Location (page 99) representing the location where the front and left most point of the outside of labware is (often the front-left corner of a slot on the deck).
- label (str⁹¹) An optional label that will override the labware's display name from its definition
- namespace (stx^{92}) The namespace the labware definition belongs to. If unspecified, will search 'opentrons' then 'custom_beta'

⁸⁸ https://docs.python.org/3/library/stdtypes.html#str

⁸⁹ https://docs.python.org/3/library/stdtypes.html#str

⁹⁰ https://docs.python.org/3/library/functions.html#int

⁹¹ https://docs.python.org/3/library/stdtypes.html#str

⁹² https://docs.python.org/3/library/stdtypes.html#str

- **version** (int^{93}) The version of the labware definition. If unspecified, will use version 1.
- bundled_defs If specified, a mapping of labware names to labware definitions. Only the bundle will be searched for definitions.
- **extra_defs** If specified, a mapping of labware names to labware definitions. If no bundle is passed, these definitions will also be searched.
- api_level the API version to set for the loaded labware instance. The Labware (page 83) will conform to this level. If not specified, defaults to MAX_SUPPORTED_VERSION.

```
opentrons.protocol_api.labware.load_from_definition(definition:
                                                                                        'LabwareDef-
                                                                      inition',
                                                                                  parent:
                                                                                               open-
                                                                      trons.types.Location,
                                                                                                  la-
                                                                      bel:
                                                                                 Union[str,
                                                                                               None-
                                                                                           api_level:
                                                                       Type]
                                                                                  None,
                                                                       Union[opentrons.protocols.api support.types.APIVersion
                                                                      NoneTypel = None \rightarrow open
                                                                      trons.protocol api.labware.Labware
```

Return a labware object constructed from a provided labware definition dict

Parameters

- **definition** A dict representing all required data for a labware, including metadata such as the display name of the labware, a definition of the order to iterate over wells, the shape of wells (shape, physical dimensions, etc), and so on. The correct shape of this definition is governed by the "labware-designer" project in the Opentrons/opentrons repo.
- parent A Location (page 99) representing the location where the front and left most point of the outside of labware is (often the front-left corner of a slot on the deck).
- label (str⁹⁴) An optional label that will override the labware's display name from its definition
- api_level the API version to set for the loaded labware instance. The Labware (page 83) will conform to this level. If not specified, defaults to MAX_SUPPORTED_VERSION.

```
opentrons.protocol_api.labware.save_definition (labware_def: 'LabwareDefinition', force: bool = False, location: Union[pathlib.Path, NoneType] = None) \rightarrow None
```

Save a labware definition

- labware_def A description
- **force** $(bool^{95})$ If true, overwrite an existing definition if found. Cannot overwrite Opentrons definitions.
- location The path of the labware definition.

⁹³ https://docs.python.org/3/library/functions.html#int

⁹⁴ https://docs.python.org/3/library/stdtypes.html#str

⁹⁵ https://docs.python.org/3/library/functions.html#bool

```
opentrons.protocol_api.labware.select_tiprack_from_list_paired_pipettes(tip_racks:
                                                                                                  List[opentrons.protocol ap
                                                                                                  p channels:
                                                                                                  int.
                                                                                                  s channels:
                                                                                                  int,
                                                                                                  start-
                                                                                                  ing_point:
                                                                                                  Union[opentrons.protocol_
                                                                                                  None-
                                                                                                  Type]
                                                                                                  None)
                                                                                                  \rightarrow
                                                                                                  Tu-
                                                                                                  ple[opentrons.protocol_api.
                                                                                                  open-
                                                                                                  trons.protocol_api.labware.
```

Helper function utilized in PairedInstrumentContext to determine which pipette tiprack to pick up from.

If a starting point is specified, this method with check that the parent of that tip was correctly filtered.

If a starting point is not specified, this method will filter tipracks until it finds a well that is not empty.

Returns A Tuple of the tiprack and well to move to. In this instance the starting well is specific to the primary pipette.

Raises *TipSelectionError* (page 87) – if the starting tip specified does not exist in the filtered tipracks.

```
opentrons.protocol_api.labware.verify_definition(contents: Union[\sim AnyStr, ForwardRef('LabwareDefinition'), Dict[str, Any]]) <math>\rightarrow 'LabwareDefinition'
```

Verify that an input string is a labware definition and return it.

If the definition is invalid, an exception is raised; otherwise parse the json and return the valid definition.

```
\textbf{Raises} \hspace{0.1cm} \textbf{json}. \hspace{0.1cm} \textbf{JSONDecodeError}^{96} - If \hspace{0.1cm} \textbf{the definition is not valid json}
```

Raises jsonschema. Validation Error – if the definition is not valid.

Returns The parsed definition

⁹⁶ https://docs.python.org/3/library/json.html#json.JSONDecodeError

Modules

```
class opentrons.protocol_api.contexts.TemperatureModuleContext (ctx:
                                                                                        Proto-
                                                                               colContext.
                                                                               hw module:
                                                                               mod-
                                                                               ules.tempdeck.TempDeck,
                                                                               geometry: Mod-
                                                                               uleGeometry,
                                                                               at version:
                                                                               APIVersion,
                                                                               loop:
                                                                                        asyn-
                                                                               cio.AbstractEventLoop)
```

An object representing a connected Temperature Module.

```
It should not be instantiated directly; instead, it should be created through ProtocolContext.
load module()
                          70)
                                using:
                                            ctx.load_module('Temperature Module',
slot_number).
```

A minimal protocol with a Temperature module would look like this:

Note: In order to prevent physical obstruction of other slots, place the Temperature Module in a slot on the horizontal edges of the deck (such as 1, 4, 7, or 10 on the left or 3, 6, or 7 on the right), with the USB cable and power cord pointing away from the deck.

New in version 2.0.

property api_version

New in version 2.0.

await_temperature (self, celsius: 'float')

Wait until module reaches temperature, in C.

Must be between 4 and 95C based on Opentrons QA.

Parameters celsius - The target temperature, in C

New in version 2.3.

deactivate (self)

Stop heating (or cooling) and turn off the fan.

New in version 2.0.

property geometry

The object representing the module as an item on the deck

Returns ModuleGeometry

New in version 2.0.

property labware

The labware (if any) present on this module.

New in version 2.0.

```
load labware (self, name: 'str', label: 'Optional[str]' = None, namespace: 'Optional[str]' = None,
                   version: 'int' = 1) \rightarrow 'Labware'
```

Specify the presence of a piece of labware on the module.

Parameters

• name – The name of the labware object.

- label (str^{97}) An optional special name to give the labware. If specified, this is the name the labware will appear as in the run log and the calibration view in the Opentrons app.
- namespace (str^{98}) The namespace the labware definition belongs to. If unspecified, will search 'opentrons' then 'custom_beta'
- **version** (int^{99}) The version of the labware definition. If unspecified, will use version 1

Returns The initialized and loaded labware object.

New in version 2.1: The *label, namespace*, and *version* parameters.

New in version 2.0.

load_labware_by_name (self, name: 'str', label: 'Optional[str]' = None, namespace: 'Optional[str]' = None, version: 'int' = 1) \rightarrow 'Labware' Deprecated since version 2.0: Use <code>load_labware()</code> (page 92) instead.

New in version 2.1.

load_labware_from_definition (self, definition: "'LabwareDefinition'", label: 'Optional[str]' = None) \rightarrow 'Labware' Specify the presence of a labware on the module, using an inline definition.

Parameters

- **definition** The labware definition.
- label (str^{100}) An optional special name to give the labware. If specified, this is the name the labware will appear as in the run log and the calibration view in the Opentrons app.

Returns The initialized and loaded labware object.

New in version 2.0.

load_labware_object (*self*, *labware*: 'Labware') \rightarrow 'Labware' Specify the presence of a piece of labware on the module.

Parameters labware – The labware object. This object should be already initialized and its parent should be set to this module's geometry. To initialize and load a labware onto the module in one step, see <code>load_labware()</code> (page 92).

Returns The properly-linked labware object

New in version 2.0.

set_temperature (self, celsius: 'float')

Set the target temperature, in C.

Must be between 4 and 95C based on Opentrons QA.

Parameters celsius – The target temperature, in C

New in version 2.0.

property status

The status of the module.

Returns 'holding at target', 'cooling', 'heating', or 'idle'

New in version 2.3.

⁹⁷ https://docs.python.org/3/library/stdtypes.html#str

⁹⁸ https://docs.python.org/3/library/stdtypes.html#str

⁹⁹ https://docs.python.org/3/library/functions.html#int

¹⁰⁰ https://docs.python.org/3/library/stdtypes.html#str

property target

Current target temperature in C

New in version 2.0.

property temperature

Current temperature in C

New in version 2.0.

```
class opentrons.protocol_api.contexts.MagneticModuleContext(ctx: Proto-
colContext,
hw_module: mod-
```

ules.magdeck.MagDeck, geometry: ModuleGeometry, at_version: APIVersion, loop: asyn-

cio.AbstractEventLoop)

An object representing a connected Temperature Module.

It should not be instantiated directly; instead, it should be created through ProtocolContext. load_module() (page 70).

New in version 2.0.

property api_version

New in version 2.0.

calibrate(self)

Calibrate the Magnetic Module.

The calibration is used to establish the position of the lawbare on top of the magnetic module.

New in version 2.0.

disengage (self)

Lower the magnets back into the Magnetic Module.

New in version 2.0.

The destination of the magnets can be specified in several different ways, based on internally stored default heights for labware:

- If neither height, height_from_base nor offset is specified, the magnets will raise to a reasonable default height based on the specified labware.
- The recommended way to adjust the height of the magnets is to specify height_from_base, which should be a distance in mm relative to the base of the labware that is on the magnetic module
- If height is specified, it should be a distance in mm from the home position of the magnets.
- If offset is specified, it should be an offset in mm from the default position. A positive number moves the magnets higher and a negative number moves the magnets lower.

Only certain labwares have defined engage heights for the Magnetic Module. If a labware that does not have a defined engage height is loaded on the Magnetic Module (or if no labware is loaded), then height or height_from_labware must be specified.

- height_from_base The height to raise the magnets to, in mm from the base of the labware
- **height** The height to raise the magnets to, in mm from home.
- offset An offset relative to the default height for the labware in mm

New in version 2.1: The *height_from_base* parameter.

New in version 2.0.

property geometry

The object representing the module as an item on the deck

Returns ModuleGeometry

New in version 2.0.

property labware

The labware (if any) present on this module.

New in version 2.0.

load_labware (self, name: 'str', label: 'Optional[str]' = None, namespace: 'Optional[str]' = None, version: 'int' = 1) \rightarrow 'Labware' Specify the presence of a piece of labware on the module.

Parameters

- name The name of the labware object.
- **label** (str¹⁰¹) An optional special name to give the labware. If specified, this is the name the labware will appear as in the run log and the calibration view in the Opentrons app.
- namespace (str^{102}) The namespace the labware definition belongs to. If unspecified, will search 'opentrons' then 'custom_beta'
- **version** (int^{103}) The version of the labware definition. If unspecified, will use version 1.

Returns The initialized and loaded labware object.

New in version 2.1: The *label, namespace*, and *version* parameters.

New in version 2.0.

load_labware_by_name (self, name: 'str', label: 'Optional[str]' = None, namespace: 'Optional[str]' = None, version: 'int' = 1) \rightarrow 'Labware' Deprecated since version 2.0: Use <code>load_labware()</code> (page 95) instead.

New in version 2.1.

load_labware_from_definition (self, definition: "'LabwareDefinition'", label: 'Optional[str]' = None) \rightarrow 'Labware' Specify the presence of a labware on the module, using an inline definition.

- **definition** The labware definition.
- label (str¹⁰⁴) An optional special name to give the labware. If specified, this is the name the labware will appear as in the run log and the calibration view in the Opentrons app.

¹⁰¹ https://docs.python.org/3/library/stdtypes.html#str

¹⁰² https://docs.python.org/3/library/stdtypes.html#str

¹⁰³ https://docs.python.org/3/library/functions.html#int

¹⁰⁴ https://docs.python.org/3/library/stdtypes.html#str

Returns The initialized and loaded labware object.

New in version 2.0.

load_labware_object (self, labware: 'Labware') → 'Labware'

Load labware onto a Magnetic Module, checking if it is compatible

New in version 2.0.

property status

The status of the module. either 'engaged' or 'disengaged'

New in version 2.0.

class opentrons.protocol_api.contexts.ThermocyclerContext (ctx: ProtocolContext,

hw_module: modules.thermocycler.Thermocycler,
geometry: ThermocyclerGeometry,
at_version: APIVersion, loop: asyncio.AbstractEventLoop)

An object representing a connected Temperature Module.

It should not be instantiated directly; instead, it should be created through $ProtocolContext.load_module()$ (page 70).

New in version 2.0.

property api_version

New in version 2.0.

property block_target_temperature

Target temperature in degrees C

New in version 2.0.

property block_temperature

Current temperature in degrees C

New in version 2.0.

property block_temperature_status

New in version 2.0.

close_lid(self)

Closes the lid

New in version 2.0.

deactivate(self)

Turn off the well block temperature controller, and heated lid

New in version 2.0.

deactivate block (self)

Turn off the well block temperature controller

New in version 2.0.

deactivate_lid(self)

Turn off the heated lid

New in version 2.0.

Execute a Thermocycler Profile defined as a cycle of steps to repeat for a given number of repetitions.

Parameters

- **steps** List of unique steps that make up a single cycle. Each list item should be a dictionary that maps to the parameters of the <code>set_block_temperature()</code> (page 98) method with keys 'temperature', 'hold_time_seconds', and 'hold_time_minutes'.
- **repetitions** The number of times to repeat the cycled steps.
- **block_max_volume** The maximum volume of any individual well of the loaded labware. If not supplied, the thermocycler will default to 25µL/well.

New in version 2.0.

property geometry

The object representing the module as an item on the deck

Returns ModuleGeometry

New in version 2.0.

property labware

The labware (if any) present on this module.

New in version 2.0.

property lid_position

Lid open/close status string

New in version 2.0.

property lid_target_temperature

Target temperature in degrees C

New in version 2.0.

property lid_temperature

Current temperature in degrees C

New in version 2.0.

property lid_temperature_status

New in version 2.0.

load_labware (self, name: 'str', label: 'Optional[str]' = None, namespace: 'Optional[str]' = None, version: 'int' = 1) \rightarrow 'Labware'

Specify the presence of a piece of labware on the module.

- name The name of the labware object.
- **label** (str¹⁰⁵) An optional special name to give the labware. If specified, this is the name the labware will appear as in the run log and the calibration view in the Opentrons app.
- namespace (str^{106}) The namespace the labware definition belongs to. If unspecified, will search 'opentrons' then 'custom_beta'
- **version** (int^{107}) The version of the labware definition. If unspecified, will use version 1.

¹⁰⁵ https://docs.python.org/3/library/stdtypes.html#str

¹⁰⁶ https://docs.python.org/3/library/stdtypes.html#str

¹⁰⁷ https://docs.python.org/3/library/functions.html#int

Returns The initialized and loaded labware object.

New in version 2.1: The *label, namespace*, and *version* parameters.

New in version 2.0.

load_labware_by_name (self, name: 'str', label: 'Optional[str]' = None, namespace: 'Optional[str]' = None, version: 'int' = 1) \rightarrow 'Labware' Deprecated since version 2.0: Use load_labware() (page 97) instead.

New in version 2.1.

load_labware_from_definition (self, definition: "'LabwareDefinition'", label: 'Optional[str]' = None) \rightarrow 'Labware' Specify the presence of a labware on the module, using an inline definition.

Parameters

- **definition** The labware definition.
- **label** (str¹⁰⁸) An optional special name to give the labware. If specified, this is the name the labware will appear as in the run log and the calibration view in the Opentrons app.

Returns The initialized and loaded labware object.

New in version 2.0.

load_labware_object (*self*, *labware*: '*Labware*') → 'Labware' Specify the presence of a piece of labware on the module.

Parameters labware – The labware object. This object should be already initialized and its parent should be set to this module's geometry. To initialize and load a labware onto the module in one step, see <code>load_labware()</code> (page 97).

Returns The properly-linked labware object

New in version 2.0.

open_lid(self)

Opens the lid

New in version 2.0.

Valid operational range yet to be determined.

- **temperature** The target temperature, in °C.
- hold_time_minutes The number of minutes to hold, after reaching temperature, before proceeding to the next command.
- hold_time_seconds The number of seconds to hold, after reaching temperature, before proceeding to the next command. If hold_time_minutes and hold_time_seconds are not specified, the Thermocycler will proceed to the next command after temperature is reached.
- ramp_rate The target rate of temperature change, in °C/sec. If ramp_rate is not specified, it will default to the maximum ramp rate as defined in the device configuration.

¹⁰⁸ https://docs.python.org/3/library/stdtypes.html#str

• block_max_volume – The maximum volume of any individual well of the loaded labware. If not supplied, the thermocycler will default to 25μL/well.

New in version 2.0.

```
set_lid_temperature (self, temperature: 'float')
```

Set the target temperature for the heated lid, in °C.

Parameters temperature – The target temperature, in °C clamped to the range 20°C to 105°C.

New in version 2.0.

Useful Types and Definitions

```
class opentrons.types.DeckSlotName
    Deck slot identifiers.
```

A location to target as a motion.

The location contains a *Point* (page 100) (in *Deck Coordinates* (page 105)) and possibly an associated *Labware* (page 83) or *Well* (page 87) instance.

It should rarely be constructed directly by the user; rather, it is the return type of most Well (page 87) accessors like Well.top() (page 88) and is passed directly into a method like InstrumentContext. aspirate().

Warning: The .labware attribute of this class is used by the protocol API internals to, among other things, determine safe heights to retract the instruments to when moving between locations. If constructing an instance of this class manually, be sure to either specify None as the labware (so the robot does its worst case retraction) or specify the correct labware for the .point attribute.

Warning: The == operation compares both the position and associated labware. If you only need to compare locations, compare the .point of each item.

```
move (self, point: 'Point') \rightarrow "'Location'"
```

Alter the point stored in the location while preserving the labware.

This returns a new Location and does not alter the current one. It should be used like

```
>>> loc = Location(Point(1, 1, 1), None)
>>> new_loc = loc.move(Point(1, 1, 1))
>>>
>>> # The new point is the old one plus the given offset.
>>> assert new_loc.point == Point(2, 2, 2) # True
>>>
>>> # The old point hasn't changed.
>>> assert loc.point == Point(1, 1, 1) # True
```

```
class opentrons.types.Mount
```

An enumeration.

```
class opentrons.types.MountType
    An enumeration.
```

```
exception opentrons.types.PipetteNotAttachedError
An error raised if a pipette is accessed that is not attached

class opentrons.types.Point (x, y, z)

property x
Alias for field number 0

property y
Alias for field number 1

property z
Alias for field number 2

class opentrons.types.TransferTipPolicy
An enumeration.
```

Executing and Simulating Protocols

opentrons.execute: functions and entrypoint for running protocols

This module has functions that can be imported to provide protocol contexts for running protocols during interactive sessions like Jupyter or just regular python shells. It also provides a console entrypoint for running a protocol from the command line.

```
opentrons.execute.execute(protocol_file: <class 'TextIO'>, protocol_name: str, propa-
gate_logs: bool = False, log_level: str = 'warning', emit_runlog:
Callable[[Dict[str, Any]], NoneType] = None, custom_labware_paths:
List[str] = None, custom_data_paths: List[str] = None)
```

Run the protocol itself.

This is a one-stop function to run a protocol, whether python or json, no matter the api verson, from external (i.e. not bound up in other internal server infrastructure) sources.

To run an opentrons protocol from other places, pass in a file like object as protocol_file; this function either returns (if the run has no problems) or raises an exception.

To call from the command line use either the autogenerated entrypoint opentrons_execute or python -m opentrons.execute.

- **protocol file** The protocol file to execute
- **protocol_name** The name of the protocol file. This is required internally, but it may not be a thing we can get from the protocol_file argument.
- propagate_logs Whether this function should allow logs from the Opentrons stack to propagate up to the root handler. This can be useful if you're integrating this function in a larger application, but most logs that occur during protocol simulation are best associated with the actions in the protocol that cause them. Default: False
- log_level The level of logs to emit on the command line: "debug", "info", "warning", or "error". Defaults to "warning".
- emit_runlog A callback for printing the runlog. If specified, this will be called whenever a command adds an entry to the runlog, which can be used for display and progress estimation. If specified, the callback should take a single argument (the name doesn't matter) which will be a dictionary (see below). Default: None

- **custom_labware_paths** A list of directories to search for custom labware, or None. Ignored if the apiv2 feature flag is not set. Loads valid labware from these paths and makes them available to the protocol context.
- **custom_data_paths** A list of directories or files to load custom data files from. Ignored if the apiv2 feature flag if not set. Entries may be either files or directories. Specified files and the non-recursive contents of specified directories are presented by the protocol context in ProtocolContext.bundled data.

The format of the runlog entries is as follows:

```
'name': command_name,
'payload': {
    'text': string_command_text,
        # The rest of this struct is command-dependent; see
        # opentrons.commands.commands. Its keys match format
        # keys in 'text', so that
        # entry['payload']['text'].format(**entry['payload'])
        # will produce a string with information filled in
}
```

```
opentrons.execute.get_arguments (parser: argparse.ArgumentParser) \rightarrow argparse.ArgumentParser
```

Get the argument parser for this module

Useful if you want to use this module as a component of another CLI program and want to add its arguments.

Parameters parser – A parser to add arguments to.

Returns argparse. ArgumentParser The parser with arguments added.

```
opentrons.execute.get_protocol_api (version: Union[str, opentrons.protocols.api_support.types.APIVersion], bundled_labware: Dict[str, ForwardRef('LabwareDefinition')] = None, bundled_data: Dict[str, bytes] = None, extra_labware: Dict[str, ForwardRef('LabwareDefinition')] = None) \rightarrow opentrons.protocol_api.protocol_context.ProtocolContext
```

Build and return a protocol api. ProtocolContext connected to the robot.

This can be used to run protocols from interactive Python sessions such as Jupyter or an interpreter on the command line:

```
>>> from opentrons.execute import get_protocol_api
>>> protocol = get_protocol_api('2.0')
>>> instr = protocol.load_instrument('p300_single', 'right')
>>> instr.home()
```

If extra_labware is not specified, any labware definitions saved in the labware directory of the Jupyter notebook directory will be available.

When this function is called, modules and instruments will be recached.

- version The API version to use. This must be lower than opentrons. protocol_api.MAX_SUPPORTED_VERSION. It may be specified either as a string ('2.0') or as a protocols.types.APIVersion(APIVersion(2, 0)).
- bundled_labware If specified, a mapping from labware names to labware definitions for labware to consider in the protocol. Note that if you specify this, _only_ labware in this

argument will be allowed in the protocol. This is preparation for a beta feature and is best not used.

- bundled_data If specified, a mapping from filenames to contents for data to be available in the protocol from protocol_api.ProtocolContext.bundled_data.
- extra_labware If specified, a mapping from labware names to labware definitions for labware to consider in the protocol in addition to those stored on the robot. If this is an empty dict, and this function is called on a robot, it will look in the 'labware' subdirectory of the Jupyter data directory for custom labware.

Returns The protocol context.

opentrons.execute.main() \rightarrow int

Handler for command line invocation to run a protocol.

Parameters argv – The arguments the program was invoked with; this is usually sys.argv¹⁰⁹ but if you want to override that you can.

Returns int A success or failure value suitable for use as a shell return code passed to sys.exit¹¹⁰ (0 means success, anything else is a kind of failure).

opentrons.simulate: functions and entrypoints for simulating protocols

This module has functions that provide a console entrypoint for simulating a protocol from the command line.

class opentrons.simulate.AccumulatingHandler(level, command queue)

emit (self, record)

Do whatever it takes to actually log the specified logging record.

This version is intended to be implemented by subclasses and so raises a NotImplementedError.

class opentrons.simulate.CommandScraper(logger: logging.Logger, level: str, broker: opentrons.broker.Broker)

An object that handles scraping the broker for commands

This should be instantiated with the logger to integrate messages from (e.g. logging.getLogger('opentrons')), the level to scrape, and the opentrons broker object to subscribe to.

The *commands* (page 102) property contains the list of commands and log messages integrated together. Each element of the list is a dict following the pattern in the docs of *simulate* (page 103).

property commands

The list of commands. See simulate (page 103)

opentrons.simulate.allow_bundle() \rightarrow bool

Check if bundling is allowed with a special not-exposed-to-the-app flag.

Returns True if the environment variable OT API FF allowBundleCreation is "1"

 $opentrons.simulate. \textbf{bundle_from_sim} (protocol: opentrons.protocols.types. Python Protocol, context: opentrons.protocol_api.protocol_context. Protocol Context)$

→ opentrons.protocols.types.BundleContents

From a protocol, and the context that has finished simulating that protocol, determine what needs to go in a bundle for the protocol.

 $\texttt{opentrons.simulate.format_runlog} (\textit{runlog: List[Mapping[str, Any]]}) \rightarrow \texttt{str}$

Format a run log (return value of simulate (page 103)) into a human-readable string

Parameters runlog – The output of a call to simulate (page 103)

¹⁰⁹ https://docs.python.org/3/library/sys.html#sys.argv

¹¹⁰ https://docs.python.org/3/library/sys.html#sys.exit

```
opentrons.simulate.get_arguments(parser: argparse.ArgumentParser) \rightarrow argparse.ArgumentParser
```

Get the argument parser for this module

Useful if you want to use this module as a component of another CLI program and want to add its arguments.

Parameters parser – A parser to add arguments to. If not specified, one will be created.

Returns argparse. ArgumentParser The parser with arguments added.

```
opentrons.simulate.get protocol api (version:
                                                                           Union[str,
                                                                                                open-
                                                 trons.protocols.api\_support.types.APIVersion],
                                                 bundled_labware:
                                                                                Dict[str,
                                                                                                 For-
                                                 wardRef('LabwareDefinition')]
                                                                                 =
                                                                                       None,
                                                                                                 bun-
                                                 dled data: Dict[str, bytes] = None, extra labware:
                                                 Dict[str,
                                                                     ForwardRef('LabwareDefinition')]
                                                              None,
                                                                                 hardware simulator:
                                                 Union[opentrons.hardware_control.thread_manager.ThreadManager,
                                                 opentrons.hardware_control.adapters.SynchronousAdapter,
                                                 ForwardRef('HasLoop')]
                                                                                None)
                                                                                                open-
                                                 trons.protocol api.protocol context.ProtocolContext
```

Build and return a protocol_api.ProtocolContext connected to Virtual Smoothie.

This can be used to run protocols from interactive Python sessions such as Jupyter or an interpreter on the command line:

```
>>> from opentrons.simulate import get_protocol_api
>>> protocol = get_protocol_api('2.0')
>>> instr = protocol.load_instrument('p300_single', 'right')
>>> instr.home()
```

If extra_labware is not specified, any labware definitions saved in the labware directory of the Jupyter notebook directory will be available.

Parameters

- **version** The API version to use. This must be lower than opentrons. protocol_api.MAX_SUPPORTED_VERSION. It may be specified either as a string ('2.0') or as a protocols.types.APIVersion(APIVersion(2, 0)).
- bundled_labware If specified, a mapping from labware names to labware definitions for labware to consider in the protocol. Note that if you specify this, _only_ labware in this argument will be allowed in the protocol. This is preparation for a beta feature and is best not used.
- bundled_data If specified, a mapping from filenames to contents for data to be available in the protocol from protocol_api.ProtocolContext.bundled_data.
- extra_labware If specified, a mapping from labware names to labware definitions for labware to consider in the protocol in addition to those stored on the robot. If this is an empty dict, and this function is called on a robot, it will look in the 'labware' subdirectory of the Jupyter data directory for custom labware.
- hardware_simulator If specified, a hardware simulator instance.

Returns The protocol context.

```
opentrons.simulate.main() \rightarrow int Run the simulation
```

```
opentrons.simulate.simulate(protocol_file: <class 'TextIO'>, file_name: str = None, cus-
                                    tom_labware_paths:
                                                          List[str] = None, custom_data_paths:
                                    List[str] = None, propagate logs:
                                                                          bool = False, hard-
                                                               str = None, duration\_estimator:
                                    ware_simulator_file_path:
                                    Union[opentrons.protocols.duration.estimator.DurationEstimator,
                                    NoneType]
                                                 =
                                                      None,
                                                                log level:
                                                                               str
                                    ing')
                                                           Tuple[List[Mapping[str,
                                                                                           Anvll.
                                    Union[opentrons.protocols.types.BundleContents, NoneType]]
```

Simulate the protocol itself.

This is a one-stop function to simulate a protocol, whether python or json, no matter the api version, from external (i.e. not bound up in other internal server infrastructure) sources.

To simulate an opentrons protocol from other places, pass in a file like object as protocol_file; this function either returns (if the simulation has no problems) or raises an exception.

To call from the command line use either the autogenerated entrypoint opentrons_simulate (opentrons_simulate.exe, on windows) or python -m opentrons.simulate.

The return value is the run log, a list of dicts that represent the commands executed by the robot; and either the contents of the protocol that would be required to bundle, or None.

Each dict element in the run log has the following keys:

- level: The depth at which this command is nested if this an aspirate inside a mix inside a transfer, for instance, it would be 3.
- payload: The command, its arguments, and how to format its text. For more specific details see opentrons.commands. To format a message from a payload do payload['text']. format (**payload).
- logs: Any log messages that occurred during execution of this command, as a logging.LogRecord

Parameters

- protocol file The protocol file to simulate.
- file name The name of the file
- **custom_labware_paths** A list of directories to search for custom labware, or None. Ignored if the apiv2 feature flag is not set. Loads valid labware from these paths and makes them available to the protocol context.
- **custom_data_paths** A list of directories or files to load custom data files from. Ignored if the apiv2 feature flag if not set. Entries may be either files or directories. Specified files and the non-recursive contents of specified directories are presented by the protocol **context** in protocol_api.ProtocolContext.bundled_data.
- hardware_simulator_file_path A path to a JSON file defining a hardware simulator.
- duration_estimator For internal use only. Optional duration estimator object.
- propagate_logs Whether this function should allow logs from the Opentrons stack to propagate up to the root handler. This can be useful if you're integrating this function in a larger application, but most logs that occur during protocol simulation are best associated with the actions in the protocol that cause them. Default: False
- log_level The level of logs to capture in the runlog: "debug", "info", "warning", or "error". Defaults to "warning".

Returns A tuple of a run log for user output, and possibly the required data to write to a bundle to bundle this protocol. The bundle is only emitted if bundling is allowed and this is an unbundled Protocol API v2 python protocol. In other cases it is None.

Deck Coordinates

The OT2's base coordinate system is known as deck coordinates. This coordinate system is referenced frequently through the API. It is a right-handed coordinate system always specified in mm, with (0, 0, 0) at the front left of the robot. +x is to the right, +y is to the back, and +z is up.

Note that there are technically two z axes, one for each pipette mount. In these terms, z is the axis of the left pipette mount and a is the axis of the right pipette mount. These are obscured by the API's habit of defining motion commands on a per-pipette basis; the pipettes internally select the correct z axis to move. This is also true of the pipette plunger axes, b (left) and c (right).

When locations are specified to functions like <code>opentrons.protocol_api.contexts.InstrumentContext.move_to()</code> (page 78), in addition to being an instance of <code>opentrons.protocol_api.labware.Well</code> (page 87) they may define coordinates in this deck coordinate space. These coordinates can be specified either as a standard python <code>tuple111</code> of three floats, or as an instance of the <code>collections.namedtuple112</code> <code>opentrons.types.Point</code> (page 100), which can be created in the same way.

5.9 Examples

All examples on this page use a 'corning_96_wellplate_360ul_flat' (an ANSI standard 96-well plate¹¹³) in slot 1, and two 'opentrons_96_tiprack_300ul' (the Opentrons standard 300 µL tiprack¹¹⁴) in slots 2 and 3. They also require a P300 Single attached to the right mount. Some examples also use a 'usascientific 12 reservoir 22ml' (a USA Scientific 12-row reservoir¹¹⁵) in slot 4.

Basic Transfer

Moving 100 µL from one well to another:

```
from opentrons import protocol_api

metadata = { 'apiLevel': '2.11' }

def run(protocol: protocol_api.ProtocolContext):
    plate = protocol.load_labware('corning_96_wellplate_360ul_flat', 1)
    tiprack_1 = protocol.load_labware('opentrons_96_tiprack_300ul', 2)
    p300 = protocol.load_instrument('p300_single', 'right', tip_racks=[tiprack_1])

    p300.transfer(100, plate['Al'], plate['Bl'])
```

This accomplishes the same thing as the following basic commands:

```
from opentrons import protocol_api

metadata = {'apiLevel': '2.11'}

def run(protocol: protocol_api.ProtocolContext):
    plate = protocol.load_labware('corning_96_wellplate_360ul_flat', 1)
```

(continues on next page)

¹¹¹ https://docs.python.org/3/library/stdtypes.html#tuple

¹¹² https://docs.python.org/3/library/collections.html#collections.namedtuple

¹¹³ https://labware.opentrons.com/corning_96_wellplate_360ul_flat

¹¹⁴ https://labware.opentrons.com/opentrons_96_tiprack_300ul

https://labware.opentrons.com/usascientific_12_reservoir_22ml

(continued from previous page)

```
tiprack_1 = protocol.load_labware('opentrons_96_tiprack_300ul', 2)
p300 = protocol.load_instrument('p300_single', 'right', tip_racks=[tiprack_1])

p300.pick_up_tip()
p300.aspirate(100, plate['Al'])
p300.dispense(100, plate['Bl'])
p300.drop_tip()
```

Loops

Loops in Python allow your protocol to perform many actions, or act upon many wells, all within just a few lines. The below example loops through the numbers 0 to 7, and uses that loop's current value to transfer from all wells in a reservoir to each row of a plate:

```
from opentrons import protocol_api

metadata = {'apiLevel': '2.11'}

def run(protocol: protocol_api.ProtocolContext):
    plate = protocol.load_labware('corning_96_wellplate_360ul_flat', 1)
    tiprack_1 = protocol.load_labware('opentrons_96_tiprack_300ul', 2)
    reservoir = protocol.load_labware('usascientific_12_reservoir_22ml', 4)
    p300 = protocol.load_instrument('p300_single', 'right', tip_racks=[tiprack_1])
    # distribute 20uL from reservoir:A1 -> plate:row:1
    # distribute 20uL from reservoir:A2 -> plate:row:2
# etc...

# range() starts at 0 and stops before 8, creating a range of 0-7
for i in range(8):
        p300.distribute(200, reservoir.wells()[i], plate.rows()[i])
```

Multiple Air Gaps

The OT-2 pipettes can do some things that a human cannot do with a pipette, like accurately alternate between aspirating and creating air gaps within the same tip. The below example will aspirate from the first five wells in the reservoir, while creating an air gap between each sample.

```
from opentrons import protocol_api

metadata = { 'apiLevel': '2.11' }

def run(protocol: protocol_api.ProtocolContext):
    plate = protocol.load_labware('corning_96_wellplate_360ul_flat', 1)
    tiprack_1 = protocol.load_labware('opentrons_96_tiprack_300ul', 2)
    reservoir = protocol.load_labware('usascientific_12_reservoir_22ml', 4)
    p300 = protocol.load_instrument('p300_single', 'right', tip_racks=[tiprack_1])
    p300.pick_up_tip()

for well in reservoir.wells()[:4]:
```

(continues on next page)

(continued from previous page)

```
p300.aspirate(35, well)
    p300.air_gap(10)

p300.dispense(225, plate['Al'])

p300.return_tip()
```

Dilution

This example first spreads a diluent to all wells of a plate. It then dilutes 8 samples from the reservoir across the 8 columns of the plate.

```
from opentrons import protocol_api
metadata = {'apiLevel': '2.11'}
def run (protocol: protocol_api.ProtocolContext):
   plate = protocol.load_labware('corning_96_wellplate_360ul_flat', 1)
   tiprack_1 = protocol.load_labware('opentrons_96_tiprack_300ul', 2)
   tiprack_2 = protocol.load_labware('opentrons_96_tiprack_300ul', 3)
   reservoir = protocol.load labware('usascientific 12 reservoir 22ml', 4)
   p300 = protocol.load_instrument('p300_single', 'right', tip_racks=[tiprack_1,_
→tiprack_2])
   p300.distribute(50, reservoir['A12'], plate.wells()) # dilutent
    # loop through each row
    for i in range(8):
        # save the source well and destination column to variables
        source = reservoir.wells()[i]
        row = plate.rows()[i]
        # transfer 30uL of source to first well in column
        p300.transfer(30, source, row[0], mix_after=(3, 25))
        # dilute the sample down the column
        p300.transfer(
            30, row[:11], row[1:],
           mix_after=(3, 25))
```

Plate Mapping

This example deposits various volumes of liquids into the same plate of wells and automatically refill the tip volume when it runs out.

```
from opentrons import protocol_api

metadata = { 'apiLevel': '2.11' }

def run(protocol: protocol_api.ProtocolContext):
```

(continues on next page)

```
plate = protocol.load_labware('corning_96_wellplate_360ul_flat', 1)
   tiprack_1 = protocol.load_labware('opentrons_96_tiprack_300ul', 2)
   tiprack_2 = protocol.load_labware('opentrons_96_tiprack_300ul', 3)
   reservoir = protocol.load_labware('usascientific_12_reservoir_22ml', 4)
   p300 = protocol.load_instrument('p300_single', 'right', tip_racks=[tiprack_1,_
→tiprack_2])
   # these uL values were created randomly for this example
   water_volumes = [
       1, 2, 3, 4, 5, 6, 7, 8,
       9, 10, 11, 12, 13, 14, 15, 16,
       17, 18, 19, 20, 21, 22, 23, 24,
       25, 26, 27, 28, 29, 30, 31, 32,
       33, 34, 35, 36, 37, 38, 39, 40,
       41, 42, 43, 44, 45, 46, 47, 48,
       49, 50, 51, 52, 53, 54, 55, 56,
       57, 58, 59, 60, 61, 62, 63, 64,
       65, 66, 67, 68, 69, 70, 71, 72,
       73, 74, 75, 76, 77, 78, 79, 80,
       81, 82, 83, 84, 85, 86, 87, 88,
       89, 90, 91, 92, 93, 94, 95, 96
   p300.distribute(water_volumes, reservoir['A12'], plate.wells())
```

5.10 Advanced Control

Sometimes, you may write a protocol that is not suitable for execution through the Opentrons App. Perhaps it requires user input; perhaps it needs to do a lot of things it cannot do when being simulated. There are two ways to run a protocol on the OT-2 without using the Opentrons App.

Jupyter Notebook

The OT-2 runs a Jupyter Notebook server that you can connect to with your web browser. This is a convenient environment in which to write and debug protocols, since you can define different parts of your protocol in different notebook cells and run only part of the protocol at a given time.

You can access the OT-2's Jupyter Notebook by following these steps:

- 1. Open your Opentrons App and look for the IP address of your OT-2 on the information page.
- 2. Type in (Your OT-2's IP Address): 48888 into any browser on your computer.

Here, you can select a notebook and develop protocols that will be saved on the OT-2 itself. These protocols will only be on the OT-2 unless specifically downloaded to your computer using the File / Download As buttons in the notebook.

Protocol Structure

To take advantage of Jupyter's ability to run only parts of your protocol, you have to restructure your protocol turn it inside out. Rather than writing a single run function that contains all your protocol logic, you can use the function <code>opentrons.execute.get_protocol_api()</code> (page 101), into which you pass the same API version (see <code>Versioning</code> (page 9)) that you would specify in your protocol's metadata:

```
import opentrons.execute
protocol = opentrons.execute.get_protocol_api('2.11')
protocol.home()
```

This returns the same kind of object - a <code>ProtocolContext</code> (page 67) - that is passed into your protocol's run function when you upload your protocol in the Opentrons App. Full documentation on the capabilities and use of the <code>ProtocolContext</code> (page 67) object is available in the other sections of this guide - <code>Pipettes</code> (page 31), <code>Building Block Commands</code> (page 40), <code>Complex Commands</code> (page 49), <code>Labware</code> (page 13), and <code>Hardware Modules</code> (page 19); a full list of all available attributes and methods is available in <code>API Version 2 Reference</code> (page 66).

Whenever you call <code>get_protocol_api</code>, the robot will update its cache of attached instruments and modules. You can call <code>get_protocol_api</code> repeatedly; it will return an entirely new <code>ProtocolContext</code> (page 67) each time, without any labware loaded or any instruments established. This can be a good way to reset the state of the system, if you accidentally loaded in the wrong labware.

Now that you have a ProtocolContext (page 67), you call all its methods just as you would in a protocol, without the encompassing run function, just like if you were prototyping a plotting or pandas script for later use.

Note: Before you can command the OT-2 to move using the protocol API you have just built, you must home the robot using protocol.home(). If you try to move the OT-2 before you have called protocol.home(), you will get a MustHomeError.

Running A Previously-Written Protocol

If you have a protocol that you have already written you can run it directly in Jupyter. Copy the protocol into a cell and execute it - this won't cause the OT-2 to move, it just makes the function available. Then, call the run function you just defined, and give it a *ProtocolContext* (page 67):

```
import opentrons.execute
from opentrons import protocol_api
def run(protocol: protocol_api.ProtocolContext):
    # the contents of your protocol are here...

protocol = opentrons.execute.get_protocol_api('2.11')
run(protocol) # your protocol will now run
```

Custom Labware

If you have custom labware definitions you want to use with Jupyter, make a new directory called "labware" in Jupyter and put the definitions there. These definitions will be available when you call load_labware.

Command Line

The OT-2's command line is accessible either by creating a new terminal in Jupyter or by using SSH to access its terminal 116.

To execute a protocol via SSH, copy it to the OT-2 using a program like scp and then use the command line program opentrons execute:

```
$ opentrons_execute /data/my_protocol.py
```

¹¹⁶ https://support.opentrons.com/en/articles/3203681

You can access help on the usage of opentrons_execute by calling opentrons_execute --help. This script has a couple options to let you customize what it prints out when you run it. By default, it will print out the same runlog you see in the Opentrons App when running a protocol, as it executes; it will also print out internal logs at level warning or above. Both of these behaviors can be changed.

Python Module Index

0

```
opentrons.execute, 100
opentrons.protocol_api.contexts, 67
opentrons.protocol_api.labware, 83
opentrons.simulate, 102
opentrons.types, 99
```

Index

A		bundle	_from_sim() (in ma	odule open-
AccumulatingHandler ($class$ i	n open-		trons.simulate), 102	
trons.simulate), 102	1	bundle	d_data()	(open-
air_gap()(opentrons.protocol_api.context	ts.Instrument	Context	trons.protocol_api.contexts.Pro	tocolContext
method), 72			property), 67	
allow_bundle() (in module opentrons.sin	mulate), 102	С		
api_version()	(open-	C		
trons.protocol_api.contexts.Instrum	nentContext	calibr		(open-
property), 73			trons.protocol_api.contexts.Mag	gneticModuleContext
api_version()	(open-		method), 94	,
trons.protocol_api.contexts.Magnet	icModuleCor	<i>ıtex</i> alibr		(open-
property), 94	,		trons.protocol_api.labware.Lab	ware property),
api_version()	(open-		(an autum a must a sall a	mi lahwana Wall
trons.protocol_api.contexts.Protoco	olContext	center		ıpı.ıabware.weii
property), 67	(on an	ahanna	method), 87	antarts InstrumentContart
<pre>api_version()</pre>			ls () (opentrons.protocol_api.co property), 74	oniexis.msirumeniConiexi
property), 92	шиетошие		p() (opentrons.protocol_api.com	ntexts ProtocolContext
api_version()	(open-	CICUIIU	method), 67	iicais.i rotocot context
trons.protocol_api.contexts.Thermo		<i>t</i> clear		(open-
property), 96		_	trons.protocol_api.contexts.Pro	` 1
api_version()	(open-		method), 67	
trons.protocol_api.labware.Labwar	· .	close_		(open-
84	1 1 1		trons.protocol_api.contexts.The	rmocyclerContext
api_version()	(open-		method), 96	
trons.protocol_api.labware.Well 87	property),	column	s () (opentrons.protocol_api.la method), 84	ıbware.Labware
aspirate()(opentrons.protocol_api.conte	exts.Instrumer	nt Contex n	s_by_index()	(open-
method), 73			trons.protocol_api.labware.Lab	ware method),
await_temperature()	(open-		84	
trons.protocol_api.contexts.Temper	atureModule(<i>Context</i> mn		(open-
method), 92			trons.protocol_api.labware.Lab	ware method),
В			84	n IC
		comman	ds () (opentrons.protocol_api.co	ontexts.ProtocolContext
block_target_temperature()	(open-		method), 67	our and Conan on
trons.protocol_api.contexts.Thermo	ocyclerContex	at Comman	ds () (opentrons.simulate.Coproperty), 102	ommanascraper
property), 96	,	Comman	dScraper (class in opentrons.s	simulata) 102
<pre>block_temperature()</pre>	(open-			
	ecycierContex		method), 67	ilexis.1 Totocorcomexi
property), 96	(on an	connec	t () (opentrons.protocol_api.com	ntexts ProtocolContext
<pre>block_temperature_status()</pre>	(open-		method), 67	nems.i rotocot comem
property), 96	cycler Conlex		idate()	(open-
blow_out() (opentrons.protocol_api.conte	orts Instrume		trons.protocol_api.contexts.Inst	` *
method), 73	AIS.IIISII WIILEI	u Context	method), 74	
bottom() (opentrons.protocol_api.ld	abware.Well	curren	t_volume()	(open-
method), 87			trons.protocol_api.contexts.Inst	rumentContext
build_using()	(open-		property), 74	
trons.protocol_api.contexts.Protoco				
class method), 67				

D	F
deactivate() (open-	- fixed_trash() (open-
trons.protocol_api.contexts.TemperatureModul method), 92	leContext trons.protocol_api.contexts.ProtocolContext property), 68
deactivate() (open-	- flow_rate() (open-
trons.protocol_api.contexts.ThermocyclerConte method), 96	ext trons.protocol_api.contexts.InstrumentContext property), 76
deactivate_block() (open-	
$trons.protocol_api.contexts. Thermocycler Contexts and the property of the p$	<i>ext</i> 102
method), 96	<pre>from_center_cartesian() (open-</pre>
deactivate_lid() (open-	
trons.protocol_api.contexts.ThermocyclerConte method), 96	
deck() (opentrons.protocol_api.contexts.ProtocolConte	ext G
property), 68	geometry()(opentrons.protocol_api.contexts.MagneticModuleContext
DeckSlotName (class in opentrons.types), 99	property), 95
default_speed() (open-	
$trons.protocol_api.contexts. Instrument Context$	
property), 74	<pre>geometry() (opentrons.protocol_api.contexts.ThermocyclerContext</pre>
<pre>delay() (opentrons.protocol_api.contexts.InstrumentC</pre>	
method), 74	<pre>get_all_labware_definitions() (in module</pre>
<pre>delay() (opentrons.protocol_api.contexts.ProtocolCon</pre>	<pre>get_arguments() (in module opentrons.execute),</pre>
<pre>depth() (opentrons.protocol_api.labware.Well prop- erty), 87</pre>	get_arguments() (in module opentrons.simulate),
<pre>diameter() (opentrons.protocol_api.labware.Wel</pre>	
property), 87	<pre>get_labware_definition() (in module open-</pre>
disconnect() (open-	
trons.protocol_api.contexts.ProtocolContext method), 68	<pre>get_protocol_api() (in module open- trons.execute), 101</pre>
disengage() (open-	
trons.protocol_api.contexts.MagneticModuleComethod), 94	
dispense() (opentrons.protocol_api.contexts.Instrum	ent Context
method), 74	has_tip()(opentrons.protocol_api.contexts.InstrumentContext
distribute() (open-	
trons.protocol_api.contexts.InstrumentContext method), 75	
door_closed() (open-	
trons.protocol_api.contexts.ProtocolContext	trons.protocol_api.labware.Labware property),
property), 68	84
	entContext) (opentrons.protocol_api.contexts.InstrumentContext method), 77
E	home () (opentrons.protocol_api.contexts.ProtocolContext method), 68
emit() (opentrons.simulate.AccumulatingHandler method), 102	trons.protocol_api.contexts.InstrumentContext
engage()(opentrons.protocol_api.contexts.MagneticM	AnduleContextnethoa), //
method), 94	hw_pipette() (open-
execute() (in module opentrons.execute), 100	trons.protocol_api.contexts.InstrumentContext
execute_profile() (open	
trons.protocol_api.contexts.ThermocyclerConte method), 96	ext
	InstrumentContext (class in open-

```
trons.protocol_api.contexts), 72
                                                     load_labware_by_name()
                                                                                                   (open-
                                             (open-
                                                              trons.protocol api.contexts.TemperatureModuleContext
is_simulating()
        trons.protocol_api.contexts.ProtocolContext
                                                              method), 93
                                                     load_labware_by_name()
        method), 68
                                                                                                   (open-
is_tiprack()
                                             (open-
                                                              trons.protocol\_api.contexts.ThermocyclerContext
        trons.protocol api.labware.Labware property),
                                                              method), 98
                                                     load labware from definition()
                                                                                                   (open-
                                                              trons.protocol\_api.contexts.MagneticModuleContext
                                                              method), 95
Labware (class in opentrons.protocol api.labware), 83
                                                     load_labware_from_definition()
                                                                                                   (open-
labware() (opentrons.protocol api.contexts.MagneticModuleContextons.protocol_api.contexts.ProtocolContext
                                                              method), 69
        property), 95
labware () \textit{ (opentrons.protocol\_api.contexts. Temperature \textit{ModdleCohneau} re\_from\_definition () }
                                                                                                   (open-
                                                              trons.protocol_api.contexts.TemperatureModuleContext
        property), 92
labware() (opentrons.protocol_api.contexts.ThermocyclerContext method), 93
        property), 97
                                                     load_labware_from_definition()
                                                                                                   (open-
                                                              trons.protocol_api.contexts.ThermocyclerContext
length() (opentrons.protocol_api.labware.Well prop-
                                                              method), 98
        erty), 88
                                             (open- load_labware_object()
lid_position()
        trons.protocol_api.contexts.ThermocyclerContext
                                                              trons.protocol api.contexts.MagneticModuleContext
        property), 97
                                                              method), 96
                                             (open- load_labware_object()
lid_target_temperature()
                                                              trons.protocol\_api.contexts.TemperatureModuleContext
        trons.protocol api.contexts.ThermocyclerContext
        property), 97
                                                              method), 93
lid_temperature()
                                             (open- load_labware_object()
                                                                                                   (open-
        trons.protocol\_api.contexts.ThermocyclerContext
                                                              trons.protocol api.contexts.ThermocyclerContext
                                                              method), 98
        property), 97
                                             (open- load_module()
                                                                                                   (open-
lid temperature status()
        trons.protocol\_api.contexts.ThermocyclerContext
                                                              trons.protocol_api.contexts.ProtocolContext
                                                              method), 70
        property), 97
load() (in module opentrons.protocol_api.labware), 89 load_name()
load_from_definition() (in module open-
                                                              trons.protocol_api.labware.Labware property),
        trons.protocol_api.labware), 90
                                                              84
load_instrument()
                                                     loaded_instruments()
                                                                                                   (open-
                                             (open-
        trons.protocol\_api.contexts.ProtocolContext
                                                              trons.protocol api.contexts.ProtocolContext
                                                              property), 70
        method), 68
load_labware()
                                             (open- loaded_labwares()
                                                                                                   (open-
                                                              trons.protocol\_api.contexts.ProtocolContext
        trons.protocol\_api.contexts.MagneticModuleContext
                                                              property), 70
        method), 95
                                             (open- loaded_modules()
                                                                                                   (open-
load labware()
                                                              trons.protocol api.contexts.ProtocolContext
        trons.protocol\_api.contexts.ProtocolContext
                                                              property), 71
        method), 69
load labware()
                                             (open-
                                                     Location (class in opentrons.types), 99
        trons.protocol\_api.contexts.TemperatureModuleContext
        method), 92
load_labware()
                                             (open-
                                                    magdeck_engage_height()
                                                                                                   (open-
        trons.protocol_api.contexts.ThermocyclerContext
                                                              trons.protocol_api.labware.Labware property),
        method), 97
load_labware_by_name()
                                             (open- MagneticModuleContext
                                                                                     (class
                                                                                                    open-
        trons.protocol_api.contexts.MagneticModuleContext
                                                              trons.protocol api.contexts), 94
        method), 95
                                                     main() (in module opentrons.execute), 102
load_labware_by_name()
                                             (open-
                                                     main() (in module opentrons.simulate), 103
        trons.protocol_api.contexts.ProtocolContext
                                                     max_speeds()
                                                                                                   (open-
        method), 69
                                                              trons.protocol\_api.contexts.ProtocolContext
```

```
property), 71
                                                                                                   (open-
                                                     pick_up_tip()
                                             (open-
                                                               trons.protocol api.contexts.InstrumentContext
max_volume()
        trons.protocol api.contexts.InstrumentContext
                                                              method), 79
                                                      PipetteNotAttachedError, 99
        property), 77
min_volume()
                                             (open-
                                                     Point (class in opentrons.types), 100
                                                     previous tip()
        trons.protocol api.contexts.InstrumentContext
                                                                                                   (open-
                                                               trons.protocol api.labware.Labware method),
        property), 77
mix()(opentrons.protocol_api.contexts.InstrumentContext
         method), 77
                                                      ProtocolContext
                                                                                (class
                                                                                            in
                                                                                                    open-
                                                               trons.protocol_api.contexts), 67
model() (opentrons.protocol_api.contexts.InstrumentContext
        property), 78
Mount (class in opentrons.types), 99
mount () (opentrons.protocol_api.contexts.InstrumentContextirks()
                                                                   (opentrons.protocol_api.labware.Labware
        property), 78
                                                              property), 85
MountType (class in opentrons.types), 99
                                                     R
move () (opentrons.types.Location method), 99
move_to() (opentrons.protocol_api.contexts.InstrumentContext fail_lights_on()
                                                                                                   (open-
                                                               trons.protocol_api.contexts.ProtocolContext
                                                              property), 72
Ν
                                                                   (opentrons.protocol_api.labware.Labware
                                                      reset()
name()(opentrons.protocol_api.contexts.InstrumentContext
                                                               method), 85
        property), 78
                                                      reset_tipracks()
                                                                                                   (open-
             (opentrons.protocol_api.labware.Labware
name()
                                                              trons.protocol\_api.contexts.InstrumentContext
        property), 84
                                                               method), 80
next_tip()(opentrons.protocol_api.labware.Labware
                                                     \verb"resume" () (open trons. protocol\_api.contexts. Protocol Context
        method), 85
                                                              method), 72
                                                      return_height()
                                                                                                   (open-
O
                                                               trons.protocol_api.contexts.InstrumentContext
open_lid()(opentrons.protocol_api.contexts.ThermocyclerContexproperty), 80
        method), 98
                                                      return_tip()
                                                                                                   (open-
opentrons.execute (module), 100
                                                               trons.protocol_api.contexts.InstrumentContext
opentrons.protocol api.contexts (module),
                                                              method), 80
                                                      return_tips()
                                                                                                   (open-
opentrons.protocol_api.labware
                                           (module),
                                                              trons.protocol_api.labware.Labware method),
         83
opentrons.simulate (module), 102
                                                                   (opentrons.protocol_api.labware.Labware
                                                      rows()
opentrons.types (module), 99
                                                               method), 86
OutOfTipsError, 87
                                                      rows_by_index()
                                                                                                   (open-
                                                               trons.protocol_api.labware.Labware method),
Р
                                                               86
pair_with()
                                                     rows_by_name()
                                                                                                   (open-
                                             (open-
                                                               trons.protocol api.labware.Labware method),
         trons.protocol_api.contexts.InstrumentContext
        method), 78
                                                               86
parameters()
                                             (open-
                                                      S
        trons.protocol_api.labware.Labware property),
                                                      save_definition()
                                                                                 (in
                                                                                         module
                                                                                                    open-
             (opentrons.protocol api.labware.Labware
parent()
                                                               trons.protocol_api.labware), 90
        property), 85
                                                      select_tiprack_from_list_paired_pipettes()
parent() (opentrons.protocol_api.labware.Well prop-
                                                               (in module opentrons.protocol_api.labware),
pause() (opentrons.protocol_api.contexts.ProtocolContextset_block_temperature()
                                                                                                   (open-
        method), 71
                                                               trons.protocol_api.contexts.ThermocyclerContext
                                                               method), 98
```

```
set calibration()
                                                                                    (open-type () (opentrons.protocol_api.contexts.InstrumentContext
                trons.protocol api.labware.Labware method),
                                                                                                                   property), 83
                                                                                    (open-
set_lid_temperature()
                trons.protocol\_api.contexts. Thermocycler Context~ \verb"uri" ()~ (open trons.protocol\_api.lab ware. Lab ware~proposition of the proposition of the 
                method), 99
                                                                                                                   erty), 86
set rail lights()
                                                                                    (open-
                                                                                                  use tips()(opentrons.protocol api.labware.Labware
                trons.protocol\_api.contexts.ProtocolContext
                                                                                                                   method), 86
                method), 72
                                                                                    (open-
set_temperature()
                trons.protocol_api.contexts.TemperatureModuleContextfy_definition()
                                                                                                                                                                    module
                                                                                                                                                         (in
                                                                                                                                                                                        open-
                method), 93
                                                                                                                   trons.protocol api.labware), 91
simulate() (in module opentrons.simulate), 103
speed() (opentrons.protocol_api.contexts.InstrumentContext
                property), 80
                                                                                                   Well (class in opentrons.protocol_api.labware), 87
starting_tip()
                                                                                    (open-
                                                                                                                            (opentrons.protocol_api.labware.Labware
                                                                                                   well()
                trons.protocol\_api.contexts.InstrumentContext
                                                                                                                   method), 86
                property), 81
\verb|status()| \textit{(opentrons.protocol\_api.contexts.MagneticModuleContext}| \textbf{ bottom\_clearance()}|
                                                                                                                                                                                       (open-
                                                                                                                   trons.protocol_api.contexts.InstrumentContext
                property), 96
\verb|status()| (open trons.protocol\_api.contexts. Temperature Module Context|, 83
                                                                                                                                   (opentrons.protocol_api.labware.Well
                property), 93
                                                                                                                  property), 88
                                                                                                   wells()
                                                                                                                            (opentrons.protocol api.labware.Labware
                                                                                                                   method), 86
target()(opentrons.protocol_api.contexts.TemperatureModuleContexts()
                                                                                                                                                                                       (open-
                property), 93
                                                                                                                   trons.protocol_api.labware.Labware method),
temp_connect()
                                                                                    (open-
                trons.protocol_api.contexts.ProtocolContext
                                                                                                   wells_by_name()
                                                                                                                                                                                       (open-
                method), 72
                                                                                                                   trons.protocol api.labware.Labware method),
temperature()
                                                                                    (open-
                trons.protocol_api.contexts.TemperatureModuleContexth()
                                                                                                                      (opentrons.protocol_api.labware.Well prop-
                property), 94
                                                                                                                   erty), 88
TemperatureModuleContext (class in
                                                                                    open-
                trons.protocol api.contexts), 92
ThermocyclerContext
                                                        (class
                                                                         in
                                                                                     open-
                                                                                                   x () (opentrons.types.Point property), 100
                trons.protocol_api.contexts), 96
tip_length()
                                                                                    (open-
                trons.protocol_api.labware.Labware property),
                                                                                                   y () (opentrons.types.Point property), 100
                86
tip_racks()
                                                                                    (open-
                                                                                                   Z
                trons.protocol_api.contexts.InstrumentContext
                                                                                                   z () (opentrons.types.Point property), 100
                property), 81
TipSelectionError, 87
top() (opentrons.protocol_api.labware.Well method),
                 88
touch_tip()
                                                                                    (open-
                trons.protocol_api.contexts.InstrumentContext
                method), 81
transfer() (opentrons.protocol_api.contexts.InstrumentContext
                method), 82
TransferTipPolicy (class in opentrons.types), 100
trash container()
                trons.protocol_api.contexts.InstrumentContext
                property), 83
```