

3-Side Frame Door Installation Instructions

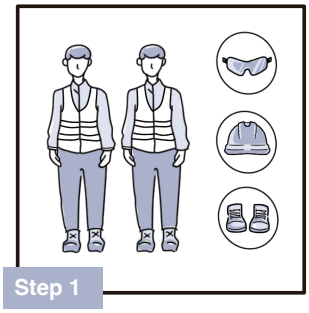


Step 1

Wear appropriate PPE (Personal Protective Equipment) such as gloves, safety goggles, and steel-toe boots.This metal door is heavy; it is recommendedto have a minimum of 2 people for theinstallation.

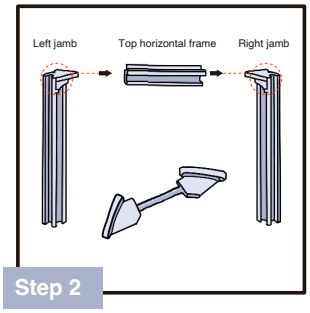


Step 2

For single doors: Skip to Step 3.
For double doors: Assemble the door frame before installation. Use the frame connectors to join the frame together. Check that the frame is square, then tighten all connector screws securely.

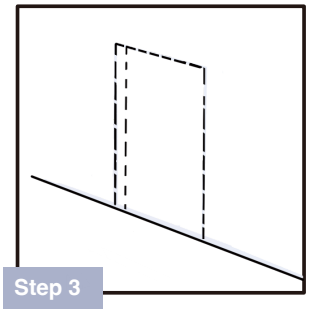


Step 3

Measure the door frame dimensions.
Cut out the wall according to the measured dimensions to fit the C channel and Door frame.
Cut the C channel for the wall opening.

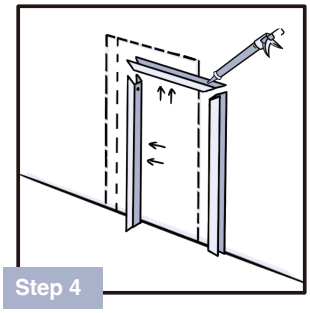


Step 4

Apply silicone inside the C channel, then install the C channel to the wall but do not secure it.

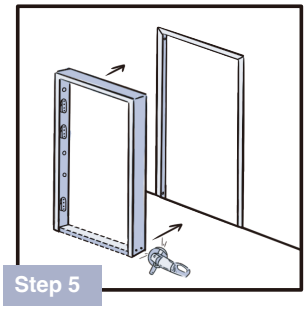


Step 5

Cut the bottom temporary frame before installation.
Remove the door leaf from the frame.
Push the door frame into the wall opening.

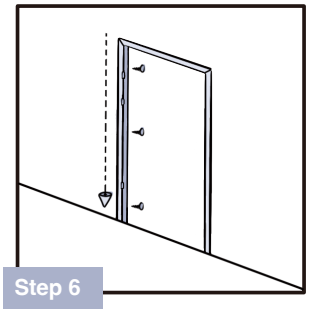


Step 6

Adjust the door frame and keep the hinge side vertically aligned.
Secure the hinge side frame to the C channel.

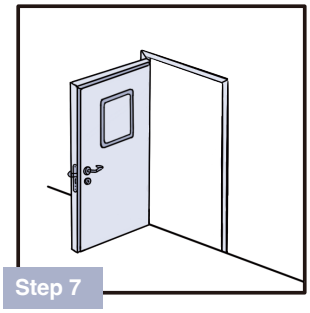


Step 7

Hang the door leaf on the frame.

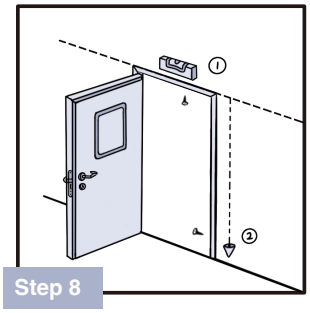


Step 8

Re-check the level and vertical alignment of the door frame and leaf and adjust the C channels.Continue securing the frame to the C channels with screws.

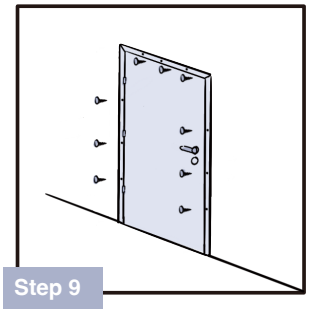


Step 9

Secure the C channel to the wall with rivets/screws if necessary.
Install all hardware: door locks and handles.

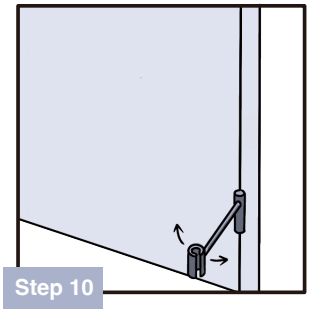

Step 10

Use the hinge wrench to slightly adjust the door leaf to achieve an even gap around the frame, if required.

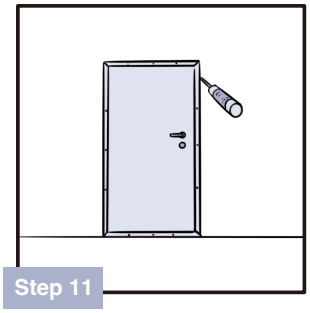

Step 11

Remove any excess packers.Open and close the door several times to check for smooth operation.
Apply silicone around the outside perimeter of the frame and C channel to the wall to seal it.
Remove the protective film from the door and clean it.