### CS202: COMPUTER ORGANIZATION

### Lecture 5

**Instruction Set Architecture(3)** 

## Today's Topic

- Recap:
  - More control instructions
  - Procedure call
- Today's topic:
  - MIPS addressing
  - Translating and starting a program
  - a C sort example
  - Other popular ISAs

## MIPS Addressing


- Addressing: how the instructions identify the operands of the instruction.
- MIPS Addressing mode:

```
    Immediate addressing addi $s0, $s1, 5
```

- Register addressing add \$s0, \$s1, \$s2
- Base/Displacement addressing lw \$s0, 0(\$s1)
- PC-relative addressing
   bne \$s0, \$s1, EXIT
- Pseudo-direct addressing j EXIT

## **Immediate Addressing**

- For instructions including immediate
  - E.g. addi, subi, andi, ori



- Most constants are small
  - 16-bit immediate is sufficient
- For the occasional 32-bit constant: y=x+4000000 4000000<sub>dec</sub>= 11 1101 0000 1001 0000 0000<sub>bin</sub>

#### lui rt, constant

- Copies 16-bit constant to left 16 bits of rt
- Clears right 16 bits of rt to 0

lui \$s0, 61


0000 0000 0011 1101 0000 0000 0000 0000

ori \$s0, \$s0, 2304

0000 0000 0011 1101 0000 1001 0000 0000

### Register Addressing

- Using register as the operand
- E.g. add, addi, sub, subi, lw, ...

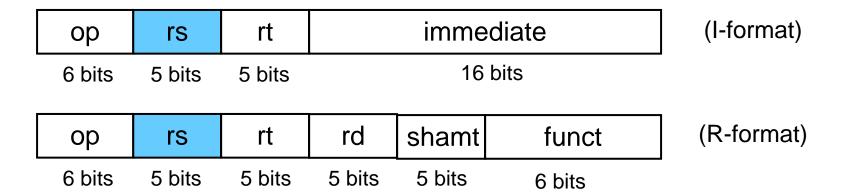

## Base/displacement Addressing

 the operand is at the memory, whose address is the sum of a register and a constant lw/lh/lb/sw/sh/sb

e.g. lw \$s0, 4(\$s1)
 op of lw: 100011
 rs: 10001 (address of s1), rt: 10000 (address of s0), address: 100 (4)

## Branch Addressing (PC-relative addressing)

- Branch instructions specify
  - Opcode, two registers, target address
  - e.g. beq \$s0 \$s1 label
- Most branch targets are near branch


beq \$s0 \$s1 label add \$s2 \$s3 \$s4 lable: sub \$s2 \$s3 \$s4

Forward or backward

- PC-relative addressing
  - Target address = PC + 4 + constant × 4

## Target Addressing Example

- Loop code from earlier example
  - Assume Loop at location 80000

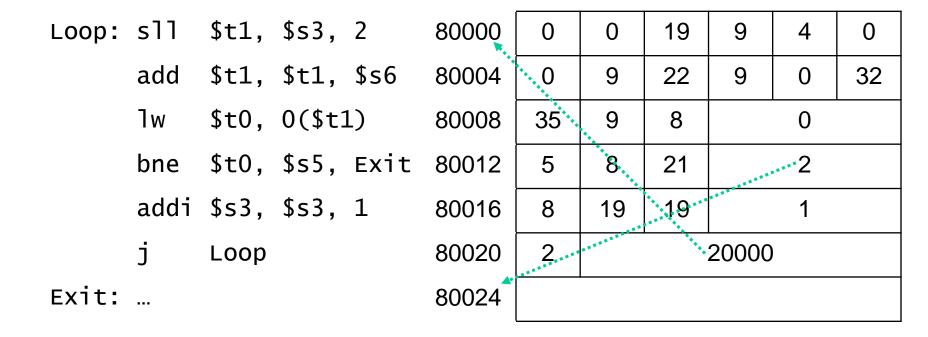

## Jump Addressing (Pseudo-direct addressing)

Jump (j and jal) targets could be anywhere in text segment 0x00400010: j label

Encode full address in instruction

0x00400100: lable: add \$s0... Ins: 000010 00000100000000000001000000 0000 00000100000000000001000000 00 Address op Memory PC Word

PC: 000000001000000 0000000000010000

- (Pseudo)Direct jump addressing
  - Target address = PC31...28 : (address  $\times$  4)

### Branching Far Away

- If branch target is too far to encode with 16-bit offset, assembler rewrites the code
- Example

```
beq $s0,$s1, L1


↓

bne $s0,$s1, L2

j L1

L2: ...
```

# Addressing Mode Summary

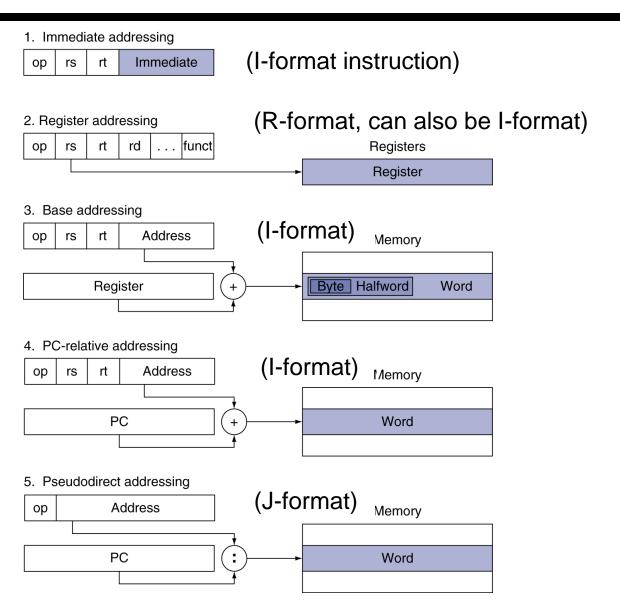

## There is no "direct addressing"

We can only use lw/sw to visit the memory

ori/lui is immediate addressing lb is base/displacement addressing

Address	Code	Basic			N	Νι
0x00400000		addiu \$2, \$0, 0x00000004	5:	li \$v0, 4	\$	
0x00400004	0x3c011001	lui \$1,0x00001001	6:	la \$a0, str	\$at	
0x00400008	0x34240000	ori \$4,\$1,0x00000000			\$v0	
0x0040000c	0x0000000c	syscal1	7:	syscal1		
0x00400010	0x80880000	1b \$8,0x00000000(\$4)	8:	lb \$t0, (\$a0)	\$v1	
0x00400014	0x2402000a	addiu \$2,\$0,0x0000000a	10:	li \$v0,10	\$a0	
0x00400018	0x0000000c	syscal1	11:	syscall	12	

## Decoding Machine Language

What is the assembly language of the following machine instruction?

#### 0x00af8020

- Hex to bin: 0000 0000 1010 1111 1000 0000 0010 0000
   op rs rt rd shamt funct
   000000 00101 01111 10000 00000 100000
- Get the instruction: add \$s0,\$a1,\$t7

# **Decoding Machine Language**

op(31:26)								
28–26	0(000)	1(001)	2(010)	3(011)	4(100)	5(101)	6(110)	7(111)
31–29								
0(000)	R-format	B1tz/gez	jump	jump & link	branch eq	branch ne	blez	bgtz
1(001)	add immediate	addiu	set less than imm.	set less than imm. unsigned	andi	ori	xori	load upper immediate
2(010)	TLB	F1Pt						
3(011)								
4(100)	load byte	load half	1w1	load word	load byte unsigned	load half unsigned	lwr	
5(101)	store byte	store half	swl	store word			swr	
6(110)	load linked word	1wc1						
7(111)	store cond. word	swc1						


# Decoding Machine Language

	op(31:26)=000000 (R-format), funct(5:0)								
2–0	0(000)	1(001)	2(010)	3(011)	4(100)	5(101)	6(110)	7(111)	
5–3									
0(000)	shift left logical		shift right logical	sra	sllv		srlv	srav	
1(001)	jump register	jalr			syscall	break			
2(010)	mfhi	mthi	mflo	mtlo					
3(011)	mult	multu	div	divu					
4(100)	add	addu	subtract	subu	and	or	xor	not or (nor)	
5(101)			set l.t.	set l.t. unsigned					
6(110)									
7(111)									

### **MIPS Instruction Formats**

Name		Fields					Comments
Field size	6 bits	5 bits	5 bits	5 bits	5 bits	6 bits	All MIPS instructions are 32 bits long
R-format	ор	rs	rt	rd	rd shamt funct		Arithmetic instruction format
I-format	ор	rs	rt	address/immediate		diate	Transfer, branch, i mm. format
J-format	ор		ta	target address			Jump instruction format

## Starting a C Program

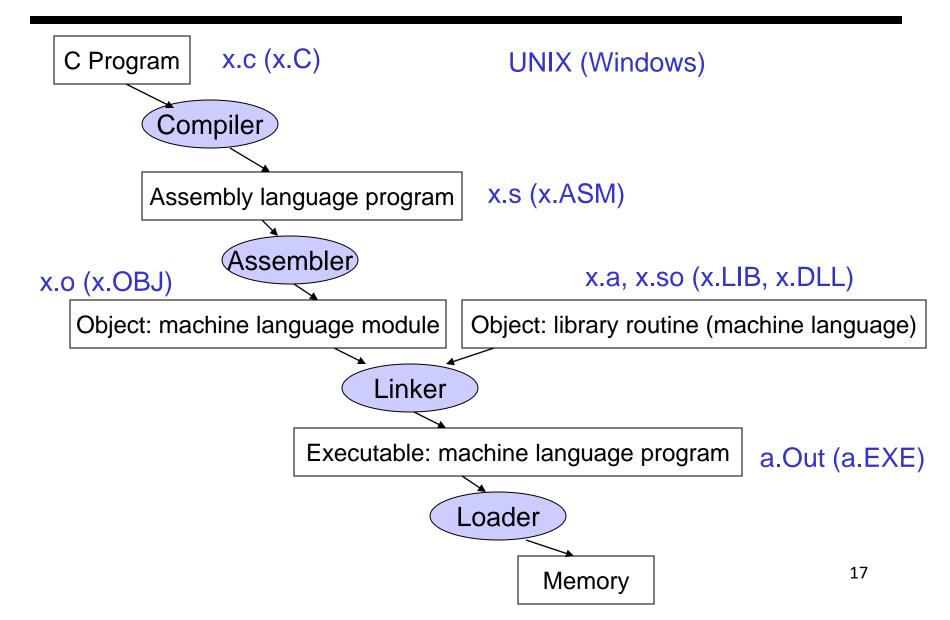

### Role of Assembler

- Convert pseudo-instructions into actual hardware instructions – pseudo-instrs make it easier to program in assembly – examples: "move", "blt", 32-bit immediate operands, etc.
- Convert assembly instrs into machine instrs a separate object file (x.o) is created for each C file (x.c) – compute the actual values for instruction labels – maintain info on external references and debugging information

- Stitches different object files into a single executable
  - patch internal and external references
  - determine addresses of data and instruction labels
  - organize code and data modules in memory
- Some libraries (DLLs) are dynamically linked the executable points to dummy routines – these dummy routines call the dynamic linker-loader so they can update the executable to jump to the correct routine

### Object file 1:

Object file header			
	Name	Procedure A	
	Text size	100 <sub>hex</sub>	
	Data size	20 <sub>hex</sub>	
Text segment	Address	Instruction	
	0	lw \$a0, 0(\$gp)	
	4	jal O	
Data segment	0	( X )	
Relocation information	Address	Instruction type	Dependency
	0	1 w	X
	4	jal	В
Symbol table	Label	Address	
	Χ	_	
	В	_	
	В	_	


### Object file 2:

Object file header			
	Name	Procedure B	
	Text size	200 <sub>hex</sub>	
	Data size	30 <sub>hex</sub>	
Text segment	Address	Instruction	
	0	sw \$a1, 0(\$gp)	
	4	jal O	
Data segment	0	(Y)	
Relocation information	Address	Instruction type	Dependency
	0	SW	Υ
	4	jal	Α
Symbol table	Label	Address	
	Υ	_	
	Α	_	

### Executable file: $p+8000_{hex}=10008000_{hex}+ffff8000_{hex}=10000000_{hex}$

Executable file header		
	Text size	300 <sub>hex</sub>
	Data size	50 <sub>hex</sub>
Text segment	Address	Instruction
A	0040 0000 <sub>hex</sub>	lw \$a0, 8000 <sub>hex</sub> (\$gp)
	0040 0004 <sub>hex</sub>	jal 40 0100 <sub>hex</sub>
	•••	
В	0040 0100 <sub>hex</sub>	sw \$a1, 8020 <sub>hex</sub> (\$gp)
	0040 0104 <sub>hex</sub>	jal 40 0000 <sub>hex</sub>
	•••	
Data segment	Address	
X	1000 0000 <sub>hex</sub>	( X )
Υ	1000 0020 <sub>hex</sub>	(Y)

## **Starting Java Applications**

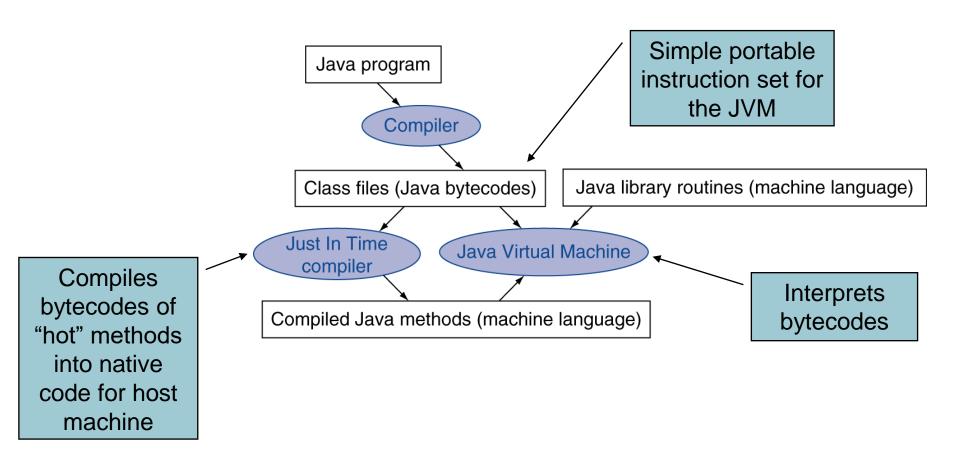

## Full Example – Sort in C (pg. 133)

```
void sort (int v[], int n)
{
    int i, j;
    for (i=0; i<n; i+=1) {
        for (j=i-1; j>=0 && v[j] > v[j+1]; j-=1) {
            swap (v,j);
        }
    }
}
```

```
void swap (int v[], int k)
{
   int temp;
   temp = v[k];
   v[k] = v[k+1];
   v[k+1] = temp;
}
```

- Allocate registers to program variables
- Produce code for the program body
- Preserve registers across procedure invocations

## The swap Procedure

 Register allocation: \$a0 and \$a1 for the two arguments, \$t0 for the temp variable – no need for saves and restores as we're not using \$s0-\$s7 and this is a leaf procedure (won't need to re-use \$a0 and \$a1)

```
swap: sll $t1, $a1, 2
add $t1, $a0, $t1
lw $t0, 0($t1)
lw $t2, 4($t1)
sw $t2, 0($t1)
sw $t0, 4($t1)
jr $ra
```

```
void swap (int v[], int k)
{
   int temp;
   temp = v[k];
   v[k] = v[k+1];
   v[k+1] = temp;
}
```

### The sort Procedure

- Register allocation: arguments v and n use \$a0 and \$a1, i and j use \$s0 and \$s1; must save \$a0 and \$a1 before calling the leaf procedure
- The outer for loop looks like this: (note the use of pseudo-instrs)

```
move $s0, $zero # initialize the loop loopbody1: bge $s0, $a1, exit1 # will eventually use slt and beq ... body of inner loop ... addi $s0, $s0, 1 j loopbody1
```

exit1:

```
for (i=0; i<n; i+=1) {
  for (j=i-1; j>=0 && v[j] > v[j+1]; j-=1) {
     swap (v,j);
  }
}
```

#### The sort Procedure

The inner for loop looks like this:

```
$$1, $$0, -1 # initialize the loop
           addi
                   $$1, $zero, exit2 # will eventually use slt and beq
loopbody2: blt
                  $t1, $s1, 2
           sll
           add $t2, $a0, $t1
                  $t3, 0($t2)
           lw
                  $t4, 4($t2)
           lw
                   $t3, $t4, exit2
           bgt
            ... body of inner loop ...
                   $s1, $s1, -1
           addi
                   loopbody2
                                  for (i=0; i< n; i+=1) {
exit2:
                                    for (j=i-1; j>=0 \&\& v[j] > v[j+1]; j-=1) {
```

swap (v,j);

27


### Saves and Restores

- Since we repeatedly call "swap" with \$a0 and \$a1, we begin "sort" by copying its arguments into \$s2 and \$s3 – must update the rest of the code in "sort" to use \$s2 and \$s3 instead of \$a0 and \$a1
- Must save \$ra at the start of "sort" because it will get over-written when we call "swap"
- Must also save \$s0-\$s3 so we don't overwrite something that belongs to the procedure that called "sort"

### Saves and Restores

```
$sp, $sp, -20
sort:
      addi
            $ra, 16($sp)
      SW
             $s3, 12($sp)
      SW
                             9 lines of C code → 35 lines of assembly
            $s2, 8($sp)
      SW
            $s1, 4($sp)
      SW
             $s0, 0($sp)
      SW
            $s2, $a0
      move
            $s3, $a1
      move
             $a0, $s2
                          # the inner loop body starts here
      move
             $a1, $s1
      move
      jal
             swap
             $s0, 0($sp)
exit1: lw
             $sp, $sp, 20
     addi
                                                              29
              $ra
     jr
```

# Effect of Language and Algorithm

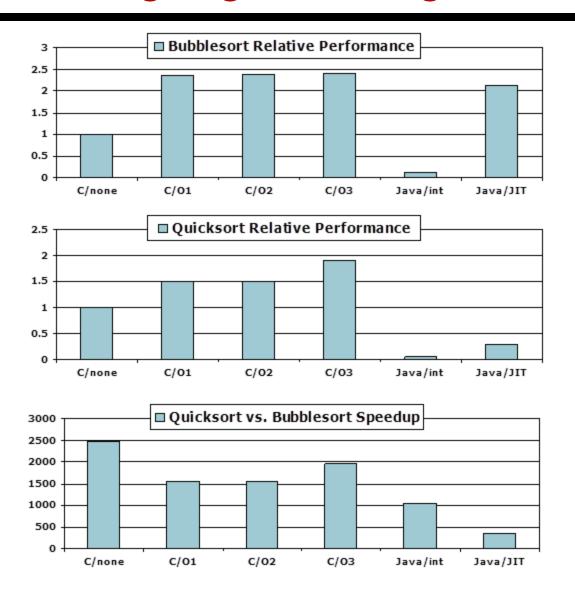

#### **Lessons Learnt**

- Instruction count and CPI are not good performance indicators in isolation
- Compiler optimizations are sensitive to the algorithm
- Java/JIT compiled code is significantly faster than JVM interpreted
  - Comparable to optimized C in some cases
- Nothing can fix a dumb algorithm!

## Other ISAs

- ARM
- x86

### **ARM Market share**


### Markets for ARM in 2012

	Devices Shipped (Million of Units)	2012 Devices	Chips/ Device	TAM 2012 Chips	2012 ARM	2012 Share
	Smart Phone	730	3-5	2,500	2,200	90%
9	Feature Phone	460	2-3	1,200	1,100	95%
Mobile	Low End Voice	730	1-2	730	700	95%
Ž	Portable Media Players	130	1-3	250	220	90%
	Mobile Computing* (apps only)	400	1	400	160	40%
ne	Digital Camera	150	1-2	230	180	80%
Home	Digital TV & Set-top-box	420	1-2	640	290	45%
ALC: U	Desktop PCs & Servers (apps)	200	1	200	-	0%
pris	Networking	1,200	1-2	1,300	420	35%
Enterprise	Printers	120	1	120	85	70%
Er	Hard Disk & Solid State Drives	700	1	700	620	90%
B	Automotive	2,600	1	2,600	210	8%
pp	Smart Card	6,000	1	6,000	710	13%
Embedded	Microcontrollers	8,700	1	8,700	1,500	18%
E	Others **	2,000	1	2,000	300	15%
	Total	25,500	Donk	27,000	8,700	32%


Year	Market Share
2007	17%
2008	20%
2009	22%
2010	25%
2011	29%
2012	32%

Source: Gartner, IDC, SIA, and ARM estimates

# **ARM Applications**

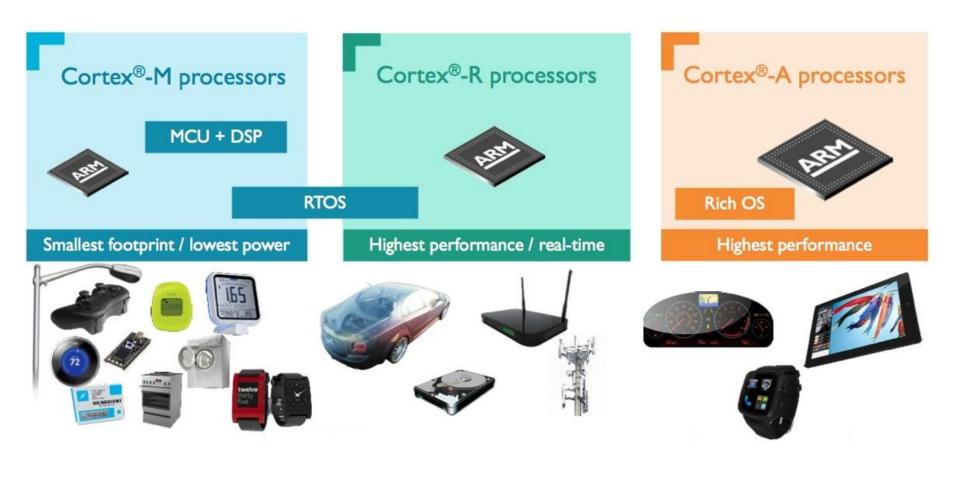

### **ARM CPU Series**

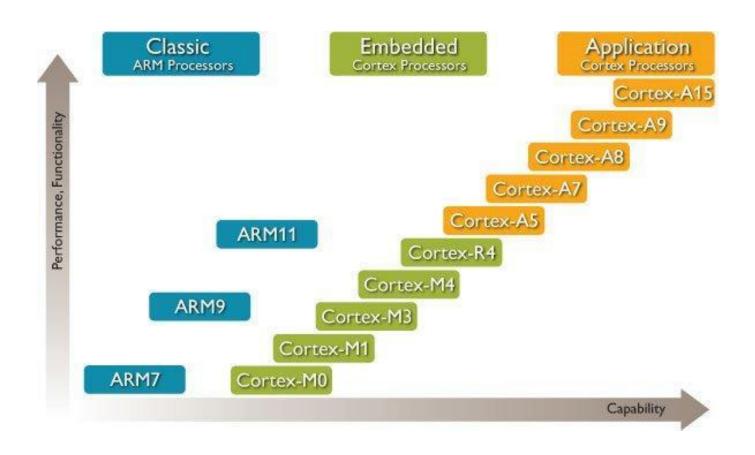

### **ARM & MIPS Similarities**

- ARM: the most popular embedded core
- Similar basic set of instructions to MIPS

	ARM	MIPS
Date announced	1985	1985
Instruction size	32 bits	32 bits
Address space	32-bit flat	32-bit flat
Data alignment	Aligned	Aligned
Data addressing modes	9	3
Registers	15 × 32-bit	31 × 32-bit
Input/output	Memory	Memory
	mapped	mapped

### ARM v8 Instructions

- In moving to 64-bit, ARM did a complete overhaul
- ARM v8 resembles MIPS
  - Changes from v7:
    - No conditional execution field
    - Immediate field is 12-bit constant
    - Dropped load/store multiple
    - PC is no longer a GPR
    - GPR set expanded to 32
    - Addressing modes work for all word sizes
    - Divide instruction
    - Branch if equal/branch if not equal instructions

### The Intel x86 ISA

- Evolution with backward compatibility
  - 8080 (1974): 8-bit microprocessor
    - Accumulator, plus 3 index-register pairs
  - 8086 (1978): 16-bit extension to 8080
    - Complex instruction set (CISC)
  - 8087 (1980): floating-point coprocessor
    - Adds FP instructions and register stack
  - 80286 (1982): 24-bit addresses, MMU
    - Segmented memory mapping and protection
  - 80386 (1985): 32-bit extension (now IA-32)
    - Additional addressing modes and operations
    - Paged memory mapping as well as segments


#### The Intel x86 ISA

- Further evolution...
  - i486 (1989): pipelined, on-chip caches and FPU
    - Compatible competitors: AMD, Cyrix, ...
  - Pentium (1993): superscalar, 64-bit datapath
    - Later versions added MMX (Multi-Media eXtension) instructions
    - The infamous FDIV bug
  - Pentium Pro (1995), Pentium II (1997)
    - New microarchitecture (see Colwell, The Pentium Chronicles)
  - Pentium III (1999)
    - Added SSE (Streaming SIMD Extensions) and associated registers
  - Pentium 4 (2001)
    - New microarchitecture
    - Added SSE2 instructions

#### The Intel x86 ISA

- And further...
  - AMD64 (2003): extended architecture to 64 bits
  - EM64T Extended Memory 64 Technology (2004)
    - AMD64 adopted by Intel (with refinements)
    - Added SSE3 instructions
  - Intel Core (2006)
    - Added SSE4 instructions, virtual machine support
  - AMD64 (announced 2007): SSE5 instructions
    - Intel declined to follow, instead...
  - Advanced Vector Extension (announced 2008)
    - Longer SSE registers, more instructions
- If Intel didn't extend with compatibility, its competitors would!
  - Technical elegance ≠ market success

## Basic x86 Registers

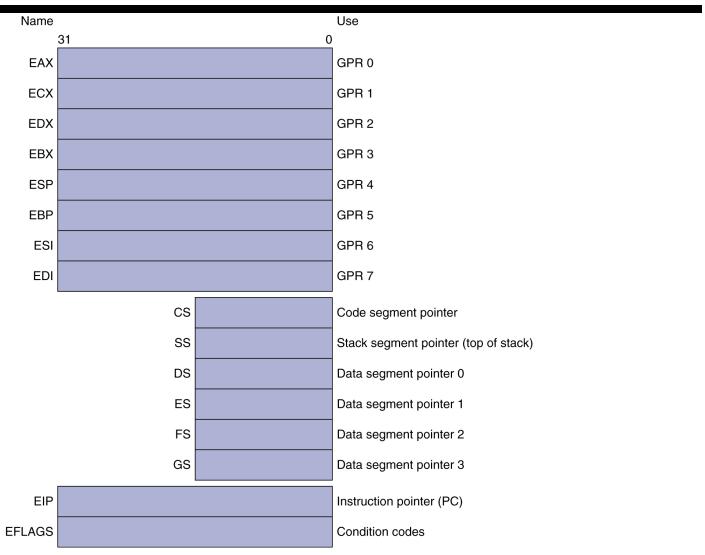

## **Concluding Remarks**

- Design principles
  - 1. Simplicity favors regularity
  - 2. Smaller is faster
  - 3. Make the common case fast
  - 4. Good design demands good compromises
- Layers of software/hardware
  - Compiler, assembler, hardware
- MIPS: typical of RISC ISAs
  - c.f. x86