

SSE12



**12V 300mA Feeder with times contact for general
use with built-in radio receiver**
Instructions and warnings

ENGLISH

INDEX

OVERVIEW	7
1 PRODUCT CONFORMITY	7
2 WARNINGS SUMMARY	7
3 MODELS AND CONTENTS OF THE PACKAGE	8
4 PRODUCT DESCRIPTION	8
5 TECHNICAL DATA	8
6 FORESEEN OPERATING CONDITIONS	8
7 ASSEMBLY AND WIRING INSTRUCTIONS	9
8 OPERATING INSTRUCTIONS	9
8.1 Working programs description	9
8.2 Timing learning	9
8.3 Radio receiver	10
9 MAINTENANCE	10
10 PRODUCT DISPOSAL	11

OVERVIEW

These instructions were prepared by the manufacturer and are an integral part of the product. The operation described are designed for adequately trained and qualified personnel and must be carefully read and kept for future reference.

1 PRODUCT CONFORMITY

The timed feeder art. SSE12 bears the EC label. DEA SYSTEM guarantees the conformity of the product to European Directives 2004/108/CE (concerning electromagnetic compatibility), 2006/95/CE (low voltage electrical equipment), 1999/5/CE (telecommunications equipment).

2 WARNINGS

Read these warnings carefully. Failure to respect the following warnings may cause risk situations.

 **WARNING** Using the product under unusual conditions not foreseen by manufacturer may cause dangerous situations; this is the reason why all the conditions prescribed in these instructions must be followed.

 **WARNING** Under no circumstance must the product be used in an explosive environment or surroundings that may prove corrosive and damage parts of the product.



⚠ WARNING To ensure an appropriate level of electrical safety always keep the 230V power supply cables apart (minimum 4 mm in the air or 1 mm through insulation) from low voltage cables (motors power supply, controls and aerial circuits power supply) and fasten the latter with appropriate clamps near the terminal boards.

⚠ WARNING The device shouldn't be used by children and/or persons with reduced capacities (physical, sensorial, mental). Prevent children from playing with the device. All these operations must be performed only after disconnecting the power supply and operating in strict compliance with the electrical standards and regulations in force in the nation of installation.

⚠ WARNING Using spare parts not indicated by DEA System and/or incorrect re-assembly may endanger people, animals and property, and may also cause malfunctioning of the products: always use parts provided by DEA System and follow assembly instructions.

3 MODELS AND CONTENTS OF THE PACKAGE

Feeders with timed contact SSE12 are supplied inside an IP54 rated box for external assembly.

4 PRODUCT DESCRIPTION

The SSE12 device is designed for all applications where electrical equipment has to be fed or piloted through a timed contact. The temporization foresees a programming delay of ignition or turning off of the relay with regard to its command. Some examples of typical applications are: piloting of electro-magnets for automated closings, garden lighting, anti-theft activation/deactivation, management of simple semaphore installations etc...

The feeder has a 12V === 300mA output, but as the contact is released from any potential, the same can be connected to some external feeders. 3 different working programs are foreseen (monostable, bistable and bistable with separated ON/OFF). Activation commands can be given by radio, by keys or by applying a 12/24V ~ / === tension to proper inputs

5 TECHNICAL DATA

Power supply	230 V ~ - 50Hz
Fuse F2	5A 250V
Stabilized output	12V=== max 300mA
Contact	double exchange, max 3A each contact
Max number of controlled transmitters	40
Type of managed codings	12 bit dip-switch / rolling code fix part only
IN1 and IN2 inputs	N.O. contact, or 12/24V ~ / ===
INE input	N.C. contact

6 OPERATING CONDITIONS

SSE12 is designed and tested for civil electrical installations field.

⚠ WARNING Using the product under unusual conditions not foreseen by manufacturer may cause dangerous situations; this is the reason why all the conditions prescribed in these instructions must be followed.

⚠ WARNING Under no circumstance must the product be used in an explosive environment or surroundings that may prove corrosive and damage parts of the product.

7 ASSEMBLY AND WIRING INSTRUCTIONS

Connect to the power supply 230 V ~ 50 Hz through a multi pole switch or a different device that can ensure multi pole disconnection from the power supply, with a contact opening of 3,5 mm. Use a cable with a minimum section of 3 x 1,5 mm² (H07RN-F type).



Table 1 terminal boards connection

1-2	L N	230V 50Hz (L=phase, N=neutral) power supply input
3	COM1	1 Common contact
4	NC1	1 usually closed contact
5	NO1	1 usually open contact
6	NC2	2 usually closed contact
7	NO2	2 usually open contact
8	COM2	2 common contact
9-10	12V	12V === max 300mA input; 9 = +, 10 = -
11	COM	Common input
12	IN1	Input 1, if activated it can cause the relay closing or opening according to the operating selected program (see table 2). It can be activated by pushing a simple key N.O., through a remote, or applying a tension of 12/24V ~/=== respect the COM clamp.
13	IN2	Input 2, if activated can cause the relay closing or opening, according to the operating selected program (see table 2). It can be activated by pushing a simple key N.O., through a remote, or applying a tension of 12/24V ~/=== respect the COM clamp.
14	INE	Contact input N.C. "enable" : must be bridged towards the COM, when open every command via radio or applied to IN1 and IN2 input is ignored.
15		Aerial signal input
16		Aerial ground input
J5		Select IN2 input: J5=A IN2 is controlled by a 12/24V ~/=== tension J5=B IN2 is controlled by an N.O. contact
J6		Select IN1 input: J5=A IN2 is controlled by a 12/24V ~/=== tension J5=B IN2 is controlled by an N.O. contact







8 OPERATING INSTRUCTIONS

8.1 Description of operating programs




SSE12 feeder provides 3 different working programs that can be selected through dipswitch S1, as indicated in table2. For the programming of "delay on" and "delay off" refer to par. 8.2 "Learning of temporizing".



Table 2 operating programs

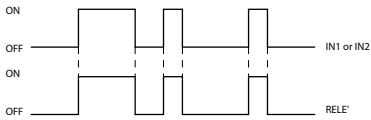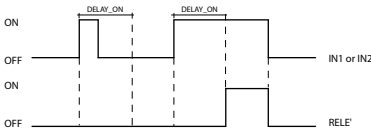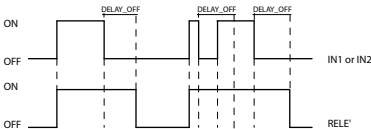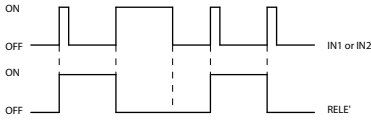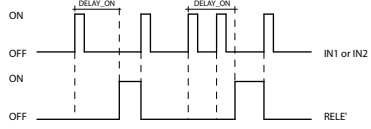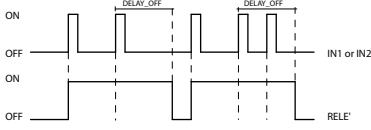DIP1	DIP2	PROGRAM DESCRIPTION	
OFF	OFF	Monostable: relay=ON when IN1 or IN2 = maintained activ. relay=OFF when IN1 and IN2 = not activ.	
		RELAY MODE ACCORDING TO INPUTS MODE	
		Monostable without any delay: 	Monostable with delay at turning on (delay_on): 
OFF	OFF	Monostable with delay at turning off (delay_off): 	
DIP1	DIP2	PROGRAM DESCRIPTION	
OFF	ON	Bistable: the impulsive activation of IN1 or IN2 causes the relay mode changing.	
		RELAY MODE ACCORDING TO INPUTS MODE	
		Bistable without delays: 	Bistable with delay at turning on (delay_on):  N.B. : Other incidental inputs on IN1 or IN2 during "delay_on", are not considered.
OFF	ON	Bistable with delay at turning off (delay_off):  N.B. : Other incidental inputs on IN1 or IN2 during "delay_off", are not considered.	

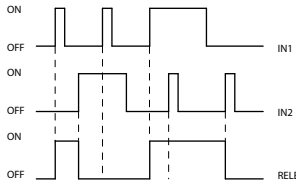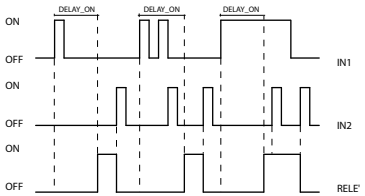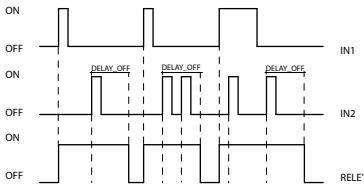

DIP1	DIP2	PROGRAM DESCRIPTION	
ON	OFF	Bistable with separated ON/OFF: The impulsive activation of IN1 involves relay=ON The impulsive activation of IN2 involves relay=OFF	
		RELAY MODE ACCORDING TO INPUTS MODE	
		Bistable ON/OFF separated without delays:  N.B. : When an input is active, incidental impulses on the other input, are not considered.	Bistable ON/OFF separated with delay at turning on (delay_on):  N.B.: - When an input is active, incidental impulses on the other input, are not considered. - Incidental inputs on both the inputs during "delay_on", are not considered.
DIP1	DIP2	Bistable ON/OFF separated with delay at turning off (delay_off):  N.B.: - When an input is active, incidental impulses on the other input, are not considered. - Incidental inputs on both the inputs during "delay_off", are not considered.	
		PROGRAM DESCRIPTION	
ON	ON	Programming: learning of temporizing/remotes memorizing	

8.2 Operating times learning

Following the herewith described procedure it's possible to program a delay (variable from 1 sec to 5 min) of effective turning on or turning off of the relay as regard to its own command.

WARNING: the programming of a delay at turning on ("delay_on") involves the automatic deactivation of delay at turning off (delay_off) and vice versa.



Programming of a delay:

1. Set DIP1=DIP2=ON: led lights on indicating that the device is programming.
2. Give an impulse to IN1 input (if you desire to memorize delay_on) or to IN2 input (if you desire to memorize delay_off): the counting of delay to be programmed starts, the led executes a winking every second.
3. Wait for desired times, give another impulse to the same input: the led executes some fast winking, delay memorization is ended.
4. bring DIP1 and 2 into desired position.

Zero setting of a delay:

1. Set DIP1=DIP2=ON: led lights on indicating the device is programming.
2. Do activate and maintain active input IN1 (in case you want to zero delay_on) or IN2 (if you want to zero delay_off) until the led executes some fast blinking: delay set to zero.
3. Bring again DIP 1 and 2 into desired position.

8.3 Radio receiver

SSE12 feeder includes a 433,92MHz built-in radio receiver accepting both transmitters with HCS coding (complete rolling code or just part fixed), and HT12E dip-switch coding. The receiver memory capacity can contain up to **40** different transmitters.

It is possible to choose, according to one's needs, which key of the memorized transmitters will activate the IN1 input and which one will activate the IN2 input. Procedures for the memorizing and deleting of the remotes are explained as follows.

Remotes memorization:

1. Set DIP1=DIP2=ON: led lights on to indicate that the device is programming.
2. Push the on board S2 key: led switches out to indicate that the receiver is learning.
3. Before the led switches on press the remote key you want to match to IN1 input.
4. Before the led switches on again, press the remote key you want to match to IN2 input (if any other key has to be matched to IN2, go directly to point 5).
5. repeat points 3 and 4 for some other remotes.

Remotes cancelling:

1. Set DIP1=DIP2=ON: led lights on to indicate that the device is programming.
2. Press the on board S2 key and maintain it pressed until the led winks fast for a while: remotes memory cancellation done.

9 MAINTENANCE

 **WARNING** Any installation, maintenance or repair operation on the whole system must be carried out exclusively by qualified personnel. All these operations must be performed only after disconnecting the power supply, and operating in strict compliance with the electrical standards and regulations in force in the nation of installation.

12




10 PRODUCT DISPOSAL

In line with EU Directive 2002/96/EC for waste electrical and electronic equipment (WEEE), this electrical product must not be disposed of as unsorted municipal waste. Please dispose of this product by returning it to your local municipal collection point for recycling.



Accensione di una lampada da telecomando o pulsante, con spegnimento temporizzato.
Switching on of a lamp by a remote or a switch, with temporized turning off. Allumage d'une
 lampe par télécommande ou bouton poussoir, avec extinction temporisée, Encendido de una
 lámpara de telemando o pulsante, con apagado temporizado, Ligando uma lâmpada através
 de um rádio comando ou um interruptor, com desligamento temporizado.

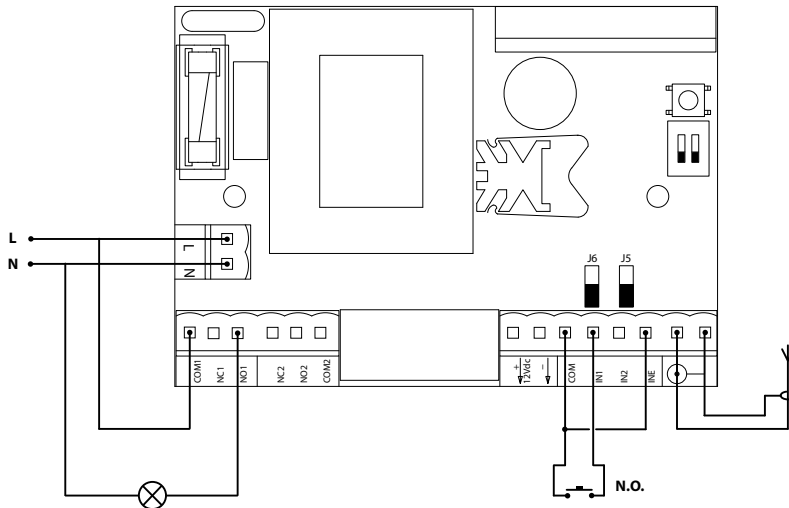

ITA	1	Apprendere i radiocomandi;
	2	Memorizzare delay_off della durata desiderata;
	3	Impostare funzionamento "MONOSTABILE" (DIP1 = DIP2 = OFF);
	4	Impostare J6 = J5 = B.

ENG	1	Learn the remotes;
	2	Memorize delay_off for desired time;
	3	Set "MONOSTABLE" (DIP1 = DIP2 = OFF) mode;
	4	Set J6 = J5 = B.


FRA	1	Effectuer l'apprentissage des télécommandes;
	2	Mémoriser delay_off pour la durée désirée;
	3	Programmer le fonctionnement "MONOSTABLE" (DIP1 et DIP2 sur OFF);
	4	Programmer J6 et J5 sur B.

ESP	1	Conocimiento de los radiomandos;
	2	Memorizar "delay off" la duración deseada;
	3	Impostare funzionamento "MONOSTABILE" (DIP1 = DIP2 = OFF);
	4	Impostare J6 = J5 = B.

POR	1	Memorizar os rádio comandos;
	2	Memorizar o tempo que deseja que a lâmpada fique acesa;
	3	Activar o modo "MONOESTÁVEL" (DIP1=DIP2=OFF);
	4	Colocar J6=J5=B.



Pilotaggio elettromagnete art. EML tramite uscita elettroserratura delle centrali di comando per automazioni Dea System, Electro-magnet art. EML piloting through an electric lock of control panels for DEA automations, Pilotage électro-aimant art. EML par une sortie électro serrure des platines de commande pour les automatismes DEA, Pilotaje electromagnético art. EML tramite salida electrocerradura de las centrales de comando para automatismos Dea System, Controlo do Electromagnete art. EML, através de uma fechadura eléctrica das centrais de comando para automatizações DEA.

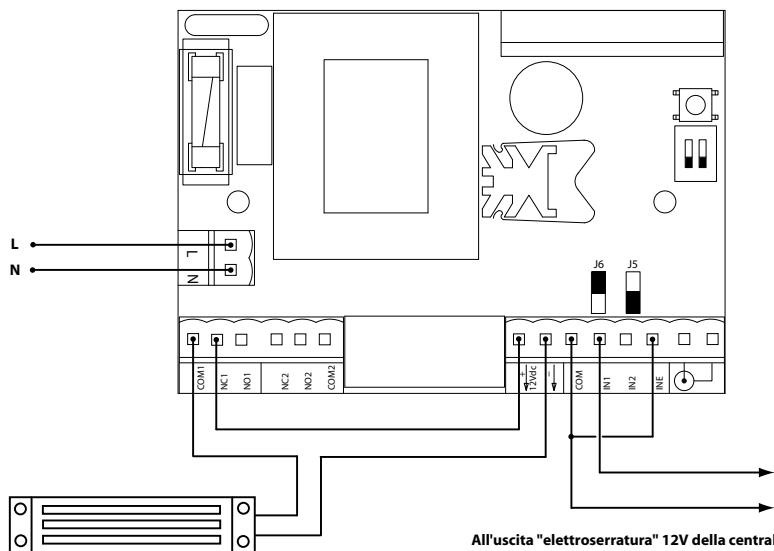

ART. EML

All'uscita "elettroserratura" 12V della centrale di comando
At control panel 12V electro-lock output
A la sortie de l'électroserrure 12V de la platine de commande
En la salida de la electrocerradura 12V de la central de comando
Central de comando na saída 12V para fechadura eléctrica

ITA	1	Impostare funzionamento "MONOSTABILE" (DIP1 = DIP2 = OFF), senza ritardi;
	2	Impostare J5 = B; J6 = A.

ENG	1	Set "MONOSTABLE" (DIP1 = DIP2 = OFF) mode, without any delay;
	2	Set J5 = B; J6 = A.


FRA	1	Programmer le fonctionnement "MONOSTABILE" (DIP1 et DIP2 sur OFF), aucun retard;
	2	Programmer J5 sur B; J6 sur A.

ESP	1	Fijar funcionamiento "MONOESTABLE" (DIP1 = DIP2 = OFF), sin retardos;
	2	Fijar J5 = B; J6 = A.

POR	1	Activar o modo "MONOESTÁVEL" (DIP1=DIP2=OFF), sem nenhum atraso no desligamento;
	2	Colocar J5=B; J6=A.



Gestione doppio semaforo con richiesta luce verde, Managing of double traffic lights with demand on green light, Gestion double système sémaphorique avec demande de lumière verte, Gestir doble semáforo con solicitud de luz verde, Gestão de duas luzes de tráfego (semáforo com duas luzes) com pedido de luz verde.

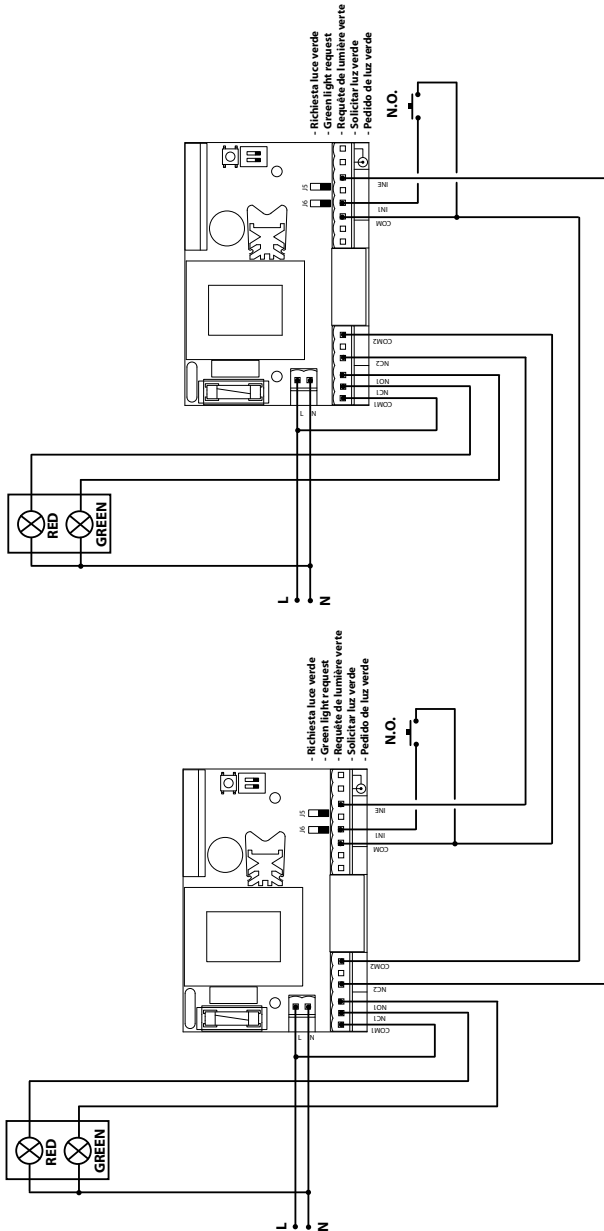

ITA	1	Memorizzazione delay_off = durata accensione luce verde;	1	Memorize delay_off = lenght of green light operation;	1	Mémoriser delay_off = durée allumage lumière verte;
	2	Impostare funzionamento "MONOSTABILE" (DIP1 = DIP2 = OFF);	2	Set "MONOSTABLE" (DIP1 = DIP2 = OFF) mode;	2	Programmer le fonctionnement "MONOSTABLE" (DIP1 et DIP2 sur OFF);
	3	Impostare J5 = J6 = B.	3	Set J5 = J6 = B.	3	Programmer J5 et J6 sur B.

ESP	1	Memorizar "delay off" = duración de encendido luz verde;	POR	1	Memorizar o atraso no desligamento = tempo que a luz verde fica acesa;
	2	Fijar funcionamiento "MONOSTABILE" (DIP1 = DIP2 = OFF);		2	Activar o modo "MONOSTÁVEL" (DIP1-DIP2-OFF);
	3	Fijar J5 = J6 = B		3	Colocar J5=J6=B



ITA

Descrizione funzionamento semaforo:

- In condizioni di stand-by entrambe le luci rosse sono accese;
- Uno dei 2 pulsanti di richiesta luce verde viene premuto: Il relativo semaforo commuta da luce rossa a verde. Contemporaneamente viene disabilitato il semaforo opposto che mantiene quindi luce rossa, anche se venisse attivato il suo pulsante di richiesta;
- Allo scadere di delay_off il semaforo verde commuta da luce verde a luce rossa e riabilita il semaforo opposto, ripristinando la condizione di stand-by.

ENG

Description of traffic lights working:

- If standby, both lights are on;
- One of two keys for green light request is pressed: its traffic lights change its light from red to green. At the same time the opposite traffic lights that maintain the red light is deactivated, even if its request key is activated;
- At delay_off the green traffic lights changes its light from green to red and restores the opposite one, restoring the stand-by condition.

FRA

Description du fonctionnement sémaphore:

- En condition d'attente (stand by), les 2 lumières rouges sont allumées;
- Une des deux touches de demande de lumière verte est appuyée: son sémaphore change la lumière de rouge à verte. Simultanément le sémaphore opposé qui maintient donc la lumière rouge, est désactivé, même si sa touche de demande est activée;
- A l'expiration du delay_off le sémaphore vert devient rouge et réhabilite le sémaphore opposé, en rétablissant la condition d'attente (stand by).

ESP


Descripción funcionamiento semáforo:

- En condiciones de "stand-by", ambas luces rojas están encendidas;
- Se pulsa uno de los dos botones de solicitud de luz verde: El respectivo semáforo cambia de luz roja a luz verde. Contemporáneamente se desactiva el semáforo que mantiene la luz roja, aunque se active su pulsante de solicitud;
- Cuando finaliza el "delay off", el semáforo verde cambia de luz verde a luz roja y se rehabilita el semáforo contrario, restableciéndose el estado de "stand-by".

POR

Descrição do funcionamento das luzes de tráfego:

- Em modo de espera, ambas as luzes estão acesas;
- Um dos botões para o pedido de luz verde é pressionado: a luz correspondente muda de vermelho para verde. Ao mesmo tempo a luz do sentido oposto mantém-se vermelha mesmo que o botão de pedido de luz verde seja pressionado;
- No fim do tempo memorizado, a luz verde muda para vermelho, repondo assim a condição inicial de espera.

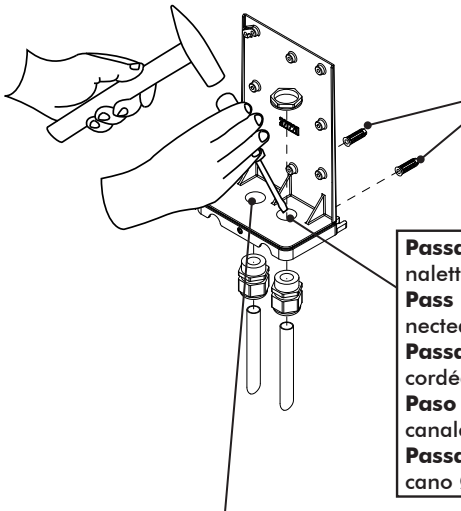

Eseguire il fissaggio alla parete usando opportuni tasselli per viti Ø5 (non fornite)

Fix the box on the wall with appropriate bushings to anchor screws Ø5 (not included)

Le fixer au mur en utilisant des douilles à expansion pour vis adéquates Ø5 (pas incluses)

Efectuar la fijación a la pared utilizando adecuados tacos para tornillos de Ø5 (no incluidos)

Executar a fixação a parede usando apropriadas rolhas para parafusos Ø5 (não fornecidas)

Passaggio cavi a bassissima tensione all'interno di una canaletta Ø10 raccordata con fermatubo PG16 (non forniti)

Pass very low tension cables inside a grommet Ø10 connected with a tube fastening PG16 (items not included)

Passage des fils à très basse tension dans un passe-fil Ø10 raccordée avec un bloque tube PG16 (ces outils ne sont pas inclus)

Paso de los cables de tensión muy baja por el interior de una canaletta de Ø10 unida con paratubo PG16 (no incluidos)

Passagem cabos a baixíssima tensão ao interno de um cano Ø10 com fixação do tubo PG16 (não fornecidos)



Passaggio cavi 230V all'interno di una canaletta Ø10 raccordata con fermatubo PG16 (non forniti)

Pass 230V cables inside a grommet Ø10 connected with a tube fastening PG16 (items not included)

Passage des fils 230V dans un passe-fil Ø10 raccordée avec un bloque tube PG16 (ces outils ne sont pas inclus)

Paso de los cables 230V por el interior de una canaletta de Ø10 unida con paratubo PG16 (no incluidos)

Passagem cabos 230V ao interno de um cano Ø10 com fixação do tubo PG16 (não fornecidos)

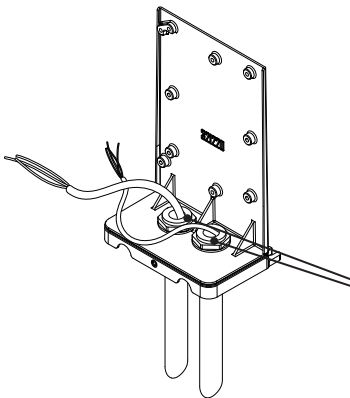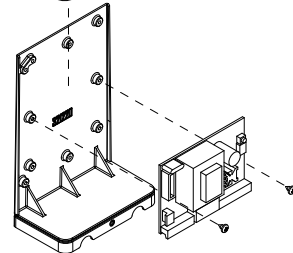

Sigillare le canalette dopo il passaggio dei cavi

Seal the tubing trays after installing the wires

Étanchez les passe-fils après que vous avez passé des fils

Una vez colocados los cables, tapar las canaletas

Tapar os cabos depois de passar os fios eléctricos