

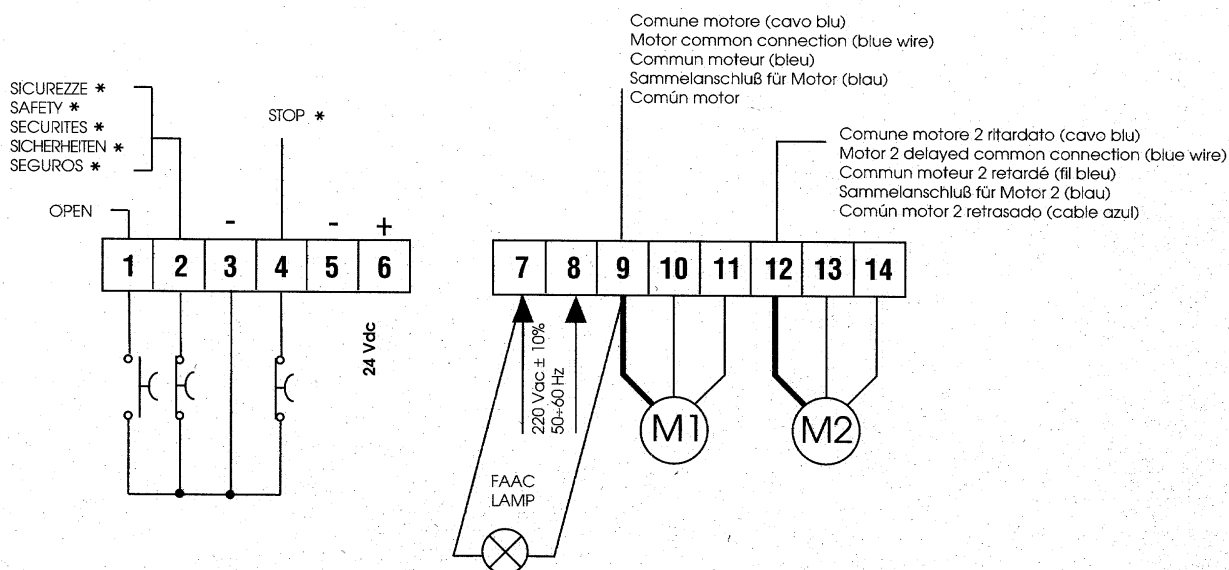


Collegamenti elettrici Electrical connections - Branchements électriques Elektrische Anschlüsse - Conexiones eléctricas

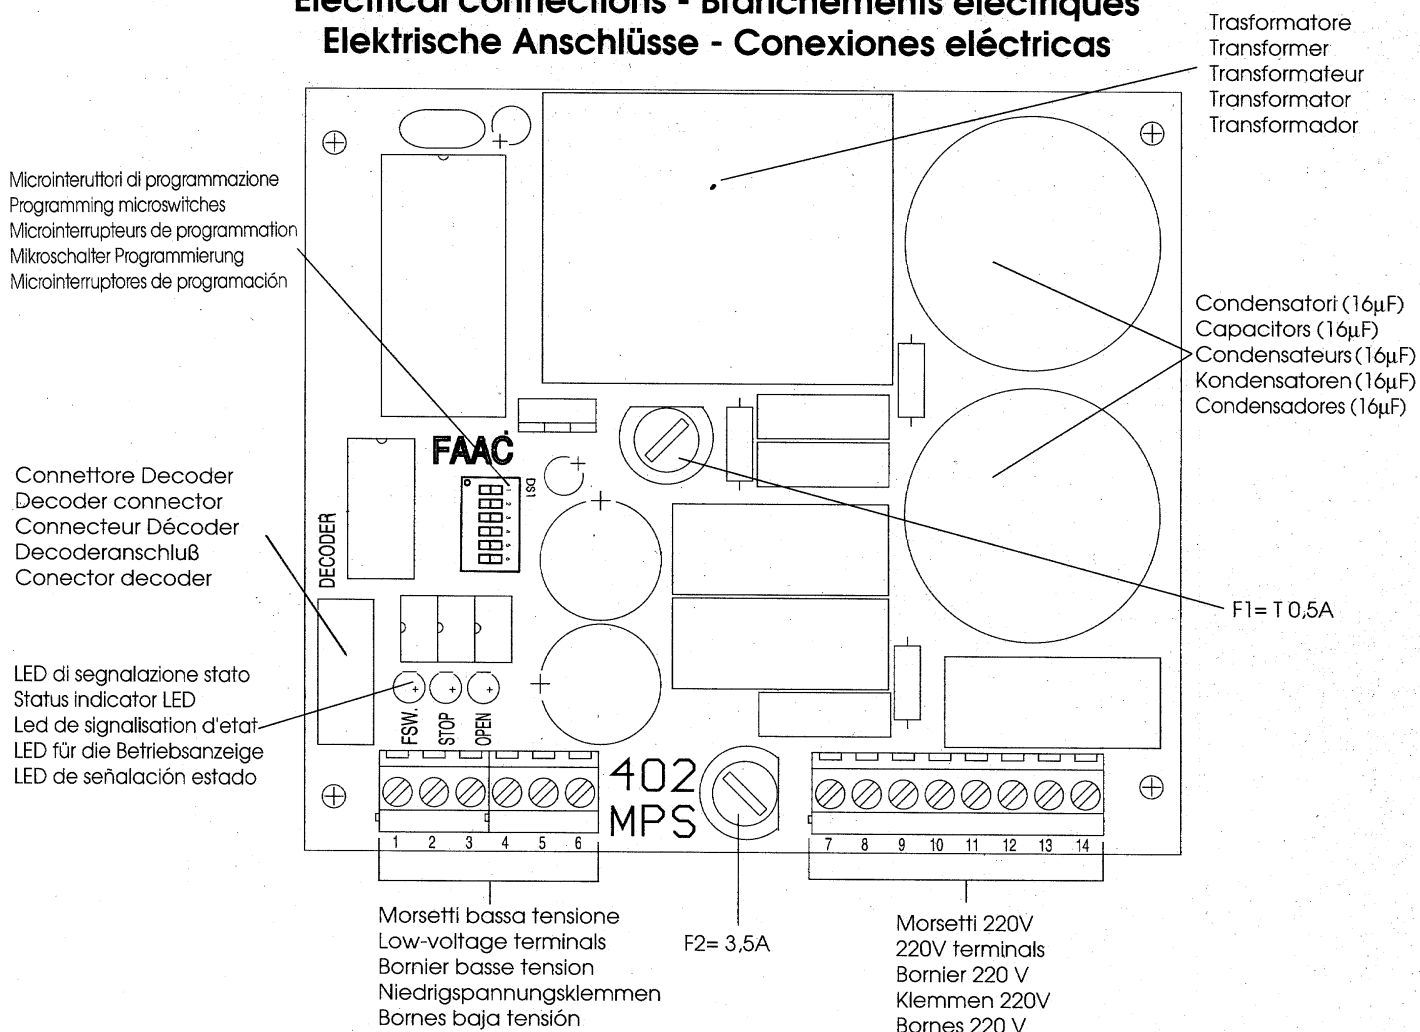

- (*) - Nel caso non vengano collegati STOP e/o SICUREZZE é necessario ponticellare i relativi morsetti (4 con 3 e/o 2 con 3)
- (*) - If STOP and /or SAFETY connections are not made, the relative terminals must be connected together (terminal 4 to terminal 3 and/or terminal 2 to terminal 3)
- (*) - Si STOP et/ou SECURITES ne sont pas connectés, ponter les bornes correspondantes (4 avec 3 et/ou 2 avec 3)
- (*) - Für den Fall, daß der STOP- und/oder der Anschluß der SICHERHEITEN nicht erfolgen, sind die zugehörigen Klemmen zu überbrücken (4 mit 3 und/oder 2 mit 3).
- (*) - En el caso que no sean conectados STOP y/o SEGUROS es necesario conectar los correspondientes bornes (4 con 3 y/o 2 con 3)

Programmazione microinterruttori / Programming microswitches Programmation microinterrupteurs / Programmierung Mikroschalter / Programación microinterruptores

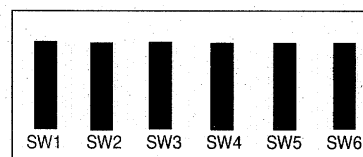

Logica Logic Logique Logik Lógica	SW1	SW2
A1	ON	ON
S2	ON	OFF
S1	OFF	ON
E1	OFF	OFF

Tempo pausa (sec.) Pause time (sec.) Temps pause (s) Pausezeit (s) Tiempo pausa (seg.)	SW5
0	ON
20	OFF

Tempi apertura/chiusura (sec) Open /close times (sec) Temps ouverture/fermeture (s) Zeiten Öffnung/Schließung (s) Tiempos de apertura/cierre (seg.)	SW3	SW4
4	ON	ON
8	OFF	ON
15	ON	OFF
25	OFF	OFF

Ritardo d'anta (sec.) Gate delay (sec.) Retard vantail(s) Verzögerung Torflügel (s) Retraso puertas (seg.)	SW6
0	ON
4	OFF

INITIAL WARNINGS

- Electrical installation and programming of operating logic must be performed in compliance with current legislation.
- Always install a 16A circuit breaker with operating threshold of 0,03A between the apparatus and the mains electrical supply.
- Always ensure that power cables (power supply, motor feeding) and control cables (commands, receiver, photocells) are kept separate.
We recommend the use of separate sheathing to avoid the risk of interference.

OPERATION OF STATUS INDICATOR LED

LED	ON (contact closed)	OFF (contact open)
OPEN	on	off
STOP	off	on
FSW	safety devices disengaged	safety devices engaged

MAINTENANCE

Make periodic checks to ensure that the safety devices are working properly.

TECHNICAL CHARACTERISTICS

POWER SUPPLY	220 v $\pm$ 10% 50 - 60 Hz
MAX. LOAD FOR MOTORS	500 W
MAX. LOAD FOR ACCESSORIES (*)	400 mA
MAX. OPERATING TEMPERATURE	- 20 + 70 °C

(*) POWER CONSUMPTION OF FAAC ACCESSORIES

ACCESSORY	POWER CONSUMPTION (mA)
R 300	50
R 31	50
R 40	50
R 70	50
PLUS 300 / PLUS 315	10 / 16
DECODER / SL / MINIDEC SL	10 / 4,5 / 20
DIGICARD	15
METAL DIGIKEY	10
FOTOSWITCH	90
FAAC DETECTOR	50
MINIBEAM	70

OPERATION IN VARIOUS CONTROL LOGIC MODES

LOGIC S1	IMPULSES		
BEAM STATUS	OPEN	STOP	SAFETY
CLOSED	opens and recloses after pause time	no effect	no effect
OPEN	closes	stops	closes after 5"
OPENING	inverts motion	stops	no effect
CLOSING	inverts motion	stops	inverts motion

LOGIC S2	IMPULSES		
BEAM STATUS	OPEN	STOP	SAFETY
CLOSED	opens and recloses after pause time	no effect	no effect
OPEN	closes	stops	no effect
OPENING	inverts motion	stops	no effect
CLOSING	inverts motion	stops	stops beam and inverts motion when disengaged

LOGIC A1	IMPULSES		
BEAM STATUS	OPEN	STOP	SAFETY
CLOSED	opens and recloses after pause time	no effect	no effect
OPEN	closes after 5"	stops	no effect
OPENING	no effect	stops	no effect
CLOSING	inverts motion	stops	inverts motion

LOGIC E1	IMPULSES		
BEAM STATUS	OPEN	STOP	SAFETY
CLOSED	opens	no effect	no effect
OPEN	closes	stops	no effect
OPENING	stops	stops	no effect
CLOSING	inverts motion	stops	inverts motion