




Apparecchiatura di comando 2 Motori 24Vac
Cuadro electronico para dos motores 24Vac
Electronic control panel for two 24Vac motors



ATTENZIONE!! Prima di effettuare l'installazione, leggere attentamente questo manuale. La VDS declina ogni responsabilità in caso di non osservanza delle normative vigenti.

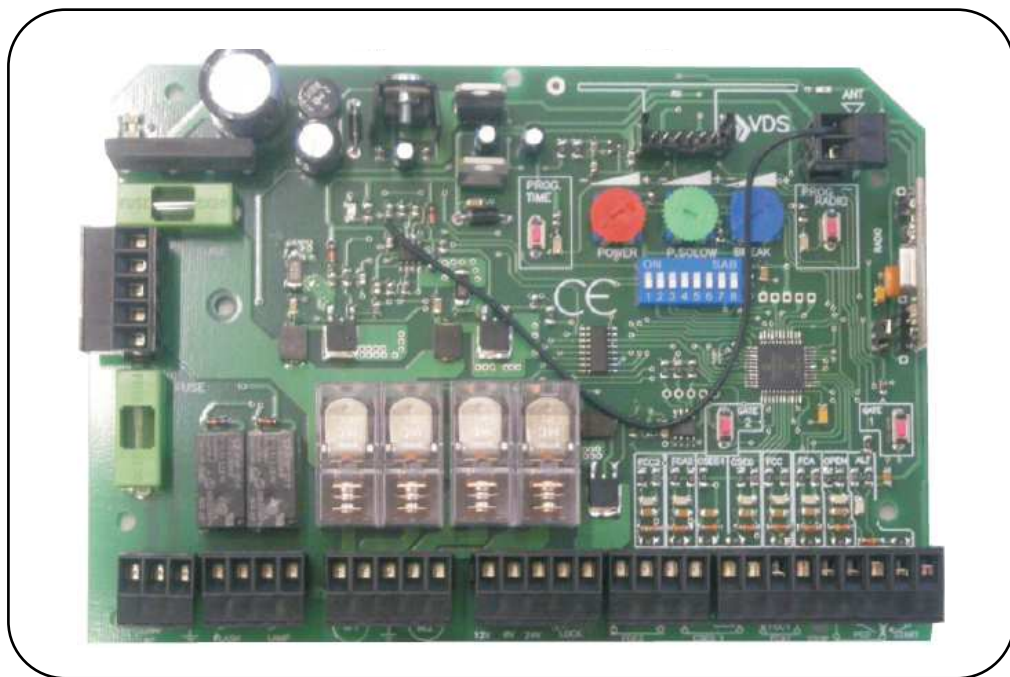


¡ATENCIÓN!! Antes de efectuar la instalacion, lea atentamente el presente manual. La Empresa VDS no asumirá responsabilidad alguna en caso de inobservancia de las normas vigentes en el país donde se lleva a cabo la instalacion

WARNING!! Before installing, thoroughly read this manual that is an integral part of this Kit. VDS declines any responsibility in the event current standards in the country of installation are not complied with.

GB

EURO24M2

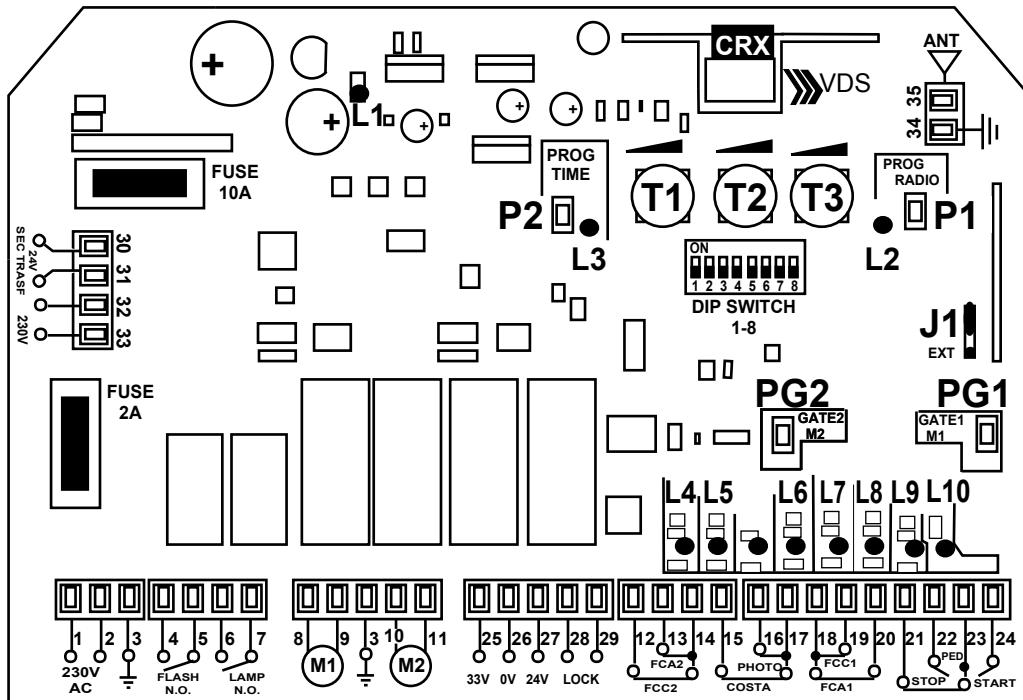

LED STATE

L1	STATE Led	Lights when the unit is powered
L2	Led RADIO ON	when accessing memory in radio
L3	LED PROG. TIMES	on flashing programming
L4	Led F.C. 2 CLOSING	on when the switch is in N.C.
L5	Led F.C. 2 OPENING	on when the switch is in N.C.
L6	Led PHOTO CLOSING	on with the safety contact closed
L7	Led F.C. 1 CLOSING	on when the switch and in N.C.
L8	Led F.C. 1 OPENING	on when the switch and in N.C.
L7 + L8	Led STOP	both on when the stop and NC
L9	PEDESTRIAN Led	lights when take a pulse pedestrian
L10	Led START	on when you give an impulse

TRIMMER T1

The Trimmer Power regulates the power and sensitivity in working.

TRIMMER T2

The Trimmer Power Slow regulates the power and sensitivity in slow down mode.

TRIMMER T3

The Trimmer Break regulates the break time from 3 to 120 sec



OPERATION LOGIC OF THE SAFETY

Safety band Terminal 15-17 -This contact protects opening and closing.

DIP 5 ON: When there is an obstacle, the engine stop and reverse for 2 sec.

DIP 5 OFF: When there is an obstacle engine STOP

In both cases after the disengagement resumes the opening.

Photocells Terminal 16-17 - This contact protects only in closing

In closing when there is an obstacle engine STOP

Stop Terminal 21-23 - The contact if open will cause the immediate arrest of the automation in any situation.

AMPEROSTOP: In the opening stops and reverses the operation for 2sec. In closing stops and reverses direction.

TECHNICAL FEATURES

POWER

POWER ENGINE

OUTPUT ACCESSORIES

OUTPUT FLASH, OUTPUT COURTESY LIGHT

TIME FOR AUTOMATIC CLOSE

TIME FOR MANEUVER

TIME FOR COURTESY LIGHT

NR CODES STORABLE

TRANSMITTERS TYPE

FREQUENCY

TEMPERATURE TO WORK

SENSIBILITY

HOMOLOGATION

230V AC +/- 10%

24 Vdc

33V / 24V DC 250mA

Max 10A a 230V

5 a 120 sec

3 a 120 sec

180 sec

254 code

Fix\ Roll-code

433.92 / 868 Mhz

-20 a 70°C

Better off -100dBm

Conf ETS 300-220/ETS 300-683

TERMINAL	TIP	DESCRIPTION
1-2	230Vac	Power 230Vac
3		Ground
4-5	Free	FLASH (max output 230V 10A)
6-7	Free	LAMP of courtesy (max output Max 230V 10A)
8-9	24Vdc	ENGINE1
10-11	24Vdc	ENGINE2
12-14com	N.C.	Limit switch closing ENGINE2(if not use make the bridge)
13-14com	N.C.	Limit switch opening ENGINE2(if not use make the bridge)
15-17com	N.C.	Safety band or opening photocells (if not use make the bridge)
16-17com	N.C.	Closing photocells(if not use make the bridge)
19-18com	N.C.	Limit switch closing ENGINE1(if not use make the bridge)
20-18com	N.C.	Limit switch opening ENGINE1(if not use make the bridge)
21-23com	N.C.	STOP contact (if not use make the bridge)
22-23com	N.O.	PEDESTRIAN contact
24-23com	N.O.	START contact
25-26negativo	33Vdc	Power service or battery charger (output 33Vdc 250mA)
27-26negativo	24Vdc	Power service or accessories (output 24Vdc 250mA)
28-29	12Vdc	Electric lock
30-31	24Vac	Secondary input Transformator 24Vac
32-33	230Vac	Primary input Transformator 230Vac
34-35		Input Antenna (35 signal)

BUTTON P1

RADIO PROG, for storage remote controls

BUTTON P2

PROG TIME, for storage the stroke

BUTTON PG1

GATE1 For the programming stroke of the first leaf or start command.

BUTTON PG2

GATE2 For the programming stroke of the second leaf or pedestrian opening.

JUMPER J1 = Selection storage radio INTERNAL EXTERNAL

You can insert the external receivers with the connector CRX. So you can increase the memory or change the frequency. Insert bridge.

INTERNAL



EXTERNAL



ALL DIP-SWITCH:	
DIP1	AUTOMATIC CLOSING ON Automatic closing activated OFF Automatic closing not activated
DIP2	CONDOMINIUM / STEP BY STEP ON The automation will end the operation always on end switches, in opening does not accept pulses, in closing a pulse will cause the reverse. OFF For each pulse automation will stop (OPEN-STOP-CLOSE-STOP)
DIP3	MANAGE AMPEROSTOP IN SLOW DOWN PHASE ON In programming mode , during the slowdown the amperostop not intervene. (Give a impulse to store the end of the stroke) In operation , during slow down phase opening the gate stops only interested, in closing stops and reverses the direction of both leaves. OFF In programming mode , during the slowdown the amperostop storage the end stroke. In operation , during the slow down phase, in opening, stop and reverse the stroke for 2 sec; in closing stops and reverses the direction of both leaves.
DIP4	STRIKE STRONG FOR ELECTRICLOCK ON Activate OFF Not activate
DIP5	CONTACT SAFETY IN OPENING ON Opening safety intervention, the central blocks movement and invert for 2 sec OFF Opening safety intervention, the central blocks movement
DIP6	FLASHING FUNCTION ON Intermittent light OFF Steady light
DIP7	SLOW DOWN ON Activate OFF Not activate
DIP8	IMPETUS FOR PRESS IN CLOSING ON The central ON every 180 min gives a closing impulse engines for 2 seconds, avoiding the deviation of the leaves from the stop. OFF Function off
FLASHING OPERATION WITH DIP6 ON IN OPENING: Flash slow IN CLOSING: Flash fast IN PAUSE: Steady light PHOTOCELL ENGAGED: Turn off	

GENERAL INFORMATION

The control board EURO24M2 can manage systems to one or two swing with or without limitswitch, for motor fed to 24Vdc. The peculiarity of the EURO24M2 is in the regulation of separate torque between 2 swing, through the trimmers T1 and T2 (the T1 regulates the torque during the run in normal speed the T2 it regulates the torque in slow down phase).

The planning of the stroke and the remote controls is in self-learning so to simplify the procedures of put in operation. The learnings of run of the shutters happen in separate way so that to be able to have two times of operation differentiated. In opening and closing the EURO24M2 manage the obstacle by amperostop sensitivity

PROGRAMMING REMOTE CONTROL

The control unit is able to handle radio fixed code and rolling code. The two systems can not be managed simultaneously, but with the first remote control will be programmed encoding system.

The EURO24M2 can handle 254 transmitters ROLLING CODE.

The programming of the transmitters is done by pressing the P1 for 2sec, the LED L2 turns on, then pressing the button of the remote will flash twice to indicate the LED L2 is stored in memory.

After 6 seconds automatically central will exit the programming function.

PROGRAMMING PEDESTRIAN MODE (by remote control)

To program this function push the P1 button for 2sec, release and press again for 1 second, the LED L2 begins to flash at this moment press button remote control where you want stored pedestrian opening. This mode it's possible only with Engine1.

After stored, automatically control board will exit the programming mode.

CANCELLATION OF ALL CODES IN MEMORY

Press and hold the P1 for 6 seconds when it is released there will be a quick flash of the LED L3, with consequent turning off after 6 seconds of LED L2.



PROGRAMMING:

The programming starts with the gate closed, the first operation will be the opening, otherwise reverse the direction of travel through the exchange of the motor phases on the terminal.


It can be made via the buttons on the control panel GATE1 (PG1) and Gate2 (PG2), or by remote control previously programmed: the first channel of the TX is associated with the first door, the second channel of the TX to the second. In case of programming via remote control, must be learned only the first channel, the second will be recognized automatically.

To enter the programming press P2 for 2 sec LED L3 lights up, at this point:

WITH SLOW DOWN (ON OPTION 7)

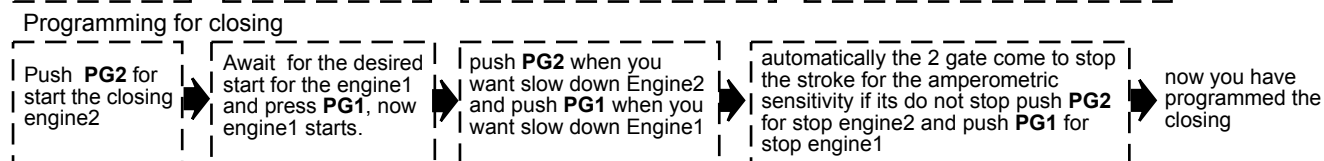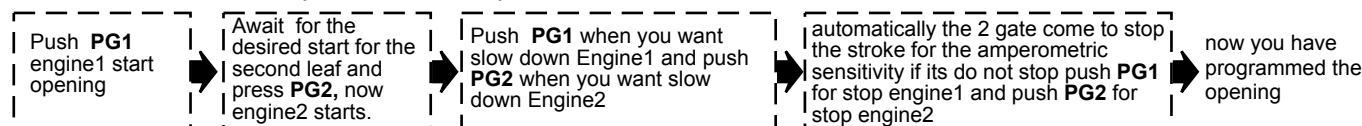

SINGLE GATE WITH SLOW DOWN (ON OPTION 7)

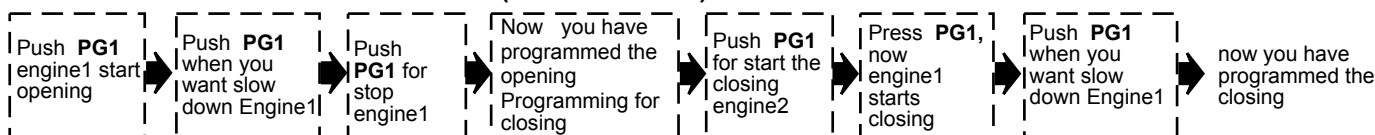

WITHOUT SLOW DOWN (OFF OPTION 7)

It is same procedure but you do not give impulse for start the slow down phase. So after the pulse to the start of the stroke, the control panel will only receive the impulse of the arrest of the race.



I nostri prodotti se installati da personale specializzato idoneo alla valutazione dei rischi, rispondono alle normative UNI EN 12453-EN 12445

Nuestros productos si instalados por personal cualificado capaz de la evaluacion de riesgos, cumplen con la norma UNI EN 12453, EN 12445

Our products if installed by qualified personnel capable to evaluate risks, comply with norms UNI EN 12453, EN 12445



Il marchio CE è conforme alla direttiva europea CEE 89/336 + 93/68 D.L.04/12/1992 n.476

El marcaje CE de este dispositivo indica que cumple con la directiva europea CEE 89/336 + 93/68 D.L.04/12/1992 n.476

The CE mark complies with EEC European directive 89/336 + 93/68 D.L.04/12/1992 n.476

I dati e le immagini sono puramente indicativi

VDS si riserva il diritto di modificare in qualsiasi momento le caratteristiche dei prodotti descritti a suo insindacabile giudizio, senza alcun preavviso.

Los datos y las imágenes son orientativos

VDS se reserva el derecho de modificar en cualquier momento de las características de los productos descritos en su única discreción, sin previo aviso.

The data and images are for guidance only

VDS reserves the right to change at any time characteristics of the products described in its sole discretion, without notice.

CONTACTS:



Via Circolare p.i.p. N° 10
65010 Santa Teresa di Spoltore (PE) - ITALY
Tel. +39 085 4971946 - FAX +39 085 4973849
www.vdsconsorzio.it - vds@vdsconsorzio.it