



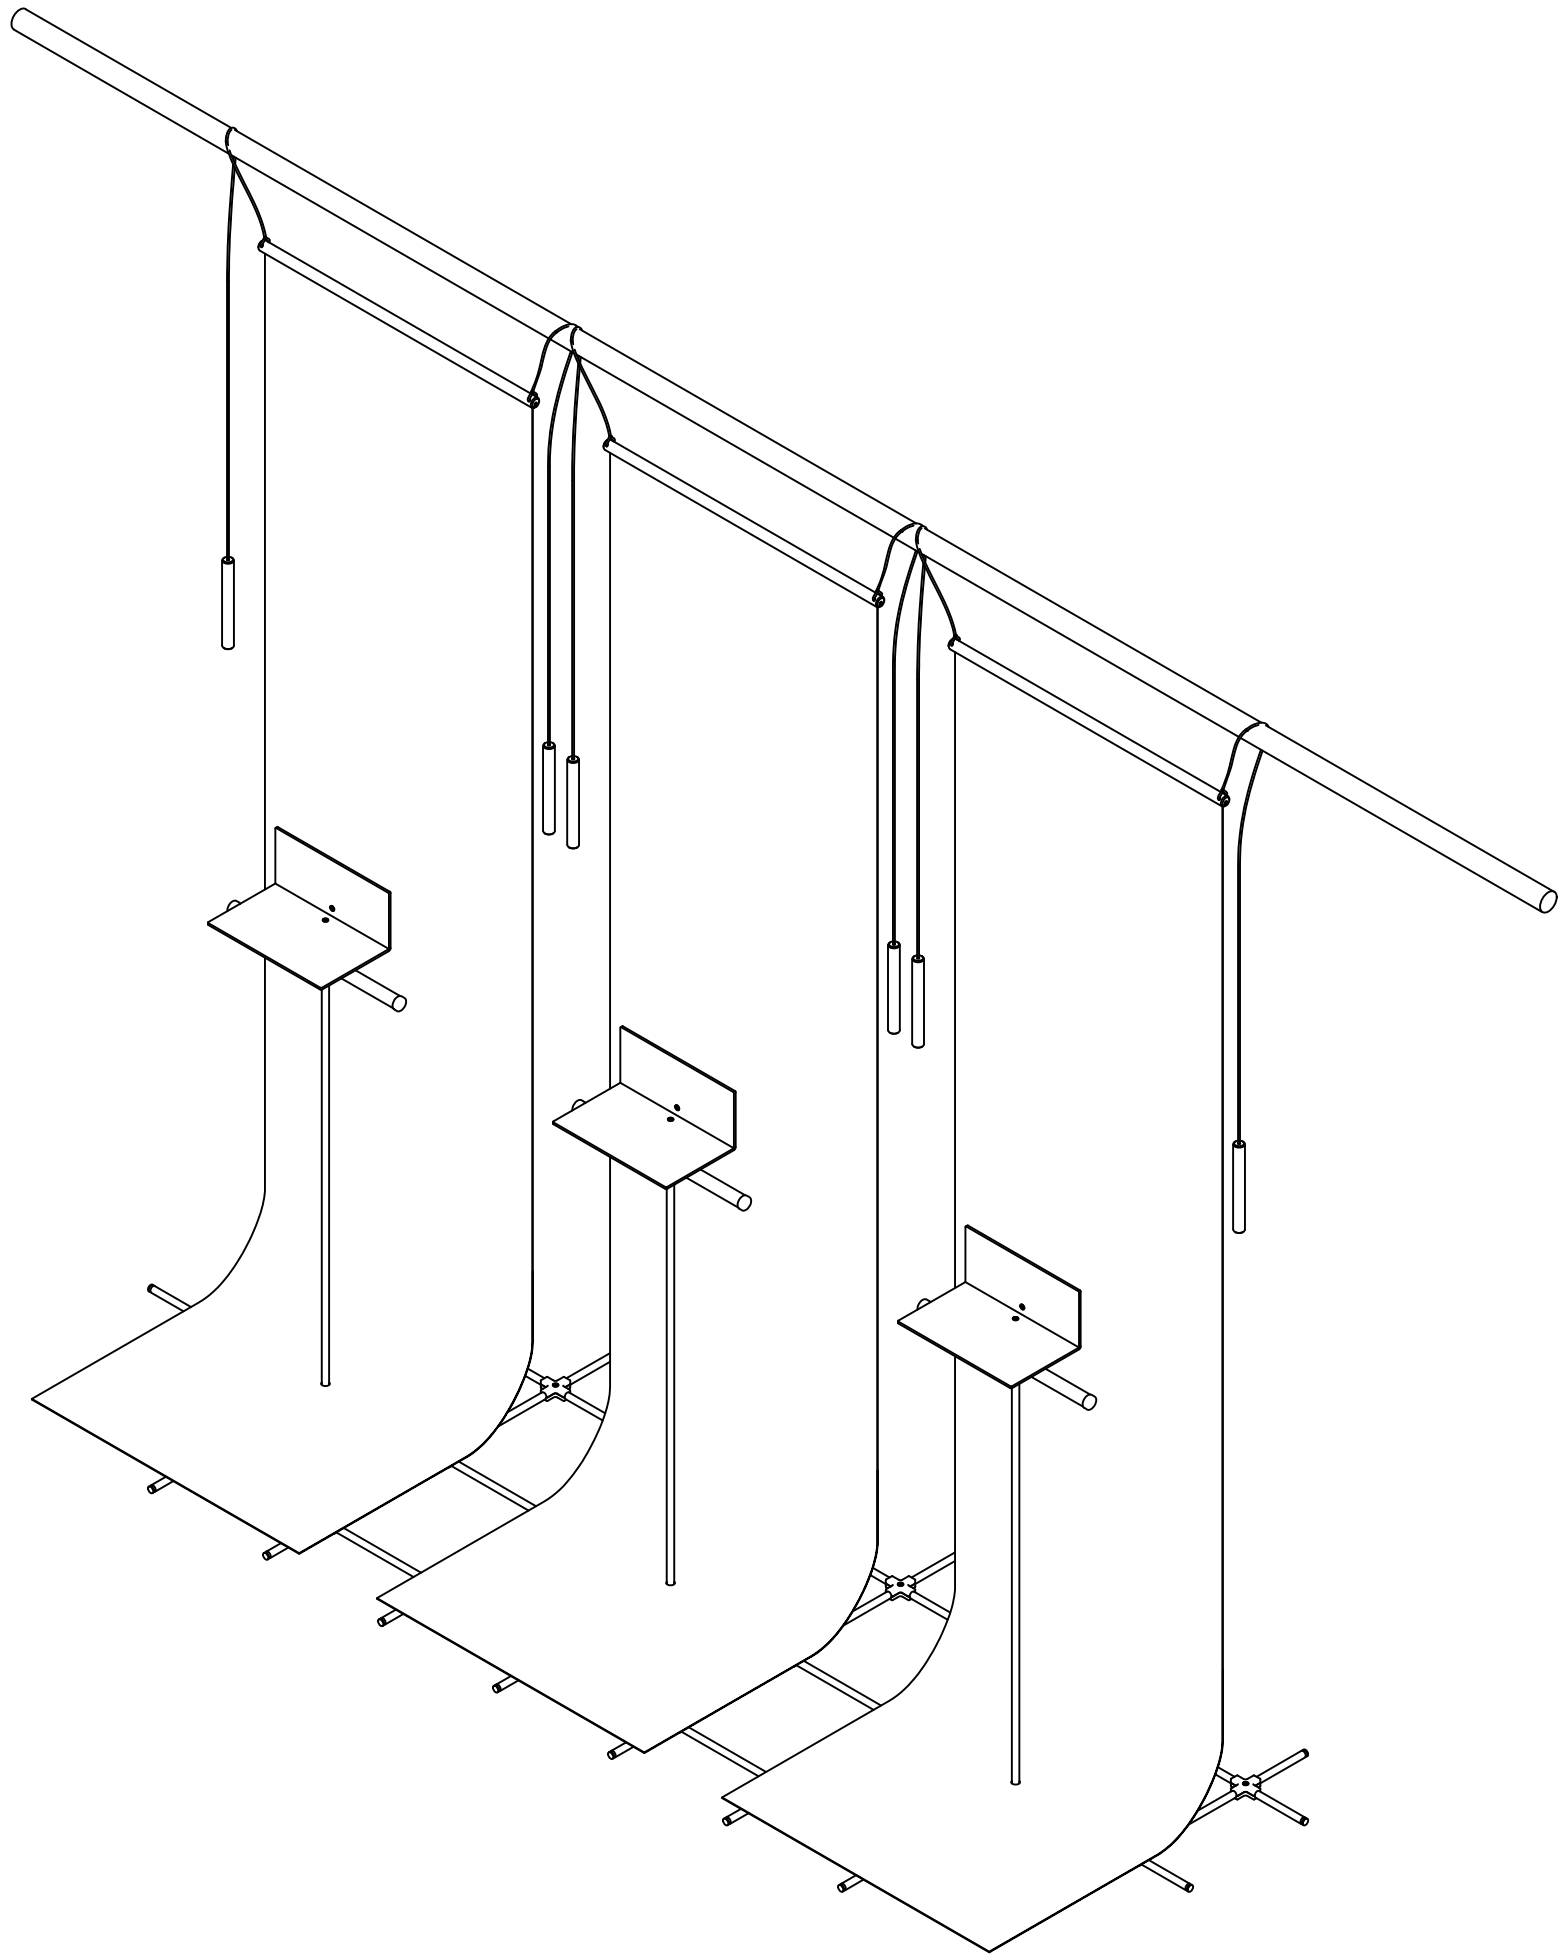

- PARTS LIST:
- FRMD - 4 Way X 25 (BASE CONNECTOR)
 - FRMD - M6 X 20MM COUNTERSUNK SCREW X 24
 - FRMD - 150 BASE BARS X 24
 - FRMD - 300 BASE BARS X 38
 - FRMD - 1200 VERTICAL BARS X 3
 - FRMD - PLATE CONNECTOR X 3
 - FRMD - L SHELF X 3
 - FRMD - 820MM NOTCHED ARTWORK BAR X 3
 - FRMD - ARTWORK WEIGHT X 6
 - FRMD - 12 METRES OF 4mm STEEL CABLE
 - FRMD - STEEL CABLE CRIMPS X 12
 - FRMD - ARTWORK(W800 X H3300MM) X 3
 - FRMD - LIGHT BAR CONNECTOR X 3
 - FRMD - LIGHT BARS X 3 (4000K)
 - FRMD - LIGHT BAR END CAPS X 6
 - FRMD - LED DRIVER (100W - 24V)
 - FRMD - LED CABLE
 - FRMD - CABLE CLIP X 15

formd.
TITLE
TI LARGE WINDOW ASSEMBLY
PROJECT
DR MARTENS - RAIN
CLIENT
WE ARE SYN
VERSION #
V_01
DATE
04_09_2025
DRAWN BY
LEWIS STEPHENS
THIS DRAWING IS INTENDED FOR THE NAMED ONLY.
IT CONTAINS INFORMATION WHICH MAY BE CONFIDENTIAL & WHICH MAY ALSO BE PRIVILEGED. UNLESS YOU ARE THE NAMED ADDRESSEE (OR AUTHORISED TO RECEIVE IT FOR THE ADDRESSEE)


PARTS NEEDED

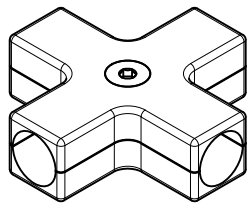

x25




M6 X 20MM
x25




x24

150




x38

300




4MM ALLEN KEY
FOR M6 BOLTS

EXAMPLE

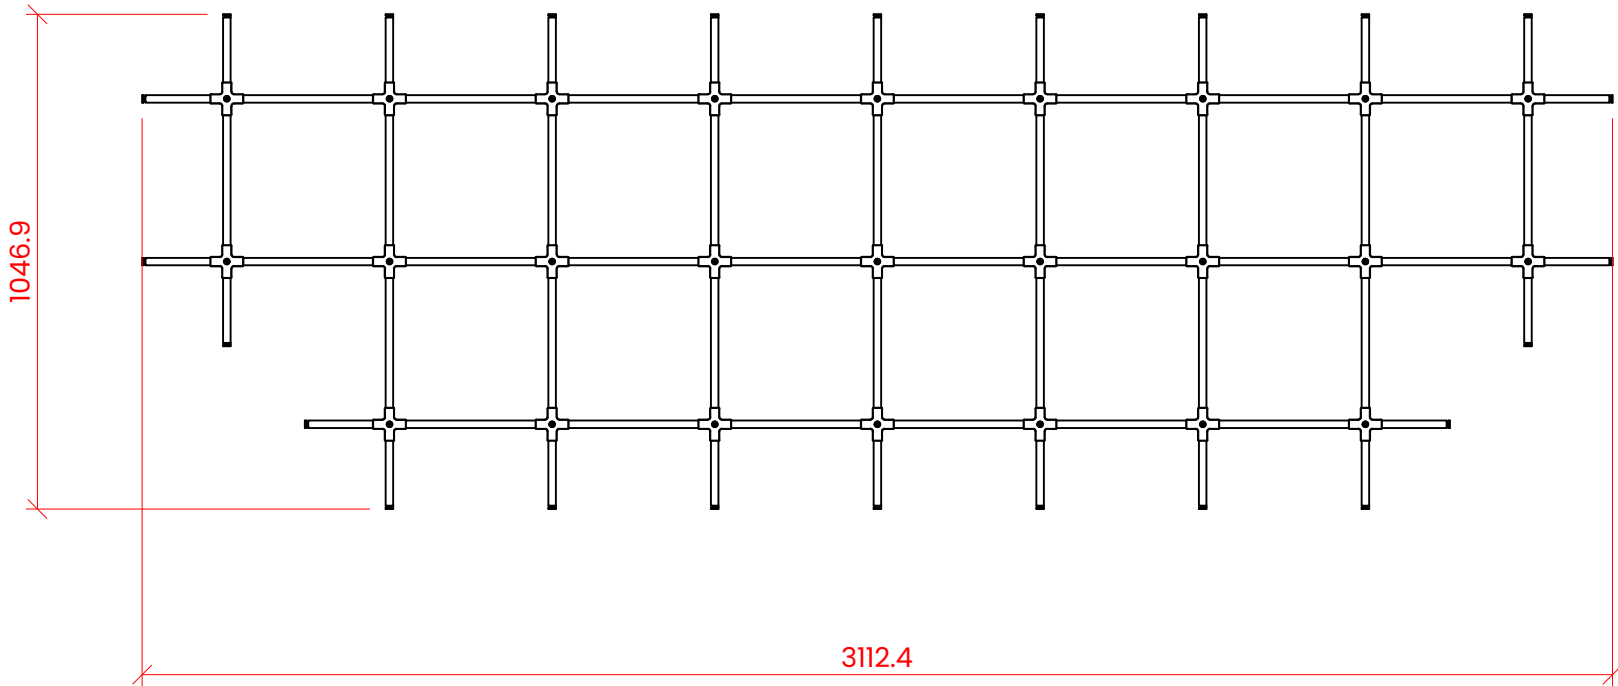

formd.
TITLE
TI LARGE WINDOW ASSEMBLY
PROJECT
DR MARTENS - RAIN
CLIENT
WE ARE SYN
VERSION #
V_01
DATE
04_09_2025
DRAWN BY
LEWIS STEPHENS
THIS DRAWING IS INTENDED FOR THE NAMED ONLY. IT CONTAINS INFORMATION WHICH MAY BE CONFIDENTIAL & WHICH MAY ALSO BE PRIVILEGED. UNLESS YOU ARE THE NAMED ADDRESSEE (OR AUTHORISED TO RECEIVE IT FOR THE ADDRESSEE)

BASE ASSEMBLY 2/2

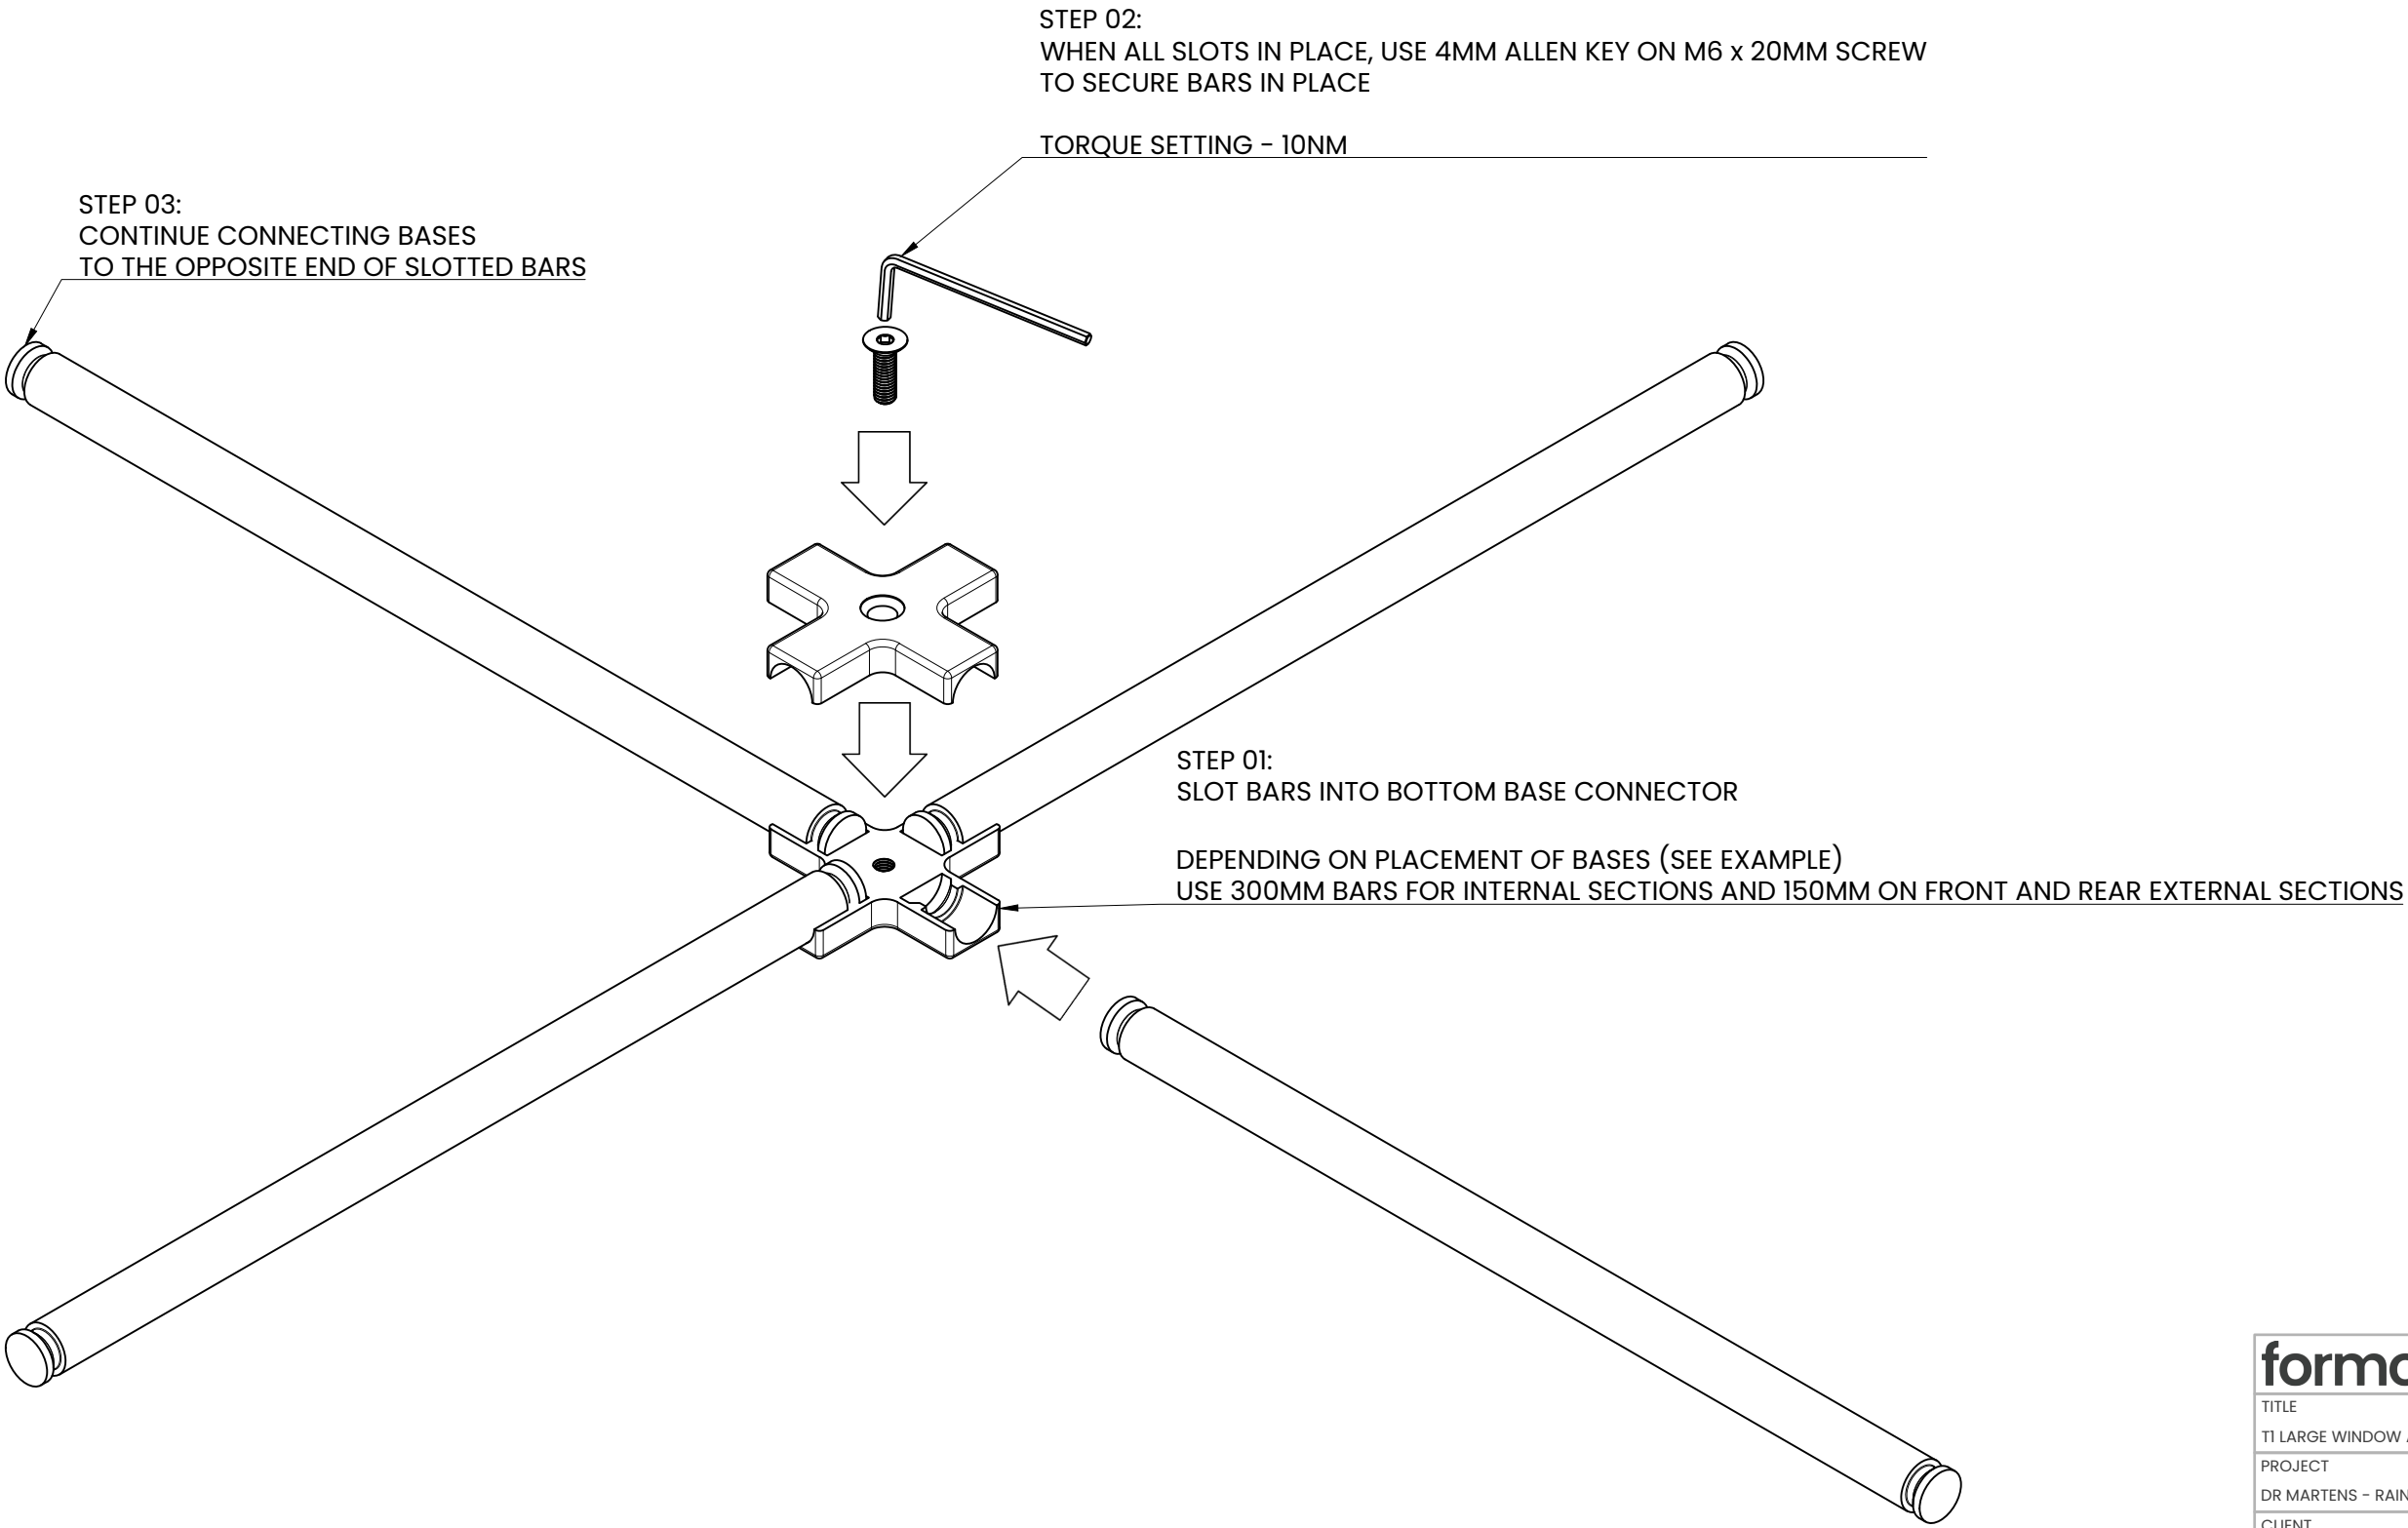


formd.
TITLE
TI LARGE WINDOW ASSEMBLY
PROJECT
DR MARTENS - RAIN
CLIENT
WE ARE SYN
VERSION #
V_01
DATE
04_09_2025
DRAWN BY
LEWIS STEPHENS
THIS DRAWING IS INTENDED FOR THE NAMED ONLY.
IT CONTAINS INFORMATION WHICH MAY BE CONFIDENTIAL & WHICH MAY ALSO BE PRIVILEGED. UNLESS YOU ARE THE NAMED ADDRESSEE (OR AUTHORISED TO RECEIVE IT FOR THE ADDRESSEE)


VERTICAL ASSEMBLY 1/2

STEP 02:
SCREW THREE VERTICAL BARS
INTO THE THREE BASE CONNECTORS SHOWN

STEP 01:
UNBOLT M6 COUNTERSUNK SCREW
FROM BASE CONNECTOR

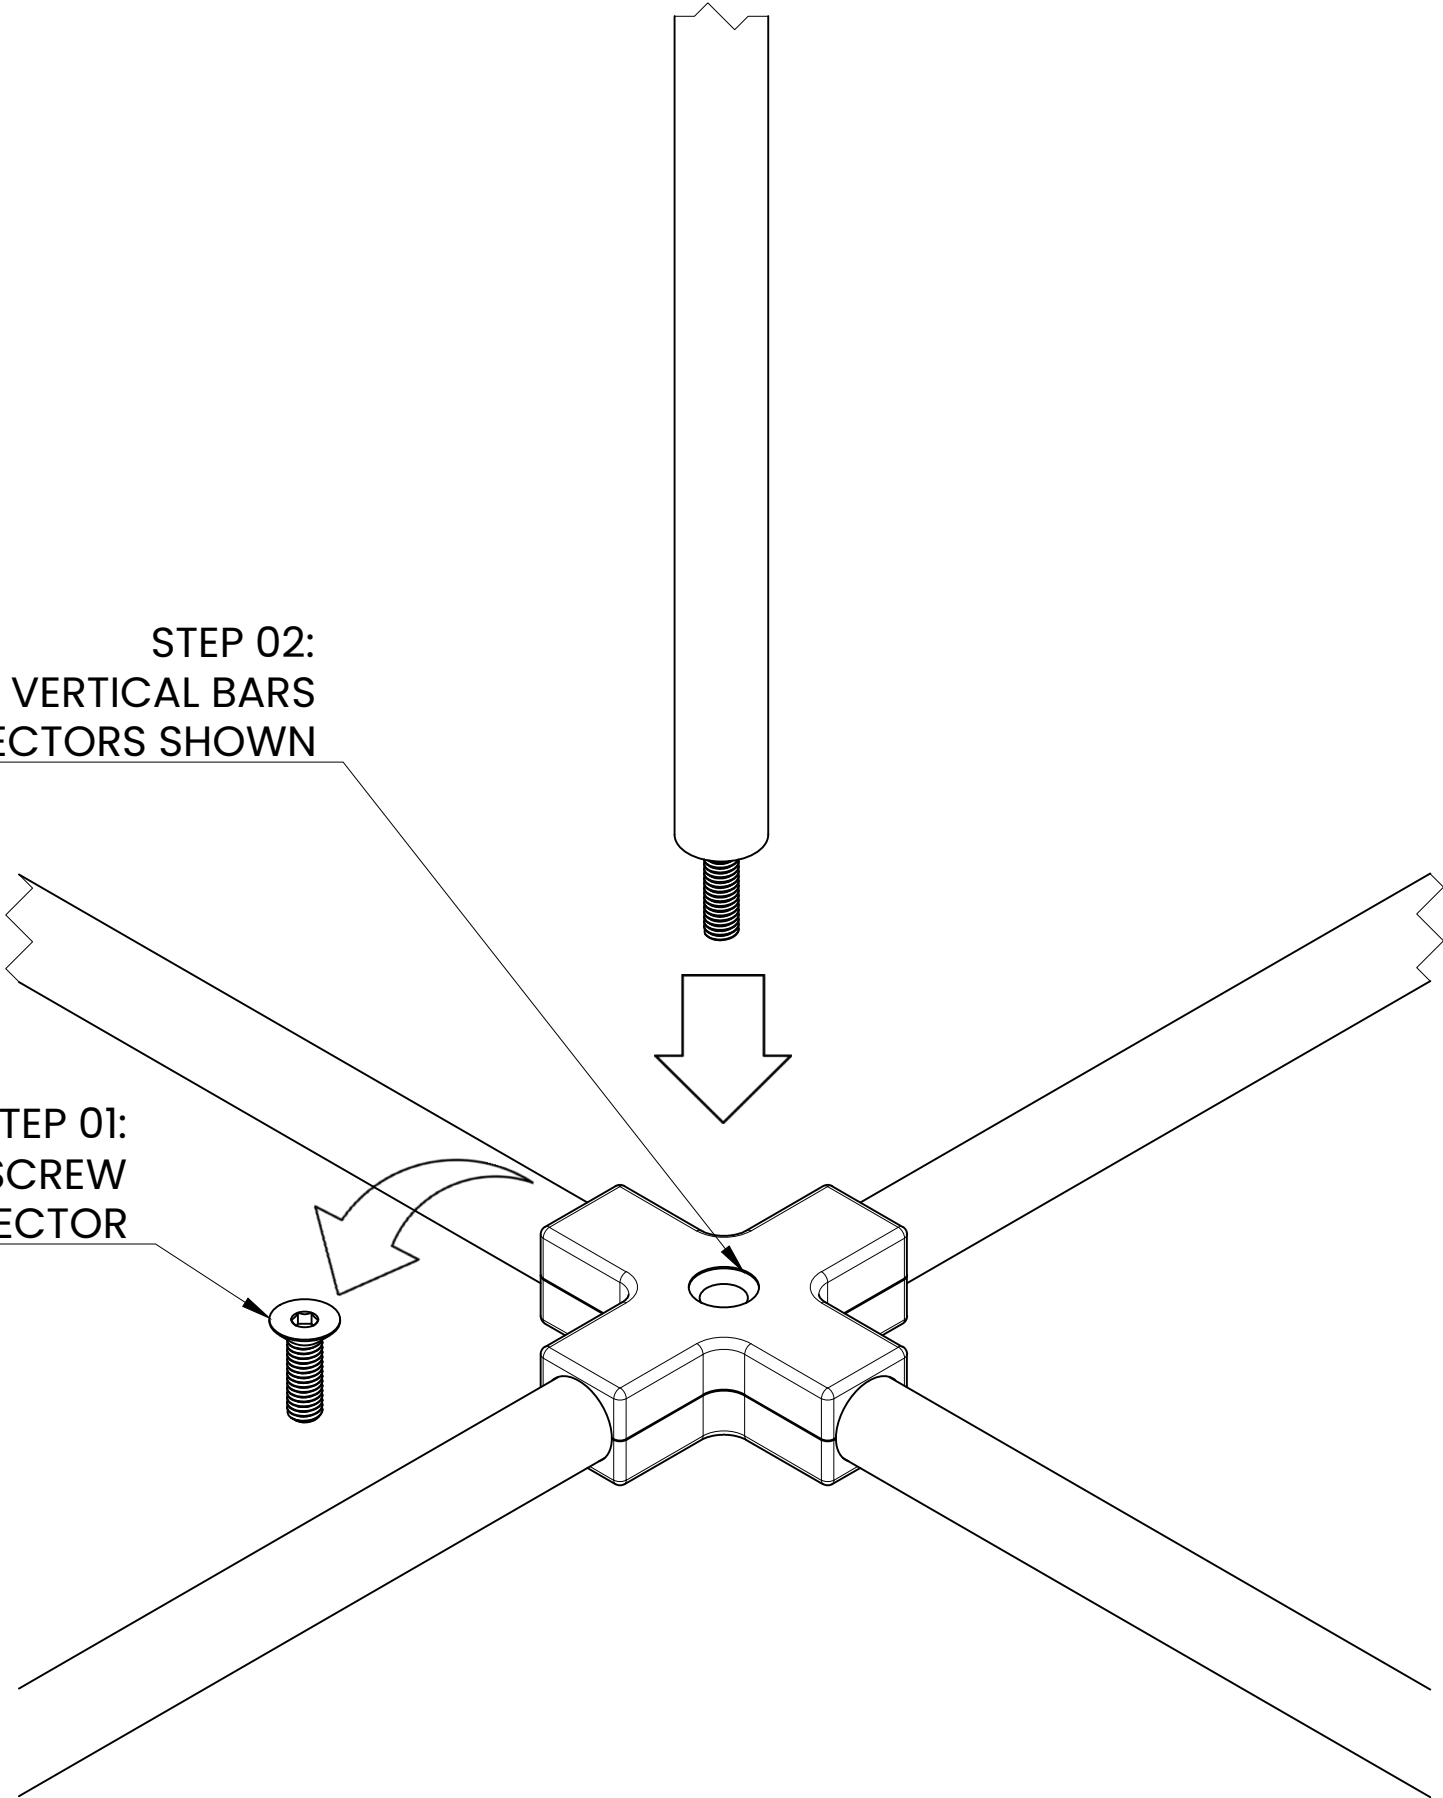

formd.
TITLE
TI LARGE WINDOW ASSEMBLY
PROJECT
DR MARTENS - RAIN
CLIENT
WE ARE SYN
VERSION #
V_01
DATE
04_09_2025
DRAWN BY
LEWIS STEPHENS
THIS DRAWING IS INTENDED FOR THE NAMED ONLY.
IT CONTAINS INFORMATION WHICH MAY BE CONFIDENTIAL & WHICH MAY ALSO BE PRIVILEGED. UNLESS YOU ARE THE NAMED ADDRESSEE (OR AUTHORISED TO RECEIVE IT FOR THE ADDRESSEE)

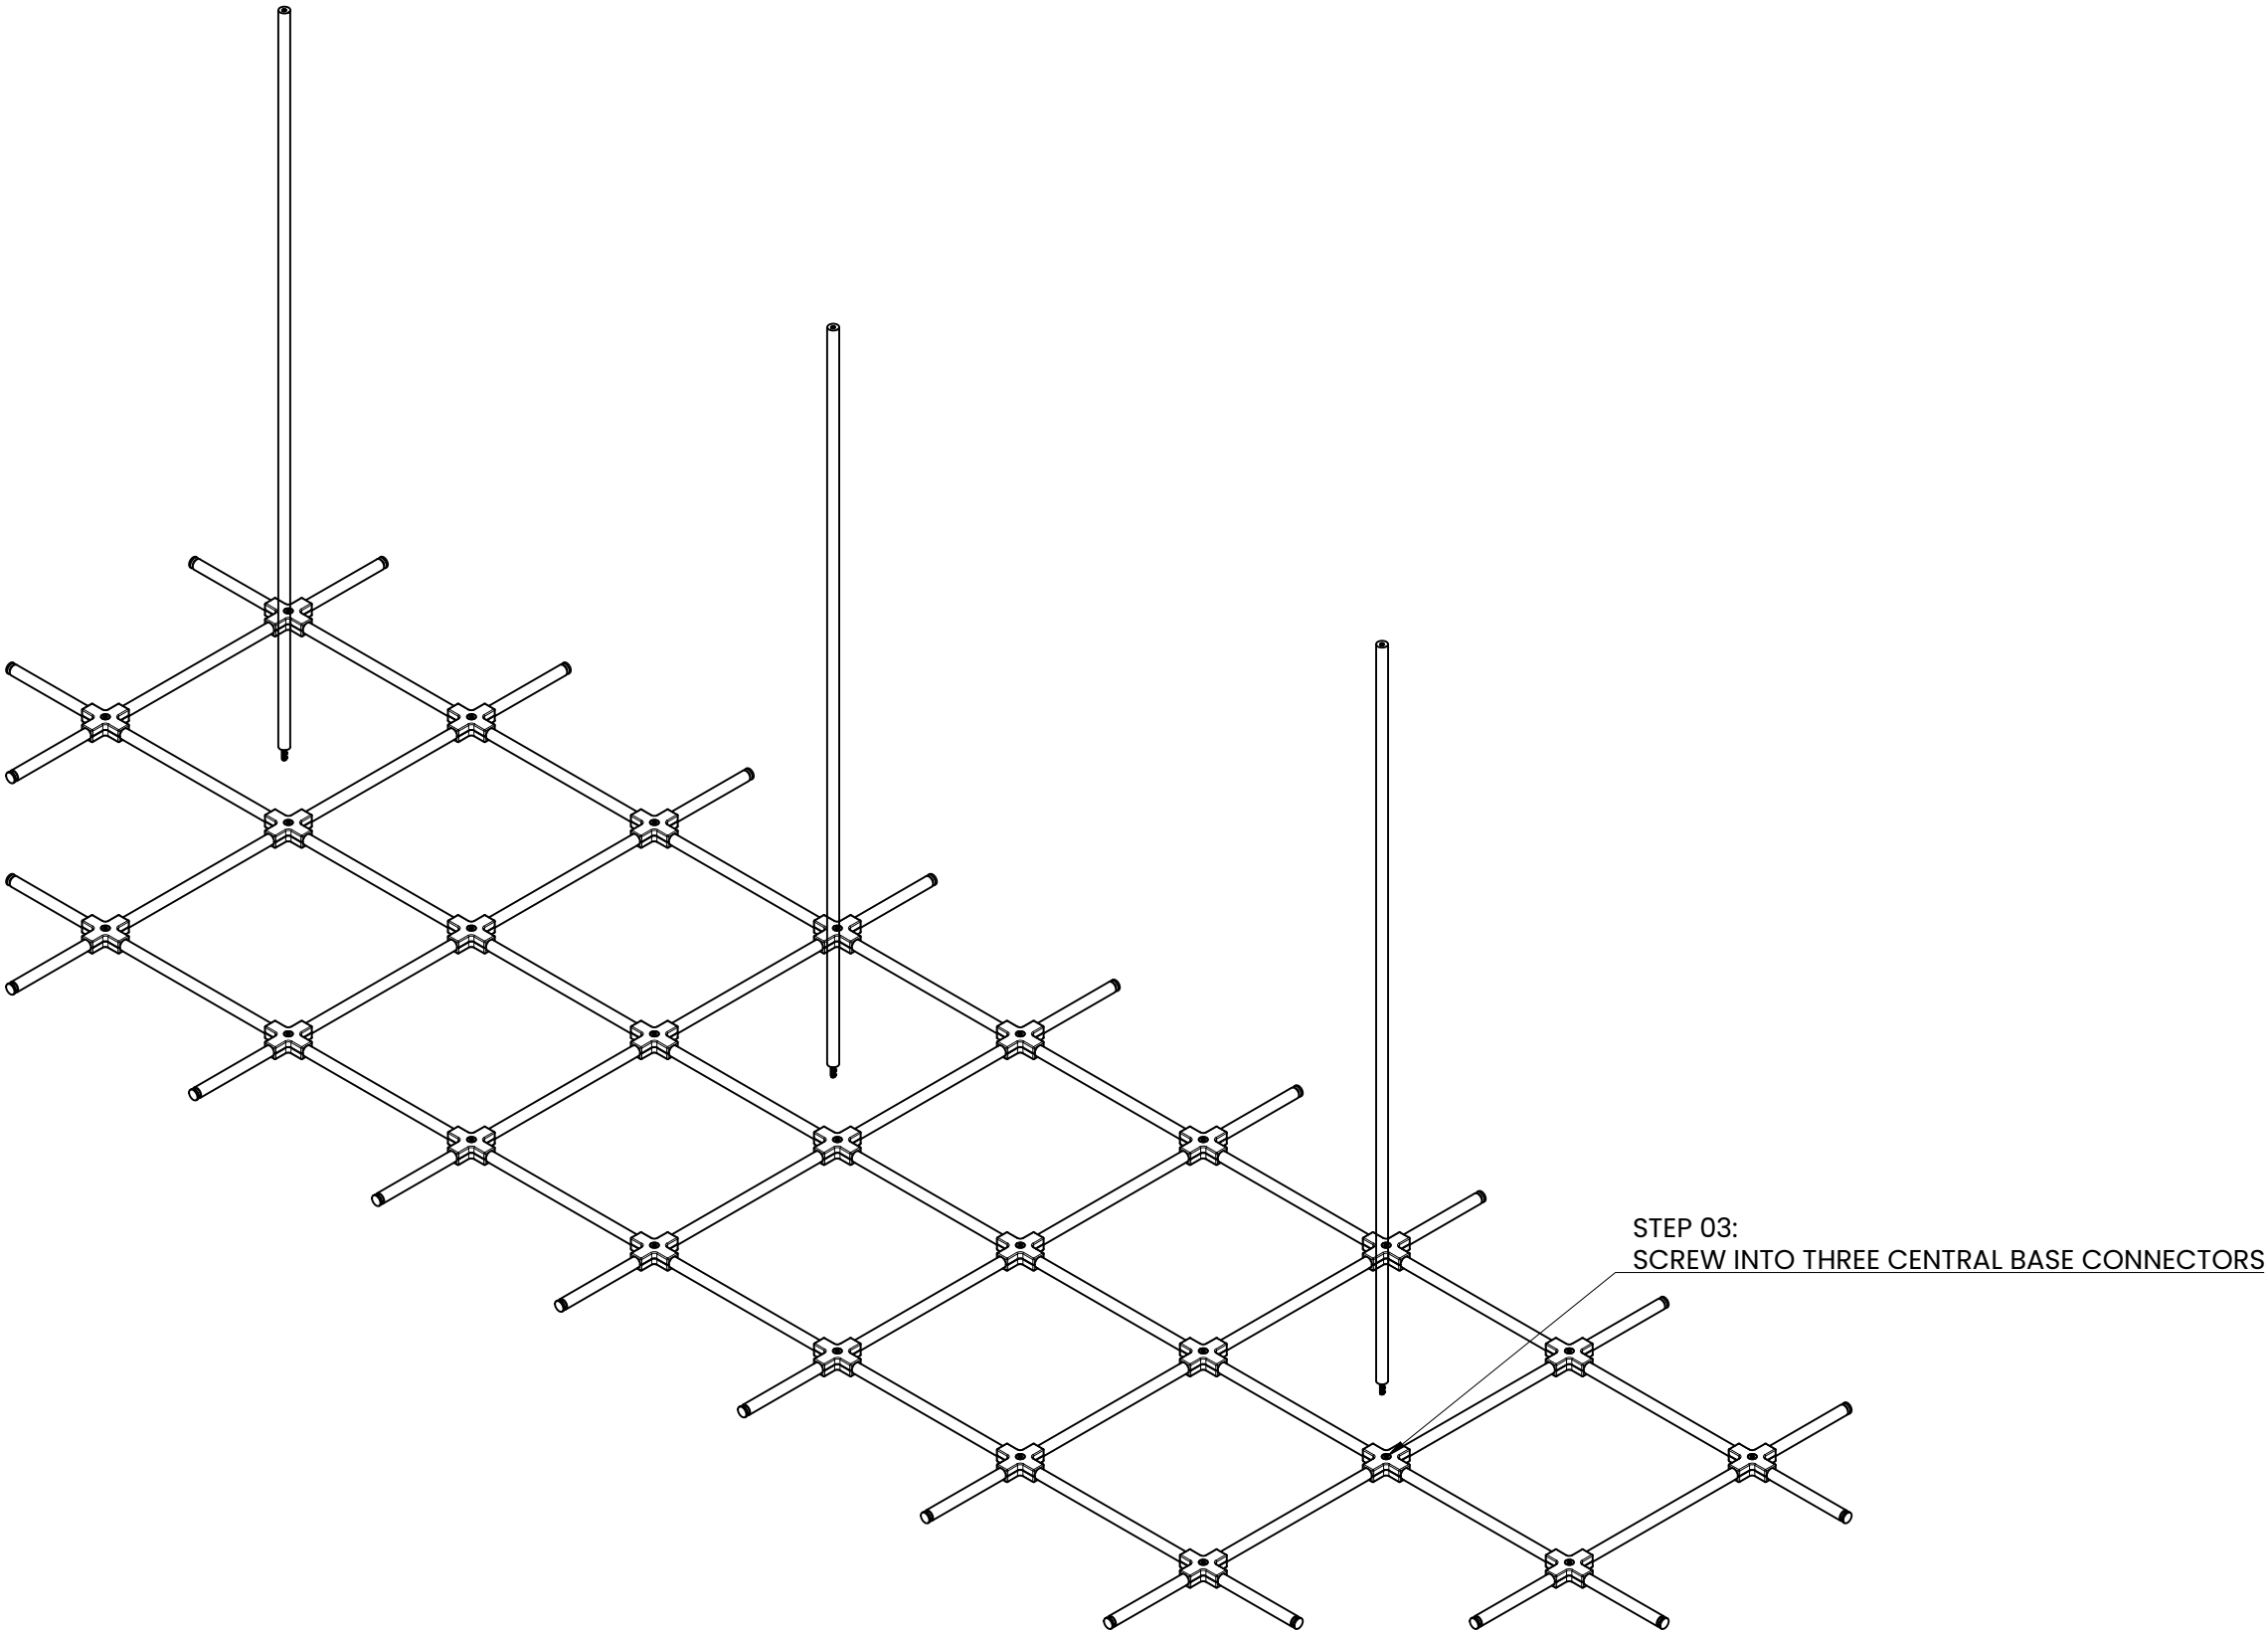


formd.
TITLE
TI LARGE WINDOW ASSEMBLY
PROJECT
DR MARTENS - RAIN
CLIENT
WE ARE SYN
VERSION #
V_01
DATE
04_09_2025
DRAWN BY
LEWIS STEPHENS
THIS DRAWING IS INTENDED FOR THE NAMED ONLY.
IT CONTAINS INFORMATION WHICH MAY BE CONFIDENTIAL & WHICH MAY ALSO BE PRIVILEGED. UNLESS YOU ARE THE NAMED ADDRESSEE (OR AUTHORISED TO RECEIVE IT FOR THE ADDRESSEE)





TUBE ATTACHMENT ASSEMBLY

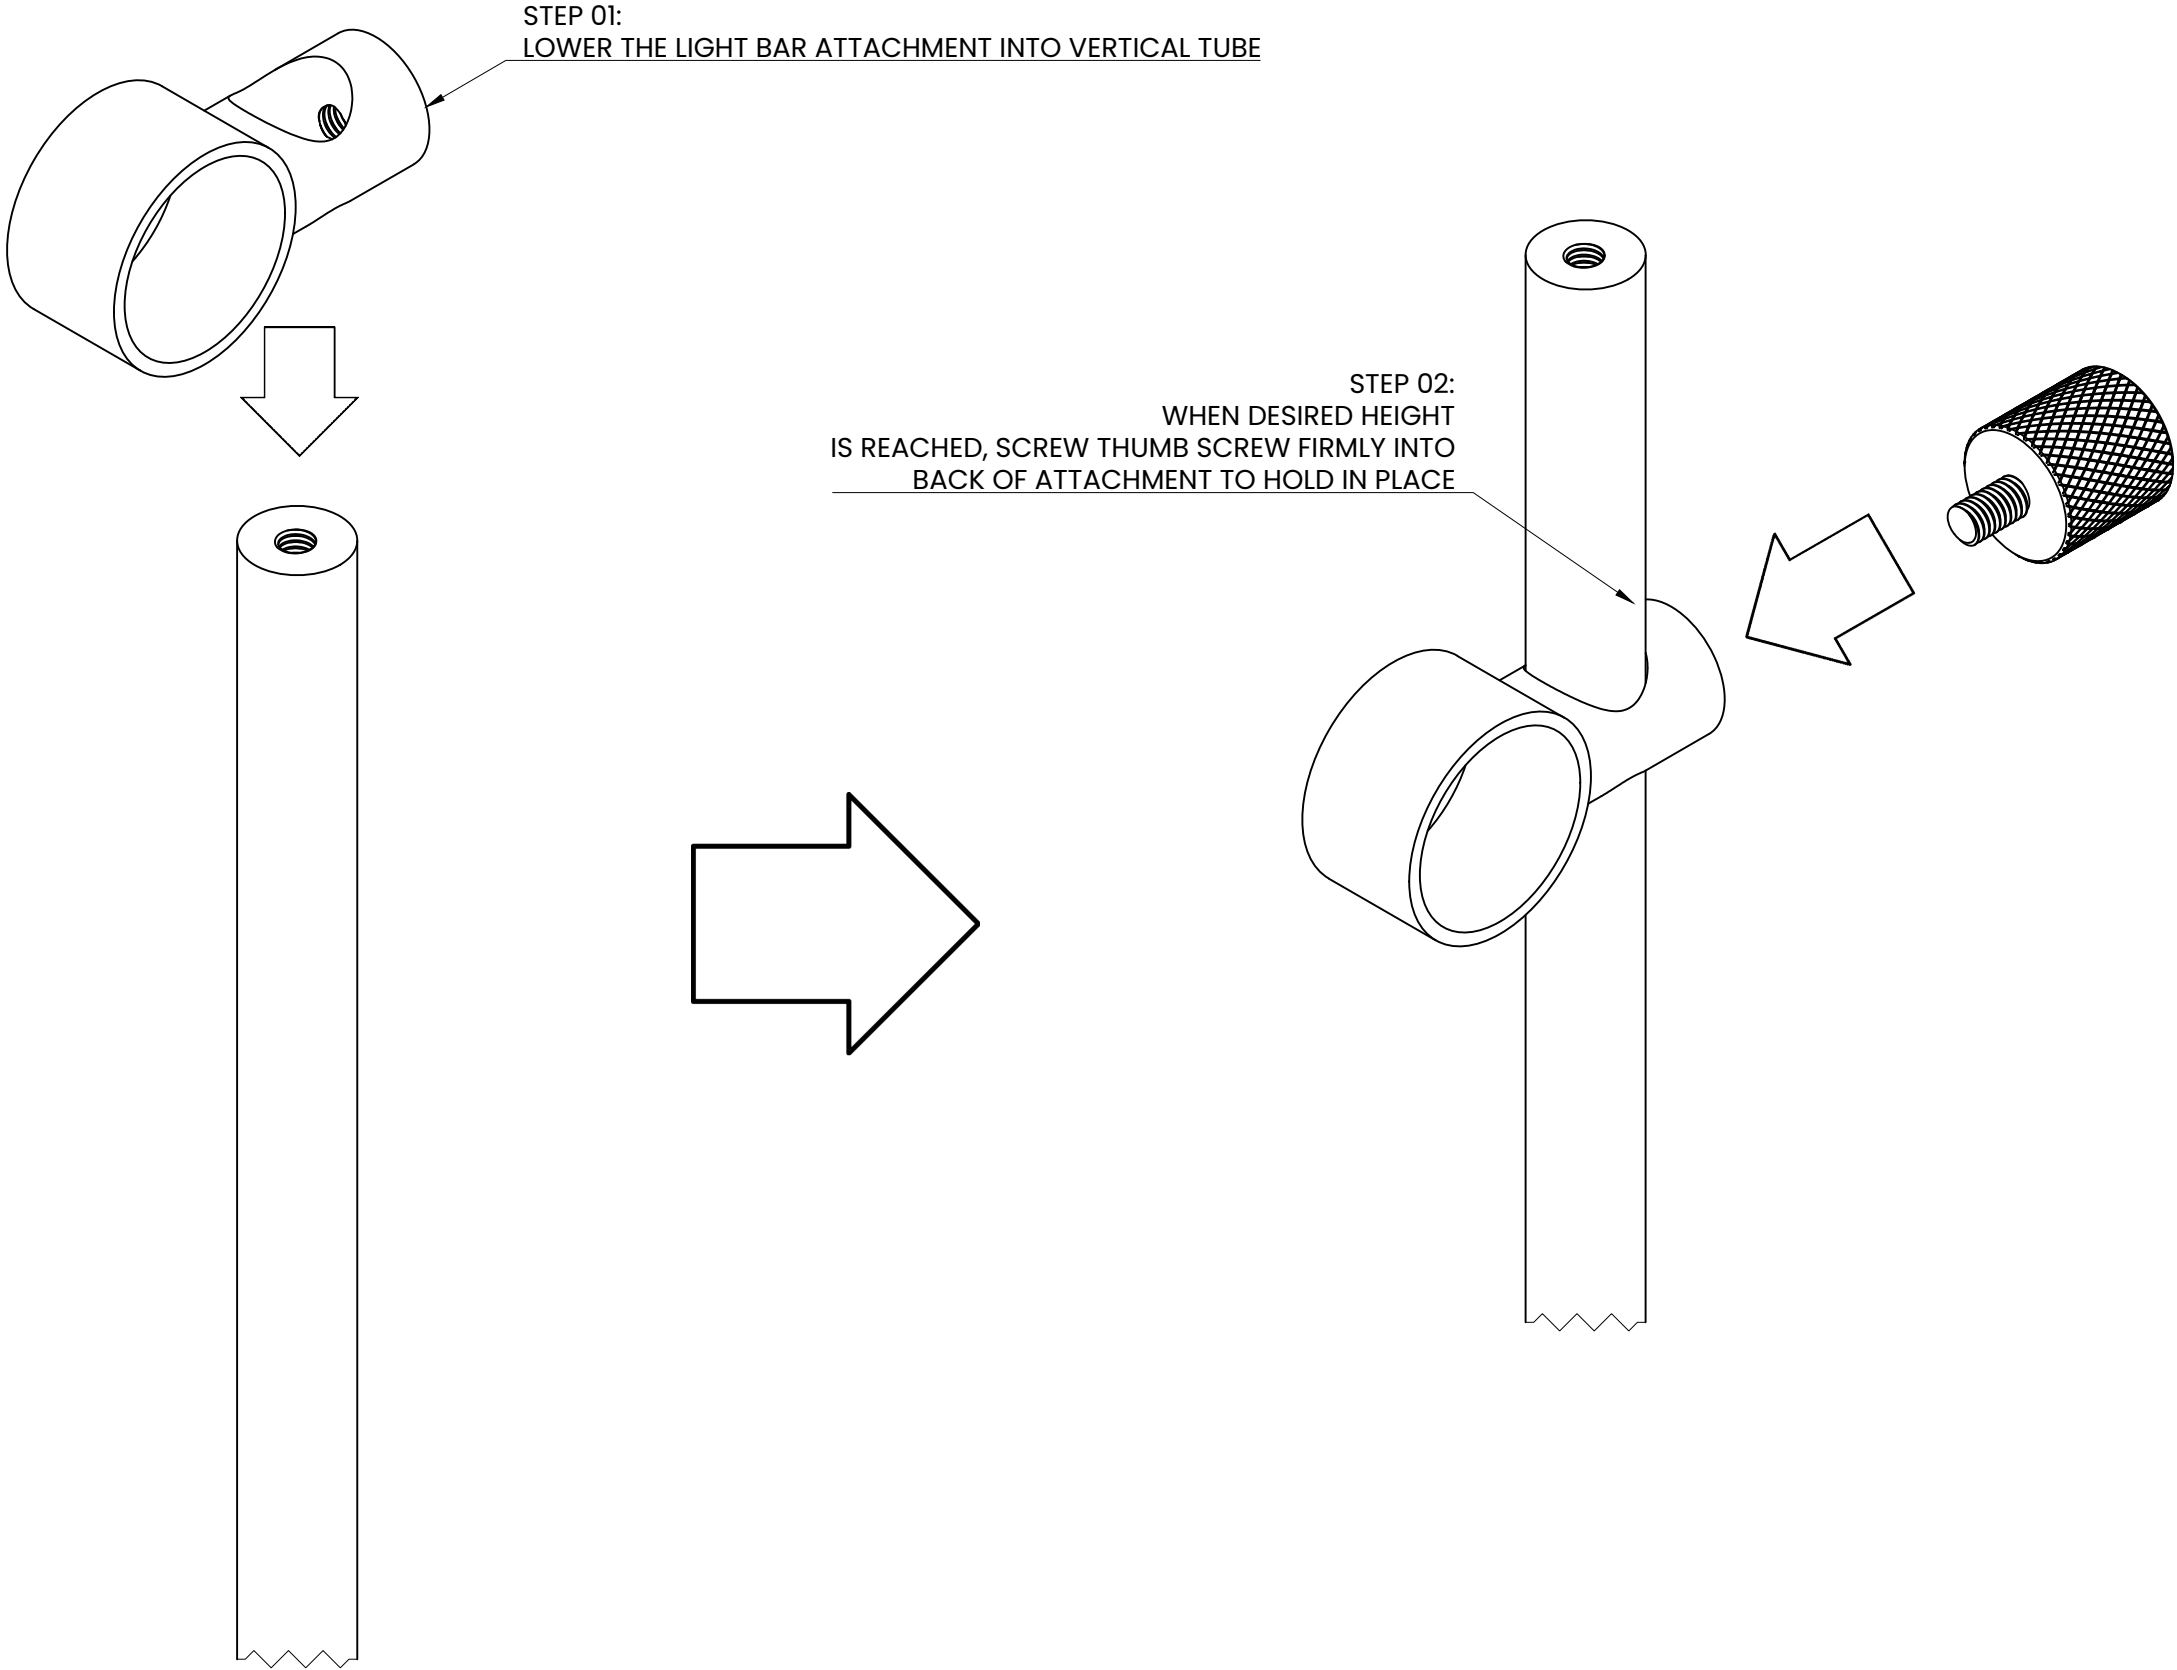


formd.
TITLE
TI LARGE WINDOW ASSEMBLY
PROJECT
DR MARTENS - RAIN
CLIENT
WE ARE SYN
VERSION #
V_01
DATE
04_09_2025
DRAWN BY
LEWIS STEPHENS
THIS DRAWING IS INTENDED FOR THE NAMED ONLY.
IT CONTAINS INFORMATION WHICH MAY BE CONFIDENTIAL & WHICH MAY ALSO BE PRIVILEGED. UNLESS YOU ARE THE NAMED ADDRESSEE (OR AUTHORISED TO RECEIVE IT FOR THE ADDRESSEE)












PLATE ATTACHMENT

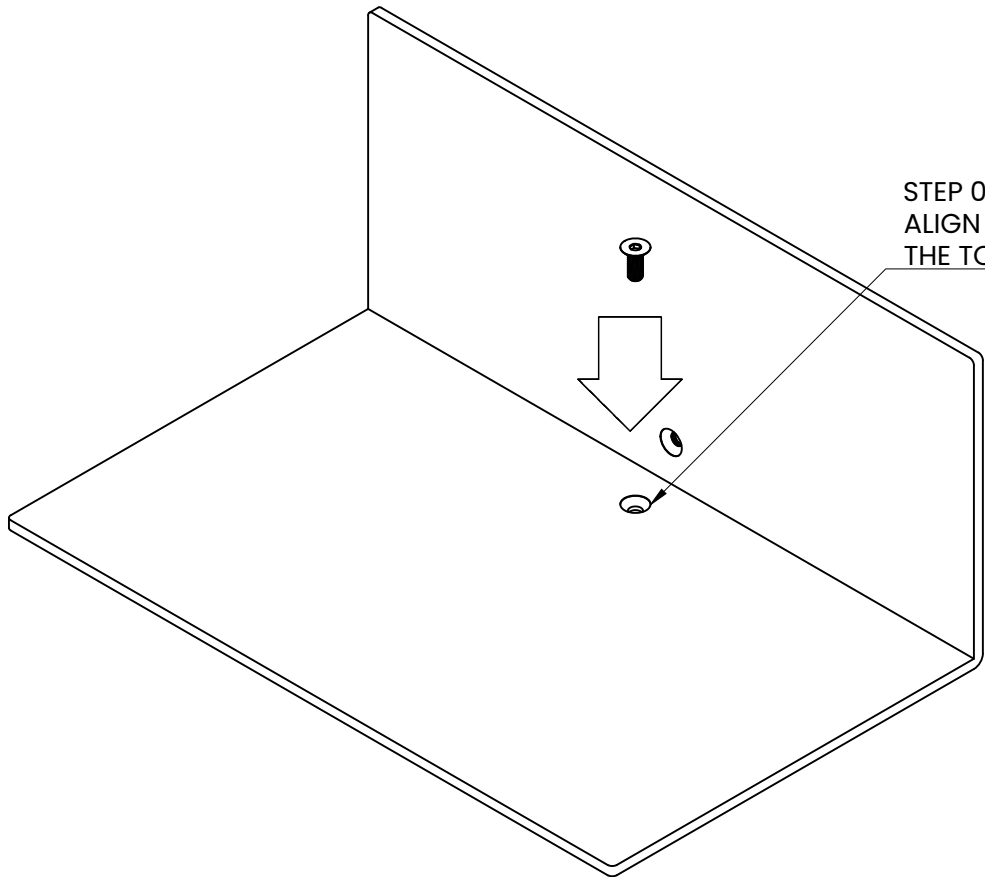

STEP 01:
ALIGN L PLATE HOLE WITH THREAD AT
THE TOP OF THE VERTICAL BAR

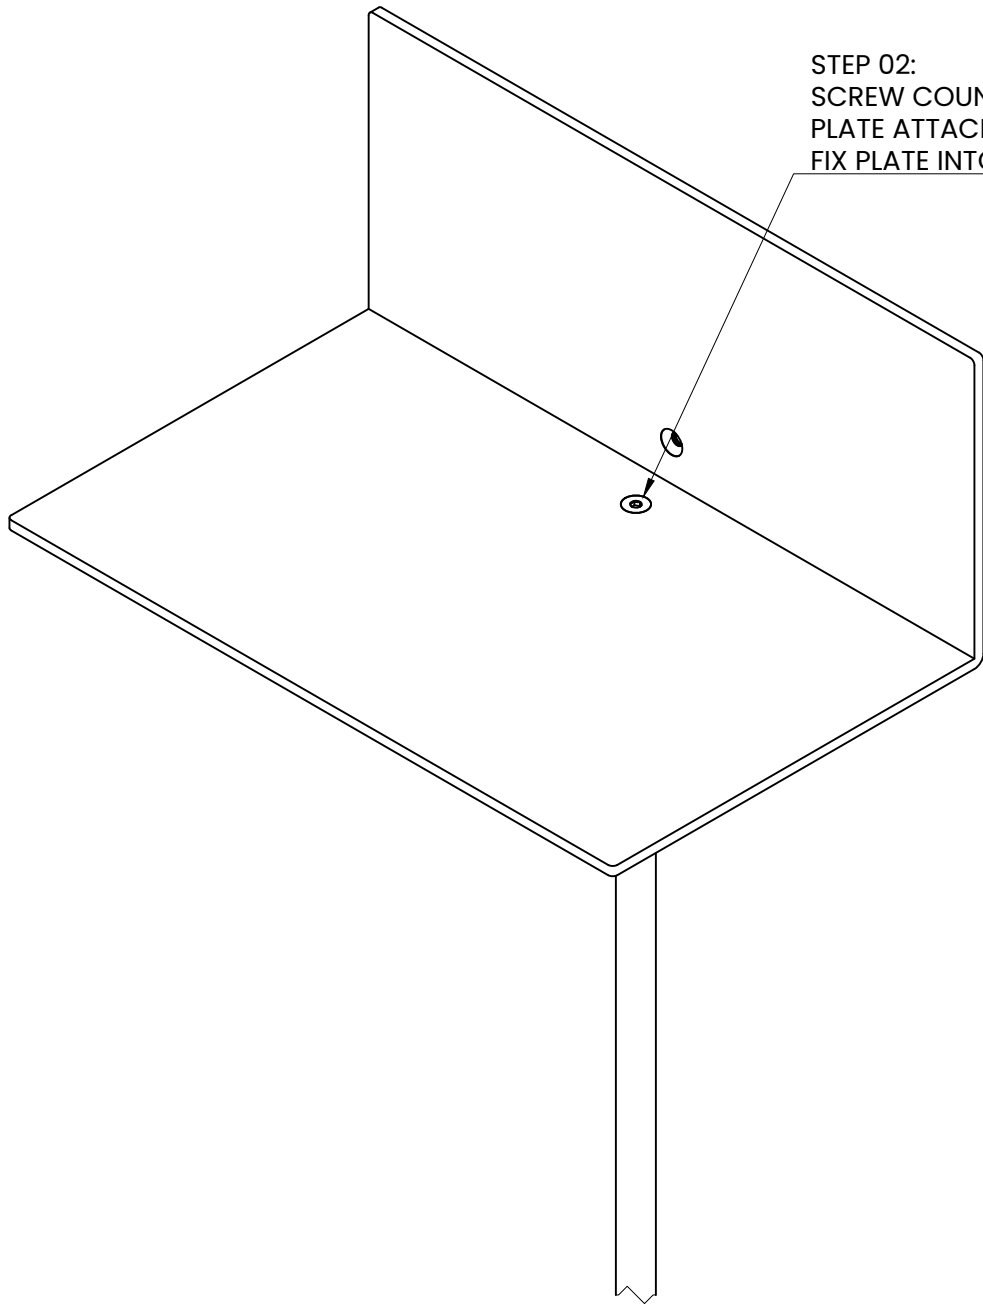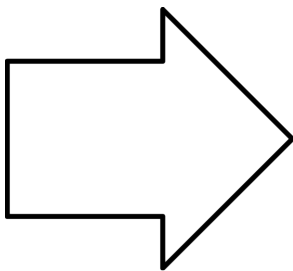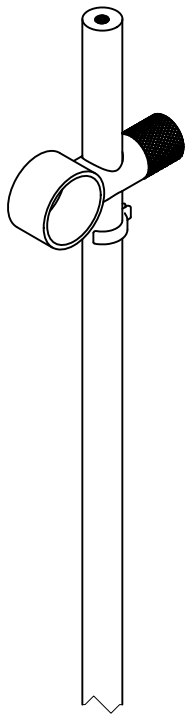

STEP 02:
SCREW COUNTERSUNK BOLT INTO
PLATE ATTACHMENT CONNECTOR TO
FIX PLATE INTO PLACE

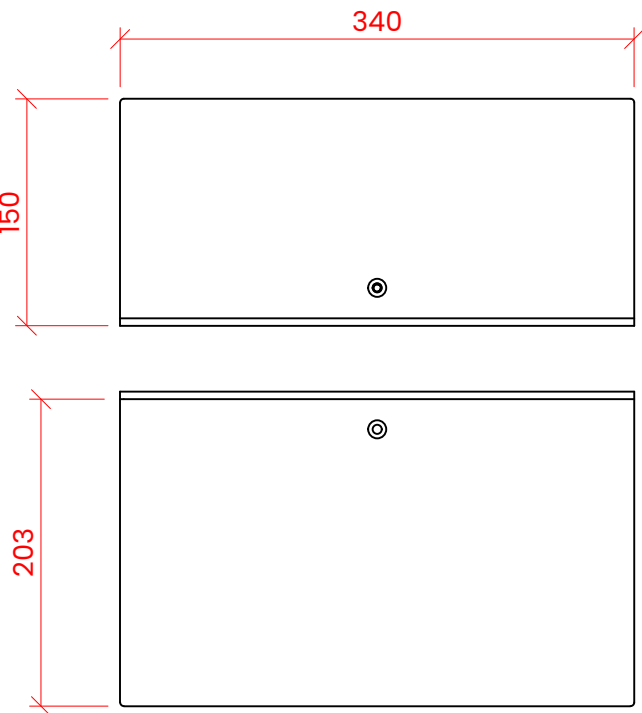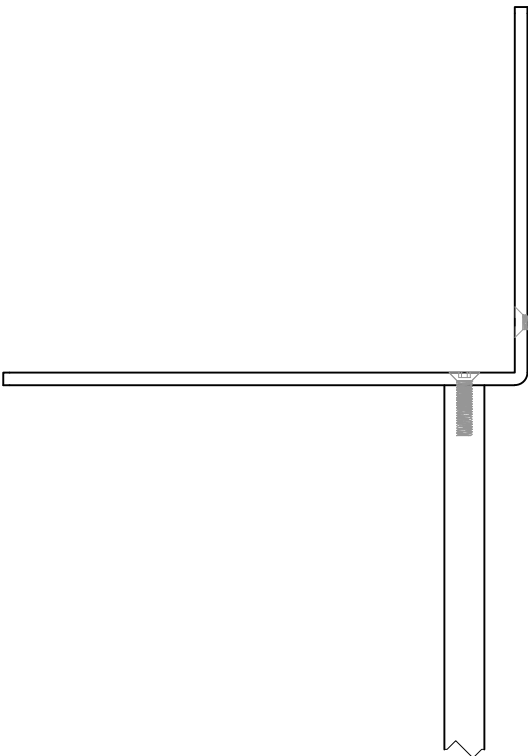


formd.
TITLE
TI LARGE WINDOW ASSEMBLY
PROJECT
DR MARTENS - RAIN
CLIENT
WE ARE SYN
VERSION #
V_01
DATE
04_09_2025
DRAWN BY
LEWIS STEPHENS
THIS DRAWING IS INTENDED FOR THE NAMED ONLY.
IT CONTAINS INFORMATION WHICH MAY BE CONFIDENTIAL & WHICH MAY ALSO BE PRIVILEGED. UNLESS YOU ARE THE NAMED ADDRESSEE (OR AUTHORISED TO RECEIVE IT FOR THE ADDRESSEE)



HANGING BANNER ASSEMBLY 1/4

PARTS NEEDED



BANNER BAR X3




12 METRES OF 4MM STEEL CABLE



BANNER WEIGHT X6




STEEL CABLE CRIMPS X12

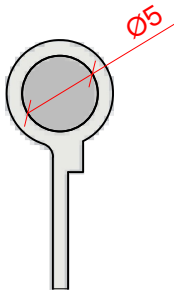

X3 ARTWORK
W800 X H3300MM



EXAMPLE

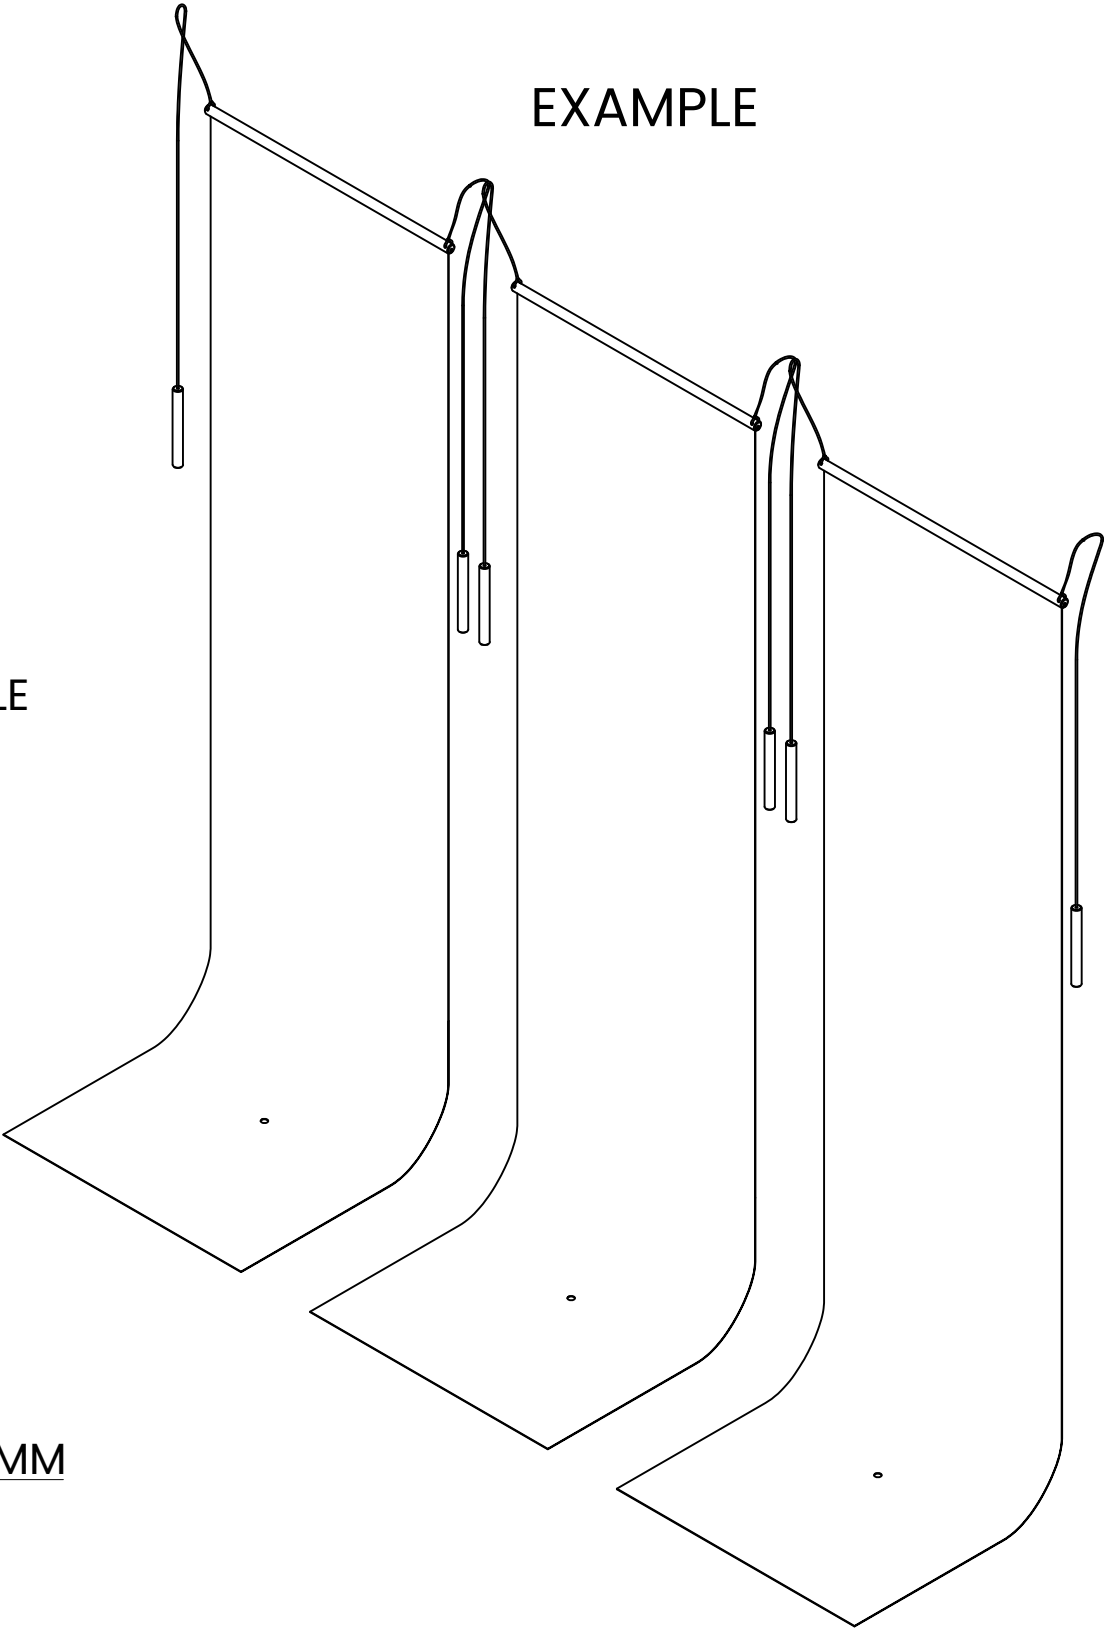

formd.
TITLE
TI LARGE WINDOW ASSEMBLY
PROJECT
DR MARTENS - RAIN
CLIENT
WE ARE SYN
VERSION #
V_01
DATE
04_09_2025
DRAWN BY
LEWIS STEPHENS
THIS DRAWING IS INTENDED FOR THE NAMED ONLY.
IT CONTAINS INFORMATION WHICH MAY BE CONFIDENTIAL & WHICH MAY ALSO BE PRIVILEGED. UNLESS YOU ARE THE NAMED ADDRESSEE (OR AUTHORISED TO RECEIVE IT FOR THE ADDRESSEE)


HANGING BANNER ASSEMBLY 2/4

Banners should be tested locally to ensure the chosen fabric works with the suggested hanging mechanic

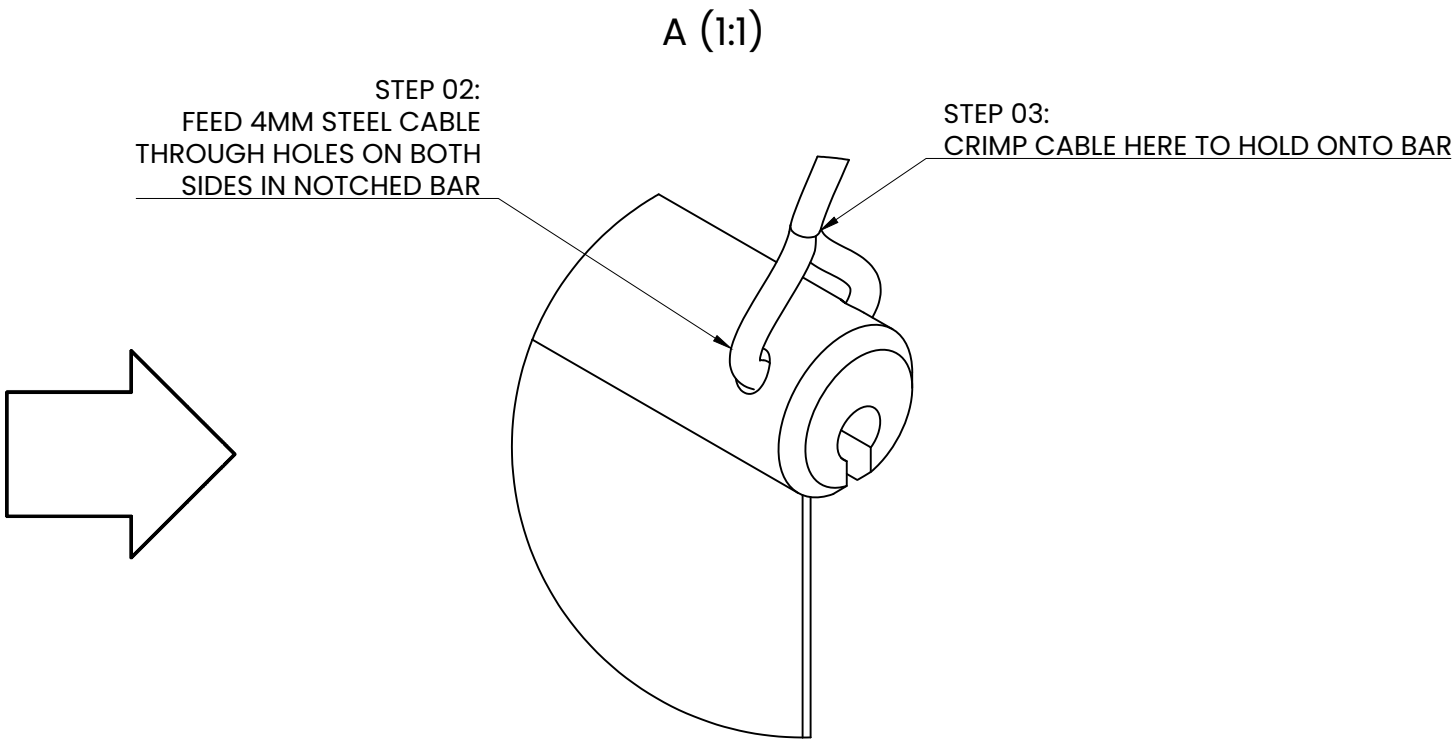
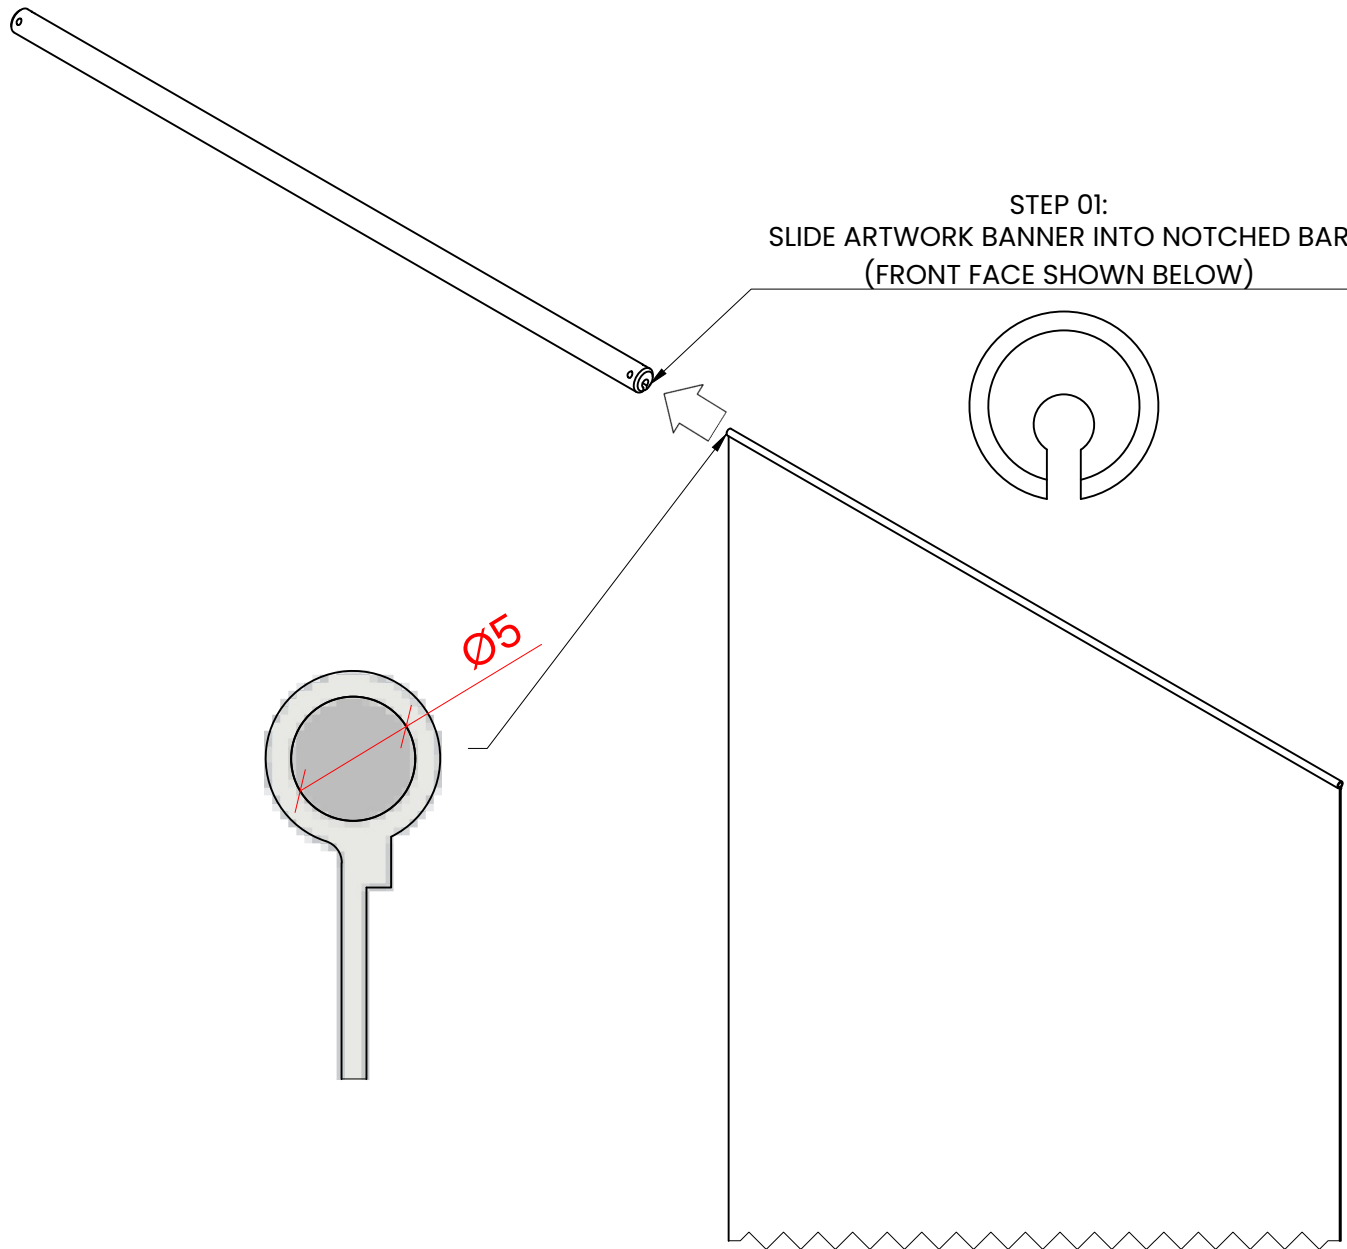


formd.
TITLE
TI LARGE WINDOW ASSEMBLY
PROJECT
DR MARTENS - RAIN
CLIENT
WE ARE SYN
VERSION #
V_01
DATE
04_09_2025
DRAWN BY
LEWIS STEPHENS
THIS DRAWING IS INTENDED FOR THE NAMED ONLY. IT CONTAINS INFORMATION WHICH MAY BE CONFIDENTIAL & WHICH MAY ALSO BE PRIVILEGED. UNLESS YOU ARE THE NAMED ADDRESSEE (OR AUTHORISED TO RECEIVE IT FOR THE ADDRESSEE)

HANGING BANNER ASSEMBLY 3/4

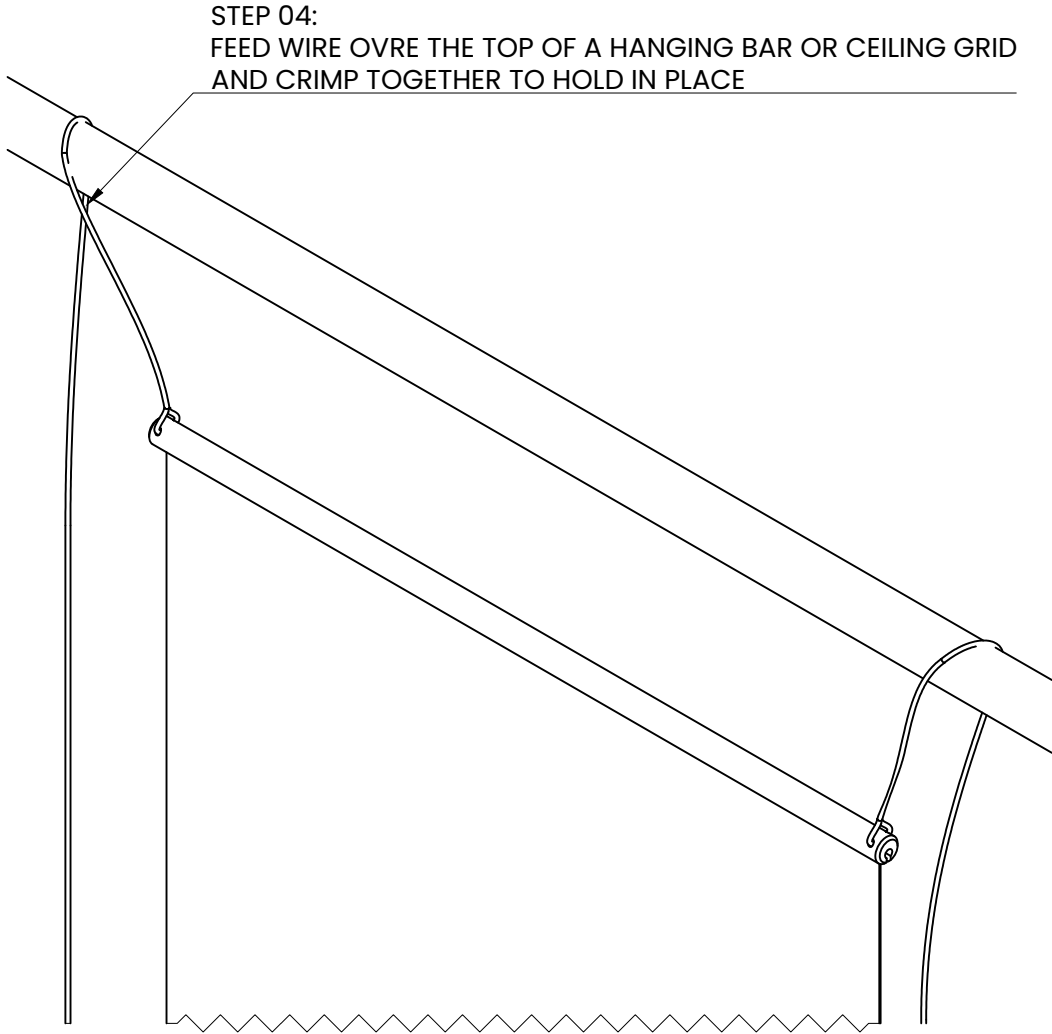

STEP 04:
FEED WIRE OVRE THE TOP OF A HANGING BAR OR CEILING GRID
AND CRIMP TOGETHER TO HOLD IN PLACE

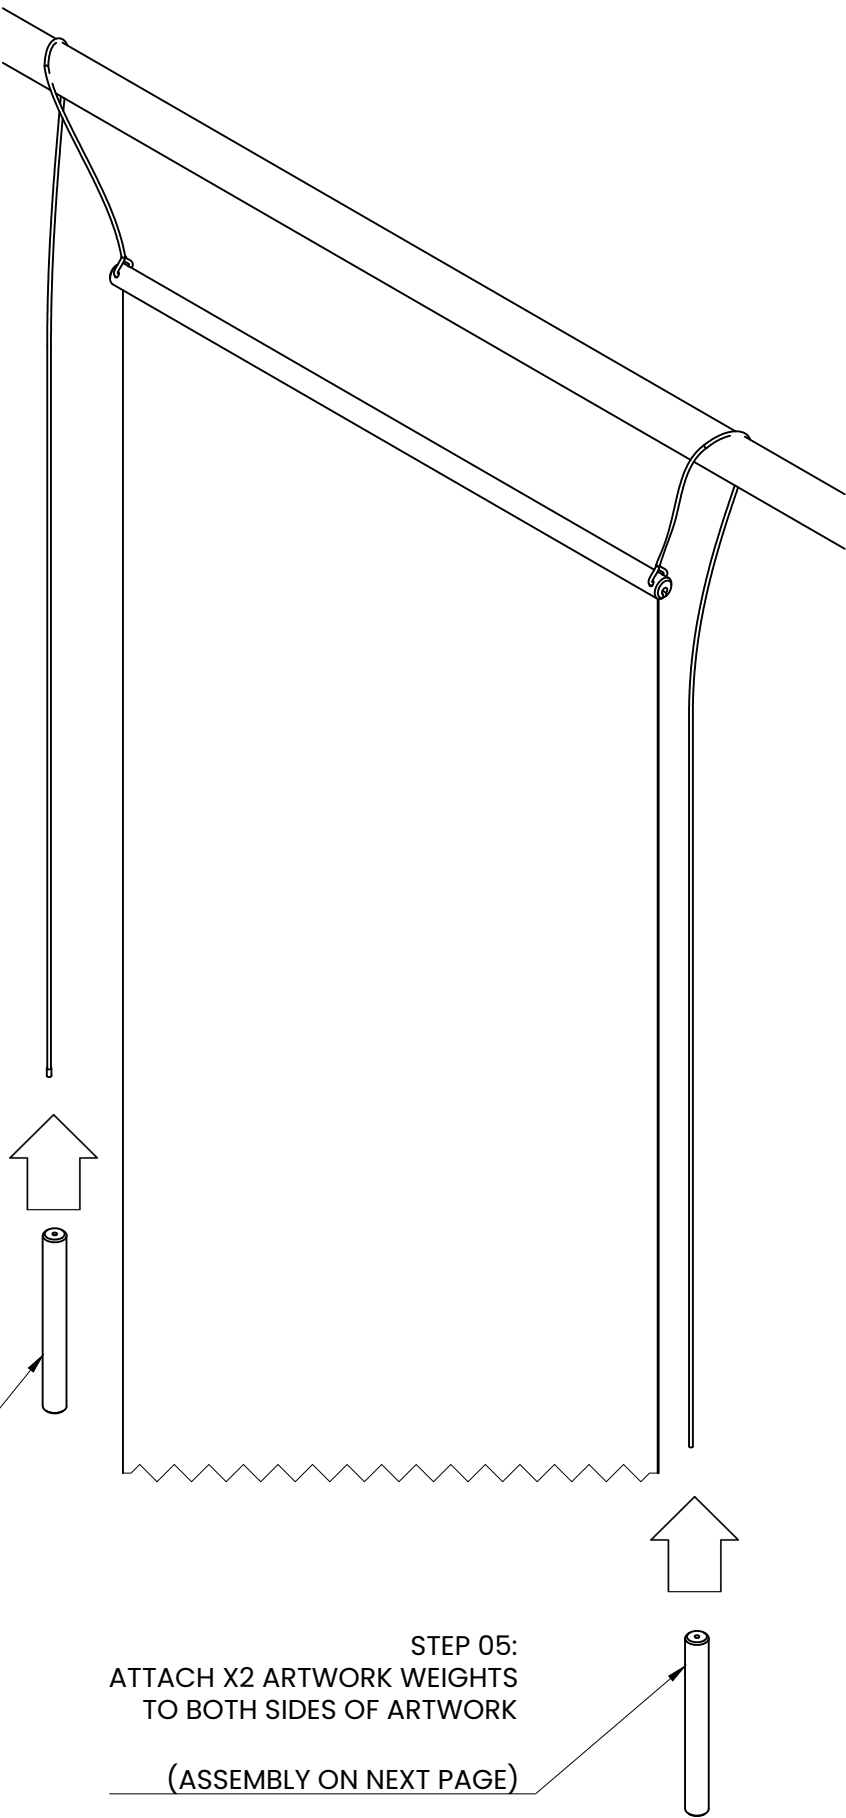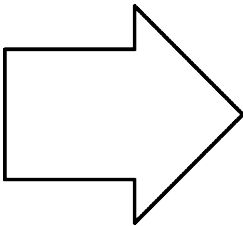

STEP 05:
ATTACH X2 ARTWORK WEIGHTS
TO BOTH SIDES OF ARTWORK



(ASSEMBLY ON NEXT PAGE)

NOTE: DO NOT SOLELY RELY ON THE WEIGHTS TO HOLD THE BANNER WEIGHT

formd.
TITLE
TI LARGE WINDOW ASSEMBLY
PROJECT
DR MARTENS - RAIN
CLIENT
WE ARE SYN
VERSION #
V_01
DATE
04_09_2025
DRAWN BY
LEWIS STEPHENS
THIS DRAWING IS INTENDED FOR THE NAMED ONLY.
IT CONTAINS INFORMATION WHICH MAY BE CONFIDENTIAL & WHICH MAY ALSO BE PRIVILEGED. UNLESS YOU ARE THE NAMED ADDRESSEE (OR AUTHORISED TO RECEIVE IT FOR THE ADDRESSEE)



HANGING BANNER ASSEMBLY 4/4

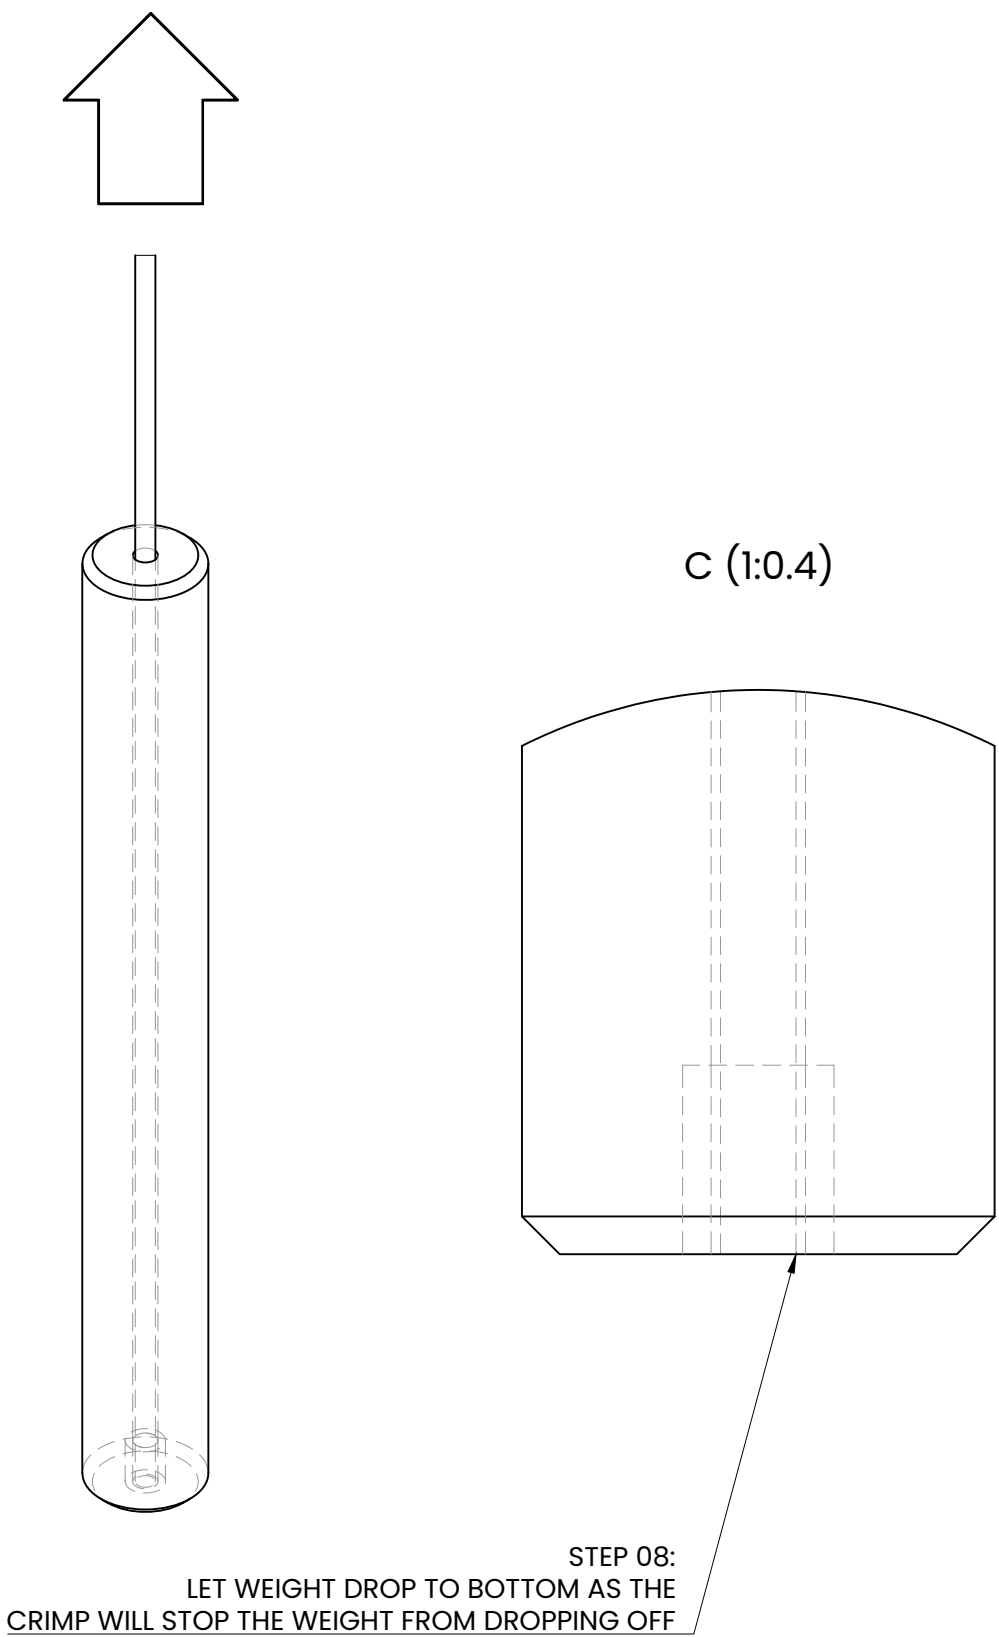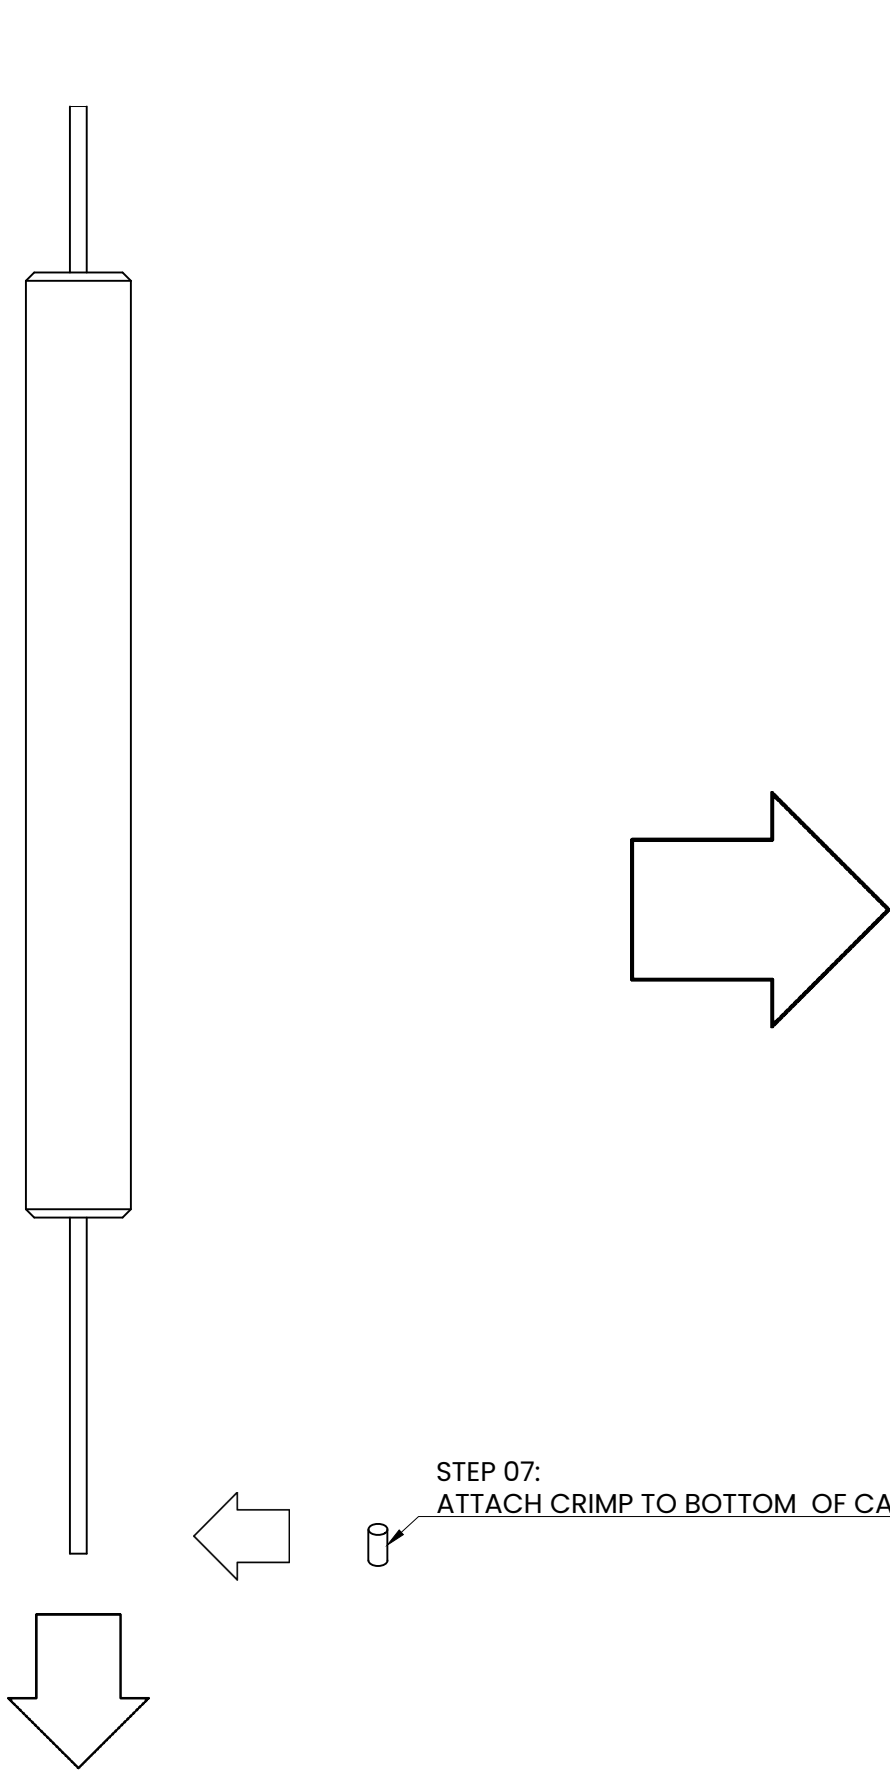

formd.
TITLE
TI LARGE WINDOW ASSEMBLY
PROJECT
DR MARTENS - RAIN
CLIENT
WE ARE SYN
VERSION #
V_01
DATE
04_09_2025
DRAWN BY
LEWIS STEPHENS
THIS DRAWING IS INTENDED FOR THE NAMED ONLY. IT CONTAINS INFORMATION WHICH MAY BE CONFIDENTIAL & WHICH MAY ALSO BE PRIVILEGED. UNLESS YOU ARE THE NAMED ADDRESSEE (OR AUTHORISED TO RECEIVE IT FOR THE ADDRESSEE)

