

2022-11-07

[illegible]

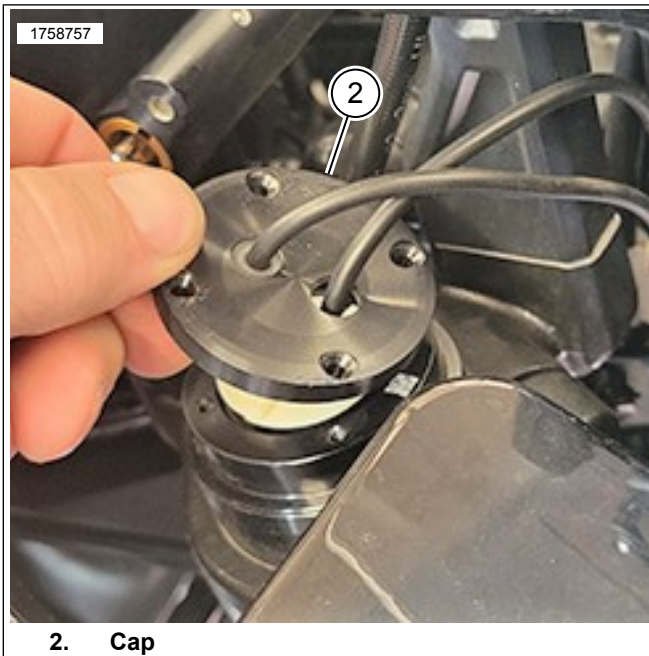


Figure 2. Fork Tube Cap

3. See Figure 3. Reposition weather seals (4) on the Adaptive Ride Height (ARH) wires.
4. Inspect that both connectors (3) are secure and firmly in place. Make sure wires are properly crimped to terminals.

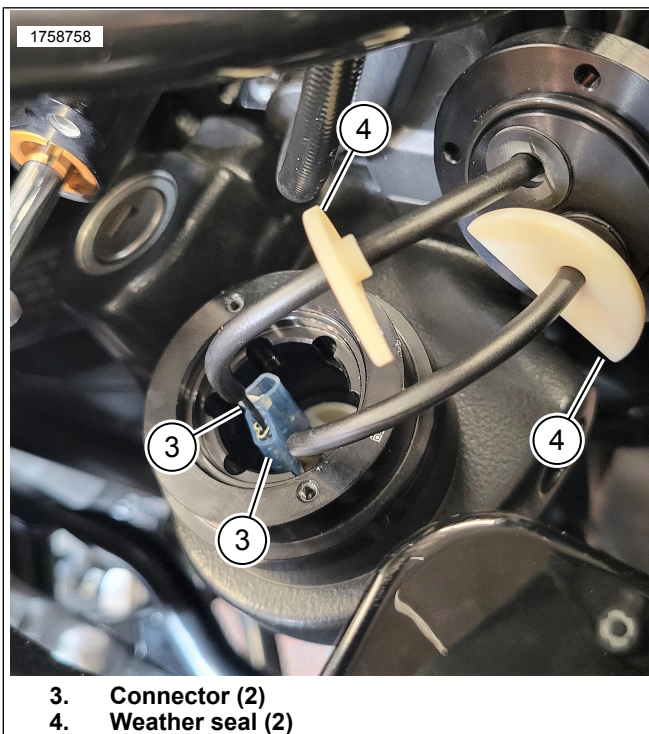


Figure 3. Connectors

Reassemble

NOTE

If connectors are found to be loose or disconnected, tighten and reinstall. If connectors are damaged, the fork will need to be replaced. After reassembly verify that Diagnostic Trouble

Codes (DTCs) do not return. If connectors are found to be in place with a tight fit, then continue with suggested repair given by the EDM and DT II guided diagnostics.

1. Reassemble fork assembly.
 - a. Make sure weather seals are installed properly to avoid any pinching when assembled.
2. See Figure 1. Tighten screws (1).
Torque: 7 in-lbs (0.8 N·m) Shock screw