
M490E ·RTO-144 CONNECTIONS

M490E - Stereo Input - User Guide


REAR CONNECTOR


P1 — REAR VIEW · CARD EDGE · CONTACTS 1-4 SHOWN

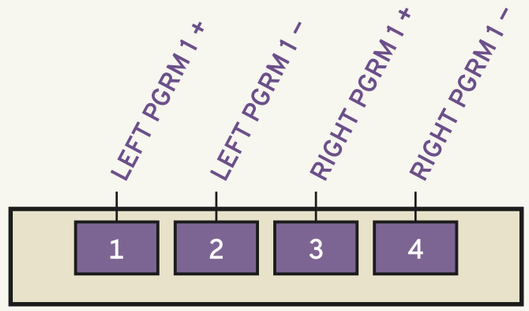

P2 — REAR VIEW · CARD EDGE · 44 CONTACTS

TOP ROW 1–22: COMPONENT SIDE · BOTTOM ROW A–Z: SOLDER SIDE

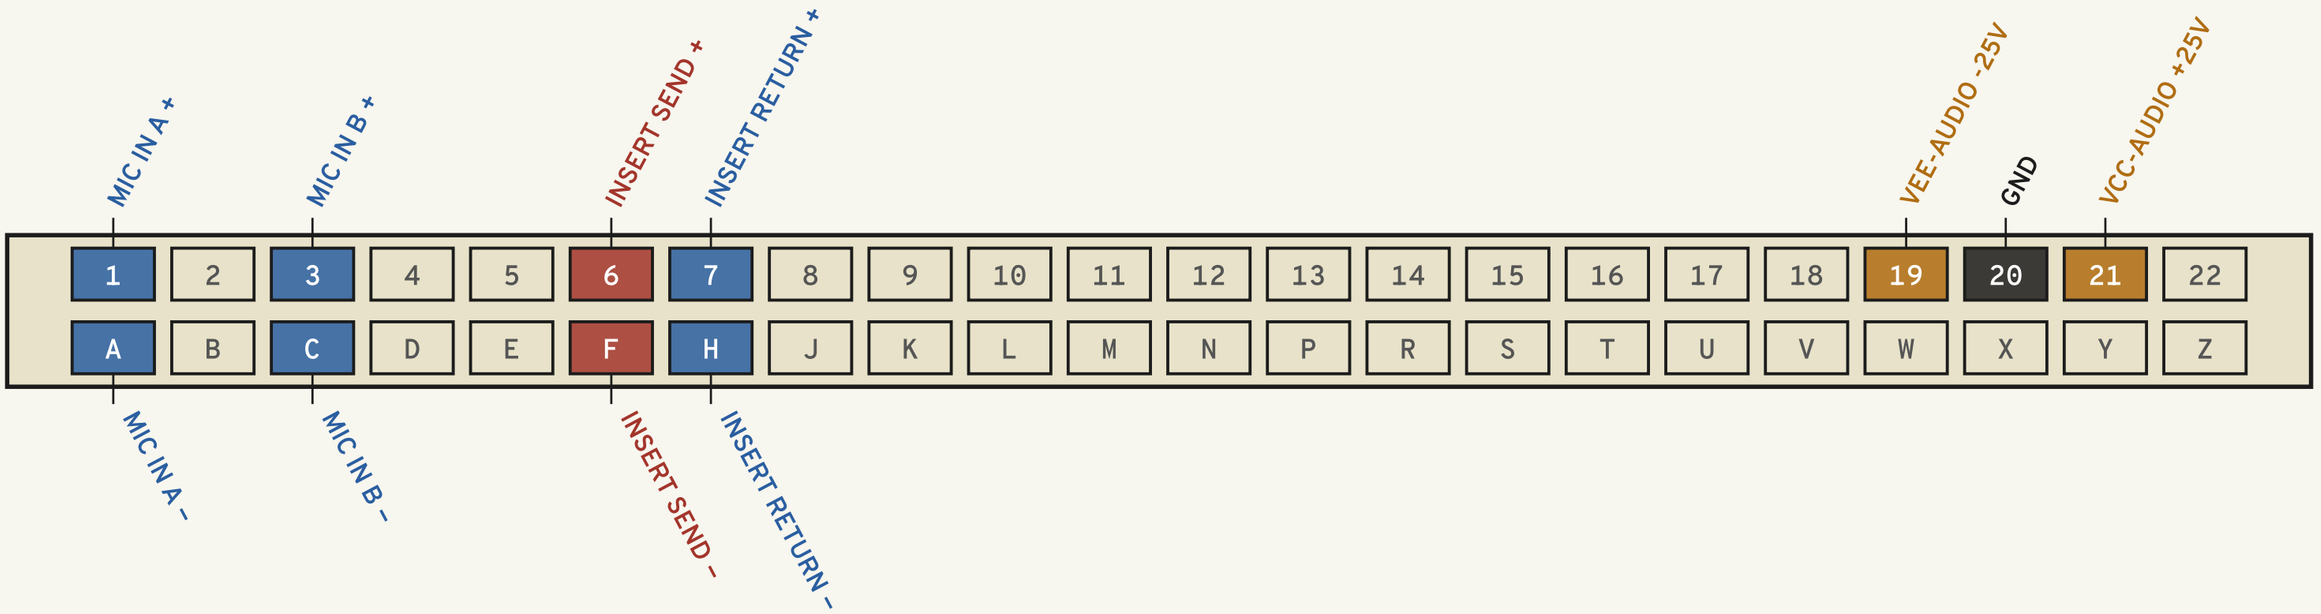

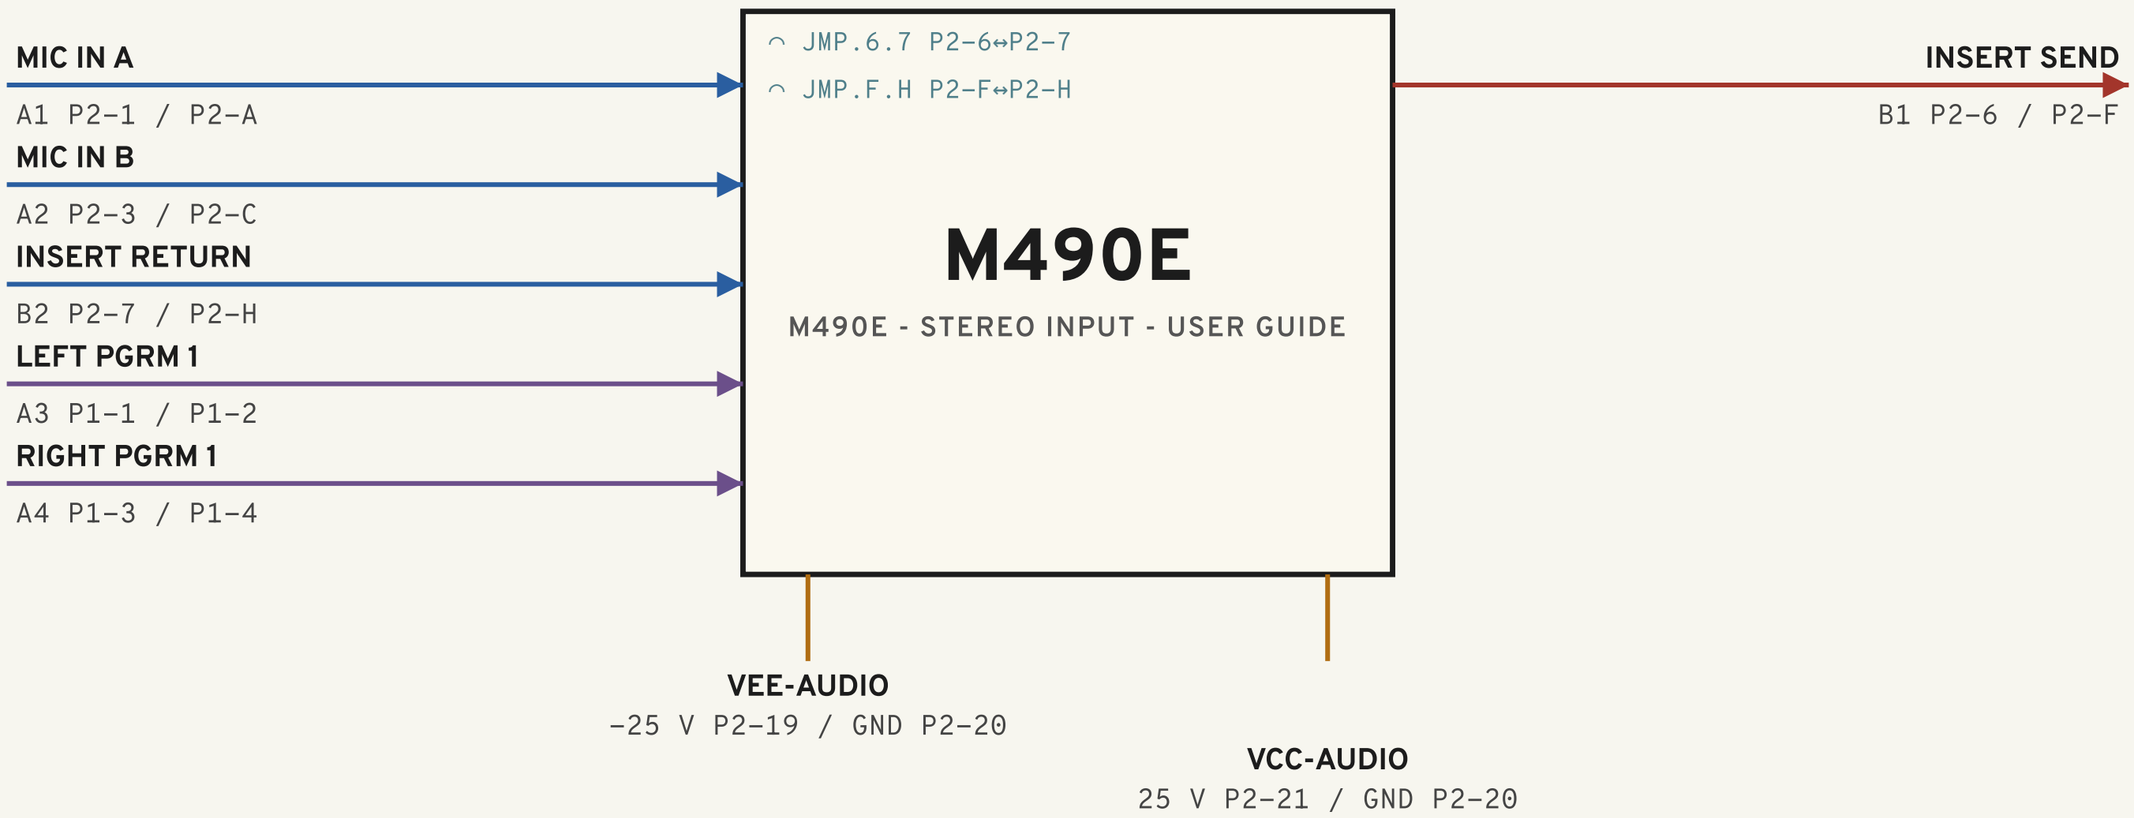

AUDIO CONNECTIONS · RTO-144 A / B

PORT	SIGNAL	DIR	PIN +	PIN −	PAD +	PAD −
A1	Mic in A	in	P2-1	P2-A	P2-1.A.1.P	P2-A.A.1.N
A2	Mic in B	in	P2-3	P2-C	P2-3.A.2.P	P2-C.A.2.N
A3	Left PGRM 1	io	P1-1	P1-2	P1-1.A.3.P	P1-2.A.3.N
A4	Right PGRM 1	io	P1-3	P1-4	P1-3.A.4.P	P1-4.A.4.N
B1	Insert Send	out	P2-6	P2-F	P2-6.B.1.P	P2-F.B.1.N
B2	Insert Return	in	P2-7	P2-H	P2-7.B.2.P	P2-H.B.2.N

POWER · BENCH PSU

RAIL	STYLE	VOLTS	MAX A	SUPPLY	GROUND	LINK
VEE-AUDIO	NEW	-25	0.2	P2-19	P2-20	2
VCC-AUDIO	NEW	25	0.2	P2-21	P2-20	1

JUMPERS

FUNCTION	DESIGNATION	FROM	TO
Insert	JMP.6.7	P2-6	P2-7
Insert	JMP.F.H	P2-F	P2-H

Source: Ward-Beck Systems - Module RTO-144 Jumper calculator.xlsx (Database tab). Pin direction is inferred

from the signal name. Verify against the module schematic
before wiring.

TITLE	M490E RTO-144 CONNECTIONS		
DRN.	MAKE_RTO144.PY	DATE	OCT 17 2026