
# M490N ·RTO-144 CONNECTIONS

M490N - Stereo Input Module


## REAR CONNECTOR


## P1 — REAR VIEW · CARD EDGE · CONTACTS 1-4 SHOWN

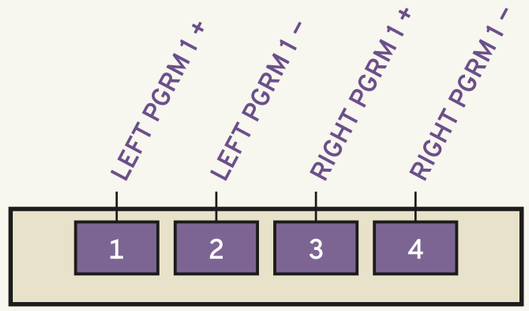


## P2 — REAR VIEW · CARD EDGE · 44 CONTACTS

TOP ROW 1–22: COMPONENT SIDE · BOTTOM ROW A–Z: SOLDER SIDE

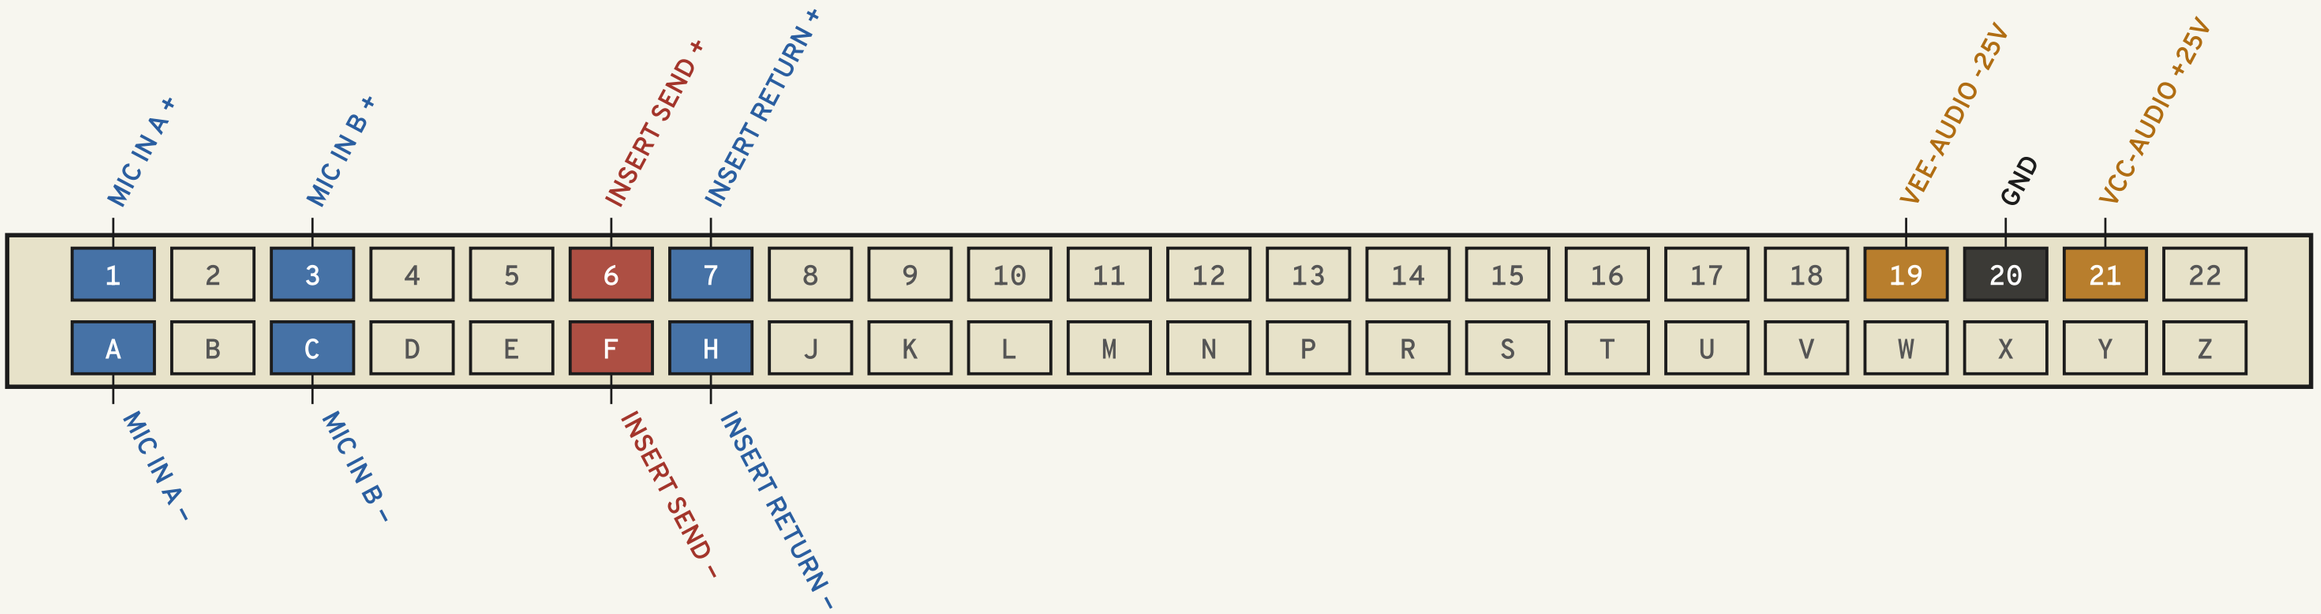

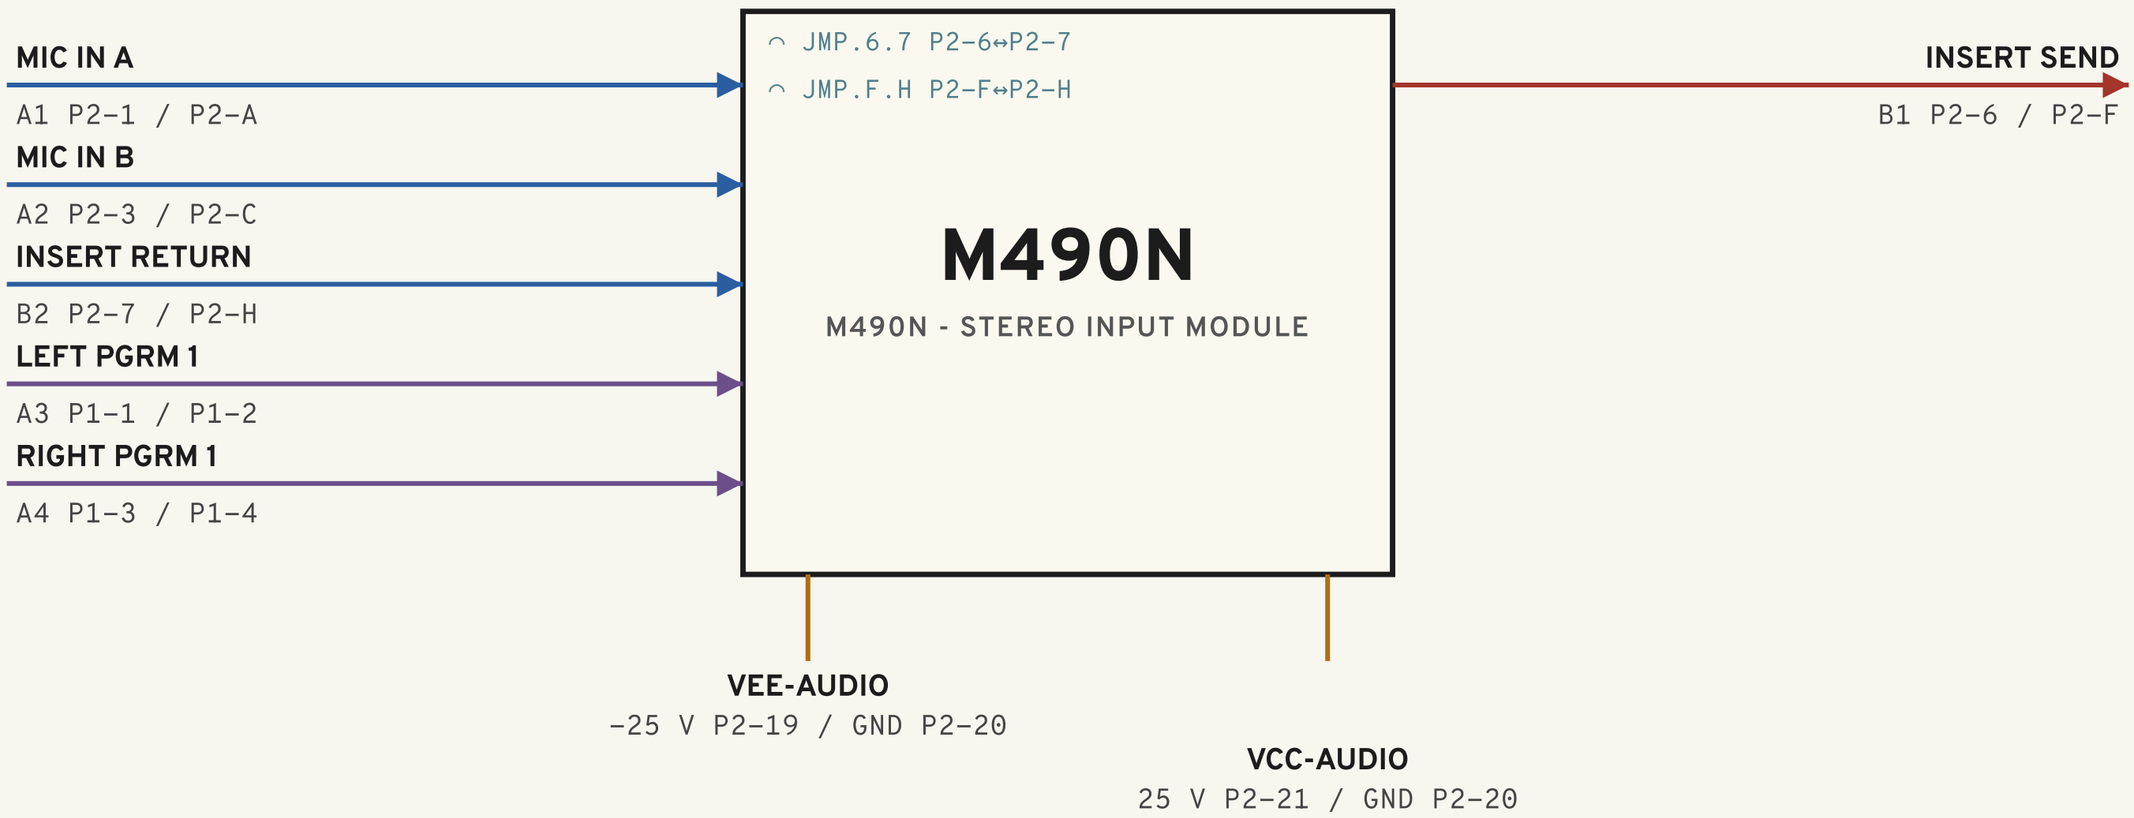


## AUDIO CONNECTIONS · RTO-144 A / B

| PORT | SIGNAL | DIR | PIN + | PIN − | PAD + | PAD − |
|---|---|---|---|---|---|---|
| A1 | Mic in A | in | P2-1 | P2-A | P2-1.A.1.P | P2-A.A.1.N |
| A2 | Mic in B | in | P2-3 | P2-C | P2-3.A.2.P | P2-C.A.2.N |
| A3 | Left PGRM 1 | io | P1-1 | P1-2 | P1-1.A.3.P | P1-2.A.3.N |
| A4 | Right PGRM 1 | io | P1-3 | P1-4 | P1-3.A.4.P | P1-4.A.4.N |
| B1 | Insert Send | out | P2-6 | P2-F | P2-6.B.1.P | P2-F.B.1.N |
| B2 | Insert Return | in | P2-7 | P2-H | P2-7.B.2.P | P2-H.B.2.N |

## POWER · BENCH PSU

| RAIL | STYLE | VOLTS | MAX A | SUPPLY | GROUND | LINK |
|---|---|---|---|---|---|---|
| VEE-AUDIO | NEW | -25 | 0.2 | P2-19 | P2-20 | 2 |
| VCC-AUDIO | NEW | 25 | 0.2 | P2-21 | P2-20 | 1 |

## JUMPERS

| FUNCTION | DESIGNATION | FROM | TO |
|---|---|---|---|
| Insert | JMP.6.7 | P2-6 | P2-7 |
| Insert | JMP.F.H | P2-F | P2-H |

Source: Ward-Beck Systems - Module RTO-144 Jumper calculator.xlsx (Database tab). Pin direction is inferred

from the signal name. Verify against the module schematic
before wiring.

| | | | |
|---|---|---|---|
| TITLE | M490N RTO-144 CONNECTIONS | | |
| DRN. | MAKE_RTO144.PY | DATE | OCT 17 2026 |