
M497- ·RTO-144 CONNECTIONS

M497-Dual-Master-Module


REAR CONNECTOR

P2 — REAR VIEW · CARD EDGE · 44 CONTACTS

TOP ROW 1–22: COMPONENT SIDE · BOTTOM ROW A–Z: SOLDER SIDE

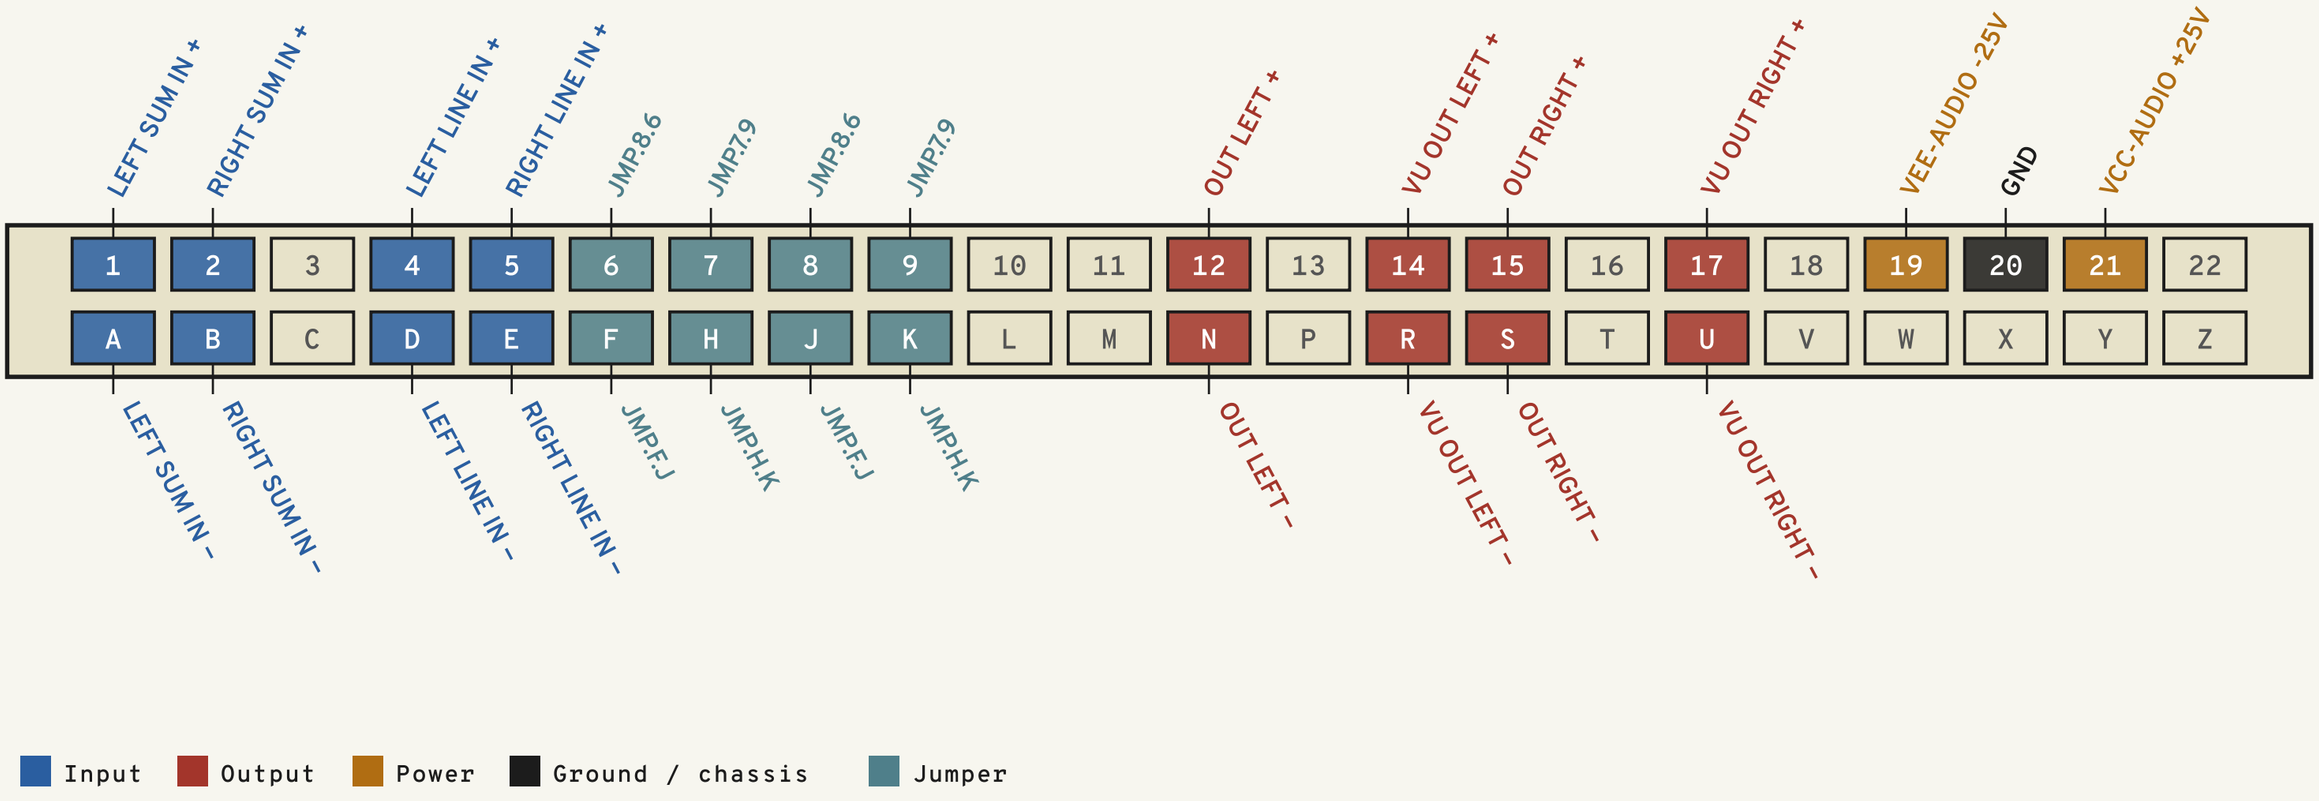

INPUTS AND OUTPUTS

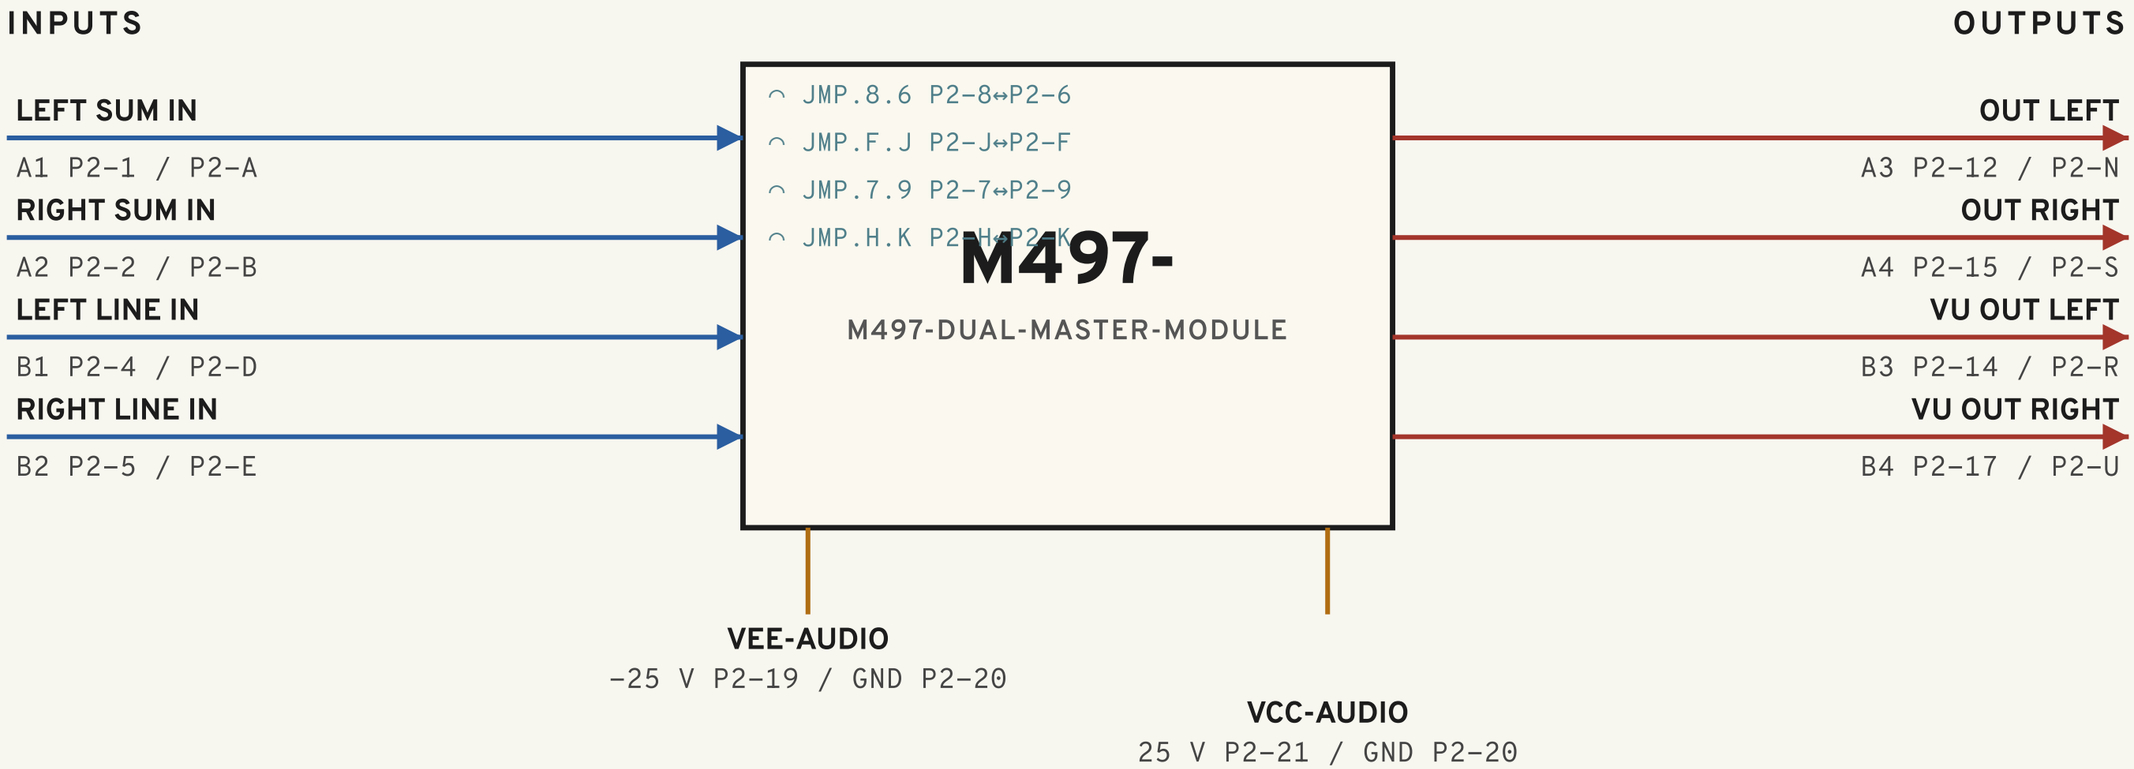

AUDIO CONNECTIONS · RTO-144 A / B

PORT	SIGNAL	DIR	PIN +	PIN −	PAD +	PAD −
A1	Left Sum IN	in	P2-1	P2-A	1.A.1.P	A.A.1.N
A2	Right SUM in	in	P2-2	P2-B	2.A.2.P	B.A.2.N
A3	OUT LEFT	out	P2-12	P2-N	12.A.3.P	N.A.3.N
A4	OUT RIGHT	out	P2-15	P2-S	15.A.4.P	S.A.4.N
B1	Left Line IN	in	P2-4	P2-D	4.B.1.P	D.B.1.N
B2	Right Line in	in	P2-5	P2-E	5.B.2.P	E.B.2.N
B3	VU OUT LEFT	out	P2-14	P2-R	14.B.3.P	R.B.3.N
B4	VU OUT RIGHT	out	P2-17	P2-U	17.B.4.P	U.B.4.N

POWER · BENCH PSU

RAIL	STYLE	VOLTS	MAX A	SUPPLY	GROUND	LINK
VEE-AUDIO	NEW	-25	0.2	P2-19	P2-20	2
VCC-AUDIO	NEW	25	0.2	P2-21	P2-20	1

JUMPERS

FUNCTION	DESIGNATION	FROM	TO
Insert LEFT +	JMP.8.6	P2-8	P2-6
Insert LEFT -	JMP.F.J	P2-J	P2-F
Insert Right +	JMP.7.9	P2-7	P2-9
Insert Right -	JMP.H.K	P2-H	P2-K

Source: Ward-Beck Systems - Module RTO-144 Jumper calculator.xlsx (Database tab). Pin direction is inferred from the signal name. Verify against the module schematic before wiring.

WBS WARD-BECK SYSTEMS LTD.			
TITLE	M497- RTO-144 CONNECTIONS		
DRN.	MAKE_RTO144.PY	DATE	OCT 17 2026