


NOTES:

- THIS IS A MINIMALLY DIMENSIONED DRAWING. CAD TO BE USED AS MASTER
- FINISH: BARE
- 2. 3. 4. 5.
- Thickness of spacer is critical OD of spacer not critical, find stock closest to size as possible Use parting tool. Be nice to TEAMLAB!

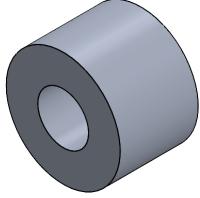

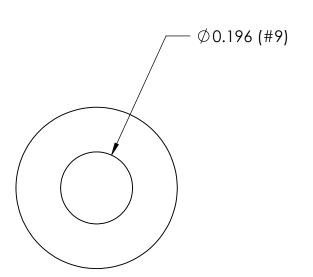

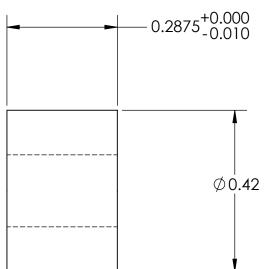

W						
WISCONSIN UNIVERSITY OF WISCONSIN-MADISON						

-	Drawn: (04/17/2023 mm/dd/yyyy	Default Tolerances: X.X: ±0.050	QTY: 8	SCALE: 4:1	TITLE: Front Wing Mount Spacer Thick	
-	Contact:	Goutam Yerri yerri@wisc.edu Add Phone Nu	J	X.XX: ±0.010 X.XXX: ±0.005 Angles: ±1°	MATERIAL 606	1 T6	SIZE A Dimensi	UW -MADISON PART NUMBER 1101 - 0109 - 23 ons are Inches and Degrees SHEET 1 OF 1

3

2