


NOTES:

- THIS IS A MINIMALLY DIMENSIONED DRAWING. CAD TO BE USED AS MASTER
- FINISH: BARE
- 2. 3. 4. 5.
- Thickness of spacer is critical OD of spacer not critical, find stock closest to size as possible Use parting tool. Be nice to TEAMLAB!

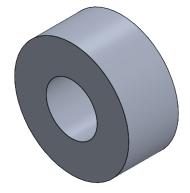

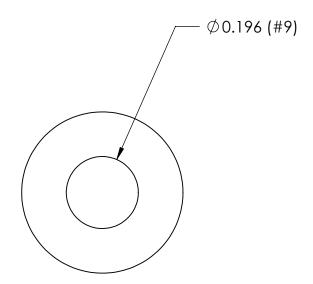

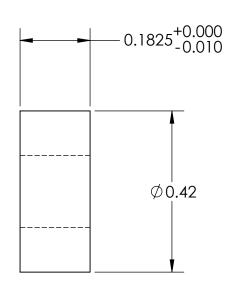



Drawn: G. Yerri 04/17/2023 Checked: F.LAST mm/dd/yyyy		QTY: 8	SCALE: 4:1	TITLE: Fr	ont Wing Mount Spacer thin
Contact: Goutam Yerri yerri@wisc.edu 612-757-6926	X.XX: ±0.010 X.XXX: ±0.005 Angles: ±1°	MATERIAL 6061 - T6		Α	UW -MADISON PART NUMBER 1101 - 0108 - 23 ons are Inches and Degrees SHEET 1 OF 1

3

SOLIDWORKS Educational Product. For Instructional Use Only.

2