Further design: regeneration, DC-bus overvoltage and absorption capacity

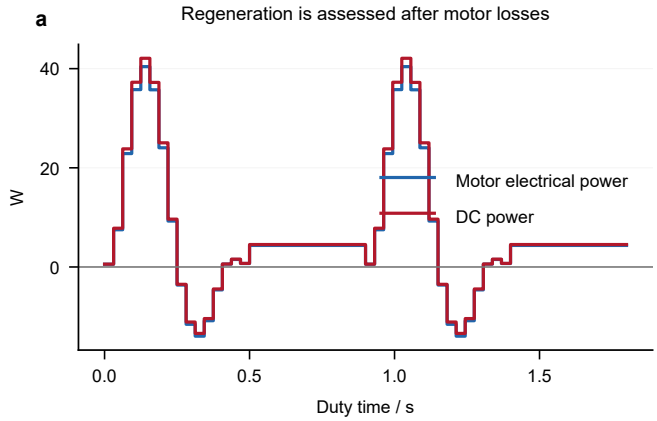

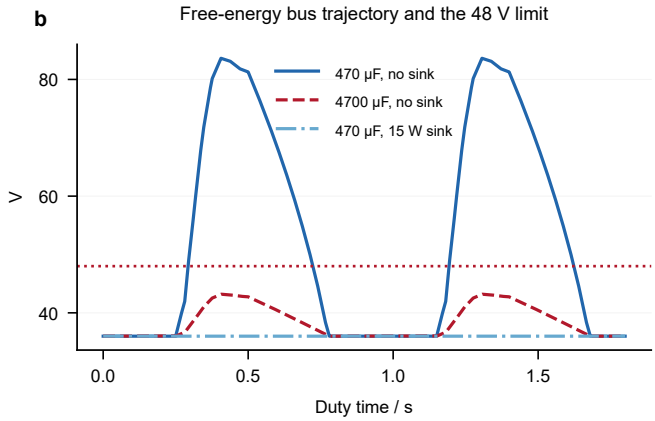

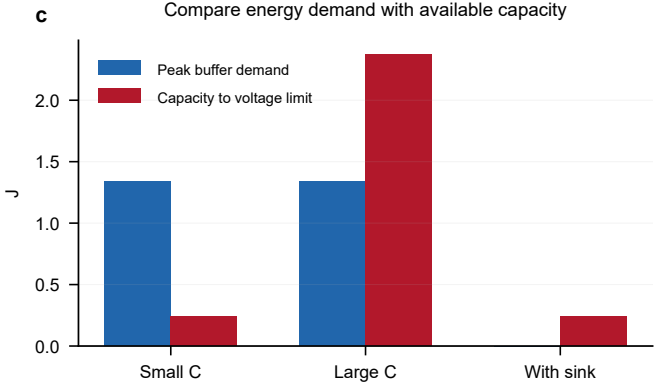

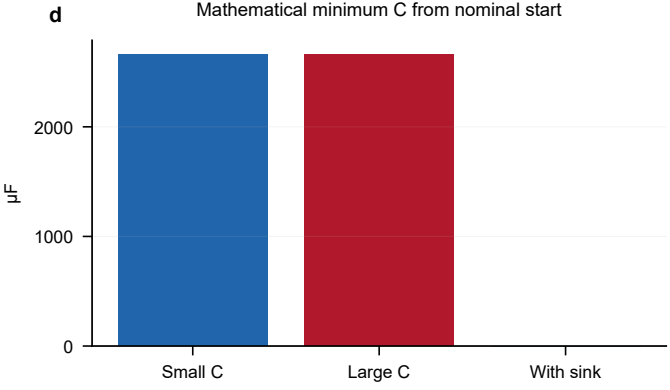

Source, efficiency and C are assumptions; beyond-limit trajectories do not model actual protection, PWM, current or braking resistors.