Bursa Malaysia Network Access and Connectivity Guideline

Version 2026

Prepared by:
Group Technology

Table of Contents

1.0 Introduction 3
1.1 Interpretation of Requirements 3
2.0 Type of Network Access to Bursa Malaysia Infrastructure 4
2.1 Bursa WAN 6
2.1.1 Key Features 7
2.1.2 Technical Requirements 7
Network Resilience Requirements 7
Network Bandwidth 10
IP Addresses Scheme 11
2.1.3 New Subscriber Application 12
2.1.4 MRTG (Multi Router Traffic Grapher) Add on Service 13
2.1.5 Post Go-Live Activity And Change Request 14
2.2 Co-location 15
2.2.1 Colocation Facilities 16
Service Provisioning and Lead-Time 17
2.2.2 Network 17
Network Availability 17
Carrier Services and Networking Cabling 18
IP Addresses Scheme 18
2.3 Bursa Malaysia Testing Environment 18
2.3.1 Testing Environment for External User Acceptance Testing (“EUAT”) 19
2.3.2 Testing Environment for BTS2 FIX message Conformance 19
2.4 Subscriber Connectivity Readiness and Responsibilities 20
3.0 Operational Support Matrix 21
APPENDIX 22
Guidelines on Minimum IT Facilities For Participating Organisations (POs) 22

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

1.0 Introduction

Bursa Malaysia Berhad [30632-P] ("Bursa Malaysia") provides network access and infrastructure services to its clients with leading edge network capacity, resilience and performance to access the Exchange trading, clearing and settlement systems by leveraging on the same connectivity.

This document defines the **minimum technical and connectivity requirements** for all market participants connecting to Bursa Malaysia's network infrastructure. These requirements apply to all the following subscribers:

- Participation Organization "PO"
- Information Vendor "IV"
- Trading Participant "TP"
- Authorized Depository Member "ADM"
- Participating Member "PM"
- Independent Software Vendor "ISV"
- Network Service Provider "NSP"

All requirements specified in this document shall be complied with unless otherwise explicitly approved by Bursa Malaysia.

Note: This document will be revised and updated once the SD-WAN solution project is approved for implementation

1.1 Interpretation of Requirements

The following terminology is used in this document:

- **MUST** – Mandatory requirement that must be complied with
- **SHOULD** – Recommended requirement unless justified otherwise
- **MAY** – Optional requirement

"Participating Organisation" *means a company admitted as a Participating Organisation under the Rules of Bursa Malaysia Securities.*

"Information Vendor" *means a company carrying on business as an information vendor and having entered into an Information Services License Agreement with Bursa Malaysia Information Services and/or Bursa Malaysia Derivatives*

"Trading Participant" *means a corporation that has been admitted as a Trading Participant in accordance with the Rules of Bursa Malaysia Derivatives.*

"Authorised Direct Member" *means a party appointed as an Authorised Direct Member under the Rules of Bursa Malaysia Depository.*

"Participating Member" *means either a party which is registered as a Trading Participating Member, Executing Participating Member or General Participating Member under the Rules of Bursa Malaysia Bonds.*

"Independent Software Vendor" *means an independent software vendor that has been approved by Bursa Malaysia to provide services to market participants to enable them to access Bursa Malaysia's trading system.*

"Network Service Provider" *means a 3rd party network service vendor that provides offshore network connectivity services to market participants to enable them to access Bursa Malaysia's trading system.*

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

2.0 Type of Network Access to Bursa Malaysia Infrastructure

Bursa Malaysia provides three (3) types of network access for connection to its trading and post-trading systems:


1. **Bursa Malaysia Wide Area Network ("Bursa WAN")** - Managed wide area connectivity from subscriber premises
2. **Bursa Malaysia Co-Location ("Bursa Co-Lo")** - Low latency hosting within Bursa data center
3. **Bursa Malaysia Testing Environment ("Bursa Testing")** - Non-production environment for testing and conformance

Selection Guidance

- Bursa WAN: Standard connectivity for operational access
- Co-Location: Required for latency-sensitive trading systems
- Testing: Restricted for non-production use only


High level Connectivity Diagram to support 3 types of network access:

1. Bursa WAN

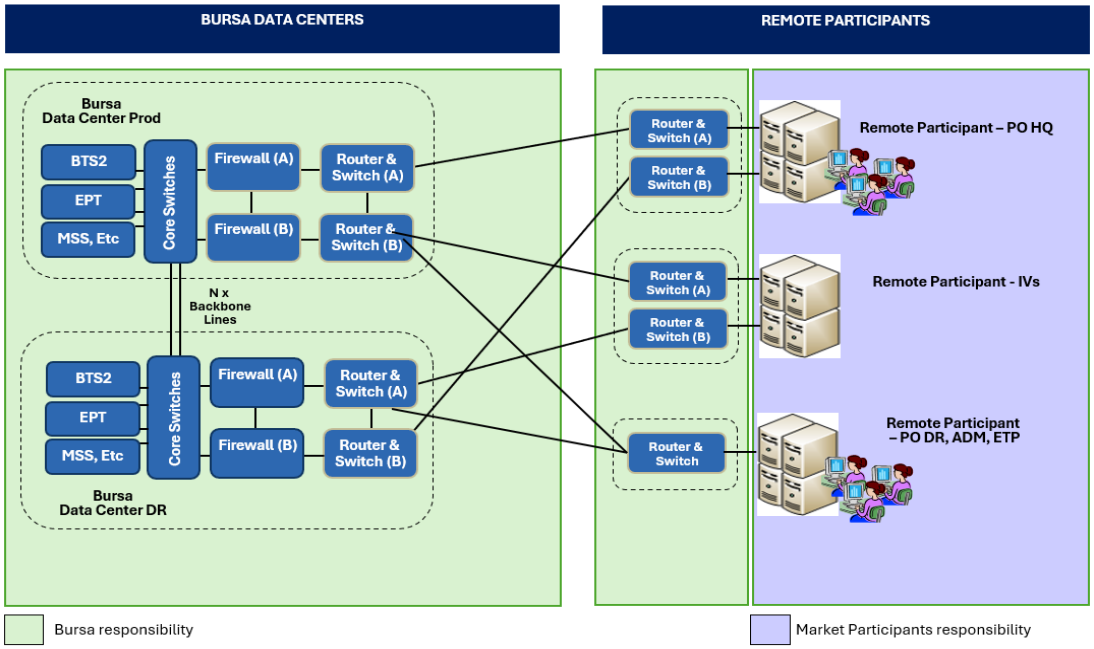


© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

2. Bursa Co-Location

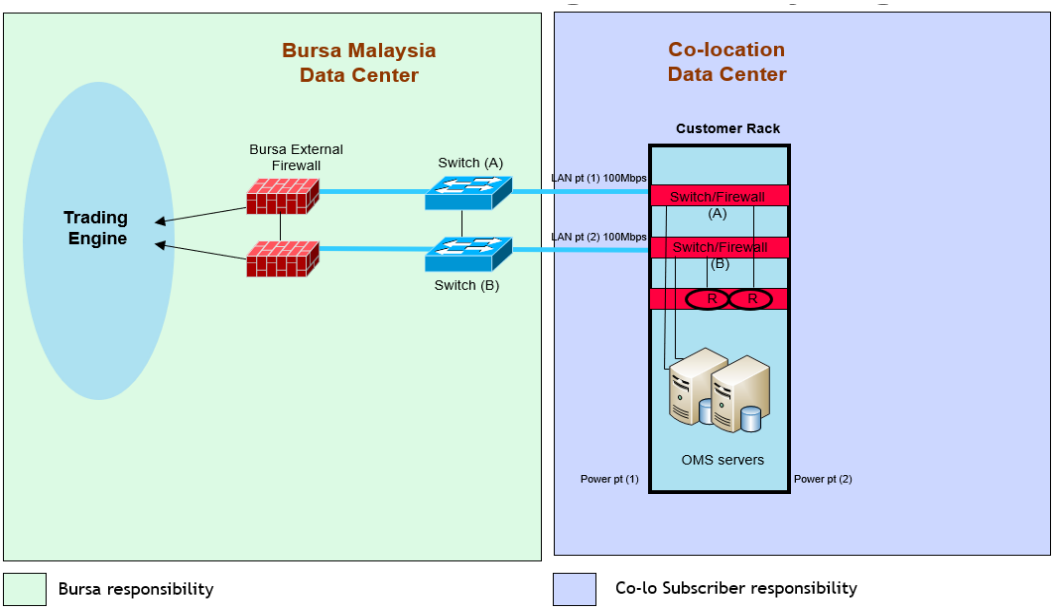

3. Bursa Testing

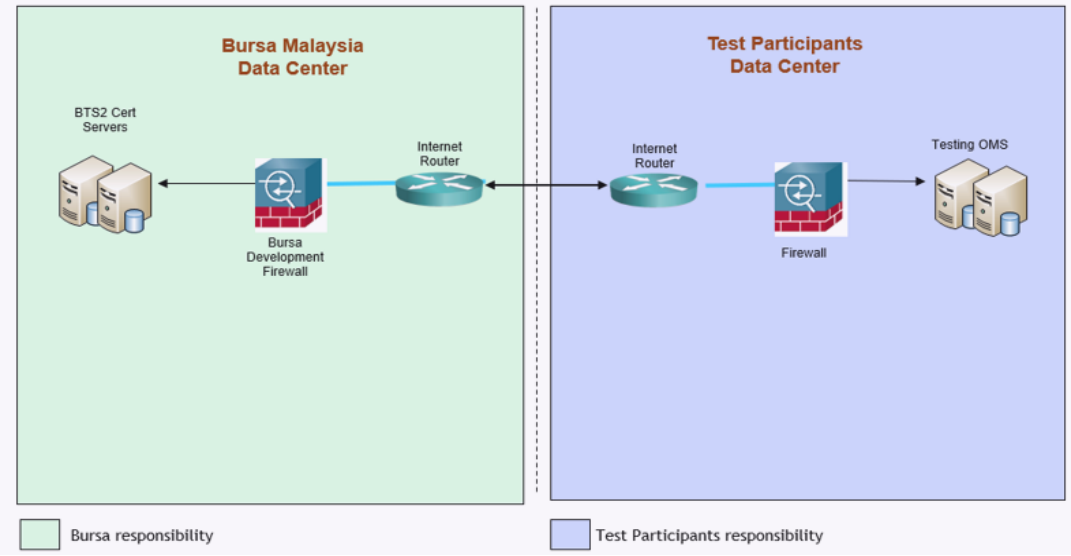

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

2.1 Bursa WAN

Below is the list of Exchange services that can be accessed via Bursa WAN.

Client	Service	Details
PO	BTS2, WebCDS, Armada, eFIX, Corporate Announcement Gateway	Direct access to BTS2 (Equities Trading), Equities Clearing & Settlement, Armada, eFIX, Corporate Announcement.
PO *(for those with TP & PM licenses)*	BTS2, WebCDS, WebDCS, Armada, eFIX, ETP, Corporate Announcement Gateway	Direct access to BTS2, Equities and Derivative Clearing & Settlement, Armada, eFIX, ETP Bond trading and Corporate Announcement.
IV	BTS2-Market Data, ETP-Market Data, Corporate Announcement Gateway	Direct access to BTS2 or ETP to receive FIX market data.
ADM	WebCDS, Corporate Announcement Getaway	Direct access to WebCDS and Corporate Announcement.
TP	WebDCS, eFIX	Direct access to WebDCS and eFIX.

Access Model Summary

Subscribers shall connect via approved telecommunications providers using dedicated point-to-point circuits. The services accessible depend on the participant type as defined by Bursa Malaysia.

Note: For approved Telco list, please refer to section 2.1.2 Technical Requirements: Telco Lines

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

2.1.1 Key Features

The key features of Bursa WAN are as follows:

- Fully managed network solution
- Support Metro E circuit
- Resilience, Scalable and Converged infrastructure

Bursa WAN are fully managed network solution where network equipment and connections are installed and managed by Bursa Malaysia. Bursa WAN only allow point-to-point circuit that connects the subscriber's premise and the Exchange data centers. Bursa WAN can support point to point Metro Ethernet circuits with speed range from 1Mbps to 15Mbps.

2.1.2 Technical Requirements

Network Resilience Requirements

To ensure high availability, the following minimum connectivity requirements shall apply:

PO

Scenario 1: Order Management System ('OMS') active in PO main site and backup in PO DR

Site	Requirement	Level	Remark
PO Main Site	Dual routers + dual circuits	MUST	Dual Router configuration
PO DR	Dual routers + dual circuits	SHOULD	Dual Router configuration

Scenario 2: PO with No OMS via Bursa WAN

Site	Requirement	Level	Remark
PO Main Site	Single router + dual circuits	MUST	Single router configuration
PO DR	Single router + dual circuits	SHOULD	Single Router configuration

* *For scenario 2, PO Main site and PO DR do not host any OMS server. It is only uses to support Post trading activities. E.g. WebCDS, Armada and eFIX*

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

IV

Scenario 1: Direct Connection to Bursa WAN

Site	Requirement	Level	Remark
IV Main Site	Dual routers + dual circuits	SHOULD	Dual Router configuration.
IV DR	Single router + single circuit	SHOULD	Single Router configuration

Scenario 2: Connection via 3rd Party NSP

Site	Requirement	Level	Remark
IV Main Site	Dual routers + dual circuits	SHOULD	Dual Router configuration.
IV DR	Single router + single circuit	SHOULD	Single Router configuration

* *Bursa Malaysia will be not managing the router and connection for IVs that using 3rd party network provider.*

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

TP / CP: Direct Connection to Bursa WAN

Scenario 1 : TP with trading activity

Site	Requirement	Level	Remark
TP Main Site	Dual routers + dual circuits	MUST	Dual Router configuration.
TP DR	Dual router + dual circuits	SHOULD	Dual Router configuration

Scenario 2: TP/CP with No trading activity via Bursa WAN

Site	Requirement	Level	Remark
TP / CP Main Site	Single routers + dual circuits	MUST	Dual Router configuration.
TP / CP DR	Single routers + single circuits	SHOULD	Single Router configuration

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

ADM & PM: Direct Connection to Bursa WAN

Site	Requirement	Level	Remark
ADM / PM Main Site	Single router + dual circuits	MUST	Single Router configuration
ADM / PM DR	Single router + dual circuits	SHOULD	Single Router configuration

General notes about Bursa WAN resilience setup:

- The backup connection remains in an active running state and are proactively monitored by Bursa Malaysia. Bursa Malaysia will follow up with respective Telco for any outages and errors to the connection. All primary and secondary connections shall operate in an **active-active configuration**, with automatic failover in the event of link failure. The expected failover time shall be within seconds, subject to routing convergence.
- Bursa Malaysia only allows point to point connection that has same bandwidth sizing to both primary and backup connections for POs & IVs. EFM (Ethernet First Mile) services have been discontinued by the Telco provider. As an interim arrangement, all subscribers **MUST provision a secondary dedicated point-to-point circuit** to ensure redundancy until the future network architecture upgrade is implemented.

Network Bandwidth

The subscribers must have sufficient bandwidth to ensure acceptable response time especially for online trading services. For Equities trading, the minimum required bandwidth is 1Mbps for Continuous Trading phase. However, the **recommended bandwidth is 4Mbps** (for 5 Market Depth & 8Mbps for 10 Market Depth) for better performance and response time especially during preopening & closing due to higher market data information that is being disseminated.

Note:

1. For the Equities market opening, the required bandwidth can go as high as 8Mbps per market data feed connection. This bandwidth is required to ensure minimum delay in receiving market data feed.
2. Bandwidth sizing is subject to review from time to time by POs and IVs to meet their business requirements needs.
3. Total bandwidth sizing MUST be calculated based on the number of concurrent market data feeds.

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

For other Exchanges services, the table below shows the recommended bandwidth requirement for each of the terminal. Subscribers need to multiply the number of concurrent terminals to be used plus the other services bandwidth in order to estimate the bandwidth capacity for the Telco line to be subscribe to connect to Exchange:

No.	Description	Required Bandwidth (per terminal)
1.	WebCDS Terminal	512Kbps
2.	ETP Bond Terminal	128Kbps
3.	ARMADA Terminal	128Kbps
4.	WebDCS Terminal	256Kbps

Bursa Malaysia Derivatives (BMD) product is hosting in CME Globex. Customer can connect to any CME Globex Hub to access market data and trade BMD futures and option. For more information, you can refer to CME group http://www.cmegroup.com/

Telco Lines

Bursa Malaysia supports connectivity via approved telecommunications providers, namely:

i. Telekom Malaysia
ii. TIME
iii. Maxis
iv. Celcom

Subscribers **MUST procure dedicated point-to-point circuits directly from Bursa Malaysia-approved telecommunications providers**. Connections via third-party wholesale providers are not permitted.

The line need to connect from subscribers' premise/3rd party data center provider to Bursa Malaysia data centers. The Bursa Malaysia Data Centers addresses will be provided upon request.

Note:
a. Kindly contact Bursa Network Operations for the Telco Account Manager's contact details.
b. Telco requires between 6 to 8 weeks installation process upon receiving the order application, and depending on Telco infrastructure availability at subscriber's site. Subscriber to include this timeline on their plan date to go live.

IP Addresses Scheme

Subscribers shall use their own internal IP addressing scheme within their environment. For connectivity to Bursa systems, subscribers MUST use private IP address ranges provided by Bursa Malaysia and implement Network Address Translation (NAT) at their Layer 3 boundary devices (e.g. routers or firewalls) to prevent IP conflicts.

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

2.1.3 New Subscriber Application

Organizations that would like to subscribe to Bursa WAN are advice to contact Bursa IT to get the details and requirements of the subscription.

Subscription Process

1. Engage Bursa Malaysia to obtain requirements
2. Submit formal application letter including required details as follows:

   Attention to:
   Head of Information Technology Operations Services
   Group Technology
   4th Floor, Bursa Malaysia Berhad
   Exchange Square, Bukit Kewangan,
   50200 Kuala Lumpur

   Do include the following details:
   a) Installation Site Address.
   b) Telco Name
   c) Circuit Bandwidth
   d) Site Contact person
   e) Tentative date for installation activity (must be on Friday).

   New subscriber to submit the application to CustomerService@bursamalaysia.com
3. Provision telco circuit
4. Submit NAIS Subscription Form
5. Complete installation and testing

Network Access And Infrastructure Services ('NAIS') Form

Upon confirmation from Bursa IT on the installation of telco lines and routers. Organization needs to fill in and submit the Network Access and Infrastructure Services (NAIS) Subscription Form.

(*Note: Form and all related documents can be downloaded from Bursa Malaysia website: CoLo_Network_Access_and_Infrastructure_Services_Subscription_Form.pdf*

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

2.1.4 MRTG (Multi Router Traffic Grapher) Add on Service

Subscribers to Bursa WAN will have options to access MRTG service to monitor their line(s) utilization. This added service is free and will only be provided upon subscriber request.

Below are the features and limitation to on this service:-

Features:


- Web-based on-line lines utilisation for all sites
- 1-min graph (6-hour) for leased lines & ping response time
- The data is able to export to .csv format
- Daily graph archival of 31 days & monthly archival for up to 36 months (every 1st day of the month)

Limitations:

- No customization is allowed
- No threshold alert send from MRTG
- Graph format is fixed & cannot be changed
- Accessing via Bursa Wide Area Network (“Bursa WAN”)

Further instruction on the guideline and requirement to setup the connection to access this MRTG service will be provided upon request by subscriber. If subscriber choose not to setup the MRTG service, ad hoc request on the line utilization can be done by contacting Bursa Network Operations team.

Figure 1.5: Example screenshot of the MRTG

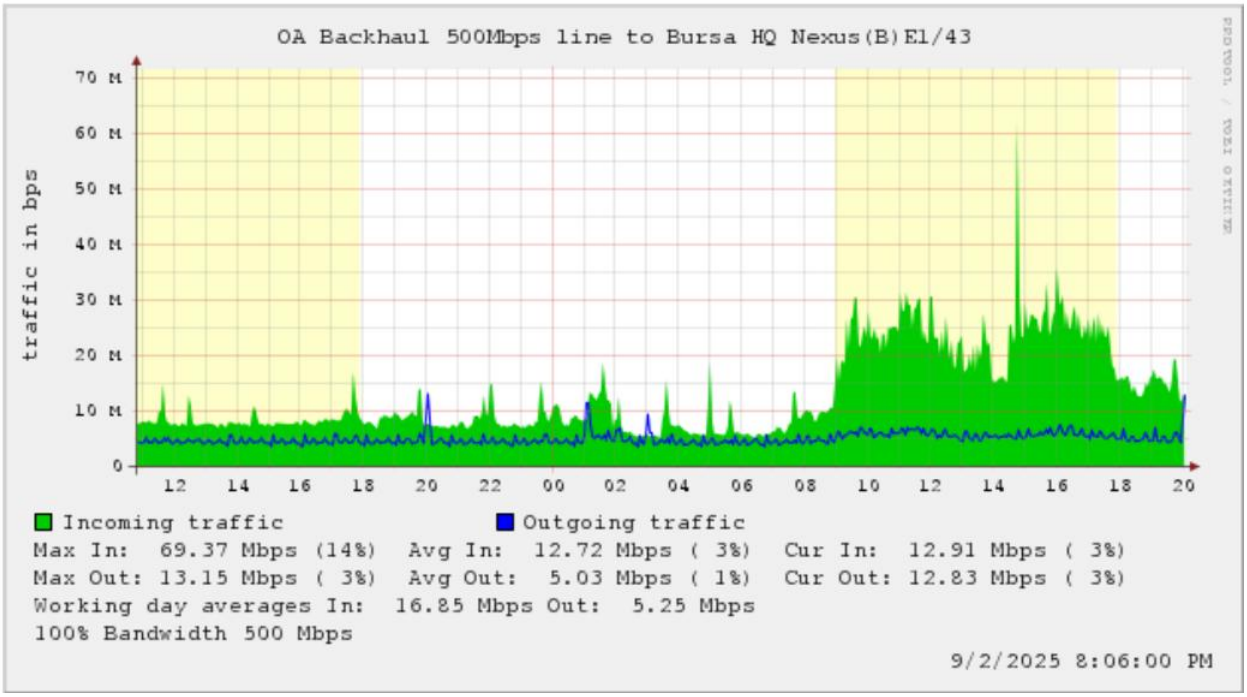

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

2.1.5 Post Go-Live Activity And Change Request

The subscriber of Bursa WAN must obtain approval from Bursa Malaysia for all changes to the network setup and configuration.

For any post installation activity which involves connectivity to Bursa WAN such as:

i. Telco line upgrade, new installation or termination
ii. Site/data center relocation
iii. Subscription termination

Subscribers **MUST notify Bursa Malaysia in writing at least one (1) month in advance** prior to any network-related changes, including circuit upgrades, relocation, or termination.

Attention to:
Head of Information Technology Operations Services
Group Technology
4th Floor, Bursa Malaysia Berhad
Exchange Square, Bukit Kewangan,
50200 Kuala Lumpur
Scan and email to: CustomerService@bursamalaysia.com

Site or Data Center Relocation: Appointment of Bursa Network Vendor

For any relocation activity that involve Bursa WAN network equipment, subscribers MUST appoint Bursa Malaysia's authorized network vendor. This is to ensure that movement of Bursa Malaysia's network equipment are in proper manner. Quotation by the authorized vendor will be provided to subscriber upon submission of the relocation request of letter to Bursa IT. Subscribers are required to notify Bursa Malaysia in writing at least one (1) month in advance. The request is to be addressed to Head of Information Technology Operation Services as per above details.

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

2.2 Co-location

The co-location hosting service offers robust network infrastructure, the solution offers LAN bandwidth connectivity with high-speed direct access to Bursa Malaysia markets. Bursa Malaysia's Co-Location service introduced in year 2009 offers low latency connectivity into its markets. This service allows the Exchange's customers to host their own "black box" trading systems within Bursa Malaysia's data centre, thus ensuring the fastest routes between those systems and the exchange's market data services and trading engines.

With low latency direct access to Bursa Malaysia markets, the subscribers will be able to get market updates instantly and able to execute trading transaction faster than clients over wide area network. In addition, this allows clients to react to market movements within a short time and hence mitigate trading risk.

Bursa Malaysia Co-Location services offer the following benefits:

- Environmental control, such as constant temperature and humidity maintenance
- Redundant Cooling Systems
- Fire suppression systems
- Redundant power sources and uninterruptible power supplies (UPS) backup
- Carrier neutral with wide choice of network service providers
- Around-the-clock physical security such as card entry and video monitoring of the facilities
- Standard 21 meters cable length to all customers' racks

Below is the list of Exchange services that can be accessed via Co-location.

Client	Service	Details	Connectivity
POs	BTS2, WebCDS, Armada, eFIX & BTS2 Conformance, Corporate Announcement	Customers have direct access to: • BTS2 • Equities Clearing & Settlement • Armada • eFIX • BTS2 Conformance environment • Corporate Announcement	Domestic customer connect to Bursa Malaysia via approved Telco providers
POs *(for those have TP & PM licenses)*	BTS2, WebCDS, WebDCS, Armada, eFIX, ETP & BTS2 Conformance, Corporate Announcement	Customers have direct access to: • BTS2 • Equities Clearing & Settlement • Derivatives Clearing & Settlement • Armada • eFIX • ETP Bond trading • BTS2 Conformance environment • Corporate Announcement	
IVs	BTS2-Market Data, ETP-Market Data, Corporate Announcement	Customers direct access to BTS2, Corporate Announcement and/or ETP to receive FIX market data.	

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

Client	Service	Details	Connectivity
ISVs	BTS2	Customers direct access to BTS2	Domestic/international customers will connect to Bursa Malaysia via approved Telco providers
NSPs	BTS2	Customers direct access to BTS2	

2.2.1 Colocation Facilities

The locations are as per below table:

Main Site	DRC Site
Bursa Malaysia 3rd Floor, Exchange Square, Bukit Kewangan 50200 Kuala Lumpur	Bursa Malaysia 3rd Floor, Wisma Chase Perdana Off Jalan Semantan Damansara Heights 50490 Kuala Lumpur

Data Centre facilities are summarized as below:

No.	Facilities	Availability	Redundancy
1	Uninterrupted Power System (UPS)	24 x 7	Redundant UPS 1 + 2. Back-up by generator set
2	Air–Conditioner/ Chiller	24 x 7	Redundant chiller 1 + 2. Back-up by generator set
3	Hi Fog – Fire suppression system	24 x 7	On standby mode. Back-up by battery and generator set
4	Smoke Detector System	24 x 7	On standby mode. Back by battery and generator set
5	Water detection system	24 x 7	Back-up by generator set
6	Physical Security Card Access System	24 x 7	Back-up by battery and generator set
7	CCTV system	24 x 7	Back-up by generator set
8	Environment Monitoring System	24 x 7	Back up by generator set

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

Service Provisioning and Lead-Time

The provisioning process for a standard order usually takes 14 calendar days from the time an order is confirmed and accepted by Bursa Malaysia.

Estimated Lead Time of Service Provisioning		
Items	**Lead Time**	**Remarks**
Racks	20 calendar days	*Dedicated racks are to be purchased by subscriber*
Power to racks	14 calendar days	Power amperage provided is 20 Amps or 32 Amps
Connectivity Services	14 Calendar days	Connectivity to Bursa Malaysia 's firewall and Trading Machine

Note: For more information on Co-Lo Subscription form and Terms and Conditions, please refer to the URL below:

https://www.bursamalaysia.com/trade/our_products_services/co_location_services

2.2.2 Network

Network Availability

Subscribers hosting systems in Bursa Co-location MUST establish dual access connectivity

(Access Point A and B) for high availability.

For PO: **OMS hosted in Bursa Colocation**

Site	Connection to Bursa Colo Access Point A	Connection to Bursa Colo Access Point B	Remark
Bursa Colocation (Main site)	**Yes**	**Yes**	PO must install its own circuit to Bursa DR Co-location to enable their replication and system high availability purpose
Bursa Colocation (DR)	**Yes**	**Yes (Recommended)**	

Bursa Malaysia backhaul line is for Bursa Malaysia internal use to link between Bursa Malaysia Main Data Centre and Bursa Malaysia Disaster Recovery Data Centre. Subscribers MUST provision independent connectivity to Bursa DR Co-location for system replication and resiliency.

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

In addition to the above, the subscribers must have **different carriers** connection from Bursa Malaysia Co-location to their network.

Please refer to Appendix 1 - Summary of Guidelines on Minimum IT Facilities For Participating Organisations (POs).

Carrier Services and Networking Cabling

a. Carrier available onsite: -

Local carrier

- TIME DotCom
- Maxis
- Telekom Malaysia

International carrier

- BT Radianz
- TNSI
- IPC
- Avelacom
- Colt
- BSO

b. Network cabling interface type available: -

- RJ-45 for 100/1000Mbps
- SFP+ 10Gigabits (future)

Note: - Standard 21 meters' cable length to all customers' racks

IP Addresses Scheme

The subscribers must configure their network router or firewall for their server (i.e. 10.1.240.0/20 or 10.2.240.0/20) appears to have a private IP address from the RFC1918 IP address range provide by Bursa. To avoid IP addressing conflicts with the Bursa network, subscribers should implement Network Address Translation (NAT) at their Layer 3 boundary devices (e.g., routers or firewalls).

2.3 Bursa Malaysia Testing Environment

The Bursa Testing Environment is strictly for non-production activities including system testing and conformance. Production traffic is strictly prohibited. All testing connectivity must be established via secure channels, such as IPSEC VPN.

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

2.3.1 Testing Environment for External User Acceptance Testing ("EUAT")

Bursa Testing Environment was established to allow POs/ADMs to test the Bursa new software release for the following systems:

- BTS2
- EPT
- DCS
- eFIX
- ARMADA
- CAG

Document and Guides to on board to EUAT environment can be found in the below link from Bursa Malaysia website:
https://www.bursamalaysia.com/trade/our_products_services/bts2_on_boarding/documents_and_guides

2.3.2 Testing Environment for BTS2 FIX message Conformance

Bursa Testing Environment was established to allow POs/ISVs to test the new release of software for the purpose of conformance. POs/ISVs have the options of either developing an in-house OMS via FIX Protocol or engaging an Independent Software Vendor (ISV) from the from the list of conformed ISVs.

Bursa's responsibility is to validate FIX-format messages sent between PO's Order Management System (OMS) and the Trading Engine, ensuring that these messages comply with the required specifications.

Document and Guides to on board to BTS2 Testing Environment and to perform FIX-format message conformance can be found in the below link from Bursa Malaysia website:
https://www.bursamalaysia.com/trade/our_products_services/bts2_on_boarding/documents_and_guides

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

2.4 Subscriber Connectivity Readiness and Responsibilities

Prior to establishing connectivity to Bursa Malaysia infrastructure, subscribers shall ensure that the required facilities, connectivity, and operational arrangements are in place to support the selected access model. The readiness requirements may vary depending on the service subscribed.

Area	Bursa WAN	Co-Location	Testing Environment
Equipment Hosting	Subscriber shall provide appropriate rack space, power, cooling, and physical protection for Bursa-managed network equipment where applicable.	Subscriber shall provide and maintain its hosted equipment and rack infrastructure in accordance with Co-location service requirements.	Subscriber shall maintain the infrastructure required to establish connectivity to the testing environment.
Physical Security	Network equipment should be installed in a secure location with access restricted to authorised personnel.	Subscriber equipment hosted within Bursa facilities shall comply with applicable physical security and access procedures.	Subscriber is responsible for securing equipment hosted within its own environment.
LAN Connectivity	Subscriber is responsible for internal network connectivity between its systems and Bursa connectivity equipment.	Subscriber is responsible for connectivity between hosted systems and Bursa access points.	Subscriber is responsible for connectivity between testing systems and Bursa testing access points.
Network Cabling	Subscriber shall provide the necessary cabling within its premises to support connectivity.	Subscriber shall provide required cross-connects and internal cabling within the allocated rack space.	Subscriber shall provide the necessary connectivity components to establish the testing connection.
Power Requirements	Subscriber shall provide suitable power sources and, where applicable, backup power for network equipment.	Power services are provided in accordance with the subscribed Co-location service. Subscriber remains responsible for power distribution within its allocated equipment.	Subscriber is responsible for power availability within its own environment.

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

Area	Bursa WAN	Co-Location	Testing Environment
Installation Coordination	Bursa Malaysia will coordinate the installation, testing, and activation of the connectivity service with the subscriber and relevant service providers.	Bursa Malaysia will coordinate service provisioning activities for connectivity within the Co-location environment.	Bursa Malaysia will coordinate testing connectivity setup and access activation where required.
Connectivity Verification	Subscriber shall perform end-to-end testing of its systems and applications before production use.	Subscriber shall validate connectivity and application readiness before service activation.	Subscriber shall complete connectivity and application testing prior to conducting testing activities.

3.0 Operational Support Matrix

Team	Support	Support Description	KL Hours	Phone	Email
Network Operations	Network	Technical support	07:00 – 19:30	603 2034 7517 603 2034 7067	Network.DC.Ops@bursamalaysia.com
Customer Service	General Support	General Information	07:00 – 18:30	603 2026 5099	customerservice@bursamalaysia.com

© Copyright Bursa Malaysia Berhad (30632-P) 2026. All Rights Reserved

APPENDIX

Guidelines on Minimum IT Facilities For Participating Organisations (POs)

No	Facilities	Head Office	Branch Designated as Disaster/Secondary Site	Co-location at Bursa Premise	OMS Hosting at ISV (i.e. ASP model)
1.	**Order Management System /DropCopy/Market Data/Risk Mgmt Servers**	Minimum of two (2) servers forming a Master & Slave (i.e. Active/Backup or Active/Active) setup. Each server must have connection to Bursa HQ and DRC.	Minimum of one (1) server setup. POs must have the necessary backup plan when there is a failure to POs System located in designated branch	Minimum of two (2) servers forming a Master & Slave (i.e. Active/Backup or Active/Active) setup. Each POs server must have connection to Bursa HQ and DRC.	Minimum of two (2) servers forming a Master & Slave (i.e. Active/Backup or Active/Active) setup. Each POs server must have connection to Bursa HQ and DRC.
2.	**eFIX Terminals**	Minimum one eFIX terminal. Prefer to have standby eFIX terminal to backup production eFIX terminal.	Not Applicable.	Minimum one eFIX terminal. Prefer to have standby eFIX terminal to backup production eFIX terminal.	Not Applicable.
3.	**WebCDS Terminals**	Minimum two (2) CDS terminals of which one is used for the CDS file transfer. However, POs are to use their discretion depending on their needs and ensure that the number is sufficient in case of failure.	Minimum of one (1) CDS terminal. However, POs are to use their discretion depending on their needs and ensure that the number is sufficient in case of failure.	Minimum two (2) CDS terminals of which one is used for the CDS file transfer. However, POs are to use their discretion depending on their needs and ensure that the number is sufficient in case of failure.	Not Applicable.

No	Facilities	Head Office	Branch Designated as Disaster/Secondary Site	Co-location at Bursa Premise	OMS Hosting at ISV (i.e. ASP model)
4.	**Wide Area Network ('WAN')**	**Bursa WAN:** Participating Organisations **MUST deploy a minimum of two routers and two circuits from different carriers**, with one connection to Bursa HQ and one to the Disaster Recovery site.	**Bursa WAN** Minimum of one router with one line; Recommended to have two routers with two lines.	**3rd Party Service Provider** Minimum subscribe two (2) network access point in Bursa HQ Co-location and one (1) network access point in Bursa DRC. POs must have different carrier connection from HQ Co-location to their network.	**3rd Party Service Provider** Minimum subscribe two (2) network access point in Bursa HQ Co-location and one (1) network access point in Bursa DRC. POs must have different carrier connection from HQ Co-location to their network.
5.	**Backup procedures**	The Head Office site must put in place a backup procedure that to be activated in the event of failure that disrupts the operation to ensure the investors are not affected.	The branch must put in place a backup procedure to be activated in the event of failure that disrupts the operation to ensure the investors are not affected.	The Co-location setup must put in place a backup procedure to be activated in the event of failure that disrupts the operation to ensure the investors are not affected.	The Co-location setup must put in place a backup procedure to be activated in the event of failure that disrupts the operation to ensure the investors are not affected.

Note:

1. If there are any variations to the recommended guidelines above, Member Companies are to seek Bursa Malaysia's approval.
2. No testing is allowed running on the production environment. The testing platform should be in an isolated environment which is to connect Bursa Test Environment using IPSEC Site-to-Site VPN