Bittle X Pi Add-on v0.22 - Build Guide

Version 0.22, 2026-10-16. A sample add-on for the Bittle X platform v3.2 (../bittle_platform). It holds a Raspberry Pi Zero 2 W with a PiSugar 2 (1200 mAh), an NS4168 I2S amp with a 3 W speaker, an SPH0645 I2S mic and the Petoi AI Vision Module. The case is one rounded box (the body) and a slide-on top panel. The body clicks onto the platform pegs, and every part goes in from the top. No tools or supports are necessary; a dab of glue sets the amp.



The add-on on the platform: the mic holes are at the front, the port windows in the panel.

1. Parts to print

File (stl/print/)	Material	Orientation	Mass
pod_body.stl	PLA	floor on the bed	35 g
pod_panel.stl	PLA, second color	upside down: top on the bed	13 g
pod_switch.stl	PLA, white	flat side on the bed, tab up	0.2 g
pod_button.stl	PLA, white	upside down: top on the bed	0.1 g
pod_camera_mount.stl	PLA, second color	on its back end (as in the STL)	8 g
cover_pegs_foot.stl (../bittle_platform)	PLA	stand on the rear end	11 g
Head off (optional): pod_camera_base_low.stl	PLA, second color	upside down (as in the STL)	4 g
Head off (optional): pod_camera_cradle_low.stl	PLA, white	on its rear edges (as in the STL)	9 g

Print every part with the Cura profile "Bittle X" (../cura/Bittle_X.curaprofile; 0.20 mm layers, no supports, 6-line brim). ../cura/install_profiles.py installs it, and a copy with the size compensation of each spool that the tolerance app measured ("Bittle X - <spool>"). No part needs supports.

Print quality. The body and panel walls are 2.0 mm: with the offsets of the body profile, Cura slices 4 full lines of 0.5 mm. The body walls are vertical and its floor is on the bed. The only overhangs (13 mm² in total) are the flat undersides of the two amp nubs (1.5 x 4 mm). The front cable notch is a 45 deg chamfer. The grille holes and the mic holes are teardrops (round, with a 45 deg point on top), so they print without bridges. The panel top edge round ends in a 45 deg chamfer at the bed, the port openings have 45 deg chamfers, and the lid hooks and the lugs in the body have 45 deg faces. The latch tongue bends along the layers of the panel. Its overhangs (24 mm²) are short bridges at the button arm and the lid hooks. The slider has a 1.7 mm bridge over the fork. The camera mount has short bridges at the clip hooks and a 45 deg chin; the hooks over the case are 45 deg wedges. The cradle of the head-off mount stands on its dovetail tabs: its floor is a 30 mm bridge 1.4 mm over the bed. Keep the seam at the rear.

2. Electronics

Part	Place
Raspberry Pi Zero 2 W + PiSugar 2, 1200 mAh	On the long edge over the robot center, 4.9 mm left of the center line so the battery is near it: ports and PiSugar controls up, GPIO header down to the left (toward the BiBoard), SD card to the rear. Two end posts hold the boards in one groove, the same depth for both boards; the M2.5 screw heads go down channels in the posts. The pin-fin heatsink on the SoC points into the left well (14 x 14 x 6.5 mm, estimated).
Dupont jumpers	10 cm female-female jumpers from a pack: 3 to the BiBoard, 6 to the mic (2 of them through the splices).
NULLLAB NS4168 I2S amp	38.4 x 22.4 mm board, on edge along the right wall, parts to the inside, in a slot bar on the floor, with its screw terminal at the bottom. Two nubs on the wall hold its top edge. Its PH2.0 connectors are side entry: the I2S cable plugs in at the front end, the speaker at the rear end.

Part	Place
NULLLAB 3 W 4 ohm speaker	At the rear, sound to the grille in the rear face. The ear plate (45 x 31 x 3) is at the middle of the body depth (14.8 mm) and stands in two side grooves.
HiLetgo SPH0645 I2S mic	12.7 x 16.7 x 1.8 board at the front wall, port to the front. A 6-pin right-angle header along its left edge points into the left well. SEL is the lowest pin, 3V the highest.
Petoi AI Vision Module	In its Petoi case, vertical on the camera mount at the front of the panel, lens forward over the head, USB port at the top. It stands 9 mm right of the center line: its Grove plug is then clear of the PiSugar charge port and the Pi power port. Two side brackets hold the case; a hook on each snaps over a top corner of the case, clear of the USB port. The case cannot lift out.
Grove cable, 10 cm	From the socket low in the rear face of the camera, a U turn down through the notch at the rear of the camera window, forward, across over the mic under the panel, down the front left corner, to the Grove plug on the BiBoard. The plug comes up through the floor opening over the notch in the platform cover.

Balance. The add-on weighs 129 g with the camera (weighed parts; printed parts at 50 % fill). Its center of mass is 1.5 mm behind the robot center and 0.6 mm right of the center line, 24 mm above the cover top. With the add-on, the center of mass of the robot is about 4 mm behind the midpoint of the front and rear paws (110 mm apart), and on the center line. The side is the limit when the robot tips: keep heavy parts low. Put your own masses in MASS_G in pod.py and run pod.py again.

3. Assembly

The 3D viewer shows each step with animation: https://beetlebugorg.github.io/bittlex/viewer/#step=1.

1 Fit the platform cover in place of the stock cover. (viewer step 2)

2 Put the empty body on the pegs 7 mm behind its place, grille to the rear. Slide it 7 mm forward until it clicks (about 3.2 N). The BiBoard header is now in the notch at the front of the left well. (viewer step 3) (viewer step 4)

3 Push a 10 cm Grove cable onto the Grove plug of the BiBoard through the floor opening at the front left. Lay it flat against the front wall in the front left corner and let the free end hang out of the top. (viewer step 5)

4 Push the speaker down into the two side grooves at the rear, body to the rear. (viewer step 6)

5 Plug the six mic jumpers onto the mic header. Push the mic down into its grooves at the front wall, port to the front, over the Grove cable. (viewer step 7)

6 Plug the amp cable into the I2S connector at the front end of the amp and the speaker into its rear end. Put the bottom edge of the amp into the slot along the right wall, parts to the inside, tilt its top edge under the two nubs, and set it with a dab of glue. Lay the amp cable across the floor in front of the front pegs, into the left well. (viewer step 8)

7 Push the Pi + PiSugar 2 stack down into the end grooves, over the amp cable. (viewer step 9)

8 Plug the wires one at a time, in the order of section 5: the amp cable, the splices, the Pi ends of the BiBoard jumpers, the mic jumpers, then the BiBoard ends. The viewer has one step for each wire. (viewer step 10) (viewer step 22)

9 Lay the Grove cable across over the mic, under the top of the walls, toward the right side.


10 Slide the switch slider into the rails under the panel from their rear end until it clicks. Press the post of the white button cap into the round hole in the panel tongue until the cap sits flat. They stay in the panel. (viewer step 23)

11 Move the PiSugar power switch toward the head. Push the slider fully forward. Pass the free end of the Grove cable up through the notch at the rear of the camera window in the panel. Put the panel down 5 mm behind its place, then slide it forward until the latch clicks (about 5.7 N). The hooks under the panel go under the lugs in the walls. The slider fork comes down on the switch lever and stays on it. (viewer step 24)

12 Pass the Grove cable up through the notch at the rear of the camera mount base. Push the two clip legs down through the window until they click. Push the camera case down between the brackets, lens forward and USB port up, until the hooks click over its top. Plug the Grove cable into the socket low in its rear face. (viewer step 25) (viewer step 26)


13 Open: lift the rear edge of the panel at the finger notch (about 3.1 N), slide the panel 5 mm rearward and lift it. Remove: open the panel, pull the BiBoard plugs off, slide the body 7 mm rearward and lift it.

On the top: the port openings are shaped to the plug bodies (plug + 0.4 mm). The Pi power port and the PiSugar charge port share one opening, behind the camera. The ribbed slider beside the HDMI opening moves the PiSugar power switch (the switch sets the end positions). The tongue in the middle of the panel is a large button: press it to press the PiSugar button.

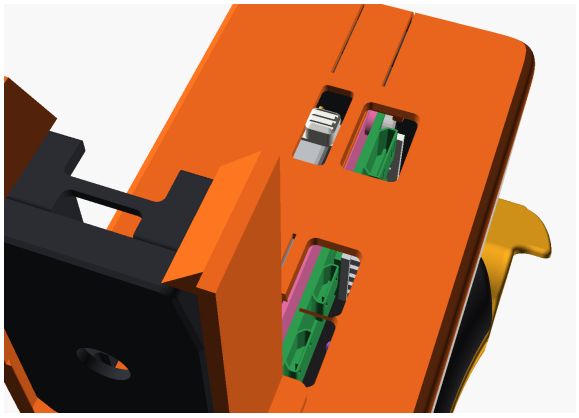

The top: the camera, charge and Pi power, data USB, the button tongue, the switch slider and HDMI.

Head off (optional). Without the Petoi head, the camera can stand lower, in front of the body: pod_camera_base_low clips into the camera window as the camera mount does, and its front plate hangs down the front of the body. Slide the two dovetail tabs of pod_camera_cradle_low down into its grooves until the cradle sits on the top of the base. Push a 1.75 mm filament piece through the pin hole on each side. Push the camera down into the cradle until the hooks click. Its Grove plug faces the body: run the cable down and in under the front notch at the left, to the Grove plug on the BiBoard (no cable in the panel).

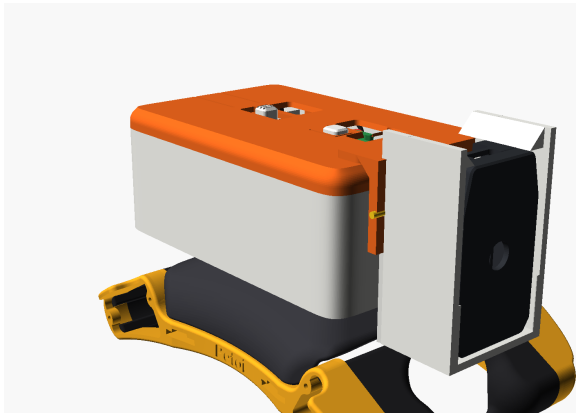

Head off: the camera lower and in front of the body.

4. Wiring

Board pin	Pi pin	Signal
BiBoard TX2 / RX2 / GND	10 / 8 / 6	RXD / TXD / GND (TX and RX cross). BiBoard +5V: not wired
Amp V / G	2 / 14	5V / GND
Mic 3V / GND / SEL	1 / 9 / 39	3V3 / GND / GND (left channel)
Amp BCLK + mic BCLK	12 (splice)	GPIO18: one wire from the pin to a soldered splice, then one wire to each board
Amp LRC + mic LRCL	35 (splice)	GPIO19: the same, a second splice
Amp DIN / mic DOUT	40 / 38	GPIO21 / GPIO20
Speaker	-	amp 2-pin PH2.0 at the rear end of the amp


Pin map from the wiring blueprint (reference/g2-wiring-blueprint.html; that blueprint wins if they differ). PiSugar 2 touches pins 2, 4, 5 and 6 from below with its pogo pins. Pins 11, 17-20 and 22-24 are kept free for a screen.

5. Cable routing


The BiBoard and mic wires are female-female jumpers from a pack of 10 cm wires. The amp keeps its own cable, and the two splices are cut from pack jumpers. pod.py models every wire (1.4 mm) at its real length and checks it: no wire touches a printed part or a board, no two wires pass through each other (0 found), and no bend is smaller than 2 mm radius (1.35 mm in the slack). A pack jumper is longer than its route, so its excess is an arch or a coil (a service loop) in free space. The pages below show each module: its pins, then its wires in the case.

BiBoard serial link


TX and RX cross. The +5V pins are not wired: the PiSugar 2 powers the Pi.

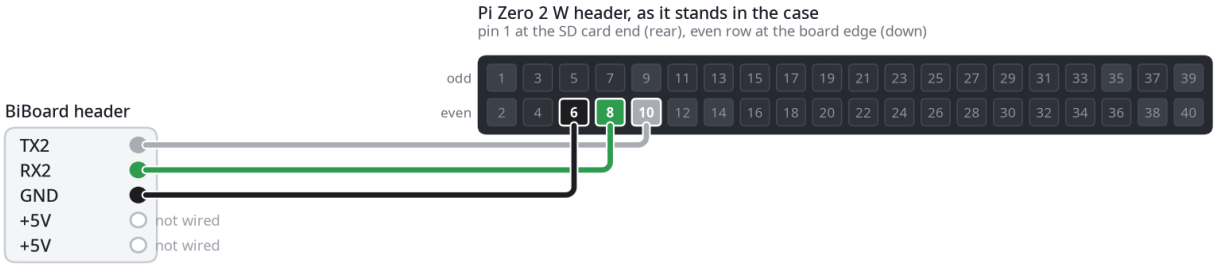

From the top, panel off (front at the left)

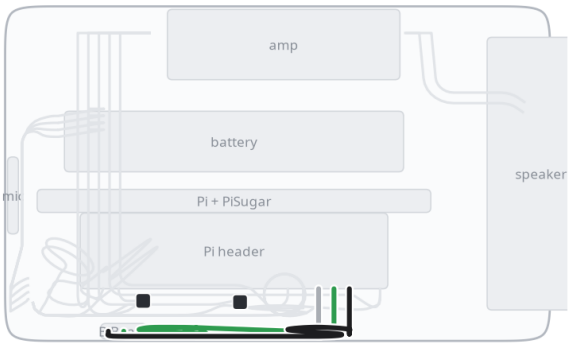


Left well, seen from the left (front at the left)

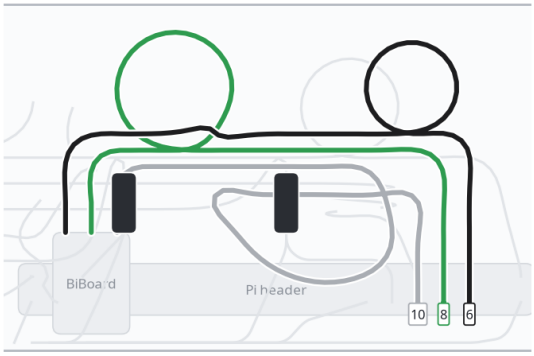


Amp: I2S and power


BCLK and LRC go to the splices: one wire from Pi pin 12 (35) feeds the amp and the mic.

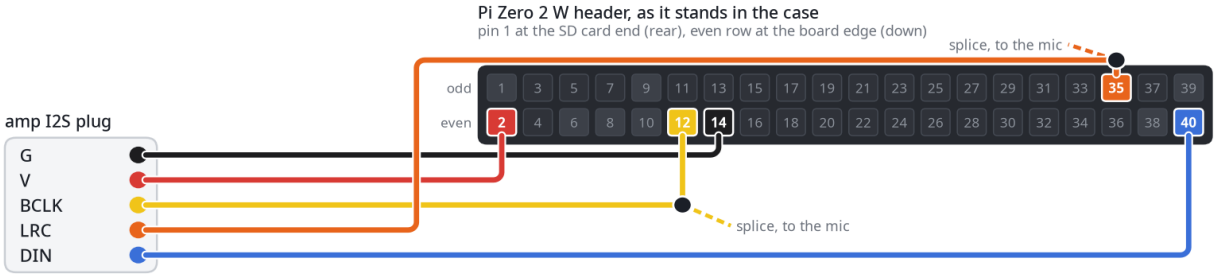

From the top, panel off (front at the left)

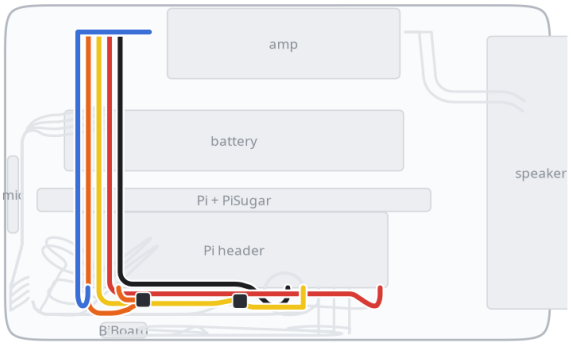


Left well, seen from the left (front at the left)

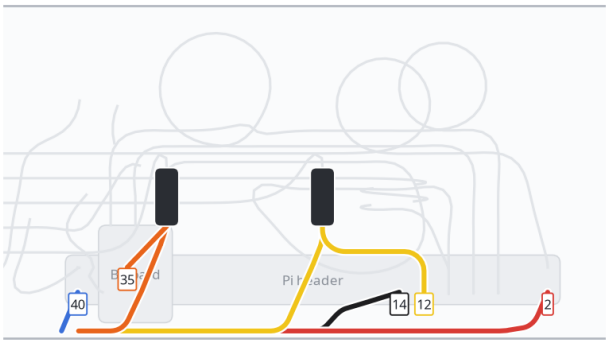


Mic


SEL to GND sets the left channel. BCLK and LRCL go to the splices.

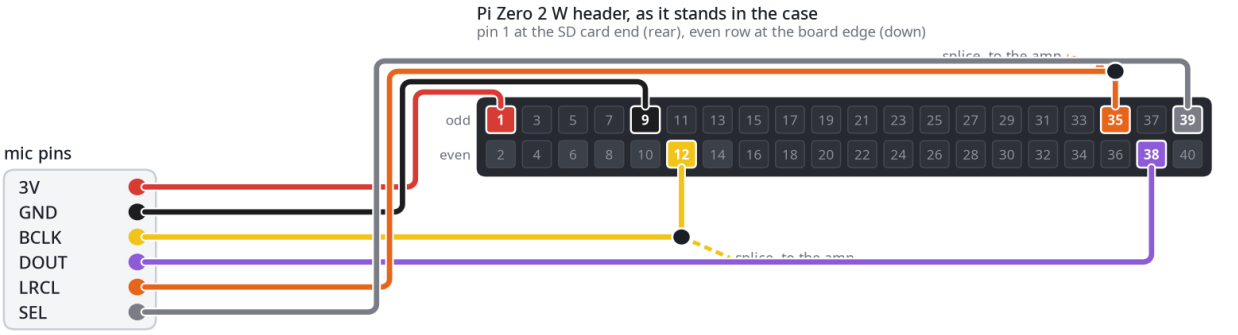

From the top, panel off (front at the left)

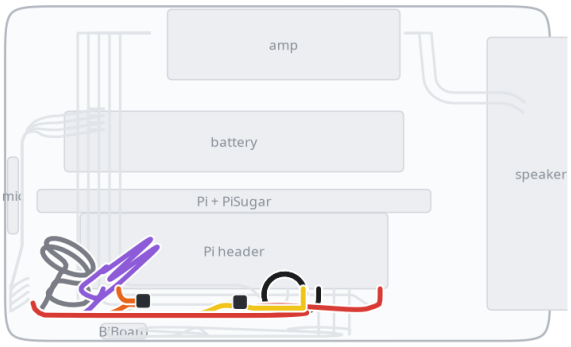

Left well, seen from the left (front at the left)

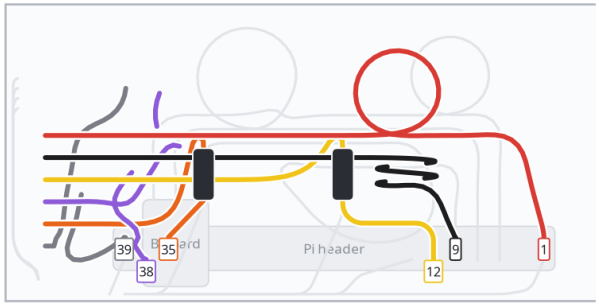


Speaker


A two-wire lead from the 2-pin plug at the rear end of the amp to the speaker.



From the top, panel off (front at the left)

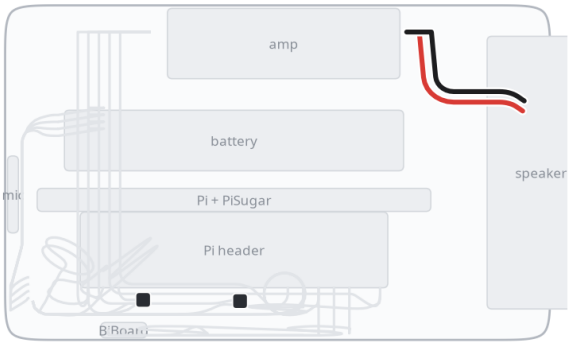

Right side, seen from the right (front at the left)

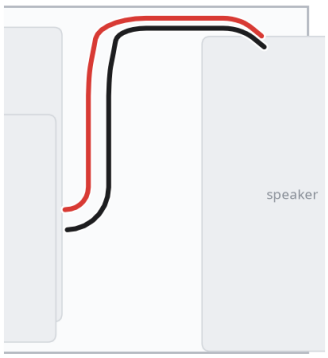


#	From	To (excess)	mm	#	From	To (excess)	mm
1	BiBoard TX2	pin 10 (arch)	98	12	mic BCLK	BCLK splice	38
2	BiBoard RX2	pin 8 (1-turn loop)	99	13	mic GND	pin 9 (2-turn loop)	97
3	BiBoard GND	pin 6 (1-turn loop)	98	14	mic 3V	pin 1 (1-turn loop)	98
4	amp G	pin 14	83	15	BCLK splice	pin 12	18

#	From	To (excess)	mm	#	From	To (excess)	mm
5	amp V	pin 2	106	16	LRCLK splice	pin 35	7
6	amp BCLK	BCLK splice	92	17	amp speaker +	speaker +	42
7	amp LRC	LRCLK splice	83	18	amp speaker -	speaker -	42
8	amp DIN	pin 40	76	19	camera Grove SCL	BiBoard Grove SCL	82
9	mic SEL	pin 39 (2-turn loop on a 15 mm stem)	97	20	camera Grove SDA	BiBoard Grove SDA	83
10	mic LRCL	LRCLK splice	27	21	camera Grove VCC	BiBoard Grove VCC	84
11	mic DOUT	pin 38 (2-turn loop on a 10 mm stem)	99	22	camera Grove GND	BiBoard Grove GND	86


Plug the jumpers one at a time, in this order. Each wire goes to its place before the next one, so the later wires lie over the earlier ones:

1. #1: BiBoard TX2 to pin 10. Put its excess in a arch as in the drawing.
2. #2: BiBoard RX2 to pin 8. Put its excess in a 1-turn loop as in the drawing.
3. #3: BiBoard GND to pin 6. Put its excess in a 1-turn loop as in the drawing.
4. #9: mic SEL to pin 39. Put its excess in a 2-turn loop on a 15 mm stem as in the drawing.
5. #10: mic LRCL to LRCLK splice. Cut to length.
6. #11: mic DOUT to pin 38. Put its excess in a 2-turn loop on a 10 mm stem as in the drawing.
7. #12: mic BCLK to BCLK splice. Cut to length.
8. #13: mic GND to pin 9. Put its excess in a 2-turn loop as in the drawing.
9. #14: mic 3V to pin 1. Put its excess in a 1-turn loop as in the drawing.
10. Last, push the BiBoard ends of #1, #2 and #3 onto the BiBoard header.

1. The mic has a right-angle header along its left edge. Plug the six mic jumpers onto it before the mic goes into its grooves.
2. Amp cable: forward from the plug, down, across the floor in front of the front pegs (under the stack), then rearward in a floor lane of the left well; DIN goes up at once. Lay it before the stack goes in. Its own excess (not measured) folds in the right gallery over the amp.
3. Splices: the LRCLK splice stands beside the BiBoard plugs, the BCLK splice at the middle of the left well.
4. The BiBoard wires go in first, from the lowest: TX2, RX2, then GND. Their BiBoard ends go on last: a Pi housing for the mic slides off its pin past them.
5. The mic wires go in from the lowest of the stack: SEL, LRCL, DOUT, BCLK, GND, then 3V.

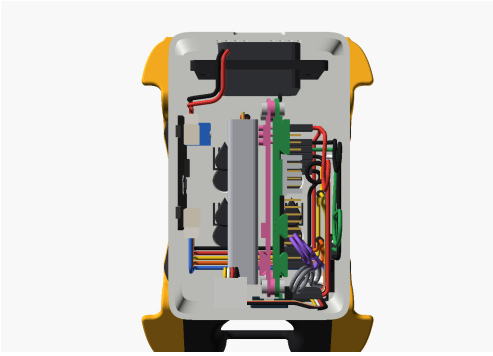

From the top, panel off: the wires in 3D.

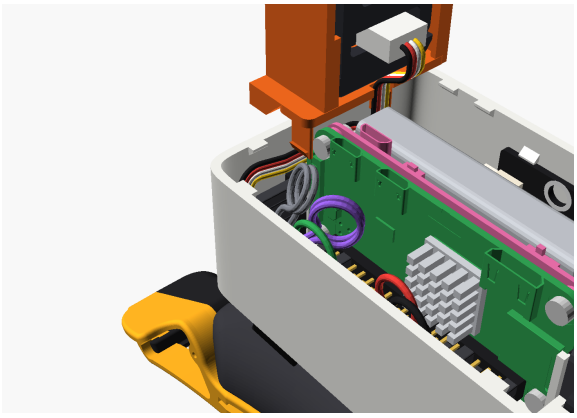

The Grove cable of the camera, panel off: down through the notch at the rear of the window, across over the mic, down to the BiBoard.

6. Checks

1 Slide: the empty body is clear of the robot at the click point, half way and at the drop-on place. The clicks are about 3.2 N to lock and 3.2 N to unlock (beam strain 0.9 %).

2 Panel: it goes down 5 mm behind its place and slides forward without contact (the slider stays on the lever). The latch tongue lifts 0.8 mm over the rib: about 5.7 N to slide on, 3.1 N to lift, strain 0.6 %. Lifted 0.3 mm, the hooks touch the lugs. Turned 180 deg, the panel does not go down.

3 Install: the speaker, the mic and the stack each go straight down 40 mm without contact; the amp tilts in under its nubs. Each wire, in its order, goes in from 40 mm above without contact with the parts and wires already in place (small contacts of 2 to 3 mm^3 stay where a wire slides under a loose service loop). Each Dupont housing slides off its pin without contact.

4 Camera: the case goes into the mount without contact and is clear of the port plugs. Lifted 0.3 mm, its top hits the hooks. The brackets spread 4.8 mm as the case goes in (about 0.5 % strain). The clip leg hooks catch 0.8 mm under the frame on a 10 deg barb, so a pull pushes them out; the legs bend to 1.9 % strain. The Grove cable touches no part and no other wire. The head turns without contact with the mount.

5 Head-off mount: the base, the cradle, the camera and its cable touch no part of the robot without its head. The cradle slides down into the grooves without contact; the pins stop it from lifting.

6 Switch and button: the slider moves 0.75 mm each way without contact, and its fork pushes the lever after 0.3 mm. The button arm is 0.2 mm over the button; pressed 0.6 mm, it pushes the button.

7 Robot: the head turns from -85 to 85 deg without contact. 8 front and 22 rear leg poses (of 504) touch the add-on, only when a thigh swings up over the back. The Petoi tail is 3.2 mm under the add-on, and 0.05 mm at the drop-on place.

Open items: the BiBoard header height is an estimate (measure it). The speaker size is a ruler measurement. The mic port is assumed at the board center; the 7 holes cover ±2.2 mm. The SD card is assumed 2.5 mm out of its holder. The heatsink and the screw heads (4.6 x 1.8 mm) are estimates. The camera hooks catch the top of the case of the STL. To change the SD card, lift the stack out. The Pi power port and the PiSugar charge port are side by side: use one of them at a time.

7. Files and license

File	Content
stl/print/	the parts in print orientation
cad/*.step	the parts as STEP (from the mesh)
cad/assembly_step.zip	one STEP file with the robot, the platform and the add-on in place, with named and colored parts
stl/installed/, stl/models/	the parts and the electronics in the robot frame
pod.py, motion.py, render.py, docs.py	dimensions, build and checks; robot motion; pictures; this guide

The printed parts, the drawings and this guide are CC BY 4.0, and the code is MIT (Jeremy Collins). The Pi Zero and PiSugar 2 fit models are from github.com/PiSugar/PiSugar (GPL-3.0). The Petoi parts are from github.com/PetoiCamp/NonCodeFiles, without a stated license. LICENSE.md and ATTRIBUTION.md in the repository give the details.