ZAAGSERVICE CUT SHEET · HORNBACH ZAANDAM

Bijkeuken voorzetwand

Insulated stud wall in front of the gips back wall. The frame holds itself up and is fixed into the floor, the ceiling joists, the brick pillar and the brick kitchen wall. A 700 × 1180 bay by the kitchen wall stays open, so the existing tap, sockets and pipes stay where they are. Hornbach cuts every piece to final size. All sizes are in millimetres.


Wall 2605 × 2465 | Open bay 700 × 1180 | Frame 44 × 94 vuren | OSB/3 18 mm

10 bars of 300 cm | 3 OSB sheets

ELEVATION · SEEN FROM INSIDE THE BIJKEUKEN

Frame layout

The first noggins have their bottom face at 1180, and the second row at 1811. The open bay by the kitchen wall has no floor plate (pipes) and no stud at the bottom. V6 frames its left side. A header at 1180 spans over it, and the short studs V7 and V8 stand on that header. The blue dashed lines are the OSB joints. Drawn to scale: 1 drawing unit = 1 mm.

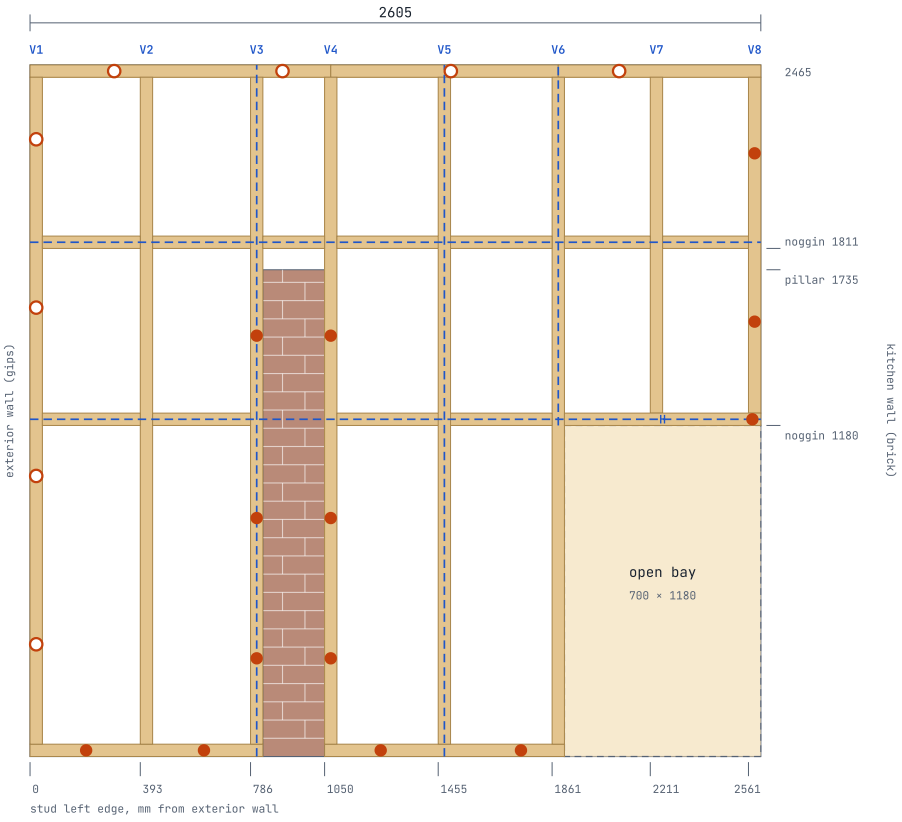


44×94 timber | Brick pillar (74 deep, OSB 20 mm in front) | Plug into brick or floor

Screw into a joist or batten behind the gips | Open bay, no OSB

TIMBER · 44 × 94 VUREN · 10 BARS OF 300 CM

Bar plan for the zaagservice

Show this to the saw operator. Tap a bar once it's cut. The hatched part is offcut. Write the code on each piece with a marker. Bar 10 is mostly spare, for blocking and mistakes.

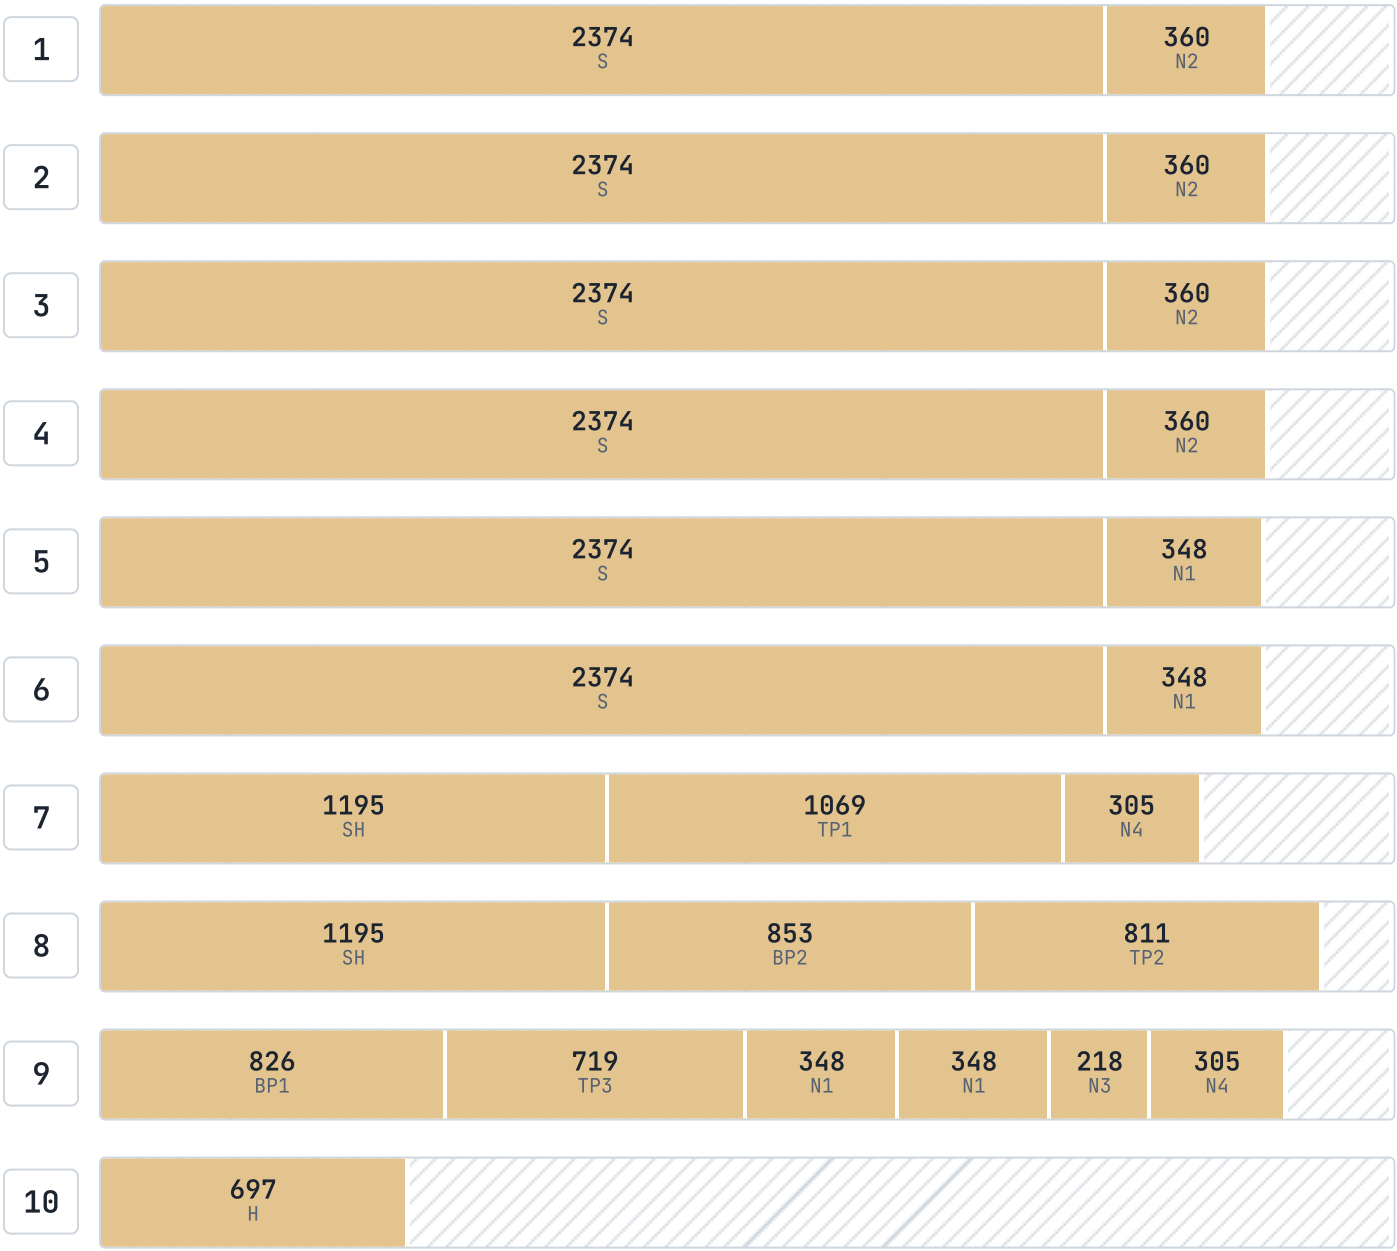

CODE	LENGTH	QTY	WHERE IT GOES
S	2374	6	Full studs V1–V6, floor plate → top plate
SH	1195	2	Short studs V7 and V8, header → top plate
H	697	1	Header over the open bay, bottom face at 1180, V6 → kitchen wall
TP1	1069	1	Top plate, exterior wall → centre of V4
TP2	811	1	Top plate, V4 centre → V6 centre
TP3	719	1	Top plate, V6 centre → kitchen wall
BP1	826	1	Floor plate, exterior wall → pillar
BP2	853	1	Floor plate, pillar → open bay (runs under V6)
N1	348	4	Noggins V1–V2 and V2–V3, both rows
N2	360	4	Noggins V4–V5 and V5–V6, both rows
N3	218	1	Noggin above the pillar, V3–V4, row 2
N4	305	2	Noggins V6–V7 and V7–V8, row 2

Only 270 cm bars in stock? Take 11 bars: one stud (or two halves) per bar for 6 bars, and the rest spread over the other 5.


OSB/3 · 18 MM · 3 SHEETS OF 2500 × 1250

Sheet plan

Sheet 1 gives the three tall bottom panels. Sheets 2 and 3 are first cut into strips across the long side, then each strip is cut to width. Panel codes match the wall layout below: column A–D, row 1 at the bottom. Sizes are wall width × wall height. Tap a sheet once it's cut. 2440 × 1220 sheets work too, with the same cuts.


Sheet 1


A1 · B1 · C1 + packing

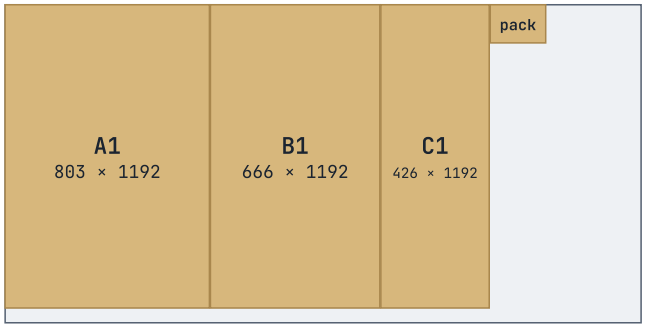


Sheet 2

D2 · A2 · C2 · B2

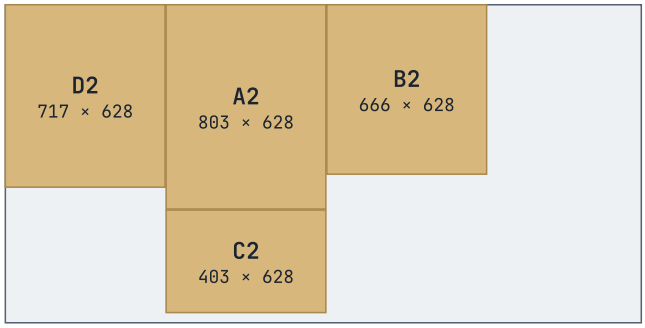

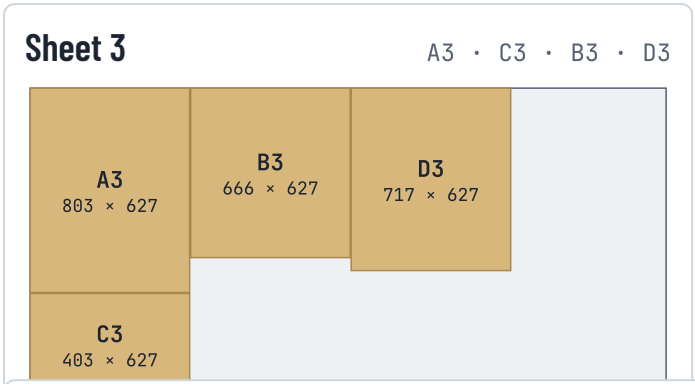

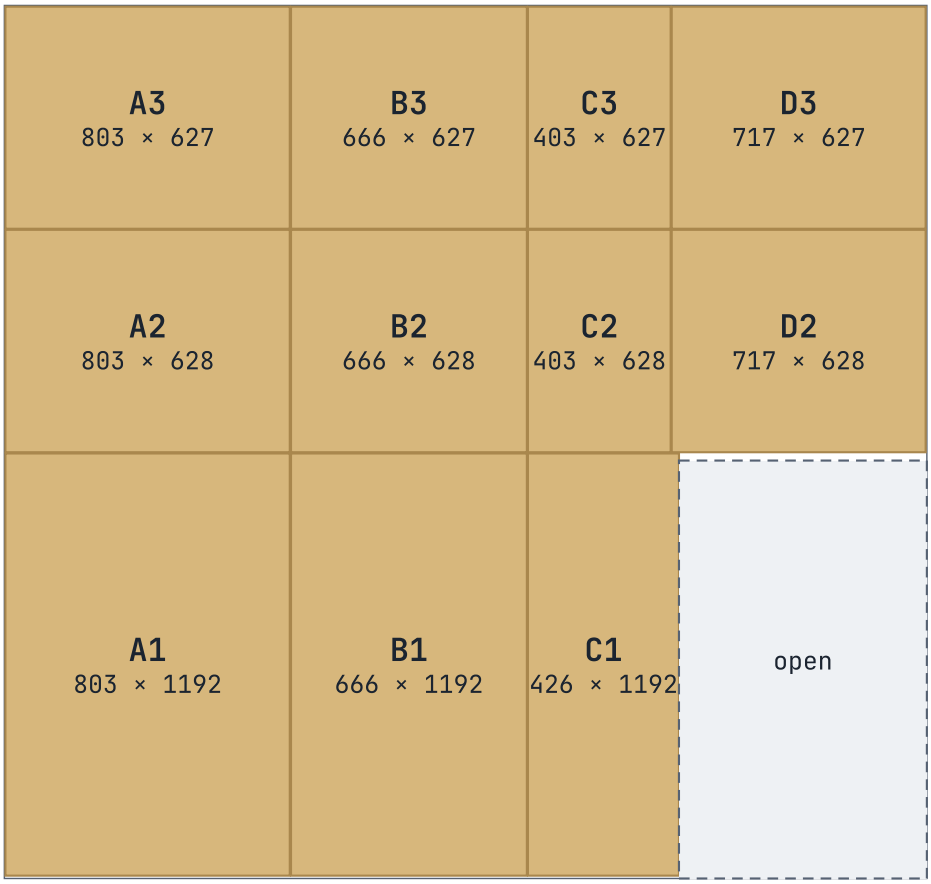

Gaps: 8 mm at the floor, 3 mm at joints, walls and ceiling. C1 ends flush with the inside face of V6, so the left edge of the open bay is clean. D2 sits in row 2 like the other panels, so the bottom 24 mm of the header shows above the bay. Paint it or cover it with a lat.

SHOPPING LIST

Everything else

10× vuren 44×94, 300 cm

11× if only 270 cm

3× OSB/3 18 mm, 2500 × 1250 (or 2440 × 1220)

~5 m^2 glaswol plaat, ~100 mm

It squeezes slightly into the 94 mm cavity. The open bay stays empty.

60× hoekanker (90° angle bracket) 70×70×55, galvanised

52 needed: 28 for the stud ends, 24 for the noggins and header

500× ankerschroef 5×35

8 per bracket

20× kozijnplug 10×100

Floor, pillar sides, V8 into the kitchen wall

4× plug 6 mm + screw 5×50

Header bracket on the kitchen-wall brick

~10× spring toggles (hollow-wall anchors)

Backup for the gips if a joist or batten can't be found

50× constructieschroef 6×120

Top plate into the joists, V1 into the battens

~10× constructieschroef 6×160

Through a stud into a batten behind the gips

300× spaanplaatschroef 4×45

OSB: every 150 mm along edges, every 300 mm in the field

Detector that finds wood, metal and live cables

For the ceiling joists and the battens behind the gips, and to avoid cables before drilling

Uitvulwiggen (shims)

10 mm stone drill bit, ≥ 150 mm long

Marker, mask (FFP2), gloves

FIXING

Where the frame is held


The floor, the ceiling joists, the pillar and the kitchen wall carry the frame. Timber-to-timber joints use 90° angle brackets (hoekankers). The OSB screwed over everything makes it one stiff panel.

WHERE	PIECE	FIXING
Studs ↔ plates	V1–V8	Two angle brackets per stud end, one on each side face. Against the pillar or kitchen wall only the free side gets one.
Noggins ↔ studs	N1–N4	One angle bracket under each end. Screw the bracket to the stud at the right height first, then drop the noggin on it.
Floor	BP1, BP2	Plug 10×100 through the plate every ~50 cm, between the studs. BP2 stops at the open bay, clear of the pipes.
Ceiling joists	TP1–3	6×120 up through the plate into every joist it crosses. If the joists run parallel to the wall and the plate misses them: spring toggles through the gips every ~40 cm.
Pillar sides (brick)	V3, V4	3 × plug 10×100 each, horizontal through the 44 side. Drill at most 55 mm into the brick.
Kitchen wall (brick)	V8, H	V8: 2 × plug 10×100. Header: an angle bracket on the brick with 6 mm plugs and 5×50 screws.
Exterior wall (gips)	V1	6×120 into the battens behind the gips (detector). No batten found: 4 spring toggles.

DETAILS · 1 DRAWING UNIT = 1 MM


How the pieces connect

Every timber joint uses a 90° angle bracket (hoekanker 70×70×55, 2.5 mm) with 5×35 anchor screws, 4 per leg. Brackets always go on the **side faces** of the timber, inside the 94 mm depth. Never put one on the front face, where the OSB goes, or on the back face, against the wall.

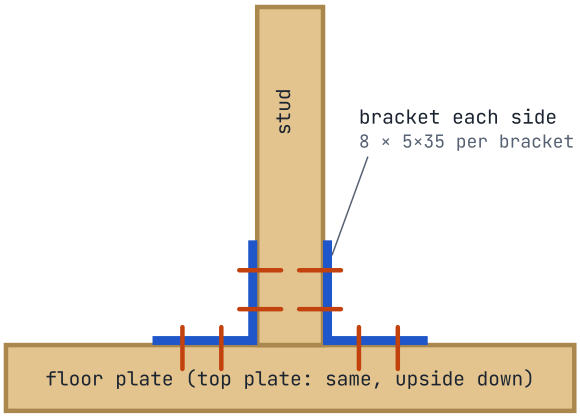


Stud to plate

Stand the stud on its mark and check it's plumb. Screw one bracket to each side face, at the bottom and the top. V7 and V8 sit on the header the same way.

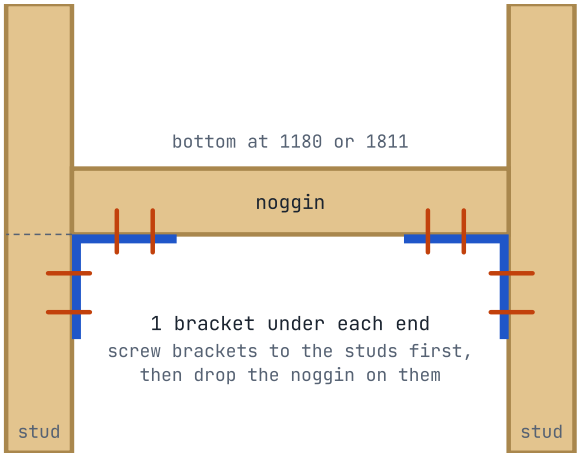


Noggin to studs

The brackets hold the noggin up like small shelves, so you don't have to hold the noggin while you screw. The header H over the open bay goes in the same way: a bracket on V6, and a bracket plugged into the kitchen wall brick.

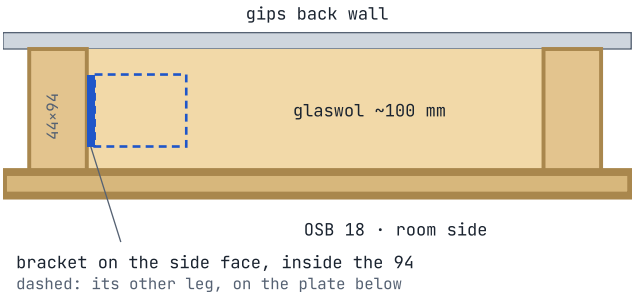


Seen from above

The stud's 94 side runs away from the wall. Bracket legs are 55 wide, so they fit within the 94 and never touch the gips or the OSB.

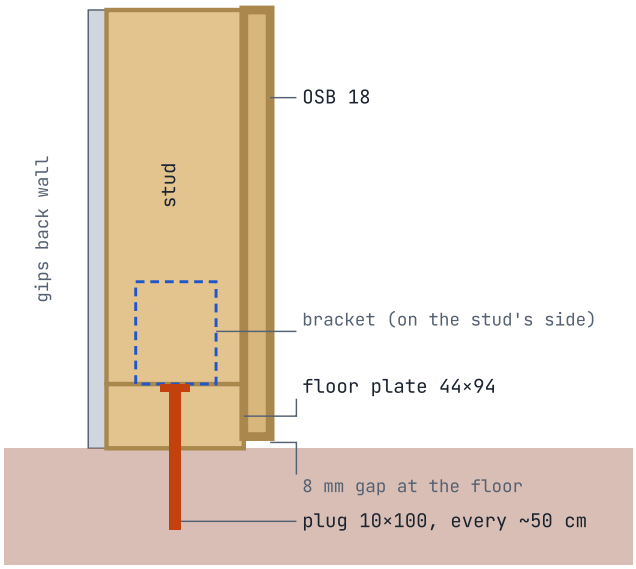

Floor plate

Tight against the gips. Drill through the plate into the floor and hammer in the plugs, between the stud positions so they don't clash with the brackets.

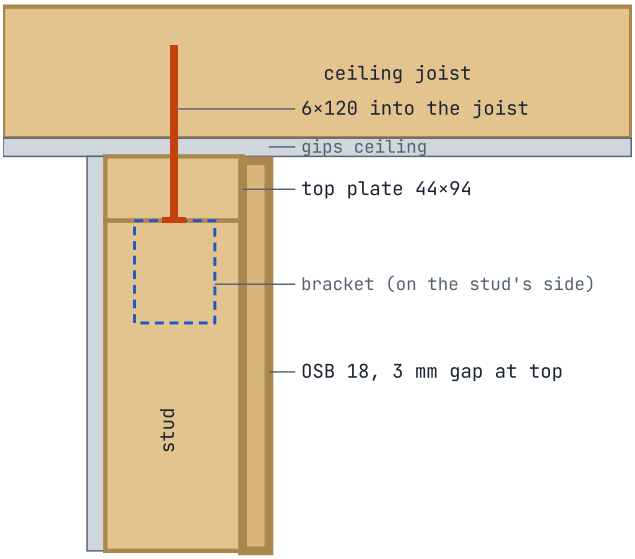


Top plate

Hold it right above the floor plate (check with the waterpas). Screw up through it into every joist it crosses. Push shims in where the ceiling dips.

BUILD JOURNEY

Step by step

The blue parts are the ones added in each step. Lay out the pieces for a step, check them against the parts list, then build.

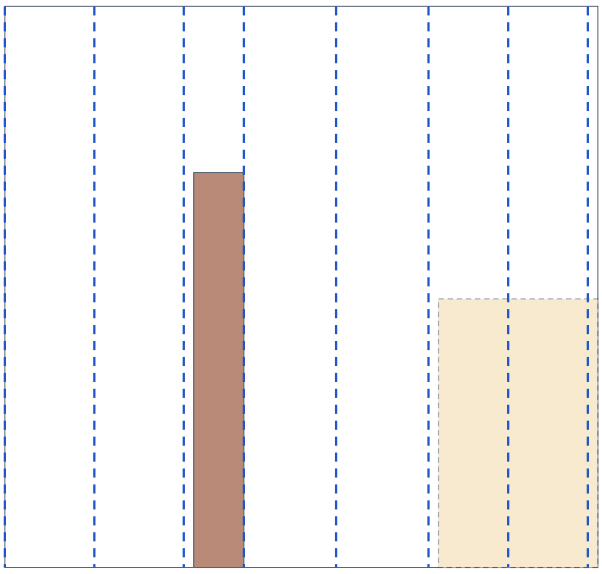


1 Mark out

Scan the ceiling, the exterior wall and the back wall with the detector, and mark joists, battens and cables. Mark the stud left edges on the floor and the ceiling.

`detector` `waterpas` `pencil`


`0 · 393 · 786 · 1050 · 1455 · 1861 · 2211 · 2561`

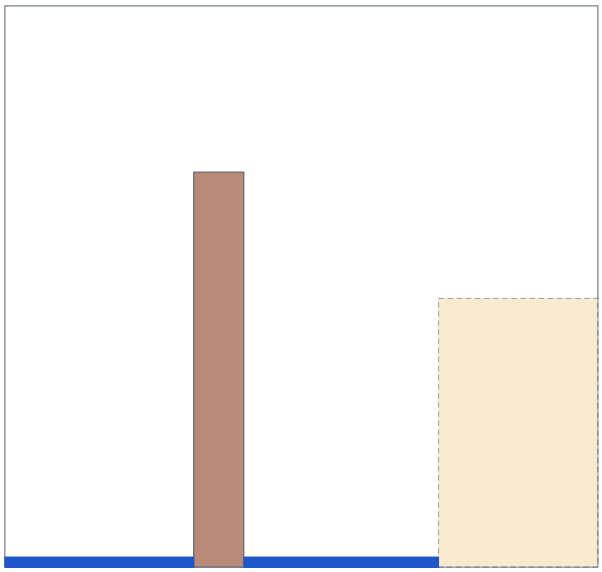

2 Floor plate

Lay BP1 (exterior wall → pillar) and BP2 (pillar → 1905, where the open bay starts) tight against the back wall. Drill through the plates into the floor and plug them every ~50 cm, between the stud marks.


`1×` BP1 826 `1×` BP2 853 `5×` plug 10×100

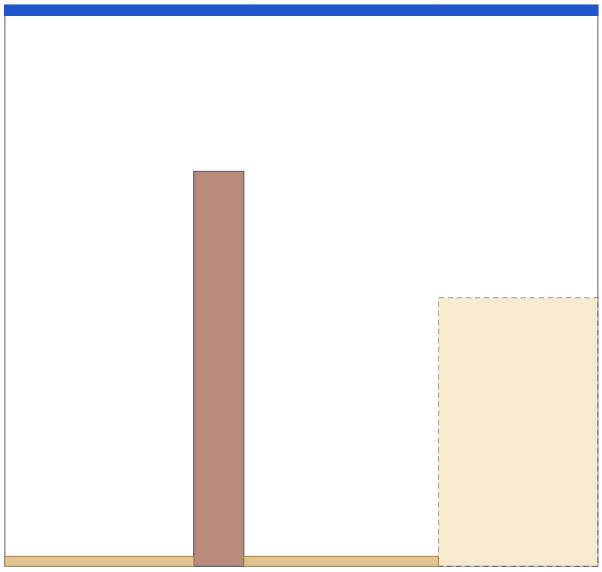

3 Top plate

Hold TP1, TP2 and TP3 against the ceiling, straight above the floor plate. Screw up through the plate into every joist. Shim where the ceiling dips.


`1×` TP1 1069 `1×` TP2 811 `1×` TP3 719 `~8×` 6×120 shims

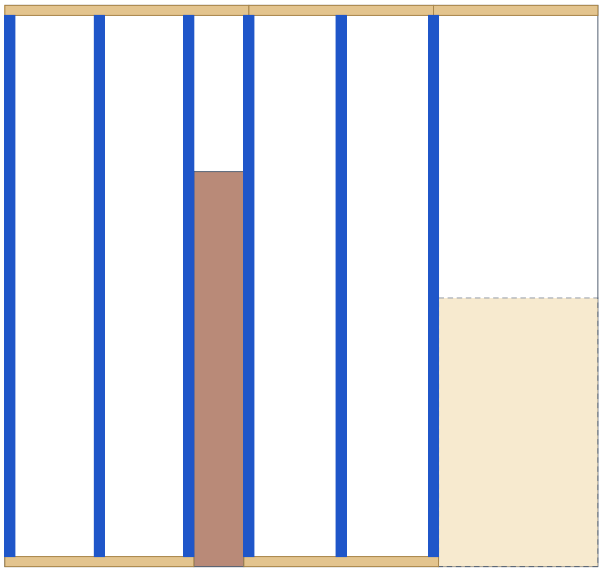

4 Studs V1–V6

Stand each stud on its mark, check it's plumb, and fix it with a bracket on each side at the top and bottom. V3 and V4 go tight against the pillar: brackets on the free side only, plus 3 plugs each sideways into the brick. Screw V1 into the battens behind the gips.


`6×` S 2374 `22×` bracket `6×` plug 10×100 `~4×` 6×120

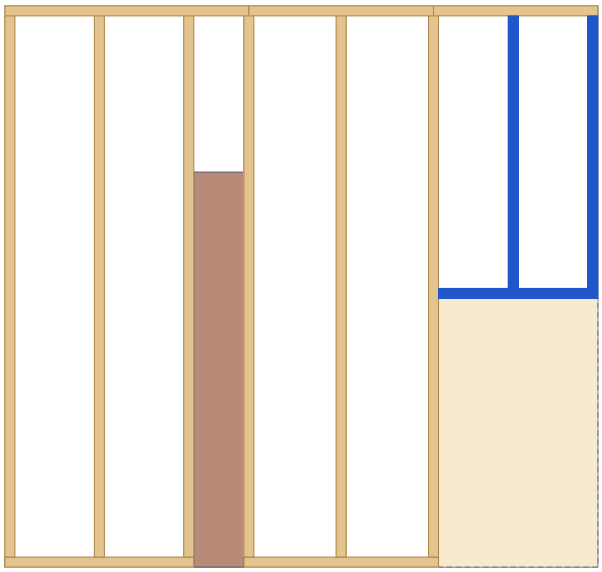

5 Open bay

Screw a bracket to V6 with its top at 1180, and one to the kitchen-wall brick. Drop the header H onto them and screw up into it. Stand V7 and V8 on the header, with brackets at the top and bottom. Plug V8 into the kitchen wall.


`1× H 697` `2× SH 1195` `8× bracket` `2× plug 10×100` `4× plug 6 mm + 5×50`

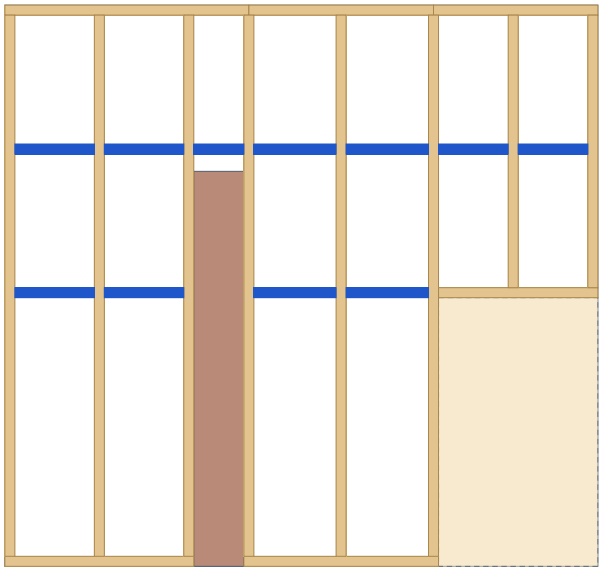

6 Noggins

In every bay, screw a bracket to both studs with its top at 1180 (row 1) and 1811 (row 2). Drop the noggin on and screw up into it. Row 1 skips the pillar bay and the open bay. N3 goes above the pillar in row 2.


`4× N1 348` `4× N2 360` `1× N3 218` `2× N4 305` `22× bracket`

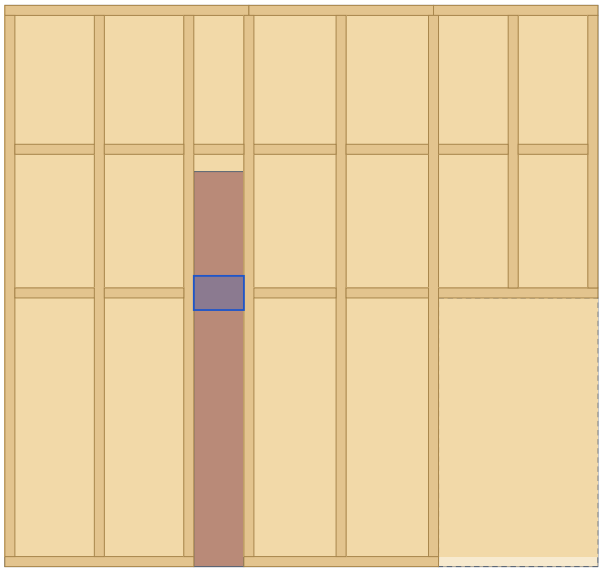

7 Insulate

Finish any new pipe or socket work first. Press glass wool into every closed bay, snug but not crushed. Screw the 218 × 150 OSB packing piece to the pillar face, centred at 1202, so the OSB joint has something behind it.


`~5 m²  glaswol` `1× packing 218×150` `mask + gloves`

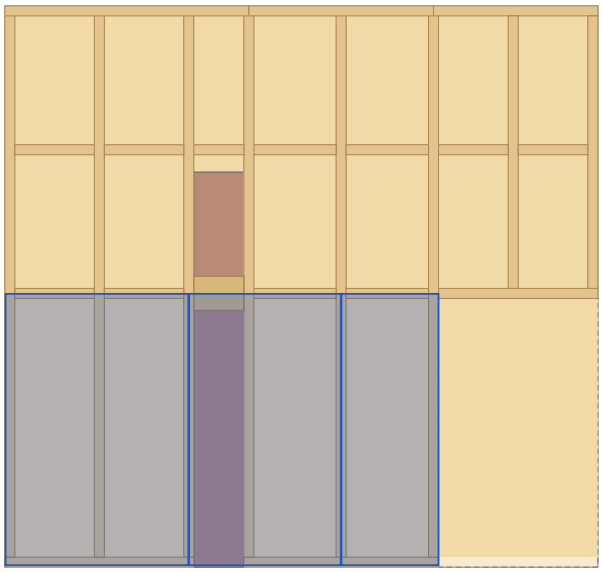

8 OSB row 1

Stand A1, B1 and C1 on 8 mm spacers, with 3 mm gaps between them. C1 ends flush with V6 at the open bay. Screw every 150 mm along the edges and every 300 mm in the middle.

`1×` A1 803×1192 `1×` B1 666×1192 `1×` C1 426×1192 `~90×` 4×45

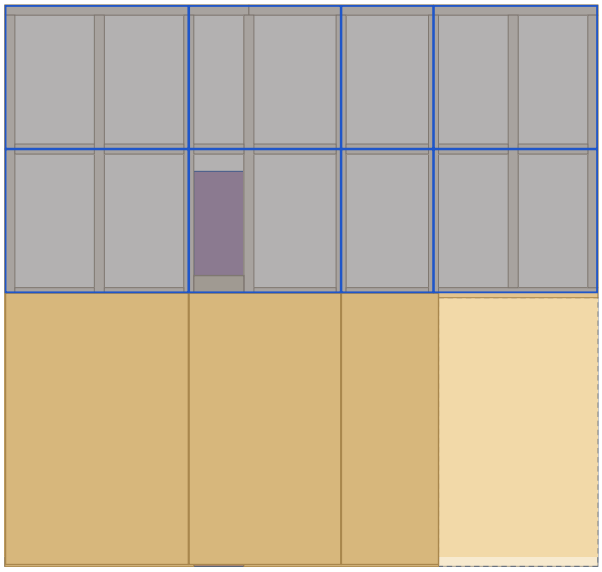

9 OSB rows 2 and 3

Row 2 first (A2, B2, C2, D2; D2 sits on the header), then row 3, with a 3 mm gap at the ceiling. Paint or trim the edges of the open bay. Done.

`4×` row 2 panels `4×` row 3 panels `~200×` 4×45