MAS_LIFCL
Crosslink NX evaluation
Board
Hardware Manual







Disclaimers

MAS Elettronica makes no warranty, representation, or guarantee regarding the accuracy of information contained in this document or the suitability of its products for any particular purpose. All information herein is provided AS IS and with all faults, and all risk associated with such information is entirely with Buyer. Buyer shall not rely on any data and performance specifications or parameters provided herein. Products sold by MAS Elettronica have been subject to limited testing and it is the Buyer's responsibility to independently determine the suitability of any products and to test and verify the same. No Lattice products should be used in conjunction with mission- or safety-critical or any other application in which the failure of MAS Elettronica's product could create a situation where personal injury, death, severe property or environmental damage may occur. The information provided in this document is proprietary to MAS Elettronica and reserves the right to make any changes to the information in this document or to any products at any time without notice.

Revision History:

Doc. Version	BOARD Version	Date	Change
V1.0	REV1	2020-12-16	Initial Version
V2.0	REV2	2021-07-12	JP4 clarification

Table of Contents

1 Introduction	6
1.1 The board	6
2 Headers and Connections	9
J1 JTAG Programming connector	9
J2 Micro USB connector	9
J3 Bank 3 power selection	C
J4 CSI-2 strip connector	C
J5 PMOD CONNECTOR	1
J6 PMOD CONNECTOR	2
J8 LVDS DP CONNECTOR	2
J10 Auxiliary Power connector	3
LEDS AND BUTTONS	3
JUMPER14	4
Further Information 1:	5
3 Programming the board10	6
3.1 Programming Circuit	6
3.2 Programming the device1	6
4 Power	9
4.1 Supply Voltage	9
4.2 Mechanical and Environmental	9
Ordering Information20	C
Appendix A Schematics of the MAS_LIFCL Crosslink NX evaluation Board2	1
Appendix B MAS_LIFCL Crosslink NX evaluation Board LAYOUT	2
Appendix C MAS_LIFCL Crosslink NX evaluation Board Bill of Materials2	5

Appendix D MAS_LIFCL Crosslink NX evaluation Board	accessories34
Technical Support and Warranty	40
Technical Support	40
Warranty Conditions	41
Contact Information	43

1 Introduction

1.1 The board

This document describes the MAS Elettronica's LIFCL CrossLink-NXTM evaluation board.

The board's key component is the Lattice CrossLink-NX FPGA LIFCL-17-QFN72, which can receive input from the bridges CSI-2 and LVDS input and output to LVDS os CSI-2.

This board is designed to work with the PMOD (HIPER RAM interface) standard peripherals and 22 Pin Zif connector compliant devices, like 4K Image sensors like IMX415 or HMDI input board adapters.

The content of this user guide includes descriptions of on-board jumper settings, programming circuit, a complete set of schematics, and bill of materials for LIFCL CrossLink-NXTM evaluation board.

Key features of the LIFCL CrossLink-NXTM evaluation board include:

- CrossLink-NX FPGA LIFCL-17
- Quad 4-lane MIPI DSI/CSI-2 hard DPHY receiver/transmitter interface
- Quad 4-lane LVDS (or soft DPHY) receiver/transmitter interface through DP connector
- SPI flash configuration
- General Purpose Input/Output
- Dual PMOD connectors expansion headers available (single or dual usage)
- 5V power supply through micro USB connector.
- 4x user defined LEDs and 2x user defined push buttons.
- 50Mhz on board oscillator.
- Programming Circuit:
 - From programming software via USB/FTDI interface (JTAG or SPI)
 - From on board Flash
 - SPI external programmer using header

Below is shown the Board Block Diagram

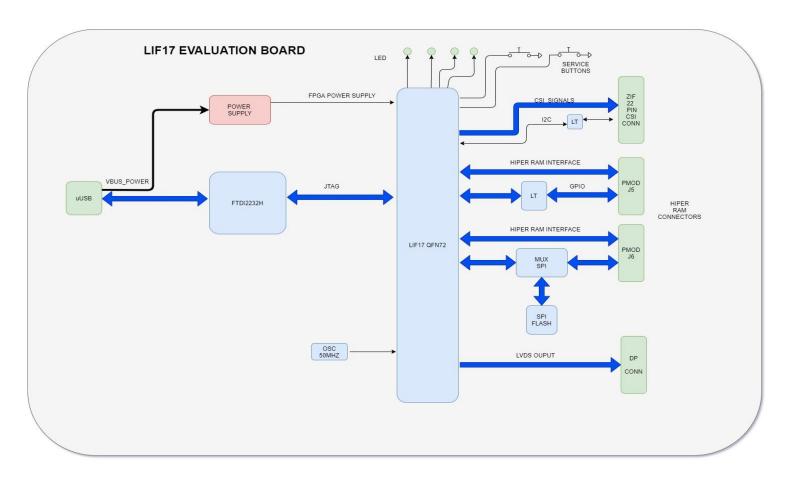


FIGURE 1 BLOCK DIAGRAM OF THE BOARD

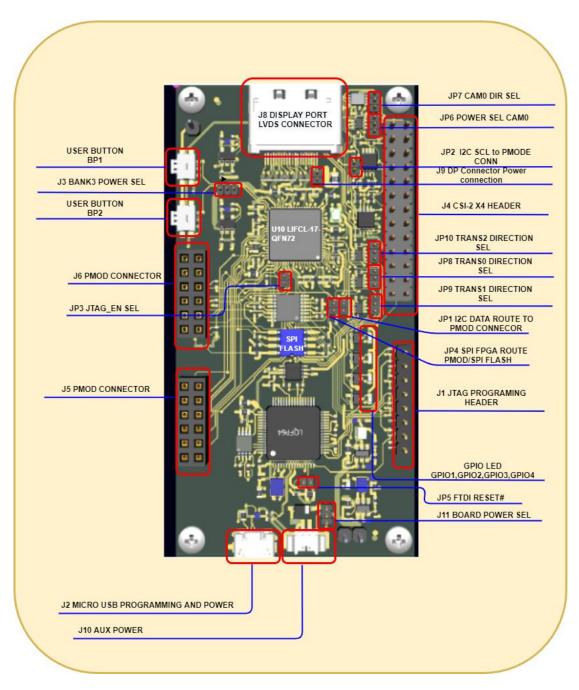


FIGURE 2 TOP OF THE BOARD

2 Headers and Connections

Below are described the pinout of the connectors of the board:

J1 JTAG Programming connector

J1 is a Header 8 pin 2,54mm pitch. Samtec Part Number TSW-108-24-T-S-LL

Name	Pin #	Description	I/O Type	I/O Level	Power Domain	PIN FPGA	Comments
VCCIO_0	1	VCCIO BANK 0 POWER SUPPLY	Р	TTL	3V3		
TDO	2	Test Data Output	S	TTL	3V3	45	Connected to FTDI
TDI	3	Test Data Input	S	TTL	3V3	46	Connected to FTDI
NC	4,5	NO CONNECT					
TMS	6	Test Mode Select	S	TTL	3V3	41	Connected to FTDI
GND	7	GROUND	Р				
тск	8	Test Clock	S	TTL	3V3	50	Connected to FTDI

J2 Micro USB connector

J2 is a Micro USB connector MOLEX 47346-0001

Name	Pin #	Description	I/O Type	I/O Level	Power Domain	PIN FPGA	Comments
VBUS	1	5V POWER SUPPLY FROM USB	Р	TTL	5V		
USB_DM	2	Test Data Output	S	TTL	USB	-	Connected to FTDI
USB_DP	3	Test Data Input	S	TTL	USB	-	Connected to FTDI
NC	4	NC					
GND	5	GROUND	Р				

J3 Bank 3 power selection

J3 is a Header 3 pin 2,54mm pitch Samtec Part number TLW-103-05-G-S

Name	Pin #	Description	I/O Type	I/O Level	Power Domain	PIN FPGA	Comments
1V8	1	1V8 POWER SUPPLY	Р			-	Connect 1-2 for 1V8 bank 3 power supply
VCCIO_3	2	VCCIO_3 FPGA connection	Р			-	
3V3	3	3V3 POWER SUPPLY	Р			-	Connect 2-3 for 3v3 bank 3 power supply

J4 CSI-2 strip connector

J4 is a Header 2x13 2,54mm pitch Samtec Part number TSW-113-24-F-D-LL

Name	Pin #	Description	I/O Type	I/O Level	Power Domain	PIN FPGA	Comments
3V3	1,2	3V3 POWER SUPPLY	Р			-	
GND	7,8 11,12 15,16 19,20 23,24	Ground signal	Р				
I2C_SCL_ADAPTER	3	I2C clock to sensor	S	TTL	1V8/3V3	44	
CAM0_CONN_PWDN	4	Sensor reset#	S	TTL	1V8/3V3	9	
I2C_SDA_ADAPTER	5	I2C data to sensor	S	TTL	1V8/3V3	42	
CAM0_CONN_MCLK	6	Sensor Master clock	S	TTL	1V8/3V3	8	
MIPI_PPHY0_CKP	9	Mipi clock positive signal	S	MIPI	1V2	68	
MIPI_PPHY0_CKN	10	Mipi clock negative signal	S	MIPI	1V2	69	
MIPI_PPHY0_DP0	13	Mipi data 0 positive signal	S	MIPI	1V2	4	
MIPI_PPHY0_DN0	14	Mipi data 0 negative signal	S	MIPI	1V2	3	
MIPI_PPHY0_DP1	17	Mipi data1 positive signal	S	MIPI	1V2	66	
MIPI_PPHY0_DN1	18	Mipi data1 negative signal	S	MIPI	1V2	67	
MIPI_PPHY0_DP2	21	Mipi data 2 positive signal	S	MIPI	1V2	1	
MIPI_PPHY0_DN2	22	Mipi data 2 negative signal	S	MIPI	1V2	2	

Name	Pin #	Description	I/O	I/O	Power	PIN	Comments
			Type	Level	Domain	FPGA	
MIPI_PPHY0_DP3	25	Mipi data 3 positive signal	S	MIPI	1V2	64	
MIPI_PPHY0_DN3	26	Mipi data 3 negative signal	S	MIPI	1V2	65	

J5 PMOD CONNECTOR

J5 is a Socket 2x6 2,54mm pitch TE Connectivity Part number 5-534998-6

Name	Pin #	Description	I/O Type	I/O Level	Power Domain	PIN FPGA	Comments
TRANS_3V3_0	1	Voltage translated PMOD signal Pin 17	S	TTL	3V3	14	direction pin se- lection using JP8
PMODE_1_1	2	Voltage translated PMOD signal Pin 2	S	TTL	3V3	44	
TRANS_3V3_1	3	PMODE pin 3 signal 7	S	TTL	3V3	13	direction pin se- lection using JP9
PMODE_3_2	4	PMODE pin 4 signal	S	TTL	3V3	42	
PMODE_2_3	5	PMODE pin 5 signal	S	TTL	3V3	52	
PMODE_2_4	6	PMODE pin 6 signal	S	TTL	3V3	43	
TRANS_3V3_2	7	Voltage translated PMOD signal Pin 7	S	TTL	3V3	15	direction pin se- lection using JP10
PMODE_2_2	8	PMODE pin 8 signal	S	TTL	3V3	55	
GND	9,10	Ground signal	Р				
3V3	11,12	3V3 POWER SUPPLY	Р			-	

J6 PMOD CONNECTOR

J6 is a Socket 2x6 2,54mm pitch TE Connectivity Part number 5-534998-6

Name	Pin #	Description	I/O Type	I/O Level	Power Domain	PIN FPGA	Comments
PMODE_0_1	1	PMODE pin 1 signal	S	TTL	3V3	58	
PMODE_3_3	2	PMODE pin 2 signal FPGA MCLK signal	S	TTL	3V3	59	See note 1
PMODE_0_2	3	PMODE pin 3 signal	S	TTL	3V3	53	
PMODE_1_2	4	PMODE pin 4 signal FPGA_MCSN signal	S	TTL	3V3	56	See note 1
PMODE_0_3	5	PMODE pin 5 signal	S	TTL	3V3	61	
PMODE_1_3	6	PMODE pin 6 signal FPGA_MOSI signal	S	TTL	3V3	57	See note 1
PMODE_0_4	7	PMODE pin 7 signal	S	TTL	3V3	60	
PMODE_1_4	8	PMODE pin 8 signal FPGA_MISO signal	S	TTL	3V3	55	See note 1
GND	9,10	Ground signal	Р				
3V3	11,12	3V3 POWER SUPPLY	Р			-	

Note 1. To have this signals available on the connector J6 put JP4 ON

J8 LVDS DP CONNECTOR

J8 is a Display Port connector Molex 47272-0001

Name	Pin #	Description	I/O Type	I/O Level	Power Domain	PIN FPGA	Comments
LVDS_DATAP0	1	LVDS DATA 0 POSITIVE	S	LVDS	1V8	24	
LVDS_DATAN0	3	LVDS DATA 0 NEGATIVE	S	LVDS	1V8	25	
LVDS_DATAP1	4	LVDS DATA 1 POSITIVE	S	LVDS	1V8	30	
LVDS_DATAN1	6	LVDS DATA 1 NEGATIVE	S	LVDS	1V8	31	
LVDS_DATAP2	7	LVDS DATA 2 POSITIVE	S	LVDS	1V8	33	
LVDS_DATAN2	9	LVDS DATA 2 NEGATIVE	S	LVDS	1V8	34	
LVDS_DATAP3	10	LVDS DATA 3 POSITIVE	S	LVDS	1V8	27	

Name	Pin #	Description	I/O Type	I/O Level	Power Domain	PIN FPGA	Comments
LVDS_DATAN3	12	LVDS DATA 3 NEGATIVE	S	LVDS	1V8	28	
LVDS_I2C_SDA	13	I2C DATA	TTL	3V3	3V3	42	
LVDS_I2C_SCL	14	I2C CLOCK	S	TTL	3V3	44	
LVDS_CLKP	15	LVDS CLOCK POSITIVE	S	LVDS	1V8	22	
LVDS_CLKN	17	LVDS CLOCK NEGATIVE	S	LVDS	1V8	23	
3V3	18,20		Р		3V3		
GND	2,5,8,11,16		Р				

J10 Auxiliary Power connector

J10 is the Auxiliary connector PN is 53261-0271 Molex

Name	Pin #	# Description I, Ty		I/O Level	Power Domain	PIN FPGA	Comments
5V Power IN	1	5V power IN	Р	5V	5V		
Ground	2	Ground	Р				

LEDS AND BUTTONS

LED connections are made through a MOS:

Name	Description	I/O Type	I/O Level	Power Domain	PIN FPGA	Comments
GPIO_LED1	Connected to led D2	S	TTL	3V3	19	Active high
GPIO_LED2	Connected to led D3	S	TTL	3V3	20	Active high
GPIO_LED3	Connected to led D4	S	TTL	3V3	8	Active high
GPIO_LED4	Connected to led D5	S	TTL	3V3	9	Active high

Service buttons connections are made directly:

Name	Description	I/O Type	I/O Level	Power Domain	PIN FPGA	Comments
PB1	Active low user button	S	TTL	3V3	36	Active low

Name	Description	I/O Type	I/O Level	Power Domain	PIN FPGA	Comments
PB2	Active low user button	S	TTL	3V3	37	Active low

JUMPER

Name	Description	I/O Type	I/O Level	Power Domain	PIN FPGA	Comments
J9	WHEN ON Connects 3,3 Volt supply to J8 LVDS connector WHEN OFF No power is supplied to the J8.	S	POWER	3V3		Default is OFF
JP1	WHEN ON Connects FPGA pin 42 to I2C_SDA camera signal WHEN OFF Signals are used in PMOD connector J5	S	TTL	3V3	42	Default is OFF
JP2	WHEN ON Connects FPGA pin 44 to I2C_SDC camera signal WHEN OFF Signals are used in PMOD connector J5	S	TTL	3V3	44	Default is OFF
JP3	WHEN ON disables JTAG	S	TTL	3V3	50	Default is OFF
JP4	WHEN ON routes spi fpga sig- nals to PMOD connector WHEN OFF routes spi fpga signals to SPI FLASH	S	TTL	3V3		Default is OFF
JP5	WHEN ON resets FTDI Chip	S	TTL	3V3		Default is OFF
JP6	Camera Voltage selection: WHEN 2-3 Camera I/O is 1V8 WHEN 1-2 Camera I/O is 3V3	S	TTL	1V8/3V3		Default is 2-3
JP7	CAM0_PWDN and CAM0- MCLK direction selection NC Direction is Input WHEN 1-2 output WHEN 2-3 Direction Selected on PIN 19 of FPGA	S	TTL	3V3		Default is NC
JP8	TRANS_0 direction selection NC Direction is Input	S	TTL	3V3		Default is NC

Name	Description	I/O Type	I/O Level	Power Domain	PIN FPGA	Comments
	WHEN 1-2 output WHEN 2-3 Direction Selected on PIN 20 of FPGA					
JP9	TRANS_1 direction selection NC direction selection NC Direction is Input WHEN 1-2 output WHEN 2-3 Direction Selected on PIN 8 of FPGA	S	TTL	3V3		Default is NC
JP10	TRANS_2 direction selection direction selection NC Direction is Input WHEN 1-2 output WHEN 2-3 Direction Selected on PIN 9 of FPGA	S	TTL	3V3		Default is NC
J11	Board Power selection WHEN 1-2 uUSB Selected WHEN 2-3 J10 selected	Р		5V		Default is 1-2

Further Information

The following references provide detailed information on the MAS_LIFCL Crosslink NX device:

- Appendix A. MAS LIFCL Crosslink NX Board Schematics
- Appendix B. MAS LIFCL Crosslink NX Board Mount
- Appendix C. MAS LIFCL Crosslink NX Board Bill of Materials
- Appendix C MAS LIFCL Crosslink NX evaluation Board accessories
- CrossLink-NX Family Data Sheet (FPGA-DS-02049) for details on the CrossLink-NX FPGA
- More info can be found at https://maselettronica.com/

3 Programming the board

3.1 Programming Circuit

CrossLink-NX can be programmed via USB through the FTDI/JTAG interface using Lattice Radiant® programmer software, or by an external programmer connected to Header J1.

The programming circuit is described below:

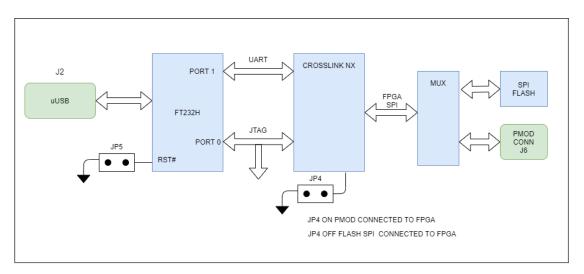


FIGURE 3. PROGRAMMING BLOCK

The FTDI/JTAG interface is used to program both CrossLink-NX and SPI Flash Memory (Macronix 25L12833 128Mb).

3.2 Programming the device

This section describes the procedure for programming a pattern to the SRAM (volatile) configuration memory of the Crosslink-NX device. The Crosslink-NX can be programmed through JTAG, I2C, or SPI interfaces. This section focuses on JTAG programming through the USB/FTDI interface. For details on the other configuration modes, refer to the CrossLink-NX sysConfig Usage Guide (FPGA-UG-

MAS LIFCL Crosslink NX evaluation Board Hardware Manual

02099).

The board is programmed through Lattice Radiant programmer software, which can be started as a standalone tool or from a Lattice Radiant project.

To program the CrossLink-NX device:

1. Power on the board with the **JP4 inserted**. **Once the board is ON remove the JP4** start a programming project by launching the Lattice Radiant tool and initiating a board scan, as shown in Figure 4.

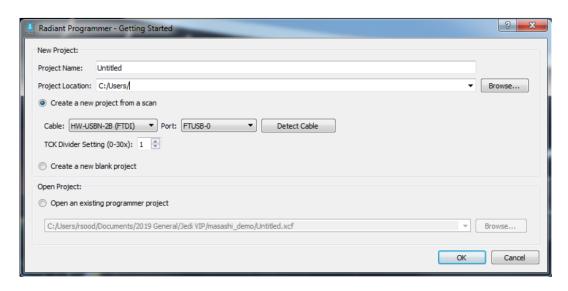


FIGURE 4. STARTING PROGRAMMER

2. After the board is successfully scanned, the main interface opens as shown in Figure 5. Enter the file name.

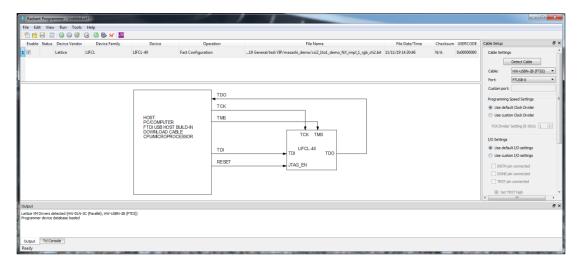


FIGURE 5. ENTERING FILE NAME

3. Double click on the Operation field to open the Device Properties dialog box and select the appropriate programming mode. In this example, Fast Configuration in Operation and JTAG in Programming Mode are selected. Click OK.

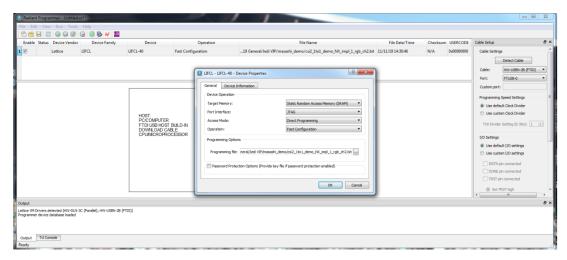


FIGURE 6. ENTERING PROGRAMMING MODE

4. In the main view, click the Program button to configure the Crosslink-NX on the board.

5. Power on the board with the **JP4 OFF**. **Once the board is ON insert the JP4** in order to use the PMOD connector correctly

4 Power

4.1 Supply Voltage

Name	Description	I/O Type	Min	Тур	Max	Unit
5V	5V Main power supply	Input	4.75	5.0	5.25	V
I_5V	5V Main current	Input		TBD	500	mA
3V3	3V3 internal supply	Input	3.0	3.3	3.6	V
1V8	1V8 internal supply	Input	1.7	1.8	1.9	V
1V2	1V2 internal supply	Input	1.14	1.2	1.26	V
1V0	1V0 internal supply	Input	0.95	1.0	1.05	V

4.2 Mechanical and Environmental

Form Factor

Dimension

87 X 44 mm

Operating Temperature

Standard: 0°C to +60°C

Rugged: -20°C to +85°C (optional)

Humidity

5-90% RH operating, non-condensing

5-95% RH storage

MAS LIFCL Crosslink NX evaluation Board Hardware Manual

Ordering Information

ORDERING CODE	DESCRIPTION	COMMENTS		
ADP_002_0_1	Full feature board	Standard product		
ADP_002_1_1	Board without programming IC	Available uppon request		



Appendix A Schematics of the MAS_LIFCL Crosslink NX evaluation Board


MAS LIFCL EVALUATION BOARD REV1

Page Index:


- 1. THIS PAGE
- 2. BLOCK DIAGRAM
- 3 POWER DIAGRAM
- 4. REVISION HISTORY
- 5. POWER_IN_FTDI
- 6. POWER SUPPLIES
- 7. FPGA LIF17
- 8. SPECIFIC CONNECTORS
- 9. LVDS CONNECTOR


Progetto MAS LIFCL17 EVABOARD Data ultima modifica Data di creazione Titolo pagina Monday, May 17, 2021 Header Progettato da: Controllato da: Approvato da: S.MASCETTI S.MASCETTI S.MASCETTI Codice PCB File di distinta: Foglio 1 di 8 REV. 1


Riservato- Confidential Questo documento è proprietà di MAS Elettronica che ne riserva tutti i diritti.

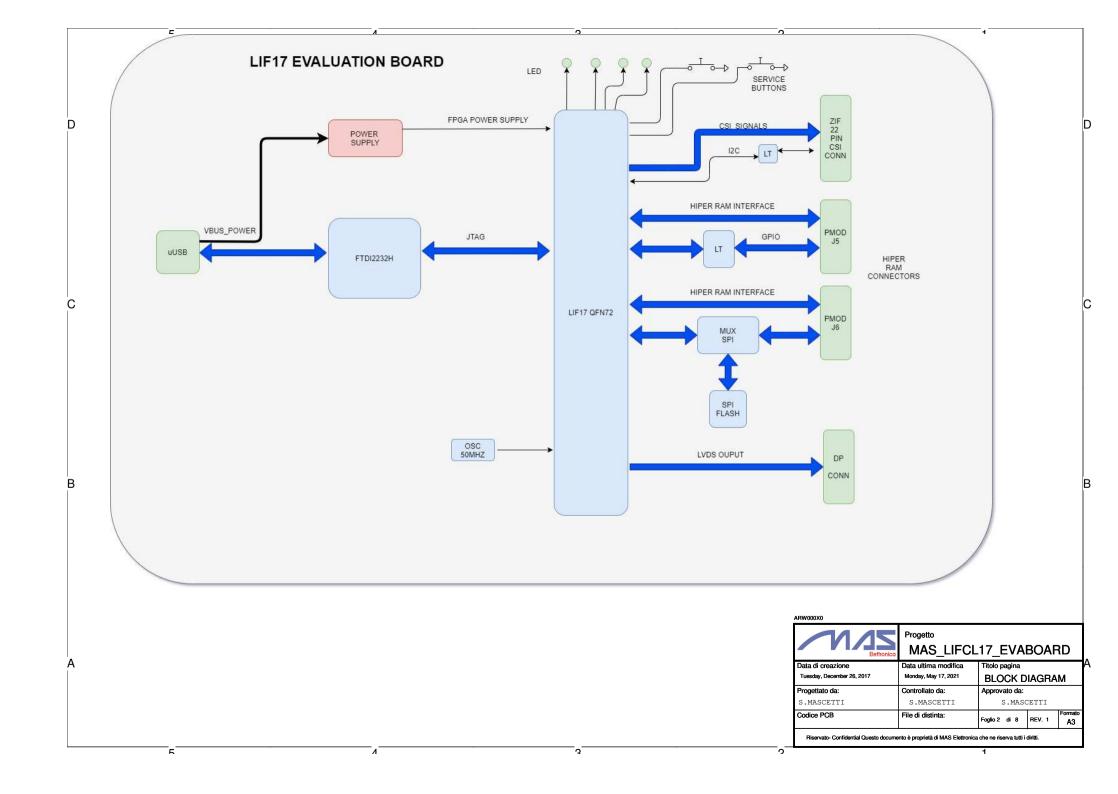



_	5		3	$\sqrt{1}^2$
Rev. Code	Date	Ву	Description	l
0	10/11/2020	S.M.	FIRST RELEASE OF SCHEMATICS	Revision History
1	15/04/2021	S.M.	BUG FIXING	
				_
				 -
				Progetto MAS_LIFCL17_EVABOARD Data di creazione Data ultima modifica Titolo pagina
				Tuesday, December 26, 2017 Monday, May 17, 2021 REVISION HISTORY Progettato da: S.MASCETTI S.MASCETTI Codice PCB File di distinta: Foglio 3 di 8 REV. 1 Formato A3
		· · · · · ·	7	Riservato- Confidential Questo documento è proprietà di MAS Elettronica che ne riserva tutti i diritti.

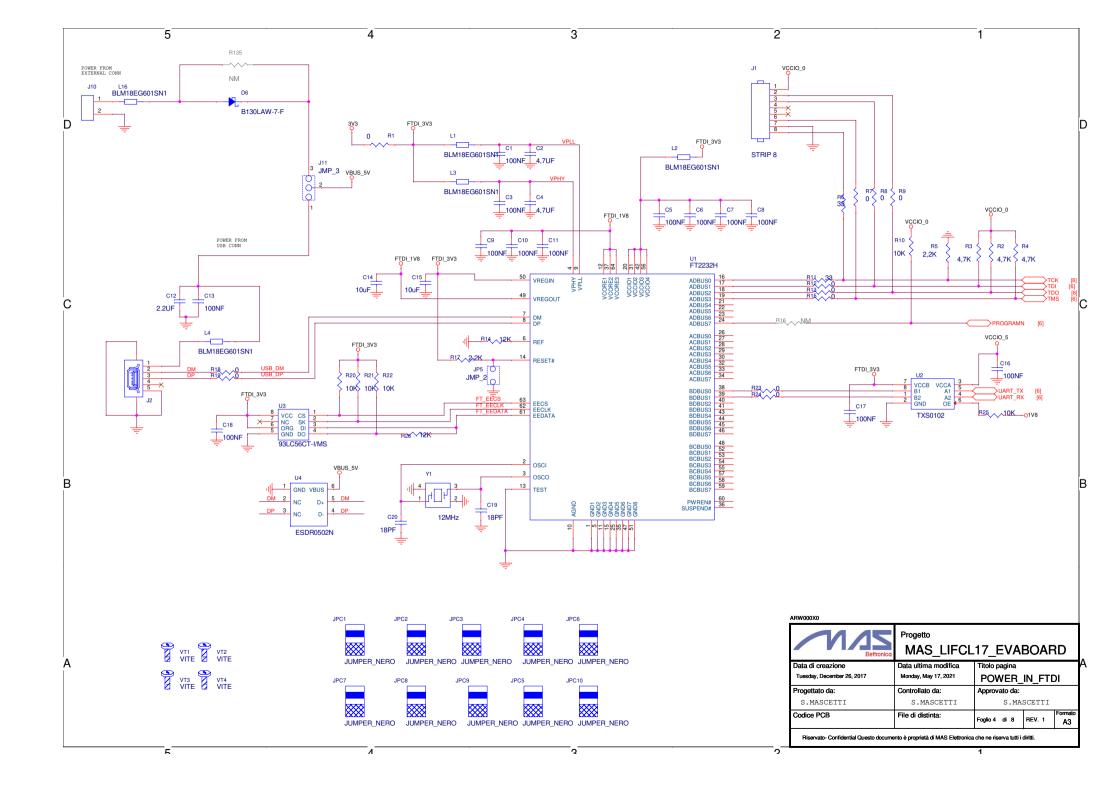

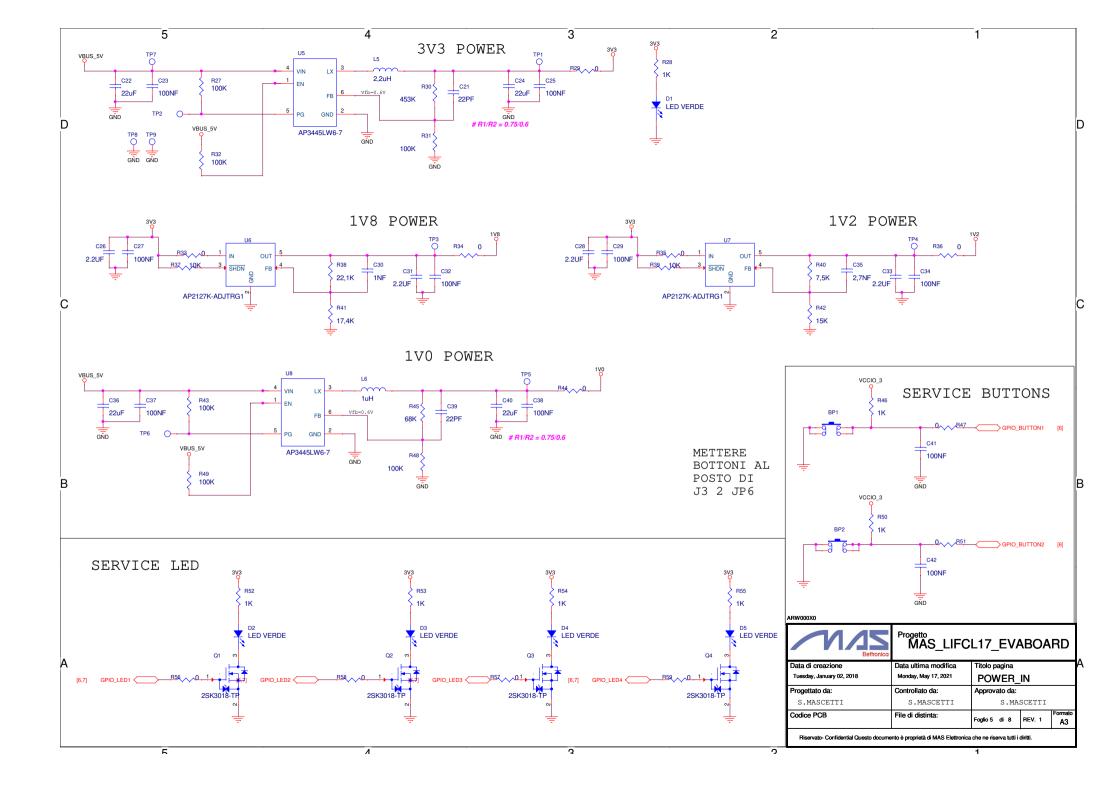

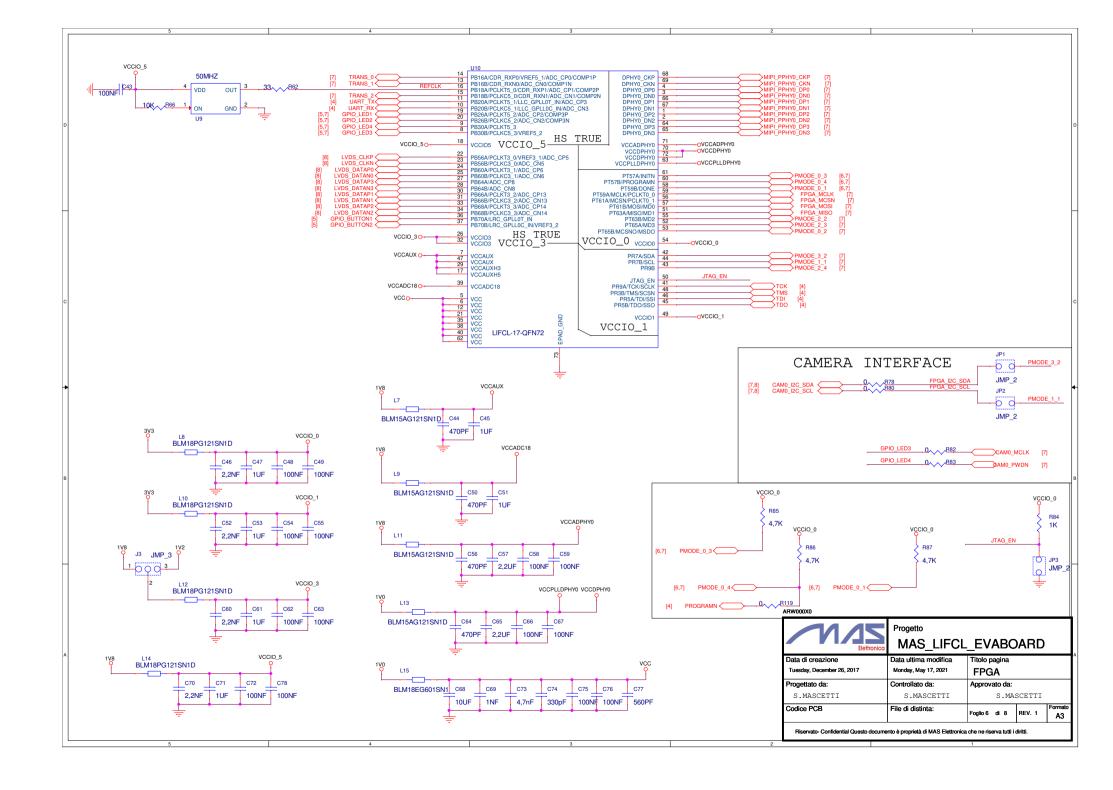

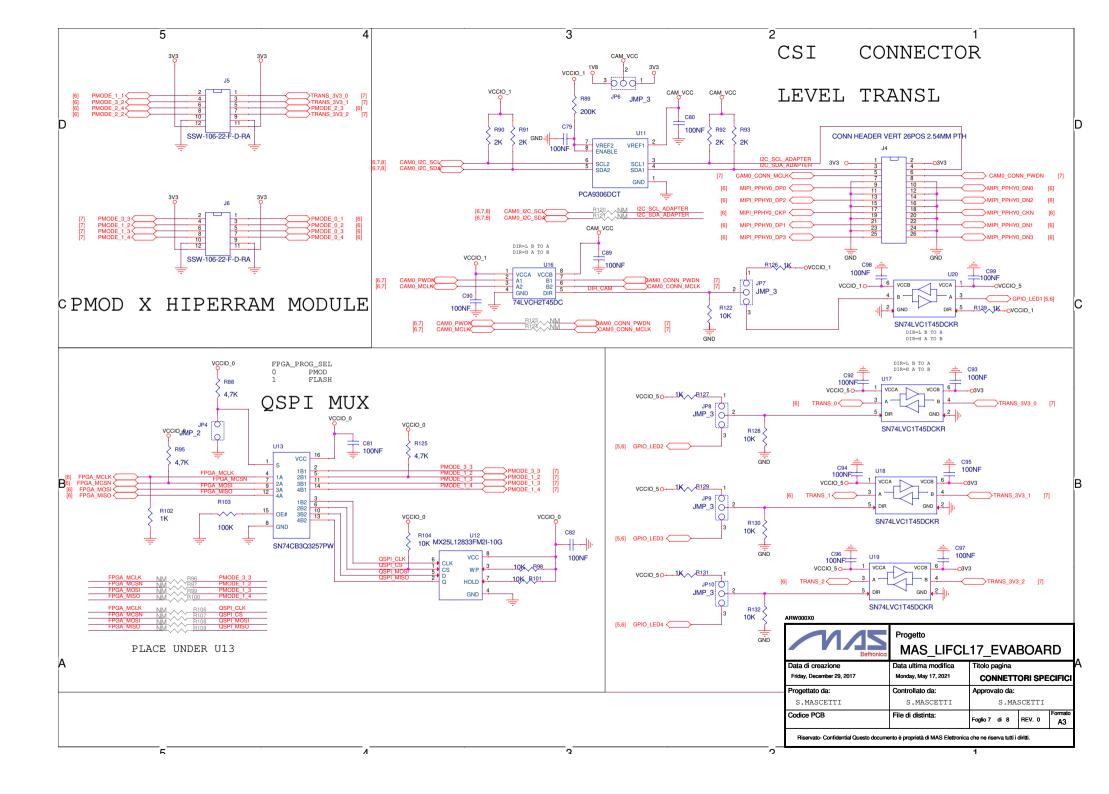


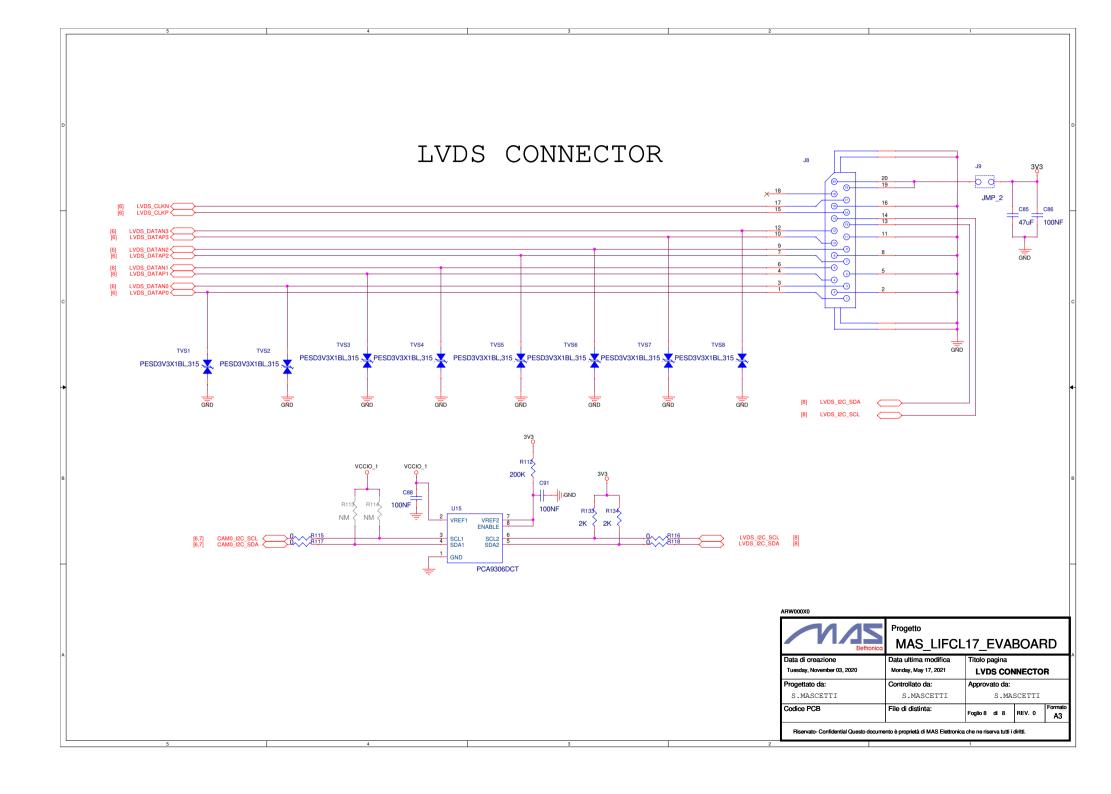




Appendix B MAS_LIFCL Crosslink NX evaluation Board LAYOUT



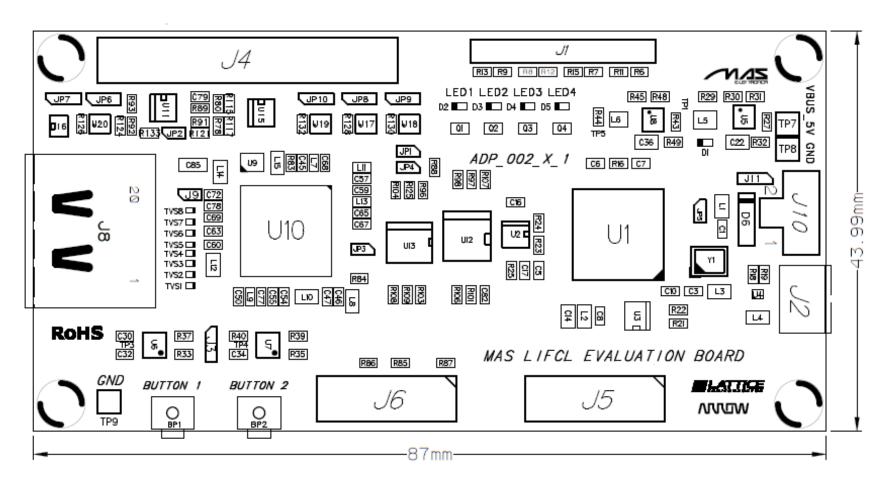

MAS_LIFCL Crosslink NX evaluation Board Hardware Manual



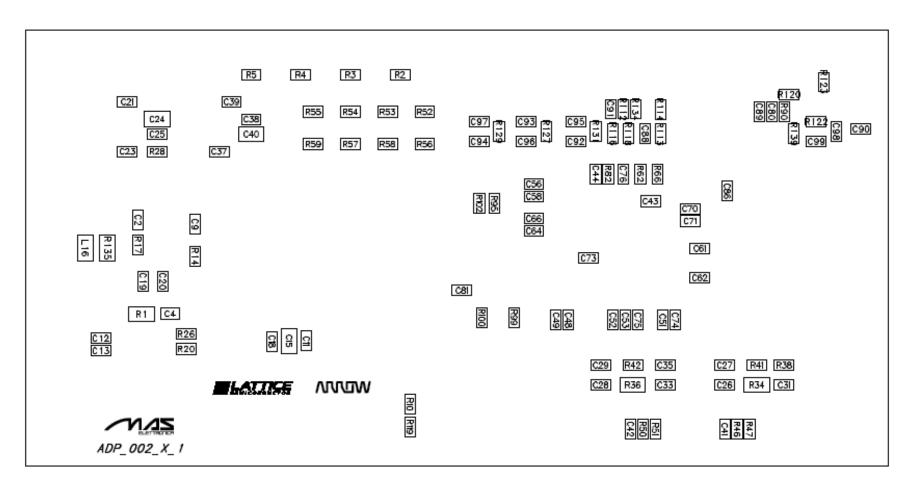

MAS_LIFCL Crosslink NX evaluation Board Layout BOTTOM

MAS_LIFCL Crosslink NX evaluation Board Hardware Manual



Appendix C MAS_LIFCL Crosslink NX evaluation Board Bill of Materials



ITEM	QTY	REF DESIGNATOR	VALUE	DESCRIPTION	PACKAGE	MANUFACTURER	MANUFACTURER P/N
		BP1 BP2		SWITCH, 160GF,			
1	2		434351045816	SIDE PUSH, WHITE, SMD	SMD	WURTH	434351045816
		C1 C3 C5 C6 C7 C8 C9	434331043810	SIVID	SIVID	VVORTI	434331043610
		C10 C11 C13 C16 C17					
		C18 C23 C25 C27 C29					
		C32 C34 C37 C38 C41					
		C42 C43 C48 C49 C54					
		C55 C58 C59 C62 C63					
		C66 C67 C72 C75 C76					
		C78 C79 C80 C81 C82					
		C86 C88 C89 C90 C91		0.5 055 0 4.15 4.614			
		C92 C93 C94 C95 C96	100NE	CAP CER 0.1UF 16V	CNAD 0402	NAta Elastuanias	CDN4455D74C4O4K400L
2	55	C97 C98 C99 C2 C4	100NF	X7R 0402 CAP CER 4.7UF 10V	SMD_0402	Murata Electronics	GRM155R71C104KA88J
3	2	C2 C4	4,7UF	X5R 0402	SMD 0402	TDK Corporation	C1005X5R1A475M050BC
3		C12 C26 C28 C31 C33	4,701	CAP CER 2.2UF 25V	31010_0402	TDR Corporation	C1003X3K1A473W030BC
4	5	612 620 620 631 633	2.2UF	X5R 0402	SMD_0402	Murata Electronics	GRM155R61E225ME15D
		C14 C15		CAP CER 10UF 10V	_		
5	2		10uF	X5R 0603	SMD_0603	TDK Corporation	C1608X5R1A106M080AC
		C19 C20		CAP CER 18PF 50V			
6	2		18PF	C0G 0402	SMD_0402	TDK Corporation	C1005C0G1H180J050BA
		C21 C39		CAP CER 22PF 50V			
7	2		22PF	COG/NP0 0402	SMD_0402	Murata Electronics	GRM1555C1H220JZ01D
		C22 C24 C36 C40	22.5	CAP CER 22UF 6.3V	S. 45. 0505	TD1/ 0	64 500 / 500
8	4		22uF	X5R 0603	SMD_0603	TDK Corporation	C1608X5R0J226M080AC

 $MAS_LIFCL\ Crosslink\ NX\ evaluation\ Board\ Hardware\ Manual$



ITEM	QTY	REF DESIGNATOR	VALUE	DESCRIPTION	PACKAGE	MANUFACTURER	MANUFACTURER P/N
		C30		CAP CER 1000PF			
9	1		1NF	50V X7R 0402	SMD_0402	Murata Electronics	GRM15XR71H102KA86D
		C35		CAP CER 2700PF		Samsung Electro-	
10	1		2,7NF	50V X7R 0402	SMD_0402	Mechanics	CL05B272KB5NNNC
		C44 C50 C56 C64		CAP CER 470PF 50V			
11	4		470PF	C0G/NP0 0402	SMD_0402	Murata Electronics	GRM1555C1H471JA01D
		C45 C47 C51 C53 C61		CAP CER 1UF 6.3V			
12	6	C71	1UF	X5R 0402	SMD_0402	Murata Electronics	GRM155R60J105KE19D
		C46 C52 C60 C70		CAP CER 2200PF		Walsin Technology	
13	4		2,2NF	50V X7R 0402	SMD_0402	Corporation	0402B222K500CT
		C57 C65		CAP CER 2.2UF		Panasonic Electronic	
14	2		2,2UF	6.3V X5R 0402	SMD_0402	Components	ECJ-0EB0J225M
		C68		CAP CER 10UF 10V		Samsung Electro-	
15	1		10UF	X5R 0402	SMD_0402	Mechanics	CL05A106MP5NUNC
		C69		CAP CER 1000PF			
16	1		1NF	50V X7R 0402	SMD_0402	Murata Electronics	GRM15XR71H102KA86D
		C73		COND.CER. 4,7nF			
17	1		4,7nF	50V 0402 X7R SMD	SMD_0402	MURATA	GRM15XR71H472KA86
		C74		CAP CER 330PF 50V			
18	1		330pF	X7R 0402	SMD_0402	Yageo	CC0402JRX7R9BB331
		C77		CAP CER 560PF 50V			
19	1		560PF	X7R 0402	SMD_0402	Murata Electronics	GRM155R71H561KA01D
		C85		CAP CER 47UF 6.3V			
20	1		47uF	X5R 0805	SMD_0805	Taiyo Yuden	JMK212BJ476MG-T
		D1 D2 D3 D4 D5		LED GREEN CLEAR			
21	5		LED VERDE	0603 SMD	SMD_0603	Dialight	5988070107F

 $MAS_LIFCL\ Crosslink\ NX\ evaluation\ Board\ Hardware\ Manual$



ITEM	QTY	REF DESIGNATOR	VALUE	DESCRIPTION	PACKAGE	MANUFACTURER	MANUFACTURER P/N
		D6		DIODE SCHOTTKY			
22	1		B130LAW-7-F	30V 1A SOD123	SOD-123	DIODES	B130LAW-7-F
		J1		CONN HEADER			
				VERT 8POS			
23	1		STRIP 8	2.54MM	PTH	Samtec Inc.	TSW-108-24-T-S-LL
		J2		CONN RCPT USB2.0			
24	1		47346-0001	MICRO B SMD R/A	SMD 5pin	Molex	0473460001
		J3 J11 JP6 JP7 JP8 JP9		STRIP MASC.1x3P	1x3_P=1_27		
25	7	JP10	JMP_3	CS.p=1,27 mm	mm	HARWIN	M50-3530342
		J4	CONN HEADER	CONN HEADER	26P_2X13_P		
			VERT 26POS	VERT 26POS	2_54mm_PT		
26	1		2.54MM PTH	2.54MM PTH	Н	WURTH	61302621121
		J5 J6		STRIP FEMM.2x6P			
			SSW-106-22-F-	CS.p=2.54mm SMT	2x6_p_2.54		
27	2		D-RA	RA	mm	SAMTEC	SSW-106-22-F-D-RA
		J8		CONN RCPT DIS-			
				PLAYPORT 20P			
28	1		47272-0001	SMD RA	20 PIN SMD	Molex	0472720001
		J9 JP1 JP2 JP3 JP4 JP5		STRIP MASC.1x2P	1x2_P=1_27		
29	6		JMP_2	CS.p=1,27 mm	mm	HARWIN	M50-3530242
		J10		HDR 2 CKT Right-			
30	1		53261-0271	Angle 1.25MM	2P SMD	MOLEX	53261-0271
		JPC1 JPC2 JPC3 JPC4		TOP JUMPER SKT			
		JPC5 JPC6 JPC7 JPC8		W/ HANDLE,	1x2_P=1_27		
31	10	JPC9 JPC10	JUMPER_NERO	BLK/GOLD	mm	HARWIN	M50-2000005

$MAS_LIFCL\ Crosslink\ NX\ evaluation\ Board\ Hardware\ Manual$



ITEM	QTY	REF DESIGNATOR	VALUE	DESCRIPTION	PACKAGE	MANUFACTURER	MANUFACTURER P/N
32	6	L1 L2 L3 L4 L15 L16	BLM18EG601SN 1	FERRITE BEAD 600 OHM 0603 1LN	SMD_0603	Murata Electronics	BLM18EG601SN1D
		L5		FIXED IND 2.2UH 2.2A 84 MOHM			
33	1		2,2uH	SMD	SMD_2520	Murata Electronics	DFE252012P-2R2M=P2
		L6		FIXED IND 1UH 2.16A 68 MOHM			
34	1		1uH	SMD	Ind_2016	TDK Corporation	VLS201612CX-1R0M-1
35	4	L7 L9 L11 L13	BLM15AG121SN 1D	FERRITE BEAD 120 OHM 0402 1LN	SMD_0402	Murata Electronics	BLM15AG121SN1D
36	4	L8 L10 L12 L14	BLM18PG121SN 1D	FERRITE BEAD 120 OHM 0603 1LN	SMD_0603	Murata Electronics	BLM18PG121SN1D
37	4	Q1 Q2 Q3 Q4	2SK3018-TP	N-CHANNEL MOSFET, SOT-323 PACKAG	SOT-323-3	Micro Commercial	2SK3018-TP
38	3	R1 R34 R36	0	RES SMD 0 OHM JUMPER 1/10W 0603	SMD_0603	Bourns Inc.	CR0603-J/-000ELF
		R2 R3 R4 R85 R86 R87 R88 R95 R125		THERM NTC 4.7KOHM 3500K	_		
39	9		4,7K	0402	SMD_0402	Murata Electronics	NCP15XM472J03RC
40	2	R5 R17	2,2K	RES SMD 2.2K OHM 5% 1/5W 0402	SMD_0402	Vishay Dale	CRCW04022K20JNEDHP
41	3	R6 R11 R62	33	RESIS.CHIP 33R 5% 0402 SMD	SMD_0402	ROYAL OHM	RESIS.CHIP 33R 5% 0402 SMD

$MAS_LIFCL\ Crosslink\ NX\ evaluation\ Board\ Hardware\ Manual$



ITEM	QTY	REF DESIGNATOR	VALUE	DESCRIPTION	PACKAGE	MANUFACTURER	MANUFACTURER P/N
		R7 R8 R9 R12 R13 R15					
		R18 R19 R23 R24 R29					
		R33 R35 R44 R47 R51					
		R56 R57 R58 R59 R78					
		R80 R82 R83 R115		RESIS.CHIP OR 5%			
42	29	R116 R117 R118 R119	0	0402 SMD	SMD_0402	ROYAL OHM	RESIS.CHIP OR 5% 0402 SMD
		R10 R20 R21 R22 R25					
		R37 R39 R66 R98 R101		RESIS.CHIP 10K 5%			
43	14	R122 R128 R130 R132	10K	0402 SMD	SMD_0402	ROYAL OHM	RESIS.CHIP 10K 5% 0402 SMD
		R14 R26		RESIS.CHIP 12K 1%			
44	2		12K	0402 SMD	SMD_0402	ROYAL OHM	RESIS.CHIP 12K 1% 0402 SMD
		R27 R32 R43 R49		RESIS.CHIP 100K			
46	4		100K	5% 0402 SMD	SMD_0402	ROYAL OHM	RESIS.CHIP 100K 5% 0402 SMD
		R28 R46 R50 R52 R53					
		R54 R55 R84 R102					
		R126 R127 R129 R131		RESIS.CHIP 1K 5%			
47	14	R139	1K	0402 SMD	SMD_0402	ROYAL OHM	RESIS.CHIP 1K 5% 0402 SMD
		R30		RES 453K OHM			
				1/10W 1% 0402			
48	1		453K	SMD	SMD_0402	PANASONIC	ERJ-2RKF4533X
		R31 R48 R103		RESIS.CHIP 100K			
49	3		100K	1% 0402 SMD	SMD_0402	ROYAL OHM	RESIS.CHIP 100K 1% 0402 SMD
		R38		RESIS.CHIP 22,1K			
50	1		22,1K	1% 0402 SMD	SMD_0402	KAMAYA	RMC1/16SK2212FT

$MAS_LIFCL\ Crosslink\ NX\ evaluation\ Board\ Hardware\ Manual$



ITEM	QTY	REF DESIGNATOR	VALUE	DESCRIPTION	PACKAGE	MANUFACTURER	MANUFACTURER P/N
		R40		RES 7,5K OHM			
				1/10W 1% 0402			
51	1		7,5K	SMD	SMD_0402	BOURNS	CR0402-FX-7501GLF
		R41		RESIS.CHIP 17,4K			
52	1		17,4K	1% 0402 SMD	SMD_0402	YAGEO	RC0402FR-0717K4L
		R42		RESIS.CHIP 15K 1%			
53	1		15K	0402 SMD	SMD_0402	ROYAL OHM	RESIS.CHIP 15K 1% 0402 SMD
		R45		RESIS.CHIP 68K 1%			
54	1		68K	0402 SMD	SMD_0402	ROYAL OHM	RESIS.68K 1% 0402 SMD
		R89 R112		RESIS.CHIP 200K			
55	2		200K	5% 0402 SMD	SMD_0402	ROYAL OHM	RESIS.CHIP 200K 5% 0402 SMD
		R90 R91 R92 R93 R133		RESIS.CHIP 2K 5%			
56	6	R134	2K	0402 SMD	SMD_0402	ROYAL OHM	RESIS.CHIP 2K 5% 0402 SMD
		R104		RESIS.CHIP 10K 1%			
58	1		10K	0402 SMD	SMD_0402	ROYAL OHM	RESIS.CHIP 10K 1% 0402 SMD
		TVS1 TVS2 TVS3 TVS4	PESD3V3X1BL,3	TVS DIODE 3.3V			
70	8	TVS5 TVS6 TVS7 TVS8	15	SOD882	SOD882	Nexperia USA Inc.	PESD3V3X1BL,315
		U1		IC USB HS DUAL		FTDI, Future Tech-	
				UART/FIFO 64-		nology Devices Inter-	
71	1		FT2232H	LQFP	64-LQFP	national Ltd	FT2232HL-REEL
		U2		IC TRNSLTR BIDI-			
72	1		TXS0102	RECTIONAL SM8	SSOP8	Texas Instruments	TXS0102DCTR
		U3		IC EEPROM 2K SPI		Microchip Technol-	
73	1		93LC56CT-I/MS	3MHZ 8MSOP	SSOP-8	ogy	93LC56CT-I/MS
		U4		TVS DIODE 5.5V			
74	1		ESDR0502N	6UDFN		ON Semiconductor	ESDR0502NMUTBG

 $MAS_LIFCL\ Crosslink\ NX\ evaluation\ Board\ Hardware\ Manual$



ITEM	QTY	REF DESIGNATOR	VALUE	DESCRIPTION	PACKAGE	MANUFACTURER	MANUFACTURER P/N
		U5 U8		IC REG BUCK AD- JUSTABLE 2A			
75	2		AP3445LW6-7	SOT26	SOT-26-6	Diodes Incorporated	AP3445LW6-7
		U6 U7	AP2127K-	IC REG LIN POS ADJ			
76	2		ADJTRG1	300MA SOT23-5	SOT23-5	Diodes Incorporated	AP2127K-ADJTRG1
		U9		XTAL OSC XO		Kyocera Interna-	
				50.0000MHZ CMOS		tional Inc. Electronic	
77	1		50MHZ	SMD	SMD_2.0x1.6	Components	KC2520K50.0000C1GE00
		U10	LIFCL-17-	IC FPGA CROSS-		Lattice Semiconduc-	
78	1		7SG72C	LINK-NX 72QFN		tor Corporation	LIFCL-17-7SG72C
		U11 U15		IC TRNSLTR BIDI-			
79	2		PCA9306DCT	RECTIONAL SM8	8-SSOP	Texas Instruments	PCA9306DCTR
		U12	MX25L12833FM				
80	1		2I-10G	S-NOR 128M	SOIC_8	Macronix	MX25L12833FM2I-10G
		U13		IC QUAD1:2 FET			
			SN74CB3Q3257	MUX/DEMUX			
81	1		PW	16TSSOP	SMD	Texas Instruments	SN74CB3Q3257PWR
		U16		TXRX TRANSLATING			
82	1		74LVCH2T45DC	3ST 8VSSOP	8-VFSOP	NXP	74LVCH2T45DC,125
		U17 U18 U19 U20	SN74LVC1T45D	IC TRNSLTR BIDI-			
83	4		CKR	RECTIONAL SC70-6	SC-70	TEXAS	SN74LVC1T45DCKR
		Y1		CRYSTAL			
				12.0000MHZ 10PF			
88	1		12MHz	SMD	SMD_3.2x2.5	Abracon LLC	ABM8G-12.000MHZ-4Y-T3


$MAS_LIFCL\ Crosslink\ NX\ evaluation\ Board\ Hardware\ Manual$





Appendix D MAS_LIFCL Crosslink NX evaluation Board accessories



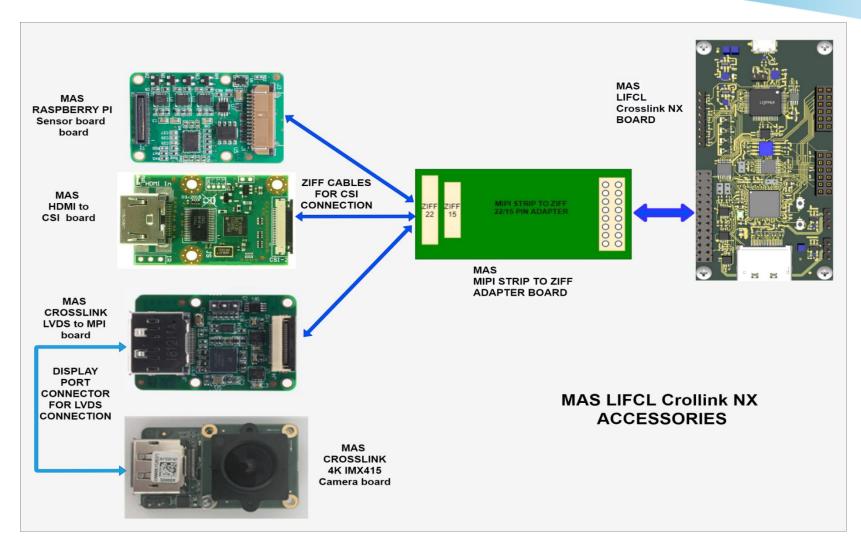

MAS_LIFCL Crosslink NX evaluation Board Hardware Manual





 $MAS_LIFCL\ Crosslink\ NX\ evaluation\ Board\ Hardware\ Manual$



MAS LIFCL LCD ADAPTER

This adapter is suited for MAS LIFCL Evaluation Board for connecting LCD MIPI to MAS LIFCL Evaluation Board.

MAS LIFCL LCD ADAPTER - Mas Elettronica





MAS LIFCL ZIF ADAPTER

This adapter is suited for MAS LIFCL Evaluation Board for other accessories connections

MAS LIFCL ZIF ADAPTER - Mas Elettronica







MAS SENSOR ADAPTER

MAS_SENSOR_ADAPTER_RASPBERRY and prepares signals from the CSIx4 sensor towards a ZIF 15 and 22 pin connector to the processor board.

MAS SENSOR ADAPTER - Mas Elettronica





Technical Support and Warranty

Technical Support

MAS Elettronica provides its product with one-year free technical support including:

- 1. Providing software and hardware resources related to the embedded products of MAS Elettronica;
- 2. Helping customers properly compile and run the source code provided by MAS Elettronica;
- 3. Providing technical support service if the embedded hardware products do not function properly under the circumstance that customers operate according to the instructions in the documents provided by MAS Elettronica;
- 4. Helping customers troubleshoot the products.

The following conditions will not be covered by our technical support service. We will take appropriate measures accordingly:

- a. Customers encounter issues related to software or hardware during their development process;
- b. Customers encounter issues caused by any unauthorized alter to the embedded operating system;
- c. Customers encounter issues related to their own applications;
- d. Customers encounter issues caused by any unauthorized alter to the source code provided by MAS Elettronica;

Warranty Conditions

- 1. 12-month free warranty on the PCB under normal conditions of use since the sales of the product;
- 2. The following conditions are not covered by free services; MAS Elettronica will charge accordingly:
 - Customers fail to provide valid purchase vouchers or the product identification tag is damaged, unreadable, altered or inconsistent with the products.
 - Products are damaged caused by operations inconsistent with the user manual;
 - Products are damaged in appearance or function caused by natural disasters (flood, fire, earthquake, lightning strike or typhoon) or natural aging of components or other force majeure;
 - Products are damaged in appearance or function caused by power failure, external forces, water, animals or foreign materials;
 - Products malfunction caused by disassembly or alter of components by customers or, products disassembled or repaired by persons or organizations unauthorized by MAS Elettronica, or altered in factory specifications, or configured or expanded with the components that are not provided or recognized by MAS Elettronica and the resulted damage in appearance or function;
 - Product failures caused by the software or system installed by customers or inappropriate settings of software or computer viruses;
 - Products purchased from unauthorized sales;
 - Warranty (including verbal and written) that is not made by MAS
 Elettronica and not included in the scope of our warranty should be ful filled by the party who committed. MAS Elettronica has no any re sponsibility;
- Within the period of warranty, the freight for sending products from customers to MAS Elettronica should be paid by customers; the freight from MAS Elettronica to customers should be paid by us. The freight in any direction occurs after warranty period should be paid by customers.
- 4 Please contact technical support if there is any repair request.

re: AS Elettronica will not take any responsibility on the products sent back with mission of the company.	hout the

Contact Information

Phone: +39-0498687469

Sales: sm@maselettronica.com

Support: support@maselettronica.com

Website: http://www.maselettronica.com

Address: Via Rossi 1 35030 Rubano (PD) Italy