

START / See the complete assembly

Colors help identify groups. All of your printed parts can remain black.

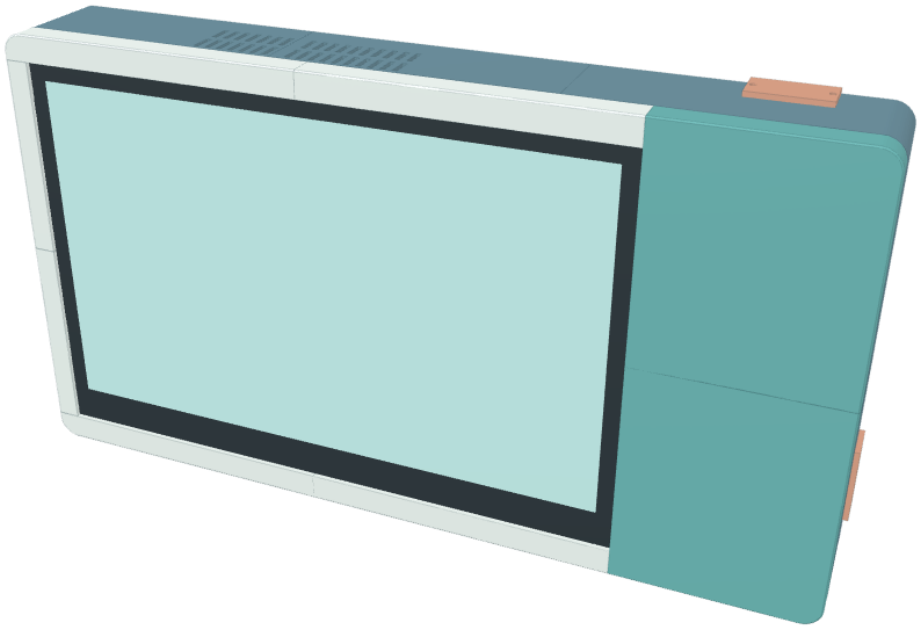

TOGETHER

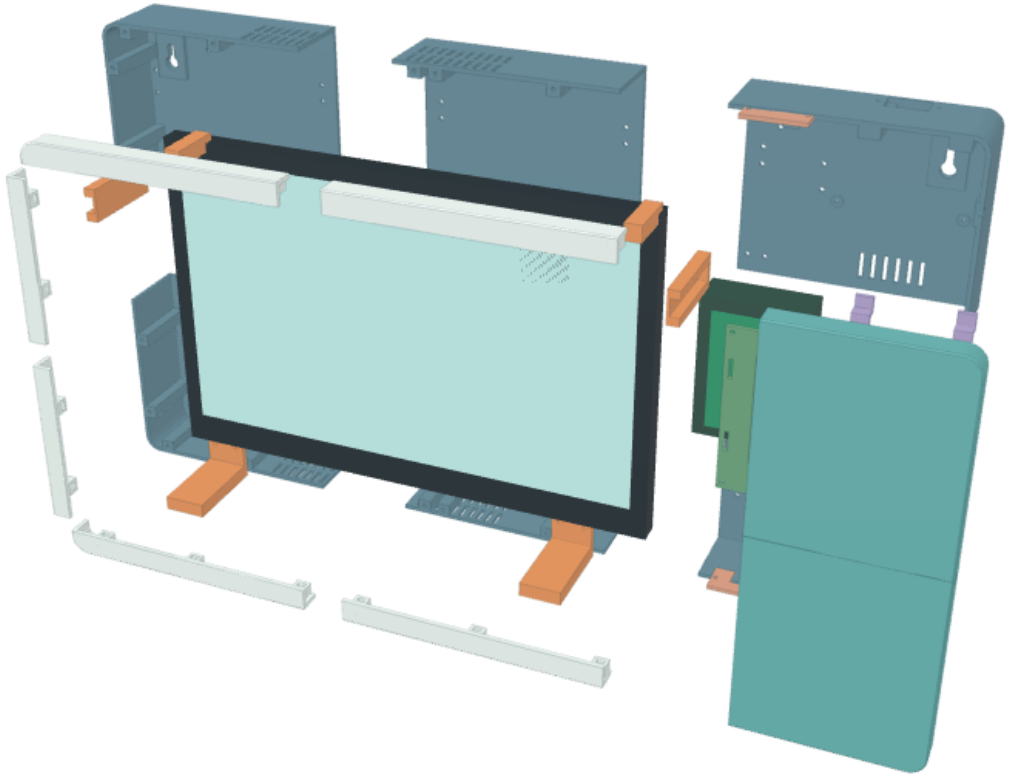

PULLED APART

1 **Open the HTML guide**

2 **Move the explode slider**

3 **Click a part or browse shapes**

Rotate: drag Zoom: scroll Find: Browse by shape Return: Reset view


Monitor on LEFT. Pi, plugs and removable service lid on RIGHT.

01 / Match the six rear panels

Front / screen side faces you. Top row = row 2; bottom row = row 1.


LEFT EDGE

RIGHT BAY / Pi SIDE

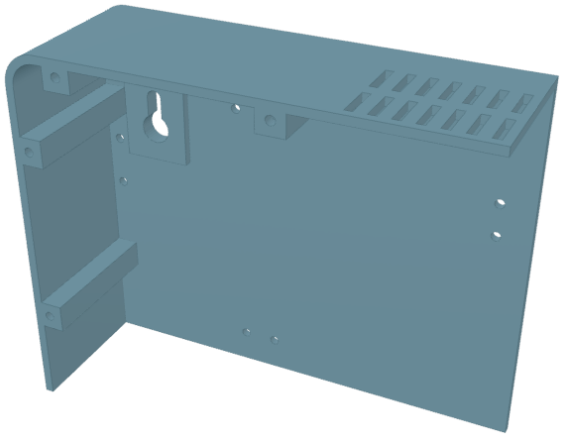


TOP LEFT

01-rear-2-1

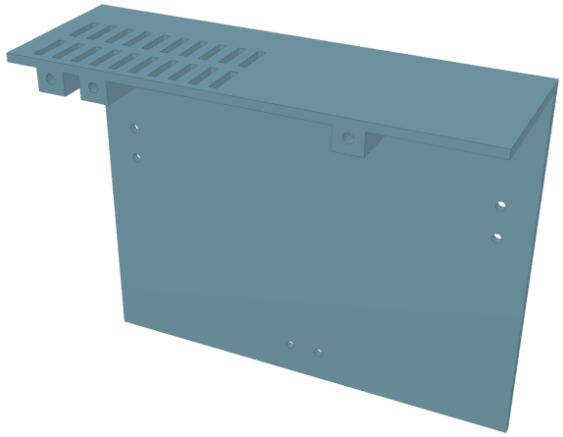


TOP MIDDLE

01-rear-2-2

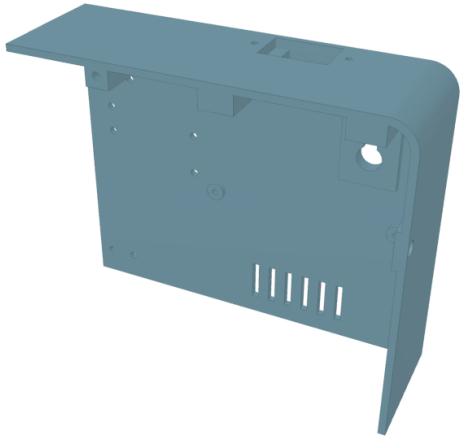


TOP RIGHT

01-rear-2-3

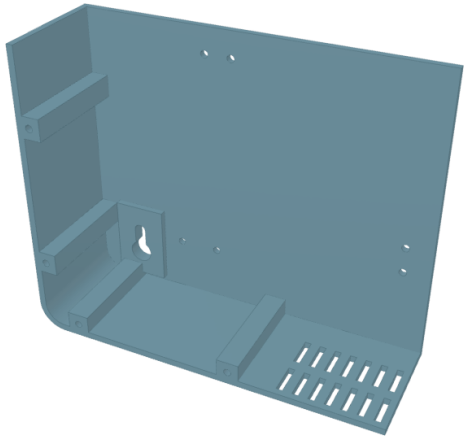


BOTTOM LEFT

01-rear-1-1

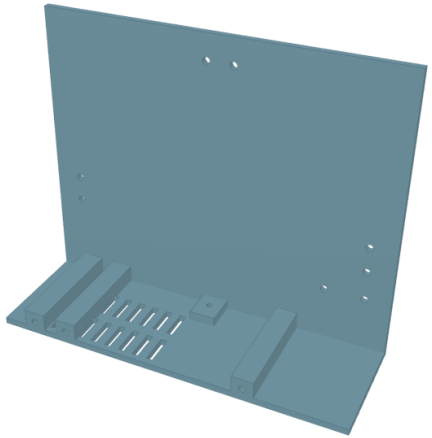

BOTTOM MIDDLE

01-rear-1-2

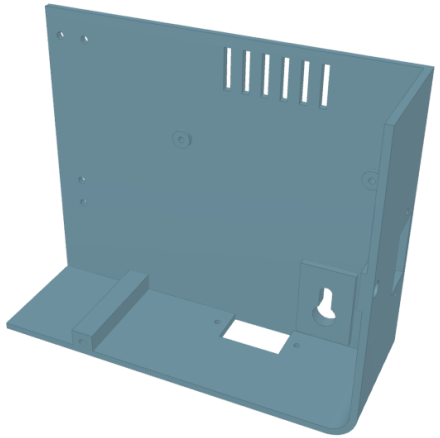



BOTTOM RIGHT

01-rear-1-3

02 / Join the seven seams

Gold = splice plates. Each plate uses FOUR M3 x 12 machine bolts and nuts.

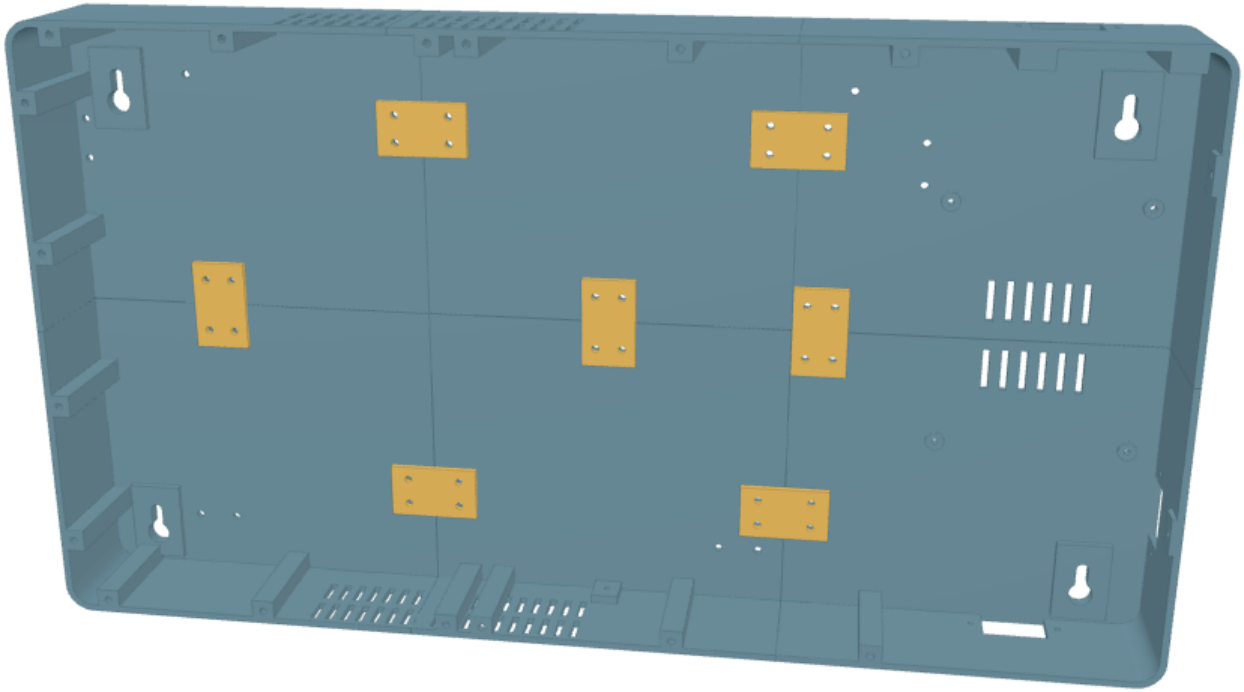


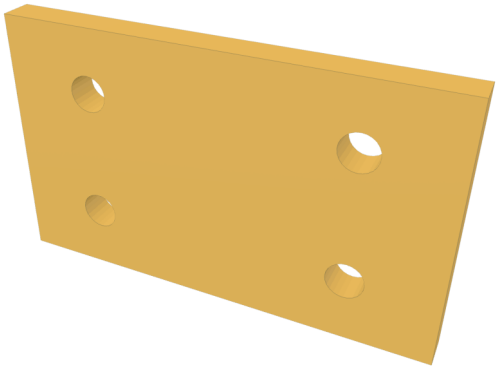

7 identical splice plates

02-chassis-splice

ONE JOINT - SIDE VIEW

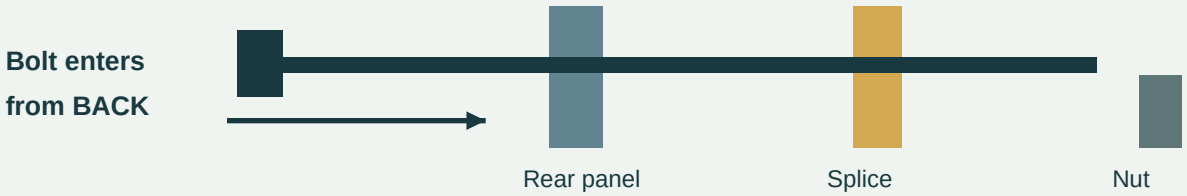


Nut on INSIDE


28 bolts + 28 nuts

Exploded screw diagram; not to scale. Washers may be used at splice/shoe joints.

03 / Fit the monitor supports


Orange parts touch the monitor HOUSING through soft pads. Keep pressure off the glass.

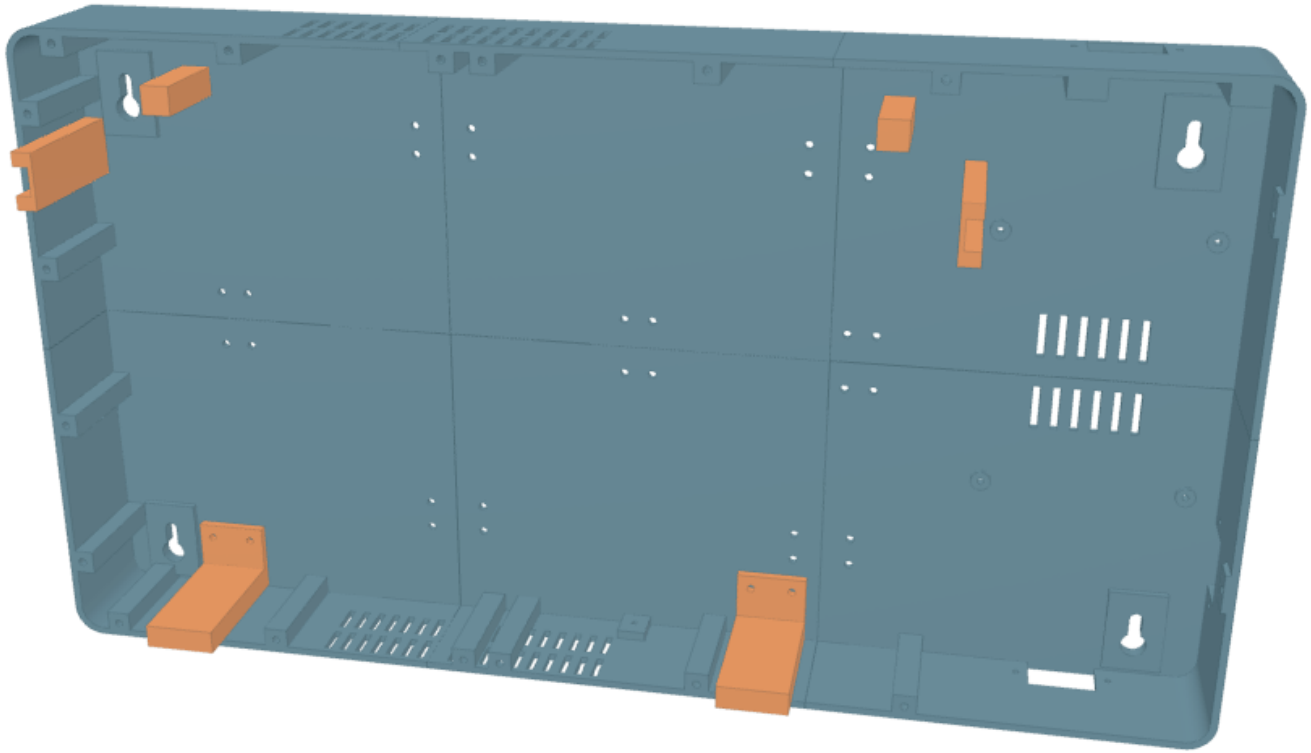

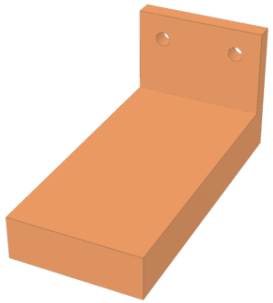


2 bottom shoes

03-monitor-bottom-shoe

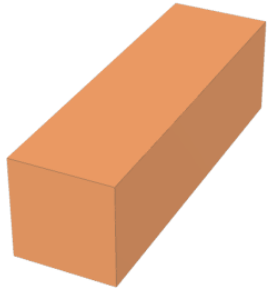


2 rear posts

04-monitor-rear-post

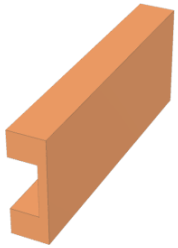

1 left side stop

04-monitor-side-stop-left

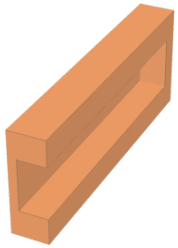

1 right side stop

04-monitor-side-stop-right

SHOES

4 x M3 x 12 + nuts


POSTS + SIDE STOPS

6 x M3 x 10 plastic screws

Shims: only where needed.

04 / Seat the screen. Fit the trim.

Six pale frame pieces hold the housing. The service bay stays open on the right.

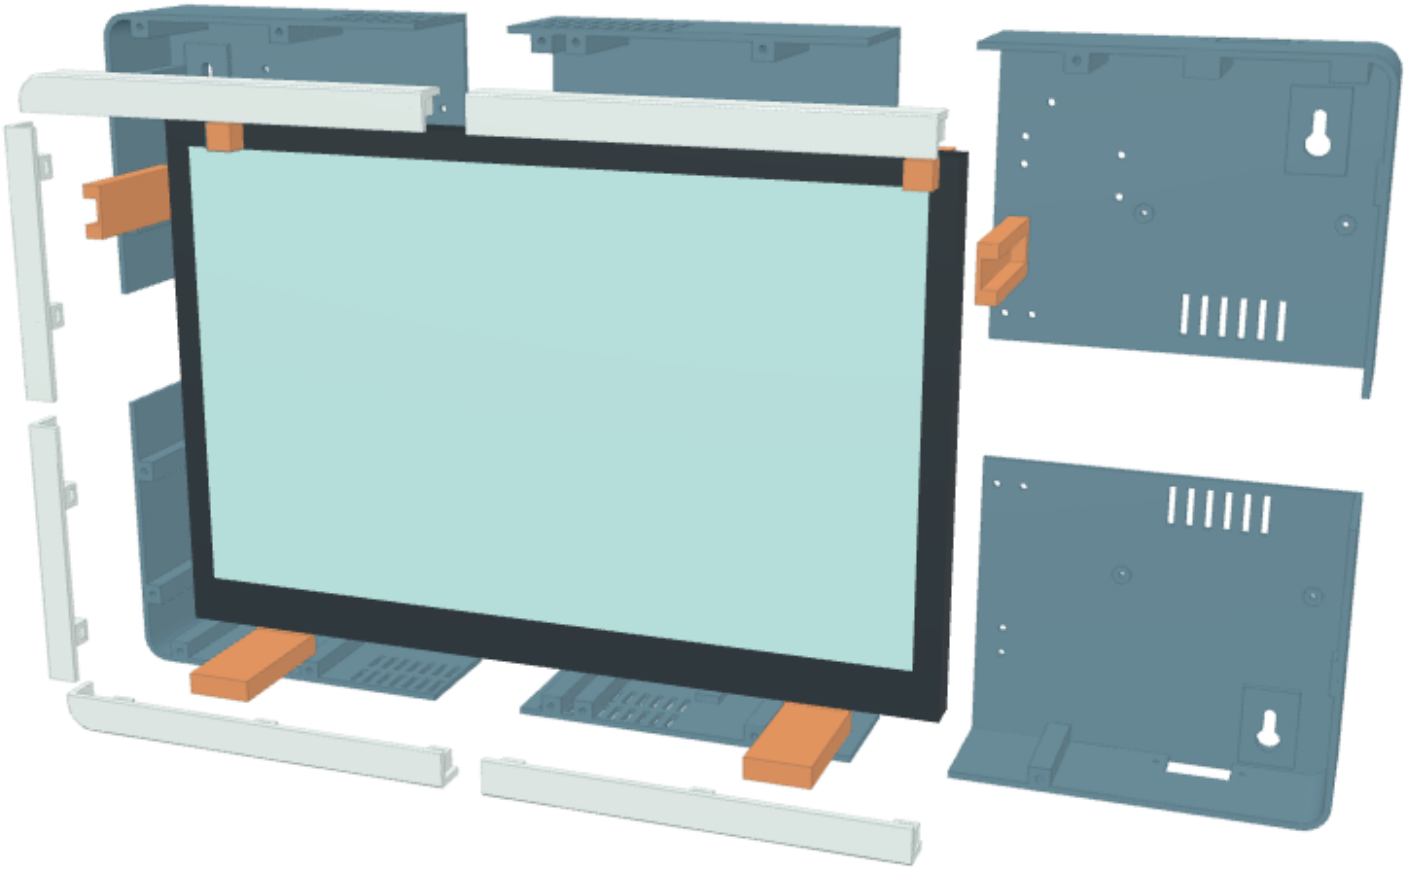

16 FRAME JOINTS

1 Load nuts

into trim pockets.

2 Seat monitor

onto padded supports.

3 Fit trim pieces


Bolts enter from BACK.

16 x M3 x 12 machine bolts + 16 captive nuts

Use the rear driver tunnels. Support the screen while tightening; do not force the glass.


05 / Mount the Pi in the right bay

The carrier is fixed from the FRONT. Leave the adjacent connector sides open.

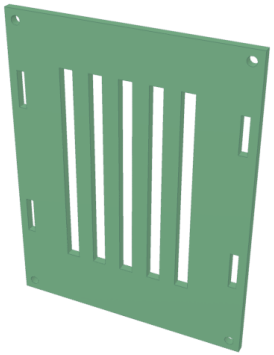

Open carrier

06-open-pi-carrier

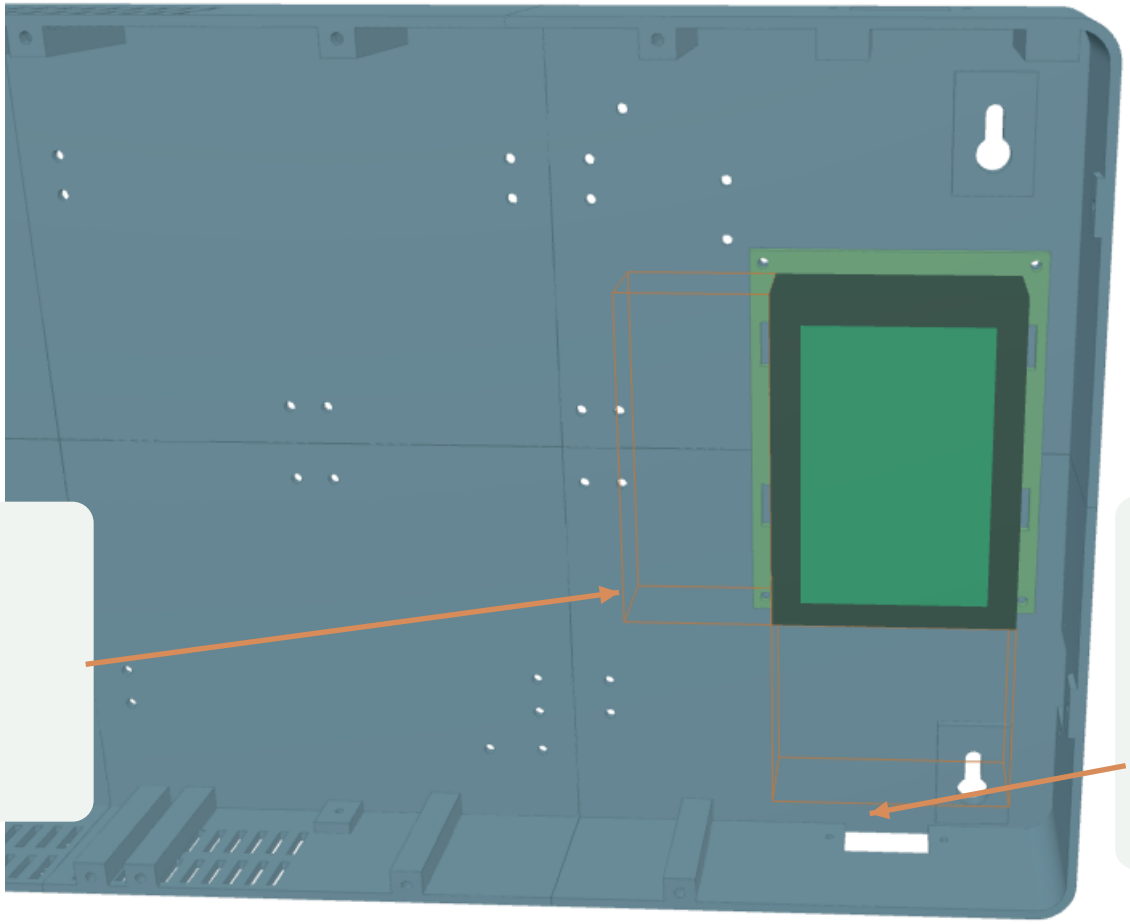

LEFT SIDE

USB-C power

HDMI adapter + audio

Leave room for plugs + bends.

BOTTOM EDGE

USB + Ethernet


Keep insertion path clear.


4 x M3 x 8 plastic screws hold the carrier.

Secure the case through its plastic ears/holes and carrier slots. Keep ties off the PCB.


06 / Build the removable service lid

Join the two cover halves into one lid; hooks and backing plates stay attached to it.

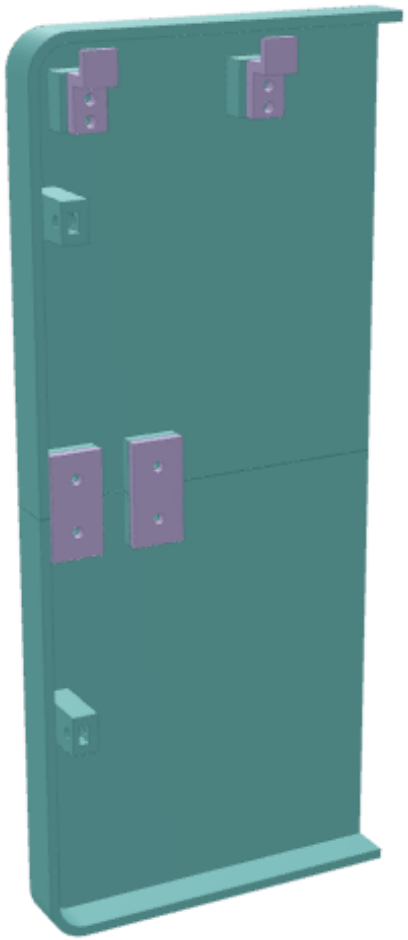

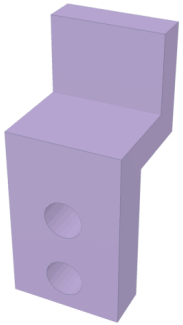

2 upper hooks
11-bay-cover-hook

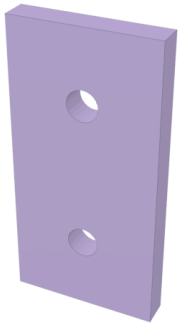

2 backing plates
11-bay-cover-splice

HOOKS: 4 x M3 x 10 plastic screws

SPLICES: 4 x M3 x 8 plastic screws

SIDE RETAINERS: load 2 captive M3 nuts.

INSTALL

Hold 8 mm LOW. Push back. Slide UP 8 mm.




Small forward take-up before sliding: approximately 0.25 mm.

REMOVE / SERVICE

Remove 2 RIGHT-side screws → **Slide DOWN 8 mm** → **Pull the lid forward**

07 / Wall mounting and hidden wiring


View from the BACK: left and right appear reversed. Preserve access to the right-side lid screws.

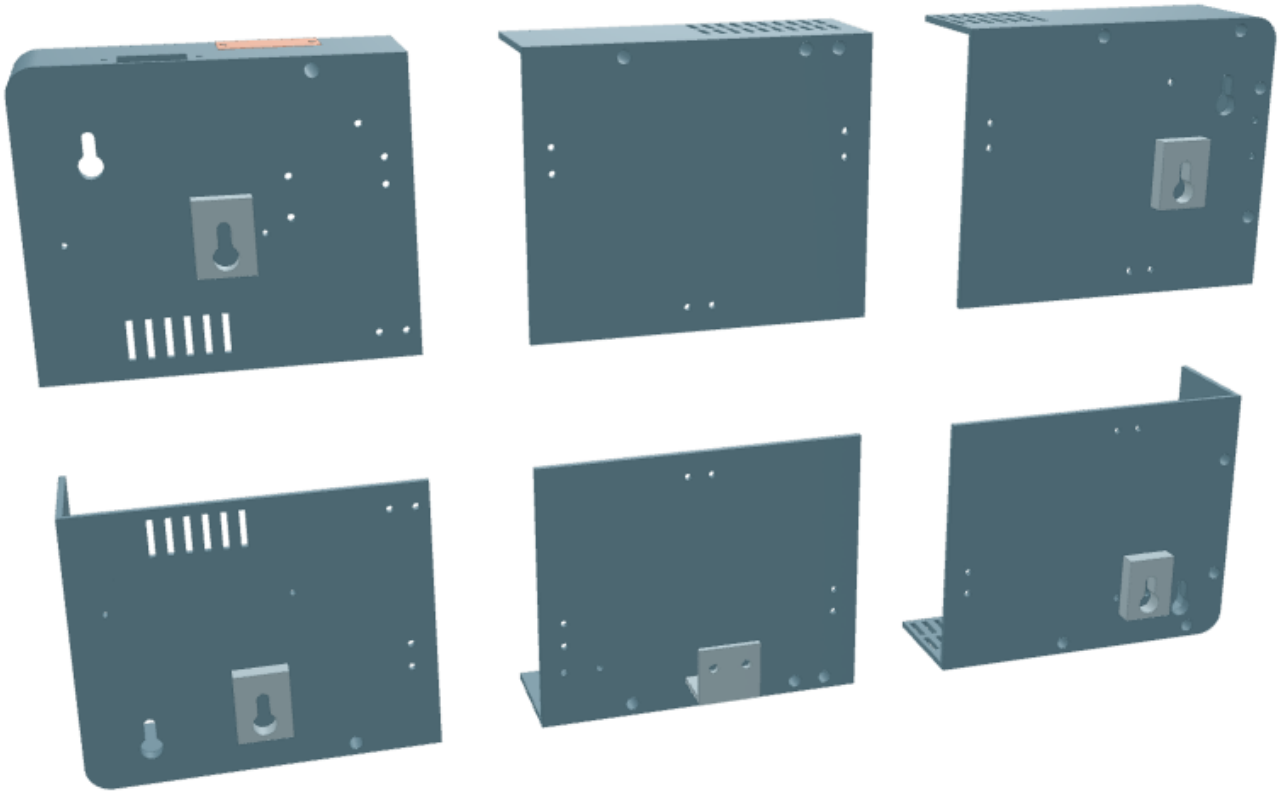



4 wall spacers

12-wall-spacer

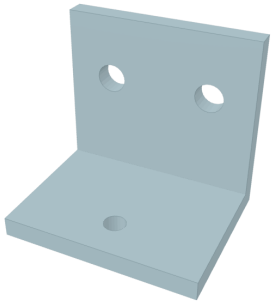

1 anti-lift bracket

12-wall-anti-lift-bracket

HANG

Fit spacers behind the 4 keyholes. Hang, then seat DOWN.


Fit the anti-lift bracket. Choose wall fixings for the wall and total load.

Cable route: 1 cable insert + 2 blank inserts; 6 x M3 x 8 plastic screws.

Before unmounting: release anti-lift screw, lift whole enclosure 12 mm, then pull forward.

FIND / Match your loose parts by shape

Exact saved meshes. Optional shims and cable-channel base are marked below.

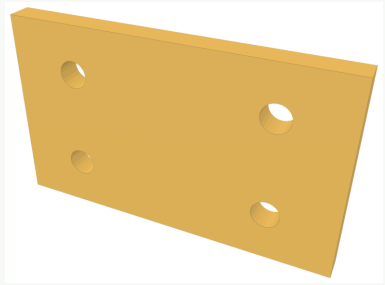

Chassis splice

02-chassis-splice


QTY 7



Monitor bottom shoe

03-monitor-bottom-shoe


QTY 2

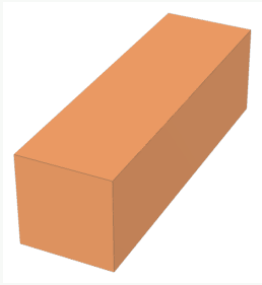

Monitor rear post

04-monitor-rear-post


QTY 2

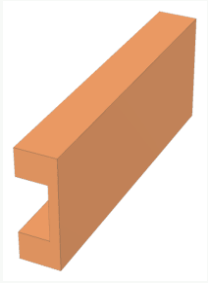

Monitor side stop left

04-monitor-side-stop-left


QTY 1

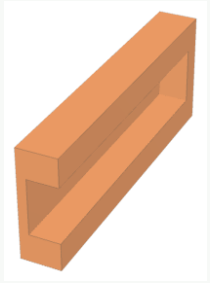

Monitor side stop right

04-monitor-side-stop-right


QTY 1

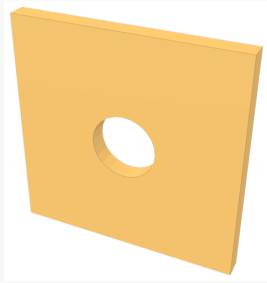

Rear shim 1mm

05-rear-shim-1mm


OPTIONAL

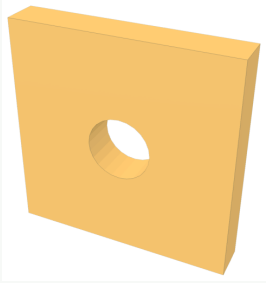

Rear shim 2mm

05-rear-shim-2mm


OPTIONAL

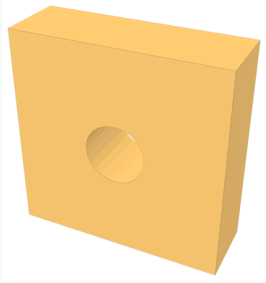

Rear shim 4mm

05-rear-shim-4mm

OPTIONAL

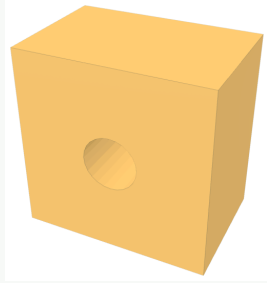


Rear shim 8mm

05-rear-shim-8mm


OPTIONAL

FIND / Match your loose parts by shape


Exact saved meshes. Optional shims and cable-channel base are marked below.

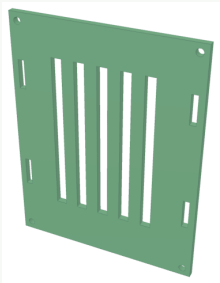


Open pi carrier
06-open-pi-carrier
QTY 1

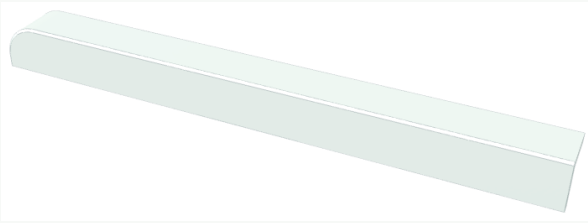


Front top left
07-front-top-left
QTY 1

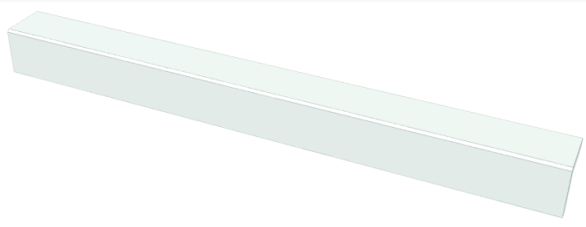


Front top right
07-front-top-right
QTY 1

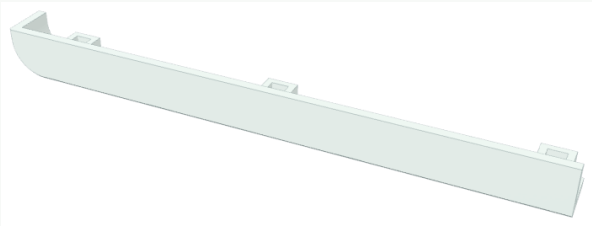


Front bottom left
08-front-bottom-left
QTY 1

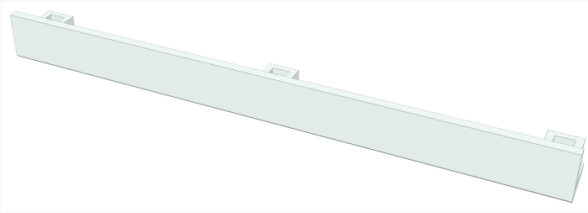

Front bottom right
08-front-bottom-right
QTY 1



Front left lower
09-front-left-lower
QTY 1



Front left upper
09-front-left-upper
QTY 1




Right bay cover 1
10-right-bay-cover-1
QTY 1



Right bay cover 2
10-right-bay-cover-2
QTY 1

FIND / Match your loose parts by shape


Exact saved meshes. Optional shims and cable-channel base are marked below.

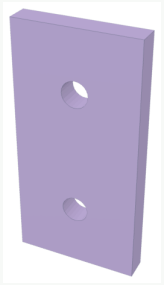

Bay cover splice

11-bay-cover-splice

QTY 2

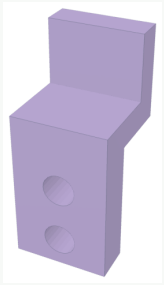

Bay cover hook

11-bay-cover-hook


QTY 2



Wall spacer

12-wall-spacer


QTY 4

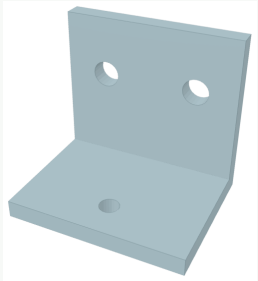

Wall anti lift bracket

12-wall-anti-lift-bracket


QTY 1

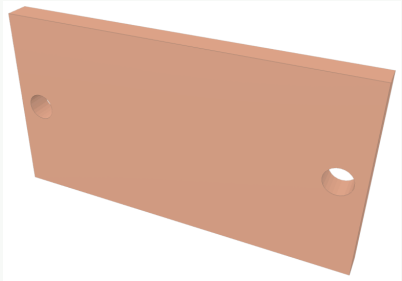

Exit blank

13-exit-blank


QTY 2

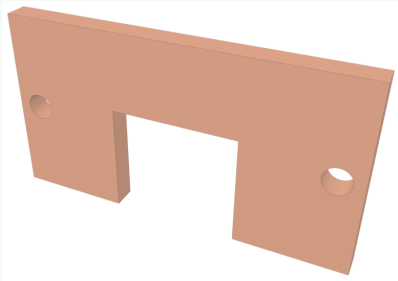

Exit cable

13-exit-cable

QTY 1



Wall cable channel

14-wall-cable-channel

OPTIONAL

Cable-channel cap is absent from the saved 3MF; it is not shown as a supplied piece.