


Geekcreit Sonoff 2 Channel Relay

Geekcreit "Sonoff" 2 Channel Relay

- Bare PCB version: <https://www.aliexpress.com/item/Sonoff-2CH-AC85-250V-Wireless-Switch-Timer-Smart-Wifi-Switch-Universal-Automation-Module-Remote-Control-for/32948157608.html>
- Version with enclosure: https://www.banggood.com/Geekcreit-2-Channel-AC-85V-250V-APP-Remote-Control-WIFI-Wireless-Switch-Socket-For-Smart-Home-p-1114958.html?rmmds=search&cur_warehouse=CN

The Geekcreit/"Sonoff" 2CH is based on the ESP8285 via the Itead PSF-B04. It is very similar to 4CH DIY, so this wiki page is based on [the page](#) for that device.

More info here: <https://github.com/arendst/Tasmota/issues/1970>

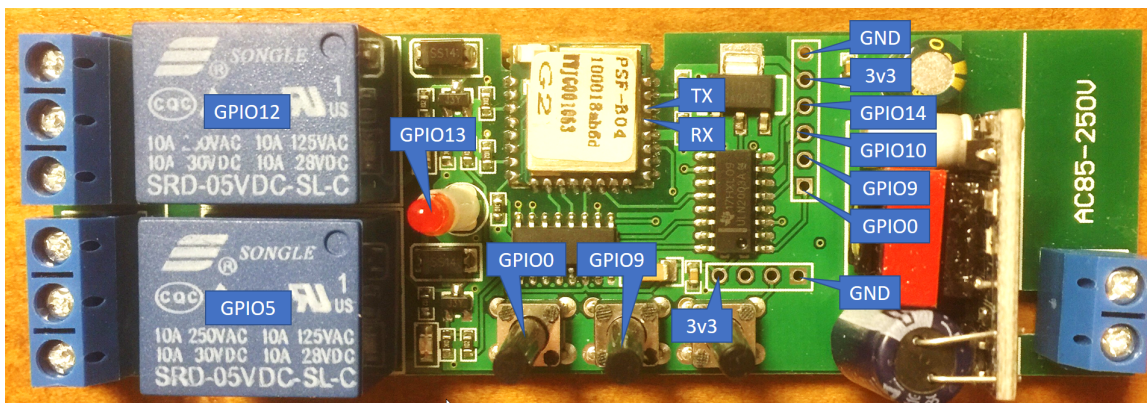

Serial Connection

Geekcreit/"Sonoff" 2CH

Please see the [Hardware Preparation](#) page for general instructions.

As always, you need to access the serial interface. The **four serial pins** (3V3, Rx, Tx, GND) can be seen in the picture. Unless you have a very steady hand soldering will be required for the TX and RX on the ESP chip.

Programming the Geekcreit/"Sonoff" 2CH is easy. The bottom left on-board-button is connected to GPIO0 and as with all ESP8266/ESP8285 modules pulling GPIO0 to GND is needed to put the chip in programming mode. You need to hold this button when booting the device for flashing.

Module parameters

Enable GPIO9 & GPIO10



Geekcreit/"Sonoff" 2CH SetOption51

To use GPIO9 and GPIO10 of the ESP8285, open the console and enter => "SetOption51 on".

Restart the module.

Assign inputs and outputs

**Note:* * The third button on this device is not connected to a GPIO. Instead it is used to cycle through some relay modes that are supported by the two external ICs. Only one of these modes works with Tasmota, so it is necessary to continue to press this button 3 until the relays can be controlled from the toggle buttons in the Tasmota web UI.

Generic Module

Sonoff2CH

Module parameters

Module type (Sonoff Basic)

Generic (18) ▼

D3 GPIO0 Button1	Button1 (17) ▼
TX GPIO1 Serial Out	None (00) ▼
D4 GPIO2	None (00) ▼
RX GPIO3 Serial In	None (00) ▼
D2 GPIO4	None (00) ▼
D1 GPIO5	Relay2 (22) ▼
FL GPIO9 ESP8285	Button2 (18) ▼
FL GPIO10 ESP8285	None (00) ▼
D6 GPIO12 Relay1	Relay1 (21) ▼
D7 GPIO13 Led1i	Led1 (52) ▼
D5 GPIO14 Sensor	None (00) ▼
D8 GPIO15	None (00) ▼
D0 GPIO16	None (00) ▼

Save

Module Type => Generic (18)

- GPIO 1 => Button 1 (17)
- GPIO 9 => Button 2 (18)
- GPIO 10 => Button 3 (19)
- GPIO 14 => Button 4 (20)
- GPIO 12 => relay 1 (21)

- GPIO 5 => relay 2 (22)
- GPIO 13 => LED 1(52)

Restart the module.