



|       |                   |
|-------|-------------------|
| (A)X1 | (H)X1             |
| (B)X1 | (I)X4<br>M6*30mm  |
| (C)X4 | (J)X4<br>M6*45mm  |
| (D)X1 | (K)X4             |
| (E)X1 | (L)X12<br>M6*20mm |
| (F)X1 | (M)X12<br>M6*22mm |
|       | (N)X1             |


1

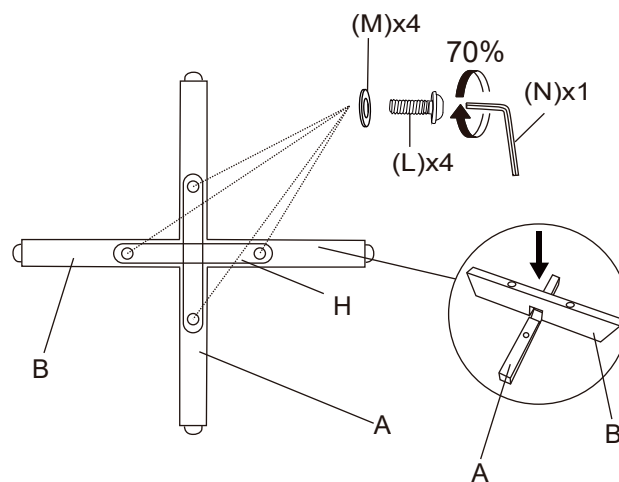

2

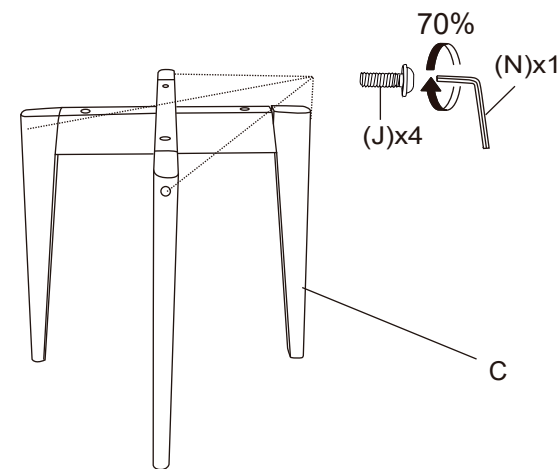

3

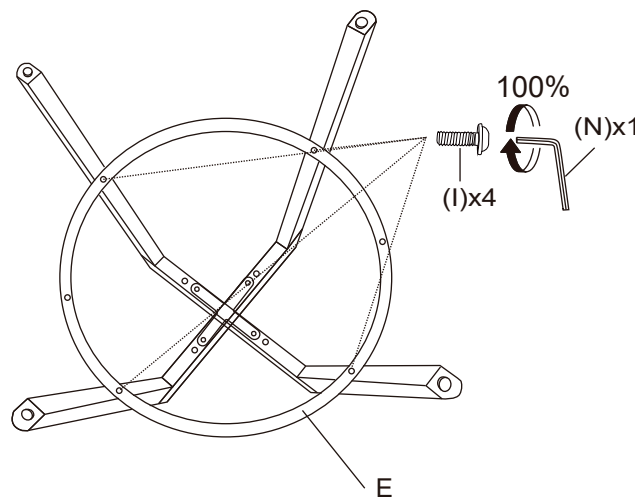


4 For this step, Please tighten all the screws in the first and second step to 100%. Then proceed to the next step of the operation.

Before you begin:


1. Check if you have received all parts using the diagram on the left. Do not start the assembly process until all parts are present. If you have not received all parts or received wrong or damaged ones, please contact us and we will get back to you.

2. Do not discard any of the packaging until you are certain that you have all the necessary parts for the assembly.


5

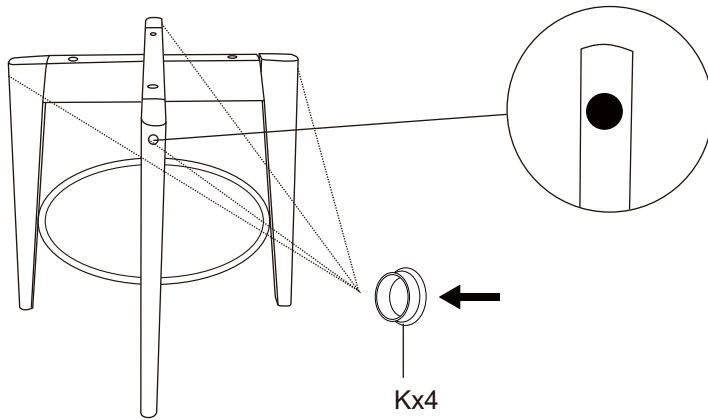


6

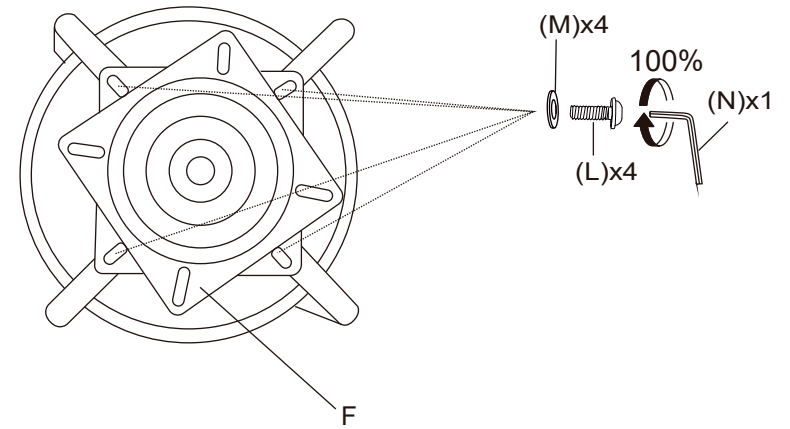

7

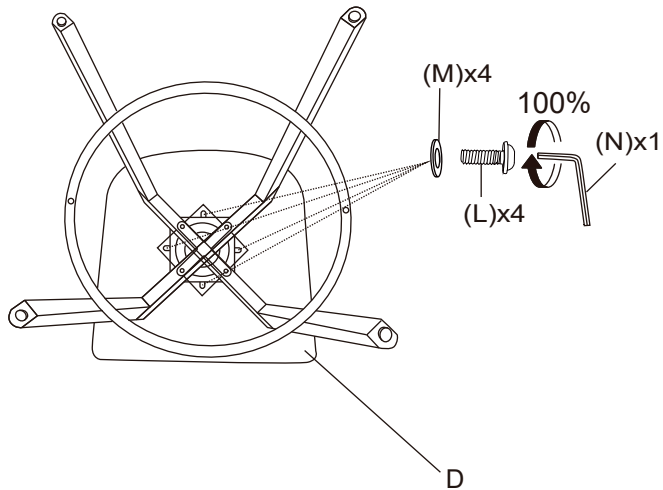

8 DONE

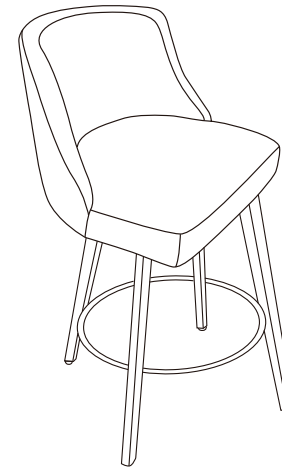

## QUESTIONS? CONTACT US:

Email: [customerservice@hkfoam.com](mailto:customerservice@hkfoam.com)

If in any case, you are not 100% happy with the item received, would you please contact us first and give us a chance to make it right for you? All of our products are covered by warranty and we will do our best to address any of your concerns. We are dedicated to your 100% satisfaction with your order.