



92-97 OBS FORD BUMPER BAJA DESIGNS S2 LIGHT BRACKET INSTALL GUIDE

Disclaimer: These brackets are designed to fit Baja Designs S2 Lights specifically. Brackets and lighting are intended for offroad use only.

Parts Included:

- Left & Right Bumper Bracket
- (4) 5/16x1 Bolt
- (4) 5/16 Lock Washer
- (4) 5/16 SAE Washer
- (4) Nut Clips

Optional Parts:

- Baja Designs S2 lights w/ wire harness

Recommended Tools:


- 1/2" Wrench or Socket
- 9/16" Wrenches or Sockets
- 21mm Wrench or Socket
- M4 or 5/32 Allen Wrench



These brackets are side specific and can be installed without removal of the bumper, but some customers with a diesel motor with a large intercooler may find it easier to mount and adjust the lights with the bumper removed. If this is the case for you, use a 21mm socket or wrench to remove the (4) nuts attaching the stock bumper to the frame. An extra pair of hands will make this easier.

On the back side of the bumper, you will see a 7/16" sized hole about 2 1/2" inbound from the stock bumper mount. They are on the upper and lower lip of the bumper. These holes are where we are going to snap in our nut clips to attach the brackets.

Make sure that the threaded nut side is on the inside of the bumper when sliding into place. It should look like the two middle photos. Do this for all 4 holes.


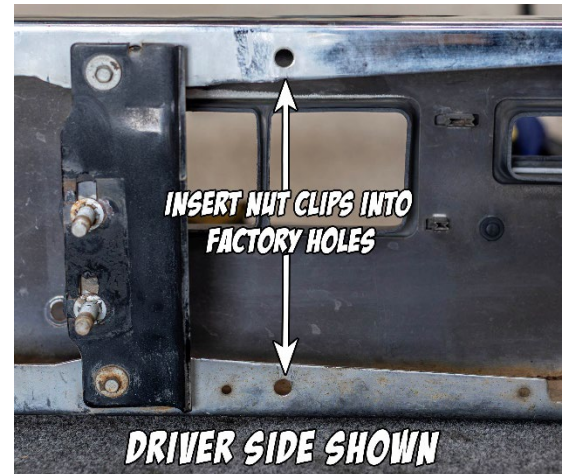


Prepare your S2 lights by first inserting the 3/8 bolt with washer into the adjustable mount then install it ***opposite to the Baja Designs instructions***. Reference photo to the right, it should look like the light is leaning forward. Once lights are assembled, attach them to the Desolate brackets using the 3/8 hardware and nylock included with the S2 lights.




**MOUNT BRACKET OPPOSITE OF
BAJA DESIGNS INSTRUCTIONS**

Use the supplied 5/16" hardware and a 1/2" wrench to attach the Desolate brackets on the bumper. Follow the order of washer placement pictured below.

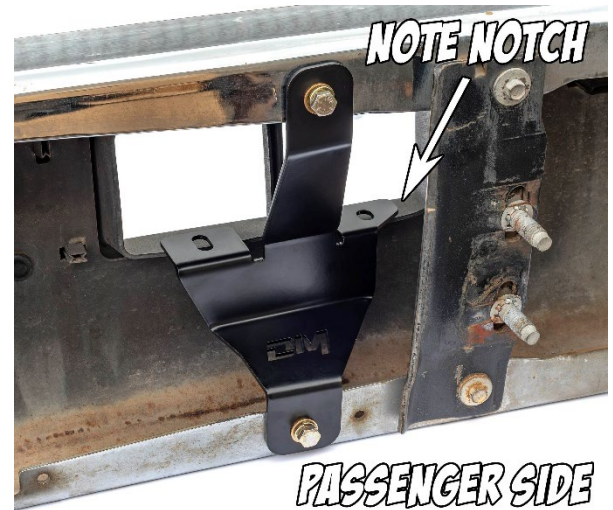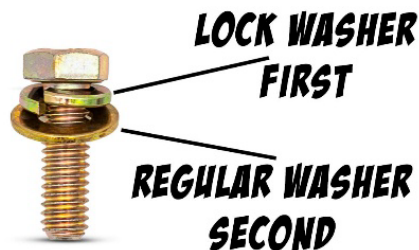

If your vehicle has a splash guard, you may need to trim the sides to clear the new bracket. That's it! Finish your installation by following the guide provided by Baja Designs to wire in your lights

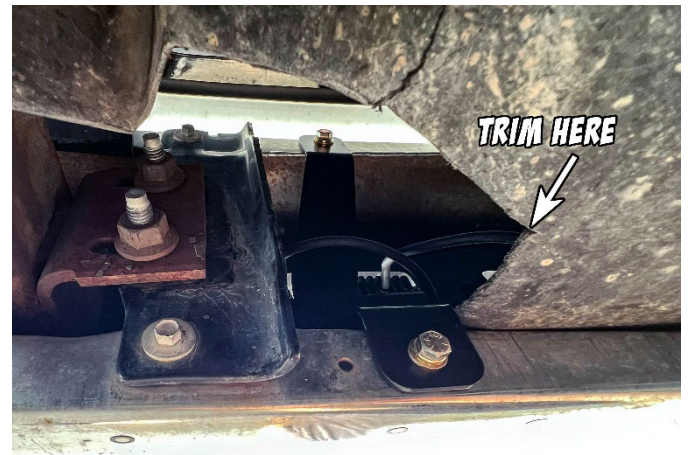

PHONE: 562-698-1460

EMAIL: SALES@DESOLATEMOTORSPORTS.COM

WEB: WWW.DESOLATEMOTORSPORTS.COM