SOP 6

Fire and emergency

When: Any flame that does not go out, smoke, water leak or injury. Read it before you first use the laser, and practice it.

Time: Seconds count **Who:** Everyone in the workshop

You need: CO2 extinguisher at the laser (5 lb, B:C) | Fire blanket | Phone | Smoke alarm | First aid kit

Flame in the laser

1



Press Pause or Stop.

This stops the beam. If the air assist keeps blowing, switch it off.

- Do not open the lid.

2




Keep the lid shut.

Without fresh air most small flames die out in seconds.

- Watch through the window.

3

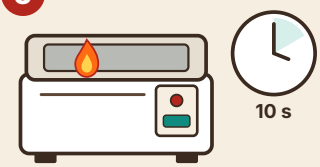


Still burning after 10 seconds, or growing?

Switch off the laser at the power switch. Get the extinguisher. (10 s is an Estimate.)

- Exhaust stays on only if smoke is going outside.

4

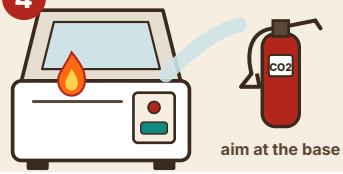


Use the CO2 extinguisher.

Pull the pin. Open the lid a little. Aim at the base of the flame. Squeeze in short bursts.

- CO2 leaves no powder in the machine.

5

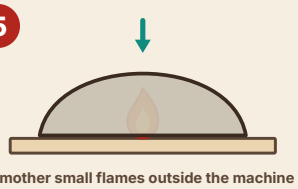


A burning sheet outside the machine?

Lay the fire blanket over it. Leave it until it is cold.

- Never carry a burning sheet.

6

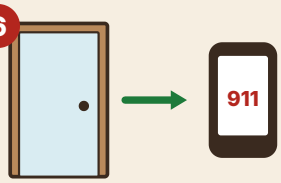


Cannot stop it? Get out.

Close the door behind you. Call 911 from outside. Do not go back in.

- Your safety first. The laser can be replaced.

7

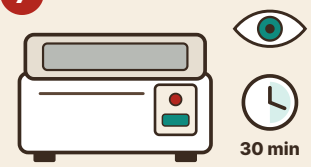

After any flame: watch for 30 minutes.

Embers can relight. Check the lens and bed before the next job.

- Log it on the Quality tab and find the cause.

Prevent it

- Never leave the laser running.
- Empty the crumb tray every day. Keep paper and scraps away.
- Check the air assist before every job. Dirty optics and slow speeds cause flare-ups.

Other emergencies

8




Water leak or a water alarm.

Switch off the laser. Never run the tube without cooling water. Mop up, then check the hoses.

- Run again only when the loop is full and clear.

9

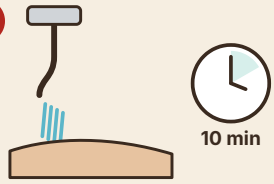

Small burn on the skin.

Cool (not cold) running water for about 10 minutes (Mayo Clinic). Large or blistered burns: get medical help.

- Restock the first aid kit.

10



Fill in the call card. Tape it here.

Workshop address for 911: TODO_LUCAS. Nearest urgent care: TODO_LUCAS. OMTech support: TODO_LUCAS.

- Everyone knows where the card is.

Hartwood Designs, SOP-6, Rev A, 2026-10-12. Times and settings marked Estimate are planning numbers until measured on the real machine. Machine details follow the OMTech manual when it differs from this sheet.