

Cutting guide: balcony screen benches

4-board bench, 41 lengths of timber, every piece drawn to scale on the pages that follow.

What to buy

17 x 90 x 45 H3 treated pine, 2.4 m

14 x 90 x 22 H3 decking, 2.4 m

10 x 42 x 19 merbau screening, 2.7 m

Pieces by mark

A 10 x 1810 mm 90 x 45

Screen post / rear bench leg

B 1 x 810 mm 90 x 45

Lattice rail (top)

C 4 x 510 mm 90 x 45

Lattice rail (top)

D 12 x 468 mm 90 x 45

Front bench leg / Rear bench leg (mid frame)

E 24 x 465 mm 90 x 45

Bench top bearer / Lower shelf bearer

F 7 x 900 mm 90 x 22

Bench top board / Lower shelf board

G 1 x 810 mm 90 x 22

Lattice rail (mid)

H 28 x 600 mm 90 x 22

Bench top board / Lower shelf board

I 12 x 510 mm 90 x 22

Lower shelf board / Lattice rail (bot) / Lattice rail (mid)

J 4 x 382 mm 90 x 22

Lower shelf board / Lattice rail (bot)

K 10 x 1800 mm 42 x 19

Vertical cover strip (wall side)

L 1 x 816 mm 42 x 19

Horizontal cover strip (top, wall side)


M 4 x 516 mm 42 x 19

Horizontal cover strip (top, wall side)

Tip: set a stop block for the repeat lengths (bearers, legs, boards) and cut all of one mark in a batch. Seal every cut end as you go.

90 x 45 H3 treated pine: 17 x 2.4 m (page 1 of 2)

Measure from the squared end. 5 mm squaring trim at the start, 3 mm saw kerf between pieces. Cut the longest piece first and pencil its mark on it.

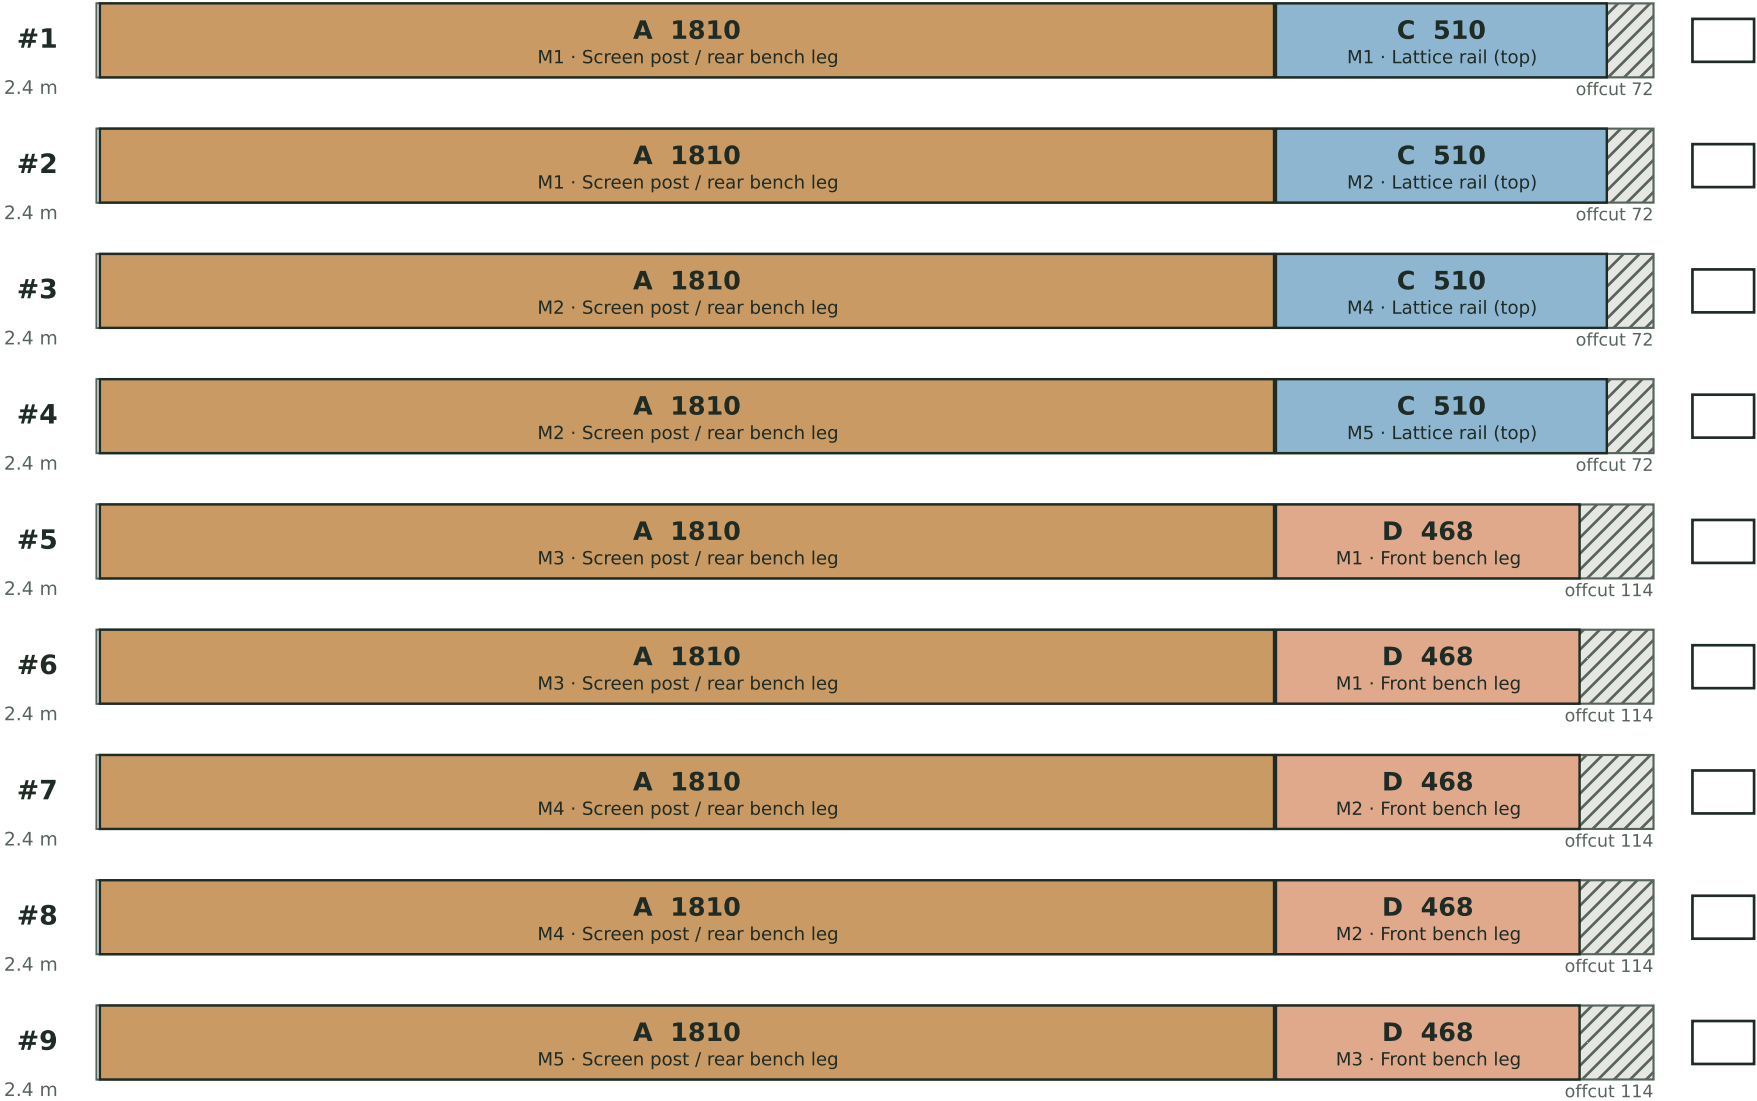

90 x 45 H3 treated pine: 17 x 2.4 m (page 2 of 2)


Measure from the squared end. 5 mm squaring trim at the start, 3 mm saw kerf between pieces. Cut the longest piece first and pencil its mark on it.

#10	A 1810 M5 · Screen post / rear bench leg				D 468 M3 · Rear bench leg (mid frame)	offcut 114	
#11	B 810 M3 · Lattice rail (top)	D 468 M3 · Front bench leg	D 468 M3 · Front bench leg	D 468 M4 · Front bench leg	offcut 172		
#12	D 468 M4 · Front bench leg	D 468 M5 · Front bench leg	D 468 M5 · Front bench leg	E 465 M1 · Bench top bearer	E 465 M1 · Lower shelf bearer	offcut 49	
#13	E 465 M1 · Bench top bearer	E 465 M1 · Lower shelf bearer	E 465 M2 · Bench top bearer	E 465 M2 · Lower shelf bearer	E 465 M2 · Bench top bearer	offcut 58	
#14	E 465 M2 · Lower shelf bearer	E 465 M3 · Bench top bearer	E 465 M3 · Lower shelf bearer	E 465 M3 · Bench top bearer	E 465 M3 · Lower shelf bearer	offcut 58	
#15	E 465 M3 · Bench top bearer	E 465 M3 · Lower shelf bearer	E 465 M3 · Bench top bearer	E 465 M3 · Lower shelf bearer	E 465 M4 · Bench top bearer	offcut 58	
#16	E 465 M4 · Lower shelf bearer	E 465 M4 · Bench top bearer	E 465 M4 · Lower shelf bearer	E 465 M5 · Bench top bearer	E 465 M5 · Lower shelf bearer	offcut 58	
#17	E 465 M5 · Bench top bearer	E 465 M5 · Lower shelf bearer	offcut 1462				

A 1810 mm
 D 468 mm
 B 810 mm
 E 465 mm

90 x 22 H3 decking: 14 x 2.4 m (page 1 of 2)

Measure from the squared end. 5 mm squaring trim at the start, 3 mm saw kerf between pieces. Cut the longest piece first and pencil its mark on it.

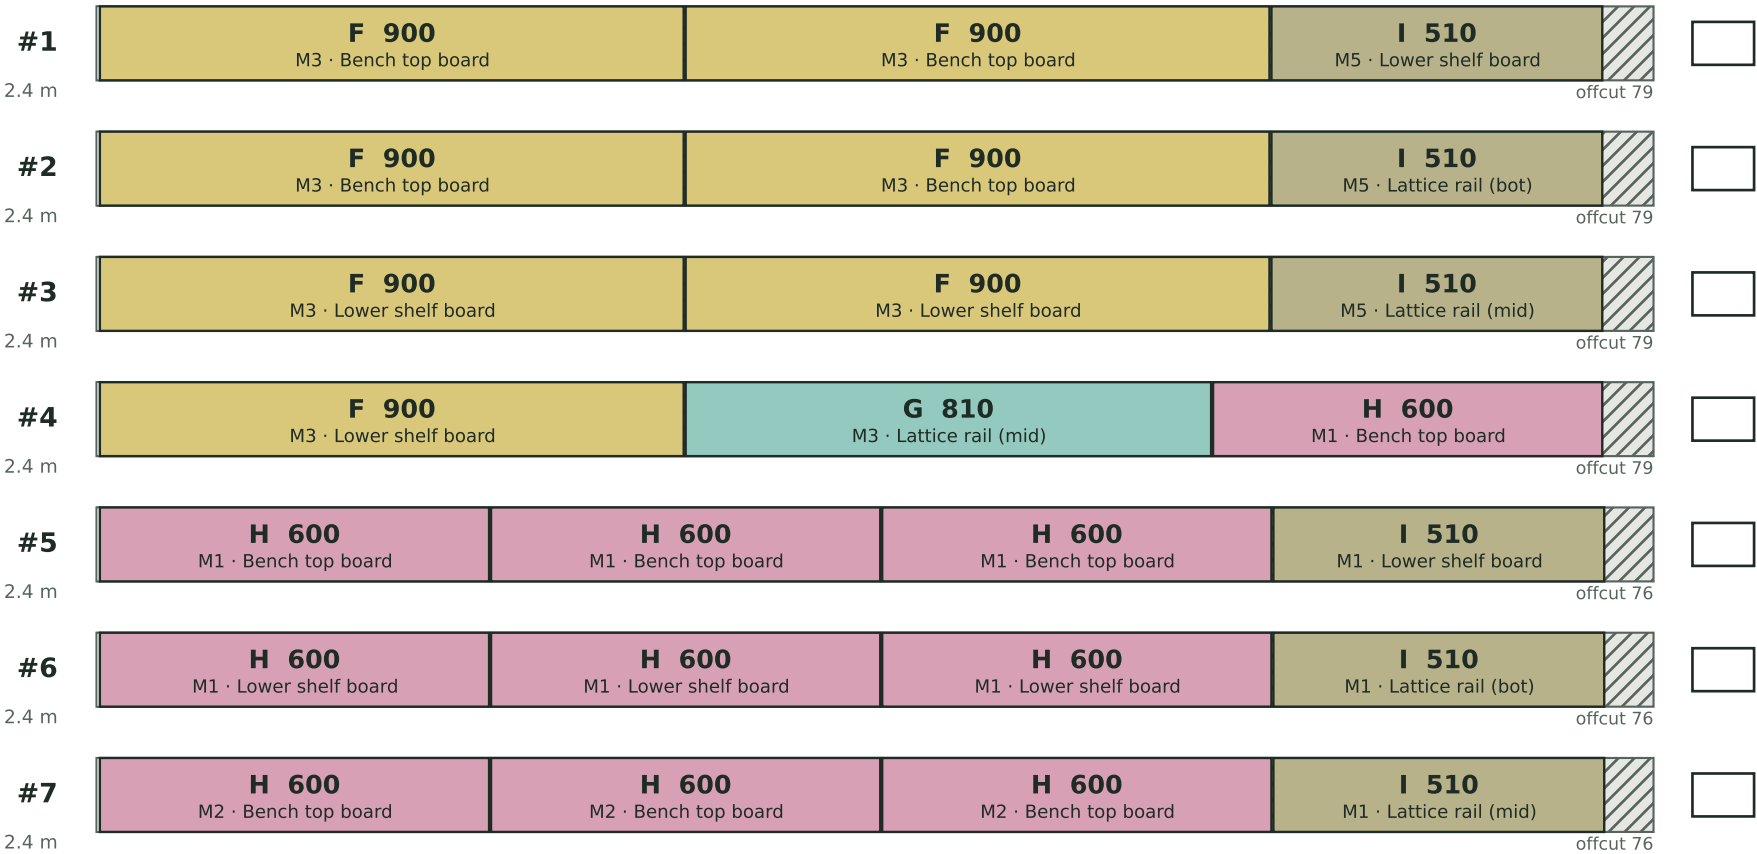

F 900 mm


I 510 mm

G 810 mm

H 600 mm


90 x 22 H3 decking: 14 x 2.4 m (page 2 of 2)

Measure from the squared end. 5 mm squaring trim at the start, 3 mm saw kerf between pieces. Cut the longest piece first and pencil its mark on it.

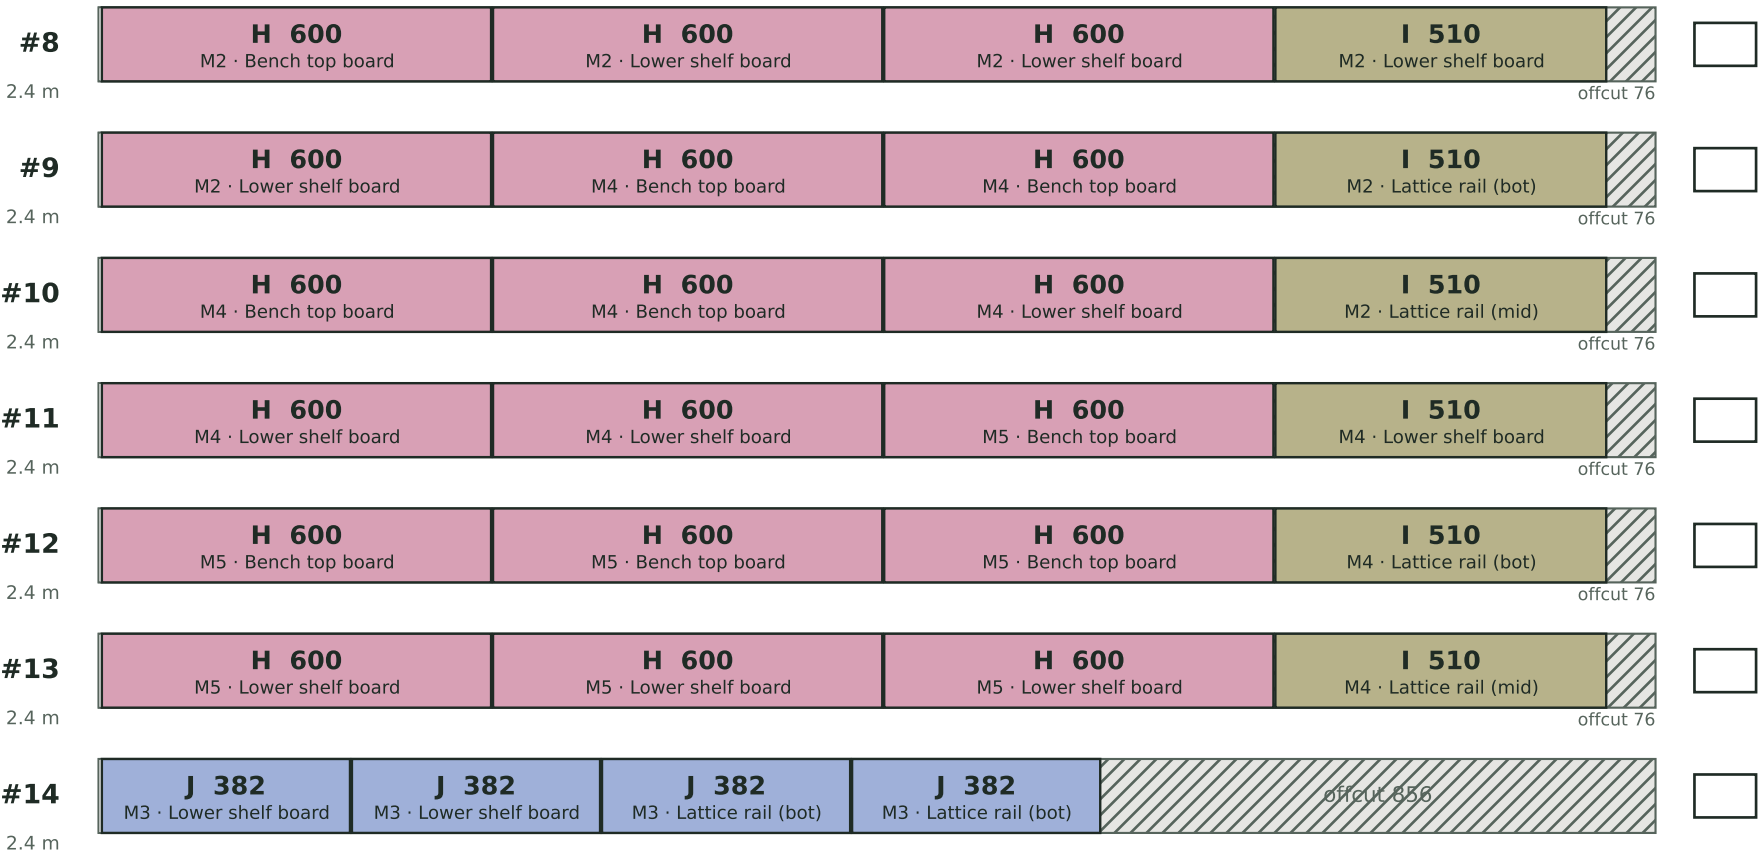

42 x 19 merbau screening: 10 x 2.7 m (page 1 of 2)

Measure from the squared end. 5 mm squaring trim at the start, 3 mm saw kerf between pieces. Cut the longest piece first and pencil its mark on it.

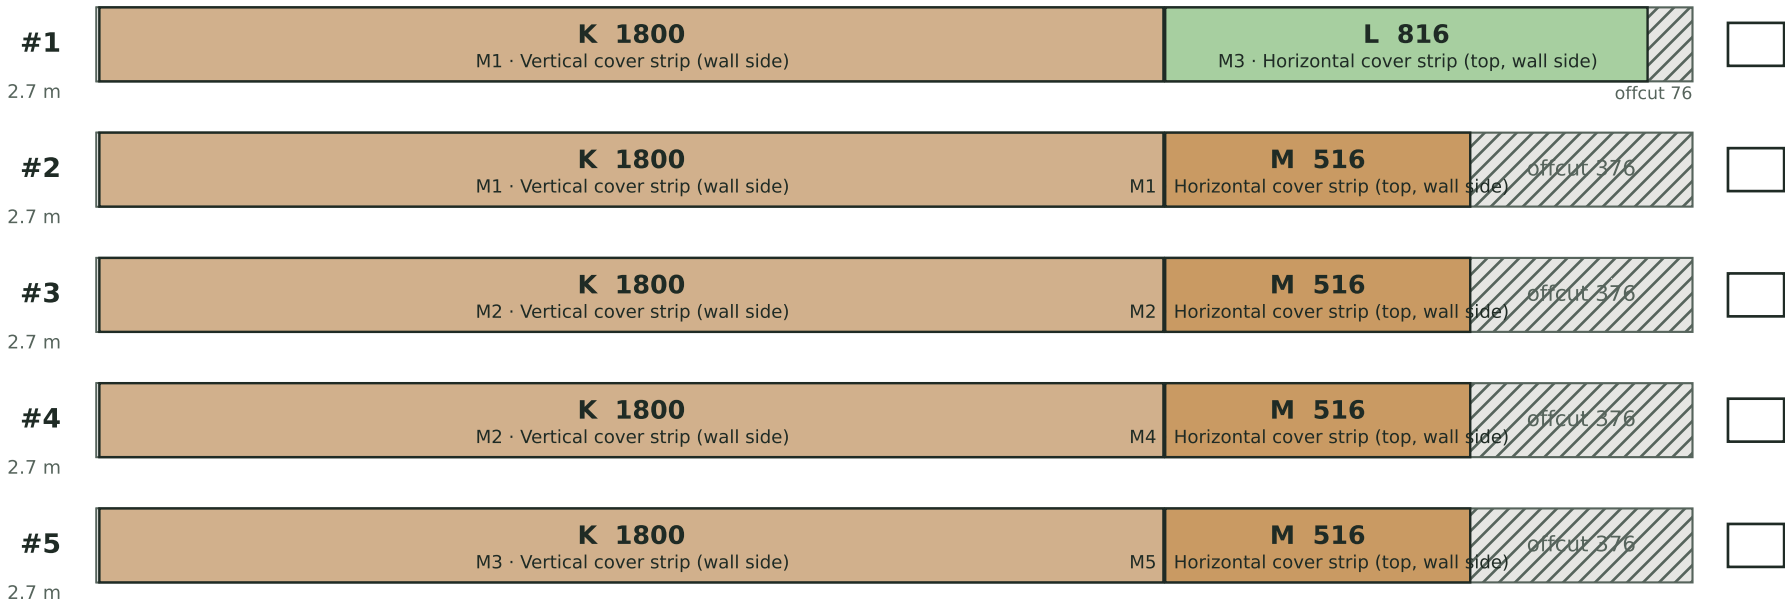

42 x 19 merbau screening: 10 x 2.7 m (page 2 of 2)

Measure from the squared end. 5 mm squaring trim at the start, 3 mm saw kerf between pieces. Cut the longest piece first and pencil its mark on it.

