

This International Student Edition is for use outside of the U.S.



Ninth Edition

# Introduction to **FLIGHT**

John D. Anderson, Jr.  
Mary L. Bowden

The McGraw Hill logo, consisting of the company name in white text on a red rectangular background.

# Introduction to Flight

page i

Ninth Edition

**John D. Anderson, Jr.**

*Curator for Aerodynamics,  
National Air and Space  
Museum                    Smithsonian  
Institution; Professor Emeritus  
University of Maryland*

**Mary L. Bowden**

*Senior Lecturer, University of  
Maryland                    Aerospace  
Engineering*





## INTRODUCTION TO FLIGHT

Published by McGraw Hill LLC, 1325 Avenue of the Americas, New York, NY 10121. Copyright ©2022 by McGraw Hill LLC. All rights reserved. Printed in the United States of America. No part of this publication may be reproduced or distributed in any form or by any means, or stored in a database or retrieval system, without the prior written consent of McGraw Hill LLC, including, but not limited to, in any network or other electronic storage or transmission, or broadcast for distance learning.

Some ancillaries, including electronic and print components, may not be available to customers outside the United States.

This book is printed on acid-free paper.

1 2 3 4 5 6 7 8 9 LCR 26 25 24 23 22 21

ISBN 978-1-260-59799-8

MHID 1-260-59799-7

Cover Image: *Air Force Photo/NASA*

All credits appearing on page or at the end of the book are considered to be an extension of the copyright page.

The Internet addresses listed in the text were accurate at the time of publication. The inclusion of a website does not indicate an endorsement by the authors or McGraw Hill LLC, and McGraw Hill LLC does not guarantee the accuracy of the information presented at these sites.

[mheducation.com/highered](http://mheducation.com/highered)

## ABOUT THE AUTHORS

---

page iii



*Courtesy of John Anderson*

**John D. Anderson, Jr.**, was born in Lancaster, Pennsylvania, on October 1, 1937. He attended the University of Florida, graduating in 1959 with high honors and a Bachelor of Aeronautical Engineering degree. From 1959 to 1962 he was a lieutenant and task scientist at the Aerospace Research Laboratory at Wright-Patterson Air Force Base. From 1962 to 1966 he attended The Ohio State University under National Science Foundation and NASA Fellowships, graduating with a PhD in Aeronautical and Astronautical Engineering. In 1966 he joined the U.S. Naval Ordnance Laboratory as Chief of the Hypersonic Group. In 1973 he became Chairman of the Department of Aerospace Engineering at the University of Maryland, and from 1980 to his retirement in 1999 he was Professor of Aerospace Engineering at Maryland. In 1982 he was designated a Distinguished Scholar/Teacher by the university. During 1986–1987, while on sabbatical from the university, Dr. Anderson occupied the Charles Lindbergh Chair at the National Air and Space Museum of the Smithsonian Institution. In addition to his appointment in aerospace engineering, in 1993 he was elected to the faculty of the Committee on the History and Philosophy of Science at Maryland, and an affiliate faculty member in the Department of History. Since 1999, he is Professor Emeritus of Aerospace Engineering, and Glenn L. Martin Institute Professor of Engineering at Maryland. Also since 1999, he is the

Curator of Aerodynamics at the National Air and Space Museum of the Smithsonian Institution.

Dr. Anderson has published eleven books: *Gasdynamic Lasers: An Introduction*, Academic Press (1976), *A History of Aerodynamics and Its Impact on Flying Machines*, Cambridge University Press (1997), *The Airplane: A History of Its Technology*, American Institute of Aeronautics and Astronautics (2003), *Inventing Flight*, Johns Hopkins University Press (2004), *X-15: The World's Fastest Rocket Plane and the Pilots Who Ushered in the Space Age* (with Richard Passman), Zenith Press (2014), and with McGraw-Hill, *Introduction to Flight*, 8th edition (2016), *Modern Compressible Flow*, 3rd Edition (2003), *Fundamentals of Aerodynamics*, 5th edition (2011), *Hypersonic and High Temperature Gas Dynamics* (1989), *Computational Fluid Dynamics: The Basics with Applications* (1995), and *Aircraft Performance and Design* (1999). He is the author of more than 120 papers on radiative gas dynamics, entry aerothermodynamics, gas dynamic and chemical lasers, computational fluid dynamics, applied aerodynamics, hypersonic flow, and the history of aerodynamics. Dr. Anderson is in *Who's Who in America* and is a member of the National Academy of Engineering, an Honorary Fellow of the American Institute of Aeronautics and Astronautics, and Fellow of the Royal Aeronautical Society. He is also a Fellow of the Washington Academy of Sciences and a member of Tau Beta Pi, Sigma Tau, Phi Kappa Phi, Phi Eta Sigma, The American Society for Engineering Education (ASEE), the Society for the History of Technology, and the History of Science Society. He has received the Lee Atwood Award for excellence in Aerospace Engineering Education from the AIAA and the ASEE, the Pendray Award for Aerospace Literature from the AIAA, the von Karman Lectureship from the AIAA, the Gardner-Lasser History Book Award from the AIAA, and the Hypersonic Systems Award from the AIAA.



*Courtesy of Mary Bowden*

**Mary L. Bowden** grew up in New York City where she attended a French school, the Lycée Français de New York, graduating after the first year of the French Baccalaureat degree. She received a Bachelor of Arts degree in Mathematics from Cornell University in 1978. Then, thanks to an Amelia Earhart Scholarship from Zonta International, she enrolled at MIT and obtained first a Master of Science degree in 1980 and then a Doctor of Science degree in Aeronautics and Astronautics in 1988. Her graduate degrees focused on human factors for space construction and dynamics of large space structures. After graduation, Dr. Bowden spent 8 years working in the aerospace industry for a number of different companies, including American Composites Technology, a small company in Massachusetts focused on pultrusion technology; American Rocket Company in California developing a hybrid launch vehicle; and most notably AEC-Able Engineering, also in California, a small aerospace mechanisms company designing, building, and testing the deployable masts for the International Space Station solar arrays.

In 1996, Dr. Bowden joined the faculty of the Aerospace Engineering Department at the University of Maryland College Park (UMD) as a Visiting Professor. She served as the Associate Graduate Director in Aerospace for 10 years, and later served as the Acting Director of the Women in Engineering Program for the Clark School of Engineering at UMD from 2017 to 2020. She is now a Senior Lecturer in Aerospace Engineering and a Keystone Instructor for the Clark School, where she specializes in teaching introductory Mechanics courses and an Aerospace Systems course, as well as upper-level Aerospace Structures and Space Systems Design courses. Dr. Bowden received the Women In Aerospace (WIA) Aerospace Educator Award in 2016.

Dr. Bowden is also the Director of the Balloon Payload Program at UMD, which was started in 2004, sponsored by the Maryland Space Grant Consortium, with the goal of giving aerospace students the opportunity to fly experiments in the near-space environment. The program just carried out its 95th tracked flight of a helium-filled weather balloon, and is continuing with roughly three balloon launches each semester. Over the years, these flights have lifted scores of payloads for hundreds of students from half a dozen different schools in Maryland. The Balloon Payload Team has achieved a number of accomplishments, including flying a few successful payloads on NASA-sponsored High Altitude Balloon flights

(through the HASP program) and launching a micro-gravity experiment on a sounding rocket from NASA Wallops Flight Facility (through the RockSatX program). Dr. Bowden received the A. James Clark Student Competition Advisor of the Year Award in 2017 for supervising numerous award-winning teams along with her husband, Dr. David Akin.

**To Sarah-Allen, Katherine, and Elizabeth Anderson For all  
their love and understanding, and to my two lovely  
granddaughters, Keegan and Tierney Glabus**

---

page v

JOHN D.  
ANDERS  
ON, J.R.

**To David, Kaitlyn, and Ellen Akin For their love, support, and  
inspiration**

---

MARY L.  
BOWDE  
N

About the Authors iii

Preface xii

## **Chapter 1**

### **The First Aeronautical Engineers 1**

- 1.1** Introduction 1
  - 1.2** Very Early Developments 3
  - 1.3** Sir George Cayley (1773–1857)— The True Inventor of the Airplane 6
  - 1.4** The Interregnum—From 1853 to 1891 13
  - 1.5** Otto Lilienthal (1848–1896)—The Glider Man 17
  - 1.6** Percy Pilcher (1867–1899)—Extending the Glider Tradition 20
  - 1.7** Aeronautics Comes to America 21
  - 1.8** Wilbur (1867–1912) and Orville (1871–1948) Wright—Inventors of the First Practical Airplane 26
  - 1.9** The Aeronautical Triangle—Langley, the Wrights, and Glenn Curtiss 35
  - 1.10** The Problem of Propulsion 44
  - 1.11** Faster and Higher 45
  - 1.12** Summary and Review 48
- Bibliography 51

## **Chapter 2**

## **Fundamental Thoughts 53**

- 2.1** Fundamental Physical Quantities of a Flowing Gas 57
  - 2.1.1 Pressure* 57
  - 2.1.2 Density* 58
  - 2.1.3 Temperature* 59
  - 2.1.4 Flow Velocity and Streamlines* 60
- 2.2** The Source of All Aerodynamic Forces 62
- 2.3** Equation of State for a Perfect Gas 64
- 2.4** Discussion of Units 66
- 2.5** Specific Volume 71
- 2.6** Anatomy of the Airplane 82
- 2.7** Anatomy of a Space Vehicle 92
  - 2.7.1 Launch Vehicles* 93
  - 2.7.2 Uncrewed Spacecraft* 96
  - 2.7.3 Crewed Spacecraft* 98
- 2.8** Historical Note: The NACA and NASA 101
- 2.9** Summary and Review 104
  - Bibliography 105
  - Problems 106

## Chapter 3

### **The Standard Atmosphere 110**

- 3.1** Definition of Altitude 112
- 3.2** Hydrostatic Equation 113
- 3.3** Relation Between Geopotential and Geometric Altitudes 115
- 3.4** Definition of the Standard Atmosphere 116
- 3.5** Pressure, Temperature, and Density Altitudes 125

- 3.6** Historical Note: The Standard Atmosphere 128
- 3.7** Summary and Review 130
- Bibliography 132
- Problems 132

## Chapter 4

page viii

### **Basic Aerodynamics** 134

- 4.1** Continuity Equation 138
- 4.2** Incompressible and Compressible Flows 139
- 4.3** Momentum Equation 142
- 4.4** A Comment 146
- 4.5** Elementary Thermodynamics 153
- 4.6** Isentropic Flow 160
- 4.7** Energy Equation 166
- 4.8** Summary of Equations 173
- 4.9** Speed of Sound 174
- 4.10** Low-Speed Subsonic Wind Tunnels 182
- 4.11** Measurement of Airspeed 188
  - 4.11.1 Incompressible Flow* 191
  - 4.11.2 Subsonic Compressible Flow* 197
  - 4.11.3 Supersonic Flow* 205
  - 4.11.4 Summary* 210
- 4.12** Some Additional Considerations 210
  - 4.12.1 More about Compressible Flow* 211
  - 4.12.2 More about Equivalent Airspeed* 213
- 4.13** Supersonic Wind Tunnels and Rocket Engines 214
- 4.14** Discussion of Compressibility 226

- 4.15** Introduction to Viscous Flow 227
- 4.16** Results for a Laminar Boundary Layer 236
- 4.17** Results for a Turbulent Boundary Layer 241
- 4.18** Compressibility Effects on Skin Friction 244
- 4.19** Transition 247
- 4.20** Flow Separation 250
- 4.21** Summary of Viscous Effects on Drag 255
- 4.22** Historical Note: Bernoulli and Euler 257
- 4.23** Historical Note: The Pitot Tube 258
- 4.24** Historical Note: The First Wind Tunnels 261
- 4.25** Historical Note: Osborne Reynolds and His Number 267
- 4.26** Historical Note: Prandtl and the Development of the Boundary Layer Concept 271
- 4.27** Summary and Review 274
  - Bibliography 278
  - Problems 279

## Chapter 5

### **Airfoils, Wings, and Other Aerodynamic Shapes** 288

- 5.1** Introduction 288
- 5.2** Airfoil Nomenclature 290
- 5.3** Lift, Drag, and Moment Coefficients 294
- 5.4** Airfoil Data 300
- 5.5** Infinite Versus Finite Wings 315
- 5.6** Pressure Coefficient 316
- 5.7** Obtaining Lift Coefficient from  $C_p$  322
- 5.8** Compressibility Correction for Lift Coefficient 326

<b>5.9</b>	Critical Mach Number and Critical Pressure Coefficient	327
<b>5.10</b>	Drag–Divergence Mach Number	339
<b>5.11</b>	Wave Drag (At Supersonic Speeds)	347
<b>5.12</b>	Summary of Airfoil Drag	357
<b>5.13</b>	Finite Wings	359
<b>5.14</b>	Calculation of Induced Drag	363
<b>5.15</b>	Change in the Lift Slope	372
<b>5.16</b>	Swept Wings	381
<b>5.17</b>	Flaps—A Mechanism for High Lift	394
<b>5.18</b>	Aerodynamics of Cylinders and Spheres	400
<b>5.19</b>	How Lift is Produced—Some Alternative Explanations	405
<b>5.20</b>	Historical Note: Airfoils and Wings	415
5.20.1	<i>The Wright Brothers</i>	416
5.20.2	<i>British and U.S. Airfoils (1910–1920)</i>	417
5.20.3	<i>1920–1930</i>	418
5.20.4	<i>Early NACA Four-Digit Airfoils</i>	418
5.20.5	<i>Later NACA Airfoils</i>	419
5.20.6	<i>Modern Airfoil Work</i>	419
5.20.7	<i>Finite Wings</i>	420
<b>5.21</b>	Historical Note: Ernst Mach and his Number	422
<b>5.22</b>	Historical Note: The First Manned Supersonic Flight	426
<b>5.23</b>	Historical Note: The X-15—First Manned Hypersonic Airplane and Stepping-Stone to the Space Shuttle	430
<b>5.24</b>	Summary and Review	432
	Bibliography	434
	Problems	435

## Chapter 6

### **Elements of Airplane Performance** 441

- 6.1** Introduction: The Drag Polar 441
- 6.2** Equations of Motion 448
- 6.3** Thrust Required for Level, Unaccelerated Flight 450
- 6.4** Thrust Available and Maximum Velocity 458
- 6.5** Power Required for Level, Unaccelerated Flight 461
- 6.6** Power Available and Maximum Velocity 466
  - 6.6.1** *Reciprocating Engine–Propeller Combination* 466
  - 6.6.2** *Jet Engine* 468
- 6.7** Altitude Effects on Power Required and Available 470
- 6.8** Rate of Climb 479
- 6.9** Gliding Flight 489
- 6.10** Absolute and Service Ceilings 493
- 6.11** Time to Climb 499
- 6.12** Range and Endurance: Propeller-Driven Airplane 500
  - 6.12.1** *Physical Considerations* 501
  - 6.12.2** *Quantitative Formulation* 502
  - 6.12.3** *Breguet Formulas (Propeller-Driven Airplane)* 504
- 6.13** Range and Endurance: Jet Airplane 508
  - 6.13.1** *Physical Considerations* 509
  - 6.13.2** *Quantitative Formulation* 510
- 6.14** Relations Between  $C_{D,0}$  and  $C_{D,i}$  514
- 6.15** Takeoff Performance 522
- 6.16** Landing Performance 528

- 6.17** Turning Flight and the  $V-n$  Diagram 531
- 6.18** Accelerated Rate of Climb (Energy Method) 540
- 6.19** Special Considerations for Supersonic Airplanes 547
- 6.20** Uninhabited Aerial Vehicles (UAVs) 550
- 6.21** Micro Air Vehicles 560
- 6.22** Quest for Aerodynamic Efficiency 563
  - 6.22.1 Measure of Aerodynamic Efficiency 563*
  - 6.22.2 What Dictates the Value of  $L/D$ ? 564*
  - 6.22.3 Sources of Aerodynamic Drag; Drag Reduction 564*
  - 6.22.4 Some Innovative Aircraft Configurations for High  $L/D$  569*
- 6.23** A Comment 571
- 6.24** Historical Note: Drag Reduction—The NACA Cowling and the Fillet 572
- 6.25** Historical Note: Early Predictions of Airplane Performance 576
- 6.26** Historical Note: Breguet and the Range Formula 578
- 6.27** Historical Note: Aircraft Design—Evolution and Revolution 579
- 6.28** Sleeker and Faster Airplanes: The Naca's Drag Cleanup Studies in the Full Scale Tunnel 584
- 6.29**      Summary and Review 589
  - Bibliography 592
  - Problems 593

## Chapter 7

### **Principles of Stability and Control 598**

- 7.1** Introduction 598
- 7.2** Definition of Stability and Control 604
  - 7.2.1 Static Stability 605*

7.2.2	<i>Dynamic Stability</i>	606	
7.2.3	<i>Control</i>	608	
7.2.4	<i>Partial Derivative</i>	608	
<b>7.3</b>	Moments on the Airplane	609	<u>page x</u>
<b>7.4</b>	Absolute Angle of Attack	610	
<b>7.5</b>	Criteria for Longitudinal Static Stability	612	
<b>7.6</b>	Quantitative Discussion: Contribution of the Wing to $M_{cg}$	617	
<b>7.7</b>	Contribution of the Tail to $M_{cg}$	621	
<b>7.8</b>	Total Pitching Moment About the Center of Gravity	624	
<b>7.9</b>	Equations for Longitudinal Static Stability	626	
<b>7.10</b>	Neutral Point	628	
<b>7.11</b>	Static Margin	629	
<b>7.12</b>	Concept of Static Longitudinal Control	633	
<b>7.13</b>	Calculation of Elevator Angle to Trim	638	
<b>7.14</b>	Stick-Fixed Versus Stick-Free Static Stability	640	
<b>7.15</b>	Elevator Hinge Moment	641	
<b>7.16</b>	Stick-Free Longitudinal Static Stability	643	
<b>7.17</b>	Directional Static Stability	647	
<b>7.18</b>	Lateral Static Stability	648	
<b>7.19</b>	A Comment	650	
<b>7.20</b>	Historical Note: The Wright Brothers Versus the European Philosophy of Stability and Control	651	
<b>7.21</b>	Historical Note: The Development of Flight Controls	652	
<b>7.22</b>	Historical Note: The “Tuck-Under” Problem	654	
<b>7.23</b>	Summary and Review	655	
	Bibliography	657	

## Chapter 8

### **Space Flight (Astronautics) 659**

- 8.1** Introduction 659
- 8.2** The Space Environment 663
  - 8.2.1 Distances and Velocities 663*
  - 8.2.2 Temperature and Heat Transfer in Space 665*
  - 8.2.3 Pressure, Particles, and Radiation 669*
- 8.3** Lagrange's Equation 671
- 8.4** Orbit Equation 674
  - 8.4.1 Force and Energy 675*
  - 8.4.2 Equation of Motion 676*
- 8.5** Kepler's Laws and Elliptical Orbits 680
  - 8.5.1 Kepler's First Law 680*
  - 8.5.2 Kepler's Second Law 683*
  - 8.5.3 Kepler's Third Law 684*
- 8.6** Orbital Energy and the Vis-Viva Equation 686
  - 8.6.1 Orbital Shapes 686*
  - 8.6.2 Orbital Energy 688*
  - 8.6.3 Orbital Velocities 690*
  - 8.6.4 The Vis-Viva Equation 695*
- 8.7** Orbital Maneuvering 698
  - 8.7.1 Coplanar Orbital Maneuvers and the Hohmann Transfer 699*
  - 8.7.2 Plane Change Maneuver 705*
- 8.8** Interplanetary Trajectories 708
  - 8.8.1 Hyperbolic Trajectories 708*

8.8.2	<i>Sphere of Influence</i>	710
8.8.3	<i>Heliocentric Trajectories</i>	711
8.8.4	<i>Method of Patched Conics</i>	712
8.8.5	<i>Gravity-Assist Trajectories</i>	713
8.8.6	<i>An Application: The Voyager Spacecraft—Their Design, Flight Trajectories, and Historical Significance</i>	715
<b>8.9</b>	Introduction to Atmospheric Entry	719
8.9.1	<i>Exponential Atmosphere</i>	721
8.9.2	<i>General Equations of Motion for Atmospheric Entry</i>	722
<b>8.10</b>	Historical Note: Kepler	726
<b>8.11</b>	Historical Note: Newton and the Law of Gravitation	727
<b>8.12</b>	Historical Note: Lagrange	729
<b>8.13</b>	Historical Note: Unmanned Space Flight	730
<b>8.14</b>	Historical Note: Human Space Flight	734
<b>8.15</b>	Summary and Review	740
	Bibliography	743
	Problems	743

---

page xi

## Chapter 9

### **Propulsion** 746

<b>9.1</b>	Introduction	746
<b>9.2</b>	Propeller	749
<b>9.3</b>	Reciprocating Engine	756
<b>9.4</b>	Jet Propulsion—The Thrust Equation	767
<b>9.5</b>	Turbojet Engine	770
9.5.1	<i>Thrust Buildup for a Turbojet Engine</i>	775
<b>9.6</b>	Turbofan Engine	781

- 9.7** Ramjet Engine 783
- 9.8** Rocket Engine 787
- 9.9** Rocket Propellants—Some Considerations 794
  - 9.9.1 Liquid Propellants* 794
  - 9.9.2 Solid Propellants* 797
  - 9.9.3 A Comment* 799
- 9.10** Rocket Equation 800
- 9.11** Rocket Staging 803
  - 9.11.1 Comparison of Single-Stage and Two-Stage Vehicle* 804
  - 9.11.2 Mass Ratios* 806
  - 9.11.3 Multistage Vehicles* 808
- 9.12** Electric Propulsion 809
  - 9.12.1 Electron-Ion Thruster* 810
  - 9.12.2 Magnetoplasmadynamic Thruster* 811
  - 9.12.3 Arc-Jet Thruster* 811
  - 9.12.4 A Comment* 812
- 9.13** Historical Note: Early Propeller Development 812
- 9.14** Historical Note: Early Development of the Internal Combustion Engine for Aviation 815
- 9.15** Historical Note: Inventors of Early Jet Engines 818
- 9.16** Historical Note: Early History of Rocket Engines 820
- 9.17** Historical Note: Development of the Saturn V and N-1 Boosters 825
- 9.18** Summary and Review 828
  - Bibliography 830
  - Problems 831

## Chapter 10

**Hypersonic Vehicles** 835

**10.1** Introduction 835

**10.2** Physical Aspects of Hypersonic Flow 839

*10.2.1 Thin Shock Layers* 839

*10.2.2 Entropy Layer* 840

*10.2.3 Viscous Interaction* 841

*10.2.4 High-Temperature Effects* 842

*10.2.5 Low-Density Flow* 843

*10.2.6 Recapitulation* 847

**10.3** Newtonian Law for Hypersonic Flow 847

**10.4** Some Comments About Hypersonic Airplanes 853

**10.5** Summary and Review 864

Bibliography 865

Problems 865

**Appendix A: Standard Atmosphere, SI Units** 867

**Appendix B: Standard Atmosphere, English Engineering Units** 877

**Appendix C: Symbols and Conversion Factors** 885

**Appendix D: Airfoil Data** 886

**Answer Key** 915

**Index** 919



This book is an introduction to aerospace engineering from both the technological and historical points of view. It is written to appeal to several groups of people: (1) students of aerospace engineering in their freshman or sophomore years in college who are looking for a comprehensive introduction to their profession; (2) advanced high school seniors who want to learn what aerospace engineering is all about; (3) college undergraduate and graduate students who want to obtain a wider perspective on the glories, the intellectual demands, and the technical maturity of aerospace engineering; and (4) working engineers who simply want to obtain a firmer grasp on the fundamental concepts and historical traditions that underlie their profession.

As an introduction to aerospace engineering, this book is unique in at least three ways. First, the vast majority of aerospace engineering professionals and students have little knowledge or appreciation of the historical traditions and background associated with the technology that they use almost every day. To fill this vacuum, the present book marbles some history of aerospace engineering into the parallel technical discussions. For example, such questions as who Bernoulli was, where the Pitot tube originated, how wind tunnels evolved, who the first true aeronautical engineers were, and how wings and airfoils developed are answered. The present author feels strongly that such material should be an integral part of the background of all aerospace engineers.

Second, this book incorporates both the SI and the English engineering system of units. Modern students of aerospace engineering must be bilingual—on the one hand, they must fully understand and feel comfortable with the SI units—because most modern and all future literature will deal with the SI system; on the other hand, they must be able to read and feel comfortable with the vast bulk of existing literature, which is predominantly in English engineering units. In this book, the SI system is emphasized, but an honest effort is made to give the reader a feeling for

and understanding of both systems. To this end, some example problems are worked out in the SI system and others in the English system.

## NEW TO THE NINTH EDITION

The purpose of the present edition is the same as that of the first eight: to present the basic fundamentals of aerospace engineering at the introductory level in the clearest, simplest, and most motivating way possible. Because the book is meant to be enjoyed as well as understood, we have made every effort to ensure a clear and readable text. The choice of subject matter and its organization, the order in which topics are introduced, and how these ideas are explained have been carefully planned with the uninitiated reader in mind. We have simply put ourselves in the shoes of the reader who has no knowledge of the subject matter, have asked ourselves how we would want to hear about the subject, and then start “talking” to the reader. Because the book is intended as a self-contained text at the first- and second-year levels, we avoid tedious details and massive “handbook” data. Instead, we introduce and discuss fundamental concepts in a manner that is as straightforward and clear-cut as possible, knowing that the book has also found favor with those who wish to learn something about this subject outside the classroom.

The overwhelmingly favorable response to the earlier editions page xiii from students, teachers, and practicing professionals both here and abroad is a source of gratification. Particularly pleasing is the fact that those using the book have enjoyed reading its treatment of the fascinating, challenging, and sometimes awesome discipline of aerospace engineering.

Thanks to this response, much of the content of the eighth edition has been carried over into the ninth edition. A hallmark of this book is the use of specially designed devices to enhance the readers’ understanding of the material. In particular, these features are carried over from the eighth edition:

1. *Road maps* placed at the beginning of each chapter help guide the reader through the logical flow of the material.
2. *Design boxes* discuss interesting and important applications of the fundamental material; these are literally set apart in boxes.

3. *Preview boxes* at the chapter beginnings give the reader insight into what each chapter is about and why the material is important. These preview boxes are intended to be motivational, and to make the reader interested and curious enough to pay close attention to the content of the chapter. They are written in an informal manner to hopefully attempt to turn the reader on to the content. In these preview boxes, we are unabashedly admitting to providing fun for the readers.
4. *Summary and Review sections* at the end of the chapters contain the important ideas and concepts presented in each chapter, first without equations, to remind readers about the physical aspects of the material and to provide a focused intellectual background for the equations that are then summarized at the end of the section.

In the same spirit, the ninth edition contains new material intended to enhance the education and interest of the reader:

1. Many of the changes in this edition of the textbook are updates to the sections on spacecraft design and space travel. For example, there is a new discussion in Chapter 2 on the “Anatomy of a Space Vehicle” and in Chapter 8 on “The Space Environment.” These sections have been added to give the reader a qualitative sense, at least, of what it takes to venture into space.
2. Further additions to Chapter 8 then provide the quantitative fundamentals that govern space travel: from the basics of orbital mechanics to the calculations necessary for orbital maneuvering; these are the tools that allow preliminary space mission design and feasibility studies.
3. In Chapter 9, the changes and new material have focused on page xiv space propulsion with a simpler derivation of the rocket equation and a top-level discussion of launch vehicle staging including the introduction of nondimensional parameters and a number of examples. Emphasis is on the key equations necessary for preliminary design of launch vehicles and the sizing of orbital vehicles.

4. New illustrative examples have been worked out in both Chapters 8 and 9, and a number of new homework problems have been appended at the end of each of these chapters.
5. Since current events very quickly become historical events especially in the space business, it has also been necessary to update and add a couple of new Historical Notes to the ends of Chapters 8 and 9. In particular, Section 8.14 covers human spaceflight up through the Shuttle era, and Section 9.17 is a discussion of the development of the Saturn V, one of the largest and most significant launch vehicles that allowed the United States to put men on the Moon.
6. Additionally, a new Historical Note has been added to Chapter 6 about the design of “Sleeker and Faster Airplanes.” This describes the “Drag Cleanup” program that was undertaken in the NACA Langley Full Scale Wind Tunnel and led to a much more detailed understanding of the sources of drag on any aerodynamic vehicle.

To allow room for this new material, much of the discussion of atmospheric entry has been moved to the web, including ballistic entry, entry heating, and lifting entry. In addition, the website for this textbook now includes sections on Conceptual Airplane Design, the Quest for Engine Efficiency, and Advanced Orbital Maneuvering.

All told, the new material represents a meaningful enhancement of *Introduction to Flight*.

At the University of Maryland (UMD), this text is used in an introductory course for sophomores in aerospace engineering. It leads directly into a second book, *Fundamentals of Aerodynamics*, which is used in a two-semester junior–senior aerodynamics course. This, in turn, feeds into a third text, *Modern Compressible Flow: With Historical Perspective*, used in a course for advanced undergraduates and first-year graduate students. The complete triad is intended to give students a reasonable technical and historical perspective on aerospace engineering in general and aerodynamics in particular.

John Anderson wishes to give special appreciation to his wife of 60 years, Sarah-Allen, who has lived through his untold amount of time in writing textbooks for McGraw-Hill, and who has helped in the formation of ideas that are reflected throughout these books. Without her patience and indulgence, these books would have never been written. Special thanks is

given to Dr. Norman Wereley, Chairman of the Department of Aerospace Engineering at the University of Maryland for his help and support of this project, and to John's many colleagues in the Aeronautics Department at the National Air and Space Museum for their many helpful conversations on the history of aeronautical technology. He also wishes to thank Dr. Mary Bowden, who joins him as the second author of this new edition. She brings much needed and appreciated expertise in the area of space flight and is responsible for the completely revised Chapter 8 and much of Chapter 9, as well as the addition of many new end-of-chapter problems. Her addition to this book is welcomed and much appreciated.

Mary Bowden has taught the Introduction to Aerospace Systems [page xv](#) course to sophomores at the University of Maryland for over 10 years. She has an appreciation for the capabilities and interests of this very talented set of students and thus welcomed the opportunity to contribute to this textbook. She would especially like to thank her husband of only 38 years, Dr. David Akin, a faculty member in the Aerospace Engineering department at UMD and the Director of the Space Systems Lab. His constructive criticism and historical perspective enhanced considerably the new material added to this edition. Mary would also like to thank Shikha Redhal, a doctoral student in the Aerospace Engineering department at UMD, for her skilled and patient help on the many diagrams of Chapters 8 and 9.

Both authors wish to thank those that offered their insights and suggestions in order to help shape the ninth edition revision: Amir Elzaway (Vaughn College); David Brian Landrum (University of Alabama, Huntsville); Robert Liebeck (University of California, Irvine); Andrew Meade (Rice University); Iskender Sahin (New York University Tandon School of Engineering); and Kamran Turkoglu (San Jose State University).

Finally, emphasizing that the study, understanding, and practice of the profession of aerospace engineering is one of the most gratifying of human endeavors and that our purpose is to instill a sense of enthusiasm, dedication, and love of the subject, let us simply say to the reader: read, learn, and enjoy.

**John D. Anderson, Jr.**  
**Mary L. Bowden**

**Remote Proctoring & Browser-Locking Capabilities**

New remote proctoring and browser-locking capabilities, hosted by Proctorio within Connect, provide control of the assessment environment by enabling security options and verifying the identity of the student.

Seamlessly integrated within Connect, these services allow instructors to control students' assessment experience by restricting browser activity, recording students' activity, and verifying students are doing their own work.

Instant and detailed reporting gives instructors an at-a-glance view of potential academic integrity concerns, thereby avoiding personal bias and supporting evidence-based claims.

**Writing Assignment**

Available within McGraw-Hill Connect® and McGraw-Hill Connect® Master, the Writing Assignment tool delivers a learning experience to help students improve their written communication skills and conceptual understanding. As an instructor, you can assign, monitor, grade, and provide feedback on writing more efficiently and effectively.

## Affordability & Outcomes = Academic Freedom!

You deserve choice, flexibility and control. You know what's best for your students and selecting the course materials that will help them succeed should be in your hands.

That's why providing you with a wide range of options that lower costs and drive better outcomes is our highest priority.




# connect®

Students—study more efficiently, retain more and achieve better outcomes. Instructors—focus on what you love—teaching.



### They'll thank you for it.

Study resources in Connect help your students be better prepared in less time. You can transform your class time from dull definitions to dynamic discussion. Hear from your peers about the benefits of Connect at [www.mheducation.com/highered/connect](http://www.mheducation.com/highered/connect)

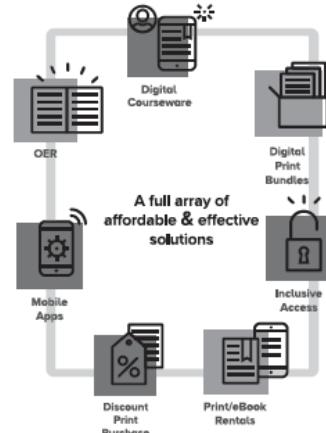

### Study anytime, anywhere.

Download the free ReadAnywhere app and access your online eBook when it's convenient, even if you're offline. And since the app automatically syncs with your eBook in Connect, all of your notes are available every time you open it. Find out more at [www.mheducation.com/readanywhere](http://www.mheducation.com/readanywhere)

### Learning for everyone.

McGraw-Hill works directly with Accessibility Services Departments and faculty to meet the learning needs of all students. Please contact your Accessibility Services office and ask them to email [accessibility@mheducation.com](mailto:accessibility@mheducation.com), or visit [www.mheducation.com/about/accessibility.html](http://www.mheducation.com/about/accessibility.html) for more information.

Learn more at: [www.mheducation.com/realvalue](http://www.mheducation.com/realvalue)



#### Rent It

Affordable print and digital rental options through our partnerships with leading textbook distributors including Amazon, Barnes & Noble, Chegg, Follett, and more.



#### Go Digital

A full and flexible range of affordable digital solutions ranging from Connect, ALEKS, inclusive access, mobile apps, OER, and more.



#### Get Print

Students who purchase digital materials can get a loose-leaf print version at a significantly reduced rate to meet their individual preferences and budget.

# CHAPTER 1

## The First Aeronautical Engineers

Nobody will fly for a thousand years!

*Wilbur Wright, 1901, in a fit of despair*


SUCCESS FOUR FLIGHTS THURSDAY MORNING ALL AGAINST TWENTY ONE MILE WIND STARTED FROM LEVEL WITH ENGINE POWER ALONE AVERAGE SPEED THROUGH AIR THIRTY ONE MILES LONGEST 57 SECONDS INFORM PRESS HOME CHRISTMAS.

*ORVILLE WRIGHT A telegram, with the original misprints, from Orville Wright to his father, December 17, 1903*

### 1.1 INTRODUCTION

*The scene:* Windswept sand dunes of Kill Devil Hills, 4 mi south of Kitty Hawk, North Carolina. *The time:* About 10:35 AM on Thursday, December 17, 1903. *The characters:* Orville and Wilbur Wright and five local witnesses. *The action:* Poised, ready to make history, is a flimsy, odd-looking machine, made from spruce and cloth in the form of two wings, one placed above the other, a horizontal elevator mounted on struts in front of the wings, and a double vertical rudder behind the wings (see Fig. 1.1). A 12-hp engine is mounted on the top-surface of the bottom wing, slightly right of center. To the left of this engine lies a man—Orville Wright—prone on the bottom wing, facing into the brisk and cold December wind. Behind him rotate two ungainly looking airscrews (propellers), driven by two chain-and-pulley arrangements connected to the same engine. The machine begins to move along a 60-ft launching rail on level ground. Wilbur Wright runs along the right side of the machine, supporting the wing tip so it will not drag the sand. Near the end of the starting rail, the machine lifts into the air; at this moment, John Daniels of the Kill Devil Life Saving Station takes a photograph that preserves for all time the most historic moment in aviation history (see Fig. 1.2). The machine flies unevenly, rising suddenly to about 10 ft, then ducking quickly toward the ground. This type of erratic flight continues for 12 s, when the machine darts to the sand, 120 ft from the point where it lifted


from the starting rail. Thus ends a flight that, in Orville Wright's own words, was "the first in the history of the world in which a machine carrying a man had raised itself by its own power into the air in full flight, had sailed forward without reduction of speed, and had finally landed at a point as high as that from which it started."

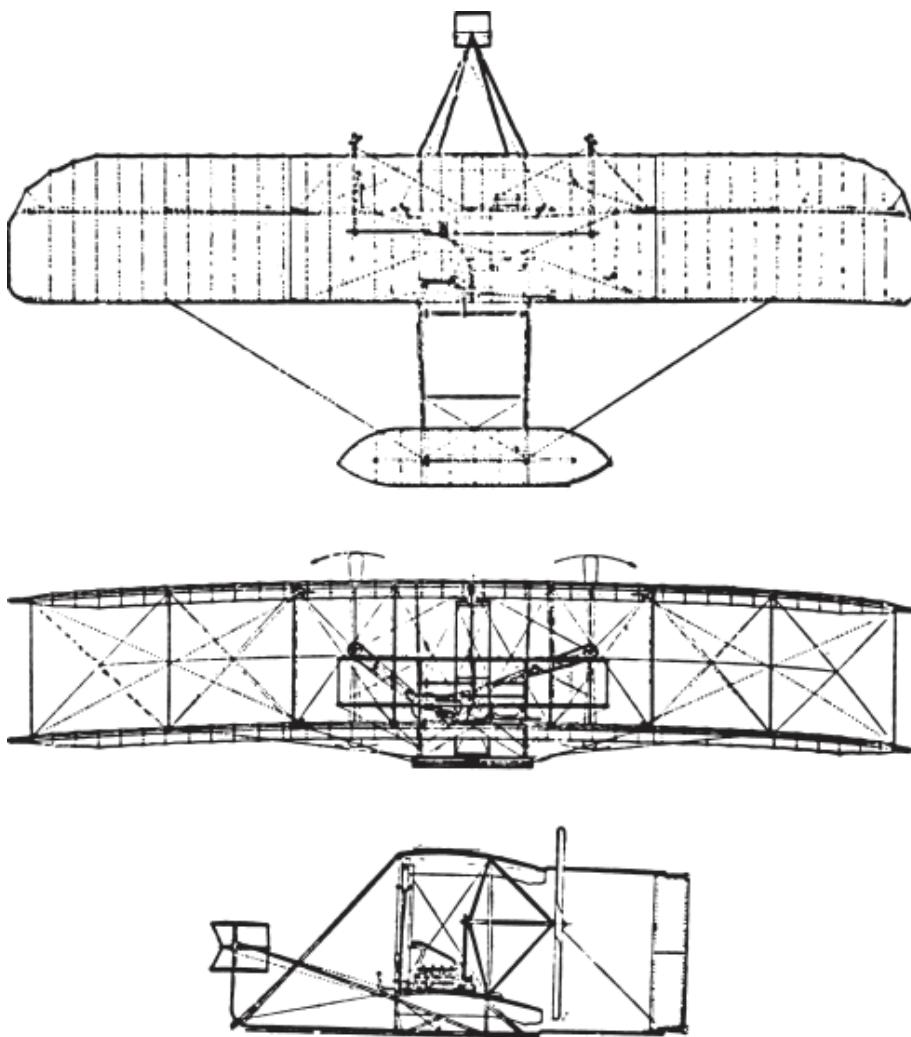

**Figure 1.1** Three views of the *Wright Flyer I*, 1903

The machine was the *Wright Flyer I*, which is shown in Figs. 1.1 and 1.2 and which is now preserved for posterity in the Air and Space Museum of the Smithsonian Institution in Washington, District of Columbia. The flight on that cold December 17 was momentous: It brought to a realization the dreams of centuries, and it gave birth to a new way of life. It was the first genuine powered flight of a heavier-than-air machine. With it, and with the further successes to

come over the next five years, came the Wright brothers' clear right to be considered the premier aeronautical engineers of history.

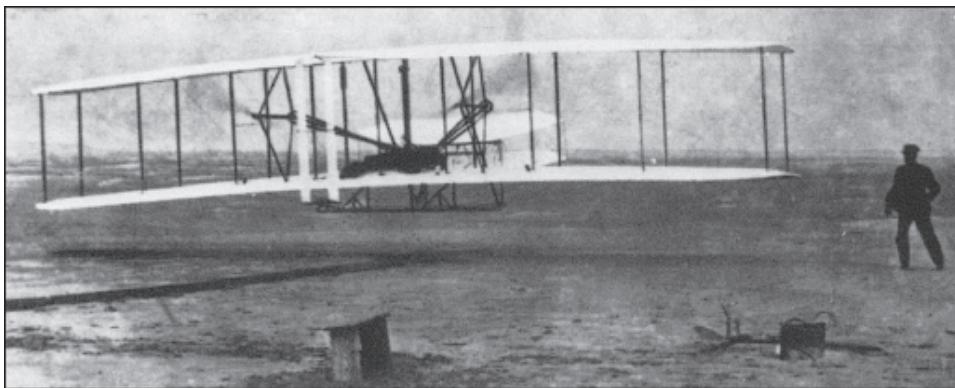

**Figure 1.2** The first heavier-than-air flight in history: the *Wright Flyer I* with Orville Wright at the controls, December 17, 1903.

(Source: Wright Brothers Negatives, Library of Congress [LC-DIG-ppprs-00626].)

However, contrary to some popular belief, the Wright brothers did not truly *invent* the airplane; rather, they represent the fruition of a century's worth of prior aeronautical research and development. The time was ripe for the attainment of powered flight at the beginning of the 20th century. The Wright brothers' ingenuity, dedication, and persistence earned them the distinction of being first. The purpose of this chapter is to look back over the years that led up to successful powered flight and to single out an important few of those inventors and thinkers who can rightfully claim to be the first aeronautical engineers. In this manner, some of the traditions and heritage that underlie modern aerospace engineering will be more appreciated when we develop the technical concepts of flight in subsequent chapters.


## 1.2 VERY EARLY DEVELOPMENTS

Since the dawn of human intelligence, the idea of flying in the same realm as birds has possessed human minds. Witness the early Greek myth of Daedalus and his son Icarus. Imprisoned on the island of Crete in the Mediterranean Sea, Daedalus is said to have made wings fastened with wax. With these wings, they both escaped by flying through the air. However, Icarus, against his father's warnings, flew too close to the sun; the wax melted, and Icarus fell to his death in the sea.

All early thinking about human flight centered on the imitation of birds. Various unsung ancient and medieval people fashioned wings and met with

sometimes disastrous and always unsuccessful consequences in leaping from towers or roofs, flapping vigorously. In time, the idea of strapping a pair of wings to arms fell out of favor. It was replaced by the concept of wings flapped up and down by various mechanical mechanisms, powered by some type of human arm, leg, or body movement. These machines are called *ornithopters*. Recent historical research has revealed that Leonardo da Vinci was possessed by the idea of human flight and that he designed vast numbers of ornithopters toward the end of the 15th century. In his surviving manuscripts, more than 35,000 words and 500 sketches deal with flight. One of his ornithopter designs is shown in Fig. 1.3, which is an original da Vinci sketch made sometime between 1486 and 1490. It is not known whether da Vinci ever built or tested any of his designs. However, human-powered flight by flapping wings was always doomed to failure. In this sense, da Vinci's efforts did not make important contributions to the technical advancement of flight.


Human efforts to fly literally got off the ground on November 21, 1783, when a balloon carrying Pilatre de Rozier and the Marquis d'Arlandes ascended into the air and drifted 5 mi across Paris. The balloon was inflated and buoyed up by hot air from an open fire burning in a large wicker basket underneath. The design and construction of the balloon were those of the Montgolfier brothers, Joseph and Etienne. In 1782 Joseph Montgolfier, gazing into his fireplace, conceived the idea of using the "lifting power" of hot air rising from a flame to lift a person from the surface of the earth. The brothers instantly set to work, experimenting with bags made of paper and linen, in which hot air from a fire was trapped. After several public demonstrations of flight without human passengers, including the 8-min voyage of a balloon carrying a cage containing a sheep, a rooster, and a duck, the Montgolfiers were ready for the big step. At 1:54 PM on November 21, 1783, the first flight with human passengers rose majestically into the air and lasted for 25 min (see Fig. 1.4). It was the first time in history that a human being had been lifted off the ground for a sustained period. Very quickly after this, the noted French physicist J. A. C. Charles (of Charles' gas law in physics) built and flew a hydrogen-filled balloon from the Tuileries Gardens in Paris on December 1, 1783.

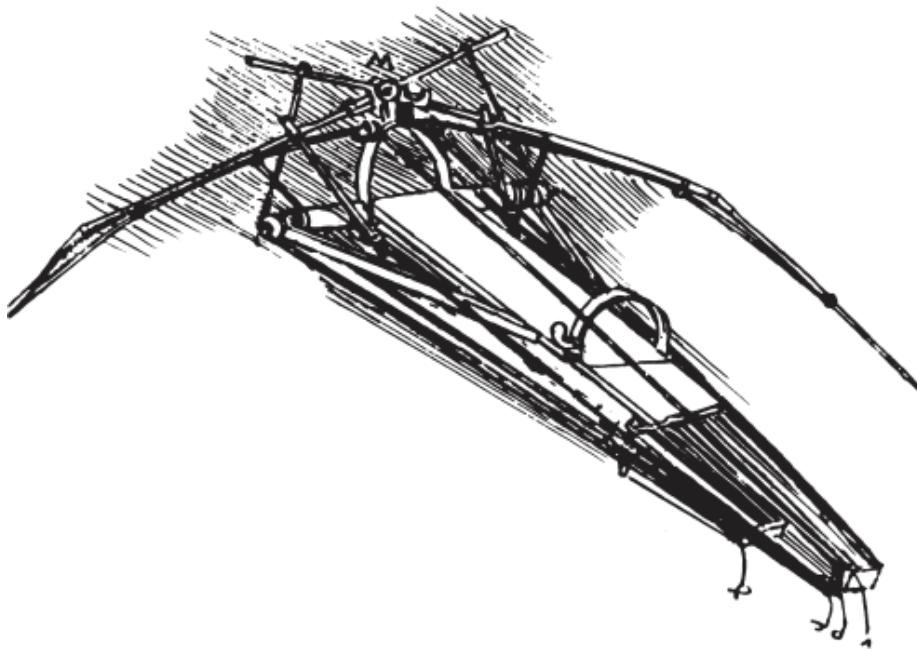

**Figure 1.3** An ornithopter design by Leonardo da Vinci, 1486–1490.

(Source: British Science Museum by C. H. Gibbs-Smith, published by Her Majesty's Stationery Office, London: Leonardo da Vinci's Aeronautics, 1967.)

So people were finally off the ground! Balloons, or “aerostatic machines” as they were called by the Montgolfiers, made no real technical contributions to human heavier-than-air flight. However, they served a major purpose in triggering the public’s interest in flight through the air. They were living proof that people could really leave the ground and sample the environs heretofore exclusively reserved for birds. Moreover, balloons were the only means of human flight for almost 100 years.

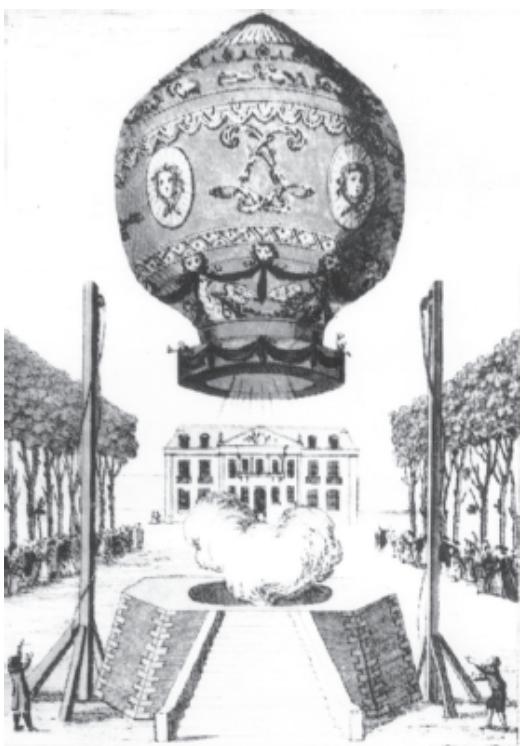

**Figure 1.4** The first aerial voyage in history: The Montgolfier hot-air balloon lifts from the ground near Paris on November 21, 1783.

(Source: Library of Congress Prints & Photographs Division [LC-USZ62-15243].)

### 1.3 SIR GEORGE CAYLEY (1773–1857)—THE TRUE INVENTOR OF THE AIRPLANE


The modern airplane has its origin in a design set forth by George Cayley in 1799. It was the first concept to include a *fixed* wing for generating lift, another *separate* mechanism for propulsion (Cayley envisioned paddles), and a combined horizontal and vertical (cruciform) tail for stability. Cayley inscribed his idea on a silver disk (presumably for permanence), shown in Fig. 1.5. On the reverse side of the disk is a diagram of the lift and drag forces on an inclined plane (the wing). The disk is now preserved in the Science Museum in London. Before this time, thought of mechanical flight had been oriented toward the flapping wings of ornithopters, where the flapping motion was supposed to provide both lift and propulsion. (Da Vinci designed his ornithopter wings to flap simultaneously downward and backward for lift and propulsion.) However, Cayley is responsible for breaking this unsuccessful line of thought; he separated the concept of lift from that of propulsion and, in so doing, set into motion a century of aeronautical development that culminated in the Wright brothers' success in 1903. George Cayley is a giant in aeronautical history: He is the

parent of modern aviation and was the first to introduce the basic configuration of the modern airplane. Let us look at him more closely.



**Figure 1.5** The silver disk on which Cayley engraved his concept for a fixed-wing aircraft, the first in history, in 1799. The reverse side of the disk shows the resultant aerodynamic force on a wing resolved into lift and drag components, indicating Cayley's full understanding of the function of a fixed wing. The disk is presently in the Science Museum in London.

(Source: *Science and Society/SuperStock*.)

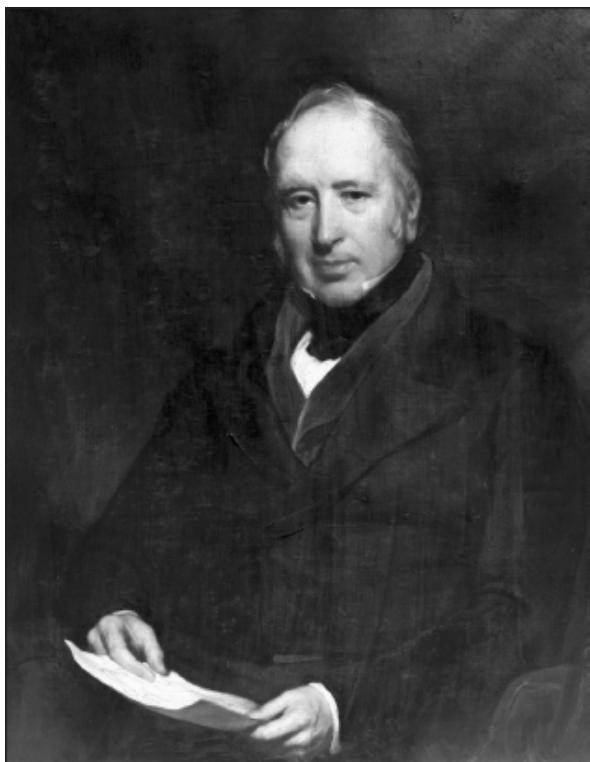


**Figure 1.6** A portrait of Sir George Cayley, painted by Henry Perronet Briggs in 1841. The portrait now hangs in the National Portrait Gallery in London.

(Source: *Science and Society/SuperStock*.)

Cayley was born at Scarborough in Yorkshire, England, on December 27, 1773. He was educated at York and Nottingham and later studied chemistry and electricity under several noted tutors. He was a scholarly man of some rank, a baronet who spent much of his time on the family estate, called Brompton. A portrait of Cayley is shown in Fig. 1.6. He was a well-preserved person, of extreme intellect and open mind, active in many pursuits over a long life of 84 years. In 1825 he invented the caterpillar tractor, forerunner of all modern tracked vehicles. In addition, he was chairman of the Whig Club of York, founded the Yorkshire Philosophical Society (1821), cofounded the British Association for the Advancement of Science (1831), was a member of Parliament, was a leading authority on land drainage, and published papers dealing with optics and railroad safety devices. Moreover, he had a social conscience: He appealed for, and donated to, the relief of industrial distress in Yorkshire.

However, by far his major and lasting contribution to humanity was in aeronautics. After experimenting with model helicopters beginning in 1796, Cayley engraved his revolutionary fixed-wing concept on the silver disk in 1799 (see Fig. 1.5). This was followed by an intensive 10-year period of aerodynamic investigation and development. In 1804 he built a whirling-arm apparatus, shown in Fig. 1.7, for testing airfoils; this was simply a lifting surface (airfoil) mounted on the end of a long rod, which was rotated at some speed to generate a flow of air over the airfoil. In modern aerospace engineering, wind tunnels now serve this function; but in Cayley's time the whirling arm was an important development that allowed the measurement of aerodynamic forces and the center of pressure on a lifting surface. Of course these measurements were not very accurate, because after a number of revolutions of the arm, the surrounding air would begin to rotate with the device. Nevertheless, it was a first step in aerodynamic testing. (Cayley did not invent the whirling arm; that honor belongs to the English military engineer Benjamin Robins in 1742.) Also in 1804, Cayley designed, built, and flew the small model glider shown in Fig. 1.8. This may seem trivial today, something that you might have done as a child; *but in 1804, it represented the first modern-configuration airplane of history*, with a fixed wing, and a horizontal and vertical tail that could be adjusted. (Cayley generally flew his glider with the tail at a positive angle of incidence, as shown in his sketch in Fig. 1.8.) A full-scale replica of this glider is on display at the Science Museum in London; the model is only about 1 m long.

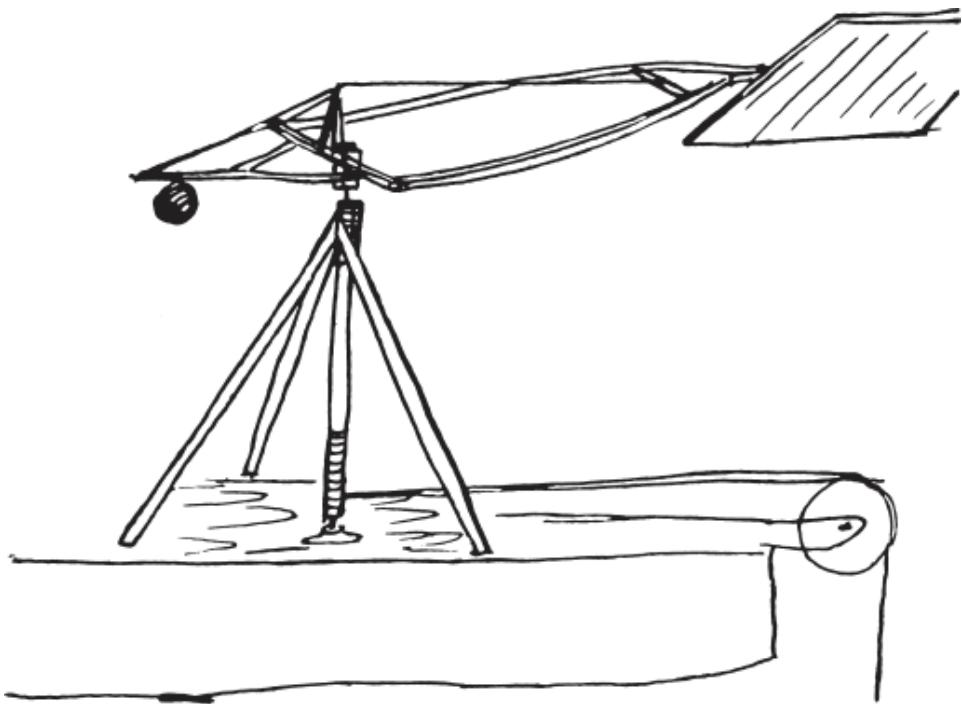

**Figure 1.7** George Cayley's whirling-arm apparatus for testing airfoils.


Cayley's first outpouring of aeronautical results was documented in his momentous triple paper of 1809–1810. Titled “On Aerial Navigation” and published in the November 1809, February 1810, and March 1810 issues of Nicholson’s *Journal of Natural Philosophy*, this document ranks as one of the most important aeronautical works in history. (Note that the words *natural philosophy* in history are synonymous with physical science.) Cayley was prompted to write his triple paper after hearing reports that Jacob Degen had recently flown in a mechanical machine in Vienna. In reality, Degen flew in a contraption that was lifted by a balloon. It was of no significance, but Cayley did not know the details. In an effort to let people know of his activities, Cayley documented many aspects of aerodynamics in his triple paper. It was the first published treatise on theoretical and applied aerodynamics in history. In it, Cayley elaborated on his principle of the separation of lift and propulsion and his use of a fixed wing to generate lift. He stated that the basic principle of a flying machine is “to make a surface support a given weight by the application of power to the resistance of air.” He noted that a surface inclined at some angle to the direction of motion will generate lift and that a cambered (curved) surface will do this more efficiently than a flat surface. He also stated for the first time in history that lift is generated by a region of low pressure on the upper surface of the wing. The modern technical aspects of these phenomena are developed and explained in Chs. 4 and 5; however, stated by Cayley in 1809–1810, these

phenomena were new and unique. His triple paper also addressed the matter of flight control and was the first document to discuss the role of the horizontal and vertical tail planes in airplane stability. Interestingly enough, Cayley went off on a tangent in discussing the use of flappers for propulsion. Note that on the silver disk (see Fig. 1.5) Cayley showed some paddles just behind the wing. From 1799 until his death in 1857, Cayley was obsessed with such flappers for aeronautical propulsion. He gave little attention to the propeller (airscrew); indeed, he seemed to have an aversion to rotating machinery of any type. However, this should not detract from his numerous positive contributions. Also in his triple paper, Cayley described the first successful full-size glider of history, built and flown without passengers by him at Brompton in 1809. However, there was no clue as to its configuration.



**Figure 1.8** The first modern-configuration airplane in history: Cayley's model glider, 1804.

Curiously, the period from 1810 to 1843 was a lull in Cayley's life in regard to aeronautics. Presumably he was busy with his myriad other interests and activities. During this period, he showed interest in airships (controlled balloons), as opposed to heavier-than-air machines. He made the prophetic statement that "balloon aerial navigation can be done readily, and will probably, in the order of things, come into use before mechanical flight can be rendered sufficiently safe and efficient for ordinary use." He was correct; the first successful airship, propelled by a steam engine, was built and flown by the French engineer Henri Giffard in Paris in 1852, some 51 years before the first successful airplane.

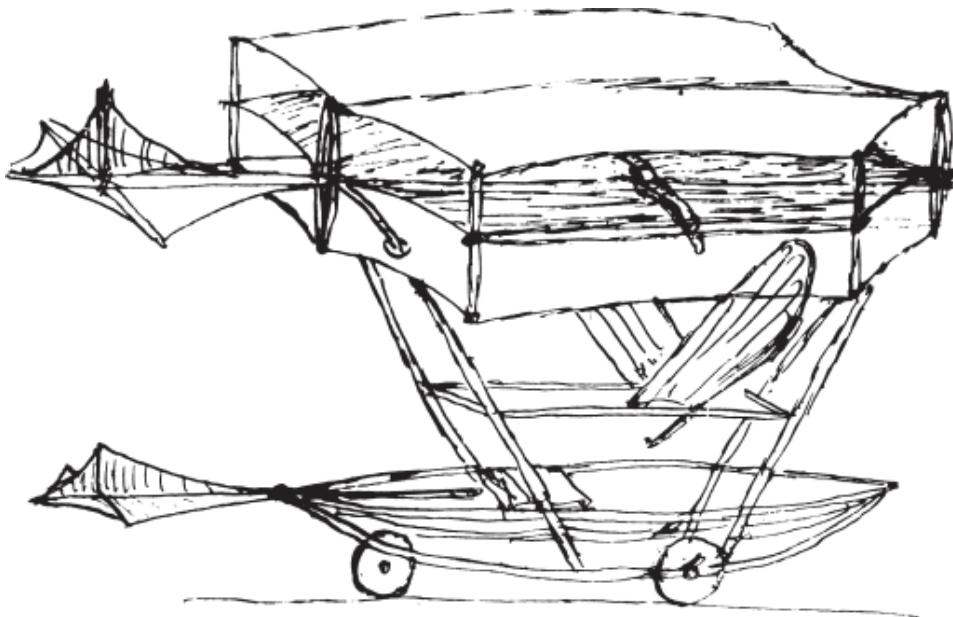

**Figure 1.9** Cayley's triplane from 1849—the boy carrier. Note the vertical and horizontal tail surfaces and the flapperlike propulsive mechanism.

Cayley's second outpouring of aeronautical results occurred in the period from 1848 to 1854. In 1849 he built and tested a full-size airplane. During some of the flight tests, a 10-year-old boy was carried along and was lifted several meters off the ground while gliding down a hill. Cayley's own sketch of this machine, called the *boy carrier*, is shown in Fig. 1.9. Note that it is a triplane (three wings mounted on top of one another). Cayley was the first to suggest such multiplanes (i.e., biplanes and triplanes), mainly because he was concerned with the possible structural failure of a single large wing (a monoplane). Stacking smaller, more compact, wings on top of one another made more sense to him, and his concept was perpetuated into the 20th century. It was not until the late 1930s that the monoplane became the dominant airplane configuration. Also note from Fig. 1.9 that, strictly speaking, this was a “powered” airplane; that is, it was equipped with propulsive flappers.

One of Cayley's most important papers was published in *Mechanics' Magazine* on September 25, 1852. By this time he was 79 years old! The article was titled “Sir George Cayley's Governable Parachutes.” It gave a full description of a large human-carrying glider that incorporated almost all the features of the modern airplane. This design is shown in Fig. 1.10, which is a facsimile of the illustration that appeared in the original issue of *Mechanics' Magazine*. This airplane had (1) a main wing at an angle of incidence for lift, with a dihedral for lateral stability; (2) an adjustable cruciform tail for longitudinal and directional stability; (3) a pilot-operated elevator and rudder; (4)

a fuselage in the form of a car, with a pilot's seat and three-wheel undercarriage; and (5) a tubular beam and box beam construction. These combined features were not to be seen again until the Wright brothers' designs at the beginning of the 20th century. Incredibly, this 1852 paper by Cayley went virtually unnoticed, even though *Mechanics' Magazine* had a large circulation. It was rediscovered by the eminent British aviation historian Charles H. Gibbs-Smith in 1960 and republished by him in the June 13, 1960, issue of *The Times*.

Mechanics' Magazine,  
MUSEUM, REGISTER, JOURNAL, AND GAZETTE.

No. 1520.] SATURDAY, SEPTEMBER 25, 1852. [Price 3d., Stamped 4d.  
Edited by J. C. Robertson, 166, Fleet-street.

SIR GEORGE CAYLEY'S GOVERNABLE PARACHUTES.

Fig. 2.


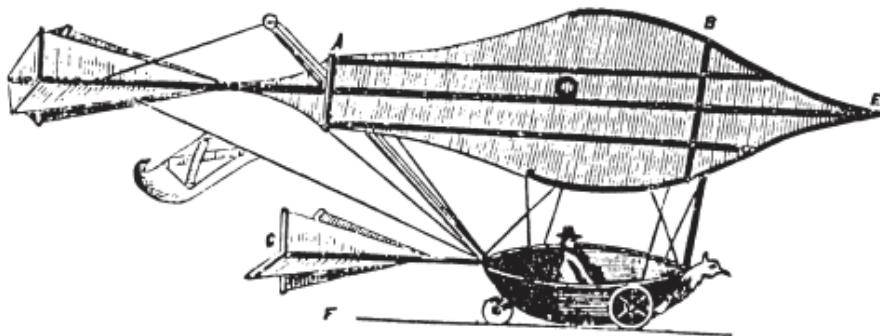


Fig. 1.

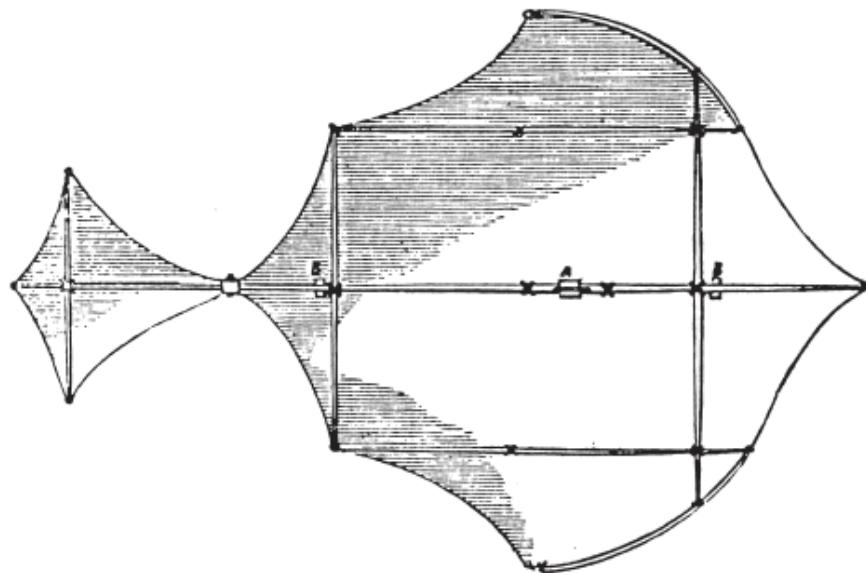

**Figure 1.10** George Cayley's human-carrying glider, from *Mechanics' Magazine*, 1852.

Sometime in 1853—the precise date is unknown—George Cayley built and flew the world's first human-carrying glider. Its configuration is not known, but

Gibbs-Smith states that it was most likely a triplane on the order of the earlier boy carrier (see Fig. 1.9) and that the planform (top view) of the wings was probably shaped much like the glider in Fig. 1.10. According to several eyewitness accounts, a gliding flight of several hundred yards was made across a dale at Brompton with Cayley's coachman aboard. The glider landed rather abruptly; and after struggling clear of the vehicle, the shaken coachman is quoted as saying, "Please, Sir George, I wish to give notice. I was hired to drive, and not to fly." Very recently, this flight of Cayley's coachman was reenacted for the public in a special British Broadcasting Corporation television show about Cayley's life. While visiting the Science Museum in London in August 1975, the present author was impressed to find the television replica of Cayley's glider (minus the coachman) hanging in the entranceway.

George Cayley died at Brompton on December 15, 1857. During his almost 84 years of life, he laid the basis for all practical aviation. He was called the *father of aerial navigation* by William Samuel Henson in 1846. However, for reasons that are not clear, the name of George Cayley retreated to the background soon after his death. His works became obscure to virtually all later aviation enthusiasts in the latter half of the 19th century. This is incredible, indeed unforgivable, considering that his published papers were available in known journals. Obviously many subsequent inventors did not make the effort to examine the literature before forging ahead with their own ideas. (This is certainly a problem for engineers today, with the virtual explosion of written technical papers since World War II.) However, Cayley's work has been brought to light by the research of several modern historians in the 20th century. Notable among them is C. H. Gibbs-Smith, from whose book titled *Sir George Cayley's Aeronautics* (1962) much of the material in Sec. 1.3 has been gleaned. Gibbs-Smith states that had Cayley's work been extended directly by other aviation pioneers, and had they digested ideas espoused in his triple paper of 1809–1810 and in his 1852 paper, successful powered flight would most likely have occurred in the 1890s. Probably so!

As a final tribute to George Cayley, we note that the French aviation historian Charles Dollfus said the following in 1923:


The aeroplane is a British invention: it was conceived in all essentials by George Cayley, the great English engineer who worked in the first half of last century. The name of Cayley is little known, even in his own country, and there are very few who know the work of this admirable man, the greatest genius of aviation. A study of his publications fills one with absolute admiration both for his inventiveness, and for his logic and common sense. This great engineer, during the Second Empire, did in fact

not only invent the aeroplane entire, as it now exists, but he realized that the problem of aviation had to be divided between theoretical research—Cayley made the first aerodynamic experiments for aeronautical purposes—and practical tests, equally in the case of the glider as of the powered aeroplane.

## 1.4 THE INTERREGNUM—FROM 1853 TO 1891

For the next 50 years after Cayley's success with the coachman-carrying glider, there were no major advances in aeronautical technology comparable to those of the previous 50 years. Indeed, as stated in Sec. 1.3, much of Cayley's work became obscure to all but a few dedicated investigators. However, there was considerable activity, with numerous people striking out (sometimes blindly) in various uncoordinated directions to conquer the air. Some of these efforts are noted in the following paragraphs, just to establish the flavor of the period.


William Samuel Henson (1812–1888) was a contemporary of Cayley. In April 1843 he published in England a design for a fixed-wing airplane powered by a steam engine driving two propellers. Called the *aerial steam carriage*, this design received wide publicity throughout the 19th century, owing mainly to a series of illustrative engravings that were reproduced and sold around the world. This was a publicity campaign of which Madison Avenue would have been proud; one of these pictures is shown in Fig. 1.11. Note some of the qualities of modern aircraft in Fig. 1.11: the engine inside a closed fuselage, driving two propellers; tricycle landing gear; and a single rectangular wing of relatively high aspect ratio. (We discuss the aerodynamic characteristics of such wings in Ch. 5.) Henson's design was a direct product of George Cayley's ideas and research in aeronautics. The aerial steam carriage was never built; but the design, along with its widely published pictures, served to engrave George Cayley's fixed-wing concept on the minds of virtually all subsequent workers. Thus, even though Cayley's published papers fell into obscurity after his death, his major concepts were partly absorbed and perpetuated by subsequent generations of inventors, even though most of these inventors did not know the true source of the ideas. In this manner, Henson's aerial steam carriage was one of the most influential airplanes in history, even though it never flew.

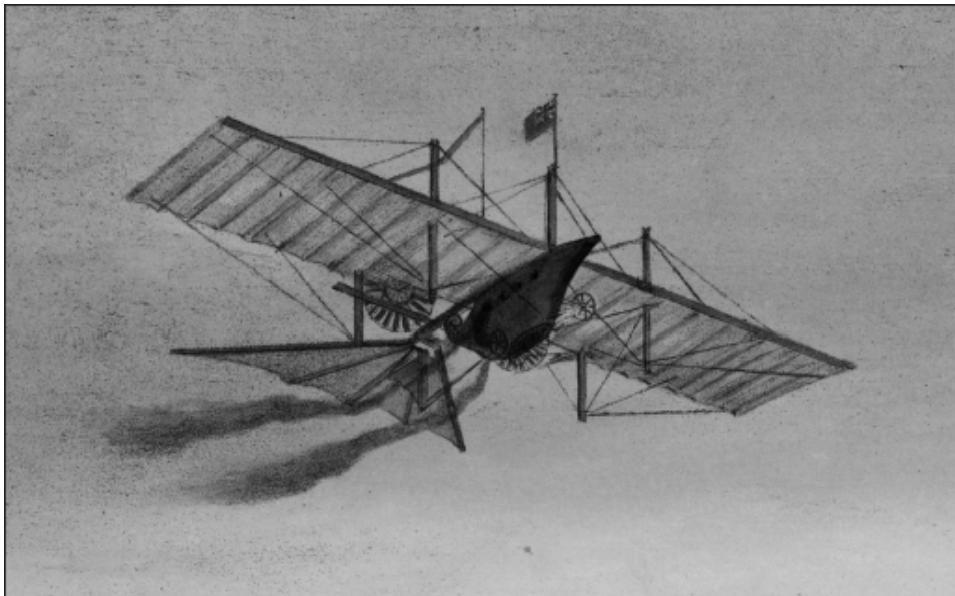

**Figure 1.11** Henson's aerial steam carriage, 1842–1843.


(Source: Library of Congress Prints & Photographs Division [LC-DIG-ppmsca-03479].)

John Stringfellow, a friend of Henson, made several efforts to bring Henson's design to fruition. Stringfellow built several small steam engines and attempted to power some model monoplanes off the ground. He was close but unsuccessful. However, his most recognized work appeared in the form of a steam-powered triplane, a model of which was shown at the 1868 aeronautical exhibition sponsored by the Aeronautical Society at the Crystal Palace in London. A photograph of Stringfellow's triplane is shown in Fig. 1.12. This airplane was also unsuccessful, but again it was extremely influential because of worldwide publicity. Illustrations of this triplane appeared throughout the end of the 19th century. Gibbs-Smith, in his book *Aviation: An Historical Survey from Its Origins to the End of World War II* (1970), states that these illustrations were later a strong influence on Octave Chanute, and through him the Wright brothers, and strengthened the concept of superimposed wings. Stringfellow's triplane was the main bridge between George Cayley's aeronautics and the modern biplane.

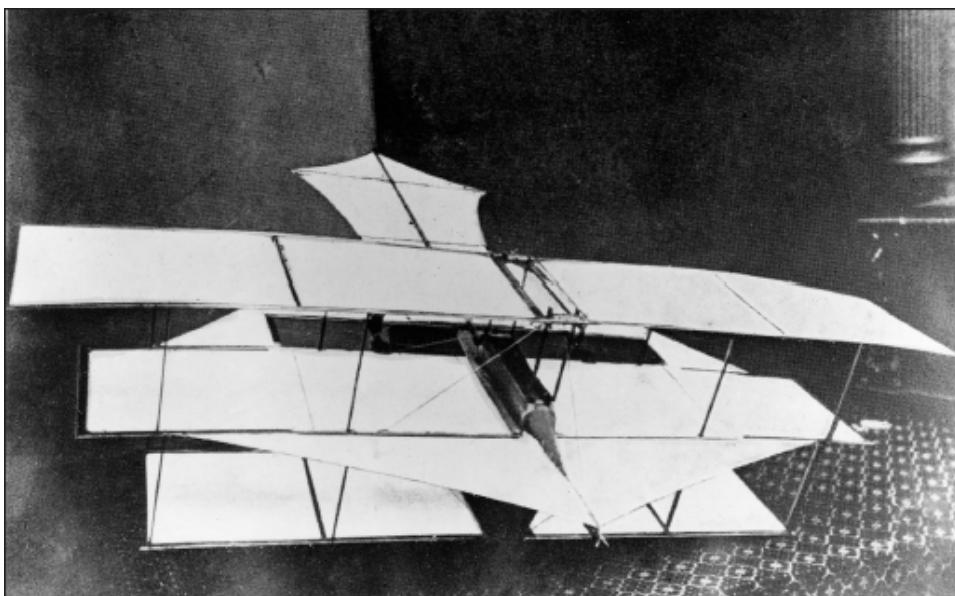

**Figure 1.12** Stringfellow's model triplane exhibited at the first aeronautical exhibition in London, 1868.

(Source: *Science and Society/SuperStock.*)

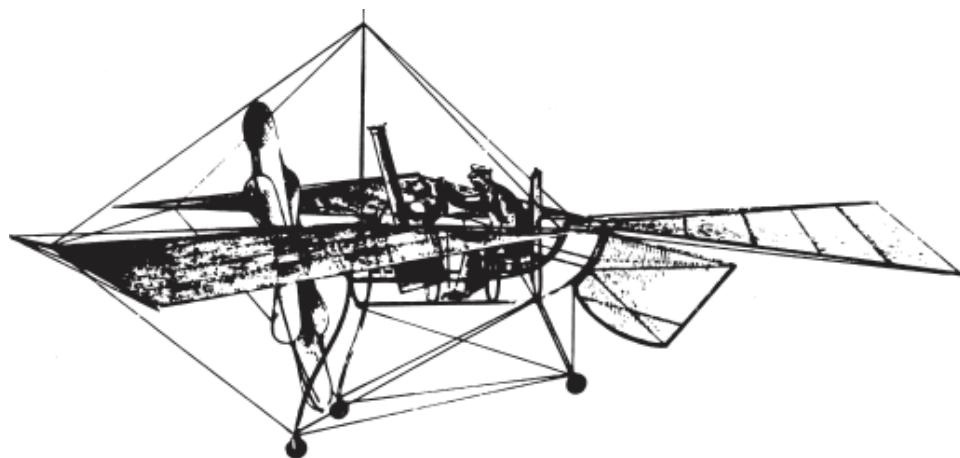


**Figure 1.13** Du Temple's airplane: the first aircraft to make a powered but assisted takeoff, 1874.

During this period, the first powered airplanes actually hopped off the ground, but only for hops. In 1857–1858 the French naval officer and engineer Felix Du Temple flew the first successful powered model airplane in history; it was a monoplane with swept-forward wings and was powered by clockwork! Then, in 1874, Du Temple achieved the world's first powered takeoff by a piloted, full-size airplane. Again the airplane had swept-forward wings, but this time it was powered by some type of hot-air engine (the precise type is unknown). A sketch

of Du Temple's full-size airplane is shown in Fig. 1.13. The machine, piloted by a young sailor, was launched down an inclined plane at Brest, France; it left the ground for a moment but did not come close to anything resembling sustained flight. In the same vein, the second powered airplane with a pilot left the ground near St. Petersburg, Russia, in July 1884. Designed by Alexander F. Mozhaiski, this machine was a steam-powered monoplane, shown in Fig. 1.14. Mozhaiski's design was a direct descendant of Henson's aerial steam carriage; it was even powered by an English steam engine. With I. N. Golubev as pilot, this airplane was launched down a ski ramp and flew for a few seconds. As with Du Temple's airplane, no sustained flight was achieved. At various times the Russians have credited Mozhaiski with the first powered flight in history, but of course it did not satisfy the necessary criteria to be called such. Du Temple and Mozhaiski achieved the first and second *assisted* powered takeoffs, respectively, in history, but neither experienced sustained flight. In his book *The World's First Aeroplane Flights* (1965), C. H. Gibbs-Smith states the following criteria used by aviation historians to judge a successful powered flight:

In order to qualify for having made a simple powered and sustained flight, a conventional aeroplane should have sustained itself freely in a horizontal or rising flight path—without loss of airspeed—beyond a point where it could be influenced by any momentum built up before it left the ground: otherwise its performance can only be rated as a powered leap, i.e., it will not have made a fully self-propelled flight, but will only have followed a ballistic trajectory modified by the thrust of its propeller and by the aerodynamic forces acting upon its aerofoils. Furthermore, it must be shown that the machine can be kept in satisfactory equilibrium. Simple sustained flight obviously need not include full controllability, but the maintenance of adequate equilibrium in flight is part and parcel of sustention.

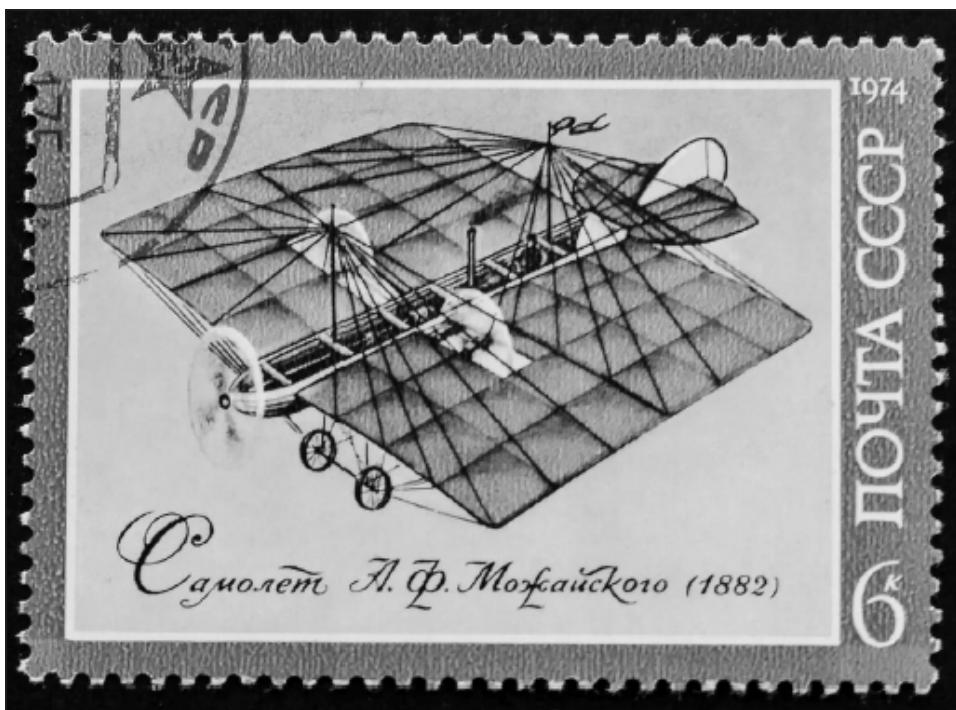

**Figure 1.14** The second airplane to make an assisted takeoff: Mozhaiski's aircraft, Russia, 1884.

(Source: Zenobillis/Shutterstock.)

Under these criteria, there is no doubt in the mind of any major aviation historian that the first powered flight was made by the Wright brothers in 1903. However, the assisted “hops” just described put two more rungs in the ladder of aeronautical development in the 19th century.

Of particular note during this period is the creation in London in 1866 of the Aeronautical Society of Great Britain. Before this time, work on “aerial navigation” (a phrase coined by George Cayley) was looked upon with some disdain by many scientists and engineers. It was too out of the ordinary and was not to be taken seriously. However, the Aeronautical Society soon attracted scientists of stature and vision, people who shouldered the task of solving the problems of mechanical flight in a more orderly and logical fashion. In turn, aeronautics took on a more serious and meaningful atmosphere. The society, through its regular meetings and technical journals, provided a cohesive scientific outlet for the presentation and digestion of aeronautical engineering results. The society is still flourishing today in the form of the highly respected Royal Aeronautical Society. Moreover, it served as a model for the creation of both the American Rocket Society and the Institute of Aeronautical Sciences in the United States; both of these societies merged in 1964 to form the American

Institute of Aeronautics and Astronautics (AIAA), one of the most influential channels for aerospace engineering information exchange today.

In conjunction with the Aeronautical Society of Great Britain, at its first meeting on June 27, 1866, Francis H. Wenham read a paper titled “Aerial Locomotion,” one of the classics in aeronautical engineering literature. Wenham was a marine engineer who later was to play a prominent role in the society and who later designed and built the first wind tunnel in history (see Sec. 4.24). His paper, which was also published in the first annual report of the society, was the first to point out that most of the lift of a wing was obtained from the portion near the leading edge. He also established that a wing with a high aspect ratio was the most efficient for producing lift. (We will see why in Ch. 5.)

As noted in our previous discussion about Stringfellow, the Aeronautical Society started out in style: When it was only two years old, in 1868, it put on the first aeronautical exhibition in history at the Crystal Palace. It attracted an assortment of machines and balloons and for the first time offered the general public a firsthand overview of the efforts being made to conquer the air. Stringfellow’s triplane (discussed earlier) was of particular interest. Zipping over the heads of the enthralled onlookers, the triplane moved through the air along an inclined cable strung below the roof of the exhibition hall (see Fig. 1.12). However, it did not achieve sustained flight on its own. In fact, the 1868 exhibition did nothing to advance the technical aspects of aviation; nevertheless, it was a masterstroke of good public relations.

## 1.5 OTTO LILIENTHAL (1848–1896)—THE GLIDER MAN

With all the efforts that had been made in the past, it was still not until 1891 that a human literally jumped into the air and flew with wings in any type of controlled fashion. This person was Otto Lilienthal, one of the giants in aeronautical engineering (and in aviation in general). Lilienthal designed and flew the first successful controlled gliders in history. He was a man of aeronautical stature comparable to Cayley and the Wright brothers. Let us examine the man and his contributions more closely.

Lilienthal was born on May 23, 1848, at Anklam, Prussia (Germany). He obtained a good technical education at trade schools in Potsdam and Berlin, the latter at the Berlin Technical Academy, graduating with a degree in mechanical engineering in 1870. After a one-year stint in the army during the Franco-Prussian War, Lilienthal went to work designing machinery in his own factory. However, from early childhood he was interested in flight and performed some youthful experiments on ornithopters of his own design. Toward the late 1880s,


his work and interests took a more mature turn, which ultimately led to fixed-wing gliders.

In 1889, Lilienthal published a book titled *Der Vogelflug als Grundlage der Fliegekunst* (Bird Flight as the Basis of Aviation). This is another of the early classics in aeronautical engineering: Not only did he study the structure and types of birds' wings, but he also applied the resulting aerodynamic information to the design of mechanical flight. Lilienthal's book contained some of the most detailed aerodynamic data available at that time. Translated sections were later read by the Wright brothers, who incorporated some of his data in their first glider designs in 1900 and 1901.

By 1889 Lilienthal had also come to a philosophical conclusion that was to have a major impact on the next two decades of aeronautical development. He concluded that to learn practical aerodynamics, he had to get up in the air and experience it himself. In his own words,

One can get a proper insight into the practice of flying only by actual flying experiments. . . . The manner in which we have to meet the irregularities of the wind, when soaring in the air, can only be learnt by being in the air itself. . . . The only way which leads us to a quick development in human flight is a systematic and energetic practice in actual flying experiments.

To put this philosophy into practice, Lilienthal designed a glider in 1889 and another in 1890; both were unsuccessful. However, in 1891 Lilienthal's first successful glider flew from a natural hill at Derwitz, Germany. (Later he was to build an artificial hill about 50 ft high near Licherfelde, a suburb of Berlin; this conically shaped hill allowed glider flights to be made into the wind, no matter what the direction.) The general configuration of his monoplane gliders is shown in Fig. 1.15, which is a photograph showing Lilienthal as the pilot. Note the rather birdlike planform of the wing. Lilienthal used cambered (curved) airfoil shapes on the wing and incorporated vertical and horizontal tail planes in the back for stability. These machines were hang gliders, the grandparents of the sporting vehicles of today. Flight control was exercised by shifting one's center of gravity under the glider.

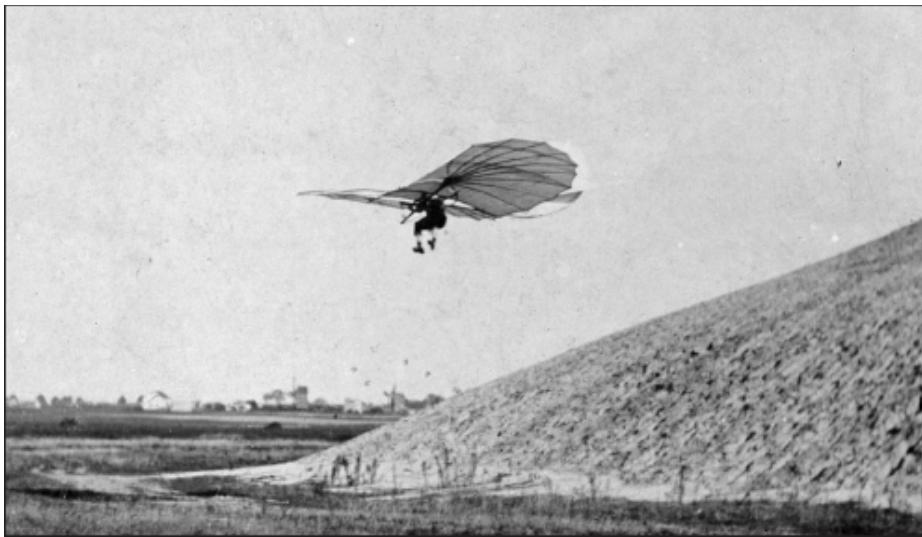

**Figure 1.15** A monoplane hang glider by Lilienthal, 1894.

(Source: Library of Congress Prints & Photographs Division [LC-DIG-ppmsca-02546].)

Contrast Lilienthal's flying philosophy with those of previous would-be aviators before him. During most of the 19th century, powered flight was looked upon in a brute-force manner: Build an engine strong enough to drive an airplane, slap it on an airframe strong enough to withstand the forces and to generate the lift, and presumably you could get into the air. What would happen *after* you got into the air would be just a simple matter of steering the airplane around the sky like a carriage or automobile on the ground—at least this was the general feeling. Gibbs-Smith called the people taking this approach the *chauffeurs*. In contrast were the *airmen*—Lilienthal was the first—who recognized the need to get up in the air, fly around in gliders, and obtain the “feel” of an airplane *before* an engine was used for powered flight. The chauffeurs were mainly interested in thrust and lift, whereas the airmen were more concerned with flight control in the air. The airmen’s philosophy ultimately led to successful powered flight; the chauffeurs were singularly unsuccessful.

Lilienthal made more than 2000 successful glider flights. The aerodynamic data he obtained were published in papers circulated throughout the world. In fact, his work was timed perfectly with the rise of photography and the printing industry. In 1871 the dry-plate negative was invented, which by 1890 could “freeze” a moving object without a blur. Also, the successful halftone method of printing photographs in books and journals had been developed. As a result, photographs of Lilienthal’s flights were widely distributed; indeed, Lilienthal was the first human to be photographed in an airplane (see Fig. 1.15). Such widespread dissemination of his results inspired other pioneers in aviation. The

Wright brothers' interest in flight did not crystallize until Wilbur first read some of Lilienthal's papers in about 1894.

On Sunday, August 9, 1896, Lilienthal was gliding from the Gollenberg hill near Stollen in Germany. It was a fine summer's day. However, a temporary gust of wind brought Lilienthal's monoplane glider to a standstill; he stalled and crashed to the ground. Only the wing was crumpled; the rest of the glider was undamaged. However, Lilienthal was carried away with a broken spine. He died the next day in the Bergmann Clinic in Berlin. During his life Lilienthal remarked several times that "sacrifices must be made." This epitaph is carved on his gravestone in the Licherfelde cemetery.


There is some feeling that had Lilienthal lived, he would have beaten the Wright brothers to the punch. In 1893 he built a powered machine; however, the prime mover was a carbonic acid gas motor that twisted six slats at each wing tip—obviously an ornithopter-type idea to mimic the natural mode of propulsion for birds. In the spring of 1895 he built a second, but larger, powered machine of the same type. Neither of these airplanes was ever flown with the engine operating. It seems to this author that this mode of propulsion was doomed to failure. If Lilienthal had lived, would he have turned to the gasoline engine driving a propeller and thus achieved powered flight before 1903? It is a good question for conversation.

## 1.6 PERCY PILCHER (1867–1899)—EXTENDING THE GLIDER TRADITION

In June 1895, Otto Lilienthal received a relatively young and very enthusiastic visitor in Berlin—Percy Pilcher, a Scot who lived in Glasgow and who had already built his first glider. Under Lilienthal's guidance, Pilcher made several glides from the artificial hill. This visit added fuel to Pilcher's interest in aviation; he returned to the British Isles and over the next four years built a series of successful gliders. His most noted machine was the *Hawk*, built in 1896 (see Fig. 1.16). Pilcher's experiments with his hang gliders made him the most-distinguished British aeronautical engineer since George Cayley. Pilcher was an airman, and along with Lilienthal he underscored the importance of learning the practical nature of flight in the air before lashing an engine to the machine.

However, Pilcher's sights were firmly set on powered flight. In 1897 he calculated that an engine of 4 hp weighing no more than 40 lb, driving a 5-ft-diameter propeller, would be necessary to power his *Hawk* off the ground. Because no such engine was available commercially, Pilcher (who was a marine engineer by training) spent most of 1898 designing and constructing one. It was completed and bench-tested by the middle of 1899. Then, in one of those quirks

of fate that dot many aspects of history, Pilcher was killed while demonstrating his *Hawk* glider at the estate of Lord Braye in Leicestershire, England. The weather was bad, and on his first flight the glider was thoroughly water-soaked. On his second flight, the heavily sodden tail assembly collapsed, and Pilcher crashed to the ground. Like Lilienthal, Pilcher died one day after this disaster. Hence England and the world also lost the only man other than Lilienthal who might have achieved successful powered flight before the Wright brothers.

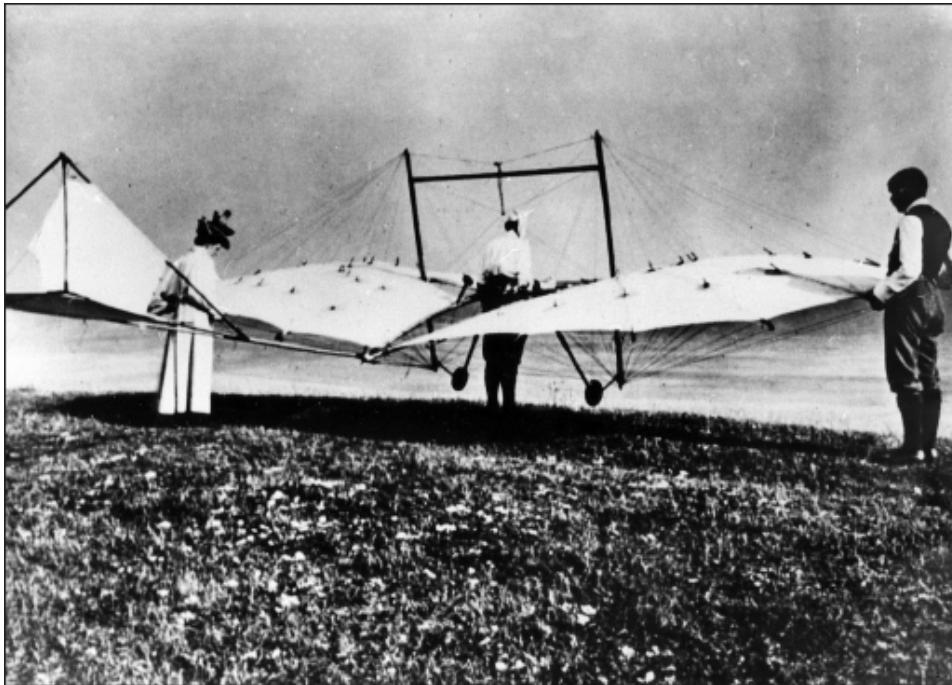

**Figure 1.16** Pilcher's hang glider, the *Hawk*, 1896.

(Source: *The Keasbury-Gordon Photograph Archive/Alamy Stock Photo.*)


## 1.7 AERONAUTICS COMES TO AMERICA

Look at the geographic distribution of the early developments in aeronautics as portrayed in Secs. 1.2 through 1.6. After the advent of ballooning, due to the Montgolfiers' success in France, progress in heavier-than-air machines was focused in England until the 1850s: Witness the contributions of Cayley, Henson, and Stringfellow. This is entirely consistent with the fact that England also gave birth to the Industrial Revolution during this time. Then the spotlight moved to the European continent with Du Temple, Mozhaiski, Lilienthal, and others. There were some brief flashes again in Britain, such as those due to Wenham and the Aeronautical Society. In contrast, throughout this time virtually no important progress was being made in the United States. The fledgling nation was busy

consolidating a new government and expanding its frontiers. There was not much interest in or time for serious aeronautical endeavors.

However, this vacuum was broken by Octave Chanute (1832–1910), a French-born naturalized citizen who lived in Chicago. Chanute was a civil engineer who became interested in mechanical flight in about 1875. For the next 35 years he collected, absorbed, and assimilated every piece of aeronautical information he could find. This culminated in 1894 with the publication of his book titled *Progress in Flying Machines*, a work that ranks with Lilienthal's *Der Vogelflug* as one of the great classics in aeronautics. Chanute's book summarized all the important progress in aviation up to that date; in this sense, he was the first serious aviation historian. In addition, Chanute made positive suggestions about the future directions necessary to achieve success in powered flight. The Wright brothers avidly read *Progress in Flying Machines* and subsequently sought out Chanute in 1900. A close relationship and interchange of ideas developed between them. A friendship developed that was to last in various degrees until Chanute's death in 1910.

Chanute was an airman. Following this position, he began to design hang gliders, in the manner of Lilienthal, in 1896. His major specific contribution to aviation was the successful biplane glider shown in Fig. 1.17, which introduced the effective Pratt truss method of structural rigging. The Wright brothers were directly influenced by this biplane glider, and in this sense Chanute provided the natural bridge between Stringfellow's triplane (1868) and the first successful powered flight (1903).

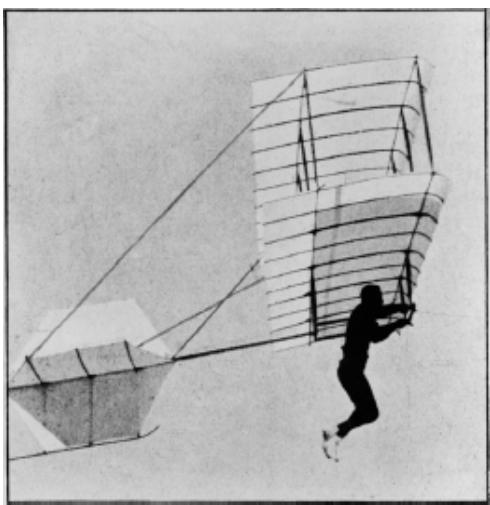

**Figure 1.17** Chanute's hang glider, 1896.

(Source: Library of Congress Prints and Photographs Division [LC-USZ62-104585].)

About 500 mi to the east, in Washington, District of Columbia, the United States' second noted pre-Wright aeronautical engineer was hard at work. Samuel Pierpont Langley (1834–1906), secretary of the Smithsonian Institution, was tirelessly designing and building a series of powered aircraft, which finally culminated in two attempted piloted flights, both in 1903, just weeks before the Wrights' success on December 17.

Langley was born in Roxbury, Massachusetts, on August 22, 1834. He received no formal education beyond high school, but his childhood interest in astronomy spurred him to a lifelong program of self-education. Early in his career, he worked for 13 years as an engineer and architect. Then, after making a tour of European observatories, Langley became an assistant at Harvard Observatory in 1865. He went on to become a mathematics professor at the U.S. Naval Academy, a physics and astronomy professor at the University of Pittsburgh, and the director of the Allegheny Observatory at Pittsburgh. By virtue of his many scientific accomplishments, Langley was appointed secretary of the Smithsonian Institution in 1887.


In this same year, Langley, who was by now a scientist of international reputation, began his studies of powered flight. Following the example of Cayley, he built a large whirling arm, powered by a steam engine, with which he made force tests on airfoils. He then built nearly 100 different types of rubber-band-powered model airplanes, graduating to steam-powered models in 1892. However, it was not until 1896 that Langley achieved any success with his powered models; on May 6 one of his aircraft made a free flight of 3300 ft, and on November 28 another flew for more than  $\frac{3}{4}$  mi. These *Aerodromes* (a term coined by Langley) were tandem-winged vehicles, driven by two propellers between the wings, powered by a 1-hp steam engine of Langley's own design. (However, Langley was influenced by one of John Stringfellow's small aerosteam engines, which was presented to the Smithsonian in 1889. After studying this historic piece of machinery, Langley set out to design a better engine.)

Langley was somewhat satisfied with his success in 1896. Recognizing that further work toward a piloted aircraft would be expensive in both time and money, he "made the firm resolution not to undertake the construction of a large man-carrying machine." (Note that it was in this year that the Wright brothers became interested in powered flight—another example of the flow and continuity of ideas and developments in physical science and engineering. Indeed, Wilbur and Orville were directly influenced and encouraged by Langley's success with powered aircraft. After all, here was a well-respected scientist who believed in the eventual attainment of mechanical flight and who was doing something about it.)

Consequently, there was a lull in Langley's aeronautical work until December 1898. Then, motivated by the Spanish-American War, the War Department, with the personal backing of President McKinley himself, invited Langley to build a machine for passengers. It backed up its invitation with \$50,000. Langley accepted.

Departing from his earlier use of steam, Langley correctly decided that the gasoline-fueled engine was the proper prime mover for aircraft. He first-commissioned Stephan Balzer of New York to produce such an engine; dissatisfied with the results, Langley eventually had his assistant, Charles Manly, redesign the power plant. The resulting engine produced 52.4 hp yet weighed only 208 lb, a spectacular achievement for that time. Using a smaller, 1.5-hp, gasoline-fueled engine, Langley made a successful flight with a quarter-scale model aircraft in June 1901, and then an even more successful flight of the model powered by a 3.2-hp engine in August 1903.

Encouraged by this success, Langley stepped directly to the full-size airplane, a sketch of which is shown in Fig. 1.18. He mounted this tandem-winged aircraft on a catapult to provide an assisted takeoff. In turn, the airplane and catapult were placed on top of a houseboat on the Potomac River (see Fig. 1.19). On October 7, 1903, with Manly at the controls, the airplane was ready for its first attempt. The launching was given wide advance publicity, and the press was present to watch what might be the first successful powered flight in history. A photograph of the *Aerodrome* a moment after launch is shown in Fig. 1.20. Here is the resulting report from the *Washington Post* the next day:

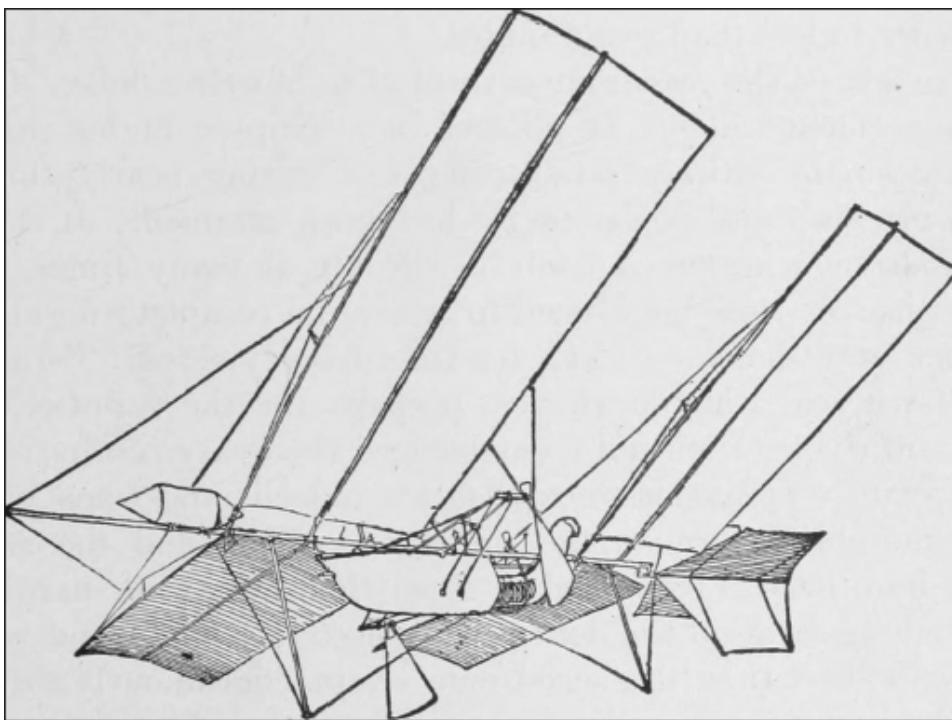


**Figure 1.18** Drawing of the Langley full-size *Aerodrome*.

(Source: Library Book Collection/Alamy Stock Photo.)

A few yards from the houseboat were the boats of the reporters, who for three months had been stationed at Widewater. The newspapermen waved their hands. Manly looked down and smiled. Then his face hardened as he braced himself for the flight, which might have in store for him fame or death. The propeller wheels, a foot from his head, whirred around him one thousand times to the minute. A man forward fired two skyrockets. There came an answering "toot, toot," from the tugs. A mechanic stooped, cut the cable holding the catapult; there was a roaring, grinding noise—and the Langley airship tumbled over the edge of the houseboat and disappeared in the river, sixteen feet below. It simply slid into the water like a handful of mortar. . . .


Manly was unhurt. Langley believed the airplane was fouled by the launching mechanism, and he tried again on December 8, 1903. Again the *Aerodrome* fell into the river, and again Manly was fished out, unhurt (see Fig. 1.21). It is not entirely certain what happened this time; again the fouling of the catapult was blamed, but some experts maintain that the tail boom cracked due to structural weakness. (A recent structural analysis by Dr. Howard Wolko, now retired from the National Air and Space Museum, has proven that the large Langley *Aerodrome* was clearly structurally unsound.) At any rate, that was the end of

Langley's attempts. The War Department gave up, stating that "we are still far from the ultimate goal (of human flight)." Members of Congress and the press leveled vicious and unjustified attacks on Langley (human flight was still looked upon with much derision by most people). In the face of this ridicule, Langley retired from the aeronautical scene. He died on February 27, 1906, a man in despair.

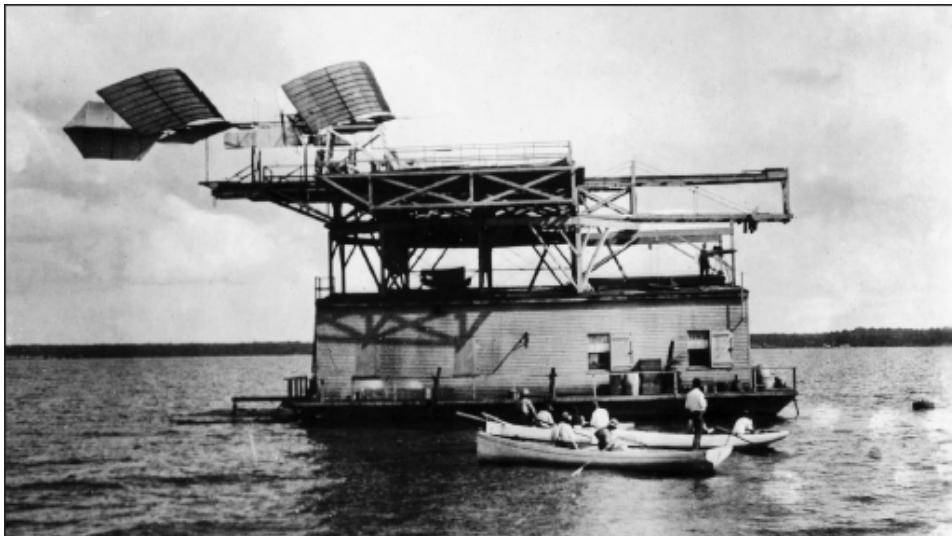

**Figure 1.19** Langley's full-size *Aerodrome* on the houseboat launching catapult, 1903.

(Source: *Science and Society/SuperStock*.)

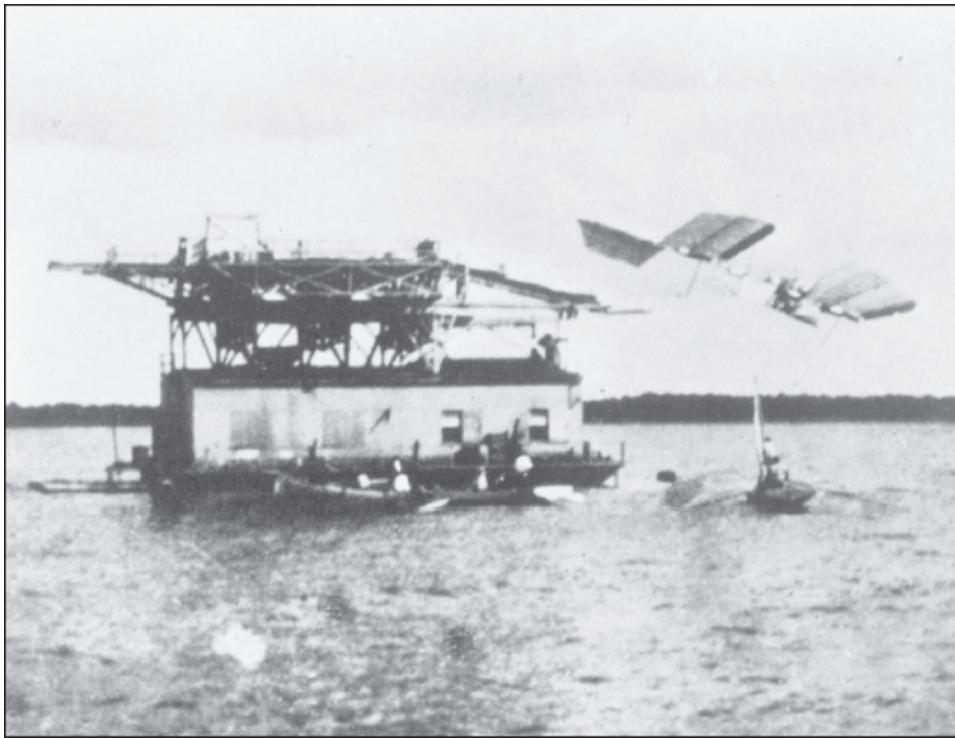

**Figure 1.20** Langley's first launch of the full-size *Aerodrome*, October 7, 1903.

(Source: Library of Congress Prints & Photographs Division [LC-DIG-ggbain-16453].)

In contrast to Chanute and the Wright brothers, Langley was a chauffeur. Most modern experts feel that his *Aerodrome* would not have been capable of sustained, equilibrium flight, had it been successfully launched. Langley made no experiments with gliders with passengers to get the feel of the air. He ignored completely the important aspects of flight control. He attempted to launch Manly into the air on a powered machine without Manly's having one second of flight experience. Nevertheless, Langley's aeronautical work was of some importance because he lent the power of his respected technical reputation to the cause of mechanical flight, and his *Aerodromes* were to provide encouragement to others.

Nine days after Langley's second failure, the *Wright Flyer I* rose from the sands of Kill Devil Hills.

## 1.8 WILBUR (1867–1912) AND ORVILLE (1871–1948) WRIGHT —INVENTORS OF THE FIRST PRACTICAL AIRPLANE

The scene now shifts to the Wright brothers, the premier aeronautical engineers of history. Only George Cayley may be considered comparable. Sec. 1.1 stated that the time was ripe for the attainment of powered flight at the beginning of the 20th century. The ensuing sections then provided numerous historical

brushstrokes to emphasize this statement. Thus, the Wright brothers drew on an existing heritage that is part of every aerospace engineer today.

Wilbur Wright was born on April 16, 1867 (two years after the Civil War), on a small farm in Millville, Indiana. Four years later, Orville was born on August 19, 1871, in Dayton, Ohio. The Wrights were descendants of an old Massachusetts family, and their father was a bishop of the United Brethren Church. The two brothers benefited greatly from the intellectual atmosphere of their family. Their mother was three months short of a college degree. She had considerable mechanical ability, enhanced by spending time in her father's carriage shop. She later designed and built simple household appliances and made toys for her children. In the words of Tom Crouch, the definitive biographer of the Wright brothers, "When the boys wanted mechanical advice or assistance, they came to their mother." Their father, Crouch says, "was one of those men who had difficulty driving a nail straight." (See T. Crouch, *The Bishop's Boys*, Norton, New York, 1989.) Interestingly enough, neither Wilbur nor Orville officially received a high school diploma; Wilbur did not bother to go to the commencement services, and Orville took a special series of courses in his junior year that did not lead to a prescribed degree, and he did not attend his senior year. Afterward, the brothers immediately sampled the business world. In 1889 they first published a weekly four-page newspaper on a printing press of their own design. However, Orville had talent as a prize-winning cyclist, and this prompted the brothers to set up a bicycle sales and repair shop in Dayton in 1892. Three years later they began to manufacture their own bicycle designs, using homemade tools. These enterprises were profitable and helped to provide the financial resources for their later work in aeronautics.

In 1896 Otto Lilienthal was accidentally killed during a glider flight (see Sec. 1.5). In the wake of the publicity, the Wright brothers' interest in aviation, which had been apparent since childhood, was given much impetus. Wilbur and Orville had been following Lilienthal's progress intently; recall that Lilienthal's gliders were shown in flight by photographs distributed around the world. In fact, an article about Lilienthal in an issue of *McClure's Magazine* in 1894 was apparently the first to trigger Wilbur's mature interest; it was not until 1896, though, that Wilbur really became a serious thinker about human flight.

Like several pioneers before him, Wilbur took up the study of bird flight as a guide on the path toward mechanical flight. This led him to conclude in 1899 that birds "regain their lateral balance when partly overturned by a gust of wind, by a torsion of the tips of the wings." Thus emerged one of the most important developments in aviation history: the use of wing twist to control airplanes in lateral (rolling) motion. Ailerons are used on modern airplanes for this purpose, but the idea is the same. (The aerodynamic fundamentals associated with wing

twist or ailerons are discussed in Chs. 5 and 7.) In 1903 Chanute, in describing the work of the Wright brothers, coined the term *wing warping* for this idea, a term that was to become accepted but that was to cause some legal confusion later.

Anxious to pursue and experiment with the concept of wing warping, Wilbur wrote to the Smithsonian Institution in May 1899 for papers and books about aeronautics; in turn, he received a brief bibliography of flying, including works by Chanute and Langley. Most important among these was Chanute's *Progress in Flying Machines* (see Sec. 1.7). Also at this time, Orville became as enthusiastic as his brother, and they both digested all the aeronautical literature they could find. This led to their first aircraft, a biplane kite with a wingspan of 5 ft, in August 1899. This machine was designed to test the concept of wing warping, which was accomplished by means of four controlling strings from the ground. The concept worked!


Encouraged by this success, Wilbur wrote to Chanute in 1900, informing him of their initial, but fruitful, progress. This letter began a close friendship between the Wright brothers and Chanute, which was to benefit both parties in the future. Also, following the true airman philosophy, the Wrights were convinced they had to gain experience in the air before applying power to an aircraft. By writing to the U.S. Weather Bureau, they found an ideal spot for glider experiments: the area around Kitty Hawk, North Carolina, where there were strong and constant winds. A full-size biplane glider was ready by September 1900 and was flown in October of that year at Kitty Hawk. Figure 1.22 shows a photograph of the Wrights' number 1 glider. It had a 17-ft wingspan and a horizontal elevator in front of the wings and was usually flown on strings from the ground; only a few brief piloted flights were made.

With some success behind them, Wilbur and Orville proceeded to build their number 2 glider (see Fig. 1.23). Moving their base of operations to Kill Devil Hills, 4 mi south of Kitty Hawk, they tested number 2 during July and August of 1901. These were mostly manned flights, with Wilbur lying prone on the bottom wing, facing into the wind, as shown in Fig. 1.23. (Through 1901, Wilbur did what little flying was accomplished; Orville flew for the first time a year later.) This new glider was somewhat larger, with a 22-ft wingspan. As with all Wright machines, it had a horizontal elevator in front of the wings. The Wrights felt that a forward elevator would, among other functions, protect them from the type of fatal nosedive that killed Lilienthal.




**Figure 1.21** Langley's second launch of the full-size *Aerodrome*, December 8, 1903.

(Source: Scherl/Süddeutsche Zeitung Photo/Alamy Stock Photo.)

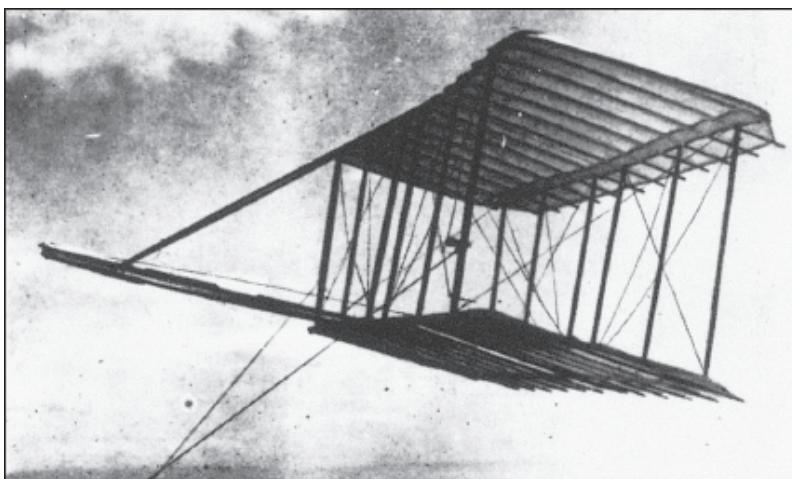

**Figure 1.22** The Wright brothers' number 1 glider at Kitty Hawk, North Carolina, 1900.

(Source: Library of Congress Prints & Photographs Division [LC-DIG-ppprs-00556].)

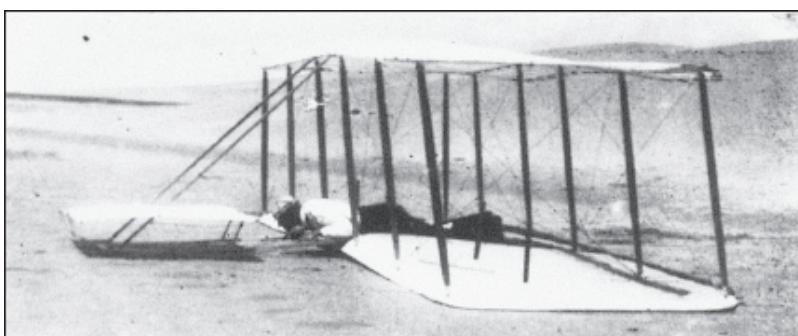

**Figure 1.23** The Wright brothers' number 2 glider at Kill Devil Hills, 1901.


(Source: Library of Congress Prints & Photographs Division [LC-DIG-ppprs-00570].)

During these July and August test flights, Octave Chanute visited the Wrights' camp. He was much impressed by what he saw. This led to Chanute's invitation to Wilbur to give a lecture in Chicago. In giving this paper on September 18, 1901, Wilbur laid bare their experiences, including the design of their gliders and the concept of wing warping. Chanute described Wilbur's presentation as "a devilish good paper which will be extensively quoted." Chanute, as usual, was serving his very useful function as a collector and disseminator of aeronautical data.

However, the Wrights were not close to being satisfied with their results. When they returned to Dayton after their 1901 tests with the number 2 glider, both brothers began to suspect the existing data that appeared in the aeronautical literature. To this date, they had faithfully relied upon detailed aerodynamic information generated by Lilienthal and Langley. Now they wondered about its accuracy. Wilbur wrote that "having set out with absolute faith in the existing scientific data, we were driven to doubt one thing after another, until finally, after two years of experiment, we cast it all aside, and decided to rely entirely upon our own investigations." And investigate they did! Between September 1901 and August 1902, the Wrights undertook a major program of aeronautical research. They built a wind tunnel (see Ch. 4)) in their bicycle shop in Dayton and tested more than 200 different airfoil shapes. They designed a force balance to measure accurately the lift and drag. This period of research was a high-water mark in early aviation development. The Wrights learned, and with them ultimately so did the world. This sense of learning and achievement by the brothers is apparent simply from reading through *The Papers of Wilbur and Orville Wright* (1953), edited by Marvin W. McFarland. The aeronautical research carried out during this period ultimately led to their number 3 glider, which was flown in 1902. It was so successful that Orville wrote that "our tables of air pressure which we made in our wind tunnel would enable us to calculate in advance the performance of a machine." Here is the first example in history of the major impact of wind tunnel testing on the flight development of a given machine, an impact that has been repeated for all major airplanes of the 20th century. (Very recently, it has been shown by Anderson in *A History of Aerodynamics and Its Impact on Flying Machines* [Cambridge University Press, 1997] that Lilienthal's data were reasonable, but the Wrights misinterpreted them. Applying the data incorrectly, the Wrights obtained incorrect results for their 1900 and 1901 gliders. However, this is irrelevant because the Wrights went on to discover the correct results.)

The number 3 glider was a classic. It was constructed during August and September of 1902. It first flew at Kill Devil Hills on September 20, 1902. It was a biplane glider with a 32-ft 1-in wingspan, the largest of the Wright gliders to date. This number 3 glider is shown in Fig. 1.24. Note that, after several modifications, the Wrights added a vertical rudder behind the wings. This rudder was movable, and when connected to move in unison with the wing warping, it enabled the number 3 glider to make a smooth, banked turn. This combined use of rudder with wing warping (or later, ailerons) was another major contribution of the Wright brothers to flight control in particular, and aeronautics in general.

So the Wrights now had the most practical and successful glider in history. During 1902 they made more than 1000 perfect flights. They set a distance record of 622.5 ft and a duration record of 26 s. In the process, both Wilbur and Orville became highly skilled and proficient pilots—something that would later be envied worldwide.

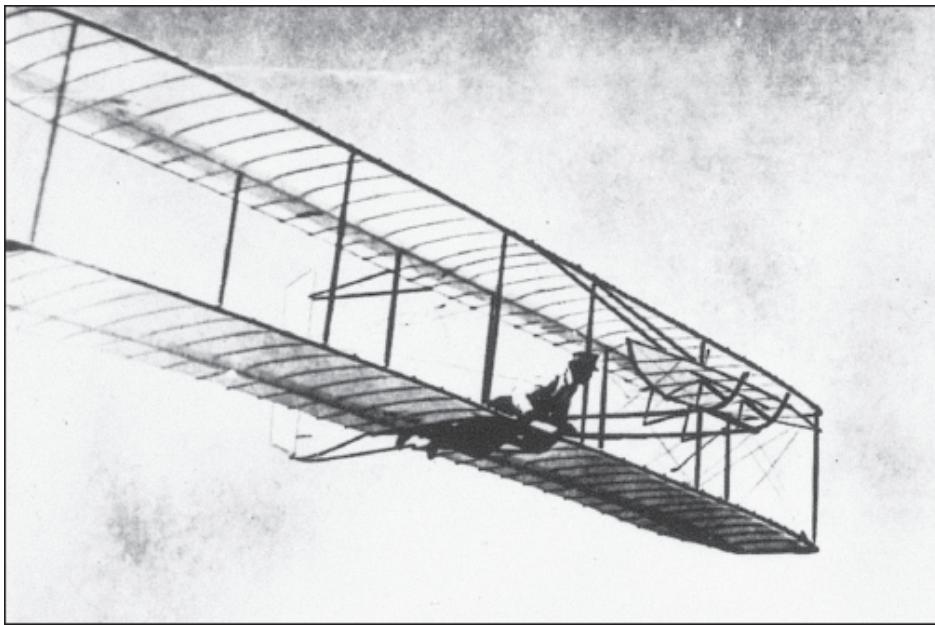

**Figure 1.24** The Wright brothers' number 3 glider, 1902.

(Source: Library of Congress Prints & Photographs Division [LC-DIG-ppprs-00602].)

Powered flight was now just at their fingertips, and the Wrights knew it!Flushed with success, they returned to Dayton to face the last remaining problem: propulsion. As had Langley before them, they could find no commercial engine that was suitable, so they designed and built their own during the winter months of 1903. It produced 12 hp and weighed about 200 lb. Moreover, they conducted their own research, which allowed them to design an

effective propeller. These accomplishments, which had eluded people for a century, gushed forth from the Wright brothers like natural spring water.

With all the major obstacles behind them, Wilbur and Orville built their *Wright Flyer I* from scratch during the summer of 1903. It closely resembled the number 3 glider, but had a wingspan of 40 ft 4 in and used a double rudder behind the wings and a double elevator in front of the wings. And, of course, there was the spectacular gasoline-fueled Wright engine, driving two pusher propellers by means of bicycle-type chains. A three-view diagram and a photograph of the *Wright Flyer I* are shown in Figs. 1.1 and 1.2, respectively.

From September 23 to 25, the machine was transported to Kill Devil Hills, where the Wrights found their camp in some state of disrepair. Moreover, their number 3 glider had been damaged over the winter months. They made repairs and afterward spent many weeks of practice with their number 3 glider. Finally, on December 12, everything was ready. However, this time the elements interfered: Bad weather postponed the first test of the *Wright Flyer I* until December 14. On that day, the Wrights called witnesses to the camp and then flipped a coin to see who would be the first pilot. Wilbur won. The *Wright Flyer I* began to move along the launching rail under its own power, picking up flight speed. It lifted off the rail properly but suddenly went into a steep climb, stalled, and thumped back to the ground. It was the first recorded case of pilot error in powered flight: Wilbur admitted that he had put on too much elevator and brought the nose too high.

With minor repairs made, and with the weather again favorable, the *Wright Flyer I* was again ready for flight on December 17. This time it was Orville's turn at the controls. The launching rail was again laid on level sand. A camera was adjusted to take a picture of the machine as it reached the end of the rail. The engine was put on full throttle, the holding rope was released, and the machine began to move. The rest is history, as portrayed in the opening paragraphs of this chapter.

One cannot read or write about this epoch-making event without experiencing some of the excitement of the time. Wilbur Wright was 36 years old; Orville was 32. Between them, they had done what no one before them had accomplished. By their persistent efforts, their detailed research, and their superb engineering, the Wrights had made the world's first successful heavier-than-air flight, satisfying all the necessary criteria laid down by responsible aviation historians. After Orville's first flight on that December 17, three more flights were made during the morning, the last covering 852 ft and remaining in the air for 59 s. The world of flight—and along with it the world of successful aeronautical engineering—had been born!


It is interesting to note that even though the press was informed of these events via Orville's telegram to his father (see the introduction to this chapter), virtually no notice appeared before the public; even the Dayton newspapers did not herald the story. This is a testimonial to the widespread cynicism and disbelief among the general public about flying. Recall that just nine days before, Langley had failed dismally in full view of the public. In fact, it was not until Amos I. Root observed the Wrights flying in 1904 and published his inspired account in a journal of which he was the editor, *Gleanings in Bee Culture* (January 1, 1905, issue), that the public had its first detailed account of the Wrights' success. However, the article had no impact.

The Wright brothers did not stop with the *Wright Flyer I*. In May 1904, their second powered machine, the *Wright Flyer II*, was ready. This aircraft had a smaller wing camber (airfoil curvature) and a more powerful and efficient engine. In outward appearance, it was essentially like the 1903 machine. During 1904, more than 80 brief flights were made with the *Wright Flyer II*, all at a 90-acre field called Huffman Prairie, 8 mi east of Dayton. (Huffman Prairie still exists today; it is on the huge Wright-Patterson Air Force Base, a massive aerospace development center named in honor of the Wrights.) These tests included the first circular flight—made by Wilbur on September 20. The longest flight lasted 5 min 4 s, traversing more than 2 3  $\frac{1}{4}$  mi.

More progress was made in 1905. The *Wright Flyer III* was ready by June. The wing area was slightly smaller than that of the *Flyer II*, the airfoil camber was increased back to what it had been in 1903, the biplane elevator was made larger and was placed farther in front of the wings, and the double rudder was also larger and placed farther back behind the wings. New, improved propellers were used. This machine, the *Flyer III*, was the first *practical* airplane in history. It made more than 40 flights during 1905, the longest being 38 min 3 s and covering 24 mi. These flights were generally terminated only after the gas was used up. C. H. Gibbs-Smith writes about the *Flyer III*, "The description of this machine as the world's first practical powered aeroplane is justified by the sturdiness of its structure, which withstood constant takeoffs and landings; its ability to bank, turn, and perform figures of eight; and its reliability in remaining airborne (with no trouble) for over half an hour."

Then the Wright brothers, who heretofore had been completely open about their work, became secretive. They were not making any progress in convincing the U.S. government to buy their airplane, but at the same time various people and companies were beginning to make noises about copying the Wrights' design. A patent applied for by the Wrights in 1902 to cover their ideas of wing warping combined with rudder action was not granted until 1906. So, between October 16, 1905, and May 6, 1908, neither Wilbur nor Orville flew, nor did they

allow anyone to view their machines. However, their aeronautical engineering did not stop. During this period, they built at least six new engines. They also designed a new flying machine that was to become the standard Wright type A, shown in Fig. 1.25. This airplane was similar to the *Wright Flyer III*, but it had a 40-hp engine and allowed two people to be seated upright between the wings. It also represented the progressive improvement of a basically successful design, a concept of airplane design carried out to present day.

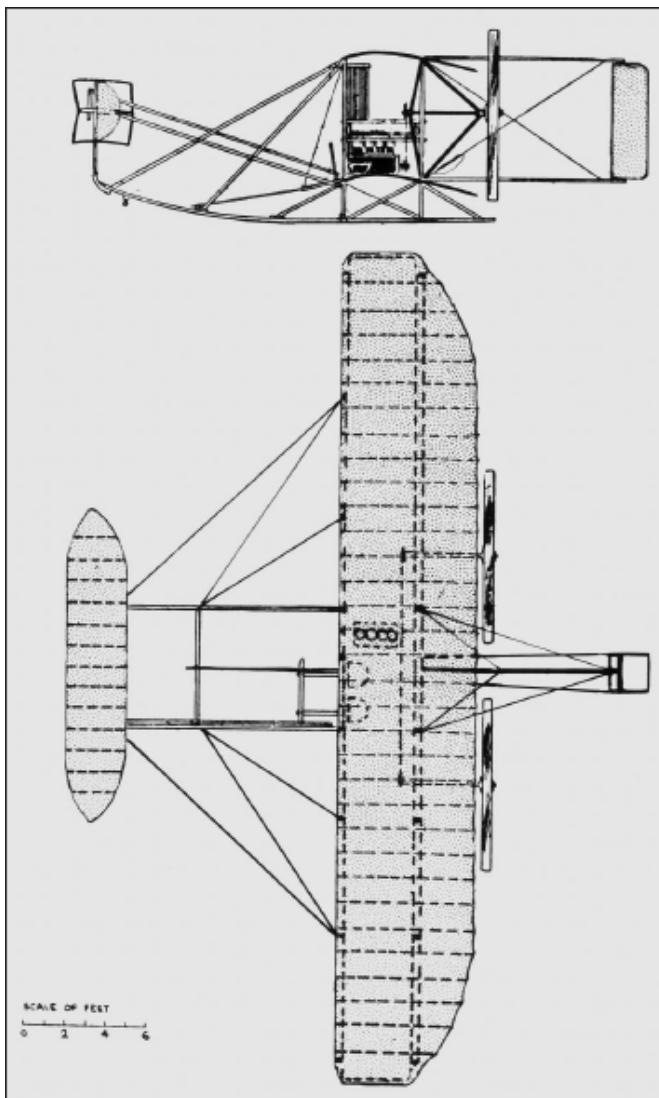

**Figure 1.25** A two-view of the Wright type A, 1908.

(Source: SSPL/Getty Images.)

The public and the Wright brothers finally had their meeting, and in a big way, in 1908. The Wrights signed contracts with the U.S. Army in February 1908, and

with a French company in March of the same year. After that the wraps were off. Wilbur traveled to France in May, picked up a crated type A that had been waiting at Le Havre since July 1907, and completed the assembly in a friend's factory at Le Mans. With supreme confidence, he announced his first public flight in advance—to take place on August 8, 1908. Aviation pioneers from all over Europe, who had heard rumors about the Wrights' successes since 1903, the press, and the general public all flocked to a small race course at Hunaudieres, 5 mi south of Le Mans. On the appointed day, Wilbur took off, made an impressive, circling flight for almost 2 min, and landed. It was like a revolution. Aeronautics, which had been languishing in Europe since Lilienthal's death in 1896, was suddenly alive. The Frenchman Louis Bleriot, soon to become famous for being first to fly across the English Channel, exclaimed, "For us in France and everywhere, a new era in mechanical flight has commenced—it is marvelous." The French press, after being skeptical for years of the Wrights' supposed accomplishments, called Wilbur's flight "one of the most exciting spectacles ever presented in the history of applied science." More deeply echoing the despair of many would-be French aviators who were in a race with the Wrights to be first with powered flight, Leon Delagrange said, "Well, we are beaten. We just don't exist." Subsequently Wilbur made 104 flights in France before the end of 1908. The acclaim and honor due for the Wright brothers since 1903 had finally arrived.

Orville was experiencing similar success in the United States. On September 3, 1908, he began a series of demonstrations for the U.S. Army at Fort Myer, near Washington, District of Columbia. Flying a type A machine, he made 10 flights, the longest for 1 h 14 min, before September 17. On that day, Orville experienced a propeller failure that ultimately caused the machine to crash, seriously injuring himself and killing his passenger, Lt. Thomas E. Selfridge. This was the first crash of a powered aircraft, but it did not deter either Orville or the Army. Orville made a fast recovery and was back to flying in 1909—and the Army bought the airplane.

The public flights made by Wilbur in France in 1908 electrified aviators in Europe. European airplane designers immediately adopted two of the most important technical features of the Wright machine: lateral control and the propeller. Prior to 1908, European flying-machine enthusiasts had no concept of the importance of lateral control (rolling of the airplane—see Sec. 7.1) and certainly no mechanical mechanism to achieve it; the Wrights achieved lateral control by their innovative concept of wing warping. By 1909, however, the Frenchman Henri Farman designed a biplane named the *Henri Farman III* that included flaplike ailerons at the trailing edge near the wing tips; ailerons quickly became the favored mechanical means for lateral control, continuing to the

present day. Similarly, the European designers were quick to adopt the long, slender shape of the Wrights' propellers; these were quite different from the wide, paddlelike shapes then in use, which had low propeller efficiencies (defined in Sec. 6.6.1) on the order of 40 to 50 percent. In 1909 the efficiency of the Wrights' propeller was measured by an engineer in Berlin to be a stunning 76 percent. Recent wind tunnel experiments at the NASA Langley Research Center (carried out by researchers from Old Dominion University in 2002) indicated an even more impressive 84 percent efficiency for the Wrights' propeller. These two technical features—the appreciation for, and a mechanical means to achieve, lateral control, and the design of a highly efficient propeller—are the two most important technical legacies left by the Wrights to future airplanes, and European designers quickly seized upon them. (See Anderson, *The Airplane: A History of Its Technology*, American Institute of Aeronautics and Astronautics, 2002, for more details.)

The accomplishments of the Wright brothers were monumental. Their zenith occurred during the years 1908 to 1910; after that European aeronautics quickly caught up and went ahead in the technological race. The main reason for this was that all the Wrights' machines, from the first gliders, were statically unstable (see Ch. 7)). This meant that the Wrights' airplanes would not fly "by themselves"; rather, they had to be constantly, every instant, controlled by the pilot. In contrast, European inventors believed in inherently stable aircraft. After their lessons in flight control from Wilbur in 1908, workers in France and England moved quickly to develop controllable, but stable, airplanes. These were basically safer and easier to fly. The concept of static stability has carried over to virtually all airplane designs through the present century. (It is interesting to note that the new designs for military fighters, such as the Lockheed-Martin F-22, are statically *unstable*, which represents a return to the Wrights' design philosophy. However, unlike the *Wright Flyers*, these new aircraft are flown constantly, every moment, by electrical means, by the new "fly-by-wire" concept.)

To round out the story of the Wright brothers, Wilbur died in an untimely fashion of typhoid fever on May 30, 1912. In a fitting epitaph, his father said, "This morning, at 3:15 Wilbur passed away, aged 45 years, 1 month, and 14 days. A short life full of consequences. An unfailing intellect, imperturbable temper, great self-reliance and as great modesty. Seeing the right clearly, pursuing it steadily, he lived and died."

Orville lived on until January 30, 1948. During World War I, he was commissioned a major in the Signal Corps Aviation Service. Although he sold all his interest in the Wright company and "retired" in 1915, he afterward performed research in his own shop. In 1920 he invented the split flap for wings, and he continued to be productive for many years.


As a final footnote to this story of two great men, there occurred a dispute between Orville and the Smithsonian Institution concerning the proper historical claims on powered flight. As a result, Orville sent the historic *Wright Flyer I*, the original, to the Science Museum in London in 1928. It resided there, through the bombs of World War II, until 1948, when the museum sent it to the Smithsonian. It is now part of the National Air and Space Museum and occupies a central position in the gallery.

## **1.9 THE AERONAUTICAL TRIANGLE—LANGLEY, THE WRIGHTS, AND GLENN CURTISS**

In 1903—a milestone year for the Wright brothers, with their first successful powered flight—Orville and Wilbur faced serious competition from Samuel P. Langley. As portrayed in Sec. 1.7, Langley was the secretary of the Smithsonian Institution and was one of the most respected scientists in the United States at that time. Beginning in 1886, Langley mounted an intensive aerodynamic research and development program, bringing to bear the resources of the Smithsonian and later the War Department. He carried out this program with a dedicated zeal that matched the fervor that the Wrights themselves demonstrated later. Langley's efforts culminated in the full-scale *Aerodrome* shown in Figs. 1.18, 1.19, and 1.20. In October 1903 this *Aerodrome* was ready for its first attempted flight, in the full glare of publicity in the national press.

The Wright brothers knew about Langley's progress. During their preparations with the *Wright Flyer* at Kill Devil Hills in the summer and fall of 1903, Orville and Wilbur kept in touch with Langley's progress via the newspapers. They felt this competition keenly, and the correspondence of the Wright brothers at this time indicates an uneasiness that Langley might become the first to successfully achieve powered flight before they would have a chance to test the *Wright Flyer*. In contrast, Langley felt no competition at all from the Wrights. Although the aeronautical activity of the Wright brothers was generally known throughout the small circle of aviation enthusiasts in the United States and Europe—thanks mainly to reports about their work by Octave Chanute—this activity was not taken seriously. At the time of Langley's first attempted flight on October 7, 1903, there is no recorded evidence that Langley was even aware of the Wrights' powered machine sitting on the sand dunes of Kill Devil Hills, and certainly no appreciation by Langley of the degree of aeronautical sophistication achieved by the Wrights. As it turned out, as was related in Sec. 1.7, Langley's attempts at manned powered flight, first on October 7 and again on December 8, resulted in total failure. In hindsight, the Wrights had nothing to fear from competition with Langley.

Such was not the case in their competition with another aviation pioneer, Glenn H. Curtiss, beginning five years later. In 1908—another milestone year for the Wrights, with their glorious first public flights in France and the United States—Orville and Wilbur faced a serious challenge and competition from Curtiss, which was to lead to acrimony and a flurry of lawsuits that left a smudge on the Wrights' image and resulted in a general inhibition of the development of early aviation in the United States. By 1910 the name of Glenn Curtiss was as well known throughout the world as those of Orville and Wilbur Wright, and indeed Curtiss-built airplanes were more popular and easier to fly than those produced by the Wrights. How did these circumstances arise? Who was Glenn Curtiss, and what was his relationship with the Wrights? What impact did Curtiss have on the early development of aviation, and how did his work compare and intermesh with that of Langley and that of the Wrights? The historical development of aviation in the United States can be compared to a triangle, with the Wrights on one apex, Langley at another, and Curtiss at the third. This “aeronautical triangle” is shown in Fig. 1.26. What was the nature of this triangular relationship? These and other questions are addressed in this section. They make a fitting conclusion to the overall early historical development of aeronautical engineering as portrayed in this chapter.

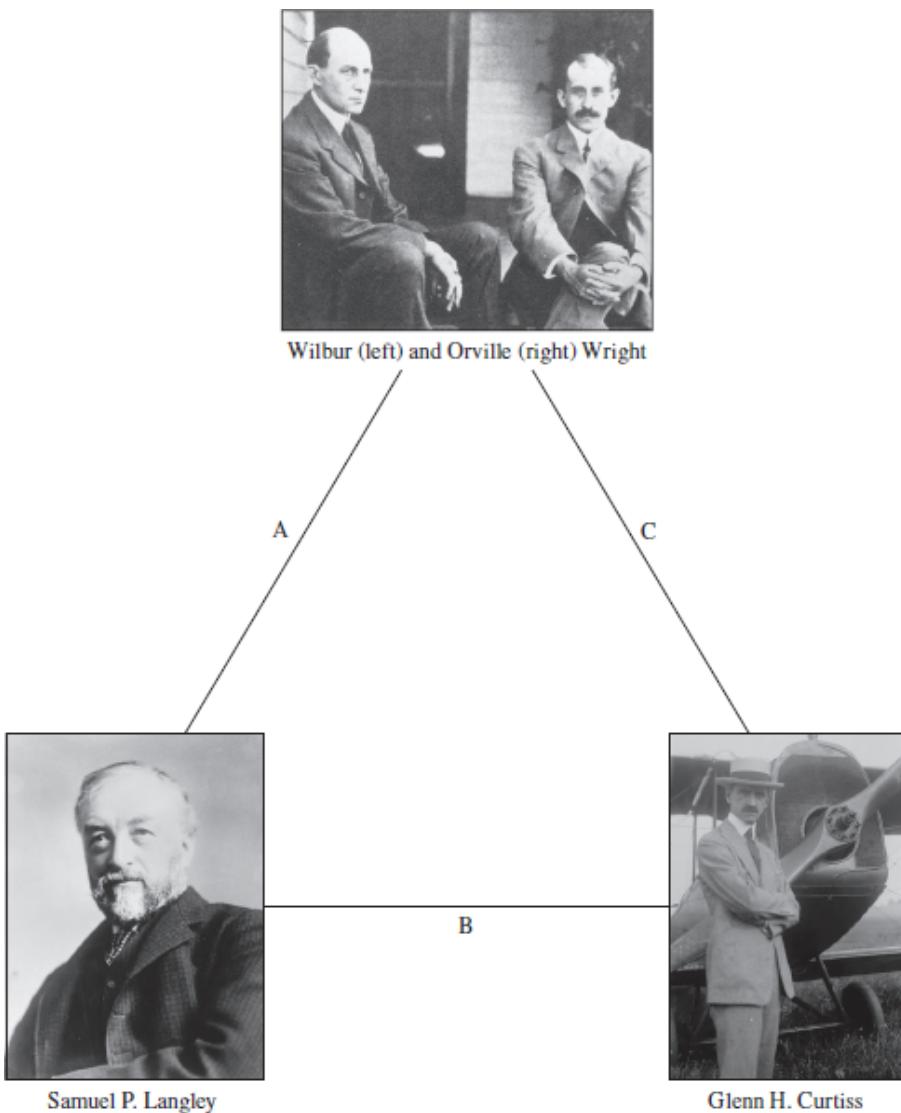

**Figure 1.26** The “aeronautical triangle,” a relationship that dominated the early development of aeronautics in the United States during the period from 1886 to 1916.

(Source: Top: *Library of Congress Prints & Photographs Division [LC-USZ62-65478]*; Bottom Left, *Library of Congress Prints & Photographs Division [LC-DIG-hec-09665]*; Bottom Right, *Library of Congress Prints & Photographs Division [LC-DIG-ggbain-28853]*.)

Let us first look at Glenn Curtiss, the man. Curtiss was born in Hammondsport, New York, on May 21, 1878. Hammondsport at that time was a small town (population less than 1000) bordering on Keuka Lake, one of the Finger Lakes in upstate New York. (Later Curtiss was to make good use of Keuka Lake for the development of amphibious aircraft—one of his hallmarks.) The son of a harness maker who died when Curtiss was five years old, Curtiss was raised by his mother and grandmother. Their modest financial support came

from a small vineyard that grew in their front yard. His formal education ceased with the eighth grade, after which he moved to Rochester, where he went to work for Eastman Dry Plate and Film Company (later to become Kodak), stenciling numbers on the paper backing of film. In 1900 he returned to Hammondsport, where he took over a bicycle repair shop (shades of the Wright brothers). At this time Glenn Curtiss began to show a passion that would consume him for his lifetime—a passion for speed. He became active in bicycle racing and quickly earned a reputation as a winner. In 1901 he incorporated an engine on his bicycles and became an avid motorcycle racer. By 1902 his fame was spreading, and he was receiving numerous orders for motorcycles with engines of his own design. By 1903 Curtiss had established a motorcycle factory at Hammondsport, and he was designing and building the best (highest horsepower-to-weight ratio) engines available anywhere. In January 1904, at Ormond Beach, Florida, Curtiss established a new world's speed record for a ground vehicle—67 mi/h over a 10-mi straightaway—a record that was to stand for seven years.

Curtiss “backed into” aviation. In the summer of 1904 he received an order from Thomas Baldwin, a California balloonist, for a two-cylinder engine. Baldwin was developing a powered balloon—a dirigible. The Baldwin dirigibles, with the highly successful Curtiss engines, soon became famous around the country. In 1906 Baldwin moved his manufacturing facilities to Hammondsport to be close to the source of his engines. A lifelong friendship and cooperation developed between Baldwin and Curtiss and provided Curtiss with his first experience in aviation, as a pilot of some of Baldwin’s powered balloons.

In August 1906 Baldwin traveled to the Dayton Fair in Ohio for a week of dirigible flight demonstrations; he brought Curtiss along to personally maintain the engines. The Wright brothers also attended the fair—specifically to watch Thomas Baldwin perform. They even lent a hand in retrieving the dirigible when it strayed too far afield. This was the first face-to-face encounter between Curtiss and the Wrights. During that week, Baldwin and Curtiss visited the Wrights at the brothers’ bicycle shop and entered into long discussions about powered flight. Recall from Sec. 1.8 that the Wrights had discontinued flying one year earlier; at the time of their meeting with Curtiss, Orville and Wilbur were actively trying to interest the United States, as well as England and France, in buying their airplane. The Wrights had become very secretive about their airplane and allowed no one to view it. Curtiss and Baldwin were no exceptions. However, that week in Dayton, the Wrights were relatively free with Curtiss, giving him information and technical suggestions about powered flight. Years later, these conversations became the crux of the Wrights’ claim that Curtiss had stolen some of their ideas and used them for his own gain.

This claim was probably not entirely unjustified, for by that time Curtiss had a vested interest in powered flight; a few months earlier he had supplied Alexander Graham Bell with a 15-hp motor to be used in propeller experiments, looking toward eventual application to a manned, heavier-than-air, powered aircraft. The connection between Bell and Curtiss is important. Bell, renowned as the inventor of the telephone, had an intense interest in powered flight. He was a close personal friend of Samuel Langley and, indeed, was present for Langley's successful unmanned *Aerodrome* flights in 1896. By the time Langley died in 1906, Bell was actively carrying out kite experiments and was testing air propellers on a catamaran at his Nova Scotia coastal home. In the summer of 1907, Bell formed the Aerial Experiment Association (AEA), a group of five men whose officially avowed purpose was simply "to get into the air." The AEA consisted of Bell himself, Douglas McCurdy (son of Bell's personal secretary, photographer, and very close family friend), Frederick W. Baldwin (a freshly graduated mechanical engineer from Toronto and close friend of McCurdy), Thomas E. Selfridge (an Army lieutenant with an extensive engineering knowledge of aeronautics), and Glenn Curtiss. The importance of Curtiss to the AEA is attested to by the stipends that Bell paid to each member of the association: Curtiss was paid five times more than the others. Bell had asked Curtiss to join the association because of Curtiss's excellent engine design and superb mechanical ability. Curtiss was soon doing much more than just designing engines. The plan of the AEA was to conduct intensive research and development on powered flight and to build five airplanes—one for each member. The first aircraft, the *Red Wing*, was constructed by the AEA with Selfridge as the chief designer. On March 12, 1908, the *Red Wing* was flown at Hammondsport for the first time, with Baldwin at the controls. It covered a distance of 318 ft and was billed as "the first public flight" in the United States.

Recall that the tremendous success of the Wright brothers from 1903 to 1905 was not known by the general public, mainly because of indifference in the press as well as the Wrights' growing tendency to be secretive about their airplane design until they could sell an airplane to the U.S. government. However, the Wrights' growing apprehension about the publicized activities of the AEA is reflected in a letter from Wilbur to the editor of the *Scientific American* after the flight of the *Red Wing*. In this letter, Wilbur states,

In 1904 and 1905, we were flying every few days in a field alongside the main wagon road and electric trolley line from Dayton to Springfield, and hundreds of travelers and inhabitants saw the machine in flight. Anyone who wished could look. We merely did not advertise the flights in the newspapers.

On March 17, 1908, the second flight of the *Red Wing* resulted in a crash that severely damaged the aircraft. Work on the *Red Wing* was subsequently abandoned in lieu of a new design of the AEA, the *White Wing*, with Baldwin as the chief designer. Members of the AEA were acutely aware of the Wrights' patent on wing warping for lateral control, and Bell was particularly sensitive to making certain that his association did not infringe upon this patent. Therefore, instead of using wing warping, the *White Wing* utilized triangular movable surfaces that extended beyond the wing tips of both wings of the biplane. Beginning on May 18, 1908, the *White Wing* successfully made a series of flights piloted by various members of the AEA. One of these flights, with Glenn Curtiss at the controls, was reported by Selfridge to the Associated Press as follows:

G. H. Curtiss of the Curtiss Manufacturing Company made a flight of 339 yards in two jumps in Baldwin's White Wing this afternoon at 6:47 PM. In the first jump he covered 205 yards then touched, rose immediately and flew 134 yards further when the flight ended on the edge of a ploughed field. The machine was in perfect control at all times and was steered first to the right and then to the left before landing. The 339 yards was covered in 19 seconds or 37 miles per hour.

Two days later, with an inexperienced McCurdy at the controls, the *White Wing* crashed and never flew again.


However, by this time, the Wright brothers' apprehension about the AEA was growing into bitterness toward its members. Wilbur and Orville genuinely felt that the AEA had pirated their ideas and was going to use them for commercial gain. For example, on June 7, 1908, Orville wrote to Wilbur (who was in France preparing for his spectacular first public flights that summer at Le Mans—see Sec. 1.8), "I see by one of the papers that the Bell outfit is offering Red Wings for sale at \$5,000 each. They have some nerve." On June 28 he related to Wilbur, "Curtiss et al. are using our patents, I understand, and are now offering machines for sale at \$5,000 each, according to the *Scientific American*. They have got good cheek."

The strained relations between the Wrights and the AEA—particularly Curtiss—were exacerbated on July 4, 1908, when the AEA achieved its crowning success. A new airplane had been constructed—the *June Bug*—with Glenn Curtiss as the chief designer. In the previous year the *Scientific American* had offered a trophy, through the Aero Club of America, worth more than \$3000 to the first aviator making a straight flight of 1 km (3281 ft). On Independence Day in 1908, at Hammondsport, New York, Glenn Curtiss at the controls of his *June Bug* was ready for an attempt at the trophy. A delegation of 22 members of the Aero Club was present, and the official starter was none other than Charles

Manly, Langley's dedicated assistant and pilot of the ill-fated *Aerodrome* (see Sec. 1.7 and Fig. 1.26). Late in the day, at 7:30 PM, Curtiss took off and in 1 min 40 s had covered a distance of more than 1 mi, easily winning the *Scientific American* prize. A photograph of the *June Bug* during this historic flight is shown in Fig. 1.27.

The Wright brothers could have easily won the *Scientific American* prize long before Curtiss; they simply chose not to. Indeed, the publisher of the *Scientific American*, Charles A. Munn, wrote to Orville on June 4, inviting him to make the first attempt at the trophy, offering to delay Curtiss's request for an attempt. On June 30, the Wrights responded negatively; they were too involved with preparations for their upcoming flight trials in France and at Fort Myer in the United States. However, Curtiss's success galvanized the Wrights' opposition. Remembering their earlier conversations with Curtiss in 1906, Orville wrote to Wilbur on July 19,

I had been thinking of writing to Curtiss. I also intended to call attention of the *Scientific American* to the fact that the Curtiss machine was a poor copy of ours; that we had furnished them the information as to how our older machines were constructed, and that they had followed this construction very closely, but have failed to mention the fact in any of their writings.

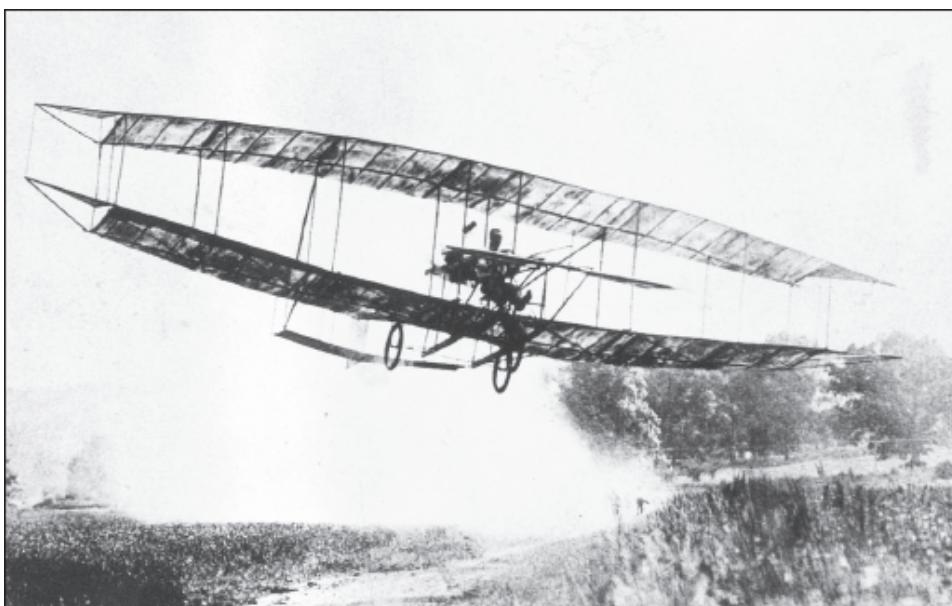

**Figure 1.27** Glenn Curtiss flying the *June Bug* on July 4, 1908, on his way to the *Scientific American* prize for the first public flight of greater than 1 km.

(Source: Library of Congress [LC-USZ62-59025].)

Curtiss's publicity in July was totally eclipsed by the stunning success of Wilbur during his public flights in France beginning August 8, 1908, and by Orville's Army trials at Fort Myer beginning on September 3, 1908. During the trials at Fort Myer, the relationship between the Wrights and the AEA took an ironic twist. One member of the evaluation board assigned by the Army to observe Orville's flights was Lt. Thomas Selfridge. Selfridge had been officially detailed to the AEA by the Army for a year and was now back at his duties of being the Army's main aeronautical expert. As part of the official evaluation, Orville was required to take Selfridge on a flight as a passenger. During this flight, on September 17, one propeller blade cracked and changed its shape, thus losing thrust. This imbalanced the second propeller, which cut a control cable to the tail. The cable subsequently wrapped around the propeller and snapped it off. The Wright type A went out of control and crashed. Selfridge was killed, and Orville was severely injured; he was in the hospital for 11  $\frac{1}{2}$  months. For the rest of his life, Orville would walk with a limp as a result of this accident. Badly shaken by Selfridge's death, and somewhat overtaken by the rapid growth of aviation after the events of 1908, the AEA dissolved itself on March 31, 1909. In the written words of Alexander Graham Bell, "The A.E.A. is now a thing of the past. It has made its mark upon the history of aviation and *its work will live.*"

After this, Glenn Curtiss struck out in the aviation world on his own. Forming an aircraft factory at Hammondsport, Curtiss designed and built a new airplane, improved over the *June Bug* and named the *Golden Flyer*. In August 1909, a massive air show was held in Reims, France, attracting huge crowds and the crown princes of Europe. For the first time in history, the Gordon Bennett trophy was offered for the fastest flight. Glenn Curtiss won this trophy with his *Golden Flyer*, averaging a speed of 75.7 km/h (47.09 mi/h) over a 20-km course and defeating a number of pilots flying the Wrights' airplanes. This launched Curtiss on a meteoric career as a daredevil pilot and a successful airplane manufacturer. His motorcycle factory at Hammondsport was converted entirely to the manufacture of airplanes. His airplanes were popular with other pilots of that day because they were statically stable and hence easier and safer to fly than the Wrights' airplanes, which had been intentionally designed by the Wright brothers to be statically unstable (see Ch. 7)). By 1910 aviation circles and the general public held Curtiss and the Wrights in essentially equal esteem. At the lower right of Fig. 1.26 is a photograph of Curtiss at this time; the propeller ornament in his cap was a good luck charm that he took on his flights. By 1911 a Curtiss airplane had taken off from and landed on a ship. Also in that year, Curtiss developed the first successful seaplanes and forged a lasting relationship with the U.S. Navy. In June 1911 the Aero Club of America issued its first official pilot's

license to Curtiss in view of the fact that he had made the first public flight in the United States—an honor that otherwise would have gone to the Wrights.

In September 1909 the Wright brothers filed suit against Curtiss for patent infringements. They argued that their wing warping patent of 1906, liberally interpreted, covered all forms of lateral control, including the ailerons used by Curtiss. This triggered five years of intensive legal maneuvering, which dissipated much of the energies of all the parties. Curtiss was not alone in this regard. The Wrights brought suit against a number of fledgling airplane designers during this period, both in the United States and in Europe. Such litigation consumed Wilbur's attention, in particular, and effectively removed him from being a productive worker toward technical aeronautical improvements. It is generally agreed by aviation historians that this was not the Wrights' finest hour. Their legal actions not only hurt their own design and manufacturing efforts but also effectively discouraged the early development of aeronautics by others, particularly in the United States. (It is quite clear that when World War I began in 1914, the United States—the birthplace of aviation—was far behind Europe in aviation technology.) Finally, in January 1914 the courts ruled in favor of the Wrights, and Curtiss was forced to pay royalties to the Wright family. (By this time Wilbur was dead, having succumbed to typhoid fever in 1912.)

In defense of the Wright brothers, their actions against Curtiss grew from a genuine belief on their part that Curtiss had wronged them and had consciously stolen their ideas, which Curtiss had subsequently parlayed into massive economic gains. This went strongly against the grain of the Wrights' staunchly ethical upbringing. In contrast, Curtiss bent over backward to avoid infringing on the letter of the Wrights' patent, and there is much evidence that Curtiss consistently tried to mend relations with the Wrights. It is this author's opinion that both sides became entangled in a complicated course of events that followed those heady days after 1908, when aviation burst on the world scene, and that neither Curtiss nor the Wrights should be totally faulted for their actions. These events simply go down in history as a less than glorious, but nevertheless important, chapter in the early development of aviation.


An important postscript should be added here regarding the triangular relationship between Langley, the Wrights, and Curtiss, as shown in Fig. 1.26. Secs. 1.7 and 1.8 have already shown the relationship between Langley and the Wrights and the circumstances leading up to the race for the first flight in 1903. This constitutes side A in Fig. 1.26. In this section, we have seen the strong connection between Curtiss and the work of Langley, via Alexander Graham Bell—a close friend and follower of Langley and creator of the AEA, which gave Curtiss a start in aviation. We have even noted that Charles Manly, Langley's assistant, was the official starter for Curtiss's successful competition for the

*Scientific American* trophy. Such relationships form side B of the triangle in Fig. 1.26. Finally, we have seen the relationship, albeit somewhat acrimonious, between the Wrights and Curtiss, which forms side C in Fig. 1.26.

In 1914 an event occurred that simultaneously involved all three sides of the triangle in Fig. 1.26. When the Langley *Aerodrome* failed for the second time in 1903 (see Fig. 1.21), the wreckage was simply stored away in an unused room in the back of the Smithsonian Institution. When Langley died in 1906, he was replaced as secretary of the Smithsonian by Dr. Charles D. Walcott. Over the ensuing years, Secretary Walcott felt that the Langley *Aerodrome* should be given a third chance. Finally, in 1914 the Smithsonian awarded a grant of \$2000 for the repair and flight of the Langley *Aerodrome* to none other than Glenn Curtiss. The *Aerodrome* was shipped to Curtiss's factory in Hammondsport; there not only was it repaired, but also 93 separate technical modifications were made, aerodynamically, structurally, and to the engine. For help during this restoration and modification, Curtiss hired Charles Manly. Curtiss added pontoons to the Langley *Aerodrome* and on May 28, 1914, personally flew the modified aircraft for a distance of 150 ft over Keuka Lake. Figure 1.28 shows a photograph of the Langley *Aerodrome* in graceful flight over the waters of the lake. Later the *Aerodrome* was shipped back to the Smithsonian, where it was carefully restored to its original configuration and in 1918 was placed on display in the old Arts and Industries Building. Underneath the *Aerodrome* was placed a plaque reading, "Original Langley flying machine, 1903. The first man-carrying aeroplane in the history of the world capable of sustained free flight." The plaque did *not* mention that the *Aerodrome* demonstrated its sustained flight capability only after the 93 modifications made by Curtiss in 1914. It is no surprise that Orville Wright was deeply upset by this state of affairs, and this is the principal reason why the original 1903 *Wright Flyer* was not given to the Smithsonian until 1948, the year of Orville's death. Instead, from 1928 to 1948, the *Flyer* resided in the Science Museum in London.

This section ends with two ironies. In 1915 Orville sold the Wright Aeronautical Corporation to a group of New York businesspeople. During the 1920s this corporation became a losing competitor in aviation. Finally, on June 26, 1929, in a New York office, the Wright Aeronautical Corporation was officially merged with the successful Curtiss Aeroplane and Motor Corporation, forming the Curtiss-Wright Corporation. Thus, ironically, the names of Curtiss and Wright finally came together after all those earlier turbulent years. The Curtiss-Wright Corporation went on to produce numerous famous aircraft, perhaps the most notable being the P-40 of World War II fame. Unfortunately the company could not survive the lean years immediately after World War II, and its aircraft development and manufacturing ceased in 1948. This leads to the second

irony. Although the very foundations of powered flight rest on the work of Orville and Wilbur Wright and Glenn Curtiss, there is not an airplane either produced or in standard operation today that bears the name of either Wright or Curtiss.

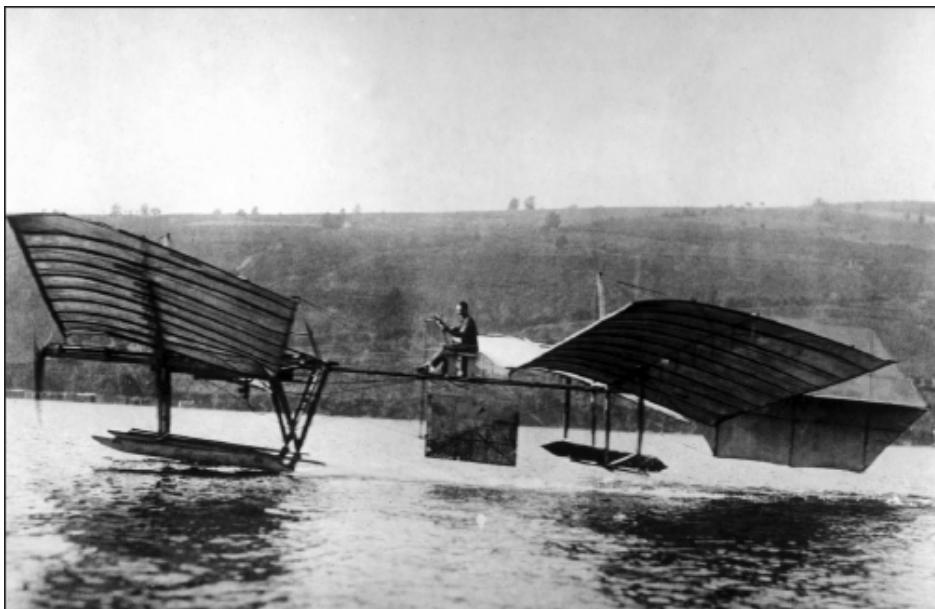

**Figure 1.28** The modified Langley *Aerodrome* in flight over Keuka Lake in 1914.

(Source: *Science and Society/SuperStock.*)

## 1.10 THE PROBLEM OF PROPULSION

During the 19th century numerous visionaries predicted that manned heavier-than-air flight was inevitable once a suitable power plant could be developed to lift the aircraft off the ground. It was just a matter of developing an engine having enough horsepower while at the same time not weighing too much—that is, an engine with a high horsepower-to-weight ratio. This indeed was the main stumbling block to such people as Stringfellow, Du Temple, and Mozhaiski: The steam engine simply did not fit the bill. Then, in 1860, the Frenchman Jean Joseph Etienne Lenoir built the first practical gas engine. It was a single-cylinder engine, burning ordinary street-lighting gas for fuel. By 1865, 400 of Lenoir's engines were doing odd jobs around Paris. Further improvements in such internal combustion engines came rapidly. In 1876 N. A. Otto and E. Langen of Germany developed the four-cycle engine (the ancestor of all modern automobile engines), which also used gas as a fuel. This led to the simultaneous but separate development in 1885 of the four-cycle gasoline-burning engine by Gottlieb

Daimler and Karl Benz, both in Germany. Both Benz and Daimler put their engines in motorcars, and the automobile industry was quickly born. After these “horseless carriages” were given legal freedom of the roads in 1896 in France and Britain, the automobile industry expanded rapidly. Later this industry was to provide much of the technology and many of the trained mechanics for the future development of aviation.

This development of the gasoline-fueled internal combustion engine was a godsend to aeronautics, which was beginning to gain momentum in the 1890s. In the final analysis, it was the Wright brothers’ custom-designed and custom-constructed gasoline engine that was responsible for lifting their *Flyer I* off the sands of Kill Devil Hills that fateful day in December 1903. A proper aeronautical propulsion device had finally been found.

It is interesting to note that the relationship between the automobile and the aircraft industries persists to the present day. For example, in June 1926 Ford introduced a very successful three-engine, high-wing transport airplane—the Ford 4-AT Trimotor. During World War II, virtually all the major automobile companies built airplane engines and airframes. General Motors maintained an airplane engine division for many decades—the Allison Division in Indianapolis, Indiana—noted for its turboprop designs. Today Allison is owned by Rolls-Royce and constitutes its North American branch. More recently, automobile designers are turning to aerodynamic streamlining and wind tunnel testing to reduce drag, hence increasing fuel economy. Thus the parallel development of the airplane and the automobile over the past 100 years has been mutually-beneficial.


It can be argued that propulsion has paced every major advancement in the speed of airplanes. Certainly the advent of the gasoline engine opened the doors to the first successful flight. Then, as the power of these engines increased from the 12-hp, Wrights’-designed engine of 1903 to the 2200-hp, radial engines of 1945, airplane speeds correspondingly increased from 28 to more than 500 mi/h. Finally, jet and rocket engines today provide enough thrust to propel aircraft at thousands of miles per hour—many times the speed of sound. So, throughout the history of manned flight, propulsion has been the key that has opened the doors to flying faster and higher.

## 1.11 FASTER AND HIGHER

The development of aeronautics in general, and aeronautical engineering in particular, was exponential after the Wrights’ major public demonstrations in 1908, and has continued to be so to the present day. It is beyond the scope of this book to go into all the details. However, marbled into the engineering text in

Chs. 2 through 10 are various historical highlights of technical importance. It is hoped that the following parallel presentations of the fundamentals of aerospace engineering and some of their historical origins will be synergistic and that, in combination with the present chapter, they will give the reader a certain appreciation for the heritage of this profession.

As a final note, the driving philosophy of many advancements in aeronautics since 1903 has been to fly *faster and higher*. This is dramatically evident from Fig. 1.29, which gives the flight speeds for typical aircraft as a function of chronological time. Note the continued push for increased speed over the years and the particular increase in recent years made possible by the jet engine. Singled out in Fig. 1.29 are the winners of the Schneider Cup races between 1913 and 1931 (with a moratorium during World War I). The Schneider Cup races were started in 1913 by Jacques Schneider of France as a stimulus to the development of high-speed float planes. They prompted some early but advanced development of high-speed aircraft. The winners are shown by the dashed line in Fig. 1.29, for comparison with standard aircraft of the day. Indeed, the winner of the last Schneider race in 1931 was the *Supermarine S.6B*, a forerunner of the famous Spitfire of World War II. Of course, today the maximum speed of flight has been pushed to the extreme value of 36,000 ft/s, which is the escape velocity from the earth, by the Apollo lunar spacecraft.

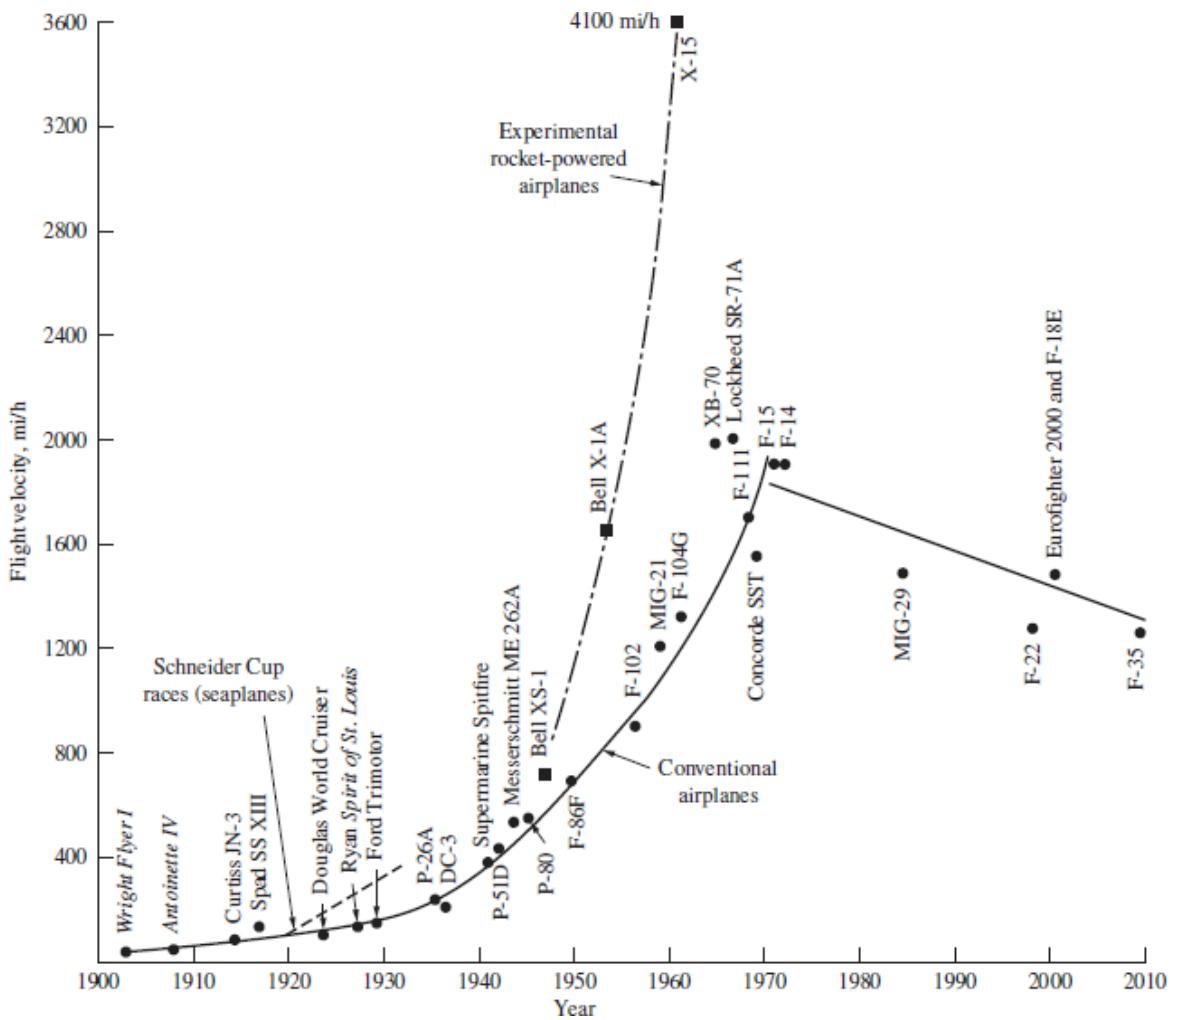


**Figure 1.29** Typical flight velocities over the years.

Note that the almost exponential increase in speed that occurred from 1903 to 1970 has not continued in recent years. In fact, the maximum speed of modern military fighters has actually been decreasing since 1970, as shown in Fig. 1.29. This is not due to a degradation in technology, but rather is a reflection of the fact that other airplane performance parameters (not speed) are dictating the design. For example, air-to-air combat between opposing fighter airplanes capable of high supersonic speeds quickly degenerates to flying at subsonic or near-sonic speeds because of enhanced maneuverability at these lower speeds. Today fighter airplanes are being optimized for this lower-speed combat arena. On the commercial side, most transport airplanes are subsonic, even the newest (at the time of this writing) such as the Boeing 787. Only one type of supersonic transport, the Anglo-French Concorde, ever provided extensive service. The Concorde was designed with 1960s technology and carried a relatively small

number of passengers. Hence, it was not profitable. The Concorde was withdrawn from service in 2003. At the time of this writing, there is no commitment from any country to build a second-generation supersonic transport; however, in the United States, NASA has been carrying out an extensive research program to develop the basic technology for an economical high-speed supersonic transport. Even if an economically viable supersonic transport could be designed, its speed would be limited to about Mach 2.2 or less. Above this Mach number, aerodynamic heating becomes severe enough that titanium rather than aluminum would have to be used for the aircraft skin and for some internal structure. Titanium is expensive and hard to machine; it is not a preferred choice for a new supersonic transport. For these reasons, it is unlikely that the speed curve in Fig. 1.30 will be pushed up by a new supersonic transport.

As a companion to speed, the maximum altitudes of typical manned aircraft are shown in Fig. 1.30 as a function of chronological time. The same push to higher values in the decades between 1903 and 1970 is evident; so far the record is the moon in 1969. However, the same tendency to plateau after 1970, as in the speed data, can be seen in the altitude data in Fig. 1.31.

Hence the philosophy of *faster and higher* that has driven aeronautics throughout most of the 20th century is now being mitigated by practical constraints. To this we must add *safer, cheaper, more reliable, quieter, and more environmentally clean*. Nevertheless, the eventual prospect of hypersonic aircraft (with Mach number greater than 5) in the 21st century is intriguing and exciting. Hypersonic airplanes may well be a new frontier in aeronautics in the future century. See Ch. 10 for a discussion of hypersonic aircraft.

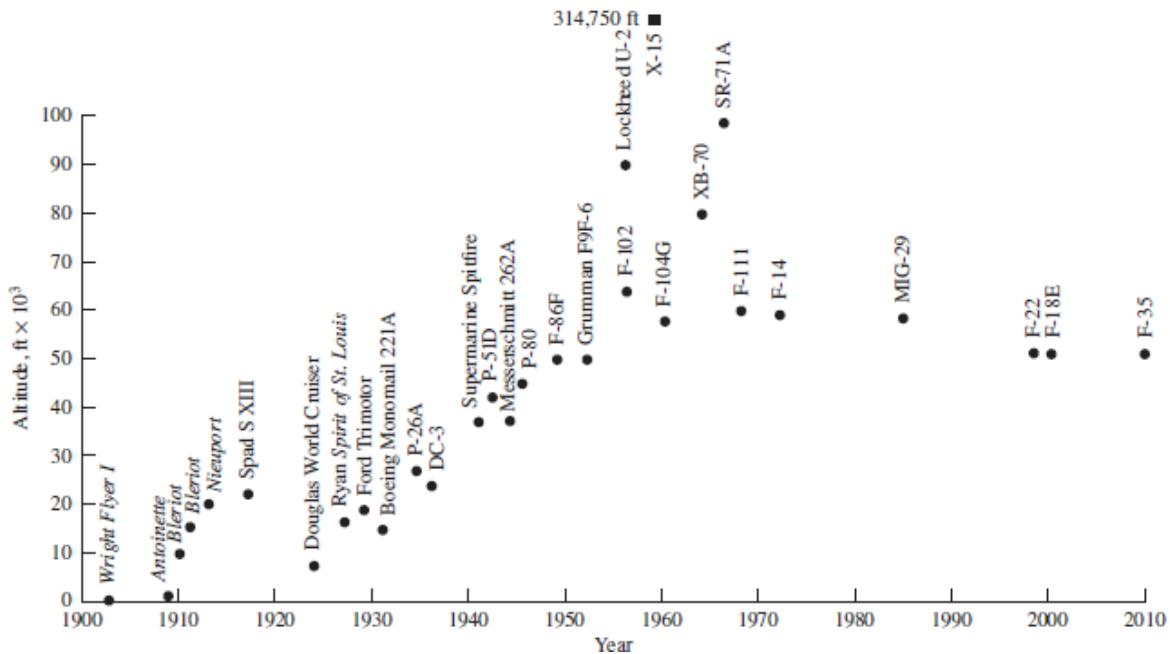


### **Figure 1.30** Typical flight altitudes over the years.

In this chapter we have only been able to briefly note several important events and people in the historical development of aeronautics. There are many other places, people, and accomplishments that we simply could not mention in the interest of brevity. Therefore, the reader is urged to consult the short bibliography at the end of this chapter for additional modern reading about the history of aeronautics.

## **1.12 SUMMARY AND REVIEW**

The next time you see an airplane flying overhead, pause and reflect for a moment. It is a flying machine that synergistically embodies the laws of physics, designed by a person or people who know how to apply these laws using proven engineering methods to obtain a vehicle that can perform a specified mission. For the Wright brothers in 1903 (Fig. 1.2), that mission was simply to get off the ground and fly through the air in a controlled fashion for a sustained period of time. For Charles Lindbergh's *Spirit of St. Louis* in 1927 (Fig. 1.31), that mission was to fly safely across the Atlantic Ocean from New York to Paris on one load of fuel. For the Douglas DC-3 in 1935 (Fig. 1.32), that mission was to fly more passengers safely and comfortably at a faster speed and lower cost than any existing airliner of that time, thus revolutionizing air travel for the public in the 1930s. For the Lockheed F-104 in the 1950s (Fig. 1.33), the mission was to be the first supersonic jet fighter to cruise at Mach 2 (twice the speed of sound). So it will most likely continue.

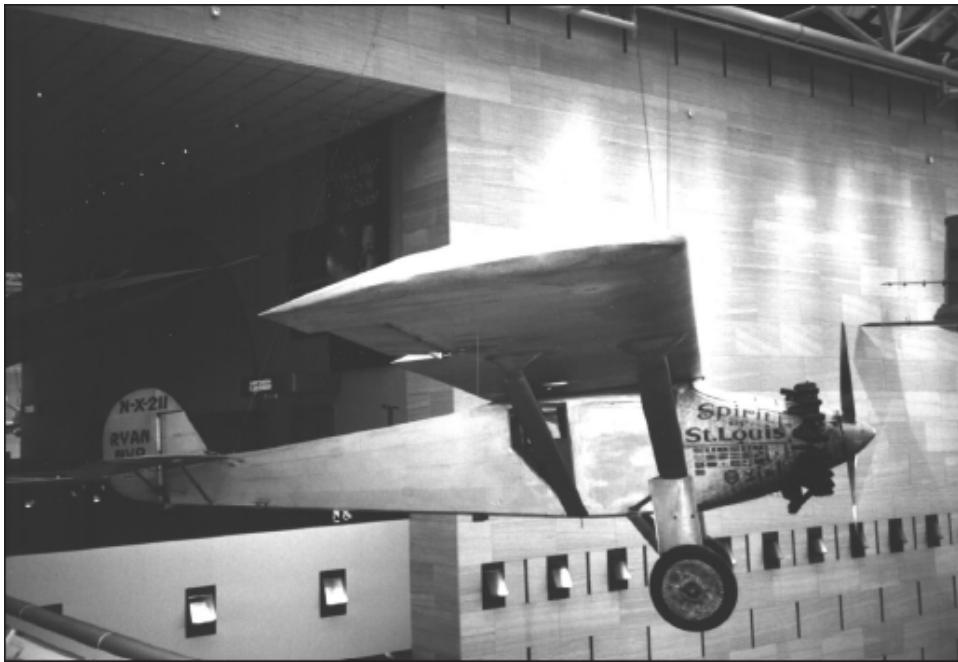

**Figure 1.31** Charles Lindbergh's *Spirit of St. Louis* (1927), hanging in the National Air and Space Museum.

(Source: Courtesy of John Anderson.)



**Figure 1.32** The Douglas DC-3 (1935), hanging in the National Air and Space Museum.

(Source: Courtesy of John Anderson.)



**Figure 1.33** The Lockheed F-104 (1956), hanging near the second-floor balcony at the National Air and Space Museum.

(Source: Courtesy of John Anderson.)

The intellectual understanding of how and why these (and indeed all) airplanes fly, and to use this understanding to design new flight vehicles, is the job of aerospace engineering. Since the 1950s, this job has extended to space vehicles as well. You are about to embark on a study of aerospace engineering, and as you progress through the pages of this book, and as your understanding of the science and technology of flight gradually increases and matures, let yourself begin to feel the joy of this undertaking.

Finally, as you are watching that airplane flying overhead, remember from the history discussed in this chapter that airplane is the heritage of centuries of effort to understand the physics of flight and to design flying machines. This chapter has presented a short historical sketch of some of the heritage underlying modern aerospace engineering. The major stepping stones to controlled, heavier-than-air, powered flight with a human pilot are summarized as follows:

1. Leonardo da Vinci conceives the ornithopter and leaves more than 500 sketches of his design, drawn from 1486 to 1490. However, this approach to flight proves to be unsuccessful over the ensuing centuries.
2. The Montgolfier hot-air balloon floats over Paris on November 21, 1783. For the first time in history, a human being is lifted and carried through the air for a sustained period.

3. A red-letter date in the progress of aeronautics is 1799. In that year Sir George Cayley in England engravings on a silver disk his concept of a fuselage, a fixed wing, and horizontal and vertical tails. He is the first person to propose separate mechanisms for the generation of lift and propulsion. He is the grandparent of the concept of the modern airplane.
4. The first two powered hops in history are achieved by the Frenchman Felix Du Temple in 1874 and the Russian Alexander F. Mozhaiski in 1884. However, they do not represent truly controlled, sustained flight.
5. Otto Lilienthal designs the first fully successful gliders in history. During the period from 1891 to 1896, he makes more than 2000 successful glider flights. If he had not been killed in a glider crash in 1896, Lilienthal might have achieved powered flight before the Wright brothers.
6. Samuel Pierpont Langley, secretary of the Smithsonian Institution, achieves the first sustained heavier-than-air, *unmanned*, powered flight in history with his small-scale *Aerodrome* in 1896. However, his attempts at manned flight are unsuccessful, the last one failing on December 8, 1903—just nine days before the Wright brothers' stunning success.
7. Another red-letter date in the history of aeronautics, indeed in the history of humanity, is December 17, 1903. On that day, at Kill Devil Hills in North Carolina, Orville and Wilbur Wright achieve the first controlled, sustained, powered, heavier-than-air, manned flight in history. This flight is to revolutionize life during the 20th century.
8. The development of aeronautics takes off exponentially after the Wright brothers' public demonstrations in Europe and the United States in 1908. The ongoing work of Glenn Curtiss and the Wrights and the continued influence of Langley's early work form an important aeronautical triangle in the development of aeronautics before World War I.

Throughout the remainder of this book, various historical notes will appear, continuing to describe the heritage of aerospace engineering as its technology advanced during the 20th and 21st centuries. It is hoped that such historical notes will add a new dimension to your developing understanding of this technology.

## Bibliography

Anderson, John D., Jr. *A History of Aerodynamics and Its Impact on Flying Machines*, Cambridge University Press, New York, 1997.

- . *The Airplane: A History of Its Technology*. American Institute of Aeronautics and Astronautics, Reston, VA, 2002.
- . *Inventing Flight: The Wright Brothers and Their Predecessors*. Johns Hopkins University Press, Baltimore, 2004.
- Angelucci, E. *Airplanes from the Dawn of Flight to the Present Day*. McGraw-Hill, New York, 1973.
- Combs, H. *Kill Devil Hill*. Houghton Mifflin, Boston, 1979.
- . *A Dream of Wings*. Norton, New York, 1981.
- Crouch, T.D. *The Bishop's Boys*. Norton, New York, 1989.
- Gibbs-Smith, C.H. *Sir George Cayley's Aeronautics 1796–1855*. Her Majesty's Stationery Office, London, 1962.
- . *The Invention of the Aeroplane (1799–1909)*. Faber, London, 1966.
- . *Aviation: An Historical Survey from Its Origins to the End of World War II*. Her Majesty's Stationery Office, London, 1970.
- . *Flight through the Ages*. Crowell, New York, 1974.

The following are a series of small booklets prepared for the British Science-Museum by C. H. Gibbs-Smith, published by Her Majesty's Stationery Office, London:

- The Wright Brothers*, 1963
- The World's First Aeroplane Flights*, 1965
- Leonardo da Vinci's Aeronautics*, 1967
- A Brief History of Flying*, 1967
- Sir George Cayley*, 1968

- Jakab, Peter L. *Visions of a Flying Machine*. Smithsonian Institution Press, Washington, 1990.
- Josephy, A.M., and A. Gordon. *The American Heritage History of Flight*. Simon and Schuster, New York, 1962.
- Kinney, Jeremy R. *Airplanes: The Life Story of a Technology*, Greenwood Press, Westport, CT, 2006.
- McFarland, Marvin W. (ed.). *The Papers of Wilbur and Orville Wright*. McGraw-Hill, New York.
- Roseberry, C.R. *Glenn Curtiss: Pioneer of Flight*. Doubleday, Garden City, NY, 1972.
- Taylor, J.W.R., and K. Munson. *History of Aviation*. Crown, New York, 1972.

## Fundamental Thoughts


*Engineering*: “The application of scientific principles to practical ends.” From the Latin word “*ingenium*,” meaning inborn talent and skill, ingenious.

*The American Heritage Dictionary of the English Language*, 1969

The language of engineering and physical science is a logical collection and assimilation of symbols, definitions, formulas, and concepts. To the average person in the street, this language is frequently esoteric and incomprehensible. In fact, when you become a practicing engineer, do not expect to converse with your spouse across the dinner table about your great technical accomplishments of the day. Chances are that he or she will not understand what you are talking about (unless your spouse happens to work in a related engineering field). The language is intended to convey physical thoughts. It is our way of describing the phenomena of nature as observed in the world around us. It is a language that has evolved over at least 2500 years. For example, in 400 BC the Greek philosopher Democritus introduced the word and concept of the *atom*, the smallest bit of matter that could not be cut. The purpose of this chapter is to introduce some of the everyday language used by aerospace engineers; in turn, this language will be extended and applied throughout the remainder of this book.

Throughout this book, you will be provided with road maps to guide [page 54](#) you through the thoughts and intellectual development that constitute this introduction to flight. Please use these road maps frequently. They will tell you where you are in our discussions, where you have been, and where you are going. For example, Fig. 2.1 is an overall road map for the complete book. Examining this road map, we can obtain an overall perspective for our introduction to flight as presented in this book. First we start out with some necessary preliminaries—some fundamental thoughts that are used throughout the remainder of the book. This is the subject of this chapter. Because flight vehicles spend all, or at least some of, their time operating in the atmosphere, next we have to consider the properties of the atmosphere, as discussed in Ch. 3).

(Airplanes spend all their time in the atmosphere. Space vehicles have to ascend through the atmosphere to get out to space; and if they carry humans or other payloads that we wish to recover on earth, space vehicles have to descend—at very high speeds—back through the atmosphere.) Now imagine a vehicle flying through the atmosphere. One of the first thoughts that comes to mind is that there is a rush of air over the vehicle. This rush of air generates a force—an aerodynamic force—on the vehicle. A study of *aerodynamics* is the subject of Chs. 4 and 5. The vehicle itself feels not only this aerodynamic force but also the force of gravity—its own weight. If the vehicle is powered in some fashion, it will also feel the force (called *thrust*) from the power plant. The vehicle moves under the influence of these forces. The study of the motion of the flight vehicle is labeled *flight dynamics*, which is further divided into considerations of airplane performance (Ch. 6) and stability and control (Ch. 7). In contrast, a space vehicle moving in space will, for all practical purposes, feel only the force of gravity (except when some on-board propulsion device is turned on for trajectory adjustment). The motion of a vehicle in space due to gravitational force is the subject of Ch. 8). Considering again a flight vehicle moving through the atmosphere, there has to be something to push it along—something to keep it going. This is the function of the engine, which generates thrust to keep the vehicle going. Space vehicles also need engines to accelerate them into orbit or deep space and for midcourse trajectory corrections. Engines and how they generate thrust represent the discipline of *propulsion*, the subject of Ch. 9). Additionally, as the flight vehicle moves and responds to the forces acting on it, the physical structure of the vehicle is under a lot of stress and strain. You want this structure to be strong enough to not fall apart under these stresses and strains, but at the same time not to be so heavy as to render the flight vehicle inefficient. We address some aspects of *flight structures* in a special section of the web page for this book. All these major disciplines—aerodynamics, flight dynamics, propulsion, and structures—are integrated into the *design* of a flight vehicle. Such design is indeed the final objective of most aerospace research and development. Throughout this book, at appropriate places, we address pertinent aspects of vehicle design. We highlight these aspects by placing them in accented *design boxes*. You cannot miss them in your reading. Finally, looking toward the future, we discuss some advanced vehicle concepts in Ch. 10). All the previous discussion is diagrammed in Fig. 2.1. This is the road map for our excursions throughout this book. From time to time, as you proceed through this book, flip back to Fig. 2.1 for a reminder of how the material you are reading fits into the whole scheme.

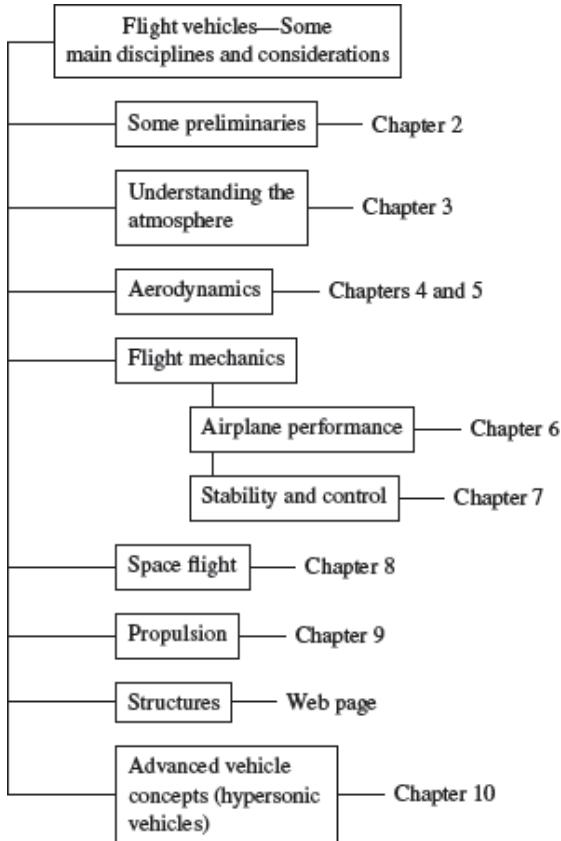

**Figure 2.1** Road map for the book.

## PREVIEW BOX

The purpose of this chapter is to help you *get going*. For many of us, when we have a job to do or a goal to accomplish, the most important thing is simply to get started—to *get going*—and hopefully to *get going* in the right direction. This chapter deals with some fundamental thoughts to help you start learning about airplanes and space vehicles.

For example, we have to start with some basic definitions that are absolutely necessary for us to speak the same language when we describe, discuss, analyze, and design airplanes and space vehicles. When we talk about the *pressure* in the airflow around a Boeing 777 in flight, do we know what *pressure* means? Really? If we talk about the airflow *velocity* around the airplane, do we really know what we are talking about? Definitions are important, so this chapter pushes definitions.

Another example: When you walk down the sidewalk in the face of a 40 mph gale, the wind is pushing you around—exerting an aerodynamic force on you. Every vehicle that moves through the air feels an aerodynamic force.


*How* does the wind reach out and grab you? *How* does nature exert an aerodynamic force on a Boeing 747 cruising at 500 miles per hour at an altitude of 35,000 feet? In this chapter we examine the sources of aerodynamic force and answer the question *how*?

*Dimensions and units*—what dry and dull subjects! Yet they are subjects of the utmost importance in engineering and science. You have to get them right. In December 1999 the Mars Polar Lander was lost during entry into the Martian atmosphere because of a miscommunication between the contractor in Denver and the Jet Propulsion Laboratory in Pasadena involving feet and meters, costing the space program a loss of dollars and valuable scientific data (not to mention considerable embarrassment and bad publicity). Dimensions and units are fundamental considerations and are discussed at length in this chapter.

Airplanes and space vehicles: Some readers are enthusiasts; they recognize many of these vehicles by sight and even know some of their performance characteristics. Other readers are not so sure about what they are seeing and are not so familiar with their characteristics. Just to put all readers on the same footing (on the same page, so to speak), this chapter ends with a brief description of the *anatomy* of airplanes and space vehicles—identifying various parts and features of these vehicles.

This is how we get going—looking at some of the most fundamental thoughts that will be with us for the remainder of the book. Read on, and enjoy.

Returning to our considerations at hand, we look at the road map for [page 56](#) this chapter in Fig. 2.2. We treat two avenues of thought in this chapter. As shown in the left column of Fig. 2.2, we examine some basic ideas and definitions that are rooted in physics. These include definitions of the physical quantities of a flowing gas—that is, the language we use to talk about aerodynamics and propulsion. We discuss the fundamental sources of aerodynamic force—how aerodynamic force is exerted on a vehicle. We look at some equations that relate the physical quantities, and we also discuss the mundane (but essential) consideration of units for these physical quantities. We then move to the right column in Fig. 2.2 and discuss some fundamental aspects of flight vehicles themselves, taking a look at the anatomy of typical airplanes and space vehicles.

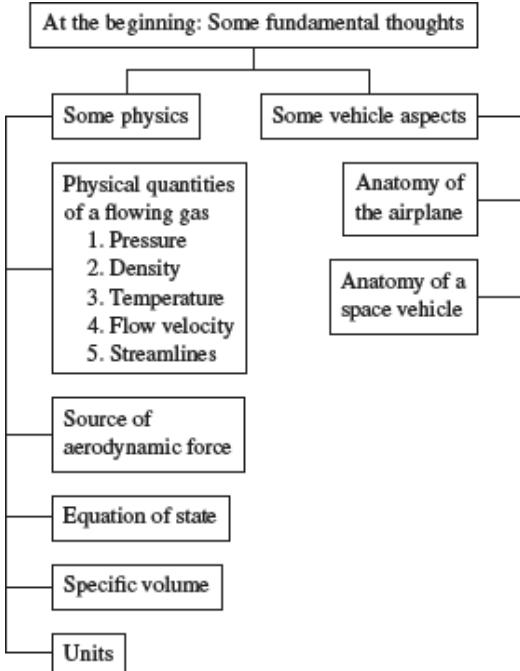

**Figure 2.2** Road map for Ch. 2).

page 57

## 2.1 FUNDAMENTAL PHYSICAL QUANTITIES OF A FLOWING GAS

As you read through this book, you will soon begin to appreciate that the flow of air over the surface of an airplane is the basic source of the lifting or sustaining force that allows a heavier-than-air machine to fly. In fact, the shape of an airplane is designed to encourage the airflow over the surface to produce a lifting force in the most efficient manner possible. (You will also begin to appreciate that the design of an airplane is in reality a *compromise* between many different requirements, the production of aerodynamic lift being just one.) The science that deals with the flow of air (or, for that matter, the flow of any gas) is called *aerodynamics*, and the person who practices this science is called an *aerodynamicist*. The study of the flow of gases is important in many other aerospace applications: the design of rocket and jet engines, propellers, vehicles entering planetary atmospheres from space, wind tunnels, and rocket and projectile configurations. Even the motion of the global atmosphere and the flow of effluents through smokestacks fall within the realm of aerodynamics. The applications are almost limitless.


Four fundamental quantities in the language of aerodynamics are pressure, density, temperature, and velocity. Let us look at each one.

### 2.1.1 Pressure

When you hold your hand outside the window of a moving automobile, with your palm perpendicular to the incoming airstream, you can feel the air pressure exerting a force and tending to push your hand rearward in the direction of the airflow. The *force per unit area* on your palm is defined as the *pressure*. The pressure exists basically because air molecules (oxygen and nitrogen molecules) are striking the surface of your hand and transferring some of their *momentum* to the surface. More precisely,

Pressure is the *normal* force per unit area exerted on a surface due to the time rate of change of momentum of the gas molecules impacting on that surface.

It is important to note that even though pressure is defined as force per unit area (for example, newtons per square meter or pounds per square foot), you do not need a surface that is actually  $1 \text{ m}^2$  or  $1 \text{ ft}^2$  to talk about pressure. In fact, pressure is usually defined at a point in the gas or a point on a surface and can vary from one point to another. We can use the language of differential calculus to see this more clearly. Referring to Fig. 2.3, we consider a point *B* in a volume of gas. Let

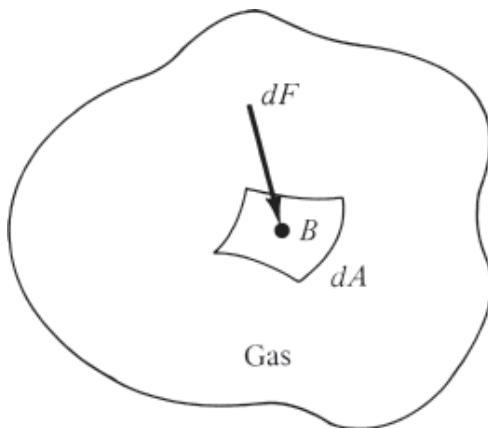

**Figure 2.3** Definition of pressure.

$dA =$ An incremental area around <i>B</i>
$dF =$ Force on one side of $dA$ due to pressure

Then the pressure  $p$  at point *B* in the gas is defined as

$$p = \lim\left(\frac{dF}{dA}\right) dA \rightarrow 0 \quad (2.1)$$


Equation (2.1) says that, in reality, the pressure  $p$  is the limiting form of [page 58](#) the force per unit area where the area of interest has shrunk to zero around point  $B$ . In this formalism, it is easy to see that  $p$  is a point property and can have a different value from one point to another in the gas.

Pressure is one of the most fundamental and important variables in aerodynamics, as we will soon see. Common units of pressure are newtons per square meter, dynes per square centimeter, pounds per square foot, and atmospheres. Abbreviations for these quantities are  $\text{N/m}^2$ ,  $\text{dyn/cm}^2$ ,  $\text{lb/ft}^2$ , and  $\text{atm}$ , respectively. See App. C for a list of common abbreviations for physical units.

## 2.1.2 Density

The *density* of a substance (including a gas) is the mass of that substance per unit volume.

Density will be designated by the symbol  $\rho$ . For example, consider air in a room that has a volume of  $250 \text{ m}^3$ . If the mass of the air in the room is  $306.25 \text{ kg}$  and is evenly distributed throughout the space, then  $\rho = 306.25 \text{ kg}/250 \text{ m}^3 = 1.225 \text{ kg/m}^3$  and is the same at every point in the room.

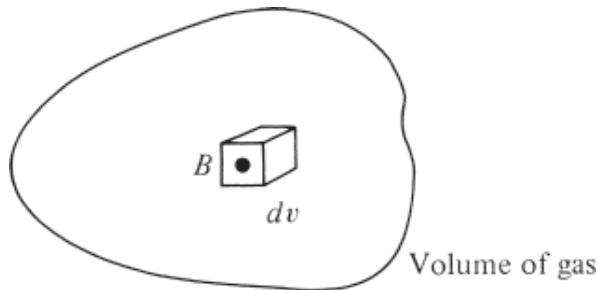

**Figure 2.4** Definition of density.

Analogous to the previous discussion of pressure, the definition of [page 59](#) density does not require an actual volume of  $1 \text{ m}^3$  or  $1 \text{ ft}^3$ . Rather,  $\rho$  is a point property and can be defined as follows. Referring to Fig. 2.4, we consider point  $B$  inside a volume of gas. Let

$dv = \text{Elemental volume around point } B$ $dm = \text{Mass of gas inside } dv$
--

Then  $\rho$  at point  $B$  is

$$\rho = \lim\left(\frac{dm}{dv}\right) dv \rightarrow 0 \quad (2.2)$$

Therefore,  $\rho$  is the mass per unit volume where the volume of interest has shrunk to zero around point  $B$ . The value of  $\rho$  can vary from point to point in the gas. Common abbreviated units of density are  $\text{kg/m}^3$ ,  $\text{slug/ft}^3$ ,  $\text{g/cm}^3$ , and  $\text{lbm/ft}^3$ . (The pound mass,  $\text{lbm}$ , is discussed in Sec. 2.4.)

### 2.1.3 Temperature

Consider a gas as a collection of molecules and atoms. These particles are in constant motion, moving through space and occasionally colliding with one another. Because each particle has motion, it also has kinetic energy. If we watch the motion of a single particle over a long time during which it experiences numerous collisions with its neighboring particles, we can meaningfully define the average kinetic energy of the particle over this long duration. If the particle is moving rapidly, it has a higher average kinetic energy than if it were moving slowly. The temperature  $T$  of the gas is directly proportional to the average molecular kinetic energy. In fact, we can define  $T$  as follows:

*Temperature* is a measure of the average kinetic energy of the particles in the gas. If KE is the mean molecular kinetic energy, then temperature is given by  $\text{KE} = \frac{3}{2}kT$ , where  $k$  is the Boltzmann constant.

The value of  $k$  is  $1.38 \times 10^{-23} \text{ J/K}$ , where J is an abbreviation for joule and K is an abbreviation for kelvin.

Hence we can qualitatively visualize a high-temperature gas as one in [page 60](#) in which the particles are randomly rattling about at high speeds, whereas in a low-temperature gas, the random motion of the particles is relatively slow. Temperature is an important quantity in dealing with the aerodynamics of supersonic and hypersonic flight, as we will soon see. Common units of temperature are the kelvin (K), degree Celsius ( $^{\circ}\text{C}$ ), degree Rankine ( $^{\circ}\text{R}$ ), and degree Fahrenheit ( $^{\circ}\text{F}$ ).

### 2.1.4 Flow Velocity and Streamlines

The concept of speed is commonplace: It represents the distance traveled by some object per unit time. For example, we all know what is meant by traveling at a speed of 55 mi/h down the highway. However, the concept of the velocity of a flowing gas is somewhat more subtle. First, velocity connotes *direction* as well as speed. The automobile is moving at a velocity of 55 mi/h *due north in a horizontal plane*. To designate velocity, we must quote both speed and direction. For a flowing gas, we must further recognize that each region of the gas does not necessarily have the same velocity; that is, the speed and direction of the gas may


vary from point to point in the flow. Hence, flow velocity, along with  $p$ ,  $\rho$ , and  $T$ , is a point property.

To see this more clearly, consider the flow of air over an airfoil or the flow of combustion gases through a rocket engine, as sketched in Fig. 2.5. To orient yourself, lock your eyes on a specific, infinitesimally small element of mass in the gas, and watch this element move with time. Both the speed and direction of this element (usually called a fluid element) can vary as it moves from point to point in the gas. Now fix your eyes on a specific fixed point in the gas flow, say point  $B$  in Fig. 2.5. We can now define flow velocity as follows:


The *velocity* at any fixed point  $B$  in a flowing gas is the velocity of an infinitesimally small fluid element as it sweeps through  $B$ .

Again we emphasize that velocity is a point property and can vary from point to point in the flow.

Referring again to Fig. 2.5, we note that as long as the flow is steady (as long as it does not fluctuate with time), a moving fluid element is seen to trace out a fixed *path* in space. This path taken by a moving fluid element is called a *streamline* of the flow. Drawing the streamlines of the flow field is an important way of visualizing the motion of the gas; we will frequently sketch the streamlines of the flow about various objects. For example, the streamlines of the flow about an airfoil are sketched in Fig. 2.5 and clearly show the direction of motion of the gas. Figure 2.6 is an actual photograph of streamlines over an airfoil model in a low-speed subsonic wind tunnel. The streamlines are made visible by injection of filaments of smoke upstream of the model; these smoke filaments follow the streamlines in the flow. Using another flow field visualization technique, Fig. 2.7 shows a photograph of a flow where the surface streamlines are made visible by coating the model with a mixture of white pigment in mineral oil. Clearly, the visualization of flow streamlines is a useful aid in the study of aerodynamics.

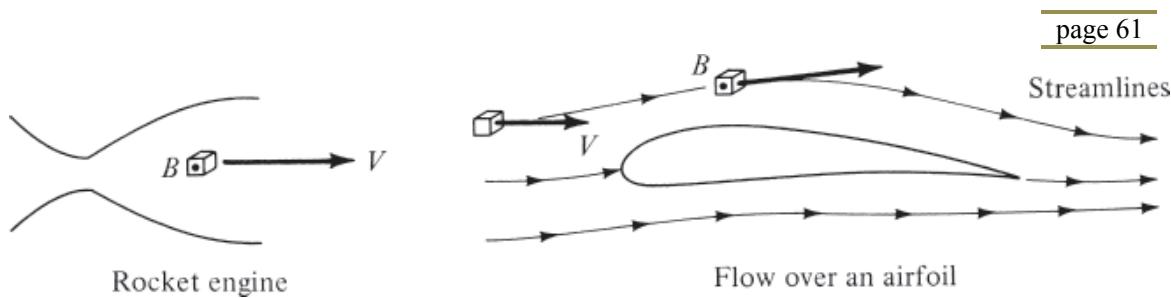


**Figure 2.5** Flow velocity and streamlines.

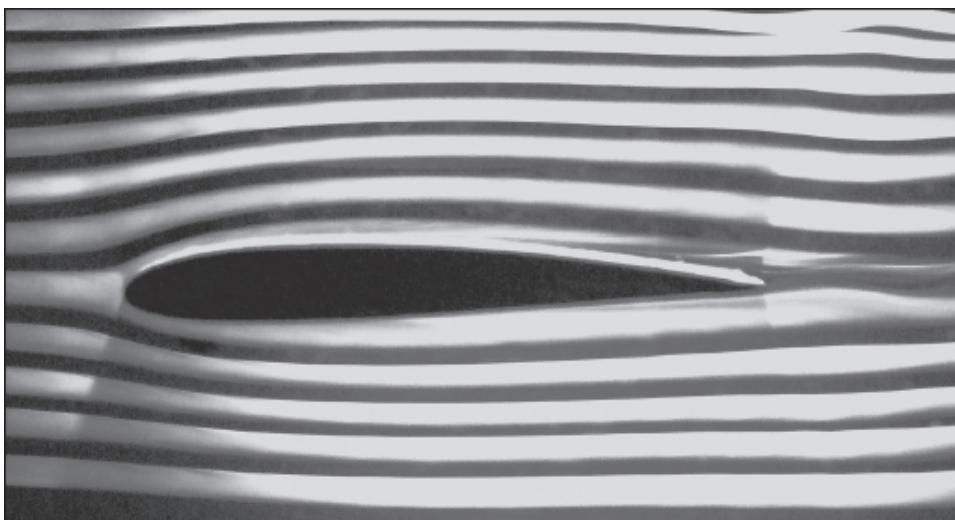

**Figure 2.6** Smoke photograph of the low-speed flow over a Lissaman 7769 airfoil at 10° angle of attack. The Reynolds number based on chord is 150,000. This is the airfoil used on the Gossamer Condor human-powered aircraft.

(Source: *Gary S. Settles & Jason Listak/Science Source.*)

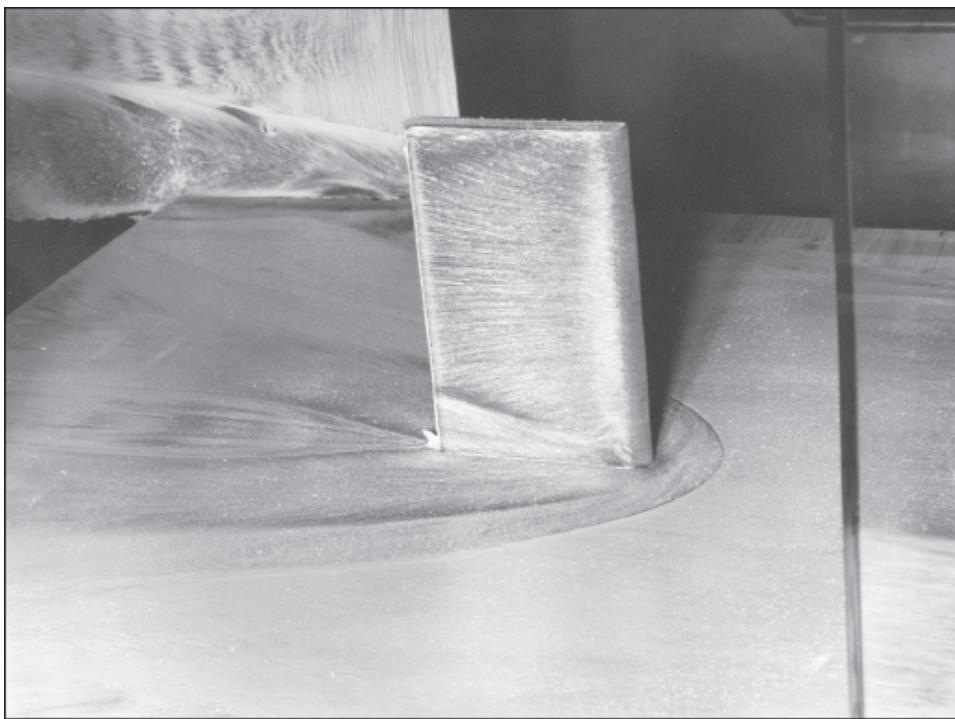


**Figure 2.7** An oil streak photograph showing the surface streamline pattern for a fin mounted on a flat plate in supersonic flow. The parabolic curve in front of the fin is due to the bow shock wave and flow separation ahead of the fin. Note how

clearly the streamlines can be seen in this complex flow pattern. Flow is from right to left. The Mach number is 5, and the Reynolds number is  $6.7 \times 10^6$ .

(Source: © Allen E. Winkelmann.)

## 2.2 THE SOURCE OF ALL AERODYNAMIC FORCES

We have just discussed the four basic aerodynamic flow quantities:  $p$ ,  $\rho$ ,  $T$ , and  $\mathbf{V}$ , where  $\mathbf{V}$  is velocity, which has both magnitude and direction; that is, velocity is a vector quantity. A knowledge of  $p$ ,  $\rho$ ,  $T$ , and  $\mathbf{V}$  at each point of a flow fully defines the *flow field*. For example, if we were concerned with the flow about a sharp-pointed cone, as shown in Fig. 2.8, we could imagine a Cartesian  $xyz$  three-dimensional space, where the velocity far ahead of the cone  $V_\infty$  is in the  $x$  direction and the cone axis is also along the  $x$  direction. The specification of the following quantities then fully defines the *flow field*:

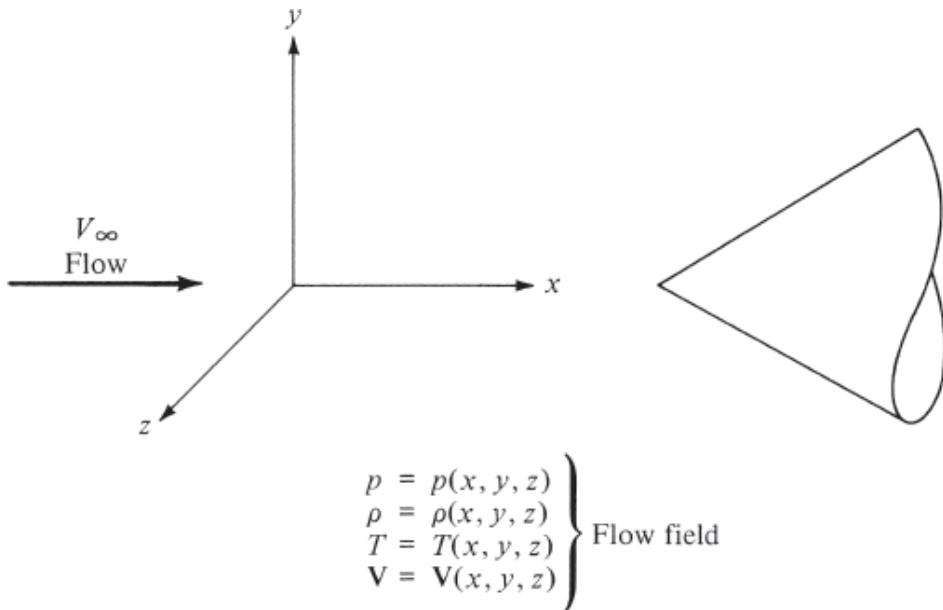

**Figure 2.8** Specifications of a flow field.

$p = p(x, y, z)$
$\rho = \rho(x, y, z)$
$T = T(x, y, z)$
$\mathbf{V} = \mathbf{V}(x, y, z)$


(In practice, the flow field about a right circular cone is more conveniently described in terms of cylindrical coordinates, but we are concerned only with the general ideas here.)

Theoretical and experimental aerodynamicists labor to calculate and [page 63](#) measure flow fields of many types. Why? What practical information does knowledge of the flow field yield with regard to airplane design or to the shape of a rocket engine? A substantial part of the first five chapters of this book endeavors to answer these questions. However, the roots of the answers lie in the following discussion.

Probably the most practical consequence of the flow of air over an object is that the object experiences a force, an aerodynamic force, such as your hand feels outside the open window of a moving car. Subsequent chapters discuss the nature and consequences of such aerodynamic forces. The purpose here is to state that the aerodynamic force exerted by the airflow on the surface of an airplane, missile, or the like stems from only two simple natural sources:

1. Pressure distribution on the surface.
2. Shear stress (friction) on the surface.

We have already discussed pressure. Referring to Fig. 2.9, we see that pressure exerted by the gas on the solid surface of an object always acts *normal* to the surface, as shown by the directions of the arrows. The lengths of the arrows denote the magnitude of the pressure at each local point on the surface. Note that the surface pressure varies with location. The net *unbalance* of the varying pressure distribution over the surface creates an aerodynamic force. The second source, shear stress acting on the surface, is due to the frictional effect of the flow “rubbing” against the surface as it moves around the body. The shear stress  $\tau_w$  is defined as the force per unit area acting *tangentially* on the surface due to friction, as shown in Fig. 2.9. It is also a point property; it varies along the surface; and the net unbalance of the surface shear stress distribution creates an aerodynamic force on the body. *No matter how complex the flow field, and no matter how complex the shape of the body, the only way nature has of communicating an aerodynamic force to a solid object or surface is through the pressure and shear stress distributions that exist on the surface.* These are the basic fundamental sources of all aerodynamic forces. The pressure and shear stress distributions are the two hands of nature that reach out and grab the body, exerting a force on the body—the aerodynamic force.

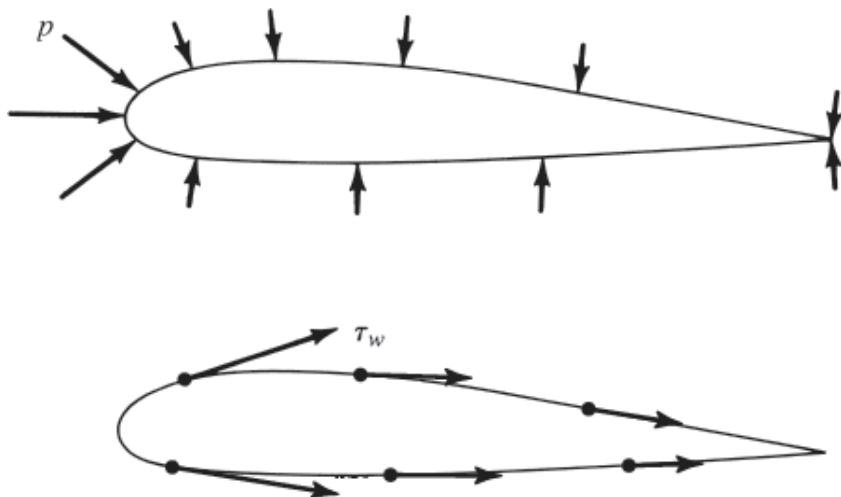

**Figure 2.9** Pressure and shear stress distributions.

Finally, we can state that a primary function of theoretical and experimental aerodynamics is to predict and measure the aerodynamic forces on a body. In many cases, this implies prediction and measurement of  $p$  and  $\tau_w$  along a given surface. Furthermore, a prediction of  $p$  and  $\tau_w$  on the surface frequently requires knowledge of the complete flow field around the body. This helps to answer our earlier question about what practical information is yielded by knowledge of the flow field.

## 2.3 EQUATION OF STATE FOR A PERFECT GAS

Air under normal conditions of temperature and pressure, such as those encountered in subsonic and supersonic flight through the atmosphere, behaves very much as a *perfect gas*. We can best see the definition of a perfect gas by returning to the molecular picture. A gas is a collection of particles (molecules, atoms, electrons, etc.) in random motion, where each particle is, on average, a long distance away from its neighboring particles. Each molecule has an *intermolecular force field* about it, a ramification of the complex interaction of the electromagnetic properties of the electrons and nucleus. The intermolecular force field of a given particle extends a comparatively long distance through space and changes from a strong repulsive force at close range to a weak attractive force at long range. The intermolecular force field of a given particle reaches out and is felt by the neighboring particles. On the one hand, if the neighboring particles are far away, they feel only the tail of the weak attractive force; hence the motion of the neighboring particles is only negligibly affected. On the other hand, if they are close, their motion can be greatly affected by the intermolecular force field. Because the pressure and temperature of a gas are

tangible quantities derived from the motion of the particles,  $p$  and  $T$  are directly influenced by intermolecular forces, especially when the molecules are packed closely together (i.e., at high densities). This leads to the definition of a perfect gas:

A *perfect gas* is one in which intermolecular forces are negligible.

Clearly, from the previous discussion, a gas in nature in which the [page 65](#) particles are widely separated (low densities) approaches the definition of a perfect gas. The air in the room about you is one such case; each particle is separated, on average, by more than 10 molecular diameters from any other. Hence, air at standard conditions can be readily approximated by a perfect gas. Such is also the case for the flow of air about ordinary flight vehicles at subsonic and supersonic speeds. Therefore, in this book, we always deal with a perfect gas for our aerodynamic calculations.

The relation among  $p$ ,  $\rho$ , and  $T$  for a gas is called the *equation of state*. For a perfect gas, the equation of state is

$$p = \rho RT \quad (2.3)$$

where  $R$  is the specific gas constant, the value of which varies from one type of gas to another. For normal air we have

$$R = 287 \frac{\text{J}}{(\text{kg})(\text{K})} = 1716 \frac{\text{ft} \cdot \text{lb}}{(\text{slug})(^{\circ}\text{R})}$$

From your earlier studies in chemistry and physics, you may be more familiar with the universal gas constant  $\mathcal{R}$ , where  $\mathcal{R} = 8314 \text{ J/(kg} \cdot \text{mole K)} = 4.97 \times 10^4 \text{ (ft lb)/(slug-mole } ^{\circ}\text{R)}$ , a universal value for all gases. The specific and universal gas constants are related through  $R = \mathcal{R}/M$ , where  $M$  is the molecular weight (or more properly, the molecular mass) of the gas. For air,  $M = 28.96 \text{ kg/(kg} \cdot \text{mole)}$ . Note that  $\text{kg} \cdot \text{mole}$  is a single unit; it stands for a kilogram-mole, identifying what type of mole we are talking about. (It does *not* mean kilograms multiplied by moles.) A kilogram-mole contains  $6.02 \times 10^{26}$  molecules—Avogadro's number for a kilogram-mole. A kilogram-mole is that amount of a gas that has a mass in kilograms equal to the molecular weight of the gas. For air, because  $M = 28.96$ , one kilogram-mole of air has a mass of 28.96 kilograms and consists of  $6.02 \times 10^{26}$  molecules. Similarly, a slug-mole of gas is that amount of gas that has a mass in slugs equal to the molecular weight of the gas. For air, one slug-mole has a mass of 28.96 slugs. The same litany applies to the gram-mole, with which you may be more familiar from chemistry. The values of  $R$  for air given at the beginning of this paragraph are obtained from

$$R = \mathcal{R}/M = \frac{8314 \text{ J/(kg} \cdot \text{mole K)}}{28.96 \text{ kg/(kg} \cdot \text{mole)}} = 287 \frac{\text{J}}{(\text{kg})(\text{K})}$$

and

$$R = \mathcal{R}/M = \frac{4.97 \times 10^4 (\text{ft} \cdot \text{lb})/(\text{slug-mole}^\circ\text{R})}{28.96 \text{ slug}/(\text{slug-mole})} = 1716 \frac{\text{ft} \cdot \text{lb}}{(\text{slug})(^\circ\text{R})}$$

It is interesting that the *deviation* of an actual gas in nature from perfect gas behavior can be expressed approximately by the modified Berthelot equation of state:

$$\frac{p}{\rho RT} = 1 + \frac{ap}{T} - \frac{bp}{T^3}$$

Here  $a$  and  $b$  are constants of the gas; thus the deviations become [page 66](#) smaller as  $p$  decreases and  $T$  increases. This makes sense because if  $p$  is high, the molecules are packed closely together, intermolecular forces become important, and the gas behaves less as a perfect gas. In contrast, if  $T$  is high, the molecules move faster. Thus, their average separation is larger, intermolecular forces become less significant in comparison to the inertia forces of each molecule, and the gas behaves more as a perfect gas.

Also, note that when air is heated to temperatures above 2500 K, the oxygen molecules begin to dissociate (tear apart) into oxygen atoms; at temperatures above 4000 K, the nitrogen begins to dissociate. For these temperatures, air becomes a *chemically reacting gas*, such that its chemical composition becomes a function of both  $p$  and  $T$ ; that is, it is no longer normal air. As a result,  $R$  in Eq. (2.3) becomes a variable— $R = R(p, T)$ —simply because the gas composition is changing. The perfect gas equation of state, Eq. (2.3), is still valid for such a case, except that  $R$  is no longer a constant. This situation is encountered in very high-speed flight—for example, the atmospheric entry of the *Apollo* capsule, in which case the temperatures in some regions of the flow field reached 11,000 K.

Again, in this book we always assume that air is a perfect gas, obeying Eq. (2.3), with a constant  $R = 287 \text{ J/(kg(K)}$  or  $1716 \text{ ft} \cdot \text{lb/(slug)(}^\circ\text{R)}$ .

## 2.4 DISCUSSION OF UNITS

Physical units are vital to the language of engineering. In the final analysis, the end result of most engineering calculations or measurements is a number that represents some physical quantity, such as pressure, velocity, or force. The number is given in terms of combinations of units:  $10^5 \text{ N/m}^2$ , 300 m/s, or 5 N, where the newton, meter, and second are examples of *units*. (See App. C.)

Historically, various branches of engineering have evolved and favored systems of units that seemed to most conveniently fit their needs. These various sets of “engineering” units usually differ among themselves and are different from the metric system, preferred for years by physicists and chemists. In the modern world of technology, where science and engineering interface on almost all fronts, such duplicity and variety of units have become an unnecessary burden. Metric units are now the accepted norm in both science and engineering in most countries outside the United States. More importantly, in 1960 the Eleventh General Conference on Weights and Measures defined and officially established the *Système International d’Unités* (the SI units), which was adopted as the preferred system of units by 36 participating countries, including the United States. Since then the United States has made progress toward the voluntary implementation of SI units in engineering. For example, several NASA (National Aeronautics and Space Administration) laboratories have made SI units virtually mandatory for all results contained in technical reports, although engineering units can be shown as a duplicate set. The American Institute of Aeronautics and Astronautics (AIAA) has a policy of encouraging use of SI units in all papers reported or published in its technical journals. It is hoped that in a few decades the United States, along with the rest of the world, will be using SI units almost exclusively. Indeed, the aerospace and automobile industries in the United States are now making extensive use of SI units, driven by the realities of an international market for their products.

So here is the situation. Much of the past engineering literature [page 67](#) generated in the United States and Britain used engineering units, whereas much of the current work uses SI units. Elsewhere in the world, SI units have been, and continue to be, the norm. As a result, modern engineering students must do “double duty” in regard to familiarization with units. They must be familiar with engineering units so that they can read, understand, and use the vast bulk of existing literature quoted in such units. At the same time, they must be intimately familiar with SI units for present and future work. Engineering students must be *bilingual* with regard to units.

To promote fluency in both the engineering and SI units, this book incorporates both sets. It is important that you develop a natural feeling for both sets of units; for example, you should feel as at home with pressures quoted in newtons per square meter (pascals) as you probably already do with pounds per square inch (psi). A mark of successful experienced engineers is their feel for correct magnitudes of physical quantities in familiar units. It is important for you to start gaining this feeling for units *now*, for both the engineering and SI units. A purpose of this book is to help you develop this feeling of comfort. In the

process, we will be putting a bit more emphasis on SI units in deference to their extensive international use.

For all practical purposes, SI is a metric system based on the meter, kilogram, second, and kelvin as basic units of length, mass, time, and temperature, respectively. It is a *coherent*, or *consistent*, set of units. Such consistent sets of units allow physical relationships to be written without the need for “conversion factors” in the basic formulas. For example, in a consistent set of units, Newton’s second law can be written

$$\boxed{F = m \times a \\ \text{Force} = \text{Mass} \times \text{Acceleration}}$$

In SI units,

$$\boxed{F = ma \\ 1 \text{ newton} = (1 \text{ kilogram})(1 \text{ meter/second}^2)} \quad (2.4)$$

The newton is a force defined such that it accelerates a mass of 1 kilogram by 1 meter per second squared.

The English engineering system of units is another consistent set of units. Here the basic units of mass, length, time, and temperature are the slug, foot, second, and degree Rankine, respectively. In this system,

$$\boxed{F = ma \\ 1 \text{ pound} = (1 \text{ slug})(1 \text{ foot/second}^2)} \quad (2.5)$$

The pound is a force defined such that it accelerates a mass of 1 slug by 1 page 68 foot per second squared. Note that in both systems, Newton’s second law is written simply as  $F = ma$ , with no conversion factor on the right side.

In contrast, a nonconsistent set of units defines force and mass such that Newton’s second law must be written with a conversion factor, or constant:

$$F = \frac{1}{g_c} \times m \times a$$

↑      ↑      ↑      ↑  
 Force   Conversion   Mass   Acceleration  
 factor

A nonconsistent set of units frequently used in the past by mechanical engineers includes the pound force, pound mass, foot, and second:


$$\boxed{g_c = 32.2(\text{lb}_m)(\text{ft})/(\text{s}^2)(\text{lb}_f) \\ F = \frac{1}{g_c} m \times a}$$

↑      ↑      ↑      ↑  
 lb<sub>f</sub>     $\frac{1}{32.2}$    lb<sub>m</sub>    ft/s<sup>2</sup>

(2.6)

In this nonconsistent system, the unit of mass is the pound mass  $\text{lb}_m$ . [page 69](#)  
Comparing Eqs. (2.5) and (2.6), we see that  $1 \text{ slug} = 32.2 \text{ lb}_m$ . A slug is a  
large hunk of mass, whereas the pound mass is considerably smaller, by a factor  
of 32.2. This is illustrated in Fig. 2.10.

Another nonconsistent set of units that is used in international engineering  
circles deals with the kilogram force, the kilogram mass, meter, and second:

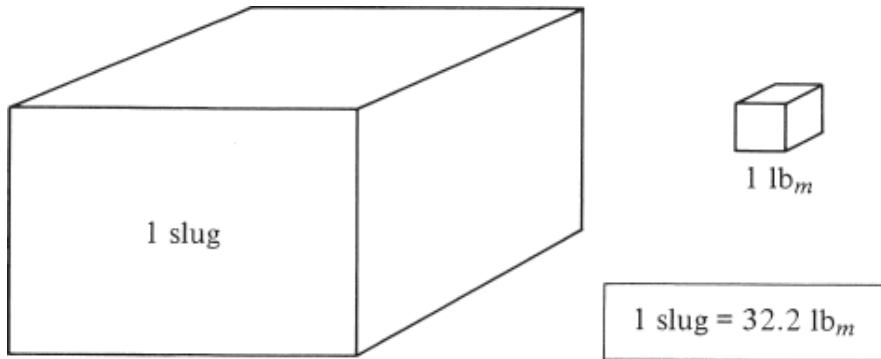

**Figure 2.10** Comparison between the slug and pound mass.

$$\begin{aligned}
g_c &= 9.8(\text{kg})(\text{m})/(\text{s}^2)(\text{kg}_f) \\
F &= \frac{1}{g_c} m \times a \\
&\uparrow \quad \uparrow \quad \uparrow \quad \uparrow \\
&\text{kg}_f \quad \frac{1}{9.8} \quad \text{kg} \quad \text{m/s}^2
\end{aligned} \tag{2.7}$$

In this nonconsistent system, the unit of force is the kilogram force,  $\text{kg}_f$ .

It is easy to understand why people use these nonconsistent units, the pound  
mass ( $\text{lb}_m$ ) and the kilogram force ( $\text{kg}_f$ ). It has to do with *weight*. By definition,  
the weight of an object,  $W$ , is

$$W = mg \tag{2.8}$$

where  $g$  is the acceleration of gravity, a variable that depends on location around  
the earth (indeed, throughout the universe). At standard sea level on earth, the  
standard value of  $g$  is  $9.8 \text{ m}/(\text{s}^2)$ , or  $32.2 \text{ ft}/(\text{s}^2)$ . Equation (2.8) is written in  
*consistent* units; it is simply a natural statement of Newton's second law, Eq.  
(2.4), where the acceleration  $a$  is the acceleration of gravity  $g$ . Hence, if you held  
a kilogram of chocolate candy in your hands at a location on earth where the  
acceleration of gravity is the standard value of  $9.8 \text{ m/s}^2$ , that "kilo" of candy  
would *weigh*

$$W = mg = (1 \text{ kg})(9.8 \text{ m/s}^2) = 9.8 \text{ N}$$

The “kilo” box of candy would *weigh* 9.8 N; this is the force exerted on your hands holding the candy. In contrast, if we used the nonconsistent units embodied in Eq. (2.7) to calculate the force exerted on your hands, we obtain

$$F = \frac{ma}{g_c} = \frac{(1)(9.8)}{(9.8)} = 1 \text{ kg}_f$$

The “kilo” box of candy would *weigh* 1 kg<sub>f</sub>; the force exerted on your hands is 1 kg<sub>f</sub>. What a common convenience: the force you feel on your hands is the *same number* of kgf as is the mass in kg. Presto—the use of the kilogram force in engineering work. Similarly, imagine you are holding 1 pound of chocolates. In the United States, we go to the store and pick a “pound” box of candy off the shelf. We feel the pound force in our hands. From Eq. (2.8), the mass of the candy is

$$m = \frac{W}{g} = \frac{1 \text{ lb}}{32.2 \text{ ft}/(\text{s}^2)} = 0.031 \text{ slug}$$

But if you go into a store and ask the attendant for a “0.031-slug” box of candy, imagine the reply you will get. In contrast, using Eq. (2.6) with the nonconsistent unit of lbm, the mass of a 1-lb box of candy is

$$m = \frac{Fg_c}{a} = \frac{(1 \text{ lb})(32.2)}{(32.2)} = 1 \text{ lb}_m$$

Once again, we have the everyday convenience of the mass in your hands [page 70](#) being the *same number* in lbm as is the force on your hands. Presto—the use of the pound mass in engineering work. This makes sense in common everyday life; in the technical world of engineering calculations, though, using Eq. (2.7) with the nonconsistent unit of kgf, or Eq. (2.6) with the nonconsistent unit of lbm, makes  $g_c$  appear in many of the equations. Nature did not plan on this; the use of  $g_c$  is a human invention. In nature, Newton’s second law appears in its pure form,  $F = ma$ , *not*  $F = 1/g_c (ma)$ . Thus, to use nature in its pure form, we must always use *consistent* units. When we do this,  $g_c$  will never appear in any of our equations, and there is never any confusion in our calculations with regard to conversion factors—quite simply, *no* conversion factors are needed.

For these reasons, we will always deal with a consistent set of units in this book. We will use both the SI units from Eq. (2.4) and the English engineering units from Eq. (2.5). As stated before, you will frequently encounter the engineering units in the existing literature, whereas you will be seeing SI units with increasing frequency in the future literature; that is, you must become bilingual. To summarize, we will deal with the English engineering system units (lb, slug, ft, s, °R) *and* the Système International (SI) units (N, kg, m, s, K).

Therefore, returning to the equation of state, Eq. (2.3), where  $p = \rho RT$ , we see that the units are as follows:

	English Engineering System	SI
$P$	$\text{lb}/\text{ft}^2$	$\text{N}/\text{m}^2$
$\rho$	$\text{slug}/\text{ft}^3$	$\text{kg}/\text{m}^3$
$T$	$^{\circ}\text{R}$	$\text{K}$
$R$ (for air)	$1716 \text{ ft} \cdot \text{lb}/(\text{slug})(^{\circ}\text{R})$	$287 \text{ J}/(\text{kg})(\text{K})$

There are two final points about units to note. First, the units of a physical quantity can frequently be expressed in more than one combination simply by appealing to Newton's second law. From Newton's law, the relation between N, kg, m, and s is

$$\boxed{F = ma}$$

$$\boxed{N = \text{kg} \cdot \text{m}/\text{s}^2}$$

Thus, a quantity such as  $R = 287 \text{ J}/(\text{kg})(\text{K})$  can also be expressed in an equivalent way as

$$R = 287 \frac{\text{J}}{(\text{kg})(\text{K})} = 287 \frac{\text{N} \cdot \text{m}}{(\text{kg})(\text{K})} = 287 \frac{\text{kg} \cdot \text{m}}{\text{s}^2} \frac{\text{m}}{(\text{kg})(\text{K})} = 287 \frac{\text{m}^2}{(\text{s}^2)(\text{K})}$$

$R$  can also be expressed in the equivalent terms of velocity squared divided by temperature. In the same vein,

$$R = 1716 \frac{\text{ft} \cdot \text{lb}}{(\text{slug})(^{\circ}\text{R})} = 1716 \frac{\text{ft}^2}{(\text{s}^2)(^{\circ}\text{R})}$$

Second, in the equation of state, Eq. (2.3),  $T$  is always the *absolute* page 71 temperature, where zero degrees is the absolutely lowest temperature possible. Both K and  $^{\circ}\text{R}$  are absolute temperature scales, where  $0^{\circ}\text{R} = 0 \text{ K}$  = the temperature at which almost all molecular translational motion theoretically stops. In contrast, the familiar Fahrenheit ( $^{\circ}\text{F}$ ) and Celsius ( $^{\circ}\text{C}$ ) scales are *not* absolute scales:

$$\boxed{0^{\circ}\text{F} = 460^{\circ}\text{R}}$$

$$\boxed{0^{\circ}\text{C} = 273 \text{ K} = 32^{\circ}\text{F}}$$

$$\text{For example, } 90^{\circ}\text{F} \text{ is the same as } 460 + 90 = 550^{\circ}\text{R} \quad (2.9)$$

$$\text{and } 10^{\circ}\text{C} \text{ is the same as } 273 + 10 = 283 \text{ K} \quad (2.10)$$

Please remember:  $T$  in Eq. (2.3) *must* be the absolute temperature, either kelvins or degrees Rankine.

## 2.5 SPECIFIC VOLUME

Density  $\rho$  is the *mass per unit volume*. The inverse of this quantity is also frequently used in aerodynamics. It is called the *specific volume*  $v$  and is defined as the *volume per unit mass*. By definition,

$$v = \frac{1}{\rho}$$

Hence, from the equation of state

$$p = \rho RT = \frac{1}{v}RT$$

we also have

$$pv = RT \quad (2.11)$$

Abbreviated units for  $v$  are  $\text{m}^3/\text{kg}$  and  $\text{ft}^3/\text{slug}$ .

### EXAMPLE 2.1

The air pressure and density at a point on the wing of a Boeing 747 are  $1.10 \times 10^5 \text{ N/m}^2$  and  $1.20 \text{ kg/m}^3$ , respectively. What is the temperature at that point?

#### ■ Solution

From Eq. (2.3),  $p = \rho RT$ ; hence  $T = p/(\rho R)$ , or

$$T = \frac{1.10 \times 10^5 \text{ N/m}^2}{(1.20 \text{ kg/m}^3)[287 \text{ J/(kg)(K)}]} = \boxed{319 \text{ K}}$$

### EXAMPLE 2.2

The high-pressure air storage tank for a supersonic wind tunnel has a [page 72](#) volume of  $1000 \text{ ft}^3$ . If air is stored at a pressure of  $30 \text{ atm}$  and a temperature of  $530^\circ\text{R}$ , what is the mass of gas stored in the tank in slugs? In pound mass?

#### ■ Solution

The unit of atm for pressure is not a consistent unit. You will find it helpful to remember that in the English engineering system,

$$1 \text{ atm} = 2116 \text{ lb/ft}^2$$

Hence  $p = (30)(2116)$  lb/ft<sup>2</sup> =  $6.348 \times 10^4$  lb/ft<sup>2</sup>. Also, from Eq. (2.3),  $p = \rho RT$ ; hence  $\rho = (p/RT)$ , or

$$\rho = \frac{6.348 \times 10^4 \text{ lb/ft}^2}{[1716 \text{ ft} \cdot \text{lb/(slug)}(\text{°R})](530\text{°R})} = 6.98 \times 10^{-2} \text{ slug/ft}^3$$

This is the density, which is mass *per unit volume*. The total mass  $M$  in the tank of volume  $V$  is

$$M = \rho V = (6.98 \times 10^{-2} \text{ slug/ft}^3)(1000 \text{ ft}^3) = \boxed{69.8 \text{ slugs}}$$

Recall that 1 slug = 32.2 lb<sub>m</sub>. Hence

$$M = (69.8)(32.2) = \boxed{2248 \text{ lb}_m}$$

### EXAMPLE 2.3

---

Air flowing at high speed in a wind tunnel has pressure and temperature equal to 0.3 atm and -100°C, respectively. What is the air density? What is the specific volume?

#### ■ Solution

You are reminded again that the unit of atm for pressure is not a consistent unit. You will find it helpful to memorize that in the SI system,

$$1 \text{ atm} = 1.01 \times 10^5 \text{ N/m}^2$$

Hence

$$p = (0.3)(1.01 \times 10^5) = 0.303 \times 10^5 \text{ N/m}^2$$

Note that  $T = -100^\circ\text{C}$  is *not* an absolute temperature. Hence

$$T = -100 + 273 = 173 \text{ K}$$

From Eq. (2.3),  $p = \rho RT$ ; hence  $\rho = p/(RT)$ , or

$$\rho = \frac{0.303 \times 10^5 \text{ N/m}^2}{[287 \text{ J/(kg)(K)}](173 \text{ K})} = 0.610 \text{ kg/m}^3$$

$$v = \frac{1}{\rho} = \frac{1}{0.610} = 1.64 \text{ m}^3/\text{kg}$$

*Note:* It is worthwhile to remember that

$$1 \text{ atm} = 2116 \text{ lb/ft}^2$$
$$1 \text{ atm} = 1.01 \times 10^5 \text{ N/m}^2$$

### EXAMPLE 2.4

*Note:* In Examples 2.1–2.3, the units for each number that appears internally in the calculations were explicitly written out next to each of the numbers. This was done to give you practice in thinking about the units. In the present example, and in all the remaining worked examples in this book, we discontinue this practice except where necessary for clarity. We are using consistent units in our equations, so we do not have to worry about keeping track of all the units internally in the mathematics. If you feed numbers expressed in terms of consistent units into your equations at the beginning of your calculation and you go through a lot of internal mathematical operations (addition, subtraction, multiplication, differentiation, integration, division, etc.) to get your answer, that answer will automatically be in the proper consistent units.

page 73

Consider the Concorde supersonic transport flying at twice the speed of sound at an altitude of 16 km. At a point on the wing, the metal surface temperature is 362 K. The immediate layer of air in contact with the wing at that point has the same temperature and is at a pressure of  $1.04 \times 10^4 \text{ N/m}^2$ . Calculate the air density at this point.

#### ■ Solution

From Eq. (2.3),

$$\rho = \frac{P}{RT}, \text{ where } R = 287 \frac{\text{J}}{(\text{kg})(\text{K})}$$

The given pressure and temperature are in the appropriate consistent SI units. Hence


$$\rho = \frac{1.04 \times 10^4}{(287)(362)} = \boxed{0.100 \text{ kg/m}^3}$$

We know the answer must be in kilograms per cubic meter because these are the consistent units for density in the SI system. We simply write the answer as  $0.100 \text{ kg/m}^3$  without needing to trace the units through the mathematical calculation.

### EXAMPLE 2.5

This example deals with the conversion of units from one system to another.

An important design characteristic of an airplane is its *wing loading*, defined as the weight of the airplane,  $W$ , divided by its *planform wing area* (the projected wing area you see by looking directly down on the top of the wing),  $S$ . (The importance of wing loading,  $W/S$ , on the performance of an airplane is discussed at length in Ch. 6.) Consider the Lockheed-Martin F-117A stealth fighter, shown in Fig. 2.11. In most modern international aeronautical publications, the wing loading is given in units of  $\text{kgf}/\text{m}^2$ . For the F-117A, the wing loading is 280.8  $\text{kgf}/\text{m}^2$ . Calculate the wing loading in units of  $\text{lb}/\text{ft}^2$ .

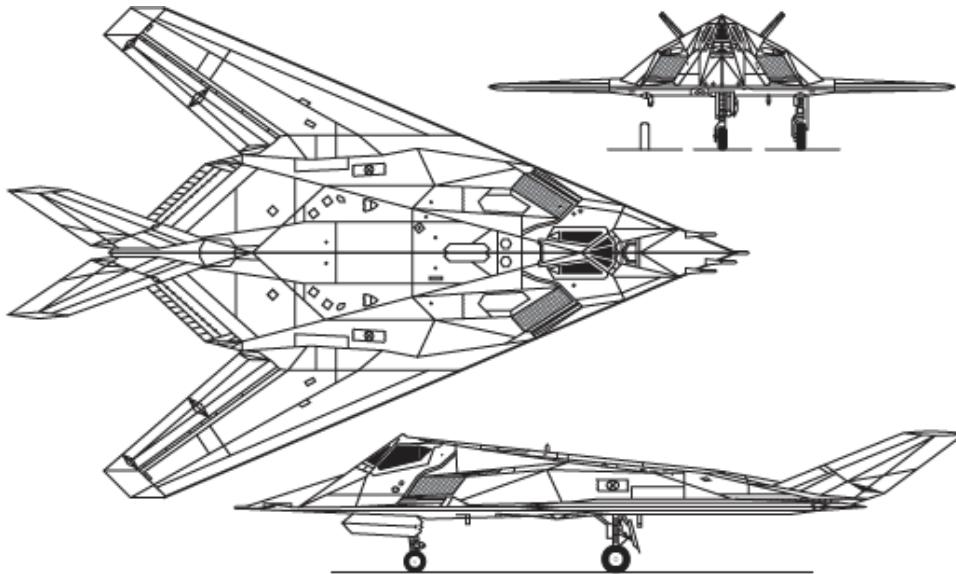

**Figure 2.11** Three-view of the Lockheed-Martin F-117A stealth fighter.

### ■ Solution

We want to convert from  $\text{kgf}$  to  $\text{lb}$  and from  $\text{m}^2$  to  $\text{ft}^2$ . Some useful [page 74](#) intermediate conversion factors obtained from App. C are itemized in the following:

$1 \text{ ft} = 0.3048 \text{ m}$ $1 \text{ lb} = 4.448 \text{ N}$
---

In addition, from Eq. (2.7), a mass of 1 kg weighs 1  $\text{kgf}$ , and from Eq. (2.8), the same 1-kg mass weighs 9.8 N. Thus we have as an additional conversion factor

$$1 \text{ kg}_f = 9.8 \text{ N}$$

I recommend the following ploy to carry out conversions of units easily and accurately. Consider the ratio  $(1 \text{ ft}/0.3048 \text{ m})$ . Because 1 foot is exactly the same length as 0.3048 m, this is a ratio of the “same things”; hence *philosophically*

you can visualize this ratio as like “unity” (although the actual number obtained by dividing 1 by 0.3048 is obviously not 1). Hence we can visualize that the ratios

$$\left(\frac{1 \text{ ft}}{0.3048 \text{ m}}\right), \left(\frac{1 \text{ lb}}{4.448 \text{ N}}\right), \left(\frac{1 \text{ kg}_f}{9.8 \text{ N}}\right)$$

are like “unity.” Then, to convert the wing loading given in  $\text{kgf}/\text{m}^2$  to  $\text{lb}/\text{ft}^2$ , we simply take the given wing loading in  $\text{kgf}/\text{m}^2$  and multiply it by the various factors of “unity” in just the right fashion so that various units cancel out, and we end up with the answer in  $\text{lb}/\text{ft}^2$ . That is,

$$\frac{W}{S} = 280.8 \frac{\text{kg}_f}{\text{m}^2} \left(\frac{9.8 \text{ N}}{1 \text{ kg}_f}\right) \left(\frac{1 \text{ lb}}{4.448 \text{ N}}\right) \left(\frac{0.3048 \text{ m}}{1 \text{ ft}}\right)^2 \quad (2.12)$$

The quantitative *number* for  $W/S$  is, from Eq. (2.12),

$$\frac{W}{S} = \frac{(280.8)(9.8)(0.3048)^2}{4.448} = 57.3$$

The units that go along with this number are obtained by canceling page 75 various units as they appear in the numerators and denominators of Eq. (2.12). That is,

$$\frac{W}{S} = 280.8 \frac{\text{kg}_f}{\text{m}^2} \left(\frac{9.8 \text{ N}}{1 \text{ kg}_f}\right) \left(\frac{1 \text{ lb}}{4.448 \text{ N}}\right) \left(\frac{0.3048 \text{ m}}{1 \text{ ft}}\right)^2 = \boxed{57.3 \frac{\text{lb}}{\text{ft}^2}}$$

## EXAMPLE 2.6

---

This example also deals with the conversion of units.

In common everyday life in the United States, we frequently quote velocity in units of miles per hour. The speedometer in a car is primarily calibrated in miles per hour (although in many new cars, the dial also shows kilometers per hour in finer print). In popular aeronautical literature, airplane velocities are frequently given in miles per hour. (After their successful flight on December 17, 1903, Orville telegraphed home that the speed of the *Wright Flyer* was 31 miles per hour, and miles per hour has been used for airplane flight speeds since that time.) Miles per hour, however, are not in consistent units; neither miles nor hours are consistent units. To make proper calculations using consistent units, we must convert miles per hour into feet per second or meters per second.

Consider a Piper Cub, a small, light, general aviation airplane shown in Fig. 2.12a; the Piper Cub is a design that dates to before World War II, and many are

still flying today. When the airplane is flying at 60 mi/h, calculate the velocity in terms of (a) ft/s and (b) m/s.

### ■ Solution

We recall these commonly known conversion factors:

$$\begin{aligned}1 \text{ mi} &= 5280 \text{ ft} \\1 \text{ h} &= 3600 \text{ s}\end{aligned}$$

Also, from App. C,

$$1 \text{ ft} = 0.3048 \text{ m}$$

a. 
$$v = \left(60 \frac{\text{mi}}{\text{h}}\right) \left(\frac{1 \text{ h}}{3600 \text{ s}}\right) \left(\frac{5280 \text{ ft}}{1 \text{ mi}}\right)$$

$$v = 88.0 \frac{\text{ft}}{\text{s}}$$



**Figure 2.12a** The Piper Cub, one of the most famous light, general aviation aircraft.

(Source: R. Hughes/Alamy Stock Photo.)



**Figure 2.12b** The North American P-51D Mustang of World War II fame.

(Source: *Staff Sgt. Marc I. Lane/U.S. Air Force.*)

This answer provides a useful conversion factor by itself. It is simple and helpful to memorize that

$$60 \text{ mi/h} = 88 \text{ ft/s}$$

For example, consider a World War II P-51 Mustang (Fig. 2.12b) flying [page 77](#) at 400 mi/h. Its velocity in ft/s can easily be calculated from

$$V = 400 \left( \frac{88 \text{ ft/s}}{60 \text{ mi/h}} \right) = 586.7 \text{ ft/s}$$

b.  $V = \left( 60 \frac{\text{mi}}{\text{h}} \right) \left( \frac{1 \text{ h}}{3600 \text{ s}} \right) \left( \frac{5280 \text{ ft}}{1 \text{ mi}} \right) \left( \frac{0.3048 \text{ m}}{1 \text{ ft}} \right)$

$$V = 26.82 \text{ m/s}$$

Hence

$$60 \text{ mi/h} = 26.82 \text{ m/s}$$

### EXAMPLE 2.7

The next three examples further illustrate how to use proper, consistent units to solve engineering problems.

Consider the Lockheed-Martin F-117A discussed in Example 2.5 and shown in Fig. 2.11. The planform area of the wing is 913 ft<sup>2</sup>. Using the result from

Example 2.5, calculate the net force exerted on the F-117A required for it to achieve an acceleration of one-third of a  $g$  (one-third the standard acceleration of gravity) in straight-line flight.

### ■ Solution

From Example 2.5, the wing loading was calculated in English engineering units to be  $W/S = 57.3 \text{ lb/ft}^2$ . Thus the weight of the F-117A is

$$W = \left(\frac{W}{S}\right)S = \left(57.3 \frac{\text{lb}}{\text{ft}^2}\right)(913 \text{ ft}^2) = 52,315 \text{ lb}$$

The force required to achieve a given acceleration of a given object is obtained from Newton's second law:

$$F = ma$$

The mass of the F-117A is obtained from Eq. (2.8) written as

$$m = \frac{W}{g}$$

where  $g = 32.2 \text{ ft/s}^2$ . Thus

$$m = \frac{52,315}{32.2} = 1624.7 \text{ slug}$$

Therefore, the net force required to accelerate the F-117A at the rate of one-third  $g$ —that is, the rate of  $1/3 (32.2) = 10.73 \text{ ft/s}^2$ —is

$$F = ma = (1624.7)(10.73) = 17,438 \text{ lb}$$

In level flight, the net force on the airplane is the difference between the [page 78](#) thrust from the engines acting forward and the aerodynamic drag acting rearward (such matters are the subject of Ch. 6)). The F-117A has two turbojet engines capable of a combined maximum thrust of 21,600 lb at sea level. When the aerodynamic drag is no more than  $21,600 - 17,438 = 4612 \text{ lb}$ , the F-117A is capable of achieving an acceleration of one-third of a  $g$  in level flight at sea level.

This example highlights the use of the English engineering system consistent unit of mass (namely the slug) in Newton's second law. Furthermore, we obtained the mass in slugs for the F-117A from its weight in lb using Eq. (2.8).

### EXAMPLE 2.8

Consider a case in which the air inside the pressurized cabin of a jet transport flying at some altitude is at a pressure of 0.9 atm and a temperature of 15°C. The total volume of air at any instant inside the cabin is 1800 m<sup>3</sup>. If the air in the cabin is completely recirculated through the air conditioning system every 20 min, calculate the mass flow of air in kg/s through the system.

### ■ Solution

The density of the air is given by the equation of state, Eq. (2.3), written as

$$\rho = \frac{p}{RT}$$

In the SI system of units, consistent units of pressure and temperature are N/m<sup>2</sup> and K respectively. (Remember that  $T$  in Eq. (2.3) is the *absolute* temperature.) In Example 2.3 we noted that 1 atm =  $1.01 \times 10^5$  N/m<sup>2</sup>. Hence

$$p = (0.9 \text{ atm})(1.01 \times 10^5) = 0.909 \times 10^5 \text{ N/m}^2$$

and

$$T = 273 + 15 = 288 \text{ K}$$

Thus

$$\rho = \frac{p}{RT} = \frac{0.909 \times 10^5}{(287)(288)} = 1.1 \text{ kg/m}^3$$

The total mass  $M$  of air inside the cabin at any instant is  $\rho V$ , where  $V$  is the volume of the cabin, given as 1800 m<sup>3</sup>. Thus

$$M = \rho V = (1.1)(1800) = 1980 \text{ kg}$$

page 79

This mass of air is recirculated through the air conditioning system every 20 min, or every 1200 s. Hence, the mass flow  $m$  is

$$m = \frac{1980}{1200} = \boxed{1.65 \text{ kg/s}}$$

### EXAMPLE 2.9

Consider the same airplane cabin discussed in Example 2.8. We now wish to increase the pressure inside the cabin by pumping in extra air. Assume that the air temperature inside the cabin remains constant at 288 K. If the time rate of increase in cabin pressure is 0.02 atm/min, calculate the time rate of change of the air density per second.

## ■ Solution

From the equation of state,

$$p = \rho RT$$

Differentiating this equation with respect to time,  $t$ , assuming that  $T$  remains constant, we have

$$\frac{dp}{dt} = RT \frac{d\rho}{dt}$$

or

$$\frac{d\rho}{dt} = \frac{1}{RT} \left( \frac{dp}{dt} \right)$$

Consistent units for  $\frac{dp}{dt}$  are  $\frac{\text{N}}{\text{m}^2 \text{s}}$ . From the given information,

$$\frac{dp}{dt} = 0.02 \text{ atm/min}$$

Changing to consistent units, noting that  $1 \text{ atm} = 1.01 \times 10^5 \text{ N/m}^2$  and one minute is 60 seconds, we have

$$\frac{dp}{dt} = 0.02 \frac{\text{atm}}{\text{min}} \left( \frac{1.01 \times 10^5 \text{ N/m}^2}{1 \text{ atm}} \right) \left( \frac{1 \text{ min}}{60 \text{ s}} \right) = 33.67 \frac{\text{N}}{\text{m}^2 \text{s}}$$

Hence

$$\frac{d\rho}{dt} = \frac{1}{RT} \left( \frac{dp}{dt} \right) = \frac{33.67}{(287)(288)} = \boxed{4.07 \times 10^{-4} \frac{\text{kg}}{\text{m}^3 \text{s}}}$$

### EXAMPLE

#### 2.10

The performance of an airplane (Ch. 6) depends greatly on the power [page 80](#) available from its engine(s). For a reciprocating engine, such as in an automobile or in many propeller-driven airplanes, the power available is commonly given in terms of *horsepower*, a horribly nonconsistent unit. This unit was developed by James Watt, the English inventor of the first practical steam engine in the years around 1775. To help market his steam engine, Watt compared its power output with that of a horse. He observed that a horse could turn a mill wheel with a 12-foot radius 144 times in an hour pulling a force of 180 lb. Recalling that power,

$P$ , by definition, is energy per unit time, and energy is force,  $F$ , times distance,  $d$ , the power output of the horse is

$$P = \frac{Fd}{t} = \frac{(180)[(144)(2\pi)(12)]}{60 \text{ min}} = 32,572 \frac{\text{ft lb}}{\text{min}}$$

Watt rounded this number up to 33,000 ft lb/min, which is the value we use today for the energy equivalent to one horsepower. Using consistent units of ft lb/sec, we have

$$1 \text{ hp} = \frac{33,000}{60} = 550 \text{ ft lb/sec}$$

These are the consistent units for one horsepower in the English engineering system. From this, calculate the value for one horsepower in the SI system.

### ■ Solution

In the SI system, the consistent units for energy (force  $\times$  distance) are (N)(m), so the consistent units of power are (force  $\times$  distance)/t = (N)(m)/sec. This unit of power is called a *watt*, in honor of James Watt, abbreviated in this example as W. From App. C, we have

$$1 \text{ ft} = 0.3048 \text{ m}$$

$$1 \text{ lb} = 4.448 \text{ N}$$

Thus

$$\begin{aligned} 1 \text{ hp} &= 550 \frac{\text{ft lb}}{\text{sec}} = 550 \left( \frac{0.3048 \text{ m}}{1 \text{ ft}} \right) \left( \frac{4.448 \text{ N}}{1 \text{ lb}} \right) \\ &= 746 \frac{\text{N m}}{\text{sec}} = \boxed{746 \text{ W}} \end{aligned}$$

These consistent units for 1 hp, namely

$$1 \text{ hp} = 550 \frac{\text{ft lb}}{\text{sec}} = 746 \text{ W}$$

are used in Ch. 6).

### EXAMPLE 2.11

---

One of the important performance characteristics of a given airplane is its [page 81](#) maximum rate-of-climb, that is, its time rate of increase in altitude. In Sec. 6.8, we show that rate-of-climb, denoted by R/C, is proportional to the difference in maximum power available from the engine and the power required by the

airplane to overcome aerodynamic drag; this difference is called the *excess power*. Indeed, in Sec. 6.8 we show that

$$R/C = \frac{\text{excess power}}{W}$$

where  $W$  is the weight of the airplane. Using this equation, calculate the R/C in units of ft/min for an airplane weighing 9000 kg<sub>f</sub> flying at the condition where the excess power is 4700 hp. Note that all the units given here, ft/min, kg<sub>f</sub>, and hp are inconsistent units; however, the equation for R/C must use consistent units. (Also, the numbers given here apply approximately to the twin-jet executive transport considered in Ch. 6.).)

### ■ Solution

The result from Example 2.10 is that 1 hp = 746 watts. Hence, in the SI system,

$$\text{excess power} = (4700 \text{ hp})(746) = 3.506 \times 10^6 \text{ watts}$$

Near the surface of the earth (see Sec. 2.4), the mass of the airplane in kg is the same number as the weight in kg<sub>f</sub>. Hence, the weight is

$$W = mg = (9000 \text{ kg})(9.8 \text{ m/sec}^2)$$

$$W = 8.82 \times 10^4 \text{ N}$$

Now we have each term in the equation for rate-of-climb expressed in consistent SI units. Hence

$$R/C = \frac{\text{excess power}}{W} = \frac{3.506 \times 10^6 \text{ W}}{8.82 \times 10^4 \text{ N}}$$

$$R/C = 39.75 \text{ m/sec}$$

The consistent units for R/C are m/sec because we used consistent SI units in the equation. Rate-of-climb is frequently quoted in the literature in terms of minutes rather than seconds, so we have

$$R/C = 39.75 \left( \frac{\text{m}}{\text{sec}} \right) \left( \frac{60 \text{ sec}}{1 \text{ min}} \right) = 2385 \frac{\text{m}}{\text{min}}$$

We are asked in this example to calculate R/C in units of ft/min, which is [page 82](#) still the norm in the United States. From App. C,

$$1 \text{ ft} = 0.3048 \text{ m}$$


Thus,

$$R/C = \left( 2385 \frac{\text{m}}{\text{min}} \right) \left( \frac{1 \text{ ft}}{0.3048 \text{ m}} \right) = \boxed{7824 \text{ ft/min}}$$


## 2.6 ANATOMY OF THE AIRPLANE

In regard to fundamental thoughts, it is appropriate to discuss some basic nomenclature associated with airplanes and space vehicles—names for the machines themselves. In this section we deal with airplanes; space vehicles are discussed in Sec. 2.7.

The major components of a conventional airplane are identified in Fig. 2.13. The *fuselage* is the center body, where most of the usable volume of the airplane is found. The fuselage carries people, baggage, other payload, instruments, fuel, and anything else that the airplane designer puts there. The *wings* are the main lift-producing components of the airplanes; the left and right wings are identified as you would see them from inside the airplane, facing forward. The internal volume of the wings can be used for such items as fuel tanks and storage of the main landing gear (the wheels and supporting struts) after the gear is retracted. The horizontal and vertical *stabilizers* are located and sized so as to provide the necessary stability for the airplane in flight (we consider stability in Ch. 7). Sometimes these surfaces are called the horizontal and vertical *tails*, or *fins*. When the engines are mounted from the wings, as shown in Fig. 2.13, they are usually housed in a type of shroud called a *nacelle*. As a historical note, the French worked hard on flying machines in the late 19th and early 20th centuries; as a result, some of our conventional airplane nomenclature today comes from the French. *Fuselage* is a French word, meaning a “spindle” shape. So is the word *nacelle*, meaning a “small boat.”

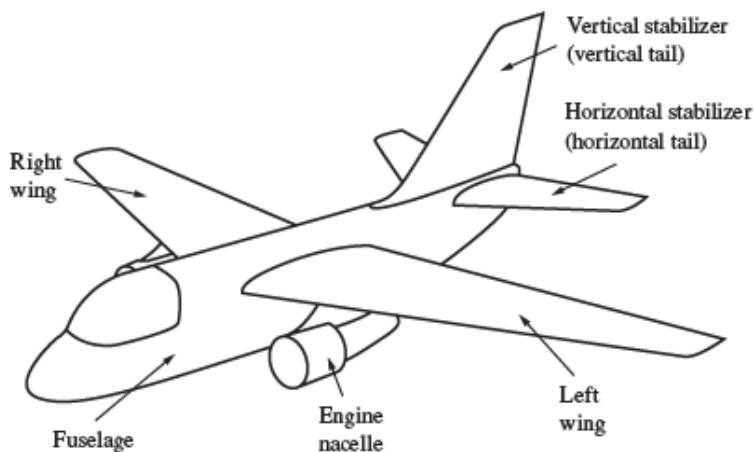

**Figure 2.13** Basic components of an airplane.

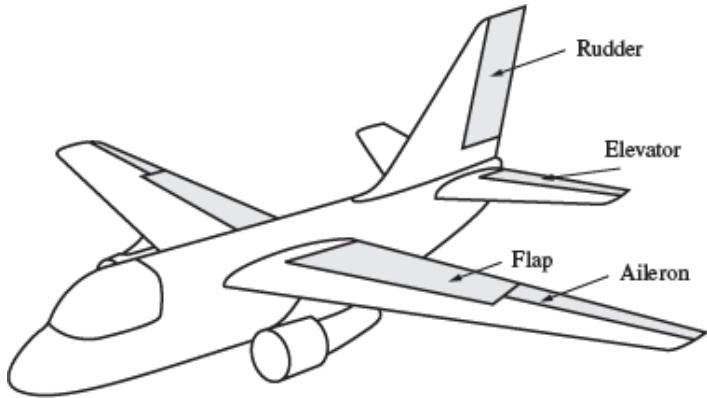

**Figure 2.14** Control surfaces and flaps.

Flaps and control surfaces are highlighted in Fig. 2.14. These are [page 83](#) hinged surfaces, usually at the trailing edge (the back edge) of the wings and tail, that can be rotated up or down. The function of a flap is to increase the lift force on the airplane; flaps are discussed in detail in Sec. 5.17. Some aircraft are designed with flaps at the leading edge (the front edge) of the wings as well as at the trailing edge. Leading-edge flaps are not shown in Fig. 2.14. The ailerons are control surfaces that control the rolling motion of the airplane around the fuselage. For example, when the left aileron is deflected downward and the right aileron is deflected upward, lift is increased on the left wing and decreased on the right wing, causing the airplane to roll to the right. The elevators are control surfaces that control the nose up-and-down pitching motion; when the elevator is deflected downward, the lift on the tail is increased, pulling the tail up and the nose of the airplane down. The rudder is a control surface that can turn the nose of the airplane to the right or left (called *yawing*). The nature and function of these control surfaces are discussed in greater detail in Ch. 7).


In aeronautics it is common to convey the shape of an airplane by means of a *three-view* diagram, such as those shown in Figs. 2.11 and 2.15. Proceeding from the top to the bottom of Fig. 2.15, we see a front view, top view, and side view, respectively, of the North American F-86H, a famous jet fighter from the Korean War era. A three-view diagram is particularly important in the design process of a new airplane because it conveys the precise shape and dimensions of the aircraft.

The internal structure of an airplane is frequently illustrated by a *cutaway* drawing, such as that shown in Fig. 2.17. Here the famous Boeing B-17 bomber from World War II is shown with a portion of its skin cut away so that the internal structure is visible. Although the B-17 is a late 1930s design, it is shown here because of its historical significance and because it represents a conventional airplane structure. A cutaway of the Lockheed-Martin F-117A

stealth fighter is shown in Fig. 2.18; this is a modern airplane, yet its internal structure is not unlike that of the B-17 shown in Fig. 2.17. Cutaway diagrams usually contain many details about the internal structure and packaging for the airplane.

---

page 84

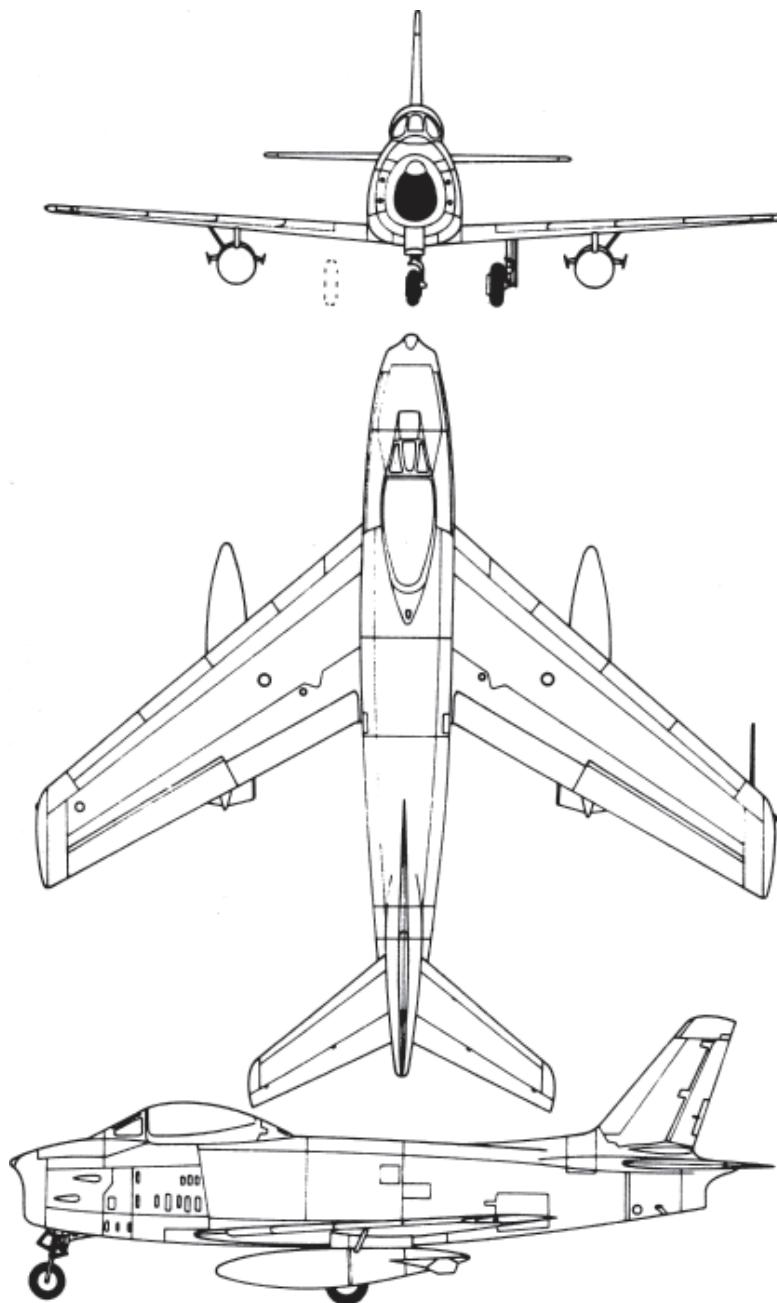

**Figure 2.15** Three-view diagram of the North American F-86H.

Any student of the history of aeronautics knows that airplanes have 

---

page 85  
been designed with a wide variety of shapes and configurations. It is generally

true that *form follows function*, and airplane designers have configured their aircraft to meet specific requirements. However, airplane design is an open-ended problem—there is no single “right way” or “right configuration” to achieve the design goals. Also, airplane design is an exercise in compromise; to achieve good airplane performance in one category, other aspects of performance may have to be partly sacrificed. For example, an airplane designed for very high speed may have poor landing and takeoff performance. A design feature that optimizes the aerodynamic characteristics may overly complicate the structural design. Convenient placement of the engines may disrupt the aerodynamics of the airplane . . . and so forth. For this reason, airplanes come in all sizes and shapes. An exhaustive listing of all the different types of airplane configurations is not our purpose here. Over the course of your studies and work, you will sooner or later encounter most of these types. However, there are several general classes of airplane configurations that we do mention here.


## DESIGN BOX

This is the first of many design boxes in this book. These design boxes highlight information pertinent to the philosophy, process, and details of flight vehicle design, as related to the discussion at that point in the text. The purpose of these design boxes is to reflect on the design implications of various topics being discussed. This is not a book about design, but the fundamental information in this book certainly has applications to design. The design boxes are here to bring these applications to your attention. Design is a vital function—indeed, usually the end product—of engineering. These design boxes can give you a better understanding of aerospace *engineering*.

This design box is associated with our discussion of the anatomy of the airplane and three-view diagrams. An example of a much more detailed three-view diagram is that in Fig. 2.16, which shows the Vought F4U Corsair, the famous Navy fighter from World War II. Figure 2.16 is an example of what, in the airplane design process, is called a *configuration layout*. In Fig. 2.16, we see not only the front view, side view, top view, and bottom view of the airplane, but also the detailed dimensions, the cross-sectional shape of the fuselage at different locations, the airfoil shape of the wing at different locations, landing gear details, and the location of various lights, radio antenna, and so on. (A discussion of the role of the configuration layout in airplane design can be found in Anderson, *Aircraft Performance and Design*, - McGraw-Hill, New York, 1999.)

The first is the *conventional configuration*. This is exemplified by the aircraft shown in Figs. 2.13 through 2.17. Here we see *monoplanes* (a single set of wings) with a horizontal and vertical tail at the back of the aircraft. The aircraft may have a *straight wing*, as seen in Figs. 2.13, 2.14, 2.16, and 2.17, or a *swept wing*, as seen in Fig. 2.15. Wing sweep is a design feature that reduces the aerodynamic drag at speeds near to or above the speed of sound, and that is why most high-speed aircraft today have some type of swept wing. However, the idea goes back as far as 1935. Swept wings are discussed in greater detail in Sec. 5.16.


page 86

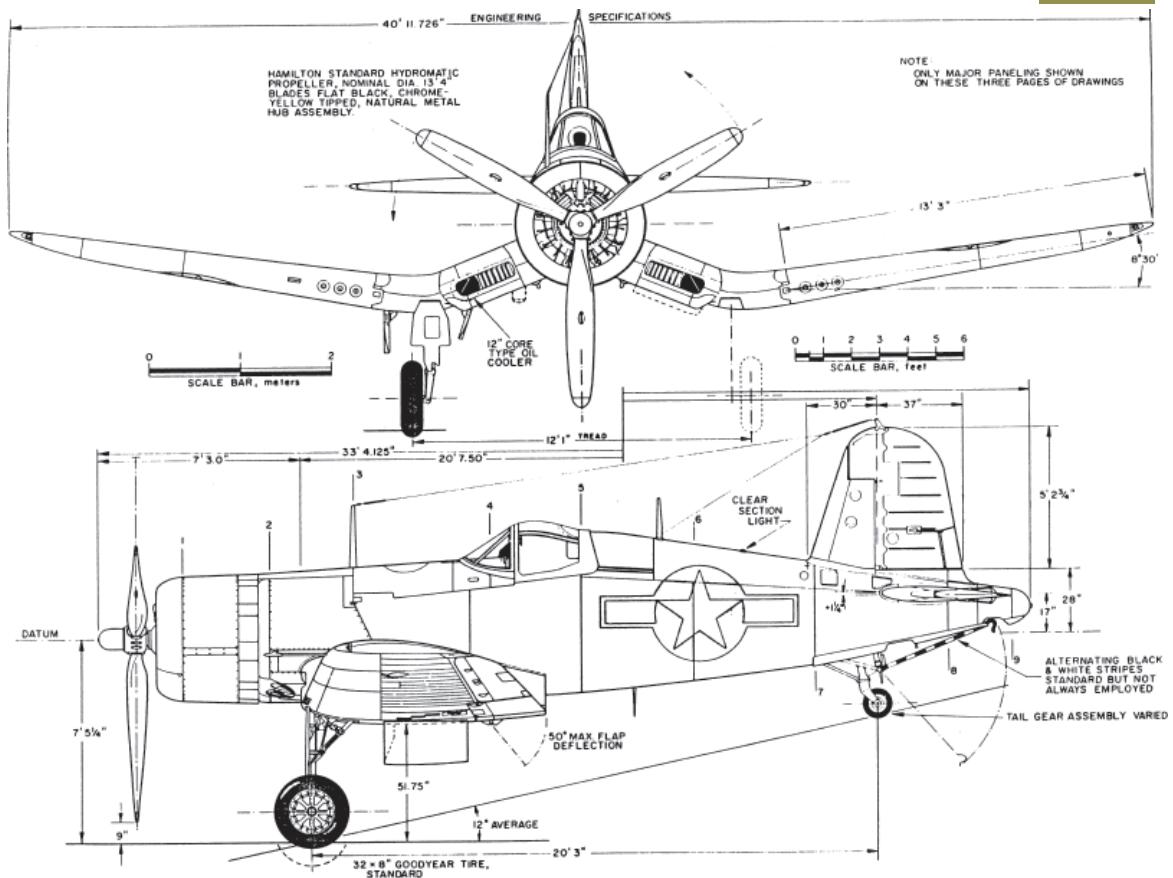



**Figure 2.16** Vought F4U-1D Corsair. Drawing by Paul Matt.

(Source: Courtesy of Aviation Heritage, Inc., Destin, FL.)

page 87

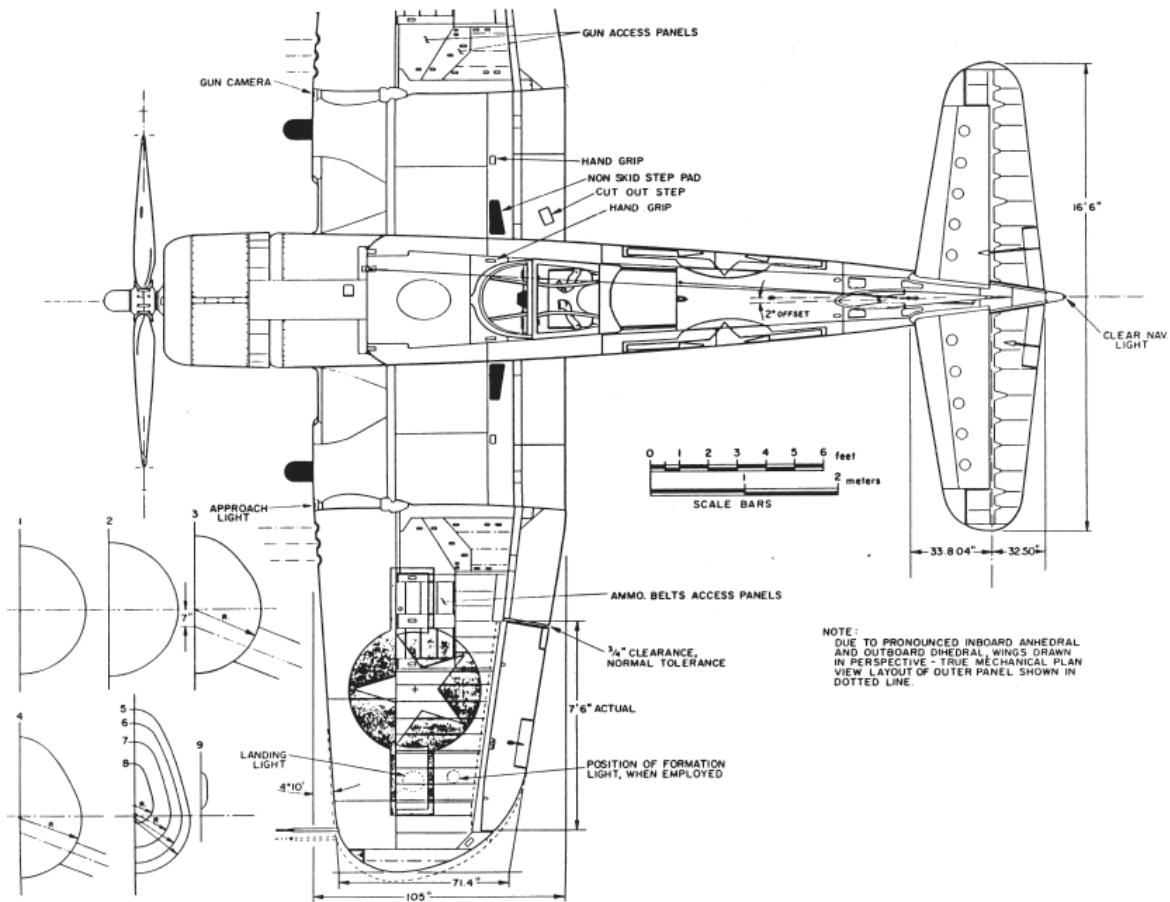


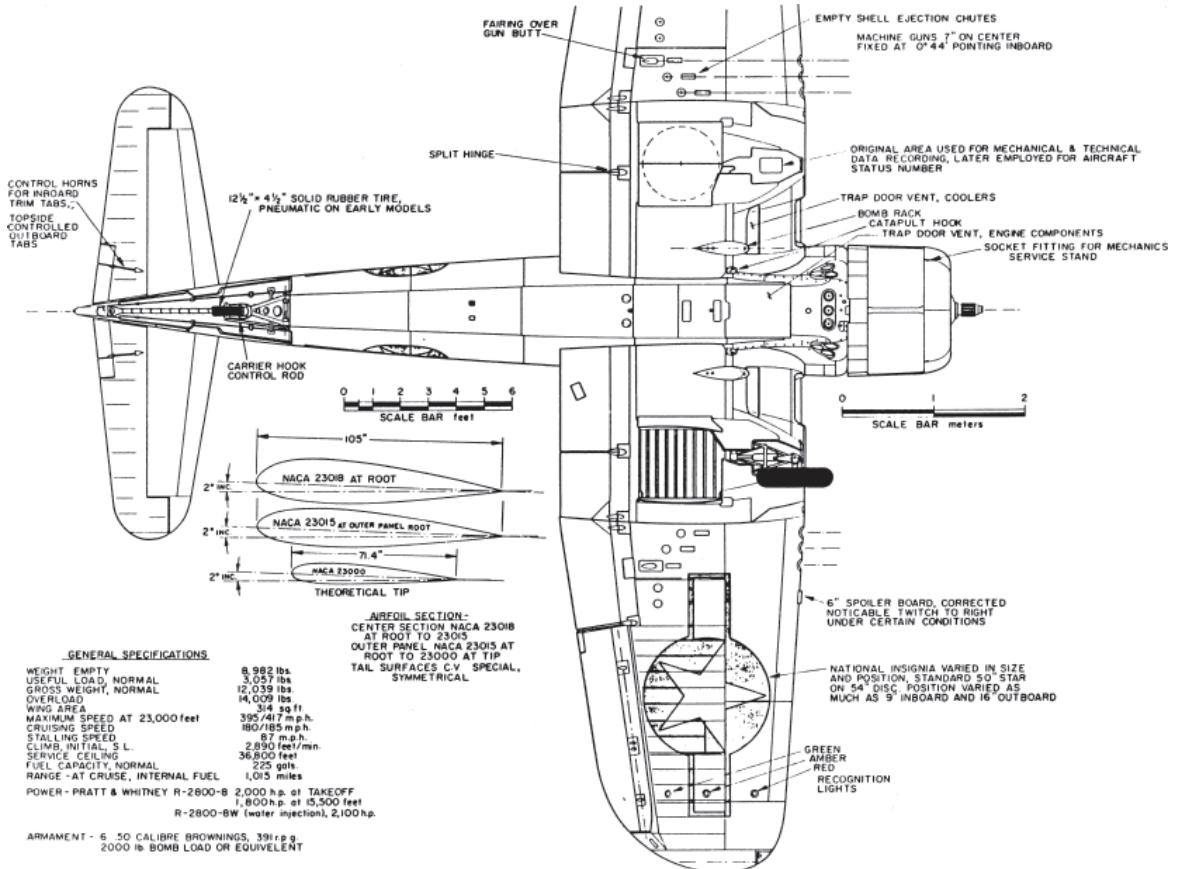

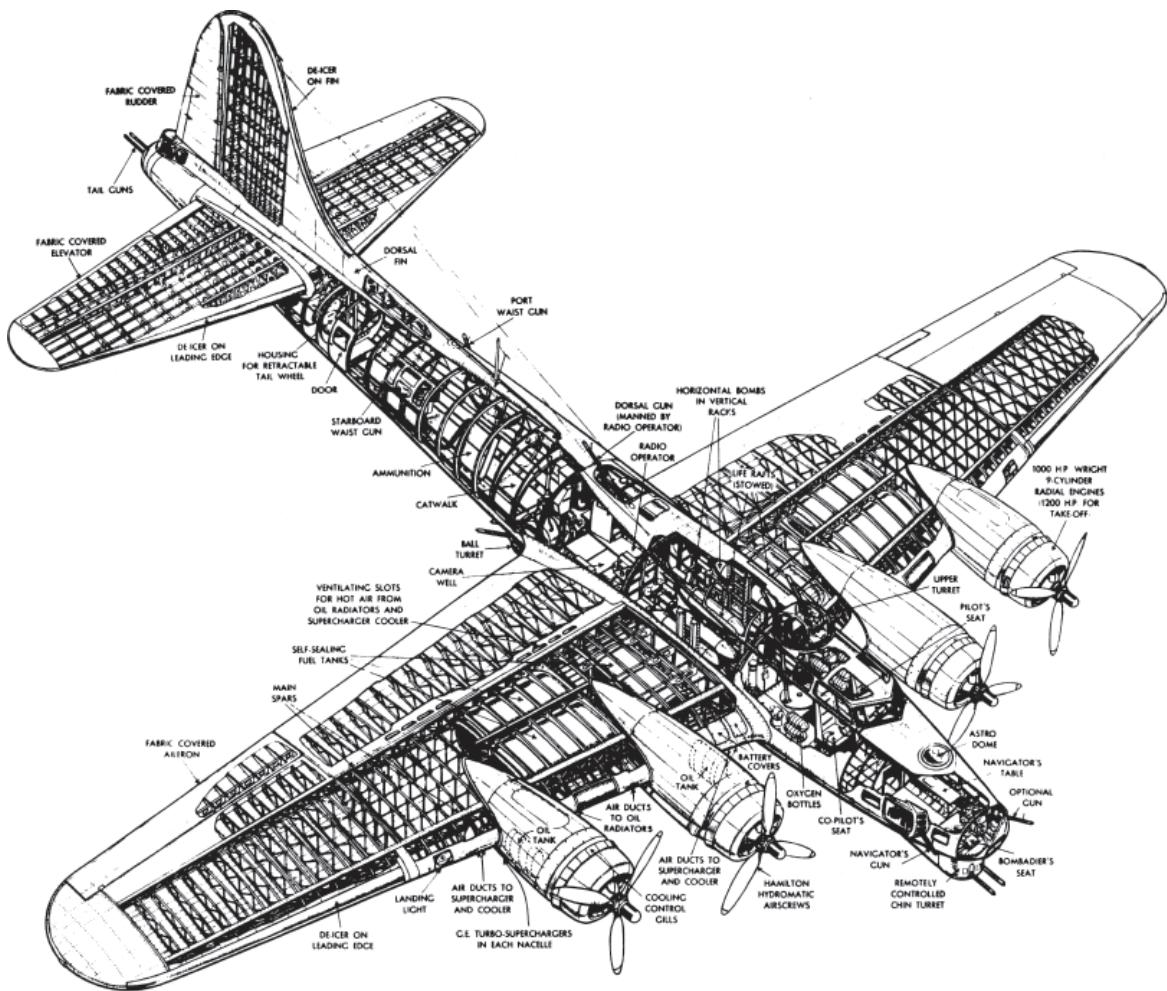

**Figure 2.17** Cutaway drawing of the Boeing B-17.


(Source: From Gunston, Bill. *Classic World War II Aircraft Cutaways*. London: Osprey Publishing, 1995.)

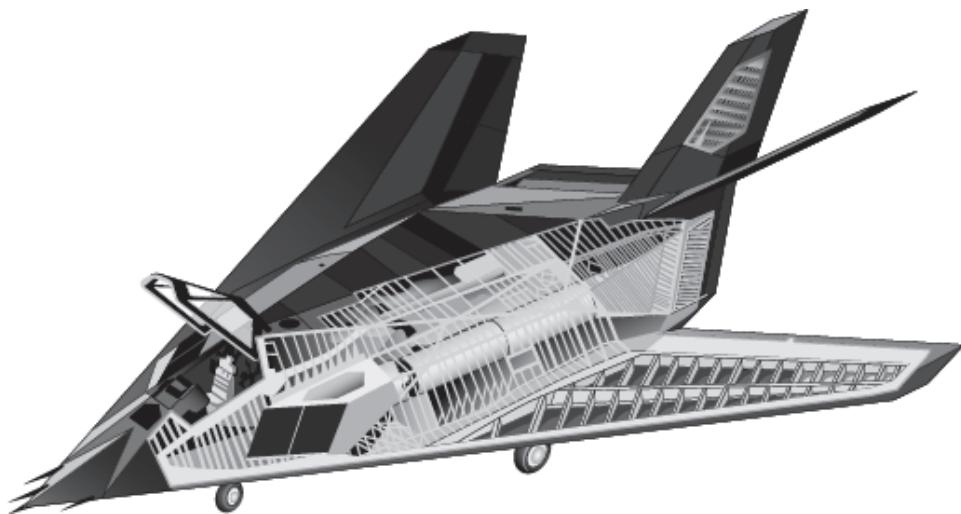

**Figure 2.18** Cutaway view of the Lockheed-Martin F-117A stealth fighter.

Figure 2.15 illustrates an airplane with a *swept-back* wing. Aerodynamically, the same benefit can be obtained by sweeping the wing forward. Figure 2.19 is a three-view diagram of the X-29A, a research aircraft with a *swept-forward* wing. Swept-forward wings are not a new idea. However, swept-forward wings have combined aerodynamic and structural features that tend to cause the wing to twist and fail structurally. This is why most swept-wing airplanes have used swept-back wings. With the new, high-strength composite materials of today, swept-forward wings can be designed strong enough to resist this problem; the swept-forward wing of the X-29A is a composite wing. There are some advantages aerodynamically to a swept-forward wing, which are discussed in Sec. 5.16. Also note by comparing Figs. 2.15 and 2.19 that the juncture of the wing and the fuselage is farther back on the fuselage for the airplane with a swept-forward wing than for an airplane with a swept-back wing. At the wing-fuselage juncture, there is extra structure (such as a wing spar that goes through the fuselage) that can interfere with the internal packaging in the fuselage. The swept-forward wing configuration, with its more rearward fuselage-wing juncture, can allow the airplane designer greater flexibility in placing the internal packaging inside the fuselage. In spite of these advantages, at the time of writing, no new civilian transports or military airplanes are being designed with swept-forward wings.

page 89

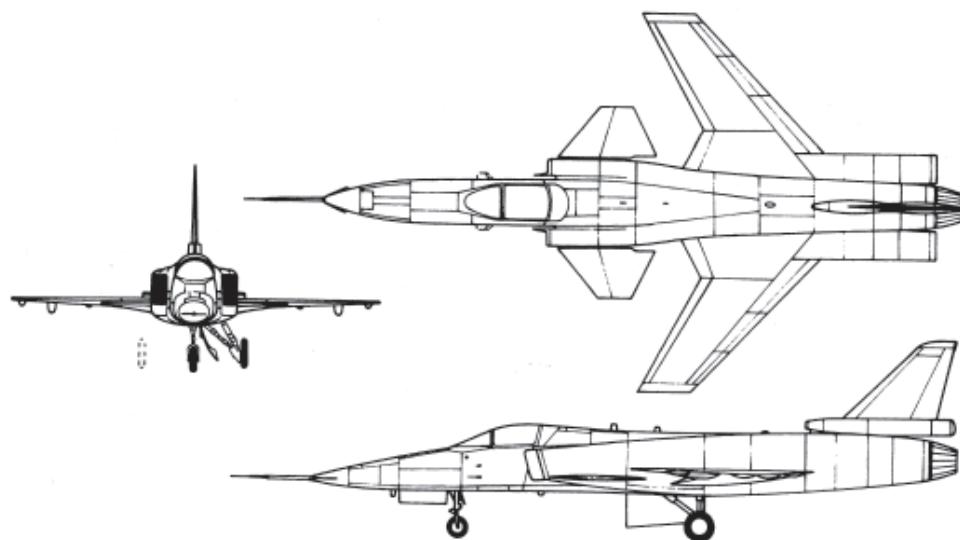


page 90

**Figure 2.19** Three-view diagram of the Grumman X-29A research aircraft.

The X-29A shown in Fig. 2.19 illustrates another somewhat unconventional feature: The horizontal stabilizer is mounted ahead of the wing rather than at the

rear of the airplane. This is defined as a *canard* configuration, and the horizontal stabilizer in this location is called a *canard surface*. The 1903 *Wright Flyer* was a canard design, as clearly seen in Figs. 1.1 and 1.2. However, other airplane designers after the Wrights quickly placed the horizontal stabilizer at the rear of the airplane. (There is some evidence that this was done more to avoid patent difficulties with the Wrights than for technical reasons.) The rear horizontal tail location is part of the conventional aircraft configuration; it has been used on the vast majority of airplane designs since the *Wright Flyer*. One reason for this is the feeling among some designers that a canard surface has a destabilizing effect on the airplane (to call the canard a horizontal “stabilizer” might be considered by some a misnomer). However, a properly designed canard configuration can be just as stable as a conventional configuration. This is discussed in detail in Ch. 7). Indeed, there are some inherent advantages of the canard configuration, as we outline in Ch. 7). Because of this, a number of new canard airplanes have been designed in recent years, ranging from private, general aviation airplanes to military, high-performance fighters. (The word *canard* comes from the French word for “duck.”)

Look again at the *Wright Flyer* in Figs. 1.1 and 1.2. This aircraft has two wings mounted one above the other. The Wrights called this a *double-decker* configuration. However, within a few years such a configuration was called a *biplane*, nomenclature that persists to the present. In contrast, airplanes with just one set of wings are called *monoplanes*; Figs. 2.13 through 2.19 illustrate monoplanes, which have become the *conventional configuration*. However, this was not true through the 1930s; until about 1935, biplanes were the conventional configuration. Figure 2.20 is a three-view of the Grumman F3F-2 biplane designed in 1935. It was the U.S. Navy’s last biplane fighter; it was in service as a front-line fighter with the Navy until 1940. The popularity of biplanes over monoplanes in the earlier years was due mainly to the enhanced structural strength of two shorter wings trussed together compared to that of a single, longer-span wing. However, as the cantilevered wing design, introduced by the German engineer Hugo Junkers as early as 1915, gradually became more accepted, the main technical reason for the biplane evaporated. But old habits are sometimes hard to change, and the biplane remained in vogue far longer than any technical reason would justify. Today biplanes still have some advantages as sport aircraft for aerobatics and as agricultural spraying aircraft. Thus, the biplane design lives on.

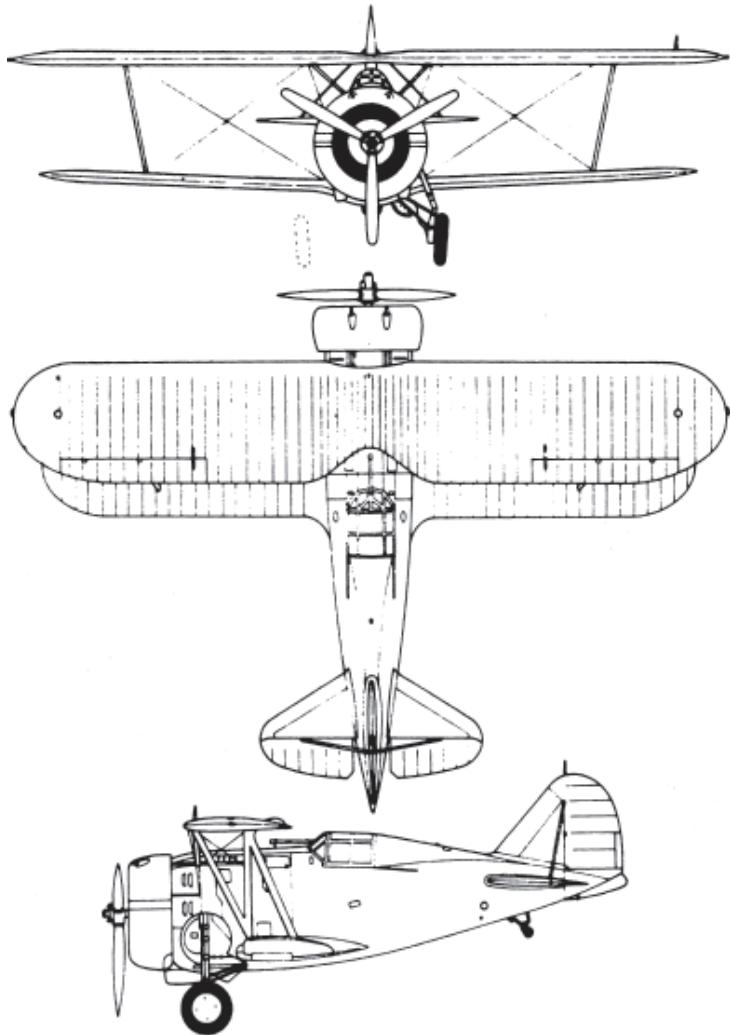

**Figure 2.20** Three-view of the Grumman F3F-2, the last U.S. Navy biplane fighter.

## 2.7 ANATOMY OF A SPACE VEHICLE

In Sec. 2.6 we discussed the conventional airplane configuration. In contrast, it is difficult to define a “conventional” space vehicle configuration because almost all the key features of a spacecraft are defined by its mission; there are therefore as many (if not more) different spacecraft configurations as there are different missions. Nevertheless, in this section we will discuss the fundamental characteristics of three different categories of space vehicles: launch vehicles, uncrewed spacecraft, and crewed spacecraft.


### 2.7.1 Launch Vehicles

To date, all space vehicles have been launched from earth into space using rocket-powered boosters generally referred to as launch vehicles. The common feature that all launch vehicles share is that they are long and slender, aerodynamically shaped because they have to transit through the atmosphere before reaching space. They are propelled by rocket engines located at the aft end and fed by huge propellant tanks because of the tremendous amount of energy it takes to lift a vehicle and its payload off the ground and accelerate it sufficiently to escape the “gravity well” of the earth.

The Delta rocket booster, shown in Fig. 2.21, is an example of one of the most reliable American launch vehicle systems with a flight history that goes back to the 1960s. It is a multi-stage expendable rocket, which means that it provides the thrust needed to get to orbit in separate segments, basically multiple rockets mounted one on top of the other, each one of which fires in turn and then drops off. After the fuel of the last stage is spent, the only part left is the payload, ideally traveling fast enough to be in a stable orbit around the earth or possibly heading toward another part of the solar system. The role of all launch vehicles is to deliver a payload into space, and this payload is a spacecraft of some sort as will be described in the next sections.


The Space Transportation System (STS), shown in Fig. 2.22, was the workhorse of the American launch capability for 3 decades from 1981 to 2011. It was a partially reusable system consisting of two solid rocket boosters mounted on the sides, an external tank carrying fuel for the main rocket engines, and the orbiter which was shaped like an airplane so that it could re-enter the atmosphere after its mission and glide back to earth, landing horizontally on a runway. The orbiter which included the main engines and the solid rocket boosters were the reusable parts of this system, although considerable refurbishment was generally needed before they could be flown again. Payloads were carried to orbit in the cargo bay of the orbiter and were thus limited to fit inside a cylindrical volume 15 ft in diameter and 60 ft in length. The STS has now been retired after 135 missions, many of which lofted famous payloads like the Hubble Space Telescope and numerous sections of the International Space Station (ISS) into orbit, not to mention crews of up to 8 astronauts for over a week in space.

A new generation of launch vehicles is currently being developed and flown, such as the fully reusable SpaceX Falcon-Heavy (see Fig. 2.23) and the Boeing Space Launch System (SLS). Both of these launch vehicles are precursors to even larger and more capable vehicles to come, and both will be human rated so as to be able to service the ISS and future space systems. It should be mentioned that other space-faring nations have well-established launch capabilities as well, some of the most famous launch vehicles being the Russian Proton, the European Ariane, and the Chinese Long March rockets.

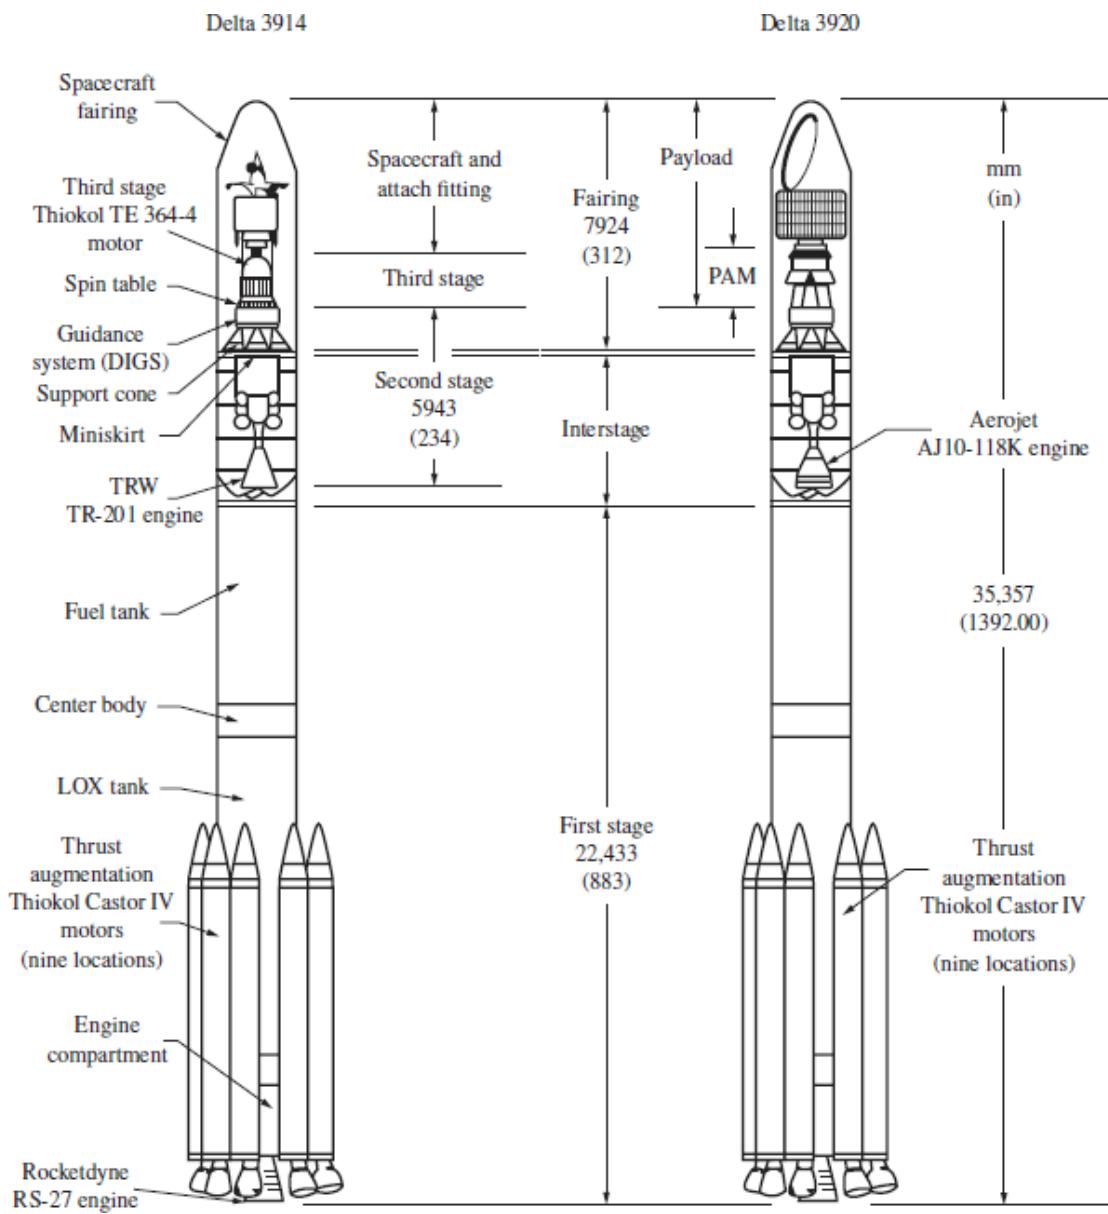

**Figure 2.21** Delta 3914 and 3920 rocket booster configurations.

(Source: From Griffin, Michael D., and James R. French. *Space Vehicle Design*. Reston, VA: American Institute of Aeronautics and Astronautics, 1991.)

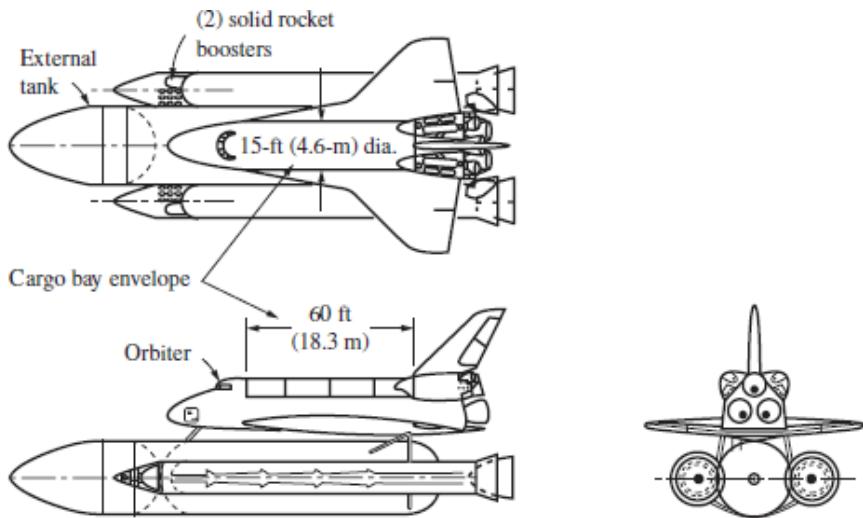

**Figure 2.22** The Shuttle Transportation System (STS) consisting of the orbiter, the external tank, and two solid rocket boosters.

(Source: From Griffin, Michael D., and James R. French. *Space Vehicle Design*, 2nd ed. Reston, VA: American Institute of Aeronautics and Astronautics, 2004.)

The term “spacecraft” generally refers to the payload lofted into space by a launch vehicle. It could be a satellite delivered into orbit around the earth or a deep space vehicle on its way toward another part of the solar system. These spacecraft are designed by the missions they are to accomplish and one of the most influential factors is whether they carry humans or not. An uncrewed spacecraft generally consists of a support structure for all of the necessary scientific instruments, along with power systems such as solar arrays and batteries, control systems such as thrusters for attitude control, and communication systems to stay in touch with earth. A crewed spacecraft must also provide a pressurized cabin with full life-support functions and supplies to keep the astronauts alive and well throughout the mission. Examples of each type of spacecraft are described below.




**Figure 2.23** Two Falcon 9 first stage boosters from the Falcon-Heavy [page 94](#) Launch Vehicle return to earth and land almost simultaneously near their launch site so they can be refurbished and reused.

(Source: *SpaceX/UPI/Alamy Stock Photo*.)

[page 95](#)

### 2.7.2 Uncrewed Spacecraft

The earliest man-made satellites to orbit the earth (*Sputnik 1* launched by the Soviet Union and *Explorer 1* launched by the United States) were simple experimental payloads capable of taking some very basic scientific measurements and broadcasting a radio signal that could be picked up on earth. Many more sophisticated spacecraft followed very quickly carrying an increasingly complex set of instruments to measure the environment, observe the earth, provide a communications platform for radio and TV signals, and supply navigational data. One of the most successful and longest-serving series of satellites has been the Geostationary Operational Environmental Satellites (GOES), used primarily not only for weather forecasting but also for solar observations and other scientific endeavors. The current GOES-R satellite is shown in Fig. 2.24. In addition to the usual weather observation instruments, this latest GOES satellite carries a lightning mapper, a solar imaging suite, a long magnetometer boom, and search and rescue sensing capability. Typical of these spacecraft, all of the scientific instruments tend to be collocated as tightly as possible with supporting systems such as solar arrays, thrusters, and antennas mounted and deployed as needed.

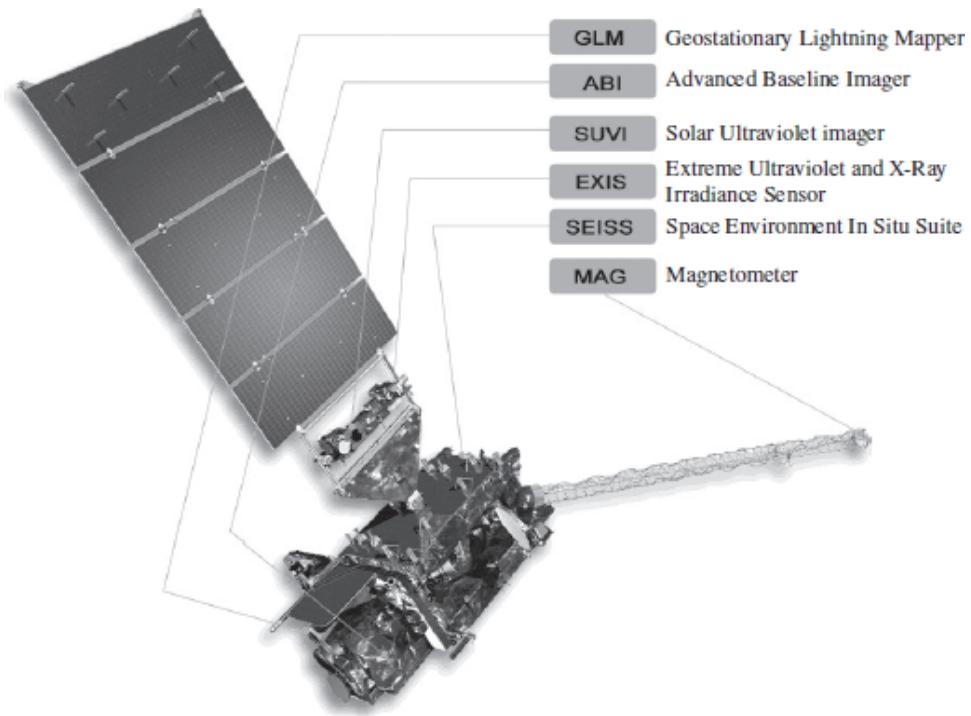


page 96

**Figure 2.24** A Geostationary Operational Environmental Satellite (GOES-R)

(Source: *Lockheed Martin Corporation*.)

Another class of uncrewed vehicle is that of the exploration spacecraft launched on a trajectory to escape earth's gravitational pull and travel toward other bodies of interest in the solar system. One example is Voyager 2, arguably our most spectacular and successful deep-space probe, a diagram of which is shown in Fig. 2.25. Launched in 1977, this spacecraft was designed to explore the outer planets of our solar system, starting with detailed pictures of Jupiter and its moons, and followed by breathtaking imagery of Saturn and its rings. Having thus completed its primary mission, Voyager went on to Uranus, where 10 new moons were discovered from the data it sent back to earth, and finally it skimmed the cloud tops of Neptune before heading off on a course that would ultimately take it out of the solar system. As a result, NASA formally renamed the entire project the Voyager Interstellar Mission, and the spacecraft's instruments were put on low power to conserve energy. Voyager 2 is now more than 18 billion km away and still going, heading into interstellar space now having just recently reached the outer edge of the solar system known as the heliopause.

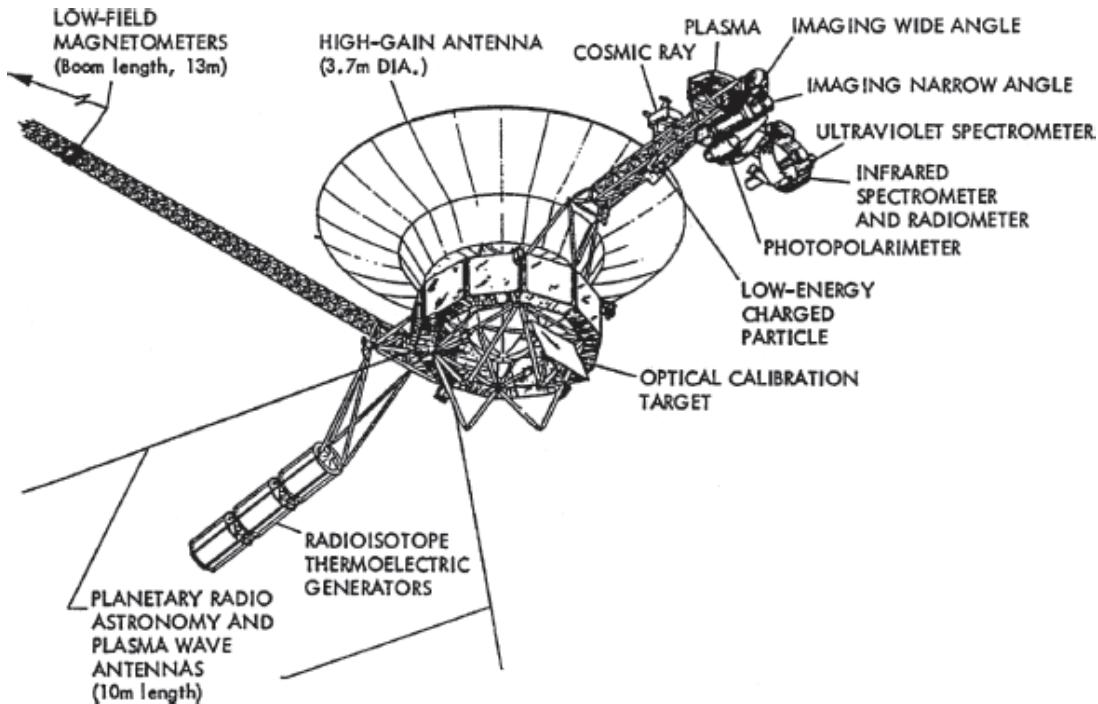

**Figure 2.25** The Voyager 2 spacecraft with numerous scientific instruments mounted on an articulated instrument platform on the right that can swivel so as to have an unobstructed view of the planet during a flyby.

Both the GOES satellite and the Voyager 2 spacecraft are large (10–20 ft in height), heavy (2000–7000 lbs), complex, very expensive spacecraft, and they were each launched on a dedicated launch vehicle. Recently, there has been a trend away from this size spacecraft toward considerably smaller and simpler units that have a much more limited focus and may need to work with a constellation of other spacecraft to accomplish a larger mission. The Iridium constellation of satellites, for example, is composed of numerous smaller satellites that work together to provide navigation and tracking services to users on the ground. Also, “cubesats” are increasingly popular these days. They are very small box-like packages (10–30 cm on a side with a mass of just a few kg), often launched as piggy-back payloads on rockets that have extra weight margin, or occasionally launched from the ISS.


### 2.7.3 Crewed Spacecraft

One of the earliest and most impressive manned spacecraft was the Apollo vehicle that brought astronauts to the Moon, allowed them to land, and then returned them safely back to earth. The launch configuration, shown in Fig. 2.26, consisted of a command module (CM) that housed the crew of 3 astronauts, along with a service module for propulsion, and the lunar module (LM) to land

on the surface of the Moon. The recognizable feature of any crewed spacecraft is that it must have a pressurized volume, usually cylindrical or possibly cone-shaped, in order to provide a comfortable environment for the humans on-board. For the Apollo crew, the habitable volume consisted of some space in the CM and some in the LM.

One of the very challenging aspects of this mission was that the 3 parts of the vehicle had to be reconfigured in space after starting on the transit to the Moon: the combined command and service modules had to detach from the upper stage of the Saturn V, turn around and then dock with the top of the LM. Since this docking operation would have to be repeated in orbit around the Moon, it was actually good practice to do it on the way there. This complexity illustrates another feature that is actually common to most spacecraft: there is a launch configuration in which the spacecraft must survive the high boost loads of the launch phase, and there is often a different orbital configuration in which the spacecraft actually performs its mission in space, usually with numerous antennas and other devices deployed.

Generally speaking, human-rated vehicles must be designed with higher safety standards than uncrewed spacecraft, and they are often more complex particularly when all or part of the vehicle must be able to survive the heat of entry into the atmosphere in order to bring the astronauts home safely. In the case of the Apollo missions, the CM was the only part that re-entered the atmosphere and splashed down for recovery. There were 6 Apollo missions from 1969 to 1972 that successfully landed men on the Moon, Apollo 11 through Apollo 17 (Apollo 13 only did a lunar flyby), but no further human attempts have been made since then. That may be changing now with renewed interest in a possible crewed mission to Mars that might beneficially be preceded by a return to the Moon.

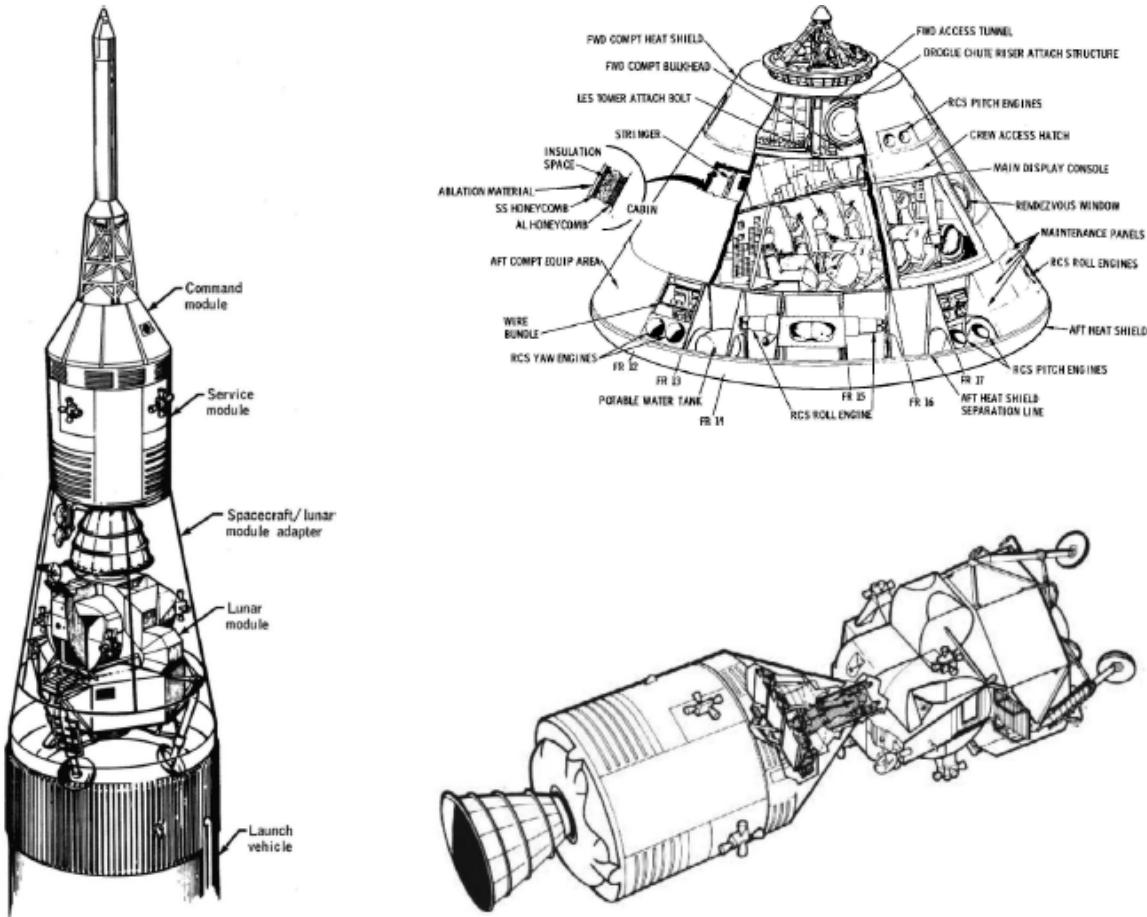


**Figure 2.26** The Apollo launch configuration (left), flight configuration (right) and a cutaway diagram of the Command Module (top right) which housed the 3 astronauts as they traveled to the Moon and back.

More recently, the latest and largest crewed space vehicle is the ISS. Construction began in 1998 with the launch of the first element, the Russian Zarya module, joined shortly thereafter by the American Unity Node 1. The station has been permanently inhabited since 2000 by at least 2 and up to 6 crewmembers, and the construction continued over many years with additions from all the international partners, including Europe, Japan, and Canada, as well as Russia and the United States. One of the greatest features and challenges of the ISS is that it is so truly international, with components manufactured in many different countries, launched on different launch vehicles, and mated up for the first time in orbit. The result is a bit of a train wreck, at least in appearance, but there has been a tremendous amount of science and engineering development done over the years on ISS. Figure 2.27 is a diagram of the completed space station showing how many different modules and supporting hardware elements have been put together to form this orbiting platform.

The ISS has a long truss-like structure that forms the main strongback [page 99](#) of the assembly and that supports 8 solar arrays, numerous radiator panels, power-conditioning units, robotic arms, airlocks and docking ports, and perhaps most importantly, over a dozen pressurized habitation and lab modules of one sort or another. Even though ISS was originally designed only for a 20-year life span, there is still more hardware to be launched and added on to the assembly, and almost everything that comprises this station will likely be used or repurposed until it can serve no longer. The ISS has demonstrated effectively that very large space structures can be assembled in the weightlessness of space, structures so large that they would not be able to support their own weight in a gravitational environment like on the surface of the earth. In addition, vast amounts of data have been collected on humans living and working in space, information that will be critical for the design of future interplanetary vehicles.

In summary, there are about as many different spacecraft configurations as there are different missions in space. Spacecraft fly in the near vacuum of space where there are virtually no aerodynamic forces acting on the vehicle. Hence, the spacecraft designer can make the external configuration whatever he or she wants. This is not true for the airplane or launch vehicle designer who must optimize the external shape for efficient flight through the atmosphere. Vehicles that fly through the air share a much more common anatomy than spacecraft. The anatomy of spacecraft is all over the map. This section contains just a sampling of different configurations to give you a feeling for the variety of their design.

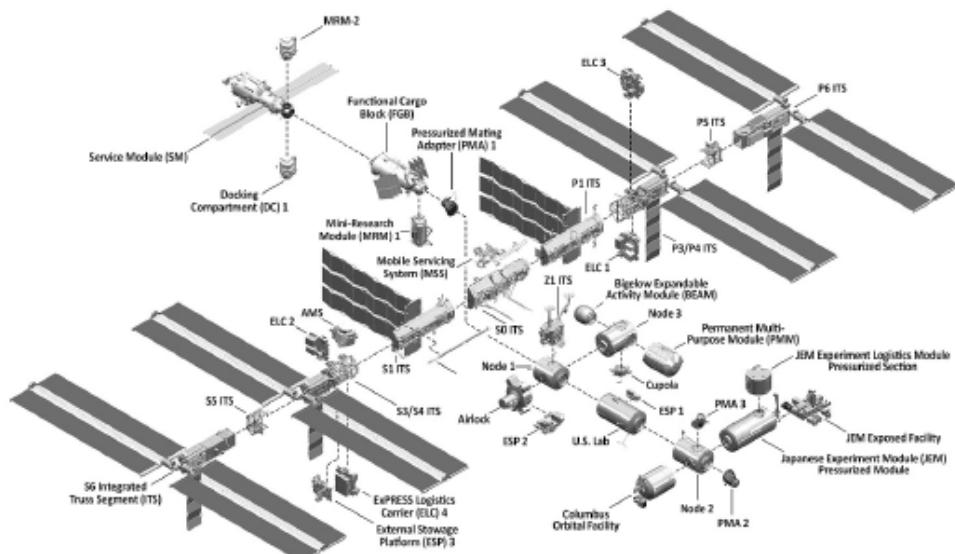

**Figure 2.27** Exploded view of the ISS as of June 2017.

(Source: NASA.)

## **2.8 HISTORICAL NOTE: THE NACA AND NASA**

NASA—four letters that have meaning to virtually the entire world. Since its inception in 1958, the National Aeronautics and Space Administration (NASA) has been front-page news, many times good news and sometimes not so good, with the Apollo space flight program to the Moon, the Space Shuttle, the space station, and so on. Since 1958 NASA has also been in charge of developing new technology for airplanes—technology that allows us to fly farther, faster, safer, and cheaper. In short, the professional world of aerospace engineering is driven by research carried out by NASA. Before NASA, there was the NACA, the National Advisory Committee for Aeronautics, which carried out seminal research powering technical advancements in flight during the first half of the 20th century. Before we progress further in this book dealing with an introduction to flight, you should understand the historical underpinnings of NACA and NASA and appreciate the impact these two agencies have had on aerospace engineering. The NACA and NASA have been *fundamental* to the technology of flight. It is fitting, therefore, that we place this particular historical note in the chapter dealing with fundamental thoughts.

Let us pick up the thread of aeronautical engineering history from Ch. 1). After Orville and Wilbur Wright's dramatic public demonstrations in the United States and Europe in 1908, there was a virtual explosion in aviation developments. In turn, this rapid progress had to be fed by new technical research in aerodynamics, propulsion, structures, and flight control. It is important to realize that then, as well as today, aeronautical research was sometimes expensive, always demanding in terms of intellectual talent, and usually in need of large testing facilities. Such research in many cases either was beyond the financial resources of, or seemed too out of the ordinary for, private industry. Thus, the fundamental research so necessary to fertilize and pace the development of aeronautics in the 20th century had to be established and nurtured by national governments. It is interesting to note that George Cayley himself (see Ch. 1)), as long ago as 1817, called for “public subscription” to underwrite the expense of the development of airships. Responding about 80 years later, the British government set up a school for ballooning and military kite flying at Farnborough, England. By 1910 the Royal Aircraft Factory was in operation at Farnborough, with the noted Geoffrey de Havilland as its first airplane designer and test pilot. This was the first major government aeronautical facility in history. This operation was soon to evolve into the Royal Aircraft Establishment (RAE), which conducted viable aeronautical research for the British government for almost a century.

In the United States, aircraft development as well as aeronautical research languished after 1910. During the next decade, the United States embarrassingly fell far behind Europe in aeronautical progress. This set the stage for the U.S. government to establish a formal mechanism for pulling itself out of its aeronautical “dark ages.” On March 3, 1915, by an act of Congress, NACA was created, with an initial appropriation of \$5000 per year for five years. This was at first a true committee, consisting of 12 distinguished members who were knowledgeable about aeronautics. Among the charter members in 1915 were Professor Joseph S. Ames of Johns Hopkins University (later to become president of Johns Hopkins) and Professor William F. Durand of Stanford University, both of whom were to make major impressions on aeronautical research in the first half-century of powered flight. This advisory committee, NACA, was originally to meet annually in Washington, District of Columbia, on “the Thursday after the third Monday of October of each year,” with any special meetings to be called by the chair. Its purpose was to advise the government on aeronautical research and development and to bring some cohesion to such activities in the United States.

The committee immediately noted that a single advisory group of 12 page 101 members was not sufficient to breathe life into U.S. aeronautics. Their insight is apparent in the letter of submittal for the first annual report of NACA in 1915, which contained the following passage:

There are many practical problems in aeronautics now in too indefinite a form to enable their solution to be undertaken. The committee is of the opinion that one of the first and most important steps to be taken in connection with the committee's work is the provision and equipment of a flying field together with aeroplanes and suitable testing gear for determining the forces acting on full-sized machines in constrained and in free flight, and to this end the estimates submitted contemplate the development of such a technical and operating staff, with the proper equipment for the conduct of full-sized experiments.

It is evident that there will ultimately be required a well-equipped laboratory specially suited to the solving of those problems which are sure to develop, but since the equipment of such a laboratory as could be laid down at this time might well prove unsuited to the needs of the early future, it is believed that such provision should be the result of gradual development.

So the first action of this advisory committee was to call for major government facilities for aeronautical research and development. The clouds of war in Europe —World War I had started a year earlier—made their recommendations even

more imperative. In 1917, when the United States entered the conflict, actions followed the committee's words. We find the following entry in the third annual NACA report:

To carry on the highly scientific and special investigations contemplated in the act establishing the committee, and which have, since the outbreak of the war, assumed greater importance, and for which facilities do not already exist, or exist in only a limited degree, the committee has contracted for a research laboratory to be erected on the Signal Corps Experimental Station, Langley Field, Hampton, Virginia.

The report goes on to describe a single, two-story laboratory building with physical, chemical, and structural testing laboratories. The building contract was for \$80,900; actual construction began in 1917. Two wind tunnels and an engine test stand were contemplated "in the near future." The selection of a site 4 mi north of Hampton, Virginia, was based on general health conditions and the problems of accessibility to Washington and the larger industrial centers of the East, protection from naval attack, climatic conditions, and cost of the site.

Thus the Langley Memorial Aeronautical Research Laboratory was born. It was to remain the only NACA laboratory and the only major U.S. aeronautical laboratory of any type for the next 20 years. Named after Samuel Pierpont-Langley (see Sec. 1.7), it pioneered in wind tunnel and flight research. Of particular note is the airfoil and wing research performed at Langley during the 1920s and 1930s. We return to the subject of airfoils in Ch. 5), at which time the reader should note that the airfoil data included in App. D were obtained at Langley. With the work that poured out of the Langley laboratory, the United States took the lead in aeronautical development. High on the list of accomplishments, along with the systematic testing of airfoils, was the development of the NACA engine cowl (see Sec. 6.19), an aerodynamic fairing built around radial piston engines that dramatically reduced the aerodynamic drag of such engines.

In 1936 Dr. George Lewis, who was then NACA Director of page 102Aeronautical Research (a position he held from 1924 to 1947), toured major European laboratories. He noted that NACA's lead in aeronautical research was quickly disappearing, especially in light of advances being made in Germany. As World War II drew close, NACA clearly recognized the need for two new laboratory operations: an advanced aerodynamics laboratory to probe the mysteries of high-speed (even supersonic) flight and a major engine-testing laboratory. These needs eventually led to the construction of Ames Aeronautical Laboratory at Moffett Field, near Mountain View, California (authorized in

1939), and Lewis Engine Research Laboratory at Cleveland, Ohio (authorized in 1941). Along with Langley, these two new NACA laboratories again helped to propel the United States to the forefront of aeronautical research and development in the 1940s and 1950s.

The dawn of the space age occurred on October 4, 1957, when Russia launched *Sputnik I*, the first artificial satellite to orbit the earth. Swallowing its somewhat embarrassed technical pride, the United States moved quickly to compete in the race for space. On July 29, 1958, by another act of Congress (Public Law 85-568), NASA was born. At this same moment, NACA came to an end. Its programs, people, and facilities were instantly transferred to NASA. However, NASA was a larger organization than just the old NACA; it absorbed in addition numerous Air Force, Navy, and Army projects for space. Within two years of its birth, NASA authorized four new major installations: an existing Army facility at Huntsville, Alabama, renamed the George C. Marshall Space Flight Center; the Goddard Space Flight Center at Greenbelt, Maryland; the Manned Spacecraft Center (now the Johnson Spacecraft Center) in Houston, Texas; and the Launch Operations Center (now the John F. Kennedy Space Center) at Cape Canaveral, Florida. These, in addition to the existing but slightly renamed Langley, Ames, and Lewis research centers, were the backbone of NASA. Thus the aeronautical expertise of NACA formed the seeds for NASA, shortly thereafter to become one of the world's most important forces in space technology.

This capsule summary of the roots of NACA and NASA is included in this chapter on fundamental thoughts because it is virtually impossible for a student or practitioner of aerospace engineering in the United States not to be influenced or guided by NACA or NASA data and results. The extended discussion of airfoils in Ch. 5) is a case in point. Because NACA and NASA are fundamental to the discipline of aerospace engineering, it is important to have some impression of the historical roots and tradition of these organizations. This author hopes that this short historical note provides such an impression. A much better impression can be obtained by taking a journey through the NACA and NASA technical reports in the library, going all the way back to the first NACA report in 1915. In so doing, a panorama of aeronautical and space research through the years will unfold in front of you.

---

page 103

## 2.9 SUMMARY AND REVIEW

This chapter sets out the fundamental information necessary to launch our study of aerospace engineering. Before an artist starts to paint a picture, he or she begins to mix various color combinations of paint on a palette, which later will

come together on a canvas or board to form a work of art. In this chapter, various ideas are laid out on our aerospace engineering palette that later will come together in our minds, on paper, or on the computer to form an engineering work of art.

The only equation discussed in this chapter is the equation of state, Eq. (2.3), but this equation, which relates pressure, density, and temperature in a gas, is fundamental to any analysis of a high-speed flow. Also, its introduction in this chapter acted as a springboard for a lengthy discussion of units, a subject so important that you must master these ideas before making any reasonable quantitative calculations.

You are strongly advised always to use consistent units in your calculations; consistent units naturally fit nature's equations in their pure physical form without the need for conversion factors in the equations. By using consistent units, you can always write Newton's second law as  $F = ma$ , unencumbered by any  $g_c$  conversion factor. The equation  $F = ma$  is nature's equation, and it uses consistent units. In contrast,  $F = \left(\frac{1}{g_c}\right)ma$  is a man-made equation, made unnecessarily complicated by the use of nonconsistent units. If you use nature's equations in their most basic form, and incorporate consistent units, your results are guaranteed to come out with consistent units, without your having to track the detailed units throughout the details of the calculations. A case in point is the equation of state given by Eq. (2.3),

$$p = \rho RT$$

This is nature's equation; it contains no man-made conversion factors. If you feed numbers into this equation using consistent units, the results will be in consistent units.

Unfortunately, throughout the history of engineering over the past centuries, many man-made, nonconsistent units have surfaced, and dealing with these units while making calculations is frequently a challenge, especially if you want to come up with the correct answers. To avoid mistakes due to unit mismatches, I implore you to always use consistent units in your equations. In this book, we employ two systems of consistent units: the SI system, which uses N, kg, m, sec, and K as the units of force, mass, length, time, and temperature; and the English engineering system, which uses the lb, slug, ft, sec, and °R. The SI system is, by far, the most widely used system throughout the world, whereas the English engineering system, the mainstay in England and in the United States for the past century, is now being gradually replaced by the SI system even in these two countries. However, because a vast bulk of past engineering literature is in the English engineering system, and because some engineers still use that system, it

is necessary for you to become bilingual and feel comfortable using both systems. That is why, in this book, you will find some calculations using one system, and some calculations using the other. (There is some temptation in modern engineering textbooks to use the SI system exclusively, but I feel that doing so in this book would be a disservice. Whether you are from a country that uses SI units exclusively, or from a country that continues, at least in part, to use the English engineering units, you must become familiar and comfortable with both systems to operate smoothly in this international world.)

Perhaps one of the most important fundamental thoughts introduced [page 104](#) in this chapter is that regarding the source of all aerodynamic forces. As described in Sec. 2.2, whenever there is a flow of a gas or liquid over an object, the object experiences an aerodynamic force. This force is frequently resolved into two force components: *lift*, perpendicular to the upstream flow direction; and *drag*, parallel to the upstream flow direction. Section 2.2 emphasizes that in *all cases*, no matter what the configuration and orientation of the object in the flow, and no matter how slow or fast the flow is moving over the object, the net aerodynamic force on the object, and hence the lift and drag, is due *only* to the pressure distribution and the shear stress distribution exerted over the total surface in contact with the flow. The pressure and shear stress distributions are the two hands with which nature reaches out and exerts a force on an object in a flow field. This is it; there is nothing more. Understanding and appreciating this fact right from the start of your study of aerospace engineering will save you a lot of grief and confusion in your future study and work.

A concise summary of the major ideas in this chapter is as follows:

1. The language of aerodynamics involves pressure, density, temperature, and velocity. An illustration of the velocity field can be enhanced by drawing streamlines for a given flow.
2. The source of all aerodynamic forces on a body is the pressure distribution and the shear stress distribution over the surface.
3. A perfect gas is one in which intermolecular forces can be neglected. For a perfect gas, the equation of state that relates  $p$ ,  $\rho$ , and  $T$  is

$$p = \rho RT \quad (2.3)$$

where  $R$  is the specific gas constant.

4. To avoid confusion, errors, and a number of unnecessary conversion factors in the basic equations, always use consistent units. In this book, SI units (newton, kilogram, meter, second) and the English engineering system (pound, slug, foot, second) are used.

## Bibliography

---

page 105

- Anderson, John D., Jr. *Aircraft Performance and Design*. WCB/McGraw-Hill, New York, 1999.
- Gray, George W. *Frontiers of Flight*. Knopf, New York, 1948.
- Hartman, E. P. *Adventures in Research: A History of Ames Research Center 1940–1965*, NASA SP-4302, 1970.
- Mechtly, E. A. *The International System of Units*. NASA SP-7012, 1969.

---


## Problems

---


page 106

- 2.1** Consider the low-speed flight of the Space Shuttle as it is nearing a landing. If the air pressure and temperature at the nose of the shuttle are 1.2 atm and 300 K, respectively, what are the density and specific volume?
- 2.2** Consider 1 kg of helium at 500 K. Assuming that the total internal energy of helium is due to the mean kinetic energy of each atom summed over all the atoms, calculate the internal energy of this gas. *Note:* The molecular weight of helium is 4. Recall from chemistry that the molecular weight is the mass per mole of gas; that is, 1 mol of helium contains 4 kg of mass. Also, 1 mol of any gas contains  $6.02 \times 10^{23}$  molecules or atoms (Avogadro's number).
- 2.3** Calculate the weight of air (in pounds) contained within a room 20 ft long, 15 ft wide, and 8 ft high. Assume standard atmospheric pressure and temperature of 2116 lb/ft<sup>2</sup> and 59°F, respectively.
- 2.4** Comparing with the case of Prob. 2.3, calculate the percentage change in the total weight of air in the room when the air temperature is reduced to -10°F (a very cold winter day), assuming that the pressure remains the same at 2116 lb/ft<sup>2</sup>.
- 2.5** If 1500 lbm of air is pumped into a previously empty 900 ft<sup>3</sup> storage tank and the air temperature in the tank is uniformly 70°F, what is the air pressure in the tank in atmospheres?
- 2.6** In Prob. 2.5, assume that the rate at which air is being pumped into the tank is 0.5 lbm/s. Consider the instant in time at which there is 1000 lbm of air in the tank. Assume that the air temperature is uniformly 50°F at this instant and is increasing at the rate of 1°F/min. Calculate the rate of change of pressure at this instant.

- 2.7** Assume that, at a point on the wing of the Concorde supersonic transport, the air temperature is  $-10^{\circ}\text{C}$  and the pressure is  $1.7 \times 10^4 \text{ N/m}^2$ . Calculate the density at this point.
- 2.8** At a point in the test section of a supersonic wind tunnel, the air pressure and temperature are  $0.5 \times 10^5 \text{ N/m}^2$  and  $240 \text{ K}$ , respectively. Calculate the specific volume.
- 2.9** Consider a flat surface in an aerodynamic flow (say a flat sidewall of a wind tunnel). The dimensions of this surface are 3 ft in the flow direction (the  $x$  direction) and 1 ft perpendicular to the flow direction (the  $y$  direction). Assume that the pressure distribution (in pounds per square foot) is given by  $p = 2116 - 10x$  and is independent of  $y$ . Assume also that the shear stress distribution (in pounds per square foot) is given by  $\tau_w = 90/(x + 9)^{1/2}$  and is independent of  $y$  as shown in figure below. In these expressions,  $x$  is in feet, and  $x = 0$  at the front of the surface. Calculate the magnitude and direction of the net aerodynamic force on the surface.

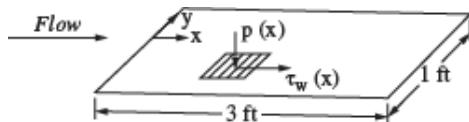

- 2.10** A pitcher throws a baseball at 85 miles per hour. The flow page 107 field over the baseball moving through the stationary air at 85 miles per hour is the same as that over a stationary baseball in an airstream that approaches the baseball at 85 miles per hour. (This is the principle of wind tunnel testing, as will be discussed in Ch. 4.) This picture of a stationary body with the flow moving over it is what we adopt here. Neglecting friction, the theoretical expression for the flow velocity over the surface of a sphere (like the baseball) is  $V = V_\infty \sin \theta$ . Here  $V_\infty$  is the airstream velocity (the free-stream velocity far ahead of the sphere). An arbitrary point on the surface of the sphere is located by the intersection of the radius of the sphere with the surface, and  $\theta$  is the angular position of the radius measured from a line through the center in the direction of the free stream (i.e., the most forward and rearward points on the spherical surface correspond to  $\theta = 0^\circ$  and  $180^\circ$ , respectively). (See figure below.) The velocity  $V$  is the flow velocity at that arbitrary point on the surface. Calculate the values of the minimum and maximum velocity at the surface and the location of the points at which these occur.

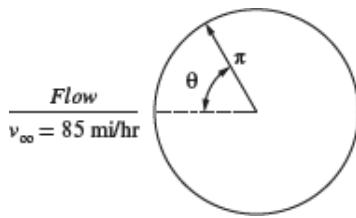

- 2.11** Consider an ordinary, helium-filled party balloon with a volume of 2.2 ft<sup>3</sup>. The lifting force on the balloon due to the outside air is the net resultant of the pressure distribution exerted on the exterior surface of the balloon. Using this fact, we can derive Archimedes' principle, namely that the upward force on the balloon is equal to the weight of the air displaced by the balloon. Assuming that the balloon is at sea level, where the air density is 0.002377 slug/ft<sup>3</sup>, calculate the maximum weight that can be lifted by the balloon. *Note:* The molecular weight of air is 28.8 and that of helium is 4.
- 2.12** In the four-stroke, reciprocating, internal combustion engine that powers most automobiles as well as most small general aviation aircraft, combustion of the fuel–air mixture takes place in the volume between the top of the piston and the top of the cylinder. (Reciprocating engines are discussed in Ch. 9.) The gas mixture is ignited when the piston is essentially at the end of the compression stroke (called *top dead center*), when the gas is compressed to a relatively high pressure and is squeezed into the smallest volume that exists between the top of the piston and the top of the cylinder. Combustion takes place rapidly before the piston has much time to start down on the power stroke. Hence, the volume of the gas during combustion stays constant; that is, the combustion process is at *constant volume*. Consider the case where the gas density and temperature at the instant combustion begins are 11.3 kg/m<sup>3</sup> and 625 K, respectively. At the end of the constant-volume combustion process, the gas temperature is 4000 K. Calculate the gas pressure at the end of the constant-volume combustion. Assume that the specific gas constant for the fuel–air mixture is the same as that for pure air.
- 2.13** For the conditions of Prob. 2.12, calculate the force exerted [page 108](#) on the top of the piston by the gas at (a) the beginning of combustion and (b) the end of combustion. The diameter of the circular piston face is 9 cm.
- 2.14** In a gas turbine jet engine, the pressure of the incoming air is increased by flowing through a compressor; the air then enters a combustor that looks vaguely like a long can (sometimes called the *combustion can*). Fuel is injected into the combustor and burns with the air, and then the

burned fuel-air mixture exits the combustor at a higher temperature than the air coming into the combustor. (Gas turbine jet engines are discussed in Ch. 9.) The pressure of the flow through the combustor remains relatively constant; that is, the combustion process is at *constant pressure*. Consider the case where the gas pressure and temperature entering the combustor are  $4 \times 10^6 \text{ N/m}^2$  and 900 K, respectively, and the gas temperature exiting the combustor is 1500 K. Calculate the gas density at (a) the inlet to the combustor and (b) the exit of the combustor. Assume that the specific gas constant for the fuel-air mixture is the same as that for pure air.

- 2.15** Throughout this book, you will frequently encounter velocities in terms of miles per hour. Consistent units in the English engineering system and the SI are ft/sec and m/sec, respectively. Consider a velocity of 60 mph. What is this velocity in ft/sec and m/sec?
- 2.16** You might find it convenient to remember the results from Prob. 2.15. If you do, then you can almost instantly convert velocities in mph to ft/sec or m/sec. For example, using just the results of Prob. 2.15 for a velocity of 60 mph, quickly convert the maximum flight velocity of the F-86H (shown in Fig. 2.15) of 692 mph at sea level to ft/sec and m/sec.
- 2.17** Consider a stationary, thin, flat plate with area of  $2 \text{ m}^2$  for each face oriented perpendicular to a flow. The pressure exerted on the front face of the plate (facing into the flow) is  $1.0715 \times 10^5 \text{ N/m}^2$ , and is constant over the face. The pressure exerted on the back face of the plate (facing away from the flow) is  $1.01 \times 10^5 \text{ N/m}^2$  and is constant over the face. Calculate the aerodynamic force in pounds on the plate. *Note:* The effect of shear stress is negligible for this case.
- 2.18** The weight of the North American P-51 Mustang shown in Fig. 2.12b is 10,100 lb and its wing planform area is  $233 \text{ ft}^2$ . Calculate the wing loading in both English engineering and SI units. Also, express the wing loading in terms of the nonconsistent unit kg<sub>f</sub>.
- 2.19** The maximum velocity of the P-51 shown in Fig. 2.12b is 437 mph at an altitude of 25,000 ft. Calculate the velocity in terms of km/hr and the altitude in terms of km.
- 2.20** The velocity of the Space Shuttle (Fig. 2.24) at the instant of burnout of the rocket booster is 26,000 ft/sec. What is this velocity in km/sec?
- 2.21** By examining the scale drawing of the F4U-1D Corsair in Fig. 2.16, obtain the length of the fuselage from the tip of the propeller hub to the

rear tip of the fuselage, and also the wingspan (linear distance between the two wing tips), in meters.

**2.22** The X-15 (see Fig. 5.92) was a rocket-powered research airplane designed to probe the mysteries of hypersonic flight. In 2014, the X-15 still holds the records for the fastest and highest flying piloted airplane (the Space Shuttle and Spaceship One, in this context, are space ships, not airplanes). On August 22, 1963, pilot Joseph Walker set the unofficial world altitude record of 354,200 feet. On October 3, 1967, pilot William J. Knight set the world speed record of 4520 mph (Mach 6.7).

(a) Convert Walker's altitude record to meters and kilometers.

[page 109](#)

(b) Convert Knight's speed record to meters per second.

**2.23** The X-15 is air-launched from under the wing of a B-52 mother ship. Immediately after launch, the pilot starts the XLR-99 rocket engine, which provides 57,000 lb of thrust. For the first moments, the X-15 accelerates in horizontal flight. The gross weight of the airplane at the start is 34,000 lb. Calculate the initial acceleration of the airplane.

**2.24** Frequently the acceleration of high-speed airplanes and rocket-powered space vehicles is quoted in "g's," which is the acceleration relative to the acceleration of gravity. For example, an acceleration of 32.2 ft/sec<sup>2</sup> is one "g." From the results of Prob. 2.23, calculate the number of g's experienced by the X-15 pilot during the initial acceleration.

**2.25** In the United States, the thrust of a jet engine is usually quoted in terms of pounds of thrust. Elsewhere, the thrust is generally stated in terms of kilo-newtons. The thrust of the Rolls-Royce Trent 900 engine turbofan is rated at 373.7 kN. What is the thrust in pounds?

**2.26** The first stage of the Saturn rocket booster used to send the Apollo astronauts to the Moon was powered by five F-1 rocket engines. The thrust of rocket engines is sometimes given in terms of kg force. For example, the thrust of the F-1 engine is sometimes quoted as 690,000 kg. Calculate the F-1 thrust in the consistent units of (a) newtons and (b) pounds.

## The Standard Atmosphere

Sometimes gentle, sometimes capricious, sometimes awful, never the same for two moments together; almost human in its passions, almost spiritual in its tenderness, almost divine in its infinity.

*John Ruskin, The Sky*

Aerospace vehicles can be divided into two basic categories: atmospheric vehicles such as airplanes and helicopters, which always fly within the sensible atmosphere; and space vehicles such as satellites, the Apollo lunar vehicle, and deep-space probes, which operate outside the sensible atmosphere. However, space vehicles do encounter the earth's atmosphere during their blastoffs from the earth's surface and again during their reentries and recoveries after completion of their missions. If the vehicle is a planetary probe, it may encounter the atmospheres of Venus, Mars, Jupiter, and so forth. Therefore, during the design and performance of any aerospace vehicle, the properties of the atmosphere must be taken into account.

The earth's atmosphere is a dynamically changing system, constantly in a state of flux. The pressure and temperature of the atmosphere depend on altitude, location on the globe (longitude and latitude), time of day, season, and even solar sunspot activity. To take all these variations into account when considering the design and performance of flight vehicles is impractical. Therefore, a *standard atmosphere* is defined in order to relate flight tests, wind tunnel results, and general airplane design and performance to a common reference. The standard atmosphere gives mean values of pressure, temperature, density, and other properties as functions of altitude; these values are obtained from experimental balloon and sounding-rocket measurements combined with a mathematical model of the atmosphere. To a reasonable degree, the standard atmosphere reflects

average atmospheric conditions, but this is not its main importance. Rather, its main function is to provide tables of common reference conditions that can be used in an organized fashion by aerospace engineers everywhere. The purpose of this chapter is to give you some feeling for what the standard atmosphere is all about and how it can be used for aerospace vehicle analyses.

page 111

## PREVIEW BOX

Before you jump into a strange water pond or dive into an unfamiliar swimming pool, there are a few things you might like to know. How cold is the water? How clean is it? How deep is the water? These are things that might influence your swimming performance in the water or even your decision to go swimming at all. Similarly, before we can study the performance of a flight vehicle speeding through the air, we need to know something about the properties of the air itself. Consider an airplane flying in the atmosphere, or a space vehicle blasting through the atmosphere on its way up to space, or a vehicle coming back from space through the atmosphere. In all these cases, the performance of the flight vehicle is going to be dictated in part by the properties of the atmosphere—the temperature, density, and pressure of the atmosphere.


What are the properties of the atmosphere? We know they change with altitude, but how do they change? How do we find out? These important questions are addressed in this chapter. Before you can go any further in your study of flight vehicles, you need to know about the atmosphere. Here is the story—please read on.

We might pose this rather glib question: *Just what is the standard atmosphere?* A glib answer is this: *The tables in Apps. A and B at the end of this book.* Take a look at these two appendices. They tabulate the temperature, pressure, and density for different altitudes. Appendix A is in SI units, and App. B is in English engineering units. Where do these numbers come from? Were they simply pulled out of thin air by somebody in the distant past? Absolutely not. The numbers in these tables were obtained on a rational, scientific basis. One purpose of this chapter is to

develop this rational basis. Another purpose is to show you how to use these tables.

The road map for this chapter is given in Fig. 3.1. We first run down the left side of the road map, establishing some definitions and an equation from basic physics (the hydrostatic equation) that are necessary tools for constructing the numbers in the standard atmosphere tables. Then we move to the right side of the road map and discuss how the numbers in the tables are actually obtained. We go through the construction of the standard atmosphere in detail. Finally, we define some terms that are derived from the numbers in the tables—the pressure, density, and temperature altitudes—that are in almost everyday use in aeronautics.

Note that the details of this chapter are focused on the determination of the standard atmosphere for earth. The tables in Apps. A and B are for the earth's atmosphere. However, the physical principles and techniques discussed in this chapter also apply to constructing model atmospheres for other planets, such as Venus, Mars, and Jupiter. The applicability of this chapter thus reaches far beyond the earth.

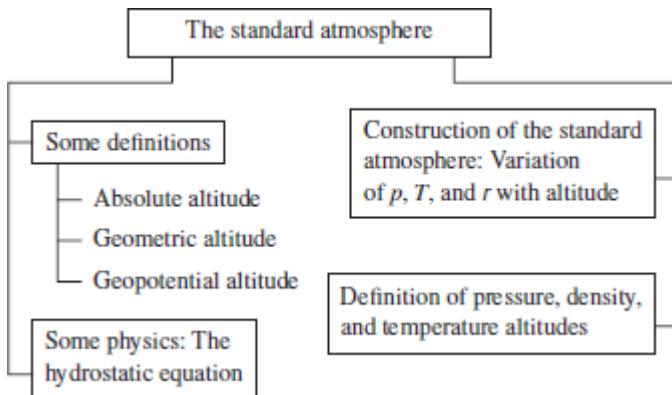

**Figure 3.1** Road map for Chapter 3.

It should be mentioned that several different standard atmospheres exist, compiled by different agencies at different times, each using slightly different experimental data in the models. For all practical purposes, the differences are insignificant below 30 km (100,000 ft), which is the domain of contemporary airplanes. A standard atmosphere in common use is the 1959 ARDC model atmosphere. (ARDC stands for the U.S. Air Force's previous Air Research and Development Command,

page 112


which is now the Air Force Research Laboratory.) The atmospheric tables used in this book are taken from the 1959 ARDC model atmosphere.

### 3.1 DEFINITION OF ALTITUDE

Intuitively, we all know the meaning of *altitude*. We think of it as the distance above the ground. But like so many other general terms, it must be more precisely defined for quantitative use in engineering. In fact, in the following sections we define and use six different altitudes: absolute, geometric, geopotential, pressure, temperature, and density altitudes.

First imagine that we are at Daytona Beach, Florida, where the ground is at sea level. If we could fly straight up in a helicopter and drop a tape measure to the ground, the measurement on the tape would be, by definition, the *geometric altitude*  $h_G$  —that is, the geometric height above sea level.

If we bored a hole through the ground to the center of the earth and extended our tape measure until it hit the center, then the measurement on the tape would be, by definition, the *absolute altitude*  $h_a$ . If  $r$  is the radius of the earth, then  $h_a = h_G + r$ . This is illustrated in Fig. 3.2.

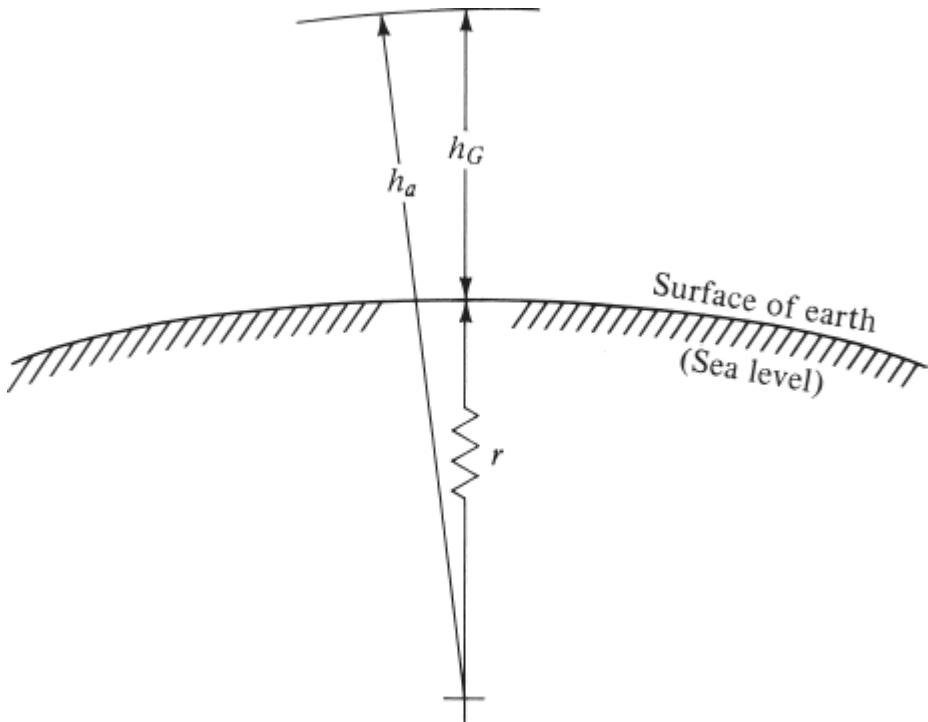

**Figure 3.2** Definition of altitude.


The absolute altitude is important, especially for space flight, because the local acceleration of gravity  $g$  varies with  $h_a$ . From Newton's law of gravitation,  $g$  varies inversely as the square of the distance from the center of the earth. By letting  $g_0$  be the gravitational acceleration at *sea level*, the local gravitational acceleration  $g$  at a given absolute altitude  $h_a$  is

$$g = g_0 \left( \frac{r}{h_a} \right)^2 = g_0 \left( \frac{r}{r + h_G} \right)^2 \quad (3.1)$$

The variation of  $g$  with altitude must be taken into account when [page 113](#) you are dealing with mathematical models of the atmosphere, as discussed in the following sections.

## 3.2 HYDROSTATIC EQUATION

We will now begin to piece together a model that will allow us to calculate variations of  $p$ ,  $\rho$ , and  $T$  as functions of altitude. The foundation of this model is the hydrostatic equation, which is nothing more than a force balance on an element of fluid at rest. Consider the small stationary fluid element of air shown in Fig. 3.3. We take for convenience an element with rectangular faces, where the top and bottom faces have sides of unit length and the side faces have an infinitesimally small height  $dh_G$ . On the bottom face, the pressure  $p$  is felt, which gives rise to an upward force of  $p \times 1 \times 1$  exerted on the fluid element. The top face is slightly higher in altitude (by the distance  $dh_G$ ); and because pressure varies with altitude, the pressure on the top face will differ slightly from that on the bottom face by the infinitesimally small value  $dp$ . Hence, on the top face the pressure  $p + dp$  is felt. It gives rise to a downward force of  $(p + dp)(1)(1)$  on the fluid element. Moreover, the volume of the fluid element is  $(1)(1) dh_G = dh_G$ ; and because  $\rho$  is the mass per unit volume, the mass of the fluid element is simply  $\rho(1)(1)dhG = \rho dhG$ . If the local acceleration of gravity is  $g$ , then the weight of the fluid element is  $g\rho dhG$ , as shown in Fig. 3.3. The three forces shown in Fig. 3.3—pressure forces on the top and bottom, and the weight—must balance because the fluid element is not moving. Hence

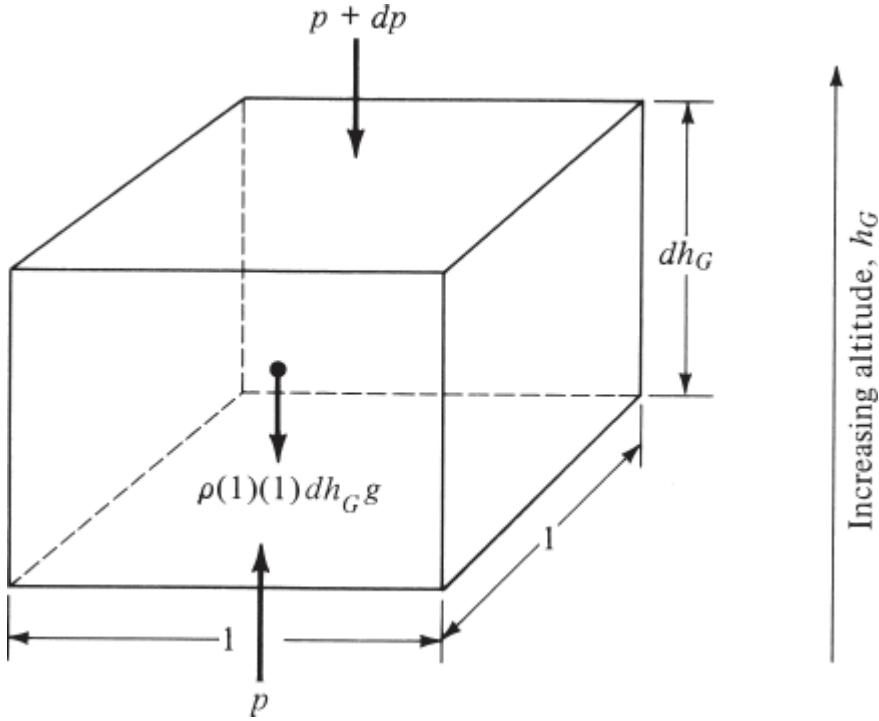

**Figure 3.3** Force diagram for the hydrostatic equation.

$$p = p + dp + \rho g dh_G$$

$$\text{Thus} \quad dp = -\rho g dh_G \quad (3.2)$$

Equation (3.2) is the *hydrostatic equation* and applies to any fluid of density  $\rho$ ; for example, water in the ocean as well as air in the atmosphere.

Strictly speaking, Eq. (3.2) is a differential equation; that is, it relates an infinitesimally small change in pressure  $dp$  to a corresponding infinitesimally small change in altitude  $dh_G$ , where in the language of differential calculus,  $dp$  and  $dh_G$  are differentials. Also note that  $g$  is a variable in Eq. (3.2);  $g$  depends on  $h_G$  as given by Eq. (3.1).

To be made useful, Eq. (3.2) should be integrated to give what we want: the variation of pressure with altitude  $p = p(h_G)$ . To simplify the integration, we make the *assumption* that  $g$  is constant throughout the atmosphere, equal to its value at sea level  $g_0$ . This is something of a historical convention in aeronautics.

Hence we can write Eq. (3.2) as

$$dp = -\rho g_0 dh \quad (3.3)$$

However, to make Eqs. (3.2) and (3.3) numerically identical, the altitude  $h$  in Eq. (3.3) must be slightly different from  $hG$  in Eq. (3.2) to compensate for the fact that  $g$  is slightly different from  $g_0$ . Suddenly we have defined a new altitude  $h$ , which is called the *geopotential altitude* and which differs from the geometric altitude. To better understand the concept of geopotential altitude, consider a given geometric altitude,  $hG$ , where the value of pressure is  $p$ . Let us now increase the geometric altitude by an infinitesimal amount,  $dhG$ , such that the new geometric altitude is  $hG + dhG$ . At this new altitude, the pressure is  $p + dp$ , where the value of  $dp$  is given by Eq. (3.2). Let us now put this *same value* of  $dp$  in Eq. (3.3). Dividing Eq. (3.3) by Eq. (3.2), we have

$$1 = \left(\frac{g_0}{g}\right) \left(\frac{dh}{dh_G}\right)$$

Clearly, because  $g_0$  and  $g$  are different,  $dh$  and  $dhG$  must be different; that is, the numerical values of  $dh$  and  $dhG$  that correspond to the *same* change in pressure,  $dp$ , are different. As a consequence, the numerical values of  $h$  and  $hG$  that correspond to the same actual physical location in the atmosphere are different values.

For the practical mind, geopotential altitude is a “fictitious” altitude, defined by Eq. (3.3) for ease of future calculations. However, many standard atmosphere tables quote their results in terms of geopotential altitude, and care must be taken to make the distinction. Again, geopotential altitude can be thought of as that fictitious altitude that is physically compatible with the assumption of  $g = \text{const} = g_0$ .

### 3.3 RELATION BETWEEN GEOPOTENTIAL AND GEOMETRIC ALTITUDES

We still seek the variation of  $p$  with geometric altitude  $p = p(hG)$ . However, our calculations using Eq. (3.3) will give, instead,  $p = p(h)$ . Therefore, we need to relate  $h$  to  $hG$ , as follows. Dividing Eq. (3.3) by Eq. (3.2), we obtain

$$1 = \frac{g_0}{g} \frac{dh}{dh_G} \quad (3.4)$$

or

$$dh = \frac{g}{g_0} dh_G$$

We substitute Eq. (3.1) into Eq. (3.4):

$$dh = \frac{r^2}{(r + h_G)^2} dh_G \quad (3.5)$$

By convention, we set both  $h$  and  $hG$  equal to zero at sea level. Now consider a given point in the atmosphere. This point is at a certain geometric altitude  $hG$ , and associated with it is a certain value of  $h$  (different from  $hG$ ). Integrating Eq. (3.5) between sea level and the given point, we have

page 116

$$\int_0^h dh = \int_0^{h_G} \frac{r^2}{(r + h_G)^2} dh_G = r^2 \int_0^{h_G} \frac{dh_G}{(r + h_G)^2}$$

$$h = r^2 \left( \frac{-1}{r + h_G} \right)_0^{h_G} = r^2 \left( \frac{-1}{r + h_G} + \frac{1}{r} \right) = r^2 \left( \frac{-r + r + h_G}{(r + h_G)r} \right)$$

Thus

$$h = \frac{r}{r + h_G} h_G$$

(3.6)

where  $h$  is geopotential altitude and  $hG$  is geometric altitude. This is the desired relation between the two altitudes. When we obtain relations such as  $p = p(h)$ , we can use Eq. (3.6) to subsequently relate  $p$  to  $hG$ .

A quick calculation using Eq. (3.6) shows that there is little difference between  $h$  and  $hG$  for low altitudes. For such a case,  $hG \ll r$ ,  $r/(r + hG) \approx 1$ ; hence  $h \approx hG$ . Putting in numbers,  $r = 6.356766 \times 10^6$  m (at a latitude of  $45^\circ$ ), and if  $hG = 7$  km (about 23,000 ft), then the corresponding value of  $h$  is, from Eq. (3.6),  $h = 6.9923$  km—about 0.1 of 1 percent difference! Only at altitudes above 65 km (213,000 ft) does the difference exceed 1 percent. (Note that 65 km is an altitude at which aerodynamic heating of NASA's Space Shuttle becomes important during reentry into the earth's atmosphere from space.)

### 3.4 DEFINITION OF THE STANDARD ATMOSPHERE

We are now in a position to obtain  $p$ ,  $T$ , and  $\rho$  as functions of  $h$  for the standard atmosphere. The keystone of the standard atmosphere is a *defined* variation of  $T$  with altitude, based on experimental evidence. This variation is shown in Fig. 3.4. Note that it consists of a series of straight lines, some vertical (called the constant-temperature, or *isothermal*, regions) and others inclined (called the *gradient* regions). Given  $T = T(h)$  as *defined* by Fig.

3.4, then  $p = p(h)$  and  $\rho = \rho(h)$  follow from the laws of physics, as shown in the following.


First consider again Eq. (3.3):

$$dp = -\rho g_0 dh$$

Divide by the equation of state, Eq. (2.3):


$$\frac{dp}{p} = -\frac{\rho g_0 dh}{\rho RT} = -\frac{g_0}{RT} dh \quad (3.7)$$

Consider first the isothermal (constant-temperature) layers of the standard atmosphere, as given by the vertical lines in Fig. 3.4 and sketched in Fig. 3.5. The temperature, pressure, and density at the base of the isothermal layer shown in Fig. 3.5 are  $T_1$ ,  $p_1$ , and  $\rho_1$ , respectively. The base is located at a given geopotential altitude  $h_1$ . Now consider a given point in the isothermal layer above the base, where the altitude is  $h$ . We can obtain the pressure  $p$  at  $h$  by integrating Eq. (3.7) between  $h_1$  and  $h$ :

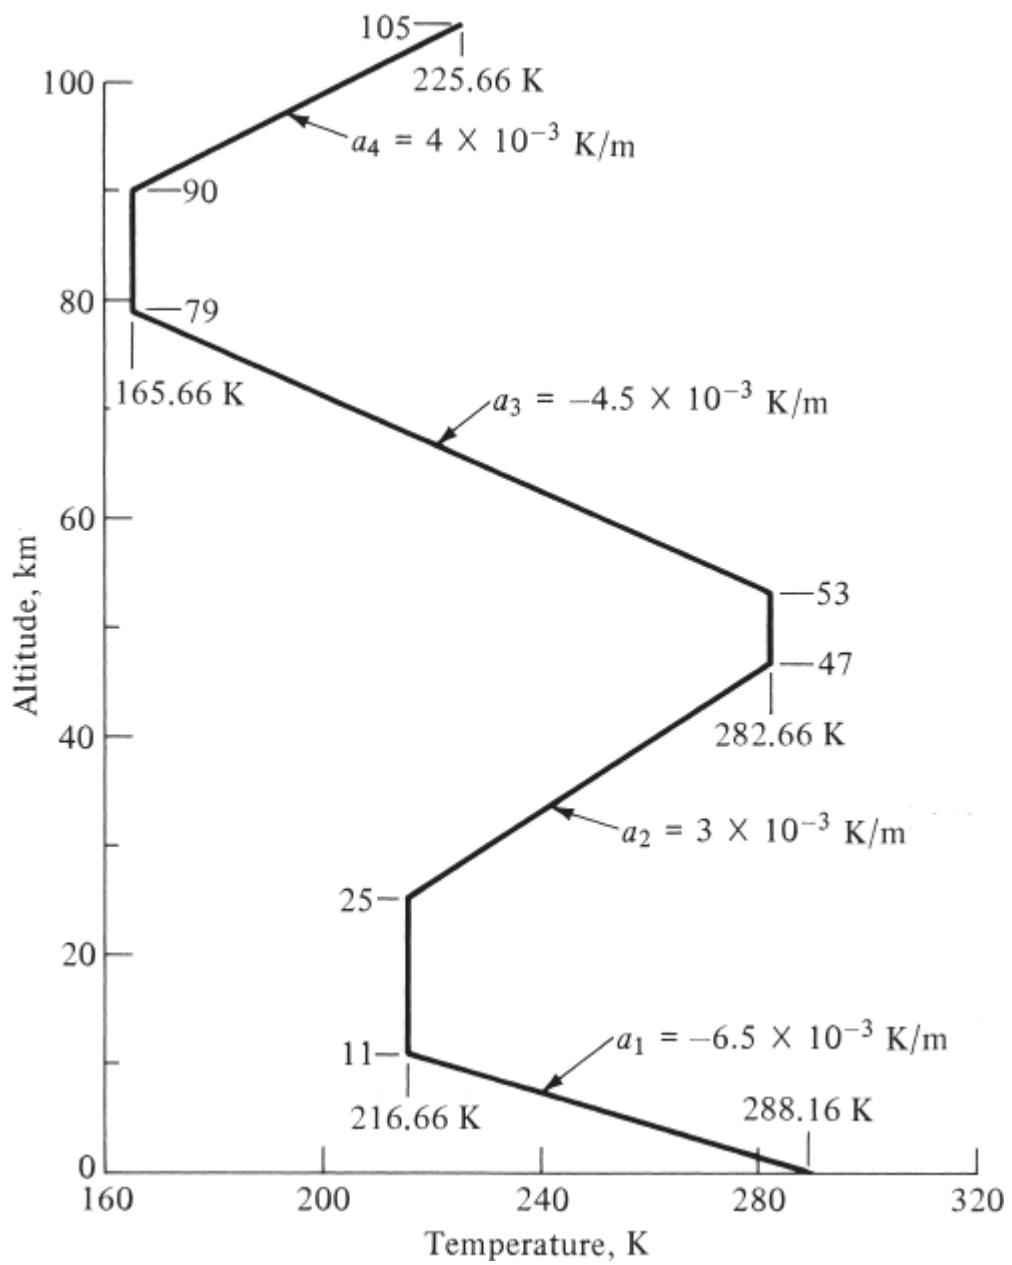

**Figure 3.4** Temperature distribution in the standard atmosphere.

$$\int_{p_1}^p \frac{dp}{P} = -\frac{g_0}{RT} \int_{h_1}^h dh \quad (3.8)$$

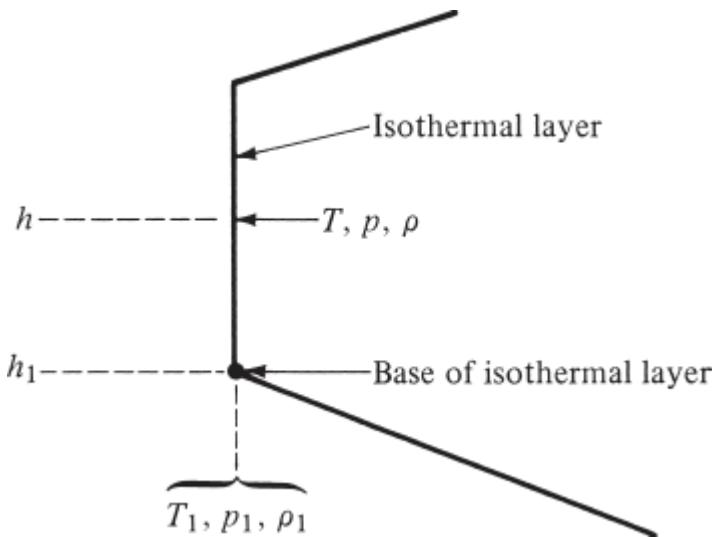

**Figure 3.5** Isothermal layer.

Note that  $g_0$ ,  $R$ , and  $T$  are constants that can be taken outside the integral. (This clearly demonstrates the simplification obtained by assuming that  $g = g_0 = \text{const}$ , and therefore dealing with geopotential altitude  $h$  in the analysis.) Performing the integration in Eq. (3.8), we obtain

page 118

$$\ln \frac{p}{p_1} = -\frac{g_0}{RT} (h - h_1)$$

or

$$\frac{p}{p_1} = e^{-[g_0/(RT)](h-h_1)}$$

(3.9)

From the equation of state,

$$\frac{p}{p_1} = \frac{\rho T}{\rho_1 T_1} = \frac{\rho}{\rho_1}$$

Thus

$$\frac{\rho}{\rho_1} = e^{-[g_0/(RT)](h-h_1)}$$


(3.10)

Equations (3.9) and (3.10) give the variation of  $p$  and  $\rho$  versus geopotential altitude for the isothermal layers of the standard atmosphere.

Considering the gradient layers, as sketched in Fig. 3.6, we find that the temperature variation is linear and is geometrically given as

$$\frac{T - T_1}{h - h_1} = \frac{dT}{dh} \equiv a$$

where  $a$  is a *specified* constant for each layer obtained from the defined temperature variation in Fig. 3.4. The value of  $a$  is sometimes called the *lapse rate* for the gradient layers.

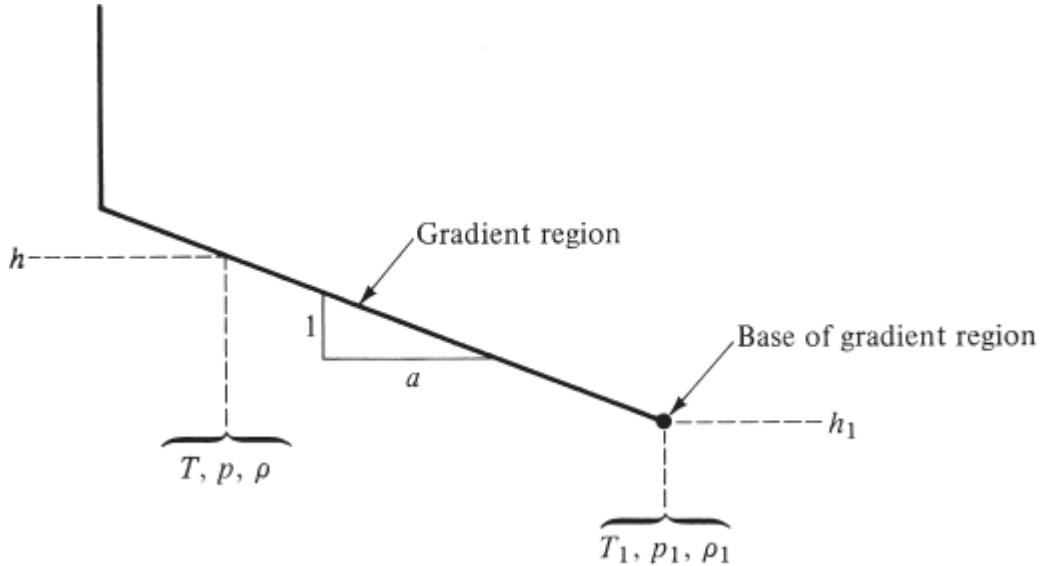

**Figure 3.6** Gradient layer.

$$a \equiv \frac{dT}{dh}$$

$$\text{Thus} \quad dh = \frac{1}{a} dT$$

We substitute this result into Eq. (3.7):

$$\frac{dp}{p} = -\frac{g_0}{aR} \frac{dT}{T} \quad (3.11)$$

Integrated between the base of the gradient layer (shown in Fig. 3.6) and some point at altitude  $h$ , also in the gradient layer, Eq. (3.11) yields

page 119

$$\int_{p_1}^p \frac{dp}{p} = -\frac{g_0}{aR} \int_{T_1}^T \frac{dT}{T}$$

$$\ln \frac{p}{p_1} = -\frac{g_0}{aR} \ln \frac{T}{T_1}$$

Thus

$$\frac{p}{p_1} = \left( \frac{T}{T_1} \right)^{-g_0/(aR)} \quad (3.12)$$

From the equation of state,

$$\frac{p}{p_1} = \frac{\rho T}{\rho_1 T_1}$$

page 120

Hence Eq. (3.12) becomes

$$\frac{\rho T}{\rho_1 T_1} = \left(\frac{T}{T_1}\right)^{-g_0/(aR)}$$

$$\frac{\rho}{\rho_1} = \left(\frac{T}{T_1}\right)^{-[g_0/(aR)]-1}$$

or

$$\boxed{\frac{\rho}{\rho_1} = \left(\frac{T}{T_1}\right)^{-\{[g_0/(aR)]+1\}}}$$

(3.13)

Recall that the variation of  $T$  is linear with altitude and is given the specified relation

$$\boxed{T = T_1 + a(h - h_1)}$$

(3.14)

Equation (3.14) gives  $T = T(h)$  for the gradient layers; when it is plugged into Eq. (3.12), we obtain  $p = p(h)$ ; similarly, from Eq. (3.13) we obtain  $\rho = \rho(h)$ .

Now we can see how the standard atmosphere is pieced together. Looking at Fig. 3.4, start at sea level ( $h = 0$ ), where standard sea level values of pressure, density, and temperature— $p_s$ ,  $\rho_s$ , and  $T_s$ , respectively—are

$$p_s = 1.01325 \times 10^5 \text{ N/m}^2 = 2116.2 \text{ lb/ft}^2$$

$$\rho_s = 1.2250 \text{ kg/m}^3 = 0.002377 \text{ slug/ft}^3$$

$$T_s = 288.16 \text{ K} = 518.69^\circ\text{R}$$

These are the base values for the first gradient region. Use Eq. (3.14) to obtain values of  $T$  as a function of  $h$  until  $T = 216.66 \text{ K}$ , which occurs at  $h = 11.0 \text{ km}$ . With these values of  $T$ , use Eqs. (3.12) and (3.13) to obtain the corresponding values of  $p$  and  $\rho$  in the first gradient layer. Next, starting at  $h = 11.0 \text{ km}$  as the base of the first isothermal region (see Fig. 3.4), use Eqs. (3.9) and (3.10) to calculate values of  $p$  and  $\rho$  versus  $h$ , until  $h = 25 \text{ km}$ , which is the base of the next gradient region. In this manner, with Fig. 3.4 and Eqs. (3.9), (3.10), and (3.12) to (3.14), we can construct a table of values for the standard atmosphere.

Such a table is given in App. A for SI units and App. B for English engineering units. Look at these tables carefully and become familiar with them. They *are* the standard atmosphere. The first column gives the geometric altitude, and the second column gives the corresponding geopotential altitude obtained from Eq. (3.6). The third through fifth columns give the corresponding standard values of temperature, pressure, and density, respectively, for each altitude, obtained from the previous discussion.

## DESIGN BOX

The first step in the design process of a new aircraft is the determination of a set of *specifications*, or *requirements*, for the new vehicle. These specifications may include such performance aspects as a stipulated maximum velocity at a given altitude or a stipulated maximum rate-of-climb at a given altitude. These performance parameters depend on the aerodynamic characteristics of the vehicle, such as lift and drag. In turn, the lift and drag depend on the properties of the atmosphere. When the specifications dictate certain performance at a given altitude, this altitude is taken to be the standard altitude in the tables. Therefore, in the preliminary design of an airplane, the designer uses the standard atmosphere tables to define the pressure, temperature, and density at the given altitude. In this fashion, many calculations made during the preliminary design of an airplane contain information from the standard altitude tables.

We emphasize again that the standard atmosphere is a reference atmosphere only and certainly does not predict the actual atmospheric properties that may exist at a given time and place. For example, App. A says that at an altitude (geometric) of 3 km,  $p = 0.70121 \times 10^5 \text{ N/m}^2$ ,  $T = 268.67 \text{ K}$ , and  $\rho = 0.90926 \text{ kg/m}^3$ . In reality, situated where you are, if you could right now levitate yourself to 3 km above sea level, you would most likely feel a  $p$ ,  $T$ , and  $\rho$  different from the values obtained from App. A. The standard atmosphere allows us only to reduce test data and calculations to a convenient, agreed-upon reference, as will be seen in subsequent sections of this book.

page 121

**Comment: Geometric and Geopotential Altitudes Revisited** We now can appreciate better the meaning and significance of the geometric altitude,  $hG$ , and the geopotential altitude,  $h$ . The variation of the properties in the standard atmosphere are calculated from Eqs. (3.9) to (3.14). These equations are derived using the simplifying assumption of a constant value of the acceleration of gravity equal to its value at sea level; that is,  $g = \text{constant} = g_0$ . Consequently, the altitude that appears in these equations is, by definition, the geopotential altitude,  $h$ . Examine these equations again—you see  $g_0$  and  $h$  appearing in these equations, not  $g$  and  $hG$ . The simplification obtained by assuming a constant value of  $g$  is the *sole reason* for defining the geopotential altitude. This is the only use of geopotential altitude we will make in this book—for the calculation of the numbers that appear in Apps. A and B. Moreover, because  $h$  and  $hG$  are related via Eq. (3.6), we can always obtain the geometric altitude,  $hG$ , that corresponds to a specified value of geopotential altitude,  $h$ . The geometric altitude,  $hG$ , is the actual height above sea level and therefore is more practical. That is why the first column in Apps. A and B is  $hG$ , and the entries are in even intervals of  $hG$ . The second column gives the corresponding values of  $h$ , and these are the values used to generate the corresponding numbers for  $p$ ,  $\rho$ , and  $T$  via Eqs. (3.9) to (3.14).

In the subsequent chapters in this book, any dealings with [page 122](#) altitude involving the use of the standard atmosphere tables in Apps. A and B will be couched in terms of the geometric altitude,  $hG$ . For example, if reference is made to a “standard altitude” of 5 km, it means a geometric altitude of  $hG = 5$  km. Now that we have seen how the standard atmosphere tables are generated, after the present chapter we will have no reason to deal with geopotential altitude.

You should now have a better understanding of the statement made at the end of Sec. 3.2 that geopotential altitude is simply a “fictitious” altitude, defined by Eq. (3.3) for the single purpose of simplifying the subsequent derivations.

**EXAMPLE**  
**3.1**

Calculate the standard atmosphere values of  $T$ ,  $p$ , and  $\rho$  at a geopotential altitude of 14 km.

## ■ Solution

Remember that  $T$  is a *defined* variation for the standard atmosphere. Hence, we can immediately refer to Fig. 3.4 and find that at  $h = 14$  km,

$$T = 216.66 \text{ K}$$

To obtain  $p$  and  $\rho$ , we must use Eqs. (3.9) to (3.14), piecing together the different regions from sea level up to the given altitude with which we are concerned. Beginning at sea level, the first region (from Fig. 3.4) is a gradient region from  $h = 0$  to  $h = 11.0$  km. The lapse rate is

$$a = \frac{dT}{dh} = \frac{216.66 - 288.16}{11.0 - 0} = -6.5 \text{ K/km}$$

or

$$a = -0.0065 \text{ K/m}$$

Therefore, using Eqs. (3.12) and (3.13), which are for a gradient region and where the base of the region is sea level (hence  $p_1 = 1.01 \times 10^5 \text{ N/m}^2$  and  $\rho_1 = 1.23 \text{ kg/m}^3$ ), we find that at  $h = 11.0$  km

$$p = p_1 \left( \frac{T}{T_1} \right)^{-g_0/(aR)} = (1.01 \times 10^5) \left( \frac{216.66}{288.16} \right)^{-9.8/[-0.0065(287)]}$$

where  $g_0 = 9.8 \text{ m/s}^2$  in SI units. Hence  $p$  (at  $h = 11.0$  km) =  $2.26 \times 10^4 \text{ N/m}^2$ .

$$\begin{aligned} \rho &= \rho_1 \left( \frac{T}{T_1} \right)^{-[g_0/(aR)+1]} \\ &= (1.23) \left( \frac{216.66}{288.16} \right)^{-[9.8/[-0.0065(287)]+1]} \\ &= 0.367 \text{ kg/m}^3 \quad \text{at } h = 11.0 \text{ km} \end{aligned}$$

These values of  $p$  and  $\rho$  now form the *base* values for the first page 123 isothermal region (see Fig. 3.4). The equations for the isothermal region are Eqs. (3.9) and (3.10), where now  $p_1 = 2.26 \times 10^4 \text{ N/m}^2$  and  $\rho_1 = 0.367 \text{ kg/m}^3$ . For  $h = 14$  km,  $h - h_1 = 14 - 11 = 3 \text{ km} = 3000 \text{ m}$ . From Eq. (3.9),

$$p = p_1 e^{-[g/(RT)](h-h_1)} = (2.26 \times 10^4) e^{-[9.8/287(216.66)](3000)}$$

$$p = 1.41 \times 10^4 \text{ N/m}^2$$

From Eq. (3.10),

$$\frac{\rho}{\rho_1} = \frac{p}{p_1}$$

Hence

$$\rho = \rho_1 \frac{p}{p_1} = 0.367 \frac{1.41 \times 10^4}{2.26 \times 10^4} = 0.23 \text{ kg/m}^3$$

These values check, within roundoff error, with the values given in App. A.  
*Note:* This example demonstrates how the numbers in Apps. A and B are obtained.

### EXAMPLE 3.2

For approximate, closed-form engineering calculations of airplane performance (Ch. 6), a simple equation for the variations of density with altitude is useful. Denoting the standard sea-level density by  $\rho_0$ , an approximate exponential variation of density with altitude  $h$  can be written as

$$\frac{\rho}{\rho_0} = e^{-nh} \quad (3.15)$$

where  $n$  is a constant.

(a) Derive the value of  $n$  so that Eq. (3.15) gives the exact density at  $h = 36,000$  ft (11 km, which is the upper boundary of the first gradient region shown in Fig. 3.4).

(b) Using this value of  $n$ , calculate the density at 5000 ft, 10,000 ft, 20,000 ft, 30,000 ft, and 40,000 ft from Eq. (3.15), and compare your results with the exact numerical values from App. B.

#### ■ Solution

(a) From App. B, for 36,000 ft,  $\rho = 7.1028 \times 10^{-4}$  slug/ft<sup>3</sup>. From Eq. (3.15), written at  $h = 36,000$  ft,

$$\frac{7.1028 \times 10^{-4}}{2.3769 \times 10^{-3}} = e^{-36,000 n}$$

$$0.2988 = e^{-36,000 n}$$

$$\ln(0.2988) = -36,000 n$$

$$n = \frac{-1.208}{-36,000} = 3.3555 \times 10^{-5}$$

Hence,

$$\frac{\rho}{\rho_0} = e^{-3.3555 \times 10^{-5} h}$$

or

$$\frac{\rho}{\rho_0} = e^{\frac{-h}{29,800}} \quad (3.16)$$

where  $h$  is in feet.

(b) Comparing the results from Eq. (3.16) with the exact results from App. B, we have

$h$ (ft)	$\rho$ (Eq. 3.16) (slug ft <sup>3</sup> )	$\rho$ (App. B) (slug ft <sup>3</sup> )	Difference
5,000	0.00201	0.00205	2%
10,000	0.00170	0.00176	3.4%
20,000	0.00121	0.00127	4.7%
30,000	0.000869	0.000891	2.5%
40,000	0.000621	0.000587	-5.8%

**Comment:** From sea level to 40,000 ft, Eq. (3.16) yields the atmospheric density to within 5.8%, or better. These results are accurate enough for approximate engineering calculations. Equation (3.16) is used in Example 6.12 for the approximate calculation of the absolute ceiling for an airplane.

### EXAMPLE 3.3

In both the gradient and isothermal regions of the standard [page 124](#) atmosphere, the pressure decreases with an increase in altitude. *Question:* Does pressure decrease faster in the gradient regions or in the isothermal regions?

#### ■ Solution

Consider an infinitesimally small increase in altitude,  $dh$ . The corresponding infinitesimally small change in pressure is  $dp$ , and is given

by Eq. (3.7), repeated here:

$$\frac{dp}{p} = -\frac{g_0}{RT} dh \quad (3.7)$$

To interpret the physical meaning of the differential relationship given by Eq. (3.7), consider a given altitude  $h$  where the pressure is  $p$ . If we increase altitude by an infinitesimally small amount,  $dh$ , the corresponding infinitesimally small change in pressure is  $dp$ . The ratio  $dp/p$  is the fractional change in pressure. (You can also interpret this as a “percentage change” in pressure, which in reality is given by  $100 (dp/p)$ .) The rate of change of this fraction with respect to a change in altitude,  $dh$ , is represented by

$$\frac{dp}{p} = -\frac{g_0}{RT} \quad (3.17)$$

obtained from Eq. (3.7). To properly answer the question posed in this example, we need to evaluate the value of  $\frac{(dp/p)}{dh}$  in the isothermal regions and the gradient regions. Clearly, from Eq. (3.17), this value depends only on the local temperature at the given altitude  $h$ . From this, we make the following observations:

1. In the first gradient region, where  $T$  decreases with altitude [page 125](#) (see Fig. 3.4), the absolute value of  $\frac{(dp/p)}{dh}$  becomes larger as  $h$  increases (i.e., the pressure decreases at a faster rate). For example, at the base of the first gradient region, where  $h = 0$  and  $T = 288.16$  K, we have, from Eq. (3.17)

$$\frac{dp}{p} = -\frac{g_0}{RT} = -\frac{9.8}{(287)(288.16)} = -1.185 \times 10^{-4} \text{ per meter}$$

At the top of the first gradient region, where  $h = 11$  km and  $T = 216.66$  K, we have

$$\frac{dp}{p} = -\frac{g_0}{RT} = -\frac{9.8}{(287)(216.66)} = -1.576 \times 10^{-4} \text{ per meter}$$

Clearly, in the first gradient region, the pressure decreases at a faster rate as  $h$  increases. In contrast, in the isothermal region, because  $T$  is constant in

this region, the pressure decreases at the same rate with altitude; that is, from  $h = 11$  km to  $h = 25$  km, the value of  $\frac{dp}{dh} = -1.576 \times 10^{-4}$  per meter; it does not change with altitude. However, examining the second gradient region in Fig. 3.4, where  $T$  increases with an increase in  $h$ , the pressure decreases at a *slower rate* as  $h$  increases.

**Conclusion:** There is no pat answer to the question posed in this example. The fractional rate of change of pressure with respect to altitude at any altitude just depends on the value of  $T$  at that altitude.

---

### 3.5 PRESSURE, TEMPERATURE, AND DENSITY ALTITUDES

With the tables of Apps. A and B in hand, we can now define three new “altitudes”—pressure, temperature, and density altitudes. This is best done by example. Imagine that you are in an airplane flying at some real, geometric altitude. The value of your actual altitude is immaterial for this discussion. However, at this altitude, you measure the actual outside air pressure to be  $6.16 \times 10^4$  N/m<sup>2</sup>. From App. A, you find that the standard altitude that corresponds to a pressure of  $6.16 \times 10^4$  N/m<sup>2</sup> is 4 km. Therefore, by *definition*, you say that you are flying at a *pressure altitude* of 4 km. Simultaneously, you measure the actual outside air temperature to be 265.4 K. From App. A, you find that the standard altitude that corresponds to a temperature of 265.4 K is 3.5 km. Therefore, by definition, you say that you are flying at a *temperature altitude* of 3.5 km. Thus, you are simultaneously flying at a pressure altitude of 4 km and a temperature altitude of 3.5 km while your actual geometric altitude is yet a different value. The definition of *density altitude* is made in the same vein. These quantities—pressure, temperature, and density altitudes—are just convenient numbers that, via App. A or B, are related to the actual  $p$ ,  $T$ , and  $\rho$  for the actual altitude at which you are flying.

**EXAMPLE  
3.4**

---

page 126

If an airplane is flying at an altitude where the actual pressure and temperature are  $4.72 \times 10^4 \text{ N/m}^2$  and 255.7 K, respectively, what are the pressure, temperature, and density altitudes?

### ■ Solution

For the pressure altitude, look in App. A for the standard altitude value corresponding to  $p = 4.72 \times 10^4 \text{ N/m}^2$ . This is 6000 m. Hence

$$\boxed{\text{Pressure altitude} = 6000 \text{ m} = 6 \text{ km}}$$

For the temperature altitude, look in App. A for the standard altitude value corresponding to  $T = 255.7 \text{ K}$ . This is 5000 m. Hence

$$\boxed{\text{Temperature altitude} = 5000 \text{ m} = 5 \text{ km}}$$

For the density altitude, we must first calculate  $\rho$  from the equation of state:

$$\rho = \frac{P}{RT} = \frac{4.72 \times 10^4}{287(255.7)} = 0.643 \text{ kg/m}^3$$

Looking in App. A and interpolating between 6.2 and 6.3 km, we find that the standard altitude value corresponding to  $\rho = 0.643 \text{ kg/m}^3$  is about 6240 m. Hence

$$\boxed{\text{Density altitude} = 6240 \text{ m} = 6.24 \text{ km}}$$

Note that temperature altitude is not a unique value. The answer for temperature altitude could equally well be 5.0, 38.2, or 59.5 km because of the multivalued nature of the altitude-versus-temperature function. In this section, only the lowest value of temperature altitude is used.

### EXAMPLE 3.5

The flight test data for a given airplane refer to a level-flight maximum-velocity run made at an altitude that simultaneously corresponded to a pressure altitude of 30,000 ft and density altitude of 28,500 ft. Calculate

the temperature of the air at the altitude at which the airplane was flying for the test.

### ■ Solution

From App. B:

For pressure altitude = 30,000 ft:

$$p = 629.66 \text{ lb/ft}^2$$

For density altitude = 28,500 ft:

$$\rho = 0.9408 \times 10^{-3} \text{ s}$$

These are the values of  $p$  and  $\rho$  that simultaneously existed at the altitude at which the airplane was flying. Therefore, from the equation of state,

$$T = \frac{p}{\rho R} = \frac{629.66}{(0.94082 \times 10^{-3})(1716)} = 390^\circ\text{R}$$

page 127

### EXAMPLE 3.6

Consider an airplane flying at some real, geometric altitude. The outside (ambient) pressure and temperature are  $5.3 \times 10^4 \text{ N/m}^2$  and 253 K, respectively. Calculate the pressure and density altitudes at which this airplane is flying.

### ■ Solution

Consider the ambient pressure of  $5.3 \times 10^4 \text{ N/m}^2$ . In App. A, there is no precise entry for this number. It lies between the values  $p_1 = 5.331 \times 10^4 \text{ N/m}^2$  at altitude  $h_{G,1} = 5100 \text{ m}$  and  $p_2 = 5.2621 \times 10^4 \text{ N/m}^2$  at altitude  $h_{G,2} = 5200 \text{ m}$ . We have at least two choices. We could simply use the nearest entry in the table, which is for an altitude  $h_{G,2} = 5100 \text{ m}$ , and say that the answer for pressure altitude is 5100 m. This is acceptable if we are making only approximate calculations. However, if we need greater accuracy, we can *interpolate* between entries. Using linear interpolation, the value of  $h G$  corresponding to  $p = 5.3 \times 10^4 \text{ N/m}^2$  is

$$\begin{aligned}
 h_G &= h_{G,1} + (h_{G,2} - h_{G,1}) \left( \frac{p_1 - p}{p_1 - p_2} \right) \\
 h_G &= 5100 + (5200 - 5100) \left( \frac{5.331 - 5.3}{5.331 - 5.2621} \right) \\
 &= 5100 + 100(0.4662) = 5146.6 \text{ m}
 \end{aligned}$$

The pressure altitude at which the airplane is flying is 5146.6 m. (Note that in this example and in Examples 3.4 and 3.5, we are interpreting the word *altitude* in the tables to be the geometric altitude  $hG$  rather than the geopotential altitude  $h$ . This is for convenience because  $hG$  is tabulated in round numbers, in contrast to the column for  $h$ . Again, at the altitudes for conventional flight, the difference between  $hG$  and  $h$  is not significant.)

To obtain the density altitude, calculate the density from the equation of state:

$$\rho = \frac{p}{RT} = \frac{5.3 \times 10^4}{(287)(253)} = 0.72992 \text{ kg/m}^3$$

Once again we note that this value of  $\rho$  falls between two entries [page 128](#) in the table. It falls between  $hG_{,1} = 5000$  m where  $\rho_1 = 0.73643 \text{ kg/m}^3$  and  $hG_{,2} = 5100$  m where  $\rho_2 = 0.72851 \text{ kg/m}^3$ . (Note that these subscripts denote different lines in the table from those used in the first part of this example. It is good never to become a slave to subscripts and symbols. Just always keep in mind the significance of what you are doing.) We could take the nearest entry, which is for an altitude  $hG = 5100$  m, and say that the answer for the density altitude is 5100 m. However, for greater accuracy, let us linearly interpolate between the two entries:

$$\begin{aligned}
 h_G &= h_{G,1} + (h_{G,2} - h_{G,1}) \left( \frac{\rho_1 - \rho}{\rho_1 - \rho_2} \right) \\
 &= 5000 + (5100 - 5000) \left( \frac{0.73643 - 0.72992}{0.73643 - 0.72851} \right) \\
 &= 5000 + 100(0.82197) = 5082.2 \text{ m}
 \end{aligned}$$

The density altitude at which the airplane is flying is 5082.2 m.

### EXAMPLE 3.7

The ambient temperature in the air ahead of an airplane in flight is 240 K. At what temperature altitude is the airplane flying?

### ■ Solution

The purpose of this example is to show the ambiguity of the use of temperature altitude. First, just examine Fig. 3.4. Go the abscissa and find  $T = 240$  K. Then, simply cast your eyes upward. Within the scale of this figure, there are three different altitudes that have a temperature of 240 K. Using App. A, these altitudes are (to the nearest entry) 7.4 km, 33 km, and (returning to Fig. 3.4) about 63 km. Of course, the airplane cannot be at all three altitudes simultaneously. We conclude that the definition of temperature altitude has limited usefulness.

---

## 3.6 HISTORICAL NOTE: THE STANDARD ATMOSPHERE

With the advent of ballooning in 1783 (see Ch. 1)), people suddenly became interested in acquiring a greater understanding of the properties of the atmosphere above ground level. However, no compelling reason for such knowledge arose until the coming of heavier-than-air flight in the 20th century. As we will see in subsequent chapters, the flight performance of aircraft depends on such properties as the pressure and density of the air. Thus, a knowledge of these properties, or at least some agreed-upon standard for worldwide reference, is absolutely necessary for intelligent aeronautical engineering.

The situation in 1915 was summarized by C. F. Marvin, Chief of the U.S. Weather Bureau and chairman of an NACA subcommittee to investigate and report on the existing status of atmospheric data and knowledge. In his “Preliminary Report on the Problem of the Atmosphere in Relation to Aeronautics,” NACA Report No. 4, 1915, Marvin wrote:

The Weather Bureau is already in possession of an immense amount of data concerning atmospheric conditions, including wind movements at the earth’s surface. This information is no doubt of distinct value to aeronautical operations, but it needs to be collected and put in form to meet the requirements of aviation.

The following four years saw such efforts to collect and organize atmospheric data for use by aeronautical engineers. In 1920 the Frenchman

A. Toussaint, director of the Aerodynamic Laboratory at Saint-Cyr-l'Ecole, France, suggested the following formula for the temperature decrease with height:

$$T = 15 - 0.0065h$$

page 129

Here  $T$  is in degrees Celsius and  $h$  is the geopotential altitude in meters. Toussaint's formula was formally adopted by France and Italy with the Draft of Inter-Allied Agreement on Law Adopted for the Decrease of Temperature with Increase of Altitude, issued by the Ministere de la Guerre, Aeronautique Militaire, Section Technique, in March 1920. One year later, England followed suit. The United States was close behind. Since Marvin's report in 1915, the U.S. Weather Bureau had compiled measurements of the temperature distribution and found Toussaint's formula to be a reasonable representation of the observed mean annual values. Therefore, at its executive committee meeting of December 17, 1921, NACA adopted Toussaint's formula for airplane performance testing, with this statement: "The subcommittee on aerodynamics recommends that for the sake of uniform practice in different countries that Toussaint's formula be adopted in determining the standard atmosphere up to 10 km (33,000 ft). . . ."

Much of the technical data base that supported Toussaint's formula was reported in 1922, in NACA Report No. 147, "Standard Atmosphere," by Willis Ray Gregg. Based on free-flight tests at McCook Field in Dayton, Ohio, and at Langley Field in Hampton, Virginia, and on the other flights at Washington, District of Columbia, as well as artillery data from Aberdeen, Maryland, and Dahlgren, Virginia, and sounding-balloon observations at Fort Omaha, Nebraska, and St. Louis, Missouri, Gregg was able to compile a table of mean annual atmospheric properties. An example of his results follows:

Altitude, m	Mean Annual Temperature in United States, K	Temperature from Toussaint's Formula, K
0	284.5	288
1000	281.0	281.5
2000	277.0	275.0
5000	260.0	255.5
10,000	228.5	223.0

Clearly, Toussaint's formula provided a simple and reasonable representation of the mean annual results in the United States. This was the primary message in Gregg's report in 1922. However, the report neither gave extensive tables nor attempted to provide a document for engineering use.

Thus it fell to Walter S. Diehl (who later became a well-known aerodynamicist and airplane designer as a captain in the Naval Bureau of Aeronautics) to provide the first practical tables for a standard atmosphere for aeronautical use. In 1925, in NACA Report No. TR 218, titled (again) "Standard Atmosphere," Diehl presented extensive tables of standard atmospheric properties in both metric and English units. The tables were in increments of 50 m up to an altitude of 10 km and then in increments of 100 m up to 20 km. In English units, the tables were in increments of 100 ft up to 32,000 ft and then in increments of 200 ft up to a maximum altitude of 65,000 ft. Considering the aircraft of that day (see Fig. 1.31), these tables were certainly sufficient. Moreover, starting from Toussaint's formula for  $T$  up to 10,769 m, then assuming that  $T = \text{const} = -55^\circ\text{C}$  above 10,769 m, Diehl obtained  $p$  and  $\rho$  in precisely the same fashion as described in the previous sections of this chapter.

The 1940s saw the beginning of serious rocket flights, with the [page 130](#) German V-2 and the initiation of sounding rockets. And airplanes were flying higher than ever. Then, with the advent of intercontinental ballistic missiles in the 1950s and space flight in the 1960s, altitudes began to be quoted in terms of hundreds of miles rather than feet. Therefore, new tables of the standard atmosphere were created, mainly extending the old tables to higher altitudes. Popular among the various tables is the ARDC 1959 Standard Atmosphere, which is used in this book and is given in Apps. A and B. For all practical purposes, the old and new tables agree for altitudes of greatest interest. Indeed, it is interesting to compare values, as shown in the following:

Altitude, m	<i>T</i> from Diehl, 1925, K	<i>T</i> from ARDC, 1959, K
0	288	288.16
1000	281.5	281.66
2000	275.0	275.16
5000	255.5	255.69
10,000	223.0	223.26
10,800	218.0	218.03
11,100	218.0	216.66
20,000	218.0	216.66

Diehl's standard atmosphere from 1925, at least up to 20 km, is just as good as the values today.

### 3.7 SUMMARY AND REVIEW

A standard atmosphere table, such as in App. A or B of this book, will prove to be among the most useful references you have throughout your career in aerospace engineering. It is essential for the calculation of airplane performance, as discussed and illustrated in Ch. 6). It is essential for the rational comparison of flight test data obtained from different sources. It helps to put data from various wind tunnel facilities on a common basis. Also, the equations used to compile the standard atmosphere can be programmed into your hand calculator, freeing you from having to read the tables. The tables, however, are particularly useful for carrying out "back-of-the-envelope" engineering calculations.

No table of the standard atmosphere existed at the time of the Wright brothers. They did not need one because all their work was done essentially at sea level. For their calculations of lift and drag, they did, however, need a value of the ambient air density. This they had indirectly through a now-anachronistic empirical factor called "Smeaton's coefficient," which was based in part on the value of sea-level density, along with a reasonably accurate value of Smeaton's coefficient as measured by Samuel Langley at the Smithsonian Institution. (For more details, see John Anderson, *A History of Aerodynamics and Its Impact on Flying Machines*, Cambridge University Press, New York, 1997.) By the time of World War I, however, airplanes were regularly flying at altitudes of 10,000 ft and higher, and the lack of a standard table of the variation of atmospheric properties with altitude was becoming a real stumbling block for airplane designers. This

prompted the big push for the compilation of standard atmospheric data that is described in Sec. 3.6.

The equations used for compilation of the standard altitude page 131 tables for air, as developed in this chapter, are the same as used for the calculation of the properties throughout foreign planetary atmospheres. This should come as no surprise, as the physics underlying the calculation of atmospheric properties on earth are the same as on Venus, Jupiter, and so forth. Therefore, this chapter is relevant to space flight and the design of space vehicles, the subject of Ch. 8).

Finally, we emphasize that the tables of the standard atmosphere in Apps. A and B did not simply come out of thin air. The values tabulated there were obtained from the application of physics, as embodied in the hydrostatic equation and the equation of state. To help reinforce this concept, the following lists some of the major ideas discussed in this chapter:

1. The standard atmosphere is defined in order to relate flight tests, wind tunnel results, and general airplane design and performance to a common reference.
2. The definitions of the standard atmospheric properties are based on a given temperature variation with altitude, representing a mean of experimental data. In turn, the pressure and density variations with altitude are obtained from this empirical temperature variation by using the laws of physics. One of these laws is the hydrostatic equation:

$$dp = -\rho g dh_G \quad (3.2)$$

3. In the isothermal regions of the standard atmosphere, the pressure and density variations are given by

$$\frac{P}{P_1} = \frac{\rho}{\rho_1} = e^{-[g_0/(RT)](h-h_1)} \quad (3.9) \text{ and } (3.10)$$

4. In the gradient regions of the standard atmosphere, the pressure and density variations are given by, respectively,

$$\frac{P}{P_1} = \left(\frac{T}{T_1}\right)^{-g_0/(aR)} \quad (3.12)$$

$$\frac{\rho}{\rho_1} = \left(\frac{T}{T_1}\right)^{-[g_0/(aR)]} \quad (3.13)$$

where  $T = T_1 + a(h - h_1)$  and  $a$  is the given lapse rate.

5. The pressure altitude is that altitude in the standard atmosphere that corresponds to the actual ambient pressure encountered in flight or laboratory experiments. For example, if the ambient pressure of a flow, no matter where it is or what it is doing, is 393.12 lb/ft<sup>2</sup>, the flow is said to correspond to a pressure altitude of 40,000 ft (see App. B). The same idea can be used to define density and temperature altitudes.

## Bibliography

Minzner, R. A., K. S. W. Champion, and H. L. Pond. The ARDC Model Atmosphere, 1959, Air Force Cambridge Research Center Report No. TR-59-267, U.S. Air Force, Bedford, MA, 1959.

## Problems

- 3.1 At 12 km in the standard atmosphere, the pressure, density, and temperature are  $1.9399 \times 10^4$  N/m<sup>2</sup>,  $3.1194 \times 10^{-1}$  kg/m<sup>3</sup>, and 216.66 K, respectively. Using these values, calculate the standard atmospheric values of pressure, density, and temperature at an altitude of 18 km, and check with the standard altitude tables.
- 3.2 Consider an airplane flying at some real altitude. The page 132 outside pressure and temperature are  $2.65 \times 10^4$  N/m<sup>2</sup> and 220 K, respectively. What are the pressure and density altitudes?
- 3.3 During a flight test of a new airplane, the pilot radios to the ground that she is in level flight at a standard altitude of 35,000 ft. What is the ambient air pressure far ahead of the airplane?
- 3.4 Consider an airplane flying at a pressure altitude of 33,500 ft and a density altitude of 32,000 ft. Calculate the outside air temperature.
- 3.5 At what value of the geometric altitude is the difference  $h - hG$  equal to 2 percent of the geopotential altitude,  $h$ ?
- 3.6 Using Toussaint's formula, calculate the pressure at a geopotential altitude of 5 km.

- 3.7** The atmosphere of Jupiter is essentially made up of hydrogen, H<sub>2</sub>. For H<sub>2</sub>, the specific gas constant is 4157 J/(kg)(K). The acceleration of gravity of Jupiter is 24.9 m/s<sup>2</sup>. Assuming an isothermal atmosphere with a temperature of 150 K and assuming that Jupiter has a definable surface, calculate the altitude above that surface where the pressure is one-half the surface pressure.
- 3.8** An F-15 supersonic fighter aircraft is in a rapid climb. At the instant it passes through a standard altitude of 25,000 ft, its time rate of change of altitude is 500 ft/s, which by definition is the *rate-of-climb*, discussed in Ch. 6). Corresponding to this rate-of-climb at 25,000 ft is a time rate of change of ambient pressure. Calculate this rate of change of pressure in units of pounds per square foot per second.
- 3.9** Assume that you are ascending in an elevator at sea level. Your eardrums are very sensitive to minute changes in pressure. In this case, you are feeling a 1 percent decrease in pressure per minute. Calculate the upward speed of the elevator in meters per minute.
- 3.10** Consider an airplane flying at an altitude where the pressure and temperature are 530 lb/ft<sup>2</sup> and 390°R, respectively. Calculate the pressure and density altitudes at which the airplane is flying.
- 3.11** Consider a large rectangular tank of water open to the atmosphere, 10 ft deep, with walls of length 30 ft each. When the tank is filled to the top with water, calculate the force (in tons) exerted on the side of each wall in contact with the water. The tank is located at sea level. (*Note:* The specific weight of water is 62.4 lb<sub>f</sub>/ft<sup>3</sup>, and 1 ton = 2000 lb<sub>f</sub>). (*Hint:* Use the hydrostatic equation.)
- 3.12** A discussion of the entry of a space vehicle into the earth's atmosphere after it has completed its mission in space appears in Ch. 8). An approximate analysis of the vehicle motion and aerodynamic heating during atmospheric entry assumes an approximate atmospheric model called the *exponential atmosphere*, where the air density variation with altitude is assumed to be

$$\frac{\rho}{\rho_0} = e^{-g_0 h / (RT)}$$

where  $\rho_0$  is the sea-level density and  $h$  is the altitude measured above sea level. This equation is only an approximation for the density variation with altitude throughout the whole atmosphere, but its simple form makes it useful for approximate analyses. Using this equation, calculate the density at an altitude of 45 km. Compare your result with the actual value of density from the standard altitude tables. In the preceding equation, assume that  $T = 240$  K (a reasonable representation for the value of the temperature between sea level and 45 km, which you can see by scanning down the standard atmosphere table).

- 3.13** The entries for the standard altitude in Apps. A and B are given at distinct, regularly spaced values of  $h$ . To obtain the values of pressure, temperature, and density at an altitude between two adjacent entries in the table, linear interpolation can be used as an approximation. Using the tables, obtain the pressure, density, and temperature at a standard altitude of 3.035 km.
- 3.14** For a standard altitude of 3.035 km, calculate the exact values for pressure, density, and temperature using the exact equations from Sec. 3.4 in this chapter. Compare these exact values with the approximate values obtained in Prob. 3.13.
- 3.15** Section 3.3 states that only at altitudes above 65 km does the difference between the geometric and geopotential altitudes exceed 1 percent. Calculate the exact value of the geometric altitude at which this difference is precisely 1 percent.
- 3.16** For the flight of airplanes in the earth's atmosphere, the variation of the acceleration of gravity with altitude is generally ignored. One of the highest-flying aircraft has been the Lockheed U-2 (see Fig. 5.52) which was designed to cruise at 70,000 ft. How much does the acceleration of gravity at this altitude differ from the value at sea level?
- 3.17** The X-15 hypersonic research airplane (see Fig. 5.92) set the altitude record for airplanes on August 22, 1963, when test pilot Joseph Walker achieved 354,200 ft. What is the acceleration of gravity at this altitude? How much does it differ from that at sea level?

- Toussaint's formula was used in the early 1920s to give the temperature variation with altitude. This was in the immediate post-World War I period when conventional airplanes flew at altitudes on the order of 10,000 ft or lower. Compare the result for temperature obtained from Toussaint's formula for a geometric altitude of 10,000 ft with that from the standard altitude table in App. B.
- 3.18** When X-15 test pilot William J. Knight set the world speed record on October 3, 1967, his geometric altitude was 102,100 ft. Interpolate the entries in App. B to obtain the standard values of temperature, pressure, and density at this altitude.
- 3.20** The airstream in the test section of a wind tunnel is at a pressure of 0.92 atm. When a test model is placed in the test section, what pressure altitude is being simulated for this model?

## Basic Aerodynamics

Mathematics up to the present day have been quite useless to us in regard to flying.

From the 14th Annual Report of the Aeronautical Society of Great Britain,  
1879

Mathematical theories from the happy hunting grounds of pure mathematicians are found suitable to describe the airflow produced by aircraft with such excellent accuracy that they can be applied directly to airplane design.

*Theodore von Karman, 1954*

Consider an airplane flying at an altitude of 3 km (9840 ft) at a velocity of 112 m/s (367 ft/s or 251 mi/h). At a given point on the wing, the pressure and airflow velocity are specific values, dictated by the laws of nature. One objective of the science of aerodynamics is to decipher these laws and to give us methods to calculate the flow properties. In turn, such information lets us calculate practical quantities, such as the lift and drag on the airplane. Another example is the flow through a rocket engine of a given size and shape. If this engine is sitting on the launch pad at Cape Canaveral and given amounts of fuel and oxidizer are ignited in the combustion chamber, the flow velocity and pressure at the nozzle exit are again specific values, dictated by the laws of nature. The basic principles of aerodynamics allow us to calculate the exit flow velocity and pressure, which, in turn, allow us to calculate the thrust. For reasons such as these, the study of aerodynamics is vital to the overall understanding of flight. The purpose of this chapter is to introduce the basic laws and concepts of aerodynamics and show how they are applied to solving practical problems.

---

## PREVIEW BOX

At the beginning of Ch. 2), we imagined a vehicle flying through the atmosphere, and one of the first thoughts was that there is a rush of air over the vehicle. This rush of air generates an aerodynamic force on the vehicle. This is an example of aerodynamics in action. We went on to say that aerodynamics was one of the four major disciplines that go into the design of a flight vehicle, the others being flight dynamics, propulsion, and structures.

What is aerodynamics? *The American Heritage Dictionary of the English Language* defined aerodynamics as “the dynamics of gases, especially of atmospheric interactions with moving objects.” What does this mean? *Dynamics* means motion. Gases are a squishy substance. Is aerodynamics the dynamics of a squishy substance? To some extent, yes. In contrast, this book is a solid object; it is easy to pick it up and throw it across the room. In so doing, you can easily track its velocity, acceleration, and path through the air. This involves the dynamics of a solid body and is a subject you might be somewhat familiar with from a previous study of physics. But just try to scoop up a handful of air and throw *it* across the room. Doesn’t make sense, does it? The air, being a squishy substance, is just going to flow through your fingers and go nowhere. Obviously, the dynamics of air (or a fluid in general) is different than the dynamics of a solid body. Aerodynamics requires a whole new intellectual perspective. A purpose of this chapter is to give you some of this new perspective.

So, how do you get air to move? It obviously does: When an airplane streaks past you, the air flows over the airplane and basically does everything necessary to get out of the way of the airplane. From a different perspective, imagine that you are riding inside the airplane, and the airplane is flying at 400 mi/h. If you look ahead, you see the atmospheric air coming toward you at 400 mi/h. Then it flows up, down, and around the airplane, locally accelerating and decelerating as it passes over the fuselage, wings, and tail and through the engines. The air does more than this. It also creates a pressure distribution and a shear stress distribution over the surface of the airplane that results in aerodynamic lift and drag exerted on the vehicle (see again Sec. 2.2). So the air moves,

and we repeat the question: How do you get the air to move? Keep reading this chapter to find out.


Many engineers and scientists have spent their professional lifetimes working on aerodynamics, so aerodynamics must be important. Moreover, there is a lot to aerodynamics. This chapter is long, one of the longest in the book, because there is a lot to aerodynamics and because it is important. Aerodynamics is the dominant feature that drives the external shape of any flight vehicle. You can hardly take your first step into aerospace engineering without serious consideration and understanding of aerodynamics. The purpose of this chapter is to help you take this first step and obtain some understanding of aerodynamics. In this chapter you will learn how to get air to move. You will learn how to predict the pressure exerted on the surface of a body immersed in the flow and how this pressure is related to the velocity of the air. You will learn about the high-speed flow of air, with velocities greater than the speed of sound (supersonic flow), and about shock waves that frequently occur in supersonic flow. You will learn how to measure the flight speed of an airplane during flight. You will learn why the nozzles of rocket engines are shaped the way they are (all due to aerodynamics). You will learn about many applications of aerodynamics, but you will have to learn some of the fundamentals—the concepts and equations—of aerodynamics in the first part of this chapter before you can deal with applications. For all these reasons, this chapter is important; please treat it with serious study.

A word of caution: This chapter is going to be a challenge to you. Most likely the subject matter is different from what you have dealt with before. There are a lot of new concepts, ideas, and ways of looking at things. There are a lot of new equations to help describe all this new stuff. The material is definitely not boring, and it can be great fun if you let it be. Expect it to be different, and go at it with enthusiasm. Simply read on, and step through the door into the world of aerodynamics.

The road map for this chapter is given in Fig. 4.1. Let us walk through this road map to get a better idea of what this chapter on aerodynamics is all about. First, we can identify two basic types of aerodynamic flows: (1) flow with no friction (called *inviscid* flow) and (2) flow with friction (called *viscous* flow). These two types of flow are represented by the two boxes

shown near the top of the road map. This is an important distinction in aerodynamics. Any real-life aerodynamic flow has friction acting on the fluid elements moving within the flow field. However, in many practical aerodynamic problems the influence of this internal friction is very small, and it can be neglected. Such flows can be *assumed* to have *no* friction and hence can be analyzed as *inviscid flows*. This is an idealization, but for many problems a good one. By not dealing with friction, the analysis of the flow is usually simplified. However, for some flows the influence of friction is dominant, and it must be included in any analysis of such flows. The inclusion of friction usually makes the analysis of the flow more complicated.

This chapter deals with *basics*. We will start out with the [page 136](#) statement of three fundamental physical principles from physics:

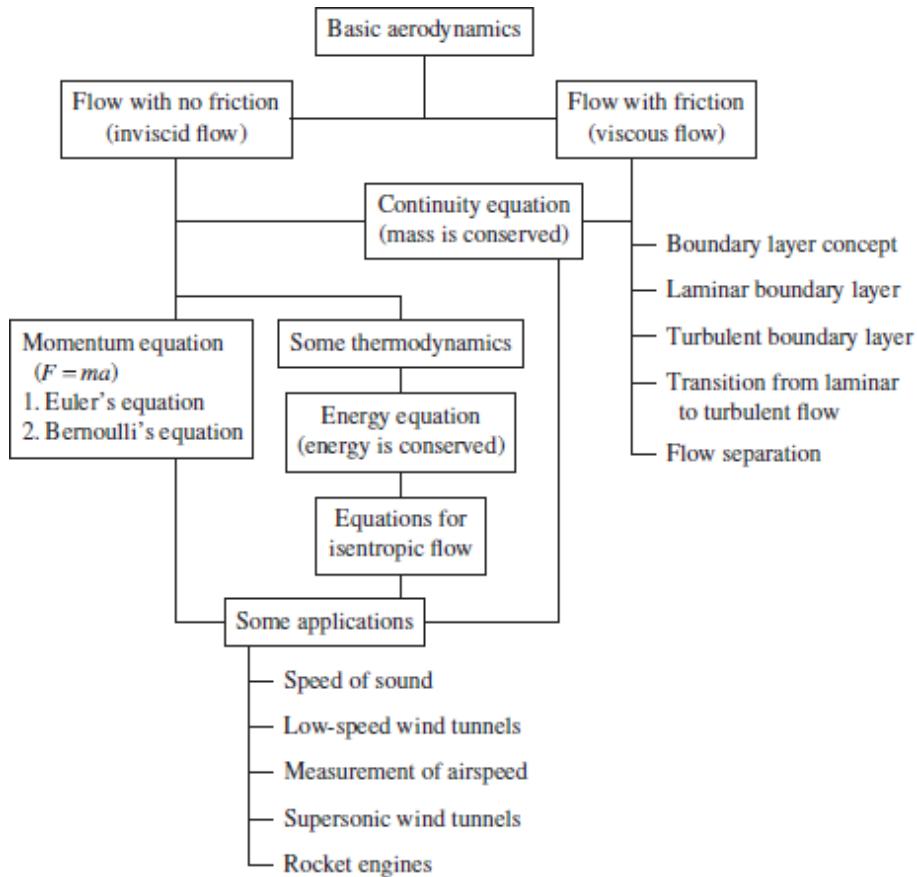

**Figure 4.1** Road map for this chapter.

1. Mass is conserved.

2. Newton's second law (force = mass  $\times$  acceleration) holds.
3. Energy is conserved.


When these fundamental principles are applied to an aerodynamic flow, certain equations result, which, in mathematical language, are statements of these principles. We will see how this can be accomplished. We will start with the physical principle that mass is conserved and obtain a governing equation labeled the *continuity equation*. This is represented by the center box in Fig. 4.1. The continuity equation says, in mathematical symbols, that mass is conserved in an aerodynamic flow. Mass is conserved whether or not the flow involves friction. Hence, the continuity equation is equally applicable to both types of flow, and that is why it is centered beneath the top two boxes in Fig. 4.1. We will then work our way down the left side of the road map, making the assumption of an inviscid flow. We will invoke Newton's second law and obtain the momentum equation for an inviscid flow, called *Euler's equation* (pronounced like "oilers"). A specialized but important form of Euler's equation is Bernoulli's famous equation. Then we will invoke the principle of conservation of energy and obtain the energy equation for a flow. However, because the science of energy is *thermodynamics*, we have to first examine some basic concepts of thermodynamics.

After the basic equations are in hand, we will continue down the left side of Fig. 4.1 with some applications for inviscid flows, ranging from the speed of sound to wind tunnels and rocket engines.

Finally, we will move to the right side of our road map and discuss some important aspects of viscous flows. We will introduce the idea of a viscous *boundary layer*, the region of flow immediately adjacent to a solid surface, where friction is particularly dominant. We will examine two types of viscous flows with quite different natures—*laminar* flow and *turbulent* flow—and how a laminar flow transitions to a turbulent flow. We will discuss the impact of these flows on the aerodynamic drag on a body. Finally, we will see how a viscous aerodynamic flow can actually lift off (separate) from the surface—the phenomenon of *flow separation*.

This has been a rather long discussion of a somewhat intricate road map. However, the author's experience has been that readers being introduced to the world of basic aerodynamics can find the subject matter sometimes bewildering. In reality, aerodynamics is a beautifully organized intellectual subject, and the road map in Fig. 4.1 is designed to prevent some of the

possible bewilderment. As we progress through this chapter, it will be important for you to frequently return to this road map for guidance and orientation.

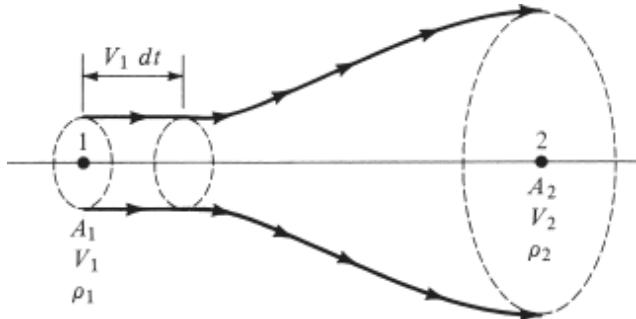

**Figure 4.2** Stream tube with mass conservation.

## 4.1 CONTINUITY EQUATION

The laws of aerodynamics are formulated by applying several basic principles from physics to a flowing gas. For example,

Physical principle: Mass can be neither created nor destroyed.<sup>1</sup>

To apply this principle to a flowing gas, consider an imaginary circle drawn perpendicular to the flow direction, as shown in Fig. 4.2. Now look at all the streamlines that go through the circumference of the circle. These streamlines form a tube, called a *stream tube*. As we move along with the gas confined inside the stream tube, we see that the cross-sectional area of the tube may change, say, in moving from point 1 to point 2 in Fig. 4.2. However, as long as the flow is steady (invariant with time), the mass that flows through the cross section at point 1 must be the same as the mass that flows through the cross section at point 2, because by the definition of a streamline, there can be no flow across streamlines. The mass flowing through the stream tube is confined by the streamlines of the boundary, much as the flow of water through a flexible garden hose is confined by the wall of the hose. This is a case of “what goes in one end must come out the other end.”

Let  $A_1$  be the cross-sectional area of the stream tube at point 1. [page 137](#)  
Let  $V_1$  be the flow velocity at point 1. Now, at a given instant in time, consider all the fluid elements that are momentarily in the plane of  $A_1$ .


After a lapse of time  $dt$ , these same fluid elements all move a distance  $V_1 dt$ , as shown in Fig. 4.2. In so doing, the elements have swept out a volume  $A_1 V_1 dt$  downstream of point 1. The mass of gas  $dm$  in this volume is equal to the density times the volume; that is,

$$dm = \rho_1 (A_1 V_1 dt) \quad (4.1)$$

This is the mass of gas that has *swept through* area  $A_1$  during time interval  $dt$ .

**Definition:** The *mass flow*  $\dot{m}$  through area  $A$  is the mass crossing  $A$  per unit time.

<sup>1</sup>Of course, Einstein has shown that  $e = mc^2$ , and hence mass is truly not conserved in situations where energy is released. However, for any noticeable change in mass to occur, the energy release must be tremendous, such as occurs in a nuclear reaction. We are generally not concerned with such a case in practical aerodynamics.

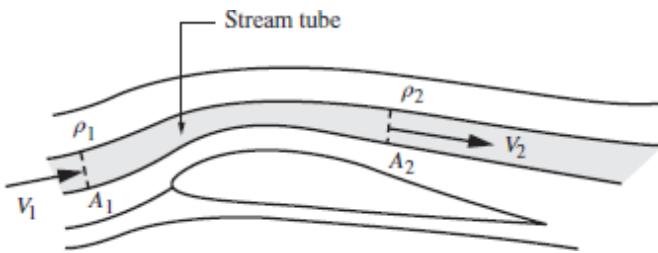

**Figure 4.3** A stream tube.

Therefore, from Eq. (4.1), for area  $A_1$ ,

$$\text{Mass flow} = \frac{dm}{dt} \equiv \dot{m}_1 = \rho_1 A_1 V_1 \quad \text{kg/s or slugs/s}$$

Also, the mass flow through  $A_2$ , bounded by the same streamlines that go through the circumference of  $A_1$ , is obtained in the same fashion, as

$$\dot{m}_2 = \rho_2 A_2 V_2$$

Because mass can be neither created nor destroyed, we have  $\dot{m}_1 = \dot{m}_2$ . Hence

$$\boxed{\rho_1 A_1 V_1 = \rho_2 A_2 V_2} \quad (4.2) \quad \text{page 138}$$

This is the *continuity equation* for steady fluid flow. It is a simple algebraic equation that relates the values of density, velocity, and area at one section


of the stream tube to the same quantities at any other section.

There is a caveat in the previous development. In Fig. 4.2, velocity  $V_1$  is assumed to be uniform over the entire area  $A_1$ . Similarly, the density  $\rho_1$  is assumed to be uniform over area  $A_1$ . In the same vein,  $V_2$  and  $\rho_2$  are assumed to be uniform over area  $A_2$ . In real life, this is an approximation; in reality,  $V$  and  $\rho$  vary across the cross-sectional area  $A$ . However, when using Eq. (4.2), we assume that  $\rho$  and  $V$  represent *mean* values of density and velocity over the cross-sectional area  $A$ . For many flow applications, this is quite reasonable. The continuity equation in the form of Eq. (4.2) is a workhorse in the calculation of flow through all types of ducts and tubes, such as wind tunnels and rocket engines.

The stream tube sketched in Fig. 4.2 does not have to be bounded by a solid wall. For example, consider the streamlines of flow over an airfoil, as sketched in Fig. 4.3. The space between two adjacent streamlines, such as the shaded space in Fig. 4.3, is a stream tube. Equation (4.2) applies to the stream tube in Fig. 4.3, where  $\rho_1$  and  $V_1$  are appropriate mean values over  $A_1$ , and  $\rho_2$  and  $V_2$  are appropriate values over  $A_2$ .

## 4.2 INCOMPRESSIBLE AND COMPRESSIBLE FLOWS

Before we proceed, it is necessary to point out that all matter in real life is *compressible* to some greater or lesser extent. That is, if we take an element of matter and squeeze it hard enough with some pressure, the volume of the element of matter will decrease. However, its mass will stay the same. This is shown schematically in Fig. 4.4. As a result, the *density*  $\rho$  of the element changes as it is squeezed. The amount by which  $\rho$  changes depends on the nature of the material of the element and how hard we squeeze it—that is, the magnitude of the pressure. If the material is solid, such as steel, then the change in volume is insignificantly small and  $\rho$  is constant for all practical purposes. If the material is a liquid, such as water, then the change in volume is also very small and again  $\rho$  is essentially constant. (Try pushing a tight-fitting lid into a container of liquid, and you will find out just how “solid” the liquid can be.) But if the material is a gas, the volume can readily change and  $\rho$  can be a variable.

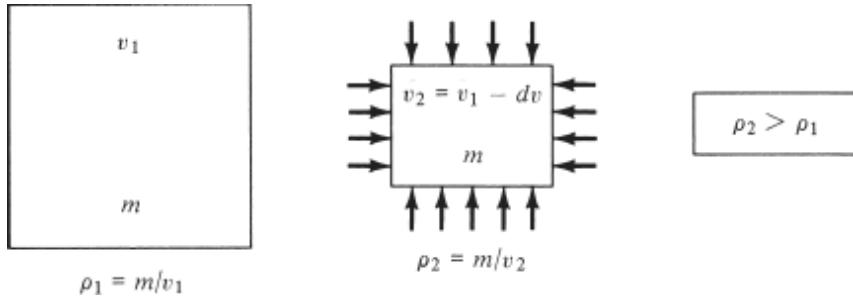

**Figure 4.4** Illustration of compressibility.

The preceding discussion allows us to characterize two classes of aerodynamic flow: compressible flow and incompressible flow.

1. *Compressible flow*—flow in which the density of the fluid elements can change from point to point. Referring to Eq. (4.2), we see if the flow is compressible,  $\rho_1 \neq \rho_2$ . The variability of density in aerodynamic flows is particularly important at high speeds, such as for high-performance subsonic aircraft, all supersonic vehicles, and rocket engines. Indeed, all real-life flows, strictly speaking, are compressible. However, in some circumstances the density changes only slightly. These circumstances lead to the second definition.
2. *Incompressible flow*—flow in which the density of the fluid elements is always constant.<sup>2</sup> Referring to Eq. (4.2), we see if the flow is incompressible,  $\rho_1 = \rho_2$ ; hence

$$A_1 V_1 = A_2 V_2 \quad (4.3)$$


Incompressible flow is a myth. It can never actually occur in nature, as previously discussed. However, for those flows in which the actual variation of  $\rho$  is negligibly small, it is convenient to make the *assumption* that  $\rho$  is constant, to simplify our analysis. (Indeed, it is an everyday activity of engineering and physical science to make idealized assumptions about real physical systems in order to make such systems amenable to analysis. However, care must always be taken not to apply results obtained from such idealizations to real problems in which the assumptions are grossly inaccurate or inappropriate.) The assumption of incompressible flow is an excellent approximation for the flow of liquids, such as water or oil. Moreover, the low-speed flow of air, where  $V < 100$  m/s (or  $V < 225$  mi/h) can also be assumed to be incompressible to a close approximation. A

glance at Fig. 1.30 shows that such velocities were the domain of almost all airplanes from the *Wright Flyer* (1903) to the late 1930s. Hence, the early development of aerodynamics always dealt with incompressible flows, and for this reason there exists a huge body of incompressible-flow literature with its attendant technology. At the end of this chapter we will be able to prove *why* airflow at velocities less than 100 m/s can be safely assumed to be incompressible.

---

page 140

<sup>2</sup> In more advanced studies of aerodynamics, you will find that the definition of incompressible flow is given by a more general statement. For the purposes of this book, we will consider incompressible flow to be constant-density flow.

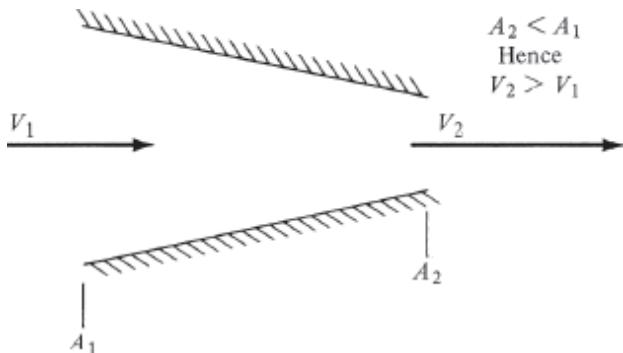

**Figure 4.5** Incompressible flow in a convergent duct.

In solving and examining aerodynamic flows, you will constantly be making distinctions between incompressible and compressible flows. It is important to develop that habit now, because there are some striking quantitative and qualitative differences between the two types of flow.

As a parenthetical comment, for incompressible flow, Eq. (4.3) explains why all common garden-hose nozzles are convergent shapes, such as shown in Fig. 4.5. From Eq. (4.3),

$$V_2 = \frac{A_1}{A_2} V_1$$

If  $A_2$  is less than  $A_1$ , then the velocity increases as the water flows through the nozzle, as desired. The same principle is used in the design of nozzles for subsonic wind tunnels built for aerodynamic testing, as will be discussed in Sec. 4.10.

## EXAMPLE 4.1

Consider a convergent duct with an inlet area  $A_1 = 5 \text{ m}^2$ . Air enters this duct with a velocity  $V_1 = 10 \text{ m/s}$  and leaves the duct exit with a velocity  $V_2 = 30 \text{ m/s}$ . What is the area of the duct exit?

### ■ Solution

[page 141](#)

Because the flow velocities are less than 100 m/s, we can assume incompressible flow. From Eq. (4.3),

$$\begin{aligned} A_1 V_1 &= A_2 V_2 \\ A_2 &= A_1 \frac{V_1}{V_2} = (5 \text{ m}^2) \frac{10}{30} = 1.67 \text{ m}^2 \end{aligned}$$

[page 142](#)

## EXAMPLE 4.2

Consider a convergent duct with an inlet area  $A_1 = 3 \text{ ft}^2$  and an exit area  $A_2 = 2.57 \text{ ft}^2$ . Air enters this duct with a velocity  $V_1 = 700 \text{ ft/s}$  and a density  $\rho_1 = 0.002 \text{ slug/ft}^3$ , and air leaves with an exit velocity  $V_2 = 1070 \text{ ft/s}$ . Calculate the density of the air  $\rho_2$  at the exit.

### ■ Solution

An inlet velocity of 700 ft/s is a high-speed flow, and we assume that the flow has to be treated as compressible. This implies that the resulting value for  $\rho_2$  will be different from  $\rho_1$ . From Eq. (4.2),

$$\begin{aligned} \rho_1 A_1 V_1 &= \rho_2 A_2 V_2 \\ \text{or } \rho_2 &= \rho_1 \frac{A_1 V_1}{A_2 V_2} = 0.002 \frac{3(700)}{2.57(1070)} = 0.00153 \text{ slug/ft}^3 \end{aligned}$$

*Note:* The value of  $\rho_2$  is indeed different from  $\rho_1$ , which clearly indicates that the flow in this example is a compressible flow. If the flow were essentially incompressible, then the calculation of  $\rho_2$  from Eq. (4.2) would have produced a value essentially equal to  $\rho_1$ . But this is not the case. Keep in mind that Eq. (4.2) is more general than Eq. (4.3). Equation (4.2) applies


to both compressible and incompressible flows; Eq. (4.3) is valid for an incompressible flow only.

*Reminder:* In this example, and in all the worked examples in this book, we use consistent units in the calculations. Hence we do not need to explicitly show all the units carried with each term in the mathematical calculations, because we know the answer will be in the same consistent units. In this example, the calculation involves the continuity equation;  $A_1$  and  $A_2$  are given in  $\text{ft}^2$ ,  $V_1$  and  $V_2$  in  $\text{ft/s}$ , and  $\rho_1$  in  $\text{slug}/\text{ft}^3$ . When these numbers are fed into the equation, we know the answer for  $\rho_2$  will be in  $\text{slug}/\text{ft}^3$ . It has to be because we know the consistent units for density in the English engineering system are  $\text{slug}/\text{ft}^3$ .

---

## 4.3 MOMENTUM EQUATION

The continuity equation, Eq. (4.2), is only part of the story. For example, it says nothing about the pressure in the flow; yet we know, just from intuition, that pressure is an important flow variable. Indeed, differences in pressure from one point to another in the flow create forces that act on the fluid elements and cause them to move. Hence, there must be some relation between pressure and velocity, and that relation is derived in this section.

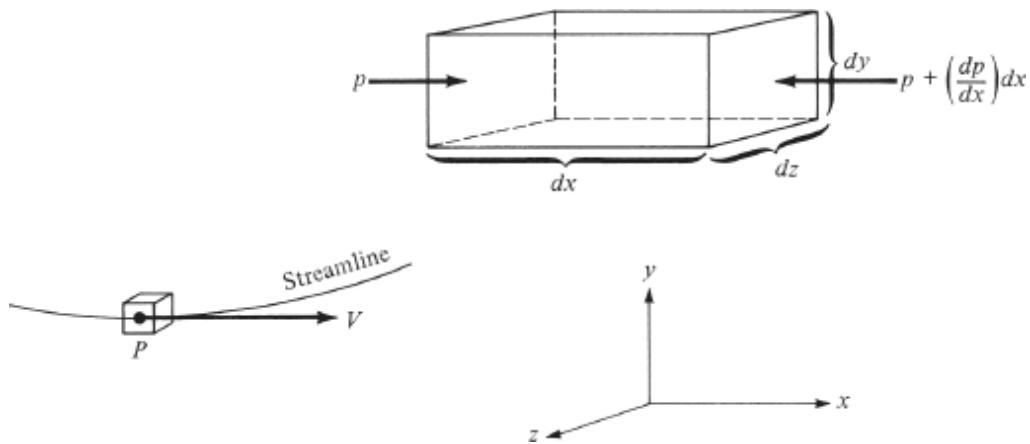

**Figure 4.6** Force diagram for the momentum equation.

Again we first state a fundamental law of physics—namely [page 143](#) Newton's second law.

Physical principle:

Force = mass  $\times$  acceleration

(4.4)

or

$$\mathbf{F} = m\mathbf{a}$$

To apply this principle to a flowing gas, consider an infinitesimally small fluid element moving along a streamline with velocity  $V$ , as shown in Fig. 4.6. At some given instant, the element is located at point  $P$ . The element is moving in the  $x$  direction, where the  $x$  axis is oriented parallel to the streamline at point  $P$ . The  $y$  and  $z$  axes are mutually perpendicular to  $x$ . The fluid element is infinitesimally small. However, looking at it through a magnifying glass, we see the picture shown at the upper right of Fig. 4.6. What is the force on this element? Physically, the force is a combination of three phenomena:

1. Pressure acting in a normal direction on all six faces of the element.
2. Frictional shear acting tangentially on all six faces of the element.
3. Gravity acting on the mass inside the element.

For the time being, we will ignore the presence of frictional forces; moreover, gravity is generally a small contribution to the total force. Therefore, we will assume that the only source of force on the fluid element is pressure.

To calculate this force, let the dimensions of the fluid element be  $dx$ ,  $dy$ , and  $dz$ , as shown in Fig. 4.6. Consider the left and right faces, which are perpendicular to the  $x$  axis. The pressure on the left face is  $p$ . The area of the left face is  $dy dz$ ; hence the force on the left face is  $p(dy dz)$ . This force is in the positive  $x$  direction. Now recall that pressure varies from point to point in the flow. Hence, there is some change in pressure per unit length, symbolized by the derivative  $dp/dx$ . Thus, if we move away from the left face by a distance  $dx$  along the  $x$  axis, the *change* in pressure is  $(dp/dx) dx$ . Consequently, the pressure on the right face is  $p + (dp/dx) dx$ . The area of the right face is also  $dy dz$ ; hence the force on the right face is  $[p + (dp/dx) dx](dy dz)$ . This force acts in the negative  $x$  direction, as shown in Fig. 4.6. The net force in the  $x$  direction  $F$  is the sum of the two:

$$F = p dy dz - \left( p + \frac{dp}{dx} dx \right) dy dz \quad (4.5) \text{ page 144}$$

or

$$F = -\frac{dp}{dx} (dx dy dz)$$

Equation (4.5) gives the force on the fluid element due to pressure. Because of the convenience of choosing the  $x$  axis in the flow direction, the pressures on the faces parallel to the streamlines do not affect the motion of the element along the streamline.

The mass of the fluid element is the density  $\rho$  multiplied by the volume  $dx dy dz$ :

$$m = \rho(dx dy dz) \quad (4.6)$$

Also, the acceleration  $a$  of the fluid element is, by definition of acceleration (rate of change of velocity),  $a = dV/dt$ . Noting that, also by definition,  $V = dx/dt$ , we can write

$$a = \frac{dV}{dt} = \frac{dV}{dx} \frac{dx}{dt} = \frac{dV}{dx} V \quad (4.7)$$

Equations (4.5) to (4.7) give the force, mass, and acceleration, respectively, that go into Newton's second law, Eq. (4.4):

$$\mathbf{F} = ma \quad (4.8)$$

$$-\frac{dp}{dx}(dx dy dz) = \rho(dx dy dz) V \frac{dV}{dx}$$

or


$$dp = -\rho V dV$$

Equation (4.8) is *Euler's equation*. Basically, it relates rate of change of momentum to force; hence it can also be designated as the *momentum equation*. It is important to keep in mind the assumptions utilized in obtaining Eq. (4.8): We neglected friction and gravity. For flow that is frictionless, aerodynamicists sometimes use another term, *inviscid flow*. Equation (4.8) is the momentum equation for inviscid (frictionless) flow. Moreover, the flow field is assumed to be steady—that is, invariant with respect to time.

Please note that Eq. (4.8) relates pressure and velocity (in reality, it relates a change in pressure  $dp$  to a change in velocity  $dV$ ). Equation (4.8) is a differential equation, and hence it describes the phenomena in an infinitesimally small neighborhood around the given point  $P$  in Fig. 4.6. Now consider two points, 1 and 2, far removed from each other in the flow but on the same streamline. To relate  $p_1$  and  $V_1$  at point 1 to  $p_2$  and  $V_2$  at the other, far-removed point 2, Eq. (4.8) must be integrated between points 1 and 2. This integration is different depending on whether the flow is compressible or incompressible. Euler's equation itself, Eq. (4.8), holds for

both cases. For compressible flow,  $\rho$  in Eq. (4.8) is a variable; for incompressible flow,  $\rho$  is a constant.

page 145

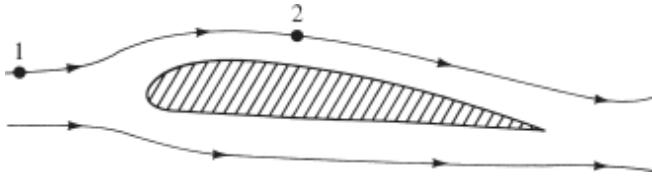

**Figure 4.7** Two points at different locations along a streamline.

First consider the case of incompressible flow. Let points 1 and 2 be located along a given streamline, such as that shown over an airfoil in Fig. 4.7. From Eq. (4.8),

$$dp + \rho V dV = 0$$

where  $\rho = \text{constant}$ . Integrating between points 1 and 2, we obtain

$$\begin{aligned} \int_{p_1}^{p_2} dp + \rho \int_{V_1}^{V_2} V dV &= 0 \\ p_2 - p_1 + \rho \left( \frac{V_2^2}{2} - \frac{V_1^2}{2} \right) &= 0 \\ p_2 + \rho \frac{V_2^2}{2} &= p_1 + \rho \frac{V_1^2}{2} \end{aligned} \quad (4.9a)$$

$$p + \rho \frac{V^2}{2} = \text{const along streamline} \quad (4.9b)$$

Either form, Eq. (4.9a) or (4.9b), is called *Bernoulli's equation*. Historically, Bernoulli's equation is one of the most fundamental equations in fluid mechanics.

The following important points should be noted:

1. Equations (4.9a) and (4.9b) hold only for inviscid (frictionless), incompressible flow.
2. Equations (4.9a) and (4.9b) relate properties between different points along a streamline.
3. For a compressible flow, Eq. (4.8) must be used, with  $\rho$  treated as a variable. Bernoulli's equation *must not* be used for compressible flow.

4. Remember that Eqs. (4.8) and (4.9a) and (4.9b) say that  $F = ma$  for a fluid flow. They are essentially Newton's second law applied to fluid dynamics.

To return to Fig. 4.7, if all the streamlines have the same values of  $p$  and  $V$  far upstream (far to the left in Fig. 4.7), then the constant in Bernoulli's equation is the *same for all streamlines*. This would be the case, for example, if the flow far upstream were uniform flow, such as that encountered in flight through the atmosphere and in the test sections of well-designed wind tunnels. In such cases, Eqs. (4.9a) and (4.9b) are not limited to the same streamline. Instead, points 1 and 2 can be anywhere in the flow, even on different streamlines.

For the case of compressible flow also, Euler's equation, Eq. [page 146](#) (4.8), can be integrated between points 1 and 2; however, because  $\rho$  is a variable, we must in principle have some extra information about how  $\rho$  varies with  $V$  before the integration can be carried out. This information can be obtained; however, there is an alternative, more convenient route to treating many practical problems in compressible flow that does not explicitly require use of the momentum equation. Hence, in this case, we will not pursue the integration of Eq. (4.8) further.

## 4.4 A COMMENT

It is important to make a philosophical distinction between the nature of the equation of state, Eq. (2.3), and the flow equations of continuity, Eq. (4.2), and momentum, such as Eq. (4.9a). The equation of state relates  $p$ ,  $T$ , and  $\rho$  to one another at the *same* point; in contrast, the flow equations relate  $\rho$  and  $V$  (as in the continuity equation) and  $p$  and  $V$  (as in Bernoulli's equation) at one point in the flow to the same quantities at another point in the flow. There is a basic difference here; keep it in mind when setting up the solution of aerodynamic problems.

### EXAMPLE 4.3

Consider an airfoil (the cross section of a wing, as shown in Fig. 4.7) in a flow of air, where far ahead (upstream) of the airfoil, the pressure, velocity, and density are  $2116 \text{ lb}/\text{ft}^2$ ,  $100 \text{ mi}/\text{h}$ , and  $0.002377 \text{ slug}/\text{ft}^3$ , respectively. At

a given point  $A$  on the airfoil, the pressure is  $2070 \text{ lb/ft}^2$ . What is the velocity at point  $A$ ?

### ■ Solution

First we must deal in consistent units;  $V_1 = 100 \text{ mi/h}$  is *not* in consistent units. However, a convenient relation to remember is that  $60 \text{ mi/h} = 88 \text{ ft/s}$ . Hence  $V_1 = 100(88/60) = 146.7 \text{ ft/s}$ . This velocity is low enough that we can assume incompressible flow. Hence Bernoulli's equation, Eq. (4.9), is valid:

$$p_1 + \frac{\rho V_1^2}{2} = p_A + \frac{\rho V_A^2}{2}$$

Thus,

$$\begin{aligned} V_A &= \left[ \frac{2(p_1 - p_A)}{\rho} + V_1^2 \right]^{1/2} \\ &= \left[ \frac{2(2116 - 2070)}{0.002377} + (146.7)^2 \right]^{1/2} \end{aligned}$$

$$V_A = 245.4 \text{ ft/s}$$

### EXAMPLE 4.4

Consider the same convergent duct and conditions as in Example [page 147](#) 4.1. If the air pressure and temperature at the inlet are  $p_1 = 1.2 \times 10^5 \text{ N/m}^2$  and  $T_1 = 330 \text{ K}$ , respectively, calculate the pressure at the exit.

### ■ Solution

[page 148](#)

First we must obtain the density. From the equation of state,

$$\rho_1 = \frac{p_1}{RT_1} = \frac{1.2 \times 10^5}{287(330)} = 1.27 \text{ kg/m}^3$$

Still assuming incompressible flow, we find from Eq. (4.9)

$$p_1 + \frac{\rho V_1^2}{2} = p_2 + \frac{\rho V_2^2}{2}$$


$$\begin{aligned} p_2 &= p_1 + \frac{1}{2}\rho(V_1^2 - V_2^2) = 1.2 \times 10^5 + (\frac{1}{2})(1.27)(10^2 - 30^2) \\ p_2 &= 1.195 \times 10^5 \text{ N/m}^2 \end{aligned}$$

*Note:* In accelerating from 10 to 30 m/s, the air pressure decreases only a small amount, less than 0.45 percent. This is a characteristic of very low-velocity airflow.

### EXAMPLE 4.5

Consider a long dowel with a semicircular cross section, as sketched in Fig. 4.8a. The dowel is immersed in a flow of air, with its axis perpendicular to the flow, as shown in perspective in Fig. 4.8a. The rounded section of the dowel is facing into the flow, as shown in Fig. 4.8a and 4.8b. We call this rounded section the *front face* of the dowel. The radius of the semicircular cross section is  $R = 0.5$  ft. The velocity of the flow far ahead of the dowel (called the *free stream*) is  $V_\infty = 100$  ft/s. Assume inviscid flow; that is, neglect the effect of friction. The velocity of the flow along the surface of the rounded front face of the dowel is a function of location on the surface; location is denoted by angle  $\theta$  in Fig. 4.8b. Hence, along the front rounded surface,  $V = V(\theta)$ . This variation is given by

$$V = 2V_\infty \sin\theta \quad (\text{E 4.5.1})$$

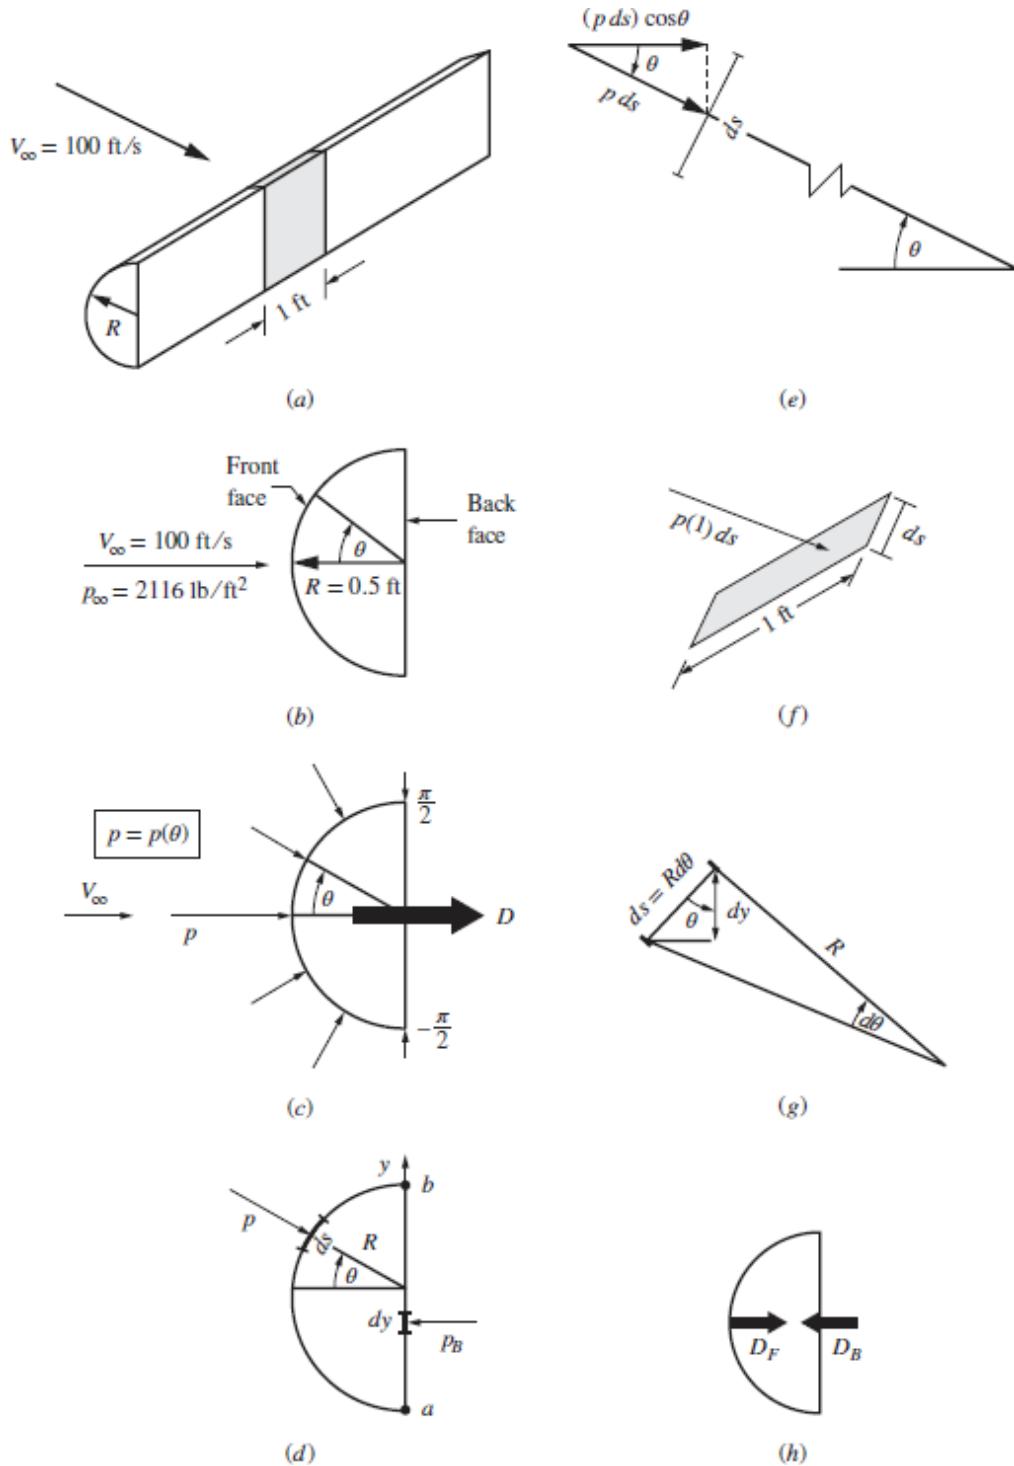

**Figure 4.8** Diagrams for the construction of the aerodynamic force on a dowel (Example 4.5).

The pressure distribution exerted over the surface of the cross section is sketched in Fig. 4.8c. On the front face,  $p$  varies with location along the

surface, where the location is denoted by the angle  $\theta$ ; that is,  $p = p(\theta)$  on the front face. On the flat back face, the pressure, denoted by  $p_B$ , is constant. The back face pressure is given by

$$p_B = p_\infty - 0.7 \rho_\infty V_\infty^2 \quad (\text{E 4.5.2})$$

where  $p_\infty$  and  $\rho_\infty$  are the pressure and density, respectively, in the free stream, far ahead of the dowel. The free-stream density is given as  $\rho_\infty = 0.002378$  slug/ft<sup>3</sup>. Calculate the aerodynamic force exerted by the surface pressure distribution (illustrated in Fig. 4.8c) on a 1-ft segment of the dowel, shown by the shaded section in Fig. 4.8a.

### ■ Solution

For this solution, we appeal to the discussions in Secs. 2.2 and 4.3. Examine Fig. 4.8c. Because of the symmetry of the semicircular cross section, the pressure distribution over the upper surface is a mirror image of the pressure distribution over the lower surface; that is,  $p = p(\theta)$  for  $0 \leq \theta \leq \pi/2$  is the same as  $p = p(\theta)$  for  $0 \geq \theta \geq -\pi/2$ . Owing to this symmetry, there is no net force on the cross section in the direction perpendicular to the free stream; that is, the force due to the pressure pushing down on the upper surface is exactly canceled by the equal and opposite force due to the pressure pushing up on the lower surface. Therefore, owing to this symmetry, the resultant aerodynamic force is parallel to the free-stream direction. This resultant aerodynamic force is illustrated by the arrow labeled  $D$  in Fig. 4.8c.

Before feeding the numbers into our calculation, we obtain an analytical formula for  $D$  in terms of  $V_\infty$  and  $R$ , as follows. Our calculations will proceed in a number of logical steps.

#### Step One: Calculation of the force due to pressure acting on the front face.

Here we will integrate the pressure distribution over the surface area of the front face. We will set up an expression for the pressure force acting on an infinitesimally small element of surface area, take the component of this force in the horizontal flow direction (the direction of  $V_\infty$  in Fig. 4.8), and then integrate this expression over the surface area of the front face. Consider the infinitesimal arclength segment of the surface  $ds$  and the pressure  $p$  exerted locally on this segment, as drawn in Fig. 4.8d. A magnified view of this segment is shown in Fig. 4.8e. Recall from Fig. 4.8a that we wish to calculate the aerodynamic force on a 1-ft length of the

dowel, as shown by the shaded region in Fig. 4.8a. As part of the shaded region, consider a small sliver of area of width  $ds$  and length equal to 1 ft on the curved face of the dowel, as shown in Fig. 4.8f. The surface area of this sliver is  $1 ds$ . The force due to the pressure  $p$  on this area is  $p(1) ds = p ds$ . This force is shown in Fig. 4.8e, acting perpendicular to the segment  $ds$ . The component of this force in the horizontal direction is  $(p ds) \cos \theta$ , also shown in Fig. 4.8e. From the geometric construction shown in Fig. 4.8g, we have

$$ds = R d\theta \quad (\text{E 4.5.3})$$

and the vertical projection of  $ds$ , denoted by  $dy$ , is given by

$$dy = ds \cos \theta \quad (\text{E 4.5.4})$$

Substituting Eq. (E 4.5.3) into Eq. (E 4.5.4), we have

$$dy = R \cos \theta d\theta \quad (\text{E 4.5.5})$$

We put Eq. (E 4.5.5) on the shelf temporarily. It will be used later, in Step Two of this calculation. However, we use Eq. (E 4.5.3) immediately, as follows.

In light of Eq. (E 4.5.3), the horizontal force  $(p ds)\cos \theta$  in Fig. 4.8e can be expressed as

$$(p ds) \cos \theta = pR \cos \theta d\theta \quad (\text{E 4.5.6})$$

Returning to Fig. 4.8c, we see that the net horizontal force exerted by the pressure distribution on the rounded front face is the integral of Eq. (E 4.5.6) over the front surface. Denote this force by  $DF$ .

$$DF = \int_{-\pi/2}^{\pi/2} pR \cos \theta d\theta \quad (\text{E 4.5.7})$$

This force is shown in Fig. 4.8h.

page 151

In Eq. (E 4.5.7),  $p$  is obtained from Bernoulli's equation, Eq. (4.9), written between a point in the free stream where the pressure and velocity are  $p_\infty$  and  $V_\infty$ , respectively, and the point on the body surface where the pressure and velocity are  $p$  and  $V$ , respectively.

$$p_\infty + \frac{1}{2}\rho V_\infty^2 = p + \frac{1}{2}\rho V^2 \quad (\text{E 4.5.8})$$

or

$$p = p_\infty + \frac{1}{2}\rho(V_\infty^2 - V^2)$$

*Note:* We can use Bernoulli's equation for this solution because the free-stream velocity of  $V_\infty = 100$  ft/s is low, and we can comfortably assume that

the flow is incompressible. Also, because  $\rho$  is constant, the value of  $\rho$  in Eq. (E 4.5.8) is the same as  $\rho_\infty$  in the free stream. Substituting Eq. (E 4.5.8) into Eq. (E 4.5.7), we have

$$D_F = \int_{-\pi/2}^{\pi/2} \left[ p_\infty + \frac{1}{2} \rho (V_\infty^2 - V^2) \right] R \cos\theta \, d\theta \quad (\text{E 4.5.9})$$

Recall that the variation of the surface velocity is given by Eq. (E 4.5.1), repeated here:

$$V = 2V_\infty \sin\theta \quad (\text{E 4.5.1})$$

Substituting Eq. (E 4.5.1) into Eq. (E 4.5.9), we have

$$D_F = \int_{-\pi/2}^{\pi/2} \left[ p_\infty + \frac{1}{2} \rho (V_\infty^2 - 4V_\infty^2 \sin^2\theta) \right] R \cos\theta \, d\theta \quad (\text{E 4.5.10})$$

or  $D_F = \int_{-\pi/2}^{\pi/2} \left[ p_\infty + \frac{1}{2} \rho V_\infty^2 (1 - 4 \sin^2\theta) \right] R \cos\theta \, d\theta$

Let us put this expression for  $D_F$  on the shelf for a moment; we will come back to it shortly.

### **Step Two: Calculation of the force due to pressure acting on the page 152 back face.**

Here we will integrate the pressure distribution over the surface area of the back face. Similar to Step One, we will set up an expression for the pressure force acting on an infinitesimally small element of surface area and then integrate this expression over the surface area of the back face.

Returning to Fig. 4.8c, we now direct our attention to the pressure on the back face of the cross section  $pB$ . This pressure exerts a force  $DB$  on the 1-ft length of dowel, as sketched in Fig. 4.8h. Force  $DB$  acts toward the left, opposite to the direction of  $DF$ . Pressure  $pB$  is constant over the back face. The rectangular area of the 1-ft length of the back face is  $(1)(2R)$ . Because  $pB$  is constant over this back face, we can directly write

$$D_B = (1)(2R)p_B \quad (\text{E 4.5.11})$$

However, because the resultant aerodynamic force on the cross section is given by  $DF - DB$ , as seen in Fig. 4.8h, and because  $DF$  is expressed in terms of an integral in Eq. (E 4.5.10), it will be convenient to couch  $DB$  in terms of an integral also, as follows. Returning to Fig. 4.8d, we consider a segment of the back surface area of height  $dy$  on which  $pB$  is exerted. Over a 1-ft length of dowel (perpendicular to the page in Fig. 4.8d), the area of a small sliver of surface is  $1 dy$ , and the force on this sliver is  $pB(1) dy$ . The

total force on the back face is obtained by integrating with respect to  $y$  from point  $a$  to point  $b$ , as noted in Fig. 4.8d:

$$D_B = \int_a^b p_B(1) dy \quad (\text{E 4.5.12})$$

However, recall from Eq. (E 4.5.5) that  $dy = R \cos \theta d\theta$ . Hence Eq. (E 4.5.12) becomes

$$D_B = \int_{-\pi/2}^{\pi/2} p_B R \cos \theta d\theta \quad (\text{E 4.5.13})$$

Please note that Eqs. (E 4.5.13) and (E 4.5.11) are both valid expressions for  $D_B$ —they just look different. To see this, carry out the integration in Eq. (E 4.5.13); you will obtain the result in Eq. (E 4.5.11). Also recall that  $p_B$  is given by Eq. (E 4.5.2), repeated here (and dropping the subscript  $\infty$  on  $\rho$  because  $\rho$  is constant):

$$p_B = p_\infty - 0.7\rho V_\infty^2 \quad (\text{E 4.5.2})$$

Hence Eq. (E 4.5.13) becomes

$$D_B = \int_{-\pi/2}^{\pi/2} (p_\infty - 0.7\rho V_\infty^2) R \cos \theta d\theta \quad (\text{E 4.5.14})$$

### Step Three: Calculation of the resultant aerodynamic force.

Here we will combine the results obtained in Steps One and Two. In Step One, we obtained an expression for the pressure force acting on the front face. In Step Two, we obtained an expression for the pressure force acting on the back face. Because the force on the front face acts in one direction and the force on the back face acts in the opposite direction, as shown in Fig. 4.8h, the net, resultant aerodynamic force is the difference between the two.

page 153

### DESIGN BOX

The results of Example 4.5 illustrate certain aspects important to the general background of airplane design:

1. It reinforces the important point made in Sec. 2.2—namely that the resultant aerodynamic force exerted on any object immersed in a flowing fluid is due *only* to the net integration of the pressure distribution and the shear stress distribution exerted all over the body surface. In Example 4.5 we assumed the flow to be inviscid; that is, we neglected the effect of friction. So the resultant

aerodynamic force was due to just the integrated effect of the pressure distribution over the body surface. This is precisely how we calculated the force on the dowel in Example 4.5—we integrated the pressure distribution over the surface of the dowel. Instead of a dowel, if we had dealt with a Boeing 747 jumbo jet, the idea would have been the same. In airplane design, the shape of the airplane is influenced by the desire to create a surface pressure distribution that will minimize drag while at the same time creating the necessary amount of lift. We return to this basic idea several times throughout the book.

2. Equation (E 4.5.17) shows that the aerodynamic force on the body is
  - (a) Directly proportional to the density of the fluid  $\rho$ .
  - (b) Directly proportional to the *square* of the free-stream velocity:  

$$D \propto V_{\infty}^2$$
  - (c) Directly proportional to the *size* of the body, as reflected by the radius  $R$ .

These results are not specialized to the dowel in Example 4.5; they are much more general in their application. We will see in Ch. 5) that the aerodynamic force on airfoils, wings, and whole airplanes is indeed proportional to  $\rho_{\infty}$ ,  $V_{\infty}^2$ , and the size of the body, where size is couched in terms of a surface area. [In Eq. (E 4.5.17),  $R$  really represents an area equal to  $R(1)$  for the unit length of the dowel over which the aerodynamic force is calculated.] It is interesting to note that Eq. (E 4.5.17) does not contain the free-stream pressure  $p_{\infty}$ . Indeed,  $p_{\infty}$  canceled out in our derivation of Eq. (E 4.5.17). This is not just a characteristic of the dowel used in Example 4.5; in general, we will see in Ch. 5) that we do not need the explicit value of free-stream pressure to calculate the aerodynamic force on a flight vehicle, despite the fact that the aerodynamic force fundamentally is due (in part) to the *pressure* distribution over the surface. In the final result, it is always the value of the free-stream density  $\rho_{\infty}$  that appears in the expressions for aerodynamic force, not  $p_{\infty}$ .

Returning to Fig. 4.8h, we see that the resultant aerodynamic force  $D$  is given by

$$D = D_F - D_B \quad (\text{E 4.5.15})$$

Substituting Eqs. (E 4.5.10) and (E 4.5.14) into Eq. (E 4.5.15), we have

$$\begin{aligned} D &= \int_{-\pi/2}^{\pi/2} \left[ p_\infty + \frac{1}{2} \rho V_\infty^2 (1 - 4 \sin^2 \theta) \right] R \cos \theta \, d\theta \\ &\quad - \int_{-\pi/2}^{\pi/2} (p_\infty - 0.7 \rho V_\infty^2) R \cos \theta \, d\theta \end{aligned} \quad (\text{E 4.5.16})$$

Combining the two integrals in Eq. (E 4.5.16) and noting that the [page 154](#) two terms involving  $p_\infty$  cancel, we have

$$\begin{aligned} D &= \int_{-\pi/2}^{\pi/2} \left[ \left( \frac{1}{2} \rho + 0.7 \rho \right) V_\infty^2 - 2 \rho V_\infty^2 \sin^2 \theta \right] R \cos \theta \, d\theta \\ &= 1.2 \rho V_\infty^2 R \int_{-\pi/2}^{\pi/2} \cos \theta \, d\theta - 2 \rho V_\infty^2 R \int_{-\pi/2}^{\pi/2} \sin^2 \theta \cos \theta \, d\theta \\ &= 2.4 \rho V_\infty^2 R - 2 \rho V_\infty^2 R \left[ \frac{\sin^3 \theta}{3} \right]_{-\pi/2}^{\pi/2} \\ &= 2.4 \rho V_\infty^2 R - 2 \rho V_\infty^2 R \left( \frac{1}{3} + \frac{1}{3} \right) = 1.067 \rho V_\infty^2 R \end{aligned}$$

Highlighting the preceding result, we have just derived an analytical expression for the aerodynamic force  $D$ , per unit length of the dowel. It is given by

$$D = 1.067 \rho V_\infty^2 R \quad (\text{E 4.5.17})$$

Putting in the numbers given in the problem, where  $\rho = \rho_\infty = 0.002378$  slug/ft<sup>3</sup>,  $V_\infty = 100$  ft/s, and  $R = 0.5$  ft, we obtain from Eq. (E 4.5.17)

$$D = (1.067)(0.002377)(100)^2(0.5) = 12.68 \text{ lb per foot of length of dowel.}$$


---

## 4.5 ELEMENTARY THERMODYNAMICS

As stated earlier, when the airflow velocity exceeds 100 m/s, the flow can no longer be treated as incompressible. Later we will restate this criterion in terms of the *Mach number*, which is the ratio of the flow velocity to the speed of sound, and we will show that the flow must be treated as compressible when the Mach number exceeds 0.3. This is the situation with the vast majority of current aerodynamic applications; hence the study of compressible flow is of extreme importance.


A high-speed flow of gas is also a high-energy flow. The kinetic energy of the fluid elements in a high-speed flow is large and must be taken into

account. When high-speed flows are slowed down, the consequent reduction in kinetic energy appears as a substantial increase in temperature. As a result, high-speed flows, compressibility, and vast energy changes are all related. Thus, to study compressible flows, we must first examine some of the fundamentals of energy changes in a gas and the consequent response of pressure and temperature to these energy changes. Such fundamentals are the essence of the science of thermodynamics.

Here the assumption is made that the reader is not familiar with thermodynamics. Therefore, the purpose of this section is to introduce those ideas and results of thermodynamics that are absolutely necessary for our further analysis of high-speed, compressible flows. *Caution:* The material in Secs. 4.5 to 4.7 can be intimidating; if you find it hard to understand, do not worry—you are in good company. Thermodynamics is a sophisticated and extensive subject; we are just introducing some basic ideas and equations here. View these sections as an intellectual challenge, and study them with an open mind.

---

page 155

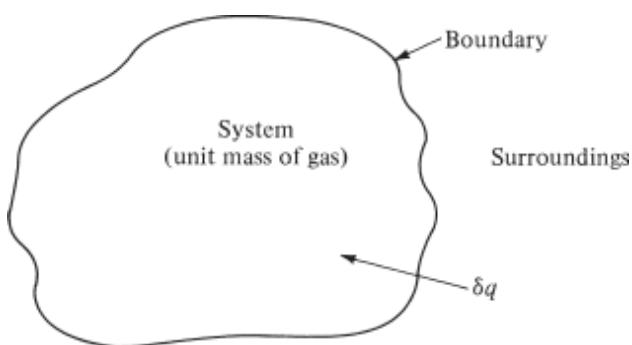

**Figure 4.9** System of unit mass.

The pillar of thermodynamics is a relationship called the *first law*, which is an empirical observation of natural phenomena. It can be developed as follows. Consider a fixed mass of gas (for convenience, say a unit mass) contained within a flexible *boundary*, as shown in Fig. 4.9. This mass is called the *system*, and everything outside the boundary is the *surroundings*. Now, as in Ch. 2), consider the gas that makes up the system to be composed of individual molecules moving about with random motion. The energy of this molecular motion, summed over all the molecules in the system, is called the *internal energy* of the system. Let  $e$  denote the internal

energy per unit mass of gas. The *only* means by which  $e$  can be increased (or decreased) are the following:


1. Heat is added to (or taken away from) the system. This heat comes from the surroundings and is added to the system across the boundary. Let  $\delta q$  be an incremental amount of heat added per unit mass.
2. Work is done on (or by) the system. This work can be manifested by the boundary of the system being pushed in (work done on the system) or pushed out (work done by the system). Let  $\delta w$  be an incremental amount of work done on the system per unit mass.

Also, let  $de$  be the corresponding change in internal energy per unit mass. Then, simply on the basis of common sense, confirmed by laboratory results, we can write

$$\boxed{\delta q + \delta w = de} \quad (4.10)$$

Equation (4.10) is termed the *first law of thermodynamics*. It is an energy equation stating that the change in internal energy is equal to the sum of the heat added to and the work done on the system. (Note in the previous discussion that  $\delta$  and  $d$  both represent infinitesimally small quantities; however,  $d$  is a “perfect differential” and  $\delta$  is not.)

Equation (4.10) is very fundamental; however, it is not in a practical form for use in aerodynamics, which speaks in terms of pressures, velocities, and the like. To obtain more useful forms of the first law, we must first derive an expression for  $\delta w$  in terms of  $p$  and  $v$  (specific volume), as follows. Consider the system sketched in Fig. 4.10. Let  $dA$  be an incremental surface area of the boundary. Assume that work  $\Delta W$  is being done on the system by  $dA$  being pushed in a small distance  $s$ , as also shown in Fig. 4.10. Because work is defined as force times distance, we have

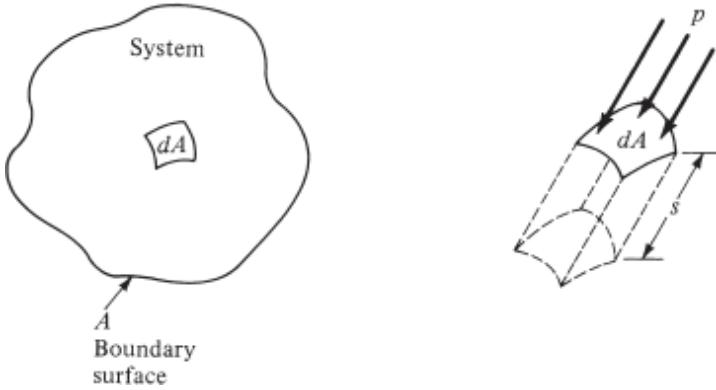

**Figure 4.10** Work being done on the system by pressure.

$$\Delta W = (\text{force})(\text{distance}) \quad (4.11)$$

$$\Delta W = (p \, dA)s$$

Now assume that many elemental surface areas of the type shown in Fig. 4.10 are distributed over the total surface area  $A$  of the boundary. Also assume that all the elemental surfaces are being simultaneously displaced a small distance  $s$  into the system. Then the total work  $\delta w$  done on the unit mass of gas inside the system is the sum (integral) of each elemental surface over the whole boundary; that is, from Eq. (4.11),

$$\delta w = \int_A (p \, dA)s = \int_A s \, dA \quad (4.12)$$

Assume that  $p$  is constant everywhere in the system (which, in thermodynamic terms, contributes to a state of thermodynamic equilibrium). Then, from Eq. (4.12),

$$\delta w = p \int_A s \, dA \quad (4.13)$$

The integral  $\int_A s \, dA$  has physical meaning. Geometrically, it is the change in volume of the unit mass of gas inside the system, created by the boundary surface being displaced inward. Let  $dv$  be the change in volume. Because the boundary is pushing in, the volume decreases ( $dv$  is a negative quantity) and work is done on the gas (hence  $\delta w$  is a positive quantity in our development). Thus

$$\int_A s \, dA \equiv -dv \quad (4.14)$$

Substituting Eq. (4.14) into Eq. (4.13), we obtain

$\delta w = -pdv$

(4.15)

Equation (4.15) gives the relation for work done strictly in terms of the thermodynamic variables  $p$  and  $v$ .

When Eq. (4.15) is substituted into Eq. (4.10), the first law becomes

$$\delta q = de + p dv \quad (4.16)$$

Equation (4.16) is an alternative form of the first law of thermodynamics.

It is convenient to define a new quantity, called *enthalpy*  $h$ , as

$$h = e + pv = e + RT \quad (4.17)$$

where  $pv = RT$ , assuming a perfect gas. Then, differentiating the definition in Eq. (4.17), we find

$$dh = de + p dv + v dp \quad (4.18)$$

Substituting Eq. (4.18) into Eq. (4.16), we obtain

$$\delta q = de + p dv = (dh - p dv - v dp) + p dv \quad (4.19)$$

$$\boxed{\delta q = dh - v dp}$$

Equation (4.19) is yet another alternative form of the first law.


Before we go further, remember that a substantial part of science and engineering is simply the language. In this section we are presenting some of the language of thermodynamics essential to our future aerodynamic applications. We continue to develop this language.

Figures 4.9 and 4.10 illustrate systems to which heat  $\delta q$  is added and on which work  $\delta w$  is done. At the same time,  $\delta q$  and  $\delta w$  may cause the pressure, temperature, and density of the system to change. The way (or means) by which changes of the thermodynamic variables ( $p$ ,  $T$ ,  $\rho$ ,  $v$ ) of a system take place is called a *process*. For example, a *constant-volume process* is illustrated at the left in Fig. 4.11. Here the system is a gas inside a rigid boundary, such as a hollow steel sphere, and therefore the volume of the system always remains constant. If an amount of heat  $\delta q$  is added to this system,  $p$  and  $T$  will change. Thus, by definition, such changes take place at constant volume; this is a constant-volume process. Another example is given at the right in Fig. 4.11. Here the system is a gas inside a cylinder–piston arrangement. Consider that heat  $\delta q$  is added to the system, and at the same time assume the piston is moved in exactly the right way to maintain a constant pressure inside the system. When  $\delta q$  is added to this system,  $T$  and  $v$  (and hence  $\rho$ ) will change. By definition, such changes take place at

constant pressure; this is a constant-pressure process. Many different kinds of processes are treated in thermodynamics. These are only two examples.

The last concept to be introduced in this section is that of specific heat. Consider a system to which a small amount of heat  $\delta q$  is added. The addition of  $\delta q$  will cause a small change in temperature  $dT$  of the system. By definition, *specific heat* is the heat added per unit change in temperature of the system. Let  $c$  denote specific heat. Thus

page 158

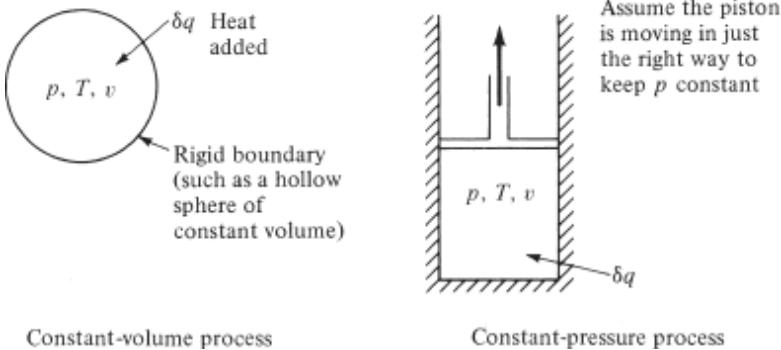

**Figure 4.11** Illustration of constant-volume and constant-pressure processes.

$$c \equiv \frac{\delta q}{dT}$$

However, with this definition,  $c$  is multivalued. That is, for a fixed quantity  $\delta q$ , the resulting value of  $dT$  can be different, depending on the type of process in which  $\delta q$  is added. In turn, the value of  $c$  depends on the type of process. Therefore, in principle we can define more precisely a different specific heat for each type of process. We will be interested in only two types of specific heat, one at constant volume and the other at constant pressure, as follows.

If the heat  $\delta q$  is added at *constant volume* and it causes a change in temperature  $dT$ , the *specific heat at constant volume*  $c_v$  is defined as

$$c_v \equiv \left( \frac{\delta q}{dT} \right)_{\text{constant volume}} \quad (4.20)$$

or

$$\delta q = c_v dT \text{ (constant volume)}$$

In contrast, if  $\delta q$  is added at constant pressure and it causes a change in temperature  $dT$  (whose value is different from the preceding  $dT$ ), the *specific heat at constant pressure*  $c_p$  is defined as

$$c_p \equiv \left( \frac{\delta q}{dT} \right)_{\text{constant pressure}} \quad (4.21)$$

or

$$\delta q = c_p dT \text{ (constant pressure)}$$

The preceding definitions of  $c_v$  and  $c_p$ , when combined with the first law, yield useful relations for internal energy  $e$  and enthalpy  $h$  as follows. First consider a constant-volume process, where by definition  $dv = 0$ . Thus, from the alternative form of the first law, Eq. (4.16),

$$\delta q = de + p dv = de + 0 = de \quad (4.22) \quad \underline{\text{page 159}}$$

Substituting the definition of  $c_v$ , Eq. (4.20), into Eq. (4.22), we get

$$de = c_v dT \quad (4.23)$$

By assuming that  $c_v$  is a constant, which is reasonable for air at normal conditions, and letting  $e = 0$  when  $T = 0$ , we may integrate Eq. (4.23) to

$$e = c_v T \quad (4.24)$$

Next consider a constant-pressure process, where by definition  $dp = 0$ . From the alternative form of the first law, Eq. (4.19),

$$\delta q = dh - v dp = dh - 0 = dh \quad (4.25)$$

Substituting the definition of  $c_p$ , Eq. (4.21), into Eq. (4.25), we find

$$dh = c_p dT \quad (4.26)$$

Again, assuming that  $c_p$  is constant and letting  $h = 0$  at  $T = 0$ , we see that Eq. (4.26) yields

$$h = c_p T \quad (4.27)$$

Equations (4.23) to (4.27) are very important relationships. They have been derived from the first law, into which the definitions of specific heat have been inserted. Look at them! They relate thermodynamic variables *only* ( $e$  to  $T$  and  $h$  to  $T$ ); work and heat do not appear in these equations. In fact, Eqs. (4.23) to (4.27) are quite general. Even though we used examples of constant volume and constant pressure to obtain them, they hold *in general* as long as the gas is a perfect gas (no intermolecular forces). Hence, for *any* process,

$$\begin{aligned}de &= c_v dT \\dh &= c_p dT \\e &= c_v T \\h &= c_p T\end{aligned}$$

This generalization of Eqs. (4.23) to (4.27) to any process may not seem logical and may be hard to accept; nevertheless, it is valid, as can be shown by good thermodynamic arguments beyond the scope of this book. For the remainder of our discussions, we will make frequent use of these equations to relate internal energy and enthalpy to temperature.

### EXAMPLE 4.6

Calculate the internal energy and enthalpy, per unit mass, for air at [page 160](#) standard sea-level conditions in (a) SI units and (b) English engineering units. For air at standard conditions,  $c_v = 720 \text{ J/(kg)(K)} = 4290 \text{ ft} \cdot \text{lb}/(\text{slug})(^{\circ}\text{R})$ , and  $c_p = 1008 \text{ J/(kg)(K)} = 6006 \text{ ft} \cdot \text{lb}/(\text{slug})(^{\circ}\text{R})$ .

#### ■ Solution

At standard sea level, the air temperature is

$$T = 288 \text{ K} = 519^{\circ}\text{R}$$

a. From Eqs. (4.24) and (4.27), we have

$$\begin{aligned}e &= c_v T = (720)(288) = 2.07 \times 10^5 \text{ J/kg} \\h &= c_p T = (1008)(288) = 2.90 \times 10^5 \text{ J/kg}\end{aligned}$$

b. Also from Eqs. (4.24) and (4.27),

$$\begin{aligned}e &= c_v T = (4290)(519) = 2.23 \times 10^6 \text{ ft} \cdot \text{lb/slug} \\h &= c_p T = (6006)(519) = 3.12 \times 10^6 \text{ ft} \cdot \text{lb/slug}\end{aligned}$$

*Note:* For a perfect gas,  $e$  and  $h$  are functions of temperature only, as emphasized in this worked example. If you know the temperature of the gas, you can directly calculate  $e$  and  $h$  from Eqs. (4.24) and (4.27). You do not have to be concerned whether the gas is going through a constant-volume process, a constant-pressure process, or whatever. Internal energy and

enthalpy are state variables—that is, properties that depend only on the local state of the gas as described, in this case, by the given temperature of the gas.

### EXAMPLE 4.7

Consider air inside a cylinder, with a piston at the top of the cylinder. The internal energy of the air inside the cylinder is  $4 \times 10^5$  J. The piston moves into the cylinder by a distance sufficient to do  $2 \times 10^5$  J of work on the system. At the same time,  $6 \times 10^5$  J of heat are added to the system. Calculate the internal energy of the air after the work is done and the heat added.

#### ■ Solution

This example is almost trivial, but it is intended to illustrate the use of the first law of thermodynamics. Equation (4.10) is expressed in terms of infinitesimally small quantities of heat added,  $\delta q$ , and work done,  $\delta w$ . It holds, however, for any quantities of heat and work. Let  $\Delta W$  be the total amount of work done on the system,  $\Delta Q$  the total heat added to the system from the surroundings, and  $\Delta E$  the resulting finite change in internal energy. The first law of thermodynamics, Eq. (4.10), can be expressed as

$$\Delta Q + \Delta W = \Delta E \quad (4.7.1)$$

In this example,  $\Delta Q = 6 \times 10^5$  J and  $\Delta W = 2 \times 10^5$  J. Hence, from Eq. (4.7.1),

$$\Delta E = E_2 - E_1 = \Delta Q + \Delta W = 6 \times 10^5 + 2 \times 10^5 = 8 \times 10^5 \text{ J}$$

Because  $E_1$  is given as  $4 \times 10^5$  J, then

$$E_2 = E_1 + \Delta Q + \Delta W = 4 \times 10^5 + 8 \times 10^5 = \boxed{12 \times 10^5 \text{ J}}$$

In this example, nothing is said about the processes by which the [page 161](#) heat is added and work is done on the system. Because the values of both work and heat are given, we did not have to specify the process. Later we will see that to calculate  $\Delta w$  and  $\Delta q$  from the other changes in the system, we need to specify the type of process. Both  $\Delta w$  and  $\Delta q$  are process

dependent. But in this example we know up front the values of  $\Delta W$  and  $\Delta Q$ . This is all that is seen by the first law of thermodynamics, and all that is required to obtain the change in internal energy,  $\Delta E = E_2 - E_1$ .

---

## 4.6 ISENTROPIC FLOW

We are almost ready to return to our consideration of aerodynamics. However, we must introduce one more concept that bridges both thermodynamics and compressible aerodynamics—namely, that of *isentropic flow*.

First consider three more definitions:

An *adiabatic process* is one in which no heat is added or taken away:  $\delta q = 0$ .

A *reversible process* is one in which no frictional or other dissipative effects occur.

An *isentropic process* is one that is both adiabatic and reversible.

Thus, an isentropic process is one in which there is neither heat exchange nor any effect due to friction. (The source of the word *isentropic* is another defined thermodynamic variable called *entropy*. Entropy is constant for an isentropic process. A discussion of entropy is not vital to our discussion here; therefore, no further elaboration is given.)

Isentropic processes are very important in aerodynamics. For example, consider the flow of air over the airfoil shown in Fig. 4.7. Imagine a fluid element moving along one of the streamlines. *No* heat is being added or taken away from this fluid element; heat exchange mechanisms such as heating by a flame, cooling in a refrigerator, or intense radiation absorption are all ruled out by the nature of the physical problem we are considering. Thus, the flow of the fluid element along the streamline is *adiabatic*. At the same time, the shearing stress exerted on the surface of the fluid element due to friction is generally quite small and can be neglected (except very near the surface, as will be discussed later). Thus, the flow is also *frictionless*. [Recall that this same assumption was used in obtaining the momentum equation, Eq. (4.8).] Hence, the flow of the fluid element is both adiabatic and reversible (frictionless); that is, the flow is *isentropic*. Other

aerodynamic flows can also be treated as isentropic, such as the flows through wind tunnel nozzles and rocket engines.

Note that even though the flow is adiabatic, the temperature need [page 162](#) not be constant. Indeed, the temperature of the fluid element can vary from point to point in an adiabatic, compressible flow. This is because the volume of the fluid element (of fixed mass) changes as it moves through regions of different density along the streamline; when the volume varies, work is done [Eq. (4.15)], hence the internal energy changes [Eq. (4.10)], and hence the temperature changes [Eq. (4.23)]. This argument holds for compressible flows, where the density is variable. In contrast, for incompressible flow, where  $\rho = \text{constant}$ , the volume of the fluid element of fixed mass does not change as it moves along a streamline; hence no work is done and no change in temperature occurs. If the flow over the airfoil in Fig. 4.7 were incompressible, the entire flow field would be at constant temperature. For this reason, temperature is not an important quantity for frictionless incompressible flow. Moreover, our present discussion of isentropic flows is relevant to *compressible* flows only, as explained in the following.

An isentropic process is more than just another definition. It gives us several important relationships among the thermodynamic variables  $T$ ,  $p$ , and  $\rho$  at two different points (say, points 1 and 2 in Fig. 4.7) along a given streamline. These relations are obtained as follows. Because the flow is isentropic (adiabatic and reversible),  $\delta q = 0$ . Thus, from Eq. (4.16),

$$\begin{aligned}\delta q &= de + p dv = 0 \\ -p dv &= de\end{aligned}\tag{4.28}$$

Substitute Eq. (4.23) into (4.28):

$$-p dv = c_v dT\tag{4.29}$$

In the same manner, using the fact that  $\delta q = 0$  in Eq. (4.19), we also obtain

$$\begin{aligned}\delta q &= dh - v dp = 0 \\ v dp &= dh\end{aligned}\tag{4.30}$$

Substitute Eq. (4.26) into (4.30):

$$v dp = c_p dT\tag{4.31}$$

Divide Eq. (4.29) by (4.31):

$$\frac{-p \, dv}{v \, dp} = \frac{c_v}{c_p} \quad (4.32)$$

or

$$\frac{dp}{p} = -\frac{c_p}{c_v} \frac{dv}{v}$$

The ratio of specific heats  $cp/cv$  appears so frequently in compressible flow equations that it is given a symbol all its own, usually  $\gamma$ ;  $cp/cv \equiv \gamma$ . For air at normal conditions, which exist for the applications treated in this book, both  $cp$  and  $cv$  are constants, and hence  $\gamma = \text{constant} = 1.4$  (for air). Also,  $cp/cv \equiv \gamma = 1.4$  (for air at normal conditions). Thus, Eq. (4.32) can be written as

$$\frac{dp}{p} = -\gamma \frac{dv}{v} \quad (4.33) \quad \text{page 163}$$

Referring to Fig. 4.7, we integrate Eq. (4.33) between points 1 and 2:

$$\begin{aligned} \int_{p_1}^{p_2} \frac{dp}{p} &= -\gamma \int_{v_1}^{v_2} \frac{dv}{v} \\ \ln \frac{p_2}{p_1} &= -\gamma \ln \frac{v_2}{v_1} \\ \frac{p_2}{p_1} &= \left( \frac{v_2}{v_1} \right)^{-\gamma} \end{aligned} \quad (4.34)$$

Because  $v_1 = 1/\rho_1$  and  $v_2 = 1/\rho_2$ , Eq. (4.34) becomes

$$\boxed{\frac{p_2}{p_1} = \left( \frac{\rho_2}{\rho_1} \right)^{\gamma} \quad \text{isentropic flow}} \quad (4.35)$$

From the equation of state, we have  $\rho = p/(RT)$ . Thus, Eq. (4.35) yields

$$\begin{aligned} \frac{p_2}{p_1} &= \left( \frac{p_2}{RT_2} \frac{RT_1}{p_1} \right)^{\gamma} \\ \left( \frac{p_2}{p_1} \right)^{1-\gamma} &= \left( \frac{T_1}{T_2} \right)^{\gamma} = \left( \frac{T_2}{T_1} \right)^{-\gamma} \\ \text{or} \quad \boxed{\frac{p_2}{p_1} = \left( \frac{T_2}{T_1} \right)^{\gamma(\gamma-1)} \quad \text{isentropic flow}} \end{aligned} \quad (4.36)$$

Combining Eqs. (4.35) and (4.36), we obtain

$$\boxed{\frac{p_2}{p_1} = \left( \frac{\rho_2}{\rho_1} \right)^{\gamma} = \left( \frac{T_2}{T_1} \right)^{\gamma(\gamma-1)} \quad \text{isentropic flow}} \quad (4.37)$$

The relationships given in Eq. (4.37) are powerful. They provide important information for  $p$ ,  $T$ , and  $\rho$  between two different points on a streamline in an isentropic flow. Moreover, if the streamlines all emanate from a uniform

flow far upstream (far to the left in Fig. 4.7), then Eq. (4.37) holds for any two points in the flow, not necessarily those on the same streamline.

We emphasize again that the isentropic flow relations, Eq. (4.37), are relevant to compressible flows only. By contrast, the assumption of incompressible flow (remember, incompressible flow is a myth, anyway) is not consistent with the same physics that went into the development of Eq. (4.37). To analyze incompressible flows, we need only the continuity equation [say, Eq. (4.3)] and the momentum equation [Bernoulli's equation, Eqs. (4.9a) and (4.9b)]. To analyze compressible flows, we need the continuity equation, Eq. (4.2), the momentum equation [Euler's equation, Eq. (4.8)], and another soon-to-be-derived relation called the *energy equation*. If the compressible flow is isentropic, then Eq. (4.37) can be used to replace either the momentum or the energy equation. Because Eq. (4.37) is a simpler, more useful algebraic relation than Euler's equation, Eq. (4.8), which is a differential equation, we frequently use Eq. (4.37) in place of Eq. (4.8) for the analysis of compressible flows in this book.

As just mentioned, to complete the development of the [page 164](#) fundamental relations for the analysis of compressible flow, we must now consider the energy equation.

### EXAMPLE 4.8

An airplane is flying at standard sea-level conditions. The temperature at a point on the wing is 250 K. What is the pressure at this point?

#### ■ Solution

The air pressure and temperature,  $p_1$  and  $T_1$ , far upstream of the wing correspond to standard sea level. Hence  $p_1 = 1.01 \times 10^5 \text{ N/m}^2$  and  $T_1 = 288.16 \text{ K}$ . Assume that the flow is isentropic (hence compressible). Then the relation between points 1 and 2 is obtained from Eq. (4.37):

$$\frac{p_2}{p_1} = \left( \frac{T_2}{T_1} \right)^{\gamma/(r-1)}$$

$$p_2 = p_1 \left( \frac{T_2}{T_1} \right)^{\gamma/(r-1)} = (1.01 \times 10^5) \left( \frac{250}{288.16} \right)^{1.4/(1.4-1)}$$

$p_2 = 6.14 \times 10^4 \text{ N/m}^2$

## EXAMPLE 4.9

In a rocket engine, the fuel and oxidizer are burned in the combustion chamber, and then the hot gas expands through a nozzle to high velocity at the exit of the engine. (Jump ahead and see the sketch of a rocket engine nozzle in Fig. 4.32.) The flow through the rocket engine nozzle downstream of the combustion chamber is isentropic. Consider the case when the pressure and temperature of the burned gas in the combustion chamber are 20 atm and 3500 K, respectively. If the pressure of the gas at the exit of the nozzle is 0.5 atm, calculate the gas temperature at the exit. *Note:* The combustion gas is not air, so the value for  $\gamma$  will be different than for air; that is,  $\gamma$  will *not* be equal to 1.4. For the combustion gas in this example,  $\gamma = 1.15$ .

### ■ Solution

From Eq. (4.36),

$$\frac{p_2}{p_1} = \left(\frac{T_2}{T_1}\right)^{\gamma/(y-1)}$$

where we will designate condition 1 to be the combustion chamber and condition 2 to be the nozzle exit. Hence  $p_1 = 20$  atm,  $T_1 = 3500$  K, and  $p_2 = 0.5$  atm. Rearranging Eq. (4.36), we have

$$T_2 = T_1 \left(\frac{p_2}{p_1}\right)^{(y-1)/\gamma} = 2500 \left(\frac{0.5}{20}\right)^{(1.15-1)/1.15} = 3500 (0.025)^{0.13} = \boxed{2167 \text{ K}}$$

page 165

*Question:* Atmospheres is a nonconsistent unit for pressure. Why did we not convert  $p_1$  and  $p_2$  to N/m<sup>2</sup> before inserting into Eq. (4.36)? The answer is that  $p_1$  and  $p_2$  appear as a *ratio* in the preceding calculation, namely  $p_1/p_2$ . As long as we use the *same* units for the numerator and the denominator, the ratio is the same value, independent of what units are used. To prove this, let us convert atmospheres to the consistent units of N/m<sup>2</sup>. One atmosphere is by definition the pressure at standard sea level. From the listing of sea-level properties in Sec. 3.4, we see that

$$1 \text{ atm} = 1.01 \times 10^5 \text{ N/m}^2 \quad (\text{rounded to three significant figures})$$

Thus

$$p_1 = 20(1.01 \times 10^5) = 2.02 \times 10^6 \text{ N/m}^2$$
$$p_2 = 0.5(1.01 \times 10^5) = 5.05 \times 10^4 \text{ N/m}^2$$

From Eq. (4.36),

$$T_2 = T_1 \left( \frac{p_2}{p_1} \right)^{(r-1)r} = 3500 \left( \frac{5.05 \times 10^4}{2.02 \times 10^6} \right)^{(1.15-1)/1.15} = 3500(0.025)^{0.13} = 2167 \text{ K}$$

which is the same answer as first obtained.

**EXAMPLE  
4.10**

A cylinder with a piston moving inside the cylinder, as considered in Example 4.7, is the basic power-producing mechanism in the reciprocating engine found in most automobiles and in many small general aviation aircraft. The basic principle of the reciprocating engine is described in Sec. 9.3, and the elements of a four-stroke engine cycle are sketched in Fig. 9.11. Without being concerned with the details (you will be able to digest and enjoy the details when you study Ch. 9)), just note that the four strokes are intake, compression, power, and exhaust. In particular, examine Fig. 9.11b, which illustrates the compression stroke. At the beginning of the compression stroke, the piston is at the bottom of the cylinder, and the cylinder is full of the gas-air mixture. Denote the volume of this mixture by  $V_2$ . When the piston has moved its maximum distance toward the top of the cylinder at the end of the compression stroke, the volume of the gas-air mixture above the piston is  $V_3$ . By definition, in an internal combustion engine, the all-important *compression ratio* is  $V_2/V_3$ . Consider the case where the fuel-air mixture has been brought into the cylinder at standard sea-level conditions during the intake stroke. The design compression ratio is 10. Calculate the pressure and temperature of the gas-air mixture in the cylinder at the end of the compression stroke, assuming that the compression process takes place isentropically. Because most of the mixture is air and very little is fuel (typical fuel-to-air ratios by mass are 0.05), it is safe to assume a value of  $\gamma = 1.4$ .

**■ Solution**

Denote conditions at the beginning of the compression stroke by the subscript 2 and those at the end of the stroke by the subscript 3. From Eq. (4.37) and the definition of specific volume,  $v$ , in Sec. 2.5, we have

$$\frac{p_3}{p_2} = \left(\frac{\rho_3}{\rho_2}\right)^r = \left[\frac{(1/v_3)}{(1/v_2)}\right]^r = \left(\frac{v_2}{v_3}\right)^r \quad (\text{E 4.10.1})$$

The specific volume is the volume per unit mass. Because the mass inside the cylinder is constant during the compression stroke, we can write  $v_2/v_3 = V_2/V_3$ . Hence, from Eq. (E 4.10.1), we have

$$\frac{p_3}{p_2} = \left(\frac{V_2}{V_3}\right)^r \quad (\text{E 4.10.2})$$

The compression ratio is 10. The gas-air mixture at the beginning of the compression stroke is at standard sea-level conditions, that is,  $p_2 = 1.02 \times 10^5 \text{ N/m}^2$ . From Eq. (E 4.10.2),

$$p_3 = p_2 \left(\frac{V_2}{V_3}\right)^r = (1.02 \times 10^5)(10)^{1.4} = 25.6 \times 10^5 \text{ N/m}^2$$

*Note:* Because we are dealing with ratios in the equation, we can use the nonconsistent unit of atmospheres for pressure, that is,  $p_2 = 1 \text{ atm}$ , and

$$p_3 = (1)(10)^{1.4} = 25.1 \text{ atm}$$

*Check:* Since  $1 \text{ atm} = 1.02 \times 10^5 \text{ N/m}^2$ , then

$$p_3 = (25.1) 1.02 \times 10^5 = 25.6 \times 10^5 \text{ N/m}^2$$

which agrees with our first answer.

To calculate the temperature at the end of the compression stroke, return to Eq. (4.37), where we can write

$$\left(\frac{\rho_3}{\rho_2}\right)^r = \left(\frac{T_3}{T_2}\right)^{r/(r-1)}$$

or,

$$\left(\frac{T_3}{T_2}\right) = \left(\frac{\rho_3}{\rho_2}\right)^{(r-1)} = \left(\frac{V_2}{V_3}\right)^{(r-1)}$$

At standard sea-level conditions,  $T_2 = 288 \text{ K}$ . Thus,

$$T_3 = T_2 \left( \frac{V_2}{V_3} \right)^{(y-1)} = 288(10)^{0.4} = 723 \text{ K}$$

It is interesting to note that during the isentropic compression process where the compression ratio is 10, the pressure increases by a much larger factor—a factor of 25.1—than the temperature, which increases by a factor of only 2.51.

**Comment** By way of the totally different examples in this section,<sup>page 167</sup> dealing with three different practical applications, we can begin to appreciate the importance of isentropic flow and isentropic changes in a system. This is just the beginning; we will see many other applications of isentropic flow as we proceed with our discussion of aerodynamics and propulsion.

## 4.7 ENERGY EQUATION

Recall that our approach to the derivation of the fundamental equations for fluid flow is to state a fundamental principle and then to proceed to cast that principle in terms of flow variables  $p$ ,  $T$ ,  $\rho$ , and  $V$ . Also recall that compressible flow, high-speed flow, and massive changes in energy go hand in hand. Therefore, the last fundamental physical principle that we must take into account is as follows:

Physical principle: Energy can be neither created nor destroyed. It can only change form.

In quantitative form, this principle is nothing more than the first law of thermodynamics, Eq. (4.10). To apply this law to fluid flow, consider again a fluid element moving along a streamline, as shown in Fig. 4.6. Let us apply the first law of thermodynamics

$$\delta q + \delta w = de$$

to this fluid element. Recall that an alternative form of the first law is Eq. (4.19):

$$\delta q = dh - v dp$$

Again we consider an adiabatic flow, where  $\delta q = 0$ . Hence, from Eq. (4.19),

$$dh - v dp = 0 \quad (4.38)$$

Recalling Euler's equation, Eq. (4.38),

$$dp = -\rho V dV$$

we can combine Eqs. (4.38) and (4.8) to obtain

$$dh + v\rho V dV = 0 \quad (4.39)$$

However,  $v = 1/\rho$ ; hence Eq. (4.39) becomes

$$dh + V dV = 0 \quad (4.40)$$

Integrating Eq. (4.40) between two points along the streamline, we obtain

page 168

$$\begin{aligned} \int_{h_1}^{h_2} dh + \int_{V_1}^{V_2} V dV &= 0 \\ h_2 - h_1 + \frac{V_2^2}{2} - \frac{V_1^2}{2} &= 0 \\ h_1 + \frac{V_1^2}{2} &= h_2 + \frac{V_2^2}{2} \\ h + \frac{V^2}{2} &= \text{const} \end{aligned} \quad (4.41)$$

Equation (4.41) is the energy equation for frictionless, adiabatic flow. We can write it in terms of  $T$  by using Eq. (4.27),  $h = cpT$ . Hence, Eq. (4.41) becomes

$$\begin{aligned} c_p T_1 + \frac{1}{2} V_1^2 &= c_p T_2 + \frac{1}{2} V_2^2 \\ c_p T + \frac{1}{2} V^2 &= \text{const} \end{aligned} \quad (4.42)$$

Equation (4.42) relates the temperature and velocity at two different points along a streamline. Again, if all the streamlines emanate from a uniform flow far upstream, then Eq. (4.42) holds for any two points in the flow, not necessarily on the same streamline. Moreover, Eq. (4.42) is just as powerful and necessary for the analysis of compressible flow as Eq. (4.37).

### EXAMPLE 4.11

A supersonic wind tunnel is sketched in Fig. 4.32. The air temperature and pressure in the reservoir of the wind tunnel are  $T_0 = 1000$  K and  $p_0 = 10$  atm, respectively. The static temperatures at the throat and exit are  $T^* = 833$  K

and  $T_e = 300$  K, respectively. The mass flow through the nozzle is 0.5 kg/s. For air,  $cp = 1008 \text{ J/(kg)(K)}$ . Calculate

- The velocity at the throat  $V^*$ .
- The velocity at the exit  $V_e$ .
- The area of the throat  $A^*$ .
- The area of the exit  $A_e$ .

### ■ Solution

Because the problem deals with temperatures and velocities, the energy equation seems useful.

- From Eq. (4.42), written between the reservoir and the throat,

$$c_p T_0 + \frac{1}{2} V_0^2 = c_p T^* + \frac{1}{2} V^*{}^2$$

However, in the reservoir,  $V_0 \approx 0$ . Hence

$$\begin{aligned} V^* &= \sqrt{2c_p(T_0 - T^*)} \\ &= \sqrt{2(1008)(1000 - 833)} = 580 \text{ m/s} \end{aligned}$$

page 169

- From Eq. (4.42), written between the reservoir and the exit,

$$\begin{aligned} c_p T_0 &= c_p T_e + \frac{1}{2} V_e^2 \\ V_e &= \sqrt{2c_p(T_0 - T_e)} \\ &= \sqrt{2(1008)(1000 - 300)} = 1188 \text{ m/s} \end{aligned}$$

- The basic equation dealing with mass flow and area is the continuity equation, Eq. (4.2). Note that the velocities are certainly large enough for us to consider the flow compressible, so Eq. (4.2), rather than Eq. (4.3), is appropriate:

$$\dot{m} = \rho^* A^* V^*$$

or

$$A^* = \frac{\dot{m}}{\rho^* V^*}$$

In the preceding,  $\dot{m}$  is given and  $V^*$  is known from part a. However,  $\rho^*$  must be obtained before we can calculate  $A^*$  as desired. To obtain  $\rho^*$ , note that, from the equation of state,

$$\rho_0 = \frac{p_0}{RT_0} = \frac{10(1.01 \times 10^5)}{287(1000)} = 3.52 \text{ kg/m}^3$$

Assuming that the nozzle flow is isentropic, which is a good approximation for the real case, from Eq. (4.37), we get

$$\left(\frac{\rho^*}{\rho_0}\right) = \left(\frac{T^*}{T_0}\right)^{1/(r-1)}$$

$$\rho^* = \rho_0 \left(\frac{T^*}{T_0}\right)^{1/(r-1)} = (3.52) \left(\frac{833}{1000}\right)^{1/(1.4-1)} = 2.23 \text{ kg/m}^3$$

Thus

$$A^* = \frac{\dot{m}}{\rho^* V^*} = \frac{0.5}{(2.23)(580)} = 3.87 \times 10^{-4} \text{ m}^2 = 3.87 \text{ cm}^2$$

**d.** Finding  $A_e$  is similar to the previous solution for  $A^*$

$$\dot{m} = \rho_e A_e V_e$$

where, for isentropic flow,

$$\rho_e = \rho_0 \left(\frac{T_e}{T_0}\right)^{1/(r-1)} = (3.52) \left(\frac{300}{1000}\right)^{1/(1.4-1)} = 0.174 \text{ kg/m}^3$$

or

$$A_e = \frac{\dot{m}}{\rho_e V_e} = \frac{0.5}{0.174(1188)} = 24.2 \times 10^{-4} \text{ m}^2 = 24.2 \text{ cm}^2$$

### EXAMPLE 4.12

Consider an airfoil in a flow of air, where far ahead of the airfoil (the free stream), the pressure, velocity, and density are 2116 lb/ft<sup>2</sup>, 500 mi/h, and 0.002377 slug/ft<sup>3</sup>, respectively. At a given point  $A$  on the airfoil, the pressure is 1497 lb/ft<sup>2</sup>. What is the velocity at point  $A$ ? Assume isentropic flow. For air,  $cp = 6006 \text{ ft} \cdot \text{lb}/(\text{slug})(^\circ\text{R})$ .

#### ■ Solution

page 170

This example is identical to Example 4.3, except here the velocity is 500 mi/h—high enough that we have to treat the flow as compressible, in contrast to Example 4.3, in which we dealt with incompressible flow.

Because the flow is isentropic, we can use Eq. (4.37) evaluated between the free stream and point  $A$ :

$$\frac{p_A}{p_\infty} = \left( \frac{T_A}{T_\infty} \right)^{r/(r-1)}$$

$$\text{or } \frac{T_A}{T_\infty} = \left( \frac{p_A}{p_\infty} \right)^{(r-1)/r} = \left( \frac{1497}{2116} \right)^{0.4/1.4} = (0.7075)^{0.286} = 0.9058$$

The value of  $T_\infty$  can be found from the equation of state:

$$T_\infty = \frac{p_\infty}{\rho_\infty R} = \frac{2116}{0.002377(1716)} = 519^\circ\text{R}$$

Hence

$$T_A = 0.9058(519) = 470.1^\circ\text{R}$$

From the energy equation, Eq. (4.42), evaluated between the free stream and point  $A$ , and noting that  $V_\infty = 500(88/60) = 733.3$  ft/s, we have

$$c_p T_\infty + \frac{V_\infty^2}{2} = c_p T_A + \frac{V_A^2}{2}$$

or

$$\boxed{V_A = \sqrt{2c_p(T_\infty - T_A) + V_\infty^2}} \\ = \sqrt{2(6006)(519 - 470.1) + (733.3)^2} = 1061 \text{ ft/s}$$

*Note:* The calculational procedure for this problem, where we are dealing with compressible flow, is completely different from that for Example 4.3, where we were dealing with incompressible flow. In Example 4.3, we could use Bernoulli's equation, which holds only for incompressible flow. *We cannot use Bernoulli's equation to solve the present problem because this is a compressible-flow problem and Bernoulli's equation is not valid for a compressible flow.* If we had used Bernoulli's equation to solve the present problem, following exactly the method in Example 4.3, we would have obtained a velocity of 1029 ft/s at point  $A$ —an *incorrect* answer. Check this yourself.

### EXAMPLE 4.13

Consider the Space Shuttle (see Figs. 2.24, 8.6, and 8.48) as it returns to earth after completing a mission in orbit. At a point on its entry path through the atmosphere, its velocity is 6.4 km/sec at an altitude of 60 km. At some point on the bottom surface, near the nose of the shuttle, the flow velocity is zero. This point is defined as a *stagnation point*. The stagnation point is usually the location of maximum temperature in the flow. The flow along the streamline that comes from the free stream and goes through the stagnation point is called the *stagnation streamline*. The flow along this streamline, as well as throughout the flow field, is adiabatic; no outside mechanism adds or takes away heat from a fluid element moving along the streamline. (The only exception is when the temperature of the fluid element becomes so hot that it loses significant energy by radiation, but this phenomenon is not important in the atmospheric reentry of the Space Shuttle.) Assuming a constant specific heat of  $c_p = 1008 \text{ J/(kg)(K)}$ , calculate the temperature of the air at the stagnation point. (How reasonable is the assumption of constant specific heat for this problem? We will discuss this matter at the end of the example.)

## ■ Solution

In Eq. (4.42), let point 1 denote the free stream and point 2 denote the stagnation point. We obtain the temperature of the free stream from the standard altitude table in App. A. Note that the altitude tabulation in App. A stops just short of 60 km. From App. A, at  $h = 59 \text{ km}$ ,  $T = 258.10 \text{ K}$ , and at  $h = 59.5 \text{ km}$ ,  $T = 255.89 \text{ K}$ . By linear extrapolation, at  $h = 60 \text{ km}$ , we have

$$T_1 = 255.89 - (258.10 - 255.89) = 253.68 \text{ K}$$

Returning to the energy equation,

$$c_p T_1 + \frac{1}{2} V_1^2 = c_p T_2 + \frac{1}{2} V_2^2 \quad (4.42)$$

Point 2 is the stagnation point, where by definition  $V_2 = 0$ . The temperature at point 2 is therefore the stagnation temperature, denoted by  $T_o$ .

$$c_p T_1 + \frac{1}{2} V_1^2 = c_p T_0$$

$$\text{or} \quad T_0 = T_1 + \frac{V_1^2}{2 c_p} = 253.68 + \frac{(6.4 \times 10^3)^2}{2(1008)} = 20,571 \text{ K}$$

This is our answer, based on the energy equation using a constant [page 172](#) value of specific heat. This answer gives a very high temperature, more than

three times the surface temperature of the sun. At such temperatures, air becomes a chemically reactive gas (see Sec. 10.2.4), and the assumption of constant specific heat is not valid for such a gas. In reality, properly taking into account the chemical reactions, the stagnation temperature is about 6000 K, still a very high temperature, but considerably less than that calculated on the basis of constant specific heat. Thus we can see that Eq. (4.42), which assumes constant  $c_p$ , is not valid for this application. In contrast, no such assumption is made for the derivation of Eq. (4.41), which holds for an adiabatic flow in general. The calculation of a chemically reactive flow is beyond the scope of this book. For an in-depth discussion of such flows and their proper calculation, see Anderson, *Hypersonic and High Temperature Gas Dynamics*, 2nd ed., American Institute of Aeronautics and Astronautics, Reston, VA, 2006.

### EXAMPLE 4.14

The author and his wife had the joy of flying in the Anglo-French Concorde Supersonic Transport (SST) from New York to London (a flight that took only three hours compared to the more than six hours in a conventional subsonic jet transport). The SST cruised at a velocity of 1936 ft/s at an altitude of 50,000 ft. Calculate the stagnation temperature for the SST at cruise, assuming a constant specific heat for air of 6006 ft lb/(slug)(°R). (The concept of stagnation temperature was introduced in Example 4.13.)

#### ■ Solution

From Eq. (4.42), we have

$$c_p T_1 + \frac{1}{2} V_1^2 = c_p T_2 + \frac{1}{2} V_2^2 = c_p T_0$$

$$T_0 = T_1 + \frac{V_1^2}{2 c_p}$$

From App. B, at  $h = 50,000$  ft,  $T_1 = 389.99^\circ\text{R}$ . Thus,

$$T_0 = 389.99 + \frac{(1936)^2}{2(6006)} = \boxed{702^\circ\text{R}}$$

In Fahrenheit, this temperature is

$$T_0 = 702 - 460 = 242^\circ\text{F}$$

which is higher than the boiling temperature of water at sea level. Indeed, the skin temperature of the SST was high enough that, after landing, the airplane was left to cool down for about a half an hour before the skin was safe to touch with your hand.

*Note:* From Sec. 10.2.4, we know that the temperature at which chemical reactions first occur in air is about 2000 K = 3600°R = 3140°F. For the temperature in this example, we are very safe in assuming a constant value of  $c_p$ . Indeed, the specific heat of air remains essentially constant up to 1000 K, above which the excitation of vibrational energy of the O<sub>2</sub> and N<sub>2</sub> molecules causes some variation of  $c_p$ , but this is minor compared to the large variation due to chemical reactions. *For the vast majority of aerodynamic applications, especially those dealing with airplanes, the assumption of constant specific heat is quite valid.* This will be the case for all applications treated in this book.

---

page 173

### EXAMPLE 4.15

Consider a flow with heat addition, that is, a *nonadiabatic* flow. Derive the energy equation for such a flow.

#### ■ Solution

Consider a fluid element moving along a streamline. Let  $\delta q$  be the heat added per unit mass to the fluid element. We can apply the first law of thermodynamics as given by Eq. (4.19), repeated here:

$$\delta q = dh - v dp \quad (4.19)$$

From Euler's equation, Eq. (4.8), repeated here,

$$dp = -\rho V dV \quad (4.8)$$

Equation (4.19) becomes

$$\delta q = dh - v(-\rho V dV)$$

or

$$\delta q = dh + V dV \quad (\text{E 4.15.1})$$

Integrating Eq. (E 4.15.1) from point 1 to point 2 along the streamline, we have

$$\int_1^2 \delta q = \int_{h_1}^{h_2} dh + \int_{V_1}^{V_2} V dV \quad (\text{E 4.15.2})$$

In Eq. (E 4.15.2),  $\delta q$  integrated from point 1 to point 2 is the total heat added per unit mass to the fluid element between points 1 and 2. Denote this total heat added per unit mass by  $Q_{12}$ . Equation (E 4.15.2) can then be written as

$$Q_{12} = h_2 - h_1 + \frac{V_2^2}{2} - \frac{V_1^2}{2}$$

or

$$h_1 + Q_{12} + \frac{V_1^2}{2} = h_2 + \frac{V_2^2}{2}$$

(E 4.15.3)

This is a form of the energy equation for a non-adiabatic flow. Note that it is similar to Eq. (4.41), but with a heat addition term,  $Q_{12}$ , on the left-hand side.

### EXAMPLE 4.16

Consider the combustion chamber (burner) in a turbojet engine. The elements of a turbojet are discussed in Sec. 9.5, and the combustion chamber is illustrated schematically in Figs. 9.16, 9.18, and 9.19. (It is worth your while to flip over to these figures for a few moments before you proceed further with this example.) Consider the case where air, having passed through the compressor, enters the combustor at a temperature of 1200°R. As it flows through the combustor, heat is added per unit mass in the amount of  $2.1 \times 10^7$  ft lb/slug. The flow velocity at the entrance to the combustor is 300 ft/s, and decreases to 200 ft/s at the exit of the combustor. Calculate the temperature of the flow at the exit, assuming constant specific heat  $c_p = 6006$  ft lb/(slug)(°R).

#### ■ Solution

[page 174](#)

Using the energy equation with heat addition derived in Example 4.15, namely Eq. (E 4.15.3), assuming constant specific heat so that  $h = c_p T$ , and

using the subscripts 3 and 4 to denote the entrance and exit, respectively, of the combustor consistent with the diagrams in Figs. 9.16 and 9.18, we have

$$c_p T_3 + Q_{34} + \frac{V_3^2}{2} = c_p T_4 + \frac{V_4^2}{2}$$

where  $T_3 = 1200^\circ\text{R}$ ,  $Q_{34} = 2.1 \times 10^7 \text{ ft lb/slug}$ ,  $V_3 = 300 \text{ ft/s}$  and  $V_4 = 200 \text{ ft/s}$ . Hence,

$$\begin{aligned} T_4 &= T_3 + \frac{Q_{34}}{c_p} + \frac{V_3^2 - V_4^2}{2 c_p} = 1200 + \frac{2.1 \times 10^7}{6006} + \left[ \frac{(300)^2 - (200)^2}{2 (6006)} \right] \\ &= 1200 + 3497 + 4 = \boxed{4701^\circ\text{R}} \end{aligned}$$


---

## 4.8 SUMMARY OF EQUATIONS

We have just finished applying some basic physical principles to obtain equations for the analysis of flowing gases. The reader is cautioned not to be confused by the multiplicity of equations; they are useful, indeed necessary, tools to examine and solve various aerodynamic problems of interest. It is important for an engineer or scientist to look at such equations and see not just a mathematical relationship, but primarily a physical relationship. These equations talk! For example, Eq. (4.2) says that mass is conserved; Eq. (4.42) says that energy is conserved for an adiabatic, frictionless flow; and so on. Never lose sight of the physical implications and limitations of these equations.

To help set these equations in your mind, here is a compact summary of our results so far:

- For the steady incompressible flow of a frictionless fluid in a stream tube of varying area,  $p$  and  $V$  are the meaningful flow variables;  $\rho$  and  $T$  are constants throughout the flow. To solve for  $p$  and  $V$ , use

$A_1 V_1 = A_2 V_2$	continuity
$p_1 + \frac{1}{2} \rho V_1^2 = p_2 + \frac{1}{2} \rho V_2^2$	Bernoulli's equation

- For steady isentropic (adiabatic and frictionless) compressible flow in a stream tube of varying area,  $p$ ,  $\rho$ ,  $T$ , and  $V$  are all variables. They are obtained from

$\rho_1 A_1 V_1 = \rho_2 A_2 V_2$	continuity
$\frac{p_1}{p_2} = \left(\frac{\rho_1}{\rho_2}\right)^\gamma = \left(\frac{T_1}{T_2}\right)^{\gamma/\gamma-1}$	isentropic relations
$c_p T_1 + \frac{1}{2} V_1^2 = c_p T_2 + \frac{1}{2} V_2^2$	energy
$p_1 = \rho_1 R T_1$	equation of state
$p_2 = \rho_2 R T_2$	

Let us now apply these relations to study some basic aerodynamic phenomena and problems.


## 4.9 SPEED OF SOUND

Sound waves travel through the air at a definite speed—the speed of sound. This is obvious from natural observation: A lightning bolt is observed in the distance, and thunder is heard at some later instant. In many aerodynamic problems, the speed of sound plays a pivotal role. How do we calculate the speed of sound? What does it depend on: pressure, temperature, density, or some combination thereof? Why is it so important? Answers to these questions are discussed in this section.


First let us derive a formula to calculate the speed of sound. Consider a sound wave moving into a stagnant gas, as shown in Fig. 4.12. This sound wave is created by some source, say a small firecracker in the corner of a room. The air in the room is motionless and has density  $\rho$ , pressure  $p$ , and temperature  $T$ . If you are standing in the middle of the room, the sound wave sweeps by you at velocity  $a$  m/s, ft/s, or some other unit. The sound wave itself is a thin region of disturbance in the air, across which the pressure, temperature, and density change slightly. (The change in pressure is what activates your eardrum and allows you to hear the sound wave.) Imagine that you now hop on the sound wave and move with it. As you are sitting on the moving wave, look to the left in Fig. 4.12—that is, look in the direction in which the wave is moving. From your vantage point on the wave, the sound wave seems to stand still, and the air in front of the wave appears to be coming at you with velocity  $a$ ; that is, you see the picture shown in Fig. 4.13, where the sound wave is standing still and the air ahead of the wave is moving toward the wave with velocity  $a$ . Now return to Fig. 4.12 for a moment. Sitting on top of and riding with the moving wave, look to the right—that is, look behind the wave. From your vantage point, the air appears to be moving away from you. This appearance is sketched in

Fig. 4.13, where the wave is standing still. Here the air behind the motionless wave is moving to the right, away from the wave. However, in passing through the wave, the pressure, temperature, and density of the air are slightly changed by the amounts  $dp$ ,  $dT$ , and  $d\rho$ , respectively. From our previous discussions, you would then expect the airspeed  $a$  to change slightly, say by an amount  $da$ . Thus, the air behind the wave is moving away from the wave with velocity  $a + da$ , as shown in Fig. 4.13. Figures 4.12 and 4.13 are completely analogous pictures; only their perspectives are different. Figure 4.12 is what you see by standing in the middle of the room and watching the wave go by; Fig. 4.13 is what you see by riding on top of the wave and watching the air go by. Both pictures are equivalent. However, Fig. 4.13 is easier to work with, so we will concentrate on it.

page 176

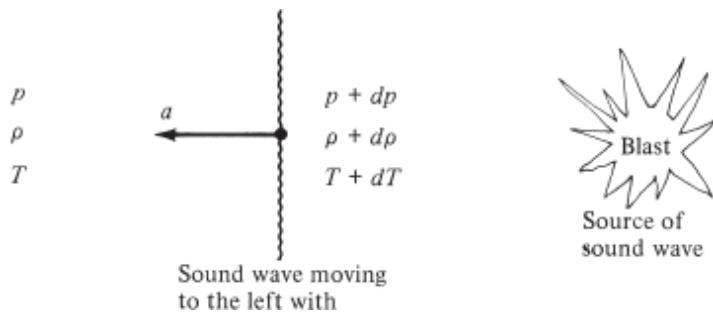

**Figure 4.12** Model of a sound wave moving into a stagnant gas.

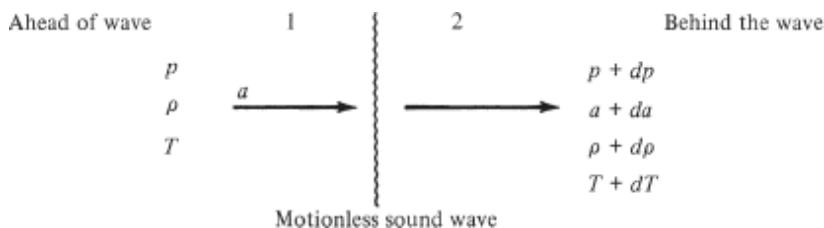

**Figure 4.13** Model with the sound wave stationary.

Let us apply our fundamental equations to the gas flow shown in Fig. 4.13. Our objective is to obtain an equation for  $a$ , where  $a$  is the speed of the sound wave, the speed of sound. Let points 1 and 2 be ahead of and behind the wave, respectively, as shown in Fig. 4.13. Applying the continuity equation, Eq. (4.2), we find

$$\rho_1 A_1 V_1 = \rho_2 A_2 V_2$$

or

$$\rho A_1 a = (\rho + d\rho) A_2 (a + da) \quad (4.43)$$

Here  $A_1$  and  $A_2$  are the areas of a stream tube running through the wave. Just looking at the picture shown in Fig. 4.13, we see no geometric reason why the stream tube should change area in passing through the wave. Indeed it does not; the area of the stream tube is constant; hence  $A = A_1 = A_2 =$  constant. (This is an example of a type of flow called *one-dimensional*, or *constant-area*, flow.) Thus Eq. (4.43) becomes

page 177

$$\begin{aligned} \rho a &= (\rho + d\rho)(a + da) \\ \text{or} \quad \rho a &= \rho a + a d\rho + \rho da + d\rho da \end{aligned} \quad (4.44)$$

The product of two small quantities  $d\rho da$  is very small in comparison to the other terms in Eq. (4.44) and hence can be ignored. Thus, from Eq. (4.44),

$$a = -\rho \frac{da}{d\rho} \quad (4.45)$$

Now apply the momentum equation in the form of Euler's equation, Eq. (4.8):

$$\begin{aligned} dp &= -\rho a da \\ \text{or} \quad da &= -\frac{dp}{\rho a} \end{aligned} \quad (4.46)$$

Substitute Eq. (4.46) into (4.45):

$$\begin{aligned} a &= \frac{\rho}{d\rho} \frac{dp}{\rho a} \\ \text{or} \quad a^2 &= \frac{dp}{d\rho} \end{aligned} \quad (4.47)$$

On a physical basis, the flow through a sound wave involves no heat addition, and the effect of friction is negligible. Hence, the flow through a sound wave is isentropic. Thus, from Eq. (4.47), the speed of sound is given by

$a = \sqrt{\left(\frac{dp}{d\rho}\right)_{\text{isentropic}}}$

(4.48)

Equation (4.48) is fundamental and important. However, it does not give us a straightforward formula for computing a number for  $a$ . We must proceed further.

For isentropic flow, Eq. (4.37) gives

$$\frac{p_2}{p_1} = \left(\frac{\rho_2}{\rho_1}\right)^\gamma$$

or

$$\frac{p_2}{\rho_2^\gamma} = \frac{p_1}{\rho_1^\gamma} = \text{const} = c \quad (4.49)$$

Equation (4.49) says that the ratio  $p/\rho^\gamma$  is the same constant value at every point in an isentropic flow. Thus we can write everywhere

$$\frac{p}{\rho^\gamma} = c \quad (4.50) \quad \underline{\text{page 178}}$$

Hence

$$\left(\frac{dp}{d\rho}\right)_{\text{isentropic}} = \frac{d}{d\rho} c\rho^\gamma = c\gamma\rho^{\gamma-1} \quad (4.51)$$

Substituting for  $c$  in Eq. (4.51) the ratio of Eq. (4.50), we obtain

$$\left(\frac{dp}{d\rho}\right)_{\text{isentropic}} = \frac{p}{\rho^\gamma} \gamma \rho^{\gamma-1} = \frac{\gamma p}{\rho} \quad (4.52)$$

Substitute Eq. (4.52) into (4.48):

$a = \sqrt{\gamma \frac{p}{\rho}} \quad (4.53)$

However, for a perfect gas,  $p$  and  $\rho$  are related through the equation of state;  $p = \rho RT$ ; hence  $p/\rho = RT$ . Substituting this result into Eq. (4.53) yields

$a = \sqrt{\gamma RT} \quad (4.54)$

Equations (4.48), (4.53), and (4.54) are important results for the speed of sound; however, Eq. (4.54) is the most useful. It also demonstrates a fundamental result: *The speed of sound in a perfect gas depends only on the temperature of the gas.* This simple result may appear surprising at first. However, it is to be expected on a physical basis, as follows. The propagation of a sound wave through a gas takes place via molecular collisions. For example, consider again a small firecracker in the corner of the room. When the firecracker is set off, some of its energy is transferred to the neighboring gas molecules in the air, thus increasing their kinetic energy. In turn, these energetic gas molecules are moving randomly about, colliding with some of their neighboring molecules and transferring some of their extra energy to these new molecules. Thus, the energy of a sound wave is transmitted through the air by molecules that collide with one another. Each molecule is moving at a different velocity; but if they are summed over a large number of molecules, a mean or average molecular velocity can be

defined. Therefore, looking at the collection of molecules as a whole, we see that the sound energy released by the firecracker will be transferred through the air at something approximating this mean molecular velocity. Recall from Ch. 2) that temperature is a measure of the mean molecular kinetic energy, hence of the mean molecular velocity; then temperature should also be a measure of the speed of a sound wave transmitted by molecular collisions. Equation (4.54) proves this to be a fact.

For example, consider air at standard sea-level temperature  $T_s = \underline{\text{page } 179}$  288.16 K. From Eq. (4.54), the speed of sound is  $a = \sqrt{\gamma RT} = \sqrt{1.4(287)(288.16)} = 340.3$  m/s. From the results of the kinetic theory of gases, the mean molecular velocity can be obtained as  $\bar{V} = \sqrt{(8/\pi)RT} = \sqrt{(8/\pi)287(288.16)} = 458.9$  m/s. Thus, the speed of sound is of the same order of magnitude as the mean molecular velocity and is smaller by about 26 percent.

Again we emphasize that the speed of sound is a point property of the flow, just as  $T$  is a point property (as described in Ch. 2)). It is also a thermodynamic property of the gas, defined by Eqs. (4.48) to (4.54). In general, the value of the speed of sound varies from point to point in the flow.

The speed of sound leads to another vital definition for high-speed gas flows—namely, the *Mach number*. Consider a point  $B$  in a flow field. The flow velocity at  $B$  is  $V$ , and the speed of sound is  $a$ . By definition, the Mach number  $M$  at point  $B$  is the flow velocity divided by the speed of sound:

$$\boxed{M = \frac{V}{a}} \quad (4.55)$$

We will find that  $M$  is one of the most powerful quantities in aerodynamics. We can immediately use it to define three different regimes of aerodynamic flows:

1. If  $M < 1$ , the flow is *subsonic*.
2. If  $M = 1$ , the flow is *sonic*.
3. If  $M > 1$ , the flow is *supersonic*.

Each of these regimes is characterized by its own special phenomena, as will be discussed in subsequent sections. In addition, two other specialized aerodynamic regimes are commonly defined: *transonic* flow, where  $M$  generally ranges from slightly less than to slightly greater than 1 (for

example,  $0.8 \leq M \leq 1.2$ ), and *hypersonic* flow, where generally  $M > 5$ . The definitions of subsonic, sonic, and supersonic flows in terms of  $M$  as given are precise; the definitions of transonic and hypersonic flows in terms of  $M$  are a bit more imprecise and really refer to sets of specific aerodynamic phenomena rather than to just the value of  $M$ . This distinction will be clarified in subsequent sections.

### EXAMPLE 4.17

A jet transport is flying at a standard altitude of 30,000 ft with a velocity of 550 mi/h. What is its Mach number?

#### ■ Solution

From the standard atmosphere table, App. B, at 30,000 ft,  $T_{\infty} = 411.86^{\circ}\text{R}$ . Hence, from Eq. (4.54),

$$a_{\infty} = \sqrt{\gamma R T_{\infty}} = \sqrt{1.4(1716)(411.86)} = 995 \text{ ft/s}$$

The airplane velocity is  $V_{\infty} = 550 \text{ mi/h}$ ; however, in consistent units, [page 180](#) remembering that  $88 \text{ ft/s} = 60 \text{ mi/h}$ , we find that

$$V_{\infty} = 550 \left( \frac{88}{60} \right) = 807 \text{ ft/s}$$

From Eq. (4.55),

$$M_{\infty} = \frac{V_{\infty}}{a_{\infty}} = \frac{807}{995} = \boxed{0.811}$$

### EXAMPLE 4.18

In the nozzle flow described in Example 4.11, calculate the Mach number of the flow at the throat,  $M^*$ , and at the exit,  $M_e$ .

#### ■ Solution

From Example 4.11, at the throat,  $V^* = 580 \text{ m/s}$  and  $T^* = 833 \text{ K}$ . Hence, from Eq. (4.54),

$$a^* = \sqrt{\gamma RT^*} = \sqrt{1.4(287)(833)} = 580 \text{ m/s}$$

From Eq. (4.55),

$$M^* = \frac{V^*}{a^*} = \frac{580}{580} = \boxed{1}$$

*Note:* The flow is sonic at the throat. We will soon prove that the Mach number at the throat is always sonic in supersonic nozzle flows (except in special, nonequilibrium, high-temperature flows, which are beyond the scope of this book).

Also from Example 4.11, at the exit,  $V_e = 1188 \text{ m/s}$  and  $T_e = 300 \text{ K}$ . Hence

$$a_e = \sqrt{\gamma RT_e} = \sqrt{1.4(287)(300)} = 347 \text{ m/s}$$

$$M_e = \frac{V_e}{a_e} = \frac{1188}{347} = \boxed{3.42}$$


---

**Comment** Examples 4.17 and 4.18 illustrate two common uses of Mach number. The speed of an airplane is frequently given in terms of Mach number. In Example 4.17, the Mach number of the jet transport is calculated; here the Mach number of the airplane is the velocity of the airplane through the air divided by the speed of sound in the ambient air far ahead of the airplane. This use of Mach number is frequently identified as the *free-stream Mach number*. In Example 4.18, the *local* Mach number is calculated at two different points in a flow field: at the throat and at the exit of the nozzle flow. At any given point in a flow, the local Mach number is the local flow velocity at that point divided by the local value of the speed of sound at that point. Here Mach number is used as a local flow property in a flow field, and its value varies from point to point throughout the flow because both velocity and the local speed of sound (which depends on the local temperature) vary throughout the flow.

### EXAMPLE 4.19

Consider a vehicle moving at a velocity of 1000 m/s through (a) air, [page 181](#) and (b) hydrogen. The molecular weight (mass) of diatomic hydrogen is 2 kg/(kg mole). Calculate the Mach number of the vehicle in (a) air, and (b) hydrogen. Comment on the implication of the results.

## ■ Solution

From chemistry, as mentioned in Sec. 2.3, the specific gas constant  $R$  is related to the universal gas constant  $R$  by

$$R = R/\mathcal{M}$$

where  $M$  is the molecular weight of the gas and  $R = 8314 \text{ J/(kg mole)(K)}$ .

a. *Air*: For air,  $M = 28.97$ . Hence,

$$R = \frac{R}{\mathcal{M}} = \frac{8314}{28.97} = 287 \text{ J/(kg)(K)}$$

Note that  $R = 287 \text{ J/(kg)(K)}$  was first given in Sec. 2.3, and we have used that value in subsequent examples. We calculate it here from  $R$  and  $\mathcal{M}$  just for consistency.

$$a = \sqrt{\gamma RT} = \sqrt{(1.4)(287)(300)} = 347.2 \text{ m/s}$$

$$M = \frac{V}{a} = \frac{1000}{3472} = 2.88$$

b. *Hydrogen*: For  $H_2$ ,  $M = 2$ . Hence,

$$R = \frac{R}{\mathcal{M}} = \frac{8314}{2} = 4157 \text{ J/(kg)(K)}$$

For all *diatomic* gases, the ratio of specific heats  $\gamma = 1.4$ . Thus, for  $H_2$  at  $T = 300 \text{ K}$ ,


$$a = \sqrt{\gamma RT} = \sqrt{(1.4)(4157)(300)} = 1321 \text{ m/s}$$

$$M = \frac{V}{a} = \frac{1000}{1321} = 0.757$$

---

**Comment** The speed of sound in a light gas such as  $H_2$  is much higher than that in a heavier gas such as air. As a result, an object moving at a given velocity through a light gas will have a lower Mach number than if it were moving through a heavier gas. Indeed, in this example, the vehicle moving at 1000 m/s is *supersonic* in air, but *subsonic* in  $H_2$ . This has a tremendous effect on the aerodynamics of the vehicle. As will be explained in Sec. 4.11.3, shock waves will appear around the supersonic vehicle, thus causing a large increase in the aerodynamic drag of the vehicle. This increase is due to wave drag, as will be explained in Sec. 5.11.

**Comment** A potential practical application of the result calculated [page 182](#) in Example 4.19 is illustrated in Fig. 4.14. In Fig. 4.14a, a vehicle is shown flying through air at a velocity of 1000 m/s. The Mach number is supersonic, equal to 2.88. There will be a bow shock wave at the nose of the vehicle, creating a large supersonic wave drag on the vehicle (as discussed in Sec. 5.11). In Fig. 4.14b, the same vehicle is shown flying at the same velocity of 1000 m/s, but through H<sub>2</sub> contained in a tube. The Mach number is subsonic, equal to 0.757. There is no shock wave, and no wave drag is exerted on the body. Hence, the thrust required to propel this vehicle inside the tube at a velocity of 1000 m/s through H<sub>2</sub> will be much less than that required to propel the vehicle at 1000 m/s through air. The vehicle in Fig. 4.14b is flying supersonically relative to the air outside the tube but subsonically relative to the H<sub>2</sub> inside the tube. This idea for a hydrogen-tube vehicle for SST is currently being studied (see, for example, Arnold R. Miller, "Hydrogen Tube Vehicle for Supersonic Transport: 2. Speed and Energy," *International Journal of Hydrogen Energy*, vol. 35 (2010), pp. 5745–5753). For our introduction to the basic principles of flight, it is simply a "cool" application of this section on the speed of sound and Mach number.

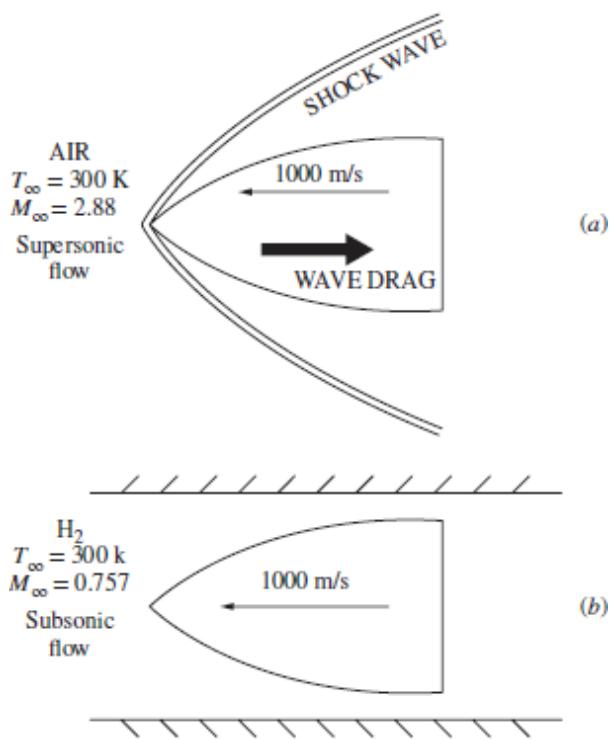

**Figure 4.14** Sketch of a vehicle flying (a) at a supersonic velocity in air, and (b) at a subsonic velocity in hydrogen, in both cases at the same velocity.

page 183

## 4.10 LOW-SPEED SUBSONIC WIND TUNNELS

Throughout the remainder of this book, the aerodynamic fundamentals and tools (equations) developed in previous sections will be applied to specific problems of interest. The first will be a discussion of low-speed subsonic wind tunnels.


What are wind tunnels? In the most basic sense, they are ground-based experimental facilities designed to produce flows of air (or sometimes other gases) that simulate natural flows occurring outside the laboratory. For most aerospace engineering applications, wind tunnels are designed to simulate flows encountered in the flight of airplanes, missiles, or space vehicles. Because these flows have ranged from the 27 mi/h speed of the early *Wright Flyer* to the 25,000 mi/h reentry velocity of the *Apollo* lunar spacecraft, obviously many different types of wind tunnels, from low subsonic to hypersonic, are necessary for laboratory simulation of actual flight conditions. However, referring again to Fig. 1.30, we see that flow velocities of 300 mi/h or less were the flight regime of interest until about 1940. So, during the first four decades of human flight, airplanes were tested and developed in wind tunnels designed to simulate low-speed subsonic flight. Such tunnels are still in use today but now are complemented by transonic, supersonic, and hypersonic wind tunnels.

The essence of a typical low-speed subsonic wind tunnel is sketched in Fig. 4.15. The airflow with pressure  $p_1$  enters the nozzle at a low velocity  $V_1$ , where the area is  $A_1$ . The nozzle converges to a smaller area  $A_2$  at the test section. Because we are dealing with low-speed flows, where  $M$  is generally less than 0.3, the flow is assumed to be incompressible. Hence, Eq. (4.3) dictates that the flow velocity increases as the air flows through the convergent nozzle. The velocity in the test section is then, from Eq. (4.3),

$$V_2 = \frac{A_1}{A_2} V_1 \quad (4.56)$$

After flowing over an aerodynamic model (which may be a model page 184 of a complete airplane or part of an airplane, such as a wing, tail, or engine nacelle), the air passes into a diverging duct called a *diffuser*, where the area

increases and velocity decreases to  $A_3$  and  $V_3$ , respectively. Again, from continuity,

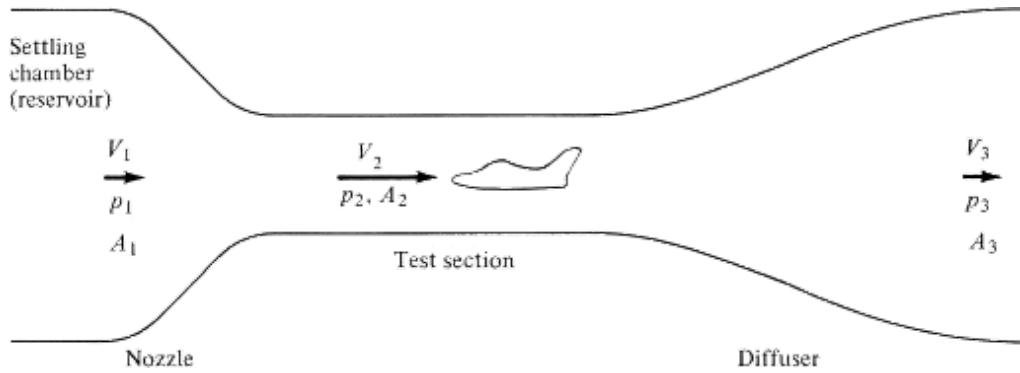

**Figure 4.15** Simple schematic of a subsonic wind tunnel.

$$V_3 = \frac{A_2}{A_3} V_2$$

The pressure at various locations in the wind tunnel is related to the velocity through Bernoulli's equation, Eq. (4.9a), for incompressible flow:

$$p_1 + \frac{1}{2}\rho V_1^2 = p_2 + \frac{1}{2}\rho V_2^2 = p_3 + \frac{1}{2}\rho V_3^2 \quad (4.57)$$

From Eq. (4.57), as  $V$  increases,  $p$  decreases; hence  $p_2 < p_1$ ; that is, the test-section pressure is smaller than the reservoir pressure upstream of the nozzle. In many subsonic wind tunnels, all or part of the test section is open, or vented, to the surrounding air in the laboratory. In such cases, the outside air pressure is communicated directly to the flow in the test section, and  $p_2 = 1$  atm. Downstream of the test section, in the diverging area diffuser, the pressure increases as velocity decreases. Hence  $p_3 > p_2$ . If  $A_3 = A_1$ , then from Eq. (4.56),  $V_3 = V_1$ ; and from Eq. (4.57),  $p_3 = p_1$ . (Note: In actual wind tunnels, the aerodynamic drag created by the flow over the model in the test section causes a loss of momentum not included in the derivation of Bernoulli's equation. Therefore, in reality,  $p_3$  is slightly less than  $p_1$  because of such losses.)

In practical operation of this type of wind tunnel, the test-section velocity is governed by the pressure difference  $p_1 - p_2$  and the area ratio of the nozzle  $A_2/A_1$  as follows. From Eq. (4.57),

$$V_2^2 = \frac{2}{\rho}(p_1 - p_2) + V_1^2 \quad (4.58)$$

From Eq. (4.56),  $V_1 = (A_2/A_1)V_2$ . Substituting this into the right side of Eq. (4.58), we obtain


$$V_2^2 = \frac{2}{\rho}(p_1 - p_2) + \left(\frac{A_2}{A_1}\right)^2 V_2^2 \quad (4.59)$$

Solving Eq. (4.59) for  $V_2$  yields

$$V_2 = \sqrt{\frac{2(p_1 - p_2)}{\rho[1 - (A_2/A_1)^2]}} \quad (4.60)$$

The area ratio  $A_2/A_1$  is a fixed quantity for a wind tunnel of given design. The “control knob” of the wind tunnel controls  $p_1 - p_2$ , which allows the wind tunnel operator to control the value of test-section velocity  $V_2$  via Eq. (4.60).

In subsonic wind tunnels, a convenient method of measuring the pressure difference  $p_1 - p_2$ , and hence of measuring  $V_2$  via Eq. (4.60), is by means of a *manometer*. A basic type of manometer is the U tube shown in Fig. 4.16. Here the left side of the tube is connected to a pressure  $p_1$ , the right side of the tube is connected to a pressure  $p_2$ , and the difference  $\Delta h$  in the heights of a fluid in both sides of the U tube is a measurement of the pressure difference  $p_2 - p_1$ . This can easily be demonstrated by considering the force balance on the liquid in the tube at the two cross sections cut by plane  $B-B$ , shown in Fig. 4.16. Plane  $B-B$  is drawn tangent to the top of the column of fluid on the left. If  $A$  is the cross-sectional area of the tube, then  $p_1 A$  is the force exerted on the left column of fluid. The force on the right column at plane  $B-B$  is the sum of the weight of the fluid above plane  $B-B$  and the force due to the pressure  $p_2 A$ . The volume of the fluid in the right column above  $B-B$  is  $A \Delta h$ . The specific weight (weight per unit volume) of the fluid is  $w = \rho g$ , where  $\rho$  is the density of the fluid and  $g$  is the acceleration of gravity. Hence, the total weight of the column of fluid above  $B-B$  is the specific weight times the volume—that is,  $wA \Delta h$ . The total force on the right cross section at plane  $B-B$  is  $p_2 A + wA \Delta h$ . Because the fluid is stationary in the tube, the forces on the left and right cross sections must balance; that is, they are the same. Hence

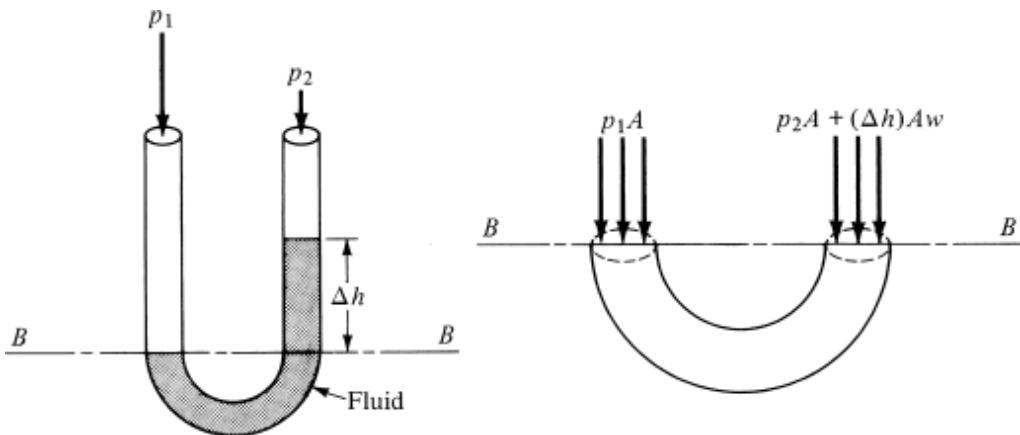

**Figure 4.16** Force diagram for a manometer.

$$p_1A = p_2A + wA \Delta h \quad (4.61)$$

or

$$p_1 - p_2 = w\Delta h$$

If the left side of the U-tube manometer were connected to the reservoir in a subsonic tunnel (point 1 in Fig. 4.15) and the right side were connected to the test section (point 2), then  $\Delta h$  of the U tube would directly measure the velocity of the airflow in the test section via Eqs. (4.61) and (4.60).

In modern wind tunnels, manometers have been replaced by pressure transducers and electrical digital displays for reading pressures and pressure differences. The basic principle of the manometer, however, remains an integral part of the study of fluid dynamics, and that is why we discuss it here.

### EXAMPLE 4.20

In a low-speed subsonic wind tunnel, one side of a mercury manometer is connected to the settling chamber (reservoir) and the other side is connected to the test section. The contraction ratio of the nozzle  $A_2/A_1$  equals  $\frac{1}{15}$ . The reservoir pressure and temperature are  $p_1 = 1.1$  atm and  $T_1 = 300$  K, respectively. When the tunnel is running, the height difference between the two columns of mercury is 10 cm. The density of liquid mercury is  $1.36 \times 10^4$  kg/m<sup>3</sup>. Calculate the airflow velocity in the test section  $V_2$ .

#### ■ Solution

$$\Delta h = 10 \text{ cm} = 0.1 \text{ m}$$

$$w \text{ (for mercury)} = \rho_1 g = (1.36 \times 10^4 \text{ kg/m}^3)(9.8 \text{ m/s}^2) \\ = 1.33 \times 10^5 \text{ N/m}^3$$

From Eq. (4.61),

$$p_1 - p_2 = w \Delta h = (1.33 \times 10^5 \text{ N/m}^3)(0.1 \text{ m}) = 1.33 \times 10^4 \text{ N/m}^2$$

To find the velocity  $V_2$ , use Eq. (4.60). However, in Eq. (4.60) we need a value of density  $\rho$ . This can be found from the reservoir conditions by using the equation of state. (Remember: 1 atm =  $1.01 \times 10^5 \text{ N/m}^2$ .)

$$\rho_1 = \frac{p_1}{RT_1} = \frac{1.01 \times 10^5}{287(300)} = 1.29 \text{ kg/m}^3$$

Because we are dealing with a low-speed subsonic flow, assume  $\rho_1 = \rho = \text{constant}$ . Hence, from Eq. (4.60),

$$V_2 = \sqrt{\frac{2(p_1 - p_2)}{\rho[1 - (A_2/A_1)^2]}} = \sqrt{\frac{2(1.33 \times 10^4)}{1.29[1 - (\frac{1}{15})^2]}} = \boxed{144 \text{ m/s}}$$

Note: This answer corresponds to a Mach number of approximately 0.4 in the test section, one slightly above the value of 0.3 that bounds incompressible flow. Thus, our assumption of  $\rho = \text{constant}$  in this example is inaccurate by about 8 percent.

### EXAMPLE 4.21

Referring to Fig. 4.15, consider a low-speed subsonic wind tunnel designed with a reservoir cross-sectional area  $A_1 = 2 \text{ m}^2$  and a test-section cross-sectional area  $A_2 = 0.5 \text{ m}^2$ . The pressure in the test section is  $p_2 = 1 \text{ atm}$ . Assume constant density equal to standard sea-level density. (a) Calculate the pressure required in the reservoir,  $p_1$ , necessary to achieve a flow velocity  $V_2 = 40 \text{ m/s}$  in the test section. (b) Calculate the mass flow through the wind tunnel.

#### ■ Solution

a. From the continuity equation, Eq. (4.3),

$$A_1 V_1 = A_2 V_2$$

or

$$V_1 = V_2 \left( \frac{A_2}{A_1} \right) = (40) \left( \frac{0.5}{2.0} \right) = 10 \text{ m/s}$$

From Bernoulli's equation, Eq. (4.9a),

$$p_2 + \rho \frac{V_2^2}{2} = p_1 + \rho \frac{V_1^2}{2}$$

Using consistent units,

$$p_2 = 1 \text{ atm} = 1.01 \times 10^5 \text{ N/m}^2$$

and at standard sea level,

$$\rho = 1.23 \text{ kg/m}^3$$

we have

$$\begin{aligned} p_1 &= p_2 + \frac{\rho}{2}(V_2^2 - V_1^2) \\ &= 1.01 \times 10^5 + \frac{1.23}{2}[(40)^2 - (10)^2] \\ &= 1.019 \times 10^5 \text{ N/m}^2 \end{aligned}$$

As a check on this calculation, let us insert  $p_1 = 1.019 \times 10^5 \text{ N/m}^2$  [page 187](#) into Eq. (4.60) and see if we obtain the required value of  $V_2 = 40 \text{ m/s}$ . From Eq. (4.60),

$$V_2 = \sqrt{\frac{2(p_1 - p_2)}{\rho \left[ 1 - \left( \frac{A_2}{A_1} \right)^2 \right]}} = \sqrt{\frac{2(1.019 - 1.01) \times 10^5}{(1.23) \left[ 1 - \left( \frac{0.5}{2.0} \right)^2 \right]}} = 40 \text{ m/s}$$

This checks.

*Note:* The pressure difference,  $p_2 - p_1$ , required to produce a velocity of 40 m/s in the test section is very small, equal to  $1.019 \times 10^5 - 1.01 \times 10^5 = 900 \text{ N/m}^2$ . In atmospheres, this is  $900 / (1.01 \times 10^5) = 0.0089 \text{ atm}$ , less than a hundredth of an atmosphere pressure difference. This is characteristic of low-speed flows, where it takes only a small pressure difference to produce a substantial flow velocity.

b. From Eq. (4.2), the mass flow can be calculated from the product  $\rho AV$  evaluated at any location in the wind tunnel. We choose the test section,

where  $A_2 = 0.5 \text{ m}^2$ ,  $V_2 = 40 \text{ m/s}$ , and  $\rho = 1.23 \text{ kg/m}^3$ .

$$\dot{m} = \rho A_2 V_2 = (1.23)(0.5)(40) = 24.6 \text{ kg/s}$$

We could just as well have chosen the reservoir to evaluate the mass flow, where  $A_1 = 2 \text{ m}^2$  and  $V_1 = 10 \text{ m/s}$ .

$$\dot{m} = \rho A_1 V_1 = (1.23)(2)(10) = 24.6 \text{ kg/s}$$

which checks with the result obtained in the test section.

### EXAMPLE 4.22

For the wind tunnel in Example 4.21, (a) if the pressure difference ( $p_1 - p_2$ ) is doubled, calculate the flow velocity in the test section. (b) The ratio  $A_1/A_2$  is defined as the contraction ratio for the wind tunnel nozzle. If the contraction ratio is doubled, keeping the same pressure difference as in Example 4.21, calculate the flow velocity in the test section.

#### ■ Solution

a. From Eq. (4.60),  $V_2$  is clearly proportional to the square root of [page 188](#) the pressure difference:

$$V_2 \propto \sqrt{p_\infty - p_1}$$

When  $p_2 - p_1$  is doubled from its value in Example 4.21, where  $V_2 = 40 \text{ m/s}$ , then

$$V_2 = \sqrt{2}(40) = 56.6 \text{ m/s}$$

b. The original contraction ratio from Example 4.21 is  $A_1/A_2 = 2.0/0.5 = 4$ . Doubling this value, we have  $A_1/A_2 = 8$ . The original pressure difference is  $p_2 - p_1 = 900 \text{ N/m}^2$ . From Eq. (4.60), we have

$$V_2 = \sqrt{\frac{2(p_1 - p_2)}{\rho \left[1 - \left(\frac{A_2}{A_1}\right)^2\right]}} = \sqrt{\frac{2(900)}{1.23 \left[1 - \left(\frac{1}{8}\right)^2\right]}} = 38.6 \text{ m/s}$$

*Note:* By doubling only the pressure difference, a 42 percent increase in velocity in the test section occurred. In contrast, by doubling only the contraction ratio, a 3.5 percent *decrease* in the velocity in the test section occurred. Once again we see an example of the power of the pressure difference in dictating flow velocity in a low-speed flow. Also, the decrease in the test-section velocity when the contraction ratio is increased, keeping the pressure difference the same, seems counterintuitive. Why does the velocity not increase when the nozzle is “necked down” further? To resolve this apparent anomaly, let us calculate the velocity in the reservoir for the increased contraction ratio. From the continuity equation,  $A_1 V_1 = A_2 V_2$ . Hence

$$V_1 = \left(\frac{A_2}{A_1}\right) V_2 = \left(\frac{1}{8}\right)(38.6) = 4.83 \text{ m/s}$$

When the contraction ratio is increased, keeping the pressure difference constant, the reservoir velocity decreases even more than the test-section velocity, resulting in a larger velocity change across the nozzle. For the case in Example 4.21 with a contraction ratio of 4,

$$V_2 - V_1 = 40 - 10 = 30 \text{ m/s}$$

For the present case with a contraction ratio of 8,

$$V_2 - V_1 = 38.6 - 4.83 = 33.8 \text{ m/s}$$

By increasing the contraction ratio while keeping the pressure difference constant, we increase the velocity *difference* across the nozzle, although the actual velocities at the inlet and exit of the nozzle are decreased.

---

page 189

## 4.11 MEASUREMENT OF AIRSPEED

In Sec. 4.10 we demonstrated that we can obtain the airflow velocity in the test section of a low-speed wind tunnel (assuming incompressible flow) by measuring  $p_1 - p_2$ . However, the previous analysis implicitly assumes that the flow properties are reasonably constant over any given cross section of the flow in the tunnel (so-called quasi-one-dimensional flow). If the flow is not constant over a given cross section—for example, if the flow velocity in the middle of the test section is higher than that near the walls—then  $V_2$  obtained from the preceding section is only a mean value of the test-section

velocity. For this reason, and for many other aerodynamic applications, it is important to obtain a *point* measurement of velocity at a given spatial location in the flow. This measurement can be made by an instrument called a *Pitot-static tube*, as described in the following.

First, though, we must add to our inventory of aerodynamic definitions. We have been glibly talking about the pressures at points in flows, such as points 1 and 2 in Fig. 4.7. However, these pressures are of a special type, called *static*. Static pressure at a given point is the pressure we would feel if we were moving along with the flow at that point. It is the ramification of gas molecules moving about with random motion and transferring their momentum to or across surfaces, as discussed in Ch. 2). If we look more closely at the molecules in a flowing gas, we see that they have a purely random motion superimposed on a directed motion due to the velocity of the flow. Static pressure is a consequence of just the purely random motion of the molecules. When an engineer or scientist uses the word *pressure*, it always means static pressure unless otherwise identified, and we will continue such practice here. In all our previous discussions, the pressures have been static pressures.

A second type of pressure is commonly utilized in aerodynamics: *total* pressure. To define and understand total pressure, consider again a fluid element moving along a streamline, as shown in Fig. 4.6. The pressure of the gas in this fluid element is the static pressure. However, now imagine that we grab this fluid element and slow it down to zero velocity. Moreover, imagine that we do this isentropically. Intuitively, the thermodynamic properties  $p$ ,  $T$ , and  $\rho$  of the fluid element will change as we bring the element to rest; they will follow the conservation laws previously discussed in this chapter. Indeed, as the fluid element is isentropically brought to rest,  $p$ ,  $T$ , and  $\rho$  would all increase above their original values when the element was moving freely along the streamline. The values of  $p$ ,  $T$ , and  $\rho$  of the fluid element after it has been brought to rest are called *total* values—that is, total pressure  $p_0$ , total temperature  $T_0$ , and so on. Thus we are led to the following precise definition:

Total pressure at a given point in a flow is the pressure that would exist if the flow were slowed down isentropically to zero velocity.

There is a perspective to be gained here. Total pressure  $p_0$  is a property of the gas flow at a given point. It is something that is associated with the flow


itself. The process of isentropically bringing the fluid element to rest is just an imaginary mental process we use to define the total pressure. It does not mean that we actually have to do it in practice. In other words, if we consider again the flow sketched in Fig. 4.7, there are *two* pressures we can consider at points 1, 2, and so on associated with each point of the flow: a static pressure  $p$  and a total pressure  $p_0$ , where  $p_0 > p$ .

For the special case of a gas that is not moving (i.e., the fluid page 190 element has no velocity in the first place), static and total pressures are synonymous:  $p_0 = p$ . This is the case in common situations such as the stagnant air in a room and gas confined in a cylinder.


The following analogy might help to further illustrate the difference between the definitions of static and total pressure. Assume that you are driving down the highway at 60 mi/h. The windows of your automobile are closed. Inside the automobile, along with you, there is a fly buzzing around in a very random fashion. Your speed is 60 mi/h, and in the mean, so is that of the fly, moving down the highway at 60 mi/h. However, the fly has its random buzzing-about motion superimposed on top of its mean directed speed of 60 mi/h. To you in the automobile, all you see is the random, buzzing-about motion of the fly. If the fly hits your skin with this random motion, you will feel a slight impact. This slight impact is analogous to the *static* pressure in a flowing gas, where the static pressure is due simply to the *random* motion of the molecules. Now assume that you open the window of your automobile, and the fly buzzes out. There is a person standing along the side of the road. If the fly that has just left your automobile hits the skin of this person, the impact will be strong (it may even really hurt) because the fly will hit this person with a mean velocity of 60 mi/h plus whatever its random velocity may be. The strength of this impact is analogous to the *total* pressure of a gas.

There is an aerodynamic instrument that actually measures the total pressure at a point in the flow: a *Pitot tube*. A basic sketch of a Pitot tube is shown in Fig. 4.17. It consists of a tube placed parallel to the flow and open to the flow at one end (point *A*). The other end of the tube (point *B*) is closed. Now imagine that the flow is first started. Gas will pile up inside the tube. After a few moments, there will be no motion inside the tube because the gas has nowhere to go—the gas will stagnate once steady-state conditions have been reached. In fact, the gas will be stagnant everywhere inside the tube, including at point *A*. As a result, the flow field sees the open

end of the Pitot tube (point *A*) as an obstruction, and a fluid element moving along the streamline, labeled *C*, has no choice but to stop when it arrives at point *A*. Because no heat has been exchanged, and friction is negligible, this process will be isentropic; that is, a fluid element moving along streamline *C* will be isentropically brought to rest at point *A* by the very presence of the Pitot tube. Therefore, the pressure at point *A* is, truly speaking, the total pressure  $p_0$ . This pressure will be transmitted throughout the Pitot tube; and if a pressure gauge is placed at point *B*, it will in actuality measure the *total pressure* of the flow. In this fashion, a Pitot tube is an instrument that measures the total pressure of a flow.

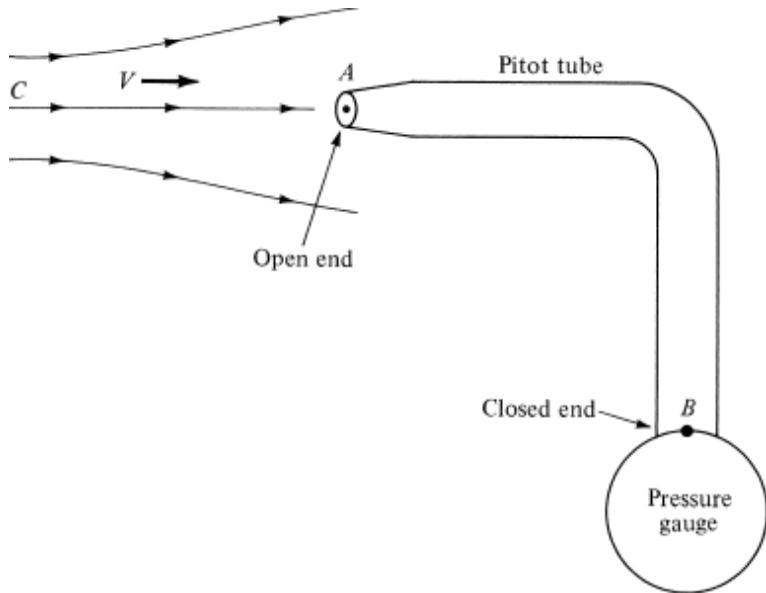


**Figure 4.17** Sketch of a Pitot tube.

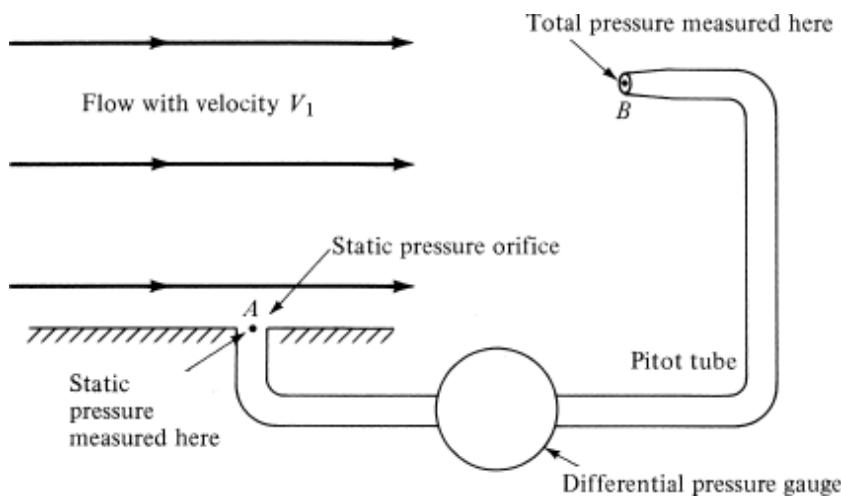

**Figure 4.18** Schematic of a Pitot-static measurement.

By definition, any point of a flow where  $V = 0$  is called a [page 191](#) *stagnation point*. In Fig. 4.17, point  $A$  is a stagnation point.

Consider the arrangement shown in Fig. 4.18. Here we have a uniform flow with velocity  $V_1$  moving over a flat surface parallel to the flow. There is a small hole in the surface at point  $A$ , called a *static pressure orifice*. Because the surface is parallel to the flow, only the random motion of the gas molecules will be felt by the surface itself. In other words, the surface pressure is indeed the static pressure  $p$ . This will be the pressure at the orifice at point  $A$ . In contrast, the Pitot tube at point  $B$  in Fig. 4.18 will feel the total pressure  $p_0$ , as previously discussed. If the static pressure orifice at point  $A$  and the Pitot tube at point  $B$  are connected across a pressure gauge, as shown in Fig. 4.18, the gauge will measure the difference between total and static pressure  $p_0 - p$ .

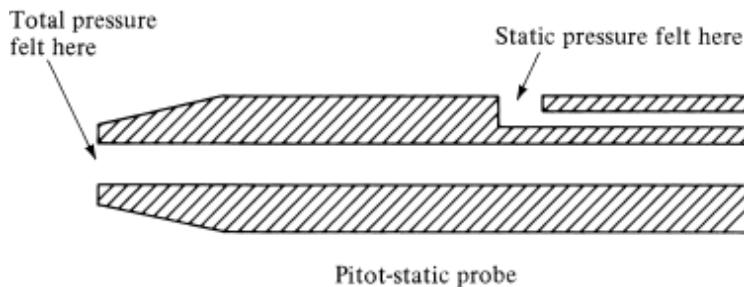

**Figure 4.19** Schematic of a Pitot-static probe.

Now we arrive at the main thrust of this section. The pressure [page 192](#) difference  $p_0 - p$ , as measured in Fig. 4.18, gives a measure of the flow velocity  $V_1$ . A combination of a total pressure measurement and a static pressure measurement allows us to measure the velocity at a given point in a flow. These two measurements can be combined in the same instrument, a *Pitot-static probe*, as illustrated in Fig. 4.19. A Pitot-static probe measures  $p_0$  at the nose of the probe and  $p$  at a point on the probe surface downstream of the nose. The pressure difference  $p_0 - p$  yields the velocity  $V_1$ , but the quantitative formulation differs depending on whether the flow is low speed (incompressible), high-speed subsonic, or supersonic.

#### 4.11.1 Incompressible Flow

Consider again the sketch shown in Fig. 4.18. At point  $A$ , the pressure is  $p$  and the velocity is  $V_1$ . At point  $B$ , the pressure is  $p_0$  and the velocity is zero. Applying Bernoulli's equation, Eq. (4.9a), at points  $A$  and  $B$ , we obtain

$$\boxed{p + \frac{1}{2}\rho V_1^2 = p_0} \quad (4.62)$$

Static pressure	Dynamic pressure	Total pressure
-----------------	------------------	----------------

In Eq. (4.62), for *dynamic pressure*  $q$  we have the definition

$$q \equiv \frac{1}{2}\rho V^2 \quad (4.63)$$

which is frequently employed in aerodynamics; the grouping  $\frac{1}{2}\rho V^2$  is termed the *dynamic pressure for flows of all types*, incompressible to hypersonic. From Eq. (4.62),


$$\boxed{p_0 = p + q} \quad (4.64)$$

*This relation holds for incompressible flow only.* The total pressure [page 193](#) equals the sum of the static and the dynamic pressure. Also from Eq. (4.62),


$$\boxed{V_1 = \sqrt{\frac{2(p_0 - p)}{\rho}}} \quad (4.65)$$

Equation (4.65) is the desired result; it allows the calculation of flow velocity from a measurement of  $p_0 - p$ , obtained from a Pitot-static tube. Again we emphasize that Eq. (4.65) holds only for incompressible flow.

A Pitot tube can be used to measure the flow velocity at various points in the test section of a low-speed wind tunnel, as shown in Fig. 4.20. The total pressure at point  $B$  is obtained by the Pitot probe; the static pressure, also at point  $B$ , is obtained from a static pressure orifice located at point  $A$  on the wall of the closed test section, assuming that the static pressure is constant throughout the test section. This assumption of constant static pressure is fairly safe for subsonic wind tunnel test sections and is commonly made. If the test section is open to the room, as also sketched in Fig. 4.20, then the static pressure at all points in the test section is  $p = 1$  atm. In either case, the velocity at point  $A$  is calculated from Eq. (4.65). The density  $\rho$  in Eq. (4.65) is a constant (incompressible flow). We can obtain its value by measuring  $p$  and  $T$  somewhere in the tunnel, using the equation of state to calculate  $\rho = p/(RT)$ . These measurements are usually made in the reservoir upstream of the nozzle.

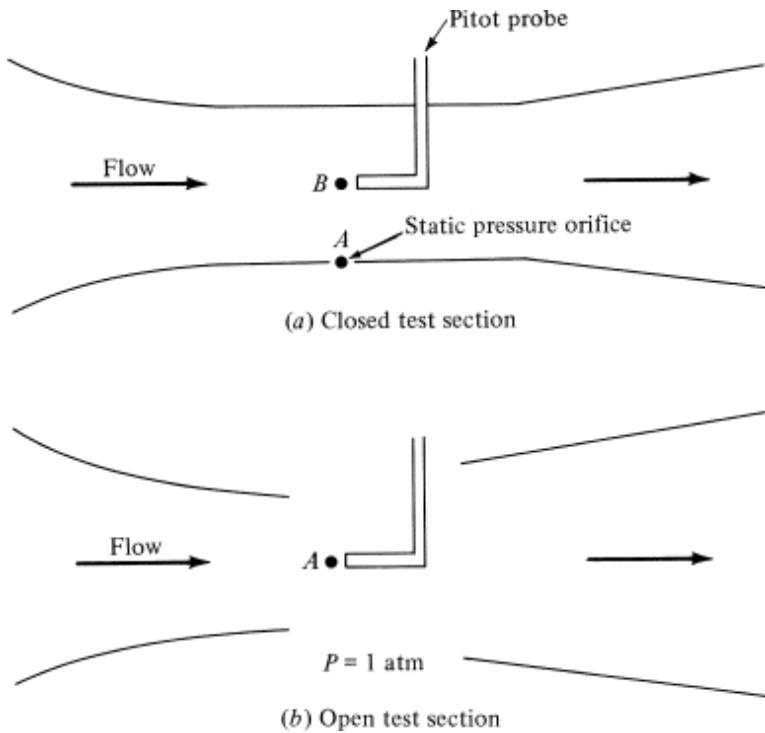

**Figure 4.20** Pressure measurements in open and closed test sections of subsonic wind tunnels.

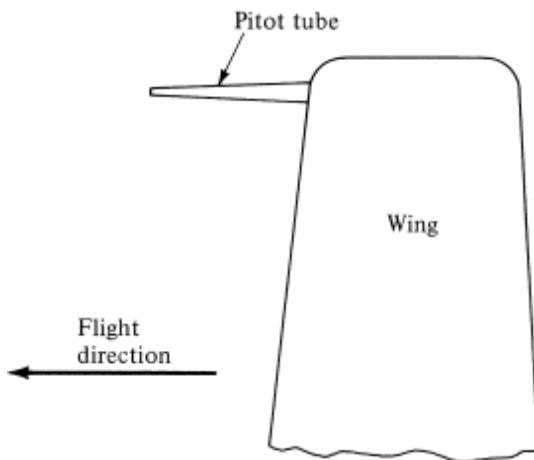


**Figure 4.21** Sketch of wing-mounted Pitot probe.

Either a Pitot tube or a Pitot-static tube can be used to measure the airspeed of airplanes. Such tubes can be seen extending from airplane wing tips, with the tube oriented in the flight direction, as shown in Fig. 4.21. Pitot tubes were used for airspeed measurements as early as World War I, at that time principally by the British. Figure 4.22 focuses on the dual

Pitot and static pressure tubes mounted on one of the interplane struts of the Sopwith Snipe, an airplane from the period around 1917. Figure 4.23 shows the wing-mounted Pitot tube facing forward from the leading edge of the right wing of the North American F-100 from the 1950s. Returning to the drawing of the World War II Corsair in Fig. 2.16, note the Pitot tube extending from the left wing. These airplanes are typical examples of low-speed aircraft for which the equation developed in this section, assuming incompressible flow, are valid for airspeed measurements.

If a Pitot tube by itself is used instead of a Pitot-static tube, then the ambient static pressure in the atmosphere around the airplane is obtained from a static pressure orifice placed strategically on the airplane surface. It is placed where the surface pressure is nearly the same as the pressure of the surrounding atmosphere. Such a location is found by experience. It is generally on the fuselage somewhere between the nose and the wing. The values of  $p_0$  obtained from the wing-tip Pitot probe and  $p$  obtained from the static pressure orifice on the surface enable calculation of the airplane's speed through the air using Eq. (4.65), *as long as the airplane's velocity is low enough to justify the assumption of incompressible flow*—that is, for velocities less than 300 ft/s. In actual practice, the measurements of  $p_0$  and  $p$  are joined across a differential pressure gauge that is calibrated in terms of airspeed, using Eq. (4.65). This airspeed indicator is a dial in the cockpit, with units of velocity, say miles per hour, on the dial. However, in determining the calibration (i.e., in determining what values of miles per hour go along with given values of  $p_0 - p$ ), the engineer must decide what value of  $\rho$  to use in Eq. (4.65). If  $\rho$  is the true value, somehow measured in the actual air around the airplane, then Eq. (4.65) gives the *true airspeed* of the airplane:

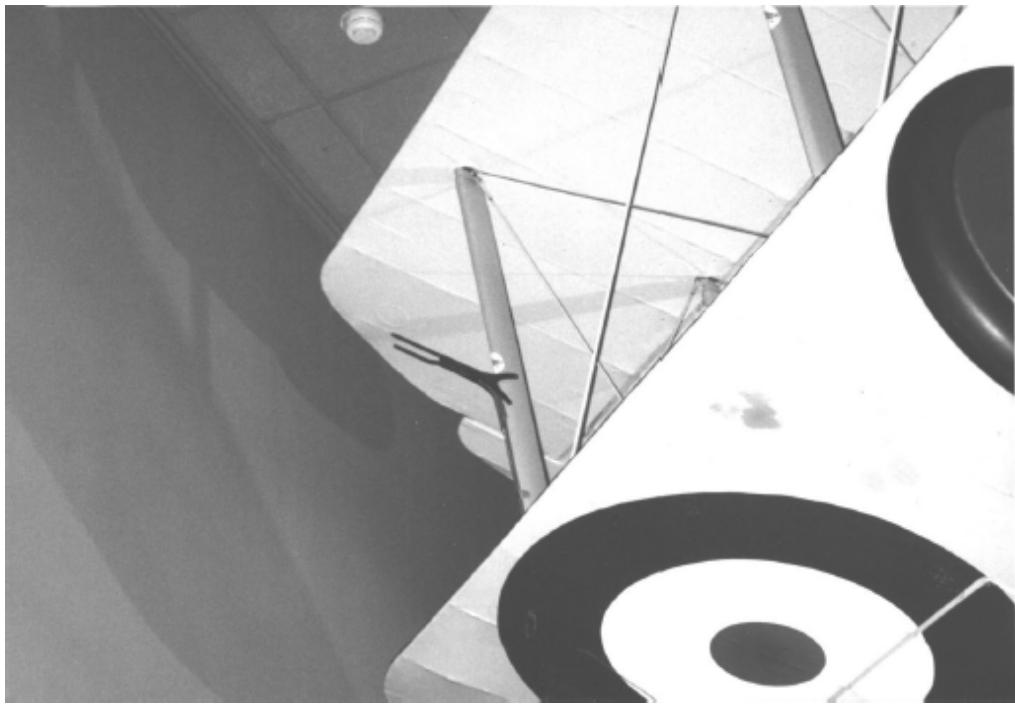

**Figure 4.22** Detail of the wing of the World War I Sopwith Snipe hanging in the World War I gallery of the National Air and Space Museum, showing the Pitot-static tube on one of the interwing struts.

(Source: *Courtesy of John Anderson.*)

---

[page 195](#)



**Figure 4.23** A North American F-100 from the 1950s. The Pitot tube extending ahead of the right wing leading edge is easily visible.

(Source: U.S. Air Force.)

$$V_{\text{true}} = \sqrt{\frac{2(p_0 - p)}{\rho}} \quad (4.66)$$

However, measurement of atmospheric air density directly at the [page 196](#) airplane's location is difficult. Therefore, for practical reasons, the airspeed indicators on low-speed airplanes are calibrated by using the standard sea-level value of  $\rho_s$  in Eq. (4.65). This gives a value of velocity called the *equivalent airspeed*:

$$V_e = \sqrt{\frac{2(p_0 - p)}{\rho_s}} \quad (4.67)$$

The equivalent airspeed  $V_e$  differs slightly from  $V_{\text{true}}$ , the difference being the factor  $(\rho/\rho_s)^{1/2}$ . At altitudes near sea level, this difference is small.

### EXAMPLE 4.23

The altimeter on a low-speed Cessna 150 private aircraft reads 5000 ft. By an independent measurement, the outside air temperature is 505°R. If a Pitot tube mounted on the wing tip measures a pressure of 1818 lb/ft<sup>2</sup>, what is the true velocity of the airplane? What is the equivalent airspeed?

#### ■ Solution

An altimeter measures the pressure altitude (see the discussion in Ch. 3)). From the standard atmosphere table in App. B, at 5000 ft,  $p = 1761$  lb/ft<sup>2</sup>. Also, the Pitot tube measures total pressure; hence

$$p_0 - p = 1818 - 1761 = 57 \text{ lb/ft}^2$$

The true airspeed can be obtained from Eq. (4.66); however, we need  $\rho$ , which is obtained from the equation of state. For the outside ambient air,

$$\rho = \frac{P}{RT} = \frac{1761}{1716(505)} = 2.03 \times 10^{-3} \text{ slug/ft}^3$$

From Eq. (4.66),

$$V_{\text{true}} = \sqrt{\frac{2(p_0 - p)}{\rho}} = \sqrt{\frac{2(57)}{2.03 \times 10^{-3}}} = 237 \text{ ft/s}$$

Note: Because  $88 \text{ ft/s} = 60 \text{ mi/h}$ ,  $V_{\text{true}} = 237(60/88) = 162 \text{ mi/h}$ .

The equivalent airspeed (that which would be read on the airspeed indicator in the cockpit) is obtained from Eq. (4.67), where  $\rho_s = 0.002377 \text{ slug/ft}^3$  (the standard sea-level value). Hence, from Eq. (4.67),

$$V_e = \sqrt{\frac{2(p_0 - p)}{\rho_s}} = \sqrt{\frac{2(57)}{2.377 \times 10^{-3}}} = 219 \text{ ft/s}$$

Note the 7.6 percent difference between  $V_{\text{true}}$  and  $V_e$ .

### EXAMPLE 4.24

In a low-speed subsonic wind tunnel with a closed test section (Fig. [page 197](#) 4.20a), a static pressure tap on the wall of the tunnel test section measures 0.98 atm. The temperature of the air in the test section is 80°F. A Pitot tube is inserted in the middle of the flow in the test section in order to measure the flow velocity. The pressure measured by the Pitot tube is 2200 lb/ft<sup>2</sup>. Calculate the flow velocity in the test section.

#### ■ Solution

We first change the inconsistent units of atm and °F into consistent units in the English engineering system:

$$p = 0.98(2116) = 2074 \text{ lb/ft}^2$$

$$T = 80 + 460 = 540^\circ\text{R}$$

Thus, from the equation of state

$$\rho = \frac{p}{RT} = \frac{2074}{(1716)(540)} = 0.002238 \text{ slug/ft}^3$$

The Pitot tube measures the total pressure;

$$p_0 = 2200 \text{ lb/ft}^2$$

From Eq. (4.65), we have

$$V_1 = \sqrt{\frac{2(p_0 - p)}{\rho}} = \sqrt{\frac{2(2200 - 2074)}{0.002238}} = \boxed{335.6 \text{ ft/s}}$$

Wind tunnel operators sometimes like to talk about air velocities in terms of miles per hour. Recalling that  $88 \text{ ft/s} = 60 \text{ mph}$ , we have

$$V_1 = \left(\frac{60}{88}\right)(335.6) = \boxed{229 \text{ mph}}$$

### EXAMPLE 4.25

---

Consider a low-speed subsonic wind tunnel with an open test section (Fig. 4.20b). The ambient pressure in the room is 1 atm, and the temperature of the air in the test section is  $15^\circ\text{C}$ . A Pitot tube is mounted in the test section. The tunnel is turned on, and the air velocity in the test section is adjusted to be 110 m/sec. What is the subsequent reading from the Pitot tube?

#### ■ Solution

Change to consistent units.

$$p = 1 \text{ atm} = (1.01 \times 10^5)(1) = 1.01 \times 10^5 \text{ N/m}^2$$

$$T = 15^\circ\text{C} = 273 + 15 = 288 \text{ K}$$

Thus,

$$\rho = \frac{p}{RT} = \frac{1.01 \times 10^5}{(287)(288)} = 1.22 \text{ kg/m}^3$$

From Eq. (4.62),

$$p_0 = p + \frac{1}{2}\rho V^2 = 1.01 \times 10^5 + \frac{1}{2}(1.22)(110)^2$$

$$p_0 = \boxed{1.084 \times 10^5 \text{ N/m}^2}$$

In units of atmospheres, we have

$$p_0 = \frac{1.084 \times 10^5}{1.01 \times 10^5} = \boxed{1.07 \text{ atm}}$$

### EXAMPLE 4.26

An airplane is flying at sea level at a speed of 100 m/s. Calculate [page 198](#) the free-stream dynamic pressure and total pressure.

### ■ Solution

Dynamic pressure is defined by Eq. (4.63).

$$q_{\infty} = \frac{1}{2} \rho_{\infty} V_{\infty}^2 = \frac{1}{2} (1.23)(100)^2 = \boxed{6.15 \times 10^3 \text{ N/m}^2}$$

Total pressure, for *incompressible flow*, is given by the sum of the static and dynamic pressures, that is, Eq. (4.64). The total pressure of the free stream is

$$p_0 = \rho_{\infty} + q_{\infty} = 1.01 \times 10^5 + 0.0615 \times 10^5 = \boxed{1.07 \times 10^5 \text{ N/m}^2}$$

## 4.11.2 Subsonic Compressible Flow

The results of Sec. 4.11.1 are valid for airflows where  $M < 0.3$ —that is, where the flow can reasonably be assumed to be incompressible. This is the flight regime of small, piston-engine private aircraft. For higher-speed flows, but where the Mach number is still less than 1 (high-speed subsonic flows), other equations must be used. This is the flight regime of commercial jet transports such as the Boeing 747 and the McDonnell-Douglas DC-10 and of many military aircraft. For these cases, compressibility must be taken into account, as follows.

Consider the definition of enthalpy:  $h = e + pv$ . Because  $h = cpT$  and  $e = cvT$ , then  $cpT = cvT + RT$ , or

$$c_p - c_v = R \quad (4.68)$$

Divide Eq. (4.68) by  $c_p$ :

$$\begin{aligned} 1 - \frac{1}{c_p/c_v} &= \frac{R}{c_p} \\ 1 - \frac{1}{\gamma} &= \frac{\gamma - 1}{\gamma} = \frac{R}{c_p} \end{aligned} \quad \boxed{c_p = \frac{\gamma R}{\gamma - 1}} \quad (4.69)$$

or

Equation (4.69) holds for a perfect gas with constant specific heats. [page 199](#) It is a necessary thermodynamic relation for use in the energy equation, as follows.

Consider again a Pitot tube in a flow, as shown in Figs. 4.17 and 4.19. Assume that the flow velocity  $V_1$  is high enough that compressibility must be taken into account. As usual, the flow is isentropically compressed to zero velocity at the stagnation point on the nose of the probe. The values of the stagnation, or total, pressure and temperature at this point are  $p_0$  and  $T_0$ , respectively. From the energy equation, Eq. (4.42), written between a point in the free-stream flow where the temperature and velocity are  $T_1$  and  $V_1$ , respectively, and the stagnation point, where the velocity is zero and the temperature is  $T_0$ ,

$$c_p T_1 + \frac{1}{2} V_1^2 = c_p T_0$$

or

$$\frac{T_0}{T_1} = 1 + \frac{V_1^2}{2 c_p T_1} \quad (4.70)$$

Substitute Eq. (4.69) for  $c_p$  in Eq. (4.70):

$$\frac{T_0}{T_1} = 1 + \frac{V_1^2}{2[\gamma R/(\gamma - 1)]T_1} = 1 + \frac{\gamma - 1}{2} \frac{V_1^2}{\gamma R T_1} \quad (4.71)$$

However, from Eq. (4.54) for the speed of sound,

$$a_1^2 = \gamma R T_1$$

Thus, Eq. (4.71) becomes

$$\frac{T_0}{T_1} = 1 + \frac{\gamma - 1}{2} \frac{V_1^2}{a_1^2} \quad (4.72)$$

Because the Mach number  $M_1 = V_1/a_1$ , Eq. (4.72) becomes

$$\frac{T_0}{T_1} = 1 + \frac{\gamma - 1}{2} M_1^2 \quad (4.73)$$

Because the gas is *isentropically* compressed at the nose of the Pitot [page 200](#) probe in Figs. 4.17 and 4.18, Eq. (4.37) holds between the free stream and the stagnation point. That is,  $p_0/p_1 = (\rho_0/\rho_1)\gamma = (T_0/T_1)\gamma^{1/(\gamma-1)}$ . Therefore, from Eq. (4.73), we obtain

$$\frac{p_0}{p_1} = \left(1 + \frac{\gamma - 1}{2} M_1^2\right)^{\gamma/(\gamma-1)} \quad (4.74)$$

$$\frac{\rho_0}{\rho_1} = \left(1 + \frac{\gamma - 1}{2} M_1^2\right)^{1/(\gamma-1)}$$

Equations (4.73) to (4.75) are fundamental and important relations(4.75) for compressible, isentropic flow. They apply to many other practical problems in addition to the Pitot tube. Note that Eq. (4.73) holds for adiabatic flow, whereas Eqs. (4.74) and (4.75) contain the additional assumption of frictionless (hence isentropic) flow. Also, from a slightly different perspective, Eqs. (4.73) to (4.75) determine the total temperature, density, and pressure— $T_0$ ,  $\rho_0$ , and  $p_0$ —at any point in the flow where the static temperature, density, and pressure are  $T_1$ ,  $\rho_1$ , and  $p_1$  and where the Mach number is  $M_1$ . In other words, reflecting the earlier discussion of the definition of total conditions, Eqs. (4.73) to (4.75) give the values of  $p_0$ ,  $T_0$ , and  $\rho_0$  that are associated with a point in the flow where the pressure, temperature, density, and Mach number are  $p_1$ ,  $T_1$ ,  $\rho_1$ , and  $M_1$ , respectively. These equations also demonstrate the powerful influence of Mach number in aerodynamic flow calculations. It is very important to note that the ratios  $T_0/T_1$ ,  $p_0/p_1$ , and  $\rho_0/\rho_1$  are functions of  $M_1$  only (assuming that  $\gamma$  is known;  $\gamma = 1.4$  for normal air).

Returning to our objective of measuring airspeed, and solving Eq. (4.74) for  $M_1$ , we obtain

$$M_1^2 = \frac{2}{\gamma - 1} \left[ \left( \frac{p_0}{p_1} \right)^{\frac{(\gamma-1)\gamma}{\gamma}} - 1 \right] \quad (4.76)$$

Hence, for subsonic compressible flow, the ratio of total to static pressure  $p_0/p_1$  is a direct measure of Mach number. Thus, individual measurements of  $p_0$  and  $p_1$  in conjunction with Eq. (4.76) can be used to calibrate an instrument in the cockpit of an airplane called a *Mach meter*, where the dial reads directly in terms of the flight Mach number of the airplane.

To obtain the actual flight velocity, recall that  $M_1 = V_1/a_1$ ; so Eq. (4.76) becomes

$$V_1^2 = \frac{2a_1^2}{\gamma - 1} \left[ \left( \frac{p_0}{p_1} \right)^{\frac{(\gamma-1)\gamma}{\gamma}} - 1 \right] \quad (4.77a)$$

Equation (4.77a) can be rearranged algebraically as

$$V_1^2 = \frac{2a_1^2}{\gamma - 1} \left[ \left( \frac{p_0 - p_1}{p_1} + 1 \right)^{\frac{(\gamma-1)\gamma}{\gamma}} - 1 \right] \quad (4.77b)$$

Equations (4.77a) and (4.77b) give the *true* airspeed of the airplane. [page 201](#)  
However, they require a knowledge of  $a_1$  and hence  $T_1$ . The static

temperature in the air surrounding the airplane is difficult to measure. Therefore, all high-speed (but subsonic) airspeed indicators are calibrated from Eq. (4.77b), assuming that  $a_1$  is equal to the standard sea-level value  $a_s = 340.3 \text{ m/s} = 1116 \text{ ft/s}$ . Moreover, the airspeed indicator is designed to sense the actual pressure *difference*  $p_0 - p_1$  in Eq. (4.77b), not the pressure *ratio*  $p_0/p_1$ , as appears in Eq. (4.77a). Hence, the form of Eq. (4.77b) used to define a calibrated airspeed is as follows:

$$V_{\text{cal}}^2 = \frac{2a_s^2}{\gamma - 1} \left[ \left( \frac{p_0 - p_1}{p_s} + 1 \right)^{\frac{(\gamma-1)\gamma}{\gamma-1}} - 1 \right] \quad (4.78)$$

where  $a_s$  and  $p_s$  are the standard sea-level values of the speed of sound and static pressure, respectively.

Again we emphasize that Eqs. (4.76) to (4.78) must be used to measure airspeed when  $M_1 > 0.3$ —that is, when the flow is compressible. Equations based on Bernoulli's equation, such as Eqs. (4.66) and (4.67), *are not valid* when  $M_1 > 0.3$ .

So once again, just as in the case of low-speed airplanes flying in the incompressible flow regime, we see that a Pitot tube is used on high-speed subsonic airplanes for airspeed measurement. The first mass-produced American jet fighter, the Lockheed P-80 (later designated the F-80), went into service beginning in 1945, and was the first American jet fighter to participate in the Korean War, beginning in 1950. The F-80s shown in Fig. 4.24 have the Pitot tube mounted on the leading edge of the vertical tail, as shown in the detail in Fig. 4.25. Also, return to Fig. 2.15, which shows the North American F-86, America's first swept-wing jet fighter, introduced during the Korean War with great success. Note the Pitot tube extending ahead of the right wing tip. The F-86 was a high-speed subsonic airplane capable of exceeding the speed of sound in a dive.

### EXAMPLE 4.27

A high-speed subsonic McDonnell-Douglas DC-10 airliner is flying at a pressure altitude of 10 km. A Pitot tube on the wing tip measures a pressure of  $4.24 \times 10^4 \text{ N/m}^2$ . Calculate the Mach number at which the airplane is flying. If the ambient air temperature is 230 K, calculate the true airspeed and the calibrated airspeed.

## ■ Solution

From the standard atmosphere table, App. A, at an altitude of 10,000 m,  $p = 2.65 \times 10^4 \text{ N/m}^2$ . Hence, from Eq. (4.76),



**Figure 4.24** Lockheed F-80s.

(Source: *U.S. Air Force.*)

---

[page 202](#)



**Figure 4.25** A detail of the vertical tail of the F-80 showing the Pitot tube. The airplane is on display at the National Air and Space Museum.

(Source: Courtesy of John Anderson.)

$$M_1^2 = \frac{2}{\gamma - 1} \left[ \left( \frac{p_0}{p_1} \right)^{(y-1)/y} - 1 \right] = \frac{2}{1.4 - 1} \left[ \left( \frac{4.24 \times 10^4}{2.65 \times 10^4} \right)^{0.286} - 1 \right] \\ = 0.719$$

Thus

$$M_1 = 0.848$$

It is given that  $T_1 = 230$  K; hence

$$a_1 = \sqrt{\gamma RT_1} = \sqrt{1.4(287)(230)} = 304.0 \text{ m/s}$$

From Eq. (4.77a),

$$V_1^2 = \frac{2a_1^2}{\gamma - 1} \left[ \left( \frac{p_0}{p_1} \right)^{(y-1)/y} - 1 \right] = \frac{2(304.0)^2}{1.4 - 1} \left[ \left( \frac{4.24}{2.65} \right)^{0.286} - 1 \right] \\ V_1 = 258 \text{ m/s true airspeed}$$

*Note:* As a check, from the definition of Mach number,

$$V_1 = M_1 a_1 = 0.848(304.0) = 258 \text{ m/s}$$

The calibrated airspeed can be obtained from Eq. (4.78):

page 203

$$V_{\text{cal}}^2 = \frac{2a_s^2}{\gamma - 1} \left[ \left( \frac{p_0 - p_1}{p_s} + 1 \right)^{(y-1)/y} - 1 \right] \\ = \frac{2(340.3)^2}{1.4 - 1} \left[ \left( \frac{4.24 \times 10^4 - 2.65 \times 10^4}{1.01 \times 10^5} + 1 \right)^{0.286} - 1 \right] \\ V_{\text{cal}} = 157 \text{ m/s}$$

The difference between true and calibrated airspeeds is 39 percent. *Note:* Just out of curiosity, let us calculate  $V_1$  the *wrong* way; that is, let us apply Eq. (4.66), which was obtained from Bernoulli's equation for incompressible flow. Equation (4.66) does *not* apply to the high-speed case of this problem, but let us see what result we get anyway:

$$\rho = \frac{p_1}{RT_1} = \frac{2.65 \times 10^4}{287(230)} = 0.4 \text{ kg/m}^3$$

From Eq. (4.66),

$$V_{\text{true}} = \sqrt{\frac{2(p_0 - p)}{\rho}} = \sqrt{\frac{2(4.24 - 2.65) \times 10^4}{0.4}} = 282 \text{ m/s incorrect answer}$$

Compared with  $V_1 = 258 \text{ m/s}$ , an error of 9.3 percent is introduced in the calculation of true airspeed by using the *incorrect* assumption of incompressible flow. This error grows rapidly as the Mach number approaches unity, as discussed in a subsequent section.

### EXAMPLE 4.28

Consider an F-80 (Fig. 4.24) flying at 594 mph at standard sea level. (This is the maximum speed of the F-80C at sea level.) Calculate the pressure and temperature at the stagnation point on the nose of the airplane.

#### ■ Solution

[page 204](#)

At standard sea level,  $p_\infty = 2116 \text{ lb/ft}^2$  and  $T_\infty = 519^\circ\text{R}$ .

$$a_\infty = \sqrt{\gamma RT_\infty} = \sqrt{(1.4)(1716)(519)} = 1117 \text{ ft/s}$$

*Note:* This is the standard sea-level speed of sound in the English engineering system of units. In Sec. 4.9 we gave the standard sea-level speed of sound in SI units, namely  $a_\infty = 340.3 \text{ m/s}$ . You will find it convenient to know the sea-level speed of sound:

$$a_\infty = 340 \text{ m/s} = 1117 \text{ ft/s} = 762 \text{ mph}$$

$$M_\infty = \frac{V_\infty}{a_\infty} = \frac{594}{762} = 0.78$$

*Note:* Because Mach number is a dimensionless ratio, we can use inconsistent units such as miles per hour, as long as both the numerator and denominator are in the same units.

From Eq. (4.74), we obtain the total pressure, which is the pressure at the stagnation point.

$$\frac{p_0}{p_\infty} = \left(1 + \frac{\gamma - 1}{2} M_\infty^2\right)^{\frac{1}{\gamma-1}} = \left[1 + \frac{1.4 - 1}{2} (0.78)^2\right]^{\frac{1.4}{1.4-1}} = (1.122)^{3.5} = 1.496$$

$$p_0 = 1496 \quad p_\infty = 1.496 \quad (2116) = \boxed{3166 \text{ lb/ft}^2}$$

From Eq. (4.73), we obtain the total temperature, which is the temperature at the stagnation point:

$$\frac{T_0}{T_\infty} = 1 + \frac{\gamma - 1}{2} M_\infty^2 = 1 + (0.2)(0.78)^2 = 1.122$$

$$T_0 = 1.122 \quad T_\infty = 1.122 \quad (519) = \boxed{582.3^\circ\text{R}}$$

*Note:* We can check the accuracy of these answers by calculating the stagnation density first from the equation of state:

$$\rho_0 = \frac{p_0}{RT_0} = \frac{3166}{(1716)(582.3)} = 3.168 \times 10^{-3} \text{ slug/ft}^3$$

then from Eq. (4.75),

$$\frac{\rho_0}{\rho_\infty} = \left(1 + \frac{\gamma - 1}{2} M_\infty^2\right)^{\frac{1}{\gamma-1}} = [1 + 0.2 (0.78)^2]^{\frac{1}{0.2}} = (1.1217)^{2.5} = 1.3326$$

$$\rho_0 = 1.3326 \quad \rho_\infty = 1.3326 \quad (0.002377) = \boxed{3.168 \times 10^{-3} \text{ slug/ft}^3}$$

The numbers check.

page 205

### EXAMPLE 4.29

At a given point in a flow field of air, the Mach number, velocity, and density are 0.9, 300 m/s, and 1.2 kg/m<sup>3</sup>, respectively. Calculate at this point (a) the total pressure and (b) the dynamic pressure.

#### ■ Solution

a. First, we need the static pressure, and to obtain this from the equation of state, we need the temperature.

$$V = Ma = M\sqrt{\gamma RT}$$

$$T = \frac{V^2}{\gamma RM^2} = \frac{(300)^2}{(1.4)(287)(0.9)^2} = 276.5 \text{ K}$$

Thus,

$$p = \rho RT = (1.2)(287)(276.5) = 0.952 \times 10^5 \text{ N/m}^2$$

From Eq. (4.74),

$$\frac{p_0}{p} = \left(1 + \frac{\gamma - 1}{2} M^2\right)^{\frac{\gamma}{\gamma-1}} = [1 + 0.2 (0.9)^2]^{3.5} = (1.162)^{3.5} = 1.691$$

$$p_0 = 1.691 p = 1.691 (0.952 \times 10^5) = \boxed{1.61 \times 10^5 \text{ N/m}^2}$$

b. The dynamic pressure is *defined* by Eq. (4.63) as

$$q = \frac{1}{2} \rho V^2$$

$$q = \frac{1}{2} (1.2)(300)^2 = \boxed{5.4 \times 10^4 \text{ N/m}^2}$$

*Important Note:* For a *compressible* flow, the dynamic pressure is *not* equal to the difference between total and static pressure. *Only* for an incompressible flow is this true. We emphasize that Eq. (4.64) holds *only* for an incompressible flow. In the present example, we have  $p_0 = 1.61 \times 10^5 \text{ N/m}^2$  and  $p = 0.95222 \times 10^5 \text{ N/m}^2$ . Thus, the difference between total and static pressures is

$$p_0 - p = (1.61 - 0.952) \times 10^5 = 6.58 \times 10^4 \text{ N/m}^2$$

This is *not* equal to the value of  $q = 5.4 \times 10^4 \text{ N/m}^2$ , obtained above.

---

page 206

### 4.11.3 Supersonic Flow


Airspeed measurements in supersonic flow (i.e., for  $M > 1$ ) are qualitatively different from those for subsonic flow. In supersonic flow, a *shock wave* will form ahead of the Pitot tube, as shown in Fig. 4.26. Shock waves are very thin regions of the flow (for example,  $10^{-4} \text{ cm}$ ) across which some severe changes in the flow properties take place. Specifically, as a fluid element flows through a shock wave,

1. The Mach number *decreases*.


2. The static pressure *increases*.
3. The static temperature *increases*.
4. The flow velocity *decreases*.
5. The total pressure  $p_0$  *decreases*.
6. The total temperature  $T_0$  *stays the same* for a perfect gas.

These changes across a shock wave are shown in Fig. 4.27.

How and why does a shock wave form in supersonic flow? There are various answers with various degrees of sophistication. However, the essence is as follows. Refer to Fig. 4.17, which shows a Pitot tube in subsonic flow. The gas molecules that collide with the probe set up a disturbance in the flow. This disturbance is communicated to other regions of the flow, away from the probe, by means of weak pressure waves (essentially sound waves) propagating at the local speed of sound. If the flow velocity  $V_1$  is less than the speed of sound, as in Fig. 4.17, then the pressure disturbances (which are traveling at the speed of sound) will work their way upstream and eventually will be felt in all regions of the flow. In contrast, refer to Fig. 4.26, which shows a Pitot tube in supersonic flow. Here  $V_1$  is greater than the speed of sound. Thus, pressure disturbances that are created at the probe surface and that propagate away at the speed of sound *cannot* work their way upstream. Instead, these disturbances coalesce at a finite distance from the probe and form a natural phenomenon called a *shock wave*, as shown in Figs. 4.26 and 4.27. The flow upstream of the shock wave (to the left of the shock) does not feel the pressure disturbance; that is, the presence of the Pitot tube is not communicated to the flow upstream of the shock. The presence of the Pitot tube is felt only in the regions of flow behind the shock wave. The shock wave is a thin boundary in a supersonic flow, across which major changes in flow properties take place and which divides the region of undisturbed flow upstream from the region of disturbed flow downstream.

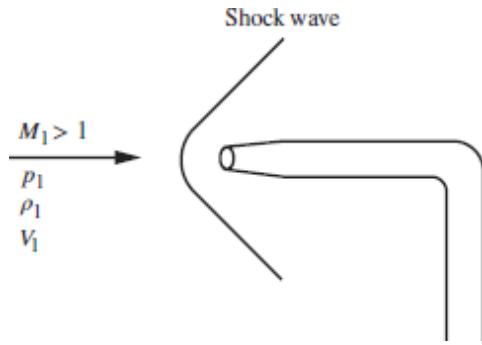

**Figure 4.26** Pitot tube in supersonic flow.

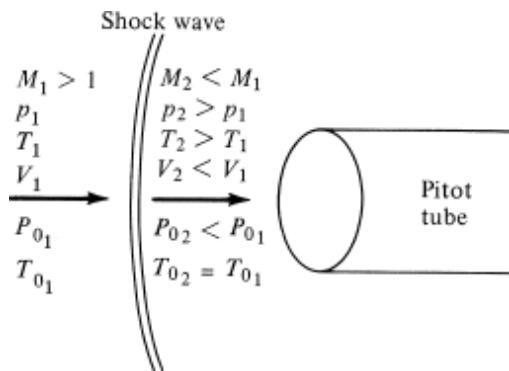

**Figure 4.27** Changes across a shock wave in front of a Pitot tube in supersonic flow.

Whenever a solid body is placed in a supersonic stream, shock waves will occur. Figure 4.28 shows photographs of the supersonic flow over several aerodynamic shapes. The shock waves, which are generally not visible to the naked eye, are made visible in Fig. 4.28 by means of a specially designed optical system, called a *schlieren system*, and a *shadow graph system*. (An example in which shock waves are sometimes visible to the naked eye is on the wing of a high-speed subsonic transport such as a Boeing 707. As we will discuss shortly, there are regions of local supersonic flow on the upper surface of the wing, and these supersonic regions are generally accompanied by weak shock waves. If the sun is almost directly overhead and if you look out the window along the span of the wing, you can sometimes see these waves dancing back and forth on the wing surface.)


Consider again the measurement of airspeed in a supersonic flow. The measurement is complicated by the presence of the shock wave in Fig. 4.26 because the flow through a shock wave is *nonisentropic*. Within the thin

structure of a shock wave itself, very large friction and thermal conduction effects are taking place. Hence, neither adiabatic nor frictionless conditions hold; therefore, the flow is *not* isentropic. As a result, Eq. (4.74) and hence Eqs. (4.76) and (4.77a) do not hold across the shock wave. A major consequence is that the total pressure  $p_0$  is smaller behind the shock wave than in front of it. In turn, the total pressure measured at the nose of the Pitot probe in supersonic flow will *not* be the same value as that associated with the free stream—that is, as associated with  $M_1$ . Consequently, a separate shock wave theory must be applied to relate the Pitot tube measurement to the value of  $M_1$ . This theory is beyond the scope of our presentation, but the resulting formula is given here for the sake of completeness:


$$\frac{p_{0_2}}{p_1} = \left[ \frac{(\gamma + 1)^2 M_1^2}{4\gamma M_1^2 - 2(\gamma - 1)} \right]^{\frac{\gamma(\gamma-1)}{\gamma+1}} \frac{1 - \gamma + 2\gamma M_1^2}{\gamma + 1} \quad (4.79)$$

This equation is called the *Rayleigh Pitot tube formula*. It relates the Pitot tube measurement of total pressure behind the shock wave  $p_{0_2}$  and a measurement of free-stream static pressure (again obtained by a static pressure orifice somewhere on the surface of the airplane) to the free-stream supersonic Mach number  $M_1$ . In this fashion, measurements of  $p_{0_2}$  and  $p_1$ , along with Eq. (4.79), allow the calibration of a Mach meter for supersonic flight.


The delta-winged supersonic F-102A fighter is shown in Fig. 4.29. Extending forward of the pointed nose is a Pitot tube for airspeed measurement. As in the case of subsonic compressible flow, for supersonic flow the Pitot tube measurement in conjunction with a free-stream static pressure measurement leads directly to a measurement of the free-stream Mach number. The Mach number in the cockpit of the airplane, however, is calibrated according to Eq. (4.76) for subsonic flight, and according to Eq. (4.79) for supersonic flight. In both cases, the Mach number is the quantity that is obtained directly. To obtain the velocity, additional information is required.

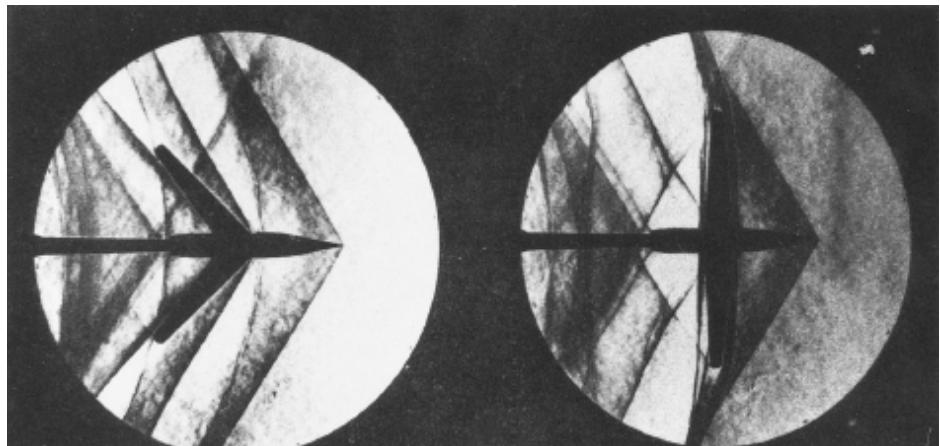

(a)

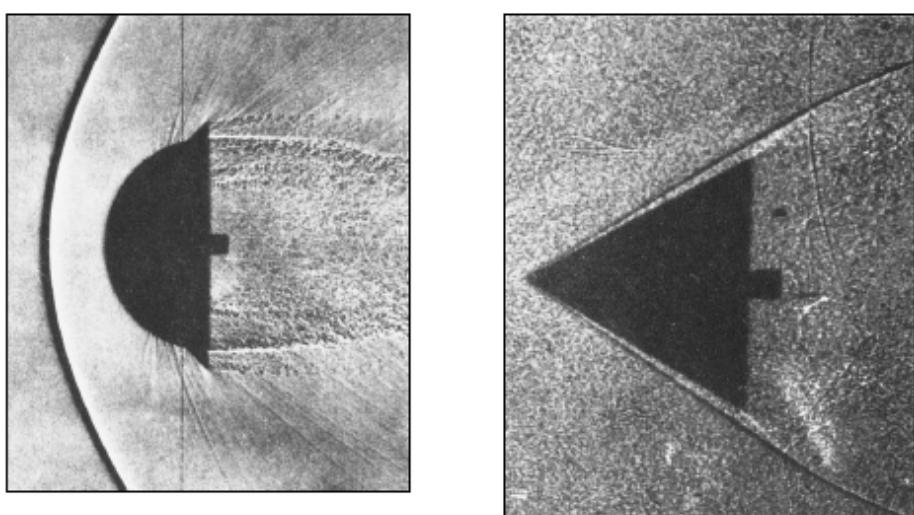

(b)

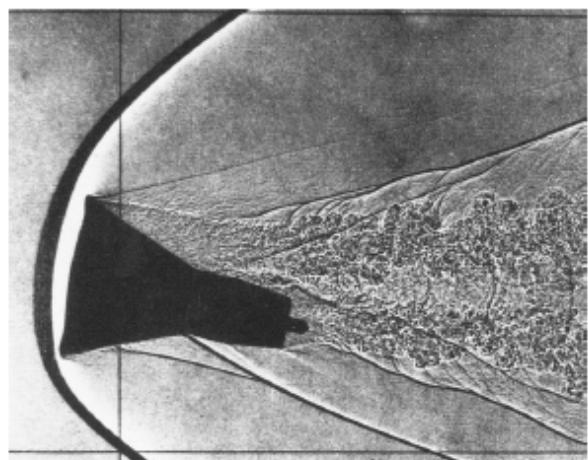

(c)

**Figure 4.28** (a) Shock waves on a swept-wing airplane (left) and on a straight-wing airplane (right). Schlieren pictures taken in a supersonic wind tunnel at NASA Ames Research Center. (b) Shock waves on a blunt body (left) and sharp-nosed body (right). (c) Shock waves on a model of the *Gemini* manned space capsule. Parts b and c are shadow graphs of the flow.

(Source: (a) & (c): NASA Ames Research Center; (b): NASA.)



**Figure 4.29** Convair F-102A supersonic fighter from the 1950s and 1960s.

(Source: NASA.)

**EXAMPLE  
4.30**

An experimental rocket-powered aircraft is flying at a velocity of 3000 mi/h at an altitude where the ambient pressure and temperature are  $151 \text{ lb}/\text{ft}^2$  and

390°R, respectively. A Pitot tube is mounted in the nose of the aircraft. What is the pressure measured by the Pitot tube?

### ■ Solution

First we ask: Is the flow supersonic or subsonic? That is, what is  $M_1$ ? From Eq. (4.54),

$$a_1 = \sqrt{\gamma R T_1} = \sqrt{1.4(1716)(390)} = 968.0 \text{ ft/s}$$

$$V_1 = 3000 \left( \frac{88}{60} \right) = 4400 \text{ ft/s}$$

$$M_1 = \frac{V_1}{a_1} = \frac{4400}{968.0} = 4.54$$

Hence  $M_1 > 1$ ; the flow is supersonic. There is a shock wave in front of the Pitot tube; therefore Eq. (4.74) developed for isentropic flow does *not* hold. Instead, Eq. (4.79) must be used:

$$\begin{aligned} \frac{p_{0_2}}{p_1} &= \left[ \frac{(\gamma + 1)^2 M_1^2}{4\gamma M_1^2 - 2(\gamma - 1)} \right]^{\gamma/(\gamma-1)} \frac{1 - \gamma + 2\gamma M_1^2}{\gamma + 1} \\ &= \left[ \frac{(2.4)^2 (4.54)^2}{4(1.4)(4.54)^2 - 2(0.4)} \right]^{3.5} \frac{1 - 1.4 + 2(1.4)(4.54)^2}{2.4} = 27 \end{aligned}$$

page 209

$$\text{Thus } p_{0_2} = 27p_1 = 27(151) = \boxed{4077 \text{ lb/ft}^2}$$

*Note:* Again, out of curiosity, let us calculate the *wrong* answer. If we had *not* taken into account the shock wave in front of the Pitot tube at supersonic speeds, then Eq. (4.74) would give

$$\frac{p_0}{p_1} = \left( 1 + \frac{\gamma - 1}{2} M_1^2 \right)^{\gamma/(\gamma-1)} = \left[ 1 + \frac{0.4}{2} (4.54)^2 \right]^{3.5} = 304.2$$

Thus  $p_0 = 304.2 p_1 = 304.2(151) = 45,931 \text{ lb/ft}^2$  incorrect answer

Note that the incorrect answer is off by a factor of more than 10!

### EXAMPLE 4.31

Consider the F-102A shown in Fig. 4.29. The airplane is flying at a supersonic speed at a standard altitude of 8 km. The pressure measured by

the Pitot tube is  $9.27 \times 10^4 \text{ N/m}^2$ . At what Mach number is the airplane flying?

## ■ Solution

From App. A, for an altitude of 8 km,  $p = 3.5651 \times 10^4 \text{ N/m}^2$ . Hence, in Eq. (4.79),

$$\frac{p_{0_2}}{p_1} = \frac{9.27 \times 10^4}{3.5651 \times 10^4} = 2.6$$

Eq. (4.79) is an implicit relation for  $M_1$ ; there is no easy way that we can turn the equation inside out and obtain an explicit analytic relation for  $M_1 = f(p_{0_2}/p_1)$ . So let us solve Eq. (4.79) for  $M_1$  by trial and error, by assuming various values of  $M_1$  and ultimately finding the value that gives  $(p_{0_2}/p_1) = 2.6$ . Repeating Eq. (4.79),

page 210

$$\frac{p_{0_2}}{p_1} = \left[ \frac{(\gamma + 1)^2 M_1^2}{4\gamma M_1^2 - 2(\gamma - 1)} \right]^{\frac{1}{\gamma-1}} \frac{1 - \gamma + 2\gamma M_1^2}{\gamma + 1}$$

For  $\gamma = 1.4$ , this equation becomes

$$\frac{p_{0_2}}{p_1} = \left[ \frac{5.76 M_1^2}{5.6 M_1^2 - 0.8} \right]^{3.5} (-0.1667 + 1.1667 M_1^2)$$

Results from this equation are shown in the following table:

$M_1$ (assumed)	$\left[ \frac{5.76 M_1^2}{5.6 M_1^2 - 0.8} \right]^{3.5}$	$(-0.1667 + 1.1667 M_1^2)$	$\frac{p_{0_2}}{p_1}$
1	1.893	1	1.893
1.1	1.713	1.245	2.133
1.2	1.591	1.513	2.408
1.3	1.503	1.805	2.71
1.25	1.544	1.656	2.557
1.26	1.535	1.686	2.587
1.27	1.527	1.715	2.619

Comparing the right-hand column with the given value of  $p_{0_2}/p_1 = 2.6$ , we see that, to three significant figures, the value of  $p_{0_2}/p_1 = 2.58$  is the closest. This corresponds to the assumed value of  $M_1 = 1.26$ . Hence, the Mach number of the F-102A in this case is

$$M_1 = 1.26$$

#### 4.11.4 Summary

As a summary of the measurement of airspeed, note that different results apply to different regimes of flight: low speed (incompressible), high-speed subsonic, and supersonic. These differences are fundamental and serve as excellent examples of the application of the different laws of aerodynamics developed in previous sections. Moreover, many of the formulas developed in this section apply to other practical problems, as discussed in Sec. 4.12.

### 4.12 SOME ADDITIONAL CONSIDERATIONS

Section 4.11 contains information that is considerably more general than just the application to airspeed measurements. The purpose of this section is to elaborate on some of the ideas and results discussed in Sec. 4.11.

page 211

#### 4.12.1 More about Compressible Flow

Equations (4.73) through (4.75), relating the ratios of  $T_0/T_1$ ,  $p_0/p_1$ , and  $\rho_0/\rho_1$  to the local Mach number  $M_1$ , apply in general to any isentropic flow. We state without proof that the values of  $T_0$ ,  $p_0$ , and  $\rho_0$  are constant throughout a given isentropic flow. In conjunction with Eqs. (4.73) to (4.75), this fact gives us a powerful tool for the analysis of an isentropic flow. For example, let us again consider the isentropic flow over an airfoil, which was the problem solved in Example 4.12. But now we have more information and a broader perspective from which to approach this problem.

#### EXAMPLE 4.32

Consider the isentropic flow over the airfoil sketched in Fig. 4.30. The free-stream pressure, velocity, and density are 2116 lb/ft<sup>2</sup>, 500 mi/h, and 0.002377 slug/ft<sup>3</sup>, respectively. At a given point  $A$  on the airfoil, the pressure is 1497 lb/ft<sup>2</sup>. What are the Mach number and the velocity at point  $A$ ?

#### ■ Solution


This example is the same as Example 4.12, with the additional requirement to calculate the Mach number at point  $A$ . However, we use a different solution procedure in this example. First we calculate the free-stream Mach number, as follows:

$$T_{\infty} = \frac{p_{\infty}}{\rho_{\infty} R} = \frac{2116}{0.002377(1716)} = 518.8^{\circ}\text{R}$$

$$a_{\infty} = \sqrt{\gamma RT_{\infty}} = \sqrt{(1.4)(1716)(518.8)} = 1116.4 \text{ ft/s}$$

$$V_{\infty} = 500 \text{ mi/h} = 500 \left(\frac{88}{60}\right) \text{ ft/s} = 733.3 \text{ ft/s}$$

$$M_{\infty} = \frac{V_{\infty}}{a_{\infty}} = \frac{733.3}{1116.4} = 0.6568$$

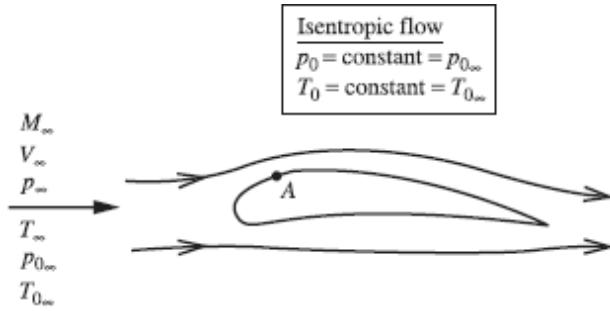

**Figure 4.30** Total pressure and total temperature are constant throughout an isentropic flow.

The free-stream total temperature is, from Eq. (4.73),

page 212

$$\frac{T_{0,\infty}}{T_{\infty}} = 1 + \frac{\gamma - 1}{2} M_{\infty}^2 = 1 + 0.2(0.6568)^2 = 1.0863$$

$$T_{0,\infty} = 1.0863 T_{\infty} = 1.0863(518.8) = 563.6^{\circ}\text{R}$$

The free-stream total pressure is, from Eq. (4.74),

$$\frac{P_{0,\infty}}{P_{\infty}} = \left(1 + \frac{\gamma - 1}{2} M_{\infty}^2\right)^{\gamma/(\gamma-1)} = (1.0863)^{3.5} = 1.336$$

$$p_{0,\infty} = 1.336(2116) = 2827 \text{ lb/ft}^2$$

Because the total temperature and total pressure are constant throughout the isentropic flow over the airfoil, the total temperature and total pressure at point  $A$  are the same as the free-stream values:

$$T_{0_A} = T_{0_\infty} = 563.6^\circ\text{R}$$

$$p_{0_A} = p_{0_\infty} = 2827 \text{ lb/ft}^2$$

We can solve for the Mach number at point  $A$  by applying Eq. (4.74) at point  $A$ :

$$\frac{P_{0_A}}{P_A} = \left(1 + \frac{\gamma - 1}{2} M_A^2\right)^{\gamma/\gamma-1}$$

$$\frac{2827}{1497} = (1 + 0.2M_A^2)^{3.5}$$

or  $1 + 0.2M_A^2 = (1.888)^{1/3.5} = (1.888)^{0.2857} = 1.1991$

or  $M_A = \sqrt{\frac{1.1991 - 1}{0.2}} = \boxed{0.9977}$

*Note:* The Mach number at point  $A$  is essentially 1; we have nearly sonic flow at point  $A$ . The static temperature at point  $A$  can be obtained from Eq. (4.73):

$$\frac{T_{0_A}}{T_A} = 1 + \frac{\gamma - 1}{2} M_A^2 = 1 + 0.2(0.9955)^2 = 1.1982$$

$$T_A = \frac{T_{0_A}}{1.1982} = \frac{563.6}{1.1982} = 470.4^\circ\text{R}$$

(*Note:* This result for  $T_A = 470.4^\circ\text{R}$  agrees well with the value of  $470.1^\circ\text{R}$  calculated in Example 4.12; the difference is due to roundoff error produced by carrying just four significant figures and the author's doing the calculations on a hand calculator.)

The velocity at point  $A$  can be obtained as follows:

---


$$a_A = \sqrt{\gamma RT_A} = \sqrt{1.4(1716)(470.4)} = 1063 \text{ ft/s}$$

$$V_A = a_A M_A = 1063(0.9955) = \boxed{1058 \text{ ft/s}}$$

page 213

(*Note:* This agrees well with the result  $V_A = 1061 \text{ ft/s}$  calculated in Example 4.12.)

The calculation procedure used in Example 4.32 is slightly longer than that used in Example 4.12; however, it is a more fundamental approach than that used in Example 4.12. Return to Example 4.12 and note that we had to employ a value of the specific heat  $cp$  to solve the problem. However, in the present calculation we did not need a value of  $cp$ . Indeed, the explicit use of

$cp$  is not necessary in solving isentropic compressible flows. Instead, we used  $\gamma$  and  $M$  to solve this example. The ratio of specific heats  $\gamma$  and the Mach number  $M$  are both examples of *similarity parameters* in aerodynamics. The concept and power of the similarity parameters for governing fluid flows are something you will study in more advanced treatments than this book. Suffice it to say here that *Mach number* is a powerful governing parameter for compressible flow and that the results depend on the value of  $\gamma$ , which is usually a fixed value for a given gas ( $\gamma = 1.4$  for air, as we use here). Example 4.32 shows the power of using  $M$  and  $\gamma$  for solving compressible flow problems. We will continue to see the power of  $M$  and  $\gamma$  in some of our subsequent discussions.

---

### 4.12.2 More about Equivalent Airspeed

Equivalent airspeed was introduced in Sec. 4.11.1 and expressed by Eq. (4.67) for low-speed flight, where the flow is assumed to be incompressible. However, the concept of equivalent airspeed has a broader meaning than just a value that comes from an airspeed indicator, which uses the standard sea-level density to determine its readout, as first explained in Sec. 4.11.1.

The general definition of equivalent airspeed can be introduced by the following example. Consider a Lockheed-Martin F-16 fighter cruising at a velocity of 300 m/s at an altitude of 7 km, where the free-stream density is 0.59 kg/m<sup>3</sup>. The velocity of 300 m/s is the airplane's true airspeed. At this speed and altitude, the dynamic pressure is  $\frac{1}{2}\rho_{\infty}V_{\infty}^2 = \frac{1}{2}(0.59)(300)^2 = 2.655 \times 10^4 \text{ N/m}^2$ . It is important to reinforce that dynamic pressure is a *definition*, defined by the quantity  $\frac{1}{2}\rho_{\infty}V_{\infty}^2$ . This definition holds no matter what the flight regime is—subsonic, supersonic, or whatever—and whether the flow is incompressible or compressible. Dynamic pressure  $q_{\infty}$  is just the definition

$$q_{\infty} \equiv \frac{1}{2}\rho_{\infty}V_{\infty}^2$$

Now imagine the F-16 flying at standard sea level, where the free-stream density is 1.23 kg/m<sup>3</sup>. *Question:* What velocity would it have to have at standard sea level to experience the *same dynamic pressure* that it had when flying at 300 m/s at the altitude of 7 km? The answer is easy to calculate:

$$(q_{\infty})_{\text{sea level}} = (q_{\infty})_{7 \text{ km}}$$

$$\left(\frac{1}{2}\rho_{\infty}V_{\infty}^2\right)_{\text{sea level}} = \left(\frac{1}{2}\rho_{\infty}V_{\infty}^2\right)_{7 \text{ km}}$$

Dropping the subscripts  $\infty$  for convenience, we have

page 214

$$V_{\text{sea level}} = V_{7 \text{ km}} \left(\frac{\rho}{\rho_s}\right)^{1/2}$$

where  $\rho$  is the density at 7 km and  $\rho_s$  is the standard sea-level density. Putting in the numbers, we have

$$V_{\text{sea level}} = 300 \left(\frac{0.59}{1.23}\right)^{1/2} = 207.8 \text{ m/s}$$

Hence, the F-16 flying at 300 m/s at 7-km altitude would have to fly at a velocity of 207.8 m/s at standard sea level to experience the same dynamic pressure. By definition, the F-16 flying at 300 m/s at 7-km altitude has an *equivalent airspeed* of 207.8 m/s.

This leads to the more general definition of equivalent airspeed, as follows. Consider an airplane flying at some true airspeed at some altitude. Its *equivalent airspeed* at this condition is defined as the velocity at which it would have to fly at standard sea level to *experience the same dynamic pressure*. The equation for equivalent airspeed is straightforward, as obtained in the preceding. It is

$$V_e = V \left(\frac{\rho}{\rho_s}\right)^{1/2}$$

where  $V_e$  is the equivalent airspeed,  $V$  is the true velocity at some altitude,  $\rho$  is the density at that altitude, and  $\rho_s$  is the standard sea-level density.

In retrospect, our first discussion of  $V_e$  in Sec. 4.11.1 is consistent with our discussions here; however, in Sec. 4.11.1, our discussion was focused on airspeed measurements in an incompressible flow.

The concept of equivalent airspeed is useful in studies of airplane performance that involve the aerodynamic lift and drag of airplanes. The lift and drag depend on the dynamic pressure,  $q_{\infty}$ , as we will see in Ch. 5). Giving the *equivalent airspeed* of an airplane is the same as stating its dynamic pressure, as discussed previously. Therefore, equivalent airspeed is sometimes used as a convenience in reporting and analyzing airplane performance data.

## 4.13 SUPERSONIC WIND TUNNELS AND ROCKET ENGINES

For more than a century, projectiles such as bullets and artillery shells have been fired at supersonic velocities. However, the main aerodynamic interest in supersonic flows arose after World War II with the advent of jet aircraft and rocket-propelled guided missiles. As a result, almost every aerodynamic laboratory has an inventory of supersonic and hypersonic wind tunnels to simulate modern high-speed flight. In addition to their practical importance, supersonic wind tunnels are an excellent example of the application of the fundamental laws of aerodynamics. The flow through rocket engine nozzles is another example of the same laws. In fact, the basic aerodynamics of supersonic wind tunnels and rocket engines are essentially the same, as discussed in this section.

First consider isentropic flow in a stream tube, as sketched in [page 215](#) Fig. 4.2. From the continuity equation, Eq. (4.2),

$$\rho A V = \text{const}$$

$$\text{or} \quad \ln \rho + \ln A + \ln V = \ln (\text{const})$$

Differentiating, we obtain

$$\frac{d\rho}{\rho} + \frac{dA}{A} + \frac{dV}{V} = 0 \quad (4.80)$$

Recalling the momentum equation, Eq. (4.8) (Euler's), we obtain

$$\begin{aligned} dp &= -\rho V dV \\ \text{Hence} \quad \rho &= -\frac{dp}{V dV} \end{aligned} \quad (4.81)$$

Substitute Eq. (4.81) into (4.80):

$$-\frac{d\rho}{dp} \frac{V dV}{dV} + \frac{dA}{A} + \frac{dV}{V} = 0 \quad (4.82)$$

Because the flow is isentropic,

$$\frac{d\rho}{dp} = \frac{1}{dp/d\rho} \equiv \frac{1}{(dp/d\rho)_{\text{isentropic}}} \equiv \frac{1}{a^2}$$

Thus, Eq. (4.82) becomes

$$-\frac{V dV}{a^2} + \frac{dA}{A} + \frac{dV}{V} = 0$$

Rearranging, we get

$$\frac{dA}{A} = \frac{V dV}{a^2} - \frac{dV}{V} = \left( \frac{V^2}{a^2} - 1 \right) \frac{dV}{V} \quad (4.83)$$

or

$$\boxed{\frac{dA}{A} = (M^2 - 1) \frac{dV}{V}}$$

Equation (4.83) is called the *area–velocity relation*, and it contains a wealth of information about the flow in the stream tube shown in Fig. 4.2. First note the mathematical convention that an increasing velocity and an increasing area correspond to positive values of  $dV$  and  $dA$ , respectively, whereas a decreasing velocity and a decreasing area correspond to negative values of  $dV$  and  $dA$ . This is the normal convention for differentials from differential calculus. With this in mind, Eq. (4.83) yields the following physical phenomena:


1. If the flow is subsonic ( $M < 1$ ), for the velocity to increase [page 216](#) ( $dV$  positive), the area must decrease ( $dA$  negative); that is, when the flow is subsonic, the area must converge for the velocity to increase. This is sketched in Fig. 4.31a. This same result was observed in Sec. 4.2 for incompressible flow. Of course incompressible flow is, in a sense, a singular case of subsonic flow, where  $M \rightarrow 0$ .
2. If the flow is supersonic ( $M > 1$ ), for the velocity to increase ( $dV$  positive), the area must also increase ( $dA$  positive); that is, when the flow is supersonic, the area must diverge for the velocity to increase. This is sketched in Fig. 4.31b.
3. If the flow is sonic ( $M = 1$ ), then Eq. (4.83) yields for the velocity

$$\frac{dV}{V} = \frac{1}{M^2 - 1} \frac{dA}{A} = \frac{1}{0} \frac{dA}{A} \quad (4.84)$$


which at first glance says that  $dV/V$  is infinitely large. However, on a physical basis, the velocity, and hence the change in velocity  $dV$ , at all times must be finite. This is only common sense. Thus, looking at Eq. (4.84), we see that the only way for  $dV/V$  to be finite is to have  $dA/A = 0$ ; so

$$\frac{dV}{V} = \frac{1}{0} \frac{dA}{A} = \frac{0}{0} = \text{finite number}$$

That is, in the language of differential calculus,  $dV/V$  is an indeterminate form of  $0/0$  and hence can have a finite value. In turn, if  $dA/A = 0$ , the stream tube has a *minimum* area at  $M = 1$ . This minimum area is called a *throat* and is sketched in Fig. 4.31c.

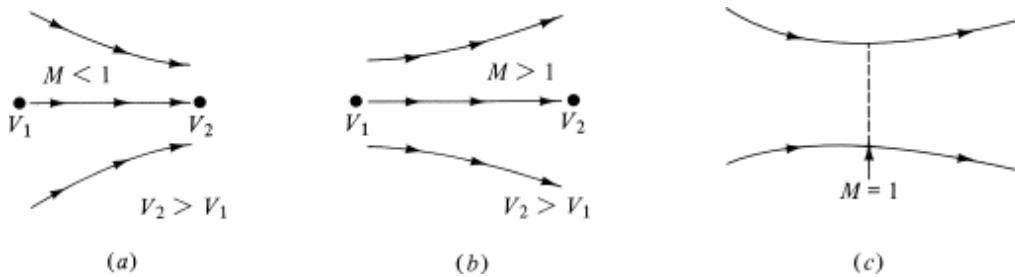

**Figure 4.31** Results from the area–velocity relation.

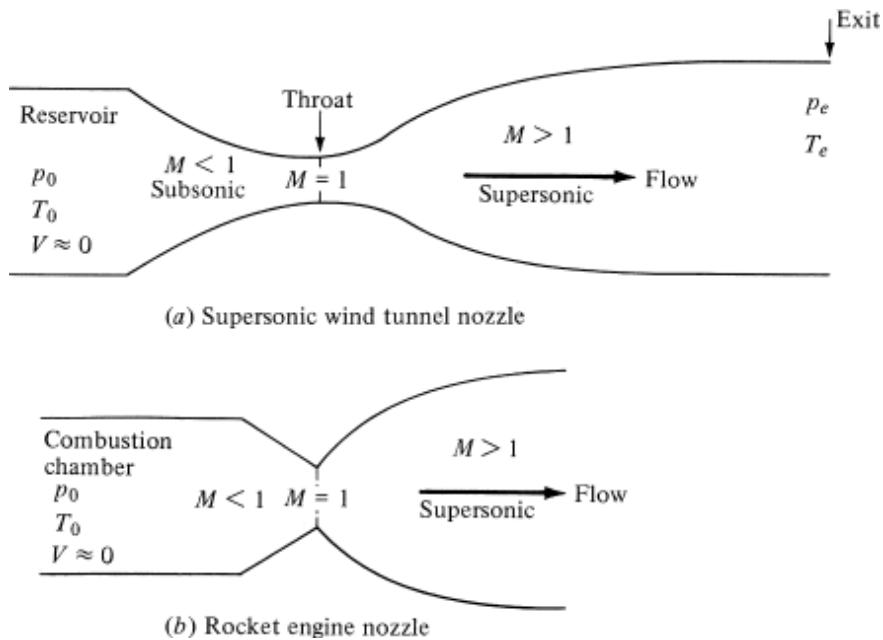

**Figure 4.32** Supersonic nozzle shapes.


Therefore, to expand a gas to supersonic speeds, starting with a stagnant gas in a reservoir, the preceding discussion says that a duct of a sufficiently converging–diverging shape must be used. This is sketched in Fig. 4.32, where typical shapes for supersonic wind tunnel nozzles and rocket engine nozzles are shown. In both cases, the flow starts out with a very low velocity  $V \approx 0$  in the reservoir, expands to high subsonic speeds in the convergent section, reaches Mach 1 at the throat, and then goes

supersonic in the divergent section downstream of the throat. In a supersonic wind tunnel, smooth, uniform flow at the nozzle exit is usually desired; therefore, a long, gradually converging and diverging nozzle is employed, as shown at the top of Fig. 4.32. For rocket engines, the flow quality at the exit is not quite as important; but the weight of the nozzle is a major concern. For the weight to be minimized, the engine's length is minimized, which gives rise to a rapidly diverging, bell-like shape for the supersonic section, as shown at the bottom of Fig. 4.32. A photograph of a typical rocket engine is shown in Fig. 4.33.

The real flow through nozzles such as those sketched in Fig. 4.32 is closely approximated by isentropic flow, because little or no heat is added or taken away through the nozzle walls and a vast core of the flow is virtually frictionless. Therefore, Eqs. (4.73) to (4.75) apply to nozzle flows. Here the total pressure and temperature  $p_0$  and  $T_0$  remain constant throughout the flow, and Eqs. (4.73) to (4.75) can be interpreted as relating conditions at any point in the flow to the stagnation conditions in the reservoir. For example, consider Fig. 4.32, which illustrates the reservoir conditions  $p_0$  and  $T_0$  where  $V \approx 0$ . Consider any cross section downstream of the reservoir. The static temperature, density, and pressure at this section are  $T_1$ ,  $\rho_1$ , and  $p_1$ , respectively. If the Mach number  $M_1$  is known at this point, then  $T_1$ ,  $\rho_1$ , and  $p_1$  can be found from Eqs. (4.73) to (4.75) as

---

page 218

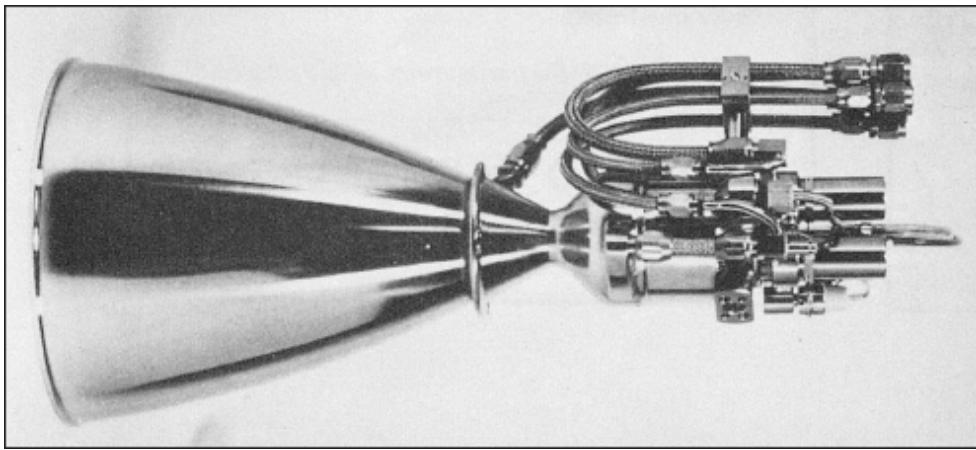

**Figure 4.33** A typical rocket engine. Shown is a small rocket designed by Messerschmitt-Bolkow-Blohm for European satellite launching.

(Source: Courtesy of John Anderson.)

$$T_1 = T_0 \left[ 1 + \frac{1}{2}(\gamma - 1)M_1^2 \right]^{-1} \quad (4.85)$$


$$\rho_1 = \rho_0 \left[ 1 + \frac{1}{2}(\gamma - 1)M_1^2 \right]^{-1/(\gamma-1)} \quad (4.86)$$

$$p_1 = p_0 \left[ 1 + \frac{1}{2}(\gamma - 1)M_1^2 \right]^{-\gamma/(\gamma-1)} \quad (4.87)$$

Again, Eqs. (4.85) to (4.87) demonstrate the power of the Mach number in making aerodynamic calculations. The variation of Mach number itself through the nozzle is strictly a function of the ratio of the cross-sectional area to the throat area  $A/A_t$ . This relation can be developed from the aerodynamic fundamentals already discussed; the resulting form is

$$\left( \frac{A}{A_t} \right)^2 = \frac{1}{M^2} \left[ \frac{2}{\gamma + 1} \left( 1 + \frac{\gamma - 1}{2} M^2 \right) \right]^{\frac{(\gamma+1)\gamma}{(\gamma-1)}} \quad (4.88)$$

Therefore, the analysis of isentropic flow through a nozzle is relatively straightforward. The procedure is summarized in Fig. 4.34. Consider that the nozzle shape, and hence  $A/A_t$ , is given as shown in Fig. 4.34a. Then, from Eq. (4.88), the Mach number can be obtained (implicitly). Its variation is sketched in Fig. 4.34b. Because  $M$  is now known through the nozzle, Eqs. (4.85) to (4.87) give the variations of  $T$ ,  $\rho$ , and  $p$ , which are sketched in Fig. 4.34c to e. The directions of these variations are important and should be noted. From Fig. 4.34, the Mach number continuously increases through the nozzle, going from near zero in the reservoir to  $M = 1$  at the throat and to supersonic values downstream of the throat. In turn,  $p$ ,  $T$ , and  $\rho$  begin with their stagnation values in the reservoir and continuously decrease to low values at the nozzle exit. Hence, a supersonic nozzle flow is an expansion process in which pressure decreases through the nozzle. In fact, this pressure decrease provides the mechanical force for pushing the flow through the nozzle. If the nozzle shown in Fig. 4.34a is simply set out by itself in a laboratory, obviously nothing will happen; the air will not start to rush through the nozzle of its own accord. Instead, to establish the flow sketched in Fig. 4.34, we must provide a high-pressure source at the inlet, and/or a low-pressure source at the exit, with the pressure ratio at just the right value, as prescribed by Eq. (4.87) and sketched in Fig. 4.34c.

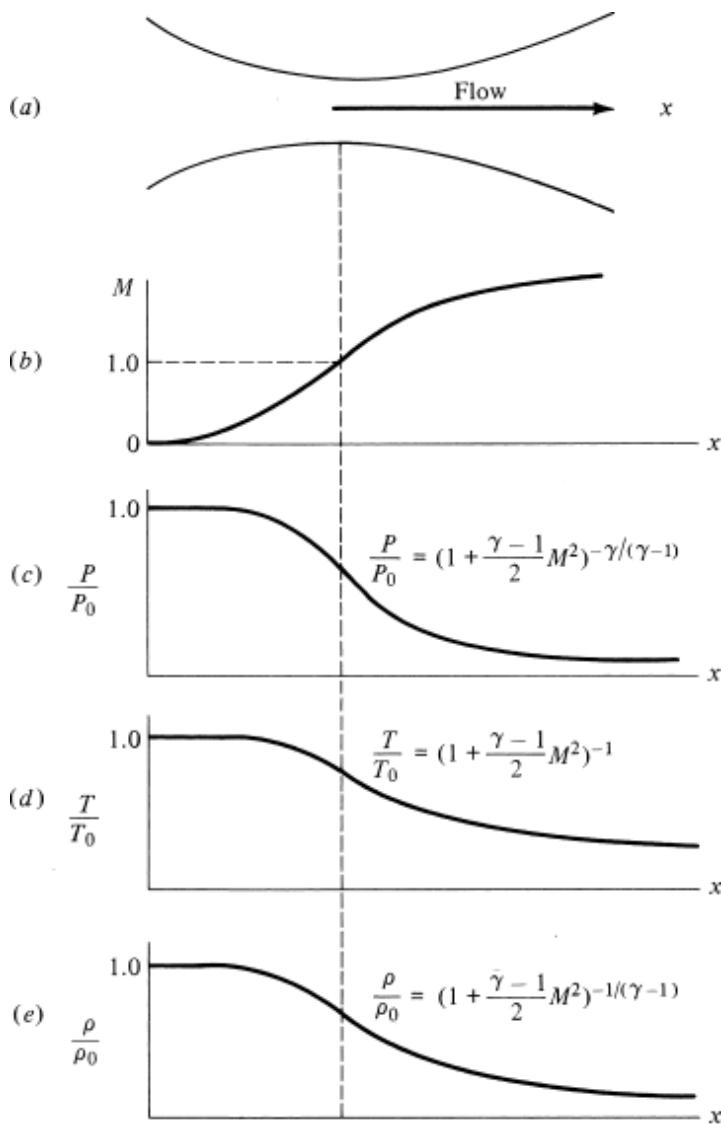

**Figure 4.34** Variation of Mach number, pressure, temperature, and density through a supersonic nozzle.

**EXAMPLE  
4.33**

You are given the job of designing a supersonic wind tunnel that [page 220](#) has a Mach 2 flow at standard sea-level conditions in the test section. What reservoir pressure and temperature and what area ratio  $A_e/A_t$  are required to obtain these conditions?

**■ Solution**

The static pressure  $p_e = 1 \text{ atm} = 1.01 \times 10^5 \text{ N/m}^2$ , and the static temperature  $T_e = 288.16 \text{ K}$ , from conditions at standard sea level. These are the desired conditions at the exit of the nozzle (the entrance to the test section). The necessary reservoir conditions are obtained from Eqs. (4.85) and (4.87):

$$\frac{T_0}{T_e} = 1 + \frac{\gamma - 1}{2} M_e^2 = 1 + \frac{1.4 - 1}{2} (2^2) = 1.8$$

Thus  $T_0 = 1.8 T_e = 1.8(288.16) = \boxed{518.7 \text{ K}}$

$$\frac{p_0}{p_e} = \left(1 + \frac{\gamma - 1}{2} M_e^2\right)^{\gamma/(\gamma-1)} = (1.8)^{3.5} = 7.82$$

Thus  $p_0 = 7.82 p_e = 7.82(1.01 \times 10^5) = \boxed{7.9 \times 10^5 \text{ N/m}^2}$

The area ratio is obtained from Eq. (4.88):

$$\begin{aligned} \left(\frac{A_e}{A_t}\right)^2 &= \frac{1}{M^2} \left[ \frac{2}{\gamma + 1} \left(1 + \frac{\gamma - 1}{2} M^2\right) \right]^{(\gamma+1)/(\gamma-1)} \\ &= \frac{1}{2^2} \left[ \frac{2}{2.4} \left(1 + \frac{0.4}{2} 2^2\right) \right]^{2.4/0.4} = 2.85 \end{aligned}$$

Hence

$$\boxed{\frac{A_e}{A_t} = 1.69}$$

## EXAMPLE 4.34

The reservoir temperature and pressure of a supersonic wind tunnel are  $600^\circ\text{R}$  and 10 atm, respectively. The Mach number of the flow in the test section is 3. A blunt-nosed model like that shown at the left in Fig. 4.28b is inserted in the test section flow. Calculate the pressure, temperature, and density at the stagnation point (at the nose of the body).

### ■ Solution

[page 221](#)

The flow conditions in the test section are the same as those at the nozzle exit. Hence, in the test section, we obtain the exit pressure from Eq. (4.87), recalling that  $1 \text{ atm} = 2116 \text{ lb/ft}^2$ :

$$\begin{aligned}
p_e &= p_0 \left[ 1 + \frac{1}{2}(\gamma - 1)M_e^2 \right]^{-\gamma/(\gamma-1)} \\
&= 10(2116)[1 + 0.5(0.4)(3)^2]^{-3.5} \\
&= 576 \text{ lb/ft}^2
\end{aligned}$$

The pressure at the stagnation point on the model is the total pressure *behind a normal wave* because the stagnation streamline has traversed the normal portion of the curved bow shock wave in Fig. 4.28b and then has been isentropically compressed to zero velocity between the shock and the body. This is the same situation as that existing at the mouth of a Pitot tube in supersonic flow, as described in Sec. 4.11.3. Hence the stagnation pressure is given by Eq. (4.79):

$$\begin{aligned}
\frac{p_{0_2}}{p_1} &= \frac{p_{\text{stag}}}{p_e} = \left[ \frac{(\gamma + 1)^2 M_e^2}{4\gamma M_e^2 - 2(\gamma - 1)} \right]^{\gamma/(\gamma-1)} \frac{1 - \gamma + 2\gamma M_e^2}{\gamma + 1} \\
\frac{p_{\text{stag}}}{p_e} &= \left[ \frac{2.4^2(3^2)}{4(1.4)(3^2) - 2(0.4)} \right]^{3.5} \frac{1 - 1.4 + 2(1.4)(3^2)}{2.4} = 12.06 \\
p_{\text{stag}} &= 12.06 p_e = 12.06(576) = \boxed{6947 \text{ lb/ft}^2}
\end{aligned}$$

The *total* temperature (not the static temperature) at the nozzle exit is the same as the reservoir temperature

$$T_{0,e} = T_0$$

because the flow through the nozzle is isentropic and hence adiabatic. For an adiabatic flow, the *total* temperature is constant, as demonstrated by Eq. (4.42), where at two different points in an adiabatic flow with different velocities if the flow is adiabatically slowed to zero velocity at both points, we obtain

$$c_p T_{0_1} = c_p T_{0_2}$$

Hence  $T_{0_1} = T_{0_2}$ ; that is, the total temperature at the two different points is the same. Therefore, in the present problem, the total temperature associated with the test section flow is equal to the total temperature throughout the nozzle expansion:  $T_0 e = T_0 = 600^\circ\text{R}$ . [Note that the *static* temperature of the test section flow is  $214.3^\circ\text{R}$ , obtained from Eq. (4.85).] Moreover, in traversing a shock wave (see Fig. 4.27), the total temperature is unchanged; that is, the total temperature behind the shock wave on the model is also  $600^\circ\text{R}$  (although the static temperature behind the shock is less than  $600^\circ\text{R}$ ).

Finally, because the flow is isentropically compressed to zero velocity at the stagnation point, the stagnation point temperature is the *total temperature*, which also stays constant through the isentropic compression. Hence, the gas temperature at the stagnation point is

$$T_{\text{stag}} = T_0 = \boxed{600^{\circ}\text{R}}$$

page 222

From the equation of state,

$$\rho_{\text{stag}} = \frac{p_{\text{stag}}}{RT_{\text{stag}}} = \frac{6947}{1716(600)} = \boxed{0.0067 \text{ slug/ft}^3}$$

### EXAMPLE 4.35

In the combustion chamber of a rocket engine, kerosene and oxygen are burned, resulting in a hot, high-pressure gas mixture in the combustion chamber with the following conditions and properties:  $T_0 = 3144 \text{ K}$ ,  $p_0 = 20 \text{ atm}$ ,  $R = 378 \text{ J/(kg)(K)}$ , and  $\gamma = 1.26$ . The pressure at the exit of the rocket nozzle is 1 atm and the throat area of the nozzle is  $0.1 \text{ m}^2$ . Assuming isentropic flow through the rocket nozzle, calculate (a) the velocity at the exit and (b) the mass flow through the nozzle.

#### ■ Solution

a. To obtain the velocity at the exit, let us first obtain the temperature, next the speed of sound, and then the Mach number, leading to the velocity. We note that the combustion chamber conditions are the “reservoir” conditions sketched in Fig. 4.32; this is why the combustion chamber pressure and temperature have been denoted by  $p_0$  and  $T_0$ , respectively. Because the flow is isentropic, from Eq. (4.46) we have

$$\frac{p_e}{p_0} = \left(\frac{T_e}{T_0}\right)^{\gamma/\gamma-1}$$

$$T_e = T_0 \left(\frac{p_e}{p_0}\right)^{\gamma/\gamma-1} = (3144) \left(\frac{1}{20}\right)^{0.26/1.26} = 1694 \text{ K}$$

$$\text{or } a_e = \sqrt{\gamma RT_e} = \sqrt{1.26(378)(1694)} = 898.2 \text{ m/s}$$

The Mach number at the exit is given by Eq. (4.73):

$$\frac{T_0}{T_e} = 1 + \frac{\gamma - 1}{2} M_e^2$$

or  $M_e^2 = \frac{2}{\gamma - 1} \left( \frac{T_0}{T_e} - 1 \right) = \frac{2}{1.26 - 1} \left( \frac{3144}{1694} - 1 \right) = 6.584$

or  $M_e = 2.566$

Hence  $V_e = M_e a_e = 2.566(898.2) = \boxed{2305 \text{ m/s}}$

b. The mass flow is given by the product  $\rho A V$  evaluated at any cross section of the nozzle. Because we are given the area of the throat, the obvious location at which to evaluate  $\rho A V$  is the throat; that is,

$$\dot{m} = \rho^* A^* V^*$$

where  $\rho^*$ ,  $A^*$ , and  $V^*$  are the density, area, and velocity, respectively, at the throat. We will use the fact that the Mach number at the throat is  $M^* = 1$ . The pressure at the throat  $p^*$  is given by Eq. (4.74):

$$\frac{p_0}{p^*} = \left( 1 + \frac{\gamma - 1}{2} M^{*2} \right)^{\gamma/(\gamma-1)} = \left[ 1 + \frac{0.26}{2} (1^2) \right]^{1.26/0.26} = (1.13)^{4.846} = 1.808$$

page 223

Hence  $p^* = \frac{p_0}{1.808} = \frac{20(1.01 \times 10^5)}{1.808} = 1.117 \times 10^6 \text{ N/m}^2$

The temperature at the throat is given by Eq. (4.73):

$$\frac{T_0}{T^*} = 1 + \frac{\gamma - 1}{\gamma} M^{*2} = 1.13$$

$$T^* = \frac{T_0}{1.13} = \frac{3144}{1.13} = 2782.3 \text{ K}$$

$$a^* = \sqrt{\gamma R T^*} = \sqrt{1.26(378)(2782.3)} = 1151 \text{ m/s}$$

$$\rho^* = \frac{p^*}{R T^*} = \frac{1.117 \times 10^6}{378(2782.3)} = 1.062 \text{ kg/m}^3$$


Because  $M^* = 1$ ,  $V^* = a^* = 1151 \text{ m/s}$ . Hence

$$\dot{m} = \rho^* A^* V^* = 1.062(0.1)(1151) = \boxed{122.2 \text{ kg/s}}$$

## EXAMPLE 4.36

A supersonic wind tunnel is sketched in Fig. 4.35; this includes not only the convergent-divergent nozzle sketched in Fig. 4.32, but also a constant-area test section downstream of the nozzle, and a convergent-divergent supersonic diffuser downstream of the test section. The function of the supersonic diffuser is to slow the supersonic flow from the test section to a relatively benign low-speed subsonic flow at the exit of the diffuser. A supersonic wind tunnel has two locations where a local minimum cross-sectional area exists. In Fig. 4.35, location 1 in the nozzle is called the *first throat*, with area  $A_{t,1}$ . Shock waves occur at the entrance to the diffuser, as sketched in Fig. 4.35, and the flow Mach number is progressively reduced as the flow passes through these shock waves. Also, because the total pressure decreases across a shock wave, as described in Section 4.11.3, there is a net loss of total pressure in the diffuser upstream of the second throat. As a result of this total pressure loss, the second throat area,  $A_{t,2}$ , must be larger than the first throat area,  $A_{t,1}$ . Prove this statement by deriving an equation for the ratio  $A_{t,2}/A_{t,1}$  as a function of total pressure at the second throat,  $P_{0_2}$ . Assume locally sonic flow at both locations.

page 224

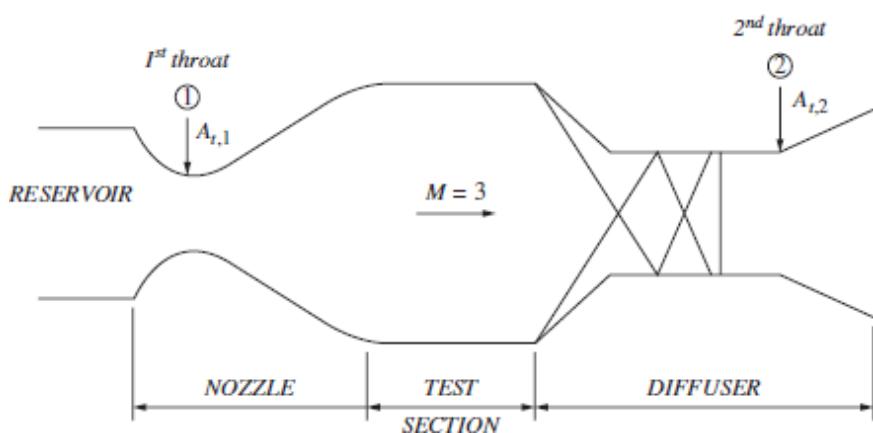

**Figure 4.35** Schematic of a supersonic wind tunnel, showing the first and second throats.

### ■ Solution

The mass flow through the tunnel is constant, so that at the first and second throats,

$$\dot{m}_1 = \dot{m}_2 \quad (\text{E 4.36.1})$$

Because  $m. = \rho AV$ , Eq. (E 4.36.1) becomes

$$\rho_1 A_{t,1} V_1 = \rho_2 A_{t,2} V_2 \quad (\text{E 4.36.2})$$

The first and second throats are local minimum areas in the tunnel, so we assume that the local Mach numbers are  $M_{t,1} = M_{t,2} = 1$ . That is, the velocity at each of the throats is sonic velocity. Hence, from Eq. (E 4.36.2)

$$\rho_1 A_{t,1} a_1 = \rho_2 A_{t,2} a_2 \quad (\text{E 4.36.3})$$

or

$$\rho_1 A_{t,1} \sqrt{\gamma R T_1} = \rho_2 A_{t,2} \sqrt{\gamma R T_2}$$

From the equation of state,  $p = \rho RT$ , Eq. (E 4.36.3) can be written as

$$\frac{p_1}{R T_1} A_{t,1} \sqrt{\gamma R T_1} = \frac{p_2}{R T_2} A_{t,2} \sqrt{\gamma R T_2} \quad (\text{E 4.36.4})$$

or

$$\frac{p_1 A_{t,1}}{\sqrt{T_1}} = \frac{p_2 A_{t,2}}{\sqrt{T_2}}$$

At the first throat, from Eqs. (4.73) and (4.74), with  $M_{t,1} = 1$ , we [page 225](#) have

$$\frac{T_{0,1}}{T_1} = 1 + \frac{\gamma - 1}{2} M_{t,1}^2 = 1 + \frac{\gamma - 1}{2} = \frac{\gamma + 1}{2}$$

or

$$T_1 = \frac{2}{\gamma + 1} T_{0,1}$$

and

$$\frac{p_{0,1}}{p_1} = \left(1 + \frac{\gamma - 1}{2} M_{t,2}^2\right)^{\frac{1}{\gamma-1}} = \left(\frac{\gamma + 1}{2}\right)^{\frac{1}{\gamma-1}} \quad (\text{E 4.36.5})$$

or

$$p_1 = \left(\frac{\gamma + 1}{2}\right)^{\frac{1}{\gamma-1}} p_{0,1}$$

$$T_2 = \frac{2}{\gamma + 1} T_{0,2} \quad (\text{E 4.36.6})$$

Through a similar derivation at the second throat, with  $M_{t,2} = 1$ , we have

$$\text{and} \quad p_2 = \left(\frac{\gamma + 1}{2}\right)^{\frac{1}{\gamma-1}} p_{0,2} \quad (\text{E 4.36.8})(\text{E 4.36.7})$$

Substituting Eqs. (E 4.36.5), (E 4.36.6), (E 4.36.7), and (E 4.36.8) into (E 4.36.4), we get

$$\frac{p_{0,1} A_{t,1}}{\sqrt{T_{0,1}}} = \frac{p_{0,2} A_{t,2}}{\sqrt{T_{0,2}}} \quad (\text{E 4.36.9})$$

The flow in the wind tunnel sketched in Fig. 4.35 is adiabatic; no heat is being added or taken away in the tunnel. This applies also to the shock waves in the diffuser; the flow across a shock wave is adiabatic (but *not* isentropic). As demonstrated in Example 4.34, the total temperature is constant in an adiabatic flow. Thus, throughout the flow in the wind tunnel, the total temperature remains constant. In particular,

$$T_{0,1} = T_{0,2}$$

With this, we get

$$\frac{A_{t,2}}{A_{t,1}} = \frac{p_{0,1}}{p_{0,2}} \quad (\text{E 4.36.10})$$

Because there is a loss of total pressure in the diffuser,  $p_{0,2} < p_{0,1}$ , and from Eq. (E 4.36.10) we know that the second throat is larger than the first throat. Indeed, if  $A_{t,2}$  were made smaller than that dictated by Eq. (E 4.36.10), the diffuser would not be able to pass the mass flow that comes from the nozzle; the flow in the tunnel would break down and the supersonic flow in the test section would become subsonic. In such a case, the tunnel is said to be “choked.” Further discussion of this subject is beyond the scope of this book. See Anderson, *Modern Compressible Flow with Historical Perspective*, 3rd ed., McGraw-Hill, New York, 2003, for more details.

### EXAMPLE 4.37

Consider a supersonic wind tunnel as sketched in Fig. 4.35. The [page 226](#) reservoir pressure is 5 atm. The area of the first throat (location 1 in Fig. 4.35) is  $100 \text{ cm}^2$ . The static pressure measured at a pressure tap in the wall of the second throat (location 2 in Fig. 4.35) is 0.87 atm. The local Mach number at the second throat is  $M_{t,2} = 1$ . Calculate the area of the second throat,  $A_{t,2}$ .

#### ■ Solution

From Eq. (E 4.36.10) in Example 4.36, we have

$$\frac{A_{t,2}}{A_{t,1}} = \frac{p_{0,1}}{p_{0,2}} \quad (\text{E 4.36.10})$$

The total pressure at the first throat is equal to the reservoir pressure; thus

$$p_{0,1} = 5 \text{ atm}$$

The total pressure at the second throat,  $p_{0,2}$ , where the local Mach number  $M_{t,2} = 1$ , can be calculated from the given static pressure at the second throat,  $p_2$ . From Eq. (4.74),

$$\frac{p_{0,2}}{p_2} = \left(1 + \frac{\gamma - 1}{2} M_{t,2}^2\right)^{\frac{\gamma}{\gamma-1}} = \left(\frac{\gamma + 1}{2}\right)^{\frac{\gamma}{\gamma-1}} = (1.2)^{3.5} = 1.893$$

Thus,  $p_{0,2} = 1.893$ ,  $p_2 = 1.893 (0.87) = 1.6468$  atm. Substituting these results into Eq. (E 4.36.10), we have

$$A_{t,2} = A_{t,1} \left( \frac{p_{0,1}}{p_{0,2}} \right) = (100) \left( \frac{5}{1.6468} \right) = \boxed{303.6 \text{ cm}^2}$$


---


## 4.14 DISCUSSION OF COMPRESSIBILITY

We have been stating all along that flows in which  $M < 0.3$  can be treated as essentially incompressible and, conversely, that flows in which  $M \geq 0.3$  should be treated as compressible. We are now in a position to prove this.

Consider a gas at rest ( $V = 0$ ) with density  $\rho_0$ . Now accelerate this gas isentropically to some velocity  $V$  and Mach number  $M$ . Obviously the thermodynamic properties of the gas will change, including the density. In fact, the change in density will be given by Eq. (4.75):

$$\frac{\rho_0}{\rho} = \left(1 + \frac{\gamma - 1}{2} M^2\right)^{1/(\gamma-1)}$$

For  $\gamma = 1.4$ , this variation of  $\rho/\rho_0$  is given in Fig. 4.36. Note that for  $M < 0.3$ , the density change in the flow is less than 5 percent; that is, the density is essentially constant for  $M < 0.3$ , and for all practical purposes the flow is incompressible. Therefore, we have just demonstrated the validity of this statement:

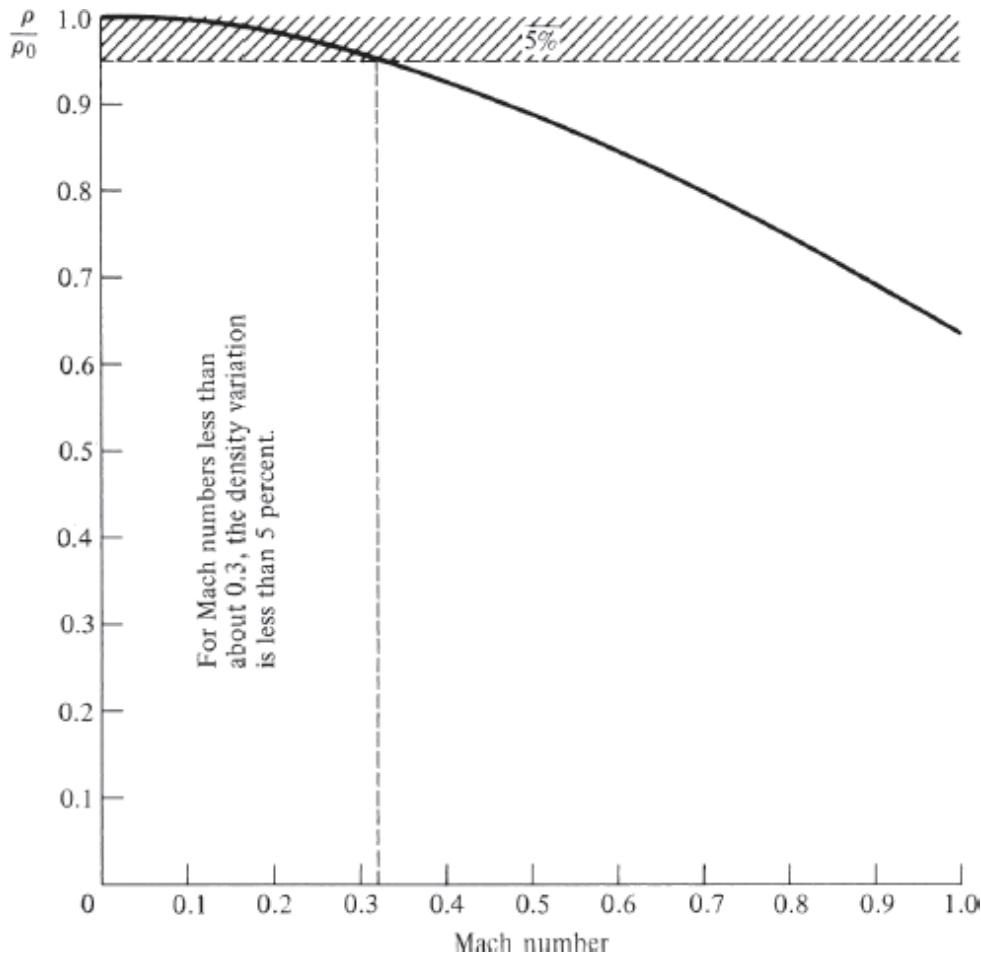

**Figure 4.36** Density variation with Mach number for  $\gamma = 1.4$ , showing region where the density change is less than 5 percent.


For  $M < 0.3$ , the flow can be treated as incompressible.

## 4.15 INTRODUCTION TO VISCOUS FLOW

This is a good time to look back to our road map in Fig. 4.1. We have now completed the left side of this road map—inviscid flow with some applications. Examine again the boxes on the left side and make certain that you feel comfortable with the material represented by each box. There are many aerodynamic applications in which the neglect of friction is quite reasonable and in which the assumption of inviscid flow leads to useful and reasonably accurate results.




**Figure 4.37** Comparison between ideal frictionless flow and real flow with the effects of friction.

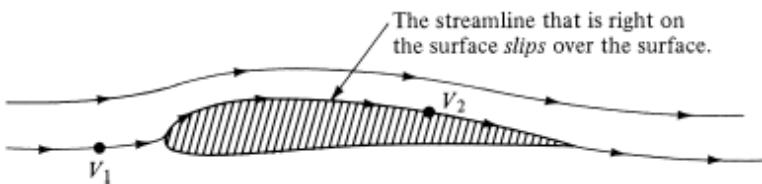

**Figure 4.38** Frictionless flow.

However, in numerous other practical problems the effect of [page 228](#) friction is dominant, and we now turn our attention to such problems. This constitutes the right side of our road map in Fig. 4.1—viscous flow, which is flow with friction. Indeed, in some flows the *fundamental* behavior is governed by the presence of friction between the airflow and a solid surface. A classic example is sketched in Fig. 4.37, which shows the low-speed flow over a sphere. At the left is sketched the flow field that would exist if the flow were inviscid. For such an ideal, frictionless flow, the streamlines are symmetric; and amazingly, there is no aerodynamic force on the sphere. The pressure distribution over the forward surface exactly balances that over the rear surface, and hence there is no drag (no force in the flow direction). However, this purely theoretical result is contrary to common sense; in real life there is a drag force on the sphere tending to retard the motion of the sphere. The failure of the theory to predict drag was bothersome to early 19th-century aerodynamicists and was even given a name: *d'Alembert's paradox*. The problem is caused by not including friction in the theory. The real flow over a sphere is sketched on the right in Fig. 4.37. The flow separates on the rear surface of the sphere, setting up a complicated flow in the wake and causing the pressure on the rear surface to be less than that on the forward surface. Hence, a drag force is exerted on the sphere, as shown by  $D$  in Fig. 4.37. The difference between the two flows in Fig. 4.37 is simply friction, but what a difference!

Consider the flow of a gas over a solid surface, such as the airfoil sketched in Fig. 4.38. According to our previous considerations of frictionless flows, we considered the flow velocity at the surface as being a finite value, such as  $V_2$  shown in Fig. 4.38; that is, because of the lack of friction, the streamline right at the surface slips over the surface. In fact, we stated that if the flow is incompressible,  $V_2$  can be calculated from Bernoulli's equation:

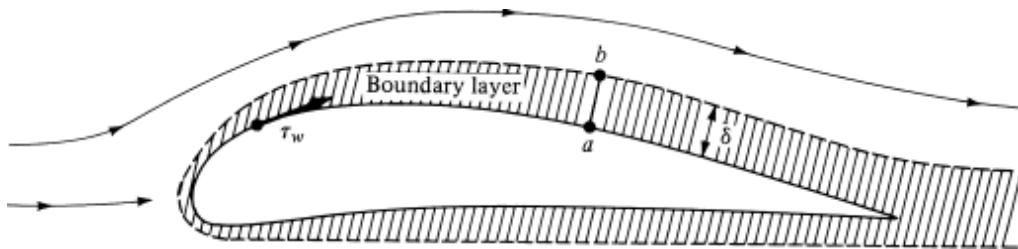

**Figure 4.39** Flow in real life, with friction. The thickness of the boundary layer is greatly overemphasized for clarity.

$$p_1 + \frac{1}{2}\rho V_1^2 = p_2 + \frac{1}{2}\rho V_2^2$$


However, in real life, *the flow at the surface adheres to the* [page 229](#) *surface* because of friction between the gas and the solid material; that is, right at the surface, the flow velocity is zero, and there is a thin region of retarded flow in the vicinity of the surface, as sketched in Fig. 4.39. This region of viscous flow that has been retarded owing to friction at the surface is called a *boundary layer*. The inner edge of the boundary layer is the solid surface itself, such as point *a* in Fig. 4.39, where  $V = 0$ . The outer edge of the boundary layer is given by point *b*, where the flow velocity is essentially the value given by  $V_2$  in Fig. 4.38. That is, point *b* in Fig. 4.39 is essentially equivalent to point 2 in Fig. 4.38. In this fashion, the flow properties at the outer edge of the boundary layer in Fig. 4.39 can be calculated from a frictionless flow analysis, as pictured in Fig. 4.38. This leads to an important conceptual point in theoretical aerodynamics: A flow field can be split into two regions, one region in which friction is important (in the boundary layer near the surface) and another region of frictionless flow (sometimes called *potential flow*) outside the boundary layer. This concept was first introduced by Ludwig Prandtl in 1904, and it revolutionized modern theoretical aerodynamics.

It can be shown experimentally and theoretically that the pressure through the boundary layer in a direction perpendicular to the surface is constant. That is, if we let  $p_a$  and  $p_b$  be the static pressures at points  $a$  and  $b$ , respectively, in Fig. 4.39, then  $p_a = p_b$ . This is an important phenomenon. This is why a surface pressure distribution calculated from frictionless flow (Fig. 4.38) many times gives accurate results for the real-life surface pressures; it is because the frictionless calculations give the correct pressures at the outer edge of the boundary layer (point  $b$ ), and these pressures are impressed without change through the boundary layer right down to the surface (point  $a$ ). The preceding statements are reasonable for slender aerodynamic shapes such as the airfoil in Fig. 4.39; they do not hold for regions of separated flow over blunt bodies, as previously sketched in Fig. 4.37. Such separated flows are discussed in Sec. 4.20.

Refer again to Fig. 4.39. The *boundary layer thickness*  $\delta$  grows as the flow moves over the body; that is, more and more of the flow is affected by friction as the distance along the surface increases. In addition, the presence of friction creates a *shear stress* at the surface  $\tau_w$ . This shear stress has dimensions of force/area and acts in a direction tangential to the surface. Both  $\delta$  and  $\tau_w$  are important quantities, and a large part of boundary layer theory is devoted to their calculation. As we will see,  $\tau_w$  gives rise to a drag force called *skin friction drag*, hence attesting to its importance. Subsequent sections will give equations for the calculation of  $\delta$  and  $\tau_w$ .

---

page 230

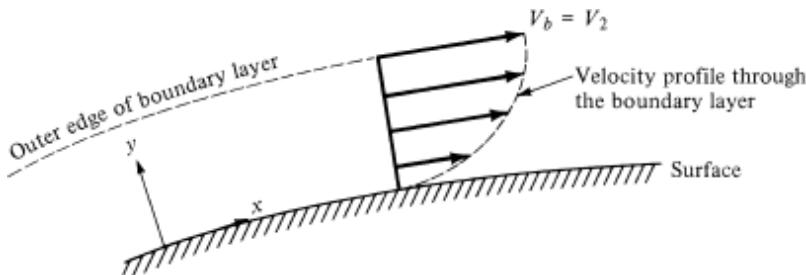

**Figure 4.40** Velocity profile through a boundary layer.

Looking more closely at the boundary layer, we see that a *velocity profile* through the boundary layer is sketched in Fig. 4.40. The velocity starts out at zero at the surface and increases continuously to its value of  $V_2$  at the outer edge. Let us set up coordinate axes  $x$  and  $y$  such that  $x$  is parallel to the surface and  $y$  is normal to the surface, as shown in Fig. 4.40. By definition, a

*velocity profile* gives the variation of velocity in the boundary layer as a function of  $y$ . In general, the velocity profiles at different  $x$  stations are different.

The slope of the velocity profile at the wall is of particular importance because it governs the wall shear stress. Let  $(dV/dy)_{y=0}$  be defined as the velocity gradient at the wall. Then the shear stress at the wall is given by


$$\tau_w = \mu \left( \frac{dV}{dy} \right)_{y=0} \quad (4.89)$$

where  $\mu$  is called the *absolute viscosity coefficient* (or simply the *viscosity*) of the gas. The viscosity coefficient has dimensions of mass/(length)(time), as can be verified from Eq. (4.89) combined with Newton's second law. It is a physical property of the fluid;  $\mu$  is different for different gases and liquids. Also,  $\mu$  varies with  $T$ . For liquids,  $\mu$  decreases as  $T$  increases (we all know that oil gets "thinner" when the temperature is increased). But for gases,  $\mu$  increases as  $T$  increases (air gets "thicker" when temperature is increased). For air at standard sea-level temperature,


$$\mu = 1.7894 \times 10^{-5} \text{ kg/(m)(s)} = 3.7373 \times 10^{-7} \text{ slug/(ft)(s)}$$

The variation of  $\mu$  with temperature for air is given in Fig. 4.41.

In this section we are simply introducing the fundamental concepts of boundary layer flows; such concepts are essential to the practical calculation of aerodynamic drag, as we will soon appreciate. In this spirit, we introduce another important dimensionless "number," a number of importance and impact on aerodynamics equal to those of the Mach number discussed earlier—the *Reynolds number*. Consider the development of a boundary layer on a surface, such as the flat plate sketched in Fig. 4.42. Let  $x$  be measured from the leading edge—that is, the front tip of the plate. Let  $V_\infty$  be the flow velocity far upstream of the plate. (The subscript  $\infty$  is commonly used to denote conditions far upstream of an aerodynamic body, the *free-stream conditions*.) The *Reynolds number*  $Re_x$  is defined as

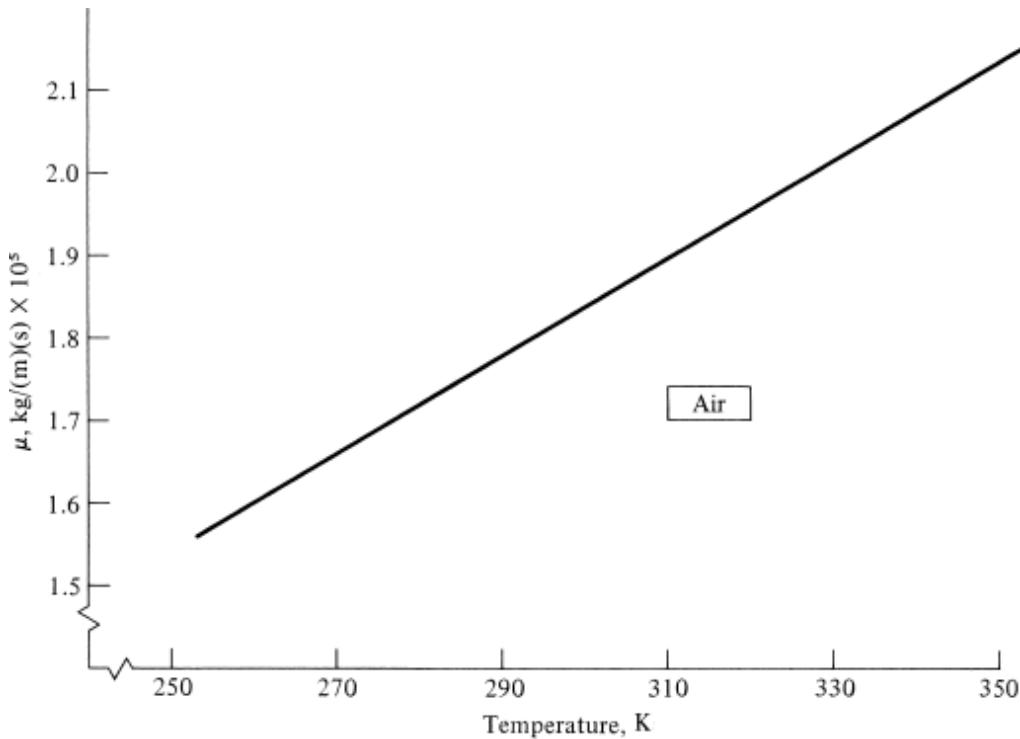

**Figure 4.41** Variation of viscosity coefficient with temperature.

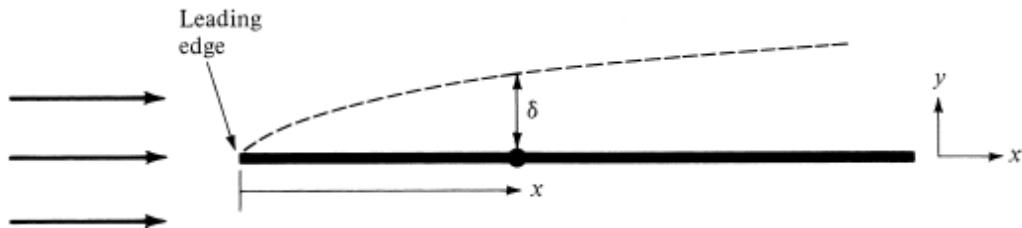

**Figure 4.42** Growth of the boundary layer thickness.

$$\text{Re}_x = \frac{\rho_\infty V_\infty x}{\mu_\infty} \quad (4.90)$$

Note that  $\text{Re}_x$  is dimensionless and that it varies linearly with  $x$ . For this reason,  $\text{Re}_x$  is sometimes called a *local* Reynolds number, because it is based on the local coordinate  $x$ .


Up to this point in our discussion of aerodynamics, we have always considered flow streamlines to be smooth and regular curves in space. However, in a viscous flow, and particularly in boundary layers, life is not quite so simple. There are two basic types of viscous flow:

1. *Laminar flow*, in which the streamlines are smooth and regular and a fluid element moves smoothly along a streamline (Fig. 4.43a).

2. *Turbulent flow*, in which the streamlines break up and a [page 232](#) fluid element moves in a random, irregular, and tortuous fashion (Fig. 4.43b).

The differences between laminar and turbulent flow are dramatic, and they have a major impact on aerodynamics. For example, consider the velocity profiles through a boundary layer, as sketched in Fig. 4.44. The profiles differ depending on whether the flow is laminar or turbulent. The turbulent profile is “fatter,” or fuller, than the laminar profile. For the turbulent profile, from the outer edge to a point near the surface, the velocity remains reasonably close to the free-stream velocity; it then rapidly decreases to zero at the surface. In contrast, the laminar velocity profile gradually decreases to zero from the outer edge to the surface. Now consider the velocity gradient at the wall,  $(dV/dy)_{y=0}$ , which is the reciprocal of the slope of the curves shown in Fig. 4.44 evaluated at  $y = 0$ . From Fig. 4.44, it is clear that

$$\left(\frac{dV}{dy}\right)_{y=0} \text{ for laminar flow} < \left(\frac{dV}{dy}\right)_{y=0} \text{ for turbulent flow}$$

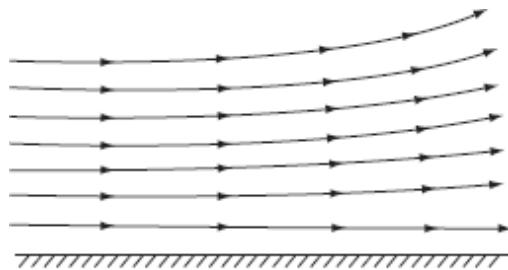


(a) Laminar flow



(b) Turbulent flow

**Figure 4.43** (a) Smooth motion of fluid elements in a laminar flow. (b) Tortuous, irregular motion of fluid elements in a turbulent flow.

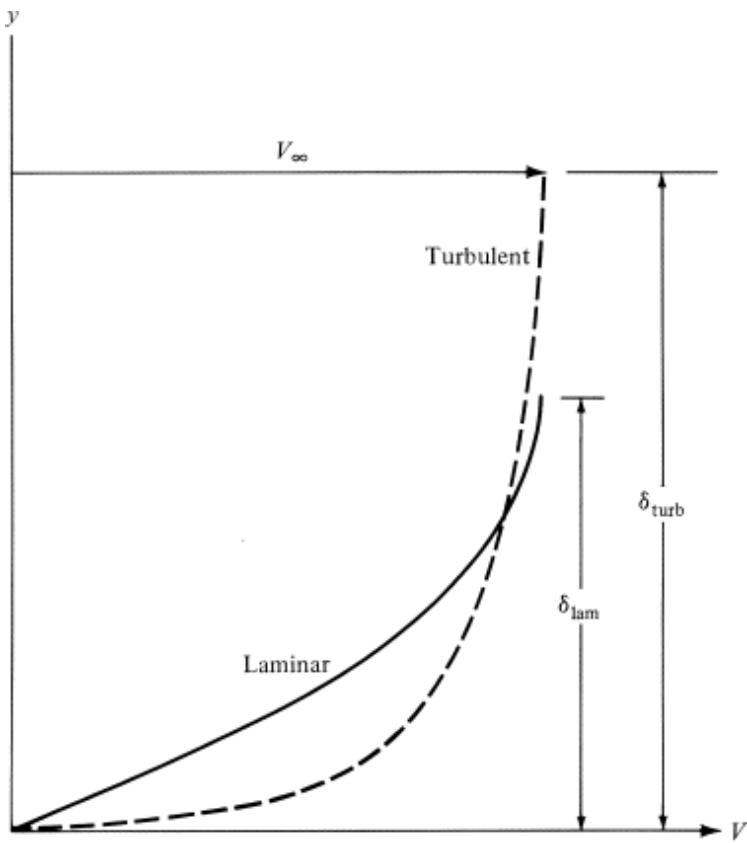

**Figure 4.44** Velocity profiles for laminar and turbulent boundary layers. Note that the turbulent boundary layer thickness is larger than the laminar boundary layer thickness.


Recalling Eq. (4.89) for  $\tau_w$  leads us to the fundamental and highly important fact that *laminar shear stress is less than turbulent shear stress*:

$$\boxed{\tau_w \text{ laminar} < \tau_w \text{ turbulent}}$$


This obviously implies that the skin friction exerted on an airplane wing or body will depend on whether the boundary layer on the surface is laminar or turbulent, with laminar flow yielding the smaller skin friction drag.

It appears to be almost universal in nature that systems with the [page 233](#) maximum amount of *disorder* are favored. For aerodynamics, this means that the vast majority of practical viscous flows are turbulent. The boundary layers on most practical airplanes, missiles, ship hulls, and the like are turbulent, with the exception of small regions near the leading edge, as we will soon see. Consequently, the skin friction on these surfaces is the higher, turbulent value. For the aerodynamicist, who is usually striving to

reduce drag, this is unfortunate. However, the skin friction on slender shapes, such as wing cross sections (airfoils), can be reduced by designing the shape in such a manner as to encourage laminar flow. Figure 4.45 indicates how this can be achieved. Here two airfoils are shown; the standard airfoil (Fig. 4.45a) has a maximum thickness near the leading edge, whereas the laminar flow airfoil (Fig. 4.45b) has its maximum thickness near the middle of the airfoil. The pressure distributions on the top surface, of the airfoils are sketched above the airfoils in Fig. 4.45. Note that for the standard airfoil, the minimum pressure occurs near the leading edge, and there is a long stretch of increasing pressure from this point to the trailing edge. Turbulent boundary layers are encouraged by such increasing pressure distributions. Hence, the standard airfoil is generally bathed in long regions of turbulent flow, with the attendant high skin friction drag. However, note that for the laminar flow airfoil, the minimum pressure occurs near the trailing edge, and there is a long stretch of decreasing pressure from the leading edge to the point of minimum pressure. Laminar boundary layers are encouraged by such decreasing pressure distributions. Hence, the laminar flow airfoil can be bathed in long regions of laminar flow, thus benefiting from the reduced skin friction drag.

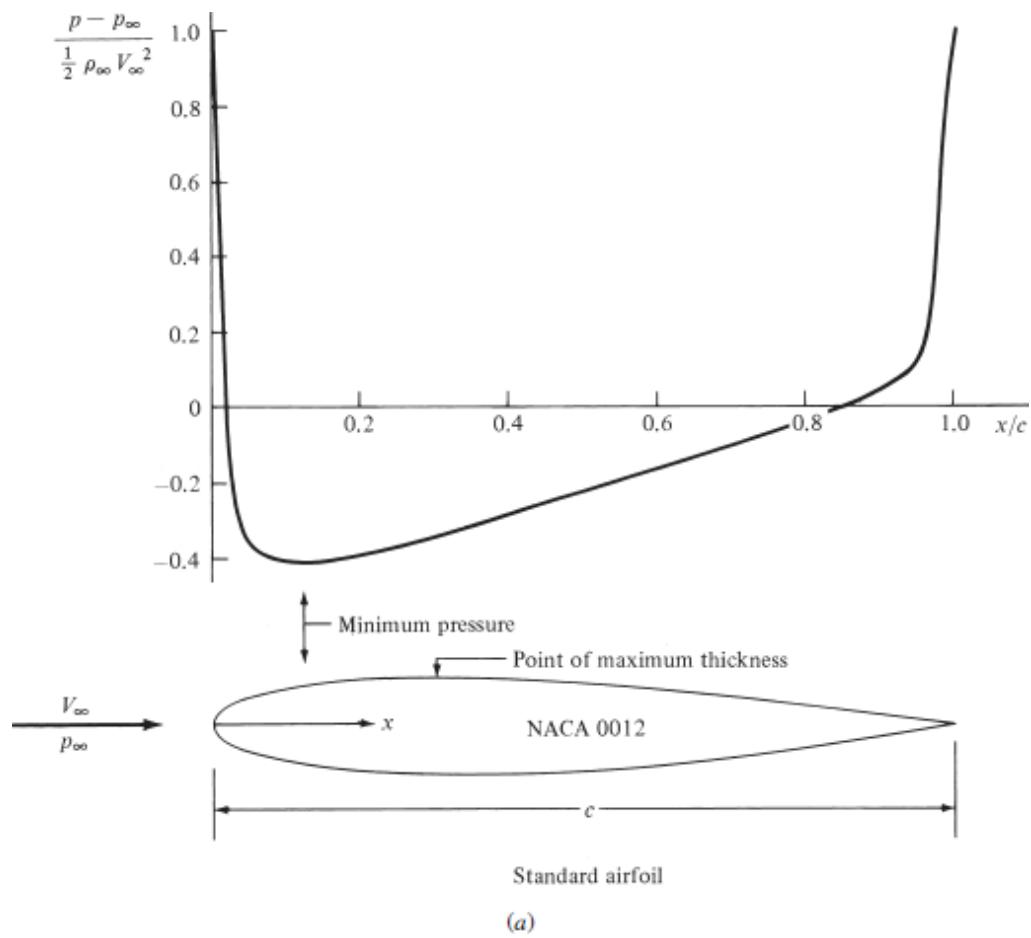

**Figure 4.45** Comparison of conventional and laminar flow airfoils. The pressure distributions shown are the theoretical results obtained by NACA and are for  $0^\circ$  angle of attack. The airfoil shapes are drawn to scale.

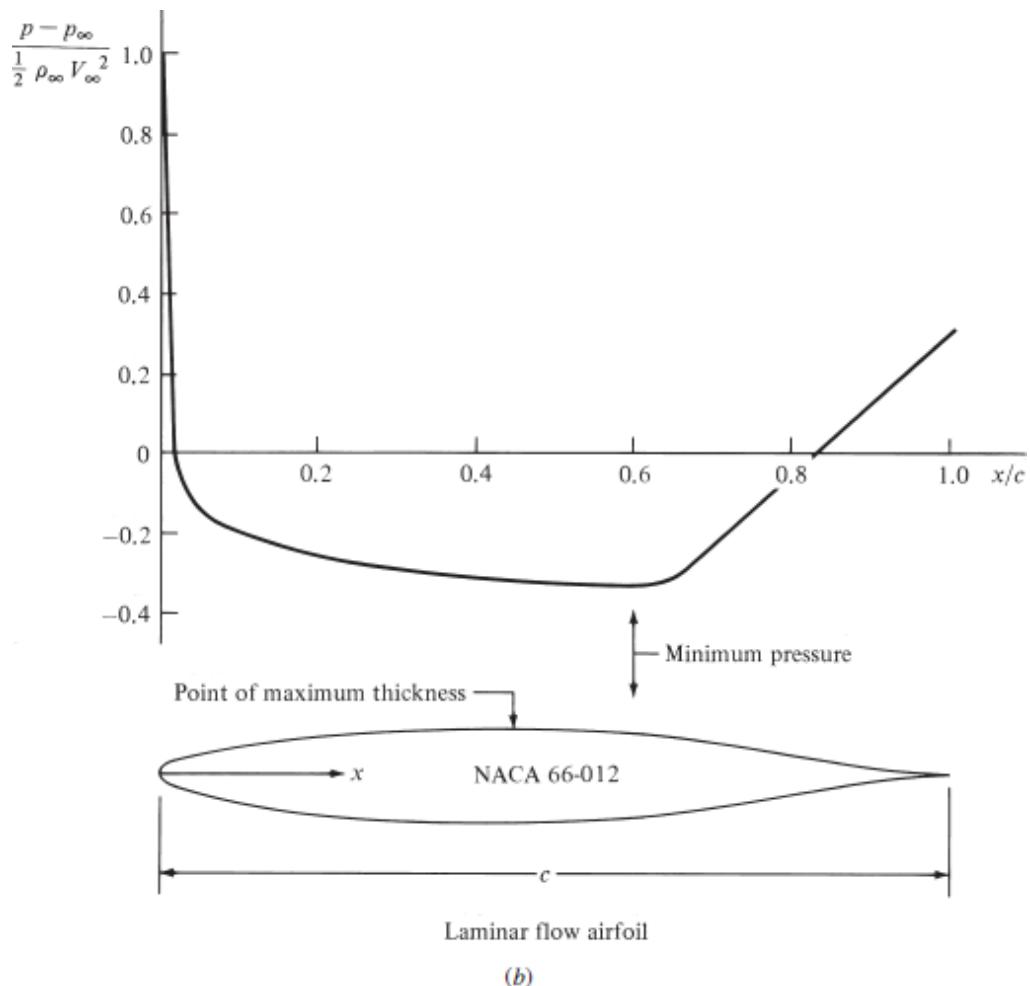

**Figure 4.46** The first airplane to incorporate a laminar flow airfoil for the wing section, the North American P-51 Mustang. Shown is a late-model Mustang, the P-51D.

(Source: Jim Ross/NASA.)

The North American P-51 Mustang (Fig. 4.46), designed at the [page 235](#) outset of World War II, was the first production aircraft to employ a laminar flow airfoil. However, laminar flow is a sensitive phenomenon; it readily gets unstable and tries to change to turbulent flow. For example, the slightest roughness of the airfoil surface caused by such real-life effects as protruding rivets, imperfections in machining, and bug spots can cause a premature transition to turbulent flow in advance of the design condition. Therefore, most laminar flow airfoils used on production aircraft do not yield the extensive regions of laminar flow that are obtained in controlled laboratory tests using airfoil models with highly polished, smooth surfaces. From this point of view, the early laminar flow airfoils were not successful. However, they were successful from an entirely different point of view: They were found to have excellent high-speed properties, postponing to a higher flight Mach number the large drag rise due to shock waves and flow separation encountered near Mach 1. (Such high-speed effects are discussed in Secs. 5.9 to 5.11.) As a result, the early laminar flow airfoils were extensively used on jet-propelled airplanes during the 1950s and 1960s and are still employed on some modern high-speed aircraft.

Given a laminar or turbulent flow over a surface, how do we [page 236](#) actually calculate the skin friction drag? The answer is given in the following two sections.

## 4.16 RESULTS FOR A LAMINAR BOUNDARY LAYER

Consider again the boundary layer flow over a flat plate, as sketched in Fig. 4.42. Assume that the flow is laminar. The two physical quantities of interest are the boundary layer thickness  $\delta$  and shear stress  $\tau_w$  at location  $x$ . Formulas for these quantities can be obtained from laminar boundary layer theory, which is beyond the scope of this book. However, the results, which have been verified by experiment, are as follows. The laminar boundary layer thickness is

$$\delta = \frac{5.2x}{\sqrt{\text{Re}_x}} \quad \text{laminar} \quad (4.91)$$

where  $\text{Re}_x = \rho_\infty V_\infty x / \mu_\infty$ , as defined in Eq. (4.90). It is remarkable that a phenomenon as complex as the development of a boundary layer, which depends at least on density, velocity, viscosity, and length of the surface, should be described by a formula as simple as Eq. (4.91). In this vein, Eq. (4.91) demonstrates the powerful influence of the Reynolds number,  $\text{Re}_x$ , in aerodynamic calculations.

Note from Eq. (4.91) that the laminar boundary layer thickness varies inversely as the square root of the Reynolds number. Also, because  $\text{Re}_x = \rho_\infty V_\infty x / \mu_\infty$ , then from Eq. (4.91)  $\delta \propto x^{1/2}$ ; that is, the laminar boundary layer grows *parabolically*.

The local shear stress  $\tau_w$  is also a function of  $x$ , as sketched in Fig. 4.47. Rather than deal with  $\tau_w$  directly, aerodynamicists find it more convenient to define a local skin friction coefficient  $c_{f_x}$  as

$$c_{f_x} \equiv \frac{\tau_w}{\frac{1}{2} \rho_\infty V_\infty^2} \equiv \frac{\tau_w}{q_\infty} \quad (4.92)$$

The skin friction coefficient is dimensionless and is defined as the local shear stress divided by the dynamic pressure at the outer edge of the boundary. From laminar boundary layer theory,


$$c_{f_x} = \frac{0.664}{\sqrt{\text{Re}_x}} \quad \text{laminar} \quad (4.93)$$

where, as usual,  $\text{Re}_x = \rho_\infty V_\infty x / \mu_\infty$ . Equation (4.93) demonstrates the convenience of defining a dimensionless skin friction coefficient. On the one hand, the dimensional shear stress  $\tau_w$  (as sketched in Fig. 4.47) depends on several quantities, such as  $\rho_\infty$ ,  $V_\infty$ , and  $\text{Re}_x$ ; on the other hand, from Eq. (4.93),  $c_{f_x}$  is a function of  $\text{Re}_x$  *only*. This convenience, obtained from using dimensionless coefficients and numbers, reverberates throughout aerodynamics. Relations between dimensionless quantities such as those given in Eq. (4.93) can be substantiated by *dimensional analysis*, a formal procedure to be discussed in Sec. 5.3.

Combining Eqs. (4.92) and (4.93), we can obtain values of  $\tau_w$  from

$$\tau_w = f(x) = \frac{0.664 q_\infty}{\sqrt{\text{Re}_x}} \quad (4.94)$$

Note from Eqs. (4.93) and (4.94) that both  $c_f$  and  $\tau_w$  for laminar boundary layers vary as  $x^{-1/2}$ ; that is,  $c_f$  and  $\tau_w$  decrease along the surface in the flow direction, as sketched in Fig. 4.47. The shear stress near the leading edge of a flat plate is greater than that near the trailing edge.

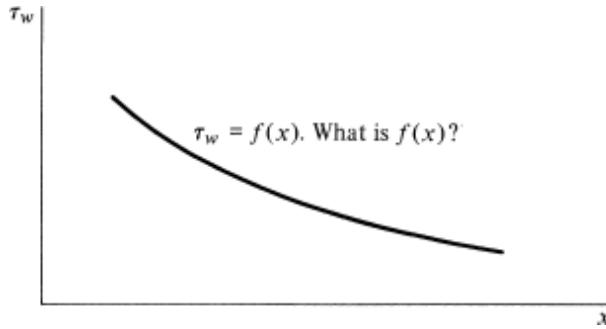

**Figure 4.47** Variation of shear stress with distance along the surface.

The variation of local shear stress  $\tau_w$  along the surface allows us [page 238](#) to calculate the total skin friction drag due to the airflow over an aerodynamic shape. Recall from Sec. 2.2 that the net aerodynamic force on any body is fundamentally due to the pressure and shear stress distributions on the surface. In many cases, it is this total aerodynamic force that is of primary interest. For example, if you mount a flat plate parallel to the airstream in a wind tunnel and measure the force exerted on the plate by means of a balance of some sort, you are not measuring the local shear stress  $\tau_w$ ; rather, you are measuring the total drag due to skin friction being exerted over all the surface. This *total skin friction drag* can be obtained as follows.

Consider a flat plate of length  $L$  and unit width oriented parallel to the flow, as shown in perspective in Fig. 4.48. Consider also an infinitesimally small surface element of the plate of length  $dx$  and width unity, as shown in Fig. 4.48. The local shear stress on this element is  $\tau_x$ , a function of  $x$ . Hence, the force on this element due to skin friction is  $\tau_w dx(1) = \tau_w dx$ . The total skin friction drag is the sum of the forces on all the infinitesimal elements from the leading to the trailing edge; that is, we obtain the total skin friction drag  $D_f$  by integrating  $\tau_x$  along the surface:

$$D_f = \int_0^L \tau_w dx \quad (4.95)$$


Combining Eqs. (4.94) and (4.95) yields

$$D_f = 0.664 q_\infty \int_0^L \frac{dx}{\sqrt{\text{Re}_x}} = \frac{0.664 q_\infty}{\sqrt{\rho_\infty V_\infty / \mu_\infty}} \int_0^L \frac{dx}{\sqrt{x}} \quad (4.96)$$

$$D_f = \frac{1.328 q_\infty L}{\sqrt{\rho_\infty V_\infty L / \mu}}$$

Let us define a *total skin friction drag coefficient*  $C_f$  as

$$C_f \equiv \frac{D_f}{q_\infty S} \quad (4.97)$$

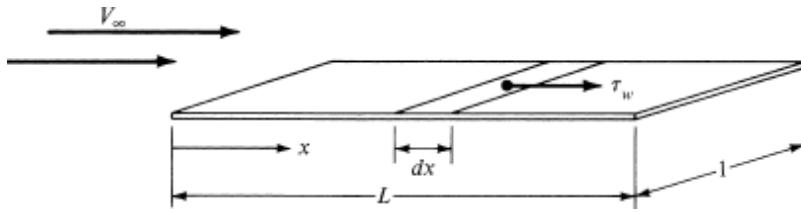

**Figure 4.48** Total drag is the integral of the local shear stress over the surface.

where  $S$  is the total area of the plate,  $S = L(1)$ . Thus, from Eqs. (4.96) and (4.97),

$$C_f = \frac{D_f}{q_\infty L(1)} = \frac{1.328 q_\infty L}{q_\infty L (\rho_\infty V_\infty L / \mu_\infty)^{1/2}}$$

or

$$C_f = \frac{1.328}{\sqrt{\text{Re}_L}} \quad \text{laminar} \quad (4.98)$$

where the Reynolds number is now based on the total length  $L$ ; that [page 239](#) is,  $\text{Re}_L \equiv \rho_\infty V_\infty L / \mu_\infty$ .

Do not confuse Eq. (4.98) with Eq. (4.93); they are different quantities. The local skin friction coefficient  $c_f$  in Eq. (4.93) is based on the local Reynolds number  $\text{Re}_x = \rho_\infty V_\infty x / \mu_\infty$  and is a function of  $x$ . However, the total skin friction coefficient  $C_f$  is based on the Reynolds number for the plate length  $L$ :  $\text{Re}_L = \rho_\infty V_\infty L / \mu_\infty$ .

We emphasize that Eqs. (4.91), (4.93), and (4.98) apply to laminar boundary layers only; for turbulent flow, the expressions are different. Also, these equations are exact only for low-speed (incompressible) flow. However, they have been shown to be reasonably accurate for high-speed subsonic flows as well. For supersonic and hypersonic flows, where the

velocity gradients within the boundary layer are so extreme and where the presence of frictional dissipation creates very large temperatures within the boundary layer, the form of these equations can still be used for engineering approximations; but  $\rho$  and  $\mu$  must be evaluated at some reference conditions germane to the flow inside the boundary layer. Such matters are beyond the scope of this book.

### EXAMPLE 4.38

Consider the flow of air over a small flat plate that is 5 cm long in the flow direction and 1 m wide. The free-stream conditions correspond to standard sea level, and the flow velocity is 120 m/s. Assuming laminar flow, calculate

- (a) The boundary layer thickness at the downstream edge (the trailing edge).
- (b) The drag force on the plate.

#### ■ Solution

a. At the trailing edge of the plate, where  $x = 5 \text{ cm} = 0.05 \text{ m}$ , the Reynolds number is, from Eq. (4.90),

$$\begin{aligned}\text{Re}_x &= \frac{\rho_\infty V_\infty x}{\mu_\infty} = \frac{(1.225 \text{ kg/m}^3)(120 \text{ m/s})(0.05 \text{ m})}{1.789 \times 10^{-5} \text{ kg/(m)(s)}} \\ &= 4.11 \times 10^5\end{aligned}$$

From Eq. (4.91),

$$\delta = \frac{5.2x}{\text{Re}_x^{1/2}} = \frac{5.2(0.05)}{(4.11 \times 10^5)^{1/2}} = \boxed{4.06 \times 10^{-4} \text{ m}}$$

Note how thin the boundary layer is—only 0.0406 cm at the trailing edge.

b. To obtain the skin friction drag, Eq. (4.98) gives, with  $L = 0.05 \text{ m}$ ,

$$C_f = \frac{1.328}{\text{Re}_L^{1/2}} = \frac{1.328}{(4.11 \times 10^5)^{1/2}} = 2.07 \times 10^{-3}$$

The drag can be obtained from the definition of the skin friction drag coefficient, Eq. (4.97), once  $q_\infty$  and  $S$  are known.

$$q_{\infty} = \frac{1}{2} \rho_{\infty} V_{\infty}^2 = \frac{1}{2} (1.225)(120)^2 = 8820 \text{ N/m}^2$$

$$S = 0.05(1) = 0.05 \text{ m}^2$$

Thus, from Eq. (4.97), the drag *on one surface* of the plate (say the top surface) is

$$\text{Top } D_f = q_{\infty} S C_f = 8820(0.05)(2.07 \times 10^{-3}) = 0.913 \text{ N}$$

Because both the top and bottom surfaces are exposed to the flow, the total friction drag will be double the above result:

$$\text{Total } D_f = 2(0.913) = 1.826 \text{ N}$$

### EXAMPLE 4.39

For the flat plate in Example 4.38, calculate and compare the local shear stress at the locations 1 and 5 cm from the front edge (the leading edge) of the plate, measured in the flow direction.

#### ■ Solution

The location  $x = 1 \text{ cm}$  is near the front edge of the plate. The local Reynolds number at this location, where  $x = 1 \text{ cm} = 0.01 \text{ m}$ , is

$$\text{Re}_x = \frac{\rho_{\infty} V_{\infty} x}{\mu_{\infty}} = \frac{1.225(120)(0.01)}{1.789 \times 10^{-5}} = 8.217 \times 10^4$$

From Eq. (4.93),

$$c_{f_x} = \frac{0.664}{\sqrt{\text{Re}_x}} = \frac{0.664}{\sqrt{8.217 \times 10^4}} = \frac{0.664}{286.65} = 0.002316$$

From Eq. (4.92), with  $q_{\infty} = 8820 \text{ N/m}^2$  from Example 4.38,

$$\tau_w = q_{\infty} c_{f_x} = 8820(0.002316) = 20.43 \text{ N/m}^2$$

At the location  $x = 5 \text{ cm} = 0.05 \text{ m}$ , the local Reynolds number is

$$\text{Re}_x = \frac{\rho_{\infty} V_{\infty} x}{\mu_{\infty}} = \frac{1.225(120)(0.05)}{1.789 \times 10^{-5}} = 4.11 \times 10^5$$

(This is the same value as that calculated in Example 4.38.) From Eq. (4.93),

$$c_{f_k} = \frac{0.664}{\sqrt{\text{Re}_x}} = \frac{0.664}{\sqrt{4.11 \times 10^5}} = 0.001036$$

From Eq. (4.92),

$$\tau_w = q_\infty c_{f_k} = 8820(0.001036) = 9.135 \text{ N/m}^2$$

By comparison, note that the local shear stress at  $x = 5$  cm—that is, at the back end of the plate (the trailing edge)—is less than that at  $x = 1$  cm near the front edge. This confirms the trend sketched in Fig. 4.47 that  $\tau_w$  decreases with distance in the flow direction along the plate.

As a check on our calculation, we note from Eq. (4.94) that  $\tau_w$  page 241 varies inversely as  $x^{1/2}$ . Thus, once we have calculated  $\tau_w = 20.43$  N/m<sup>2</sup> at  $x = 1$  cm, we can directly obtain  $\tau_w$  at  $x = 5$  cm from the ratio

$$\frac{\tau_{w2}}{\tau_{w1}} = \sqrt{\frac{x_1}{x_2}}$$

Setting condition 1 at  $x = 1$  cm and condition 2 at  $x = 5$  cm, we have


$$\tau_{w2} = \tau_{w1} \sqrt{\frac{x_1}{x_2}} = 20.43 \sqrt{\frac{1}{5}} = 9.135 \text{ N/m}^2$$

which verifies our original calculation of  $\tau_w$  at  $x = 5$  cm.

---

## 4.17 RESULTS FOR A TURBULENT BOUNDARY LAYER

Under the same flow conditions, a turbulent boundary layer will be *thicker* than a laminar boundary layer. This comparison is sketched in Fig. 4.49. Unlike in the case for laminar flows, no exact theoretical results can be presented for turbulent boundary layers. The study of turbulence is a major effort in fluid dynamics today; so far, turbulence is still an unsolved theoretical problem and is likely to remain so for an indefinite time. In fact, turbulence is one of the major unsolved problems in theoretical physics. As a result, our knowledge of  $\delta$  and  $\tau_w$  for turbulent boundary layers must rely on experimental results. Such results yield the following approximate formula for turbulent flow:

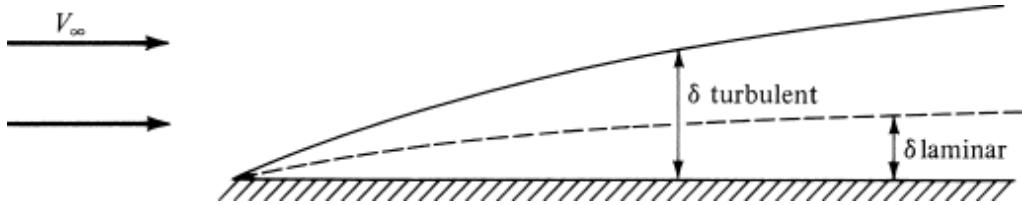

**Figure 4.49** Turbulent boundary layers are thicker than laminar boundary layers.

$$\delta = \frac{0.37x}{Re_x^{0.2}} \quad \text{turbulent} \quad (4.99)$$

Note from Eq. (4.99) that a turbulent boundary grows approximately as  $x^{4/5}$ . This is in contrast to the slower  $x^{1/2}$  variation for a laminar boundary layer. As a result, turbulent boundary layers grow faster and are thicker than laminar boundary layers.


The local skin friction coefficient for turbulent flow over a flat plate can be approximated by

$$c_{f,t} = \frac{0.0592}{(Re_x)^{0.2}} \quad \text{turbulent} \quad (4.100) \quad \text{page 242}$$

The total skin friction coefficient is given approximately as

$$C_f = \frac{0.074}{Re_L^{0.2}} \quad \text{turbulent} \quad (4.101)$$

Note that for turbulent flow,  $C_f$  varies as  $L^{-1/5}$ ; this is in contrast to the  $L^{-1/2}$  variation for laminar flow. Hence,  $C_f$  is larger for turbulent flow, which precisely confirms our reasoning at the end of Sec. 4.15, where we noted that  $\tau_w$  (laminar) <  $\tau_w$  (turbulent). Also note that  $C_f$  in Eq. (4.101) is once again a function of  $Re_L$ . Values of  $C_f$  for both laminar and turbulent flows are commonly plotted in the form shown in Fig. 4.50. Note the magnitude of the numbers involved in Fig. 4.50. The values of  $Re_L$  for actual flight situations may vary from  $10^5$  to  $10^8$  or higher; the values of  $C_f$  are generally much less than unity, on the order of  $10^{-2}$  to  $10^{-3}$ .

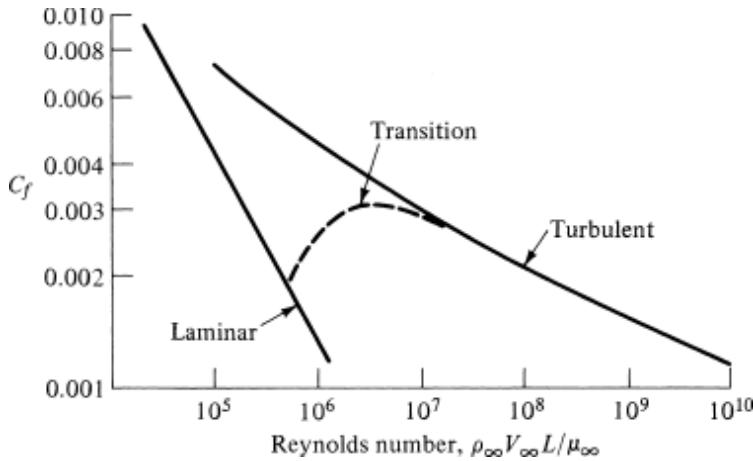

**Figure 4.50** Variation of skin friction coefficient with Reynolds number for low-speed flow. Comparison of laminar and turbulent flow.

### EXAMPLE 4.40

Consider the same flow over the same flat plate as in Example 4.38; [page 243](#) however, assume that the boundary layer is now completely turbulent. Calculate the boundary layer thickness at the trailing edge and the drag force on the plate.

#### ■ Solution

From Example 4.38,  $\text{Re}_x = 4.11 \times 10^5$ . From Eq. (4.99), for turbulent flow,

$$\delta = \frac{0.37x}{\text{Re}_x^{0.2}} = \frac{0.37(0.05)}{(4.11 \times 10^5)^{0.2}} = 1.39 \times 10^{-3} \text{ m}$$

*Note:* Compare this result with the laminar flow result from Example 4.38:

$$\frac{\delta_{\text{turb}}}{\delta_{\text{lam}}} = \frac{1.39 \times 10^{-3}}{4.06 \times 10^{-4}} = 3.42$$

Note that the turbulent boundary layer at the trailing edge is 3.42 times thicker than the laminar boundary layer—quite a sizable amount! From Eq. (4.101),

$$C_f = \frac{0.074}{\text{Re}_L^{0.2}} = \frac{0.074}{(4.11 \times 10^5)^{0.2}} = 0.00558$$

On the top surface,

$$D_f = q_\infty S C_f = 8820(0.05)(0.00558) = 2.46 \text{ N}$$

Considering both top and bottom surfaces, we have

$$\text{Total } D_f = 2(2.46) = \boxed{4.92 \text{ N}}$$

Note that the turbulent drag is 2.7 times larger than the laminar drag.

### EXAMPLE 4.41

Repeat Example 4.39, except now assume that the boundary layer is completely turbulent.

#### ■ Solution

From Example 4.39, at  $x = 1 \text{ cm}$ ,  $\text{Re}_x = 8.217 \times 10^4$ . The local turbulent skin friction coefficient at this location is, from Eq. (4.100),

$$c_{f_t} = \frac{0.0592}{\text{Re}_x^{0.2}} = \frac{0.0592}{(8.217 \times 10^4)^{0.2}} = 0.00616$$

From Example 4.39,  $q_\infty = 8820 \text{ N/m}^2$ . Hence

$$\tau_w = q_\infty c_{f_t} = 8820(0.00616) = \boxed{54.33 \text{ N/m}^2}$$

*Note:* In comparison to the laminar flow result from Example 4.39, the turbulent shear stress is  $54.33/20.43 = 2.7$  times larger. By *coincidence*, this is the same ratio as the *total* drag comparison made between turbulent and laminar boundary layer cases in Example 4.39.

At  $x = 5 \text{ cm}$ , from Example 4.39,  $\text{Re}_x = 4.11 \times 10^5$ . The local [page 244](#) turbulent skin friction coefficient at this location is, from Eq. (4.100),

$$c_{f_t} = \frac{0.0592}{\text{Re}_x^{0.2}} = \frac{0.0592}{(4.11 \times 10^4)^{0.2}} = 0.00446$$

Hence  $\tau_w = q_\infty c_{f_t} = 8820(0.00446) = \boxed{39.34 \text{ N/m}^2}$

*Note:* In comparison to the laminar flow result from Example 4.39, the turbulent shear stress at  $x = 5 \text{ cm}$  is  $39.34/9.135 = 4.3$  times larger.

Comparing the present results with those of Example 4.39, we see that over a given length of plate, the *percentage* drop in shear stress for the laminar case is larger than that for the turbulent case. Specifically, the percentage drop over the 4-cm space from  $x = 1$  cm to  $x = 5$  cm *for the laminar case* (Example 4.39) is

$$\text{Decrease} = \frac{20.43 - 9.135}{20.43} \times 100 = 55.3\%$$

For the *turbulent case* (Example 4.41),

$$\text{Decrease} = \frac{54.33 - 39.34}{54.33} \times 100 = 27.6\%$$


---

## 4.18 COMPRESSIBILITY EFFECTS ON SKIN FRICTION

Let us examine again the expressions for laminar and turbulent skin friction coefficients given by Eqs. (4.93) and (4.100), respectively. These equations shout the important fact that  $c_{f_x}$  is a function of Reynolds number *only*; that is,

$$\text{Laminar } c_{f_x} \propto \frac{1}{\sqrt{\text{Re}_x}}$$

$$\text{Turbulent } c_{f_x} \propto \frac{1}{\text{Re}_x^{0.2}}$$

Once again we see the power of the Reynolds number in governing viscous flows. However, this is not the whole story. Equations (4.91), (4.93), and (4.98) give expressions for  $\delta$ ,  $c_{f_x}$ , and  $C_f$ , respectively, for a flat-plate boundary layer in an *incompressible* laminar flow. Similarly, Eqs. (4.99), (4.100), and (4.101) give expressions for  $\delta$ ,  $c_{f_x}$ , and  $C_f$ , respectively, for a flat-plate boundary layer in an *incompressible* turbulent flow. Mainly for the benefit of simplicity, we did not emphasize in Secs. 4.16 and 4.17 that these equations apply to an incompressible flow. However, we are now bringing this to your attention. Indeed, you might want to go back to these equations and mark them in the margins as “incompressible.”

This raises the question: What are the effects of compressibility on a flat-plate boundary layer? The answer lies in the *Mach number*, which, as we have already seen in Secs. 4.11 to 4.13, is *the* powerful parameter governing high-speed, compressible inviscid flows. Specifically, for a flat-plate boundary layer in a compressible flow,  $\delta$ ,  $c_{f_x}$ , and  $C_f$  are functions of both


Mach number and Reynolds number. The effect of Mach number is not given by a nice, clean formula; rather, it must be evaluated from detailed numerical solutions of the compressible boundary layer flow, which are beyond the scope of this book. It is sufficient to note that for a flat-plate compressible boundary layer, the constant 0.664 in the numerator of Eq. (4.93) is replaced by some other number that depends on the value of the free-stream Mach number; that is,

$$C_{fx} = \frac{f_1(M_\infty)}{\sqrt{Re_x}} \quad \text{laminar, compressible} \quad (4.102) \quad \text{page 245}$$

Similarly, the constant 0.0592 in the numerator of Eq. (4.100) is replaced by some other number that depends on the value of  $M_\infty$ ; that is,

$$C_{fx} = \frac{f_2(M_\infty)}{Re_x^{0.2}} \quad \text{turbulent, compressible} \quad (4.103)$$

These variations are plotted in Fig. 4.51. Here the ratio of compressible to incompressible skin friction coefficients at the same Reynolds number is plotted versus free-stream Mach number for both laminar and turbulent flows. Note the following trends, shown in Fig. 4.51:

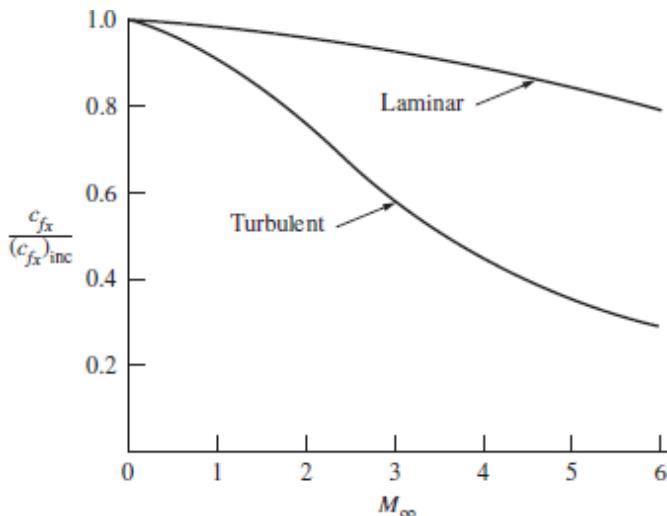

**Figure 4.51** Approximate theoretical results for the compressibility effect on laminar and turbulent flat-plate skin friction coefficients.

- For a constant Reynolds number, the effect of increasing  $M_\infty$  is to decrease  $C_{fx}$ .

2. The decrease in  $c_f$  is much more pronounced for turbulent flow than for laminar flow.

### EXAMPLE 4.42

A three-view of the Lockheed F-104A Starfighter is shown in Fig. 4.52. This was the first fighter aircraft designed for sustained Mach 2 flight. The airfoil section of the wing is very thin, with an extremely sharp leading edge. Assume that the wing is an infinitely thin flat plate. Consider the F-104 flying at Mach 2 at a standard altitude of 35,000 ft. Assume that the boundary layer over the wing is turbulent. Estimate the shear stress at a point 2 ft downstream of the leading edge.

#### ■ Solution

At 35,000 ft, from App. B,  $\rho_\infty = 7.382 \times 10^{-4}$  slug/ft<sup>3</sup> and  $T_\infty = 394.08^\circ\text{R}$ . To calculate the Reynolds number, we need both  $V_\infty$  and the viscosity coefficient  $\mu_\infty$ . The free-stream velocity is obtained from the speed of sound as follows:


$$a_\infty = \sqrt{\gamma R T_\infty} = \sqrt{1.4(1716)(394.08)} = 973 \text{ ft/s}$$

$$V_\infty = a_\infty M_\infty = 973(2) = 1946 \text{ ft/s}$$

We obtain  $\mu_\infty$  from Fig. 4.41, which shows the variation of  $\mu$  with  $T$ . Note that the ambient temperature in kelvins is obtained from  $394.08/1.8 = 219$  K. Extrapolating the linear curve in Fig. 4.41 to a temperature of 219 K, we find that  $\mu_\infty = 1.35 \times 10^{-5}$  kg/(m)(s). Converting to English engineering units, we note that as given in Sec. 4.15 at standard sea level,  $\mu = 1.7894 \times 10^{-5}$  kg/(m)(s) =  $3.7373 \times 10^{-7}$  slug/(ft)(s). The ratio of these two values gives us the conversion factor; so at  $T = 219 \text{ K} = 394.08^\circ\text{R}$ ,

$$\mu = [1.35 \times 10^{-5} \text{ kg/(m)(s)}] \frac{3.7373 \times 10^{-7} \text{ slug/(ft)(s)}}{1.7894 \times 10^{-5} \text{ kg/(m)(s)}}$$

$$= 2.82 \times 10^{-7} \text{ slug/(ft)(s)}$$

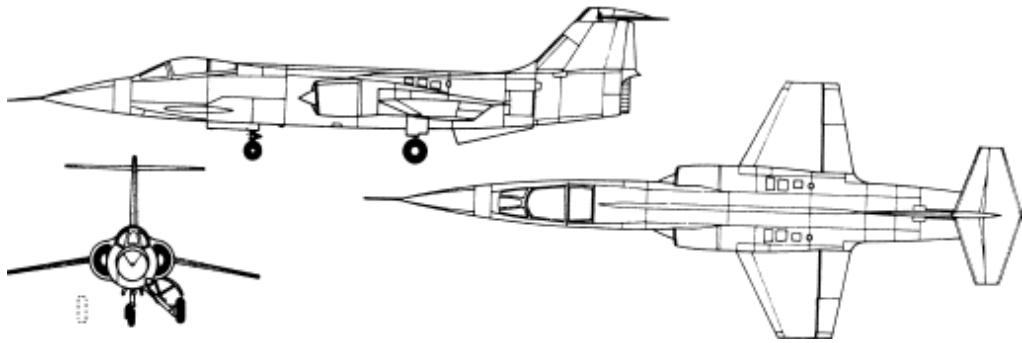

**Figure 4.52** Three-view of the Lockheed F-104 supersonic fighter.

$$\text{Hence} \quad \text{Re}_x = \frac{\rho_\infty V_\infty x}{\mu_\infty} = \frac{(7.382 \times 10^{-4})(1946)(2)}{2.82 \times 10^{-7}} = 1.02 \times 10^7$$

From Eq. (4.100), the *incompressible* skin friction coefficient is

$$(c_{f_x})_{\text{inc}} = \frac{0.0592}{\text{Re}_x^{0.2}} = \frac{0.0592}{1.02 \times 10^7} = 0.00235$$

From Fig. 4.51, for a turbulent boundary layer at  $M_\infty = 2$ ,

$$\frac{c_f}{(c_{f_x})_{\text{inc}}} = 0.74$$

Hence, the value of  $c_f$  at Mach 2 is

$$c_f = 0.74(0.00235) = 0.00174$$

The dynamic pressure is

$$q_\infty = \frac{1}{2} \rho_\infty V_\infty^2 = \frac{1}{2} (7.382 \times 10^{-4})(1946^2) = 1398 \text{ lb/ft}^2$$

page 247


Thus

$$\tau_w = q_\infty c_f = 1398(0.00174) = 2.43 \text{ lb/ft}^2$$

## 4.19 TRANSITION

In Sec. 4.16 we discussed the flow over a flat plate as if it were all laminar. Similarly, in Sec. 4.17 we assumed all-turbulent flow. In reality, the flow *always* starts out from the leading edge as laminar. Then, at some point downstream of the leading edge, the laminar boundary layer becomes unstable and small “bursts” of turbulent flow begin to grow in the flow. Finally, over a certain region called the *transition region*, the boundary layer

becomes completely turbulent. For analysis we usually draw the picture shown in Fig. 4.53, where a laminar boundary starts out from the leading edge of a flat plate and grows parabolically downstream. Then, at the *transition point*, it becomes a turbulent boundary layer growing at a faster rate, on the order of  $x^{4/5}$  downstream. The value of  $x$  where transition is said to take place is the *critical value*  $x_{\text{cr}}$ . In turn,  $x_{\text{cr}}$  allows the definition of a *critical Reynolds number* for transition as

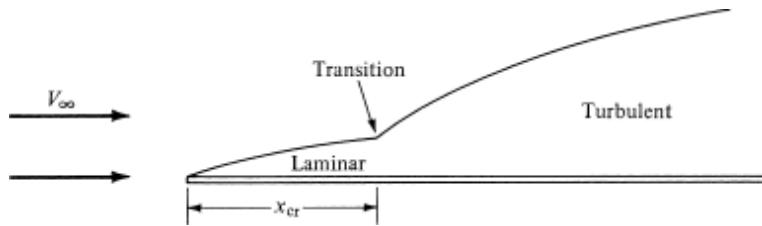

**Figure 4.53** Transition from laminar to turbulent flow. The boundary layer thickness is exaggerated for clarity.

$$\text{Re}_{x_{\text{cr}}} = \frac{\rho_{\infty} V_{\infty} x_{\text{cr}}}{\mu_{\infty}} \quad (4.104)$$

Volumes of literature have been written about the phenomenon of [page 248](#) transition from laminar to turbulent flow. Obviously, because  $\tau_w$  is different for the two flows, knowledge of where on the surface the transition occurs is vital to an accurate prediction of skin friction drag. The location of the transition point (in reality, a finite region) depends on many quantities, such as the Reynolds number, Mach number, heat transfer to or from the surface, turbulence in the free stream, surface roughness, and pressure gradient. A comprehensive discussion of transition is beyond the scope of this book. However, if the critical Reynolds number is given to you (usually from experiments for a given type of flow), then the location of transition  $x_{\text{cr}}$  can be obtained directly from the definition, Eq. (4.104).

For example, assume that you have an airfoil of given surface roughness in a flow at a free-stream velocity of 150 m/s and you wish to predict how far from the leading edge the transition will take place. After searching through the literature for low-speed flows over such surfaces, you may find that the critical Reynolds number determined from experience is approximately  $\text{Re}_{x_{\text{cr}}} = 5 \times 10^5$ . Applying this “experience” to your problem, using Eq. (4.104), and assuming that the thermodynamic conditions of the airflow correspond to standard sea level, you find

$$x_{cr} = \frac{\mu_\infty Re_{x_{cr}}}{\rho_\infty V_\infty} = \frac{[1.789 \times 10^{-5} \text{ kg/(m)(s)}](5 \times 10^5)}{(1.225 \text{ kg/m}^3)(150 \text{ m/s})} = 0.047 \text{ m}$$

Note that the region of laminar flow in this example is small—only 4.7 cm between the leading edge and the transition point. If you double the free-stream velocity to 300 m/s, the transition point is still governed by the critical Reynolds number  $Re_{x_{cr}} = 5 \times 10^5$ . Thus

$$x_{cr} = \frac{(1.789 \times 10^{-5})(5 \times 10^5)}{1.225(300)} = 0.0235 \text{ m}$$

Hence, when the velocity is doubled, the transition point moves forward one-half the distance to the leading edge.

In summary, once you know the critical Reynolds number, you can find  $x_{cr}$  from Eq. (4.104). However, an accurate value of  $Re_{x_{cr}}$  applicable to your problem must come from somewhere—experiment, free flight, or some semiempirical theory—and this may be difficult to obtain. This situation provides a little insight into why basic studies of transition and turbulence are needed to advance our understanding of such flows and to allow us to apply more valid reasoning to the prediction of transition in practical problems.

### EXAMPLE 4.43

The wingspan of the *Wright Flyer I* biplane is 40 ft 4 in, and the planform area of each wing is 255 ft<sup>2</sup> (see Figs. 1.1 and 1.2). Assume that the wing is rectangular (obviously not quite the case, but not bad), as shown in Fig. 4.54. If the *Flyer* is moving with a velocity of 30 mi/h at standard sea-level conditions, calculate the skin friction drag on the wings. Assume that the transition Reynolds number is  $6.5 \times 10^5$ . The areas of laminar and turbulent flow are illustrated by areas *A* and *B*, respectively, in Fig. 4.54.

#### ■ Solution

The general procedure is this:

- Calculate  $D_f$  for the combined area *A* + *B*, assuming that the flow [page 249](#) is completely turbulent.

b. Obtain the turbulent  $D_f$  for area  $B$  only, by calculating the turbulent  $D_f$  for area  $A$  and subtracting this from the result of part (a).

c. Calculate the laminar  $D_f$  for area  $A$ .


d. Add the results from parts (b) and (c) to obtain the total drag on the complete surface  $A + B$ .

First obtain some useful numbers in consistent units:  $b = 40 \text{ ft}$ ,  $4 \text{ in} = 40.33 \text{ ft}$ . Let  $S = \text{planform area} = A + B = 255 \text{ ft}^2$ . Hence,  $c = S/b = 255/40.33 = 6.32 \text{ ft}$ . At standard sea level,  $\rho_\infty = 0.002377 \text{ slug}/\text{ft}^3$  and  $\mu_\infty = 3.7373 \times 10^{-7} \text{ slug}/(\text{ft})(\text{s})$ . Also,  $V_\infty = 30 \text{ mi/h} = 30(88/60) = 44 \text{ ft/s}$ . Thus

$$\begin{aligned}\text{Re}_c &= \frac{\rho_\infty V_\infty c}{\mu_\infty} = \frac{0.002377(44)(6.32)}{3.7373 \times 10^{-7}} \\ &= 1.769 \times 10^6\end{aligned}$$

This is the Reynolds number at the trailing edge. To find  $x_{cr}$ ,

$$\begin{aligned}\text{Re}_{x_{cr}} &= \frac{\rho_\infty V_\infty x_{cr}}{\mu_\infty} \\ x_{cr} &= \frac{\text{Re}_{x_{cr}} \mu_\infty}{\rho_\infty V_\infty} \\ &= \frac{(6.5 \times 10^5)(3.7373 \times 10^{-7})}{0.002377(44)} = 2.32 \text{ ft}\end{aligned}$$

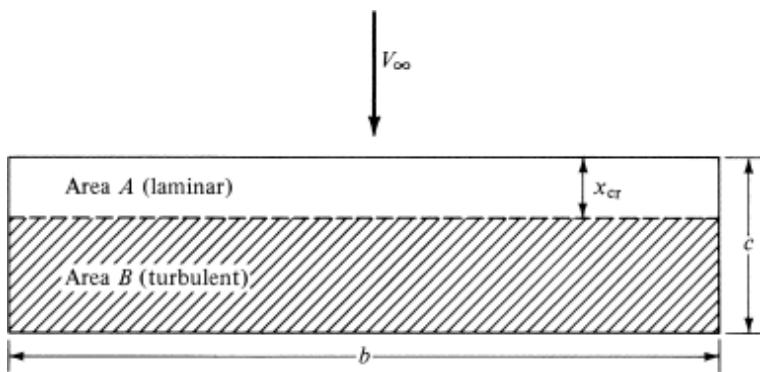

**Figure 4.54** Planform view of surface experiencing transition from laminar to turbulent flow.

We are now ready to calculate the drag. Assume that the wings of [page 250](#) the *Wright Flyer I* are thin enough that the flat-plate formulas apply.

a. To calculate turbulent drag over the complete surface  $S = A + B$ , use Eq. (4.101):

$$C_f = \frac{0.074}{Re_L^{0.2}} = \frac{0.074}{(1.769 \times 10^6)^{0.2}} = 0.00417$$

$$q_\infty = \frac{1}{2} \rho_\infty V_\infty^2 = \frac{1}{2} (0.002377)(44^2) = 2.30 \text{ lb/ft}^2$$

$$(D_f)_s = q_\infty S C_f = 2.30(255)(0.00417) = 2.446 \text{ lb}$$

b. For area  $A$  only, assuming turbulent flow,

$$C_f = \frac{0.074}{Re_{x_\alpha}^{0.2}} = \frac{0.074}{(6.5 \times 10^5)^{0.2}} = 0.00509$$

$$(D_f)_A = q_\infty A C_f = 2.30(2.32 \times 40.33)(0.00509) = 1.095 \text{ lb}$$

Hence, the turbulent drag on area  $B$  only is

$$(D_f)_B = (D_f)_s - (D_f)_A = 2.446 - 1.095 = 1.351 \text{ lb}$$

c. Considering the drag on area  $A$ , which is in reality a laminar drag, we obtain from Eq. (4.98)

$$C_f = \frac{1.328}{Re_{x_\alpha}^{0.5}} = \frac{1.328}{(6.5 \times 10^5)^{0.5}} = 0.00165$$

$$(D_f)_A = q_\infty A C_f = 2.30(2.32 \times 40.33)(0.00165) = 0.354 \text{ lb}$$

d. The total drag  $D_f$  on the surface is

$$D_f = (\text{laminar drag on } A) + (\text{turbulent drag on } B)$$

$$= 0.354 \text{ lb} + 1.351 \text{ lb} = 1.705 \text{ lb}$$

This is the drag on one surface. Each wing has a top and bottom surface, and there are two wings. Hence, the total skin friction drag on the complete biplane wing configuration is

---


$$D_f = 4(1.705) = \boxed{6.820 \text{ lb}}$$

## 4.20 FLOW SEPARATION



We have seen that the presence of friction in the flow causes a shear stress at the surface of a body, which in turn contributes to the aerodynamic drag of the body: skin friction drag. However, friction also causes another phenomenon, called *flow separation*, which in turn creates another source of

aerodynamic drag, called *pressure drag due to separation*. The real flow field about a sphere sketched in Fig. 4.37 is dominated by the separated flow on the rearward surface. Consequently, the pressure on the rearward surface is less than the pressure on the forward surface, and this imbalance of pressure forces causes a drag—hence the term *pressure drag due to separation*. In comparison, the skin friction drag on the sphere is very small.

Another example of where flow separation is important is the [page 251](#) flow over an airfoil. Consider an airfoil at a low angle of attack (low angle of incidence) to the flow, as sketched in Fig. 4.55. The streamlines move smoothly over the airfoil. The pressure distribution over the top surface is also shown in Fig. 4.55. Note that the pressure at the leading edge is high; the leading edge is a stagnation region, and the pressure is essentially stagnation pressure. This is the highest pressure anywhere on the airfoil. As the flow expands around the top surface of the airfoil, the surface pressure decreases dramatically, dipping to a minimum pressure, which is below the free-stream static pressure  $p_\infty$ . Then, as the flow moves farther downstream, the pressure gradually increases, reaching a value slightly above free-stream pressure at the trailing edge. This region of increasing pressure is called a region of *adverse* pressure gradient, defined as a region where  $dp/dx$  is positive. This region is so identified in Fig. 4.55. The adverse pressure gradient is moderate; that is,  $dp/dx$  is small, and for all practical purposes the flow remains attached to the airfoil surface, as sketched in Fig. 4.55. The drag on this airfoil is therefore mainly skin friction drag  $D_f$ .

---

[page 252](#)

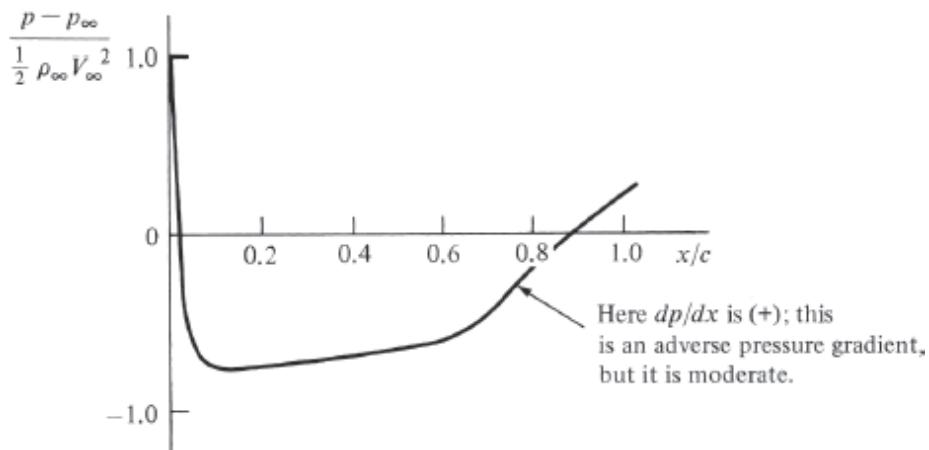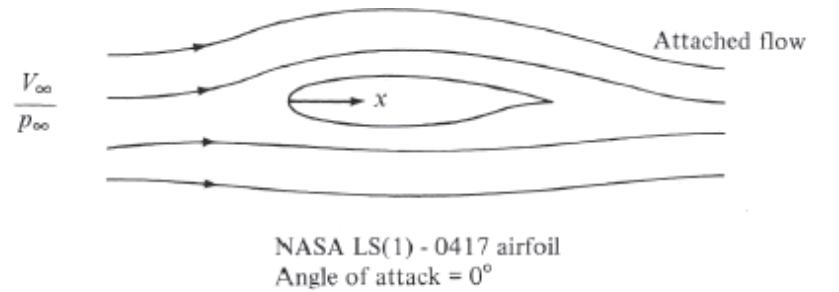


**Figure 4.55** Pressure distribution over the top surface for attached flow over an airfoil. Theoretical data for a modern NASA low-speed airfoil, from NASA Conference Publication 2046, *Advanced Technology Airfoil Research*, vol. II, March 1978, p. 11.

(Source: After McGhee, Beasley, and Whitcomb.)


Now consider the same airfoil at a very high angle of attack, as shown in Fig. 4.56. First assume that we had some magic fluid that would remain attached to the surface—purely an artificial situation. If this were the case, then the pressure distribution on the top surface would follow the dashed line in Fig. 4.56. The pressure would drop precipitously downstream of the leading edge to a value far below the free-stream static pressure  $p_\infty$ . Farther downstream the pressure would rapidly recover to a value above  $p_\infty$ . However, in this recovery, the adverse pressure gradient would no longer be moderate, as was the case in Fig. 4.55. Instead, in Fig. 4.56 the adverse pressure gradient would be severe; that is,  $dp/dx$  would be large. In such cases the *real* flow field tends to separate from the surface. Therefore, in Fig. 4.56 the real flow field is sketched with a large region of separated flow

over the top surface of the airfoil. In this real separated flow, the *actual* surface pressure distribution is given by the *solid* curve. In comparison to the dashed curve, note that the actual pressure distribution does not dip to as low a pressure minimum and that the pressure near the trailing edge does not recover to a value above  $p_\infty$ . This has two major consequences, as can be seen in Fig. 4.57. Here the airfoil at a large angle of attack (thus with flow separation) is shown with the real surface pressure distribution, symbolized by the solid arrows. Pressure always acts normal to a surface, so the arrows are all perpendicular to the local surface. The length of the arrow denotes the magnitude of the pressure. A solid curve is drawn through the base of the arrows to form an “envelope” to make the pressure distribution easier to visualize. However, if the flow were *not* separated (i.e., if the flow were attached), then the pressure distribution would be that shown by the dashed arrows (and the dashed envelope). The solid and dashed arrows in Fig. 4.57 qualitatively correspond to the solid and dashed pressure distribution curves, respectively, in Fig. 4.56.

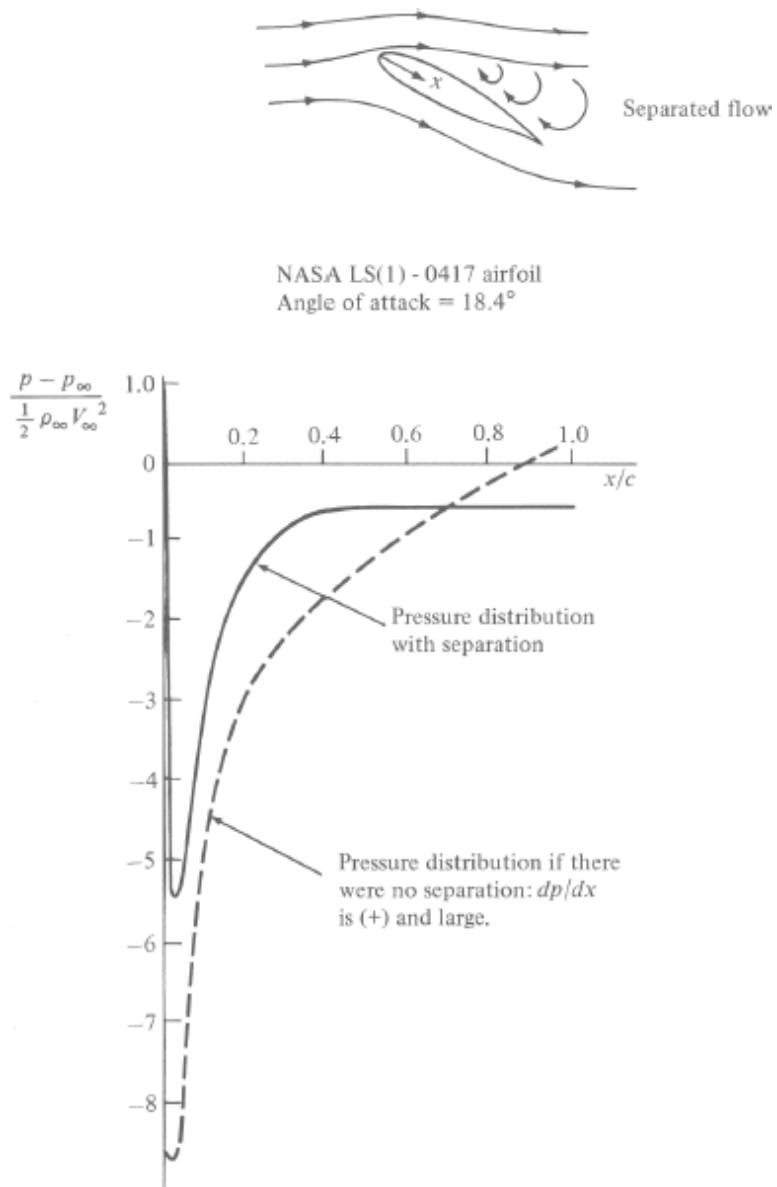

**Figure 4.56** Pressure distribution over the top surface for separated flow over an airfoil. Theoretical data for a modern NASA low-speed airfoil, from NASA Conference Publication 2045, Part 1, *Advanced Technology Airfoil Research*, vol. 1, March 1978, p. 380.

(Source: After Zumwalt and Nack.)

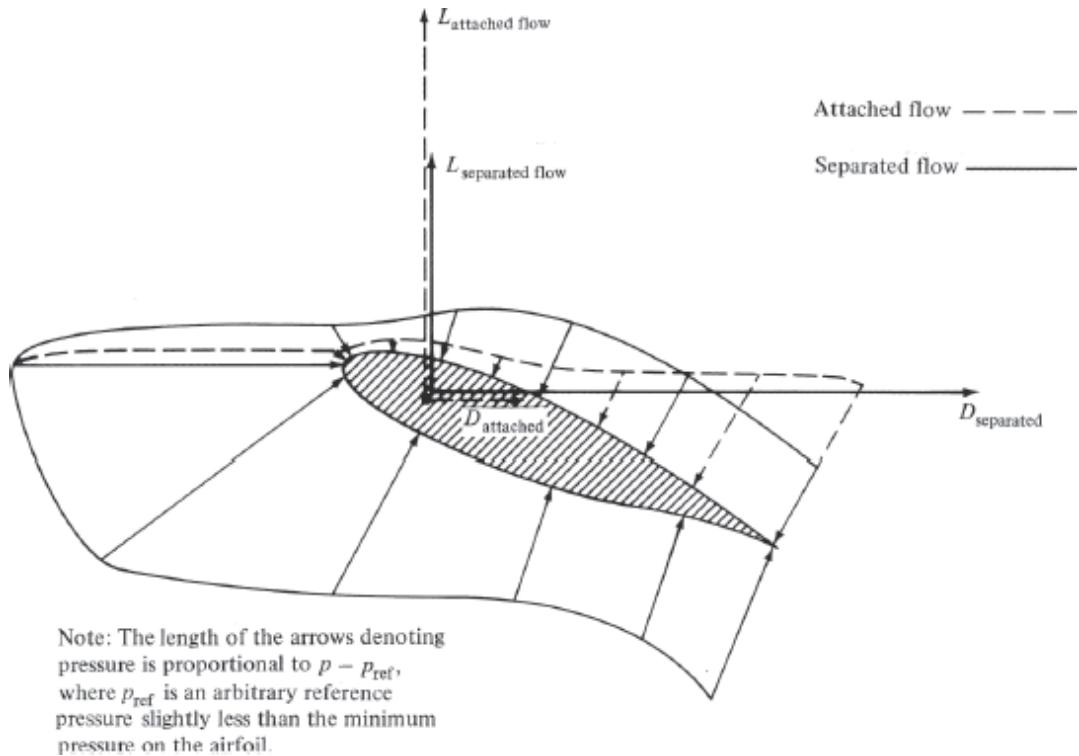

**Figure 4.57** Qualitative comparison of pressure distribution, lift, and drag for attached and separated flows. Note that for separated flow, the lift decreases and the drag increases.

The solid and dashed arrows in Fig. 4.57 should be looked at [page 254](#) carefully. They explain the two major consequences of separated flow over the airfoil. The first consequence is a loss of lift. The aerodynamic lift (the vertical force shown in Fig. 4.57) is derived from the net component of a pressure distribution in the vertical direction. High lift is obtained when the pressure on the bottom surface is large and the pressure on the top surface is small. Separation does not affect the bottom surface pressure distribution. However, comparing the solid and dashed arrows on the *top surface just downstream of the leading edge*, we find that the solid arrows indicate a higher pressure when the flow is separated. This higher pressure is pushing down, hence reducing the lift. This reduction of lift is also compounded by the geometric effect that the portion of the top surface of the airfoil near the leading edge is approximately horizontal in Fig. 4.57. When the flow is separated, causing a higher pressure on this part of the airfoil surface, the direction in which the pressure is acting is closely aligned to the vertical, and hence almost the full effect of the increased pressure is felt by the lift. The combined effect of the increased pressure on the top

surface near the leading edge, and the fact that this portion of the surface is approximately horizontal, leads to the rather dramatic loss of lift that occurs when the flow separates. Note in Fig. 4.57 that the lift for separated flow (the solid vertical arrow) is smaller than the lift that would exist if the flow were attached (the dashed vertical arrow).

Now let us concentrate on that portion of the top surface *near the trailing edge*. On this portion of the airfoil surface, the pressure for the separated flow is now *smaller* than the pressure that would exist if the flow were attached. Moreover, the top surface near the trailing edge is geometrically inclined to the horizontal and, in fact, somewhat faces in the horizontal direction. Recall that drag is in the horizontal direction in Fig. 4.57. Because of the inclination of the top surface near the trailing edge, the pressure exerted on this portion of the surface has a strong component in the horizontal direction. This component acts toward the left, tending to counter the horizontal component of force due to the high pressure acting on the nose of the airfoil pushing toward the right. The net pressure drag on the airfoil is the difference between the force exerted on the front pushing toward the right and the force exerted on the back pushing toward the left. When the flow is separated, the pressure at the back is lower than it would be if the flow were attached. Hence, for the separated flow, there is *less* force on the back pushing toward the left, and the net drag acting toward the right is therefore *increased*. Note in Fig. 4.57 that the drag for separated flow (the solid horizontal arrow) is larger than the drag that would exist if the flow were attached (the dashed horizontal arrow).

Therefore, two major consequences of the flow separating over an airfoil are

1. A drastic loss of lift (stalling).
2. A major increase in drag, caused by pressure drag due to separation.

When the wing of an airplane is pitched to a high angle of attack, the wing can stall; that is, there can be a sudden loss of lift. Our previous discussion gives the physical reasons for this stalling phenomenon. Additional ramifications of stalling are discussed in Ch. 5).

Before ending this discussion of separated flow, we ask: Why [page 255](#) does a flow separate from a surface? The answer is combined in the concept of an adverse pressure gradient ( $dp/dx$  is positive) and the velocity profile through the boundary layer, as shown in Fig. 4.44. If  $dp/dx$  is

positive, then the fluid elements moving along a streamline have to work their way “uphill” against an increasing pressure. Consequently, the fluid elements will slow down under the influence of an adverse pressure gradient. For the fluid elements moving outside the boundary layer, where the velocity (and hence kinetic energy) is high, this is not much of a problem. The fluid element keeps moving downstream. However, consider a fluid element deep inside the boundary layer. Looking at Fig. 4.44, we see that its velocity is small. It has been retarded by friction forces. The fluid element still encounters the same adverse pressure gradient, but its velocity is too low to negotiate the increasing pressure. As a result, the element comes to a stop somewhere downstream and then reverses its direction. Such reversed flow causes the flow field in general to separate from the surface, as shown in Fig. 4.56. This is physically how separated flow develops.

Reflecting once again on Fig. 4.44, we note that turbulent boundary layers have fuller velocity profiles. At a given distance from the surface (a given value of  $y$ ), the velocity of a fluid element in a turbulent boundary is higher than that in a laminar boundary layer. Hence, in turbulent boundary layers there is more flow kinetic energy nearer the surface, and the flow is less inclined to separate. This leads to a fundamental fact: Laminar boundary layers separate more easily than turbulent boundary layers. *Therefore, to help prevent flow field separation, we want a turbulent boundary layer.*

## 4.21 SUMMARY OF VISCOUS EFFECTS ON DRAG

We have seen that the presence of friction in a flow produces two sources of drag:

1. Skin friction drag  $D_f$  due to shear stress at the wall.
2. Pressure drag due to flow separation  $D_p$ , sometimes identified as *form drag*.

The *total* drag caused by viscous effects is then

$$\begin{array}{rcl} \textcolor{brown}{D} & = & \textcolor{blue}{D}_f + \textcolor{blue}{D}_p \\ \text{Total drag} & & \text{Drag due} \\ \text{due to viscous} & & \text{to skin} \\ \text{effects} & & \text{friction} \\ & & \text{Drag due to} \\ & & \text{separation} \\ & & \text{(pressure drag)} \end{array} \quad (4.105)$$

Equation (4.105) contains one of the classic compromises of aerodynamics. In previous sections we pointed out that skin friction drag is reduced by maintaining a laminar boundary layer over a surface. However,

we also pointed out at the end of Sec. 4.20 that turbulent boundary layers inhibit flow separation; hence pressure drag due to separation is reduced by establishing a turbulent boundary layer on the surface. Therefore, in Eq. (4.105) we have the following compromise:

$$D = D_f + D_p$$

Less for laminar,  
more for turbulent      More for laminar,  
less for turbulent

page 256

Consequently, as discussed at the end of Sec. 4.15, it cannot be said in general that either laminar or turbulent flow is preferable. Any preference depends on the specific application. On the one hand, for a blunt body such as the sphere in Fig. 4.37, the drag is mainly pressure drag due to separation; turbulent boundary layers reduce the drag on spheres and are therefore preferable. (We discuss this again in Ch. 5.) On the other hand, for a slender body such as a sharp, slender cone or a thin airfoil at small angles of attack to the flow, the drag is mainly skin friction drag; laminar boundary layers are preferable in this case. For in-between cases, the ingenuity of the designer and practical experience help to determine what compromises are best.

As a final note to this section, the total drag  $D$  given by Eq. (4.105) is called *profile drag* because both skin friction and pressure drag due to separation are ramifications of the shape and size of the body—that is, the “profile” of the body. The profile drag  $D$  is the total drag on an aerodynamic shape due to viscous effects. However, it is not in general the total aerodynamic drag on the body. There is one more source of drag, induced drag, which is discussed in Ch. 5).

### EXAMPLE 4.44

Consider the NASA LS (1)-0417 airfoil, shown in Fig. 4.55, mounted in the test section of a wind tunnel. The length of the model in the flow direction (the *chord length* as defined in Sec. 5.2) is 0.6 m, and its width across the flow (*wingspan* as defined in Sec. 5.3) is 1.0 m. The tips of the model are flush with the vertical sidewalls of the wind tunnel; in this fashion the induced drag (discussed in Sec. 5.13) is zero, and the total drag on the airfoil model is the profile drag,  $D$ , defined by Eq. (4.105). When the airflow in the test section of the wind tunnel is 97 m/s at standard sea-level conditions, the

profile drag on the airfoil at zero degree angle of attack is 34.7 N. (a) For these conditions, calculate the drag on the airfoil due to skin friction  $D_f$ . Assume that  $D_f$  is the same as the turbulent skin friction drag on a flat plate of equal length and width. (b) Calculate the pressure drag due to flow separation,  $D_p$ , on the airfoil. (c) Compare and comment on the results.

### ■ Solution

a. The skin friction drag depends on the Reynolds number based on the length of the airfoil in the flow direction,  $L$ , which is 0.6 m. The airstream in the test section of the wind tunnel is at a velocity of 97 m/s at standard sea-level conditions. Hence

$$Re_L = \frac{\rho_\infty V_\infty L}{\mu_\infty} = \frac{(1.23)(97)(0.6)}{(1.7894 \times 10^{-5})} = 4 \times 10^6$$

The turbulent flat-plate total skin friction drag coefficient is given by Eq. (4.101) as

$$C_f = \frac{0.074}{Re_L^{0.2}} = \frac{0.074}{(4 \times 10^6)^{0.2}} = 3.539 \times 10^{-3}$$

page 257

The total skin friction drag on one side of the plate is  $D_f = q_\infty S C_f$ , where the surface area of one side of the plate is its length times its width:  $S = (0.6)(1.0) = 0.6 \text{ m}^2$ . Thus, on one side of the plate,

$$D_f = q_\infty S C_f = \frac{1}{2} \rho_\infty V_\infty^2 S C_f = \frac{1}{2} (1.23)(97)^2 (0.6)(3.5)$$

Counting both sides of the plate, the total skin friction drag is

$$D_f = 2(12.29) = \boxed{24.6 \text{ N}}$$

b. The pressure drag due to flow separation is obtained simply from Eq. (4.105):

$$D_p = D - D_f = 34.7 - 24.6 = \boxed{10.1 \text{ N}}$$

c. The ratio of pressure drag to total profile drag on the LS(1)-0417 airfoil for the given conditions is  $10.1/34.7 = 0.29$ ; that is, the pressure drag is 29 percent of the total profile drag. This is reasonable for a rather thick airfoil (17 percent thick) with the cusped trailing edge on the bottom surface. For a thinner, more conventionally shaped airfoil, pressure drag constitutes a

smaller percentage—typically 15 percent of the profile drag at low angles of attack.

---

## 4.22 HISTORICAL NOTE: BERNOULLI AND EULER

Equation (4.9) is one of the oldest and most powerful equations in fluid dynamics. It is credited to Daniel Bernoulli, who lived during the 18th century; little did Bernoulli know that his concept would find widespread application in the aeronautics of the 20th century. Who was Bernoulli, and how did Bernoulli's equation come about? Let us briefly look into these questions; the answers will lead us to a rather unexpected conclusion.

Daniel Bernoulli (1700–1782) was born in Groningen, the Netherlands, on January 29, 1700. He was a member of a remarkable family. His father, Johann Bernoulli, was a noted mathematician who made contributions to differential and integral calculus and who later became a doctor of medicine. Jakob Bernoulli, who was Johann's brother (Daniel's uncle), was an even more accomplished mathematician; he made major contributions to calculus, and he coined the term *integral*. Sons of both Jakob and Johann, including Daniel, went on to become noted mathematicians and physicists. The entire family was Swiss and made its home in Basel, Switzerland, where they held various professorships at the University of Basel. Daniel Bernoulli was born away from Basel only because his father spent 10 years as professor of mathematics in the Netherlands. With this type of pedigree, Daniel could hardly avoid making contributions to mathematics and science himself.

And indeed he did make contributions. For example, he had insight into the kinetic theory of gases; he theorized that a gas was a collection of individual particles moving about in an agitated fashion, and he correctly associated the increased temperature of a gas with the increased energy of the particles. These ideas, originally published in 1738, were to lead a century later to a mature understanding of the nature of gases and heat and helped lay the foundation for the elegant kinetic theory of gases.

Daniel's thoughts on the kinetic motion of gases were published [page 258](#) in his book *Hydrodynamica* (1738). However, this book was to etch his name more deeply in association with fluid mechanics than with kinetic theory. The book was started in 1729, when Daniel was a professor of mathematics at Leningrad (then St. Petersburg) in Russia. By this time he was already well recognized; he had won 10 prizes offered by the Royal

Academy of Sciences in Paris for his solution of various mathematical problems. In his *Hydrodynamica* (which was written entirely in Latin), Bernoulli ranged over such topics as jet propulsion, manometers, and flow in pipes. He also attempted to obtain a relationship between pressure and velocity, but his derivation was obscure. In fact, even though Bernoulli's equation, Eq. (4.9), is usually ascribed to Daniel via his *Hydrodynamica*, the precise equation is not to be found in the book! The picture is further complicated by his father, Johann, who published a book in 1743 titled *Hydraulica*. It is clear from this latter book that the father understood Bernoulli's theorem better than the son did; Daniel thought of pressure strictly in terms of the height of a manometer column, whereas Johann had the more fundamental understanding that pressure was a force acting on the fluid. However, neither of the Bernoullis understood that pressure is a point property. That was to be left to Leonhard Euler.

Leonhard Euler (1707–1783) was also a Swiss mathematician. He was born in Basel, Switzerland, on April 15, 1707, seven years after the birth of Daniel Bernoulli. Euler went on to become one of the mathematical giants of history, but his contributions to fluid dynamics are of interest here. Euler was a close friend of the Bernoullis; he was a student of Johann Bernoulli at the University of Basel. Later Euler followed Daniel to St. Petersburg, where he became a professor of mathematics. Here Euler was influenced by the work of the Bernoullis in hydrodynamics, but was more influenced by Johann than by Daniel. Euler originated the concept of pressure acting at a point in a gas. This quickly led to his differential equation for a fluid accelerated by gradients in pressure, the same equation we derived as Eq. (4.8). In turn, Euler integrated the differential equation to obtain, for the first time in history, Bernoulli's equation, just as we obtained Eq. (4.9). Hence, we see that Bernoulli's equation, Eq. (4.9), is really a historical misnomer. Credit for Bernoulli's equation is legitimately shared by Euler.

## 4.23 HISTORICAL NOTE: THE PITOT TUBE

The use of a Pitot tube to measure airspeed is described in Sec. 4.11; indeed, the Pitot tube today is so commonly used in aerodynamic laboratories and on aircraft that it is almost taken for granted. However, this simple little device has a rather interesting and somewhat obscure history.

The Pitot tube is named after its inventor, Henri Pitot (1695–[page 259](#) 1771). Born in Aramon, France, in 1695, Pitot began his career as

an astronomer and mathematician. He was accomplished enough to be elected to the Royal Academy of Sciences, Paris, in 1724. About this time, Pitot became interested in hydraulics and, in particular, in the flow of water in rivers and canals. However, he was not satisfied with the existing technique of measuring the flow velocity, which was to observe the speed of a floating object on the surface of the water. So, he devised an instrument consisting of two tubes. One was simply a straight tube open at one end, which was inserted vertically into the water (to measure static pressure), and the other was a tube with one end bent at right angles, with the open end facing directly into the flow (to measure total pressure). In 1732, between two piers of a bridge over the Seine River in Paris, he used this instrument to measure the flow velocity of the river. This invention and the first use of the Pitot tube were announced by Pitot to the Academy on November 12, 1732. He also presented some data of major importance on the variation of water flow velocity with depth. Contemporary theory, based on experience of some Italian engineers, held that the flow velocity at a given depth was proportional to the mass above it; hence the velocity was thought to increase with depth. Pitot reported the stunning (and correct) results, measured with his instrument, that in reality the flow velocity *decreased* as the depth increased. So the Pitot tube was introduced with style.

Interestingly enough, Pitot's invention soon fell into disfavor with the engineering community. A number of investigators attempted to use just the Pitot tube itself, without a local static pressure measurement. Others, using the device under uncontrolled conditions, produced spurious results. Various shapes and forms other than a simple tube were sometimes used for the mouth of the instrument. Moreover, there was no agreed-upon rational theory of the Pitot tube. Note that Pitot developed his instrument in 1732, six years *before* Daniel Bernoulli's *Hydrodynamica* and well before Euler had developed the Bernoullis' concepts into Eq. (4.9), as discussed in Sec. 4.22. Hence, Pitot used intuition, not theory, to establish that the pressure difference measured by his instrument was an indication of the square of the local flow velocity. Of course, as described in Sec. 4.11, we now clearly understand that a Pitot-static device measures the difference between total and static pressures and that for incompressible flow, this difference is related to the velocity squared through Bernoulli's equation; that is, from Eq. (4.62),


$$p_0 - p = \frac{1}{2} \rho V^2$$

However, for more than 150 years after Pitot's introduction of the instrument, various engineers attempted to interpret readings in terms of

$$p_0 - p = \frac{1}{2} K \rho V^2$$

where  $K$  was an empirical constant, generally much different from unity. Controversy was still raging as late as 1913, when John Airey, a professor of mechanical engineering from the University of Michigan, finally performed a series of well-controlled experiments in a water tow tank, using Pitot probes of six different shapes. These shapes are shown in Fig. 4.58, which is taken from Airey's paper in the April 17, 1913, issue of the *Engineering News*, titled "Notes on the Pitot Tube." In this paper Airey states that all his measurements indicate that  $K = 1.0$  within 1 percent accuracy, independent of the shape of the tube. Moreover, he presents a rational theory based on Bernoulli's equation. Further comments on these results are made in a paper titled "Origin and Theory of the Pitot Tube" by A. E. Guy, the chief engineer of a centrifugal pump company in Pittsburgh, in a June 5, 1913, issue of the *Engineering News*. This paper also helped to establish the Pitot tube on firmer technical grounds.

It is interesting to note that neither of these papers in 1913 [page 260](#) mentioned what was to become the most prevalent use of the Pitot tube: the measurement of airspeed for airplanes and wind tunnels. The first practical airspeed indicator, a Venturi tube, was used on an aircraft by the French Captain A. Eteve in January 1911, more than seven years after the first powered flight. Later in 1911, British engineers at the Royal Aircraft Establishment (RAE) at Farnborough employed a Pitot tube on an airplane for the first time. This was eventually to evolve into the primary instrument for flight speed measurement.

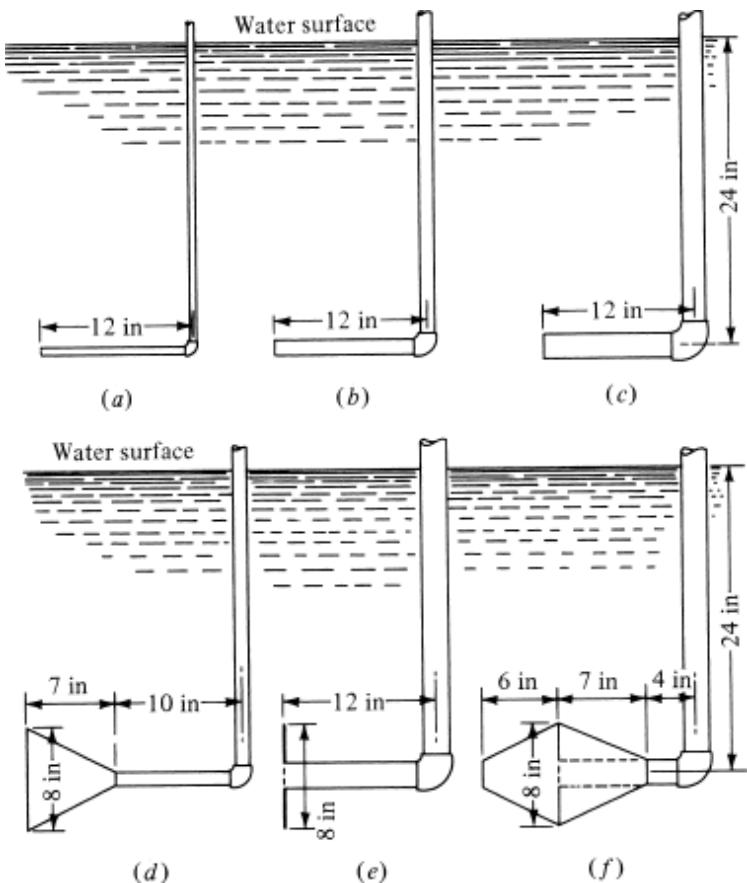

**Figure 4.58** Six forms of Pitot tubes tested by John Airey.

(Source: *From Engineering News, vol. 69, no. 16, p. 783, April 1913.*)

There was still controversy over Pitot tubes, as well as the need [page 261](#) for reliable airspeed measurements, in 1915, when the brand-new National Advisory Committee for Aeronautics (NACA) stated in its First Annual Report that “an important problem to aviation in general is the devising of accurate, reliable and durable air speed meters. . . . The Bureau of Standards is now engaged in investigation of such meters, and attention is invited to the report of Professor Herschel and Dr. Buckingham of the bureau on Pitot tubes.” The aforementioned report was NACA Report No. 2, Part 1, “The Pitot Tube and other Anemometers for Aeroplanes,” by W. H. Herschel, and Part 2, “The Theory of the Pitot and Venturi Tubes,” by E. Buckingham. Part 2 is of particular interest. In clear terms, it gives a version of the theory we developed in Sec. 4.11 for the Pitot tube; moreover, it develops for the first time the theory for *compressible* subsonic flow—quite unusual for 1915! Buckingham showed that to obtain 0.5 percent accuracy with the incompressible relations,  $V_\infty$  should not exceed 148 mi/h = 66.1

m/s. However, he went on to state that “since the accuracy of better than 1.0 percent can hardly be demanded of an airplane speedometer, it is evident that for all ordinary speeds of flight, no correction for compressibility is needed. . . .” This was certainly an appropriate comment for the “ordinary” airplanes of that day; indeed, it was accurate for most aircraft until the 1930s.

In retrospect, we see that the Pitot tube was invented almost 250 years ago but that its use was controversial and obscure until the second decade of powered flight. Then, between 1911 and 1915, one of those “explosions” in technical advancement occurred. Pitot tubes found a major home on airplanes, and the appropriate theory for their correct use was finally established. Since then Pitot tubes have become commonplace: The Pitot tube is usually the first aerodynamic instrument introduced to students of aerospace engineering in laboratory studies.

## 4.24 HISTORICAL NOTE: THE FIRST WIND TUNNELS

Aerospace engineering in general, and aerodynamics in particular, is an empirically based discipline. Discovery and development by experimental means have been its lifeblood, extending all the way back to George Cayley (see Ch. 1)). In turn, the workhorse for such experiments has been predominantly the wind tunnel—so much so that today most aerospace industrial, government, and university laboratories have a complete spectrum of wind tunnels ranging from low subsonic to hypersonic speeds.

It is interesting to reach back briefly into history and look at the evolution of wind tunnels. Amazingly enough, this history goes back more than 400 years. The cardinal principle of wind tunnel testing was stated by Leonardo da Vinci near the beginning of the 16th century as follows:

For since the action of the medium upon the body is the same whether the body moves in a quiescent medium, or whether the particles of the medium impinge with the same velocity upon the quiescent body; let us consider the body as if it were quiescent and see with what force it would be impelled by the moving medium.

It is almost self-evident today that the lift and drag of an page 262 aerodynamic body are the same whether it moves through stagnant air at 100 mi/h or whether the air moves over the stationary body at 100 mi/h. This concept is the very foundation of wind tunnel testing.

The first actual wind tunnel in history was designed and built more than 100 years ago by Francis Wenham in Greenwich, England, in 1871. We met Wenham once before, in Sec. 1.4, where we noted his activity in the Aeronautical Society of Great Britain. Wenham's tunnel was nothing more than a 10-ft-long wooden box with a square cross section, 18 in on a side. A steam-driven fan at the front end blew air through the duct. There was no contour and hence no aerodynamic control or enhancement of flow. Plane aerodynamic surfaces were placed in the airstream at the end of the box, where Wenham measured the lift and drag on weighing beams linked to the model.

Thirteen years later, Horatio F. Phillips, also an Englishman, built the second known wind tunnel in history. Again the flow duct was a box, but Phillips used steam ejectors (high-speed steam nozzles) downstream of the test section to suck air through the tunnel. Phillips went on to conduct some pioneering airfoil testing in his tunnel, which will be mentioned again in Sec. 5.20.


Other wind tunnels were built before the turning point in aviation in 1903. For example, the first wind tunnel in Russia was due to Nikolai Joukowski at the University of Moscow in 1891 (it had a 2-in diameter). A larger, 7 in  $\times$  10 in tunnel was built in Austria in 1893 by Ludwig Mach, son of the famed scientist and philosopher Ernst Mach, after whom the Mach number is named. The first tunnel in the United States was built at the Massachusetts Institute of Technology in 1896 by Alfred J. Wells, who used the machine to measure the drag on a flat plate as a check on the whirling-arm measurements of Langley (see Sec. 1.8). Another tunnel in the United States was built by Dr. A. Heb Zahm at the Catholic University of America in 1901. In light of these activities, it is obvious that at the turn of the 20th century, aerodynamic testing in wind tunnels was poised and ready to burst forth with the same energy that accompanied the development of the airplane itself.

It is fitting that the same two people responsible for getting the airplane off the ground should also have been responsible for the first concentrated series of wind tunnel tests. As noted in Sec. 1.8, the Wright brothers in late 1901 concluded that a large part of the existing aerodynamic data was erroneous. This led to their construction of a 6-ft-long, 16-in-square wind tunnel powered by a two-blade fan connected to a gasoline engine. A replica of the Wrights' wind tunnel is shown in Fig. 4.59. (Their original wind tunnel no longer exists.) They designed and built their own balance to

measure the ratios of lift to drag. Using this apparatus, Wilbur and Orville undertook a major program of aeronautical research between September 1901 and August 1902. During this time, they tested more than 200 different airfoil shapes manufactured out of steel. The results from these tests constitute the first major impact of wind tunnel testing on the development of a successful airplane. As we quoted in Sec. 1.8, Orville said about their results, “Our tables of air pressure which we made in our wind tunnel would enable us to calculate in advance the performance of a machine.” What a fantastic development! This was a turning point in the history of wind tunnel testing, and it had as much impact on that discipline as the December 17, 1903, flight had on the airplane.

---

page 263

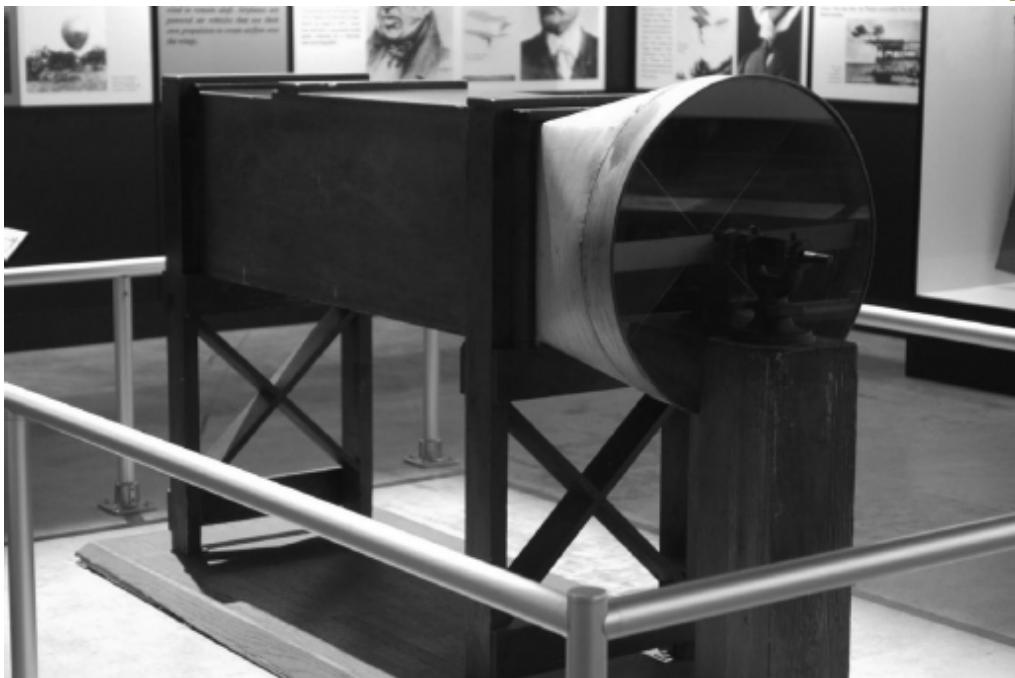

**Figure 4.59** A replica of the Wright brothers' wind tunnel.

(Source: *U.S. Air Force.*)

The rapid growth in aviation after 1903 was paced by the rapid growth of wind tunnels, both in numbers and in technology. For example, tunnels were built at the National Physical Laboratory in London in 1903; in Rome in 1903; in Moscow in 1905; in Göttingen, Germany (by the famous Dr. Ludwig Prandtl, originator of the boundary layer concept in fluid dynamics)

in 1908; in Paris in 1909 (including two built by Gustave Eiffel, of tower fame); and again at the National Physical Laboratory in 1910 and 1912.

All these tunnels, quite naturally, were low-speed facilities, but they were pioneering for their time. Then, in 1915, with the creation of NACA (see Sec. 2.8), the foundation was laid for some major spurts in wind tunnel design. The first NACA wind tunnel became operational at the Langley Memorial Aeronautical Laboratory at Hampton, Virginia, in 1920. It had a 5-ft-diameter test section that accommodated models up to 3.5 ft wide. In 1923, to simulate the higher Reynolds numbers associated with flight, NACA built the first variable-density wind tunnel, a facility that could be pressurized to 20 atm in the flow and therefore obtain a 20-fold increase in density, and hence  $Re$ , in the test section. During the 1930s and 1940s, subsonic wind tunnels grew larger and larger. In 1931 a NACA wind tunnel with a 30 ft  $\times$  60 ft oval test section went into operation at Langley with a 129 mi/h maximum flow velocity. This was the first million-dollar tunnel in history. In 1944 a 40 ft  $\times$  80 ft tunnel with a flow velocity of 265 mi/h was initiated at Ames Aeronautical Laboratory at Moffett Field, California. This is still the largest wind tunnel in the world today. Figure 4.60 shows the magnitude of such tunnels: Whole airplanes can be mounted in the test section!



**Figure 4.60** A subsonic wind tunnel large enough to test a full-size airplane. The NASA Langley Research Center 30 ft × 60 ft tunnel.

(Source: *NASA*.)

The tunnels just mentioned were low-speed, essentially [page 265](#) incompressible-flow tunnels. They were the cornerstone of aeronautical testing until the 1930s and remain an important part of the aerodynamic scene today. However, airplane speeds were progressively increasing, and new wind tunnels with higher-velocity capability were

needed. Indeed, the first requirement for high-speed subsonic tunnels was established by propellers: In the 1920s and 1930s the propeller diameters and rotational speeds were both increasing so as to encounter-compressibility problems at the tips. This problem led NACA to build a 12-in-diameter high-speed tunnel at Langley in 1927. It could produce a test section flow of 765 mi/h. In 1936, to keep up with increasing airplane speeds, Langley built a large 8-ft high-speed wind tunnel providing 500 mi/h. This was increased to 760 mi/h in 1945. An important facility was built at Ames in 1941: a 16-ft tunnel with an airspeed of 680 mi/h. A photograph of the Ames 16-ft tunnel is shown in Fig. 4.61 just to give a feeling for the massive size of such a facility.


In the early 1940s, the advent of the V-2 rocket as well as the jet engine put supersonic flight in the minds of aeronautical engineers. Suddenly the requirement for supersonic tunnels became a major factor. However, supersonic flows in the laboratory and in practice date farther back than this. The first supersonic nozzle was developed by Laval about 1880 for use with steam turbines. This is why the convergent-divergent nozzles are frequently called *Laval nozzles*. In 1905 Prandtl built a small Mach 1.5 tunnel at Göttingen to study steam turbine flows and (of all things) the moving of sawdust around sawmills.

The first practical supersonic wind tunnel for aerodynamic testing was developed by Dr. A. Busemann at Braunschweig, Germany, in the mid-1930s. Using the “method of characteristics” technique, which he had developed in 1929, Busemann designed the first smooth supersonic nozzle contour that produced shock-free isentropic flow. He had a diffuser with a second throat downstream to decelerate the flow and to obtain efficient operation of the tunnel. A photograph of Busemann’s tunnel is shown in Fig. 4.62. All supersonic tunnels today look essentially the same.

Working from Busemann’s example, the Germans built two major supersonic tunnels at their research complex at Peenemünde during World War II. These were used for research and development of the V-2 rocket. After the war, these tunnels were moved almost in total to the U.S. Naval Ordnance Laboratory (one was later moved to the University of Maryland), where they were used until the end of the 20th century. However, the first supersonic tunnel built in the United States was designed by Theodore von Karman and his colleagues at the California Institute of Technology in 1944 and was built and operated at the Army Ballistics Research Laboratory at Aberdeen, Maryland, under contract with Cal Tech. Then the 1950s saw a


virtual bumper crop of supersonic wind tunnels, one of the largest being the 16 ft × 16 ft continuously operated supersonic tunnel of the Air Force at the Arnold Engineering Development Center (AEDC) in Tennessee.

About this time, the development of the intercontinental ballistic missile (ICBM) was on the horizon, soon to be followed by the space program of the 1960s. Flight vehicles were soon to encounter velocities as high as 36,000 ft/s in the atmosphere—hypersonic velocities. In turn, hypersonic wind tunnels ( $M > 5$ ) were suddenly in demand. The first hypersonic wind tunnel was operated by NACA at Langley in 1947. It had an 11-in-square test section capable of Mach 7. Three years later, another hypersonic tunnel went into operation at the Naval Ordnance Laboratory. These tunnels are distinctly different from their supersonic relatives in that, to obtain hypersonic speeds, the flow has to be expanded so far that the temperature decreases to the point of liquefying the air. To prevent this, all hypersonic tunnels, both old and new, have to heat the reservoir gas to temperatures far above room temperature before its expansion through the nozzle. Heat transfer is a problem for high-speed flight vehicles, and such heating problems feed right down to the ground-testing facilities for such vehicles.

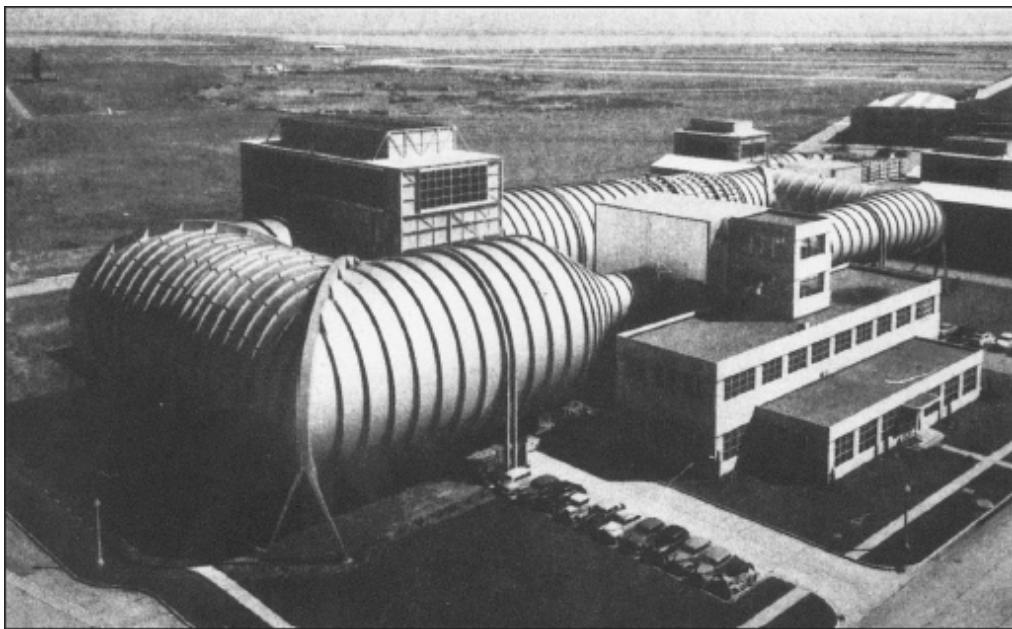

**Figure 4.61** The Ames 16-ft high-speed subsonic wind tunnel, illustrating the massive size that goes along with such a wind tunnel complex.

(Source: *NASA Ames Research Center*.)

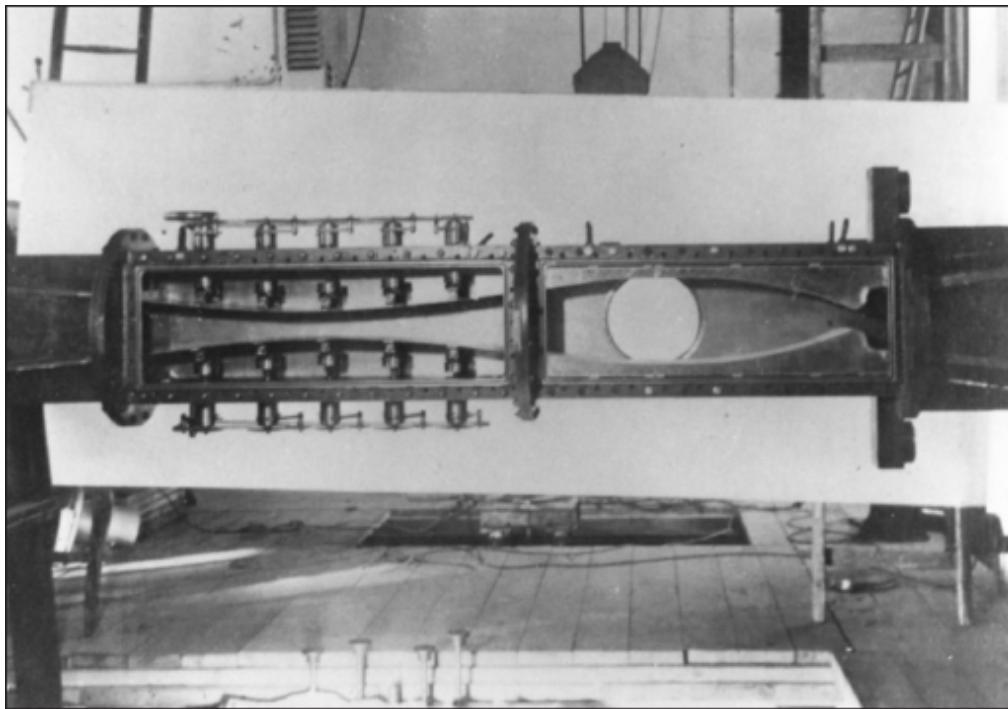

**Figure 4.62** The first practical supersonic wind tunnel, built by A. Busemann in the mid-1930s.

(Source: *Courtesy of Adolf Busemann.*)

In summary, modern wind tunnel facilities range across the page 267 whole spectrum of flight velocities, from low subsonic to hypersonic speeds. These facilities are part of the everyday life of aerospace engineering; this brief historical sketch has provided some insight into their tradition and development.

## 4.25 HISTORICAL NOTE: OSBORNE REYNOLDS AND HIS NUMBER

In Secs. 4.15 to 4.19 we observed that the Reynolds number, defined in Eq. (4.90) as  $\text{Re} = \rho_\infty V_\infty x / \mu_\infty$ , was the governing parameter for viscous flow. Boundary layer thickness, skin friction drag, transition to turbulent flow, and many other characteristics of viscous flow depend explicitly on the Reynolds number. Indeed, we can readily show that the Reynolds number itself has physical meaning: it is proportional to the ratio of inertia forces to viscous forces in a fluid flow. Clearly, the Reynolds number is an extremely important dimensionless parameter in fluid dynamics. Where did the

Reynolds number come from? When was it first introduced, and under what circumstances? The Reynolds number is named after a man—Osborne Reynolds. Who was Reynolds? This section answers these questions.

First let us look at Osborne Reynolds, the man. He was born on October 23, 1842, in Belfast, Ireland. He was raised in an intellectual family atmosphere; his father had been a fellow of Queens College, Cambridge; a principal of Belfast Collegiate School; headmaster of Dedham Grammar School in Essex; and finally rector at Debach-with-Boulge in Suffolk. Anglican clerics were a tradition in the Reynolds family; in addition to his father, his grandfather and great-grandfather had been rectors at Debach. Against this background, Osborne Reynolds's early education was carried out by his father at Dedham. In his teens, Osborne already showed an intense interest in the study of mechanics, for which he had a natural aptitude. At the age of 19 he served a short apprenticeship in mechanical engineering before attending Cambridge University a year later. Reynolds was a highly successful student at Cambridge, graduating with the highest honors in mathematics. In 1867 he was elected a fellow of Queens College, Cambridge (an honor earlier bestowed upon his father). He went on to serve one year as a practicing civil engineer in the office of John Lawson in London. However, in 1868 Owens College in Manchester (later to become the University of Manchester) established its chair of engineering—the second of its kind in any English university (the first was the chair of civil engineering established at the University College, London, in 1865). Reynolds applied for this chair, writing in his application,

---

page 268


From my earliest recollection I have had an irresistible liking for mechanics and the physical laws on which mechanics as a science are based. In my boyhood I had the advantage of the constant guidance of my father, also a lover of mechanics and a man of no mean attainment in mathematics and their application to physics.

Despite his youth and relative lack of experience, Reynolds was appointed to the chair at Manchester. For the next 37 years he served as a professor at Manchester until his retirement in 1905.


During those 37 years, Reynolds distinguished himself as one of history's leading practitioners of classical mechanics. During his first years at Manchester, he worked on problems involving electricity, magnetism, and the electromagnetic properties of solar and cometary phenomena. After

1873 he focused on fluid mechanics—the area in which he made his lasting contributions. For example, he (1) developed Reynolds's analogy in 1874, a relation between heat transfer and frictional shear stress in a fluid; (2) measured the average specific heat of water between freezing and boiling, which ranks among the classic determinations of physical constants; (3) studied water currents and waves in estuaries; (4) developed turbines and pumps; and (5) studied the propagation of sound waves in fluids. However, his most important work, and the one that gave birth to the concept of the Reynolds number, was reported in 1883 in a paper titled “An Experimental Investigation of the Circumstances which Determine whether the Motion of Water in Parallel Channels Shall Be Direct or Sinuous, and of the Law of Resistance in Parallel Channels.” Published in *Proceedings of the Royal Society*, this paper was the first to demonstrate the transition from laminar to turbulent flow and to relate this transition to a critical value of a dimensionless parameter—later to become known as the Reynolds number. Reynolds studied this phenomenon in water flow through pipes. His experimental apparatus is illustrated in Fig. 4.63, taken from his original 1883 paper. (Note that before the day of modern photographic techniques, some technical papers contained rather elegant hand sketches of experimental apparatus, of which Fig. 4.63 is an example.) Reynolds filled a large reservoir with water, which fed into a glass pipe through a larger bell-mouth entrance. As the water flowed through the pipe, Reynolds introduced dye into the middle of the stream, at the entrance of the bell mouth. What happened to this thin filament of dye as it flowed through the pipe is illustrated in Fig. 4.64, also from Reynolds's original paper. The flow is from right to left. If the flow velocity was small, the thin dye filament would travel downstream in a smooth, neat, orderly fashion, with a clear demarcation between the dye and the rest of the water, as illustrated in Fig. 4.64a. However, if the flow velocity increased beyond a certain value, the dye filament would suddenly become unstable and would fill the entire pipe with color, as shown in Fig. 4.64b. Reynolds clearly pointed out that the smooth dye filament in Fig. 4.64a corresponded to laminar flow in the pipe, whereas the agitated and totally diffused dye filament in Fig. 4.64b was due to turbulent flow in the pipe. Furthermore, Reynolds studied the details of this turbulent flow by visually observing the pipe flow illuminated by a momentary electric spark, much as we would use a strobe light today. He saw that the turbulent flow consisted of many distinct eddies, as sketched in Fig. 4.64c. The transition from laminar to turbulent flow occurred when the

parameter defined by  $\rho VD/\mu$  exceeded a certain critical value, where  $\rho$  was the density of the water,  $V$  was the mean flow velocity,  $\mu$  was the viscosity coefficient, and  $D$  was the diameter of the pipe. This dimensionless parameter, first introduced by Reynolds, later became known as the Reynolds number. Reynolds measured the critical value of this number, above which turbulent flow occurred, as 2300. This original work of Reynolds initiated the study of transition from laminar to turbulent flow as a new field of research in fluid dynamics—a field that is still today one of the most important and insufficiently understood areas of aerodynamics.

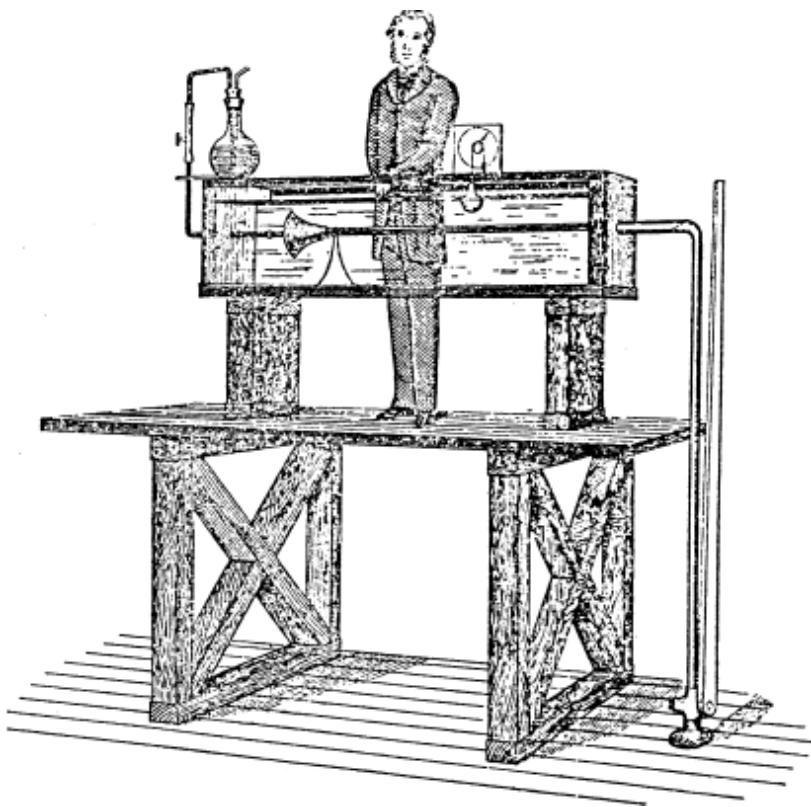

**Figure 4.63** Osborne Reynolds's apparatus for his famous pipe flow experiments. This figure is from his original paper, referenced in the text.

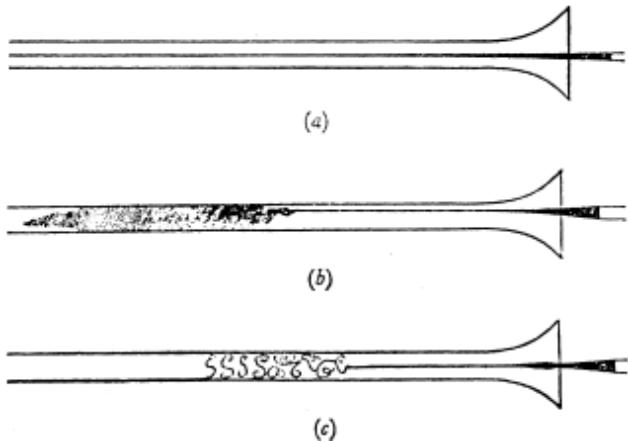

**Figure 4.64** Development of turbulent flow in pipes, as observed and sketched by Reynolds. This figure is from his original paper, referenced in the text.

page 270

Reynolds was a scholarly man with high standards. Engineering education was new to English universities at that time, and Reynolds had definite ideas about its proper form. He felt that all engineering students, no matter what their specialty, should have a common background based on mathematics, physics, and, in particular, the fundamentals of classical mechanics. At Manchester he organized a systematic engineering curriculum covering the basics of civil and mechanical engineering. Ironically, despite his intense interest in education, as a lecturer in the classroom Reynolds left something to be desired. His lectures were hard to follow, and his topics frequently wandered with little or no connection. He was known to come up with new ideas during a lecture and to spend the remainder of the lecture working out these ideas on the board, seemingly oblivious to the students in the classroom. That is, he did not “spoon-feed” his students, and many of the poorer students did not pass his courses. In contrast, the best students enjoyed his lectures and found them stimulating. Many of Reynolds’s successful students went on to become distinguished engineers and scientists, the most notable being Sir J. J. Thomson, later the Cavendish Professor of Physics at Cambridge; Thomson is famous for first demonstrating the existence of the electron in 1897, for which he received the Nobel Prize in 1906.

In regard to Reynolds’s interesting research approach, his student, colleague, and friend Professor A. H. Gibson had this to say in his biography of Reynolds, written for the British Council in 1946:

Reynolds' approach to a problem was essentially individualistic. He never began by reading what others thought about the matter, but first thought this out for himself. The novelty of his approach to some problems made some of his papers difficult to follow, especially those written during his later years. His more descriptive physical papers, however, make fascinating reading, and when addressing a popular audience, his talks were models of clear exposition.

At the turn of the century, Reynolds's health began to fail, and he subsequently had to retire in 1905. The last years of his life were ones of considerably diminished physical and mental capabilities—a particularly sad state for such a brilliant and successful scholar. He died at Somerset, England, in 1912. Sir Horace Lamb, one of history's most famous fluid dynamicists and a long-time colleague of Reynolds, wrote after Reynolds's death,

The character of Reynolds was, like his writings, strongly individual. He was conscious of the value of his work, but was content to leave it to the mature judgement of the scientific world. For advertisement he had no taste, and undue pretensions on the part of others only elicited a tolerant smile. To his pupils he was most generous in the opportunities for valuable work which he put in their way, and in the share of co-operation. Somewhat reserved in serious or personal matters and occasionally combative and tenacious in debate, he was in the ordinary relations of life the most kindly and genial of companions. He had a keen sense of humor and delighted in startling paradoxes, which he would maintain, half seriously and half playfully, with astonishing ingenuity and resource. The illness which at length compelled his retirement was felt as a grievous calamity by his pupils, his colleagues and other friends throughout the country.

The purpose of this section has been to relate the historical page 271 beginnings of the Reynolds number in fluid mechanics. From now on, when you use the Reynolds number, view it not only as a powerful dimensionless parameter governing viscous flow, but also as a testimonial to its originator—one of the famous fluid dynamicists of the 19th century.

## 4.26 HISTORICAL NOTE: PRANDTL AND THE DEVELOPMENT OF THE BOUNDARY LAYER CONCEPT

The modern science of aerodynamics has roots as far back as Isaac Newton, who devoted the entire second book of his *Principia* (1687) to fluid-dynamics—especially to the formulation of “laws of resistance” (drag). He noted that drag is a function of fluid density, velocity, and the shape of the body in motion. However, Newton was unable to formulate the correct equation for drag. He derived a formula that gave the drag on an inclined object as proportional to the sine squared of the angle of attack. Later Newton’s sine-squared law was used to demonstrate the “impossibility of heavier-than-air flight” and hindered the intellectual advancement of flight in the 19th century. Ironically, the physical assumptions used by Newton in deriving his sine-squared law approximately reflect the conditions of hypersonic flight, and the Newtonian law has been used since 1950 in the design of high-Mach-number vehicles. However, Newton correctly reasoned the mechanism of shear stress in a fluid. In section 9 of book 2 of *Principia*, Newton states the following hypothesis: “The resistance arising from want of lubricity in the parts of a fluid is . . . proportional to the velocity with which the parts of the fluid are separated from each other.” This is the first statement in history of the friction law for laminar flow; it is embodied in Eq. (4.89), which describes a “Newtonian fluid.”

Further attempts to understand fluid dynamic drag were made by the French mathematician Jean le Rond d’Alembert, who is noted for developing the calculus of partial differences (leading to the mathematics of partial differential equations). In 1768 d’Alembert applied the equations of motion for an incompressible, inviscid (frictionless) flow about a two-dimensional body in a moving fluid and found that no drag is obtained. He wrote, “I do not see then, I admit, how one can explain the resistance of fluids by the theory in a satisfactory manner. It seems to me on the contrary that this theory, dealt with and studied with profound attention gives, at least in most cases, resistance absolutely zero: a singular paradox which I leave to geometers to explain.” That this theoretical result of zero drag is truly a paradox was clearly recognized by d’Alembert, who also conducted experimental research on drag and who was among the first to discover that drag is proportional to the square of the velocity, as derived in Sec. 5.3 and given in Eq. (5.18).

D’Alembert’s paradox arose due to the neglect of friction in classical theory. It was not until a century later that the effect of friction was properly incorporated in the classical equations of motion by the work of M. Navier (1785–1836) and Sir George Stokes (1819–1903). The so-called Navier–

Stokes equations stand today as the classical formulation of fluid dynamics. However, in general they are nonlinear equations and are extremely difficult to solve; indeed, only with the numerical power of modern high-speed digital computers are “exact” solutions of the Navier–Stokes equations finally being obtained for general flow fields. Also in the 19th century, the first experiments on transition from laminar to turbulent flow were carried out by Osborne Reynolds (1842–1912), as related in Sec. 4.25. In his classic paper of 1883 titled “An Experimental Investigation of the Circumstances which Determine whether the Motion of Water in Parallel Channels Shall Be Direct or Sinuous, and of the Law of Resistance in Parallel Channels,” Reynolds observed a filament of colored dye in a pipe flow and noted that transition from laminar to turbulent flow always corresponded to approximately the same value of a dimensionless number  $\rho VD/\mu$ , where  $D$  was the diameter of the pipe. This was the origin of the Reynolds number, defined in Sec. 4.15 and discussed at length in Sec. 4.25.

Therefore, at the beginning of the 20th century, when the Wright [page 272](#) brothers were deeply involved in the development of the first successful airplane, the development of theoretical fluid dynamics still had not led to practical results for aerodynamic drag. It was this environment into which Ludwig Prandtl was born on February 4, 1875, at Freising, in Bavaria, Germany. Prandtl was a genius who had the talent of cutting through a maze of complex physical phenomena to extract the most salient points and put them in simple mathematical form. Educated as a physicist, Prandtl was appointed in 1904 as professor of applied mechanics at Göttingen University in Germany, a post he occupied until his death in 1953.

In the period from 1902 to 1904, Prandtl made one of the most important contributions to fluid dynamics. Thinking about the viscous flow over a body, he reasoned that the flow velocity right at the surface was zero and that if the Reynolds number was high enough, the influence of friction was limited to a thin layer (Prandtl first called it a transition layer) near the surface. Therefore, the analysis of the flow field could be divided into two distinct regions: one close to the surface, which included friction, and the other farther away, in which friction could be neglected. In one of the most important fluid dynamics papers in history, titled “*Über Flüssigkeitsbewegung bei sehr kleiner Reibung*,” Prandtl reported his

thoughts to the Third International Mathematical Congress at Heidelberg in 1904. In this paper Prandtl observed,

A very satisfactory explanation of the physical process in the boundary layer (Grenzschicht) between a fluid and a solid body could be obtained by the hypothesis of an adhesion of the fluid to the walls, that is, by the hypothesis of a zero relative velocity between fluid and wall. If the viscosity is very small and the fluid path along the wall not too long, the fluid velocity ought to resume its normal value at a very short distance from the wall. In the thin transition layer however, the sharp changes of velocity, even with small coefficient of friction, produce marked results.

page 273

In the same paper, Prandtl's theory is applied to the prediction of flow separation:

In given cases, in certain points fully determined by external conditions, the fluid flow ought to separate from the wall. That is, there ought to be a layer of fluid which, having been set in rotation by the friction on the wall, insinuates itself into the free fluid, transforming completely the motion of the latter. . . .

Prandtl's boundary layer hypothesis allows the Navier–Stokes equations to be reduced to a simpler form; by 1908 Prandtl and one of his students, H. Blasius, had solved these simpler boundary layer equations for laminar flow over a flat plate, yielding the equations for boundary layer thickness and skin friction drag given by Eqs. (4.91) and (4.93). Finally, after centuries of effort, the first rational resistance laws describing fluid dynamic drag due to friction had been obtained.

Prandtl's work was a stroke of genius, and it revolutionized theoretical aerodynamics. However, possibly due to the language barrier, it only slowly diffused through the worldwide technical community. Serious work on boundary layer theory did not emerge in England and the United States until the 1920s. By that time, Prandtl and his students at Göttingen had applied it to various aerodynamic shapes and were including the effects of turbulence.

Prandtl has been called the *father of aerodynamics*, and rightly so. His contributions extend far beyond boundary layer theory; for example, he pioneered the development of wing lift and drag theory, as seen in Ch. 5).

Moreover, he was interested in more fields than just fluid dynamics—he made several important contributions to structural mechanics as well.

As a note on Prandtl's personal life, he had the singleness of purpose that seems to drive many giants of humanity. However, his almost complete-preoccupation with his work led to a somewhat naive outlook on life. Theodore von Karman, one of Prandtl's most illustrious students, relates that Prandtl would rather find fancy in the examination of children's toys than participate in social gatherings. When Prandtl was almost 40, he suddenly decided that it was time to get married, and he wrote to a friend for the hand of one of his two daughters—Prandtl did not care which one! During the 1930s and early 1940s, Prandtl had mixed emotions about the political problems of the day. He continued his research work at Göttingen under Hitler's Nazi regime but became continually confused about the course of events. Von Karman writes about Prandtl in his autobiography,

I saw Prandtl once again for the last time right after the Nazi page 274  
surrender. He was a sad figure. The roof of his house in Göttingen, he mourned, had been destroyed by an American bomb. He couldn't understand why this had been done to him! He was also deeply shaken by the collapse of Germany. He lived only a few years after that, and though he did engage in some research work in meteorology, he died, I believe, a broken man, still puzzled by the ways of mankind.

Prandtl died in Göttingen on August 15, 1953. Of any fluid dynamicist or aerodynamicist in history, Prandtl came closest to deserving a Nobel Prize. Why he never received one is an unanswered question. However, as long as there are flight vehicles, and as long as people study the discipline of fluid dynamics, the name of Ludwig Prandtl will be enshrined for posterity.

## 4.27 SUMMARY AND REVIEW

Sit back, get comfortable, and just think about the basic concepts in aerodynamics that have been introduced in this chapter. We will begin this section with a review of these intellectual concepts without burdening your mind with equations; that is, we offer a discussion of “aerodynamics without formula.” The equations are reviewed later in this section.

One of my professors once told me, as I was studying aerodynamics, that “aerodynamics is easy because it just uses three equations: continuity, momentum, and energy.” Over the years, I have come more and more to

appreciate this wisdom. All of aerodynamics is indeed based on three fundamental principles: (1) mass is conserved; (2) Newton's second law—namely, force equals mass times acceleration; and (3) energy is conserved. We began this chapter with these three physical principles, and couched them in mathematical language, namely the continuity, momentum, and energy equations, respectively. Virtually all the other equations derived and discussed throughout the rest of this chapter originated in one form or another from the continuity, momentum, and energy equations. This is why we took the time and space to derive from first principles almost all the equations presented and used in this chapter. If you go back and review these derivations, you can trace them in one aspect or another from the continuity, momentum, and energy equations.

What makes aerodynamics so interesting is that, although it is based on just three fundamental principles, the application of these principles to the virtually unlimited number of different types of flows can be challenging. These applications (at first impression) lead to the almost overwhelming number of different equations found in this chapter. But do not be overwhelmed. One reason for the road map in Fig. 4.1 is to help you navigate through the different concepts, and ultimately to better appreciate all the different equations. Moreover, never lose sight of the physics; each one of the equations is steeped in physics.

Another important aspect of this chapter, as well as all the other chapters in this book, is simply *definitions*. You are in the process of expanding your intellectual horizons and your technical vocabulary. Definitions are an essential part of learning a new subject. Also, for the most part, definitions are hard and fast. They may take the form of words, or an equation, or both, but they are what they are. They are your means of communicating with other scientists and engineers who speak your technical language, and who also know the definitions. Some of the more important definitions presented in this chapter are:

1. *Incompressible flow*: flow with constant density. page 275
2. *Compressible flow*: flow with variable density.
3. *Mass flow*: the mass crossing an area A in the flow per unit time.
4. *Adiabatic process*: a process in which no heat is added or taken away.

5. *Reversible process*: a process in which no frictional or other dissipative effects occur.
6. *Isentropic flow*: flow that is both adiabatic and reversible.
7. *Mach number*: velocity divided by the speed of sound.
8. *Subsonic flow*: flow where the Mach number is less than one.
9. *Sonic flow*: flow where the Mach number is equal to one.
10. *Supersonic flow*: flow where the Mach number is greater than one.
11. *Static pressure*: the pressure that we would feel at a given point in a flow if we were moving along with the flow through that point. It is due to the random motion of the molecules, not the directed motion.
12. *Total pressure*: The pressure at a given point in a flow that would exist if the flow were slowed down *isentropically* to zero velocity at that point. (The key word here is “*isentropically*.”)
13. *Dynamic pressure*:  $\frac{1}{2} \rho V^2$
14. *Equivalent airspeed*: the airspeed of an airplane flying at a given altitude that it would have to have at standard sea level to experience the same dynamic pressure.
15. *Reynolds number*:  $\rho V_x / \mu$
16. *Local skin friction coefficient*:  $\tau_w / q_\infty$
17. *Total skin friction coefficient*:  $D_f / q_\infty S$
18. *Adverse pressure gradient*: a region in a flow where the pressure increases with distance along the flow.
19. *Favorable pressure gradient*: a region in a flow where the pressure decreases with distance along the flow.

*Note:* There are many more definitions scattered throughout this chapter; the preceding list just reminds us of some of the ones more frequently encountered in our introduction to basic aerodynamics.

This chapter has discussed various types of flow, and we have defined and categorized different types of flow. Nature makes no real distinction among these flows, but we have to in order to intellectually study and calculate such flows. In many ways, incompressible flow is the simplest flow to

calculate because  $\rho$  is constant. Pressure and velocity are directly related through Bernoulli's equation. Most low-speed flows, where  $M < 0.3$ , can readily be assumed to be incompressible. In contrast, high-speed flow is accompanied by significant density and temperature changes, and must be treated as compressible. For a compressible flow,  $p$ ,  $\rho$ ,  $V$ , and  $T$  in the flow are intimately coupled, and the continuity, momentum, and energy equations, along with the equation of state, must be solved simultaneously for such flows. Fortunately, in many real compressible-flow applications, nature creates conditions that are very closely reversible and adiabatic. This allows us to assume that such flows are isentropic. The special relations between pressure, density, and temperature for an isentropic flow greatly simplify the analysis of a compressible flow. This helps us to calculate nozzle flows, rocket engine flows, and subsonic compressible flow over airplanes, and to make subsonic airspeed measurements using a Pitot tube. In contrast, many supersonic flows involve shock waves. Shock waves are *not* isentropic and require their own special analysis.

Finally, superimposed over these different types of flow is the [page 276](#) question: how important is the effect of friction? The first 80 percent of this chapter deals with flows where we assume that the effect of friction is negligible. These are defined as *inviscid* flows. However, friction is always important in that region of the flow near a surface, where friction acts to retard the flow. We model that region as a *boundary layer*, a thin region adjacent to a surface. Boundary layers require a totally different analysis, as discussed in the last part of this chapter. Flows with friction are defined as *viscous* flows. For example, we can have incompressible viscous flow or compressible viscous flow. The calculation of skin friction on a surface and aspects of separated flow with its associated pressure drag due to flow separation require us to deal with viscous flows.

Let us now summarize some of the more important equations that come from the concepts just reviewed. It will help to return to our road map in Fig. 4.1. Run your mind over all the items shown there. Make yourself feel comfortable with these items. Then proceed with this chapter summary, putting each equation and each concept in its proper perspective relative to our road map.

A few of the important concepts from this chapter are summarized as follows:

- The basic equations of aerodynamics, in the form derived here, are as follows:

$$\text{Continuity} \quad \rho_1 A_1 V_1 = \rho_2 A_2 V_2 \quad (4.2)$$

$$\text{Momentum} \quad dp = -\rho V dV \quad (4.8)$$

$$\text{Energy} \quad c_p T_1 + \frac{1}{2} V_1^2 = c_p T_2 + \frac{1}{2} V_2^2 \quad (4.42)$$

These equations hold for a compressible flow. For an incompressible flow, we have these:

$$\text{Continuity} \quad A_1 V_1 = A_2 V_2 \quad (4.3)$$

$$\text{Momentum} \quad P_1 + \rho \frac{V_1^2}{2} = p_2 + \rho \frac{V_2^2}{2} \quad (4.9a)$$

Equation (4.9a) is called Bernoulli's equation.

- The change in pressure, density, and temperature between two points in an isentropic process is given by

$$\frac{P_2}{P_1} = \left( \frac{\rho_2}{\rho_1} \right)^r = \left( \frac{T_2}{T_1} \right)^{r/(r-1)} \quad (4.47)$$

- The speed of sound is given by

$$a = \sqrt{\left( \frac{dp}{d\rho} \right)_{\text{isentropic}}} \quad (4.48)$$

For a perfect gas, this becomes

$$a = \sqrt{\gamma R T} \quad (4.54)$$

- The speed of a gas flow can be measured by a Pitot tube, [page 277](#) which senses the total pressure  $p_0$ . For incompressible flow,

$$V_1 = \sqrt{\frac{2(p_0 - p_1)}{\rho}} \quad (4.66)$$

For subsonic compressible flow,

$$V_1^2 = \frac{2a_1^2}{\gamma - 1} \left[ \left( \frac{p_0}{p_1} \right)^{(r-1)/r} - 1 \right] \quad (4.77a)$$

For supersonic flow, a shock wave exists in front of the Pitot tube, and Eq. (4.79) must be used in lieu of Eq. (4.77a) to find the Mach number of the flow.

- The area–velocity relation for isentropic flow is

$$\frac{dA}{A} = (M^2 - 1) \frac{dV}{V} \quad (4.83)$$

From this relation, we observe that (1) for a subsonic flow, the velocity increases in a convergent duct and decreases in a divergent duct; (2) for a supersonic flow, the velocity increases in a divergent duct and decreases in a convergent duct; and (3) the flow is sonic only at the minimum area.

6. The isentropic flow of a gas is governed by

$$\frac{T_0}{T_1} = 1 + \frac{\gamma - 1}{2} M_1^2 \quad (4.74)$$

$$\frac{p_0}{p_1} = \left( 1 + \frac{\gamma - 1}{2} M_1^2 \right)^{\gamma / (\gamma - 1)} \quad (4.73)$$

$$\frac{\rho_0}{\rho_1} = \left( 1 + \frac{\gamma - 1}{2} M_1^2 \right)^{1 / (\gamma - 1)} \quad (4.75)$$

Here  $T_0$ ,  $p_0$ , and  $\rho_0$  are the total temperature, pressure, and density, respectively. For an isentropic flow,  $p_0 = \text{constant}$  throughout the flow. Similarly,  $\rho_0 = \text{constant}$  and  $T_0 = \text{constant}$  throughout the flow.

7. Viscous effects create a boundary layer along a solid surface in a flow. In this boundary layer, the flow moves slowly and the velocity goes to zero right at the surface. The shear stress at the wall is given by

$$\tau_w = \mu \left( \frac{dV}{dy} \right)_{y=0} \quad (4.89)$$

The shear stress is larger for a turbulent boundary layer than for a laminar boundary layer.

8. For a laminar incompressible boundary layer, on a flat plate, [page 278](#)

$$\delta = \frac{5.2x}{\sqrt{Re_x}} \quad (4.91)$$

$$\text{and} \quad C_f = \frac{1.328}{\sqrt{Re_L}} \quad (4.98)$$

where  $\delta$  is the boundary layer thickness,  $C_f$  is the total skin friction drag coefficient, and  $Re$  is the Reynolds number:

$$Re_x = \frac{\rho_\infty V_\infty x}{\mu_\infty} \quad \text{local Reynolds number}$$

$$Re_L = \frac{\rho_\infty V_\infty L}{\mu_\infty} \quad \text{plate Reynolds number}$$

Here  $x$  is the running length along the plate, and  $L$  is the total length of the plate.

9. For a turbulent incompressible boundary layer on a flat plate,

$$\delta = \frac{0.37x}{\text{Re}_x^{0.2}} \quad (4.99)$$

$$C_f = \frac{0.074}{\text{Re}_x^{0.2}} \quad (4.101)$$

Any real flow along a surface starts out as laminar but then changes into a turbulent flow. The point at which this transition effectively occurs (in reality, transition occurs over a finite length) is designated  $x_{cr}$ . In turn, the critical Reynolds number for transition is defined as

$$\text{Re}_{x_{cr}} = \frac{\rho_\infty V_\infty x_{cr}}{\mu_\infty} \quad (4.104)$$


10. Whenever a boundary layer encounters an adverse pressure gradient (a region of increasing pressure in the flow direction), it can readily separate from the surface. On an airfoil or wing, such flow separation decreases the lift and increases the drag.

## Bibliography

- Airey, J. "Notes on the Pitot Tube." *Engineering News*, vol. 69, no. 16, April 17, 1913, pp. 782–783.
- Anderson, J. D., Jr. *A History of Aerodynamics and Its Impact on Flying Machines*. Cambridge University Press, New York, 1998.
- . *Fundamentals of Aerodynamics*, 5th ed. McGraw-Hill, New York, 2011.
- . "Ludwig Prandtl's Boundary Layer." *Physics Today*, vol. 58, no. 12, December 2005, pp. 42–48.
- Goin, K. L. "The History, Evolution, and Use of Wind Tunnels." *AIAA Student Journal*, February 1971, pp. 3–13.
- Guy, A. E. "Origin and Theory of the Pitot Tube." *Engineering News*, vol. 69, no. 23, June 5, 1913, pp. 1172–1175.
- Kuethe, A. M., and C. Y. Chow. *Foundations of Aerodynamics*, 3rd ed. Wiley, New York, 1976.
- Pope, A. *Aerodynamics of Supersonic Flight*. Pitman, New York, 1958.
- von Karman, T. *Aerodynamics*. McGraw-Hill, New York, 1963.

## Problems


- 4.1** Consider the incompressible flow of water through a divergent duct. The inlet velocity and area are 5 ft/s and 10 ft<sup>2</sup>, respectively. If the exit area is 4 times the inlet area, calculate the water flow velocity at the exit.
- 4.2** In Prob. 4.1, calculate the pressure difference between the exit and the inlet. The density of water is 62.4 lbm/ft<sup>3</sup>.
- 4.3** Consider an airplane flying with a velocity of 60 m/s at a standard altitude of 3 km. At a point on the wing, the airflow velocity is 70 m/s. Calculate the pressure at this point. Assume incompressible flow.
- 4.4** An instrument used to measure the airspeed on many early low-speed airplanes, principally during 1919 to 1930, was the Venturi tube. This simple device is a convergent–divergent duct. (The front section’s cross-sectional area  $A$  decreases in the flow direction, and the back section’s cross-sectional area increases in the flow direction. Somewhere between the inlet and exit of the duct, there is a minimum area called the *throat*.) See figure below. Let  $A_1$  and  $A_2$  denote the inlet and throat areas, respectively. Let  $p_1$  and  $p_2$  be the pressures at the inlet and throat, respectively. The Venturi tube is mounted at a specific location on the airplane (generally on the wing or near the front of the fuselage) where the inlet velocity  $V_1$  is essentially the same as the free-stream velocity—that is, the velocity of the airplane through the air. With a knowledge of the area ratio  $A_2/A_1$  (a fixed design feature) and a measurement of the pressure difference  $p_1 - p_2$ , we can determine the airplane’s velocity. For example, assume  $A_2/A_1 = \frac{1}{4}$  and  $p_1 - p_2 = 80 \text{ lb/ft}^2$ . If the airplane is flying at standard sea level, what is its velocity?

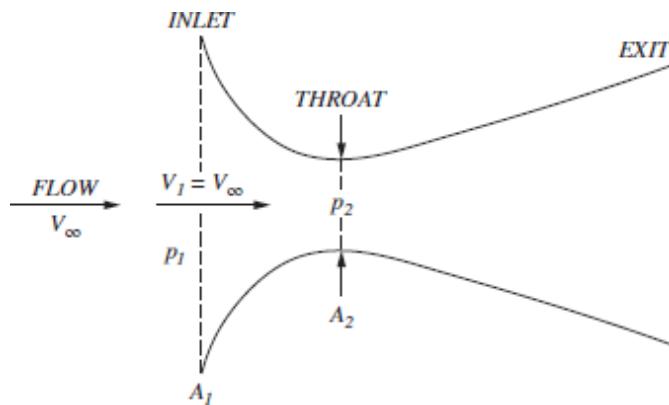

- 4.5** Consider the flow of air through a convergent–divergent duct, such as the Venturi tube described in Prob. 4.4. The inlet, throat, and exit areas are 3, 1.5, and  $2 \text{ m}^2$ , respectively. The inlet and exit pressures are  $1.02 \times 10^5$  and  $1.00 \times 10^5 \text{ N/m}^2$ , respectively. Calculate the flow velocity at the throat. Assume incompressible flow with standard sea-level density.
- 4.6** An airplane is flying at a velocity of 130 mi/h at a [page 280](#) standard altitude of 5000 ft. At a point on the wing, the pressure is 1750.0 lb/ft<sup>2</sup>. Calculate the velocity at that point, assuming incompressible flow.
- 4.7** Imagine that you have designed a low-speed airplane with a maximum velocity at sea level of 90 m/s. For your airspeed instrument, you plan to use a Venturi tube with a 1.3:1 area ratio. Inside the cockpit is an airspeed indicator—a dial that is connected to a pressure gauge sensing the Venturi tube pressure difference  $p_1 - p_2$  and properly calibrated in terms of velocity. What is the maximum pressure difference you would expect the gauge to experience?
- 4.8** A supersonic nozzle is also a convergent–divergent duct, which is fed by a large reservoir at the inlet to the nozzle. In the reservoir of the nozzle, the pressure and temperature are 10 atm and 300 K, respectively. At the nozzle exit, the pressure is 1 atm. Calculate the temperature and density of the flow at the exit. Assume that the flow is isentropic and (of course) compressible.
- 4.9** Derive an expression for the exit velocity of a supersonic nozzle in terms of the pressure ratio between the reservoir and exit  $p_0/p_e$  and the reservoir temperature  $T_0$ .
- 4.10** Consider an airplane flying at a standard altitude of 5 km with a velocity of 270 m/s. At a point on the wing of the airplane, the velocity is 330 m/s. Calculate the pressure at this point.
- 4.11** The mass flow of air through a supersonic nozzle is  $1.5 \text{ lb}_m/\text{s}$ . The exit velocity is 1500 ft/s, and the reservoir temperature and pressure are  $1000^\circ\text{R}$  and 7 atm, respectively. Calculate the area of the nozzle exit. For air,  $cp = 6000 \text{ ft} \cdot \text{lb}/(\text{slug})(^\circ\text{R})$ .

- 4.12** A supersonic transport is flying at a velocity of 1500 mi/h at a standard altitude of 50,000 ft. The temperature at a point in the flow over the wing is 793.32°R. Calculate the flow velocity at that point.
- 4.13** For the airplane in Prob. 4.12, the total cross-sectional area of the inlet to the jet engines is  $20 \text{ ft}^2$ . Assume that the flow properties of the air entering the inlet are those of the free stream ahead of the airplane. Fuel is injected inside the engine at a rate of 0.05 lb of fuel for every pound of air flowing through the engine (i.e., the fuel-air ratio by mass is 0.05). Calculate the mass flow (in slugs/per second) that comes out the exit of the engine.
- 4.14** Calculate the Mach number at the exit of the nozzle in Prob. 4.11.
- 4.15** A Boeing 747 is cruising at a velocity of 250 m/s at a standard altitude of 13 km. What is its Mach number?
- 4.16** A high-speed missile is traveling at Mach 3 at standard sea level. What is its velocity in miles per hour?
- 4.17** Calculate the flight Mach number for the supersonic transport in Prob. 4.12.
- 4.18** Consider a low-speed subsonic wind tunnel with a nozzle contraction ratio of 1:20. One side of a mercury manometer is connected to the settling chamber and the other side to the test section. The pressure and temperature in the test section are 1 atm and 300 K, respectively. What is the height difference between the two columns of mercury when the test section velocity is 80 m/s?
- 4.19** We wish to operate a low-speed subsonic wind tunnel so page 281 that the flow in the test section has a velocity of 200 mi/h. Consider two different types of wind tunnels (see figure below): (a) a nozzle and a constant-area test section, where the flow at the exit of the test section simply dumps out to the surrounding atmosphere (that is, there is no diffuser); and (b) a conventional arrangement of nozzle, test section, and diffuser, where the flow at the exit of the diffuser dumps out to the surrounding atmosphere. For both wind tunnels (a) and (b), calculate the pressure differences across the entire wind tunnel required to operate them so as to have the given flow conditions in the test section. For tunnel (a), the cross-sectional area of the entrance is

20 ft<sup>2</sup>, and the cross-sectional area of the test section is 4 ft<sup>2</sup>. For tunnel (b), a diffuser is added to (a) with a diffuser exit area of 18 ft<sup>2</sup>. After completing your calculations, examine and compare your answers for tunnels (a) and (b). Which requires the smaller overall pressure difference? What does this say about the value of a diffuser in a subsonic wind tunnel?

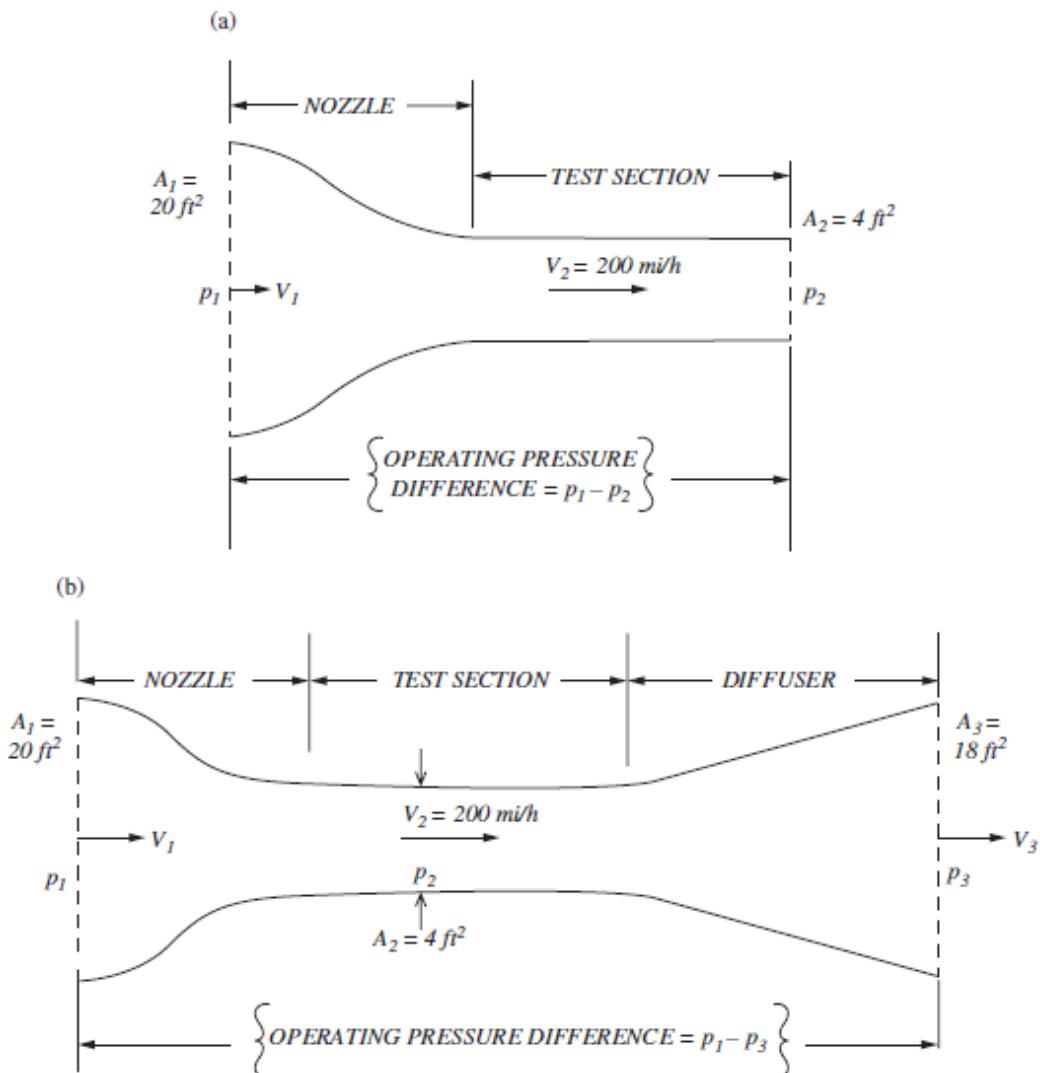

- 4.20** A Pitot tube is mounted in the test section of a low-speed subsonic wind tunnel. The flow in the test section has a velocity, static pressure, and temperature of 150 mi/h, 1 atm, and 70°F, respectively. Calculate the pressure measured by the Pitot tube.

- 4.21** The altimeter on a low-speed Piper Aztec reads 8000 ft. [page 282](#)  
A Pitot tube mounted on the wing tip measures a pressure of 1650

$\text{lb}/\text{ft}^2$ . If the outside air temperature is  $500^\circ\text{R}$ , what is the true velocity of the airplane? What is the equivalent airspeed?

- 4.22** The altimeter on a low-speed airplane reads 2 km. The airspeed indicator reads 50 m/s. If the outside air temperature is 280 K, what is the true velocity of the airplane?
- 4.23** A Pitot tube is mounted in the test section of a high-speed subsonic wind tunnel. The pressure and temperature of the airflow are 1 atm and 270 K, respectively. If the flow velocity is 250 m/s, what is the pressure measured by the Pitot tube?
- 4.24** A high-speed subsonic Boeing 777 airliner is flying at a pressure altitude of 12 km. A Pitot tube on the vertical tail measures a pressure of  $2.96 \times 10^4 \text{ N/m}^2$ . At what Mach number is the airplane flying?
- 4.25** A high-speed subsonic airplane is flying at Mach 0.65. A Pitot tube on the wing tip measures a pressure of  $2339 \text{ lb}/\text{ft}^2$ . What is the altitude reading on the altimeter?
- 4.26** A high-performance F-16 fighter is flying at Mach 0.96 at sea level. What is the air temperature at the stagnation point at the leading edge of the wing?
- 4.27** An airplane is flying at a pressure altitude of 10 km with a velocity of 596 m/s. The outside air temperature is 220 K. What is the pressure measured by a Pitot tube mounted on the nose of the airplane?
- 4.28** The dynamic pressure is defined as  $q = 0.5\rho V^2$ . For high-speed flows, where Mach number is used frequently, it is convenient to express  $q$  in terms of pressure  $p$  and Mach number  $M$  rather than  $\rho$  and  $V$ . Derive an equation for  $q = q(p, M)$ .
- 4.29** After completing its mission in orbit around the earth, the Space Shuttle enters the earth's atmosphere at a very high Mach number and, under the influence of aerodynamic drag, slows as it penetrates more deeply into the atmosphere. (These matters are discussed in Ch. 8.) During its atmospheric entry, assume that the shuttle is flying at Mach number  $M$  corresponding to the altitudes  $h$ :

$h, \text{ km}$	60	50	40	30	20
$M$	17	9.5	5.5	3	1

Calculate the corresponding values of the free-stream dynamic pressure at each one of these flight path points. *Suggestion:* Use the result from Prob. 4.28. Examine and comment on the variation of  $q_\infty$  as the shuttle enters the atmosphere.

- 4.30** Consider a Mach 2 airstream at standard sea-level conditions. Calculate the total pressure of this flow. Compare this result with (a) the stagnation pressure that would exist at the nose of a blunt body in the flow and (b) the erroneous result given by Bernoulli's equation, which of course does not apply here.
- 4.31** Consider the flow of air through a supersonic nozzle. The reservoir pressure and temperature are 5 atm and 500 K, respectively. If the Mach number at the nozzle exit is 3, calculate the exit pressure, temperature, and density.
- 4.32** Consider a supersonic nozzle across which the pressure ratio is  $p_e/p_0 = 0.2$ . Calculate the ratio of exit area to throat area.
- 4.33** Consider the expansion of air through a convergent-divergent supersonic nozzle. The Mach number varies from essentially zero in the reservoir to Mach 2.0 at the exit. Plot on graph paper the variation of the ratio of dynamic pressure to total pressure as a function of Mach number; that is, plot  $q/p_0$  versus  $M$  from  $M = 0$  to  $M = 2.0$ .
- 4.34** The wing of the Fairchild Republic A-10A twin-jet [page 283](#) close-support airplane is approximately rectangular with a wingspan (the length perpendicular to the flow direction) of 17.5 m and a chord (the length parallel to the flow direction) of 3 m. The airplane is flying at standard sea level with a velocity of 200 m/s. If the flow is considered to be completely laminar, calculate the boundary layer thickness at the trailing edge and the total skin friction drag. Assume that the wing is approximated by a flat plate. Assume incompressible flow.
- 4.35** Using the scenario and values from Prob. 4.34, assume that the flow is completely turbulent. Calculate the boundary layer thickness at

the trailing edge and the total skin friction drag. Compare these turbulent results with the laminar results from Prob. 4.34.

- 4.36** If the critical Reynolds number for transition is  $10^6$ , calculate the skin friction drag for the wing in Prob. 4.34.
- 4.37** Reflect back to the fundamental equations of fluid motion discussed in the early sections of this chapter. Sometimes these equations were expressed in terms of differential equations; for the most part, though, we obtained algebraic relations by integrating the differential equations. However, it is useful to think of the differential forms as relations that govern the change in flow field variables in an infinitesimally small region around a point in the flow. (a) Consider a point in an inviscid flow, where the local density is  $1.1 \text{ kg/m}^3$ . As a fluid element sweeps through this point, it is experiencing a spatial change in velocity of 2 percent per millimeter. Calculate the corresponding spatial change in pressure per millimeter at this point if the velocity at the point is 100 m/s. (b) Repeat the calculation for the case in which the velocity at the point is 1000 m/s. What can you conclude by comparing your results for the low-speed flow in part (a) with the results for the high-speed flow in part (b)?
- 4.38** The type of calculation in Prob. 4.3 is a classic one for low-speed, incompressible flow; that is, given the free-stream pressure and velocity and the velocity at some other point in the flow, calculate the pressure at that point. In a high-speed compressible flow, Mach number is more fundamental than velocity. Consider an airplane flying at Mach 0.7 at a standard altitude of 3 km. At a point on the wing, the airflow Mach number is 1.1. Calculate the pressure at this point. Assume an isentropic flow.
- 4.39** Consider an airplane flying at a standard altitude of 25,000 ft at a velocity of 800 ft/s. To experience the same dynamic pressure at sea level, how fast must the airplane be flying?
- 4.40** In Sec. 4.9 we defined hypersonic flow as that flow where the Mach number is 5 or greater. Wind tunnels with a test-section Mach number of 5 or greater are called hypersonic wind tunnels. From Eq. (4.88), the exit-to-throat area ratio for supersonic exit Mach numbers increases as the exit Mach number increases. For hypersonic Mach

numbers, the exit-to-throat ratio becomes extremely large, so hypersonic wind tunnels are designed with long, high-expansion-ratio nozzles. In this and the following problems, we examine some special characteristics of hypersonic wind tunnels. Assume that wish to design a Mach 10 hypersonic wind tunnel using air as the test medium. We want the static pressure and temperature in the test stream to be that for a standard altitude of 55 km. Calculate (a) the exit-to-throat area ratio, (b) the required reservoir pressure (in atm), and (c) the required reservoir temperature. Examine these results. What do they tell you about the special (and sometimes severe) operating requirements for a hypersonic wind tunnel?

- 4.41** Calculate the exit velocity of the hypersonic tunnel in [page 284](#) Prob. 4.40.
- 4.42** Let us double the exit Mach number of the tunnel in Prob. 4.40 simply by adding a longer nozzle section with the requisite expansion ratio. Keep the reservoir properties the same as those in Prob. 4.40. Then we have a Mach 20 wind tunnel, with test-section pressure and temperature considerably lower than in Prob. 4.40; that is, the test-section flow no longer corresponds to conditions at a standard altitude of 55 km. Be that as it may, we have at least doubled the Mach number of the tunnel. Calculate (a) the exit-to-throat area ratio of the Mach 20 nozzle and (b) the exit velocity. Compare these values with those for the Mach 10 tunnel in Probs. 4.40 and 4.41. What can you say about the differences? In particular, note the exit velocities for the Mach 10 and Mach 20 tunnels. You will see that they are not much different. What is causing the big increase in exit Mach number?
- 4.43** The results of Example 4.4 showed that the aerodynamic force on a body is proportional to the square of the free-stream velocity. This is strictly true, however, only when the aerodynamic force is due to the pressure exerted on the surface and when the flow is incompressible. When the aerodynamic force is also due to the distribution of frictional shear stress over the surface and/or the flow is compressible, the “velocity squared” law does not strictly hold. The purpose of this problem is to examine how the friction drag on a body varies with free-stream velocity for an incompressible flow.

Consider a square flat plate at zero incidence angle to a low-speed incompressible flow. The length of each side is 4 m. Assume that the transition Reynolds number is  $5 \times 10^5$  and that the free-stream properties are those at standard sea level. Calculate the friction drag on the flat plate when the free-stream velocity is (a) 20 m/s and when it is (b) 40 m/s. (c) Assuming that the friction drag,  $D_f$ , varies with velocity as  $V_{\infty}^n$ , calculate the value of the exponent  $n$  based on the answers from (a) and (b). How close does  $n$  come to 2? That is, how close is the friction drag to obeying the velocity squared law?

- 4.44** Consider the incompressible viscous flow over a flat plate. Following the theme set in Prob. 4.43, show *analytically* that (a) for fully turbulent flow, skin friction drag varies as  $V_{\infty}^{1.8}$  and (b) for fully laminar flow, skin friction drag varies as  $V_{\infty}^{1.5}$ .
- 4.45** Consider compressible viscous flow over the same flat plate as in Prob. 4.43. Assume a completely turbulent boundary layer on the plate. The free-stream properties are those at standard sea level. Calculate the friction drag on the flat plate when (a)  $M_{\infty} = 1$  and (b)  $M_{\infty} = 3$ . (c) Assuming that the friction drag,  $D_f$ , varies with velocity as  $V_{\infty}^n$ , calculate the value of the exponent  $n$  based on the answers from (a) and (b). *Note:* This problem examines the combined effect of compressibility and friction on the “velocity squared” law, in the same spirit of Probs. 4.43 and 4.44, which isolated the effect of friction in an incompressible flow.
- 4.46** Consider a long pipe filled with air at standard sea-level conditions. Let  $x$  be the longitudinal coordinate measured along the pipe. The air is stationary inside the pipe, that is, the flow velocity is zero everywhere inside the pipe. A small firecracker is mounted inside the tube at an axial location  $x = 0$ . When the firecracker is detonated, two weak pressure disturbances (pressure waves) are created at  $x = 0$  that propagate along the pipe, one to the right and the other to the left. Assume that these weak pressure distributions travel at the local speed of sound. Using SI units, calculate: (a) the speed of the waves relative to the pipe and (b) the  $x$ -location of each wave 0.2 seconds after detonation of the firecrackers.
- 4.47** Repeat Prob. 4.46 for the case in which the air inside the pipe is flowing from left to right in the direction of the positive  $x$ -axis

with a flow velocity of: (a) 30 m/s and (b) 400 m/s.

- 4.48** Consider an element of air in the standard atmosphere at a standard altitude of 1000 m. Assume that you somehow raise this element of air *isentropically* to a standard altitude of 2000 m, where the element now takes on the standard pressure at 2000 m. Calculate the density of this isentropically raised element of air and compare it with the density of its neighboring elements of air that all have a density equal to the standard density at 2000 m. What does this say about the stability of the atmosphere in this case?

*NOTE:* The properties of the standard atmosphere are based on statics, that is, an element of fluid that is stationary, where the pressure change is dictated by the hydrostatic equation, Eq. (3.2). An isentropic process is not relevant to the establishment of the standard atmosphere. Indeed, a purpose of this question is to demonstrate that the changes in atmospheric properties with altitude are quite different from the changes corresponding to an isentropic process.

- 4.49** Consider a low-speed wind tunnel (see Fig. 4.15) that is a constant width of 2 m throughout its length (i.e., each cross section of the tunnel is a rectangle of width 2 m). The entrance and exit heights of the nozzle are 4 and 0.5 m, respectively. The airflow velocity in the test section is 120 mph. Calculate the airflow velocity in m/sec at the entrance to the nozzle.

- 4.50** The air pressure in the reservoir of the tunnel considered in Prob. 4.49 is 1 atm. Calculate the pressure in the test section in N/m<sup>2</sup>. Assume that the air in the tunnel is at standard sea-level density.

- 4.51** The wind tunnel in Probs. 4.49 and 4.50 has a diffuser that is slightly rounded at the inlet (a sharp corner at the inlet in a subsonic flow will cause undesirable flow separation), and then diverges with straight upper and lower walls, each at 15° relative to the horizontal. Calculate the rate of change of area with respect to distance along the diffuser length (ignore the slightly rounded entrance). *Note:* This is simply a problem in geometry, not aerodynamics.

- 4.52** Consider the flow through the wind tunnel in Prob. 4.49. The entrance and exit heights of the diffuser are 0.5 and 3.5 m,

respectively. What are the flow velocities at the entrance and exit of the diffuser?

- 4.53** Consider the wind tunnel and flow conditions described in Probs. 4.49–4.52. Calculate the rate of change of velocity with respect to distance at (a) the diffuser inlet and (b) the diffuser exit.
- 4.54** Continuing with the wind tunnel described in Probs. 4.49–4.53, calculate the rate of change of pressure with respect to distance at (a) the diffuser inlet and (b) the diffuser exit.
- 4.55** Calculate the length of the diffuser of the wind tunnel described in Probs. 4.49–4.54.
- 4.56** The diffuser of a wind tunnel or at the inlet of an air-breathing jet engine is designed to slow the flow. Consequently, from Euler's equation, Eq. (4.8) in the text, the pressure always increases with distance along the diffuser. Hence, in terms of the discussion in Sec. 4.20, the flow in the diffuser is experiencing an *adverse* pressure gradient, which encourages the boundary layer to separate from the wall of the diffuser, thus resulting in a loss of total pressure and reducing the aerodynamic efficiency of the diffuser. For the wind tunnel and flow conditions described in Probs. 4.49–4.55, a criterion that predicts approximately the location along the wall of the diffuser where a laminar boundary will separate is given by  $x_s = 183(dp/dx)^{-1}_{ave}$  where  $x_s$  is the separation location in m and  $(dp/dx)_{ave}$  is the average of the pressure gradients in N/m<sup>3</sup> at the entrance and exit of the diffuser assuming no flow separation. Assuming a laminar boundary layer along the diffuser wall, calculate the location of flow separation in the diffuser.
- 4.57** For the conditions of Prob. 4.56, but assuming a turbulent boundary layer, an approximate criterion for the separation point is  $x_s = 506(dp/dx)^{-1}_{ave}$ , where  $x_s$  is in m. Calculate the location of flow separation for a turbulent boundary layer along the diffuser wall.
- 4.58** The maximum velocity of the Douglas DC-3 (see Figs. 1.33 and 6.80) is 229 mph at an altitude of 7500 ft. Calculate the Mach number of the airplane and the pressure sensed by a Pitot tube on the airplane.

- 4.59** The cruising velocity of the Boeing 727 (see Fig. 5.70) is 610 mph at an altitude of 25,000 ft. Calculate the Mach number of the airplane and the pressure sensed by a Pitot tube on the airplane.
- 4.60** The maximum velocity of the Lockheed F-104 (see Figs. 1.34 and 5.40) is 1328 mph at an altitude of 35,000 ft. Calculate the Mach number of the airplane and the pressure sensed by a Pitot tube on the airplane.
- 4.61** On October 3, 1967, test pilot William “Pete” Knight flew the X-15 hypersonic research vehicle to a world’s speed record for an airplane; he achieved Mach 6.7 at an altitude of 102,100 ft.
- (a) What was the maximum velocity in ft/s?
- (b) What was the flow temperature at the nose of the vehicle?
- 4.62** The F-80 subsonic jet fighter is shown in Fig. 4.24. The air inlets on both sides of the fuselage are designed to slow the airflow through the inlets to a lower Mach number before feeding into the engine inside the fuselage. Consider a case where the flow entering the inlet is at Mach 0.6 where the inlet cross-sectional area is  $3 \text{ ft}^2$ . At a given location inside the inlet, the cross-sectional area is  $4 \text{ ft}^2$ . Calculate the flow Mach number at this location. *Hint:* Use Eq. (4.88).
- 4.63** The Lockheed F-80, designed by the famous airplane designer Kelly Johnson at the Lockheed Skunk Works, was one of the first jet airplanes to use a boundary layer bleed device. This was a duct with a rectangular entrance mounted on the side of the fuselage at the entrance of each side inlet. The boundary layer bleed duct was designed to entrain the low energy boundary layer on the fuselage before it could enter the inlet. This way, the flow entering the inlet and passing into the jet engine was of a higher aerodynamic quality with a minimal loss of total pressure. Consider the F-80 flying at Mach 0.6 at 20,000 ft. The boundary layer bleed duct is located 2.89 m downstream of the nose of the F-80. The surface of the fuselage is the bottom surface of the rectangular bleed duct. In order to ingest the boundary layer that grows along the fuselage surface, calculate the necessary height of the rectangular entrance of the boundary layer bleed device. Assume the fuselage boundary layer is turbulent, incompressible, and its growth is the same as that on a flat plate.

**4.64** Consider the incompressible laminar flow over a flat plate of [page 287](#) length 3 m at standard sea level conditions. The flow velocity is 100 m/s. For the laminar boundary layer, calculate:

- (a) The boundary layer thickness at the downstream edge of the plate.
- (b) The total skin friction drag coefficient.
- (c) The drag per unit span.

**4.65** Consider the same flat plate boundary layer as described in Prob. 4.64. Along each streamline within the boundary layer, there is a loss of total pressure due to frictional dissipation. Assume that the velocity profile across the boundary layer is given by

$$y/\delta = (V/V_e)^2$$

where  $V_e$  is the velocity at the edge of the boundary layer, equal to the free-stream velocity. (*Note:* The velocity profile given here is only a crude approximation in order to have an analytic expression to use in this problem. Do not use it for any other application.) Using some of the results from Prob. 4.64, calculate the loss of total pressure (per unit span) integrated across the boundary layer at the downstream edge of the plate. Compare your result with the total skin friction drag per unit span exerted on the plate as obtained in Prob. 4.64.

## Airfoils, Wings, and Other Aerodynamic Shapes

There can be no doubt that the inclined plane is the true principle of aerial navigation by mechanical means.

Sir George Cayley, 1843

### 5.1 INTRODUCTION

It is remarkable that the modern airplane as we know it today, with its fixed wing and vertical and horizontal tail surfaces, was first conceived by George Cayley in 1799, more than 200 years ago. He inscribed his first concept on a silver disk (presumably for permanence), shown in Fig. 1.5. It is also remarkable that Cayley recognized that a curved surface (as shown on the silver disk) creates more lift than a flat surface. Cayley's fixed-wing concept was a true revolution in the development of heavier-than-air flight machines. Prior to his time, aviation enthusiasts had been doing their best to imitate mechanically the natural flight of birds, which led to a series of human-powered flapping-wing designs (ornithopters), which never had any real possibility of working. In fact, even Leonardo da Vinci devoted a considerable effort to the design of many types of ornithopters in the late 15th century, of course to no avail. In such ornithopter designs, the flapping of the wings was supposed to provide simultaneously both lift (to sustain the machine in the air) and propulsion (to push it along in flight). Cayley is responsible for directing people's minds away from imitating bird flight and for separating the two principles of lift and propulsion. He proposed and demonstrated that lift can be obtained from a fixed, straight wing inclined to the airstream, while propulsion can be provided by some independent mechanism such as paddles or airscrews. For this concept and for his many other thoughts and inventions in aeronautics, Sir George Cayley is called the parent of modern aviation. A more detailed discussion of Cayley's contributions appears in Ch. 1). However, we emphasize that much of the technology discussed in the present chapter had its origins at the beginning of the 19th century—technology that came to fruition on December 17, 1903, near Kitty Hawk, North Carolina.

## PREVIEW BOX

This chapter deals with lift and drag on aerodynamic bodies, principally airfoil shapes and wings. These are real aerospace engineering applications—applications that extend the basic material from Chs. 1 to 4 well into the practical engineering world. In this chapter, you will learn

1. How to calculate lift and drag on airfoil shapes.
2. How to calculate lift and drag on a whole wing of an airplane.
3. Why lift and drag for a wing are different values from that for the airfoil shape that makes up the wing.
4. What happens to lift and drag when an airfoil or a wing flies near or beyond the speed of sound.
5. Why some airplanes have swept wings and others have straight wings.
6. Why some airplanes have thin airfoils and others have thick airfoils.
7. Why optimum wing shapes for supersonic flight are different than that for subsonic flight.


This is all good stuff—some of the bread and butter of aerospace engineering. You will learn all this, and more, in this chapter. For example, at the Smithsonian’s National Air and Space Museum, this author is frequently asked by visitors how a wing produces lift—a natural and perfectly innocent question. Unfortunately, there is no satisfactory one-liner for an answer. Even a single paragraph does not suffice. After a hundred years since the *Wright Flyer*, different people take different points of view about what is the most *fundamental* mechanism that produces lift, some pressing their views with almost religious fervor. A whole section of this chapter (Sec. 5.19) addresses how lift is produced, what this author considers to be the most fundamental explanation, and how it relates to alternate explanations.

With this chapter, you will begin to concentrate on airplanes, winged space vehicles such as the Space Shuttle, and any vehicle that flies through the atmosphere. This chapter greatly accelerates our introduction to flight. Hang on, and enjoy the ride.

The following sections develop some of the terminology and basic aerodynamic fundamentals of airfoils and wings. These concepts form the heart of airplane flight, and they represent a major excursion into aeronautical engineering. The road map for this chapter is shown in Fig. 5.1. There are basically three main topics in Ch. 5), each having to do with the aerodynamic characteristics of a class

of geometric shapes: airfoils, wings, and general body shapes. These three topics are shown in the three boxes at the top of our road map. We first examine the aerodynamic characteristics of airfoils and then run down the various aspects noted in the left column in Fig. 5.1. This is a long list, but we will find that many thoughts on this list carry over to wings and bodies as well. We then move to the central column for a discussion of finite wings, and we will see how the aerodynamics of a wing differs from that of an airfoil. Both airfoils and wings can be classified as slender bodies. In contrast, the third column in Fig. 5.1 deals with a few examples of *blunt bodies*: cylinders and spheres. We define and examine the distinctions between slender and blunt aerodynamic shapes. Finally, we discuss how aerodynamic lift is produced. Although we have alluded to this in previous chapters, it is appropriate at the end of the chapter dealing with the aerodynamics of various shapes to have a *definitive* discussion on how nature generates lift. Various physical explanations have been used in the past to explain how lift is generated, and there have been many spirited discussions in the literature about which is proper or more fundamental. We attempt to put all these views in perspective at the end of this chapter, as represented by the box at the bottom of Fig. 5.1. As you progress through this chapter, make certain to check our road map frequently so you can see how the details of our discussions fit into the grand scheme laid out in Fig. 5.1.

page 290

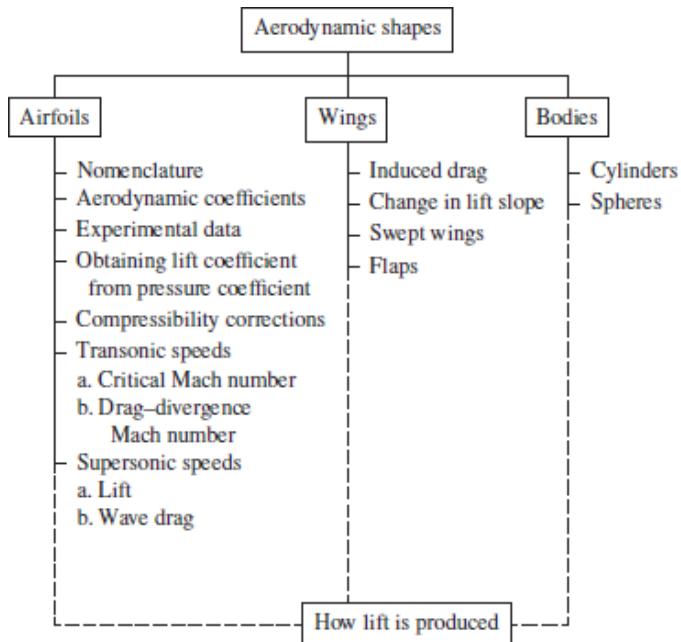


**Figure 5.1** Road map for Ch. 5).


## 5.2 AIRFOIL NOMENCLATURE

Consider the wing of an airplane, as sketched in Fig. 5.2. The cross-sectional shape obtained by the intersection of the wing with the perpendicular plane shown in Fig. 5.2 is called an *airfoil*. Such an airfoil is sketched in Fig. 5.3, which illustrates some basic terminology. The major design feature of an airfoil is the *mean camber line*, which is the locus of points halfway between the upper and lower surfaces, as measured perpendicular to the mean camber line itself. The most forward and rearward points of the mean camber line are the *leading* and *trailing edges*, respectively. The straight line connecting the leading and trailing edges is the *chord line* of the airfoil, and the precise distance from the leading to the trailing edge measured along the chord line is simply designated the *chord* of the airfoil, given by the symbol  $c$ . The *camber* is the maximum distance between the mean camber line and the chord line, measured perpendicular to the chord line. The camber, the shape of the mean camber line, and to a lesser extent the thickness distribution of the airfoil essentially control the lift and moment characteristics of the airfoil.

page 291

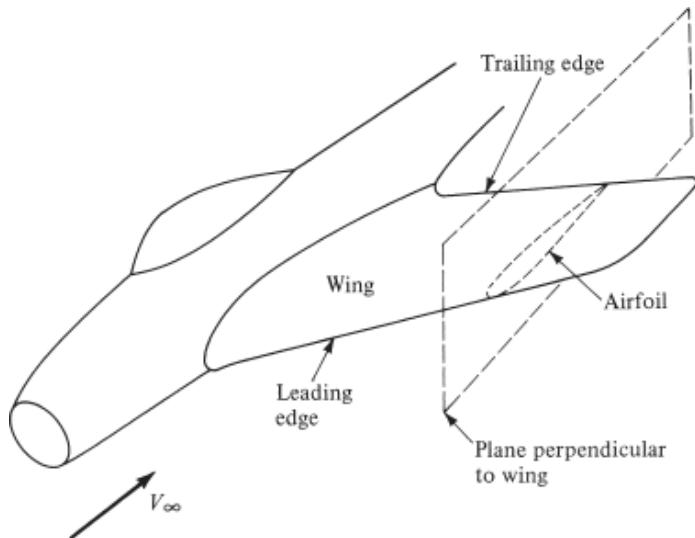


**Figure 5.2** Sketch of a wing and airfoil.

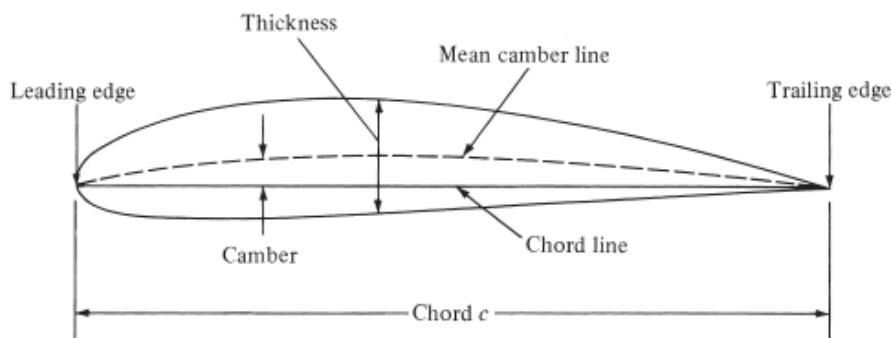

**Figure 5.3** Airfoil nomenclature. The shape shown here is an NACA 4415 airfoil.


More definitions are illustrated in Fig. 5.4a, which shows an airfoil inclined to a stream of air. The free-stream velocity  $V_\infty$  is the velocity of the air far upstream of the airfoil. The *direction* of  $V_\infty$  is defined as the *relative wind*. The angle between the relative wind and the chord line is the *angle of attack*  $\alpha$  of the airfoil. As described in Chs. 2 and 4, an aerodynamic force is created by the pressure and shear stress distributions over the wing surface. This resultant force is shown by the vector  $R$  in Fig. 5.4a. In turn, the aerodynamic force  $R$  can be resolved into two forces, parallel and perpendicular to the relative wind. The *drag*  $D$  is always defined as the component of the aerodynamic force *parallel to the relative wind*. The *lift*  $L$  is always defined as the component of the aerodynamic force *perpendicular to the relative wind*.

page 292

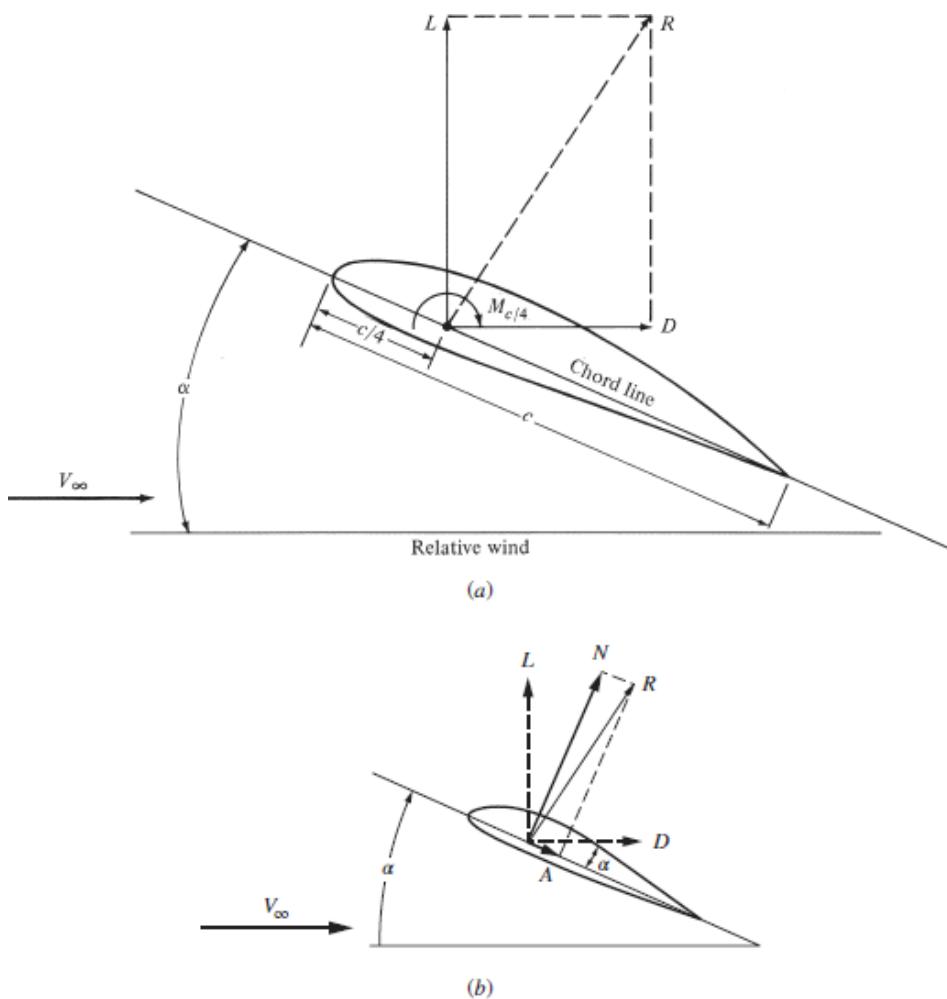

**Figure 5.4** Sketch showing the definitions of (a) lift, drag, moments, angle of attack, and relative wind; (b) normal and axial force.

In addition to lift and drag, the surface pressure and shear stress distributions create a *moment*  $M$  that tends to *rotate* the wing. To see more clearly how this moment is created, consider the surface pressure distribution over an airfoil, as sketched in Fig. 5.5 (we will ignore the shear stress for this discussion). Consider just the pressure on the top surface of the airfoil. This pressure gives rise to a net force  $F_1$  in the general downward direction. Moreover,  $F_1$  acts through a given point on the chord line, point 1, which can be found by integrating the pressure times distance over the surface (analogous to finding the centroid or center of pressure from integral calculus). Now consider just the pressure on the bottom surface of the airfoil. This pressure gives rise to a net force  $F_2$  in the general upward direction, acting through point 2. The total aerodynamic force on the airfoil is the *summation* of  $F_1$  and  $F_2$ , and lift is obtained when  $F_2 > F_1$ . However, note from Fig. 5.5 that  $F_1$  and  $F_2$  will create a moment that will tend to rotate the airfoil. The value of this aerodynamically induced moment depends on the point about which we choose to take moments. For example, if we take moments about the leading edge, the aerodynamic moment is designated  $M_{LE}$ . It is more common in the case of subsonic airfoils to take moments about a point on the chord at a distance  $c/4$  from the leading edge, the *quarter-chord point*, as illustrated in Fig. 5.4a. This moment about the quarter chord is designated  $Mc_{1/4}$ . In general,  $M_{LE} \neq Mc_{1/4}$ . Intuition will tell you that lift, drag, and moments on a wing will change as the angle of attack  $\alpha$  changes. In fact, the variations of these aerodynamic quantities with  $\alpha$  represent some of the most important information an airplane designer needs to know. We will address this matter in the following sections. However, we point out that although  $M_{LE}$  and  $Mc_{1/4}$  are both functions of  $\alpha$ , there exists a certain point on the airfoil about which moments essentially *do not* vary with  $\alpha$ . This point is defined as the *aerodynamic center*, and the moment about the aerodynamic center is designated  $M_{ac}$ . By definition, independent of the angle of attack. The location of the aerodynamic center for real aerodynamic shapes can be found from experiment. For low-speed subsonic airfoils, the aerodynamic center is generally very close to the quarter-chord point.

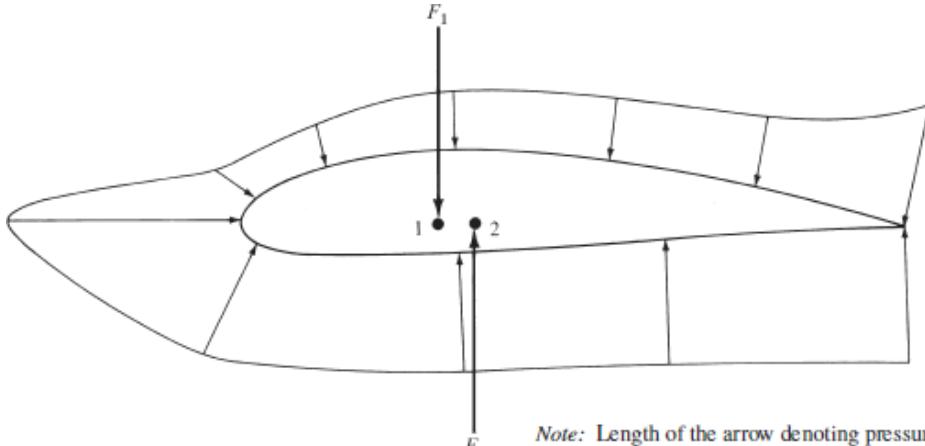

**Figure 5.5** The physical origin of moments on an airfoil.

$$M_{ac} = \text{const}$$

Returning to Fig. 5.4a, we recall that the resultant aerodynamic force  $R$  [page 294](#) can be resolved into components perpendicular and parallel to the relative wind—the lift and drag, respectively. An alternative to this system is to resolve  $R$  into components perpendicular and parallel to the *chord line*, as shown in Fig. 5.4b. These components are called the *normal force* and *axial force* and are denoted by  $N$  and  $A$ , respectively, in Fig. 5.4b, shown by the heavy solid arrows. Also shown in Fig. 5.4b are the lift and drag,  $L$  and  $D$ , respectively, represented by the heavy dashed arrows. Lift and drag are easily expressed in terms of  $N$  and  $A$  from the geometry shown in Fig. 5.4b:

$$L = N \cos \alpha - A \sin \alpha \quad (5.1)$$

$$D = N \sin \alpha + A \cos \alpha \quad (5.2)$$

For airfoils and wings, the use of  $N$  and  $A$  to describe the aerodynamic force dates back as early as the work of Otto Lilienthal in 1889, as published in his book *Bird Flight as the Basis of Aviation* (see Sec. 1.5). Indeed, the famous “Lilienthal tables,” which were used by the Wright brothers to design their early gliders (see Sec. 1.8), were tables dealing with normal and axial forces. The Wrights preferred to think in terms of lift and drag, and they converted Lilienthal’s results by using Eqs. (5.1) and (5.2). Today the use of  $N$  and  $A$  to describe the aerodynamic force on airfoils and wings is generally passé;  $L$  and  $D$  are almost always the system used by choice. However,  $N$  and  $A$  are still frequently used to denote the aerodynamic force on bodies of revolution, such as missiles and projectiles. Thus, it is useful to be familiar with both systems of expressing the aerodynamic force on a body.

### 5.3 LIFT, DRAG, AND MOMENT COEFFICIENTS

Again appealing to intuition, we note that it makes sense that for an airplane in flight, the actual magnitudes of  $L$ ,  $D$ , and  $M$  depend not only on  $\alpha$ , but also on velocity and altitude. In fact, we can expect that the variations of  $L$ ,  $D$ , and  $M$  depend at least on

1. Free-stream velocity  $V_\infty$ .
2. Free-stream density  $\rho_\infty$  (that is, altitude).
3. Size of the aerodynamic surface. For airplanes, we will use the *wing area*  $S$  to indicate size.
4. Angle of attack  $\alpha$ .
5. Shape of the airfoil.
6. Viscosity coefficient  $\mu_\infty$  (because the aerodynamic forces are generated in part from skin friction distributions).
7. Compressibility of the airflow. In Ch. 4) we demonstrated that [page 295](#) compressibility effects are governed by the value of the free-stream Mach number  $M_\infty = V_\infty/a_\infty$ . Because  $V_\infty$  is already listed, we can designate  $a_\infty$  as our index for compressibility.

Hence, we can write that for a given shape of airfoil at a given angle of attack,

$$L = f(V_\infty, \rho_\infty, S, \mu_\infty, a_\infty) \quad (5.3)$$

and  $D$  and  $M$  are similar functions.

In principle, for a given airfoil at a given angle of attack, we could find the variation of  $L$  by performing myriad wind tunnel experiments wherein  $V_\infty$ ,  $\rho_\infty$ ,  $S$ ,  $\mu_\infty$ , and  $a_\infty$  are individually varied, and then we could try to make sense out of the resulting huge collection of data. This is the hard way. Instead we ask: Are there groupings of the quantities  $V_\infty$ ,  $\rho_\infty$ ,  $S$ ,  $\mu_\infty$ ,  $a_\infty$ , and  $L$  such that Eq. (5.3) can be written in terms of fewer parameters? The answer is yes. In the process of developing this answer, we will gain some insight into the beauty of nature as applied to aerodynamics.

The technique we will apply is a simple example of a more general theoretical approach called *dimensional analysis*. Let us assume that Eq. (5.3) is of the functional form

$$L = Z V_\infty^a \rho_\infty^b S^d a_\infty^e \mu_\infty^f \quad (5.4)$$

where  $Z$ ,  $a$ ,  $b$ ,  $d$ ,  $e$ , and  $f$  are dimensionless constants. However, no matter what the values of these constants may be, it is a physical fact that the dimensions of the

left and right sides of Eq. (5.4) must match; that is, if  $L$  is a force (say in newtons), then the net result of all the exponents and multiplication on the right side must also produce a result with the dimensions of a force. This constraint will ultimately give us information about the values of  $a$ ,  $b$ , and so on. If we designate the basic dimensions of mass, length, and time by  $m$ ,  $l$ , and  $t$ , respectively, then the dimensions of various physical quantities are as given in the following:

Physical Quantity	Dimensions
$L$	$ml/t^2$ (from Newton's second law)
$V_\infty$	$lt$
$\rho_\infty$	$m/l^3$
$S$	$l^2$
$a_\infty$	$lt$
$\mu_\infty$	$m/(lt)$

Thus equating the *dimensions* of the left and right sides of Eq. (5.4), we obtain

$$\frac{ml}{t^2} = \left(\frac{l}{t}\right)^a \left(\frac{m}{l^3}\right)^b (l^2)^d \left(\frac{l}{t}\right)^e \left(\frac{m}{lt}\right)^f \quad (5.5)$$

Consider mass  $m$ . The exponent of  $m$  on the left side is 1, so the exponents of  $m$  on the right must add to 1. Hence

$$1 = b + f \quad (5.6)$$

Similarly, for time  $t$  we have

$$-2 = -a - e - f \quad (5.7)$$

and for length  $l$ ,

$$1 = a - 3b + 2d + e - f \quad (5.8)$$

Solving Eqs. (5.6) to (5.8) for  $a$ ,  $b$ , and  $d$  in terms of  $e$  and  $f$  yields

$$b = 1 - f \quad (5.9)$$

$$a = 2 - e - f \quad (5.10)$$

$$d = 1 - \frac{f}{2} \quad (5.11)$$

Substituting Eqs. (5.9) to (5.11) into (5.4) gives

$$L = Z(V_\infty)^{2-e-f} \rho_\infty^{1-f} S^{1-f/2} a_\infty^e \mu_\infty^f \quad (5.12)$$

Rearranging Eq. (5.12), we find

$$L = Z \rho_\infty V_\infty^2 S \left( \frac{a_\infty}{V_\infty} \right)^e \left( \frac{\mu_\infty}{\rho_\infty V_\infty S^{1/2}} \right)^f \quad (5.13)$$

Note that  $a_\infty/V_\infty = 1/M_\infty$ , where  $M_\infty$  is the free-stream Mach number. Also note that the dimensions of  $S$  are  $l^2$ ; hence the dimension of  $S^{1/2}$  is  $l$ , purely a length. Let us

choose this length to be the chord  $c$  by convention. Hence,  $\mu_\infty / (\rho_\infty V_\infty S^{1/2})$  can be replaced in our consideration by the equivalent quantity

$$\frac{\mu_\infty}{\rho_\infty V_\infty c}$$

However,  $\mu_\infty / (\rho_\infty V_\infty c) \equiv 1/\text{Re}$ , where  $\text{Re}$  is based on the chord length  $c$ . Equation (5.13) thus becomes

$$L = Z \rho_\infty V_\infty^2 S \left( \frac{1}{M_\infty} \right)^e \left( \frac{1}{\text{Re}} \right)^f \quad (5.14)$$

We now *define* a new quantity, called the *lift coefficient*  $cl$ , as

$$\frac{c_l}{2} \equiv Z \left( \frac{1}{M_\infty} \right)^e \left( \frac{1}{\text{Re}} \right)^f \quad (5.15)$$

Then Eq. (5.14) becomes

$$L = \frac{1}{2} \rho_\infty V_\infty^2 S c_l \quad (5.16)$$

Recalling from Ch. 4) that the dynamic pressure is  $q_\infty \equiv \frac{1}{2} \rho_\infty V_\infty^2$ , we transform Eq. (5.16) into

$L$	$=$	$q_\infty$	$\times$	$S$	$\times$	$c_l$		$(5.17)$
$\uparrow$		$\uparrow$		$\uparrow$		$\uparrow$		
Lift		Dynamic pressure		Wing area		Lift coefficient		

Look what has happened! Equation (5.3), written from intuition but not [page 297](#) very useful, has cascaded to the simple, direct form of Eq. (5.17), which contains a tremendous amount of information. In fact, Eq. (5.17) is one of the most important relations in applied aerodynamics. It says that the lift is directly proportional to the dynamic pressure (and hence to the square of the velocity). It is also directly proportional to the wing area  $S$  and to the lift coefficient  $cl$ . In fact, Eq. (5.17) can be turned around and used as a *definition* for the lift coefficient:

$$c_l \equiv \frac{L}{q_\infty S} \quad (5.18)$$

That is, the lift coefficient is always defined as the aerodynamic lift divided by the dynamic pressure and some reference area (for wings, the convenient reference area  $S$ , as we have been using).

The lift coefficient is a function of  $M_\infty$  and  $\text{Re}$  as reflected in Eq. (5.15). Moreover, because  $M_\infty$  and  $\text{Re}$  are dimensionless and because  $Z$  was assumed initially as a dimensionless constant, from Eq. (5.15)  $cl$  is dimensionless. This is also consistent with Eqs. (5.17) and (5.18). Also recall that our derivation was

carried out for an airfoil of given shape and at a given angle of attack  $\alpha$ . If  $\alpha$  were to vary, then  $c_l$  would also vary. Hence, for a given airfoil,

$$c_l = f(\alpha, M_\infty, Re) \quad (5.19)$$

This relation is important. Fix in your mind that lift coefficient is a function of angle of attack, Mach number, and Reynolds number.

To appreciate the value of the relationship expressed by Eq. (5.19), let us assume that we are given a particular aerodynamic shape, and we wish to measure the lift and how it varies with the different parameters. So we go to the laboratory and set up a series of wind tunnel tests to measure the lift on our given shape. Reflecting on Eq. (5.3), we know that the lift of the given shape at a given orientation (angle of attack) to the flow depends on the free-stream velocity, density, reference area, viscosity coefficient, and speed of sound; but we do not know precisely *how*  $L$  varies with a change in these parameters. We wish to find out how. We begin by running a set of wind tunnel tests, making measurements of  $L$  where  $V_\infty$  is varied but  $S$ ,  $\mu_\infty$ , and  $a_\infty$  are held fixed. This gives us a stack of wind tunnel data from which we can obtain a correlation of the variation of  $L$  with  $V_\infty$ . Next we run another set of wind tunnel tests in which  $\rho_\infty$  is varied but  $V_\infty$ ,  $S$ ,  $\mu_\infty$ , and  $a_\infty$  are held fixed. This gives us a second stack of wind tunnel data from which we can obtain a correlation of the variation of  $L$  with  $\rho_\infty$ . Then we run a third set of wind tunnel tests in which  $S$  is varied, holding everything else constant. This gives us a third stack of wind tunnel data from which we can obtain a correlation of the variation of  $L$  with  $S$ . We repeat this process two more times, alternately holding  $\mu_\infty$  constant and then  $a_\infty$  constant. When we are finished, we end up with five individual stacks of wind tunnel data from which we can (in principle) obtain the precise variation of  $L$  with  $V_\infty$ ,  $\rho_\infty$ ,  $S$ ,  $\mu_\infty$ , and  $a_\infty$ , as represented by the functional relation in Eq. (5.3). As you can probably already appreciate, this represents a lot of personal effort and a lot of wind tunnel testing at great financial expense. However, if we use our knowledge obtained from our dimensional analysis—namely Eq. (5.19)—we can realize a great savings of effort, time, and expense. Instead of measuring  $L$  in five sets of wind tunnel tests as previously described, let us measure the variation of *lift coefficient* [obtained from  $cl = L/(q_\infty S)$ ]. Keying on Eq. (5.19) for a given shape at a given angle of attack, we run a set of wind tunnel tests in which  $cl$  is measured, with  $M_\infty$  varied but  $Re$  held constant. This gives us one stack of wind tunnel data from which we can obtain a correlation of the variation of  $cl$  with  $M_\infty$ . Then we run a second set of wind tunnel tests, varying  $Re$  and keeping  $M_\infty$  constant. This gives us a second stack of data from which we can obtain a correlation of the variation of  $cl$  with  $Re$ . And this is all we need; we now know how  $cl$  varies with  $M_\infty$  and  $Re$  for the given shape at the given angle of

attack. With  $cl$  we can obtain the lift from Eq. (5.17). By dealing with the lift coefficient instead of the lift itself, and with  $M_\infty$  and Re instead of  $\rho_\infty$ ,  $V_\infty$ ,  $S$ ,  $\mu_\infty$ , and  $a_\infty$ , we have ended up with only two stacks of wind tunnel data rather than the five we had earlier. Clearly, by using the dimensionless quantities  $cl$ ,  $M_\infty$ , and Re, we have achieved a great economy of effort and wind tunnel time.

But the moral to this story is deeper yet. Dimensional analysis shows [page 298](#) that  $cl$  is a function of *Mach number* and *Reynolds number*, as stated in Eq. (5.19), rather than just individually of  $\rho_\infty$ ,  $V_\infty$ ,  $\mu_\infty$ ,  $a_\infty$ , and the size of the body. It is the *combination* of these physical variables in the form of  $M_\infty$  and Re that counts. The Mach number and the Reynolds number are powerful quantities in aerodynamics. They are called *similarity parameters* for reasons that are discussed at the end of this section. We have already witnessed, in Ch. 4), the power of  $M_\infty$  in governing compressible flows. For example, just look at Eqs. (4.73) through (4.75) and (4.79); only the *Mach number* and the ratio of specific heats appear on the right sides of these equations.

Performing a similar dimensional analysis on drag and moments, beginning with relations analogous to Eq. (5.3), we find that

$$D = q_\infty S c_d \quad (5.20)$$

where  $cd$  is a dimensionless *drag coefficient* and

$$M = q_\infty S c_m \quad (5.21)$$

where  $cm$  is a dimensionless *moment coefficient*. Note that Eq. (5.21) differs slightly from Eqs. (5.17) and (5.20) by the inclusion of the chord length  $c$ . This is because  $L$  and  $D$  have dimensions of a force, whereas  $M$  has dimensions of a force-length product.

The importance of Eqs. (5.17) to (5.21) cannot be overemphasized. [page 299](#) They are fundamental to all applied aerodynamics. They are readily obtained from dimensional analysis, which essentially takes us from loosely defined functional relationships [such as Eq. (5.3)] to well-defined relations between dimensionless quantities [Eqs. (5.17) to (5.21)]. In summary, for an airfoil of given shape, the dimensionless lift, drag, and moment coefficients have been defined as

$$c_l = \frac{L}{q_\infty S} \quad c_d = \frac{D}{q_\infty S} \quad c_m = \frac{M}{q_\infty S c} \quad (5.22)$$

where

$$c_l = f_1(\alpha, M_\infty, \text{Re}) \quad c_d = f_2(\alpha, M_\infty, \text{Re}) \quad c_m = f_3(\alpha, M_\infty, \text{Re}) \quad (5.23)$$

Reflecting for an instant, we find that there may be a conflict in our aerodynamic philosophy. On the one hand, Chs. 2 and 4 emphasized that lift, drag, and moments on an aerodynamic shape stem from the detailed pressure and shear stress distributions on the surface and that measurements and/or calculations of these distributions, especially for complex configurations, are not trivial undertakings. On the other hand, the equations in Eq. (5.22) indicate that lift, drag, and moments can be quickly obtained from simple formulas. The bridge between these two outlooks is, of course, the lift, drag, and moment coefficients. All the physical complexity of the flow field around an aerodynamic body is implicitly buried in  $cl$ ,  $cd$ , and  $cm$ . Before the simple equations in Eq. (5.22) can be used to calculate lift, drag, and moments for an airfoil, wing, and body, the appropriate aerodynamic coefficients must be known. From this point of view, the simplicity of Eq. (5.22) is a bit deceptive. These equations simply shift the forces of aerodynamic rigor from the forces and moments themselves to the appropriate coefficients instead. So we are now led to these questions: How do we obtain values of  $cl$ ,  $cd$ , and  $cm$  for given configurations, and how do they vary with  $\alpha$ ,  $M_\infty$ , and  $Re$ ? The answers are introduced in the following sections.

However, before we leave our discussion of dimensional analysis, it is important to elaborate on why  $M_\infty$  and  $Re$  are called *similarity parameters*. Consider that we have two different flows (say a red flow and a green flow) over two bodies that are geometrically similar but are different sizes for the red and green flows. The red and green flows have different values of  $V_\infty$ ,  $\rho_\infty$ ,  $\mu_\infty$ , and  $a_\infty$ , but they both have the *same*  $M_\infty$  and  $Re$ . If  $M_\infty$  is the same for the red and green flows and if  $Re$  is the same for the red and green flows, then from Eq. (5.23),  $cl$ ,  $cd$ , and  $cm$  measured in the red flow will be the *same values* as the  $cl$ ,  $cd$ , and  $cm$  measured in the green flow, even though the red and green flows are different flows. In this case the red and green flows are called *dynamically similar* flows; hence  $M_\infty$  and  $Re$  are called *similarity parameters*. The concept of dynamic flow similarity is elegant, and it goes well beyond the scope of this book. But it is mentioned here because of its importance in aerodynamics. The concept of dynamic similarity allows measurements obtained in wind tunnel tests of a small-scale model of an airplane to be applied to the real airplane in free flight. If in the wind tunnel test (say the red flow) the values of  $M_\infty$  and  $Re$  are the *same* as those for the real airplane in free flight (say the green flow), then  $cl$ ,  $cd$ , and  $cm$  measured in the wind tunnel will be *precisely* the same as those values in free flight. The concept of dynamic similarity is essential to wind tunnel testing.

In most wind tunnel tests of small-scale models of real airplanes, every [page 300](#) effort is made to simulate the values of  $M_\infty$  and  $Re$  encountered by the real airplane in free flight. Unfortunately, due to the realities of wind tunnel design

and operation, this is frequently not possible. In such cases the wind tunnel data must be “extrapolated” to the conditions of free flight. Such extrapolations are usually approximations, and they introduce a degree of error when the wind tunnel data are used to describe the conditions of full-scale free flight. The problem of not being able to simultaneously simulate free-flight values of  $M_\infty$  and  $Re$  in the same wind tunnel is still pressing today, in spite of the fact that wind tunnel testing has been going on for almost 150 years. Among other reasons, this is why there are so many different wind tunnels at different laboratories around the world.

## 5.4 AIRFOIL DATA


A goal of theoretical aerodynamics is to predict values of  $cl$ ,  $cd$ , and  $cm$  from the basic equations and concepts of physical science, some of which were discussed in previous chapters. However, simplifying assumptions is usually necessary to make the mathematics tractable. Therefore, when theoretical results are obtained, they are generally not exact. The use of high-speed digital computers to solve the governing flow equations is now bringing us much closer to the accurate calculation of aerodynamic characteristics; however, limitations are still imposed by the numerical methods themselves, and the storage and speed capacity of current computers are still not sufficient to solve many complex aerodynamic flows. As a result, the practical aerodynamicist has to rely on direct *experimental* measurements of  $cl$ ,  $cd$ , and  $cm$  for specific bodies of interest.

A large bulk of experimental airfoil data was compiled over the years by the National Advisory Committee for Aeronautics (NACA), which was absorbed in the creation of the National Aeronautics and Space Administration (NASA) in 1958. Lift, drag, and moment coefficients were systematically measured for many airfoil shapes in low-speed subsonic wind tunnels. These measurements were carried out on straight, constant-chord wings that completely spanned the tunnel test section from one side wall to the other. In this fashion, the flow essentially “saw” a wing with no wingtips, and the experimental airfoil data were thus obtained for “infinite wings.” (The distinction between infinite and finite wings will be made in subsequent sections.) Some results of these airfoil measurements are given in App. D. The first page of App. D gives data for  $cl$  and  $cm_{c/4}$  versus angle of attack for the NACA 1408 airfoil. The second page gives  $cd$  and  $cm_{ac}$  versus  $cl$  for the same airfoil. Because  $cl$  is known as a function of  $\alpha$  from the first page, the data from both pages can be cross-plotted to obtain the variations of  $cd$  and  $cm_{ac}$  versus  $\alpha$ . The remaining pages of App. D give the same type of data for different standard NACA airfoil shapes.


Let us examine the variation of  $cl$  with  $\alpha$  more closely. This variation is sketched in Fig. 5.6. The experimental data indicate that  $cl$  varies *linearly* with  $\alpha$

over a large range of angle of attack. Thin-airfoil theory, which is the subject of more advanced books on aerodynamics, also predicts the same type of linear variation. The slope of the linear portion of the lift curve is designated as  $a_0 \equiv dcl/d\alpha \equiv$  lift slope. Note that in Fig. 5.6, when  $\alpha = 0$ , there is still a positive value of  $cl$ ; that is, there is still some lift even when the airfoil is at zero angle of attack to the flow. This is due to the positive camber of the airfoil. All airfoils with such camber have to be pitched to some negative angle of attack before zero lift is obtained. The value of  $\alpha$  when lift is zero is defined as the *zero-lift angle of attack*  $\alpha_{L=0}$  and is illustrated in Fig. 5.6. This effect is further demonstrated in Fig. 5.7, where the lift curve for a cambered airfoil is compared with that for a symmetric (no camber) airfoil. Note that the lift curve for a symmetric airfoil goes through the origin. Refer again to Fig. 5.6 at the other extreme: For large values of  $\alpha$ , the linearity of the lift curve breaks down. As  $\alpha$  is increased beyond a certain value,  $cl$  peaks at some maximum value  $cl_{\max}$  and then drops precipitously as  $\alpha$  is further increased. In this situation, where the lift is rapidly decreasing at high  $\alpha$ , the airfoil is *stalled*.


page 301

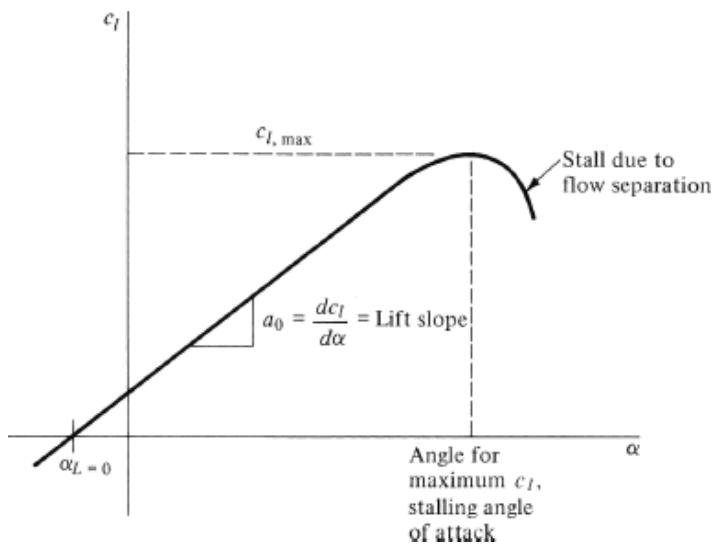

**Figure 5.6** Sketch of a typical lift curve.

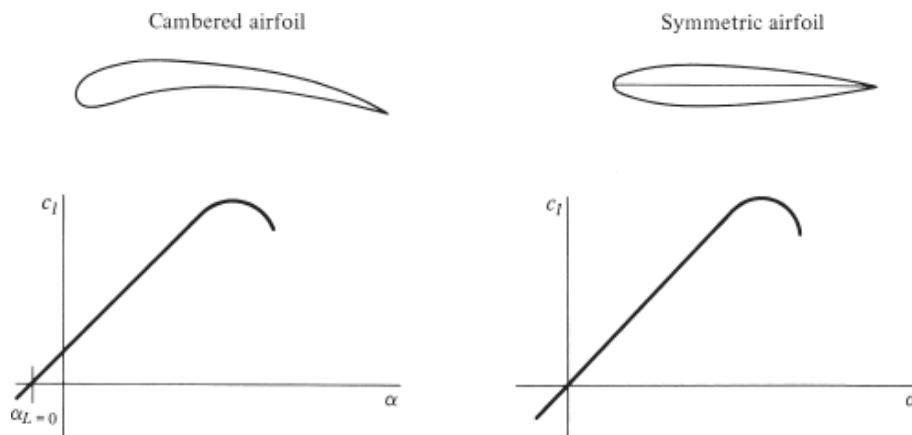


**Figure 5.7** Comparison of lift curves for cambered and symmetric airfoils.

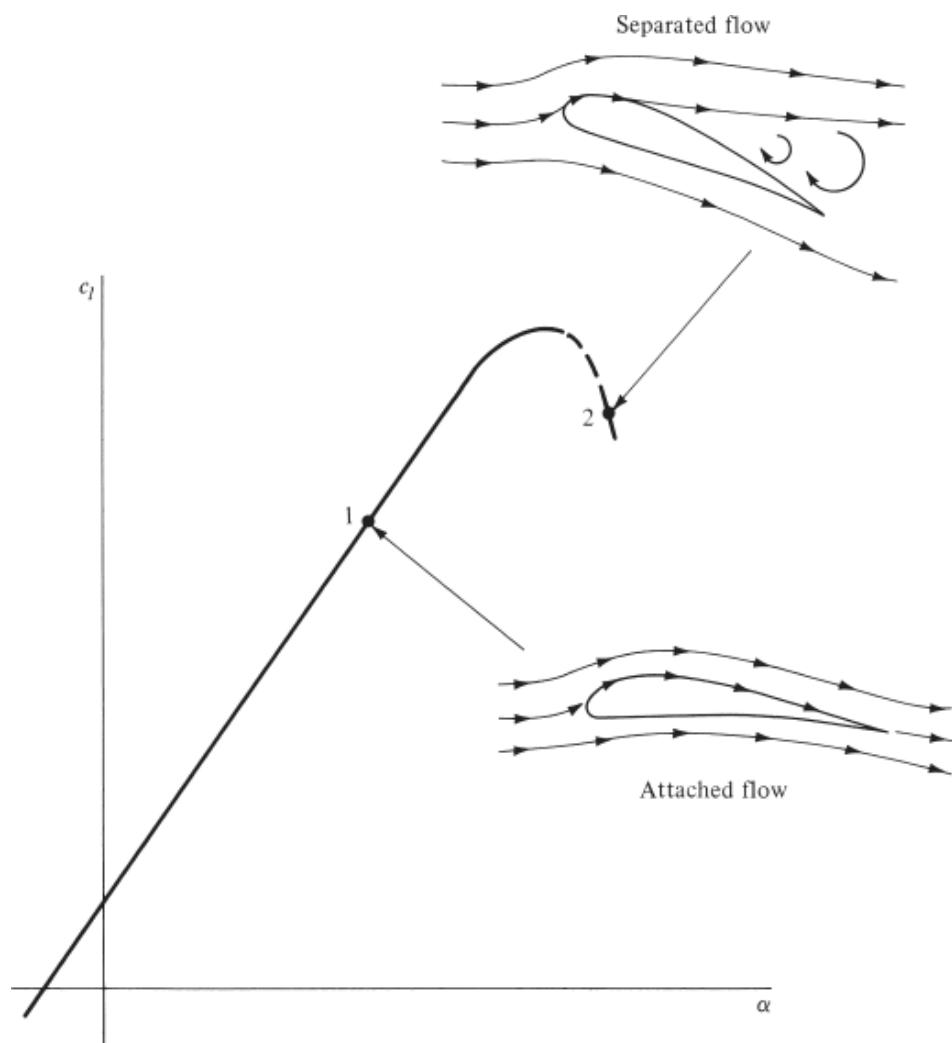

**Figure 5.8** Flow mechanism associated with stalling.


The phenomenon of airfoil stall is of critical importance in airplane design. It is caused by flow separation on the upper surface of the airfoil. This is illustrated in Fig. 5.8, which again shows the variation of  $cl$  versus  $\alpha$  for an airfoil. At point 1 on the linear portion of the lift curve, the flow field over the airfoil is attached to the surface, as pictured in Fig. 5.8. However, as discussed in Ch. 4), the effect of friction is to slow the airflow near the surface; in the presence of an adverse pressure gradient, there will be a tendency for the boundary layer to separate from the surface. As the angle of attack is increased, the adverse pressure gradient on the top surface of the airfoil will become stronger; and at some value of  $\alpha$ —the stalling angle of attack—the flow becomes separated from the top surface. When separation occurs, the lift decreases drastically and the drag increases suddenly. This is the picture associated with point 2 in Fig. 5.8. (This is a good time for the reader to review the discussion of flow separation and its effect on pressure distribution, lift, and drag in Sec. 4.21.)

The nature of the flow field over the wing of an airplane that is below, [page 303](#) just beyond, and way beyond the stall is shown in Fig. 5.9a, b, and c, respectively. These figures are photographs of a wind tunnel model with a wingspan of 6 ft. The entire model has been painted with a mixture of mineral oil and a fluorescent powder, which glows under ultraviolet light. After the wind tunnel is turned on, the fluorescent oil indicates the streamline pattern on the surface of the model. In Fig. 5.9a, the angle of attack is below the stall; the flow is fully attached, as evidenced by the fact that the high surface shear stress has scrubbed most of the oil from the surface. In Fig. 5.9b, the angle of attack is slightly beyond the stall. A large, mushroom-shaped, separated flow pattern has developed over the wing, with attendant highly three-dimensional, low-energy recirculating flow. In Fig. 5.9c, the angle of attack is far beyond the stall. The flow over almost the entire wing has separated. These photographs are striking examples of different types of flow that can occur over an airplane wing at different angles of attack, and they graphically show the extent of the flow field separation that can occur.

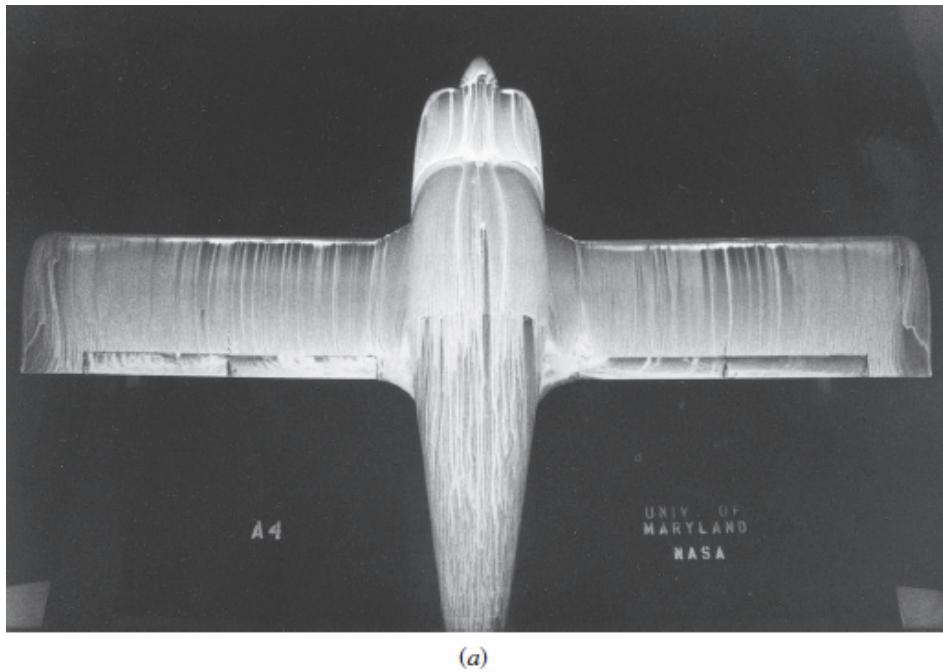


(a)

**Figure 5.9** Surface oil flow patterns on a wind tunnel model of a Grumman American Yankee, taken by Dr. Allen Winkelmann in the Glenn L. Martin Wind Tunnel at the University of Maryland. The mixture is mineral oil and a fluorescent powder, and the photographs were taken under ultraviolet light. (a) Below the stall. The wing is at  $\alpha = 4^\circ$ , where the flow is attached. (*continued*)

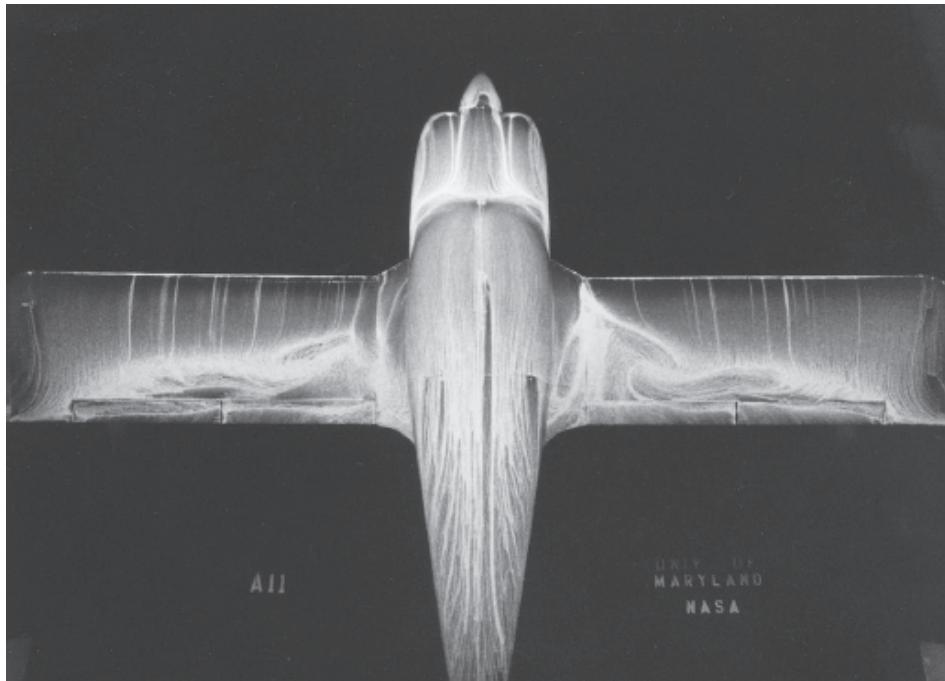

(b)

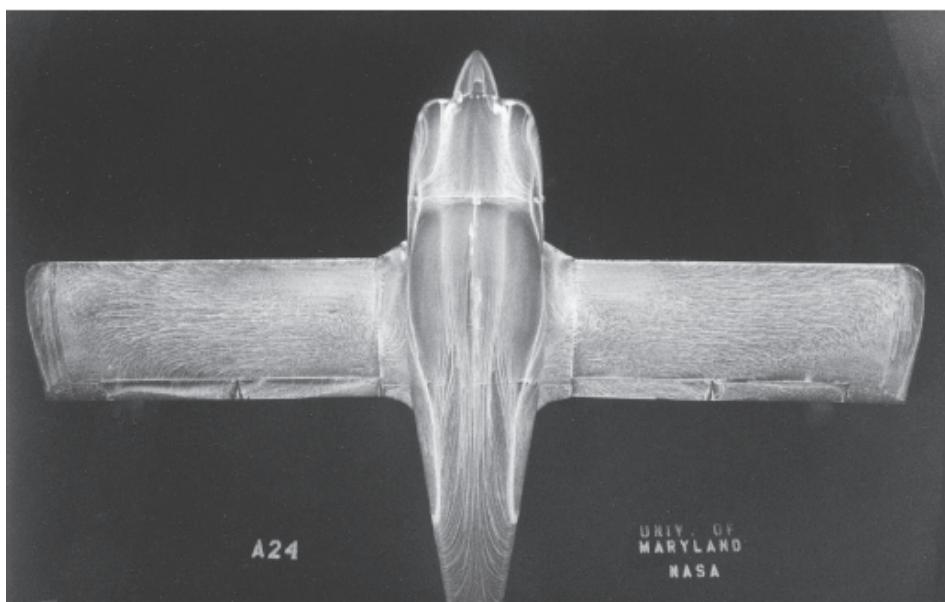

(c)

**Figure 5.9** (concluded) (b) Very near the stall. The wing is at  $\alpha = 11^\circ$ , where the highly three-dimensional separated flow is developing in a mushroom cell pattern. (c) Far above the stall. The wing is at  $\alpha = 24^\circ$ , where the flow over almost the entire wing has separated.

(Source: © Allen E. Winkelmann.)


The lift curves sketched in Figs. 5.6 to 5.8 illustrate the type of variation observed experimentally in the data of App. D. Returning to App. D, we note that the lift curves are all virtually linear up to the stall. Singling out a given airfoil—say the NACA 2412 airfoil—also note that  $cl$  versus  $\alpha$  is given for three different values of the Reynolds number from  $3.1 \times 10^6$  to  $8.9 \times 10^6$ . The lift curves for all three values of Re fall on top of one another in the linear region; that is, Re has little influence on  $cl$  when the flow is attached. However, flow separation is a viscous effect; and as discussed in Ch. 4), Re is a governing parameter for viscous flow. Therefore, it is not surprising that the experimental data for  $cl_{max}$  in the stalling region are affected by Re, as can be seen by the slightly different variations of  $cl$  at high  $\alpha$  for different values of Re. In fact, these lift curves at different Re values answer part of the question posed in Eq. (5.19): The data represent  $cl = f(Re)$ . Again Re exerts little or no effect on  $cl$  except in the stalling region.

On the same page as  $cl$  versus  $\alpha$ , the variation of  $cm_{c/4}$  versus  $\alpha$  is also given. It has only a slight variation with  $\alpha$  and is almost completely unaffected by Re. Also note that the values of  $cm_{c/4}$  are slightly negative. By convention, a positive moment is in a clockwise direction; it pitches the airfoil toward larger angles of attack, as shown in Fig. 5.4. Therefore, for the NACA 2412 airfoil, with  $cm_{c/4}$  negative, the moments are counterclockwise, and the airfoil tends to pitch downward. This is characteristic of all airfoils with positive camber.

On the page following  $cl$  and  $cm_{c/4}$ , the variation of  $cd$  and  $cm_{ac}$  is given versus  $cl$ . Because  $cl$  varies linearly with  $\alpha$ , the reader can visualize these curves of  $cd$  and  $cm_{ac}$  as being plotted versus  $\alpha$  as well; the shapes will be the same. Note that the drag curves have a “bucket” type of shape, with minimum drag occurring at small values of  $cl$  (hence there are small angles of attack). As  $\alpha$  goes to large negative or positive values,  $cd$  increases. Also note that  $cd$  is strongly affected by Re, there being a distinct drag curve for each Re. This is to be expected because the drag for a slender aerodynamic shape is mainly skin friction drag, and from Ch. 4) we have seen that Re strongly governs skin friction. With regard to  $cm_{ac}$ , the definition of the aerodynamic center is clearly evident:  $cm_{ac}$  is constant with respect to  $\alpha$ . It is also insensitive to Re and has a small negative value.

Refer to Eq. (5.23): The airfoil data in App. D experimentally provide the variation of  $cl$ ,  $cd$ , and  $cm$  with  $\alpha$  and Re. The effect of  $M_\infty$  on the airfoil coefficients will be discussed later. However, we emphasize that the data in App. D were measured in low-speed subsonic wind tunnels; hence the flow was essentially incompressible. Thus,  $cl$ ,  $cm_{c/4}$ ,  $cd$ , and  $cm_{ac}$  given in App. D are incompressible flow values. Keep this in mind during our subsequent discussions.

In this section we have discussed the properties of an *airfoil*. As already noted in Fig. 5.2, an airfoil is simply the shape of a wing section. The airfoils in Figs. 5.3 through 5.5 and Figs. 5.7 and 5.8 are paper-thin sections—simple drawings on a sheet of paper. So what does it mean when we talk about the lift, drag, and moments on an airfoil? How can there be a lift on an airfoil that is paper-thin? When we write Eq. (5.17) for the lift of an airfoil, what really is  $L$ ? The answer is given in Fig. 5.10. Here we see a section of a wing of constant chord  $c$ . The length of the section along the span of the wing is unity (1 ft, 1 m, or the like). The lift on this wing section  $L$ , as shown in Fig. 5.10a, is the *lift per unit span*. The lift, drag, and moments on an *airfoil* are always understood to be the lift, drag, and moments *per unit span*, as sketched in Fig. 5.10. The planform area of the segment of unit span is the projected area seen by looking at the wing from above—namely  $S = c(1) = c$ , as sketched in Fig. 5.10b. Hence, when we write Eq. (5.17) for an airfoil, we interpret  $L$  as the lift per unit span and  $S$  as the planform area of a unit span; that is,

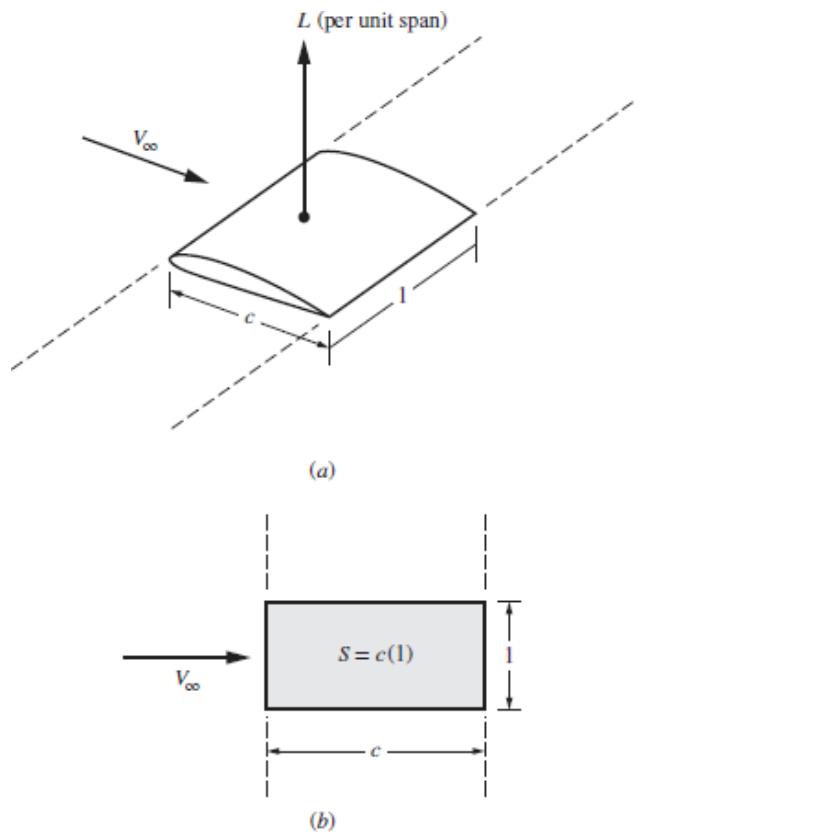

**Figure 5.10** A wing segment of unit span.

$$L \text{ (per unit span)} = q_{\infty} c(1) c_l \quad (5.24)$$

$$\text{or} \quad c_l = \frac{L \text{ (per unit span)}}{q_{\infty} c} \quad (5.25)$$

Finally, return to our road map in Fig. 5.1. We have begun to work our [page 307](#) way down the left column under airfoils. We have already accomplished a lot. We have become familiar with airfoil nomenclature. Using dimensional analysis, we have introduced the very important concept of aerodynamic *coefficients*, and we have examined some experimental data for these coefficients. Make certain you feel comfortable with these concepts before you continue.

### EXAMPLE 5.1

A model wing of constant chord length is placed in a low-speed subsonic wind tunnel, spanning the test section. The wing has an NACA 2412 airfoil and a chord length of 1.3 m. The flow in the test section is at a velocity of 50 m/s at standard sea-level conditions. If the wing is at a  $4^\circ$  angle of attack, calculate (a)  $cl$ ,  $cd$ , and  $cm c_{1/4}$  and (b) the lift, drag, and moments about the quarter chord, per unit span.

#### ■ Solution

a. From App. D, for an NACA 2412 airfoil at a  $4^\circ$  angle of attack,

$$\boxed{\begin{aligned} c_l &= 0.63 \\ c_{m,c/4} &= -0.035 \end{aligned}}$$

To obtain  $cd$ , we must first check the value of the Reynolds number:

$$Re = \frac{\rho_\infty V_\infty c}{\mu_\infty} = \frac{(1.225 \text{ kg/m}^3)(50 \text{ m/s})(1.3 \text{ m})}{1.789 \times 10^{-5} \text{ kg/(m)(s)}} = 4.45 \times 10^6$$

For this value of  $Re$  and for  $cl = 0.63$ , from App. D,

$$\boxed{c_d = 0.007}$$

b. Because the chord is 1.3 m and we want the aerodynamic forces and moments *per unit span* (a unit length along the wing, perpendicular to the flow),  $S = c(1) = 1.3(1) = 1.3 \text{ m}^2$ . Also

$$q_\infty = \frac{1}{2} \rho_\infty V_\infty^2 = \frac{1}{2}(1.225)(50)^2 = 1531 \text{ N/m}^2$$

From Eq. (5.22),

$$L = q_\infty S c_l = 1531(1.3)(0.63) = \boxed{1254 \text{ N}}$$

Because  $1 \text{ N} = 0.2248 \text{ lb}$ , also

$$\boxed{\begin{aligned} L &= (1254 \text{ N})(0.2248 \text{ lb/N}) = 281.9 \text{ lb} \\ D &= q_{\infty} S c_d = 1531(1.3)(0.007) = 13.9 \text{ N} \\ &= 13.9(0.2248) = 3.13 \text{ lb} \end{aligned}}$$

*Note:* The ratio of lift to drag, which is an important aerodynamic quantity, is

$$\boxed{\begin{aligned} \frac{L}{D} &= \frac{c_l}{c_d} = \frac{1254}{13.9} = 90.2 \\ M_{d4} &= q_{\infty} S c_{m,d4} c = 1531(1.3)(-0.035)(1.3) \\ M_{d4} &= -90.6 \text{ N} \cdot \text{m} \end{aligned}}$$

## EXAMPLE 5.2

---

The same wing in the same flow as in Example 5.1 is pitched to an angle [page 308](#) of attack such that the lift per unit span is 700 N (157 lb).

- a. What is the angle of attack?
- b. To what angle of attack must the wing be pitched to obtain zero lift?

### ■ Solution

- a. From the previous example,

$$q_{\infty} = 1531 \text{ N/m}^2 \quad S = 1.3 \text{ m}^2$$

$$\text{Thus} \quad c_l = \frac{L}{q_{\infty} S} = \frac{700}{1531(1.3)} = 0.352$$

From App. D for the NACA 2412 airfoil, the angle of attack corresponding to  $cl = 0.352$  is

$$\boxed{\alpha = 1^\circ}$$

- b. Also from App. D, for zero lift (that is,  $cl = 0$ ),

$$\boxed{\alpha_{L=0} = -2.2^\circ}$$

## EXAMPLE 5.3

---

The shape of the NASA LS(1)-0417 airfoil is shown in Fig. 4.55; this airfoil is the subject of Example 4.44. In that example, a constant-chord wing model with the NASA LS(1)-0417 airfoil shape is mounted in a wind tunnel where both wing tips are flush with the vertical sidewalls of the tunnel. Based on our discussion in the present section, the measured data are therefore for an infinite wing. At a zero

angle of attack, the drag on the wing model is given in Example 4.44 to be 34.7 N when the flow in the test section is at a velocity of 97 m/s at standard sea-level conditions. The chord length is 0.6 m and the wingspan across the test section is 1 m. Hence, the measured drag of 34.7 N is the drag per unit span, as discussed in the present section. Calculate the drag coefficient.

### ■ Solution

$$q_{\infty} = \frac{1}{2} \rho_{\infty} V_{\infty}^2 = \frac{1}{2} (1.23)(97)^2 = 5786.5 \text{ N}$$

$$c_d = \frac{D}{q_{\infty} S} = \frac{34.7}{(5786.5)(0.6)(1)} = \boxed{0.01}$$

This result agrees with the measured drag coefficient for the [page 309](#) LS(1)-0417 airfoil at a zero angle of attack reported by Robert McGhee, William Beasley, and Richard Whitcomb in “NASA Low- and Medium-Speed Airfoil Development,” *Advanced Technology Airfoil Research*, vol. 2, NASA CP2046, March 1978, p. 13. This value of  $cd = 0.01$  is slightly higher than the corresponding values for the more conventional NACA airfoils in App. D. We remarked in Example 4.44 that the LS(1)-0417 airfoil appears to have a higher percentage of pressure drag than more conventional airfoil shapes.

### EXAMPLE 5.4

For some of the airfoils in App. D, additional data are provided that [page 310](#) pertain to the case of a simulated split flap deflected  $60^\circ$ . (The nature of flaps and their operation are discussed in Sec. 5.17.) The effect of deflecting downward a flap at the trailing edge is to increase both the lift and the magnitude of the moment at a given angle of attack of the airfoil. For example, consider the data shown in App. D for the NACA 4412 airfoil. From the code shown on the graph, the data for the simulated split flap deflected  $60^\circ$  are given by the upside-down triangles. Calculate (a) the percentage increase in maximum lift coefficient and (b) the percentage increase in the magnitude of the moment coefficient about the quarter chord due to the flap deflection of  $60^\circ$ .

### ■ Solution

a. From App. D for the NACA 4412 airfoil, letting  $(C_{l,\max})_1$  and  $(C_{l,\max})_2$  denote the maximum lift coefficient with and without flap deflection, respectively, we have

$$(C_{l,\max})_1 = 2.7$$

$$(C_{l,\max})_2 = 1.7$$

The percentage increase in maximum lift coefficient due to flap deflection is

$$\text{Increase} = \left( \frac{2.7 - 1.7}{1.7} \right) (100) = 59 \text{ percent}$$

b. Similarly, denoting the moment coefficient about the quarter chord for the cases with and without flap deflection, denoted by  $(C_{m_{d4}})_1$  and  $(C_{m_{d4}})_2$ , respectively, we have

$$\begin{aligned}(C_{m_{d4}})_1 &= -0.305 \\ (C_{m_{d4}})_2 &= -0.09\end{aligned}$$

The percentage increase in the magnitude of the moment coefficient due to flap deflection is

$$\text{Increase} = \left( \frac{0.305 - 0.09}{0.09} \right) (100) = 239 \text{ percent}$$


---

### EXAMPLE 5.5

For some of the airfoils given in App. D, additional given data pertain to the case of *standard roughness*. In this case, 0.011-in carborundum grains were applied to both the upper and lower surfaces of the model from the leading edge to a location  $0.08c$  downstream of the leading edge. In this fashion the NACA researchers examined the influence of surface roughness on airfoil performance, simulating a case more severe than the usual surface roughness caused by manufacturing processes and ordinary deterioration in service, but much less severe than the accumulation of ice, mud, or damage in military service. (For more details, see the book by Abbott and von Doenhoff, pp. 143–148, listed in the bibliography at the end of this chapter.) For the NACA 4412 airfoil in App. D at a Reynolds number of  $6 \times 10^6$ , calculate (a) the percentage decrease in maximum lift coefficient and (b) the percentage increase in minimum drag coefficient due to the standard roughness.

#### ■ Solution

a. In App. D for the NACA 4412 airfoil, note that the data for standard roughness are given for  $\text{Re} = 6 \times 10^6$ . Letting  $(C_{\ell,\max})_1$  and  $(C_{\ell,\max})_2$  denote the maximum lift coefficient with and without standard roughness, respectively, at  $\text{Re} = 6 \times 10^6$ , we have

$$\begin{aligned}(C_{\ell,\max})_1 &= 1.39 \\ (C_{\ell,\max})_2 &= 1.63\end{aligned}$$

The percentage decrease in maximum lift coefficient due to standard roughness is

$$\text{Decrease} = \left( \frac{1.63 - 1.39}{1.63} \right) (100) = 14.7 \text{ percent}$$

b. Similarly, denoting the minimum drag coefficient for the cases with and without standard roughness by  $(Cd_{\min})_1$  and  $(Cd_{\min})_2$ , respectively, we have

$$(Cd_{\min})_1 = 0.01$$

$$(Cd_{\min})_2 = 0.0062$$

The percentage increase in minimum drag coefficient due to standard roughness is

$$\text{Increase} = \frac{0.01 - 0.0062}{0.0062} (100) = 61 \text{ percent}$$

Please note that in this book the subsequent use of App. D for further worked-examples and the homework problems at the end of the chapters will *not* involve the airfoil data for simulated flap deflection or standard roughness. These are special cases examined in Examples 5.4 and 5.5 only; these examples are designed simply to increase your familiarity with the graphs in App. D.

### EXAMPLE 5.6

Consider an NACA 23012 airfoil at 8 degrees of angle of attack. Calculate the normal and axial force coefficients. Assume that  $\text{Re} = 8.8 \times 10^6$ .

#### ■ Solution

From App. D, for the NACA 23012 airfoil at  $\alpha = 8^\circ$ ,

$$c_t = 1.0$$

$$c_d = 0.0078$$

From Eq. (5.1), repeated here,

$$L = N \cos \alpha - A \sin \alpha \quad (5.11)$$

$$\frac{L}{q_\infty S} = \frac{N}{q_\infty S} \cos \alpha - \frac{A}{q_\infty S} \sin \alpha$$

$$c_t = c_n \cos \alpha - c_a \sin \alpha \quad (E5.6.1)$$

where  $c_n$  and  $c_a$  are the section normal and axial force coefficients. [page 311](#)  
Similarly, Eq. (5.2) leads to

$$c_d = c_n \sin \alpha + c_a \cos \alpha \quad (E5.6.2)$$

Inserting  $c_t$  and  $c_d$  at  $\alpha = 8^\circ$  into Eqs. (E 5.6.1) and (E 5.6.2),

$$1.0 = c_n \cos 8^\circ - c_a \sin 8^\circ$$

or

$$1.0 = 0.990268 c_n - 0.139173 c_a \quad (E.5.6.3)$$

$$\text{and} \quad 0.0078 = 0.139173 c_n + 0.990268 c_a \quad (\text{E } 5.6.4)$$

Solving Eqs. (E 5.6.3) and (E 5.6.4) simultaneously for  $c_n$  and  $c_a$ , we get

$c_n = 0.991$
$c_a = -0.131$

A more direct approach to solving this problem that does not involve solving two algebraic equations simultaneously is obtained by reexamining Fig. 5.4b, and expressing  $N$  and  $A$  in terms of  $L$  and  $D$ , essentially the inverse of Eqs. (5.1) and (5.2). From Fig. 5.4,

$$N = L \cos \alpha + D \sin \alpha \quad (\text{E } 5.6.5)$$

$$A = -L \sin \alpha + D \cos \alpha \quad (\text{E } 5.6.6)$$

Thus,  $c_n = c_\ell \cos \alpha + c_d \sin \alpha \quad (\text{E } 5.6.7)$

and  $c_a = -c_\ell \sin \alpha + c_d \cos \alpha \quad (\text{E } 5.6.8)$

From Eq. (E 5.6.7),

$$c_n = 1.0 \cos 8^\circ + 0.078 \sin 8^\circ$$

$$c_n = 1.0 (0.990268) + 0.0078 (0.139173)$$

$c_n = 0.991$
---------------

From Eq. (E 5.6.8),

$$c_a = 1.0 (0.139173) + 0.0078 (0.990268)$$

$c_a = -0.131$
----------------

These numbers agree with those obtained earlier in the example.

[page 312](#)

*Question:* Why is the axial force coefficient negative; that is, why is the axial force directed toward the leading edge? We can see the answer directly by examining Fig. 5.4b. Note that the component of  $L$  projected along the chord line acts *forward*. The component of  $D$  projected along the chord line acts *rearward*. In this example, lift is 128 times larger than the drag, so the forward-facing component due to lift dominates the axial force, and the axial force therefore acts forward. This is the case for many airfoils at sufficiently positive angles of attack.

### EXAMPLE 5.7

Laminar flow airfoils are discussed in Sec. 4.15, and a typical laminar flow airfoil is shown in Fig. 4.45b. In the NACA airfoil nomenclature, the designation numbers for laminar flow airfoils start with 6; these are the so-called 6-series airfoils, some of which are treated in App. D. In particular, for  $\text{Re} = 9 \times 10^6$ ,

compare the lift and drag coefficients of two symmetric airfoils at zero angle of attack: the classic four-digit NACA 0009 airfoil and the laminar flow NACA 65-009 airfoil.

### ■ Solution

From App. D, for the NACA 0009 airfoil at  $\alpha = 0^\circ$ ,

$$c_l = 0$$

This is really a trivial result; for *all* symmetric airfoils at zero angle of attack,  $c_l = 0$ . Moving to the drag coefficient graph, for  $c_l = 0$ ,

$$c_d = 0.0052$$


For the NACA 65-009 airfoil,  $c_l = 0$  and

$$c_d = 0.004$$

Note that the drag coefficient for the laminar flow airfoil is 23 percent lower than for the standard four-digit airfoil. Also, study carefully the variation of  $c_d$  for the laminar flow airfoil. There is a rather sudden drop and bottoming-out of  $c_d$  at small values of  $c_l$  (hence small values of angle of attack). This part of the curve is called the *drag bucket*, and is characteristic of laminar flow airfoils. Note also the drag buckets for the 63-210, 64-210, 65-210, and 65-006 airfoils shown in App. D.

### EXAMPLE 5.8

Consider the aerodynamic moments exerted on an airfoil, as discussed in Sec. 5.2. There we noted that the value of the moment depends on the point on the airfoil about which moments are taken. In the airfoil data in App. D, two moment coefficients are given: one about the quarter-chord point,  $c_{m_{d4}}$ , and the other about the aerodynamic center,  $c_{m_{ac}}$ . Another convenient point on the airfoil about which to take moments is the leading edge, as mentioned in Sec. 5.2. Derive an equation relating the moment coefficient about the leading edge to lift coefficient and the moment coefficient about the quarter-chord point.

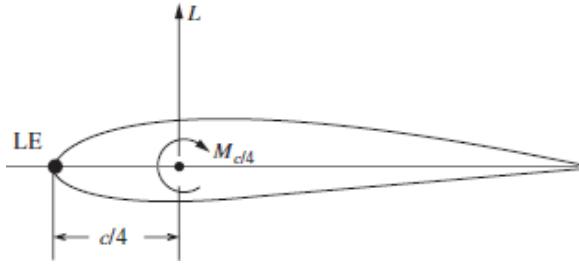

**Figure 5.11** Sketch of lift and moments on an airfoil.

### ■ Solution

Examine Fig. 5.11. Here, the lift  $L$  is shown acting through the quarter-chord point, along with the moment about the quarter-chord point,  $M_{c/4}$ . (Note: The lift and moment acting on the airfoil can be mechanically represented by the lift acting through *any* point on the airfoil and the moment acting at that same point. In this example we choose to put the lift acting through the quarter-chord point because the airfoil data in App. D give the experimentally measured moment coefficient about the quarter-chord point.) Keep in mind the convention that any moment that tends to increase the angle of attack is positive, and that which tends to decrease the angle of attack is negative. With this, from Fig. 5.11, we have

$$M_{LE} = -L\left(\frac{c}{4}\right) + M_{c/4} \quad (\text{E 5.8.1})$$

Dividing Eq. (E 5.8.1) by  $q_\infty S c$ , we have

$$\frac{M_{LE}}{q_\infty S c} = -\frac{L}{q_\infty S c} \left(\frac{c}{4}\right) + \frac{M_{c/4}}{q_\infty S c}$$

or

$c_{m_{LE}} = -\frac{c_\ell}{4} + c_{m_{c/4}}$

(E 5.8.2)

### EXAMPLE 5.9

Consider the NACA 63-210 airfoil at  $6^\circ$  angle of attack. Calculate the moment coefficient about the leading edge.

### ■ Solution

From App. D, for the NACA 63-210 airfoil at  $\alpha = 6^\circ$ , we have

$$c_\ell = 0.8; c_{m_{c/4}} = -0.04$$

From Eq. (E 5.8.2) obtained in Example 5.8,

$$c_{m_{LE}} = -\frac{c_\ell}{4} + c_{m_{c/4}} = -\frac{0.8}{4} - 0.04 = \boxed{-0.24}$$

## EXAMPLE 5.10

The question is sometimes asked: Can an airfoil produce lift when it is [page 314](#) flying upside-down? In this example, we answer that question.

- Consider, for example, an NACA 2415 airfoil flying right side up at an angle of attack of  $6^\circ$ , as shown in Fig. 5.12a. The airfoil has a chord length of 1.5 m and is flying at a standard altitude of 2 km at a velocity of 150 m/s. Calculate the lift per unit span.
- Now, turn this airfoil upside-down, at the same flight conditions at an angle of attack of  $6^\circ$ . Calculate the lift per unit span.
- Compare and discuss the results.

### ■ Solution

- From App. D at  $\alpha = 6^\circ$ ,  $c_l = 0.8$ . From App. A at a standard altitude of 2 km,  $\rho = 0.90926 \text{ kg/km}^3$ . Therefore

$$q_\infty = \frac{1}{2}\rho V^2 = \frac{1}{2}(0.9026)(150)^2 = 1.023 \times 10^4 \text{ N/m}^2$$

Thus,  $L(\text{per unit span}) = q_\infty S c_l = q_\infty c(1) c_l =$   
 $(1.023 \times 10^4)(1.5)(1)(0.90926) = \boxed{1.395 \times 10^4 \text{ N}}$

- Examine the  $c_l$  data for the NACA 2415 airfoil in App. D. Note that at an angle of attack of  $-6^\circ$ , the airfoil has  $c_l = -0.44$ ; this is *negative* lift with the lift vector pointing downward. Now simply rotate this airfoil  $180^\circ$  about the relative wind direction so that we see the picture shown in Fig. 5.12b, which is the upside-down airfoil at an angle of attack of  $6^\circ$ . Now the lift vector points upward. For this case,


$$L(\text{per unit span}) = q_\infty S c_l = (1.023 \times 10^4)(1.5)(0.44) = \boxed{0.675 \times 10^4 \text{ N}}$$

- Clearly, an airfoil flying upside-down can produce lift. The answer to the question originally posed is clearly *yes*. However, for a positively cambered airfoil such as the NACA 2415, because the zero-lift angle is a negative value ( $\alpha_L=0 = -2^\circ$  in this case), in its upside-down orientation, the airfoil will produce a smaller lift than when it is right side up at the same angle of attack. In this example,

Right side up:  $L = 1.395 \times 10^4 \text{ N}$

[page 315](#)

Upside-down:  $L = 0.675 \times 10^4 \text{ N}$

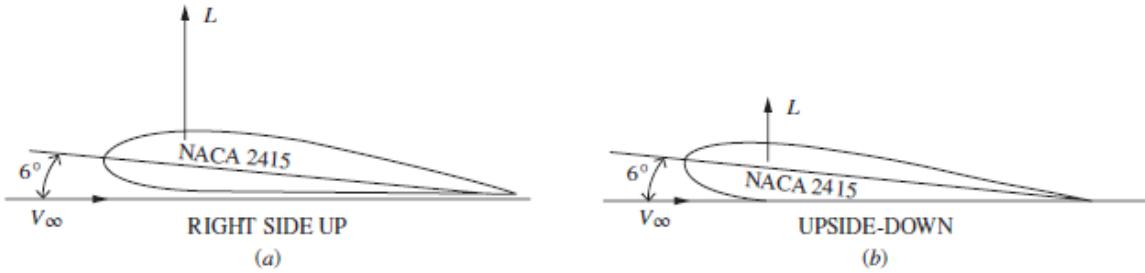

**Figure 5.12** An NACA 2415 airfoil flying (a) right side up, and (b) upside-down.

In its upside-down orientation, the airfoil produces 48 percent of the lift produced in the right-side-up orientation.


## 5.5 INFINITE VERSUS FINITE WINGS

As stated in Sec. 5.4, the airfoil data in App. D were measured in low-speed subsonic wind tunnels where the model wing spanned the test section from one sidewall to the other. In this fashion, the flow sees essentially a wing with no wing tips; that is, the wing in principle could be stretching from plus infinity to minus infinity in the spanwise direction. Such an *infinite wing* is sketched in Fig. 5.13, where the wing stretches to  $\pm\infty$  in the  $z$  direction. The flow about this wing varies only in the  $x$  and  $y$  directions; for this reason the flow is called *two-dimensional*. Thus, the airfoil data in App. D apply only to such infinite (or two-dimensional) wings. This is an important point to keep in mind.


In contrast, all real airplane wings are obviously finite, as sketched in Fig. 5.14. Here the top view (planform view) of a finite wing is shown, where the distance between the two wing tips is defined as the *wingspan*  $b$ . The area of the wing in this planform view is designated, as before, by  $S$ . This leads to an important definition that pervades all aerodynamic wing considerations—the aspect ratio AR:

$$\text{Aspect ratio} \equiv \text{AR} \equiv \frac{b^2}{S} \quad (5.26)$$

The importance of AR will come to light in subsequent sections.

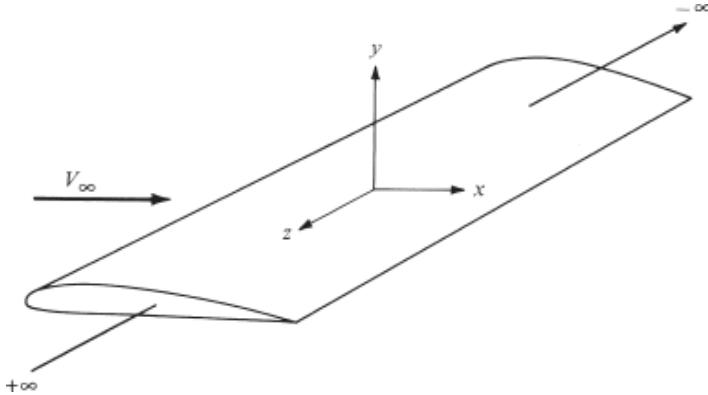

**Figure 5.13** Infinite (two-dimensional) wing.

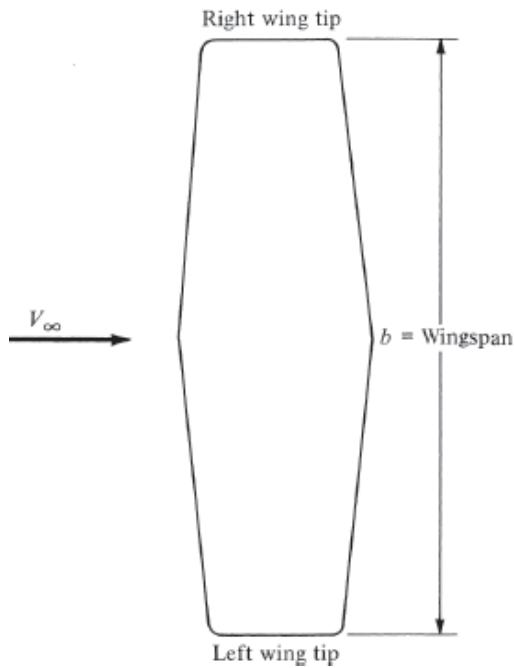

**Figure 5.14** Finite wing; plan view (top).


The flow field about a finite wing is three-dimensional and is therefore page 316 inherently different from the two-dimensional flow about an infinite wing. As a result, the lift, drag, and moment coefficients for a finite wing with a given airfoil shape at a given  $\alpha$  differ from the lift, drag, and moment coefficients for an infinite wing with the same airfoil shape at the same  $\alpha$ . For this reason the aerodynamic coefficients for a finite wing are designated by capital letters  $CL$ ,  $CD$ , and  $CM$ ; this is in contrast to those for an infinite wing, which we have been designating as  $cl$ ,  $cd$ , and  $cm$ . Note that the data in App. D are for infinite (two-dimensional) wings; that is, the data are for  $cl$ ,  $cd$ , and  $cm$ . In a subsequent section we will show how to obtain the finite-wing aerodynamic coefficients from the infinite-wing data

in App. D. Our purpose in this section is simply to underscore that there is a difference.

## 5.6 PRESSURE COEFFICIENT

We continue with our parade of aerodynamic definitions. Consider the pressure distribution over the top surface of an airfoil. Instead of plotting the actual pressure (say in units of newtons per square meter), we define a new dimensionless quantity called the *pressure coefficient*  $C_p$ :

$$C_p \equiv \frac{p - p_\infty}{q_\infty} \equiv \frac{p - p_\infty}{\frac{1}{2}\rho_\infty V_\infty^2} \quad (5.27)$$

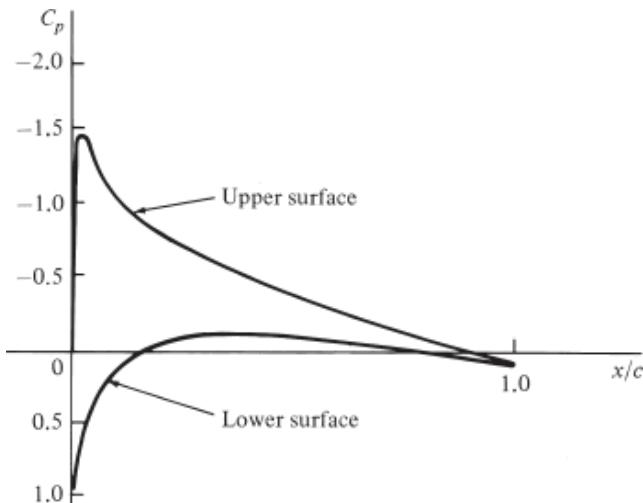

**Figure 5.15** Distribution of pressure coefficient over the top and bottom surfaces of an NACA 0012 airfoil at  $3.93^\circ$  angle of attack.  $M_\infty = 0.345$ ,  $Re = 3.245 \times 10^6$ . Experimental data from Ohio State University, in NACA Conference Publication 2045, part I, *Advanced Technology Airfoil Research*, vol. I, p. 1590.

(Source: After Freuler and Gregorek.)

The pressure distribution is sketched in terms of  $C_p$  in Fig. 5.15. This figure is worth looking at closely because pressure distributions found in the aerodynamic literature are usually given in terms of the dimensionless pressure coefficient. Note from Fig. 5.15 that  $C_p$  at the leading edge is positive because  $p > p_\infty$ . However, as the flow expands around the top surface of the airfoil,  $p$  decreases rapidly, and  $C_p$  goes negative in those regions where  $p < p_\infty$ . By convention, plots of  $C_p$  for airfoils are usually shown with negative values above the abscissa, as shown in Fig. 5.15.


The pressure coefficient is an important quantity; for example, the distribution of  $C_p$  over the airfoil surface leads directly to the value of  $cl$ , as will be discussed in Sec. 5.11. Moreover, considerations of  $C_p$  lead directly to the calculation of the effect of Mach number  $M_\infty$  on the lift coefficient. To set the stage for this calculation, consider  $C_p$  at a given point on an airfoil surface. The airfoil is a given shape at a fixed angle of attack. We can measure the value of  $C_p$  by testing the airfoil in a wind tunnel. Assume that, at first,  $V_\infty$  in the tunnel test section is low, say  $M_\infty < 0.3$ , such that the flow is essentially incompressible. The measured value of  $C_p$  at the point on the airfoil will therefore be a low-speed value. Let us designate the low-speed (incompressible) value of  $C_p$  by  $C_{p,0}$ . If  $V_\infty$  is increased but  $M_\infty$  is still less than 0.3, then  $C_p$  will not change; that is,  $C_p$  is essentially constant with velocity at low speeds. However, if we now increase  $V_\infty$  such that  $M_\infty > 0.3$ , then compressibility becomes a factor, and the effect of compressibility is to increase the absolute magnitude of  $C_p$  as  $M_\infty$  increases. This variation of  $C_p$  with  $M_\infty$  is shown in Fig. 5.16. Note that at  $M_\infty \approx 0$ ,  $C_p = C_{p,0}$ . As  $M_\infty$  increases to  $M_\infty \approx 0.3$ , essentially  $C_p$  is constant. However, as  $M_\infty$  is increased beyond 0.3,  $C_p$  increases dramatically. (That is, the absolute magnitude increases: If  $C_{p,0}$  is negative,  $C_p$  will become an increasingly negative number as  $M_\infty$  increases, whereas if  $C_{p,0}$  is positive,  $C_p$  will become an increasingly positive number as  $M_\infty$  increases.) The variation of  $C_p$  with  $M_\infty$  for high subsonic Mach numbers was a major focus of aerodynamic research after World War II. An approximate theoretical analysis yields

$$C_p = \frac{C_{p,0}}{\sqrt{1 - M_\infty^2}} \quad (5.28)$$

page 318

Equation (5.28) is called the *Prandtl–Glauert rule*. It is reasonably accurate for  $0.3 < M_\infty < 0.7$ . For  $M_\infty > 0.7$ , its accuracy rapidly diminishes; indeed, Eq. (5.28) predicts that  $C_p$  becomes infinite as  $M_\infty$  goes to unity—an impossible physical situation. (Nature abhors infinities as well as discontinuities that are sometimes predicted by mathematical, but approximate, theories in physical science.) There are more accurate, but more complicated, formulas than Eq. (5.28) for near-sonic Mach numbers. However, Eq. (5.28) will be sufficient for our purposes.

Formulas such as Eq. (5.28), which attempt to predict the effect of  $M_\infty$  on  $C_p$  for subsonic speeds, are called *compressibility corrections*; that is, they modify (correct) the low-speed pressure coefficient  $C_{p,0}$  to take into account the effects of compressibility, which are so important at high subsonic Mach numbers.

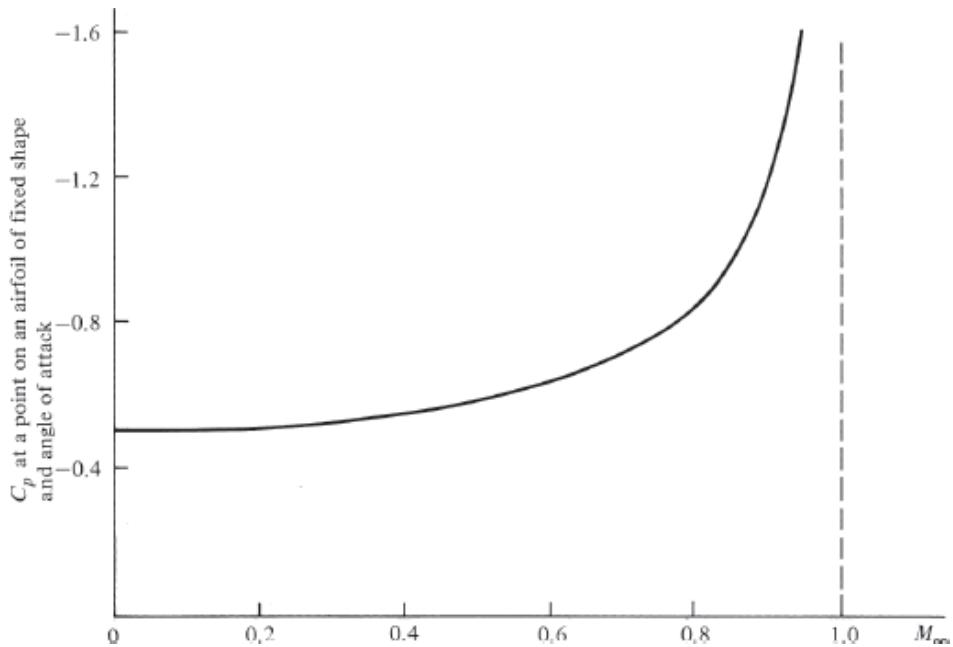

**Figure 5.16** Plot of the Prandtl–Glauert rule for  $C_{p,0} = -0.5$ .

### EXAMPLE 5.11

The pressure at a point on the wing of an airplane is  $7.58 \times 10^4 \text{ N/m}^2$ . The airplane is flying with a velocity of 70 m/s at conditions associated with a standard altitude of 2000 m. Calculate the pressure coefficient at this point on the wing.

#### ■ Solution

page 319

For a standard altitude of 2000 m,

$$p_\infty = 7.95 \times 10^4 \text{ N/m}^2$$

$$\rho_\infty = 1.0066 \text{ kg/m}^3$$

Thus  $q_\infty = \frac{1}{2}\rho_\infty V_\infty^2 = \frac{1}{2}(1.0066)(70)^2 = 2466 \text{ N/m}^2$ . From Eq. (5.27),

$$C_p = \frac{p - p_\infty}{q_\infty} = \frac{(7.58 - 7.95) \times 10^4}{2466}$$

$$\boxed{C_p = -1.5}$$

### EXAMPLE 5.12

Consider an airfoil mounted in a low-speed subsonic wind tunnel. The flow velocity in the test section is 100 ft/s, and the conditions are standard sea level. If

the pressure at a point on the airfoil is 2102 lb/ft<sup>2</sup>, what is the pressure coefficient?

■ Solution

$$q_{\infty} = \frac{1}{2} \rho_{\infty} V_{\infty}^2 = \frac{1}{2} (0.002377 \text{ slug/ft}^3) (100 \text{ ft/s})^2 = 11.89 \text{ lb/ft}^2$$

From Eq. (5.27),

$$C_p = \frac{p - p_{\infty}}{q_{\infty}} = \frac{2102 - 2116}{11.89} = \boxed{-1.18}$$

EXAMPLE 5.13

In Example 5.12, if the flow velocity is increased so that the free-stream Mach number is 0.6, what is the pressure coefficient at the same point on the airfoil?

■ Solution

[page 320](#)

First, what is the Mach number of the flow in Example 5.12? At standard sea level,

$$T_s = 518.69^\circ \text{ R}$$

$$\text{Hence } a_{\infty} = \sqrt{\gamma RT_{\infty}} = \sqrt{1.4(1716)(518.69)} = 1116 \text{ ft/s}$$

Thus, in Example 5.12,  $M_{\infty} = V_{\infty}/a_{\infty} = 100/1116 = 0.09$ —a very low value. Hence the flow in Example 5.12 is essentially incompressible, and the pressure coefficient is a low-speed value; that is,  $C_{p,0} = -1.18$ . If the flow Mach number is increased to 0.6, from the Prandtl–Glauert rule, Eq. (5.28),

$$C_p = \frac{C_{p,0}}{(1 - M_{\infty}^2)^{1/2}} = -\frac{1.18}{(1 - 0.6^2)^{1/2}}$$

$$\boxed{C_p = -1.48}$$

EXAMPLE 5.14

An airplane is flying at a velocity of 100 m/s at a standard altitude of 3 km. The pressure coefficient at a point on the fuselage is  $-2.2$ . What is the pressure at this point?

■ Solution

[page 321](#)

For a standard altitude of 3 km = 3000 m,  $p_{\infty} = 7.0121 \times 10^4 \text{ N/m}^2$ , and  $\rho_{\infty} = 0.90926 \text{ kg/m}^3$ . Thus

$$q_{\infty} = \frac{1}{2}\rho_{\infty}V_{\infty}^2 = \frac{1}{2}(0.90926)(100)^2 = 4546 \text{ N/m}^2$$

From Eq. (5.27),

$$C_p = \frac{p - p_{\infty}}{q_{\infty}}$$

$$\text{or } p = q_{\infty}C_p + p_{\infty} = (4546)(-2.2) + 7.10121 \times 10^4 = 6.01 \times 10^4 \text{ N/m}^2$$

*Note:* This example illustrates a useful physical interpretation of pressure coefficient. The pressure coefficient represents the local pressure in terms of the “number of dynamic pressure units” above or below the free-stream pressure. In this example, the local pressure was found to be  $6.01 \times 10^4 \text{ N/m}^2$ . This value of  $p$  is equivalent to the free-stream pressure minus 2.2 times the dynamic pressure;  $p$  is 2.2 “dynamic pressures” below the free-stream pressure. So, when you see a number for  $C_p$ , that number gives you an instant feel for the pressure itself in terms of multiples of  $q_{\infty}$  above or below the free-stream pressure. In this example,  $C_p$  is negative, so the pressure is below the free-stream pressure. If  $C_p = 1.5$ , the pressure would be 1.5 “dynamic pressures” *above* the free-stream pressure.

### EXAMPLE 5.15

Consider two different points on the surface of an airplane wing flying at 80 m/s. The pressure coefficient and flow velocity at point 1 are  $-1.5$  and 110 m/s, respectively. The pressure coefficient at point 2 is  $-0.8$ . Assuming incompressible flow, calculate the flow velocity at point 2.

#### ■ Solution

From Eq. 5.27,

$$C_{p_1} = \frac{p_1 - p_{\infty}}{q_{\infty}} \quad \text{or} \quad p_1 - p_{\infty} = q_{\infty}C_{p_1}$$

Similarly,

$$C_{p_2} = \frac{p_2 - p_{\infty}}{q_{\infty}} \quad \text{or} \quad p_2 - p_{\infty} = q_{\infty}C_{p_2}$$

Subtracting,

$$p_1 - p_2 = q_{\infty}(C_{p_1} - C_{p_2})$$

From Bernoulli's equation,

$$p_1 + \frac{1}{2}\rho V_1^2 = p_2 + \frac{1}{2}\rho V_2^2$$

$$\text{or } p_1 - p_2 = \frac{1}{2}\rho(V_2^2 - V_1^2)$$

Because  $q_\infty = \frac{1}{2}\rho V_\infty^2$ , we have

$$\frac{p_1 - p_2}{q_\infty} = \left(\frac{V_2}{V_\infty}\right)^2 - \left(\frac{V_1}{V_\infty}\right)^2$$

Substituting the earlier expression for  $p_1 - p_2$  in terms of  $C_{p_1}$  and  $C_{p_2}$ , we [page 322](#) have

$$\frac{q_\infty(C_{p_1} - C_{p_2})}{q_\infty} = \left(\frac{V_2}{V_\infty}\right)^2 - \left(\frac{V_1}{V_\infty}\right)^2$$

or  $C_{p_1} - C_{p_2} = \left(\frac{V_2}{V_\infty}\right)^2 - \left(\frac{V_1}{V_\infty}\right)^2$

*Note:* This expression by itself is interesting. In a low-speed incompressible flow, the difference between the pressure coefficients at two different points is equal to the difference in the squares of the velocities, nondimensionalized by the free-stream velocity, between the two points.

Putting in the numbers, we have

$$\begin{aligned} -1.5 - (-0.8) &= \left(\frac{V_2}{V_\infty}\right)^2 - \left(\frac{110}{80}\right)^2 \\ \left(\frac{V_2}{V_\infty}\right)^2 &= 1.19 \\ V_2^2 &= 1.19V_\infty^2 = 1.19(80)^2 \end{aligned}$$

$$V_2 = 87.3 \text{ m/s}$$

*Note:* The solution did not require explicit knowledge of the density. This is because we dealt with pressure difference in terms of the difference in pressure coefficient, which, in turn, is related to the difference of the squares of the nondimensional velocity through Bernoulli's equation.


---

## 5.7 OBTAINING LIFT COEFFICIENT FROM CP

If you are given the distribution of the pressure coefficient over the top [page 323](#) and bottom surfaces of an airfoil, you can calculate  $cl$  in a straightforward manner. Consider a segment of an infinite wing, as shown in Fig. 5.17. Assume that the segment has unit span and chord  $c$ . The wing is at an angle of attack  $\alpha$ . Let  $x$  be the direction measured along the chord, and let  $s$  be the distance measured along the surface from the leading edge, as shown in Fig. 5.17. Consider the infinitesimally small sliver of surface area of length  $ds$  and unit length in the span direction, as shown by the shaded area in Fig. 5.17. The area of this surface is 1

$ds$ . The dashed line  $ab$  is perpendicular to chord  $c$ . The solid line  $ac$  is locally perpendicular to the shaded area. The angle between  $ab$  and  $ac$  is  $\theta$ . The aerodynamic force on the shaded area is  $p(1) ds$ , which acts in the direction of  $ac$ , normal to the surface. Its component in the direction normal to the chord is  $(p \cos \theta)(1) ds$ . Adding a subscript  $u$  to designate the pressure on the upper surface of the airfoil, as well as a minus sign to indicate that the force is directed downward (we use the convention that a positive force is directed upward), we see that the contribution to the normal force of the pressure on the infinitesimal strip is  $-pu \cos \theta ds$ . If all the contributions from all the strips on the upper surface are added from the leading edge to the trailing edge, we obtain, by letting  $ds$  approach 0, the integral

$$-\int_{LE}^{TE} p_u \cos \theta ds$$

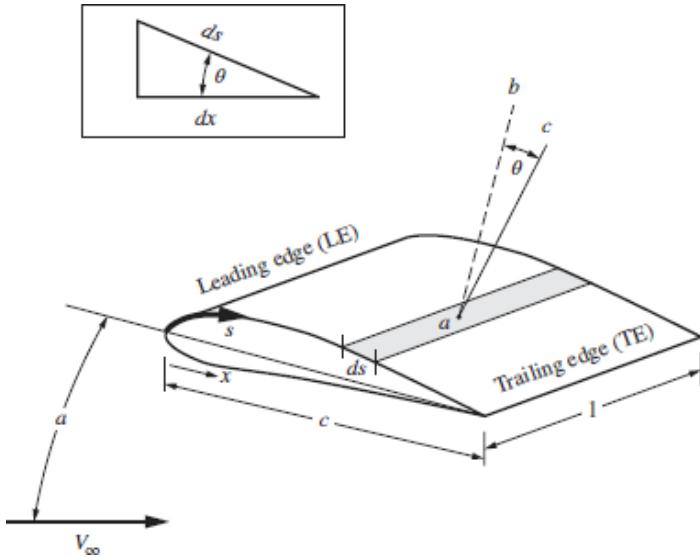

**Figure 5.17** Sketch showing how the pressure distribution can be integrated to obtain normal force per unit span, leading to lift per unit span.

This is the force in the *normal* direction due to the pressure distribution [page 324](#) acting on the upper surface of the wing, per unit span. Recall the definition of normal and axial forces  $N$  and  $A$ , respectively, discussed in Sec. 5.2 and sketched in Fig. 5.4a. The integral just given is the part of  $N$  that is due to the pressure acting on the upper surface. A similar term is obtained that is due to the pressure distribution acting on the lower surface of the airfoil. Letting  $pl$  denote the pressure on the lower surface, we can write for the total normal force acting on an airfoil of unit span

$$N = \int_{LE}^{TE} p_l \cos \theta ds - \int_{LE}^{TE} p_u \cos \theta ds \quad (5.29)$$

From the small triangle in the box in Fig. 5.17, we see the geometric relationship  $ds \cos \theta = dx$ . Thus, in Eq. (5.29) the variable of integration  $s$  can be replaced by  $x$ , and at the same time the  $x$  coordinates of the leading and trailing edges become 0 and  $c$ , respectively. Thus, Eq. (5.29) becomes

$$N = \int_0^c p_l dx - \int_0^c p_u dx \quad (5.30)$$

Adding and subtracting  $p_\infty$ , we find that Eq. (5.30) becomes

$$N = \int_0^c (p_l - p_\infty) dx - \int_0^c (p_u - p_\infty) dx \quad (5.31)$$

Putting Eq. (5.31) on the shelf for a moment, we return to the definition of normal and axial forces  $N$  and  $A$ , respectively, in Fig. 5.4b. We can define the normal and axial force coefficients for an airfoil,  $cn$  and  $ca$ , respectively, in the same manner as the lift and drag coefficients given by Eq. (5.22); that is,

$$c_n = \frac{N}{q_s S} = \frac{N}{q_\infty c} \quad (5.32)$$

$$c_a = \frac{A}{q_s S} = \frac{A}{q_\infty c} \quad (5.33)$$

Hence, the normal force coefficient  $cn$  can be calculated from Eqs. (5.31) and (5.32) as

$$c_n = \frac{1}{c} \int_0^c \frac{p_l - p_\infty}{q_\infty} dx - \frac{1}{c} \int_0^c \frac{p_u - p_\infty}{q_\infty} dx \quad (5.34)$$

Note that

$$\frac{p_l - p_\infty}{q_\infty} \equiv C_{p,l} \equiv \text{pressure coefficient on lower surface}$$

$$\frac{p_u - p_\infty}{q_\infty} \equiv C_{p,u} \equiv \text{pressure coefficient on upper surface}$$

Hence Eq. (5.34) becomes

$c_n = \frac{1}{c} \int_0^c (C_{p,l} - C_{p,u}) dx$

(5.35)

Equation (5.35) gives the normal force coefficient directly in terms of the integral of the pressure coefficient over the surface of the airfoil.

How is this related to the lift coefficient? The answer is given by Eq. [page 325](#) (5.1), repeated here:

$$L = N \cos\alpha - A \sin\alpha \quad (5.1)$$

Dividing Eq. (5.1) by  $q_\infty S = q_\infty c$ , we have

$$\frac{L}{q_\infty c} = \frac{N}{q_\infty c} \cos\alpha - \frac{A}{q_\infty c} \sin\alpha$$

Dividing Eq. (5.1)  $q_\infty S = q_\infty c$ , by we have

or

$$c_l = c_n \cos \alpha - c_a \sin \alpha \quad (5.36)$$

Given  $c_n$  and  $c_a$ , Eq. (5.36) allows the direct calculation of  $c_l$ . Equation (5.35) is an expression for  $c_n$  in terms of the integral of the pressure coefficients. [In Eq. (5.35) we have ignored the influence of shear stress, which contributes very little to normal force.] A similar expression can be obtained for  $c_a$  involving an integral of the pressure coefficient and an integral of the skin friction coefficient. Such an expression is derived in Ch. 1) of Anderson, *Fundamentals of Aerodynamics*, 4th ed., McGraw-Hill, 2007; this is beyond the scope of our discussion here.


Consider the case of small angle of attack—say  $\alpha \leq 5^\circ$ . Then, in Eq. (5.36),  $\cos \alpha \approx 1$  and  $\sin \alpha \approx 0$ . Equation (5.36) yields

$$c_l \approx c_n \quad (5.37)$$

and combining Eqs. (5.37) and (5.35), we have

$$c_l \approx \frac{1}{c} \int_0^c (C_{p,u} - C_{p,l}) dx \quad (5.38)$$

Most conventional airplanes cruise at angles of attack of less than  $5^\circ$ , so for such cases, Eq. (5.38) is a reasonable representation of the lift coefficient in terms of the integral of the pressure coefficient. This leads to a useful graphical construction for  $c_l$ . Consider a combined plot of  $C_{p,u}$  and  $C_{p,l}$  as a function of  $x/c$ , as sketched in Fig. 5.18. The area between these curves is precisely the integral on the right side of Eq. (5.35). Hence, this area, shown as the shaded region in Fig. 5.18, is precisely equal to the normal force coefficient. In turn, for small angles of attack, from Eq. (5.38), this area is essentially the lift coefficient, as noted in Fig. 5.18.

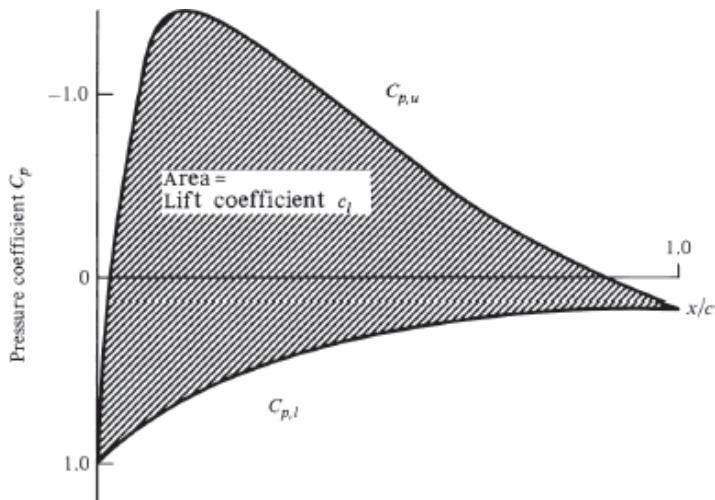

**Figure 5.18** Sketch of the pressure coefficient over the upper and lower surfaces of an airfoil showing that the area between the two curves is the lift coefficient for small angles of attack.

page 326

### EXAMPLE 5.16

Consider an airfoil with chord length  $c$  and the running distance  $x$  measured along the chord. The leading edge is located at  $x/c = 0$  and the trailing edge at  $x/c = 1$ . The pressure coefficient variations over the upper and lower surfaces are given, respectively, as

$$\begin{aligned} C_{p,u} &= 1 - 300\left(\frac{x}{c}\right)^2 && \text{for } 0 \leq \frac{x}{c} \leq 0.1 \\ C_{p,u} &= -2.2277 + 2.2777\frac{x}{c} && \text{for } 0.1 \leq \frac{x}{c} \leq 1.0 \\ C_{p,l} &= 1 - 0.95\frac{x}{c} && \text{for } 0 \leq \frac{x}{c} \leq 1.0 \end{aligned}$$

Calculate the normal force coefficient.

#### ■ Solution

From Eq. (5.35),

$$\begin{aligned} c_n &= \frac{1}{c} \int_0^c (C_{p,l} - C_{p,u}) dx = \int_0^1 (C_{p,l} - C_{p,u}) d\left(\frac{x}{c}\right) \\ c_n &= \int_0^1 \left(1 - 0.95\frac{x}{c}\right) d\left(\frac{x}{c}\right) - \int_0^{0.1} \left[1 - 300\left(\frac{x}{c}\right)^2\right] d\left(\frac{x}{c}\right) \\ &\quad - \int_{0.1}^{1.0} \left(-2.2277 + 2.2777\frac{x}{c}\right) d\left(\frac{x}{c}\right) \\ c_n &= \left. \frac{x}{c} \right|_0^1 - 0.475 \left. \left(\frac{x}{c}\right)^2 \right|_0^1 - \left. \frac{x}{c} \right|_0^{0.1} + 100 \left. \left(\frac{x}{c}\right)^3 \right|_0^{0.1} + 2.2277 \left. \frac{x}{c} \right|_{0.1}^{1.0} - 1.1388 \left. \left(\frac{x}{c}\right)^2 \right|_{0.1}^{1.0} \\ c_n &= 1 - 0.475 - 0.1 + 0.1 + 2.2277 - 0.22277 - 1.1388 + 0.011388 = \boxed{1.40} \end{aligned}$$

Note that the  $C_p$  variations given analytically in this problem are only [page 327](#) crude representations of a realistic case and should not be taken too seriously; the purpose of this example is simply to illustrate the use of Eq. (5.35).

## 5.8 COMPRESSIBILITY CORRECTION FOR LIFT COEFFICIENT

The pressure coefficients in Eq. (5.38) can be replaced by the compressibility correction given in Eq. (5.28), as follows:

$$c_l = \frac{1}{c} \int_0^c \frac{(C_{p,l} - C_{p,u})_0}{\sqrt{1 - M_\infty^2}} dx = \frac{1}{\sqrt{1 - M_\infty^2}} \frac{1}{c} \int_0^c (C_{p,l} - C_{p,u})_0 dx$$

where again the subscript 0 denotes low-speed incompressible flow values. However, referring to the form of Eq. (5.38), we see that

$$\frac{1}{c} \int_0^c (C_{p,l} - C_{p,u})_0 dx \equiv c_{l,0}$$

where  $c_{l,0}$  is the low-speed value of the lift coefficient. Thus, Eq. (5.39) becomes

$$c_l = \frac{c_{l,0}}{\sqrt{1 - M_\infty^2}} \quad (5.40)$$

Equation (5.40) gives the compressibility correction for the lift coefficient. It is subject to the same approximations and accuracy restrictions as the Prandtl–Glauert rule, Eq. (5.28). Also note that the airfoil data in App. D were obtained at low speeds; hence the values of lift coefficient obtained from App. D are  $c_{l,0}$ .

Finally, in reference to Eq. (5.19), we now have a reasonable answer to how  $c_l$  varies with Mach number. For subsonic speeds, except near Mach 1, the lift coefficient varies inversely as  $(1 - M_\infty^2)^{1/2}$ .

### EXAMPLE 5.17

Consider an NACA 4412 airfoil at an angle of attack of  $4^\circ$ . If the free-stream Mach number is 0.7, what is the lift coefficient?

#### ■ Solution

From App. D, for  $\alpha = 4^\circ$ ,  $c_l = 0.83$ . However, the data in App. D were obtained at low speeds; hence the lift coefficient value obtained (0.83) is really  $c_{l,0}$ :

$$c_{l,0} = 0.83$$

For high Mach numbers, this must be corrected according to Eq. (5.40):

$$c_l = \frac{c_{l,0}}{(1 - M_\infty^2)^{1/2}} = \frac{0.83}{(1 - 0.7^2)^{1/2}}$$

$c_l = 1.16$	at $M_\infty = 0.7$
--------------	---------------------

### EXAMPLE 5.18

For the same NACA 4412 airfoil at the same conditions given in Example 5.17, obtain the moment coefficient about the quarter-chord point.

## ■ Solution

As shown in Fig. 5.5, the moments on an airfoil are generated by the [page 328](#) pressure distribution over the surface; the influence of shear stress is negligible. Therefore, the compressibility effect on moment coefficients should be the same as the compressibility effect on pressure coefficient; in other words, the Prandtl–Glauert rule applies to moment coefficients. Thus, we can write

$$c_{m_{d4}} = \frac{(c_{m_{d4}})_o}{\sqrt{1 - M_\infty^2}}$$

where  $(c_{m_{d4}})_o$  is the incompressible value of the moment coefficient and  $c_{m_{d4}}$  is the compressible value of the moment coefficient. From App. D for  $\alpha = 4^\circ$ , we have  $(c_{m_{d4}})_o = -0.99$ . Thus

$$c_{m_{d4}} = \frac{(c_{m_{d4}})_o}{\sqrt{1 - M_\infty^2}} = \frac{-0.99}{\sqrt{1 - (0.7)^2}} = \boxed{-0.126}$$

### EXAMPLE 5.19

Consider an NACA 23012 airfoil in a Mach 0.8 free stream. The lift coefficient is 0.92. What is the angle of attack of the airfoil?

## ■ Solution

The value of  $c_\ell = 0.92$  is the real, compressible value at  $M_\infty = 0.8$ . In turn, the equivalent incompressible value is found from

$$c_\ell = \frac{c_{\ell,o}}{\sqrt{1 - M_\infty^2}}$$

$$\text{or } c_{\ell,o} = c_\ell \sqrt{1 - M_\infty^2} = 0.92 \sqrt{1 - (0.8)^2} = 0.92 (0.6) = 0.552$$

The incompressible value is what is plotted in App. D. Hence, for App. D, for  $c_{\ell,o} = 0.552$ ,

$$\boxed{\alpha = 4^\circ}$$


## 5.9 CRITICAL MACH NUMBER AND CRITICAL PRESSURE COEFFICIENT

Consider the flow of air over an airfoil. We know that as the gas expands around the top surface near the leading edge, the velocity and hence the Mach number will increase rapidly. Indeed, there are regions on the airfoil surface where the


local Mach number can be greater than  $M_\infty$ . Imagine that we put a given airfoil in a wind tunnel where  $M_\infty = 0.3$  and that we observe the peak local Mach number on the top surface of the airfoil to be 0.435. This is sketched in Fig. 5.19a. Imagine that we now increase  $M_\infty$  to 0.5; the peak local Mach number will correspondingly increase to 0.772, as shown in Fig. 5.19b. If we further increase  $M_\infty$  to a value of 0.61, we observe that the peak local Mach number is 1.0: locally sonic flow on the surface of the airfoil. This is sketched in Fig. 5.19c. Note that the flow over an airfoil can locally be sonic (or higher) even though the free-stream Mach number is subsonic. By definition, the free-stream Mach number at which sonic flow is first obtained somewhere on the airfoil surface is called the *critical Mach number* of the airfoil. In the preceding example, the critical Mach number  $M_{cr}$  for the airfoil is 0.61. As we will see later,  $M_{cr}$  is an important quantity because at some free-stream Mach number above  $M_{cr}$  the airfoil will experience a dramatic increase in drag.

Returning to Fig. 5.19, we see that the point on the airfoil where the page 329 local  $M$  is a peak value is also the point of minimum surface pressure. From the definition of the pressure coefficient, Eq. (5.27),  $C_p$  will correspondingly have its most negative value at this point. Moreover, according to the Prandtl–Glauert rule, Eq. (5.28), as  $M_\infty$  is increased from 0.3 to 0.61, the value of  $C_p$  at this point will become increasingly negative. This is sketched in Fig. 5.20. The specific value of  $C_p$  that corresponds to sonic flow is defined as the *critical pressure coefficient*  $C_{p,cr}$ . In Fig. 5.19a and 5.19b,  $C_p$  at the minimum pressure point on the airfoil is less negative than  $C_{p,cr}$ ; however, in Fig. 5.19c,  $C_p = C_{p,cr}$  (by definition).

Consider now three different airfoils ranging from thin to thick, as page 330 shown in Fig. 5.21. Concentrate first on the thin airfoil. Because of the thin, streamlined profile, the flow over the thin airfoil is only slightly perturbed from its free-stream values. The expansion over the top surface is mild; the velocity increases only slightly; the pressure decreases only a relatively small amount; and hence the magnitude of  $C_p$  at the minimum pressure point is small. Thus, the variation of  $C_p$  with  $M_\infty$  is shown as the bottom curve in Fig. 5.21. For the thin airfoil,  $C_{p,0}$  is small in magnitude, and the rate of increase of  $C_p$  as  $M_\infty$  increases is also relatively small. In fact, because the flow expansion over the thin airfoil surface is mild,  $M_\infty$  can be increased to a large subsonic value before sonic flow is encountered on the airfoil surface. The point corresponding to sonic flow conditions on the thin airfoil is labeled point  $a$  in Fig. 5.21. The values of  $C_p$  and  $M_\infty$  at point  $a$  are  $C_{p,cr}$  and  $M_{cr}$ , respectively, for the thin airfoil, by definition.

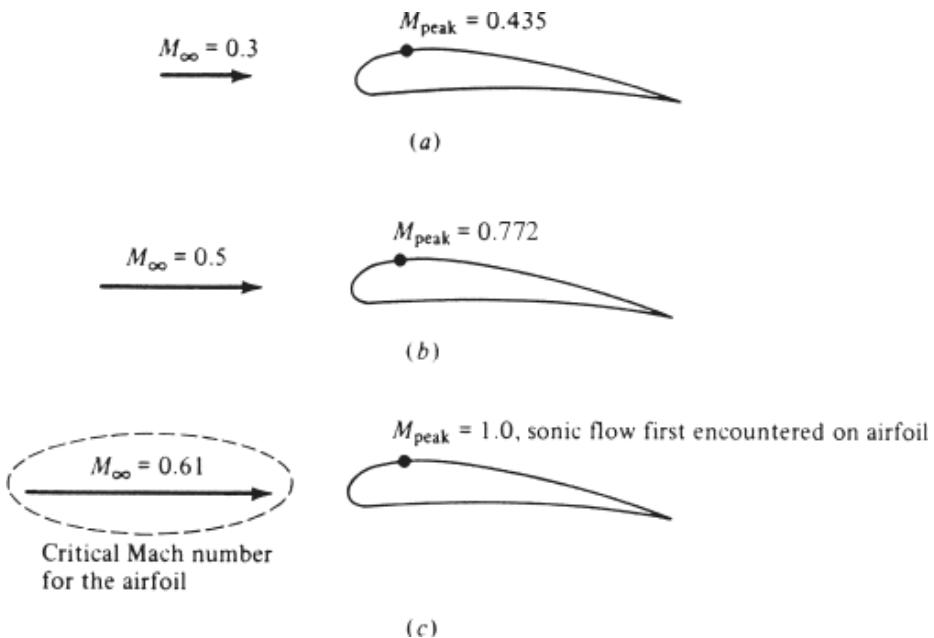

**Figure 5.19** Illustration of critical Mach number.

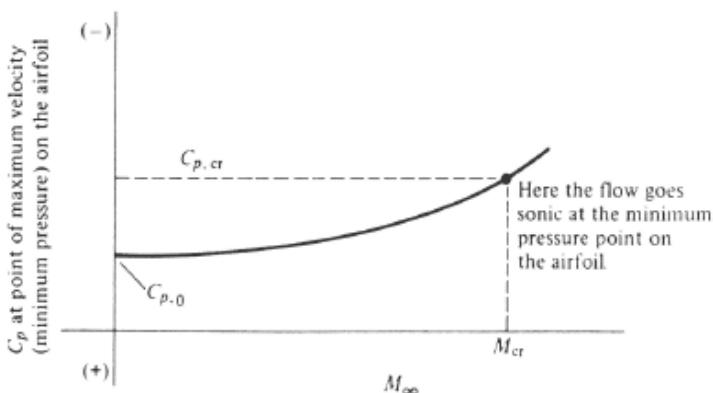


**Figure 5.20** Illustration of critical pressure coefficient.

Now consider the airfoil of medium thickness. The flow expansion over the leading edge for this medium airfoil will be stronger; the velocity will increase to larger values; the pressure will decrease to lower values; and the absolute magnitude of  $C_p$  is larger. Thus, the pressure coefficient curve for the medium-thickness airfoil will lie above that for a thin airfoil, as demonstrated in Fig. 5.21. Moreover, because the flow expansion is stronger, sonic conditions will be obtained sooner (at a lower  $M_\infty$ ). Sonic conditions for the medium airfoil are labeled as point *b* in Fig. 5.21. Note that point *b* is to the left of point *a*; that is, the critical Mach number for the medium-thickness airfoil is less than  $M_{cr}$  for the thin airfoil. The same logic holds for the pressure coefficient curve for the thick airfoil,

where  $C_{p,\text{cr}}$  and  $M_{\text{cr}}$  are given by point  $c$ . We emphasize that the thinner airfoils have higher values of  $M_{\text{cr}}$ . As we will see, this is desirable; that is why all airfoils on modern, high-speed airplanes are relatively thin.

The pressure coefficient curves in Fig. 5.21 are shown as solid curves. On these curves, only points  $a$ ,  $b$ , and  $c$  are critical pressure coefficients, by definition. However, these critical points by themselves form a locus represented by the dotted curve in Fig. 5.21; that is, the critical pressure coefficients themselves are given by a curve of  $C_{p,\text{cr}} = f(M_{\infty})$ , as labeled in Fig. 5.21. Let us proceed to derive this function. It is an important result, and it also represents an interesting application of our aerodynamic relationships developed in Ch. 4).

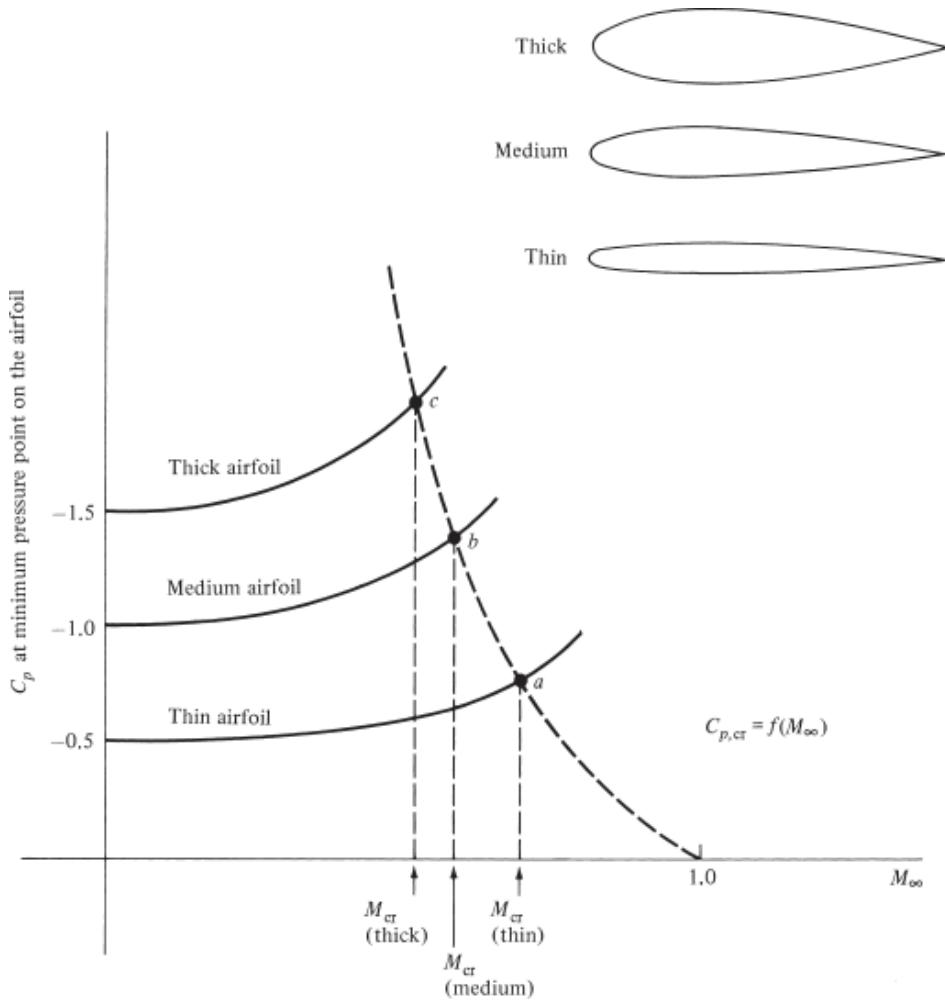

**Figure 5.21** Critical pressure coefficient and critical Mach numbers for airfoils of different thicknesses.

First consider the definition of  $C_p$  from Eq. (5.27):

$$C_p = \frac{P - P_\infty}{q_\infty} = \frac{P_\infty}{q_\infty} \left( \frac{P}{P_\infty} - 1 \right) \quad (5.41)$$

page 331

From the definition of dynamic pressure,

$$q_{\infty} \equiv \frac{1}{2} \rho_{\infty} V_{\infty}^2 = \frac{1}{2} \frac{\rho_{\infty}}{\gamma p_{\infty}} (\gamma p_{\infty}) V_{\infty}^2 = \frac{1}{2} \frac{V_{\infty}^2}{\gamma p_{\infty}/\rho_{\infty}} (\gamma p_{\infty})$$

However, from Eq. (4.53), (4.53),  $a_{\infty}^2 = \gamma p_{\infty}/\rho_{\infty}$ . Thus

$$q_{\infty} = \frac{1}{2} \frac{V_{\infty}^2}{a_{\infty}^2} \gamma p_{\infty} = \frac{\gamma}{2} p_{\infty} M_{\infty}^2 \quad (5.42)$$

We will return to Eq. (5.42) in a moment. Now recall Eq. (4.74) for isentropic flow:

$$\frac{p_0}{p} = \left( 1 + \frac{\gamma - 1}{2} M^2 \right)^{\gamma/(\gamma-1)}$$

This relates the total pressure  $p_0$  at a point in the flow to the static [page 332](#) pressure  $p$  and local Mach number  $M$  at the same point. Also, from the same relation,

$$\frac{p_0}{p_{\infty}} = \left( 1 + \frac{\gamma - 1}{2} M_{\infty}^2 \right)^{\gamma/(\gamma-1)}$$

This relates the total pressure  $p_0$  in the free stream to the free-stream static pressure  $p_{\infty}$  and Mach number  $M_{\infty}$ . For an isentropic flow, which is a close approximation to the actual, real-life, subsonic flow over an airfoil, the total pressure remains constant throughout. (We refer to more advanced books in aerodynamics for proof of this fact.) Thus, if the two previous equations are divided,  $p_0$  will cancel, yielding

$$\frac{p}{p_{\infty}} = \left[ \frac{1 + \frac{1}{2}(\gamma - 1)M_{\infty}^2}{1 + \frac{1}{2}(\gamma - 1)M^2} \right]^{\gamma/(\gamma-1)} \quad (5.43)$$

Substitute Eqs. (5.42) and (5.43) into Eq. (5.41):

$$C_p = \frac{p_{\infty}}{q_{\infty}} \left( \frac{p}{p_{\infty}} - 1 \right) = \frac{p_{\infty}}{\frac{1}{2} \gamma p_{\infty} M_{\infty}^2} \left\{ \left[ \frac{1 + \frac{1}{2}(\gamma - 1)M_{\infty}^2}{1 + \frac{1}{2}(\gamma - 1)M^2} \right]^{\gamma/(\gamma-1)} - 1 \right\} \quad (5.44)$$

$$C_p = \frac{2}{\gamma M_{\infty}^2} \left\{ \left[ \frac{1 + \frac{1}{2}(\gamma - 1)M_{\infty}^2}{1 + \frac{1}{2}(\gamma - 1)M^2} \right]^{\gamma/(\gamma-1)} - 1 \right\}$$

For a given free-stream Mach number  $M_{\infty}$ , Eq. (5.44) relates the local value of  $C_p$  to the local  $M$  at any given point in the flow field and hence at any given point on

the airfoil surface. Let us pick the particular point on the surface where  $M = 1$ . Then, by definition,  $C_p = C_{p,\text{cr}}$ . Putting  $M = 1$  into Eq. (5.44), we obtain

$$C_{p,\text{cr}} = \frac{2}{\gamma M_\infty^2} \left\{ \left[ \frac{2 + (\gamma - 1)M_\infty^2}{\gamma + 1} \right]^{\frac{\gamma}{\gamma-1}} - 1 \right\} \quad (5.45)$$

Equation (5.45) gives the desired relation  $C_{p,\text{cr}} = f(M_\infty)$ . When numbers are fed into Eq. (5.45), the dotted curve in Fig. 5.21 results. Note that as  $M_\infty$  increases,  $C_{p,\text{cr}}$  decreases.

**Commentary** Pause for a moment, and let us review what all this means. [page 333](#)  
In the author's experience, the concepts of critical Mach number and critical pressure coefficients are difficult for the first-time reader to fully understand. So let us elaborate. Equations (5.44) and (5.45) are strictly *aerodynamics*; they have nothing to do with the shape or angle of attack of a given airfoil. Indeed, Eq. (5.44) for a compressible flow plays a role analogous to that of Bernoulli's equation for an incompressible flow. For an incompressible flow, Bernoulli's equation, Eq. (4.9), written between the free-stream point where the pressure and velocity are  $p_\infty$  and  $V_\infty$ , respectively, and another arbitrary point in the flow field where the pressure and velocity are  $p$  and  $V$ , respectively, is

$$p - p_\infty = \frac{1}{2} \rho (V_\infty^2 - V^2) \quad (5.46)$$

For the given free-stream conditions of  $p_\infty$  and  $V_\infty$ , at any other point in the incompressible flow where the local velocity is  $V$ , the pressure  $p$  at that point is obtained from Eq. (5.46). Now focus on Eq. (5.44). Here we are dealing with a *compressible flow*, where Mach number rather than velocity plays the controlling role. For the given free-stream  $M_\infty$ , at any other point in the compressible flow where the local Mach number is  $M$ , the pressure coefficient at that point is obtained from Eq. (5.44); hence the analogy with Bernoulli's equation. This in turn reflects on Eq. (5.45). Consider a flow with a free-stream Mach number  $M_\infty$ . Assume that at some local point in this flow, the local Mach number is 1. Equation (5.45) gives the value of the pressure coefficient at this local point where we have Mach 1. Again we define the value of the pressure coefficient at a point where  $M = 1$  as the *critical* pressure coefficient  $C_{p,\text{cr}}$ . Hence, when  $M$  in Eq. (5.44) is set equal to 1, the corresponding value of the pressure coefficient at that same point where  $M = 1$  is, *by definition*, the *critical* pressure coefficient. It is given by Eq. (5.45), obtained by setting  $M = 1$  in Eq. (5.44). If we graph the function given in Eq. (5.45)—that is, if we make a plot of  $C_{p,\text{cr}}$  versus  $M_\infty$ —we obtain the dashed curve in Fig. 5.21.

The fact that  $Cp_{cr}$  decreases as  $M_\infty$  increases makes physical sense. For example, consider a free stream at  $M_\infty = 0.5$ . To expand this flow to Mach 1 requires a relatively large pressure change  $p - p_\infty$  and therefore a relatively large (in magnitude) pressure coefficient because, by definition,  $Cp = (p - p_\infty)/q_\infty$ . However, consider a free stream at  $M_\infty = 0.9$ . To expand this flow to Mach 1 requires a much smaller pressure change; that is,  $p - p_\infty$  is much smaller in magnitude. Hence, the pressure coefficient  $Cp = (p - p_\infty)/q_\infty$  will be smaller in magnitude. As a result,  $Cp_{cr}$  decreases with  $M_\infty$ , as shown by the dashed curve in Fig. 5.21. Moreover, this dashed curve is a fixed “universal” curve—it is simply rooted in pure aerodynamics, independent of any given airfoil shape or angle of attack.

**How to Estimate the Critical Mach Number for an Airfoil** Consider a given airfoil at a given angle of attack. How can we estimate the critical Mach number for this airfoil at the specified angle of attack? We will discuss two approaches to the solution: a graphical solution and an analytical solution.


The graphical solution involves several steps:

page 334

1. Obtain a plot of  $Cp_{cr}$  versus  $M_\infty$  from Eq. (5.45). This is illustrated by curve *A* in Fig. 5.22. As discussed previously, this curve is a fixed “universal” curve that you can use for all such problems.
2. For low-speed, essentially incompressible flow, obtain the value of the *minimum* pressure coefficient on the surface of the airfoil. The minimum pressure coefficient corresponds to the point of maximum velocity on the airfoil surface. This minimum value of  $Cp$  must be given to you from either experimental measurement or theory. This is  $Cp_0$  shown as point *B* in Fig. 5.22.
3. Using Eq. (5.28), plot the variation of this minimum coefficient versus  $M_\infty$ . This is illustrated by curve *C* in Fig. 5.22.
4. Where curve *C* intersects curve *A*, the minimum pressure coefficient on the surface of the airfoil is equal to the critical pressure coefficient. This intersection point is denoted by point *D* in Fig. 5.22. For the conditions associated with this point, the maximum velocity on the airfoil surface is exactly sonic. The value of  $M_\infty$  at point *D* is then, by definition, the critical Mach number.

The analytical solution for  $M_{cr}$  is obtained as follows. Equation (5.28), repeated here, gives the variation of  $Cp$  at a given point on the airfoil surface as a function of  $M_\infty$ :

$$C_p = \frac{C_{p,0}}{\sqrt{1 - M_\infty^2}} \quad (5.28)$$

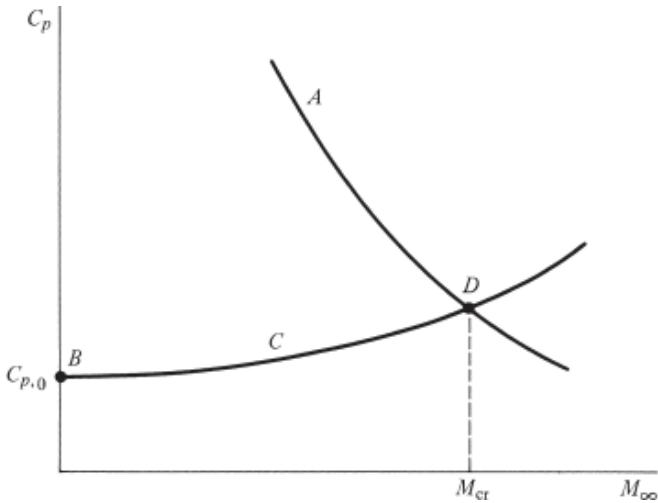

**Figure 5.22** Determination of critical Mach number.

At some location on the airfoil surface,  $C_{p,0}$  will be a minimum value corresponding to the point of maximum velocity on the surface. The value of the minimum pressure coefficient will increase in absolute magnitude as  $M_\infty$  is increased, owing to the compressibility effect discussed in Sec. 5.6. Hence, Eq. (5.28) with  $C_{p,0}$  being the *minimum* value on the surface of the airfoil at essentially incompressible flow conditions ( $M_\infty < 0.3$ ) gives the value of the minimum pressure coefficient at a higher Mach number  $M_\infty$ . However, at some value of  $M_\infty$ , the flow velocity will become sonic at the point of minimum pressure coefficient. The value of the pressure coefficient at sonic conditions is the critical pressure coefficient, given by Eq. (5.45). When the flow becomes sonic at the point of minimum pressure, the pressure coefficient given by Eq. (5.28) is precisely the value given by Eq. (5.45). Equating these two relations, we have

$$\frac{C_{p,0}}{\sqrt{1 - M_\infty^2}} = \frac{2}{\gamma M_\infty^2} \left\{ \left[ \frac{2 + (\gamma - 1)M_\infty^2}{\gamma + 1} \right]^{\frac{\gamma}{\gamma-1}} - 1 \right\} \quad (5.47) \text{ page 335}$$

The value of  $M_\infty$  that satisfies Eq. (5.47) is the value at which the flow becomes sonic at the point of maximum velocity (minimum pressure). That is, the value of  $M_\infty$  obtained from Eq. (5.47) is the critical Mach number for the airfoil. To emphasize this, we write Eq. (5.47) with  $M_\infty$  replaced by  $M_{cr}$ :

$$\boxed{\frac{C_{p,0}}{\sqrt{1 - M_{cr}^2}} = \frac{2}{\gamma M_{cr}^2} \left\{ \left[ \frac{2 + (\gamma - 1)M_{cr}^2}{\gamma + 1} \right]^{\frac{\gamma}{\gamma-1}} - 1 \right\}} \quad (5.48)$$

Equation (5.48) allows a direct analytical estimate for the critical Mach number of a given airfoil at a given angle of attack. Note that Eq. (5.48) must be solved implicitly for  $M_{\text{cr}}$ —for example, by trial and error, guessing at a value of  $M_{\text{cr}}$ , seeing if it satisfies Eq. (5.48), and then trying again.

Please note that Eq. (5.48) is simply an analytical representation of point  $D$  in Fig. 5.22, where curves  $A$  and  $C$  intersect.


### EXAMPLE 5.20

Consider the NACA 0012 airfoil, the shape of which is shown at the top of Fig. 5.23. The pressure coefficient distribution over the surface of the airfoil at a zero angle of attack is shown at the bottom of Fig. 5.23. These are low-speed values measured in a wind tunnel at  $\text{Re} = 3.65 \times 10^6$ . From this information, estimate the critical Mach number of the NACA 0012 airfoil at a zero angle of attack.

#### ■ Solution

First we will carry out a graphical solution, and then we will check the answer by carrying out an analytical solution.

##### a. Graphical solution

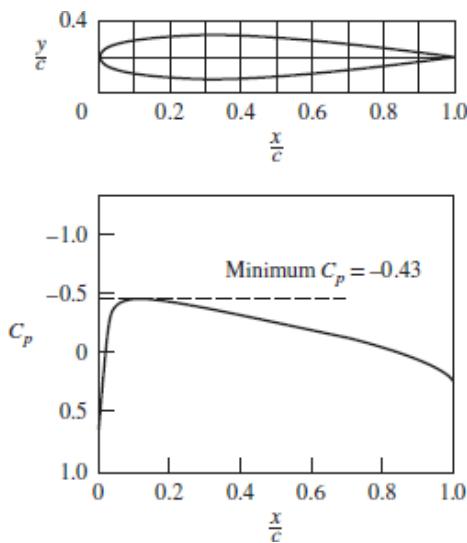

**Figure 5.23** Low-speed pressure coefficient distribution over the surface of an NACA 0012 airfoil at zero angle of attack.  $\text{Re} = 3.65 \times 10^6$ .

(Source: After R. J. Freuler and G. M. Gregorek, “An Evaluation of Four Single Element Airfoil Analytical Methods,” in Advanced Technology Airfoil Research, NASA CP 2045, 1978, pp. 133–162.)

Let us accurately plot the curve of  $Cp_{\text{cr}}$  versus  $M_{\infty}$ , represented by [page 336](#) curve  $A$  in Fig. 5.22. From Eq. (5.45), repeated here,

$$C_{p,\text{cr}} = \frac{2}{\gamma M_\infty^2} \left\{ \left[ \frac{2 + (\gamma - 1)M_\infty^2}{\gamma + 1} \right]^{\frac{\gamma}{\gamma-1}} - 1 \right\}$$

for  $\gamma = 1.4$ , we can tabulate


$M_\infty$	0.4	0.5	0.6	0.7	0.8	0.9	1.0
$C_{p,\text{cr}}$	-3.66	-2.13	-1.29	-0.779	-0.435	-0.188	0

The curve generated by these numbers is given in Fig. 5.24, labeled curve A.

Next let us measure the minimum  $C_p$  on the surface of the airfoil from Fig. 5.23; this value is  $(C_p)_{\min} = -0.43$ . The experimental values for pressure coefficient shown in Fig. 5.23 are for low-speed, essentially incompressible flow. Hence in Eq. (5.28),  $(C_{p,0})_{\min} = -0.43$ . As the Mach number is increased, the location of the point of minimum pressure stays essentially the same, but the value of the minimum pressure coefficient varies according to Eq. (5.28). Hence

$$(C_p)_{\min} = \frac{(C_{p,0})_{\min}}{\sqrt{1 - M_\infty^2}} = \frac{-0.43}{\sqrt{1 - M_\infty^2}}$$

page 337

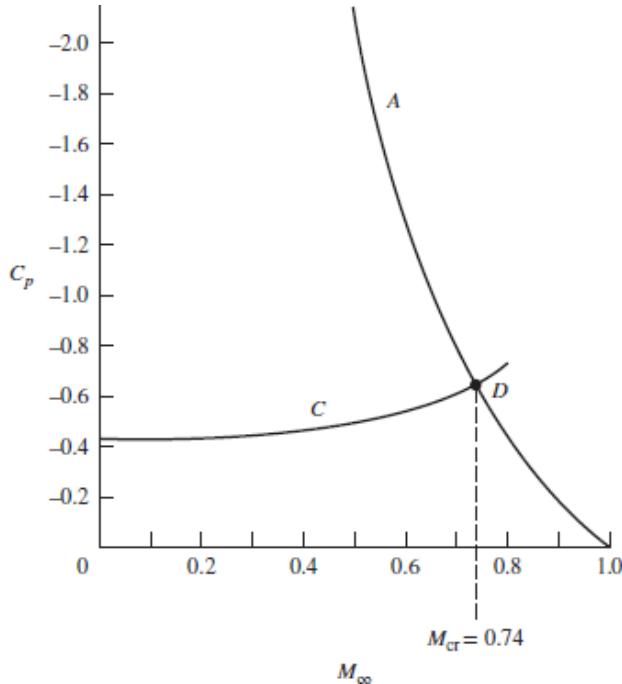

**Figure 5.24** Graphical solution for the critical Mach number, from Example 5.20.

Some values of  $(C_p)_{\min}$  are tabulated in the following:

$M_\infty$	0	0.2	0.4	0.6	0.8
$(C_p)_{\min}$	-0.43	-0.439	-0.469	-0.538	-0.717

The curve generated by these numbers is given in Fig. 5.24, labeled curve  $C$ . The intersection of curves  $A$  and  $C$  is at point  $D$ . The free-stream Mach number associated with point  $D$  is the critical Mach number. From Fig. 5.24, we have

$$M_{cr} = 0.74$$

### b. Analytical solution

Solve Eq. (5.48) for  $M_{cr}$ , with  $Cp,0 = -0.43$ . We can do this by trial and error. Assume different values for  $M_{cr}$ , and find by iteration the value that satisfies Eq. (5.48):

$M_{cr}$	$\frac{-0.43}{\sqrt{1 - M_{cr}^2}}$	$\frac{2}{\gamma M_{cr}^2} \left\{ \left[ \frac{2 + (\gamma - 1)M_{cr}^2}{\gamma + 1} \right]^{\gamma/(\gamma-1)} - 1 \right\}$
0.72	-0.6196	-0.6996
0.73	-0.6292	-0.6621
0.74	-0.6393	-0.6260
0.738	-0.6372	-0.6331
0.737	-0.6362	-0.6367
0.7371	<b>-0.6363</b>	<b>-0.6363</b>


To four-place accuracy, when  $M_{cr} = 0.7371$ , both the left and right sides of Eq. (5.48) agree, also to four-place accuracy. Hence, from the analytical solution, we have

$$M_{cr} = 0.7371$$

*Note:* Compare the results from the graphical solution and the analytical solution. To the two-place accuracy of the graphical solution, both answers agree.

*Question:* How accurate is the estimate of the critical Mach number [page 338](#) obtained in Example 5.20? The pressure coefficient data in Fig. 5.25a and b provide an answer. Wind tunnel measurements of the surface pressure distributions on an NACA 0012 airfoil at a zero angle of attack in a high-speed flow are shown in Fig. 5.25; for Fig. 5.25a,  $M_\infty = 0.575$ , and for Fig. 5.25b,  $M_\infty = 0.725$ . In Fig. 5.25a, the value of  $Cp_{cr} = -1.465$  at  $M_\infty = 0.575$  is shown as the dashed horizontal line. From the definition of critical pressure coefficient, any local value of  $Cp$  above this horizontal line corresponds to locally supersonic flow, and any local value below the horizontal line corresponds to locally subsonic flow. Clearly, from the measured surface pressure coefficient distribution at  $M_\infty = 0.575$  shown in Fig. 5.25a, the flow is locally subsonic at every point on the surface.

Hence,  $M_\infty = 0.575$  is *below* the critical Mach number. In Fig. 5.25b, which is for a higher Mach number, the value of  $C_{p,\text{cr}} = -0.681$  at  $M_\infty = 0.725$  is shown as the dashed horizontal line. Here the local pressure coefficient is higher than  $C_{p,\text{cr}}$  at every point on the surface *except* at the point of minimum pressure, where  $(C_p)_{\min}$  is essentially equal to  $C_{p,\text{cr}}$ . This means that for  $M_\infty = 0.725$ , the flow is locally subsonic at every point on the surface *except* the point of minimum pressure, where the flow is essentially sonic. These experimental measurements indicate that the critical Mach number of the NACA 0012 airfoil at a zero angle of attack is approximately 0.73. Comparing this experimental result with the calculated value of  $M_{\text{cr}} = 0.74$  from Example 5.20, we see that our calculations are amazingly accurate, to within about 1 percent.

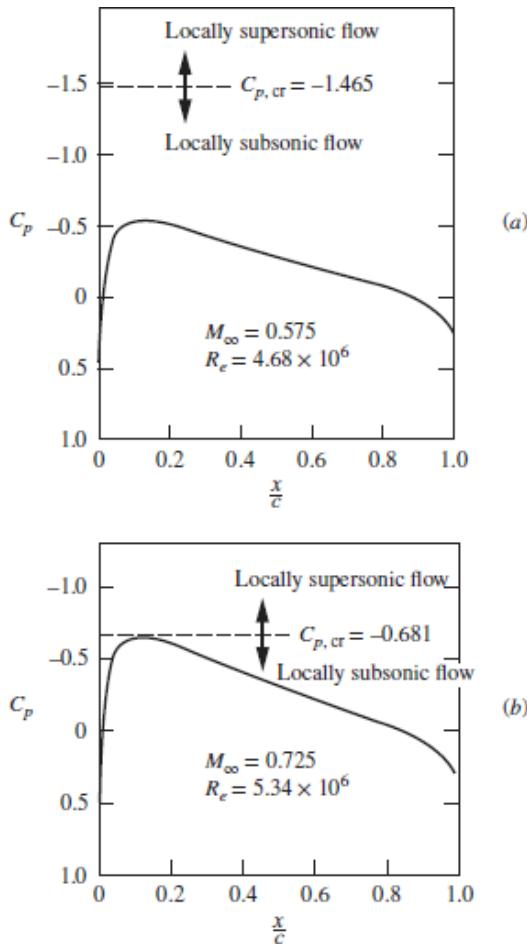

**Figure 5.25** Wind tunnel measurements of surface pressure coefficient distribution for the NACA 0012 airfoil at a zero angle of attack.

(Source: *Experimental data of Frueler and Gregorek, NASA CP 2045* (a)  $M_\infty = 0.575$ , (b)  $M_\infty = 0.725$ .)


**Location of Point of Maximum Velocity (Minimum Pressure)** One final observation in this section can be made from studying the pressure coefficient distributions, shown in Figs. 5.23 and 5.25, and the shape of the NACA 0012 airfoil, shown at the top of Fig. 5.23. Note that the minimum pressure (hence maximum velocity) does *not* occur at the location of maximum thickness of the airfoil. From the airfoil shape given in Fig. 5.23, the maximum thickness is at  $x/c = 0.3$ . From the surface pressure coefficient distributions shown in Figs. 5.23 and 5.25, the point of minimum pressure (maximum velocity) on the surface is at  $x/c = 0.11$ , considerably ahead of the point of maximum thickness. Your intuition might at first suggest that the point of maximum velocity (minimum pressure) might be at the point of maximum thickness, but this intuition is wrong. Nature places the maximum velocity at a point that satisfies the physics of the *whole flow field*, not just what is happening in a local region of flow. The point of maximum velocity is dictated by the *complete* shape of the airfoil, not just by the shape in a local region.

## 5.10 DRAG–DIVERGENCE MACH NUMBER


We now turn our attention to the airfoil drag coefficient  $cd$ . Figure 5.26 page 340 sketches the variation of  $cd$  with  $M_\infty$ . At low Mach numbers, less than  $M_{cr}$ ,  $cd$  is virtually constant and is equal to its low-speed value given in App. D. The flow field about the airfoil for this condition (say point *a* in Fig. 5.26) is noted in Fig. 5.27a, where  $M < 1$  everywhere in the flow. If  $M_\infty$  is increased slightly above  $M_{cr}$ , a “bubble” of supersonic flow will occur, surrounding the minimum pressure point, as shown in Fig. 5.27b. Correspondingly,  $cd$  will still remain reasonably low, as indicated by point *b* in Fig. 5.26. However, if  $M_\infty$  is still further increased, a very sudden and dramatic rise in the drag coefficient will be observed, as noted by point *c* in Fig. 5.26. Here shock waves suddenly appear in the flow, as sketched in Fig. 5.27c. The effect of the shock wave on the surface pressure distribution can be seen in the experimental data given in Fig. 5.28. Here the surface pressure coefficient is given for an NACA 0012 airfoil at a zero angle of attack in a free stream with  $M_\infty = 0.808$ . (Figure 5.28 is a companion figure to Figs. 5.23 and 5.25.) Comparing the result of Example 5.20 and the data shown in Fig. 5.25b, we know that  $M_\infty = 0.808$  is *above* the critical Mach number for the NACA 0012 airfoil at a zero angle of attack. The pressure distribution in Fig. 5.28 clearly shows that fact; the shape of the pressure distribution curve is quite different from that in the previous figures. The dashed horizontal line in Fig. 5.28 corresponds to the value of  $Cp_{,cr}$  at  $M_\infty = 0.808$ . Note that the flow velocity at the surface is locally supersonic in the region  $0.11 < x/c < 0.45$ . Recall from our discussion of shock waves in Sec. 4.11.3 that the pressure increases and the velocity decreases

across a shock wave. We clearly see these phenomena in Fig. 5.28; the large and rather sudden increase in pressure at  $x/c = 0.45$  indicates the presence of a shock wave at that location, and the flow velocity drops from supersonic in front of the shock to subsonic behind the shock. (The drop in velocity to *subsonic* behind the shock, rather than just a decrease to a smaller supersonic value, is a characteristic of shock waves that are essentially normal to the flow, as occurs here.)

The shock waves themselves are dissipative phenomena that increase drag on the airfoil. But in addition, the sharp pressure increase across the shock waves creates a strong adverse pressure gradient, causing the flow to separate from the surface. As discussed in Sec. 4.20, such flow separation can create substantial increases in drag. Thus, the sharp increase in  $cd$  shown in Fig. 5.26 is a combined effect of shock waves and flow separation. The *free-stream* Mach number at which  $cd$  begins to increase rapidly is defined as the *drag-divergence Mach number* and is noted in Fig. 5.26. Note that

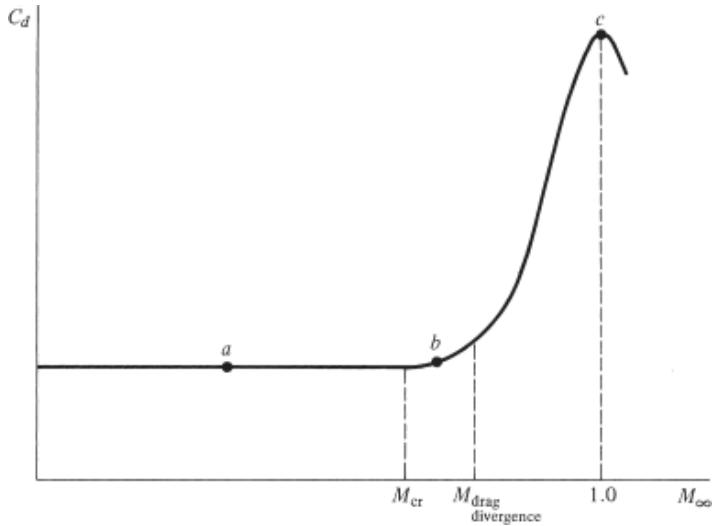


**Figure 5.26** Variation of drag coefficient with Mach number.

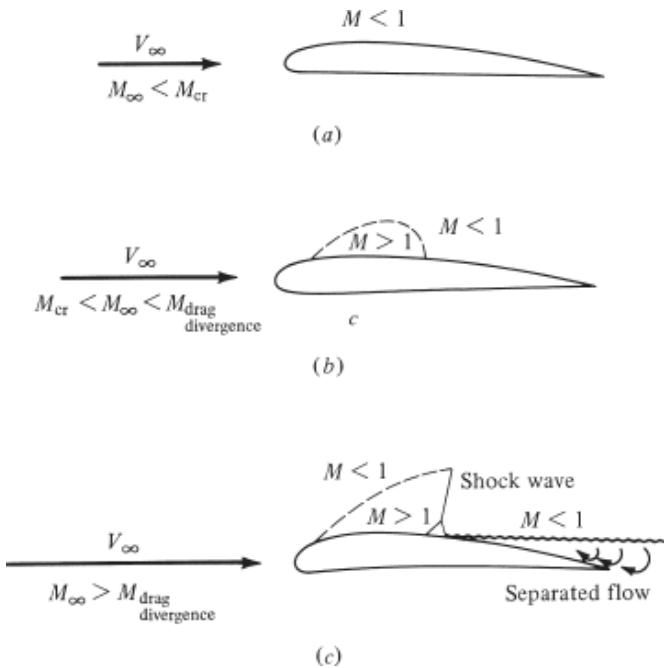

**Figure 5.27** Physical mechanism of drag divergence.

[page 341](#)

- Flow field associated with point *a* in Fig. 5.26.
- Flow field associated with point *b* in Fig. 5.26.
- Flow field associated with point *c* in Fig. 5.26.

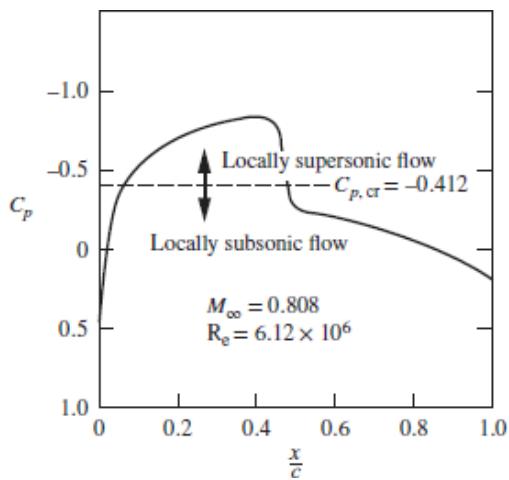


**Figure 5.28** Wind tunnel measurements of the surface pressure coefficient distribution for the NACA 0012 airfoil at a zero angle of attack for  $M_{\infty} = 0.808$ , which is above the critical Mach number.

[page 342](#)

(Source: Experimental data are from Freuler and Gregorek, NASA 2045, and are a companion to the data shown in Figs. 5.23 and 5.25.)

$$M_{cr} < M_{\text{drag divergence}} < 1.0$$

The shock pattern sketched in Fig. 5.27c is characteristic of a flight regime called *transonic*. When  $0.8 \leq M_\infty \leq 1.2$ , the flow is generally designated as transonic flow, and it is characterized by some very complex effects only hinted at in Fig. 5.27c. To reinforce these comments, Fig. 5.29 shows the variation of both  $c_l$  and  $c_d$  as a function of Mach number with angle of attack as a parameter. The airfoil is a standard NACA 2315 airfoil. Figure 5.29, which shows actual wind tunnel data, illustrates the massive transonic flow effects on both lift and drag coefficients. The analysis of transonic flows has been one of the major challenges in modern aerodynamics. Only in recent years, since about 1970, have computer solutions for transonic flows over airfoils come into practical use; these numerical solutions are still in a state of development and improvement. Transonic flow has been a hard nut to crack.

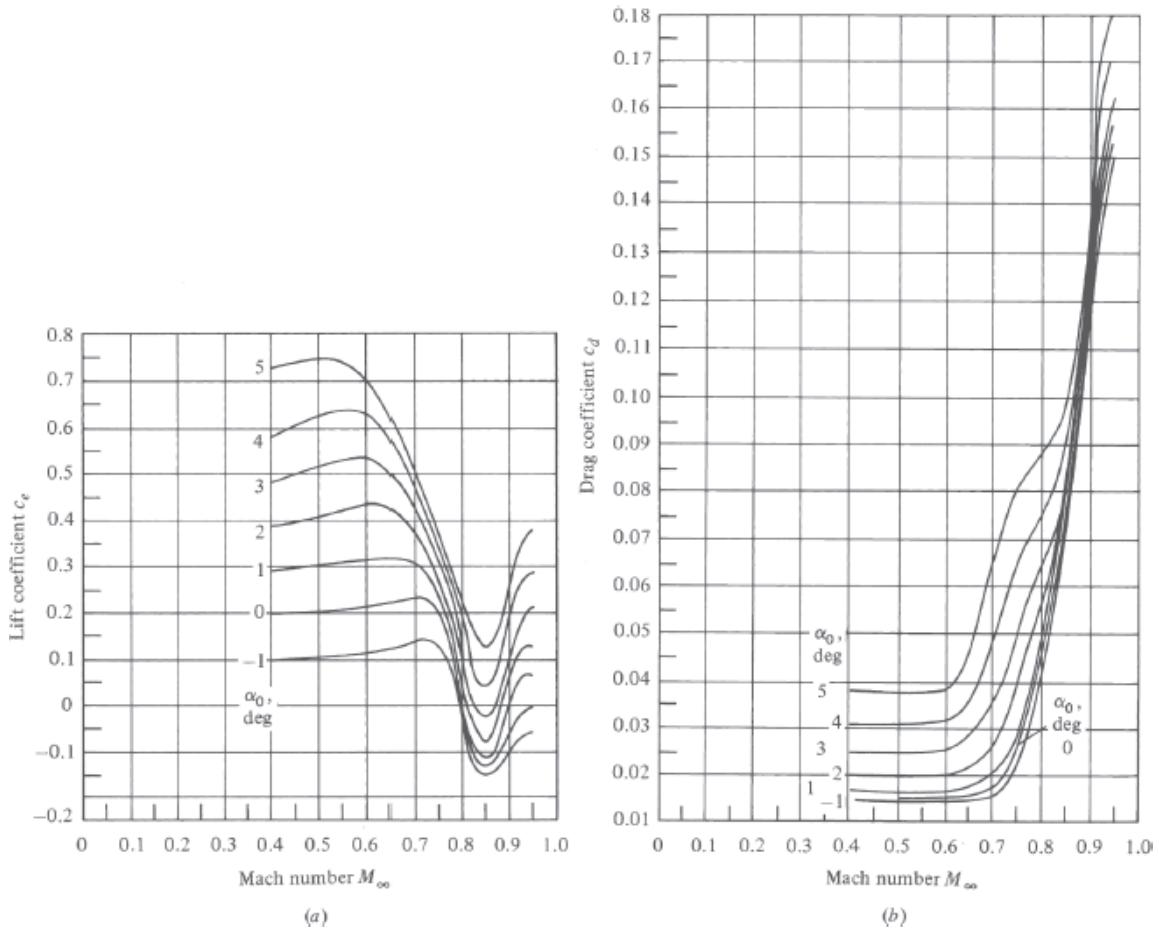

**Figure 5.29** Variation of (a) lift coefficient and (b) drag coefficient versus Mach number with angle of attack as a parameter for an NACA 2315 airfoil.

(Source: *Wind tunnel measurements at the NACA Langley Memorial Laboratory*.)

The designers of transonic airplanes are frequently looking for ways to get the speed closer to Mach 1 without encountering the large transonic drag rise. These designers have two options in regard to the choice of an airfoil that will delay drag divergence to a higher Mach number: (1) Make the airfoil *thin* and (2) adopt a specially shaped airfoil called a *supercritical airfoil*. These options can be used singly or in combination.

In regard to airfoil *thickness*, the generic trend sketched in Fig. 5.21 clearly shows that  $M_{cr}$  is increased by making the airfoil thinner. An increase in  $M_{cr}$  usually means an increase in the drag– divergence Mach number. Hence, everything else being equal, a transonic airplane with a thinner airfoil can fly at a higher Mach number before encountering drag divergence. This knowledge was incorporated in the design of the famous Bell X-1, which was the first airplane to fly faster than sound (see Sec. 5.22). The X-1 was designed with two sets of wings: one with a 10 percent thick airfoil for more routine flights and another with an 8 percent thick airfoil for flights intended to penetrate through Mach 1. The airfoil sections were NACA 65-110 and NACA 65-108, respectively. Moreover, the horizontal tail was even thinner in both cases, being an NACA 65-008 (8 percent thickness) and an NACA 65-006 (6 percent thickness), respectively. This was done to ensure that when the wing encountered major compressibility effects, the horizontal tail and elevator would still be free of such problems and would be functional for stability and control. A three-view of the Bell X-1 is shown in Fig. 5.30.

The adverse compressibility effects that cause the dramatic increase in drag and precipitous decrease in lift, shown in Fig. 5.29, can be delayed by decreasing the airfoil thickness. The knowledge of this fact dates back as early as 1918. In that year, as World War I was coming to an end, Frank Caldwell and Elisha Fales, two engineers at the U.S. Army's McCook Field in Dayton, Ohio, measured these effects in a high-speed wind tunnel capable of producing a test stream of 465 mi/h. This knowledge was reinforced by subsequent high-speed wind tunnel tests carried out by NACA in the 1920s and 1930s. (For a detailed historical treatment of the evolution of our understanding of compressibility effects during this period, see Anderson, *A History of Aerodynamics and Its Impact on Flying Machines*, Cambridge University Press, 1997. See also Anderson, "Research in Supersonic Flight and the Breaking of the Sound Barrier," Chapter 3 in *From Engineering Science to Big Science*, edited by Pamela Mack, NASA SP-4219, 1998.)

Thinner airfoils are also advantageous for supersonic airplanes, for page 344 reasons to be discussed in Sec. 5.11. Indeed, in airplane design, the

higher the design Mach number, usually the thinner the airfoil section. This is dramatically shown in Fig. 5.31, which is a plot of airfoil thickness versus design Mach number for a variety of high-speed airplanes since World War II. As the design Mach number of airplanes increased, thinner airfoils became a design necessity.

The *supercritical airfoil* is a different approach to the increase in drag–divergence Mach number. Here the *shape* of the airfoil is designed with a relatively flat top surface, as shown in Fig. 5.32. When the free-stream Mach number exceeds  $M_{cr}$ , a pocket of supersonic flow occurs over the top surface as usual; but because the top is relatively flat, the local supersonic Mach number is a lower value than would exist in the case of a conventional airfoil. As a result, the shock wave that terminates the pocket of supersonic flow is weaker. In turn, the supercritical airfoil can penetrate closer to Mach 1 before drag divergence occurs. In essence, the increment in Mach number (the “grace period”) between  $M_{cr}$  and  $M_{drag\ divergence}$  (see Fig. 5.26) is increased by the shape of the supercritical airfoil. One way to think about this is that the supercritical airfoil is “more comfortable” than conventional airfoils in the region above  $M_{cr}$ , and it can fly closer to Mach 1 before drag divergence is encountered. Because they are more comfortable in the flight regime above the critical Mach number and because they can penetrate closer to Mach 1 after exceeding  $M_{cr}$ , these airfoils are called *supercritical airfoils*. They are *designed* to cruise in the Mach number range *above*  $M_{cr}$ .

The pressure coefficient distribution over the top surface of a supercritical airfoil flying above  $M_{cr}$  but below  $M_{drag\ divergence}$  is sketched in Fig. 5.32. After a sharp decrease in pressure around the leading edge, the pressure remains relatively constant over a substantial portion of the top surface. This contrasts with the pressure coefficient distribution for a conventional airfoil flying above  $M_{cr}$ , such as that shown in Fig. 5.28. Clearly, the flow over the supercritical airfoil is carefully tailored to achieve the desired results.

The early aerodynamic research on supercritical airfoils was carried out by Richard Whitcomb, an aeronautical engineer at NASA Langley Research Center, during the middle 1960s. This work by Whitcomb is described in a NASA document titled “An Airfoil Shape for Efficient Flight at Supercritical Mach Numbers” (NASA TM X-1109, July 1965, by R.T. Whitcomb and L.R. Clark). Whitcomb’s design of supercritical airfoils was pioneering; today all modern civilian jet transports are designed with supercritical wings, incorporating custom-designed supercritical airfoil sections that have their genes in the original design by Richard Whitcomb.

The effectiveness of the supercritical airfoil was clearly established by an Air Force/NASA wind tunnel and flight test program carried out in the early 1970s


called the Transonic Aircraft Technology (TACT) program. A standard General Dynamics F-111 (sketched at the top of Fig. 5.33) was modified with a supercritical wing. Wind tunnel data for the variation of  $C_D$  with  $M_\infty$  for both the standard F-111 and the TACT aircraft (the F-111 modified with a supercritical wing) are shown in Fig. 5.33. The standard airfoil on the F-111 is an NACA 64-210; the supercritical airfoil on the TACT aircraft had the same 10 percent thickness. The use of the supercritical wing increased the drag–divergence Mach number from 0.76 to 0.88—a stunning 16 percent increase—as noted in Fig. 5.33.

---


page 345

---


page 346

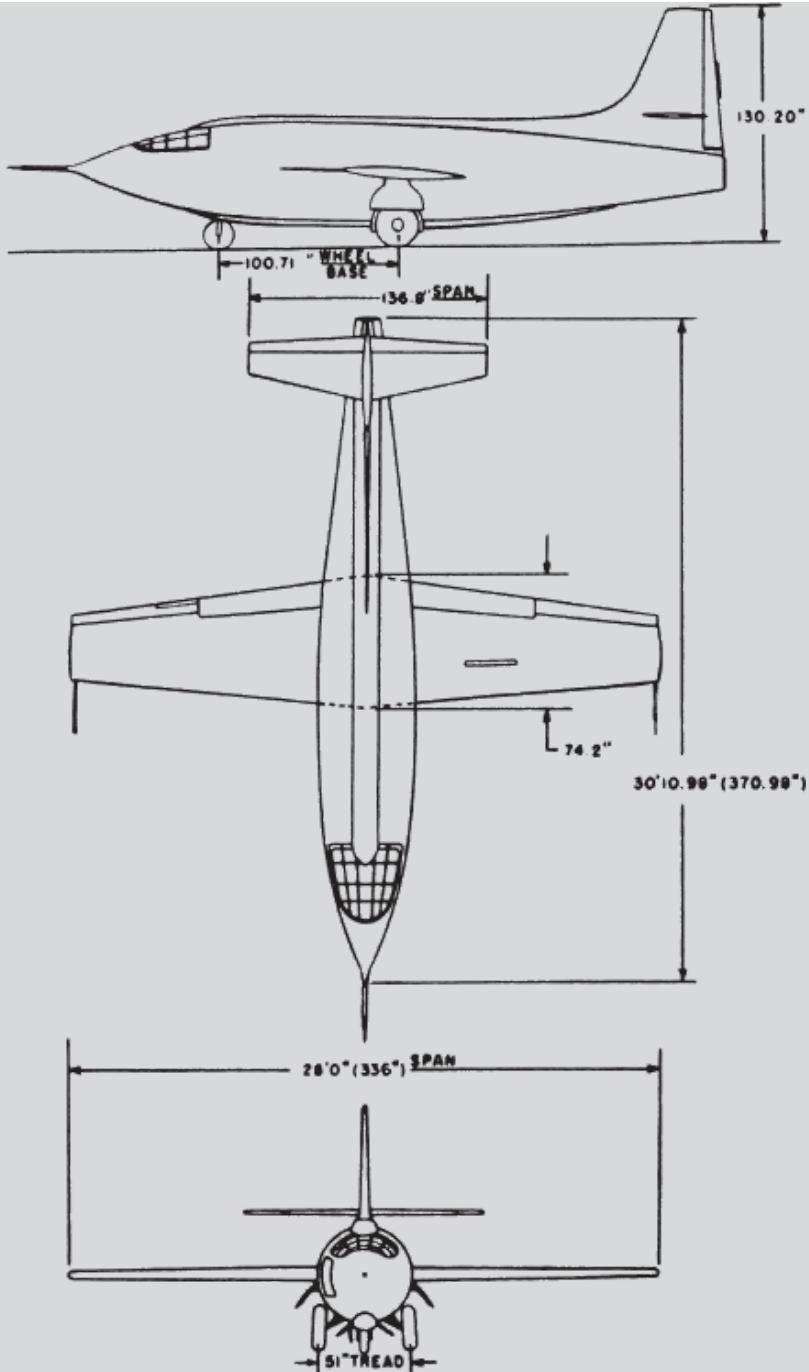


**Figure 5.30** Three-view of the Bell X-1.

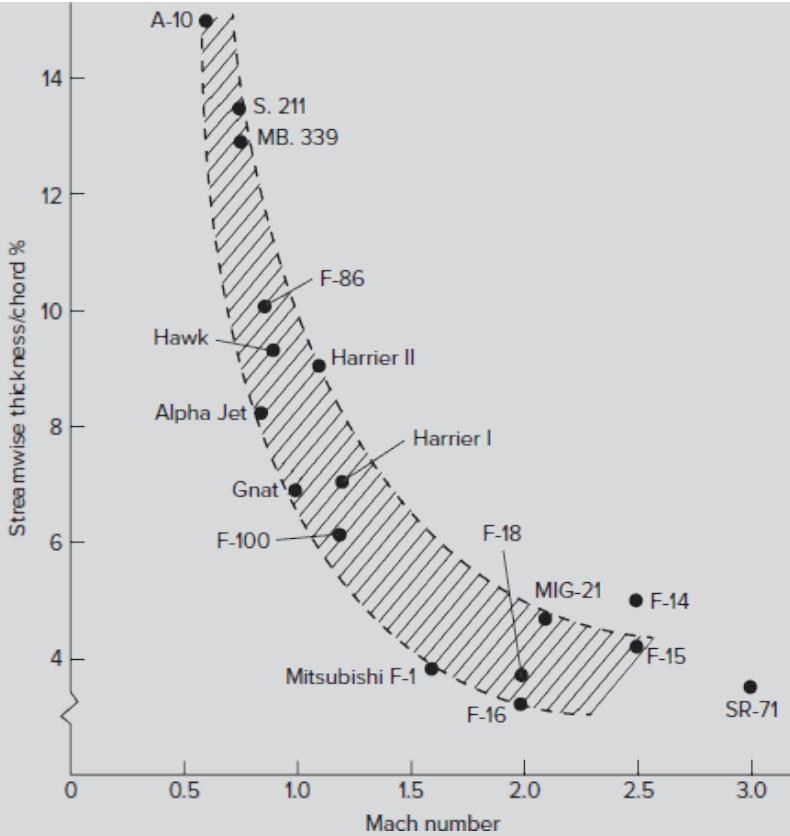

**Figure 5.31** Variation of thickness-to-chord ratio with Mach number for a representative sampling of different airplanes.

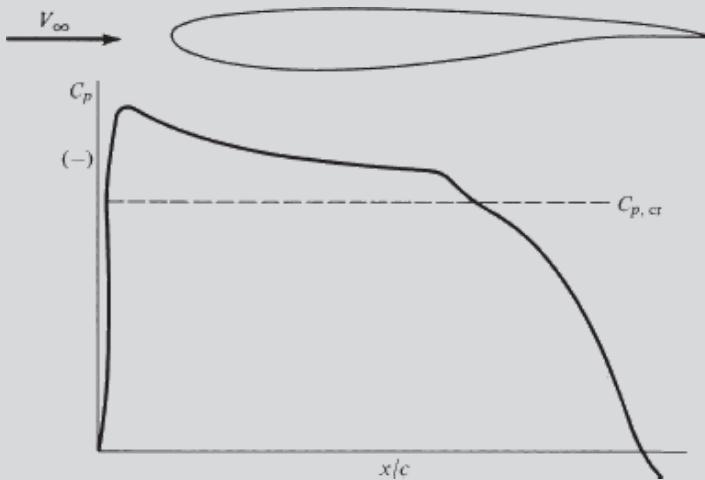

**Figure 5.32** Shape of a typical supercritical airfoil and its pressure coefficient distribution over the top surface.

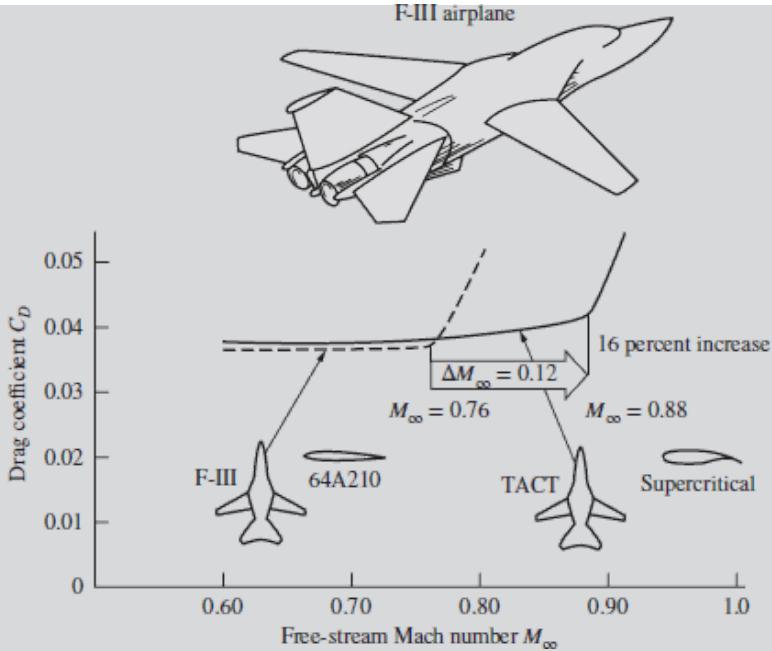

**Figure 5.33** Increase in drag–divergence Mach number obtained by the TACT aircraft with a supercritical wing compared to a standard F-111. Wind tunnel data obtained at the NASA Langley Research Center. Wing sweep = 26°.  $CL$  held constant at 0.0465.

(Source: *Reported in Symposium on Transonic Aircraft Technology (TACT), AFFDL-TR-78-100, Air Force Flight Dynamics Laboratory, August 1978.*)

Designers of transonic aircraft can use supercritical airfoils to accomplish one of two objectives: (1) For a given airfoil thickness, the supercritical airfoil shape allows a higher cruise velocity; or (2) for a given lower cruise velocity, the airfoil thickness can be larger. The latter option has some design-advantages. The structural design of a thicker wing is more straightforward and actually results in a lighter-weight (albeit thicker) wing. Also, a thicker wing provides more volume for an increased fuel capacity. Clearly, the use of a supercritical airfoil provides a larger “design space” for transonic airplanes.

## 5.11 WAVE DRAG (AT SUPERSONIC SPEEDS)


page 348

To this point we have discussed airfoil properties at subsonic speeds—that is, for  $M_\infty < 1$ . When  $M_\infty$  is supersonic, a major new physical phenomenon is introduced: shock waves. We previously alluded to shock waves in Sec. 4.11.3 in conjunction with the Pitot tube measurement of supersonic airspeeds. With respect to airfoils (as well as all other aerodynamic bodies), shock waves in supersonic flow create a new source of drag, called *wave drag*. In this section, we highlight some of the


ideas involving shock waves and the consequent wave drag; a detailed study of shock wave phenomena is left to more advanced texts in aerodynamics.

To obtain a feel for how a shock is produced, imagine that we have a small source of sound waves: a tiny “beeper” (something like a tuning fork). At time  $t = 0$  assume that the beeper is at point  $P$  in Fig. 5.34. At this point let the beeper emit a sound wave, which will propagate in all directions at the speed of sound  $a$ . Also let the beeper move with velocity  $V$ , where  $V$  is less than the speed of sound. At time  $t$ , the sound wave will have moved outward by a distance  $at$ , as shown in Fig. 5.34. At the same time  $t$ , the beeper will have moved a distance  $Vt$  to point  $Q$ . Because  $V < a$ , the beeper will always stay inside the sound wave. If the beeper is constantly emitting sound waves as it moves along, these waves will constantly move outward, ahead of the beeper. As long as  $V < a$ , the beeper will always be inside the envelope formed by the sound waves.

Now, we change the situation: assume that the beeper is moving at page 349 supersonic speed; that is,  $V > a$ . At time  $t = 0$ , assume that the beeper is at point  $R$  in Fig. 5.35. At this point let the beeper emit a sound wave, which, as before, will propagate in all directions at the speed of sound  $a$ . At time  $t$ , the sound wave will have moved outward by a distance  $at$ , as shown in Fig. 5.35. At the same time  $t$ , the beeper will have moved a distance  $Vt$  to point  $S$ . However, because  $V > a$ , the beeper will now be outside the sound wave. If the beeper is constantly emitting sound waves as it moves along, these waves will now pile up inside an envelope formed by a line from point  $S$  tangent to the circle formed by the first sound wave, centered at point  $R$ . This tangent line, the line where the pressure disturbances are piling up, is called a *Mach wave*. The vertex of the wave is fixed to the moving beeper at point  $S$ . In supersonic flight, the air ahead of the beeper in Fig. 5.35 has no warning of the approach of the beeper. Only the air behind the Mach wave has felt the presence of the beeper, and this presence is communicated by pressure (sound) waves confined inside the conical region bounded by the Mach wave. In contrast, in subsonic flight, the air ahead of the beeper in Fig. 5.34 is forewarned about the oncoming beeper by the sound waves. In this case there is no piling up of pressure waves; there is no Mach wave.

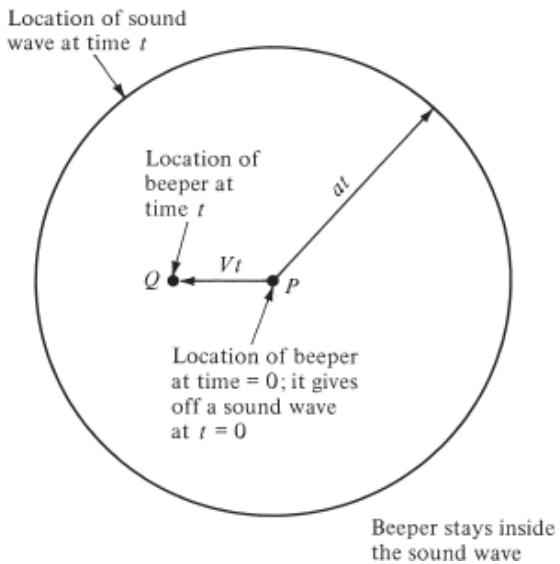


**Figure 5.34** Beeper moving at less than the speed of sound.

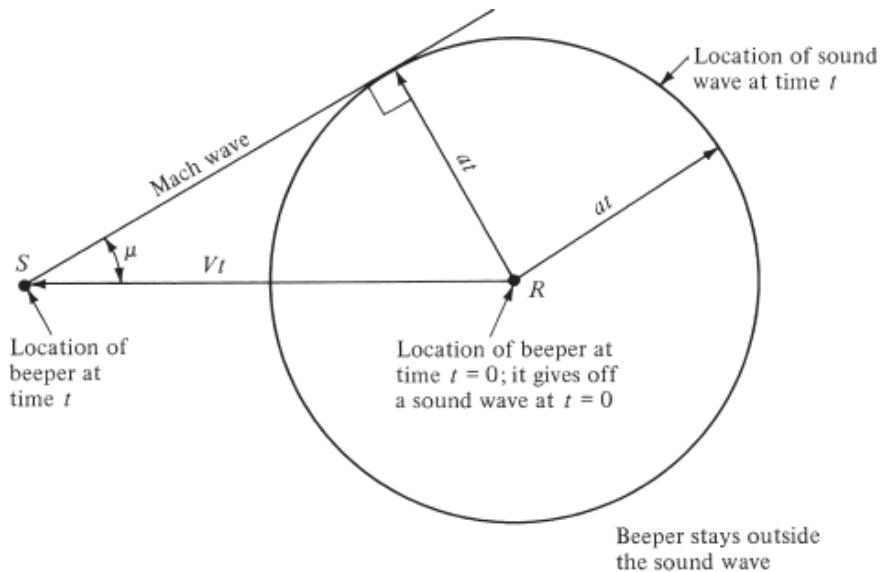


**Figure 5.35** The origin of Mach waves and shock waves. The beeper is moving faster than the speed of sound.

Hence we can begin to feel that the coalescing, or piling up, of pressure waves in supersonic flight can create sharply defined waves of some sort. In Fig. 5.35 the Mach wave that is formed makes an angle  $\mu$  with the direction of movement of the beeper. This angle, defined as the *Mach angle*, is easily obtained from the geometry of Fig. 5.35:


$$\sin \mu = \frac{at}{Vt} = \frac{a}{V} = \frac{1}{M}$$

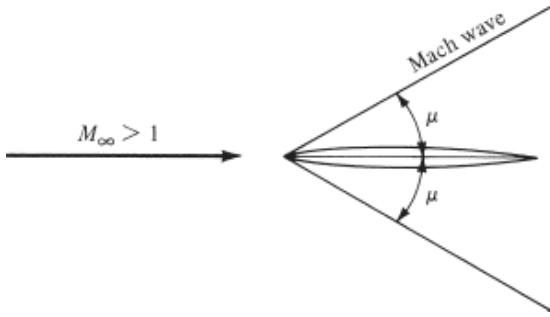

**Figure 5.36** Mach waves on a needlelike body.

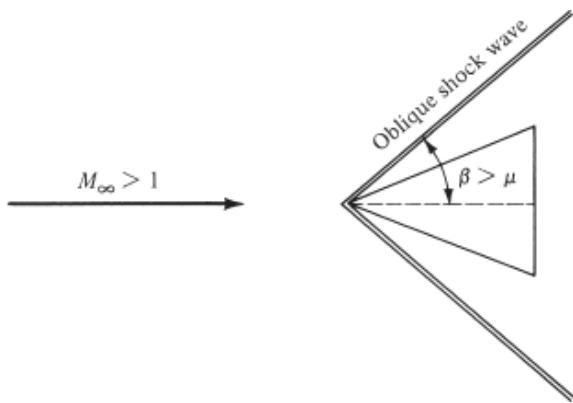

**Figure 5.37** Oblique shock waves on a wedge-type body.

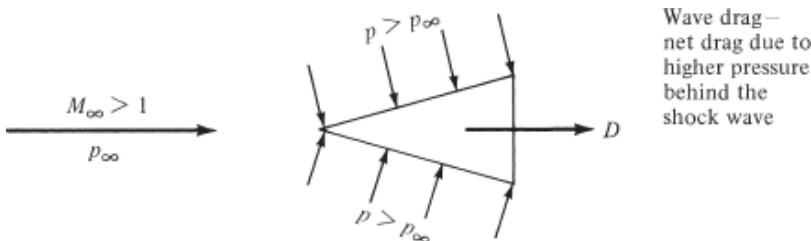

**Figure 5.38** Pressure distribution on a wedge at supersonic speeds; origin of wave drag.

Hence


$$\text{Mach angle} \equiv \mu \equiv \arcsin \frac{1}{M} \quad (5.49)$$

In real life, a very thin object (such as a thin needle) moving at  $M_\infty > 1$  [page 350](#) creates a very weak disturbance in the flow, limited to a Mach wave. This is sketched in Fig. 5.36. In contrast, a thicker object such as the wedge shown in Fig. 5.37, moving at supersonic speeds will create a strong disturbance, called a *shock wave*. The shock wave will be inclined at an oblique angle  $\beta$ , where  $\beta > \mu$ , as shown in Fig. 5.37. As the flow moves across the oblique shock wave, the

pressure, temperature, and density increase, and the velocity and Mach number decrease.

Consider now the pressure on the surface of the wedge, as sketched in Fig. 5.38. Because  $p$  increases across the oblique shock wave, at the wedge surface,  $p > p_\infty$ . Because the pressure acts normal to the surface and the surface itself is inclined to the relative wind, a net drag will be produced on the wedge, as seen by simple inspection of Fig. 5.38. This drag is called *wave drag* because it is inherently due to the pressure increase across the shock wave.

page 351

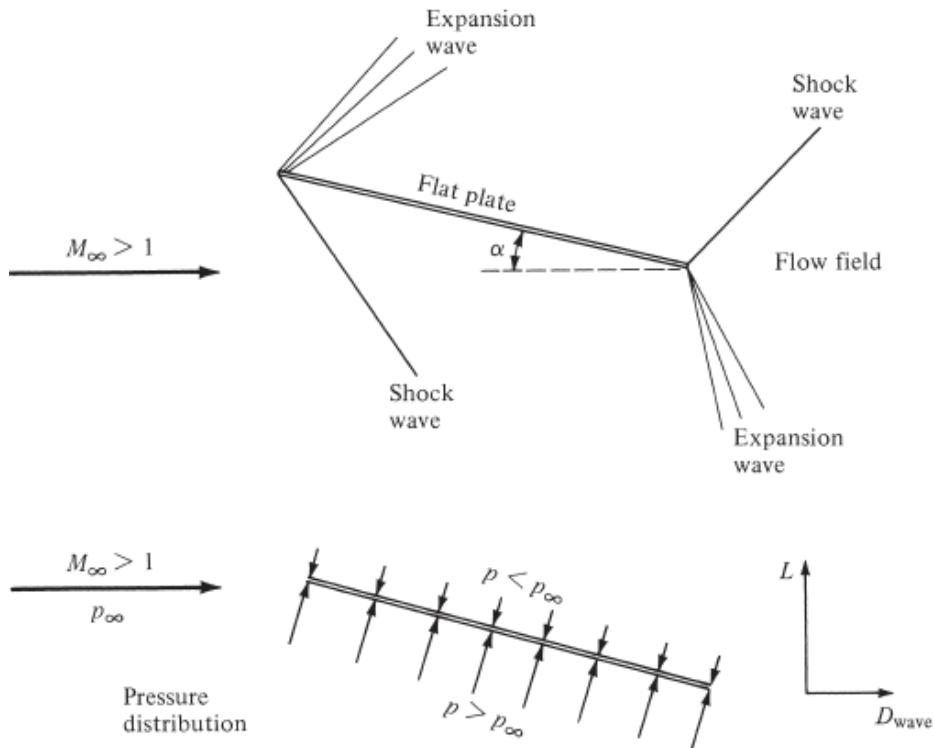

**Figure 5.39** Flow field and pressure distribution for a flat plate at angle of attack in supersonic flow. There is a net lift and drag due to the pressure distribution set up by the shock and expansion waves.

To minimize the strength of the shock wave, all supersonic airfoil profiles are thin, with relatively sharp leading edges. (The leading edge of the Lockheed F-104 supersonic fighter is almost razor-thin.) Let us approximate a thin supersonic airfoil by the flat plate illustrated in Fig. 5.39. The flat plate is inclined at a small angle of attack  $\alpha$  to the supersonic free stream. On the top surface of the plate, the flow field is turned away from the free stream through an *expansion wave* at the leading edge; an expansion wave is a fan-shaped region through which the pressure decreases. At the trailing edge on the top side, the flow is turned back toward the free-stream direction through an oblique shock wave. On the bottom

surface of the plate, the flow is turned into the free stream, causing an oblique shock wave with an increase in pressure. At the trailing edge, the flow is turned back toward the free-stream direction through an expansion wave. (Details and theory for expansion waves, as well as shock waves, are beyond the scope of this book—you will have to simply accept on faith the flow field sketched in Fig. 5.39 until your study of aerodynamics becomes more advanced.) The expansion and shock waves at the leading edge result in a surface pressure distribution in which the pressure on the top surface is less than  $p_\infty$ , whereas the pressure on the bottom surface is greater than  $p_\infty$ . The net effect is an aerodynamic force normal to the plate. The components of this force perpendicular and parallel to the relative wind are the lift and supersonic wave drag, respectively. Approximate relations for the lift and drag coefficients are, respectively,

$$c_l = \frac{4\alpha}{(M_\infty^2 - 1)^{1/2}} \quad (5.50) \quad \text{page 352}$$

$$\text{and} \quad c_{d,w} = \frac{4\alpha^2}{(M_\infty^2 - 1)^{1/2}} \quad (5.51)$$

A subscript w has been added to the drag coefficient to emphasize that it is the wave drag coefficient. Equations (5.50) and (5.51) are approximate expressions, useful for thin airfoils at small to moderate angles of attack in supersonic flow. Note that as  $M_\infty$  increases, both  $c_l$  and  $c_d$  decrease. This is not to say that the lift and drag forces themselves decrease with  $M_\infty$ . Quite the contrary. For any flight regime, as the flight velocity increases,  $L$  and  $D$  usually increase because the dynamic pressure  $q_\infty = q_\infty = \frac{1}{2}\rho V_\infty^2$  increases. In the supersonic regime,  $L$  and  $D$  increase with velocity, even though  $c_l$  and  $c_{d,w}$  decrease with  $M_\infty$  according to Eqs. (5.50) and (5.51).

### EXAMPLE 5.21

Consider a thin supersonic airfoil with chord length  $c = 5$  ft in a Mach 3 free stream at a standard altitude of 20,000 ft. The airfoil is at an angle of attack of  $5^\circ$ .

- (a) Calculate the lift and wave drag coefficients and the lift and wave drag per unit span.
- (b) Compare these results with the same airfoil at the same conditions, except at Mach 2.

#### ■ Solution

- a. In Eqs. (5.50) and (5.51), the angle of attack  $\alpha$  must be in radians. Hence

$$\alpha = 5^\circ = \frac{5}{57.3} \text{ rad} = 0.0873 \text{ rad}$$

Also

$$\sqrt{M_\infty^2 - 1} = \sqrt{3^2 - 1} = 2.828$$

$$c_l = \frac{4\alpha}{\sqrt{M_\infty^2 - 1}} = \frac{4(0.0873)}{2.828} = \boxed{0.123}$$

$$c_{d,w} = \frac{4\alpha^2}{\sqrt{M_\infty^2 - 1}} = \frac{4(0.0873)^2}{2.828} = \boxed{0.0108}$$

At 20,000 ft,  $\rho_\infty = 1.2673 \times 10^{-3}$  slug/ft<sup>3</sup> and  $T = 447.43^\circ\text{R}$ . Hence

$$a_\infty = \sqrt{\gamma RT_\infty} = \sqrt{1.4(1716)(447.43)} = 1037 \text{ ft/s}$$

$$V_\infty = M_\infty a_\infty = 3(1037) = 3111 \text{ ft/s}$$

$$q_\infty = \frac{1}{2}\rho_\infty V_\infty^2 = \frac{1}{2}(1.2673 \times 10^{-3})(3111)^2 = 6133 \text{ lb/ft}^2$$

$$L \text{ (per unit span)} = q_\infty c c_l = 6133(5)(0.123) = \boxed{3772 \text{ lb}}$$

$$D_w \text{ (per unit span)} = q_\infty c c_{d,w} = 6133(5)(0.0108) = \boxed{331.2 \text{ lb}}$$

b.

$$\sqrt{M_\infty^2 - 1} = \sqrt{2^2 - 1} = 1.732$$

$$c_l = \frac{4\alpha}{\sqrt{M_\infty^2 - 1}} = \frac{4(0.0873)}{1.732} = \boxed{0.207}$$

$$c_{d,w} = \frac{4\alpha^2}{\sqrt{M_\infty^2 - 1}} = \frac{4(0.0873)^2}{1.732} = \boxed{0.0176}$$

Note: At Mach 2,  $c_l$  and  $c_{d,w}$  are *higher* than at Mach 3. This is a general result; both  $c_l$  and  $c_{d,w}$  decrease with increasing Mach number, as clearly seen from Eqs. (5.50) and (5.51). Does this mean that  $L$  and  $D_w$  also decrease with increasing Mach number? Intuitively this does not seem correct. Let us find out:

$$V_\infty = a_\infty M_\infty = 1037(2) = 2074 \text{ ft/s}$$

page 353

$$q_\infty = \frac{1}{2}\rho_\infty V_\infty^2 = \frac{1}{2}(1.2673 \times 10^{-3})(2074)^2 = 2726 \text{ lb/ft}^2$$

$$L \text{ (per unit span)} = q_\infty c c_l = 2726(5)(0.207) = \boxed{2821 \text{ lb}}$$

$$D_w \text{ (per unit span)} = q_\infty c c_{d,w} = 2726(5)(0.0176) = \boxed{240 \text{ lb}}$$

There is no conflict with our intuition. As the supersonic Mach numbers increase,  $L$  and  $D_w$  also increase, although the lift and drag *coefficients* decrease.

### EXAMPLE 5.22

The Lockheed F-104 supersonic fighter is shown in three-view in Fig. 4.45 and in the photograph in Fig. 5.40. It is the first fighter aircraft designed for sustained flight at Mach 2. Its wing planform area is  $19.5 \text{ m}^2$ . Consider the F-104 in steady, level flight, and assume that its weight is  $7262 \text{ kg}_f$ . Calculate its angle of attack at Mach 2 when it is flying at (a) sea level and (b) 10 km.

### ■ Solution

We assume that the F-104 wing in supersonic flight can be represented by a flat plate and that the wing lift coefficient is given by Eq. (5.50). Although this equation holds for a flat-plate airfoil section, we assume that it gives a reasonable estimate for the straight wing of the F-104. Keep in mind that Eq. (5.50) is only an approximation for the finite wing.



**Figure 5.40** The first airplane to be designed for sustained flight at Mach 2: the Lockheed F-104 Starfighter.

(Source: U.S. Air Force.)

The weight is given in  $\text{kg}_f$ , a nonconsistent unit. As shown in Example 2.5,  $1 \text{ kg}_f = 9.8 \text{ N}$ . Also, in steady, level flight, the lift equals the weight of the airplane. Hence

$$L = W = 7262(9.8) = 7.12 \times 10^4 \text{ N}$$

page 354

a. At sea level,  $\rho_\infty = 1.23 \text{ kg/m}^3$  and  $T_\infty = 288 \text{ K}$ . The speed of sound is given by

$$a_\infty = \sqrt{\gamma R T_\infty} = \sqrt{(1.4)(287)(288)} = 340 \text{ m/s}$$

Thus

$$V_\infty = a_\infty M_\infty = (340)(2) = 680 \text{ m/s}$$

$$q_\infty = \frac{1}{2} \rho_\infty V_\infty^2 = \frac{1}{2}(1.23)(680)^2 = 2.84 \times 10^5 \text{ N/m}^2$$

$$c_l = \frac{L}{q_\infty S} = \frac{7.12 \times 10^4}{(2.84 \times 10^5)(19.5)} = 0.014$$

From Eq. (5.50),

$$c_l = \frac{4\alpha}{\sqrt{M_\infty^2 - 1}}$$

or

$$\alpha = \frac{c_l}{4} \sqrt{M_\infty^2 - 1} = \frac{0.014}{4} \sqrt{(2)^2 - 1} = 6.06 \times 10^{-3} \text{ rad}$$

In degrees,

$$\alpha = (6.06 \times 10^{-3})(57.3) = 0.35^\circ$$

*Note:* This is a very small angle of attack. At Mach 2 at sea level, the dynamic pressure is so large that only a very small lift coefficient, and hence a very small angle of attack, is needed to sustain the airplane in the air.

b. At 10 km, from App. A,  $\rho_\infty = 0.41351 \text{ kg/m}^3$  and  $T_\infty = 223.26 \text{ K}$ .

[page 355](#)

$$a_\infty = \sqrt{\gamma R T_\infty} = \sqrt{(1.4)(287)(223.26)} = 300 \text{ m/s}$$

$$V_\infty = a_\infty M_\infty = (300)(2) = 600 \text{ m/s}$$

$$q_\infty = \frac{1}{2} \rho_\infty V_\infty^2 = \frac{1}{2}(0.41351)(600)^2 = 7.44 \times 10^4 \text{ N/m}^2$$

$$c_l = \frac{L}{q_\infty S} = \frac{7.12 \times 10^4}{(7.44 \times 10^4)(19.5)} = 0.049$$

$$\alpha = \frac{c_l}{4} \sqrt{M_\infty^2 - 1} = \frac{0.049}{4} \sqrt{(2)^2 - 1} = 0.02 \text{ rad}$$

In degrees,

$$\alpha = (0.02)(57.3) = 1.2^\circ$$

*Note:* At an altitude of 10 km, where the dynamic pressure is smaller than at sea level, the required angle of attack to sustain the airplane in flight is still relatively small: only slightly above 1 degree. We learn from this example that airplanes in steady level flight at supersonic speeds fly at very small angles of attack.

### EXAMPLE 5.23

If the pilot of the F-104 in Example 5.22, flying in steady, level flight at Mach 2 at an altitude of 10 km, suddenly pitched the airplane to an angle of attack of  $10^\circ$ , calculate the instantaneous lift exerted on the airplane, and comment on the possible consequences.

### ■ Solution

$$\alpha = \frac{10}{57.3} = 0.175 \text{ rad}$$

From Eq. (5.50),

$$c_l = \frac{4\alpha}{\sqrt{M_\infty^2 - 1}} = \frac{4(0.175)}{\sqrt{(2)^2 - 1}} = 0.404$$

From Example 5.22, at Mach 2 and an altitude of 10 km,  $q_\infty = 7.44 \times 10^4 \text{ N/m}^2$ :

$$L = q_\infty S c_l = (7.44 \times 10^4)(19.5)(0.404) = 5.86 \times 10^5 \text{ N}$$

Compare this value of lift with the weight of the airplane:

$$\frac{L}{W} = \frac{5.86 \times 10^5}{7.12 \times 10^4} = 8.2$$

When the pilot suddenly increases the angle of attack to  $10^\circ$ , the lift increases to a value 8.2 larger than the weight. The pilot will feel a sudden acceleration equal to 8.2 times the acceleration of gravity, sometimes stated as an acceleration of 8.2 g's. The human body can withstand this acceleration for only a few seconds before becoming unconscious. Moreover, the structure of the airplane will be under great stress. These are reasons why, in supersonic flight, the angle of attack is usually maintained at low values.

page 356

### EXAMPLE 5.24

The lift coefficient of any object in flight is a function of angle of attack. The purpose of this example is to examine how the angle of attack varies with flight velocity for an airfoil, holding the lift constant for all values of velocity, considering both subsonic and supersonic velocities. (We note in Ch. 6) that, for an airplane in steady flight, the lift must always equal the weight of the airplane, no matter at what velocity the airplane is flying. So, the results of this example give some insight into the angle-of-attack variation of an airplane in steady, level flight over a range of flight velocity.)

*a. Subsonic Case* Consider a unit span of an infinite wing of chord 1.5 m with an NACA 64–210 airfoil at standard sea-level conditions. The lift per unit span is

3300 N, and is held constant with velocity. Calculate and plot the variation of angle of attack as a function of velocity as  $V_\infty$  varies from 50 to 250 m/s, taking into account compressibility effects.

*b. Supersonic Case* Consider a unit span of a flat-plate infinite wing of chord 1.5 m at standard sea-level conditions. The lift per unit span is 3300 N, and is held constant with velocity. Calculate and plot the variation of angle of attack as a function of velocity as  $V_\infty$  varies from 500 to 1000 m/s.

### ■ Solution

The following information applies to both the subsonic and supersonic cases. The standard sea-level speed of sound, from Sec. 4.9, is  $a_\infty = 340.3$  m/s. Hence

$$M_\infty = V_\infty / 340.3 \quad (\text{E 5.24.1})$$

$$q_\infty = \frac{1}{2} \rho_\infty V_\infty^2 = \frac{1}{2} (1.23) V_\infty^2 = 0.615 V_\infty^2$$

Also,

The lift coefficient is given by Eq. (5.25):

$$c_L = \frac{L \text{ (per unit span)}}{q_\infty c} = \frac{3300}{(0.615 V_\infty^2)(1.5)} = \frac{3577}{V_\infty^2} \quad (\text{E 5.24.2})$$

*a. Subsonic Case* The angle-of-attack variation must be obtained from the airfoil data for the NACA 64-210 airfoil given in App. D. The lift coefficient given in App. D is the low-speed value,  $c_{L,0}$ , whereas the lift coefficient  $c_L$  calculated by Eq. (E 5.24.2) is the actual lift coefficient, and hence includes the compressibility effects discussed in Sec. 5.8. To use App. D, we calculate the relevant low-speed value of lift coefficient,  $c_{L,0}$ , from Eq. (5.40) and then for this value of  $c_{L,0}$  obtain the angle of attack from App. D. Some tabulated results are:

$$c_{L,0} = c_L \sqrt{1 - M_\infty^2} \quad (\text{E 5.24.3}) \quad \underline{\text{page 357}}$$

$V_\infty$ (m/s)	$M_\infty = V_\infty / 340.3$	$c_L = 3577 / V_\infty^2$	$c_{L,0} = c_L \sqrt{1 - M_\infty^2}$	$\alpha$ (App. D)
50	0.147	1.43	1.41	$12^\circ$
75	0.22	0.636	0.605	$4^\circ$
100	0.294	0.358	0.342	$1.5^\circ$
150	0.44	0.159	0.143	$-0.5^\circ$
200	0.588	0.089	0.072	$-1^\circ$
250	0.735	0.057	0.0386	$-1.5^\circ$

*b. Supersonic Case* Assuming an infinitely thin flat plate for the airfoil, from Eq. (5.50),

$$c_{\ell} = \frac{4\alpha}{\sqrt{M_a^2 - 1}}$$

Hence,

$$\alpha = \frac{c_{\ell}\sqrt{M_{\infty}^2 - 1}}{4} \quad (\text{E 5.24.4})$$

where  $\alpha$  is in radians. Recall that


$$1 \text{ rad} = 57.3^\circ$$

Some tabulated results are:

$V_{\infty}$ (m/s)	$M_{\infty} = V_{\infty}/340.3$	$c_{\ell} = 3577/V_{\infty}^2$	$\alpha = \frac{c_{\ell}}{4}\sqrt{M_{\infty}^2 - 1}$ (rad)	$\alpha$ (deg)
500	1.47	0.0143	$3.85 \times 10^{-3}$	0.221
600	1.76	$9.94 \times 10^{-3}$	$3.60 \times 10^{-3}$	0.206
700	2.06	$7.30 \times 10^{-3}$	$3.28 \times 10^{-3}$	0.188
800	2.35	$5.59 \times 10^{-3}$	$2.97 \times 10^{-3}$	0.170
900	2.64	$4.42 \times 10^{-3}$	$2.70 \times 10^{-3}$	0.155
1000	2.94	$3.58 \times 10^{-3}$	$2.47 \times 10^{-3}$	0.142

**Comment** The results from (a) and (b) are plotted in Fig. 5.41. For the subsonic case, there is a relatively large decrease in angle of attack as the airspeed increases. This is because, as the speed increases, more of the lift is obtained from the increasing dynamic pressure,  $q_{\infty}$ ; hence, a smaller lift coefficient and therefore a smaller angle of attack are required to maintain the constant lift. The decrease in  $\alpha$  is further accentuated by the compressibility effect: as  $M_{\infty}$  increases, the value of  $c_{\ell,0}$  is further diminished via Eq. (E 5.24.3).

For the supersonic case, the required value of  $c_{\ell}$ , and therefore  $\alpha$ , is very small compared to the subsonic case, because of the much larger  $q_{\infty}$ . As  $V_{\infty}$  increases, there is a small decrease in  $\alpha$ . Examining Eq. (E 5.24.4), we see that  $\alpha$  decreases as  $c_{\ell}$  decreases and increases as  $M_{\infty}$  increases. The competing trends result in a relatively flat variation of  $\alpha$  as  $V_{\infty}$  increases.

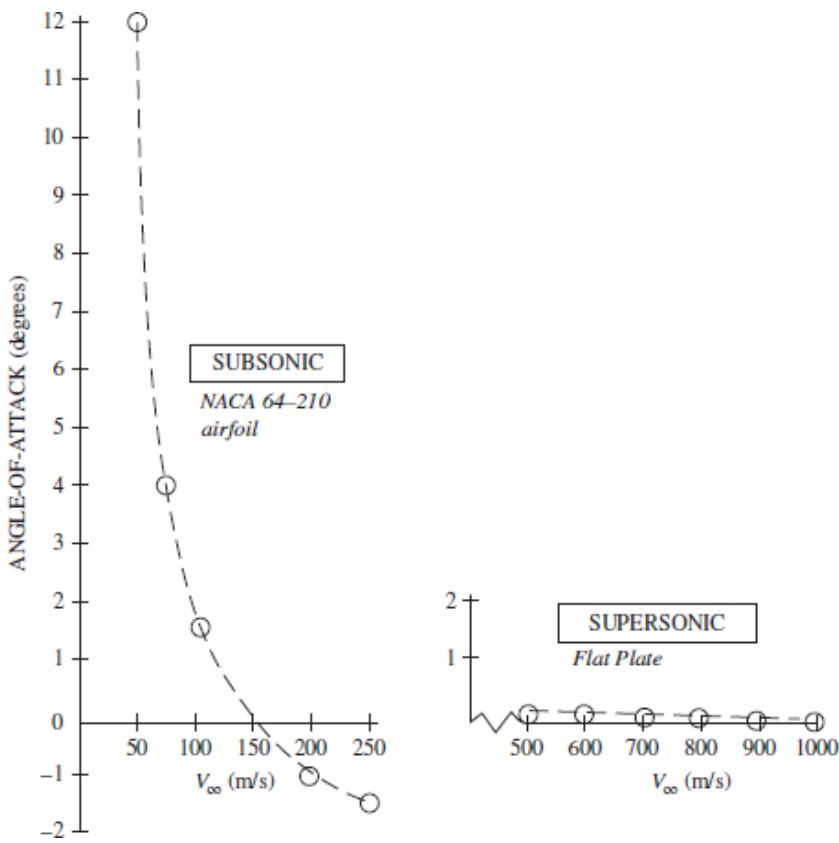

**Figure 5.41** Typical variations of angle of attack for subsonic and supersonic airfoils.

From these results, we deduce that a subsonic airplane in steady, level flight over a wide range of flight velocity will experience a wide range of angle-of-attack change. In contrast, a supersonic airplane in steady, level flight over a wide range of velocity will experience a much smaller change in angle of attack, and the angle of attack will be of a small magnitude.

## 5.12 SUMMARY OF AIRFOIL DRAG

Amplifying Eq. (4.105), we can write the total drag of an airfoil as the sum of three contributions:

$$D = D_f + D_p + D_w$$

where

$D$  = total drag on airfoil

$D_f$  = skin friction drag

$D_p$  = pressure drag due to flow separation

$D_w$  = wave drag (present only at transonic and supersonic speeds; zero for subsonic speeds below the drag–divergence Mach number)

In terms of the drag coefficients, we can write

$$c_d = c_{d,f} + c_{d,p} + c_{d,w} \quad (5.50)$$

where  $cd$ ,  $cdf$ ,  $cdp$ , and  $cdw$  are the total drag, skin friction drag, pressure drag, and wave drag coefficients, respectively. The sum  $cdf + cdp$  is called the *profile drag coefficient*; this is the quantity given by the data in App. D. The profile drag coefficient is relatively constant with  $M_\infty$  at subsonic speeds.


The variation of  $cd$  with  $M_\infty$  from incompressible to supersonic speeds is sketched in Fig. 5.42. It is important to note the qualitative variation of this curve. For  $M_\infty$  ranging from zero to drag divergence,  $cd$  is relatively constant; it consists entirely of profile drag. For  $M_\infty$  from drag divergence to slightly above 1, the value of  $cd$  skyrockets; indeed, the peak value of  $cd$  around  $M_\infty = 1$  can be an order of magnitude larger than the profile drag itself. This large increase in  $cd$  is due to wave drag associated with the presence of shock waves. For supersonic Mach numbers,  $cd$  decreases approximately as  $(M_\infty^2 - 1)^{-1/2}$ .

page 359

## DESIGN BOX

Good design of supersonic airplanes concentrates on minimizing wave drag. It is emphasized in Fig. 5.42 that a substantial portion of the total drag at supersonic speeds is wave drag. The way to reduce wave drag is to reduce the strength of the shock waves that occur at the nose, along the leading edges of the wing and tail, and at any other part of the aircraft that protrudes into the locally supersonic flow. The shock wave strength is reduced by having a sharp nose, slender (almost needlelike) fuselage, and very sharp wing and tail leading edges. The Lockheed F-104, shown in three-view in Fig. 4.52 and in the photograph in Fig. 5.40, is an excellent example of good supersonic airplane design. The F-104 was the first aircraft designed for sustained speeds at Mach 2. Examining Figs. 4.52 and 5.40, we see an aircraft with a sharp, needlelike nose, slender fuselage, and very thin wings and tails with sharp leading edges. The wing airfoil section is a thin biconvex shape with a thickness-to-chord ratio of 0.035 (3.5 percent thickness). The leading edge is almost razor-sharp, actually sharp enough to pose a hazard to ground crew working around the airplane. Design of the F-104 began in 1953 at the famous Lockheed “Skunk Works”; it entered service with the U.S. Air Force in 1958. Now retired from

the Air Force inventory, at the time of writing, F-104's are still in service with the air forces of a few other nations around the globe.

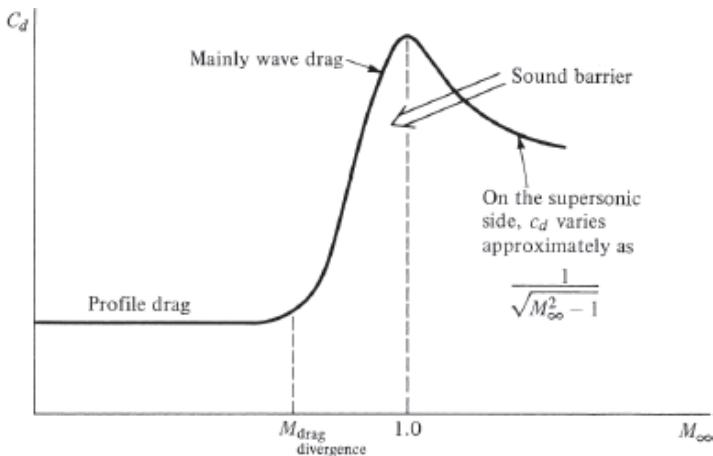

**Figure 5.42** Variation of drag coefficient with Mach number for subsonic and supersonic speeds.

The large increase in the drag coefficient near Mach 1 gave rise to the page 360 term *sound barrier* in the 1940s. At that time a camp of professionals felt that the sound barrier could not be pierced—that we could not fly faster than the speed of sound. Certainly a glance at Eq. (5.28) for the pressure coefficient in subsonic flow, as well as Eq. (5.51) for wave drag in supersonic flow, would hint that the drag coefficient might become infinitely large as  $M_\infty$  approaches 1 from either the subsonic or supersonic side. However, such reasoning is an example of a common pitfall in science and engineering: the application of equations outside their ranges of validity. Neither Eq. (5.28) nor Eq. (5.51) is valid in the transonic range near  $M_\infty = 1$ . Moreover, remember that nature abhors infinities. In real life,  $cd$  does not become infinitely large. To get past the sound barrier, all that is needed (in principle) is an engine with enough thrust to overcome the high (but finite) drag.

## 5.13 FINITE WINGS

We now return to the discussion initiated in Sec. 5.5. Our considerations so far have dealt mainly with airfoils, where the aerodynamic properties are directly applicable to infinite wings. However, all real wings are finite; and for practical reasons, we must translate our knowledge about airfoils to the case where the wing has wing tips. This is the purpose of Secs. 5.14 and 5.15.

Let us pose the following questions. Consider a finite wing with a specified aspect ratio [defined by Eq. (5.26)] at an angle of attack of  $6^\circ$ . The airfoil section

of the finite wing is an NACA 2412 section. For  $\alpha = 6^\circ$ , the airfoil lift and drag coefficients, from App. D, are

$$c_l = 0.85 \quad c_d = 0.0077$$

*Question:* Because the finite wing is made up of the NACA 2412 airfoil section, should not the wing lift and drag coefficients be the same as those for the airfoil? That is, for the wing at  $\alpha = 6^\circ$ , are the following true?


$$C_L = 0.85 \quad C_D = 0.0077$$

---

page 361

(Recall from Sec. 5.5 that it is conventional to denote the aerodynamic coefficients for a finite wing with capital letters.) On an intuitive basis, it may sound reasonable that  $CL$  and  $CD$  for the wing might be the same as  $cl$  and  $cd$ , respectively, for the airfoil section that makes up the wing. But intuition is not always correct. We will answer the preceding questions in the next few paragraphs.

The fundamental difference between flows over finite wings as opposed to infinite wings can be seen as follows. Consider the front view of a finite wing as sketched in Fig. 5.43a. If the wing has lift, then obviously the average pressure over the bottom surface is greater than that over the top surface. Consequently, there is some tendency for the air to “leak,” or flow, around the wing tips from the high- to the low-pressure sides, as shown in Fig. 5.43a. This flow establishes a circulatory motion that trails downstream of the wing. The trailing circular motion is called a *vortex*. There is a major trailing vortex from each wing tip, as sketched in Fig. 5.43b and as shown in the photograph in Fig. 5.44.

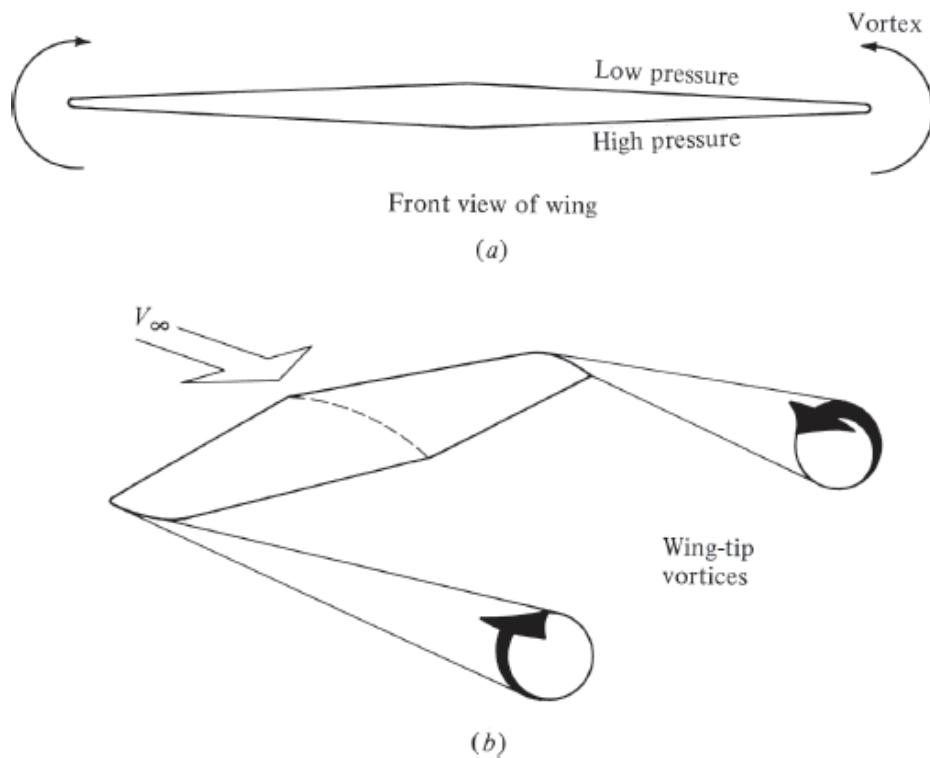

**Figure 5.43** Origin of wing-tip vortices on a finite wing.




**Figure 5.44** Wing-tip vortices made visible by smoke ejected at the wing tips of a Boeing 727 test airplane.

(Source: NASA.)

These wing-tip vortices downstream of the wing induce a small [page 362](#) downward component of air velocity in the neighborhood of the wing itself. This can be seen intuitively from Fig. 5.43b; the two wing-tip vortices tend to drag the surrounding air around with them, and this secondary movement induces a small velocity component in the downward direction at the wing. This downward component is called *downwash* and given the symbol  $w$ .

An effect of downwash can be seen in Fig. 5.45. As usual,  $V_\infty$  designates the relative wind. However, in the immediate vicinity of the wing,  $V_\infty$  and  $w$  add vectorially to produce a “local” relative wind that is canted downward from the original direction of  $V_\infty$ . This has several consequences:

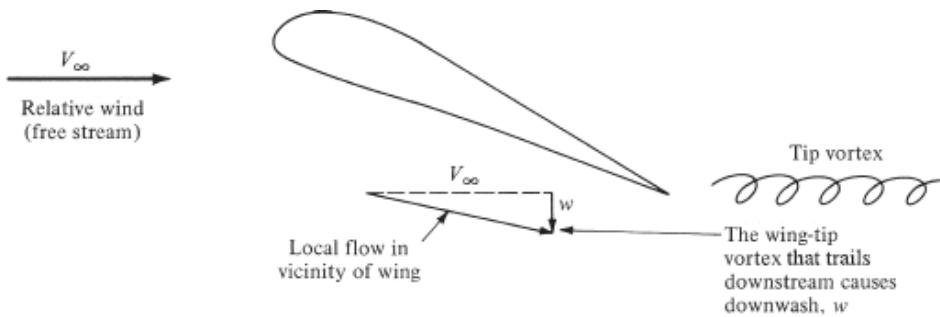

**Figure 5.45** The origin of downwash.

1. The angle of attack of the airfoil sections of the wing is [page 363](#) effectively reduced in comparison to the angle of attack of the wing referenced to  $V_\infty$ .
2. There is an increase in the drag. The increase is called *induced drag*, which has at least three physical interpretations. First, the wing-tip vortices simply alter the flow field about the wing to change the surface pressure distributions in the direction of increased drag. An alternative explanation is that because the local relative wind is canted downward (see Fig. 5.45), the lift vector itself is “tilted back.” Hence, it contributes a certain component of force parallel to  $V_\infty$ —that is, a drag force. A third physical explanation of the source of induced drag is that the wing-tip vortices contain a certain amount of rotational kinetic energy. This energy has to come from somewhere; it is supplied by the aircraft propulsion system, where extra power has to be added to overcome the extra increment in drag due to induced drag. All three of these outlooks of the physical mechanism of induced drag are synonymous.

We can now answer the questions posed at the beginning of this section. Returning to the finite wing made up of the NACA 2412 airfoil section, where the

wing is at  $\alpha = 6^\circ$ , we now recognize that because of the downwash, the local airfoil sections of the wing see an angle of attack *lower* than  $6^\circ$ . Clearly, the *local* airfoil lift coefficient will be less than 0.85. Because the lift of the wing is an integration of the lift from each local segment, we can state that for the *finite wing*

$$C_L < 0.85$$

Also, the presence of induced drag for the finite wing, which is not present for an infinite wing, *adds* to the already existing skin friction drag and pressure drag due to flow separation, which is experienced by the airfoil section itself. The value  $cd = 0.0077$  is the profile drag coefficient, which is the sum of the skin friction and pressure drag due to flow separation. For the finite wing, the induced drag must be added to the profile drag. So, for the finite wing in this case,

$$C_D > 0.0077$$

Now we can rest our case. The lift coefficient for a finite wing is *less* than that for its airfoil section, and the drag coefficient for a finite wing is *greater* than that for its airfoil section.

In Secs. 5.14 and 5.15 we will show how the drag coefficient and the lift coefficient, respectively, for a finite wing can be calculated. With this, we now move to the center column of our chapter road map in Fig. 5.1. Return to Fig. 5.1 for a moment, and note all the different aspects of airfoils that we have covered, as represented by the left column of the road map. We are now ready to use this knowledge to examine the characteristics of finite wings, as represented by the middle column.

page 364

## DESIGN BOX

For some airplane designs, the *shape* of the airfoil section *changes* along the span of the wing. For example, for the F-111 shown at the top of Fig. 5.33, the airfoil section at the root of the wing is an NACA 64A210, whereas the airfoil section at the tip of the wing is an NACA 64A209. The famous British Spitfire of World War II fame had a 13 percent thick airfoil at the root and a 7 percent thick airfoil at the tip. When a designer chooses to vary the airfoil shape along the span, it is usually for one or both of the following reasons:

1. To achieve a particular *distribution* of lift across the span of the wing, which will improve the aerodynamic efficiency of the wing and/or reduce the structural weight of the wing.
2. To delay the onset of high-speed compressibility effects in the region near the wing tips. A thinner airfoil in the tip region will result in the

“shock stall” pattern shown in Fig. 5.27c being delayed in that region to a higher Mach number, preserving aileron control effectiveness while the section of the wing closer to the root may be experiencing considerable flow separation.


In reference to our previous discussion, note that the possible variation of the airfoil shape along the span of a finite wing is yet another reason why the aerodynamic coefficients for a finite wing differ from those of an airfoil making up part of the wing itself.

## 5.14 CALCULATION OF INDUCED DRAG

A way of conceptualizing induced drag is shown in Fig. 5.46. Consider a finite wing as sketched in Fig. 5.46. The dashed arrow labeled  $\mathbf{R}_1$  represents the resultant aerodynamic force on the wing for the *imaginary* situation of *no vortices* from the wing tips. The component of  $\mathbf{R}_1$  parallel to  $V_\infty$  is the drag  $D_1$ , which in this imaginary case is due to skin friction and pressure drag due to flow separation. The solid arrow labeled  $\mathbf{R}$  represents the *actual* resultant aerodynamic force, *including* the effect of wing-tip vortices. The presence of the vortices changes the pressure distribution over the surface of the wing in such a fashion that  $\mathbf{R}$  is tilted backward relative to  $\mathbf{R}_1$ . The component of  $\mathbf{R}$  parallel to  $V_\infty$ , denoted by  $D$  in Fig. 5.46, is the *actual* total drag, which includes the effect of the changed pressure distribution due to the wing-tip vortices as well as friction drag and pressure drag due to flow separation. Because  $\mathbf{R}$  is tilted backward relative to  $\mathbf{R}_1$ ,  $D > D_1$ . The *induced drag*  $D_i$  is the difference between  $D$  and  $D_1$ :  $D_i = D - D_1$ .

Keep in mind that induced drag is a type of *pressure drag*.

page 365

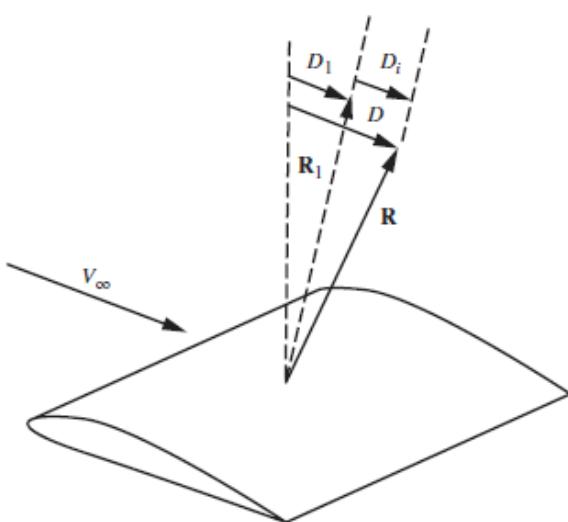


**Figure 5.46** Illustration of the induced drag,  $D_i$ .

To calculate the magnitude of  $D_i$ , we will take the following perspective. Consider a section of a finite wing as shown in Fig. 5.47. The angle of attack defined between the mean chord of the wing and the direction of  $V_\infty$  (the relative wind) is called the *geometric angle of attack*  $\alpha$ . However, in the vicinity of the wing, the local flow is (on the average) deflected downward by angle  $\alpha_i$  because of downwash. This angle  $\alpha_i$ , defined as the *induced angle of attack*, is the difference between the local flow direction and the free-stream direction. Hence, although the naked eye sees the wing at an angle of attack  $\alpha$ , the airfoil section itself is seeing an *effective angle of attack*, which is smaller than  $\alpha$ . Letting  $\alpha_{\text{eff}}$  denote the effective angle of attack, we see from Fig. 5.47 that  $\alpha_{\text{eff}} = \alpha - \alpha_i$ .

Let us now adopt the point of view that because the local flow direction in the vicinity of the wing is inclined downward with respect to the free stream, the lift vector remains perpendicular to the local relative wind and is therefore tilted back through angle  $\alpha_i$ . This is shown in Fig. 5.47. However, still considering drag to be parallel to the free stream, we see that the tilted-lift vector contributes a certain component of drag. This drag is the *induced drag*  $D_i$ . From Fig. 5.47,

$$D_i = L \sin \alpha_i$$

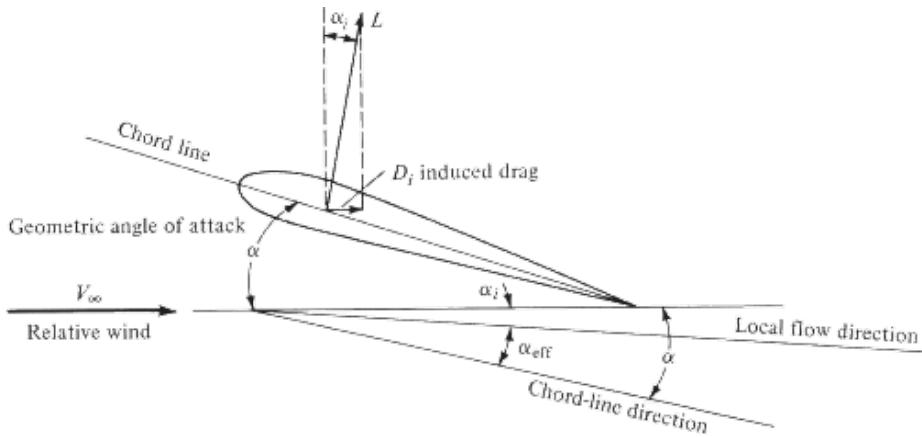

**Figure 5.47** The origin of induced drag.

Values of  $\alpha_i$  are generally small; hence  $\sin \alpha_i \approx \alpha_i$ . Thus

$$D_i = L \alpha_i \quad (5.52)$$

Note that in Eq. (5.52),  $\alpha_i$  must be in radians. Hence  $D_i$  can be calculated from Eq. (5.52) once  $\alpha_i$  is obtained.

The calculation of  $\alpha_i$  is beyond the scope of this book. However, it can [page 366](#) be shown that the value of  $\alpha_i$  for a given section of a finite wing depends

on the distribution of downwash along the span of the wing. In turn, the downwash distribution is governed by the distribution of lift over the span of the wing. To see this more clearly, consider Fig. 5.48, which shows the front view of a finite wing. The lift per unit span may vary as a function of distance along the wing because

1. The chord may vary in length along the wing.
2. The wing may be twisted so that each airfoil section of the wing is at a different geometric angle of attack.
3. The shape of the airfoil section may change along the span.

Shown in Fig. 5.48 is the case of an elliptical lift distribution (the lift per unit span varies elliptically along the span), which in turn produces a uniform downwash distribution. For this case, incompressible flow theory predicts that

$$a_i = \frac{C_L}{\pi AR} \quad (5.53)$$

where  $C_L$  is the lift coefficient of the finite wing and  $AR = b^2/S$  is the aspect ratio, defined in Eq. (5.26). Substituting Eq. (5.53) into (5.52) yields


$$D_i = L a_i = \frac{L}{\pi AR} \frac{C_L}{\pi AR} \quad (5.54)$$

However,  $L = q_\infty S C_L$ ; hence, from Eq. (5.54),

$$D_i = q_\infty S \frac{C_L^2}{\pi AR}$$

or

$$\frac{D_i}{q_\infty S} = \frac{C_L^2}{\pi AR} \quad (5.55)$$

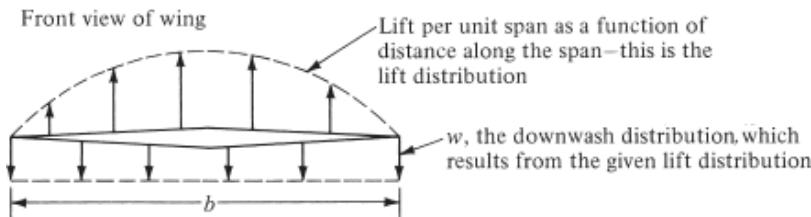

**Figure 5.48** Lift distribution and downwash distribution.

Defining the *induced drag coefficient* as  $CD_i = D_i / (q_\infty S)$ , we can write Eq. (5.55) as

$$C_{D,i} = \frac{C_L^2}{\pi AR} \quad (5.56)$$

This result holds for an elliptical lift distribution, as sketched in Fig. 5.48. For a wing with the same airfoil shape across the span and with no twist, an elliptical lift distribution is characteristic of an elliptical wing planform. (The famous British Spitfire of World War II was one of the few aircraft in history designed with an elliptical wing planform. Wings with straight leading and trailing edges are more economical to manufacture.)

For all wings in general, a *span efficiency factor*  $e$  can be defined such that

$$C_{D,i} = \frac{C_L^2}{\pi e AR} \quad (5.57)$$

For elliptical planforms,  $e = 1$ ; for all other planforms,  $e < 1$ . Thus,  $C_{D,i}$  and hence induced drag are a *minimum for an elliptical planform*. For typical subsonic-aircraft,  $e$  ranges from 0.85 to 0.95. Equation (5.57) is an important relation. It demonstrates that induced drag varies as the square of the lift coefficient; at high lift, such as near  $CL_{max}$ , the induced drag can be a substantial portion of the total drag. Equation (5.57) also demonstrates that as AR is increased, induced drag is decreased. Hence, subsonic airplanes designed to minimize induced drag have high-aspect-ratio wings (such as the long, narrow wings of the Lockheed U-2 high-altitude reconnaissance aircraft).

It is clear from Eq. (5.57) that induced drag is intimately related to lift. In fact, another expression for induced drag is *drag due to lift*. In a fundamental sense, the power provided by the engines of the airplane to overcome induced drag is the power required to sustain a heavier-than-air vehicle in the air—the power necessary to produce lift equal to the weight of the airplane in flight.

In light of Eq. (5.57), we can now write the total drag coefficient for a finite wing at subsonic speeds as


$$C_D = c_d + \frac{C_L^2}{\pi e AR} \quad (5.58)$$

Total drag	Profile drag	Induced drag
------------	--------------	--------------

Keep in mind that profile drag is composed of two parts: drag due to skin friction  $cdf$  and pressure drag due to separation  $cdp$ ; that is,  $cd = cdf + cdp$ . Also keep in mind that  $cd$  can be obtained from the data in App. D. The quadratic variation of  $CD$  with  $C_L$  given in Eq. (5.58), when plotted on a graph, leads to a curve as shown in Fig. 5.49. Such a plot of  $CD$  versus  $C_L$  is called a *drag polar*. Much of the basic aerodynamics of an airplane is reflected in the drag polar, and such curves are essential to the design of airplanes. You should become familiar with the concept of drag polar. Note that the drag data in App. D are given in terms of drag polars for infinite wings—that is,  $cd$  is plotted versus  $c_l$ . However, induced

drag is not included in App. D because  $CD_i$  for an infinite wing (infinite aspect ratio) is zero.

page 368

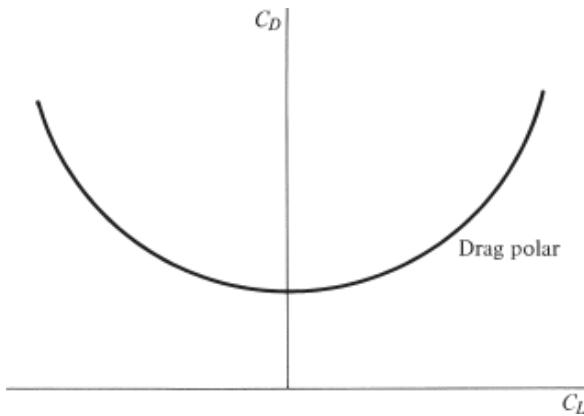

**Figure 5.49** Sketch of a drag polar—that is, a plot of drag coefficient versus lift coefficient.

### EXAMPLE 5.25

Consider the Northrop F-5 fighter airplane, which has a wing area of  $170 \text{ ft}^2$ . The wing is generating 18,000 lb of lift. For a flight velocity of 250 mi/h at standard sea level, calculate the lift coefficient.

#### ■ Solution

The velocity in consistent units is

$$V_\infty = 250 \left( \frac{88}{60} \right) = 366.7 \text{ ft/s}$$

$$q_\infty = \frac{1}{2} \rho_\infty V_\infty^2 = \frac{1}{2} (0.002377)(366.7)^2 = 159.8$$

Hence  $C_L = \frac{L}{q_\infty S} = \frac{18,000}{159.8(170)} = \boxed{0.6626}$

### EXAMPLE 5.26

The wingspan of the Northrop F-5 is 25.25 ft. Calculate the induced drag coefficient and the induced drag itself for the conditions of Example 5.25. Assume that  $e = 0.8$ .

#### ■ Solution

The aspect ratio is  $AR = b^2/S = (25.25)^2/170 = 3.75$ . Because  $C_L = 0.6626$  from Example 5.25, then from Eq. (5.57),

$$C_{D,i} = \frac{C_L^2}{\pi e AR} = \frac{(0.6626)^2}{\pi(0.8)(3.75)} = 0.0466$$

From Example 5.25,  $q_\infty = 159.8 \text{ lb/ft}^2$ . Hence

$$D_i = q_\infty SC_{D,i} = 159.8(170)(0.0466) = 1266 \text{ lb}$$

### EXAMPLE 5.27

Consider a flying wing (such as the Northrop YB-49 of the early 1950s) [page 369](#) with a wing area of  $206 \text{ m}^2$ , an aspect ratio of 10, a span effectiveness factor of 0.95, and an NACA 4412 airfoil. The weight of the airplane is  $7.5 \times 10^5 \text{ N}$ . If the density altitude is 3 km and the flight velocity is 100 m/s, calculate the total drag on the aircraft.

#### ■ Solution

First obtain the lift coefficient. At a density altitude of 3 km = 3000 m,  $\rho_\infty = 0.909 \text{ kg/m}^3$  (from App. A).

$$q_\infty = \frac{1}{2}\rho_\infty V_\infty^2 = \frac{1}{2}(0.909)(100)^2 = 4545 \text{ N/m}^2$$

$$L = W = 7.5 \times 10^5 \text{ N}$$

$$C_L = \frac{L}{q_\infty S} = \frac{7.5 \times 10^5}{4545(206)} = 0.8$$

*Note:* This is a rather high lift coefficient, but the velocity is low—near the landing speed. Hence, the airplane is pitched to a rather high angle of attack to generate enough lift to keep the airplane flying.

Next, obtain the induced drag coefficient:

$$C_{D,i} = \frac{C_L^2}{\pi e AR} = \frac{0.8^2}{\pi(0.95)(10)} = 0.021$$

The profile drag coefficient must be estimated from the aerodynamic data in App. D. Assume that  $cd$  is given by the highest Reynolds number data shown for the NACA 4412 airfoil in App. D; furthermore, assume that it is in the drag bucket. Hence, from App. D,

$$c_d \approx 0.006$$

Thus, from Eq. (5.58), the total drag coefficient is

$$C_D = c_d + C_{D,i} = 0.006 + 0.021 = 0.027$$

Note that the induced drag is about 3.5 times larger than profile drag for this case, thus underscoring the importance of induced drag.

Therefore, the total drag is

$$D = q_\infty SC_D = 4545(206)(0.027) = \boxed{2.53 \times 10^4 \text{ N}}$$

### EXAMPLE 5.28

The North American P-51 Mustang, shown in Fig. 4.46, was the first production-line airplane designed with a laminar flow wing, as discussed in Sec. 4.15. The North American aerodynamicists used the NACA laminar flow airfoil theory to obtain their own custom-designed laminar flow airfoil shape, slightly modified from the NACA shapes. (The airfoils listed in App. D with designation numbers beginning with 6—the so-called six-series airfoils—are from the NACA laminar flow airfoil series.) For this example we assume that the airfoil used on the P-51 is represented by the NACA 65-210 laminar flow airfoil. The gross weight of the P-51 is 10,100 lb, the wing planform area is  $233 \text{ ft}^2$ , and the wing span is 37 ft. The wing of the P-51 has a highly efficient shape, giving it a span efficiency factor of 0.99. At an altitude of 25,000 ft, the maximum velocity of the P-51 is 437 mi/h. (a) For this altitude and velocity, calculate and compare the induced drag and the profile drag of the wing. (b) Consider the P-51 starting its landing approach at sea level. Calculate and compare the induced drag and the profile drag of the wing at a flight velocity of 140 mi/h. (c) Compare the drag results from (a) and (b) and comment on the relative importance of induced drag.

#### ■ Solution

[page 370](#)

$$a. \quad V_\infty = 437 \text{ mi/h} = 437 \left( \frac{88}{60} \right) = 640.9 \text{ ft/s.}$$

From App. B for 25,000 ft,  $\rho_\infty = 1.0663 \times 10^{-3} \text{ slug/ft}^3$ .

$$q_\infty = \frac{1}{2} \rho_\infty V_\infty^2 = \frac{1}{2} (1.0663 \times 10^{-3})(640.9)^2 = 219 \text{ lb/ft}^2$$

Assuming level flight, weight,  $W$ , equals the lift. Thus

$$C_L = \frac{L}{q_\infty S} = \frac{W}{q_\infty S} = \frac{10,100}{(219)(233)} = 0.198$$

$$AR = \frac{b^2}{S} = \frac{(37)^2}{233} = 5.88$$

$$C_{D,i} = \frac{C_L^2}{\pi e AR} = \frac{(0.198)^2}{\pi(0.99)(5.88)} = 0.00214$$

The profile drag coefficient is obtained from the data for the NACA 65-210 airfoil in App. D. Once again we use the data for the highest Re considered in App. D. Also, the calculated lift coefficient of 0.198 for the wing, which is essentially the section lift coefficient, puts the profile drag coefficient at the bottom of the pronounced drag bucket (such pronounced drag buckets are characteristic of laminar flow airfoils) as seen in App. D. Hence

$$c_d = 0.0037$$

The total drag coefficient for the wing is

$$C_D = C_d + C_{D,i} = 0.0037 + 0.00214 = 0.0058$$

For this high-velocity case, the profile drag (skin friction drag plus the pressure drag due to flow separation) is a factor of 1.73 larger than the induced drag. The induced drag is 36.6 percent of the total wing drag, the remainder being the profile drag. In turn, the profile drag is mainly skin friction drag for this high-velocity case, because the wing is flying at a low value of  $CL$  and hence a low angle of attack, where pressure drag due to flow separation is relatively small. This example underscores the relative importance of skin friction drag and explains why strong efforts have been made to design laminar flow airfoils.

---

page 371

b.  $V_\infty = 140 \left( \frac{88}{60} \right) = 205.3 \text{ ft/s}$

$$q_\infty = \frac{1}{2} \rho_\infty V_\infty^2 = \frac{1}{2} (0.002377)(205.3)^2 = 50.1 \text{ lb/ft}^2$$

$$C_L = \frac{L}{q_\infty S} = \frac{W}{q_\infty S} = \frac{10,100}{(50.1)(233)} = 0.865$$

$$C_{D,i} = \frac{C_L^2}{\pi e AR} = \frac{(0.865)^2}{\pi(0.99)(5.88)} = 0.041$$

From App. D for the NACA 65-210 airfoil, the calculated value of  $CL = 0.865$  is approximately the section lift coefficient, which for the highest Re data given for the airfoil in App. D gives

$$c_d = 0.008$$

The total drag coefficient for the wing is

$$C_D = c_d + C_{D,i} = 0.008 + 0.041 = 0.049$$

For this low-velocity case, the induced drag is a factor of 5.1 larger than the profile drag. The induced drag is 83.7 percent of the total wing drag.

c. Comparing the results of parts (a) and (b), we see the rather classic case in which the induced drag is a relatively small percentage of the total wing drag at high speeds but is by far the major component of wing drag at low speeds. In the design of subsonic airplanes, this example illustrates why the reduction of both induced drag and profile drag is important. Note that (as discussed in Sec. 4.15), due to the realities of manufacturing processes and actual flight operation, the wing of the P-51 did not produce any meaningful large regions of laminar flow. But this does not change our conclusion here.

### EXAMPLE 5.29

The Vought F4U-1D, shown in Fig. 2.16, is a classic World War II Navy fighter airplane. Some data for this airplane are: weight = 5461 kg<sub>f</sub>, wing planform area = 29.17 m<sup>2</sup>, wingspan = 12.49 m, maximum velocity at an altitude of 6 km = 684 km/h. At these conditions, the total wing drag coefficient is 0.00757. Calculate the profile drag coefficient for the wing. Assume that  $e = 0.9$ .

#### ■ Solution

First, let us put some of these data in terms of consistent SI units.

$$V_{\max} = 684 \text{ km/h} = \frac{684 \text{ km}}{\text{h}} \left( \frac{10^3 \text{ m}}{1 \text{ km}} \right) \left( \frac{1 \text{ h}}{3600 \text{ s}} \right) = 190 \text{ m/s}$$

Recall from Sec. 2.4 that 1 kg<sub>f</sub> = 9.8 N. Thus,

page 372

$$W = 5461 \text{ kg}_f = 5461 \text{ kg}_f \left( \frac{9.8 \text{ N}}{1 \text{ kg}_f} \right) = 5.3518 \times 10^4 \text{ N}$$

Now we are ready to make some calculations.

$$\text{AR} = \frac{b^2}{S} = \frac{(12.49)^2}{29.17} = 5.35$$

At  $h = 6$  km, from App. A we have  $\rho_{\infty} = 0.66011 \text{ kg/m}^3$

$$q_{\infty} = \frac{1}{2} \rho_{\infty} V_{\infty}^2 = \frac{1}{2} (0.66011)(190)^2 = 1.1915 \times 10^4 \text{ N/m}^2$$

$$C_L = \frac{L}{q_{\infty} S} = \frac{W}{q_{\infty} S} = \frac{5.3518 \times 10^4}{(1.1915 \times 10^4)(29.17)} = 0.154$$

From Eq. (5.57)

$$C_{D,i} = \frac{C_L^2}{\pi e AR} = \frac{(0.154)^2}{\pi(0.9)(5.35)} = 0.00157$$


From Eq. (5.58), we have

$$c_d = C_D - C_{D,i} = 0.00757 - 0.00157 = \boxed{0.006}$$

*Note:* In Fig. 2.16, the airfoil section used for the wing of the Corsair is shown to be an NACA 23018 at the root, an NACA 23015 at the outer panel, and an NACA 23000 at the theoretical tip. In App. D, the only “230-sector” airfoil shown is the NACA 23012. However, the profile drag coefficient for the wing of the Corsair where the airfoil section starts at an NACA 23018 at the root and ends at an NACA 23000 at the tip should be about the same as shown in App. D for the NACA 23012. Turn to App. D, and read off the value of  $c_d$  for an approximate section lift coefficient for 0.154 (ignoring the difference between  $c_L$  and  $C_L$ , which will be examined in the next section). The value from App. D is  $c_d = 0.006$ , the same as the answer obtained in this example.

---

In Example 5.28, to obtain the profile drag coefficient from the airfoil data in App. D, we used the section lift coefficient on the abscissa,  $c_L$ , as the same value of the wing lift coefficient,  $C_L$ . This is a reasonable approximation, especially for a wing with a high span efficiency factor,  $e$ , very near unity. However, examining again the geometric picture in Fig. 5.47 and also Fig. 5.50, we see that the effective angle of attack seen by the airfoil section is smaller than the geometric angle of attack of the wing, the difference being the induced angle of attack. In Example 5.28b, the lift coefficient for the wing was 0.865. From App. D, a section lift coefficient of 0.865 corresponds to a section angle of attack of  $6.5^\circ$ . This is the effective angle of attack seen by the airfoil section as sketched in Figs. 5.47 and 5.50. The actual geometric angle of attack of the wing is larger than  $6.5^\circ$ . Because we dealt with lift coefficient in Example 5.28, we did not have to be concerned about angle of attack; hence we did not have to deal with the change in the lift slope for the finite wing. Such matters are the subject of the next section.

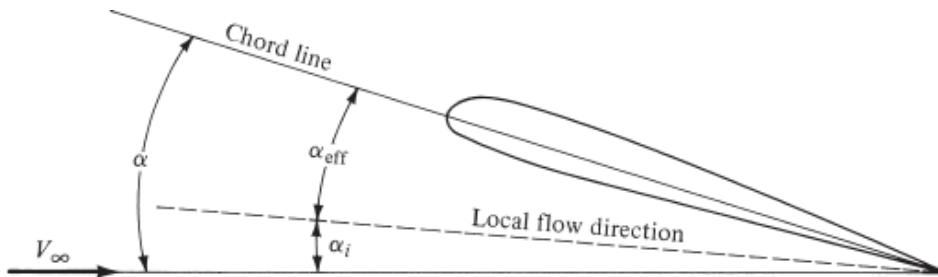

**Figure 5.50** Relation between the geometric, effective, and induced angles of attack.

page 373

## 5.15 CHANGE IN THE LIFT SLOPE

The aerodynamic properties of a finite wing differ in two major respects from the data of App. D, which apply to infinite wings. The first difference has already been discussed: the addition of induced drag for a finite wing. The second-difference is that the lift curve for a finite wing has a smaller slope than the corresponding lift curve for an infinite wing with the same airfoil cross section. This change in the lift slope can be examined as follows. Recall that because of the presence of downwash, which is induced by the trailing wing-tip vortices, the flow in the local vicinity of the wing is canted downward with respect to the free-stream relative wind. As a result, the angle of attack that the airfoil section effectively sees, called the *effective angle of attack*  $\alpha_{\text{eff}}$ , is less than the geometric angle of attack  $\alpha$ . This situation is sketched in Fig. 5.50. The difference between  $\alpha$  and  $\alpha_{\text{eff}}$  is the *induced angle of attack*  $\alpha_i$ , first introduced in Sec. 5.14, where  $\alpha_i = \alpha - \alpha_{\text{eff}}$ . Moreover, for an elliptical lift distribution, Eq. (5.53) gives values for the induced angle of attack  $\alpha_i = CL/(\pi AR)$ . Extending Eq. (5.53) to wings of any general planform, we can define a new span effectiveness factor  $e_1$  such that

$$\alpha_i = \frac{C_L}{\pi e_1 AR} \quad (5.59)$$


where  $e_1$  and  $e$  [defined for induced drag in Eq. (5.57)] are theoretically different but are in practice approximately the same value for a given wing. Note that Eq. (5.59) gives  $\alpha_i$  in radians. For  $\alpha_i$  in degrees,

$$\alpha_i = \frac{57.3 C_L}{\pi e_1 AR} \quad (5.60)$$

We emphasize that the flow over a finite wing at an angle of attack  $\alpha$  is essentially the same as the flow over an infinite wing at an angle of attack  $\alpha_{\text{eff}}$ . Keeping this in mind, assume that we plot the lift coefficient for the finite wing  $C_L$  versus the effective angle of attack  $\alpha_{\text{eff}} = \alpha - \alpha_i$ , as shown in Fig. 5.51a. Because we are using  $\alpha_{\text{eff}}$ , the lift curve should correspond to that for an infinite wing; hence the lift curve slope in Fig. 5.51a is  $a_0$ , obtained from App. D for the given airfoil. However, in real life our naked eyes cannot see  $\alpha_{\text{eff}}$ ; instead, what we actually observe is a finite wing at the geometric angle of attack  $\alpha$  (the actual angle between the free-stream relative wind and the mean chord line). Hence, for a finite wing it makes much more sense to plot  $C_L$  versus  $\alpha$ , as shown in Fig. 5.51b, than  $C_L$  versus  $\alpha_{\text{eff}}$ , as shown in Fig. 5.51a. For example,  $C_L$  versus  $\alpha$  would be the result most directly obtained from testing a finite wing in a wind tunnel, because  $\alpha$

(and not  $\alpha_{\text{eff}}$ ) can be measured directly. Hence, the lift curve slope for a finite wing is defined as  $a \equiv dCL/d\alpha$ , where  $a \neq a_0$ . Noting that  $\alpha > \alpha_{\text{eff}}$  from Fig. 5.50, we see that the abscissa of Fig. 5.51b is stretched out more than the abscissa of Fig. 5.51a. The lift curve of Fig. 5.51b is less inclined; that is,  $a < a_0$ . *The effect of a finite wing is to reduce the lift curve slope.* However, when the lift is zero,  $CL = 0$ , and from Eq. (5.53),  $\alpha_i = 0$ . Thus, at zero lift  $\alpha = \alpha_{\text{eff}}$ . In terms of Fig. 5.51a and 5.51b, this means that the angle of attack for zero lift  $\alpha_L = 0$  is the same for the finite and infinite wings. So, for finite wings,  $\alpha_{L=0}$  can be obtained directly from App. D.

page 374

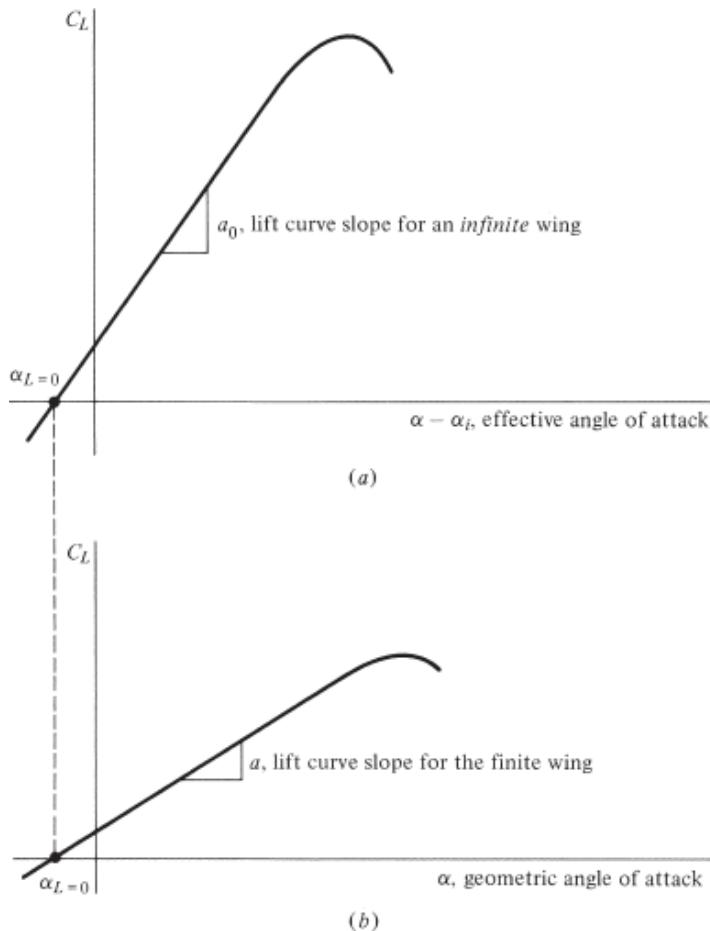

**Figure 5.51** Distinction between the lift curve slopes for infinite and finite wings.

*Question:* If we know  $a_0$  (say from App. D), how do we find  $a$  for a finite wing with a given aspect ratio? We can obtain the answer by examining Fig. 5.51. From Fig. 5.51a,

$$\frac{dC_L}{d(\alpha - \alpha_i)} = a_0$$

page 375

Integrating, we find

$$C_L = a_0(\alpha - \alpha_i) + \text{const} \quad (5.61)$$

Substituting Eq. (5.60) into Eq. (5.61), we obtain

$$C_L = a_0 \left( \alpha - \frac{57.3 C_L}{\pi e_1 AR} \right) + \text{const} \quad (5.62)$$

Solving Eq. (5.62) for  $C_L$  yields

$$C_L = \frac{a_0 \alpha}{1 + 57.3 a_0 / (\pi e_1 AR)} + \frac{\text{const}}{1 + 57.3 a_0 / (\pi e_1 AR)} \quad (5.63)$$

Differentiating Eq. (5.63) with respect to  $\alpha$ , we get

$$\frac{dC_L}{d\alpha} = \frac{a_0}{1 + 57.3 a_0 / (\pi e_1 AR)} \quad (5.64)$$

However, from Fig. 5.51b, by definition,  $dCL/d\alpha = a$ . Hence, from Eq. (5.64),

$$a = \frac{a_0}{1 + 57.3 a_0 / (\pi e_1 AR)} \quad (5.65)$$

Equation (5.65) gives the desired lift slope for a finite wing of given aspect ratio AR when we know the corresponding slope  $a_0$  for an infinite wing. Remember:  $a_0$  is obtained from airfoil data such as in App. D. Also note that Eq. (5.65) verifies our previous qualitative statement that  $a < a_0$ .

In summary, a finite wing introduces two major changes to the airfoil data in App. D:

1. Induced drag must be added to the finite wing:

$$C_D = c_d + \frac{C_L^2}{\pi e AR}$$

Total	Profile	Induced
drag	drag	drag

2. The slope of the lift curve for a finite wing is less than that for an infinite wing;  $a < a_0$ .

### EXAMPLE 5.30

Consider a wing with an aspect ratio of 10 and an NACA 23012 airfoil [page 376](#) section. Assume that  $Re \approx 5 \times 10^6$ . The span efficiency factor is  $e = e_1 = 0.95$ . If the wing is at a  $4^\circ$  angle of attack, calculate  $C_L$  and  $CD$ .

#### ■ Solution

Because we are dealing with a finite wing but have airfoil data (App. D) for infinite wings only, the first job is to obtain the slope of this lift curve for the finite wing, modifying the data from App. D.

The infinite wing lift slope can be obtained from any two points on the linear curve. For the NACA 23012 airfoil, for example (from App. D),

$$\begin{aligned} c_l &= 1.2 && \text{at } \alpha_{\text{eff}} = 10^\circ \\ c_l &= 0.14 && \text{at } \alpha_{\text{eff}} = 0^\circ \end{aligned}$$

$$\text{Hence } a_0 = \frac{dc_l}{d\alpha} = \frac{1.2 - 0.14}{10 - 0} = \frac{1.06}{10} = 0.106 \text{ per degree}$$

Also from App. D,

$$\alpha_{L=0} = -1.5^\circ \quad \text{and} \quad c_d \approx 0.006$$

The lift slope for the finite wing can now be obtained from Eq. (5.65):

$$a = \frac{a_0}{1 + 57.3 a_0 / (\pi e_1 \text{AR})} = \frac{0.106}{1 + 57.3(0.106) / [\pi(0.95)(10)]} = 0.088 \text{ per degree}$$

At  $\alpha = 4^\circ$ ,

$$C_L = a(\alpha - \alpha_{L=0}) = 0.088[4^\circ - (-1.5)] = 0.088(5.5)$$

$$C_L = 0.484$$

The total drag coefficient is given by Eq. (5.58):

$$C_D = c_d + \frac{C_L^2}{\pi e \text{AR}} = 0.006 + \frac{0.484^2}{\pi(0.95)(10)} = 0.006 + 0.0078 = 0.0138$$

### EXAMPLE 5.31

In Example 4.43 we calculated the skin friction drag exerted on the biplane wings of the 1903 *Wright Flyer*. For the flight conditions given in Example 4.43 (that is,  $V_\infty = 30 \text{ mi/h}$  at sea level), calculate the induced drag exerted on the wings of the *Wright Flyer*, and compare this with the friction drag calculated earlier. For its historic first flight on December 17, 1903, the total weight of the *Flyer* including the pilot (Orville) was 750 lb. Assume that the span efficiency for the wing is  $e = 0.93$ .

#### ■ Solution

[page 377](#)

From the data given in Example 4.43, for the *Wright Flyer* the wingspan is  $b = 40.33 \text{ ft}$  and the planform area of *each* wing is  $255 \text{ ft}^2$ . Hence, the aspect ratio of each wing is

$$AR = \frac{b^2}{S} = \frac{(40.33)^2}{255} = 6.38$$

For level flight, the airplane must produce a lift to counter its weight; for the flight of the *Wright Flyer*, the lift was equal to its weight, namely 750 lb. Also, the *Flyer* is a biplane configuration, and both wings produce lift. Let us assume that the lift is evenly divided between the two wings; hence the lift of *each* wing is  $750/2 = 375$  lb. The velocity is  $V_\infty = 30 \text{ mi/h} = 44 \text{ ft/s}$ . The dynamic pressure is

$$q_\infty = \frac{1}{2}\rho_\infty V_\infty^2 = \frac{1}{2}(0.002377)(44^2) = 2.3 \text{ lb/ft}^2$$

The lift coefficient of each wing is

$$C_L = \frac{L}{q_\infty S} = \frac{375}{2.3(255)} = 0.639$$

From Eq. (5.57),

$$C_{D,i} = \frac{C_L^2}{\pi e AR} = \frac{(0.639)^2}{\pi(0.93)(6.38)} = 0.0219$$

## DESIGN BOX

It is good practice to design conventional subsonic airplanes with high-aspect-ratio wings. The reasons are clear from Eqs. (5.57) and (5.65). The induced drag coefficient  $CD_i$  is inversely proportional to AR, as shown in Eqs. (5.57) and (5.58). This is a strong effect; if the aspect ratio is doubled,  $C_{D,i}$  is reduced by a factor of 2. By comparison, the impact of the span efficiency factor  $e$  is minor, because changes in the wing planform and airfoil design result in only a few percent change in  $e$ , and, in turn, through Eq. (5.57), result in only a few percent change in  $C_{D,i}$ . (Of course, when the designer is looking for every ounce of performance, the wing is designed to have a lift distribution as close to elliptical as practical, making  $e$  as close to unity as practical.) The aspect ratio is the big design feature that controls  $C_{D,i}$ . The same can be said about the lift slope. Increasing the aspect ratio increases the lift slope, as seen from Eq. (5.65). Clearly, on an aerodynamic basis, the designer of a conventional subsonic airplane would prefer to make the aspect ratio as large as possible.

However, what does *as large as possible* mean? Why do the wings of existing airplanes not look like the long and narrow slats from a venetian blind, which have very large aspect ratios? The answer is driven by structural considerations. Imagine the left and right wings on an airplane in flight; the lift acting on each wing acts to bend the wing upward, creating a bending moment where the wing joins the fuselage. The wing structure and the structure through

the fuselage must be strong enough to resist this bending moment. Now imagine the lift acting on a venetian blind; the blind slat will easily buckle under the load unless the designer adds enough material stiffness to resist the buckling. This increase in wing stiffness can be obtained at the cost of increased wing structural weight. Consequently, the design aspect ratio for a conventional airplane is a compromise between competing values in aerodynamics and structures.

The usual outcome of this compromise is subsonic airplanes with [page 378](#) aspect ratios on the order of 5 to 7. The following is a tabulation of wing aspect ratios for various subsonic airplane designs:

Airplane	Aspect Ratio
Wright Flyer (Fig. 1.1)	6.4
Vought F4U Corsair (Fig. 2.16)	5.35
Boeing B-17 (Fig. 2.17)	7.58
Grumman X-29 (Fig. 2.19)	3.91
Grumman F3F-2 (Fig. 2.20)	7.85
Boeing 727 (Fig. 5.44)	7.1

A dramatic example of the importance of a high aspect ratio can be seen in the Lockheed U-2 high-altitude reconnaissance airplane, shown in the three-view in Fig. 5.52. The U-2 was designed with an unusually high aspect ratio of 14.3 because of its mission. In 1954 the United States had an urgent need for a reconnaissance vehicle that could overfly the Soviet Union; the time was at an early stage of the Cold War, and Russia had recently tested a hydrogen bomb. However, such a reconnaissance vehicle would have to fly at an altitude high enough that it could not be reached by interceptor aircraft or ground-to-air missiles; in 1954 this meant cruising at 70,000 ft or higher. The U-2 was designed by Lockheed Skunk Works, a small elite design group at Lockheed known for its innovative and advanced thinking. The airplane was essentially a *point design*: It was designed to achieve this extremely high-altitude cruise. In turn, the need for incorporating a very high-aspect-ratio wing was paramount. The reason is explained in the following.


In steady, level flight, the airplane lift must equal its weight  $L = W$ . In this case, from Eq. (5.18) written for the whole airplane,

$$L = W = \frac{1}{2}\rho_{\infty}V_{\infty}^2SC_L \quad (5.66)$$

Consider an airplane at a constant velocity  $V_{\infty}$ . As it flies higher,  $\rho_{\infty}$  decreases; hence, from Eq. (5.66),  $C_L$  must be increased to keep the lift constant, equal to the weight. That is, as  $\rho_{\infty}$  decreases, the angle of attack of the airplane increases to increase  $C_L$ . There is some maximum altitude (minimum  $\rho_{\infty}$ ) at which  $C_L$  reaches its maximum value; if the angle of attack is increased beyond this point,

the airplane will stall. At its high-altitude cruise condition, the U-2 is flying at a high value of  $C_L$  with a concurrent high angle of attack, just on the verge of stalling. (This is in stark contrast to the normal cruise conditions of conventional airplanes at conventional altitudes, where the cruise lift coefficient and angle of attack are relatively small.) A high value of  $C_L$  means a high induced drag coefficient; note from Eq. (5.57) that  $C_{D,i}$  varies directly as the *square* of  $C_L$ . As a result, at the design high-altitude cruise condition of the U-2, the induced drag is a major factor. To reduce the cruise value of  $C_{D,i}$ , the designers of the U-2 had to opt for as high an aspect ratio as possible. The wing design shown in Fig. 5.52 was the result.

[page 379](#)

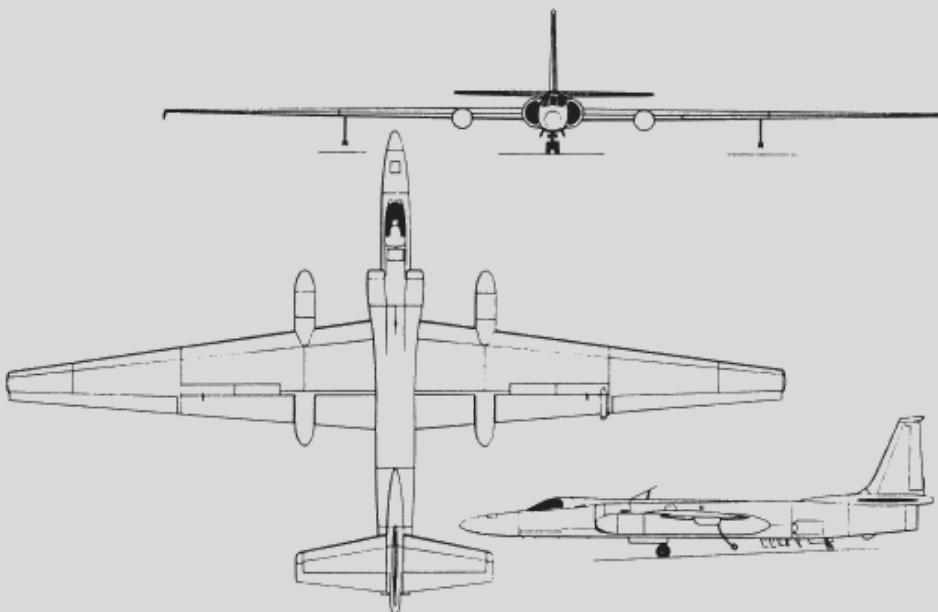


**Figure 5.52** Three-view of the Lockheed U-2 high-altitude reconnaissance airplane. Aspect ratio = 14.3.

It is interesting to note that at the high-altitude operating condition of the U-2, the highest velocity allowed by drag divergence and the lowest velocity allowed by stalling were almost the same; only about 7 mi/h separated these two velocities, which was not an easy situation for the pilot.

In contrast to the extreme high-altitude mission of the U-2, the opposite extreme is high-speed flight at altitudes on the order of hundreds of feet above the ground. Consider a subsonic military aircraft designed for low-altitude, high-speed penetration of an enemy's defenses, flying close enough to the ground to avoid radar detection. The aircraft is flying at high speed in the high-density air near sea level, so it is flying at a very low  $C_L$  and very small angle of attack, as dictated by Eq. (5.66). Under these conditions, induced drag is very

small compared to profile drag. At this design point, it is beneficial to have a low-aspect-ratio wing with a relatively small surface area, which will reduce the profile drag. Moreover, the low aspect ratio provides another advantage under these flight conditions: it makes the aircraft less sensitive to atmospheric turbulence encountered at low altitudes. This is achieved through the effect of the aspect ratio on the lift slope, given by Eq. (5.65). The lift slope is smaller for a low-aspect-ratio wing, as sketched in Fig. 5.53. Imagine the airplane encountering an atmospheric gust that momentarily perturbs its angle of attack by an amount  $\Delta\alpha$ , as sketched in Fig. 5.53. The lift coefficient will be correspondingly perturbed by the amount  $\Delta C_L$ . However, because of its larger lift slope, the high-aspect-ratio wing will experience a larger perturbation  $(\Delta C_L)_2$  than the low-aspect-ratio wing, which experiences the smaller-perturbation  $(\Delta C_L)_1$ . This is shown schematically in Fig. 5.53. The smaller change in  $C_L$  due to a gust for the low-aspect-ratio wing results in a smoother ride, which is good for both the flight crew and the structure of the airplane.

In summary, the consideration of aspect ratio in airplane design is *not* a matter of “one size fits all.” Quite the contrary; we have just discussed two totally different flight conditions that reflect two different design points, one demanding a high-aspect-ratio wing and the other a low-aspect-ratio wing. It is clear that aspect ratio is one of the most important considerations for an airplane designer. The choice of what aspect ratio to use for a given airplane design depends on a number of factors and compromises. We have pointed out some of these considerations in this discussion.

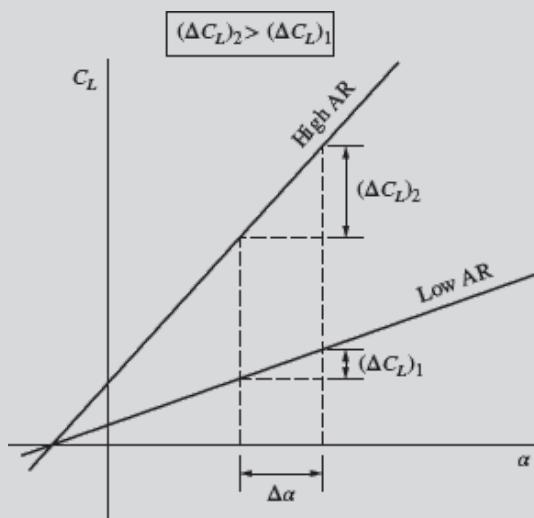

**Figure 5.53** Effect of aspect ratio on the lift slope. For a given perturbation in  $\alpha$ , the high-aspect-ratio wing experiences a larger perturbation in  $C_L$  than the low-aspect-ratio wing.

The induced drag of each wing is

page 380

$$D_i = q_\infty SC_{D,i} = 2.3(255)(0.0219) = 12.84 \text{ lb}$$

The induced drag, accounting for *both* wings, is

$$D_i = 2(12.84) = \boxed{25.7 \text{ lb}}$$

Compare this with the friction drag of 6.82 lb calculated in Example 4.43. Clearly, the induced drag is much larger than the friction drag; this is because the velocity of 30 mi/h was relatively small, requiring a rather large lift coefficient to help generate the 750 lb of lift; and because the induced drag coefficient varies as the *square* of  $C_L$ , the induced drag is large compared to the friction drag at the relatively low flight speed.

*Note:* There is an aerodynamic interaction between the two wings of a biplane that is relatively complex; a discussion of the phenomenon is beyond the scope of this book. Because of this interaction, the induced drag of the biplane configuration is *not* equal to the sum of the induced drags acting on the single wings individually in isolation, as we have assumed in this example. Rather, the induced drag of the biplane configuration is slightly higher than the sum based on our calculations, and there is also a loss of lift. However, the preceding calculation is a reasonable first approximation for the biplane's induced drag.

### EXAMPLE 5.32

Consider two wings with an NACA 23012 airfoil section, (a) one with an aspect ratio of 4 and (b) the other with an aspect ratio of 10. The span efficiency factor for both wings is  $e = e_1 = 0.95$ . Both wings are flying at an angle of attack of  $2^\circ$ . Calculate and compare the change in lift coefficient for both wings if the angle of attack is perturbed by an amount  $\Delta\alpha = 0.5^\circ$  that is, referring to Fig. 5.53, calculate  $(\Delta CL)_2$  and  $(\Delta C_\Delta)_1$  for  $\Delta\alpha = 0.5^\circ$ .

#### ■ Solution

a. Let us first deal with the wing with aspect ratio 4. The lift slope and zero-lift angle of attack for the NACA 23012 airfoil were obtained in Example 5.30 as

$$\alpha_0 = 0.106 \text{ per degree}$$

and

$$\alpha_{L=0} = -1.5^\circ$$

The lift slope for the finite wing with AR = 4 is, from Eq. (5.65),

$$a = \frac{a_0}{1 + 57.3a_0/(\pi e_1 AR)}$$

$$= \frac{0.106}{1 + 57.3(0.106)/[\pi(0.95)(4)]} = 0.07 \text{ per degree}$$

At  $\alpha = 2^\circ$ , the lift coefficient is

$$C_L = a(\alpha - \alpha_{L=0}) = 0.07[2 - (-1.5)] = 0.245$$

When the angle of attack is perturbed by  $\Delta\alpha = 0.5^\circ$ , the new angle of [page 381](#) attack is  $2.5^\circ$ . The lift coefficient for this angle of attack is

$$C_L = 0.7[2.5 - (-1.5)] = 0.28$$

Hence, referring to Fig. 5.53,

$$(\Delta C_L)_1 = 0.28 - 0.245 = \boxed{0.035}$$

b. For the wing with aspect ratio 10, the lift slope was obtained in Example 5.30 as

$$a = 0.088 \text{ per degree}$$

At  $\alpha = 2^\circ$ ,

$$C_L = a(\alpha - \alpha_{L=0}) = 0.088[2 - (-1.5)] = 0.308$$

At  $\alpha = 2.5^\circ$ ,

$$C_L = a(\alpha - \alpha_{L=0}) = 0.088[2.5 - (-1.5)] = 0.352$$

$$(\Delta C_L)_2 = 0.352 - 0.308 = \boxed{0.044}$$

Comparing the results from parts (a) and (b), the high-aspect-ratio wing experiences a 26 percent higher increase in  $C_L$  than the low-aspect-ratio wing.

### EXAMPLE 5.33

In Example 5.29, the lift coefficient for the Vought F4U-1D Corsair flying at maximum velocity at an altitude of 6 km was calculated as  $C_L = 0.154$ . Estimate the angle of attack at which the airplane is flying. Assume that  $e_1 = 0.9$ .

#### ■ Solution

From Example 5.29, AR = 5.35. Also, assuming that the airfoil data for the Corsair is given by the NACA 23012 airfoil in App. D, we have, from Example

5.30,

$$a_0 = 0.106 \text{ per degree, and } \alpha_{L=0} = -1.5^\circ$$

From Eq. (5.65),

$$a = \frac{a_0}{1 + 57.3 \frac{a_0}{\pi e_1 AR}} = \frac{0.106}{1 + 57.3 \frac{0.106}{\pi(0.9)(5.35)}} = 0.0756 \text{ per degree}$$

Because

$$C_L = a(\alpha - \alpha_{L=0}),$$

we have

$$\begin{aligned} \alpha &= \frac{C_L}{a} + \alpha_{L=0} = \frac{0.154}{0.0756} + (-1.5) \\ \alpha &= 2.037 - 1.5 = \boxed{0.537^\circ} \end{aligned}$$

*Note:* Because the airplane is flying at its maximum velocity, most of the [page 382](#) lift is being generated via the dynamic pressure. The required lift coefficient is small (only 0.154), and hence the corresponding angle of attack is small, namely  $0.537^\circ$ .

---


## 5.16 SWEPT WINGS

Almost all modern high-speed aircraft have swept-back wings, such as shown in Fig. 5.54b. Why? We are now in a position to answer this question.

We first consider subsonic flight. Consider the planview of a straight wing, as sketched in Fig. 5.54a. Assume that this wing has an airfoil cross section with a critical Mach number  $M_{cr} = 0.7$ . (Remember from Sec. 5.10 that for  $M_\infty$  slightly greater than  $M_{cr}$ , there is a large increase in drag; hence it is desirable to increase  $M_{cr}$  as much as possible in high-speed subsonic airplane design.) Now assume that we sweep the wing back through an angle of  $30^\circ$ , as shown in Fig. 5.54b. The airfoil, which still has a value of  $M_{cr} = 0.7$ , now “sees” essentially only the component of the flow normal to the leading edge of the wing; that is, the aerodynamic properties of the local section of the swept wing are governed mainly by the flow normal to the leading edge. Hence, if  $M_\infty$  is the free-stream Mach number, the airfoil in Fig. 5.54b is seeing effectively a smaller Mach number:  $M_\infty \cos 30^\circ$ . As a result, the actual free-stream Mach number can be increased *above* 0.7 before critical phenomena on the airfoil are encountered. In fact, we could expect that the critical Mach number for the *swept wing itself* would be as high as  $0.7/\cos 30^\circ = 0.808$ , as shown in Fig. 5.54b. This means that the large increase in

drag (as sketched in Fig. 5.26) would be delayed to  $M_\infty$  much larger than  $M_{cr}$  for the airfoil—in terms of Fig. 5.54, something much larger than 0.7 and maybe even as high as 0.808. Thus we see the main function of a swept wing: *By sweeping the wings of subsonic aircraft, we delay drag divergence to higher Mach numbers.*

page 383

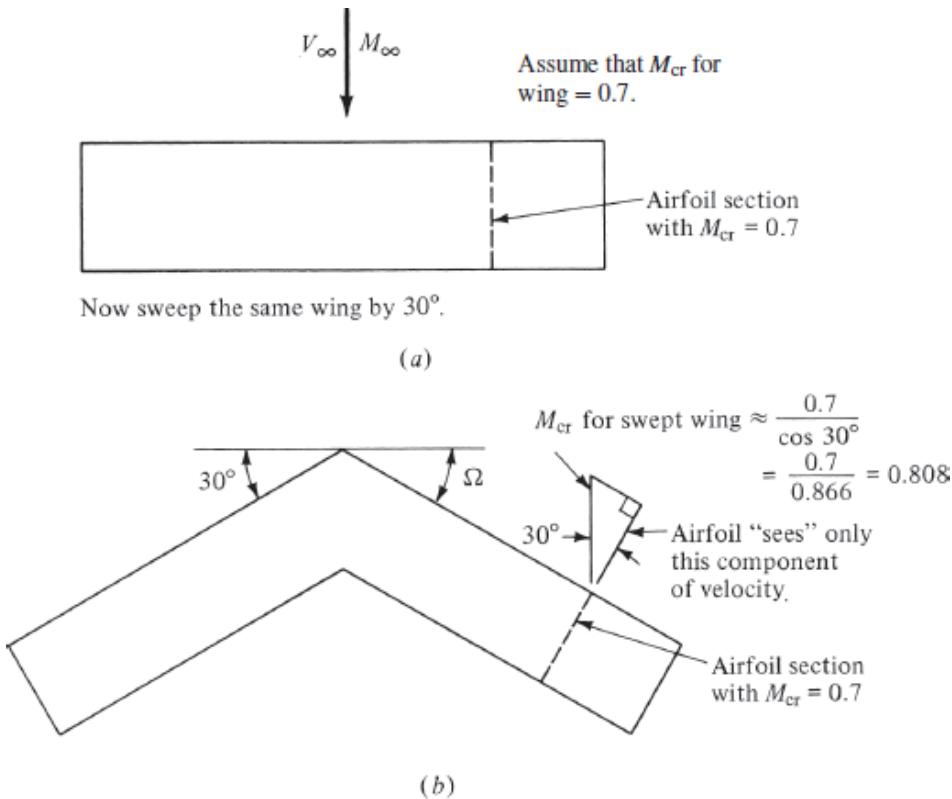


**Figure 5.54** Effect of a swept wing on critical Mach number.

In real life, the flow over the swept wing sketched in Fig. 5.54b is a fairly complex three-dimensional flow; to say that the airfoil sees only the component normal to the leading edge is a sweeping simplification. However, it leads to a good rule of thumb. If  $\Omega$  is the sweep angle, as shown in Fig. 5.54b, the actual critical Mach number for the swept wing is bracketed by

$$M_{cr} \text{ for airfoil} < \text{Actual } M_{cr} \text{ for swept wing} < \frac{M_{cr} \text{ for airfoil}}{\cos \Omega}$$

There is an alternative explanation of how the critical Mach number is increased by sweeping the wing. Consider the segment of a straight wing sketched in Fig. 5.55a. The airfoil section, with a thickness-to-chord ratio of  $t_1/c_1 = 0.15$ , is sketched at the left. The arrowed line  $AB$  represents a streamline flowing over the straight wing. This streamline “sees” the airfoil section with a 15 percent thickness. Now consider this *same wing*, but swept through the angle  $\Omega = 45^\circ$ , as

shown in Fig. 5.55b. The arrowed line  $CD$  represents a streamline flowing over the swept wing. (We draw streamlines  $AB$  and  $CD$  as straight lines in the free-stream direction, ignoring for simplicity any three-dimensional flow effects.) Streamline  $CD$  now travels a longer distance over the swept wing. The airfoil section that streamline  $CD$  effectively “sees” is sketched at the left in Fig. 5.55b. It has the same thickness but a longer effective chord. Hence, the effective airfoil section that streamline  $CD$  sees is *thinner* than that seen in the case of the straight wing. Indeed, for a sweep angle of  $45^\circ$ , the effective airfoil section seen by streamline  $CD$  has a thickness-to-chord ratio of  $t_2/c_2 = 0.106$ . If we simply take the straight wing in Fig. 5.55a and sweep it through an angle of  $45^\circ$ , the swept wing looks to the flow as if the effective airfoil section is almost one-third thinner than it is when the sweep angle is  $0^\circ$ . From our discussion in Sec. 5.9, making the airfoil thinner increases the critical Mach number. Hence, by sweeping the wing, we can increase the critical Mach number of the wing.

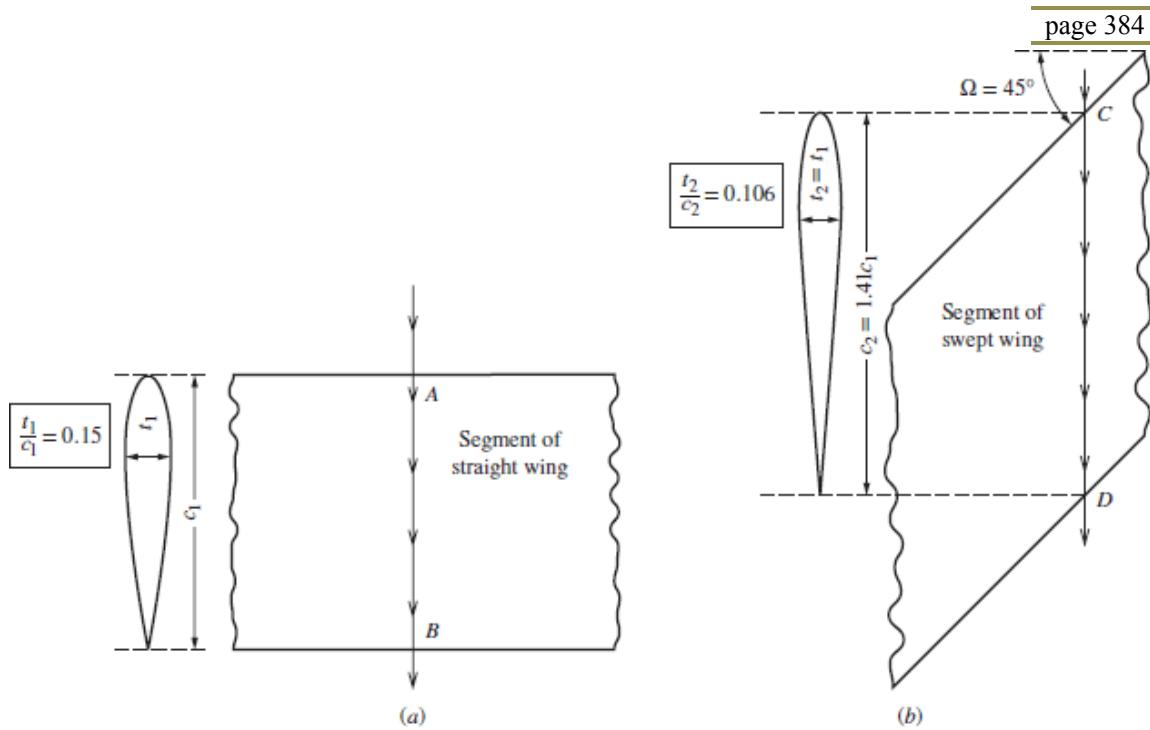


**Figure 5.55** With a swept wing, a streamline effectively sees a thinner airfoil.

Following the usual axiom that “we cannot get something for nothing,” for subsonic flight, increasing the wing sweep reduces the lift. Although wing sweep is beneficial in terms of increasing the drag–divergence Mach number, it decreases  $C_L$ . This is demonstrated in Fig. 5.56, which gives the variation of  $L/D$  with sweep angle for a representative airplane configuration at  $M_\infty = 0.6$  flying at 30,000 ft.

There is a considerable decrease in  $L/D$  as the sweep angle increases, mainly due to the decrease in  $C_L$ .


For supersonic flight, swept wings are also advantageous, but not quite from the same point of view as just described for subsonic flow. Consider the two swept wings sketched in Fig. 5.57. For a given  $M_\infty > 1$ , there is a Mach cone with vertex angle  $\mu$ , equal to the Mach angle [recall Eq. (5.49)]. If the leading edge of a swept wing is *outside* the Mach cone, as shown in Fig. 5.57a, the component of the Mach number normal to the leading edge is supersonic. As a result, a fairly strong oblique shock wave will be created by the wing itself, with an attendant large wave drag. In contrast, if the leading edge of the swept wing is *inside* the Mach cone, as shown in Fig. 5.57b, the component of the Mach number normal to the leading edge is subsonic. As a result, the wave drag produced by the wing is less. Therefore, the advantage of sweeping the wings for supersonic flight is in general to obtain a decrease in wave drag; and if the wing is swept inside the Mach cone, a considerable decrease can be obtained.

The quantitative effects of maximum thickness and wing sweep on the wave drag coefficient are shown in Fig. 5.58a and b, respectively. For all cases the wing aspect ratio is 3.5, and the taper ratio (tip to root chord) is 0.2. Clearly, thin wings with large angles of sweepback have the smallest wave drag.

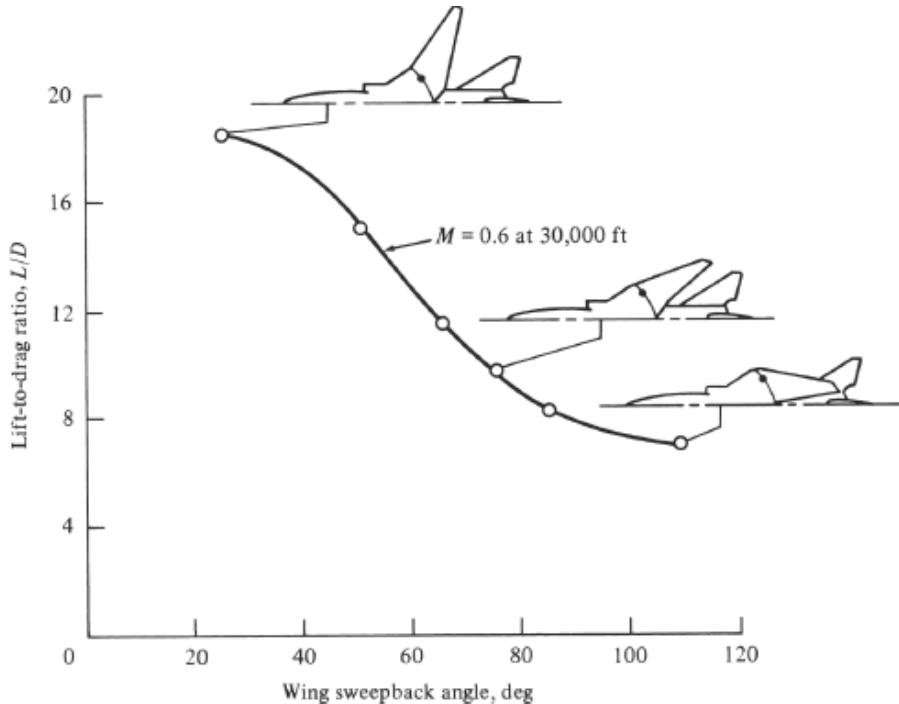


**Figure 5.56** Variation of lift-to-drag ratio with wing sweep. Wind tunnel measurements at the NASA Langley Research Center.

(Source: *From Loftin, NASA SP 468, 1985.*)

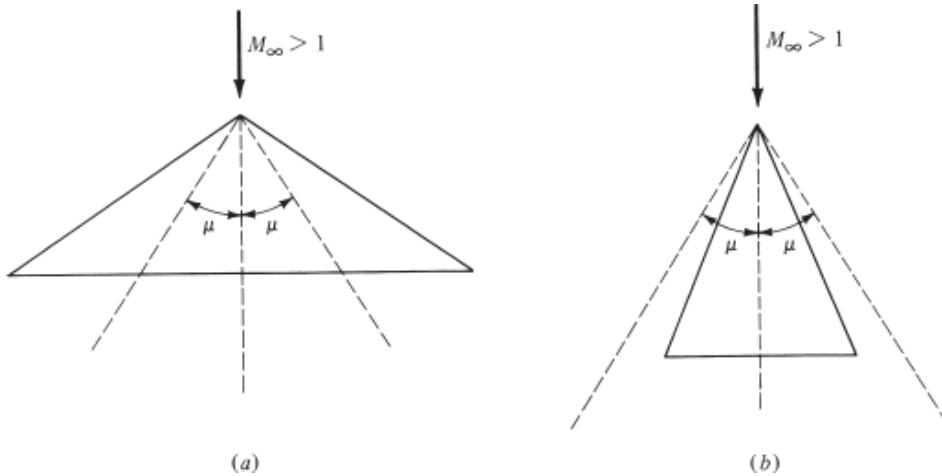

page 385

**Figure 5.57** Swept wings for supersonic flow. (a) Wing swept outside the Mach cone. (b) Wing swept inside the Mach cone.

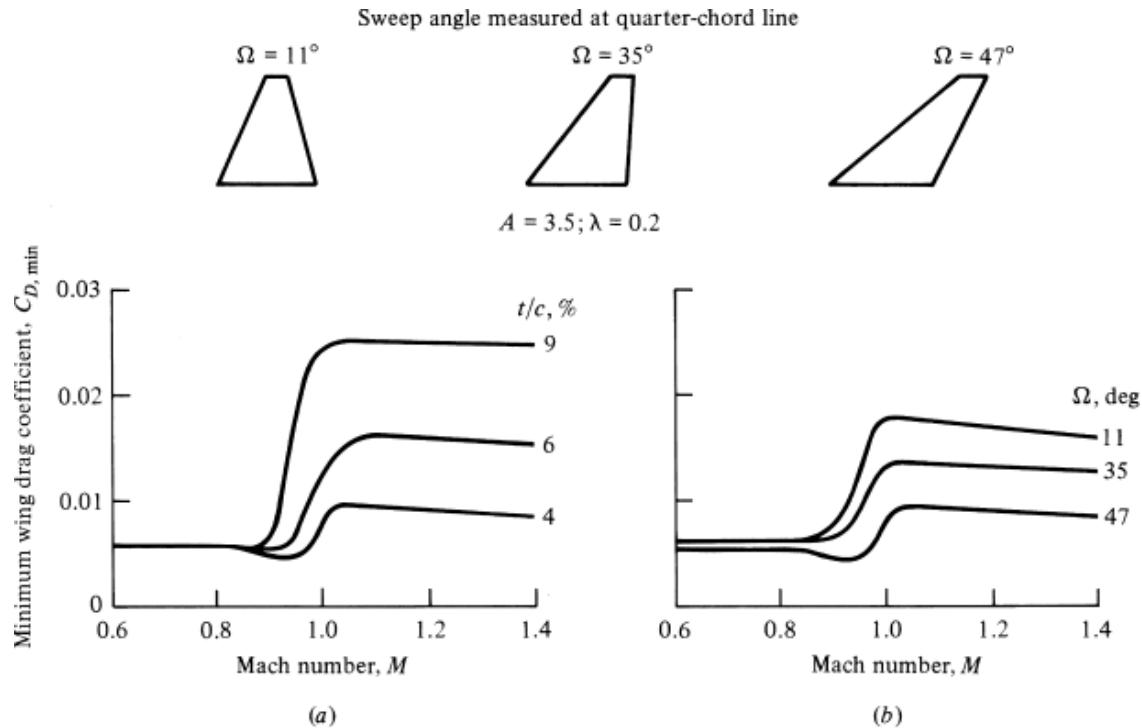

**Figure 5.58** Sketch of the variation of minimum wing drag coefficient versus Mach number with (a) wing thickness as a parameter ( $\Omega = 47^\circ$ ) and (b) wing sweepback angle as a parameter ( $t/c = 4$  percent).

(Source: From L. Loftin, *Quest for Performance*, NASA SP 468, 1985.)

**DESIGN BOX**

page 386

The designer of supersonic airplanes has two basic choices of wing planform: low-aspect-ratio straight wing, or swept wing (including a delta wing). Both classes of wing planform result in lower wave drag compared to a high-aspect-ratio straight wing. Let us examine these choices in greater detail.

First consider a low-aspect-ratio straight wing at supersonic speeds. From Eq. (5.51), the wave drag coefficient for a flat plate of infinite span is

$$\frac{c_{d,w}}{\alpha^2} = \frac{4}{\sqrt{M_\infty^2 - 1}}$$

where  $\alpha$  is the angle of attack in *radians*. The same theory gives the wave drag coefficient for a flat plate of finite aspect ratio AR as

$$\frac{C_{D,w}}{\alpha^2} = \frac{4}{\sqrt{M_\infty^2 - 1}} \left( 1 - \frac{1}{2R} \right) \quad (5.68)$$


where  $R \equiv AR \sqrt{M_\infty^2 - 1}$

(See Hilton, *High-Speed Aerodynamics*, Longman, Green and Co., 1951.) Note that Eq. (5.68) reduces to Eq. (5.67) for an aspect ratio going to infinity. Equation (5.68) is graphed in Fig. 5.59, giving  $CD, w / \alpha^2$  as a function of the aspect ratio for the case of  $M_\infty = 2$ . Note the dramatic drop in the wave drag coefficient at very low aspect ratios. This curve, which is for an infinitely thin flat plate, should be viewed as mainly qualitative when dealing with real wings with thickness. However, it clearly shows the advantage of low-aspect-ratio wings for supersonic flight. This is the exact opposite of the recommended practice for subsonic airplane design, as discussed earlier. However, because of the occurrence of shock waves at supersonic speeds, supersonic wave drag is usually much more important than induced drag; hence the use of low-aspect-ratio wings is good practice in supersonic airplane design. A case in point is the Lockheed F-104 supersonic fighter, shown in Figs. 5.40 and 4.52. Return to Fig. 4.52, and study the wing planform for the F-104. This airplane was the first to be designed for sustained flight at Mach 2, and the designers at Lockheed Skunk Works chose to go with a straight wing of low aspect ratio. The F-104 wing has an aspect ratio of 2.45. The airfoil section is a very thin biconvex shape; the thickness-to-chord ratio is only 0.0336. The leading edge is exceptionally sharp; the leading-edge radius of 0.016 is so small that it poses some danger to the ground crew working around the airplane. All these features have one goal: to reduce the supersonic wave drag. They are classic examples of good supersonic airplane design.


We note that the supersonic lift coefficient is also reduced when the [page 387](#) aspect ratio is reduced. This is illustrated in Fig. 5.60a, which gives the

variation of the lift slope  $dC_L/d\alpha$  as a function of aspect ratio for straight, tapered wings at  $M_\infty = 1.53$ . Shown here are some of the first experimental data obtained in the United States for wings at supersonic speeds. These data were obtained in the 1-ft by 3-ft supersonic tunnel at NACA Ames Laboratory by Walter Vincenti in 1947, but owing to military classification were not released until 1949. In Fig. 5.60a, the dashed triangles shown emanating from the wing leading-edge apex represent the Mach cones at  $M_\infty = 1.53$ . (The *Mach cones* are cones with a semivertex angle equal to the Mach angle  $\mu$ .) Note that as AR is reduced, more of the wing is contained inside the Mach cones. The effect of decreasing AR on the lift slope at supersonic speeds is qualitatively the same as that for subsonic speeds. Recall from Sec. 5.15 that the lift slope is smaller for lower-aspect-ratio wings in subsonic flight. Clearly, from Fig. 5.60a the same trend prevails for supersonic flight, even though the physical nature of the aerodynamic flow field is completely different.

page 388

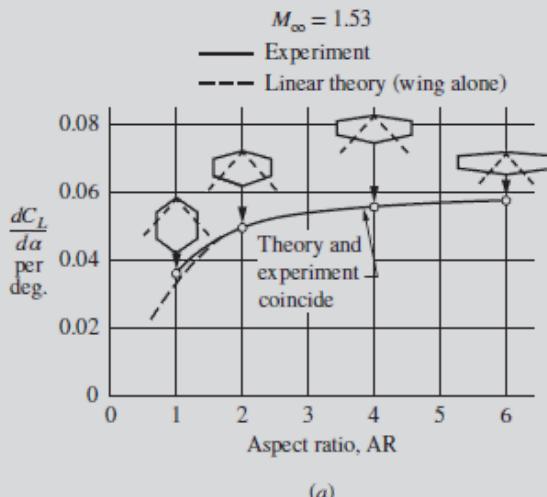

(a)

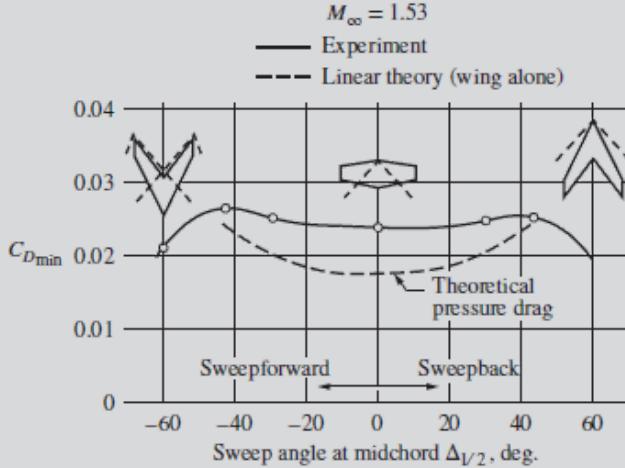


(b)

**Figure 5.60** (a) Effect of aspect ratio on the lift curve for straight wings at supersonic speeds.  $M = 1.53$ . (After W. G. Vincenti, “Comparison between Theory and Experiment for Wings at Supersonic Speeds,” NACA TR 1033.) (b) Effect of wing sweep on supersonic drag. The drag coefficient quoted is for an angle of attack that gives minimum drag.

(Source: *Data from Vincenti*.)


The other option for a wing planform for supersonic airplanes is the [page 389](#) swept wing. (We will consider the delta, or triangular planform, as a subset under swept wings.) In regard to Fig. 5.57, we have already discussed that supersonic wave drag can be considerably reduced by sweeping the wing inside the Mach cone—that is, by having a subsonic leading edge. This is clearly seen in the experimental data shown in Fig. 5.60b, taken from the pioneering supersonic wind tunnel work of Vincenti. In Fig. 5.60b, the minimum total drag coefficient is plotted versus wing sweep angle for  $M_\infty = 1.53$ . Keep in mind that the total drag coefficient is due to both pressure drag (essentially wave drag) and skin friction drag. Positive sweep angles represent *swept-back* wings, and negative sweep angles represent *swept-forward* wings. Note the near symmetry of the data in regard to positive and negative sweep angles; the supersonic drag coefficient is essentially the same for the same degree of sweepback as it is for the same degree of sweepforward. The important message in Fig. 5.60b is the decrease in  $CD_{min}$  at sweep angles greater than  $49^\circ$  or less than  $-49^\circ$ . The Mach angle for  $M_\infty = 1.53$  is given by  $\mu = \sin^{-1}(1/M_\infty) = \sin^{-1}(1/1.53) = 41^\circ$ . Hence, wings with a sweep angle of  $49^\circ$  or larger will be inside the Mach cone. Note the lower drag coefficient at a sweep angle of  $\pm 60^\circ$ ; for this case the wing is comfortably inside the Mach cone, with a subsonic leading edge. These data also show that when the wings are swept outside the Mach cone (supersonic leading edge), the drag coefficient is relatively flat, independent of the sweep angle. So for supersonic flight, to realize the drag reduction associated with a swept wing, the sweep angle must be large enough that the wing is swept *inside* the Mach cones.

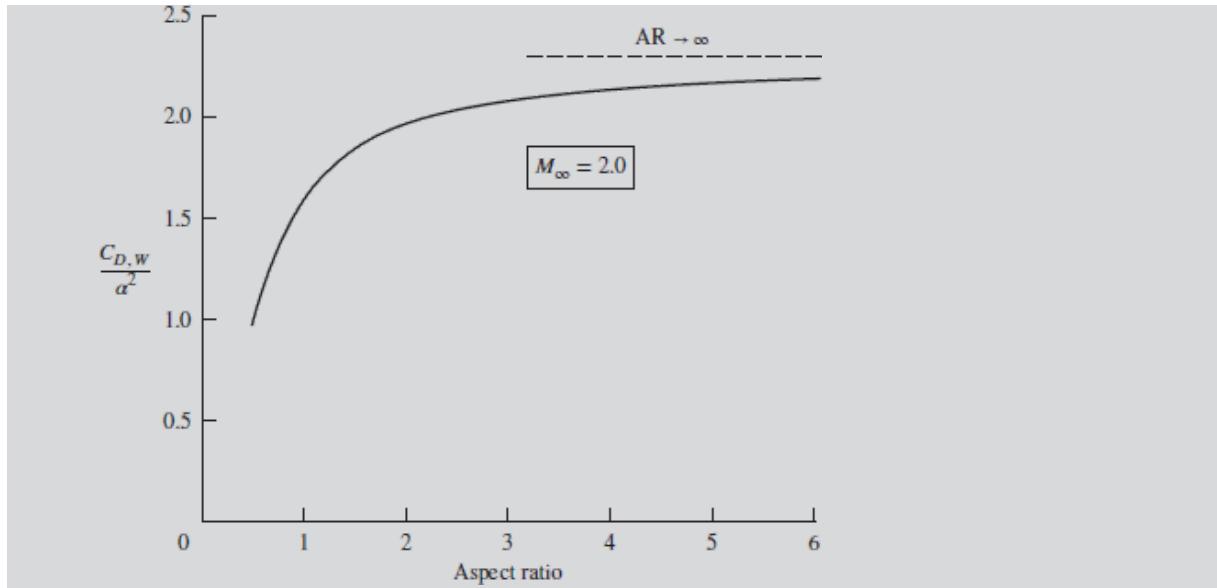

**Figure 5.59** Variation of supersonic wave drag with aspect ratio for flat plates.

A classic example of this design feature is the English Electric Lightning, a Mach 2 interceptor used by the British Royal Air Force in the 1960s and 1970s. As shown in Fig. 5.61, the Lightning has a highly swept wing, with a sweep angle  $\Omega = 60^\circ$ . At Mach 2 the Mach angle is  $\mu = \sin^{-1}(1/M_\infty) = \sin^{-1} 1/2 = 30^\circ$ . A swept wing, to be just inside the Mach cone at  $M_\infty = 2$ , must have a sweep angle of  $\Omega = 60^\circ$  or larger. Because Mach 2 was the design point, it is no surprise that the designers of the Lightning chose a sweep angle of  $60^\circ$ . In addition, the wing of the Lightning has a relatively low aspect ratio of 3.19, and the airfoil section is thin, with a thickness-to-chord ratio of 5 percent—both good design practices for supersonic airplanes.

page 390

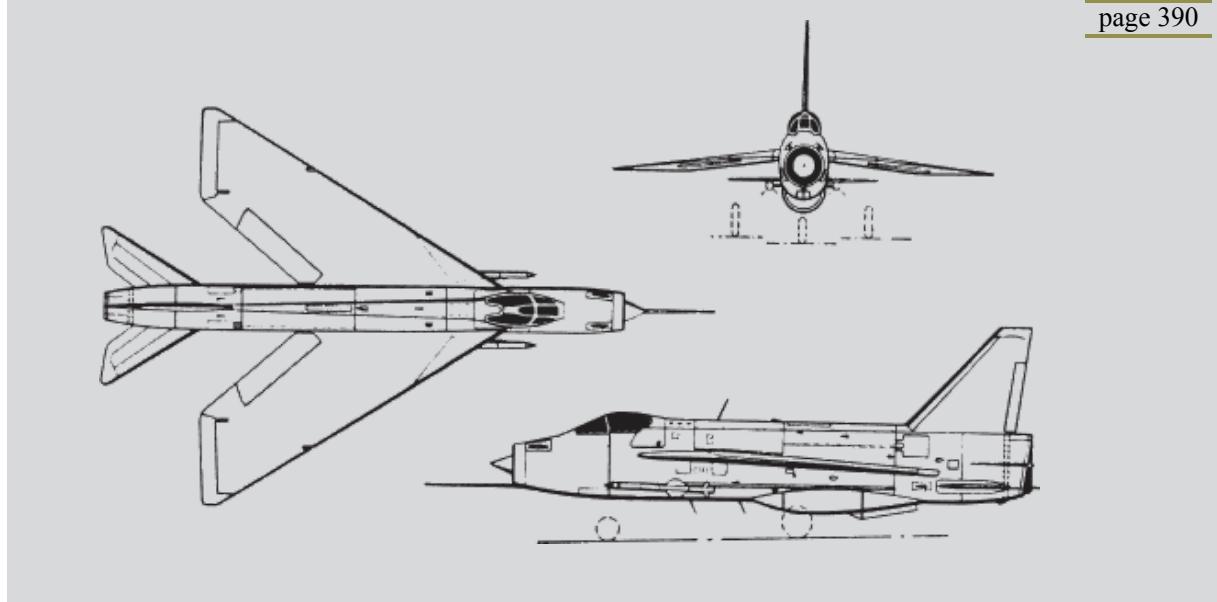


**Figure 5.61** Three-view of the English Electric Lightning supersonic fighter.


Look closely at the Lightning in Fig. 5.61, and then go back and closely examine the F-104 in Fig. 4.52. Here we see classic examples of the two-different wing planforms, swept wing and low-aspect-ratio straight wing, from which designers of supersonic airplanes can choose.

We examined the effect of wing sweep on the *subsonic* lift coefficient (via the lift-to-drag ratio) in Fig. 5.56. What is the effect of sweep on the *supersonic* lift coefficient? The answer is provided by the experimental data of Vincenti, shown in Fig. 5.62. In a trend similar to that for the drag coefficient, we see from Fig. 5.62 that as long as the wing is swept outside the Mach cone (supersonic leading edge), the lift slope is relatively constant, independent of sweep angle. When the wing is swept inside the Mach cone (subsonic leading edge), the lift slope decreases with increasing sweep angle, similar to the case for subsonic flight.

The results shown in Figs. 5.60 and 5.62 clearly show a distinct change in the wing aerodynamic characteristics when the sweep angle is large enough that the wing is inside the Mach cone. This is because the pressure distribution over the wing surface changes radically when the transition is made from a supersonic to a subsonic leading edge. The nature of this change is sketched in Fig. 5.63, which shows three flat-plate wing planforms labeled *A*, *B*, *C* and of progressively increased sweep angle in a supersonic free stream. Wing *A* is a straight wing. The influence of the Mach cones is limited to a small region at the tips; most of the wing is feeling the type of two-dimensional supersonic flow over a flat plate that was discussed in Sec. 5.11 and sketched in Fig. 5.39. Hence, the pressure distribution over most of the surface of wing is the constant pressure distribution illustrated by the vertical shaded area shown near the right tip of the wing. Wing *B* is a swept wing with a supersonic leading edge. A considerable portion of the wing is still outside the Mach cones. In the shaded region, the same constant pressure distribution associated with a flat plate in supersonic flow still prevails. However, wing *C* is a swept wing with a subsonic leading edge; the entire wing is swept inside the Mach cone from the apex. The pressure distribution over this wing is similar to that for subsonic flow, even though the wing is immersed in a supersonic free stream. Note that the shaded area at the right on wing *C* traces out the type of subsonic pressure coefficient distribution familiar to us from our earlier discussions; for example, compare it with Fig. 5.15. This change in the aerodynamic behavior of the flow over a wing swept inside the Mach cone leads to the decrease in wave drag and lift coefficient associated with swept wings in supersonic flow.

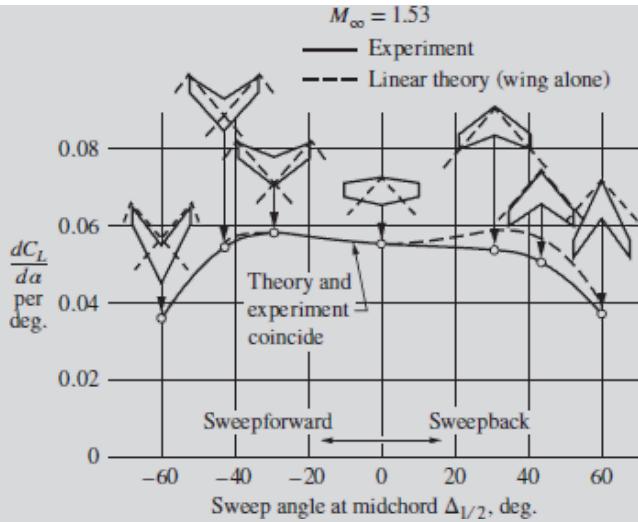

**Figure 5.62** Effect of wing sweep on the lift slope at supersonic speed. Data from Vincenti.

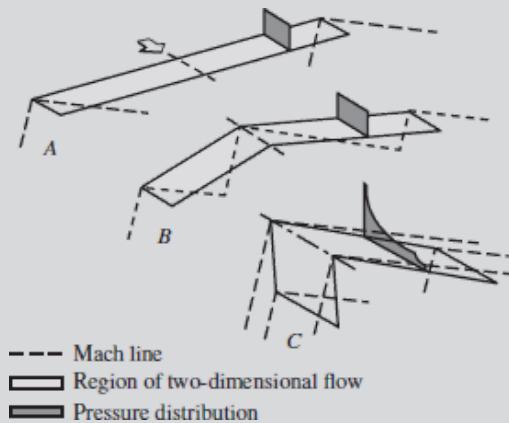


**Figure 5.63** Change in chordwise pressure distribution as a wing at supersonic speeds is progressively swept from outside to inside the Mach cone—that is, as the leading edge progressively changes from supersonic to subsonic.

There is yet another design benefit of a wing with a subsonic leading edge: The leading-edge radius can be larger, similar to that for a subsonic airplane. This has benefits at low speeds, especially for landing and takeoff, for airplanes designed for supersonic flight. A wing with a sharp leading edge and a thin airfoil, such as that used on the F-104 (Figs. 4.52 and 5.40), experiences early flow separation at moderate angles of attack at subsonic speeds. This reduces the value of  $(CL)_{\max}$  and forces the airplane to have higher landing and takeoff speeds. (For example, over its operational history, the F-104 experienced an inordinate number of accidents due to wing stall at low-speed flight conditions.) In contrast, a wing with a blunter, more rounded leading edge has much better

low-speed stall characteristics. Supersonic airplanes having swept wings with subsonic leading edges can be designed with blunter, more rounded leading edges, and hence have better low-speed stalling behavior.

Recall from Figs. 5.60 and 5.62 that the supersonic drag and lift coefficients associated with swept-forward wings are essentially the same as those for swept-back wings. Indeed, the same can be said for high-speed subsonic flight. However, airplane designers have almost always chosen sweepback rather than sweepforward. Why? The answer has to do with aeroelastic deformation of swept wings under load. For a swept-back wing, the location of the effective lift force causes the wing to twist near the tips so as to decrease the angle of attack of the outer portion of the wing. This tends to unload that portion of the wing when lift is increased—a stable situation. In contrast, for a swept-forward wing, the location of the effective lift force causes the wing to twist near the tips so as to increase the angle of attack of the outer portion of the wing, thus causing the lift to increase, which further increases the wing twist. This is an unstable situation that tends to twist the swept-forward wing right off the airplane. These aeroelastic deformation effects are evident in the experimental data shown in Fig. 5.62. Note that the experimental data are not symmetric for swept-forward and swept-back wings. The lift slope is *smaller* for the swept-back wings due to aeroelastic deformation of the wind tunnel models. Hence, for *structural reasons* swept-forward wings have not been the planform of choice. However, modern advances in composite materials now allow the design of very strong, lightweight wings, and this has let designers of high-speed airplanes consider the use of swept-forward wings. Indeed, swept-forward wings have certain design advantages. For example, the wing root can be placed farther back on the fuselage, allowing greater flexibility in designing the internal packaging inside the fuselage. Also, the details of the three-dimensional flow over a swept-forward wing result in flow separation occurring first near the root, preserving aileron control at the tips; in contrast, for a swept-back wing, flow separation tends to occur first near the tips, causing a loss of aileron control. In the 1980s an experimental airplane, the Grumman X-29, was designed with swept-forward wings to allow closer examination of the practical aspects of swept-forward wing design. A three-view of the X-29 is shown in Fig. 5.64. The X-29 research program has been successful, but as yet there has been no rush on the part of airplane designers to go to swept-forward wings.

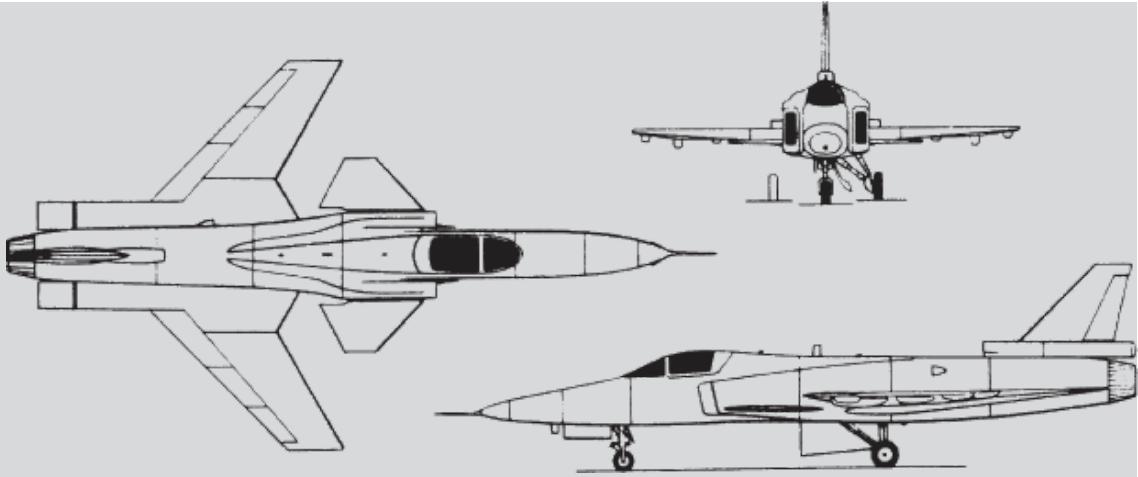


**Figure 5.64** An example of a swept-forward wing: the Grumman X-29.


Return to Fig. 5.61, and examine again the highly swept wing of the English Electric Lightning. It is not much of an intellectual leap to imagine the empty notch between the wing trailing edge and the fuselage filled in with wing structure, producing a wing with a triangular planform. Such wings are called *delta wings*. Since the advent of the jet engine, there has been interest in delta wings for high-speed airplanes, both subsonic and supersonic. One design advantage of the delta wing is that filling in that notch considerably lengthens the chord length of the wing root. For a fixed  $t/c$  ratio, this means the wing thickness at the root can be made larger, providing greater volume for structure, fuel, and so on. The list of advantages and disadvantages of a delta wing is too long to discuss here. See the following book for a thorough and readable discussion of this list: Ray Whitford, *Design for Air Combat*, Jane's Information Group Limited, 1989. Suffice it to say that a number of subsonic and supersonic delta wing aircraft have been designed and used extensively. An example is the French Dassault-Breguet Mirage 2000C, shown in Fig. 5.65. The Mirage 2000C is a supersonic fighter with a top speed of Mach 2.2. The leading-edge sweep angle is  $\Omega = 58^\circ$ . Dassault is well known for its long line of successful delta wing airplanes since the 1950s. Note from Fig. 5.65 that the Mirage 2000C has no horizontal stabilizer; this is characteristic of many delta wing airplanes. The trailing-edge control surfaces are called *elevons*, which, when deflected uniformly in the same direction (up or down), act as elevators and when deflected in opposite directions (one up and the other down) act as ailerons.

In many respects the wing is the heart of the airplane. Great care [page 393](#) goes into the design of the wing. Today the design of wing shapes for supersonic airplanes is sophisticated and fine-tuned. Consider, for example, the Anglo-French Concorde supersonic transport, shown in Fig. 5.66. The Concorde was the only commercial supersonic transport in regular service.

Manufactured jointly by British Aircraft Corporation in England and Aerospatiale in France, the Concorde first flew on March 2, 1969, and went into service with British Airways and Air France in 1976. As shown in Fig. 5.66, the wing of the Concorde is a highly swept ogival delta planform with complex camber and wing droop (anhedral). The airfoil section is thin, with a thickness-to-chord ratio of 3 percent at the root and 2.15 percent from the nacelle outward. (A personal note: This author and his wife flew on the Concorde during the summer of 1998—what an exciting experience! The flight time between New York and London was only 3 h 15 min—too short even to show an in-flight movie. Unfortunately, the Concorde fare was very expensive, and by most measures the airplane was an economic failure. For this reason, in 2003 the Concorde was phased out of service. It will be one of the most demanding design challenges in the 21st century to design an economically and environmentally viable second-generation supersonic transport. Perhaps some readers of this book will successfully rise to this challenge.)

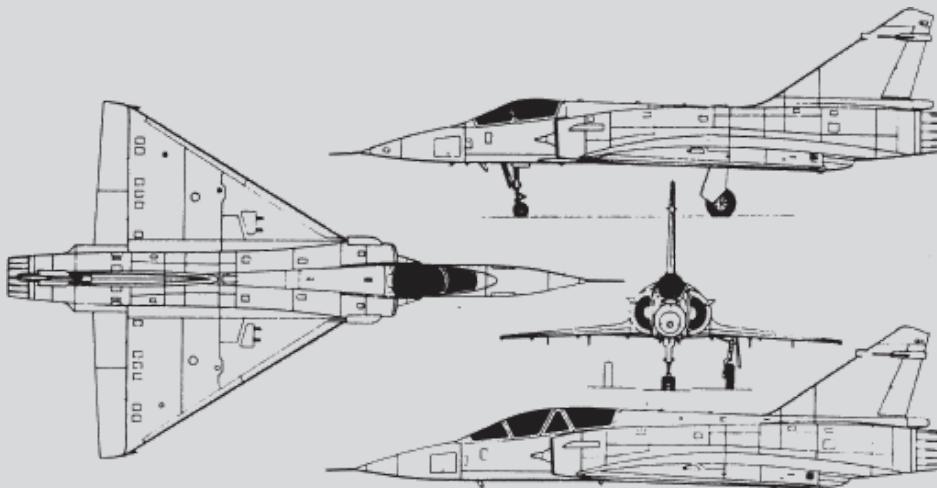

**Figure 5.65** An example of a delta wing: the French Dassault-Breguet Mirage 2000C, with an added side view (lower right) of the Mirage 2000N.

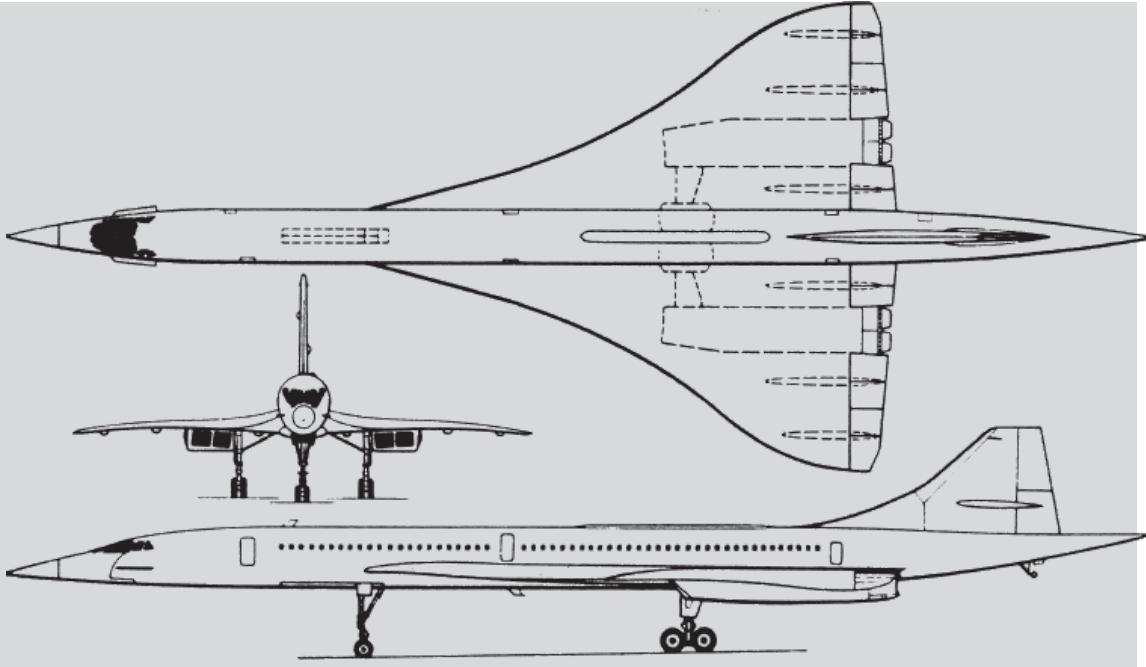

**Figure 5.66** The Anglo-French Aerospatiale/Bac Concorde supersonic transport.

page 395

## 5.17 FLAPS—A MECHANISM FOR HIGH LIFT

An airplane normally encounters its lowest flight velocities at takeoff or landing—two periods that are most critical for aircraft safety. The slowest speed at which an airplane can fly in straight and level flight is defined as the *stalling speed*  $V_{\text{stall}}$ . The calculation of  $V_{\text{stall}}$ , as well as aerodynamic methods of making  $V_{\text{stall}}$  as small as possible, is of vital importance.

The stalling velocity is readily obtained in terms of the maximum lift coefficient. From the definition of  $CL$ ,

$$L = q_{\infty}SC_L = \frac{1}{2}\rho_{\infty}V_{\infty}^2 SC_L$$

Thus

$$V_{\infty} = \sqrt{\frac{2L}{\rho_{\infty}SC_L}} \quad (5.69)$$

In steady, level flight, the lift is just sufficient to support the weight  $W$  of the aircraft; that is,  $L = W$ . Thus

$$V_{\infty} = \sqrt{\frac{2W}{\rho_{\infty}SC_L}} \quad (5.70)$$


Examining Eq. (5.70), for an airplane of given weight and size at a given altitude, we find that the only recourse to minimize  $V_{\infty}$  is to maximize  $CL$ . Hence, stalling

speed corresponds to the angle of attack that produces  $CL_{\max}$ :

$$V_{\text{stall}} = \sqrt{\frac{2W}{\rho_{\infty} S C_{L,\max}}} \quad (5.71)$$

To decrease  $V_{\text{stall}}$ ,  $CL_{\max}$  must be increased. However, for a wing with a given airfoil shape,  $CL_{\max}$  is fixed by nature; that is, the lift properties of an airfoil, including maximum lift, depend on the physics of the flow over the airfoil. To assist nature, the lifting properties of a given airfoil can be greatly enhanced by the use of “artificial” high-lift devices. The most common of these devices is the flap at the trailing edge of the wing, as sketched in Fig. 5.67. When the flap is deflected downward through the angle  $\delta$ , as sketched in Fig. 5.67b, the lift coefficient is increased for the following reasons:

1. The camber of the airfoil section is effectively increased, as sketched in Fig. 5.67c. The more camber an airfoil shape has at a given angle of attack, the higher the lift coefficient.
2. When the flap is deflected, we can visualize a line connecting the leading edge of the airfoil and the trailing edge of the flap: points  $A$  and  $B$ , respectively, in Fig. 5.67d. Line  $AB$  constitutes a *virtual chord line*, rotated clockwise relative to the actual chord line of the airfoil, making the airfoil section with the deflected flap see a “virtual” increase in angle of attack. Hence the lift coefficient is increased.

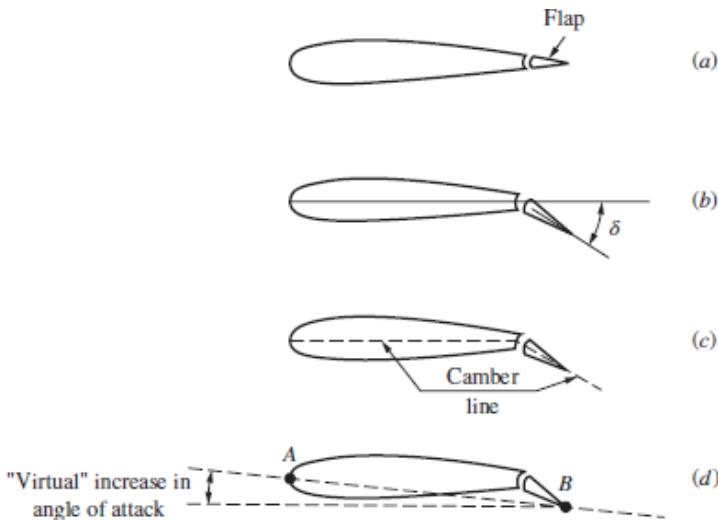

**Figure 5.67** When a plain flap is deflected, the increase in lift is due to an effective increase in camber and a virtual increase in angle of attack.


For these reasons, when the flap is deflected downward through the flap [page 396](#) deflection angle  $\delta$ , the value of  $CL_{\max}$  is increased and the zero-lift angle of attack

is shifted to a more negative value, as shown in Fig. 5.68. In Fig. 5.68 the lift curves for a wing with and without flaps are compared. Note that when the flaps are deflected, the lift curve shifts to the left, the value of  $CL_{\max}$  increases, and the stalling angle of attack at which  $CL_{\max}$  is achieved is decreased. However, the lift slope remains unchanged; trailing-edge flaps do not change the value of  $dCL/d\alpha$ . Also note that for some of the airfoils given in App. D, lift curves are shown with the effect of flap deflection included.


The increase in  $CL_{\max}$  due to flaps can be dramatic. If the flap is designed not only to rotate downward, but also to translate rearward so as to increase the effective wing area, then  $CL_{\max}$  can be increased by approximately a factor of 2. If additional high-lift devices are used, such as slats at the leading edge, slots in the surface, or mechanical means of boundary layer control, then  $CL_{\max}$  can sometimes be increased by a factor of 3 or more, as shown in Fig. 5.69. For an interesting and more detailed discussion of various high-lift devices, the reader is referred to the books by McCormick and Shevell (see the bibliography at the end of this chapter), as well as this author's book: Anderson, *Aircraft Performance and Design*, McGraw-Hill, Boston, 1999.

### EXAMPLE 5.34

Consider the Lockheed F-104 shown in three-view in Fig. 4.52 and in the photograph in Fig. 5.40. With a full load of fuel, the airplane weighs 10,258 kgf. Its empty weight (no fuel) is 6071 kgf. The wing area is  $18.21 \text{ m}^2$ . The wing of the F-104 is very thin, with a thickness of 3.4 percent, and has a razor-sharp leading edge, both designed to minimize wave drag at supersonic speeds. A thin wing with a sharp leading edge, however, has very poor low-speed aerodynamic performance; such wings tend to stall at low angle of attack, thus limiting the maximum lift coefficient. The F-104 has both leading-edge and trailing-edge flaps; but in spite of these high-lift devices, the maximum lift coefficient at subsonic speeds is only 1.15. Calculate the stalling speed at standard sea level when the airplane has (a) a full fuel tank and (b) an empty fuel tank. Compare the results.

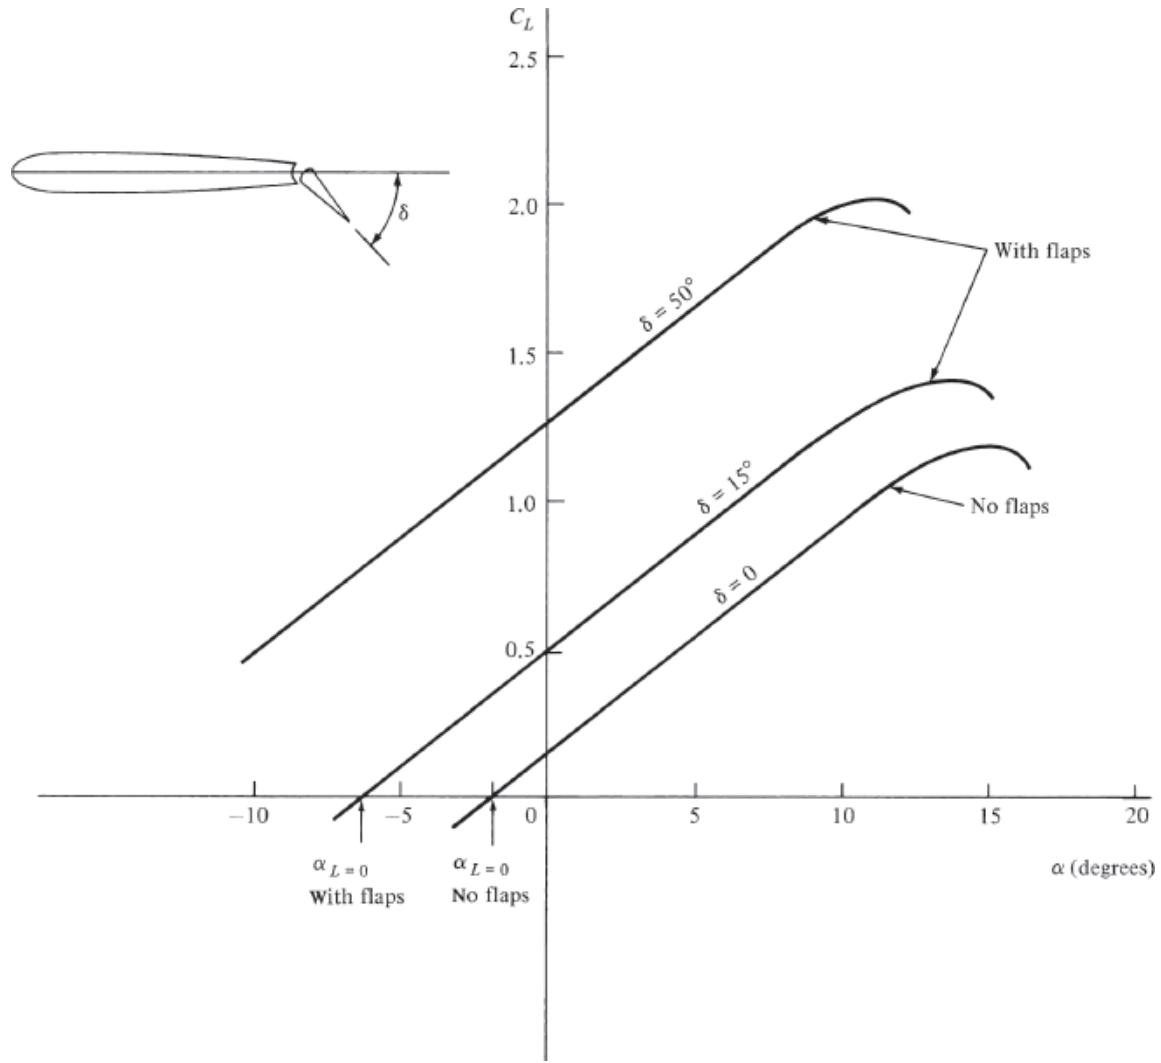

**Figure 5.68** Illustration of the effect of flaps on the lift curve. The numbers shown are typical of a modern medium-range jet transport.

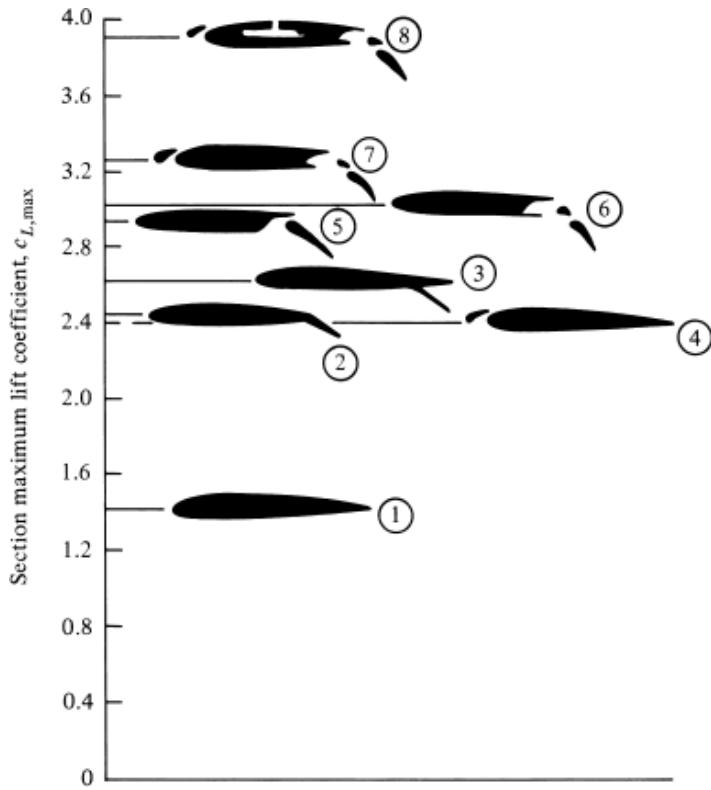

**Figure 5.69** Typical values of airfoil maximum lift coefficient for various types of high-lift devices: (1) airfoil only, (2) plain flap, (3) split flap, (4) leading-edge slat, (5) single-slotted flap, (6) double-slotted flap, (7) double-slotted flap in combination with a leading-edge slat, (8) addition of boundary-layer suction at the top of the airfoil.

(Source: *From Loftin, NASA SP 468, 1985.*)

### ■ Solution

a. Recall that  $\text{kgf}$  is a nonconsistent unit of force; we need to convert it to newtons, remembering from Sec. 2.4 that  $1 \text{ kgf} = 9.8 \text{ N}$ :

$$W = 10,258(9.8) = 1.005 \times 10^5 \text{ N}$$

page 398

At standard sea level,  $\rho_\infty = 1.23 \text{ kg/m}^3$ . Thus, from Eq. (5.71),

$$V_{\text{stall}} = \sqrt{\frac{2W}{\rho_\infty SC_{L,\max}}} = \sqrt{\frac{2(1.005 \times 10^5)}{(1.23)(18.21)(1.15)}} = \boxed{88.3 \text{ m/s}}$$

In miles per hour, using the conversion factor from Example 2.6 that  $60 \text{ mi/h} = 26.82 \text{ m/s}$ ,

$$V_{\text{stall}} = (88.3 \text{ m/s}) \left( \frac{60 \text{ mi/h}}{26.82 \text{ m/s}} \right) = \boxed{197.6 \text{ mi/h}}$$

$$b. W = 6071(9.8) = 5.949 \times 10^4 \text{ N}$$

$$V_{\text{stall}} = \sqrt{\frac{2W}{\rho_{\infty} S C_{L,\max}}} = \sqrt{\frac{2(5.949 \times 10^4)}{(1.23)(18.21)(1.15)}} = 68 \text{ m/s}$$

or

$$V_{\text{stall}} = (68) \left( \frac{60}{26.82} \right) = 152 \text{ mi/h}$$

*Note:* The difference between parts (a) and (b) is the weight. Because  $V_{\text{stall}} \propto W^{1/2}$  from Eq. (5.71), a shorter calculation for part (b), using the answer from part (a), is simply

$$V_{\text{stall}} = (88.3) \sqrt{\frac{5.949 \times 10^4}{1.005 \times 10^5}} = 68 \text{ m/s}$$

which is a check on the preceding result.

Comparing the results from parts (a) and (b), we note the trend that the lighter the airplane, everything else being equal, the lower the stalling speed. Because stalling speed varies with the square root of the weight, however, the reduction in stalling speed is proportionally less than the reduction in weight. In this example, a 41 percent reduction in weight leads to a 23 percent reduction in stalling speed.

---

page 399


### EXAMPLE 5.35

---

Consider the Boeing 727 trijet transport shown in the photograph in Fig. 5.44 and in the three-view in Fig. 5.70. This airplane was designed in the 1960s to operate out of airports with relatively short runways, bringing jet service to smaller municipal airports. To minimize the takeoff and landing distances, the 727 had to be designed with a relatively low stalling speed. From Eq. (5.71), a low  $V_{\text{stall}}$  can be achieved by designing a wing with a large planform area,  $S$ , and/or with a very high value of  $CL_{\text{max}}$ . A large wing area, however, leads to a structurally heavier wing and increased skin friction drag—both undesirable features. The Boeing engineers instead opted to achieve the highest possible  $CL_{\text{max}}$  by designing the most sophisticated high-lift mechanism at that time, consisting of triple-slotted flaps at the wing trailing edge and flaps and slots at the leading edge. With these devices fully deployed, the Boeing 727 had a maximum lift coefficient of 3.0. For a weight of 160,000 lb and a wing planform area of 1650 ft $^2$ , calculate the stalling speed of the Boeing 727 at standard sea level. Compare this result with that obtained for the F-104 in Example 5.34.

---

page 400

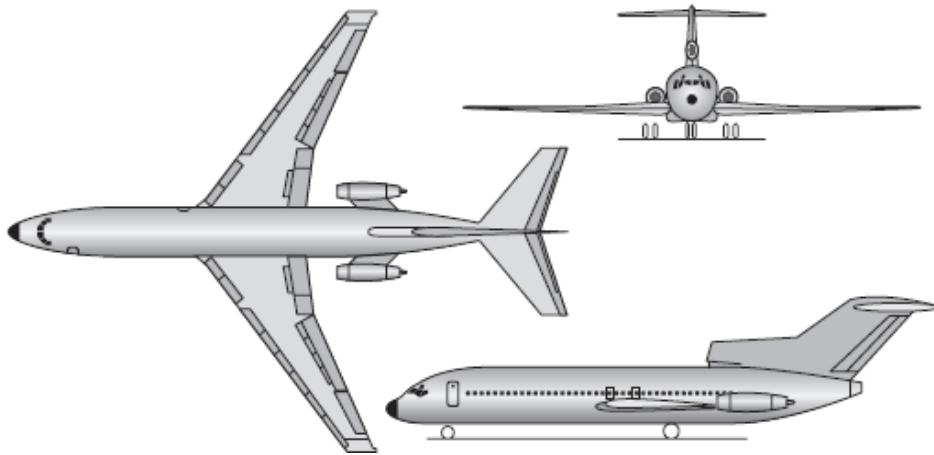

**Figure 5.70** Three-view of the Boeing 727 three-engine commercial jet transport.

■ **Solution**

From Eq. (5.71),


$$V_{\text{stall}} = \sqrt{\frac{2W}{\rho_{\infty}SC_{L,\max}}} = \sqrt{\frac{2(160,000)}{(0.002377)(1650)(3.0)}} = \boxed{165 \text{ ft/s}}$$

In miles per hour,

$$V_{\text{stall}} = 165 \left( \frac{60}{88} \right) = 112.5 \text{ mi/h}$$

In Example 5.34a for the Lockheed F-104, we found  $V_{\text{stall}} = 197.6 \text{ mi/h}$ , a much higher value than the Boeing 727. The airplanes in these two examples, a point-designed Mach 2 fighter and a short-field commercial jet transport, represent high and low extremes in stalling speeds for conventional jet airplanes.

*Note:* Computed streamline patterns over the Boeing 727 airfoil section are shown in Fig. 5.71, showing the high-lift devices deployed for landing configuration at an angle of attack of  $6^\circ$ , takeoff configuration at an angle of attack of  $10^\circ$ , and with the clear configuration (no deployment of the high-lift devices) for cruise at an angle of attack of  $3^\circ$ . Notice how much the flow field is changed when the high-lift devices are deployed; the streamline curvature is greatly increased, reflecting the large increase in lift coefficient.

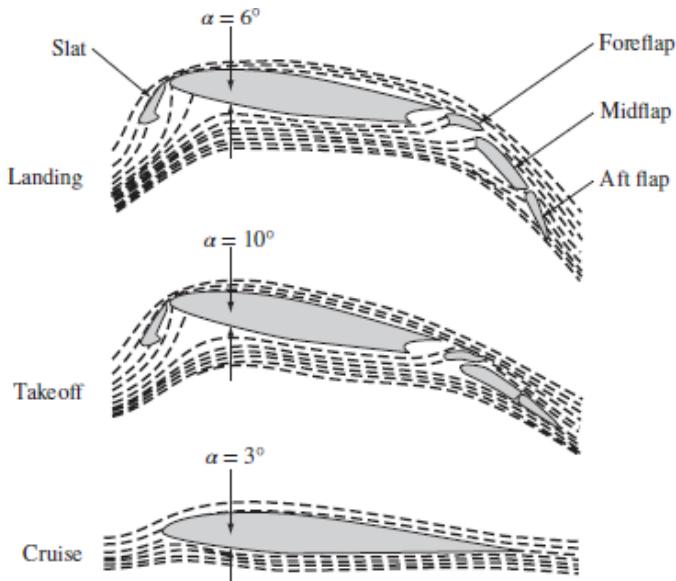

**Figure 5.71** Streamline patterns over the Boeing 727 airfoil with and without high-lift devices deployed, comparing the cases for landing, takeoff, and cruise.

(Source: American Institute of Aeronautics and Astronautics (AIAA), with permission.)

## 5.18 AERODYNAMICS OF CYLINDERS AND SPHERES


Consider the low-speed subsonic flow over a sphere or an infinite cylinder with its axis normal to the flow. If the flow were inviscid (frictionless), the theoretical flow pattern would look qualitatively as sketched in Fig. 5.72a. The streamlines would form a symmetric pattern; hence the pressure distributions over the front and rear surfaces would also be symmetric, as sketched in Fig. 5.72b. This symmetry creates a momentous phenomenon: namely, that there is *no pressure drag on the sphere* if the flow is frictionless. This can be seen by simple inspection of Fig. 5.72b: The pressure distribution on the front face ( $-90^\circ \leq \theta \leq 90^\circ$ ) creates a force in the drag direction, but the pressure distribution on the rear face ( $90^\circ \leq \theta \leq 270^\circ$ ), which is identical to that on the front face, creates an equal and opposite force. Thus we obtain the curious theoretical result that there is no drag on the body, quite contrary to everyday experience. This conflict between theory and experiment was well known at the end of the 19th century and is called *d'Alembert's paradox*.

The actual flow over a sphere or cylinder is sketched in Fig. 4.37; as discussed in Sec. 4.20, the presence of friction leads to separated flows in regions of adverse pressure gradients. Examining the theoretical inviscid pressure distribution shown in Fig. 5.72b, we find that on the rear surface ( $90^\circ \leq \theta \leq 270^\circ$ ), the pressure increases in the flow direction; that is, an adverse pressure gradient exists. Thus, it


is entirely reasonable that the real-life flow over a sphere or cylinder would be separated from the rear surface. This is indeed the case, as first shown in Fig. 4.37 and as sketched again in Fig. 5.73a. The real pressure distribution that corresponds to this separated flow is shown as the solid curve in Fig. 5.73b. Note that the average pressure is much higher on the front face ( $-90^\circ < \theta < 90^\circ$ ) than on the rear face ( $90^\circ < \theta < 270^\circ$ ). As a result, a net drag force is exerted on the body. Hence nature and experience are again reconciled, and d'Alembert's paradox is removed by a proper account of the presence of friction.

---


page 402

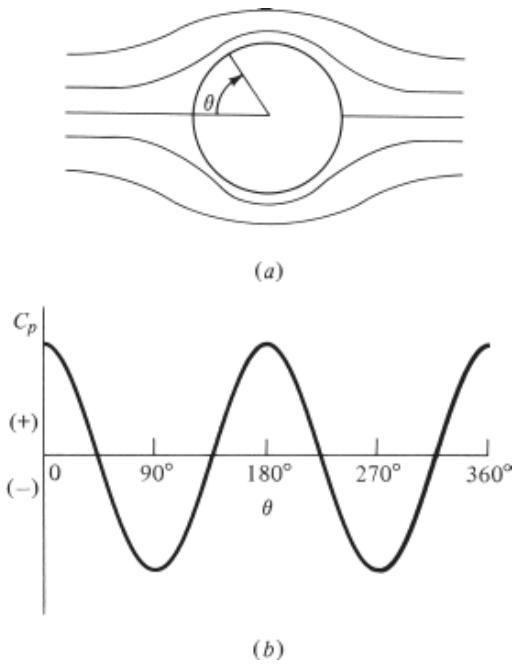

**Figure 5.72** Ideal frictionless flow over a sphere. (a) Flow field. (b) Pressure coefficient distribution.

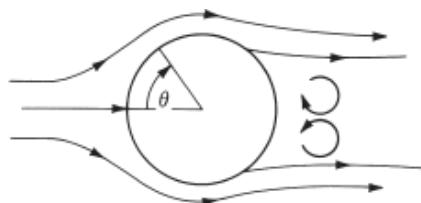


(a)

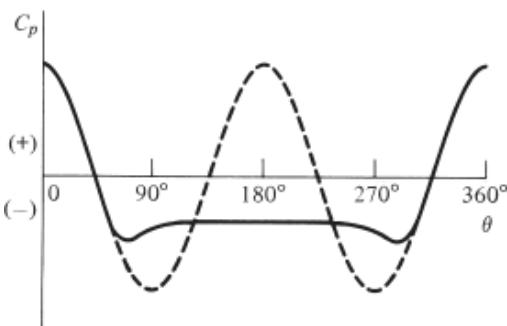

(b)


**Figure 5.73** Real separated flow over a sphere; separation is due to friction. (a) Flow field. (b) Pressure coefficient distribution.

The flow over a sphere or cylinder, and therefore the drag, is dominated by flow separation on the rear face. This leads to an interesting variation of  $CD$  with the Reynolds number. Let the Reynolds number be defined in terms of the sphere diameter  $d$ :  $Re = \rho_\infty V_\infty d / \mu_\infty$ . If a sphere is mounted in a low-speed subsonic wind tunnel and the free-stream velocity is varied so that  $Re$  increases from  $10^5$  to  $10^6$ , then a curious, almost discontinuous drop in  $CD$  is observed at about  $Re = 3 \times 10^5$ . This is called the *critical* Reynolds number for the sphere. This behavior is sketched in Fig. 5.74. What causes this precipitous decrease in drag? The answer lies in the different effects of laminar and turbulent boundary layers on flow separation. At the end of Sec. 4.20, we noted that laminar boundary layers separate much more readily than turbulent boundary layers. In the flow over a sphere at  $Re < 3 \times 10^5$ , the boundary layer is laminar. Hence the flow is totally separated from the rear face, and the wake behind the body is large, as sketched in Fig. 5.75a. In turn, the value of  $CD$  is large, as noted at the left of Fig. 5.74 for  $Re < 3 \times 10^5$ . However, as  $Re$  increases above  $3 \times 10^5$ , transition takes place on the front face, the boundary layer becomes turbulent, and the separation point moves rearward. (Turbulent boundary layers remain attached for longer distances in the face of adverse pressure gradients.) In this case the wake behind the body is much smaller, as sketched in Fig. 5.75b. In turn the pressure drag is less, and  $CD$  decreases as noted at the right of Fig. 5.74.

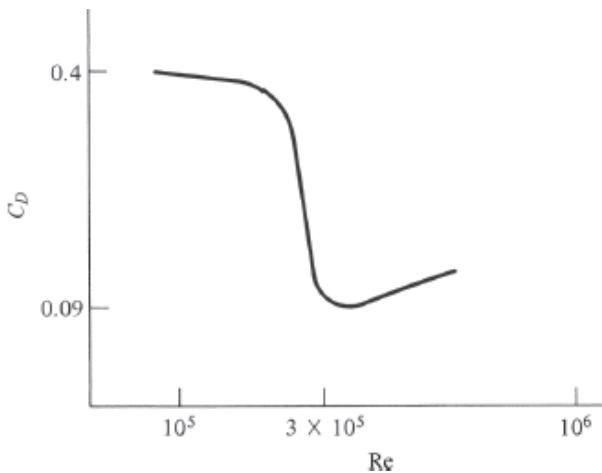

**Figure 5.74** Variation of drag coefficient with Reynolds number for a sphere in low-speed flow.

page 403

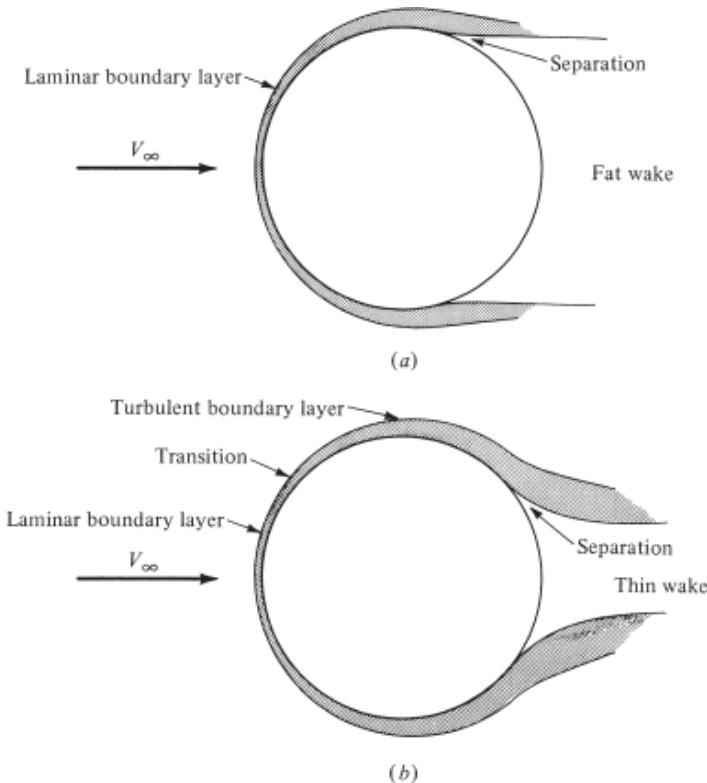

**Figure 5.75** Laminar and turbulent flow over a sphere.


page 404

## DESIGN BOX

The large pressure drag associated with blunt bodies such as the cylinders and spheres discussed in this section leads to the design concept of *streamlining*.

Consider a body of cylindrical cross section of diameter  $d$ , with the axis of the cylinder oriented perpendicular to the flow. There will be separated flow on the back face of the cylinder, with a relatively fat wake and with the associated high-pressure drag; this case is sketched in Fig. 5.76a. The bar to the right of Fig. 5.76a denotes the total drag of the cylinder; the shaded portion of the bar represents skin friction drag, and the open portion represents the pressure drag. Note that for the case of a blunt body, the drag is relatively large, and most of this drag is due to pressure drag. However, look at what happens when we wrap a long, mildly tapered afterbody on the back of the cylinder, creating the teardrop-shaped body sketched in Fig. 5.76b. This shape is a *streamlined body*, of the same thickness  $d$  as the cylinder. However, because of the tapered afterbody, the adverse pressure gradient along the back of the streamlined body will be much milder than that for the back surface of the cylinder, and hence flow separation on the streamlined body will be delayed until much closer to the trailing edge, as sketched in Fig. 5.76b, with an attendant, much smaller wake. As a result, the pressure drag of the streamlined body will be much smaller than that for the cylinder. Indeed, as shown by the bar to the right of Fig. 5.76b, the total drag of the streamlined body in a low-speed flow will be almost a factor of 10 smaller than that of a cylinder of the same thickness. The friction drag of the streamlined body will be larger due to its increased surface area, but the pressure drag is so much less that it dominates this comparison.

This is why so much attention is placed on *streamlining* in airplane design. The value of streamlining was not totally recognized by airplane designers until the late 1920s. Jump ahead to Figs. 6.79 and 6.80. In Fig. 6.79 a typical strut-and-wire biplane from World War I, the French SPAD XIII, is shown. This airplane is definitely *not* streamlined. In contrast, by the middle 1930s streamlined airplanes were in vogue, and the Douglas DC-3 shown in Fig. 6.80 is a classic example. The evolution of our understanding of streamlining, and how it was eventually applied in airplane design, is one of the more interesting stories in the history of aerodynamics. For this story, see Anderson, *A History of Aerodynamics and Its Impact on Flying Machines*, Cambridge University Press, New York, 1997.

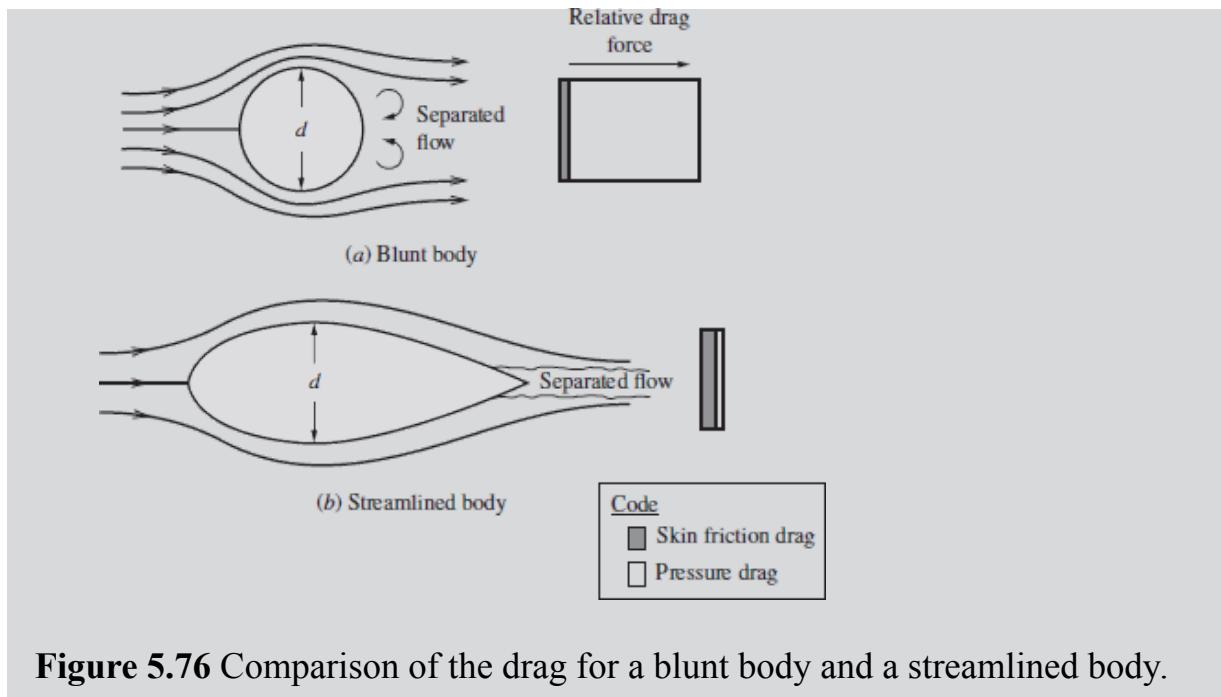

**Figure 5.76** Comparison of the drag for a blunt body and a streamlined body.

Therefore, to decrease the drag on a sphere or cylinder, a turbulent [page 405](#) boundary layer must be obtained on the front surface. This can be made to occur naturally by increasing  $Re$  until transition occurs on the front face. It can also be forced artificially at lower values of  $Re$  by using a rough surface to encourage early transition or by wrapping wire or other protuberances around the surface to create turbulence. (The use of such artificial devices is sometimes called *tripping the boundary layer*.)

It is interesting to note that the dimples on the surface of a golf ball are designed to promote turbulence and hence reduce the drag on the ball in flight. Indeed, some recent research has shown that polygonal dimples result in less drag than the conventional circular dimples on golf balls; but a dimple of any shape leads to less pressure drag than a smooth surface does (table tennis balls have more drag than golf balls).

### EXAMPLE 5.36

A standard American-sized golf ball has a diameter of 1.68 in. The velocity of the golf ball immediately after coming off the face of the driver after impact of the club face with the ball is typically 148 mi/h. Calculate the Reynolds number of the ball, assuming standard sea-level conditions, and compare this value with the critical Reynolds number for a sphere.

#### ■ Solution

The diameter  $d = 1.68 \text{ in} = 0.14 \text{ ft}$ . The velocity is  $V = 148 \text{ mi/h} = 148 (88/60) = 217.1 \text{ ft/s}$ . The standard sea-level values of  $\rho_\infty$  and  $\mu_\infty$  are  $0.002377 \text{ slug/ft}^3$  and  $3.7373 \times 10^{-7} \text{ slug/ft s}$  (from Sec. 4.15).

$$\text{Re} = \frac{\rho_\infty V_\infty d}{\mu_\infty} = \frac{(0.002377)(217.1)(0.14)}{3.7373 \times 10^{-7}} = \boxed{1.933 \times 10^5}$$

This value is slightly *below* the critical Reynolds number of  $3 \times 10^5$ . If the natural phenomenon were left to itself, the golf ball would have a laminar boundary layer with the consequent early flow separation shown in Fig. 5.75a, resulting in the large value of drag coefficient at Reynolds numbers less than  $3 \times 10^5$ , as shown in Fig. 5.74. However, the dimples on the surface of a golf ball serve to trip the boundary layer to a turbulent flow at Reynolds numbers less than  $3 \times 10^5$ , creating a larger region of attached flow, as seen in Fig. 5.75b. This in turn reduces the drag coefficient to the lower value seen at the right in Fig. 5.74. The dimples are a manmade mechanism for tripping the boundary layer that effectively lowers the Reynolds number at which transition to a turbulent boundary layer takes place.

### EXAMPLE 5.37

For the golf ball in Example 5.36, calculate the drag for two cases: (a) a hypothetical ball with a perfectly smooth skin, and (b) a real ball with dimples.

#### ■ Solution

a. Because  $\text{Re} = 1.933 \times 10^5$  is slightly below the critical value, and there is no roughness on the surface to artificially trip the boundary layer, the value of the sphere drag coefficient from Fig. 5.74 is about 0.4. For the flow conditions given in Example 5.36,

$$q_\infty = \frac{1}{2} \rho_\infty V_\infty^2 = \frac{1}{2} (0.002377)(217.1)^2 = 56 \text{ lb/ft}^2$$

page 406

For a sphere, the reference area used to define the drag coefficient is the cross-sectional area. Thus

$$S = \frac{\pi d^2}{4} = \frac{\pi (0.14)^2}{4} = 0.0154 \text{ ft}^2$$

Therefore,

$$D = q_\infty S C_d = (56)(0.0154)(0.4) = \boxed{0.345 \text{ lb}}$$

b. In this case, there are dimples on the surface of the golf ball, and these will trip the boundary layer to a turbulent flow, yielding the much lower drag coefficient of

0.1 shown in Fig. 5.74. Thus

$$D = q_{\infty}SC_d = (56)(0.0154)(0.1) = \boxed{0.086 \text{ lb}}$$

Readers who play golf can understand the significance of this result. You can drive the low-drag ball with dimples a much larger distance down the fairway than if the ball had a smooth skin with a correspondingly high drag.

---

## 5.19 HOW LIFT IS PRODUCED—SOME ALTERNATIVE EXPLANATIONS


Return to our road map in Fig. 5.1. We have covered all the milestones on this map except the one at the bottom labeled “How lift is produced.” This is the subject of this section.

It is amazing that today, more than 100 years after the first flight of the *Wright Flyer*, groups of engineers, scientist, pilots, and others can gather together and have a spirited debate on how an airplane wing generates lift. Various explanations are put forth, and the debate centers on which explanation is the most fundamental. The purpose of this section is to attempt to put these various-explanations in perspective and to resolve the debate. In our previous discussions in this book we have consistently put forth one explanation as the most fundamental, and we have intentionally not burdened your thinking with any alternatives. So, you may be wondering what the big deal is here. You already know how lift is produced. However, because the literature is replete with various different (and sometimes outright incorrect) explanations of how lift is produced, you need to be aware of some of the alternative thinking.

First let us consider what this author advocates as the most page 407 fundamental explanation of lift. It is clear from our discussion in Sec. 2.2 that the two hands of nature that reach out and grab hold of a body moving through a fluid (liquid or gas) are the pressure and shear stress distributions exerted all over the exposed surface of the body. The resultant aerodynamic force on the body is the net, integrated effect of the pressure and shear stress distributions on the surface. Because the lift is the component of this resultant force perpendicular to the relative wind, and because the pressure on the surface of an airfoil at reasonable angles of attack acts mainly in the lift direction (whereas the shear stress acts mainly in the drag direction), we are comfortable in saying that for lift the effect of shear stress is secondary and that lift is mainly due to the imbalance of the pressure distributions over the top and bottom surfaces of the airfoil. Specifically, the pressure on the top surface of the airfoil is lower than the pressure on the bottom surface, and presto—lift! However, this raises the question of *why* the pressure is lower on the top of the airfoil and higher on the

bottom. The answer is simply that the aerodynamic flow over the airfoil is obeying the laws of nature: mass continuity and Newton's second law. Let us look at this more closely and see how nature applies these laws to produce lift on an airplane wing. Three intellectual thoughts follow in sequence:

1. Consider the flow over an airfoil as sketched in Fig. 5.77a. Consider the stream tubes *A* and *B* shown here. The shaded stream tube *A* flows over the top surface, and the unshaded stream tube *B* flows over the bottom surface. Both stream tubes originate in the free stream ahead of the airfoil. As stream tube *A* flows toward the airfoil, it senses the upper portion of the airfoil as an obstruction, and stream tube *A* must move out of the way of this obstruction. In so doing, stream tube *A* is squashed to a smaller cross-sectional area as it flows over the nose of the airfoil. In turn, because of *mass continuity* ( $\rho AV = \text{constant}$ ), the velocity of the flow in the stream tube must *increase* in the region where the stream tube is being squashed. This higher velocity is shown by the long arrow at point *a* in Fig. 5.77a. As the stream tube flows downstream of point *a*, its cross-sectional area gradually increases and the flow velocity decreases, as shown by the shorter arrow at point *b*. Note that stream tube *A* is squashed the most in the nose region, *ahead* of the maximum thickness of the airfoil. Hence, the maximum velocity occurs *ahead* of the maximum thickness of the airfoil. Now consider stream tube *B*, which flows over the bottom surface of the airfoil. The airfoil is designed with positive camber; hence the bottom surface of the airfoil presents less of an obstruction to stream tube *B*, so stream tube *B* is not squashed as much as stream tube *A* in flowing over the nose of the airfoil. As a result, the flow velocity in stream tube *B* remains *less* than that in stream tube *A*. Therefore, we can state the following:

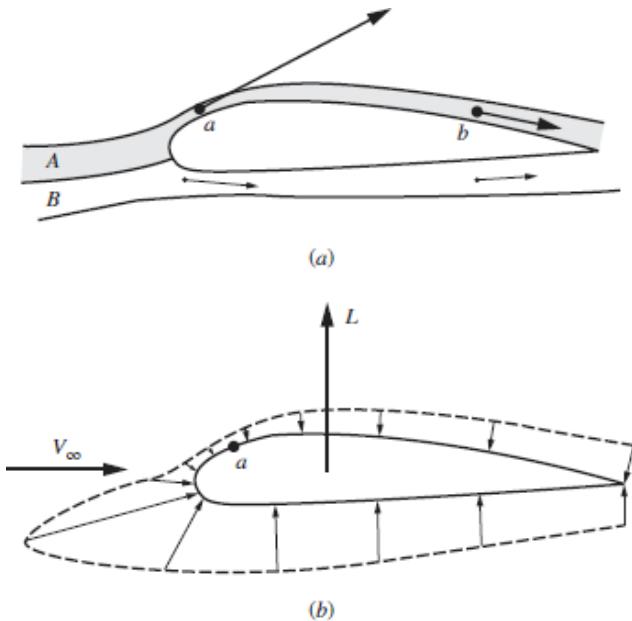

Note: The length of the arrows denoting pressure is proportional to  $p - p_{\text{ref}}$ , where  $p_{\text{ref}}$  is an arbitrary reference pressure slightly less than the minimum pressure on the airfoil.

**Figure 5.77** (a) Flow velocity on the upper surface is on the average higher than that on the bottom surface due to squashing of streamline A compared to streamline B. (b) As a result, the pressure on the top surface is lower than the pressure on the bottom surface, creating lift in the upward direction.

Because of the law of mass continuity—that is, the continuity equation—the flow velocity increases over the top surface of the airfoil more than it does over the bottom surface.

To see the squashing of the stream tube in an actual flow, return to the smoke flow photograph in Fig. 2.6. It is clear that the stream tube flowing over the top surface of the airfoil is being squashed in the region just downstream of the leading edge, and this is where the maximum flow velocity is occurring.

2. For an incompressible flow, from Bernoulli's equation  $p + \frac{1}{2}\rho V^2 = \text{constant}$ , clearly where the velocity increases, the static pressure decreases. This trend is the same for compressible flow. From Euler's equation  $dp = -\rho V dV$ , when the velocity increases ( $dV$  positive), the pressure decreases ( $dp$  negative). We can label this general trend—namely, when the velocity increases, the pressure decreases—the *Bernoulli effect*. Recall that Bernoulli's equation and Euler's equation are statements of Newton's second law. Because we have shown in item 1 that the flow velocity is

higher over the top surface than it is over the bottom surface, we can state the following:

Because of the Bernoulli effect, the pressure over the top surface of the airfoil is less than the pressure over the bottom surface.

page 409

This is illustrated in Fig. 5.77b, which is a schematic of the pressure distribution over the top and bottom surfaces. Note that the minimum pressure occurs at point *a*.

3. Finally, it follows that

Owing to the lower pressure over the top surface and the higher pressure over the bottom surface, the airfoil experiences a lift force in the upward direction.

This lift force is shown schematically in Fig. 5.77b.

The sequence of preceding items 1 through 3 are the fundamental laws of nature that result in lift being produced on an airplane wing. You cannot get more fundamental than this—mass conservation and Newton's second law.

We also note that the preceding explanation shows why most of the lift of the wing is produced by the first 20 or 30 percent of the wing just downstream of the leading edge. This is shown in Fig. 5.77b, where the largest *difference* in pressure between the top and bottom surfaces is on the front part of the airfoil. That most of the lift is generated by the forward portion of the airfoil is also seen in Figs. 5.18, 4.55, and 4.56, which demonstrate that the minimum pressure on the top surface occurs over the forward portion of the airfoil just downstream of the leading edge. In a sense, the main function of the back portion of the airfoil is to simply form a streamlined shape to avoid flow separation.

We dispel here a common *misperception* about why the flow velocity increases over the top surface of the airfoil. It is sometimes written that a fluid element that comes into the stagnation region splits into two elements, one of which flows over the top surface and the other over the bottom surface. It is then assumed that these two elements must meet up at the trailing edge; and because the running distance over the top surface of the airfoil is longer than that over the bottom surface, the element over the top surface must move faster. This is simply *not true*. Experimental results and computational fluid dynamic calculations clearly show that a fluid element moving over the top surface of an airfoil leaves the trailing edge *long before* its companion element moving over the bottom surface arrives at the trailing edge. This is illustrated in Fig. 5.78. Consider a combined fluid element *CD* at time *t*, in the stagnation region at the leading edge of the airfoil, as sketched in Fig. 5.78. This element splits into element *C* moving over the top surface and element *D* moving over the bottom surface. At a later time *t*<sub>2</sub>, element *C* has moved downstream of the trailing edge, and element *D* has not yet arrived


at the trailing edge. The two elements simply do *not* meet at the trailing edge, so any explanation that depends on their meeting is flawed.

The preceding explanation of the generation of lift also applies to flat [page 410](#) plates as well as curved airfoil shapes. Contrary to statements in some popular literature, the curved shape of an airfoil is not necessary for the production of lift. A thin flat plate at an angle of attack produces lift. A schematic of the streamline pattern over a flat plate at angle of attack is shown in Fig. 5.79. The stagnation point (labeled s.p. in Fig. 5.79) is located on the bottom surface, downstream of the leading edge. The streamline through the stagnation point is called the *dividing streamline*; the flow above the dividing streamline flows up and over the top of the plate, whereas the flow below the dividing streamline flows over the bottom of the plate. The shaded stream tube shown in Fig. 5.79 is analogous to the shaded stream tube *A* in Fig. 5.77. The flow in the shaded stream tube in Fig. 5.70 moves *upstream* from the stagnation point along the surface, curls around the leading edge where, in terms of our previous discussions, it experiences extreme squashing, and then flows downstream over the top of the plate. As a result at the squashing, the flow velocity at the leading edge is very large, with a correspondingly low pressure. As the stream tube flows downstream over the top of the plate, its cross-sectional area gradually increases; hence the flow velocity gradually decreases from its initially high value at the leading edge, and the surface pressure gradually increases from its initially low value. The pressure on the top surface, however, remains, on the average, lower than that on the bottom surface; as usual, this pressure difference produces lift on the plate. This question is naturally raised: Why then do we not fly around on thin flat plates as airplane wings? The answer, besides the obvious practical requirement for wing thickness to allow room for internal structure and for fuel and landing gear storage, is that the flat plate also produces drag—lots of it. The flow over the top surface tends to separate at the leading edge at fairly small angles of attack, causing massive pressure drag. Consequently, although the flat plate at angle of attack produces lift, the lift-to-drag ratio is much lower than conventional thick airfoils with their streamlined shapes.


There are several alternative explanations of the generation of lift that [page 411](#) are in reality not *the fundamental explanation* but rather are more of an *effect* of lift being produced, not the *cause*. Let us examine these alternative explanations.

The following alternative explanation is sometimes given: The wing deflects the airflow so that the mean velocity vector behind the wing is canted slightly downward, as sketched in Fig. 5.80. Hence, the wing imparts a downward component of momentum to the air; that is, the wing exerts a force on the air, pushing the flow downward. From Newton's third law, the equal and opposite


reaction produces a lift. However, this explanation really involves the *effect* of lift, not the cause. In reality, the air pressure on the surface is pushing on the surface, creating lift in the upward direction. As a result of the equal-and-opposite principle, the airfoil surface pushes on the air, imparting a downward force on the airflow, which deflects the velocity downward. Hence, the net rate of change of downward momentum created in the airflow because of the presence of the wing can be thought of as an *effect* due to the surface pressure distribution; the pressure distribution by itself is the fundamental cause of lift.

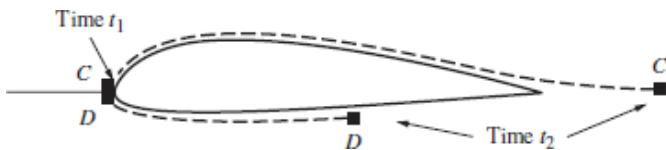

**Figure 5.78** The tracking of two fluid elements in the flow over an airfoil. Element  $C$  moves over the top, and element  $D$  over the bottom.

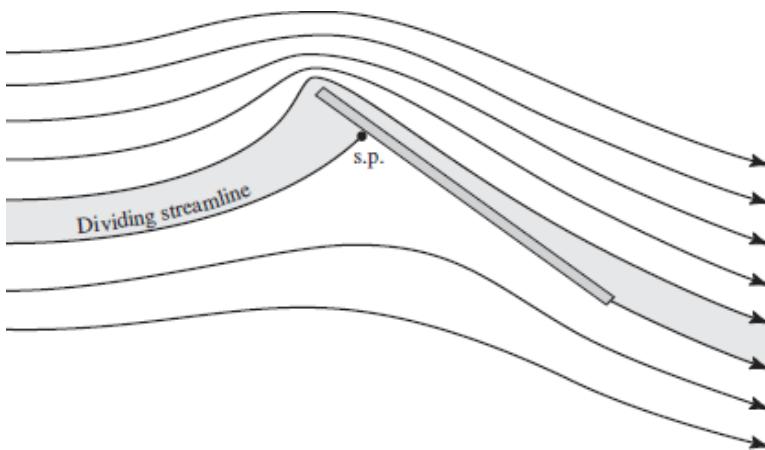


**Figure 5.79** Schematic of the streamline flow over a flat plate at angle of attack.

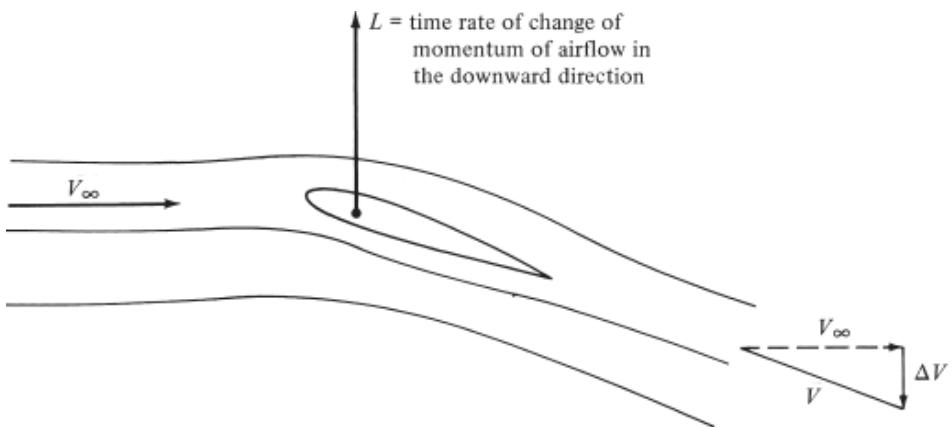

**Figure 5.80** Relationship of lift to the time rate of change of momentum of the airflow.

A third argument, called the *circulation theory of lift*, is sometimes given for the source of lift. However, this turns out to be not so much an *explanation* of lift per se, but rather more of a mathematical formulation for the calculation of lift for an airfoil of given shape. Moreover, it is mainly applicable to incompressible flow. The circulation theory of lift is elegant and well developed; it is also beyond the scope of this book. However, some of its flavor is given as follows.

page 412

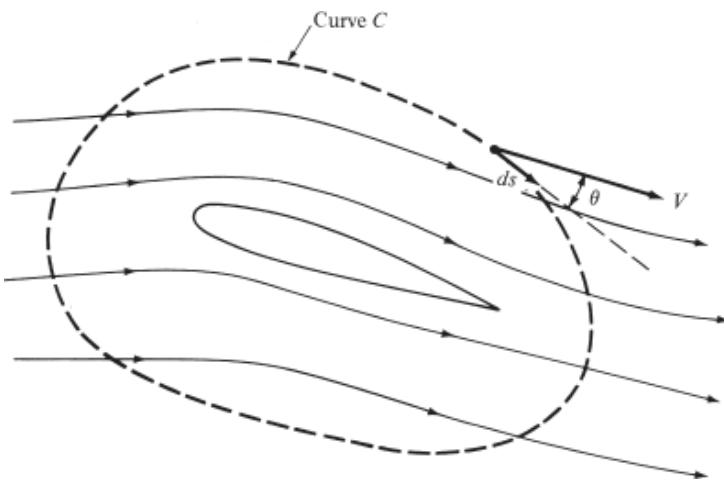

**Figure 5.81** Diagram for the circulation theory of lift.

Consider the flow over a given airfoil, as shown in Fig. 5.81. Imagine a closed curve  $C$  drawn around the airfoil. At a point on this curve, the flow velocity is  $V$ , and the angle between  $V$  and a tangent to the curve is  $\theta$ . Let  $ds$  be an incremental distance along  $C$ . A quantity called the *circulation*  $\Gamma$  is defined as

$$\Gamma \equiv \oint_C V \cos \theta \, ds \quad (5.72)$$

That is,  $\Gamma$  is the line integral of the component of flow velocity along the closed curve  $C$ . After a value of  $\Gamma$  is obtained, the lift *per unit span* can be calculated from


$$L = \rho_\infty V_\infty \Gamma_\infty \quad (5.73)$$

Equation (5.73) is the *Kutta–Joukowsky theorem*; it is a pivotal relation in the circulation theory of lift. The object of the theory is to (somehow) calculate  $\Gamma$  for a given  $V_\infty$  and airfoil shape. Then Eq. (5.73) yields the lift. A major thrust of ideal incompressible flow theory, many times called *potential flow theory*, is to

calculate  $\Gamma$ . Such matters are discussed in more advanced aerodynamics texts (see Anderson, *Fundamentals of Aerodynamics*, 5th ed., McGraw-Hill, 2011).

The circulation theory of lift is compatible with the true physical nature of the flow over an airfoil, as any successful mathematical theory must be. In the simplest sense, we can visualize the true flow over an airfoil, shown at the right of Fig. 5.82, as the superposition of a uniform flow and a circulatory flow, shown at the left of Fig. 5.82. The circulatory flow is clockwise, which when added to the uniform flow yields a higher velocity above the airfoil and a lower velocity below the airfoil. From Bernoulli's equation, this implies a lower pressure on the top surface of the airfoil and a higher pressure on the bottom surface, hence generating upward lift. The strength of the circulatory contribution, defined by Eq. (5.72), is just the precise value such that when it is added to the uniform flow contribution, the actual flow over the airfoil leaves the trailing edge smoothly, as sketched at the right of Fig. 5.82. This is called the *Kutta condition* and is one of the major facets of the circulation theory of lift.

page 413

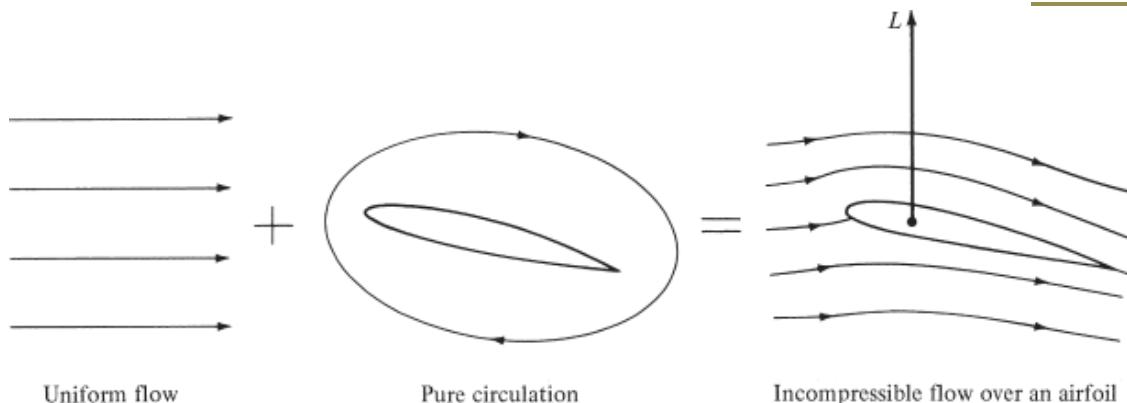



**Figure 5.82** Addition of two elementary flows to synthesize a more complex flow. If one or more of the elementary flows have circulation, then the synthesized flow also has the same circulation. The lift is directly proportional to the circulation.

Again, keep in mind that the actual mechanism that nature has of communicating a lift to the airfoil is the pressure distribution over the surface of the airfoil, as sketched in Fig. 5.77b. In turn, this pressure distribution ultimately causes a time rate of change of momentum of the airflow, as shown in Fig. 5.80—a principle that can be used as an alternative way of visualizing the generation of lift. Finally, even the circulation theory of lift stems from the pressure distribution over the surface of the airfoil because the derivation of the Kutta–Joukowsky theorem, Eq. (5.73), involves the surface pressure distribution. Again, for more details, consult Anderson, *Fundamentals of Aerodynamics*, 5th ed., McGraw-Hill, 2011.

### EXAMPLE 5.38

In Example 5.10, we demonstrated that an NACA 2415 airfoil can produce lift when it is flying upside down, but not as effectively. Let us revisit this matter in the present example, but for a different airfoil shape and for the purpose of addressing the airfoil shapes usually found on aerobatic airplanes. Consider the NACA 4412 airfoil shown right side up and upside down in Fig. 5.83a and b, respectively. Both are shown at the same angle of attack relative to the free stream. For an angle of attack of  $6^\circ$ , obtain the lift coefficient for each case shown in (a) and (b).

page 414

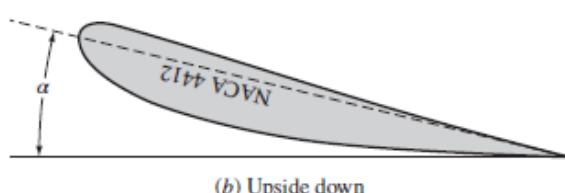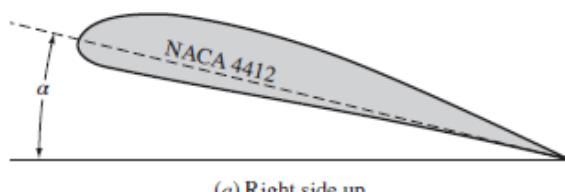

**Figure 5.83** Illustration of (a) an airfoil flying right side up and (b) flying upside down. Both are at the same angle of attack.

#### ■ Solution

a. From App. D, for the NACA 4412 airfoil at  $\alpha = 6^\circ$ ,

$$c_l = 1.02$$

b. Take Fig. 5.83b and turn it upside down. What you see is the NACA 4412 airfoil right side up but at a *negative* angle of attack. Therefore, the lift coefficient for the upside-down airfoil at the positive angle of attack shown in Fig. 5.83b is given by the data in App. D for *negative angles of attack*. For  $\alpha = -6^\circ$ , App. D shows  $c_l = -0.22$ ; the negative  $c_l$  connotes a downward lift on the ordinary right-side-up airfoil when pitched to a negative angle of attack of  $-6^\circ$ . In the upside-down orientation shown in Fig. 5.83b, this lift is directed upward. Hence, for the NACA 4412 airfoil flying upside down at an angle of attack of  $6^\circ$ ,


$$c_l = 0.22$$

*Note:* The airfoil flying upside down as shown in Fig. 5.83b produces lift, but not as much as the same airfoil flying right side up at the same angle of attack. For the upside-down airfoil in Fig. 5.83b to produce the same lift as the right-side-up airfoil in Fig. 5.83a, it must be pitched to a higher angle of attack.

Aerobatic airplanes spend a lot of time flying upside down. For this reason, the designers of such airplanes frequently choose a symmetric airfoil for the wing section. Also, the horizontal and vertical tails on airplanes of all types usually have symmetric airfoil shapes. An aerobatic airplane flown by the famous aerobatic pilot and three-time U.S. National Champion Patty Wagstaff is pictured in Fig. 5.84, which shows the wing with a symmetric airfoil section.




(a)

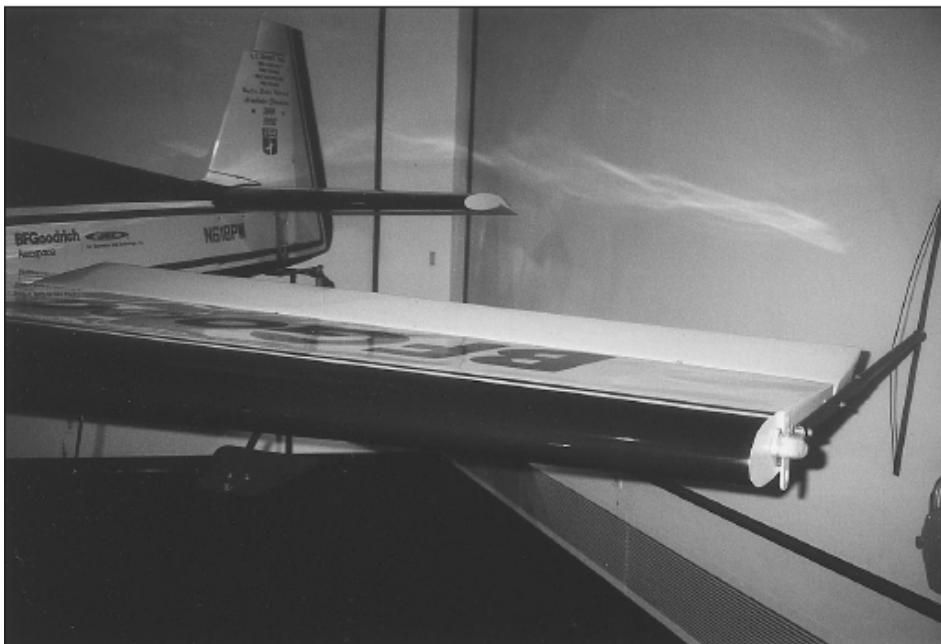

(b)

**Figure 5.84** Patty Wagstaff's aerobatic airplane, the Extra 260, on display at the National Air and Space Museum. (a) Full view of the airplane. (b) Left wing, showing the squared-off wing tip. (*continued*)

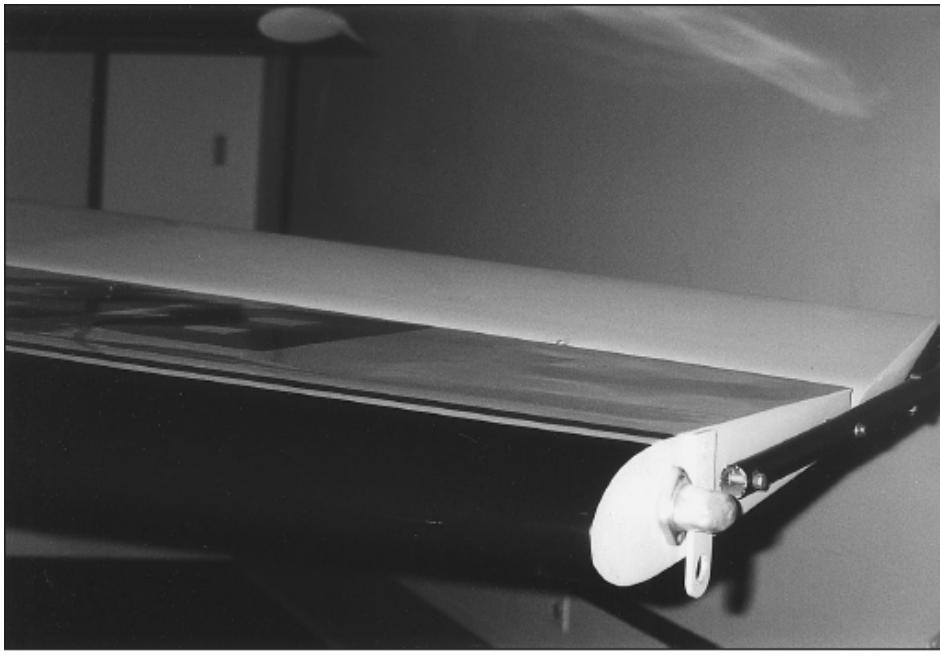

(c)

**Figure 5.84** (concluded ) (c) Detail of the left wing tip, showing the symmetric airfoil section.

(Source: Courtesy of John Anderson.)

---


page 416

## 5.20 HISTORICAL NOTE: AIRFOILS AND WINGS

We know that George Cayley introduced the concept of a fixed-wing aircraft in 1799; this has been discussed at length in Secs. 1.3 and 5.1. Moreover, Cayley appreciated the fact that lift is produced by a region of low pressure on the top surface of the wing and high pressure on the bottom surface and that a cambered shape produces more lift than a flat surface. Indeed, Fig. 1.5 shows that Cayley was thinking of a curved surface for a wing, although the curvature was due to the wind billowing against a loosely fitting fabric surface. However, neither Cayley nor any of his immediate followers performed work even closely resembling airfoil research or development.

It was not until 1884 that the first serious airfoil developments were made. In that year, Horatio F. Phillips, an Englishman, was granted a patent for a series of double-surface, cambered airfoils. Figure 5.85 shows Phillip's patent drawings for his airfoil section. Phillips was an important figure in late 19th-century aeronautical engineering; we met him before, in Sec. 4.24, in conjunction with his ejector-driven wind tunnel. In fact, the airfoil shapes in Fig. 5.85 were the result of numerous wind tunnel experiments in which Phillips examined curved wings of "every conceivable form and combination of forms." Phillips widely published his

results, which had a major impact on the aeronautics community. Continuing with his work, Phillips patented more airfoil shapes in 1891. Then, moving into airplane design in 1893, he built and tested a large multiplane model, consisting of a large number of wings, each with a 19-ft span and a chord of only  $1\frac{1}{2}$  in, which looked like a venetian blind! The airplane was powered by a steam engine with a 6.5-ft propeller. The vehicle ran on a circular track and actually lifted a few feet off the ground momentarily. After this demonstration, Phillips gave up until 1907, when he made the first tentative hop flight in England in a similar, but gasoline-powered, machine, staying airborne for about 500 ft. This was his last contribution to aeronautics. However, his pioneering work during the 1880s and 1890s clearly earns Phillips the title of grandparent of the modern airfoil.

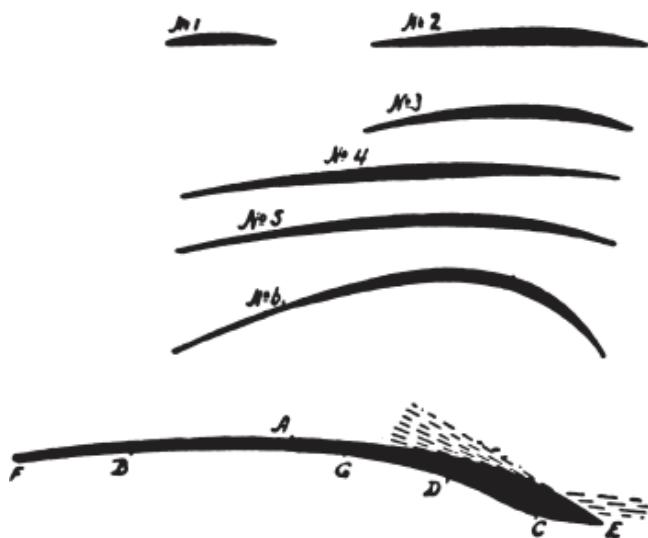


**Figure 5.85** Double-surface airfoil sections by Phillips. The six upper shapes were patented by Phillips in 1884; the lower airfoil was patented in 1891.

After Phillips, the work on airfoils shifted to a search for the most [page 417](#) efficient shapes. Work is still being done today on this very problem, although much progress has been made. This progress covers several historical periods, as described in the following Secs. 5.20.1 to 5.20.6.

### 5.20.1 The Wright Brothers

As noted in Secs. 1.8 and 4.24, Wilbur and Orville Wright, after their early experience with gliders, concluded in 1901 that many of the existing “air pressure” data on airfoil sections were inadequate and frequently incorrect. To rectify these deficiencies, they constructed their own wind tunnel (see Fig. 4.59), in which they tested several hundred different airfoil shapes between September 1901 and August 1902. From their experimental results, the Wright brothers chose

an airfoil with a 1:20 maximum camber-to-chord ratio for their successful *Wright Flyer I* in 1903. These wind tunnel tests by the Wright brothers constituted a major advance in airfoil technology at the turn of the century.

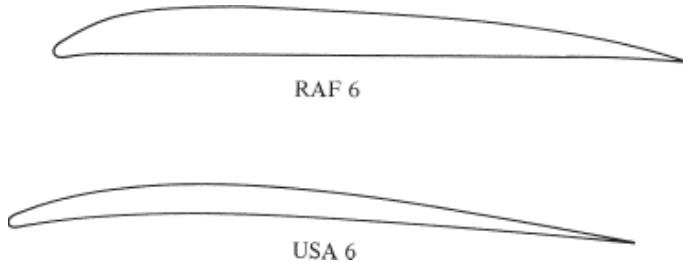

**Figure 5.86** Typical airfoils in 1917.

### 5.20.2 British and U.S. Airfoils (1910–1920)

In the early days of powered flight, airfoil design was basically customized and personalized; little concerted effort was made to find a standardized, efficient section. However, some early work was performed by the British government at the National Physical Laboratory (NPL), leading to a series of Royal Aircraft Factory (RAF) airfoils used on World War I airplanes. Figure 5.86 illustrates the shape of the RAF 6 airfoil. Until 1915, most aircraft in the United States used either an RAF section or a shape designed by the Frenchman Alexandre Gustave Eiffel. This tenuous status of airfoils led the NACA, in its first annual report in 1915, to emphasize the need for “the evolution of more efficient wing sections of practical form, embodying suitable dimensions for an economical structure, with moderate travel of the center of pressure and still affording a large angle of attack combined with efficient action.” To this day, more than 100 years later, NASA is still pursuing such work.

The first NACA work on airfoils was reported in NACA Report No. [page 418](#) 18, “Aerofoils and Aerofoil Structural Combinations,” by Lt. Col. Edgar S. Gorrell and Major H. S. Martin, prepared at the Massachusetts Institute of Technology (MIT) in 1917. Gorrell and Martin summarized the contemporary airfoil status as follows:

Mathematical theory has not, as yet, been applied to the discontinuous motion past a cambered surface. For this reason, we are able to design aerofoils only by consideration of those forms which have been successful, by applying general rules learned by experience, and by then testing the aerofoils in a reliable wind tunnel.

In NACA Report No. 18, Gorrell and Martin disclosed a series of tests on the largest single group of airfoils to that date, except for the work done at NPL and by Eiffel. They introduced the USA airfoil series and reported wind tunnel data for the USA 1 through USA 6 sections. Figure 5.86 illustrates the shape of the USA 6 airfoil. The airfoil models were made of brass and were finite wings with a span of 18 in and a chord of 3 in; that is,  $AR = 6$ . Lift and drag coefficients were measured at a velocity of 30 mi/h in the MIT wind tunnel. These airfoils represented the first systematic series originated and studied by NACA.

### 5.20.3 1920–1930

Based on their wind tunnel observations in 1917, Gorrell and Martin stated that slight variations in airfoil design make large differences in aerodynamic performance. This is the underlying problem of airfoil research, and it led in the 1920s to a proliferation of airfoil shapes. In fact, as late as 1929, F. A. Louden, in his NACA Report No. 331, titled “Collection of Wind Tunnel Data on Commonly Used Wing Sections,” stated that “the wing sections most commonly used in this country are the Clark Y, Clark Y-15, Gottingen G-387, G-398, G-436, N.A.C.A. M-12, Navy N-9, N-10, N-22, R.A.F.-15, Sloane, U.S.A.-27, U.S.A.-35A, U.S.A.-35B.” However, help was on its way. As noted in Sec. 4.24, the NACA built a variable-density wind tunnel at Langley Aeronautical Laboratory in 1923—a wind tunnel that was to become a workhorse in future airfoil research, as emphasized in Sec. 5.20.4.

---

page 419

### 5.20.4 Early NACA Four-Digit Airfoils

In a classic work in 1933, order and logic were finally brought to airfoil design in the United States. This was reported in NACA Report No. 460, “The Characteristics of 78 Related Airfoil Sections from Tests in the Variable-Density Wind Tunnel,” by Eastman N. Jacobs, Kenneth E. Ward, and Robert M. Pinkerton. Their philosophy on airfoil design was as follows:

Airfoil profiles may be considered as made up of certain profile-thickness forms disposed about certain mean lines. The major shape variables then become two, the thickness form and the mean-line form. The thickness form is of particular importance from a structural standpoint. On the other hand, the form of the mean line determines almost independently some of the most important aerodynamic properties of the airfoil section, e.g., the angle of zero lift and the pitching-moment characteristics. The related airfoil profiles for this investigation were derived by changing systematically these shape variables.

They then proceeded to define and study for the first time in history the famous NACA four-digit airfoil series, some of which are given in App. D of this book. For example, NACA 2412 is defined as a shape that has a maximum camber of 2 percent of the chord (the first digit); the maximum camber occurs at a position of 0.4 chord from the leading edge (the second digit); and the maximum thickness is 12 percent (the last two digits). Jacobs and his colleagues tested these airfoils in the NACA variable-density tunnel using a 5-in by 30-in finite wing (again an aspect ratio of 6). In NACA Report No. 460, they gave curves of  $CL$ ,  $CD$ , and  $L/D$  for the finite wing. Moreover, using the same formulas developed in Sec. 5.15, they corrected their data to give results for the infinite-wing case also. After this work was published, the standard NACA four-digit airfoils were widely used. Even today the NACA 2412 is used on several light aircraft.

### 5.20.5 Later NACA Airfoils

In the late 1930s NACA developed a new camber line family to increase maximum lift, with the 230 camber line being the most popular. Combining with the standard NACA thickness distribution, this gave rise to the NACA five-digit airfoil series, such as the 23012, some of which are still flying today (for example, on the Cessna Citation and the Beech King Air). This work was followed by families of high-speed airfoils and laminar flow airfoils in the 1940s.

To reinforce its airfoil development, in 1939 NACA constructed a new [page 420](#) low-turbulence two-dimensional wind tunnel at Langley exclusively for airfoil testing. This tunnel has a rectangular test section 3 ft wide and  $7\frac{1}{2}$  ft high and can be pressurized up to 10 atm for high-Reynolds-number testing. Most importantly, this tunnel allows airfoil models to span the test section completely, thus directly providing infinite-wing data. This is in contrast to the earlier tests previously described, which used a finite wing of  $AR = 6$  and then corrected the data to correspond to infinite-wing conditions. Such corrections are always compromised by tip effects. (For example, what is the *precise* span efficiency factor for a given wing?) With the new two-dimensional tunnel, vast numbers of tests were performed in the early 1940s on both old and new airfoil shapes over a Reynolds number range from 3 to 9 million and at Mach numbers less than 0.17 (incompressible flow). The airfoil models generally had a 2-ft chord and completely spanned the 3-ft width of the test section. It is interesting to note that the lift and drag are not obtained on a force balance. Rather, the lift is calculated by integrating the measured pressure distribution on the top and bottom walls of the wind tunnel, and the drag is calculated from Pitot pressure measurements made in the wake downstream of the trailing edge. However, the pitching moments are measured directly on a balance. A vast amount of airfoil data obtained in this fashion from the two-dimensional tunnel at Langley were

compiled and published in a book titled *Theory of Wing Sections Including a Summary of Airfoil Data*, by Abbott and von Doenhoff, in 1949 (see the bibliography at the end of this chapter). It is important to note that all the airfoil data in App. D are obtained from this reference; that is, all the data in App. D are direct measurements for an infinite wing at essentially incompressible flow conditions.

### 5.20.6 Modern Airfoil Work

Priorities for supersonic and hypersonic aerodynamics put a stop to the NACA airfoil development in 1950. Over the next 15 years, specialized equipment for airfoil testing was dismantled. Virtually no systematic airfoil research was done in the United States during this period.

However, in 1965 Richard T. Whitcomb made a breakthrough with the NASA supercritical airfoil. This revolutionary development, which allowed the design of wings with high critical Mach numbers (see Sec. 5.10), reactivated interest in airfoils within NASA. Since that time, a healthy program in modern airfoil development has been reestablished. The low-turbulence, pressurized, two-dimensional wind tunnel at Langley is back in operation. Moreover, a new dimension has been added to airfoil research: the high-speed digital computer. In fact, computer programs for calculating the flow field around airfoils at subsonic speeds are so reliable that they shoulder some of the routine testing duties heretofore exclusively carried by wind tunnels. The same cannot yet be said about transonic cases, but current research is focusing on this problem. An interesting survey of modern airfoil activity within NASA is given by Pierpont in *Astronautics and Aeronautics* (see the bibliography).

Of special note is the modern low-speed airfoil series, designated page 421 LS(1), developed by NASA for use by general aviation on light airplanes. The shape of a typical LS(1) airfoil is contrasted with a “conventional” airfoil in Fig. 5.87. Its lifting characteristics, illustrated in Fig. 5.88, are clearly superior and should allow smaller wing areas, and hence less drag, for airplanes of the type shown in Fig. 5.87.

In summary, airfoil development over the past 100 years has moved from an ad hoc individual process to a very systematic and logical engineering process. It is alive and well today, with the promise of major advancements in the future using both wind tunnels and computers.


### 5.20.7 Finite Wings

Some historical comments about the finite wing are in order. Francis Wenham (see Ch. 1)), in his classic paper titled *Aerial Locomotion*, given to the Aeronautical

Society of Great Britain on June 27, 1866, theorized (correctly) that most of the lift of a wing occurs from the portion near the leading edge; hence a long, narrow wing would be most efficient. In this fashion he was the first person in history to appreciate the value of high-aspect-ratio wings for subsonic flight. Moreover, he suggested stacking a number of long, thin wings above one another to generate the required lift; thus he became an advocate of the multiplane concept. In turn, he built two full-size gliders in 1858, both with five wings each, and successfully demonstrated the validity of his ideas.


---

page 422

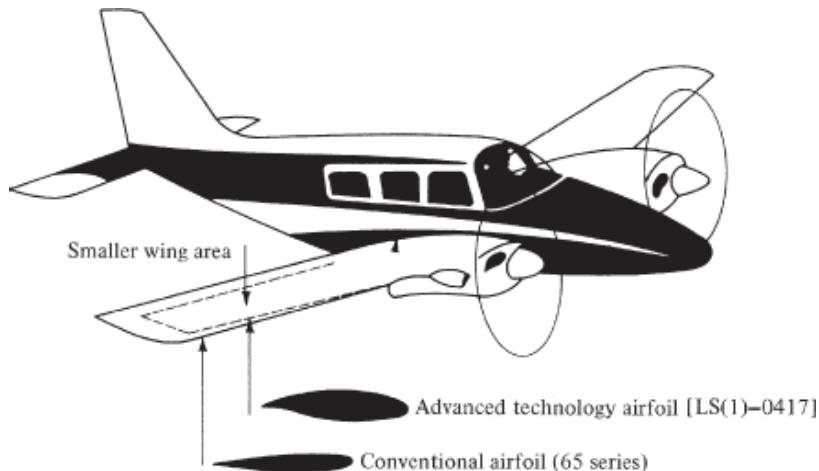

**Figure 5.87** Shape comparison between the modern LS(1)-0417 and a conventional airfoil. The higher lift obtained with the LS(1)-0417 allows a smaller wing area and hence lower drag.

(Source: NASA.)

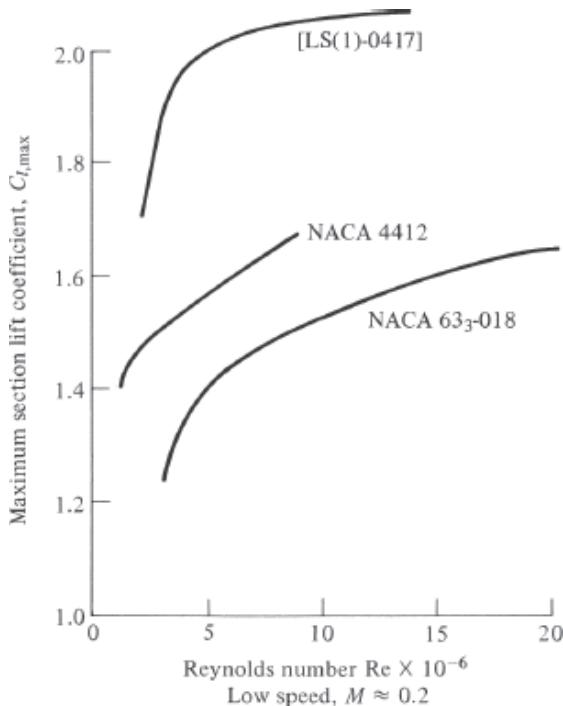

**Figure 5.88** Comparison of maximum lift coefficients between the LS(1)-0417 and conventional airfoils.

(Source: NASA.)

However, the true aerodynamic theory and understanding of finite wings did not come until 1907, when the Englishman Frederick W. Lanchester published his book *Aerodynamics*. In it he outlined the circulation theory of lift, developed independently about the same time by Kutta in Germany and by Joukowsky in Russia. More importantly, Lanchester discussed for the first time the effect of wing-tip vortices on finite-wing aerodynamics. Unfortunately, Lanchester was not a clear writer; his ideas were extremely difficult to understand, and they did not find application in the aeronautical community.

In 1908 Lanchester visited Göttingen, Germany, and fully discussed his wing theory with Ludwig Prandtl and his student, Theodore von Karman. Prandtl spoke no English, Lanchester spoke no German, and in light of Lanchester's unclear ways of explaining his ideas, there appeared to be little chance of understanding between the two parties. However, in 1914 Prandtl set forth a simple, clear, and correct theory for calculating the effect of tip vortices on the aerodynamic characteristics of finite wings. It is virtually impossible to assess how much Prandtl was influenced by Lanchester; but to Prandtl must go the credit of first establishing a practical finite-wing theory, a theory that is fundamental to our discussion of finite wings in Secs. 5.13 to 5.15. Indeed, Prandtl's first published words on the subject were these:

---

The lift generated by the airplane is, on account of the principle of action and reaction, necessarily connected with a descending current in all its details. It appears that the descending current is formed by a pair of vortices, the vortex filaments of which start from the airplane wingtips. The distance of the two vortices is equal to the span of the airplane, their strength is equal to the circulation of the current around the airplane, and the current in the vicinity of the airplane is fully given by the superposition of the uniform current with that of a vortex consisting of three rectilinear sections.

Prandtl's pioneering work on finite-wing theory, along with his ingenious concept of the boundary layer, has earned him the title *parent of aerodynamics*. In the four years following 1914, he went on to show that an elliptical lift distribution results in the minimum induced drag. Indeed, the terms *induced drag* and *profile drag* were coined in 1918 by Max Munk, in a note titled "Contribution to the Aerodynamics of the Lifting Organs of the Airplane." Munk was a colleague of Prandtl's, and the note was one of several classified German wartime reports about airplane aerodynamics.

For more details about the history of airfoils and wings, see Anderson, *A History of Aerodynamics and Its Impact on Flying Machines*, Cambridge University Press, New York, 1997.

## 5.21 HISTORICAL NOTE: ERNST MACH AND HIS NUMBER

Airplanes that fly at Mach 2 are commonplace today. High-performance military aircraft such as the Lockheed SR-71 Blackbird can exceed Mach 3. As a result, the term *Mach number* has become part of our general language—the average person in the street understands that Mach 2 means twice the speed of sound. On a more technical basis, the dimensional analysis described in Sec. 5.3 demonstrated that aerodynamic lift, drag, and moments depend on two important dimensionless products: the Reynolds number and the Mach number. In a more general treatment of fluid dynamics, the Reynolds number and Mach number can be shown as the major governing parameters for any realistic flow field; they are among a series of governing dimensionless parameters called *similarity parameters*. We already examined the historical source of the Reynolds number in Sec. 4.25; let us do the same for the Mach number in this present section.


The Mach number is named after Ernst Mach, a famous 19th-century physicist and philosopher. Mach was an illustrious figure with widely varying interests. He was the first person in history to observe supersonic flow and to understand its basic nature. Let us take a quick look at this man and his contributions to supersonic aerodynamics.

Ernst Mach was born at Turas, Moravia, in Austria, on February 18, 1838. Mach's father and mother were both extremely private and introspective-intellectuals. His father was a student of philosophy and classical literature; his mother was a poet and musician. The family was voluntarily isolated on a farm, where Mach's father pursued an interest of raising silkworms—pioneering the beginning of silkworm culture in Europe. At an early age Mach was not a particularly successful student. Later Mach described himself as a “weak pitiful child who developed very slowly.” Through extensive tutoring by his father at home, Mach learned Latin, Greek, history, algebra, and geometry. After marginal performances in grade school and high school (due not to any lack of intellectual ability but rather to a lack of interest in the material usually taught by rote), Mach entered the University of Vienna. There he blossomed, spurred by interest in mathematics, physics, philosophy, and history. In 1860 he received a PhD in physics, writing a thesis titled “On Electrical Discharge and Induction.” By 1864 he was a professor of physics at the University of Graz. (The variety and depth of his intellectual interests at this time are attested by the fact that he turned down the position of a chair in *surgery* at the University of Salzburg to go to Graz.) In 1867 Mach became a professor of experimental physics at the University of Prague—a position he would occupy for the next 28 years.

In today's modern technological world, where engineers and scientists page 424 are virtually forced, out of necessity, to peak their knowledge in narrow areas of extreme specialization, it is interesting to reflect on the personality of Mach, who was the supreme generalist. Here is only a partial list of Mach's contributions, as demonstrated in his writings: physical optics, history of science, mechanics, philosophy, origins of relativity theory, supersonic flow, physiology, thermodynamics, sugar cycle in grapes, physics of music, and classical literature. He even wrote about world affairs. (One of Mach's papers commented on the “absurdity committed by the statesman who regards the individual as existing solely for the sake of the state”; for this Mach was severely criticized at that time by Lenin.) We can only sit back with awe and envy of Mach, who—in the words of U.S. philosopher William James—knew “everything about everything.”

Mach's contributions to supersonic aerodynamics were highlighted in a paper titled “Photographische Fixierung der durch Projekteile in der Luft eingeleiteten Vorgänge,” given to the Academy of Sciences in Vienna in 1887. Here, for the first time in history, Mach showed a photograph of a shock wave in front of a bullet moving at supersonic speeds. This historic photograph, taken from Mach's original paper, is shown in Fig. 5.89. Also visible are weaker waves at the rear of the projectile and the structure of the turbulent wake downstream of the base region. The two vertical lines are trip wires designed to time the photographic light source (or spark) with the passing of the projectile. Mach was a precise and

careful experimenter; the quality of the picture shown in Fig. 5.89, along with the fact that he was able to make the shock waves visible (he used an innovative technique called the *shadowgram*), attests to his exceptional experimental abilities. Note that Mach was able to carry out such experiments involving split-second timing without the benefit of electronics—indeed, the vacuum tube had not yet been invented.

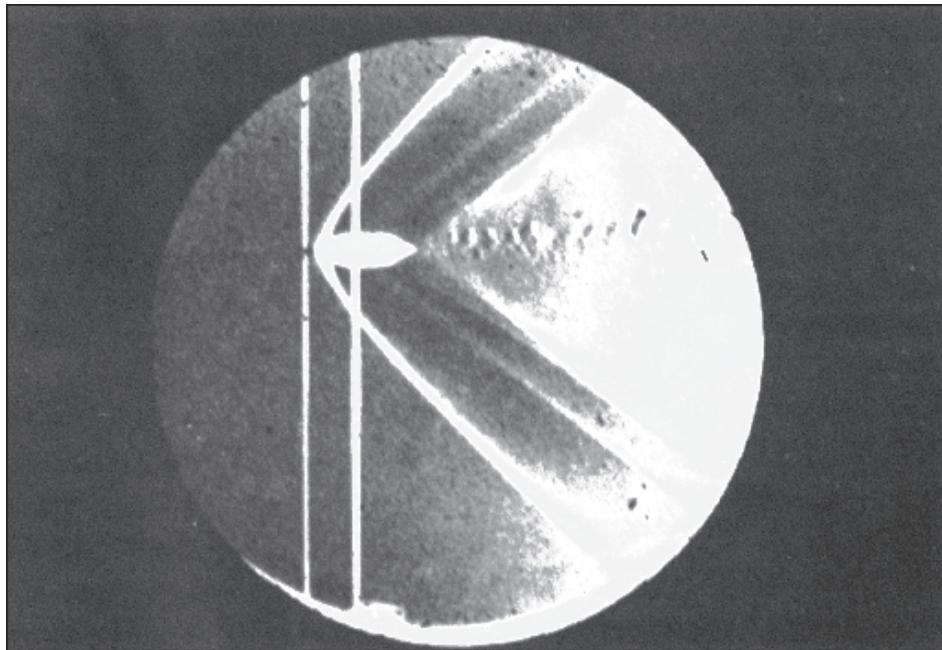

**Figure 5.89** Photograph of a bullet in supersonic flight, published by Ernst Mach in 1887.


(Source: NASA.)

Mach was the first to understand the basic characteristics of supersonic [page 425](#) flow. He was the first to point out the importance of the flow velocity  $V$  relative to the speed of sound  $a$  and to note the discontinuous and marked changes in a flow field as the ratio  $V/a$  changes from less than 1 to greater than 1. He did not, however, call this ratio the Mach number. The term *Mach number* was not coined until 1929, when the well-known Swiss engineer Jacob Ackeret introduced this terminology, in honor of Mach, at a lecture at the Eidgenossische Technische Hochschule in Zurich. Hence the term *Mach number* is of fairly recent use, not introduced into the English literature until 1932.

Mach was an active thinker, lecturer, and writer up to the time of his death on February 19, 1916, near Munich, one day after his 78th birthday. His contributions to human thought were many, and his general philosophy about epistemology—a study of knowledge itself—is still discussed in college classes in philosophy today. Aeronautical engineers know him as the originator of supersonic

aerodynamics; the rest of the world knows him as a man who originated the following philosophy, as paraphrased by Richard von Mises, himself a well-known mathematician and aerodynamicist of the early 20th century:

Mach does not start out to analyze statements, systems of sentences, or theories, but rather the world of phenomena itself. His elements are not the simplest sentences, and hence the building stones of theories, but rather—at least according to his way of speaking—the simplest facts, phenomena, and events of which the world in which we live and which we know is composed. The world open to our observation and experience consists of “colors, sounds, warmths, pressure, spaces, times, etc.” and their components in greater and smaller complexes. All we make statements or assertions about, or formulate questions and answers to, are the relations in which these elements stand to each other. That is Mach’s point of view.<sup>1</sup>

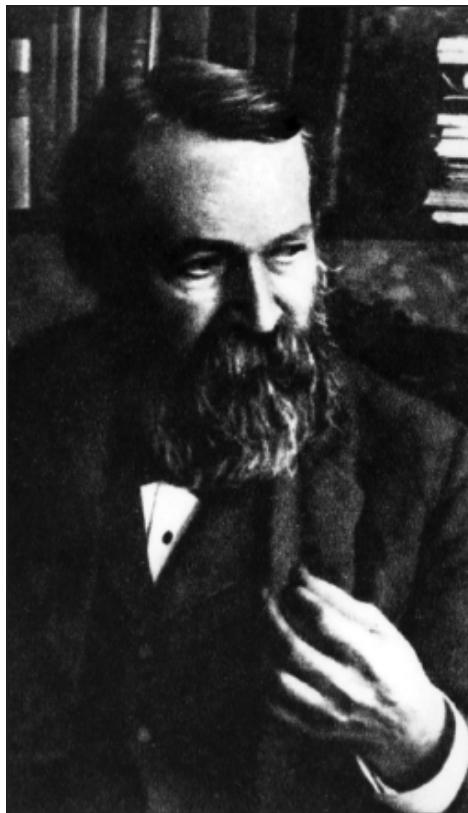

**Figure 5.90** Ernst Mach (1838–1916).

(Source: INTERFOTO/Alamy Stock Photo.)

We end this section with a photograph of Mach, taken about 1910,

---

page 426 shown in Fig. 5.90. It is a picture of a thoughtful, sensitive man; no wonder that

his philosophy of life emphasized observation through the senses, as discussed by von Mises. To honor his memory, an entire research institute, the Ernst Mach Institute in Germany, was named for him. This institute hosts research in experimental gas dynamics, ballistics, high-speed photography, and cinematography. For a much more extensive review of the technical accomplishments of Mach, see the paper authored by a member of the Ernst Mach Institute, H. Reichenbach, titled “Contributions of Ernst Mach to Fluid Mechanics,” in *Annual Reviews of Fluid Mechanics*, vol. 15, 1983, pp. 1–28 (published by Annual Reviews, Inc., Palo Alto, California).

---

<sup>1</sup>From Richard von Mises, *Positivism, A Study in Human Understanding*, Braziller, New York, 1956.

## 5.22 HISTORICAL NOTE: THE FIRST MANNED SUPERSONIC FLIGHT

On October 14, 1947, a human being flew faster than the speed of sound [page 427](#) for the first time in history. Imagine the magnitude of this accomplishment—just 60 years after Ernst Mach observed shock waves on supersonic projectiles (see Sec. 5.21) and a scant 44 years after the Wright brothers achieved their first successful powered flight (see Secs. 1.1 and 1.8). It is almost certain that Mach was not thinking at all about heavier-than-air manned flight of any kind, which in his day was still considered to be virtually impossible and the essence of foolish dreams. It is also almost certain that the Wright brothers had not the remotest idea that their fledgling 30 mi/h flight on December 17, 1903, would ultimately lead to a manned supersonic flight in Orville’s lifetime (although Wilbur died in 1912, Orville lived an active life until his death in 1948). Compared to the total spectrum of manned flight reaching all the way back to the ideas of Leonardo da Vinci in the 15th century (see Sec. 1.2), this rapid advancement into the realm of supersonic flight is truly phenomenal. How did this advancement occur? What were the circumstances surrounding the first supersonic flight? Why was it so important? This section addresses these questions.

Supersonic flight did not happen by chance; it was an inevitable result of the progressive advancement of aeronautical technology over the years. On the one hand, we have the evolution of high-speed aerodynamic theory, starting with the pioneering work of Mach, as described in Sec. 5.21. This was followed by the development of supersonic nozzles by two European engineers, Carl G. P. de Laval in Sweden and A. B. Stodola in Switzerland. In 1887 de Laval used a convergent–divergent supersonic nozzle to produce a high-velocity flow of steam to drive a turbine. In 1903 Stodola was the first person in history to definitely prove (by means of a series of laboratory experiments) that such convergent–divergent nozzles did indeed produce supersonic flow. From 1905 to 1908, Prandtl

in Germany took pictures of Mach waves inside supersonic nozzles and developed the first rational theory for oblique shock waves and expansion waves. After World War I, Prandtl studied compressibility effects in high-speed subsonic flow. This work, in conjunction with independent studies by the English aerodynamicist Herman Glauert, led to the publishing of the Prandtl–Glauert rule in the late 1920s (see Sec. 5.6 for a discussion of the Prandtl–Glauert rule and its use as a compressibility correction). These milestones, among others, established a core of aerodynamic theory for high-speed flow—a core that was well established at least 20 years before the first supersonic flight. (For more historical details concerning the evolution of aerodynamic theory pertaining to supersonic flight, see Anderson, *Modern Compressible Flow: With Historical Perspective*, 3rd ed., McGraw-Hill, 2003.)

On the other hand, we also have the evolution of hardware necessary for supersonic flight. The development of high-speed wind tunnels, starting with the small 12-in-diameter high-speed subsonic tunnel at NACA Langley Memorial Aeronautical Laboratory in 1927 and continuing with the first practical supersonic wind tunnels developed by Adolf Busemann in Germany in the early 1930s, is described in Sec. 4.24. The exciting developments leading to the first successful rocket engines in the late 1930s are discussed in Sec. 9.17. The concurrent invention and development of the jet engine, which would ultimately provide the thrust necessary for everyday supersonic flight, are related in Sec. 9.16. Hence, on the basis of the theory and hardware existing at that time, the advent of manned supersonic flight in 1947 was a natural progression in the advancement of aeronautics.

However, in 1947 there was one missing link in both the theory and the page 428 hardware—the transonic regime, near Mach 1. The governing equations for transonic flow are highly nonlinear and hence are difficult to solve. No practical solution of these equations existed in 1947. This theoretical gap was compounded by a similar gap in wind tunnels. The sensitivity of a flow near Mach 1 makes the design of a proper transonic tunnel difficult. In 1947 no reliable transonic wind tunnel data were available. This gap of knowledge was of great concern to the aeronautical engineers who designed the first supersonic airplane, and it was the single most important reason for the excitement, apprehension, uncertainty, and outright bravery that surrounded the first supersonic flight.

The unanswered questions about transonic flow did nothing to dispel the myth of the “sound barrier” that arose in the 1930s and 1940s. As discussed in Sec. 5.12, the very rapid increase in drag coefficient beyond the drag–divergence Mach number led some people to believe that humans would never fly faster than the speed of sound. Grist was lent to their arguments when, on September 27, 1946, Geoffrey deHavilland, son of the famous British airplane designer, took the *D.H.*


*108 Swallow* up for an attack on the world's speed record. The *Swallow* was an experimental jet-propelled aircraft, with swept wings and no horizontal tail. Attempting to exceed 615 mi/h on its first high-speed, low-altitude run, the *Swallow* encountered major compressibility problems and broke up in the air. DeHavilland was killed instantly. The sound barrier had taken its toll. It was against this background that the first supersonic flight was attempted in 1947.

During the late 1930s, and all through World War II, some visionaries clearly saw the need for an experimental airplane designed to probe the mysteries of supersonic flight. Finally, in 1944 their efforts prevailed; the Army Air Force, in conjunction with NACA, awarded a contract to Bell Aircraft Corporation for the design, construction, and preliminary testing of a manned supersonic airplane. Designated the XS-1 (Experimental Sonic-1), this design had a fuselage shaped like a 50-caliber bullet, mated to a pair of very thin (thickness-to-chord ratio of 0.08), low-aspect-ratio, straight wings, as shown in Fig. 5.91. The aircraft was powered by a four-chamber liquid-propellant rocket engine mounted in the tail. This engine, made by Reaction Motors and designated the XLR11, produced 6000 lb of thrust by burning a mixture of liquid oxygen and diluted alcohol.

The Bell XS-1 was designed to be carried aloft by a parent airplane, such as the giant Boeing B-29, and then launched at altitude; this saved the extra weight of fuel that would have been necessary for takeoff and climb to altitude, allowing the designers to concentrate on one performance aspect—speed. Three XS-1s were ultimately built, the first one being completed just after Christmas 1945. There followed a year and a half of gliding and then powered tests, wherein the XS-1 was cautiously nudged toward the speed of sound.

---

page 429

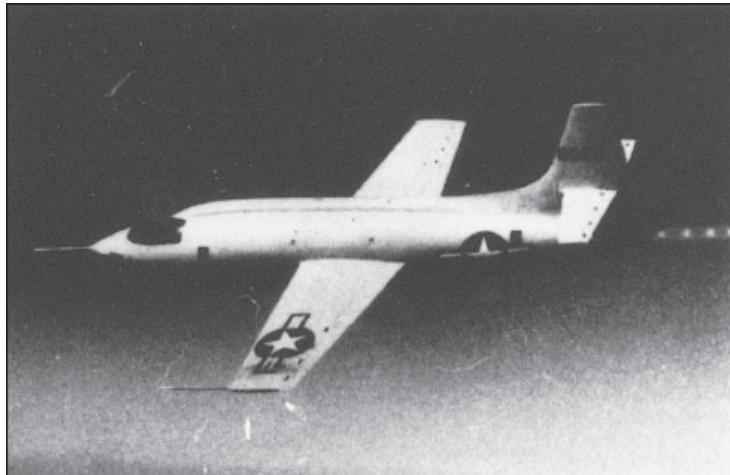

**Figure 5.91** The Bell XS-1, the first supersonic airplane, 1947.

(Source: NASA.)

Muroc Dry Lake is a large expanse of flat, hard lake bed in the Mojave Desert in California. Site of a U.S. Army high-speed flight test center during World War II, Muroc was later to become known as Edwards Air Force Base, now the site of the Air Force Test Pilots School and the home of all experimental high-speed flight testing for both the Air Force and NASA. On Tuesday, October 14, 1947, the Bell XS-1, nestled under the fuselage of a B-29, was waiting on the flight line at Muroc. After intensive preparations by a swarm of technicians, the B-29 with its cargo took off at 10:00 AM. On board the XS-1 was Captain Charles E. (Chuck) Yeager. That morning Yeager was in excruciating pain from two broken ribs fractured during a horseback riding accident earlier that week; however, he told virtually no one. At 10:26 AM, at an altitude of 20,000 ft, the Bell XS-1, with Yeager as its pilot, was dropped from the B-29. What happened next is one of the major milestones in aviation history. Let us see how Yeager himself recalled events, as stated in his written flight report:

Date:	14 October 1947
Pilot:	Capt. Charles E. Yeager
Time:	14 Minutes
	9th Powered Flight

1. After normal pilot entry and the subsequent climb, the XS-1 was dropped from the B-29 at 20,000 ft and at 250 MPH IAS. This was slower than desired.
2. Immediately after drop, all four cylinders were turned on in rapid sequence, their operation stabilizing at the chamber and line pressures reported in the last flight. The ensuing climb was made at .85-.88 Mach, and as usual it was necessary to change the stabilizer setting to 2 degrees nose down from its pre-drop setting of 1 degree nose down. Two cylinders were turned off between 35,000 ft and 40,000 ft, but speed had increased to .92 Mach as the airplane was leveled off at 42,000 ft. Incidentally, during the slight push-over at this altitude, the lox line pressure dropped perhaps 40 psi and the resultant rich mixture caused the chamber pressures to decrease slightly. The effect was only momentary, occurring at .6 G's, and all pressures returned to normal at 1 G.
3. In anticipation of the decrease in elevator effectiveness at all speeds page 430 above .93 Mach, longitudinal control by means of the stabilizer was tried during the climb at .83, .88, and .92 Mach. The stabilizer was moved in increments of  $\frac{1}{4} - \frac{1}{3}$  degree and proved to be very effective; also, no change in effectiveness was noticed at the different speeds.
4. At 42,000 ft in approximately level flight, a third cylinder was turned on.- Acceleration was rapid and speed increased to .98 Mach. The needle of the mach-meter fluctuated at this reading momentarily, then passed off the scale. Assuming that the off-scale reading remained linear, it is estimated that 1.05 Mach was

attained at this time. Approximately 30 percent of fuel and lox remained when this speed was reached and the motor was turned off.

5. While the usual lift buffet and instability characteristics were encountered in the .88-.90 Mach range and elevator effectiveness was very greatly decreased at .94 Mach, stability about all three axes was good as speed increased and elevator effectiveness was regained above .97 Mach. As speed decreased after turning off the motor, the various phenomena occurred in reverse sequence at the usual speeds, and in addition, a slight longitudinal porpoising was noticed from .98 to .96 Mach which was controllable by elevators alone. Incidentally, the stabilizer setting was not changed from its 2 degrees nose down position after trial at .92 Mach.

6. After jettisoning the remaining fuel and lox at 1 G stall was performed at 45,000 ft. The flight was concluded by the subsequent glide and a normal landing on the lakebed.

CHARLES E. YEAGER  
Capt. Air Corps

In reality, the Bell SX-1 had reached  $M_\infty = 1.06$ , as determined from official NACA tracking data. The duration of its supersonic flight was 20.5 s, almost twice as long as the Wright brothers' entire first flight just 44 years earlier. On that day Chuck Yeager became the first person to fly faster than the speed of sound. It is a fitting testimonial to the aeronautical engineers at that time that the flight was smooth and without unexpected consequences. An aircraft had finally been properly designed to probe the "sound barrier," which it penetrated with relative ease. Less than a month later, Yeager reached Mach 1.35 in the same airplane. The sound barrier had not only been penetrated—it had been virtually destroyed as the myth it really was.

As a final note, the whole story of the human and engineering challenges that revolved about the quest for and eventual achievement of supersonic flight is fascinating, and it is a living testimonial to the glory of aeronautical engineering. The story is brilliantly spelled out by Dr. Richard Hallion, earlier a curator at the Air and Space Museum of the Smithsonian Institution and now chief historian of the U.S. Air Force (now retired), in his book *Supersonic Flight* (see the bibliography at the end of this chapter). The reader should study Hallion's story of the events leading to and following Yeager's flight in 1947.

---

page 431

## 5.23 HISTORICAL NOTE: THE X-15—FIRST MANNED HYPERSONIC AIRPLANE AND STEPPING-STONE TO THE SPACE SHUTTLE

*Faster and higher*—for all practical purposes, this has been the driving potential behind the development of aviation since the Wrights' first successful flight in 1903. (See Sec. 1.11 and Figs. 1.30 and 1.31.) This credo was never more true than during the 15 years following Chuck Yeager's first supersonic flight in the Bell XS-1, described in Sec. 5.22. Once the sound barrier was broken, it was left far behind in the dust. The next goal became manned *hypersonic* flight—Mach 5 and beyond.

To accomplish this goal, NACA initiated a series of preliminary studies in the early 1950s for an aircraft to fly beyond Mach 5, the definition of the hypersonic flight regime. This definition is essentially a rule of thumb; unlike the severe and radical flow field changes that take place when an aircraft flies through Mach 1, nothing dramatic happens when Mach 5 is exceeded. Rather, the hypersonic regime is simply a very high-Mach-number regime, where shock waves are particularly strong and the gas temperatures behind these shock waves are high. For example, consider Eq. (4.73), which gives the total temperature  $T_0$ —that is, the temperature of a gas that was initially at a Mach number  $M_1$  and that has been adiabatically slowed to zero velocity. This is essentially the temperature at the stagnation point on a body. If  $M_1 = 7$ , Eq. (4.73) shows that (for  $\gamma = 1.4$ )  $T_0/T_1 = 10.8$ . If the flight altitude is, say, 100,000 ft, where  $T_1 = 419^\circ\text{R}$ , then  $T_0 = 4525^\circ\text{R} = 4065^\circ\text{F}$ —far above the melting point of stainless steel. Therefore, as flight velocities increase far above the speed of sound, they gradually approach a *thermal barrier*: velocities beyond which skin temperatures become too high and structural failure can occur. As in the case of the sound barrier, the thermal barrier is only a figure of speech—it is not an inherent limitation on flight speed. With proper design to overcome the high rates of aerodynamic heating, vehicles today have flown at Mach numbers as high as 36 (for example, the Apollo lunar return capsule). (For more details about high-speed reentry aerodynamic heating, see Sec. 8.12.)

Nevertheless, in the early 1950s manned hypersonic flight was a goal to be achieved—an untried and questionable regime characterized by high temperatures and strong shock waves. The basic NACA studies fed into an industrywide design competition for a hypersonic airplane. In 1955 North American Aircraft Corporation was awarded a joint NACA–Air Force–Navy contract to design and construct three prototypes of a manned hypersonic research airplane capable of Mach 7 and a maximum altitude of 264,000 ft. This airplane was designated the X-15 and is shown in Fig. 5.92. The first two aircraft were powered by Reaction Motors LR11 rocket engines with 8000 lb of thrust (essentially the same as the engine used for the Bell XS-1). Along with the third prototype, the two aircraft were later reengined with a more powerful rocket motor, the Reaction Motors XLR99, capable of 57,000 lb of thrust. The basic internal structure of the airplane

was made from titanium and stainless steel, but the airplane skin was Inconel X—a nickel-alloy steel capable of withstanding temperatures up to 1200°F. (Although the theoretical stagnation temperature at Mach 7 is 4065°F, as discussed previously, the actual skin temperature is cooler because of heat sink and heat dissipation effects.) The wings had a low aspect ratio of 2.5 and a thickness-to-chord ratio of 0.05—both intended to reduce supersonic wave drag.

---

page 432



**Figure 5.92** The North American X-15, the first manned hypersonic airplane.

(Source: Air Force Photo/NASA.)

The first X-15 was rolled out of the North American factory at Los Angeles on October 15, 1958. Vice President Richard M. Nixon was the guest of honor at the rollout ceremonies. The X-15 had become a political as well as a technical accomplishment because the United States was attempting to heal its wounded pride after the Russians' launch of the first successful unmanned satellite, *Sputnik I*, just a year earlier (see Sec. 8.21). The next day the X-15 was transported by truck to the nearby Edwards Air Force Base (the site at Muroc that saw the first supersonic flights of the Bell XS-1).

Like the XS-1, the X-15 was designed to be carried aloft by a parent airplane, this time a Boeing B-52 jet bomber. The first free flight, without power, was made by Scott Crossfield on June 8, 1959. This was soon followed by the first powered flight on September 17, 1959, when the X-15 reached Mach 2.1 in a shallow climb to 52,341 ft. Powered with the smaller LR11 rocket engines, the X-15 set a speed record of Mach 3.31 on August 4, 1960, and an altitude record of 136,500 ft just eight days later. However, these records were transitory. After November 1960 the X-15 received the more powerful XLR99 engine. The first flight with this rocket was made on November 15, 1960; on this flight, with power adjusted to its *lowest* level and with the air brakes fully extended, the X-15 still hit 2000 mi/h. Finally,

on June 23, 1961, hypersonic flight was fully achieved when U.S. Air Force test pilot Major Robert White flew the X-15 at Mach 5.3 and in so doing accomplished the first “mile-per-second” flight in an airplane, reaching a maximum velocity of 3603 mi/h. This began an illustrious series of hypersonic flight tests, which peaked in a flight at Mach 6.72 on October 3, 1967, with Air Force Major Pete Knight at the controls.

Experimental aircraft are just that—vehicles designed for specific page 433 experimental purposes, which, after they are achieved, lead to the end of the program. This happened to the X-15 when, on October 24, 1968, the last flight was carried out—the 199th of the entire program. A 200th flight was planned, partly for reasons of nostalgia; however, technical problems delayed this planned flight until December 20, when the X-15 was ready to go, attached to its B-52 parent plane as usual. However, of all things, a highly unusual snow squall suddenly hit Edwards, and the flight was canceled. The X-15 never flew again. In 1969 the first X-15 was given to the National Air and Space Museum of the Smithsonian, where it now hangs with distinction in the Milestones of Flight Gallery, along with the Bell XS-1.

The X-15 opened the world of manned hypersonic flight. The next hypersonic airplane was the Space Shuttle. The vast bulk of aerodynamic and flight dynamic data generated during the X-15 program carried over to the Space Shuttle design. The pilots’ experience with low-speed flights in a high-speed aircraft with low lift-to-drag ratio set the stage for flight preparations with the Space Shuttle. In these respects, the X-15 was clearly the major stepping-stone to the Space Shuttle of the 1980s. For more details on the X-15, see *X-15: The World’s Fastest Rocket Plane and the Pilots Who Ushered in the Space Age*, by John Anderson and Richard Passman, Zenith Press, Minneapolis, MN, 2014.

## 5.24 SUMMARY AND REVIEW

Aerospace engineering deals with flight vehicles and related applications, in general, and with airplanes and space vehicles in particular. The concepts and applications found in this chapter are oriented toward flight vehicles traveling within the atmosphere—mainly airplanes. All space vehicles launched from the surface of the earth, however, also spend some time within the atmosphere, where they experience aerodynamic lift and drag. Also, some space vehicles are designed to land on other planets, where they encounter foreign planetary atmospheres and experience lift and drag to some extent.

Lift and drag are the main substance of this chapter. We intellectually split our study into sections (literally, in this text). We start with just an airfoil section, and examine the lift, drag, and moments of the section (per unit span). Rather than the forces and moments themselves, however, we deal with lift, drag, and moment *coefficients*, defined in such a fashion as to be much more useful for engineering and calculations. These aerodynamic coefficients depend only on the shape and orientation (angle of attack) of the airfoil, Mach number, and Reynolds number. To help us make calculations for some specific airfoils, data for section lift, drag, and moment coefficients for various NACA airfoils are given in App. D.

We then extended our attention to a complete finite wing, and found that the lift and drag coefficients for a wing are different from the lift and drag coefficients for the airfoil section used on the wing. This difference

is due to the vortices that trail downstream from the tips of the wing. These wing-tip vortices modify the flow over the wing in such a fashion to increase the drag and decrease the lift. The drag increase is due to the presence of induced drag (sometimes called *vortex drag*). Induced drag is the result of the pressure distribution over the surface of the wing being modified in the presence of the wing-tip vortices so as to slightly tilt the resultant aerodynamic force vector backward, creating an additional component of force in the drag direction. This additional component is the induced drag. The lift is decreased because the wing-tip vortices induce a downward component of the flow over the wing called *downwash*, which causes the relative wind in the proximity of the airfoil section to be inclined slightly downward through a small angle called the *induced angle of attack*. This in turn reduces the angle of attack felt by the local airfoil section to a value smaller than the geometric angle of attack (the angle of attack that we see with our naked eyes—the angle between the chord line and the undisturbed free-stream direction far ahead of the airfoil). This smaller angle of attack is called the *effective angle of attack* because this angle dictates the local lift, drag, and moment coefficients of each airfoil section of the wing. Indeed, for a given airfoil section of a finite wing, the lift, drag, and moment coefficients are given by the airfoil data in App. D, where the section angle of attack given on the abscissa is literally the effective angle of attack (not the geometric angle of attack).

Finally, we recall that the aerodynamic coefficients for a finite wing are a function of a special [page 434](#) geometric feature of the wing: the *aspect ratio*, defined as the square of the wingspan divided by the planform area. The higher the aspect ratio, the farther the wing-tip vortices are removed from the rest of the wing, and the smaller are the induced aerodynamic effects such as induced drag and the induced angle of attack. For subsonic airplanes, high aspect ratios are aerodynamically a good design feature. (Structurally, however, higher-aspect-ratio wings require beefy, heavier internal structure to provide more strength along the wing. Therefore, the design aspect ratio is always a compromise between aerodynamics and structures.)

The aerodynamic coefficients are strongly affected by Mach number. Drag coefficient increases dramatically as the Mach number is increased to 1 and higher. The Mach number at which the drag coefficient starts to go out of sight is called the *drag-divergence* Mach number. We define the *critical* Mach number as that free-stream Mach number at which sonic flow is first obtained somewhere on the body. The drag-divergence Mach number usually occurs just slightly above the critical Mach number. At supersonic speeds, shock waves occur on the body, causing a large increase in drag that is termed *wave drag*. As a result, the shapes of airfoils, wings, and bodies designed for supersonic flight are much different from those intended for subsonic flight.

Some of the equations and ideas of this chapter are highlighted in the following list:

1. For an airfoil, the lift, drag, and moment coefficients are defined as

$$c_L = \frac{L}{q_\infty S} \quad c_d = \frac{D}{q_\infty S} \quad c_m = \frac{M}{q_\infty Sc}$$

where  $L$ ,  $D$ , and  $M$  are the lift, drag, and moments per unit span, respectively, and  $S = c(1)$ .

For a finite wing, the lift, drag, and moment coefficients are defined as

$$C_L = \frac{L}{q_\infty S} \quad C_D = \frac{D}{q_\infty S} \quad C_M = \frac{M}{q_\infty Sc}$$

where  $L$ ,  $D$ , and  $M$  are the lift, drag, and moments, respectively, for the complete wing and  $S$  is the wing planform area.

For a given shape, these coefficients are a function of angle of attack, [page 435](#) Mach number, and Reynolds number.

2. The pressure coefficient is defined as

$$C_p = \frac{p - p_\infty}{\frac{1}{2} \rho_\infty V_\infty^2} \quad (5.27)$$

3. The Prandtl–Glauert rule is a compressibility correction for subsonic flow:

$$C_p = \frac{C_{p,0}}{\sqrt{1 - M_\infty^2}} \quad (5.28)$$

where  $C_{p,0}$  and  $C_p$  are the incompressible and compressible pressure coefficients, respectively. The same rule holds for the lift and moment coefficients—that is,

$$c_l = \frac{c_{l,0}}{\sqrt{1 - M_\infty^2}} \quad (5.40)$$

4. The critical Mach number is the free-stream Mach number at which sonic flow is first achieved at some point on a body. The drag–divergence Mach number is the free-stream Mach number at which the drag coefficient begins to rapidly increase due to the occurrence of transonic shock waves. For a given body, the drag–divergence Mach number is slightly higher than the critical Mach number.

5. The Mach angle is defined as

$$\mu = \arcsin \frac{1}{M} \quad (5.49)$$

6. The total drag coefficient for a finite wing is equal to

$$C_D = c_d + \frac{C_L^2}{\pi e AR} \quad (5.58)$$

where  $c_d$  is the profile drag coefficient and  $C_L^2/(\pi e AR)$  is the induced drag coefficient.

7. The lift slope for a finite wing  $a$  is given by

$$a = \frac{a_0}{1 + 57.3 a_0 / (\pi e_1 AR)} \quad (5.65)$$

where  $a_0$  is the lift slope for the corresponding infinite wing.

## Bibliography

- Abbott, I. H., and A. E. von Doenhoff. *Theory of Wing Sections*. McGraw-Hill, New York, 1949 (also Dover, New York, 1959).
- Andaerson, John D., Jr. *A History of Aerodynamics and Its Impact on Flying Machines*. Cambridge University Press, New York, 1997.
- . *Fundamentals of Aerodynamics*, 5th ed. McGraw-Hill, New page 436 York, 2011.

- Dommash, D. O., S. S. Sherbey, and T. F. Connolly. *Airplane Aerodynamics*, 4th ed. Pitman, New York, 1968.
- Hallion, R. *Supersonic Flight (The Story of the Bell X-1 and Douglas D-558)*. Macmillan, New York, 1972.
- McCormick, B. W. *Aerodynamics, Aeronautics, and Flight Mechanics*. Wiley, New York, 1979.
- Pierpont, P. K. "Bringing Wings of Change," *Astronautics and Aeronautics*, vol. 13, no. 10, October 1975, pp. 20–27.
- Shapiro, A. H. *Shape and Flow: The Fluid Dynamics of Drag*. Anchor, Garden City, NY, 1961.
- Shevell, R. S. *Fundamentals of Flight*. Prentice-Hall, Englewood Cliffs, NJ, 1983.
- von Karman, T. (with Lee Edson). *The Wind and Beyond* (an autobiography). Little, Brown, Boston, 1967.

## Problems

- 5.1** By the method of dimensional analysis, derive the expression  $M = q_\infty S c m$  for the aerodynamic moment on an airfoil, where  $c$  is the chord and  $m$  is the moment coefficient.
- 5.2** Consider an infinite wing with an NACA 1412 airfoil section and a chord length of 3 ft. The wing is at an angle of attack of  $5^\circ$  in an airflow velocity of 100 ft/s at standard sea-level conditions. Calculate the lift, drag, and moment about the quarter-chord per unit span.
- 5.3** Consider a rectangular wing mounted in a low-speed subsonic wind tunnel. The wing model completely spans the test section so that the flow "sees" essentially an infinite wing. If the wing has an NACA 23012 airfoil section and a chord of 0.3 m, calculate the lift, drag, and moment about the quarter-chord per unit span when the airflow pressure, temperature, and velocity are 1 atm, 303 K, and 42 m/s, respectively. The angle of attack is  $8^\circ$ .
- 5.4** The wing model in Prob. 5.3 is pitched to a new angle of attack, where the lift on the entire wing is measured as 200 N by the wind tunnel force balance. If the wingspan is 2 m, what is the angle of attack?
- 5.5** Consider a rectangular wing with an NACA 0009 airfoil section spanning the test section of a wind tunnel. The test-section airflow conditions are standard sea level with a velocity of 120 mi/h. The wing is at an angle of attack of  $4^\circ$ , and the wind tunnel force balance measures a lift of 29.5 lb. What is the area of the wing?

- 5.6** The ratio of lift to drag  $L/D$  for a wing or airfoil is an important aerodynamic parameter; indeed, it is a direct measure of the aerodynamic efficiency of the wing. If a wing is pitched through a range of angle of attack,  $L/D$  first increases, then goes through a maximum, and then decreases. Consider an infinite wing with an NACA 2412 airfoil. Estimate the maximum value of  $L/D$ . Assume that the Reynolds number is  $9 \times 10^6$ .
- 5.7** Consider an airfoil in a free stream with a velocity of 50 m/s at standard sea-level conditions. At a point on the airfoil, the pressure is  $9.5 \times 10^4$  N/m<sup>2</sup>. What is the pressure coefficient at this point?
- 5.8** Consider a low-speed airplane flying at a velocity of 55 m/s. If the velocity at a point on the fuselage is 62 m/s, what is the pressure coefficient at this point?
- 5.9** Consider a wing mounted in the test section of a subsonic wind tunnel. The velocity of the airflow is 160 ft/s. If the velocity at a point on the wing is 195 ft/s, what is the pressure coefficient at this point?
- 5.10** Consider the same wing in the same wind tunnel as in Prob. 5.9. If the test-section air temperature is 510°R and the flow velocity is increased to 700 ft/s, what is the pressure coefficient at the same point?
- 5.11** Consider a wing in a high-speed wind tunnel. At a point on the wing, the velocity is 850 ft/s. If the test-section flow is at a velocity of 780 ft/s, with a pressure and temperature of 1 atm and 505°R, respectively, calculate the pressure coefficient at the point.
- 5.12** If the test-section flow velocity in Prob. 5.11 is reduced to 100 ft/s, what will the pressure coefficient become at the same point on the wing?
- 5.13** Consider an NACA 1412 airfoil at an angle of attack of 4°. If the free-stream Mach number is 0.8, calculate the lift coefficient.
- 5.14** An NACA 4415 airfoil is mounted in a high-speed subsonic wind tunnel. The lift coefficient is measured as 0.85. If the test-section Mach number is 0.7, at what angle of attack is the airfoil?
- 5.15** Consider an airfoil at a given angle of attack, say  $\alpha_1$ . At low speeds, the minimum pressure coefficient on the top surface of the airfoil is -0.90. What is the critical Mach number of the airfoil?
- 5.16** Consider the airfoil in Prob. 5.15 at a smaller angle of attack, say  $\alpha_2$ . At low speeds, the minimum pressure coefficient is -0.65 at this lower angle of attack. What is the critical Mach number of the airfoil?

- 5.17** Consider a uniform flow with a Mach number of 2. What angle does a M wave make with respect to the flow direction?
- 5.18** Consider a supersonic missile flying at Mach 2.5 at an altitude of 10 km (see figure below). Assume that the angle of the shock wave from the nose is approximated by the Mach angle (this is a very weak shock). How far behind the nose of the vehicle will the shock wave impinge upon the ground? (Ignore the fact that the speed of sound, and hence the Mach angle, changes with altitude.)
- 5.19** The wing area of the Lockheed F-104 straight-wing supersonic fighter is approximately  $210 \text{ ft}^2$ . If the airplane weighs 16,000 lb and is flying in level flight at Mach 2.2 at a standard altitude of 36,000 ft, estimate the wave drag on the wings.
- 5.20** Consider a flat plate at an angle of attack of  $2^\circ$  in a Mach 2.2 page 438 airflow. (Mach 2.2 is the cruising Mach number of the Concorde supersonic transport.) The length of the plate in the flow direction is 202 ft, which is the length of the Concorde. Assume that the free-stream conditions correspond to a standard altitude of 50,000 ft. The total drag on this plate is the sum of wave drag and skin friction drag. Assume that a turbulent boundary layer exists over the entire plate. The results given in Ch. 4) for skin friction coefficients hold for incompressible flow only; there is a compressibility effect on  $C_f$  such that its value decreases with increasing Mach number. Specifically, at Mach 2.2 assume that the  $C_f$  given in Ch. 4) is reduced by 20 percent.
- Given all the preceding information, calculate the total drag coefficient for the plate.
  - If the angle of attack is increased to  $5^\circ$ , assuming that  $C_f$  stays the same, calculate the total drag coefficient.
  - For these cases, what can you conclude about the relative influence of wave drag and skin friction drag?
- 5.21** The Cessna Cardinal, a single-engine light plane, has a wing with an area of  $16.2 \text{ m}^2$  and an aspect ratio of 7.31. Assume that the span efficiency factor is 0.62. If the airplane is flying at standard sea-level conditions with a velocity of 251 km/h, what is the induced drag when the total weight is 9800 N?
- 5.22** For the Cessna Cardinal in Prob. 5.21, calculate the induced drag when the velocity is 85.5 km/h (stalling speed at sea level with flaps down).

- 5.23** Consider a finite wing with an area and aspect ratio of  $21.5 \text{ m}^2$  and 5, respectively (this is comparable to the wing on a Gates Learjet, a twin-jet executive transport). Assume that the wing has an NACA 65-210 airfoil, a span efficiency factor of 0.9, and a profile drag coefficient of 0.004. If the wing is at a  $6^\circ$  angle of attack, calculate  $CL$  and  $CD$ .
- 5.24** During the 1920s and early 1930s, the NACA obtained wind tunnel data on different airfoils by testing finite wings with an aspect ratio of 6. These data were then “corrected” to obtain infinite-wing airfoil characteristics. Consider such a finite wing with an area and aspect ratio of  $1.5 \text{ ft}^2$  and 6, respectively, mounted in a wind tunnel where the test-section flow velocity is 100 ft/s at standard sea-level conditions. When the wing is pitched to  $\alpha = -2^\circ$ , no lift is measured. When the wing is pitched to  $\alpha = 10^\circ$ , a lift of 17.9 lb is measured. Calculate the lift slope for the airfoil (the infinite wing) if the span effectiveness factor is 0.95.
- 5.25** A finite wing of area  $1.5 \text{ ft}^2$  and aspect ratio of 6 is tested in a subsonic wind tunnel at a velocity of 130 ft/s at standard sea-level conditions. At an angle of attack of  $-1^\circ$ , the measured lift and drag are 0 and 0.181 lb, respectively. At an angle of attack of  $2^\circ$ , the lift and drag are measured as 5.0 and 0.23 lb, respectively. Calculate the span efficiency factor and the infinite-wing lift slope.
- 5.26** Consider a light, single-engine airplane such as the Piper Super Cub. If the maximum gross weight of the airplane is 7780 N, the wing area is  $16.6 \text{ m}^2$ , and the maximum lift coefficient is 2.1 with flaps down, calculate the stalling speed at sea level.
- 5.27** The airfoil on the Lockheed F-104 straight-wing supersonic fighter is a thin, symmetric airfoil with a thickness ratio of 3.5 percent. Consider this airfoil in a flow at an angle of attack of  $5^\circ$ . The incompressible lift coefficient for the airfoil is given approximately by  $c_l = 2\pi\alpha$ , where  $\alpha$  is the angle of attack in radians. Estimate the airfoil lift coefficient for (a)  $M = 0.2$ , (b)  $M = 0.7$ , and (c)  $M = 2.0$ .
- 5.28** The whirling-arm test device used in 1804 by Sir George Cayley is shown in Fig. 1.7. Cayley was the first person to make measurements of the lift on inclined surfaces. In his 1804 notebook, he wrote that on a flat surface moving through the air at 21.8 ft/s at  $3^\circ$  angle of attack, a lift force of 1 ounce was measured. The flat surface was a 1 ft by 1 ft square. Calculate the lift coefficient for this condition. Compare this measured value with that predicted by the expression for lift coefficient for a flat-plate airfoil in incompressible flow given by  $c_l = 2\pi\alpha$ , where  $\alpha$  is in

radians. What are the reasons for the differences in the two results? (See Anderson, *A History of Aerodynamics and Its Impact on Flying Machines*, Cambridge University Press, 1997, pp. 68–71, for a detailed discussion of this matter.)

- 5.29** Consider a finite wing at an angle of attack of  $6^\circ$ . The normal and axial force coefficients are 0.8 and 0.06, respectively. Calculate the corresponding lift and drag coefficients. What comparison can you make between the lift and normal force coefficients?
- 5.30** Consider a finite wing with an aspect of ratio of 7; the airfoil section of the wing is a symmetric airfoil with an infinite-wing lift slope of 0.11 per degree. The lift-to-drag ratio for this wing is 29 when the lift coefficient is equal to 0.35. If the angle of attack remains the same and the aspect ratio is simply increased to 10 by adding extensions to the span of the wing, what is the new value of the lift-to-drag ratio? Assume that the span efficiency factors  $e = e_1 = 0.9$  for both cases.
- 5.31** Consider a flat plate oriented at a  $90^\circ$  angle of attack in a low-speed incompressible flow. Assume that the pressure exerted over the front of the plate (facing into the flow) is a constant value over the front surface, equal to the stagnation pressure. Assume that the pressure exerted over the back of the plate is also a constant value, but equal to the free-stream static pressure. (In reality, these assumptions are only approximations to the real flow over the plate. The pressure over the front face is neither exactly constant nor exactly equal to the stagnation pressure, and the pressure over the back of the plate is neither constant nor exactly equal to the free-stream pressure. The preceding approximate model of the flow, however, is useful for our purpose here.) Note that the drag is essentially all pressure drag; due to the  $90^\circ$  orientation of the plate, skin friction drag is not a factor. For this model of the flow, prove that the drag coefficient for the flat plate is  $CD = 1$ .
- 5.32** In some aerodynamic literature, the drag of an airplane is couched in terms of the “drag area” instead of the drag coefficient. By definition, the drag area,  $f$ , is the area of a flat plate at  $90^\circ$  to the flow that has a drag force equal to the drag of the airplane. As part of this definition, the drag coefficient of the plate is assumed to be equal to 1, as shown in Prob. 5.31. If  $CD$  is the drag coefficient of the airplane based on wing planform area  $S$ , prove that  $f = CDS$ .
- 5.33** One of the most beautifully streamlined airplanes ever designed is the North American P-51 Mustang shown in Fig. 4.46. The Mustang has one of the lowest minimum drag coefficients of any airplane in history:  $CD =$

0.0163. The wing planform area of the Mustang is  $233 \text{ ft}^2$ . Using the result from Prob. 5.32, show that the drag area for the Mustang is  $3.8 \text{ ft}^2$ ; that is, drag on the whole P-51 airplane is the same as the drag on a flat plate perpendicular to the flow of an area of only  $3.8 \text{ ft}^2$ .

- 5.34** Consider an NACA 2412 airfoil in a low-speed flow at zero page 440 degrees angle of attack and a Reynolds number of  $8.9 \times 10^6$ . Calculate the percentage of drag from pressure drag due to flow separation (form drag). Assume a fully turbulent boundary layer over the airfoil. Assume that the airfoil is thin enough that the skin-friction drag can be estimated by the flat-plate results discussed in Ch. 4).
- 5.35** Repeat Prob. 5.34, assuming that the airfoil is at an angle of attack of 6 degrees. What does this tell you about the rapid increase in  $cd$  as the angle of attack of the airfoil is increased?
- 5.36** Returning to the conditions of Prob. 5.34, where the boundary layer was assumed to be fully turbulent, let us now consider the real situation where the boundary layer starts out as laminar, and then makes a transition to turbulent somewhere downstream of the leading edge. Assume a transition Reynolds number of 500,000. For this case, calculate the percentage of drag that is due to flow separation (form drag).
- 5.37** Here we continue in the vein of Probs. 5.34 to 5.36, except we examine a thicker airfoil and look at the relative percentages of skin friction and pressure drag for a thicker airfoil. Estimate the skin friction drag coefficient for the NACA 2415 airfoil in low-speed incompressible flow at  $Re = 9 \times 10^6$  and zero angle of attack for (a) a laminar boundary layer, and (b) a turbulent boundary layer. Compare the results with the experimentally measured section drag coefficient given in App. D for the NACA 2415 airfoil. What does this tell you about the relative percentages of pressure drag and skin friction drag on the airfoil for each case?
- 5.38** In reality, the boundary layer on the airfoil discussed in Prob. 5.37 is neither fully laminar nor fully turbulent. The boundary layer starts out as laminar, and then transitions to turbulent at some point downstream of the leading edge (see the discussion in Sec. 4.19). Assume that the critical Reynolds number for transition is 650,000. Calculate the skin friction drag coefficient on the NACA 2415 airfoil, and compare your result with the experimental section drag coefficient in App. D. *Note:* You will find from the answer to this problem that 86 percent of the airfoil section drag coefficient is due to skin friction and 14 percent due to pressure drag from flow separation. Comparing this answer with the result of Prob. 5.36, which

pertains to a thinner airfoil, we find that the pressure drag is a higher percentage for the thicker airfoil. However, for airfoils in general, the pressure drag is still a small percentage of the total drag. This drag breakdown is somewhat typical for airfoils at small angles of attack. By intent, the streamlined shape of airfoils results in small pressure drag, typically on the order of 15 percent of the total drag.

**5.39** This problem examines the cause and effect of a lower  $Re$  on airfoil drag. Repeat Prob. 5.38, except for  $Re = 3 \times 10^6$ . Comment on how and why  $Re$  affects the drag. *Note:* From the answer to this question, you will see that the lower  $Re$  results in a higher percentage of skin friction drag than found at the higher  $Re$  in Prob. 5.38, and hence a lower percentage of pressure drag on the airfoil section.

**5.40** The lift and drag measured on an aerodynamic body mounted at a five-degree angle of attack in a wind tunnel are 100 and 145 lb, respectively. Calculate the corresponding normal and axial forces.

**5.41** Otto Lilienthal (see Sec. 1.5) carried out a series of aerodynamic measurements on small model wings using first a whirling arm and later stationary models. He tested both flat plate wings and wings with a thin curved (cambered) airfoil. For the flat plate, the resultant aerodynamic force was always inclined behind the perpendicular to the plate, with an axial force always oriented in the backward direction. However, his data for the cambered airfoil showed that at some angles of attack the resultant aerodynamic force was inclined ahead of the perpendicular to the chord line; for these cases the axial force was oriented in the forward direction. Lilienthal called this forward component a “pushing component” and cited its existence as evidence of the superiority of cambered airfoils. (For more historical detail on this matter, see Anderson, *A History of Aerodynamics*, Cambridge University Press, 1998.) With the above information as background, show that the aerodynamic condition that results in a forward-facing axial force is

$$L/D > \cot \alpha$$

where  $\alpha$  is the angle of attack.

**5.42** The airfoil data in App. D were obtained in the NACA two-dimensional Low Turbulence Pressure Tunnel at the NACA Langley Memorial Laboratory. This facility went into operation in Spring 1941. The tunnel was especially designed for airfoil testing, with a test section 3 ft wide and 7.5 ft high. The wing models spanned the entire test section of width 3 ft, so that

the flow over the model was essentially two-dimensional. The chord length of the models was 2 ft. When the tunnel became operational, the four- and five-digit airfoil series, originally tested in older tunnels, were retested in the new tunnel. The Low Turbulence Pressure Tunnel is most noted, however, as the testing facility for the NACA Laminar Flow Airfoils. Consider a series of tests where the tunnel is pressurized to 3 atm, the temperature of the airstream in the test section is 60° F, and the flow velocity is 160 mi/h. A wing with an NACA 2412 airfoil is mounted in the tunnel at an angle of attack such that the section lift coefficient is 0.2.

- a. What is the angle of attack of the model?
- b. What is the total drag force on the model?

**5.43** The wing model in Prob. 5.42 is replaced with a model with an NACA 64-210 Laminar Flow Airfoil at the same conditions as in Prob. 5.42.

- a. What is the angle of attack of the model?
- b. What is the total drag force on the model?

**5.44** For the NACA 2412 airfoil in Prob. 5.42, what percentage of the total drag is due to skin friction drag? Assume the skin friction drag on the airfoil is essentially that for a flat plate. Also, assume that the boundary layer over the model is turbulent and incompressible.

**5.45** For the Laminar Flow NACA 64-210 airfoil in Prob. 5.43, what percentage of the total drag is due to skin friction? Assume that the skin friction drag on the airfoil is essentially that for a flat plate, and that the boundary layer is laminar and incompressible.

## Elements of Airplane Performance

First Europe, and then the globe, will be linked by flight, and nations so knit together that they will grow to be next-door neighbors. This conquest of the air will prove, ultimately, to be man's greatest and most glorious triumph. What railways have done for nations, airways will do for the world.

*Claude Grahame-White* British aviator, 1914

### 6.1 INTRODUCTION: THE DRAG POLAR

Henson's aerial steam carriage of the mid-19th century (see Fig. 1.11) was pictured by contemporary artists as flying to all corners of the world. Of course questions about *how* it would fly to such distant locations were not considered by the designers. As with most early aeronautical engineers of that time, their main concern was simply to lift or otherwise propel the airplane from the ground; what happened once the vehicle was airborne was viewed as being of secondary importance. However, with the success of the Wright brothers in 1903, and with the subsequent rapid development of aviation during the pre-World War I era, the airborne performance of the airplane suddenly became of primary importance. Some obvious questions were (and still are) asked about a given design. What is the maximum speed of the airplane? How fast can it climb to a given altitude? How far can it fly on a given tank of fuel? How long can it stay in the air? Answers to these and similar questions constitute the study of *airplane performance*, which is the subject of this chapter.

#### PREVIEW BOX

You are a passenger, or perhaps the pilot, in an airplane standing at the beginning of the runway, ready to take off. The engine throttle is pushed

wide open, and you accelerate down the runway. How do you know if you will be able to lift off the ground and get into the air before you use up all the runway length? In this chapter you will learn how to answer this question.

Now you are in the air, but there are thunderstorms off in the distance, and you will need to climb over them as quickly as possible. How do you know if your airplane can do this? How long will it take for you to climb to a safe altitude? In this chapter you will learn how to answer these questions.

Once you are comfortably at altitude and you are winging your way to your destination, how do you know if you can get there without running out of fuel? Alternatively, how can you estimate how far you can fly on a tank of fuel? Or perhaps you are simply up for a joy ride, and you want to stay up for as long as possible. How can you estimate how long you can stay in the air on a tank of fuel? In this chapter you will learn how to answer these questions.

Maybe you are a speed freak. You push the throttle wide open, getting maximum power from your engine (or engines). You accelerate like mad, at least for a while, until the airplane reaches the fastest velocity at which it can fly. How do you estimate this “fastest” velocity? In this chapter you will learn how to answer this question.

Suddenly you are the “Red Baron” in your “hot” fighter airplane, locked in mortal air combat with an adversary. To defeat your adversary in a dogfight, you want to be able to make turns with a small radius (turn “inside” your adversary) and be able to make a turn faster. How do you know your airplane can do this? In this chapter you will learn how to answer this question.

Unfortunately your engine goes out; you are at some altitude, and you lose all your power. You have to glide back to your base. Can your airplane make it, or will you have to land short of your destination? In this chapter you will learn how to answer this question.

Fortunately power returns to your engine, and you are now ready to complete your flight and land. You approach the runway. Is the runway long enough for you to land safely and come to a stop? Or are you going to zip past the end of the runway into the woods beyond, holding on for dear life? In this chapter you will learn how to answer this question.

This chapter is full of such important questions and equally important answers. They all have to do with the *performance* of the airplane. In this

chapter, at last, we deal with the *whole airplane*, not just an airfoil or a wing. Finally, in the middle of this book on the introduction to flight, we are actually going to take flight. Buckle up, and read on. Let's go for a ride.

In previous chapters the physical phenomena producing lift, drag, and moments of an airplane were introduced. We emphasized that the aerodynamic forces and moments exerted on a body moving through a fluid stem from two sources, both acting over the body surface:

1. The pressure distribution.
2. The shear stress distribution.

The physical laws governing such phenomena were examined, with various applications to aerodynamic flows.

In this chapter we begin a new phase of study. The airplane is considered a rigid body on which four natural forces are exerted: lift, drag, propulsive thrust, and weight. Concern is focused on the movement of the airplane as it responds to these forces. Such considerations form the core of *flight dynamics*, an important discipline of aerospace engineering. Studies of airplane performance (this chapter) and stability and control (Ch. 7) both fall under the heading of flight dynamics.

In these studies we will no longer be concerned with aerodynamic [page 443](#) details; rather, we will generally assume that the aerodynamicists have done their work and given us the pertinent aerodynamic data for a given airplane. These data are usually packaged in the form of a *drag polar* for the complete airplane, given as

$$C_D = C_{D,e} + \frac{C_L^2}{\pi e AR} \quad (6.1a)$$

Equation (6.1a) is an extension of Eq. (5.58) to include the whole airplane. Here  $C_D$  is the drag coefficient for the complete airplane;  $C_L$  is the total lift coefficient, including the small contributions from the horizontal tail and fuselage; and  $C_{D,e}$  is defined as the *parasite drag coefficient*, which contains not only the profile drag of the wing [ $c_d$  in Eq. (5.58)] but also the friction and pressure drag of the tail surfaces, fuselage, engine nacelles, landing gear, and any other component of the airplane that is exposed to the airflow. At transonic and supersonic speeds,  $C_{D,e}$  also contains wave drag. Because of changes in the flow field around the airplane—especially changes in the amount of separated flow over parts of the airplane—as the angle of attack is

varied,  $C_{D,e}$  will change with angle of attack; that is,  $C_{D,e}$  is itself a function of lift coefficient. A reasonable approximation for this function is

$$C_{D,e} = C_{D,0} + r C_L^2$$

where  $r$  is an empirically determined constant. Hence, Eq. (6.1a) can be written as

$$C_D = C_{D,0} + \left( r + \frac{1}{\pi e AR} \right) C_L^2 \quad (6.1b)$$


In Eqs. (6.1a) and (6.1b),  $e$  is the familiar span efficiency factor, which takes into account the nonelliptical lift distribution on wings of general shape (see Sec. 5.14). Let us now *redefine*  $e$  so that it also includes the effect of the variation of parasite drag with lift; that is, let us write Eq. (6.1b) in the form

$$C_D = C_{D,0} + \frac{C_L^2}{\pi e AR} \quad (6.1c)$$

where  $C_{D,0}$  is the parasite drag coefficient at *zero lift* and the term  $C_L^2/(\pi e AR)$  includes both induced drag and the contribution to parasite drag due to lift. In Eq. (6.1c), our redefined  $e$ , which now includes the effect of  $r$  from Eq. (6.1b), is called the *Oswald efficiency factor* (named after W. Bailey Oswald, who first established this terminology in NACA Report No. 408 in 1932). In this chapter the basic aerodynamic properties of the airplane are described by Eq. (6.1c), and we consider both  $C_{D,0}$  and  $e$  as known aerodynamic quantities, obtained from the aerodynamicist. We will continue to designate  $C_L^2/(\pi e AR)$  by  $C_{D,i}$ , where  $C_{D,i}$  now has the expanded interpretation as the coefficient of *drag due to lift*, including both the contributions due to induced drag and the increment in parasite drag due to angle of attack different from  $\alpha_L = 0$ . We designate  $C_{D,0}$  simply as the *zero-lift* drag coefficient, which is obvious from Eq. (6.1c) when  $C_L = 0$ ; however, we recognize  $C_{D,0}$  more precisely as the *parasite* drag coefficient at *zero lift*—that is, the value of the drag coefficient when  $\alpha = \alpha_L = 0$ .

The graph of Eq. (6.1c), shown in Fig. 6.1, is also called the *drag polar*. With the approximations made in Eq. (6.1c), the drag polar is a parabola with its axis on the zero-lift axis, and its vertex is  $C_{D,0}$ . In Fig. 6.1a  $C_D$  is plotted versus  $C_L$ ; in Fig. 6.1b  $C_L$  is plotted versus  $C_D$ . The two representations are identical; Fig. 6.1b is simply a mirror image of Fig. 6.1a rotated on its side. Both representations are found in the literature. In Fig. 6.1 negative values of  $C_L$  pertain to negative lift, which occurs when the angle of

attack of the airplane is less than  $\alpha_{L=0}$ . This situation is not encountered frequently in the analysis of airplane performance; hence, only that portion of the drag polar associated with positive  $C_L$  is usually shown.

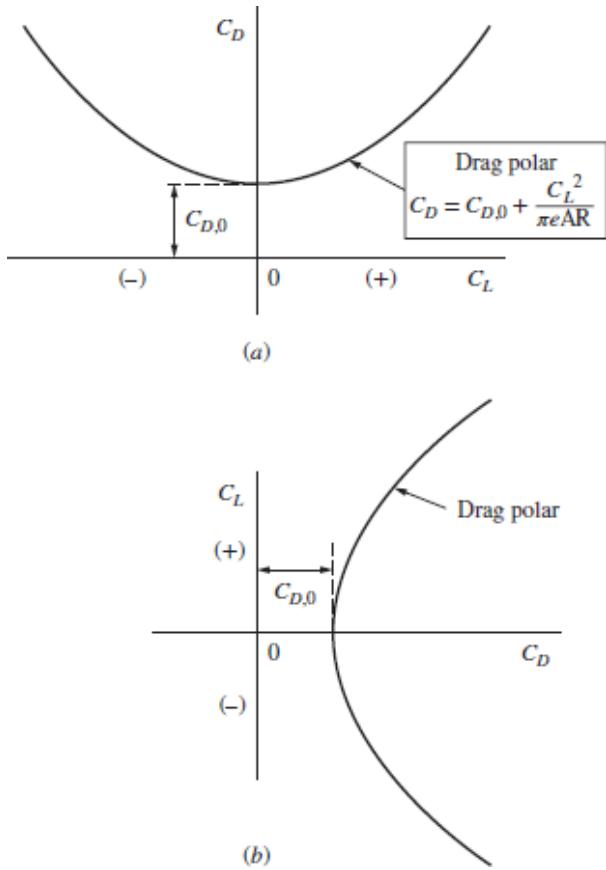


**Figure 6.1** Schematic of the drag polar.


An illustration of the drag polar for a specific airplane is shown in Fig. 6.2, which gives the actual data for the Lockheed C-141A, shown in three-view at the top of the figure. Upon close examination, the drag polar for an actual airplane exhibits a subtle difference from our approximation given in Eq. (6.1c) as graphed in Fig. 6.1. Note that the zero-lift drag coefficient in Fig. 6.2 is not the minimum drag coefficient; that is, the axis of the parabolic drag polar is not the zero-lift axis, but rather is displaced slightly above the zero-lift axis. In Fig. 6.2 the minimum drag coefficient is  $C_D, \text{ min} = 0.015$ , and it occurs for a value of the lift coefficient  $C_L \text{ min drag} = 0.16$ . The zero-lift drag coefficient is  $C_{D,0} = 0.017$  at  $C_L = 0$ . And  $C_{D,0}$  is not the minimum drag coefficient because  $\alpha_{L=0}$  for most airplane designs is a small but finite negative value; that is, the airplane is pitched slightly downward at this

page 445

orientation, and the pressure drag due to flow separation (*form drag*) is slightly higher than if the airplane is at an angle of attack slightly larger, nearer a zero angle of attack. The minimum drag coefficient occurs when the airplane is more aligned with the relative wind—that is, when  $\alpha$  is slightly larger than  $\alpha_L=0$ . For this situation the drag polar can be expressed as

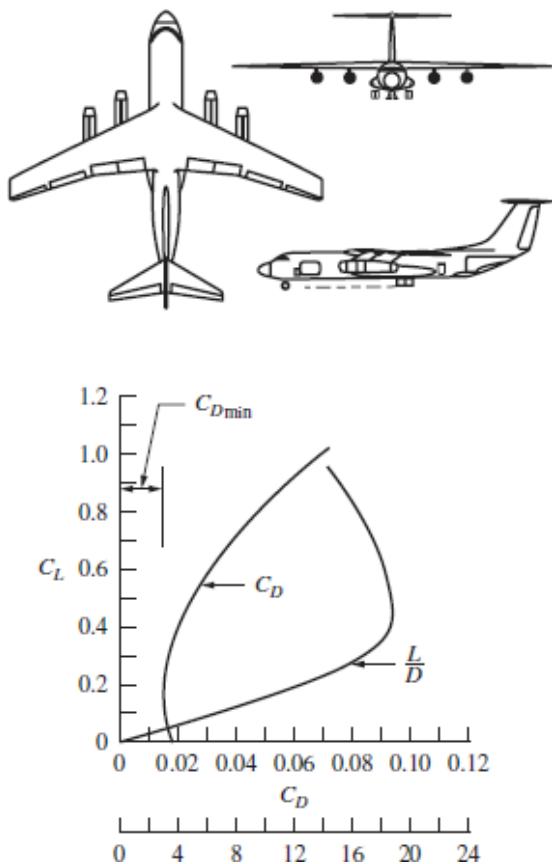

**Figure 6.2** Low-speed drag polar and variation of lift- to-drag ratio for the Lockheed C-141A. The airplane is shown in a three-view above the drag polar.

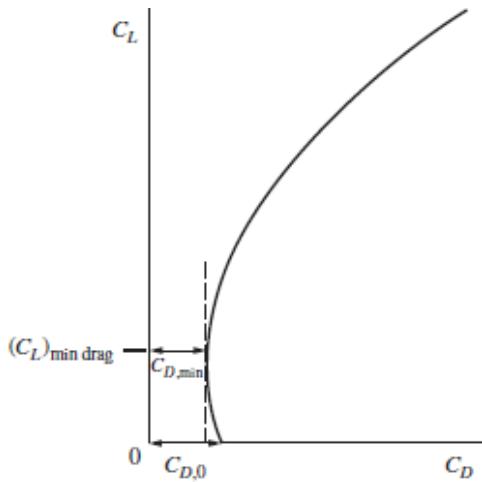

**Figure 6.3** Drag polar where the zero-lift drag coefficient is not the same as the minimum drag coefficient.

$$C_D = C_{D,\min} + \frac{(C_L - C_{L,\min\ drag})^2}{\pi e AR} \quad (6.2)$$

The corresponding graph of the drag polar is shown in Fig. 6.3.


[page 446](#)

Now that we have made the distinction between the two generic drag polars sketched in Figs. 6.1 and 6.3, for our considerations of airplane performance in this chapter, we will adopt Eq. (6.1c) and Fig. 6.1 as the representation of the drag polar. It simplifies our analysis and presentation without loss of generality. Quantitatively there is only a small difference between the two representations. However, for an industry-standard detailed performance analysis of a particular airplane, you want to have as accurate a drag polar as you can obtain for the airplane, and you would be dealing with the more accurate representation shown in Fig. 6.3 and given by Eq. (6.2).

Return for a moment to our overall road map in Fig. 2.1. With this chapter we move to a new main discipline—flight mechanics—as itemized in Fig. 2.1. In particular, in this chapter we deal with airplane performance, a subheading under flight mechanics, as shown at the center of Fig. 2.1. The road map for this chapter is shown in Fig. 6.4. A study of airplane performance is frequently based on Newton's second law, which dictates the motion of the airplane through the atmosphere. We will first obtain these *equations of motion*. The remainder of the chapter is based on two forms of these equations: (1) the form associated with the assumption of *unaccelerated* flight, leading to a study of *static performance* itemized on the left side of Fig. 6.4; and (2) the form associated with acceleration of the airplane, leading to a study of *dynamic performance* itemized on the right side of Fig. 6.4. (The

difference between static performance and dynamic performance is analogous to taking a course in statics and another course in dynamics.) Under static performance we will examine such important aspects as how to calculate the maximum velocity of the airplane, how fast it can climb (rate of climb), how high it can fly (maximum altitude), how far it can fly (range), and how long it can stay in the air (endurance). Under dynamic performance we will examine takeoff and landing characteristics, turning flight, and accelerated rate of climb. When we arrive at the bottom of this road map, we will have toured through some of the basic aspects that dictate the design of an airplane and will have covered some of the most important territory in aerospace engineering. So let's get going!

page 447

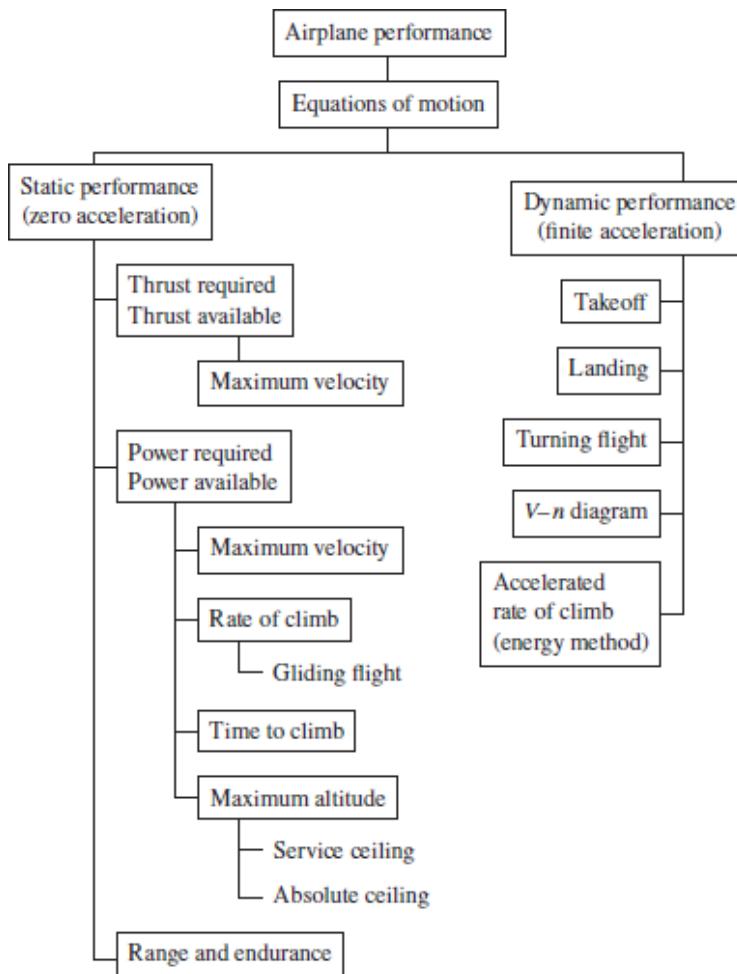

**Figure 6.4** Road map for Ch. 6).

page 448

## 6.2 EQUATIONS OF MOTION


To study the performance of an airplane, we must first establish the fundamental equations that govern its translational motion through air. Consider an airplane in flight, as sketched in Fig. 6.5. The flight path (direction of motion of the airplane) is inclined at an angle  $\theta$  with respect to the horizontal. In terms of the definitions in Ch. 5), the flight path direction and the relative wind are along the same line. The mean chord line is at a geometric angle of attack  $\alpha$  with respect to the flight path direction. Four physical forces are acting on the airplane:

1. Lift  $L$ , which is perpendicular to the flight path direction.
2. Drag  $D$ , which is parallel to the flight path direction.
3. Weight  $W$ , which acts vertically toward the center of the earth (and hence is inclined at angle  $\theta$  with respect to the lift direction).
4. Thrust  $T$ , which in general is inclined at the angle  $\alpha_T$  with respect to the flight path direction.

The force diagram shown in Fig. 6.5 is important. Study it carefully until you feel comfortable with it.

The flight path shown in Fig. 6.5 is drawn as a straight line. This is the picture we see by focusing locally on the airplane itself. However, if we stand back and take a wider view of the space in which the airplane is traveling, the flight path is generally curved. This is obviously true if the airplane is maneuvering; but even if the airplane is flying “straight and level” with respect to the ground, it is still executing a curved flight path with a radius of curvature equal to the absolute altitude  $h_a$  (as defined in Sec. 3.1).

When an object moves along a curved path, the motion is called *curvilinear*, as opposed to motion along a straight line, which is *rectilinear*. Newton’s second law, which is a physical statement that force = mass  $\times$  acceleration, holds in either case. Consider a curvilinear path. At a given point on the path, set up two mutually perpendicular axes, one along the direction of the flight path and the other normal to the flight path. Applying Newton’s law along the flight path gives

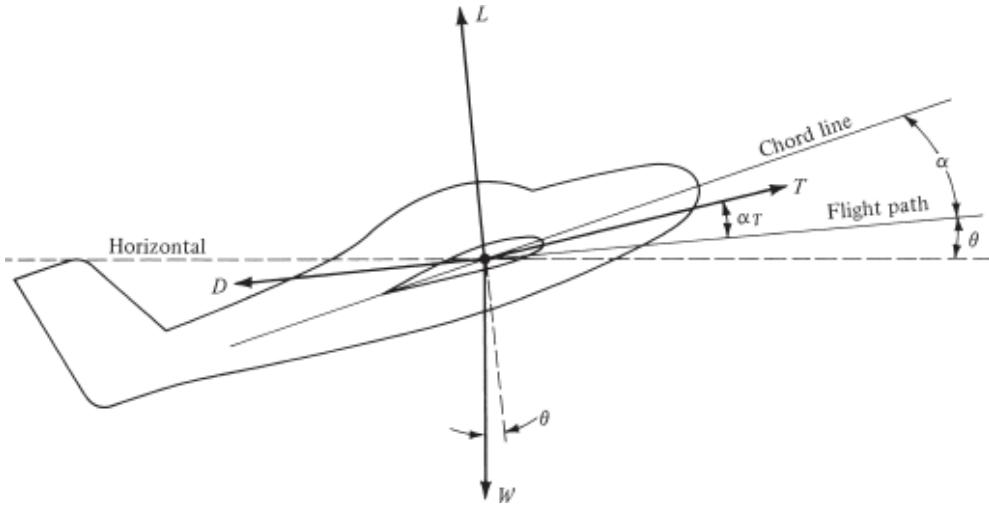

**Figure 6.5** Force diagram for an airplane in flight.

$$\sum F_{\parallel} = ma = m \frac{dV}{dt} \quad (6.3)$$

where  $\sum F_{\parallel}$  is the summation of all forces parallel to the flight path,  $a = dV/dt$  is the acceleration along the flight path, and  $V$  is the instantaneous value of the airplane's flight velocity. (Velocity  $V$  is always along the flight path direction, by definition.) Applying Newton's law perpendicular to the flight path, we have

$$\sum F_{\perp} = m \frac{V^2}{r_c} \quad (6.4)$$

where  $\sum F_{\perp}$  is the summation of all forces perpendicular to the flight path and  $V^2/r_c$  is the acceleration normal to a curved path with radius of curvature  $r_c$ . This normal acceleration  $V^2/r_c$  should be familiar from basic physics. The right side of Eq. (6.4) is nothing other than the *centrifugal force*.

Examining Fig. 6.5, we see that the forces parallel to the flight path (positive to the right, negative to the left) are

$$\sum F_{\parallel} = T \cos \alpha_T - D - W \sin \theta \quad (6.5)$$

and the forces perpendicular to the flight path (positive upward and negative downward) are

$$\sum F_{\perp} = L + T \sin \alpha_T - W \cos \theta \quad (6.6)$$

Combining Eq. (6.3) with (6.5) and Eq. (6.4) with (6.6) yields

$T \cos \alpha_T - D - W \sin \theta = m \frac{dV}{dt}$

(6.7)

$$L + T \sin \alpha_T - W \cos \theta = m \frac{V^2}{r_c} \quad (6.8)$$

Equations (6.7) and (6.8) are the *equations of motion* for an airplane in translational flight. (Note that an airplane can also rotate about its axes; this will be discussed in Ch. 7). Also note that we are not considering the possible sidewise motion of the airplane perpendicular to the page of Fig. 6.5.)

Equations (6.7) and (6.8) describe the general two-dimensional translational motion of an airplane in accelerated flight. However, in the first part of this chapter we are interested in a specialized application of these equations: the case where the acceleration is zero. The performance of an airplane for such unaccelerated flight conditions is called *static performance*. This may at first thought seem unduly restrictive; however, static performance analyses lead to reasonable calculations of maximum velocity, maximum rate of climb, maximum range, and the like—parameters of vital interest in airplane design and operation.

With this in mind, consider level, unaccelerated flight. Referring to [page 450](#) Fig. 6.5, level flight means that the flight path is along the horizontal; that is,  $\theta = 0$ . Unaccelerated flight means that the right sides of Eqs. (6.7) and (6.8) are zero. Therefore, these equations reduce to

$$T \cos \alpha_T = D \quad (6.9)$$

$$L + T \sin \alpha_T = W \quad (6.10)$$

For most conventional airplanes,  $\alpha_T$  is small enough that  $\cos \alpha_T \approx 1$  and  $\sin \alpha_T \approx 0$ . Thus, from Eqs. (6.9) and (6.10),

$$T = D \quad (6.11)$$

$$L = W \quad (6.12)$$

Equations (6.11) and (6.12) are the equations of motion for level, unaccelerated flight. They can also be obtained directly from Fig. 6.5 by inspection. In level, unaccelerated flight, the aerodynamic drag is balanced by the thrust of the engine, and the aerodynamic lift is balanced by the weight of the airplane—almost trivial, but very useful, results.

Let us now apply these results to the static performance analysis of an airplane. The following sections constitute the building blocks for such an analysis, which ultimately yields answers to such questions as how fast, how far, how long, and how high a given airplane can fly. Also, the discussion in these sections relies heavily on a graphical approach to the calculation of

airplane performance. In modern aerospace engineering such calculations are made directly on high-speed digital computers. However, the graphical illustrations in the following sections are essential to the programming and understanding of such computer solutions; moreover, they help to clarify and explain the concepts being presented.

### 6.3 THRUST REQUIRED FOR LEVEL, UNACCELERATED FLIGHT

Consider an airplane in steady, level flight at a given altitude and a given velocity. For flight at this velocity, the airplane's power plant (such as a turbojet engine or reciprocating engine-propeller combination) must produce a net thrust equal to the drag. The thrust required to obtain a certain steady velocity is easily calculated as follows. From Eqs. (6.11) and (5.20),

$$T = D = q_\infty S C_D \quad (6.13)$$

and from Eqs. (6.12) and (5.17),

$$L = W = q_\infty S C_L \quad (6.14)$$

Dividing Eq. (6.13) by (6.14) yields

$$\frac{T}{W} = \frac{C_D}{C_L} \quad (6.15)$$

Thus from Eq. (6.15), the thrust required for an airplane to fly at a given velocity in level, unaccelerated flight is

$T_R = \frac{W}{C_L/C_D} = \frac{W}{L/D}$

(6.16)

(Note that a subscript  $R$  has been added to thrust to emphasize that it is thrust required.)


Thrust-required  $T_R$  for a given airplane at a given altitude varies with velocity  $V_\infty$ . The *thrust-required curve* is a plot of this variation and has the general shape illustrated in Fig. 6.6. To calculate a point on this curve, proceed as follows:

1. Choose a value of  $V_\infty$ .
2. For this  $V_\infty$ , calculate the lift coefficient from Eq. (6.14):

$$C_L = \frac{W}{\frac{1}{2} \rho_\infty V_\infty^2 S} \quad (6.17)$$

---

page 451

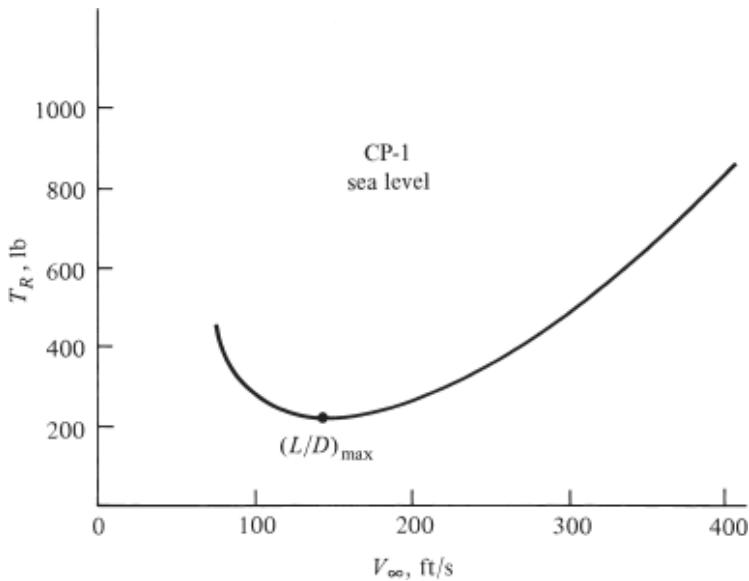

**Figure 6.6** Thrust-required curve. The results on this and subsequent figures correspond to answers for some of the sample problems in this chapter.

Note that  $\rho_\infty$  is known from the given altitude and  $S$  is known [page 452](#) from the given airplane. The  $C_L$  calculated from Eq. (6.17) is the value necessary for the lift to balance the known weight  $W$  of the airplane.

3. Calculate  $C_D$  from the known drag polar for the airplane

$$C_D = C_{D,0} + \frac{C_L^2}{\pi e AR}$$

where  $C_L$  is the value obtained from Eq. (6.17).


4. Form the ratio  $C_L/C_D$ .
5. Calculate thrust required from Eq. (6.16).

The value of  $T_R$  obtained from Step Five is the thrust required to fly at the specific velocity chosen in Step One. In turn, the curve in Fig. 6.6 is the locus of all such points taken for all velocities in the flight range of the airplane. Study Example 6.1 at the end of this section to become familiar with the preceding steps.


Note from Eq. (6.16) that  $T_R$  varies inversely as  $L/D$ . Hence, minimum thrust required will be obtained when the airplane is flying at a velocity where  $L/D$  is maximum. This condition is shown in Fig. 6.6.

The lift-to-drag ratio  $L/D$  is a measure of the aerodynamic efficiency of an airplane; it makes sense that maximum aerodynamic efficiency should lead to minimum thrust required. Consequently, the lift-to-drag ratio is an important aerodynamic consideration in airplane design. Also note that  $L/D$  is a function of angle of attack, as sketched in Fig. 6.7. For most conventional subsonic airplanes,  $L/D$  reaches a maximum at some specific value of  $\alpha$ , usually on the order of  $2^\circ$  to  $5^\circ$ . Thus, when an airplane is flying at the velocity for minimum  $T_R$ , as shown in Fig. 6.6, it is simultaneously flying at the angle of attack for maximum  $L/D$ , as shown in Fig. 6.7.

As a corollary to this discussion, note that different points on the thrust-required curve correspond to different angles of attack. This is emphasized in Fig. 6.8, which shows that as we move from right to left on the thrust-required curve, the airplane angle of attack increases. This also helps to explain physically why  $T_R$  goes through a minimum. Recall that  $L = W = q_\infty S C_L$ . At high velocities (point *a* in Fig. 6.8), most of the required lift is obtained from high dynamic pressure  $q_\infty$ ; hence  $C_L$  and therefore  $\alpha$  are small. Also, under the same conditions, drag ( $D = q_\infty S C_D$ ) is relatively large because  $q_\infty$  is large. As we move to the left on the thrust-required curve,  $q_\infty$  decreases; hence  $C_L$  and therefore  $\alpha$  must increase to support the given airplane weight. Because  $q_\infty$  decreases,  $D$  and hence  $T_R$  initially decrease. However, recall that drag due to lift is a component of total drag and that  $C_{D,i}$  varies as  $C_L^2$ . At low velocities, such as at point *b* in Fig. 6.8,  $q_\infty$  is low and therefore  $C_L$  is large. At these conditions  $C_{D,i}$  increases rapidly—more rapidly than  $q_\infty$  decreases—and  $D$  and hence  $T_R$  increase. This is why, starting at point *a*,  $T_R$  first decreases as  $V_\infty$  decreases and then goes through a minimum and starts to increase, as shown at point *b*.

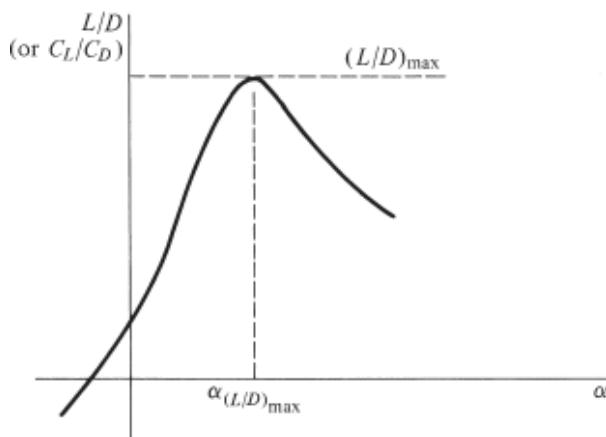

**Figure 6.7** Lift-to-drag ratio versus angle of attack.

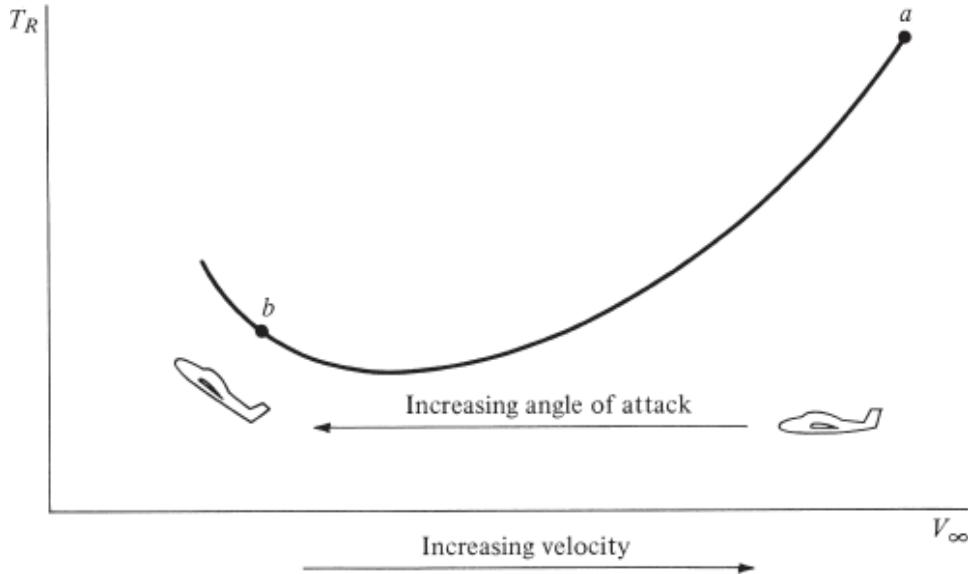


**Figure 6.8** Thrust-required curve with associated angle-of-attack variation.

Recall from Eq. (6.1c) that the total drag of the airplane is the sum of the zero-lift drag and the drag due to lift. The corresponding drag coefficients are  $C_{D,0}$  and  $C_{D,i} = C_L^2/(\pi e AR)$ , respectively. At the condition for minimum  $T_R$ , there exists an interesting relation between  $C_{D,0}$  and  $C_{D,i}$ , as follows. From Eq. (6.11),

$$\begin{aligned} T_R &= D = q_\infty S C_D = q_\infty S (C_{D,0} + C_{D,i}) \\ &= q_\infty S \left( C_{D,0} + \frac{C_L^2}{\pi e AR} \right) \end{aligned} \quad (6.18)$$

$$T_R = q_\infty S C_{D,0} + q_\infty S \frac{C_L^2}{\pi e AR}$$

Zero-lift  $T_R$       Lift-induced  $T_R$

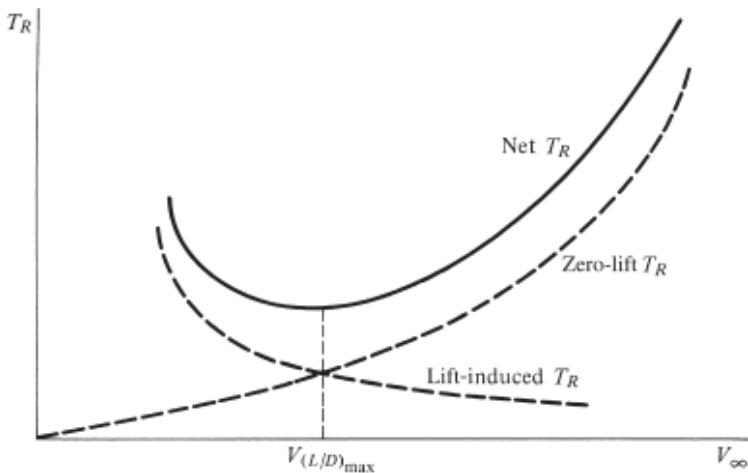

**Figure 6.9** Comparison of lift-induced and zero-lift thrust required.

Note that as identified in Eq. (6.18), the thrust required can be considered the sum of *zero-lift thrust required* (thrust required to balance zero-lift drag) and *lift-induced thrust required* (thrust required to balance drag due to lift). Examining Fig. 6.9, we find that lift-induced  $T_R$  decreases but zero-lift  $T_R$  increases as the velocity is increased. (Why?)

Recall that  $C_L = W/(q_\infty S)$ . From Eq. (6.18),

$$T_R = q_\infty S C_{D,0} + \frac{W^2}{q_\infty S \pi e A R} \quad (6.19)$$

$$\text{Also,} \quad \frac{dT_R}{dq_\infty} = \frac{dT_R}{dV_\infty} \frac{dV_\infty}{dq_\infty} \quad (6.20)$$

From calculus we find that the point of minimum  $T_R$  in Fig. 6.6 corresponds to  $dT_R/dV_\infty = 0$ . Hence, from Eq. (6.20), minimum  $T_R$  also corresponds to  $dT_R/dq_\infty = 0$ . Differentiating Eq. (6.19) with respect to  $q_\infty$  and setting the derivative equal to zero, we have

$$\begin{aligned} \frac{dT_R}{dq_\infty} &= S C_{D,0} - \frac{W^2}{q_\infty^2 S \pi e A R} = 0 \\ \text{Thus} \quad C_{D,0} &= \frac{W^2}{q_\infty^2 S^2 \pi e A R} \\ \text{However,} \quad \frac{W^2}{q_\infty^2 S^2} &= \left(\frac{W}{q_\infty S}\right)^2 = C_L^2 \end{aligned} \quad (6.21)$$

Hence Eq. (6.21) becomes

page 454

$$C_{D,0} = \frac{C_L^2}{\pi e AR} = C_{D,i}$$

Zero-lift drag = drag due to lift

(6.22)

Equation (6.22) yields the interesting aerodynamic result that at minimum thrust required, zero-lift drag equals drag due to lift. Hence, the curves for zero-lift and lift-induced  $T_R$  intersect at the velocity for minimum  $T_R$  (that is, for maximum  $L/D$ ), as shown in Fig. 6.9. We will return to this result in Sec. 6.13.

[page 455](#)

### EXAMPLE 6.1

For all the examples given in this chapter, two types of airplanes will be considered:

- a. A light, single-engine, propeller-driven, private airplane, approximately modeled after the Cessna T-41A shown in Fig. 6.10. For convenience, we will designate our hypothetical airplane as the CP-1, having the following characteristics:

Wingspan = 35.8 ft

Wing area = 174 ft<sup>2</sup>

Normal gross weight = 2950 lb

Fuel capacity: 65 gal of aviation gasoline

Power plant: one-piston engine of 230 hp at sea level



**Figure 6.10** The hypothetical CP-1 studied in Ch. 6) sample problems is modeled after the Cessna T-41A shown here.

(Source: *U.S. Air Force*.)

$$\text{Specific fuel consumption} = 0.45 \text{ lb}/(\text{hp})(\text{h})$$

$$\text{Parasite drag coefficient } C_{D,0} = 0.025$$

$$\text{Oswald efficiency factor } e = 0.8$$

$$\text{Propeller efficiency} = 0.8$$

b. A jet-powered executive aircraft, approximately modeled after the Cessna Citation X, shown in Fig. 6.11. For convenience, we will designate our hypothetical jet as the CJ-1, having the following characteristics:

---

$$\text{Wingspan} = 53.3 \text{ ft}$$

---

page 456

$$\text{Wing area} = 318 \text{ ft}^2$$

$$\text{Normal gross weight} = 19,815 \text{ lb}$$

$$\text{Fuel capacity: 1119 gal of kerosene}$$

$$\text{Power plant: two turbofan engines of 3650 lb thrust each at sea level}$$

Specific fuel consumption = 0.6 lb of fuel/(lb thrust)(h)

Parasite drag coefficient  $C_{D,0} = 0.02$

Oswald efficiency factor  $e = 0.81$

By the end of this chapter, all the examples taken together will represent a basic performance analysis of these two aircraft.

In this example, only the thrust required is considered. Calculate the  $T_R$  curves at sea level for both the CP-1 and the CJ-1.



**Figure 6.11** The hypothetical CJ-1 studied in Ch. 6) sample problems is modeled after the Cessna Citation X shown here.

(Source: Charles Polidano/Touch The Skies/Alamy Stock Photo.)

### ■ Solution

a. For the CP-1, assume that  $V_\infty = 200 \text{ ft/s} = 136.4 \text{ mi/h}$ . From Eq. (6.17),

$$C_L = \frac{W}{\frac{1}{2} \rho_\infty V_\infty^2 S} = \frac{2950}{\frac{1}{2}(0.002377)(200)^2(174)} = 0.357$$

The aspect ratio is  $AR = \frac{b^2}{S} = \frac{(35.8)^2}{174} = 7.37$

Thus, from Eq. (6.1c),

$$C_D = C_{D,0} + \frac{C_L^2}{\pi e AR} = 0.025 + \frac{(0.357)^2}{\pi(0.8)(7.37)} = 0.0319$$

Hence  $\frac{L}{D} = \frac{C_L}{C_D} = \frac{0.357}{0.0319} = 11.2$

Finally, from Eq. (6.16),

$$T_R = \frac{W}{L/D} = \frac{2950}{11.2} = \boxed{263 \text{ lb}}$$

To obtain the thrust-required curve, the preceding calculation is [page 457](#) repeated for many different values of  $V_\infty$ . Some sample results are tabulated as follows:

$V_\infty, \text{ ft/s}$	$C_L$	$C_D$	$L/D$	$T_R, \text{ lb}$
100	1.43	0.135	10.6	279
150	0.634	0.047	13.6	217
250	0.228	0.028	8.21	359
300	0.159	0.026	6.01	491
350	0.116	0.026	4.53	652

The preceding tabulation is given so that the reader can try such calculations and compare the results. Such tabulations are given throughout this chapter. They are taken from a computer calculation in which 100 different velocities were used to generate the data. The  $T_R$  curve obtained from these calculations is given in Fig. 6.6.

b. For the CJ-1, assume that  $V_\infty = 500 \text{ ft/s} = 341 \text{ mi/h}$ . From Eq. (6.17),

$$C_L = \frac{W}{\frac{1}{2} \rho_\infty V_\infty^2 S} = \frac{19,815}{\frac{1}{2}(0.002377)(500)^2(318)} = 0.210$$

The aspect ratio is  $AR = \frac{b^2}{S} = \frac{(53.3)^2}{318} = 8.93$


Thus, from Eq. (6.1c),

$$C_D = C_{D,0} + \frac{C_L^2}{\pi e AR} = 0.02 + \frac{(0.21)^2}{\pi(0.81)(8.93)} = 0.022$$

Hence

$$\frac{L}{D} = \frac{C_L}{C_D} = \frac{0.21}{0.022} = 9.55$$

page 458

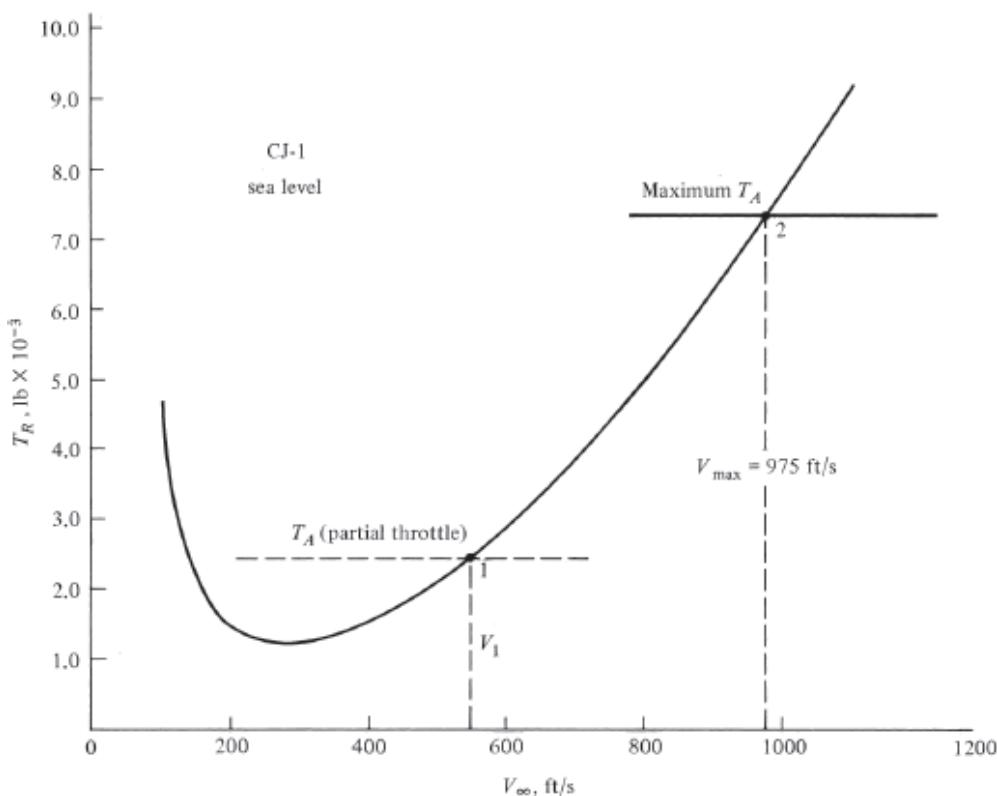

**Figure 6.12** Thrust-required curve for the CJ-1.

Finally, from Eq. (6.16),

$$T_R = \frac{W}{L/D} = \frac{19,815}{9.55} = 2075 \text{ lb}$$

A tabulation for a few different velocities follows:


$V_\infty, \text{ft/s}$	$C_L$	$C_D$	$L/D$	$T_R, \text{lb}$
300	0.583	0.035	16.7	1188
600	0.146	0.021	6.96	2848
700	0.107	0.021	5.23	3797
850	0.073	0.020	3.59	5525
1000	0.052	0.020	2.61	7605

The thrust-required curve is shown in Fig. 6.12.

## 6.4 THRUST AVAILABLE AND MAXIMUM VELOCITY

Thrust-required  $T_R$ , described in Sec. 6.3, is dictated by the aerodynamics and weight of the airplane itself; it is an *airframe-associated* phenomenon. In contrast, the *thrust-available*  $T_A$  is strictly associated with the engine of the airplane; it is the propulsive thrust provided by an engine-propeller combination, a turbojet, a rocket, or the like. Propulsion is the subject of Ch. 9). Suffice it to say here that reciprocating piston engines with propellers exhibit a variation of thrust with velocity, as sketched in Fig. 6.13a. Thrust at zero velocity (static thrust) is a maximum and decreases with forward velocity. At near-sonic flight speeds, the tips of the propeller blades encounter the same compressibility problems discussed in Ch. 5), and the thrust available rapidly deteriorates. In contrast, the thrust of a turbojet engine is relatively constant with velocity, as sketched in Fig. 6.13b. These two power plants are quite common in aviation today; reciprocating engine-propeller combinations power the average light, general aviation aircraft, whereas jet engines are used by almost all large commercial transports and military combat aircraft. For these reasons, the performance analyses of this chapter consider only these two propulsive mechanisms.

page 459

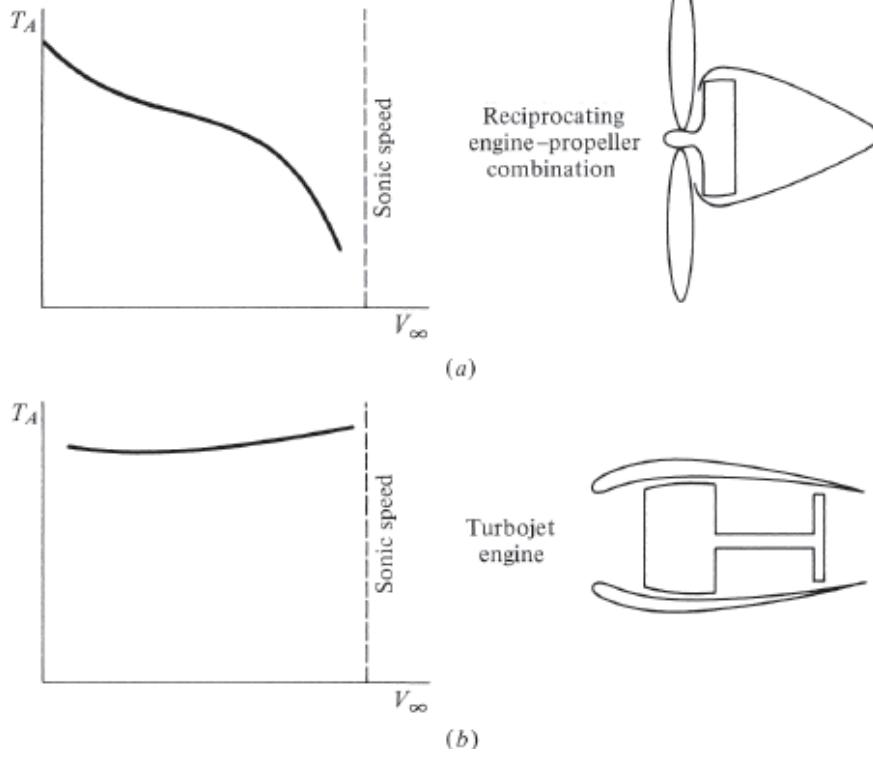

**Figure 6.13** Thrust-available curves for (a) piston engine-propeller combination and (b) a turbojet engine.

Consider a jet airplane flying in level, unaccelerated flight at a given altitude and with velocity  $V_1$ , as shown in Fig. 6.12. Point 1 on the thrust-required curve gives the value of  $T_R$  for the airplane to fly at velocity  $V_1$ . The pilot has adjusted the throttle so that the jet engine provides thrust available just equal to the thrust required at this point:  $T_A = T_R$ . This partial-throttle  $T_A$  is illustrated by the dashed curve in Fig. 6.12. If the pilot now pushes the throttle forward and increases the engine thrust to a higher value of  $T_A$ , the airplane will accelerate to a higher velocity. If the throttle is increased to full position, maximum  $T_A$  will be produced by the jet engine. In this case the speed of the airplane will further increase until the thrust required equals the maximum  $T_A$  (point 2 in Fig. 6.12). It is now impossible for the airplane to fly any faster than the velocity at point 2; otherwise the thrust required would exceed the maximum thrust available from the power plant. Hence, *the intersection of the  $T_R$  curve (dependent on the airframe) and the maximum  $T_A$  curve (dependent on the engine) defines the maximum velocity  $V_{\max}$  of the airplane at the given altitude*, as shown in Fig. 6.12. Calculating the maximum velocity is an important part of the airplane design process.

Conventional jet engines are rated in terms of thrust (usually in pounds). Hence, the thrust curves in Fig. 6.12 are useful for the performance analysis of a jet-powered aircraft. However, piston engines are rated in terms of power (usually horsepower); so the concepts of  $T_A$  and  $T_R$  are inconvenient for propeller-driven aircraft. In this case power required and power available are the more relevant quantities. Moreover, considerations of power lead to results such as rate of climb and maximum altitude for both jet and propeller-driven airplanes. Therefore, for the remainder of this chapter, emphasis is placed on power rather than thrust, as introduced in Sec. 6.5.

---

page 460

## EXAMPLE 6.2

Calculate the maximum velocity of the CJ-1 at sea level (see Example 6.1).

### ■ Solution

The information given in Example 6.1 states that the power plant for the CJ-1 consists of two turbofan engines of 3650 lb thrust each at sea level. Hence

$$T_A = 2(3650) = 7300 \text{ lb}$$

Examining the results of Example 6.1, we see that  $T_R = T_A = 7300 \text{ lb}$  occurs when  $V_\infty = 975 \text{ ft/s}$  (see Fig. 6.12). Hence

$$V_{\max} = 975 \text{ ft/s} = 665 \text{ mi/h}$$

It is interesting to note that because the sea-level speed of sound is 1117 ft/s, the maximum sea-level Mach number is

$$M_{\max} = \frac{V_{\max}}{a} = \frac{975}{1117} = 0.87$$

In the present examples,  $C_{D,0}$  is assumed constant; hence the drag polar does not include drag–divergence effects, as discussed in Ch. 5). Because the drag–divergence Mach number for this type of airplane is normally on the order of 0.82 to 0.85, the preceding calculation indicates that  $M_{\max}$  is greater than drag divergence, and our assumption of constant  $C_{D,0}$  becomes inaccurate at this high a Mach number.

---

## 6.5 POWER REQUIRED FOR LEVEL, UNACCELERATED FLIGHT

*Power* is a precisely defined mechanical term; it is energy per unit time. The power associated with a moving object can be illustrated by a block moving at constant velocity  $V$  under the influence of the constant force  $F$ , as shown in Fig. 6.14. The block moves from left to right through distance  $d$  in a time interval  $t_2 - t_1$ . (We assume that an opposing equal force not shown in Fig. 6.14, say due to friction, keeps the block from accelerating.) *Work* is another precisely defined mechanical term; it is force multiplied by the distance through which the force moves. Moreover, work is energy, having the same units as energy. Hence

$$\text{Power} = \frac{\text{energy}}{\text{time}} = \frac{\text{force} \times \text{distance}}{\text{time}} = \text{force} \times \frac{\text{distance}}{\text{time}}$$

page 461

Applied to the moving block in Fig. 6.14, this becomes

$$\text{Power} = F \left( \frac{d}{t_2 - t_1} \right) = FV \quad (6.23)$$

where  $d/(t_2 - t_1)$  is the velocity  $V$  of the object. Equation (6.23) thus demonstrates that the power associated with a force exerted on a moving object is force  $\times$  velocity, an important result.

Consider an airplane in level, unaccelerated flight at a given altitude and with velocity  $V_\infty$ . The thrust required is  $T_R$ . From Eq. (6.23), the *power required*  $P_R$  is therefore


$$P_R = T_R V_\infty \quad (6.24)$$

The effect of the airplane aerodynamics ( $C_L$  and  $C_D$ ) on  $P_R$  is readily obtained by combining Eqs. (6.16) and (6.24):

$$P_R = T_R V_\infty = \frac{W}{C_L/C_D} V_\infty \quad (6.25)$$

From Eq. (6.12),

$$L = W = q_\infty S C_L = \frac{1}{2} \rho_\infty V_\infty^2 S$$

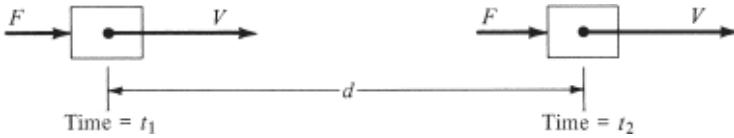

**Figure 6.14** Force, velocity, and power of a moving body.

$$\text{Hence} \quad V_\infty = \sqrt{\frac{2W}{\rho_\infty S C_L}} \quad (2.26)$$

Substituting Eq. (6.26) into (6.25), we obtain


$$P_R = \frac{W}{C_L/C_D} \sqrt{\frac{2W}{\rho_\infty S C_L}} \quad (2.27)$$

$$P_R = \sqrt{\frac{2W^3 C_D^2}{\rho_\infty S C_L^3}} \propto \frac{1}{C_L^{3/2}/C_D}$$

In contrast to thrust required, which varies inversely as  $C_L/C_D$  [see Eq. (6.16)], power required varies inversely as  $C_L^{3/2}/C_D$ .

The power-required curve is defined as a plot of  $P_R$  versus  $V_\infty$ , as [page 462](#) sketched in Fig. 6.15; note that it qualitatively resembles the thrust-required curve of Fig. 6.6. As the airplane velocity increases,  $P_R$  first decreases, then goes through a minimum, and finally increases. At the

velocity for minimum power required, the airplane is flying at the angle of attack that corresponds to a maximum  $C_L^{3/2}/C_D$ .

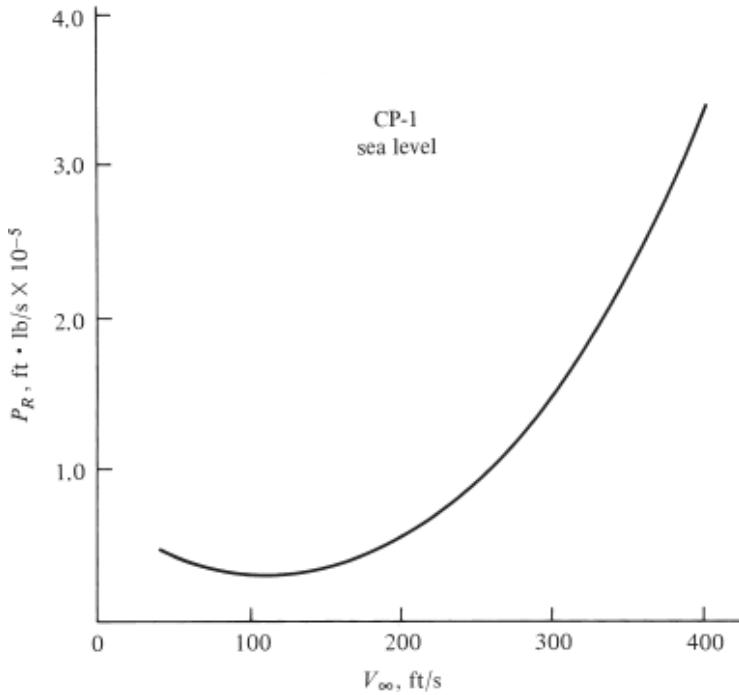

**Figure 6.15** Power-required curve for the CP-1 at sea level.

In Sec. 6.3 we demonstrated that minimum  $T_R$  aerodynamically corresponds to equal zero-lift and lift-induced drag. An analogous but different relation holds at minimum  $P_R$ . From Eqs. (6.11) and (6.24),

$$P_R = T_R V_{\infty} = D V_{\infty} = q_{\infty} S \left( C_{D,0} + \frac{C_L^2}{\pi e AR} \right) V_{\infty} \quad (6.28) \text{ page 463}$$


$$P_R = q_{\infty} S C_{D,0} V_{\infty} + q_{\infty} S V_{\infty} \frac{C_L^2}{\pi e AR}$$

Zero-lift power required      Lift-induced power required

Therefore, as in the earlier case of  $T_R$ , the power required can be split into the respective contributions needed to overcome zero-lift drag and drag due to lift. These contributions are sketched in Fig. 6.16. Also as before, we can obtain the aerodynamic conditions associated with minimum  $P_R$  from Eq. (6.28) by setting  $dP_R/dV_{\infty} = 0$ . To do this, first obtain Eq. (6.28) explicitly in terms of  $V_{\infty}$ , recalling that  $q_{\infty} = \frac{1}{2} \rho V_{\infty}^2$  and  $C_L = W / (\frac{1}{2} \rho_{\infty} V_{\infty}^2 S)$ :

$$P_R = \frac{1}{2} \rho_\infty V_\infty^3 S C_{D,0} + \frac{1}{2} \rho_\infty V_\infty^3 S \frac{[W/(\frac{1}{2} \rho_\infty V_\infty^2 S)]^2}{\pi e AR} \quad (2.29)$$

$$P_R = \frac{1}{2} \rho_\infty V_\infty^3 S C_{D,0} + \frac{W^2/(\frac{1}{2} \rho_\infty V_\infty S)}{\pi e AR}$$

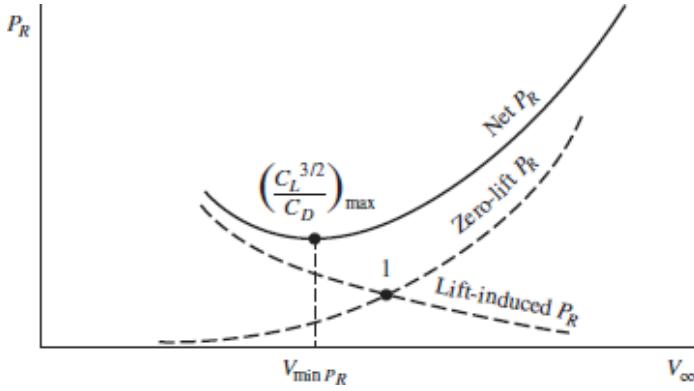

**Figure 6.16** Comparison of lift-induced, zero-lift, and net power required.

For minimum power required,  $dP_R/dV_\infty = 0$ . Differentiating Eq. (6.29) [page 464](#) yields

$$\begin{aligned} \frac{dP_R}{dV_\infty} &= \frac{3}{2} \rho_\infty V_\infty^2 S C_{D,0} - \frac{W^2/(\frac{1}{2} \rho_\infty V_\infty^2 S)}{\pi e AR} \\ &= \frac{3}{2} \rho_\infty V_\infty^2 S \left[ C_{D,0} - \frac{W^2/(\frac{3}{4} \rho_\infty^2 S^2 V_\infty^4)}{\pi e AR} \right] \\ &= \frac{3}{2} \rho_\infty V_\infty^2 S \left( C_{D,0} - \frac{\frac{1}{3} C_L^2}{\pi e AR} \right) \\ &= \frac{3}{2} \rho_\infty V_\infty^2 S \left( C_{D,0} - \frac{1}{3} C_{D,i} \right) = 0 \quad \text{for minimum } P_R \end{aligned}$$


Hence, the aerodynamic condition that holds at minimum power required is

$$C_{D,0} = \frac{1}{3} C_{D,i} \quad (6.30)$$

The fact that zero-lift drag is one-third the drag due to lift at minimum  $P_R$  is reinforced by examination of Fig. 6.16. Also note that point 1 in Fig. 6.16 corresponds to  $C_{D,0} = C_{D,i}$  (that is, minimum  $T_R$ ); hence  $V_\infty$  for minimum  $P_R$  is less than that for minimum  $T_R$ .

The point on the power-required curve that corresponds to minimum  $T_R$  is easily obtained by drawing a line through the origin and tangent to the  $P_R$

curve, as shown in Fig. 6.17. The point of tangency corresponds to minimum  $T_R$  (and hence maximum  $L/D$ ). To prove this, consider any line through the origin and intersecting the  $P_R$  curve, such as the dashed line in Fig. 6.17. The slope of this line is  $P_R/V_\infty$ . As we move to the right along the  $P_R$  curve, the slope of an intersecting line will first decrease, then reach a minimum (at the tangent point), and again increase. This is clearly seen simply by inspection of the geometry of Fig. 6.17. Thus, the point of tangency corresponds to a minimum slope and hence a minimum value of  $P_R/V_\infty$ . In turn, from calculus this corresponds to

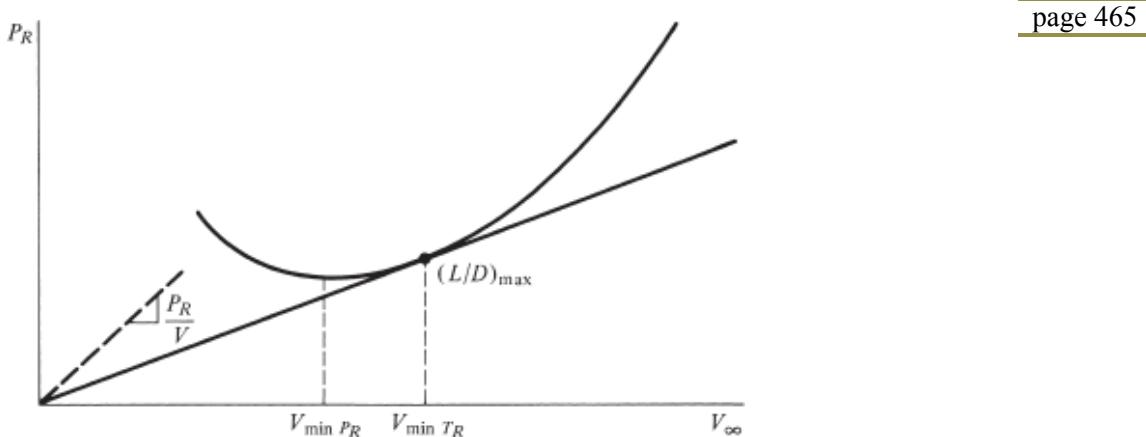

page 465

**Figure 6.17** The tangent to the power-required curve locates the point of minimum thrust required (and hence the point of maximum  $L/D$ ).

$$\frac{d(P_R/V_\infty)}{dV_\infty} = \frac{d(T_R V_\infty/V_\infty)}{dV_\infty} = \frac{dT_R}{dV_\infty} = 0$$

This result yields  $dT_R/dV_\infty = 0$  at the tangent point, which is precisely the mathematical criterion for minimum  $T_R$ . Correspondingly,  $L/D$  is maximum at the tangent point.

### EXAMPLE 6.3

Calculate the power-required curves for (a) the CP-1 at sea level and (b) the CJ-1 at an altitude of 22,000 ft.

#### ■ Solution

a. For the CP-1, the values of  $T_R$  at sea level have already been tabulated and graphed in Example 6.1. Hence, from Eq. (6.24),

$$P_R = T_R V_\infty$$

we obtain the following tabulation:

$V, \text{ ft/s}$	$T_R, \text{ lb}$	$P_R, \text{ ft} \cdot \text{lb/s}$
100	279	27,860
150	217	32,580
250	359	89,860
300	491	147,200
350	652	228,100


The power-required curve is given in Fig. 6.15.

b. For the CJ-1 at 22,000 ft,  $\rho_\infty = 0.001184 \text{ slug/ft}^3$ . The calculation of  $T_R$  is done with the same method as given in Example 6.1, and  $P_R$  is obtained from Eq. (6.24). Some results are tabulated here:

$V_\infty, \text{ ft/s}$	$C_L$	$C_D$	$L/D$	$T_R, \text{ lb}$	$P_R, \text{ ft} \cdot \text{lb/s}$
300	1.17	0.081	14.6	1358	$0.041 \times 10^7$
500	0.421	0.028	15.2	1308	$0.065 \times 10^7$
600	0.292	0.024	12.3	1610	$0.097 \times 10^7$
800	0.165	0.021	7.76	2553	$0.204 \times 10^7$
1000	0.105	0.020	5.14	3857	$0.386 \times 10^7$

The reader should attempt to reproduce these results.

The power-required curve is given in Fig. 6.18.

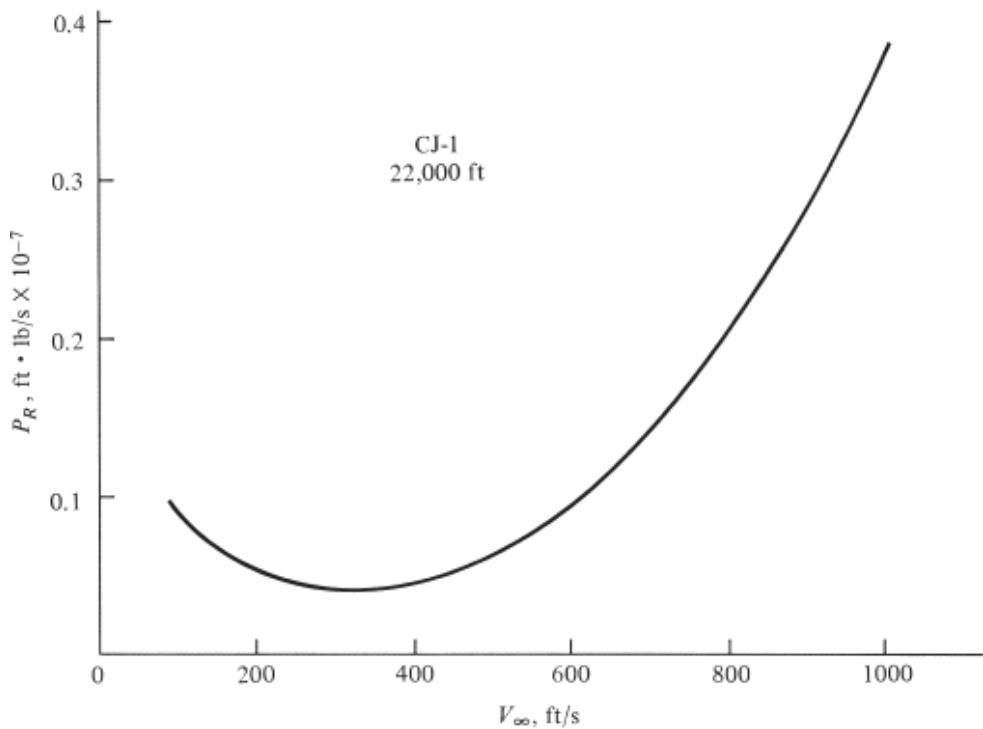

**Figure 6.18** Power-required curve for the CJ-1 at 22,000 ft.

## 6.6 POWER AVAILABLE AND MAXIMUM VELOCITY

Note again that  $P_R$  is a characteristic of the aerodynamic design and weight of the aircraft itself. In contrast, the *power available*  $P_A$  is a characteristic of the power plant. A detailed discussion of propulsion is deferred until Ch. 9); however, the following comments are made to expedite our performance analyses.


page 466

### 6.6.1 Reciprocating Engine–Propeller Combination


A piston engine generates power by burning fuel in confined cylinders and using this energy to move pistons, which, in turn, deliver power to the rotating crankshaft, as schematically shown in Fig. 6.19. The power delivered to the propeller by the crankshaft is defined as the *shaft brake power*  $P$  (the word *brake* stems from a method of laboratory testing that measures the power of an engine by loading it with a calibrated brake mechanism). However, not all  $P$  is available to drive the airplane; some of it is dissipated by inefficiencies of the propeller itself (to be discussed in Ch. 9)). Hence, the power available to propel the airplane  $P_A$  is given by

$$P_A = \eta P \quad (6.31)$$

where  $\eta$  is the propeller efficiency,  $\eta < 1$ . Propeller efficiency is an important quantity and is a direct product of the aerodynamics of the propeller. It is always less than unity. For our discussions here, both  $\eta$  and  $P$  are assumed to be known quantities for a given airplane.

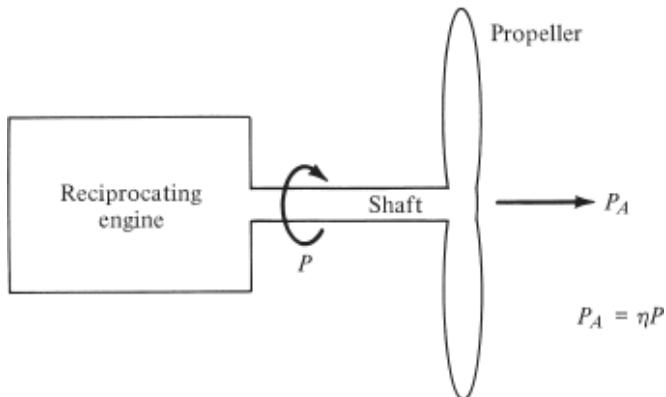

**Figure 6.19** Relation between shaft brake power and power available.

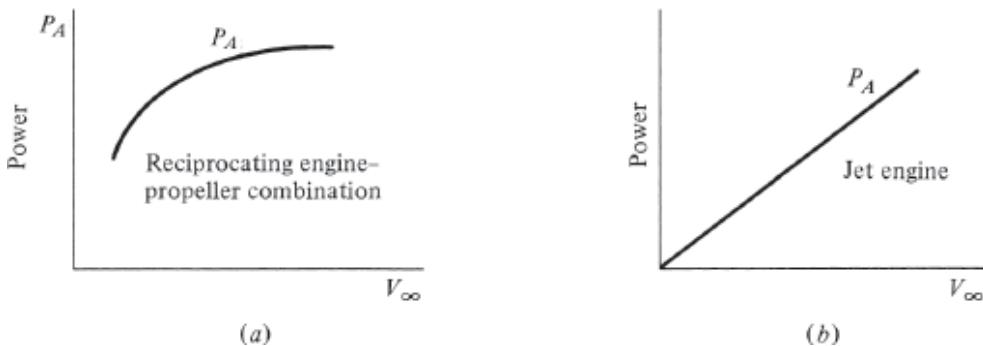

**Figure 6.20** Power available for (a) a piston engine–propeller combination and (b) a jet engine.

A remark about units is necessary. In the engineering system, [page 467](#) power is in foot-pounds per second ( $\text{ft} \cdot \text{lb/s}$ ); in SI, power is in watts [which are equivalent to newton-meters per second ( $\text{N} \cdot \text{m/s}$ )]. However, the historical evolution of engineering has left us with a horrendously inconsistent (but very convenient) unit of power that is widely used: horsepower. All reciprocating engines are rated in terms of horsepower (hp), and it is important to note that

$$1 \text{ hp} = 550 \text{ ft} \cdot \text{lb/s} = 746 \text{ W}$$

Therefore, it is common to use *shaft brake horsepower* bhp in place of  $P$ , and horsepower available  $hp_A$  in place of  $P_A$ . Equation (6.31) still holds in the form

$$hp_A = (\eta)(bhp) \quad (6.32)$$

However, be cautious. As always in dealing with fundamental physical relations, units must be consistent; therefore, a good habit is to immediately convert horsepower to foot-pounds per second or to watts before starting an analysis. This approach is used here.

The power-available curve for a typical piston engine-propeller combination is sketched in Fig. 6.20a.

## 6.6.2 Jet Engine

The jet engine (see Ch. 9)) derives its thrust by combustion-heating an incoming stream of air and then exhausting this hot air at high velocities through a nozzle. The power available from a jet engine is obtained from Eq. (6.23) as

$$P_A = T_A V_\infty \quad (6.33) \text{ page 468}$$

Recall from Fig. 6.13b that  $T_A$  for a jet engine is reasonably constant with velocity. Thus, the power-available curve varies essentially linearly with  $V_\infty$ , as sketched in Fig. 6.20b.

For both the propeller- and jet-powered aircraft, the maximum flight velocity is determined by the high-speed intersection of the maximum  $P_A$  and the  $P_R$  curves. This is illustrated in Fig. 6.21. Because of their utility in determining other performance characteristics of an airplane, these power curves are essential to any performance analysis.

### EXAMPLE 6.4

Calculate the maximum velocity for (a) the CP-1 at sea level and (b) the CJ-1 at 22,000 ft.

#### ■ Solution

a. For the CP-1, the information in Example 6.1 gave the horsepower rating of the power plant at sea level as 230 hp. Hence

$$hp_A = (\eta)(bhp) = 0.80(230) = 184 \text{ hp}$$

The results of Example 6.3 for power required are replotted in Fig. 6.21a in terms of horsepower. The horsepower available is also shown, and  $V_{\max}$  is determined by the intersection of the curves as

$$V_{\max} = 265 \text{ ft/s} = 181 \text{ mi/h}$$

b. For the CJ-1, again from the information given in Example 6.1, the sea-level static thrust for each engine is 3650 lb. There are two engines; hence  $T_A = 2(3650) = 7300$  lb. From Eq. (6.33),  $P_A = T_A V_\infty$ ; and in terms of horsepower, where  $T_A$  is in pounds and  $V_\infty$  is in feet per second,


$$\text{hp}_A = \frac{T_A V_\infty}{550}$$

Let  $\text{hp}_{A,0}$  be the horsepower at sea level. As we will see in Ch. 9), the thrust of a jet engine is, to a first approximation, proportional to air density. If we make this approximation here, the thrust at altitude becomes


$$T_{A,\text{alt}} = \frac{\rho}{\rho_0} T_{A,0}$$

Hence

$$\text{hp}_{A,\text{alt}} = \frac{\rho}{\rho_0} \text{hp}_{A,0}$$

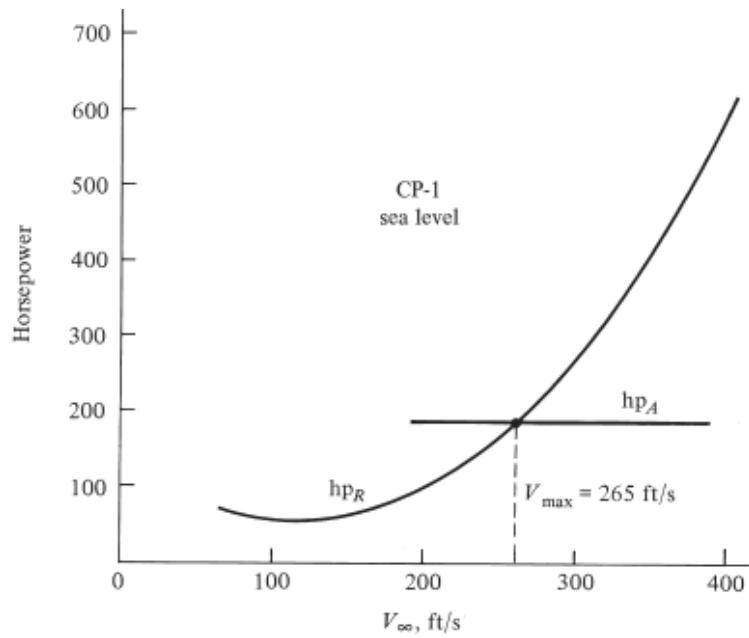

(a)

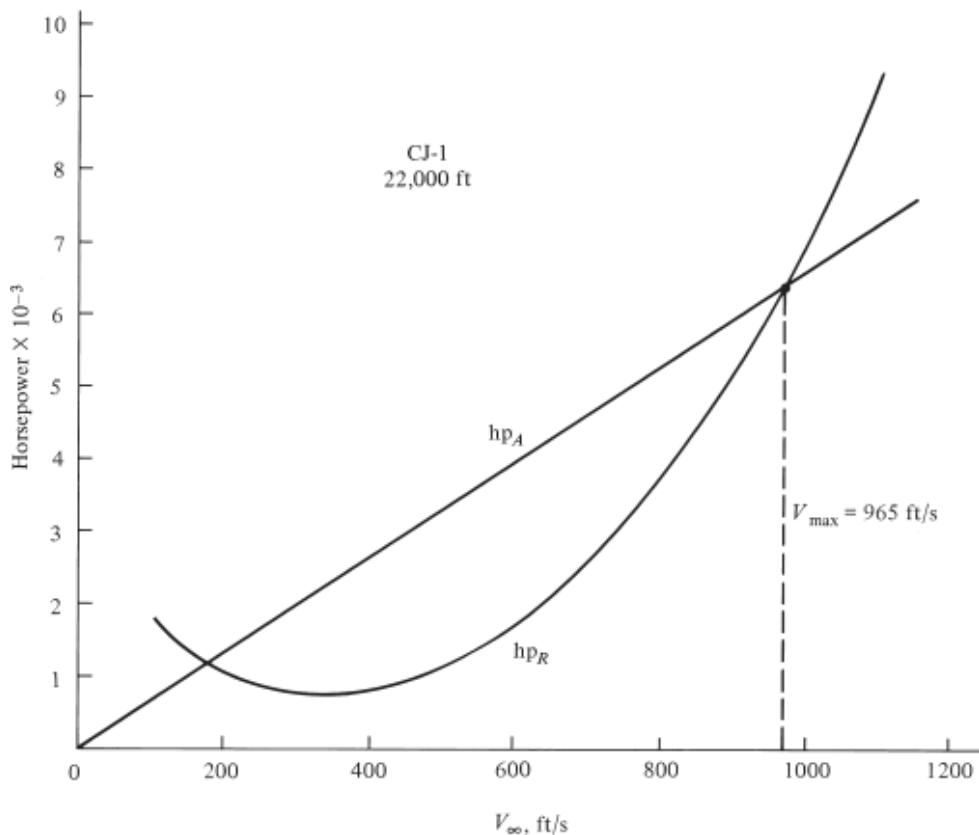

(b)

**Figure 6.21** Power-available and power-required curves and the determination of maximum velocity. (a) Propeller-driven airplane. (b) Jet-

propelled airplane.

For the CJ-1 at 22,000 ft, where  $\rho = 0.001184 \text{ slug/ft}^3$ ,

$$hp_{A,\text{alt}} = \frac{(\rho/\rho_0)T_A V_\infty}{550} = \frac{(0.001184/0.002377)(7300)V_\infty}{550} = 6.61 V_\infty$$

The results of Example 6.3 for power required are replotted in Fig. 6.21b in terms of horsepower. The horsepower available, obtained from the preceding equation, is also shown, and  $V_{\max}$  is determined by the intersection of the curves as

$V_{\max} = 965 \text{ ft/s} = 658 \text{ mi/h}$

page 470

## 6.7 ALTITUDE EFFECTS ON POWER REQUIRED AND AVAILABLE

With regard to  $P_R$ , curves at altitude could be generated by repeating the calculations of the previous sections, with  $\rho_\infty$  appropriate to the given altitude. However, once the sea-level  $P_R$  curve is calculated by means of this process, the curves at altitude can be more quickly obtained by simple ratios, as follows. Let the subscript 0 designate sea-level conditions. From Eqs. (6.26) and (6.27),

$$V_0 = \sqrt{\frac{2W}{\rho_0 S C_L}} \quad (6.34)$$

$$P_{R,0} = \sqrt{\frac{2W^3 C_D^2}{\rho_0 S C_L^3}} \quad (6.35)$$

where  $V_0$ ,  $P_{R,0}$ , and  $\rho_0$  are velocity, power, and density, respectively, at sea level. At altitude, where the density is  $\rho$ , these relations are

$$V_{\text{alt}} = \sqrt{\frac{2W}{\rho S C_L}} \quad (6.36)$$

$$P_{R,\text{alt}} = \sqrt{\frac{2W^3 C_D^2}{\rho S C_L^3}} \quad (6.37)$$

Now, strictly for the purposes of calculation, let  $C_L$  remain fixed between sea level and altitude. Hence, because  $C_D = C_{D,0} + C_L^2/(\pi e AR)$ , also  $C_D$  remains fixed. Dividing Eq. (6.36) by (6.34), and Eq. (6.37) by (6.35), we obtain


$$V_{\text{alt}} = V_0 \left( \frac{\rho_0}{\rho} \right)^{1/2} \quad (6.38)$$

and


$$P_{R,\text{alt}} = P_{R,0} \left( \frac{\rho_0}{\rho} \right)^{1/2} \quad (6.39)$$

Geometrically, these equations allow us to plot a point on the  $P_R$  curve at altitude from a given point on the sea-level curve. For example, consider point 1 on the sea-level  $P_R$  curve sketched in Fig. 6.22. By multiplying both the velocity and the power at point 1 by  $(\rho_0 / \rho)^{1/2}$ , we obtain a new point—point 2 in Fig. 6.22. Point 2 is guaranteed to fall on the curve at altitude because of our previous analysis. In this fashion, the complete  $P_R$  curve at altitude can be readily obtained from the sea-level curve. The results are qualitatively given in Fig. 6.23, where the altitude curves tend to experience an upward and rightward translation as well as a slight clockwise rotation.

page 471

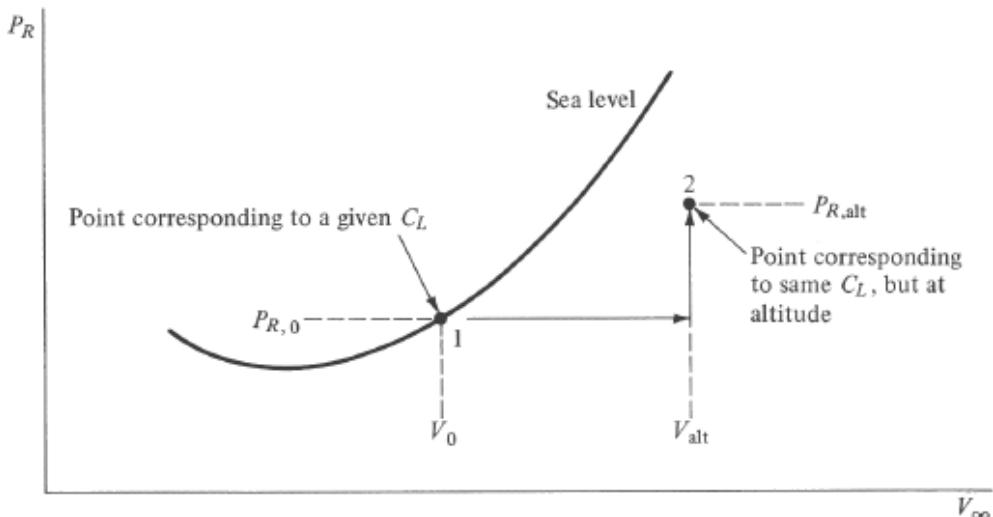

**Figure 6.22** Correspondence of points on sea-level and altitude power-required curves.

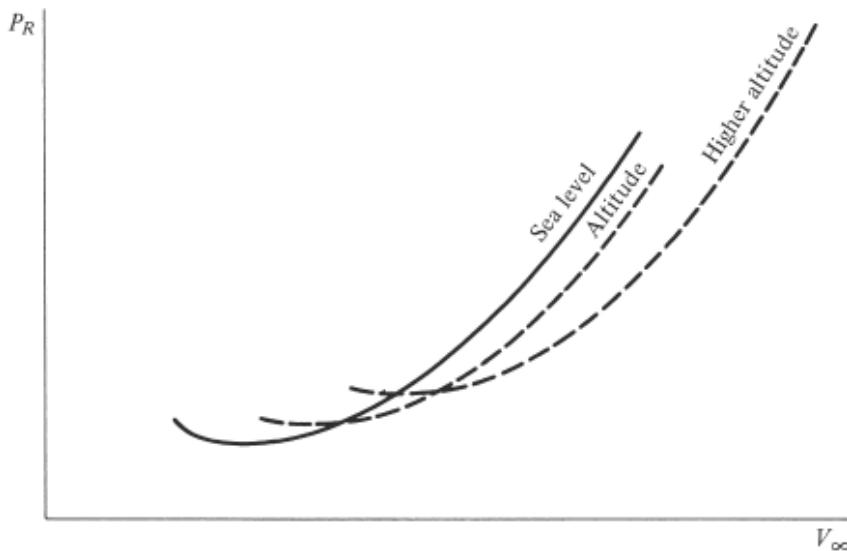

**Figure 6.23** Effect of altitude on power required.


With regard to  $P_A$ , the lower air density at altitude invariably causes a reduction in power for both reciprocating and jet engines. In this book we assume  $P_A$  and  $T_A$  to be proportional to ambient density, as in Example 6.4. Reasons for this will be made clear in Ch. 9). For the reciprocating engine, the loss in power can be delayed by using a supercharger. Nevertheless, the impact on airplane performance due to altitude effects is illustrated in Figs. 6.24a and b for the propeller- and jet-powered airplanes, respectively. Both  $P_R$  and maximum  $P_A$  are shown; the solid curves correspond to sea level and the dashed curves to altitude. From these curves, note that  $V_{\max}$  varies with altitude. Also note that at high enough altitude, the low-speed limit, which is usually dictated by  $V_{\text{stall}}$ , may instead be determined by maximum  $P_A$ . This effect is emphasized in Fig. 6.25, where maximum  $P_A$  has been reduced to the extent that, at velocities just above stalling,  $P_R$  exceeds  $P_A$ . For this case we make the interesting conclusion that stalling speed cannot be reached in level, steady flight.

To this point in our discussion, only the horizontal velocity performance—both maximum and minimum speeds in steady, level flight—has been emphasized. We have seen that the maximum velocity of an airplane is determined by the high-speed intersection of the  $P_A$  and  $P_R$  curves and that the minimum velocity is determined either by stalling or by the low-speed intersection of the power curves. These velocity considerations are an important part of airplane performance; indeed, for some airplanes, such as


page 472

many military fighter planes, squeezing the maximum velocity out of the aircraft is the pivotal design feature. However, this is just the beginning of the performance story; we examine other important characteristics in the remaining sections of this chapter.

page 473

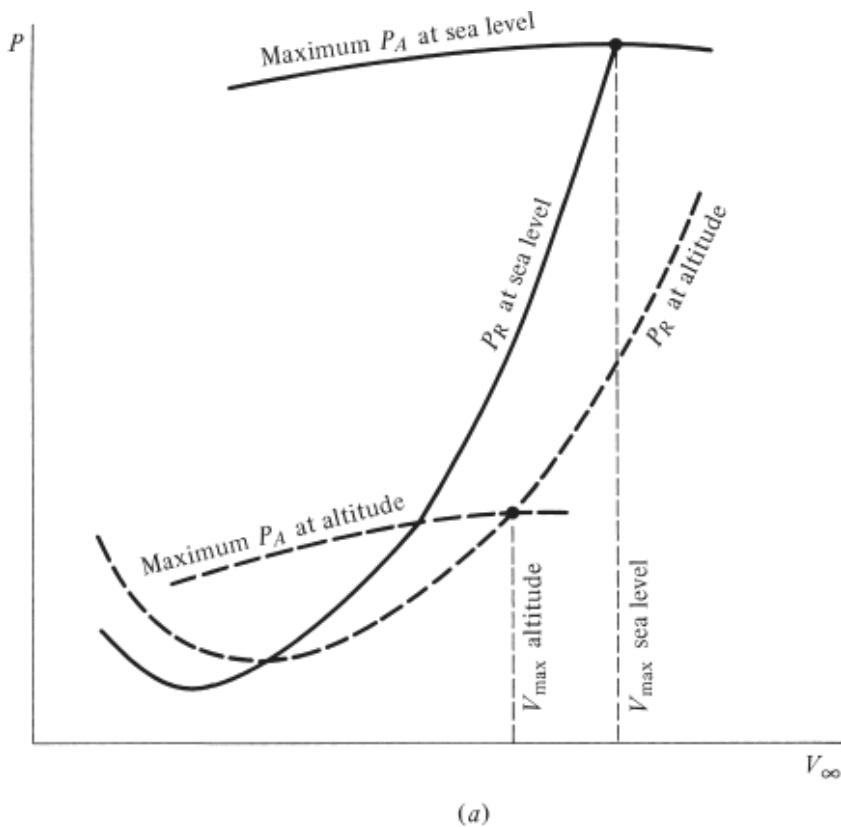


**Figure 6.24** Effect of altitude on maximum velocity. (a) Propeller-driven airplane. (*continued*)

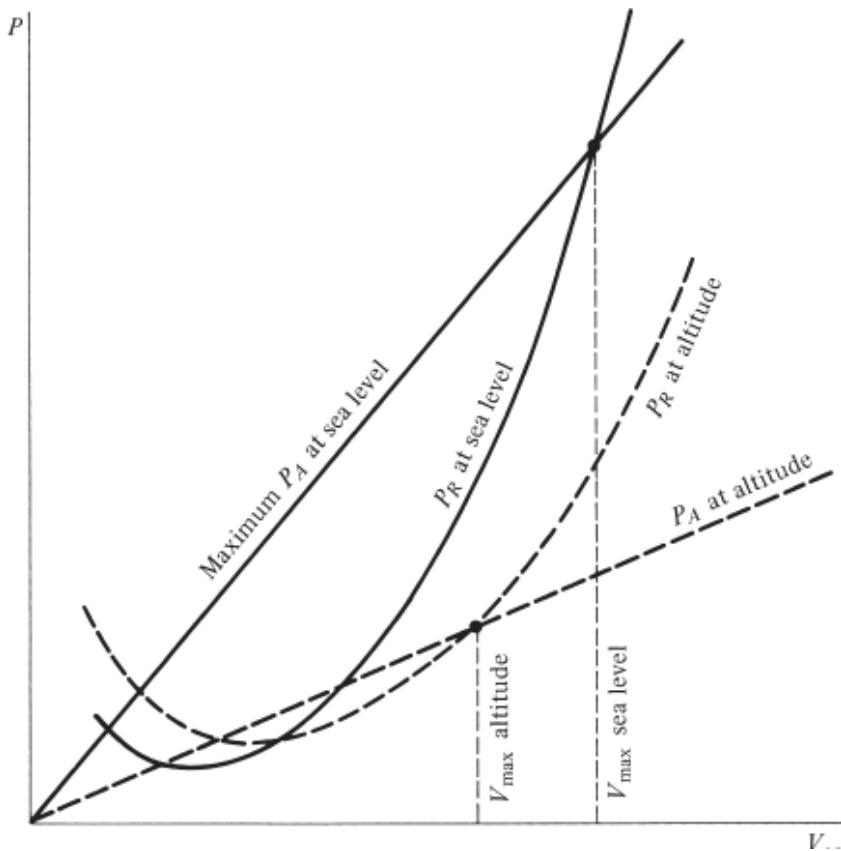

**Figure 6.24 (concluded) (b)** Jet-propelled airplane.

page 474

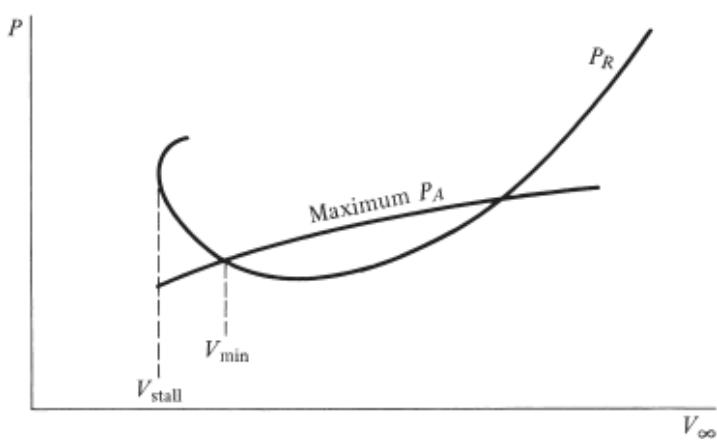

**Figure 6.25** Situation when minimum velocity at altitude is greater than stalling velocity.

### EXAMPLE 6.5

Using the method of this section, from the CJ-1 power-required curve at 22,000 ft in Example 6.4, obtain the CJ-1 power-required curve at sea level. Compare the maximum velocities at both altitudes.

### ■ Solution

From Eqs. (6.38) and (6.39), corresponding points on the power-required curves for sea level and altitude are, respectively,>

$$V_0 = V_{\text{alt}} \left( \frac{\rho}{\rho_0} \right)^{1/2}$$

and


$$hp_{R,0} = hp_{R,\text{alt}} \left( \frac{\rho}{\rho_0} \right)^{1/2}$$

We are given  $V_{\text{alt}}$  and  $hp_{R,\text{alt}}$  for 22,000 ft from the CJ-1 curve in Example 6.4. Using the formulas here, we can generate  $V_0$  and  $hp_{R,0}$  as in the following table, noting that

$$\left( \frac{\rho}{\rho_0} \right)^{1/2} = \left( \frac{0.001184}{0.002377} \right)^{1/2} = 0.706$$

Given Points		$\left( \frac{\rho}{\rho_0} \right)^{1/2}$	Generated Points	
$V_{\text{alt}}, \text{ft/s}$	$hp_{R,\text{alt}}$		$V_0, \text{ft/s}$	$hp_{R,0}$
200	889	0.706	141	628
300	741		212	523
500	1190		353	840
800	3713		565	2621
1000	7012		706	4950

These results, along with the  $hp_A$  curves for sea level and 22,000 ft, are plotted in Fig. 6.26. Looking closely at Fig. 6.26, note that point 1 on the  $hp_R$  curve at 22,000 ft is used to generate point 2 on the  $hp_R$  curve at sea level. This illustrates the idea of this section. Also note that  $V_{\text{max}}$  at sea level is 975 ft/s = 665 mi/h. This is slightly larger than  $V_{\text{max}}$  at 22,000 ft, which is 965 ft/s = 658 mi/h.

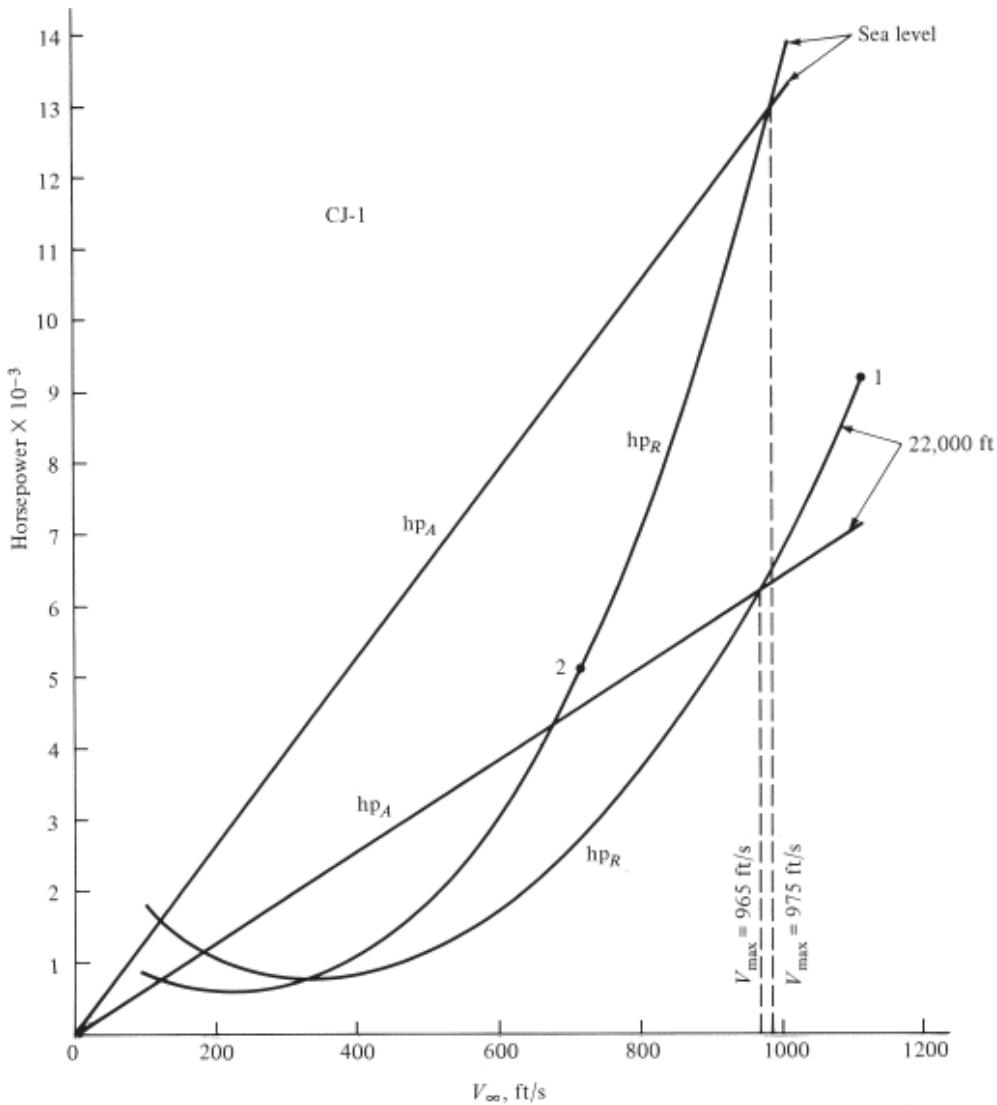

**Figure 6.26** Altitude effects on  $V_{\max}$  for the CJ-1.

### EXAMPLE 6.6

For a given airplane in steady, level flight, prove that Eq. (6.39) [page 475](#) relates the minimum power required at altitude,  $(P_{R,alt})_{\min}$ , to the minimum power required at sea level,  $(P_{R,0})_{\min}$ . In other words, prove that

$$\frac{(P_{R,alt})_{\min}}{(P_{R,0})_{\min}} = \left(\frac{\rho_0}{\rho}\right)^{1/2} \quad (\text{E 6.6.1})$$

### ■ Solution

Equation (6.39) relates a point on the power-required curve at altitude (point 2 in Fig. 6.22) to the corresponding point on the power-required curve at sea level (point 1 in Fig. 6.22) where  $C_L$  is the same value at both points. For the special case where point 1 in Fig. 6.22 pertains to the *minimum*  $P_R$  at sea level, we wish to prove that point 2 in Fig. 6.22 then pertains to the *minimum*  $P_R$  at altitude. This is not immediately obvious from the derivation given for Eq. (6.39), which depends just on the assumption of the same  $C_L$  at points 1 and 2.

From Eq. (6.27), the general formula for  $P_R$  is

$$P_R = \sqrt{\frac{2W^3 C_D^2}{\rho_s S C_L^3}} = \left(\frac{C_D}{C_L^{3/2}}\right) \sqrt{\frac{2W^3}{\rho S}} \quad (\text{E 6.6.2})$$

As clearly seen in Eq. (E 6.6.2),  $P_R$  is inversely proportional to the aerodynamic ratio  $C_L^{3/2}/C_D$ , occurs when the airplane is flying at the condition where  $C_L^{3/2}/C_D$  is a maximum. Recall that  $C_L$  and  $C_D$  are *aerodynamic* characteristics of the airplane; for a given airplane they are functions of angle of attack, Mach number, and Reynolds number, as discussed in Sec. 5.3. If we neglect Mach-number and Reynolds-number effects, then  $C_L$  and  $C_D$  are functions of just angle of attack. Hence, the ratio  $C_L^{3/2}/C_D$  is a function of just the angle of attack, and the maximum value of  $C_L^{3/2}/C_D$  is a specific value that occurs at a specific angle of attack. So, a given airplane has a specific value of  $(C_L^{3/2}/C_D)_{\max}$  dictated by the aerodynamics of the airplane, and this value is the same regardless of the altitude at which the airplane is flying.

Returning to Eq. (E 6.6.2), we have

page 476

$$P_R = \frac{C_D}{C_L^{3/2}} \sqrt{\frac{2W^3}{\rho S}} = \frac{1}{(C_L^{3/2}/C_D)} \sqrt{\frac{2W^3}{\rho S}}$$

Thus

$$\frac{P_{R,alt}}{P_{R,0}} = \frac{(C_L^{3/2}/C_D)_0 \sqrt{\frac{2W^3}{\rho S}}}{(C_L^{3/2}/C_D)_{alt} \sqrt{\frac{2W^3}{\rho_0 S}}} = \left(\frac{\rho_0}{\rho}\right)^{1/2} \frac{(C_L^{3/2}/C_D)_0}{(C_L^{3/2}/C_D)_{alt}} \quad (\text{E 6.6.3})$$

Writing Eq. (E 6.6.3) for *maximum* power required at both altitude and sea level, we have

$$\frac{(P_{R,alt})_{\min}}{(P_{R,0})_{\min}} = \left(\frac{\rho_0}{\rho}\right)^{1/2} \frac{[(C_L^{3/2}/C_D)_0]_{\max}}{[(C_L^{3/2}/C_D)_{alt}]_{\max}} \quad (\text{E 6.6.4})$$

But from the above discussion,

$$[(C_L^{3/2}/C_D)_0]_{\max} = [(C_L^{3/2}/C_D)_{\text{alt}}]_{\max}$$

Hence, Eq. (E 6.6.4) becomes

$$\frac{(P_{R,\text{alt}})_{\min}}{(P_{R,0})_{\min}} = \left(\frac{\rho_0}{\rho}\right)^{1/2}$$

This proves Eq. (E 6.6.1).

### EXAMPLE 6.7

---

Compare the numerical results obtained in Example 6.5 for minimum [page 477](#) power required for the CJ-1 for sea level and 22,000 ft with the analytical result obtained in Example 6.6.

#### ■ Solution

From the numerical tabulation in Example 6.5,

$$(hp_{R,0})_{\min} = 523$$

$$(hp_{R,\text{alt}})_{\min} = 741$$

Thus

$$\frac{(hp_{R,\text{alt}})_{\min}}{(hp_{R,0})_{\min}} = \frac{741}{523} = 1.417 \text{ (numerical)}$$

From Eq. (E 6.6.1) in Example 6.6,

$$\frac{(P_{R,\text{alt}})_{\min}}{(P_{R,0})_{\min}} = \left(\frac{\rho_0}{\rho}\right)^{1/2}$$

At an altitude of 22,000 ft,  $\rho = 1.1836 \times 10^{-3}$  slug/ft<sup>3</sup>. Thus,

$$\frac{(P_{R,\text{alt}})_{\min}}{(P_{R,0})_{\min}} = \left(\frac{0.002377}{1.1836 \times 10^{-3}}\right)^{1/2} = 1.417 \text{ (analytical)}$$

The results, as expected, are the same. In fact, this confirms the validity of the numerical results computed in Example 6.5.

### EXAMPLE 6.8

---

Analytically calculate  $V_{\max}$  at an altitude of 22,000 ft for the CJ-1 using Eq. (6.44), and compare with the graphical result obtained in Example 6.5.

## ■ Solution

For the CJ-1 from our previous examples,  $W = 19,815$  lb,  $T_A = 7300$  lb at sea level,  $C_{D,0} = 0.02$ ,  $e = 0.81$ , and  $AR = 8.93$ . From App. B, at 22,000 ft,  $\rho_\infty = 0.001183$  slug/ft<sup>3</sup>. Thus, the thrust available at 22,000 ft is

$$(T_A)_{\text{alt}} = \frac{\rho_0}{\rho}(T_A) = \left( \frac{0.0011836}{0.002378} \right) (7300) = 3633 \text{ lb}$$

Hence

$$\begin{aligned} \left( \frac{T_A}{W} \right)_{\max} &= \frac{3633}{19,815} = 0.1833 \\ \frac{W}{S} &= \frac{19,815}{318} = 62.3 \text{ lb/ft}^2 \\ \frac{4C_{D,0}}{\pi e AR} &= \frac{4(0.02)}{\pi(0.81)(8.93)} = 3.521 \times 10^{-3} \end{aligned}$$

From Eq. (6.44), repeated here,

$$\begin{aligned} V_{\max} &= \left[ \frac{\left( \frac{T_A}{W} \right)_{\max} \left( \frac{W}{S} \right) + \left( \frac{W}{S} \right) \sqrt{\left( \frac{T_A}{W} \right)_{\max}^2 - \frac{4C_{D,0}}{\pi e AR}}}{\rho_\infty C_{D,0}} \right]^{1/2} \\ V_{\max} &= \left[ \frac{(0.1833)(62.3) + (62.3)\sqrt{(0.1833)^2 - 3.521 \times 10^{-3}}}{(0.0011836)(0.02)} \right]^{1/2} \\ &= \left[ \frac{11.42 + (62.3)\sqrt{0.0336 - 3.521 \times 10^{-3}}}{2.367 \times 10^{-5}} \right]^{1/2} \\ &= \left( \frac{11.42 + 10.80}{2.367 \times 10^{-5}} \right)^{1/2} = \boxed{969 \text{ ft/s}} \end{aligned}$$

From Example 6.2, the graphical solution gave  $V_{\max} = 965$  ft/s. The analytical result and the graphical solution agree within 0.4%, as they should. Both the graphical and analytical results stem from the same basic equations. However, note that the graphical result is “within graphical accuracy,” whereas the analytical results are mathematically precise. Also, the analytical formula of Eq. (6.44) gives a much simpler and faster calculation of  $V_{\max}$  compared to the multiple numerical calculations required to calculate and plot the thrust-required and thrust-available curves in Examples 6.1 and 6.2.

## EXAMPLE 6.9

page 478

In Example 6.8, the term  $4 C_{D,0} / \pi e AR$  is found to be numerically smaller than  $(T_A / W)^2_{\max}$ . Neglect this term in Eq. (6.44) and again calculate  $V_{\max}$ . Comment on the implications.

### ■ Solution

Neglecting the term  $4 C_{D,0} / \pi e AR$  in Eq. (6.44), we have

$$\begin{aligned} V_{\max} &\approx \left[ \frac{\left( \frac{T_A}{W} \right)_{\max} \left( \frac{W}{S} \right) + \left( \frac{W}{S} \right) \sqrt{\left( \frac{T_A}{W} \right)_{\max}^2}}{\rho_{\infty} C_{D,0}} \right]^{1/2} \\ &= \left[ \frac{2 \left( \frac{T_A}{W} \right)_{\max} \left( \frac{W}{S} \right)}{\rho_{\infty} C_{D,0}} \right]^{1/2} = \left[ \frac{2 (0.1833)(62.3)}{(0.0011836)(0.02)} \right]^{1/2} = \boxed{982 \text{ ft/s}} \end{aligned}$$

The result obtained here differs from the result in Example 6.8 by only 1.34%. Thus we see that the neglected term in Eq. (6.44) has little impact.

What is this neglected term physically? Examining the derivation of Eq. (6.44) in the design box, it comes from the drag due to lift. We have mentioned frequently in Chs. 5 and 6 that for an airplane flying at high velocities, the drag due to lift is much smaller than the zero-lift drag. In fact, if we simply set  $T = D$  for steady, level flight, and assume that the drag is only due to the zero-lift drag, we have

$$T_A = D = \frac{1}{2} \rho_{\infty} V_{\infty}^2 S C_{D,0}$$

page 479

Solving for  $V_{\infty}$ , we get

$$V_{\infty} = \left[ \frac{2 T_A}{\rho_{\infty} S C_{D,0}} \right]^{1/2} = \left[ \frac{2 \left( \frac{T_A}{W} \right) \left( \frac{W}{S} \right)}{\rho_{\infty} C_{D,0}} \right]^{1/2}$$

The maximum velocity will occur when the engine is putting out maximum thrust, so we have

$$V_{\max} = \left[ \frac{2 \left( \frac{T_A}{W} \right)_{\max} \left( \frac{W}{S} \right)}{\rho_{\infty} C_{D,0}} \right]^{1/2}$$

This is precisely the resulting formula obtained from Eq. (6.44) when the term  $4 C_{D,0}/\pi e AR$  is neglected.

**Conclusion** For the quickest possible estimation of the maximum velocity of an airplane, set

$$(T_A)_{\max} = \frac{1}{2} \rho_\infty V_\infty^2 SC_{D,0}$$

and solve for  $V_{\max}$ .

---

## 6.8 RATE OF CLIMB

Visualize a Boeing 777 transport (see Fig. 6.27) powering itself to takeoff speed on an airport runway. It gently lifts off at about 180 mi/h, the nose rotates upward, and the airplane rapidly climbs out of sight. In a matter of minutes, it is cruising at 30,000 ft. This picture prompts the following questions: How fast can the airplane climb? How long does it take to reach a certain altitude? The next two sections provide some answers.

Consider an airplane in steady, unaccelerated, climbing flight, as shown in Fig. 6.28. The velocity along the flight path is  $V_\infty$ , and the flight path itself is inclined to the horizontal at angle  $\theta$ . As always, lift and drag are perpendicular and parallel to  $V_\infty$ , and the weight is perpendicular to the horizontal. Thrust  $T$  is assumed to be aligned with the flight path. Here the physical difference from our previous discussion of level flight is that not only is  $T$  working to overcome the drag, but for climbing flight it is also supporting a component of weight. Summing forces parallel to the flight path, we get

page 480

### DESIGN BOX

Maximum velocity at a given altitude is frequently a part of the set of specifications for a new airplane design. To design an airplane for a given  $V_{\max}$ , what characteristics of the airplane would you, the airplane designer, be concerned with? That is, what design aspects of the airplane dictate the maximum velocity? The answer to this question reveals several critical design parameters that are important not only for  $V_{\max}$  but also for other performance aspects of the airplane. Let us answer this question by obtaining an equation for  $V_{\max}$  and examining the parameters in the equation. Combining Eqs. (6.1c) and (6.13), we have

$$T = q_{\infty} S C_D = q_{\infty} S \left( C_{D,0} + \frac{C_L^2}{\pi e AR} \right) \quad (6.40)$$

From Eq. (6.14), we obtain for steady, level flight

$$C_L = \frac{W}{q_{\infty} S} \quad (6.41)$$

Inserting Eq. (6.41) into (6.40) yields

$$\begin{aligned} T &= q_{\infty} S \left( C_{D,0} + \frac{W^2}{q_{\infty}^2 S^2 \pi e AR} \right) \\ &= q_{\infty} S C_{D,0} + \frac{W^2}{q_{\infty} S \pi e AR} \end{aligned} \quad (6.42)$$

Multiply Eq. (6.42) by  $q_{\infty}$  by and rearrange:

$$q_{\infty}^2 S C_{D,0} - q_{\infty} T + \frac{W^2}{S \pi e AR} = 0 \quad (6.43)$$

Eq. (6.43) is a quadratic equation in terms of  $q_{\infty}$ . Solving Eq. (6.43) for  $q_{\infty}$  by use of the quadratic formula, recalling that  $q_{\infty} = \frac{1}{2} \rho_{\infty} V_{\infty}^2$ , and setting  $T$  in Eq. (6.43) equal to the maximum thrust available (full-throttle thrust)  $(T_A)_{\max}$ , we obtain for the maximum velocity (the details are left to you as a homework problem)

$$V_{\max} = \sqrt{\frac{\left(\frac{T_A}{W}\right)_{\max} \left(\frac{W}{S}\right) + \left(\frac{W}{S}\right) \sqrt{\left(\frac{T_A}{W}\right)_{\max}^2 - \frac{4C_{D,0}}{\pi e AR}}}{\rho_{\infty} C_{D,0}}} \quad (6.44)$$

Examine Eq. (6.44) carefully. Note that  $(T_A)_{\max}$  does not appear alone; it appears only in the ratio  $(T_A/W)_{\max}$ . Also note that the wing planform area  $S$  does not appear alone but only in the ratio  $W/S$ . Hence  $V_{\max}$  depends not on thrust alone, or weight alone, or wing area alone, but rather only on certain ratios of these quantities:

$\left(\frac{T_A}{W}\right)_{\max}$  : maximum thrust-to-weight ratio

$\frac{W}{S}$  : wing loading

We have just identified two of the most important airplane design parameters: thrust-to-weight ratio and wing loading. In addition, from Eq. (6.44), we see that  $V_{\max}$  depends on  $\rho_{\infty}$  (altitude), the zero-lift drag coefficient  $C_{D,0}$ , and the product  $eAR$ . Later, in Sec. 6.15, we show that the product  $\pi eAR$  is equal to  $4C_{D,0} (L/D)_{\max}^2$ , where  $(L/D)_{\max}$  is the maximum value

of the lift-to-drag ratio for the airplane. Hence,  $(L/D)_{\max}$  is also an important design parameter.

From Eq. (6.44), we conclude that  $V_{\max}$  can be increased by


1. Increasing the maximum thrust-to-weight ratio  $(T_A/W)_{\max}$ .
2. Increasing the wing loading  $W/S$ .
3. Decreasing the zero-lift drag coefficient  $C_{D,0}$ .

These trends are almost intuitively obvious, even without looking at Eq. (6.44), except possibly for the benefit of increasing the wing loading. To help understand the advantage of a high wing loading in this case, imagine that  $W/S$  is increased by decreasing  $S$ . If the planform area is made smaller, the total skin friction drag on the wing is reduced (less surface for the shear stress to act on), and hence  $V_{\max}$  is increased.


The results discussed here are important to other aspects of airplane performance. The design parameters  $T/W$  and  $W/S$  have a strong effect on other performance quantities in addition to  $V_{\max}$ , as we will see in subsequent sections.

---

page 481

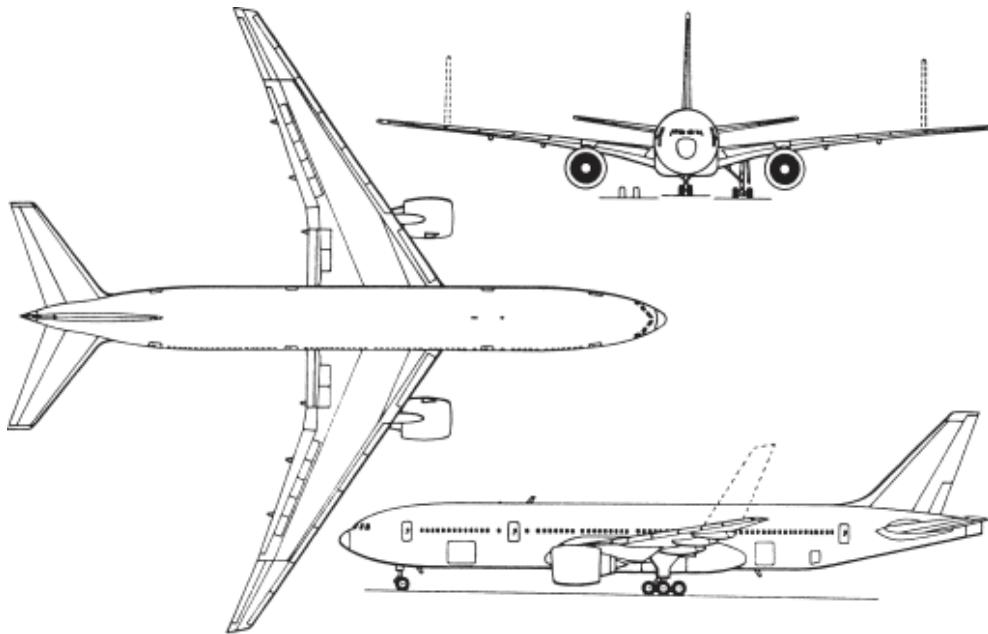

**Figure 6.27** Three-view of the Boeing 777-200 twin-turbofan high-capacity commercial airliner.

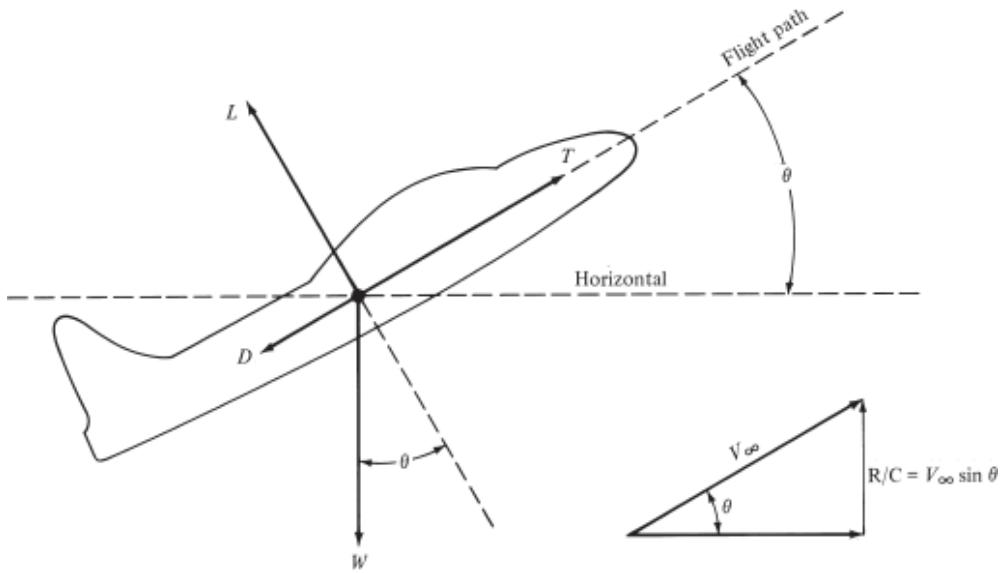

**Figure 6.28** Airplane in climbing flight.

$$T = D + W \sin \theta \quad (6.45)$$

and perpendicular to the flight path, we have

$$L = W \cos \theta \quad (6.46)$$

Note from Eq. (6.46) that the lift is now smaller than the weight. Equations (6.45) and (6.46) represent the equations of motion for steady, climbing flight and are analogous to Eqs. (6.11) and (6.12) obtained earlier for steady, horizontal flight.

Multiply Eq. (6.45) by  $V_\infty$ :

page 482

$$\begin{aligned} TV_\infty &= DV_\infty + WV_\infty \sin \theta \\ \frac{TV_\infty - DV_\infty}{W} &= V_\infty \sin \theta \end{aligned} \quad (6.47)$$

Examine Eq. (6.47) closely. The right side,  $V_\infty \sin \theta$ , is the airplane's *vertical velocity*, as illustrated in Fig. 6.28. This vertical velocity is called the *rate of climb* R/C:

$$\boxed{R/C \equiv V_\infty \sin \theta} \quad (6.48)$$

On the left side of Eq. (6.47),  $T V_\infty$  is the power available, from Eq. (6.33), and is represented by the  $P_A$  curves in Fig. 6.20. The second term on the left side of Eq. (6.47) is  $DV_\infty$ , which for level flight is the power required, as represented by the  $P_R$  curve in Fig. 6.15. For climbing flight, however,  $DV_\infty$  is no longer precisely the power required, because power must be applied to


overcome a component of weight as well as drag. Nevertheless, for small angles of climb, say  $\theta < 20^\circ$ , it is reasonable to neglect this fact and to assume that the  $DV_\infty$  term in Eq. (6.47) is given by the level-flight  $P_R$  curve in Fig. 6.15. With this,

$$TV_\infty - DV_\infty = \text{excess power} \quad (6.49)$$

where the excess power is the difference between power available and power required, as shown in Figs. 6.29a and 6.29b, for propeller-driven and jet-powered aircraft, respectively. Combining Eqs. (6.47) to (6.49), we obtain

$$\frac{R/C}{W} = \frac{\text{excess power}}{W} \quad (6.50)$$

where the excess power is clearly illustrated in Fig. 6.29.

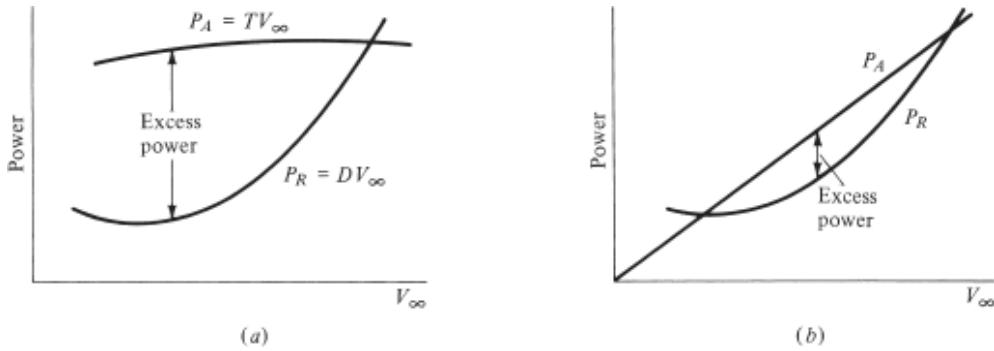

**Figure 6.29** Illustration of excess power. (a) Propeller-driven airplane. (b) Jet-propelled airplane.

Again we emphasize that the  $P_R$  curves in Figs. 6.29a and 6.29b are taken, for convenience, as those already calculated for level flight. Hence *in conjunction with these curves*, Eq. (6.50) is an *approximation* to the rate of climb, good only for small  $\theta$ . To be more specific, a plot of  $DV_\infty$  versus  $V_\infty$  for climbing flight [which is exactly called for in Eq. (6.47)] is different from a plot of  $DV_\infty$  versus  $V_\infty$  for level flight [which is the curve assumed in Fig. 6.29 and used in Eq. (6.50)] simply because *D is smaller for climbing than for level flight at the same  $V_\infty$* . To see this more clearly, consider an airplane with  $W = 5000 \text{ lb}$ ,  $S = 100 \text{ ft}^2$ ,  $C_{D,0} = 0.015$ ,  $e = 0.6$ , and  $AR = 6$ . If the velocity is  $V_\infty = 500 \text{ ft/s}$  at sea level and if the airplane is in *level* flight, then  $C_L = L(q_\infty S) = W/(\frac{1}{2}\rho_\infty V_\infty^2 S) = 0.168$ . In turn,

page 483



$$C_D = C_{D,0} + \frac{C_L^2}{\pi e AR} = 0.015 + 0.0025 = 0.0175$$

Now consider the same airplane in a  $30^\circ$  climb at sea level, with the same velocity  $V_\infty = 500$  ft/s. Here the lift is smaller than the weight,  $L = W \cos \theta$ , and therefore  $C_L = W \cos 30^\circ / (\frac{1}{2} \rho_\infty V_\infty^2 S) = 0.145$ . In turn,  $0.015 + 0.0019 = 0.0169$ . This should be compared with the higher value of 0.0175 obtained earlier for level flight. As seen in this example, for steady climbing flight,  $L$  (and hence  $C_L$ ) is smaller, and thus induced drag is smaller. Consequently, total drag for climbing flight is smaller than that for level flight at the same velocity.


Return again to Fig. 6.29, which corresponds to a given altitude. Note that the excess power is different at different values of  $V_\infty$ . Indeed, for both the-propeller- and jet-powered aircraft there is some  $V_\infty$  at which the excess power is maximum. At this point, from Eq. (6.50), R/C will be maximum:

$$\max R/C = \frac{\text{maximum excess power}}{W} \quad (6.51)$$

This situation is sketched in Fig. 6.30a, where the power available is that at full throttle—that is, maximum  $P_A$ . The maximum excess power, shown in Fig. 6.30a, via Eq. (6.51) yields the maximum rate of climb that can be generated by the airplane at the given altitude. A convenient graphical method of determining maximum R/C is to plot R/C versus  $V_\infty$ , as shown in Fig. 6.30b. A horizontal tangent defines the point of maximum R/C. Another useful construction is the *hodograph* diagram, which is a plot of the airplane's vertical velocity  $V_v$  versus its horizontal velocity  $V_h$ . Such a hodograph is sketched in Fig. 6.31. Remember that R/C is defined as the vertical velocity,  $R/C \equiv V_v$ ; hence a horizontal tangent to the hodograph defines the point of maximum R/C (point 1 in Fig. 6.31). Also, any line through the origin and intersecting the hodograph (say at point 2) has the slope  $V_v/V_h$ ; hence, from the geometry of the velocity components, such a line makes the climb angle  $\theta$  with respect to the horizontal axis, as shown in Fig. 6.31. Moreover, the length of the line is equal to  $V_\infty$ . As this line is rotated counterclockwise, R/C first increases, then goes through its maximum, and finally decreases. Finally, the line becomes tangent to the hodograph at point 3. This tangent line gives the maximum climb angle for which the airplane can maintain steady flight, shown as  $\theta_{\max}$  in Fig. 6.31. It is interesting that maximum R/C does *not* occur at the maximum climb angle.

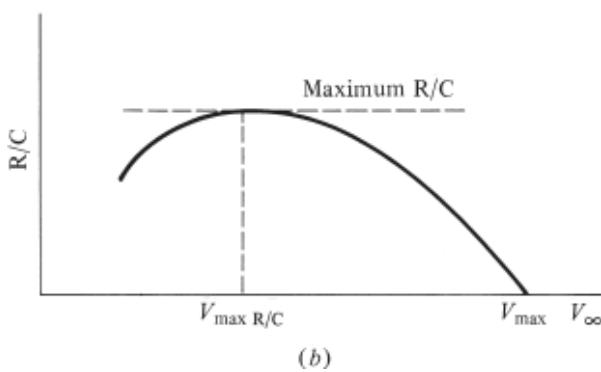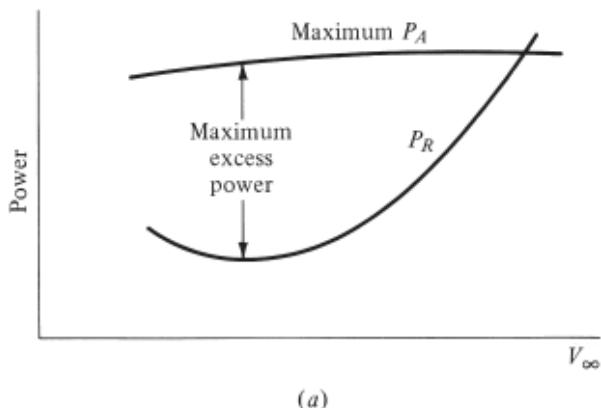

**Figure 6.30** Determination of maximum rate of climb for a given altitude.

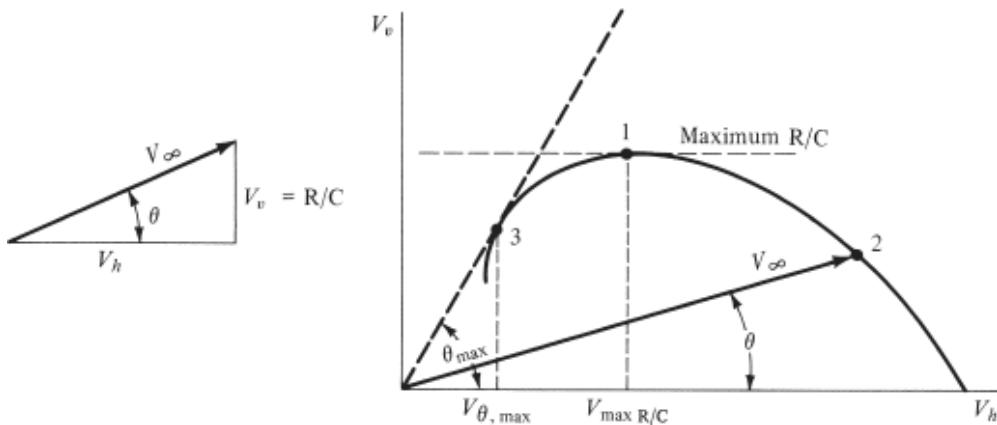

**Figure 6.31** Hodograph for climb performance at a given altitude.

The large excess power and high thrust available in modern aircraft allow climbing flight at virtually any angle. For large climb angles, the previous-analysis is not valid. Instead, to deal with large  $\theta$ , the original equations of motion [Eqs. (6.45) and (6.46)] must be solved algebraically, leading to an exact solution valid for any value of  $\theta$ . The details of this approach can be

found in the books by Dommasch et al. and by Perkins and Hage (see the bibliography at the end of this chapter).

Returning briefly to Figs. 6.29*a* and *b* for the propeller-driven and jet-powered aircraft, respectively, we can see an important difference in the low-speed rate-of-climb performance between the two types. Due to the power-available characteristics of a piston engine-propeller combination, large excess powers are available at low values of  $V_\infty$ , just above the stall. For an airplane on its landing approach, this gives a comfortable margin of safety in case of a sudden wave-off (particularly important for landings on aircraft carriers). In contrast, the excess power available to jet aircraft at low  $V_\infty$  is small, with a correspondingly reduced rate-of-climb capability.

Figures 6.30*b* and 6.31 give R/C at a given altitude. In Sec. 6.10 [page 485](#) we will ask how R/C varies with altitude. In pursuit of an answer, we will also find the answer to another question: how high the airplane can fly.

### EXAMPLE 6.10

Calculate the rate of climb versus velocity at sea level for (a) the CP-1 and (b) the CJ-1.

#### ■ Solution

*a.* For the CP-1, from Eq. (6.50),

$$R/C = \frac{\text{excess power}}{W} = \frac{P_A - P_R}{W}$$

With power in foot-pounds per second and  $W$  in pounds, for the CP-1, this equation becomes

$$R/C = \frac{P_A - P_R}{2950}$$

From Example 6.3, at  $V_\infty = 150$  ft/s,  $P_R = 0.326 \times 10^5$  ft · lb/s. From Example 6.4,  $P_A = 550(\text{hp}_A) = 550(184) = 1.012 \times 10^5$  ft · lb/s. Hence


$$R/C = \frac{(1.012 - 0.326) \times 10^5}{2950} = 23.3 \text{ ft/s}$$

In terms of feet per minute,

$$R/C = 23.3(60) = \boxed{1398 \text{ ft/min}} \quad \text{at } V_\infty = 150 \text{ ft/s}$$

This calculation can be repeated at different velocities:

$V, \text{ ft/s}$	$R/C, \text{ ft/min}$
100	1492
130	1472
180	1189
220	729
260	32.6

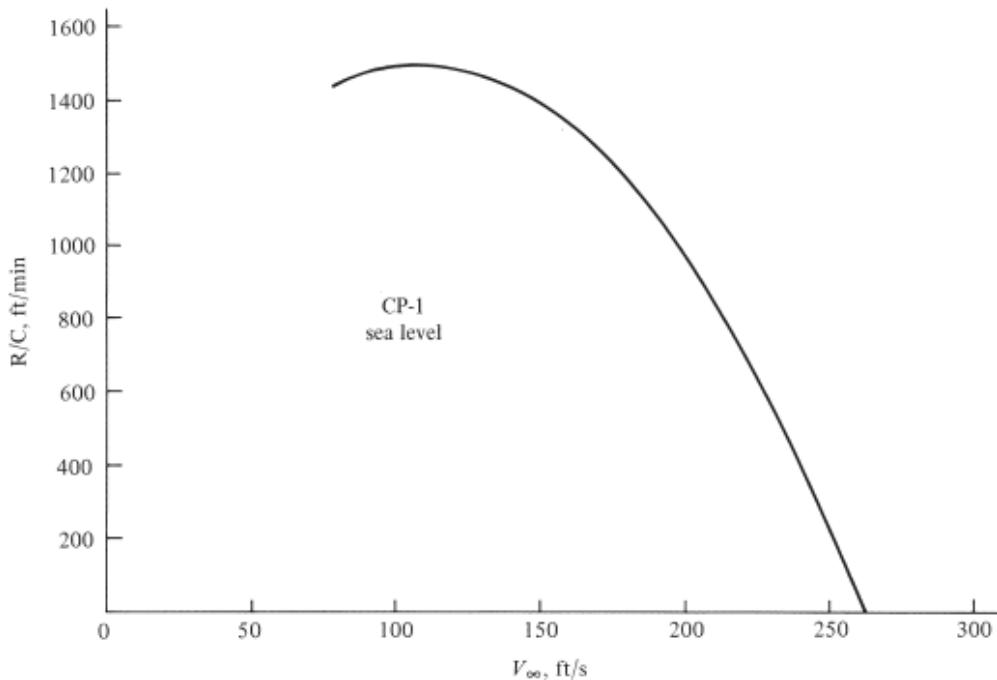

**Figure 6.32** Sea-level rate of climb for the CP-1.

page 486

These results are plotted in Fig. 6.32.

b. For the CJ-1, from Eq. (6.50),

$$R/C = \frac{P_A - P_R}{W} = \frac{550 (\text{hp}_A - \text{hp}_R)}{19,815}$$

From the results and curves of Example 6.5, at  $V_\infty = 500 \text{ ft/s}$ ,  $\text{hp}_R = 1884$  and  $\text{hp}_A = 6636$ .


Hence 
$$R/C = 550 \left( \frac{6636 - 1884}{19,815} \right) = 132 \text{ ft/s}$$

or 
$$R/C = 132(60) = \boxed{7914 \text{ ft/min}} \quad \text{at } V_\infty = 500 \text{ ft/s}$$

Again, here is a short tabulation for other velocities for the reader to check:

<b>V, ft/s</b>	<b>R/C, ft/min</b>
200	3546
400	7031
600	8088
800	5792
<b>950</b>	<b>1230</b>

These results are plotted in Fig. 6.33.

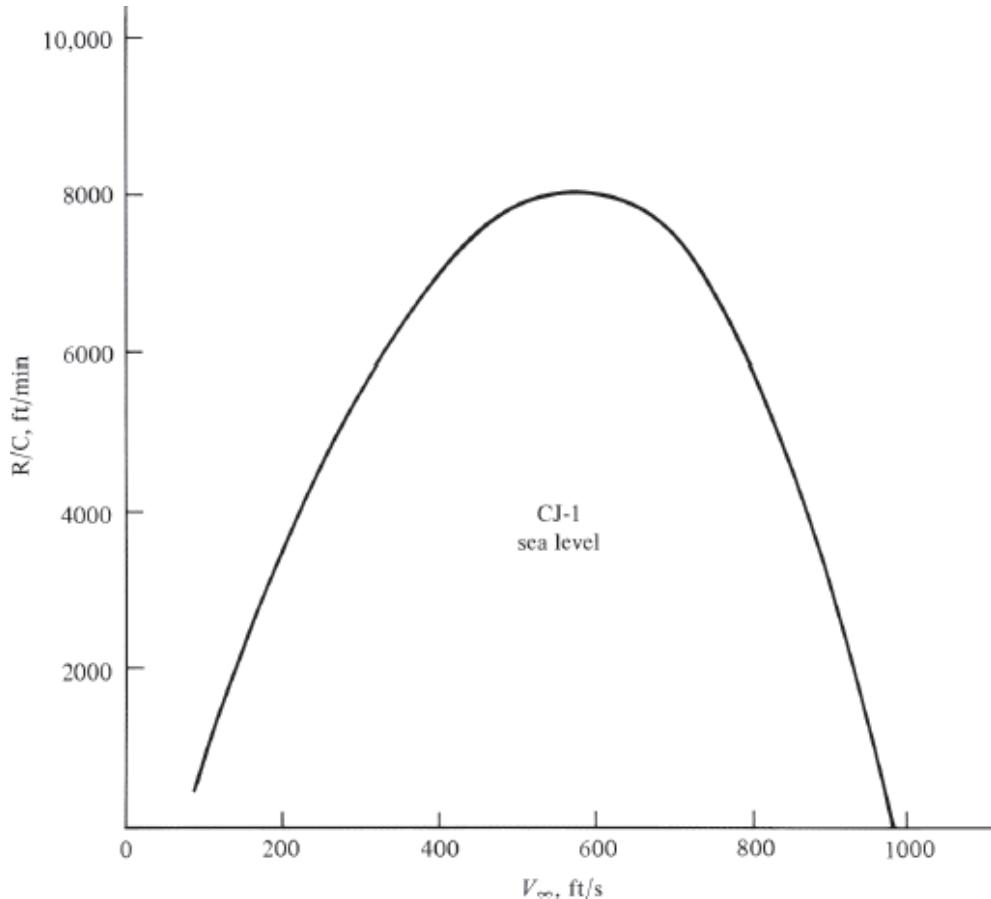

**Figure 6.33** Sea-level rate of climb for the CJ-1.

**EXAMPLE  
6.11**

The X-15 (Fig. 5.92) was an experimental rocket-powered research airplane designed to explore the realm of hypersonic flight. On August 22, 1963, with test pilot Joe Walker at the controls, it set an altitude record of 354,200 ft.

Slightly more than four years later, in a second X-15 labeled the X-15A-2, test pilot Pete Knight set a speed record of 4520 m (Mach 6.70) at 102,700 ft. As of June 2014, these records still hold, and the X-15 remains the fastest, highest-flying airplane in history. (For more details, see John Anderson and Richard Passman, *X-15: The World's Fastest Rocket Plane and the Pilot Who Ushered in the Space Age*, Zenith Press (for the Smithsonian Institution), Minneapolis, MN 2014.)

- (a) During much of the powered phase of the maximum altitude [page 487](#) flight, Joe Walker maintained the X-15 at a climb angle of 32 degrees. When the rocket propellants ran out, the X-15 was climbing through 176,000 feet at a flight velocity of 5600 ft/s. Calculate the rate of climb at the time of engine burnout.
- (b) The thrust of the XLR99 rocket engine was essentially constant at 57,000 lb during the powered phase of the X-15 flight. For the maximum altitude flight on August 22, 1963, the aerodynamic drag at the burnout altitude of 176,000 ft was only 252 lb, due to the very low air density at that altitude. The empty weight of the X-15 was 14,590 lb. Using Eq. (6.50), which contains the assumption of steady, unaccelerated flight, calculate the rate of climb of the X-15. Compare with the result obtained in part (a).

## ■ Solution

[page 488](#)

- (a) From the diagram in Fig. 6.28,

$$R/C = V_{\infty} \sin \theta = 5600 \sin 32^\circ = 2968 \text{ ft/s}$$

- (b) From Eq. (6.50),

$$\begin{aligned} R/C &= \frac{\text{(excess power)}}{W} = \frac{TV_{\infty} - DV_{\infty}}{W} = \frac{(T - D)V_{\infty}}{W} \\ &= \frac{(57,000 - 252)(5600)}{14,590} = 21,781 \text{ ft/s} \end{aligned}$$

*Comment:* Clearly, the use of Eq. (6.50) in part (b) gives a rate of climb that is much higher than the actual rate of climb obtained in part (a). What is the problem? *Answer:* Equation (6.50) assumes steady, unaccelerated flight. In contrast, the X-15 in this example is a case of highly *accelerated* rate of climb, which is treated in Sec. 6.18. Equation (6.50) is not valid for this case. As discussed in Sec. 6.18, for accelerated rate of climb, excess power is used to increase both the kinetic and potential energies of the airplane

simultaneously. The flight characteristics given in part (a) are the result of excess power used to obtain increases in both kinetic and potential energies. On the other hand, the result in part (b) assumes that all the excess power is used to obtain an increase in potential energy only, thus leading to an inordinately high value of the calculated rate-of-climb. This underscores the importance of the accelerated rate-of-climb discussion in Sec. 6.18. In reality, much of the excess power of the X-15 was utilized to accelerate the airplane to a final velocity of 5600 ft/s.

Also, note that the aerodynamic drag of the X-15 at this point in its flight trajectory was only 252 lb, less than 0.5 percent of the thrust of the LR99 rocket engine. This comparison underscores the instruction by Hartley Soule, director of the early NACA research airplane program, to Harrison Storms, Chief Engineer for North American Aviation during the design of the X-15. Soule told Storms: “You have a little airplane and a big engine with a large thrust margin. We want to study aerodynamic heating. We do not want to worry about aerodynamic stability and control, or the airplane breaking up. So if you make any errors, make them on the strong side. You should have enough thrust to do the job.” Storms added “And so we did.” (See Jenkins, *X-15: Extending the Frontiers of Flight*, NASA SP-2007-562, Government Printing Office, 2007, p. 108.)

---

page 489

## DESIGN BOX

What airplane design parameters dictate maximum rate of climb? The answer is not explicitly clear from our graphical analysis carried out in this section. However, the answer can be obtained explicitly by deriving an equation for maximum rate of climb and identifying the design parameters that appear in the equation. The derivation is lengthy, and we are interested only in the final result here. For a detailed derivation, see Anderson, *Aircraft Performance and Design*, McGraw-Hill, New York, 1999. Denoting maximum rate-of-climb by  $(R/C)_{\max}$ , and for compactness identifying the symbol  $Z$  as

$$Z = 1 + \sqrt{1 + \frac{3}{(L/D)_{\max}^2 (T/W)_{\max}^2}}$$

where  $(L/D)_{\max}$  is the maximum value of the lift-to-drag ratio for the given airplane, we can show that for a *jet-propelled* airplane

$$(R/C)_{\max} = \left[ \frac{(W/S)Z}{3\rho_\infty C_{D,0}} \right]^{\frac{1}{2}} \left( \frac{T}{W} \right)_{\max}^{\frac{1}{2}} \times \left[ 1 - \frac{Z}{6} - \frac{3}{2(T/W)_{\max}^2 (L/D)_{\max}^2 Z} \right] \quad (6.52)$$

and for a *propeller-driven* airplane

$$(R/C)_{\max} = \left( \frac{\eta P}{W} \right)_{\max} - 0.8776 \sqrt{\frac{W/S}{\rho_\infty C_{D,0}}} \frac{1}{(L/D)_{\max}^{3/2}} \quad (6.53)$$

where  $\eta$  is the propeller efficiency defined by Eq. (6.31) and  $P$  is the shaft brake power from the engine (or engines, for a multiengine airplane).

Examining Eq. (6.52), we see once again that  $W$ ,  $S$ , and  $T$  appear not alone but rather in ratios. From Eq. (6.52), the design parameters that dictate  $(R/C)_{\max}$  for a jet-propelled airplane are

- Wing loading  $W/S$ .
- Maximum thrust-to-weight ratio  $(T/W)_{\max}$ .
- Zero-lift drag coefficient  $C_{D,0}$ .
- Maximum lift-to-drag ratio  $(L/D)_{\max}$ .

These are the same design parameters that dictate  $V_{\max}$  from Eq. (6.44). We also note, looking ahead to Sec. 6.14, that  $(L/D)_{\max}$  is determined by  $C_{D,0}$ ,  $e$ , and AR—namely,  $(L/D)_{\max}^2 = \pi e AR / (4C_{D,0})$ , as we will see. So identifying  $(L/D)_{\max}$  as a design parameter is the same as identifying a certain combination of  $e$ , AR, and  $C_{D,0}$  as a design parameter. We will have more to say about the importance of  $(L/D)_{\max}$  in airplane design in subsequent sections.

Recall that for a propeller-driven airplane, the rating of the engine-propeller combination in terms of *power* is more germane than that in terms of thrust. Hence, Eq. (6.53) gives maximum rate of climb for a propeller-driven airplane in terms of the *power-to-weight ratio*  $\eta P/W$ . [Recall from Eq. (6.31) that  $\eta P$  is the power available  $P_A$  for a propeller-driven airplane.] Therefore, for a propeller-driven airplane, an important design parameter that dictates  $(R/C)_{\max}$  is the power-to-weight ratio.


## 6.9 GLIDING FLIGHT

Consider an airplane in a power-off glide, as sketched in Fig. 6.34. The forces acting on this aircraft are lift, drag, and weight; the thrust is zero because the power is off. The glide flight path makes an angle  $\theta$  below the horizontal. For an equilibrium unaccelerated glide, the sum of the forces must be zero. Summing forces along the flight path, we have

$$D = W \sin \theta \quad (6.54)$$

and perpendicular to the flight path

$$L = W \cos \theta \quad (6.55)$$

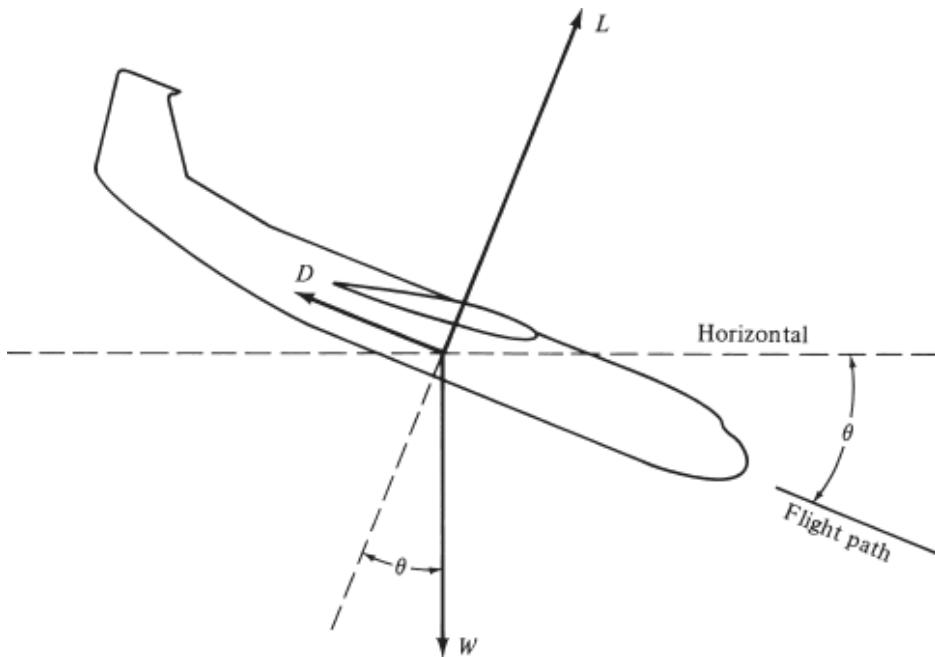

**Figure 6.34** Airplane in power-off gliding flight.

We can calculate the equilibrium glide angle by dividing Eq. (6.54) by (6.55), yielding

$$\frac{\sin \theta}{\cos \theta} = \frac{D}{L}$$

page 490

or

$$\tan \theta = \frac{1}{L/D} \quad (6.56)$$

Clearly the glide angle is strictly a function of the lift-to-drag ratio; the higher the  $L/D$ , the shallower the glide angle. From this, the smallest equilibrium glide angle occurs at  $(L/D)_{\max}$ , which corresponds to the maximum range for the glide.

**EXAMPLE**  
**6.12**


The maximum lift-to-drag ratio for the CP-1 is 13.6. Calculate the minimum glide angle and the maximum range measured along the ground covered by the CP-1 in a power-off glide that starts at an altitude of 10,000 ft.

**■ Solution**

The minimum glide angle is obtained from Eq. (6.56) as

$$\tan \theta_{\min} = \frac{1}{(L/D)_{\max}} = \frac{1}{13.6}$$

$$\theta_{\min} = 4.2^\circ$$

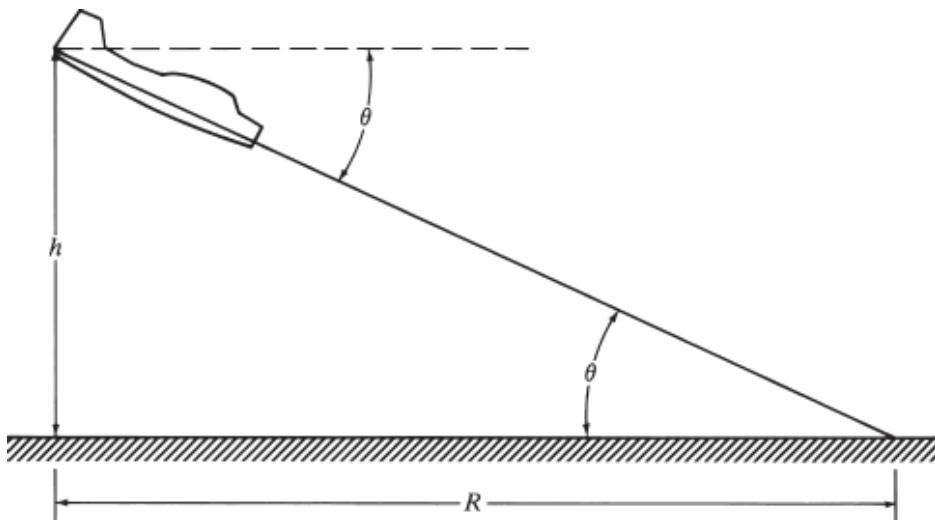

**Figure 6.35** Range covered in an equilibrium glide.

The distance covered along the ground is  $R$ , as shown in Fig. 6.35. If [page 491](#)  $h$  is the altitude at the start of the glide, then

$$R = \frac{h}{\tan \theta} = h \frac{L}{D}$$

Hence

$$R_{\max} = h \left( \frac{L}{D} \right)_{\max} = 10,000(13.6)$$

$$R_{\max} = 136,000 \text{ ft} = 25.6 \text{ mi}$$

## EXAMPLE 6.13

Repeat Example 6.12 for the CJ-1, for which the value of  $(L/D)_{\max}$  is 16.9.

### ■ Solution

$$\tan \theta_{\min} = \frac{1}{(L/D)_{\max}} = \frac{1}{16.9}$$

$$\boxed{\theta_{\min} = 3.39^\circ}$$

$$R_{\max} = h \left( \frac{L}{D} \right)_{\max} = 10,000(16.9)$$

$$\boxed{R_{\max} = 169,000 \text{ ft} = 32 \text{ mi}}$$

Note the obvious fact that the CJ-1, with its higher value of  $(L/D)_{\max}$ , is capable of a larger glide range than the CP-1.

## EXAMPLE 6.14

For the CP-1, calculate the equilibrium glide velocities at altitudes of 10,000 and 2000 ft, each corresponding to the minimum glide angle.

### ■ Solution

page 492

$$L = \frac{1}{2} \rho_{\infty} V_{\infty}^2 S C_L$$

Combining this with Eq. (6.55) gives

$$W \cos \theta = \frac{1}{2} \rho_{\infty} V_{\infty}^2 S C_L$$

$$\text{or } V_{\infty} = \sqrt{\frac{2 \cos \theta W}{\rho_{\infty} C_L S}}$$

where  $W/S$  is the by now familiar *wing loading*. From this equation we see that the higher the wing loading, the higher the glide velocity. This makes sense: A heavier airplane with a smaller wing area is going to glide to the earth's surface at a greater velocity. Note, however, that the glide angle, and hence range, depends not on the weight of the airplane and not on its wing loading but exclusively on the value of  $(L/D)_{\max}$ , which is an aerodynamic property of the airframe design. A higher wing loading simply means that the

airplane will have a *faster* glide and will reach the earth's surface sooner. From Example 6.1, we have for the CP-1

$$\frac{W}{S} = \frac{2950}{174} = 16.95 \text{ lb/ft}^2$$

Also from the tabulation in Example 6.1, we see that  $(L/D)_{\max} = 13.6$  corresponds to a lift coefficient  $C_L = 0.634$ . (Note that both  $L/D$  and  $C_L$  are functions of the angle of attack of the airplane; these are aerodynamic data associated with the airframe and are not influenced by the flight conditions. Hence,  $C_L = 0.634$  at maximum  $L/D$  no matter whether the airplane is in level flight, is climbing, or is in a glide.) Therefore, at 10,000 ft, where  $\rho_\infty = 0.0017556 \text{ slug/ft}^3$ , we have

$$V_\infty = \sqrt{\frac{(2 \cos 4.2^\circ)(16.95)}{0.0017556(0.634)}}$$

$V_\infty = 174.3 \text{ ft/s}$

at  $h = 10,000 \text{ ft}$

At 2000 ft,  $\rho_\infty = 0.0022409 \text{ slug/ft}^3$ . Hence

$$V_\infty = \sqrt{\frac{(2 \cos 4.2^\circ)(16.95)}{0.0022409(0.634)}}$$

$V_\infty = 154.3 \text{ ft/s}$

at  $h = 2000 \text{ ft}$

Note that the equilibrium glide velocity decreases as altitude decreases.

---

page 493


## 6.10 ABSOLUTE AND SERVICE CEILINGS

The effects of altitude on  $P_A$  and  $P_R$  were discussed in Sec. 6.7 and illustrated in Figs. 6.24a and b. For the sake of discussion, consider a propeller-driven airplane; the results of this section will be qualitatively the same for a jet. As altitude increases, the maximum excess power decreases, as shown in Fig. 6.36. In turn, maximum R/C decreases. This is illustrated by Fig. 6.37, which is a plot of maximum R/C versus altitude with R/C as the abscissa.


At some altitude high enough, the  $P_A$  curve becomes tangent to the  $P_R$  curve (point 1 in Fig. 6.38). The velocity at this point is the only value at which steady, level flight is possible; moreover, there is zero excess power, and hence zero maximum rate of climb, at this point. The altitude at which maximum R/C = 0 is defined as the *absolute ceiling* of the airplane. A more useful quantity is the *service ceiling*, defined as the altitude where maximum

$R/C = 100$  ft/min. The service ceiling represents the practical upper limit of steady, level flight.


page 494

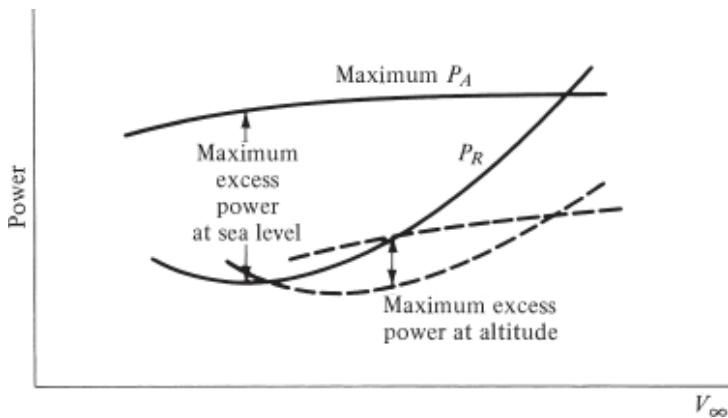

**Figure 6.36** Variation of excess power with altitude.

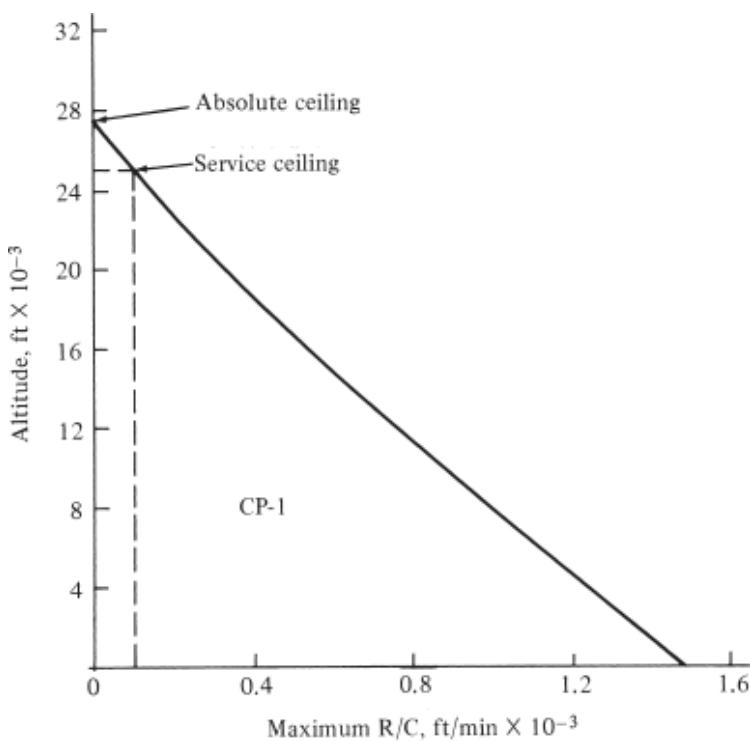

**Figure 6.37** Determination of absolute and service ceilings for the CP-1.

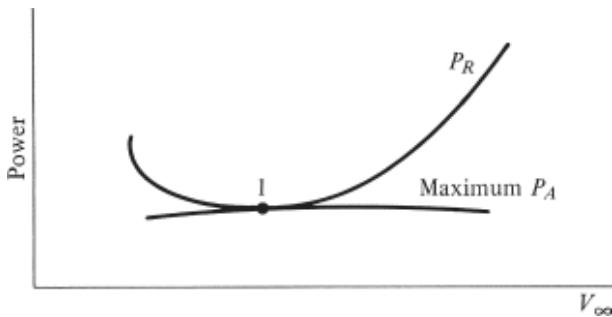

**Figure 6.38** Power-required and power-available curves at the absolute ceiling.

The absolute and service ceilings can be determined as follows:

1. Using the technique of Sec. 6.8, calculate values of maximum R/C for a number of different altitudes.
2. Plot maximum rate of climb versus altitude, as shown in Fig. 6.37.
3. Extrapolate the curve to 100 ft/min and 0 ft/min to find the service and absolute ceilings, respectively, as also shown in Fig. 6.37.

### EXAMPLE 6.15

Calculate the absolute and service ceilings for (a) the CP-1 and (b) the CJ-1.

#### ■ Solution

a. For the CP-1, as stated in Example 6.1, all the results presented in all the examples of this chapter are taken from a computer program that deals with 100 different velocities, each at different altitudes, beginning at sea level and increasing in 2000-ft increments. In modern engineering, using the computer to take the drudgery out of extensive and repeated calculations is an everyday practice. For example, note from Example 6.10 that the maximum rate of climb at sea level for the CP-1 is 1500 ft/min. In essence, this result is the product of all the work performed in Examples 6.1 to 6.5 and 6.10. Now, to obtain the absolute and service ceilings, these calculations must be repeated at several different altitudes in order to find where  $R/C = 0$  and 100 ft/min, respectively. Some results are tabulated and plotted in the table that follows; the reader should take the time to check a few of the numbers:

Altitude, ft	Maximum R/C, ft/min
0	1500
4,000	1234
8,000	987
12,000	755
16,000	537
20,000	331
24,000	135
26,000	40

These results are plotted in Fig. 6.37. From these numbers, we find


[page 495](#)

Absolute ceiling (R/C = 0) is 27,000 ft

b. For the CJ-1, utilizing the results from Examples 6.1 to 6.5 and 6.10 and making similar calculations at various altitudes, we tabulate the following results:

Altitude, ft	Maximum R/C, ft/min
0	8118
6,000	6699
12,000	5448
18,000	4344
24,000	3369
30,000	2502
36,000	1718

These results are plotted in Fig. 6.39.

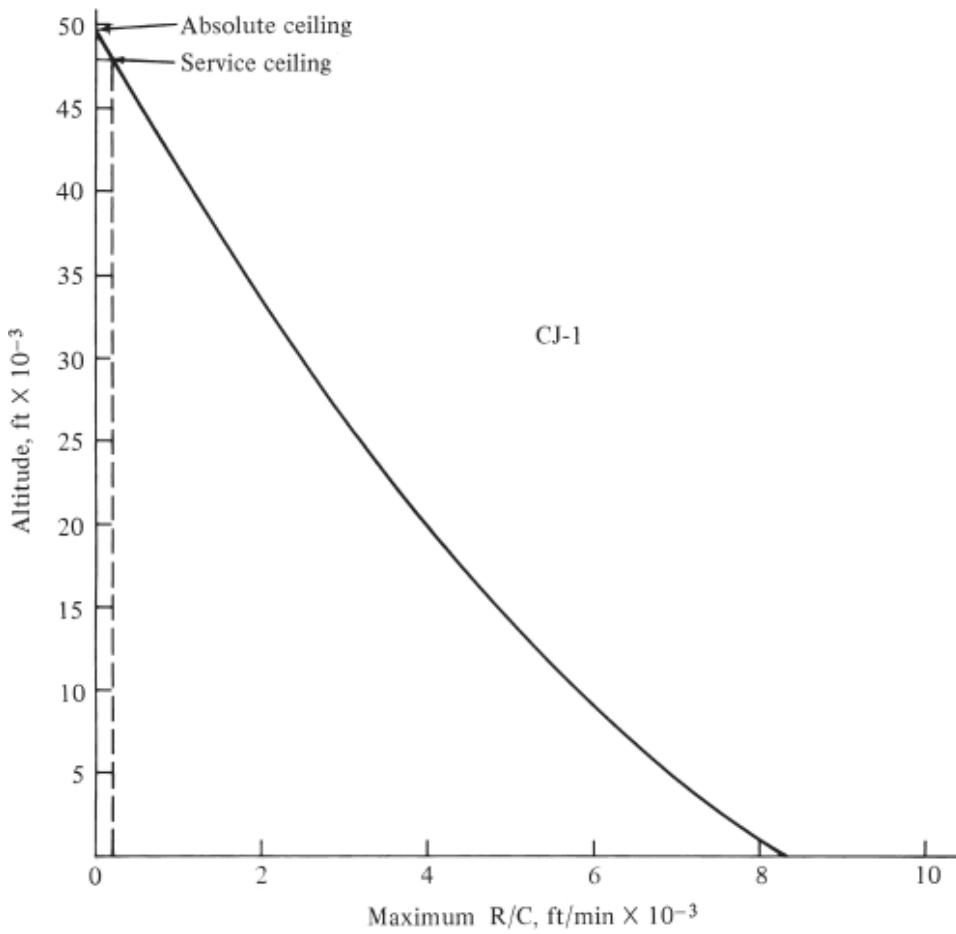

**Figure 6.39** Determination of absolute and service ceilings for the CJ-1.

From these results, we find

page 496

Absolute ceiling ( $R/C = 0$ ) is 49,000 ft

Service ceiling ( $R/C = 100 \text{ ft/min}$ ) is 48,000 ft

### EXAMPLE 6.16

Derive a closed-form equation for the absolute ceiling of a given airplane as a function of the wing loading,  $W/S$ , and the power loading,  $W/(P_{A,0})_{\max}$ , where  $(P_{A,0})_{\max}$  is the maximum power available at sea level.

#### ■ Solution

Examining Fig. 6.38, we see that when an airplane is flying at its absolute ceiling, the minimum power required,  $(P_{R,alt})_{min}$ , is equal to the maximum power available,  $(P_{A,alt})_{max}$ ; this condition is shown as point 1 in Fig. 6.38, and is given by

$$(P_{R,alt})_{min} = (P_{A,alt})_{max} \quad (E6.15.1)$$

The altitude effect on power available is discussed in Sec. 6.7, where we assume that  $P_A$  is proportional to the ambient density. This is a reasonable approximation for a turbojet engine, and for an unsupercharged reciprocating engine. Thus

$$(P_{A,alt})_{max} = \frac{\rho}{\rho_0} (P_{A,0})_{max} \quad (E6.15.2)$$

From Example 6.6, we have the relation for the minimum power required at altitude,  $(P_{R,alt})_{min}$ , in terms of the minimum power required at sea level,  $(P_{R,0})_{min}$ , namely Eq. (E 6.6.1).

$$(P_{R,alt})_{min} = \left(\frac{\rho_0}{\rho}\right)^{1/2} (P_{R,0})_{min} \quad (E 6.6.1)$$

Substituting Eqs. (E 6.15.2) and (E 6.6.1) into (E 6.15.1), we have

$$\left(\frac{\rho}{\rho_0}\right)^{1/2} (P_{R,0})_{min} = \frac{\rho}{\rho_0} (P_{A,0})_{max}$$

or

$$(P_{R,0})_{min} = \left(\frac{\rho}{\rho_0}\right)^{1.5} (P_{A,0})_{max} \quad (E 6.15.3)$$

where the density  $\rho$  is the density at the absolute ceiling.

An approximation for  $\rho/\rho_0$  as a function of  $h$  is given in Example 3.2 as

$$\frac{\rho}{\rho_0} = e^{-\frac{h}{29,800}} \quad (3.16)$$

where  $h$  is in feet. Substituting Eq. (3.16) into (E 6.15.3), where now  $h$  pertains to the absolute ceiling, denoted by  $H$ , we have

$$\begin{aligned}
(P_{R,0})_{\min} &= e^{\frac{-1.5H}{29,800}} (P_{A,0})_{\max} \\
(P_{R,0})_{\min} &= e^{\frac{-H}{19,867}} (P_{A,0})_{\max} \\
e^{\frac{-H}{19,867}} &= \frac{(P_{R,0})_{\min}}{(P_{A,0})_{\max}} \\
-\frac{H}{19,867} &= \ln \left[ \frac{(P_{R,0})_{\min}}{(P_{A,0})_{\max}} \right] \\
H &= -19,867 \ln \left[ \frac{(P_{R,0})_{\min}}{(P_{A,0})_{\max}} \right]
\end{aligned} \tag{E 6.15.4}$$

Returning to Eq. (6.27) for  $P_R$ , at sea level,

$$P_{R,0} = \sqrt{\frac{2W^3}{\rho_0 S}} \left( \frac{1}{C_L^{3/2}/C_D} \right) \tag{E 6.15.5}$$

Minimum power required occurs when the airplane is flying at  $\left( \frac{C_L^{3/2}}{C_D} \right)_{\max}$ . Hence, from Eq. (E 6.15.5),

$$(P_{R,0})_{\min} = \sqrt{\frac{2W^3}{\rho_0 S}} \frac{1}{(C_L^{3/2}/C_D)_{\max}} \tag{E 6.15.6}$$

Reaching ahead for a result from Sec. 6.14 where we prove that the value of  $\left( \frac{C_L^{3/2}}{C_D} \right)_{\max}$  for a given airplane is simply an aerodynamic property of the airplane, namely from Eq. (6.87),

$$\left( \frac{C_L^{3/2}}{C_D} \right)_{\max} = \frac{(3 C_{D,0} \pi e AR)^{3/4}}{4C_{D,0}}$$

Substituting this result into Eq. (E 6.15.6), we get

$$(P_{R,0})_{\min} = \sqrt{\frac{2W^3}{\rho_0 S}} \left[ \frac{4 C_{D,0}}{(3 C_{D,0} \pi e AR)^{3/4}} \right]$$

or

$$(P_{R,0})_{\min} = W \sqrt{\frac{2}{\rho_0} \left( \frac{W}{S} \right)} \left[ \frac{0.7436 C_{D,0}^{1/4}}{(e AR)^{3/4}} \right] \tag{E 6.15.7}$$

Substituting Eq. (E 6.15.7) into (E 6.15.4), we have

$H = -19,867 \ln \left\{ \frac{W}{(P_{A,0})_{\max}} \right\} \sqrt{\frac{2}{\rho_0} \left( \frac{W}{S} \right)} \left[ \frac{0.7436 C_{D,0}^{1/4}}{(e AR)^{3/4}} \right]$

(E 6.15.8)

Equation (E 6.15.8) is a closed-form analytical equation for the absolute ceiling  $H$ , where  $H$  is in feet.

[page 498](#)

## EXAMPLE 6.17

Using the analytical result from Example 6.16, calculate the absolute ceiling for the CP-1, and compare your results with the exact numerical value obtained in Example 6.15.

### ■ Solution

Repeating Eq. (E 6.15.8) from Example 6.16,

$$H = -19,867 \ln \left\{ \frac{W}{(P_{A,0})_{\max}} \right\} \sqrt{\frac{2}{\rho_0}} \left( \frac{W}{S} \right) \left[ \frac{0.7436 C_{D,0}^{1/4}}{(e AR)^{3/4}} \right]$$

From the data for the CP-1 given in Example 6.1,

$$AR = \frac{b^2}{S} = \frac{(35.8)^2}{174} = 7.366$$

$$(P_{A,0})_{\max} = (230 \text{ hp}) \eta = (230)(0.8) = 184 \text{ hp} = (184)(550) = 1.02 \times 10^5 \text{ ft lb/s}$$

$$\frac{W}{(P_{A,0})_{\max}} = \frac{2950}{1.012 \times 10^5} = 0.02915 \text{ s/ft}$$

$$\sqrt{\frac{2}{\rho_0}} \left( \frac{W}{S} \right) \sqrt{\frac{2}{0.002377} \left( \frac{2950}{174} \right)} = 119.44 \left( \frac{\text{ft lb}}{\text{slug}} \right)^{1/2}$$

$$(e AR)^{3/4} = [(0.8)(7.366)]^{3/4} = (5.8926)^{3/4} = 3.782$$

$$(C_{D,0})^{1/4} = (0.025)^{1/4} = 0.3976$$

$$\frac{0.7436 C_{D,0}^{1/4}}{(e AR)^{3/4}} = \frac{(0.7436)(0.3976)}{3.782} = 0.07817$$

From Eq. (6.15.8),

$$\begin{aligned} H &= -1987 \ln [(0.02915)(119.44)(0.07817)] \\ &= (-19,867) \ln (0.27216) = (-19,867)(-1.301) = 25,850 \text{ ft} \end{aligned}$$

The exact numerical value of the absolute ceiling for the CP-1, from Example 6.15, is 27,000 ft. The approximate analytical result obtained from Eq. (6.15.8) is within  $[(27,000 - 25,800)/27,000] (100) = 4.26\%$  of the exact value. Hence, the analytical formula derived in Example 6.15 gives a quick

and reasonable estimate for the absolute ceiling without having to go through the detailed numerical calculations embodied in Example 6.15.

page 499

## 6.11 TIME TO CLIMB

To carry out its defensive role adequately, a fighter airplane must be able to climb from sea level to the altitude of advancing enemy aircraft in as short a time as possible. In another case, a commercial aircraft must be able to rapidly climb to high altitudes to minimize the discomfort and risks of inclement weather and to minimize air traffic problems. As a result, the time for an airplane to climb to a given altitude can become an important design consideration. The calculation of the time to climb follows directly from our previous discussions, as described in the following.

The rate of climb was defined in Sec. 6.8 as the vertical velocity of the airplane. Velocity is simply the time rate of change of distance, the distance here being the altitude  $h$ . Hence,  $R/C = dh/dt$ . Therefore,

$$dt = \frac{dh}{R/C} \quad (6.57)$$

In Eq. (6.57),  $dt$  is the small increment in time required to climb a small increment  $dh$  in altitude. Therefore, from calculus, the time to climb from one altitude  $h_1$  to another  $h_2$  is obtained by integrating Eq. (6.57):

$$t = \int_{h_1}^{h_2} \frac{dh}{R/C}$$

Normally time to climb is considered from sea level, where  $h_1 = 0$ . Hence, the time to climb to any given altitude  $h_2$  is

$$t = \int_0^{h_2} \frac{dh}{R/C} \quad (6.58)$$


To calculate  $t$  graphically, first plot  $(R/C)^{-1}$  versus  $h$ , as shown in Fig. 6.40. The area under the curve from  $h = 0$  to  $h = h_2$  is the time to climb to altitude  $h_2$ .

### EXAMPLE 6.18


Calculate and compare the time required for (a) the CP-1 and (b) the CJ-1 to climb to 20,000 ft.

## ■ Solution

- a. For the CP-1, from Eq. (6.58), the time to climb is equal to the shaded area under the curve shown in Fig. 6.40. The resulting area gives time to climb as  
[27.0 min.]

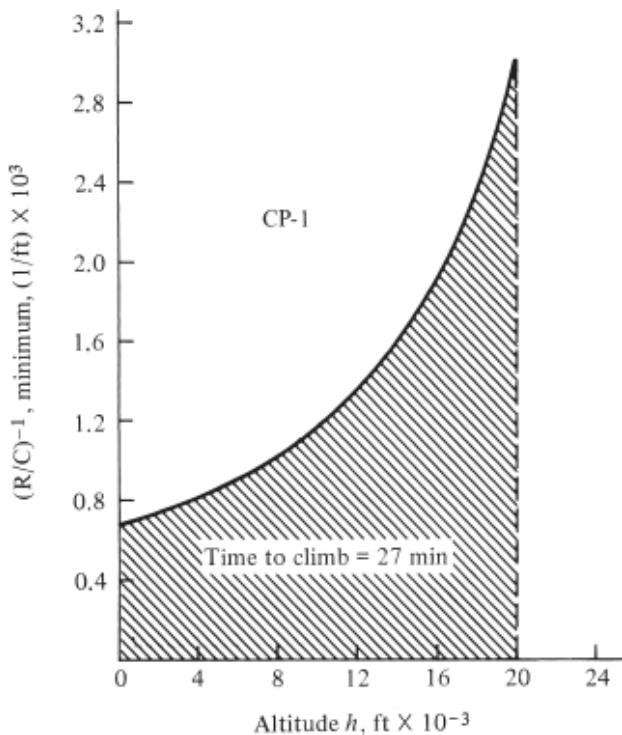

**Figure 6.40** Determination of time to climb for the CP-1.

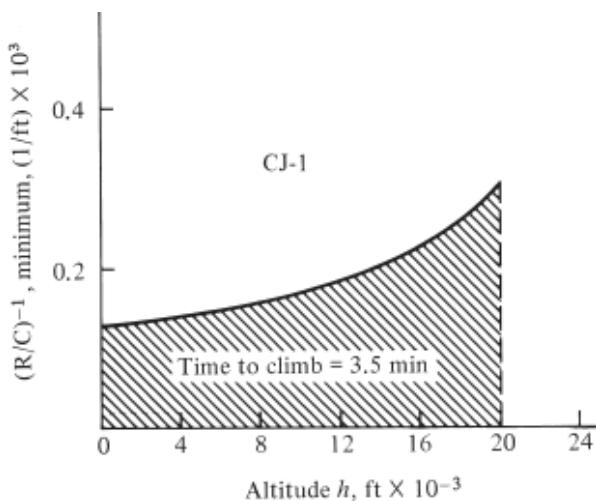

**Figure 6.41** Determination of time to climb for the CJ-1.

b. For the CJ-1, Eq. (6.58) is plotted in Fig. 6.41. The resulting area gives time to climb as 3.5 min.

Note that the CJ-1 climbs to 20,000 ft in one-eighth of the time required by the CP-1; this is to be expected for a high-performance executive jet transport in comparison to its propeller-driven piston-engine counterpart.

---

page 500

## 6.12 RANGE AND ENDURANCE: PROPELLER-DRIVEN AIRPLANE

When Charles Lindbergh made his spectacular solo flight across the Atlantic Ocean on May 20–21, 1927, he could not have cared less about maximum velocity, rate of climb, or time to climb. Uppermost in his mind was the maximum distance he could fly on the fuel supply carried by the *Spirit of St. Louis*. Therefore, *range* was the all-pervasive consideration during the design and construction of Lindbergh's airplane. Indeed, throughout all 20th-century aviation, range has been an important design feature, especially for transcontinental and transoceanic transports and for strategic bombers for the military.

*Range* is technically defined as the total distance (measured with respect to the ground) traversed by an airplane on a tank of fuel. A related quantity is *endurance*, which is defined as the total time that an airplane stays in the air on a tank of fuel. In different applications, it may be desirable to maximize one or the other of these characteristics. The parameters that maximize range are different from those that maximize endurance; they also differ for propeller- and jet-powered aircraft. The purpose of this section is to discuss these variations for the case of a propeller-driven airplane; jet airplanes are considered in Sec. 6.13.

---

page 501

### 6.12.1 Physical Considerations

One critical factor influencing range and endurance is the *specific fuel consumption*, a characteristic of the engine. For a reciprocating engine, specific fuel consumption (commonly abbreviated SFC) is defined as the *weight of fuel consumed per unit power per unit time*. As mentioned earlier, reciprocating engines are rated in terms of horsepower, and the common units (although nonconsistent) of specific fuel consumption are

$$SFC = \frac{\text{lb of fuel}}{(\text{bhp})(\text{h})}$$

where bhp signifies shaft brake horsepower, discussed in Sec. 6.6.

First consider endurance. On a qualitative basis, to stay in the air for the longest time, common sense says that we must use the *minimum* number of pounds of fuel per hour. On a dimensional basis, this quantity is proportional to the horsepower required by the airplane and to the SFC:

$$\frac{\text{lb of fuel}}{\text{h}} \propto (\text{SFC})(\text{hp})$$

Therefore, minimum pounds of fuel per hour are obtained with minimum  $\text{hp}_R$ . Because minimum pounds of fuel per hour give maximum endurance, we quickly conclude that

Maximum endurance for a propeller-driven airplane occurs when the airplane is flying at minimum power required.


This condition is sketched in Fig. 6.42. Furthermore, in Sec. 6.5 we have already proved that minimum power required corresponds to a maximum value of  $C_L^{3/2}/C_D$  [see Eq. (6.27)]. Thus

Maximum endurance for a propeller-driven airplane occurs when the airplane is flying at a velocity such that  $C_L^{3/2}/C_D$  is at its maximum.

Now consider range. To cover the longest distance (say in miles), common sense says that we must use the minimum number of pounds of fuel per mile. On a dimensional basis, we can state the proportionality

$$\frac{\text{lb of fuel}}{\text{mi}} \propto \frac{(\text{SFC})(\text{hp}_R)}{V_\infty}$$

(Check the units yourself, assuming that  $V_\infty$  is in miles per hour.) As a result, minimum pounds of fuel per mile are obtained with a minimum  $\text{hp}_R/V_\infty$ . This minimum value of  $\text{hp}_R/V_\infty$  precisely corresponds to the tangent point in Fig. 6.17, which also corresponds to maximum  $L/D$ , as proved in Sec. 6.5. Thus

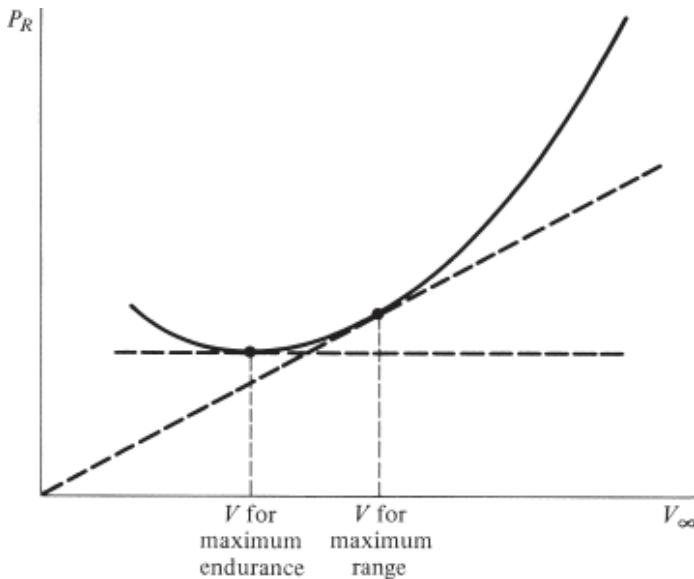

**Figure 6.42** Points of maximum range and endurance on the power-required curve for a propeller-driven airplane.

Maximum range for a propeller-driven airplane occurs when the airplane is flying at a velocity such that  $C_L/C_D$  is at its maximum.

This condition is also sketched in Fig. 6.42.

---

page 502

### 6.12.2 Quantitative Formulation

The important conclusions drawn in Sec. 6.12.1 were obtained from purely physical reasoning. We will develop quantitative formulas that substantiate these conclusions and that allow the direct calculation of range and endurance for given conditions.

In this development, the specific fuel consumption is couched in units that are consistent:

$$\frac{\text{lb of fuel}}{(\text{ft} \cdot \text{lb}/\text{s})(\text{s})} \text{ or } \frac{\text{N of fuel}}{(\text{J}/\text{s})(\text{s})}$$

For convenience and clarification,  $c$  will designate the specific fuel consumption with consistent units.

Consider the product  $cP dt$ , where  $P$  is engine power and  $dt$  is a small increment of time. The units of this product are (in the English engineering system)

$$cP dt = \frac{\text{lb of fuel}}{(\text{ft} \cdot \text{lb/s})(\text{s})} \frac{\text{ft} \cdot \text{lb}}{\text{s}} (\text{s}) = \text{lb of}$$

Therefore,  $cP dt$  represents the differential change in weight of the fuel due to consumption over the short time period  $dt$ . The total weight of the airplane  $W$  is the sum of the fixed structural and payload weights, along with the changing fuel weight. Hence, any change in  $W$  is assumed to be due to the change in fuel weight. Recall that  $W$  denotes the weight of the airplane at any instant. Also let  $W_0$  = gross weight of the airplane (weight with full fuel and payload),  $W_f$  = weight of the fuel load, and  $W_1$  = weight of the airplane *without* fuel. With these considerations, we have

---

page 503

$$\begin{aligned} W_1 &= W_0 - W_f \\ \text{and} \quad dW_f &= dW = -cP dt \\ \text{or} \quad dt &= -\frac{dW}{cP} \end{aligned} \tag{6.59}$$

The minus sign in Eq. (6.59) is necessary because  $dt$  is physically positive (time cannot move backward except in science fiction novels) while  $W$  is decreasing (hence  $dW$  is negative). Integrating Eq. (6.59) between time  $t = 0$ , where  $W = W_0$  (fuel tanks full), and time  $t = E$ , where  $W = W_1$  (fuel tanks empty), we find

$$\begin{aligned} \int_0^E dt &= - \int_{W_0}^{W_1} \frac{dW}{cP} \\ E &= \int_{W_1}^{W_0} \frac{dW}{cP} \end{aligned} \tag{6.60}$$

In Eq. (6.60),  $E$  is the endurance in seconds.

To obtain an analogous expression for range, multiply Eq. (6.59) by  $V_\infty$ :

$$V_\infty dt = -\frac{V_\infty dW}{cP} \tag{6.61}$$

In Eq. (6.61),  $V_\infty dt$  is the incremental distance  $ds$  covered in time  $dt$ .

$$ds = -\frac{V_\infty dW}{cP} \tag{6.62}$$

The total distance covered throughout the flight is equal to the integral of Eq. (6.62) from  $s = 0$ , where  $W = W_0$  (full fuel tank), to  $s = R$ , where  $W = W_1$  (empty fuel tank):


$$\int_0^R ds = - \int_{W_0}^{W_1} \frac{V_\infty}{cP} dW$$

or

$$R = \int_{W_1}^{W_0} \frac{V_\infty dW}{cP} \quad (6.63)$$

In Eq. (6.63),  $R$  is the range in consistent units, such as feet or meters.

Equations (6.60) and (6.63) can be evaluated graphically, as shown in Figs. 6.43a and b for range and endurance, respectively. We can calculate range accurately by plotting  $V_\infty/(cP)$  versus  $W$  and taking the area under the curve from  $W_1$  to  $W_0$ , as shown in Fig. 6.43a. Analogously, we can calculate endurance accurately by plotting  $(cP)^{-1}$  versus  $W$  and taking the area under the curve from  $W_1$  to  $W_0$ , as shown in Fig. 6.43b.

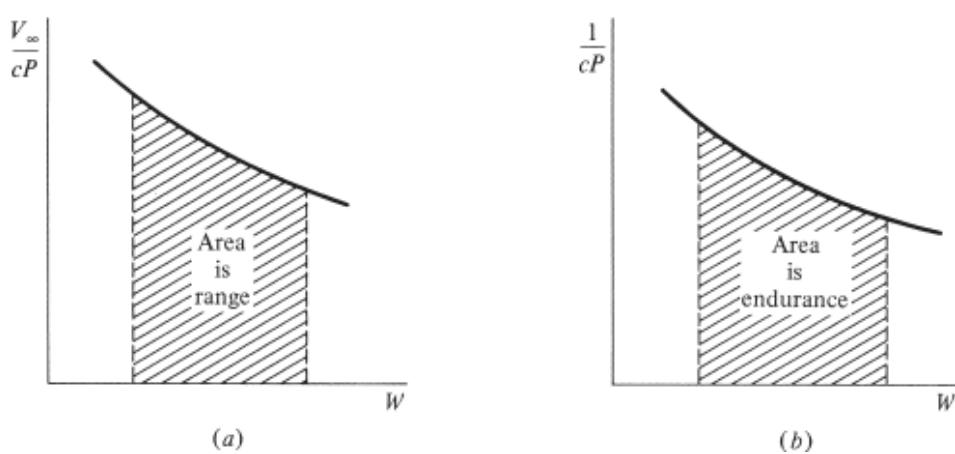

page 504

**Figure 6.43** Determination of range and endurance.

Equations (6.60) and (6.63) are accurate formulations for endurance and range. In principle they can include the entire flight—takeoff, climb, cruise, and landing—if the instantaneous values of  $W$ ,  $V_\infty$ ,  $c$ , and  $P$  are known at each point along the flight path. However, Eqs. (6.60) and (6.63), though accurate, are also long and tedious to evaluate by the method just discussed. Therefore, simpler but approximate analytic expressions for  $R$  and  $E$  are useful. Such formulas are developed in Sec. 6.12.3.

### 6.12.3 Breguet Formulas (Propeller-Driven Airplane)

For level, unaccelerated flight, we demonstrated in Sec. 6.5 that  $P_R = DV_\infty$ . To maintain steady conditions, the pilot has adjusted the throttle so that power available from the engine-propeller combination is just equal to the power

required:  $P_A = P_R = DV_\infty$ . In Eq. (6.59),  $P$  is the brake power output of the engine itself. Recall from Eq. (6.31) that  $P_A = \eta P$ , where  $\eta$  is the propeller efficiency. Thus

$$P = \frac{P_A}{\eta} = \frac{DV_\infty}{\eta} \quad (6.64)$$

Substitute Eq. (6.64) into (6.63):

$$R = \int_{W_1}^{W_0} \frac{V_\infty dW}{cP} = \int_{W_1}^{W_0} \frac{V_\infty \eta dW}{cDV_\infty} = \int_{W_1}^{W_0} \frac{\eta dW}{cD} \quad (6.65)$$

Multiplying Eq. (6.65) by  $W/W$  and noting that for steady, level flight  $W = L$ , we obtain

$$R = \int_{W_1}^{W_0} \frac{\eta}{cD} \frac{W}{W} dW = \int_{W_1}^{W_0} \frac{\eta}{cD} \frac{L}{W} dW \quad (6.66)$$

Unlike Eq. (6.63), which is exact, Eq. (6.66) now contains the direct assumption of level, unaccelerated flight. However, for practical use it will be further simplified by assuming that  $\eta$ ,  $L/D = C_L/C_D$ , and  $c$  are constant throughout the flight. This is a reasonable approximation for cruising flight conditions. Thus, Eq. (6.66) becomes

page 505

$$R = \frac{\eta}{c} \frac{C_L}{C_D} \int_{W_1}^{W_0} \frac{dW}{W}$$

$R = \frac{\eta}{c} \frac{C_L}{C_D} \ln \frac{W_0}{W_1}$

(6.67)

Equation (6.67) is a classic formula in aeronautical engineering; it is called the *Breguet range formula*, and it gives a quick, practical estimate for range that is generally accurate to within 10 to 20 percent. Keep in mind that like all proper physical derivations, Eq. (6.67) deals with consistent units. Hence,  $R$  is in feet or meters when  $c$  is in consumption of fuel in  $\text{lb}/(\text{ft} \cdot \text{lb}/\text{s})(\text{s})$  or  $\text{N}/(\text{J}/\text{s})(\text{s})$ , respectively, as discussed in Sec. 6.12.2. If  $c$  is given in terms of brake horsepower and if  $R$  is desired in miles, the proper conversions to consistent units should be made before using Eq. (6.67).

Look at Eq. (6.67). It says all the things that common sense would expect: To maximize range for a reciprocating-engine, propeller-driven airplane, we want the following:

1. The largest possible propeller efficiency  $\eta$ .
2. The lowest possible specific fuel consumption  $c$ .

3. The highest ratio of  $W_0/W_1$ , which is obtained with the largest fuel weight  $W_F$ .
4. Most importantly, flight at maximum  $L/D$ . This confirms our argument in Sec. 6.12.1 that for *maximum range*, we must fly at maximum  $L/D$ . Indeed, the Breguet range formula shows that range is directly proportional to  $L/D$ . This clearly explains why high values of  $L/D$  (high aerodynamic efficiency) have always been important in the design of airplanes. This importance was underscored in the 1970s by the increasing awareness of the need to conserve fuel.

A similar formula can be obtained for endurance. If we recall that  $P = DV_\infty/\eta$  and that  $W = L$ , Eq. (6.60) becomes

$$E = \int_{W_1}^{W_0} \frac{dW}{cP} = \int_{W_1}^{W_0} \frac{\eta}{c} \frac{dW}{DV_\infty} = \int_{W_1}^{W_0} \frac{\eta}{c} \frac{L}{DV_\infty} \frac{dW}{W}$$

Because  $L = W = \frac{1}{2}\rho_\infty V_\infty^2 SC_L$ ,  $V_\infty = \sqrt{2W/(\rho_\infty SC_L)}$ . Thus

$$E = \int_{W_1}^{W_0} \frac{\eta}{c} \frac{C_L}{C_D} \sqrt{\frac{\rho_\infty SC_L}{2}} \frac{dW}{W^{3/2}}$$

Assuming that  $C_L$ ,  $C_D$ ,  $\eta$ ,  $c$ , and  $\rho_\infty$  (constant altitude) are all constant, this equation becomes

$$E = -2 \frac{\eta}{c} \frac{C_L^{3/2}}{C_D} \left( \frac{\rho_\infty S}{2} \right)^{1/2} [W^{-1/2}]_{W_1}^{W_0}$$

$E = \frac{\eta}{c} \frac{C_L^{3/2}}{C_D} (2\rho_\infty S)^{1/2} (W_1^{-1/2} - W_0^{-1/2})$

(6.68)

or

Equation (6.68) is the *Breguet endurance formula*, where  $E$  is in seconds (consistent units).

Look at Eq. (6.68). It says that to maximize endurance for a reciprocating-engine, propeller-driven airplane, we want

1. The highest propeller efficiency  $\eta$ . page 506
2. The lowest specific fuel consumption  $c$ .
3. The highest fuel weight  $W_f$ , where  $W_0 = W_1 + W_f$ .
4. Flight at maximum  $C_L^{3/2}/C_D$ . This confirms our argument in Sec. 6.12.1 that for *maximum endurance*, we must fly at maximum  $C_L^{3/2}/C_D$ .

5. Flight at sea level, because  $E \propto \rho_{\infty}^{\frac{1}{2}}$  and  $\rho_{\infty}$  is largest at sea level.

It is interesting to note that subject to our approximations, endurance depends on altitude, whereas range [see Eq. (6.67)] is independent of altitude.

Remember that the discussion in this section pertains only to a combination of piston engine and propeller. For a jet-powered airplane, the picture changes, as discussed in Sec. 6.13.

### EXAMPLE 6.19

Estimate the maximum range and maximum endurance for the CP-1.

#### ■ Solution

The Breguet range formula is given by Eq. (6.67) for a propeller-driven airplane. This equation is

$$R = \frac{\eta}{c} \frac{C_L}{C_D} \ln \frac{W_0}{W_1}$$

with the specific fuel consumption  $c$  in consistent units, say (lb fuel)/(ft · lb/s) (s) or simply per foot. However, in Example 6.1 the SFC is given as 0.45 lb of fuel/(hp)(h). This can be changed to consistent units:

$$c = 0.45 \frac{\text{lb}}{(\text{hp})(\text{h})} \frac{1 \text{ hp}}{550 \text{ ft} \cdot \text{lb/s}} \frac{1 \text{ h}}{3600 \text{ s}} = 2.27 \times 10^{-7} \text{ ft}^{-1}$$

page 507


In Example 6.1 the variation of  $C_L / C_D = L / D$  was calculated versus velocity. The variation of  $C_L^{3/2} / C_D$  can be obtained in the same fashion. The results are plotted in Fig. 6.44.

From these curves,

$$\max \left( \frac{C_L}{C_D} \right) = 13.62 \quad \max \left( \frac{C_L^{3/2}}{C_D} \right) = 12.81$$

These are results pertaining to the aerodynamics of the airplane; even though the preceding plots were calculated at sea level (from Example 6.1), the *maximum* values of  $C_L / C_D$  and  $C_L^{3/2} / C_D$  are independent of altitude, velocity, and the like. They depend only on the aerodynamic design of the aircraft.

page 508

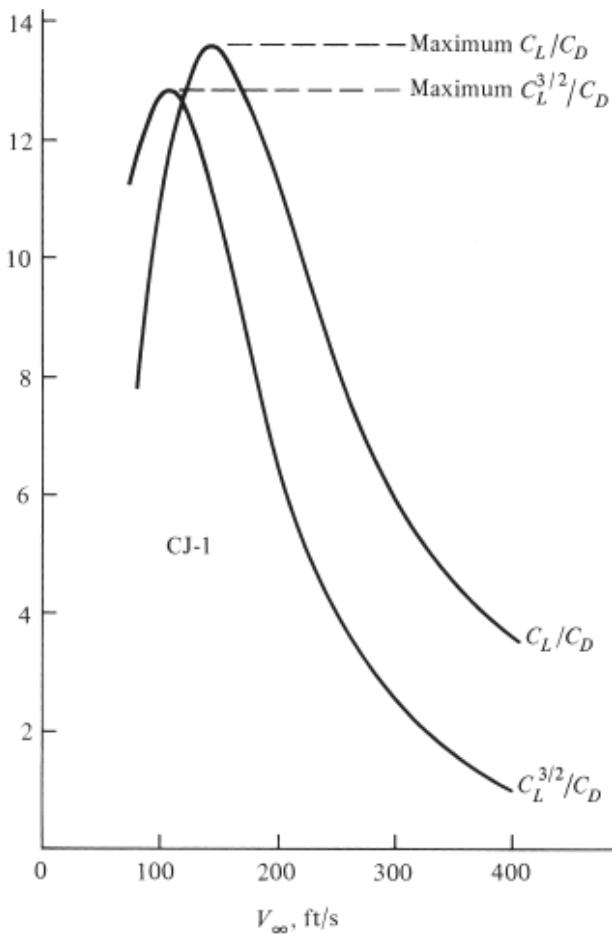

**Figure 6.44** Aerodynamic ratios for the CP-1 at sea level.

The gross weight of the CP-1 is  $W_0 = 2950$  lb. The fuel capacity given in Example 6.1 is 65 gal of aviation gasoline, which weighs 5.64 lb/gal. Hence, the weight of the fuel  $W_p = 65(5.64) = 367$  lb. Thus, the empty weight  $W_1 = 2950 - 367 = 2583$  lb.

Returning to Eq. (6.67), we have

$$R = \frac{\eta}{c} \frac{C_L}{C_D} \ln \frac{W_0}{W_1} = \frac{0.8}{2.27 \times 10^{-7}} (13.62) \left( \ln \frac{2950}{2583} \right)$$

$$R = 6.38 \times 10^6 \text{ ft}$$

Because 1 mi = 5280 ft,

$$R = \frac{6.38 \times 10^6}{5280} = 1207 \text{ mi}$$

The endurance is given by Eq. (6.68):

$$E = \frac{\eta}{c} \frac{C_L^{3/2}}{C_D} (2\rho_\infty S)^{1/2} (W_1^{-1/2} - W_0^{-1/2})$$

Because of the explicit appearance of  $\rho_\infty$  in the endurance equation, maximum endurance will occur at sea level,  $\rho_\infty = 0.002377$  slug /ft<sup>3</sup>. Hence

$$E = \frac{0.8}{2.27 \times 10^{-7}} (12.81) [2(0.002377)(174)]^{1/2} \left( \frac{1}{2583^{1/2}} - \frac{1}{2950^{1/2}} \right)$$

$$E = 5.19 \times 10^4 \text{ s}$$

Because 3600 s = 1 h,

$$E = \frac{5.19 \times 10^4}{3600} = 14.4 \text{ h}$$


---

## 6.13 RANGE AND ENDURANCE: JET AIRPLANE

For a jet airplane, the specific fuel consumption is defined as the *weight of fuel consumed per unit thrust per unit time*. Note that *thrust* is used here, in contradistinction to *power*, as in the previous case for a reciprocating engine–propeller combination. The fuel consumption of a jet engine physically depends on the thrust produced by the engine, whereas the fuel consumption of a reciprocating engine physically depends on the brake power produced. It is this simple difference that leads to different range and endurance formulas for a jet airplane. In the literature, *thrust-specific fuel consumption (TSFC)* for jet engines is commonly given as

$$\text{TSFC} = \frac{\text{lb of fuel}}{(\text{lb of thrust})(\text{h})}$$

Note the nonconsistent unit of time.

### 6.13.1 Physical Considerations

The maximum endurance of a jet airplane occurs for minimum pounds of fuel per hour, the same as for propeller-driven aircraft. However, for a jet,

$$\frac{\text{lb of fuel}}{\text{h}} = (\text{TSFC})(T_A)$$

page 509

where  $T_A$  is the thrust available produced by the jet engine. Recall that in steady, level, unaccelerated flight, the pilot has adjusted the throttle so that thrust available  $T_A$  just equals the thrust required  $T_R$ :  $T_A = T_R$ . Therefore,

minimum pounds of fuel per hour correspond to minimum thrust required. Hence, we conclude that


Maximum endurance for a jet airplane occurs when the airplane is flying at the minimum thrust required.

This condition is sketched in Fig. 6.45. Furthermore, in Sec. 6.3 minimum thrust required was shown to correspond to maximum  $L/D$ . Thus

Maximum endurance for a jet airplane occurs when the airplane is flying at a velocity such that  $C_L/C_D$  is at its maximum.

Now consider range. As before, maximum range occurs for a minimum number of pounds of fuel per mile. For a jet, on a dimensional basis,

$$\frac{\text{lb of fuel}}{\text{mi}} = \frac{(\text{TSFC})(T_A)}{V_\infty}$$

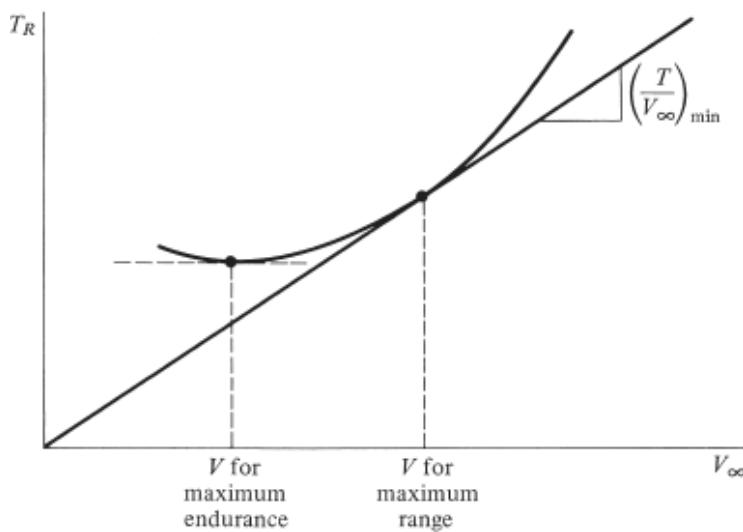

**Figure 6.45** Points of maximum range and endurance on the thrust-required curve.

Recalling that for steady, level flight  $T_A = T_R$ , we note that minimum pounds of fuel per mile correspond to a minimum  $T_R/V_\infty$ . In turn,  $T_R/V_\infty$  is the slope of a line through the origin and intersecting the thrust-required curve; its minimum value occurs when the line becomes tangent to the thrust-required curve, as sketched in Fig. 6.45. The aerodynamic condition holding at this tangent point is obtained as follows. Recall that for steady, level flight  $T_R = D$ . Then

$$\frac{T_R}{V_\infty} = \frac{D}{V_\infty} = \frac{\frac{1}{2}\rho_\infty V_\infty^2 S C_D}{V_\infty} = \frac{1}{2}\rho_\infty V_\infty S C_D$$

page 510

Because  $V_\infty = \sqrt{2W/(\rho_\infty S C_L)}$ , we have

$$\frac{T_R}{V_\infty} = \frac{1}{2}\rho_\infty S \sqrt{\frac{2W}{\rho_\infty S C_L}} C_D \propto \frac{1}{C_L^{1/2}/C_D}$$

Hence, minimum  $T_R/V_\infty$  corresponds to maximum  $C_L^{1/2}/C_D$ . In turn, we conclude that

Maximum range for a jet airplane occurs when the airplane is flying at a velocity such that  $C_L^{1/2}/C_D$  is at its maximum.

### 6.13.2 Quantitative Formulation

Let  $c_t$  be the thrust-specific fuel consumption in consistent units:

$$\frac{\text{lb of fuel}}{(\text{lb of thrust})(\text{s})} \quad \text{or} \quad \frac{\text{N of fuel}}{(\text{N of thrust})(\text{s})}$$

Let  $dW$  be the elemental change in weight of the airplane due to fuel consumption over a time increment  $dt$ . Then

$$dW = -c_t T_A dt$$

or

$$dt = \frac{-dW}{c_t T_A} \quad (6.69)$$

Integrating Eq. (6.69) between  $t = 0$ , where  $W = W_0$ , and  $t = E$ , where  $W = W_1$ , we obtain

$$E = - \int_{W_0}^{W_1} \frac{dW}{c_t T_A} \quad (6.70)$$

Recalling that  $T_A = T_R = D$  and  $W = L$ , we have

$$E = \int_{W_1}^{W_0} \frac{1}{c_t D} \frac{L}{W} dW \quad (6.71)$$

With the assumption of constant  $c_t$  and  $C_L/C_D = L/D$ , Eq. (6.71) becomes

$E = \frac{1}{c_t C_D} \ln \frac{W_0}{W_1}$

page 511

(6.72)

Note from Eq. (6.72) that for maximum endurance for a jet airplane, we want

1. Minimum thrust-specific fuel consumption  $c_t$ .
2. Maximum fuel weight  $W_f$ .
3. Flight at maximum  $L/D$ . This confirms our argument in Sec. 6.13.1 that for maximum endurance for a jet, we must fly so that  $L/D$  is at its maximum.

Note that subject to our assumptions,  $E$  for a jet does not depend on  $\rho_\infty$ ; that is,  $E$  is independent of altitude.

Now consider range. Returning to Eq. (6.69) and multiplying by  $V_\infty$ , we get

$$ds = V_\infty dt = -\frac{V_\infty dW}{c_t T_A} \quad (6.73)$$

where  $ds$  is the increment in distance traversed by the jet over the time increment  $dt$ . Integrating Eq. (6.73) from  $s = 0$ , where  $W = W_0$ , to  $s = R$ , where  $W = W_1$ , we have

$$R = \int_0^R ds = - \int_{W_0}^{W_1} \frac{V_\infty dW}{c_t T_A} \quad (6.74)$$

However, again noting that for steady, level flight, the engine throttle has been adjusted such that  $T_A = T_R$  and recalling from Eq. (6.16) that  $T_R = W/(C_L/C_D)$ , we rewrite Eq. (6.74) as

$$R = \int_{W_1}^{W_0} \frac{V_\infty}{c_t} \frac{C_L}{C_D} \frac{dW}{W} \quad (6.75)$$

Because  $V_\infty = \sqrt{2W/(\rho_\infty S C_L)}$ , becomes

$$R = \int_{W_1}^{W_0} \sqrt{\frac{2}{\rho_\infty S}} \frac{C_L^{1/2}/C_D}{c_t} \frac{dW}{W^{1/2}} \quad (6.76)$$

Again assuming constant  $c_t$ ,  $C_L$ ,  $C_D$ , and  $\rho_\infty$  (constant altitude), we rewrite Eq. (6.76) as

$$R = \sqrt{\frac{2}{\rho_\infty S}} \frac{C_L^{1/2}}{C_D} \frac{1}{c_t} \int_{W_1}^{W_0} \frac{dW}{W^{1/2}}$$

$R = 2 \sqrt{\frac{2}{\rho_\infty S}} \frac{1}{c_t} \frac{C_L^{1/2}}{C_D} (W_0^{1/2} - W_1^{1/2})$

(6.77)

Note from Eq. (6.77) that to obtain maximum range for a jet airplane, we want the following:

1. Minimum thrust-specific fuel consumption  $c_t$ .

2. Maximum fuel weight  $W_f$
3. Flight at maximum  $C_L^{1/2}/C_D$  This confirms our argument in Sec. 6.13.1 that for maximum range, a jet must fly at a velocity such that  $C_L^{1/2}/C_D$  is at its maximum.
4. Flight at high altitudes—that is, low  $\rho_\infty$ . Of course Eq. (6.77) says that  $R$  becomes infinite as  $\rho_\infty$  decreases to zero (that is, as we approach outer space). This is physically ridiculous, however, because an airplane requires the atmosphere to generate lift and thrust. Long before outer space is reached, the assumptions behind Eq. (6.77) break down. Moreover, at extremely high altitudes ordinary turbojet performance deteriorates and  $c_t$  begins to increase. All we can conclude from Eq. (6.77) is that range for a jet is poorest at sea level and increases with altitude up to a point. Typical cruising altitudes for subsonic commercial jet transports are from 30,000 to 40,000 ft; for supersonic transports they are from 50,000 to 60,000 ft.

### EXAMPLE 6.20

Estimate the maximum range and endurance for the CJ-1.

#### ■ Solution

From the calculations of Example 6.1, the variation of  $C_L/C_D$  and  $C_L^{1/2}/C_D$  can be plotted versus velocity, as given in Fig. 6.46. From these curves, for the CJ-1,

$$\max \left( \frac{C_L^{1/2}}{C_D} \right) = 23.4$$

$$\max \left( \frac{C_L}{C_D} \right) = 16.9$$


In Example 6.1 the specific fuel consumption is given as TSFC = 0.6 (lb fuel)/(lb thrust)(h). In consistent units,

$$c_t = 0.6 \frac{\text{lb}}{(\text{lb})(\text{h})} \frac{1\text{h}}{3600 \text{ s}} = 1.667 \times 10^{-4} \text{ s}^{-1}$$

Also, the gross weight is 19,815 lb. The fuel capacity is 1119 gal of kerosene, where 1 gal of kerosene weighs 6.67 lb. Thus,  $W_f = 1119(6.67) = 7463$  lb.

Hence, the empty weight is  $W_1 = W_0 - W_f = 19,815 - 7463 = 12,352$  lb.

The range of a jet depends on altitude, as shown by Eq. (6.77). Assume that the cruising altitude is 22,000 ft, where  $\rho_\infty = 0.001184$  slug /ft<sup>3</sup>. From Eq. (6.77), using information from Example 6.1, we obtain

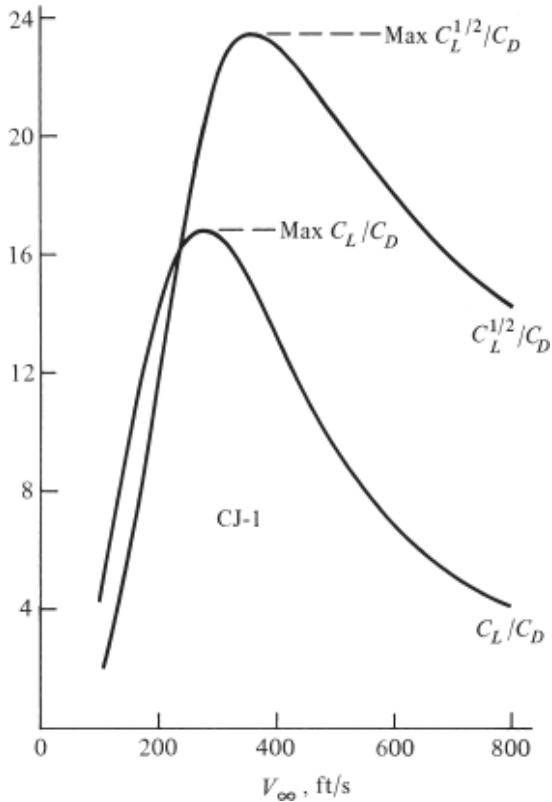

**Figure 6.46** Aerodynamic ratios for the CJ-1 at sea level.

$$\begin{aligned}
 R &= 2\sqrt{\frac{2}{\rho_\infty S}} \frac{1}{c_t} \frac{C_L^{1/2}}{C_D} (W_0^{1/2} - W_1^{1/2}) \\
 &= 2\sqrt{\frac{2}{0.001184(318)}} \left(\frac{1}{1.667 \times 10^{-4}}\right) (23.4)(19,815^{1/2} - 12,352^{1/2}) \\
 &\boxed{R = 19.2 \times 10^6 \text{ ft}}
 \end{aligned}$$

In miles,

$$R = \frac{19.2 \times 10^6}{5280} = \boxed{3630 \text{ mi}}$$

The endurance can be found from Eq. (6.72):

$$E = \frac{1}{c_i C_D} \ln \frac{W_0}{W_1} = \frac{1}{1.667 \times 10^{-4}} (16.9) \left( \ln \frac{19,815}{12,352} \right)$$

$$E = 4.79 \times 10^{-4} \text{ s}$$

or in hours  $E = \frac{4.79 \times 10^4}{3600} = [13.3 \text{ h}]$

---

## 6.14 RELATIONS BETWEEN $C_{D,0}$ AND $C_{D,i}$

In the previous sections we have observed that various aspects of the performance of different types of airplanes depend on the aerodynamic ratios  $C_L^{1/2}/C_D$ ,  $C_L/C_D$ , or  $C_L^{3/2}/C_D$ . Moreover, in Sec. 6.3 we proved that at minimum  $T_R$ , drag due to lift equals zero-lift drag; that is,  $C_{D,0} = C_{D,i}$ . Analogously, for minimum  $P_R$  we proved in Sec. 6.5 that  $C_{D,0} = C_{D,i}$ . In this section such results are obtained strictly from aerodynamic considerations. The relations between  $C_{D,0}$  and  $C_{D,i}$  depend purely on the conditions for maximum  $C_L^{1/2}/C_D$ ,  $C_L/C_D$ , or  $C_L^{3/2}/C_D$ ; their derivations do not have to be associated with minimum  $T_R$  or  $P_R$  as they were in Secs. 6.3 and 6.5.

For example, consider maximum  $L/D$ . Recalling that [page 514](#)  $C_D = C_{D,0} + C_L^2/(\pi e AR)$ , we can write

$$\frac{C_L}{C_D} = \frac{C_L}{C_{D,0} + C_L^2/(\pi e AR)} \quad (6.78)$$

For maximum  $C_L/C_D$ , differentiate Eq. (6.78) with respect to  $C_L$  and set the result equal to 0:

$$\frac{d(C_L/C_D)}{dC_L} = \frac{C_{D,0} + C_L^2/(\pi e AR) - C_L[2C_L/(\pi e AR)]}{[C_{D,0} + C_L^2/(\pi e AR)]^2} = 0$$

Thus  $C_{D,0} + \frac{C_L^2}{\pi e AR} - \frac{2C_L^2}{\pi e AR} = 0$   
 or  $C_{D,0} = \frac{C_L^2}{\pi e AR} \quad (6.79)$

$$C_{D,0} = C_{D,i} \quad \text{for} \quad \left( \frac{C_L}{C_D} \right)_{\max}$$

Hence, Eq. (6.79), which is identical to Eq. (6.22), simply stems from the fact that  $L/D$  is maximum. The fact that it also corresponds to minimum  $T_R$  is only

because  $T_R$  happens to be minimum when  $L/D$  is maximum.

Now consider maximum  $C_L^{3/2}/C_D$ . By setting  $d(C_L^{3/2})/dC_L = 0$ , a derivation similar to the previous one yields

$$C_{D,0} = \frac{1}{3}C_{D,i} \quad \text{for} \quad \left(\frac{C_L^{3/2}}{C_D}\right)_{\max} \quad (6.80)$$

Again Eq. (6.80), which is identical to Eq. (6.30), simply stems from the fact that  $C_L^{3/2}/C_D$  is maximum. The fact that it also corresponds to minimum  $P_R$  is only because  $P_R$  happens to be minimum when  $C_L^{3/2}/C_D$  is maximum.

Now consider maximum  $C_L^{3/2}/C_D$ . By setting  $d(C_L^{3/2})/dC_L = 0$ , a derivation similar to the previous one yields

$$C_{D,0} = \frac{1}{3}C_{D,i} \quad \text{for} \quad \left(\frac{C_L^{3/2}}{C_D}\right)_{\max} \quad (6.80)$$

Again Eq. (6.80), which is identical to Eq. (6.30), simply stems from the fact that  $C_L^{3/2}/C_D$  is maximum. The fact that it also corresponds to minimum PR is only because PR happens to be minimum when  $C_L^{3/2}/C_D$  is maximum.

Similarly, when  $C_L^{1/2}/C_D$  is maximum, setting  $d(C_L^{1/2})/dC_L = 0$  yields

$$C_{D,0} = 3C_{D,i} \quad \text{for} \quad \left(\frac{C_L^{1/2}}{C_D}\right)_{\max} \quad (6.81)$$

You should not take Eqs. (6.80) and (6.81) for granted; derive them yourself.

We stated in Example 6.18 that the *maximum values* of [page 515](#)  $C_L^{1/2}/C_D$ ,  $C_L/C_D$ , and  $C_L^{3/2}/C_D$  are independent of altitude, velocity, and so on; rather, they depend only on the aerodynamic design of the aircraft. The results of this section allow us to prove this statement, as follows.

First consider again the case of maximum  $C_L/C_D$ . From Eq. (6.79),

$$C_{D,0} = C_{D,i} = \frac{C_L^2}{\pi e AR} \quad (6.82)$$

$$\text{Thus} \quad C_L = \sqrt{\pi e A R C_{D,0}} \quad (6.83)$$

Substituting Eqs. (6.82) and (6.83) into Eq. (6.78), we obtain

$$\frac{C_L}{C_D} = \frac{C_L}{2C_L^2/(\pi e AR)} = \frac{\pi e AR}{2C_L} = \frac{\pi e AR}{2\sqrt{\pi e A R C_{D,0}}} \quad (6.84)$$

Hence, the value of the maximum  $C_L/C_D$  is obtained from Eq. (6.84) as

$$\left(\frac{C_L}{C_D}\right)_{\max} = \frac{(C_{D,0}\pi e AR)^{1/2}}{2C_{D,0}} \quad (6.85)$$

Note from Eq. (6.85) that  $(C_L/C_D)_{\max}$  depends only on  $e$ , AR, and  $C_{D,0}$ , which are aerodynamic design parameters of the airplane. In particular,  $(C_L/C_D)_{\max}$  does not depend on altitude. However, note from Figs. 6.44 and 6.46 that maximum  $C_L/C_D$  occurs at a certain velocity, and the velocity at which  $(C_L/C_D)_{\max}$  is obtained *does* change with altitude.

In the same vein, it is easily shown that

$$\left(\frac{C_L}{C_D}\right)_{\max} = \frac{\left(\frac{1}{3} C_{D,0} \pi e \text{AR}\right)^{1/4}}{\frac{4}{3} C_{D,0}} \quad (6.86)$$

and

$$\left(\frac{C_L^{3/2}}{C_D}\right)_{\max} = \frac{(3C_{D,0} \pi e \text{AR})^{3/4}}{4C_{D,0}} \quad (6.87)$$

Prove this yourself.

### EXAMPLE 6.21

From the equations given in this section, directly calculate  $(C_L/C_D)_{\max}$  and  $(C_L^{3/2}/C_D)_{\max}$  for the CP-1.

#### ■ Solution

page 516

From Eq. (6.85),

$$\left(\frac{C_L}{C_D}\right)_{\max} = \frac{(C_{D,0} \pi e \text{AR})^{1/2}}{2C_{D,0}} = \frac{[0.025\pi(0.8)(7.37)]^{1/2}}{2(0.025)} = \boxed{13.6}$$

From Eq. (6.87),

$$\left(\frac{C_L^{3/2}}{C_D}\right)_{\max} = \frac{(3C_{D,0} \pi e \text{AR})^{3/4}}{4C_{D,0}} = \frac{[(3)(0.025)\pi(0.8)(7.37)]^{3/4}}{4(0.025)} = \boxed{12.8}$$

Return to Example 6.19, where the values of  $(C_L/C_D)_{\max}$  and  $(C_L^{3/2}/C_D)_{\max}$  were obtained graphically—that is, by plotting  $C_L/C_D$  and  $C_L^{3/2}/C_D$  and finding their peak values. Note that the results obtained from Eqs. (6.85) and (6.87) agree with the graphical values obtained in Example 6.19 (as they should); however, the use of Eqs. (6.85) and (6.87) is much easier and quicker than plotting a series of numbers and finding the maximum.

## EXAMPLE 6.22

---

From the equations given in this section, directly calculate  $(C_L^{1/2}/C_D)_{\max}$  and  $(C_L/C_D)_{\max}$  for the CJ-1.

### ■ Solution

From Eq. (6.77),

$$\left(\frac{C_L^{1/2}}{C_D}\right)_{\max} = \frac{\left(\frac{1}{3} C_{D,0} \pi e AR\right)^{1/4}}{\frac{4}{3} C_{D,0}} = \frac{\left[\frac{1}{3}(0.02)\pi(0.81)(8.93)\right]^{1/4}}{\frac{4}{3}(0.02)} = \boxed{23.4}$$

From Eq. (6.76),

$$\left(\frac{C_L}{C_D}\right)_{\max} = \frac{(\pi e AR C_{D,0})^{1/2}}{2C_{D,0}} = \frac{[\pi(0.81)(8.93)(0.02)]^{1/2}}{2(0.02)} = \boxed{16.9}$$

These values agree with the graphically obtained maximums in Example 6.20.

## EXAMPLE 6.23

---

Using the result from this section and Eqs. (6.44), (6.52), and (6.53), analytically calculate

- a.  $V_{\max}$  for the CP-1 at sea level.
- b.  $(R/C)_{\max}$  for the CP-1 at sea level.
- c.  $V_{\max}$  for the CJ-1 at sea level.
- d.  $(R/C)_{\max}$  for the CJ-1 at sea level.

page 517

Compare with the graphical solutions obtained in Examples 6.2, 6.4, and 6.10.

### ■ Solution

- a. The maximum velocity is given by Eq. (6.44), repeated here:

$$V_{\max} = \left[ \frac{\left(\frac{T_A}{W}\right)_{\max} \left(\frac{W}{S}\right) + \left(\frac{W}{S}\right) \sqrt{\left(\frac{T_A}{W}\right)_{\max}^2 - \frac{4C_{D,0}}{\pi e AR}}}{\rho_{\infty} C_{D,0}} \right]^{1/2}$$

For the CP-1, from the data given in Example 6.1,

$$\frac{W}{S} = \frac{2950}{174} = 16.95 \text{ lb/ft}^2$$

$$\eta P = 0.8(230)(550) = 1.012 \times 10^5 \frac{\text{ft} \cdot \text{lb}}{\text{s}}$$

From Eq. (6.85) and the result from Example 6.21,

$$\frac{4C_{D,0}}{\pi e AR} = \frac{1}{(L/D)_{\max}^2} = \frac{1}{13.6^2} = 5.4066 \times 10^{-3}$$

$$\text{Also, } \rho_\infty C_{D,0} = 0.002377(0.025) = 5.9425 \times 10^{-5} \text{ slug/ft}^3$$

Power available and thrust available are related by

$$T_A V_\infty = P_A = \eta P$$

page 518

For maximum  $T_A$  and  $P_A$ ,  $V_\infty = V_{\max}$ . Hence

$$(T_A)_{\max} = \frac{\eta P}{V_{\max}}$$

or  $\left(\frac{T_A}{W}\right)_{\max} = \frac{\eta P}{W V_{\max}} = \frac{1.012 \times 10^5}{2950} \frac{1}{V_{\max}}$

or  $\left(\frac{T_A}{W}\right)_{\max} = \frac{34.305}{V_{\max}}$  (E6.22.1)

Inserting the preceding data into Eq. (6.44), we have

$$V_{\max} = \left[ \frac{(T_A/W)_{\max}(16.95) + 16.95\sqrt{(T_A/W)_{\max}^2 - 5.4066 \times 10^{-3}}}{5.9425 \times 10^{-5}} \right]^{1/2} \quad (\text{E6.22.2})$$

$$\text{or } V_{\max} = 558.97 \left[ \left(\frac{T_A}{W}\right)_{\max} + \sqrt{\left(\frac{T_A}{W}\right)_{\max}^2 - 5.4066 \times 10^{-3}} \right]^{1/2}$$

Equations (E 6.22.1) and (E 6.22.2) must be solved for  $V_{\max}$  by trial and error. Assume  $V_{\max}$ , calculate  $(T_A/W)_{\max}$  from Eq. (E 6.22.1), insert this into Eq. (E 6.22.2), calculate  $V_{\max}$  from Eq. (E 6.22.2), and see if this matches the originally assumed  $V_{\max}$ . If not, assume another value of  $V_{\max}$ , and try again. A few iterations are tabulated in the following:

$V_{\max}$ (ft/s) (assumed)	$\left(\frac{T_A}{W}\right)_{\max}$ [from Eq. (E 6.22.1)]	$V_{\max}$ (ft/s) [from Eq. (E 6.22.2)]
265	0.1295	271.6
270	0.12706	268.5
269	0.1275	269.1

From this we have calculated for the CP-1 at sea level,

page 519

$$V_{\max} = \boxed{269 \text{ ft/s}}$$

This is to be compared with  $V_{\max} = 265$  ft /s as obtained from the graphical solution in Example 6.4, which is limited by “graphical accuracy.” The analytical solution of  $V_{\max} = 269$  ft /s obtained here is inherently more accurate.

b. The maximum rate of climb for a propeller-driven airplane is given by Eq. (6.53), repeated here:

$$(R/C)_{\max} = \left(\frac{\eta P}{W}\right)_{\max} - 0.8776 \sqrt{\frac{W/S}{\rho_{\infty} C_{D,0}}} \frac{1}{(L/D)_{\max}^{3/2}}$$

We have already obtained the following data:

$$\left(\frac{\eta P}{W}\right)_{\max} = \frac{1.012 \times 10^5}{2950} = 34.305 \text{ ft/s}$$

$$\rho_{\infty} C_{D,0} = 5.9425 \times 10^{-5} \text{ slug/ft}^3$$

$$\frac{W}{S} = 16.95 \text{ lb/ft}^2$$

$$\left(\frac{L}{D}\right)_{\max} = 13.6$$

Hence Eq. (6.53) becomes

$$(R/C)_{\max} = 34.305 - 0.8776 \sqrt{\frac{16.95}{5.9425 \times 10^{-5}}} \frac{1}{(13.6)^{3/2}}$$

or

$$(R/C)_{\max} = 34.305 - 9.345 = 24.96 \text{ ft/s}$$

This is to be compared with  $(R/C)_{\max} = 1500$  ft /min as read from the peak of the graph in Fig. 6.22 from Example 6.10.

c. From the data given about the CJ-1 in Example 6.1, we have

page 520

$$\left(\frac{T_A}{W}\right)_{\max} = \frac{7300}{19,815} = 0.3684$$

$$\frac{W}{S} = \frac{19,815}{318} = 62.31 \text{ lb/ft}^2$$

$$\rho_\infty C_{D,0} = 0.002377(0.02) = 4.754 \times 10^{-5} \text{ slug/ft}^3$$

Also, from Example 6.22, we have

$$\frac{4C_{D,0}}{\pi e AR} = \frac{1}{(L/D)_{\max}^2} = \frac{1}{(16.9)^2} = 3.501 \times 10^{-3}$$

Substituting these data in Eq. (6.44), we obtain

$$V_{\max} = \left[ \frac{\left(\frac{T_A}{W}\right)_{\max} \left(\frac{W}{S}\right) + \left(\frac{W}{S}\right) \sqrt{\left(\frac{T_A}{W}\right)_{\max}^2 - \frac{4C_{D,0}}{\pi e AR}} }{\rho_\infty C_{D,0}} \right]^{1/2}$$

$$= \left[ \frac{0.3684(62.31) + 62.31 \sqrt{(0.3684)^2 - 3.501 \times 10^{-3}}}{4.754 \times 10^{-5}} \right]^{1/2}$$

or

$$V_{\max} = 979.5 \text{ ft/s}$$

This is to be compared with  $V_{\max} = 975$  ft / s obtained by graphical means in Example 6.2.

d. The maximum rate of climb for a jet airplane is given by Eq. (6.52), repeated here:

$$(R/C)_{\max} = \left[ \frac{(W/S)Z}{3\rho_\infty C_{D,0}} \right]^{1/2} \left( \frac{T}{W} \right)_{\max}^{3/2} \left[ 1 - \frac{Z}{6} - \frac{3}{2(T/W)_{\max}^2 (L/D)_{\max}^2 Z} \right]$$

where

$$Z = 1 + \sqrt{1 + \frac{3}{(L/D)_{\max}^2 (T/W)_{\max}^2}}$$

Putting in the data for the CJ-1, we have

$$Z = 1 + \sqrt{1 + \frac{3}{(16.9)^2 (0.3684)^2}} = 2.038$$

The ratio of lift to drag is a direct measure of the aerodynamic efficiency of a given airplane. For example, if for a given airplane  $(L/D)_{\max} = 15$ , this means that the airplane can lift 15 lb of weight at a cost of only 1 lb of drag—quite a leverage. Indeed, for atmospheric flight, the wing of an airplane (usually its strongest lifting component by far) can be loosely likened to a lever that allows us to lift far more weight than we have to expend in thrust from the engine (to counterbalance the drag). The evolution of the airplane in the 20th century has been characterized by a steady increase in  $(L/D)_{\max}$ ; this evolution is discussed at length in Sec. 6.26. Some values of  $(L/D)_{\max}$  for typical airplanes are tabulated here:

Airplane	$(L/D)_{\max}$
Wright Flyer (1903)	5.7
French SPAD XIII (World War I)	7.4
Douglas DC-3 (1930s)	14.7
Boeing 747 (contemporary)	20

The importance of  $(L/D)_{\max}$  as a parameter in airplane design cannot be overstated—it is one of the driving aspects that dictate the configuration of the airplane. Airplane designers usually try to squeeze as much  $(L/D)_{\max}$  into a new airplane as they can, subject to compromises with other aspects of the design. We have already seen that  $(L/D)_{\max}$  plays a role in dictating  $V_{\max}$ ,  $(R/C)_{\max}$ , and especially range and endurance. Historically, the quest for greater range has been the primary factor that has driven up the design value of  $(L/D)_{\max}$ . (See Anderson, *A History of Aerodynamics and Its Impact on Flying Machines*, Cambridge University Press, New York, 1997.)

Strictly speaking, we have seen in Secs. 6.12 and 6.13 that the value of  $(L/D)_{\max} = (C_L/C_D)_{\max}$  dictates maximum range for a propeller-driven airplane and maximum endurance for a jet airplane, whereas  $(L/D)_{\max} = (C_L/C_D)_{\max}$  dictates maximum endurance for a propeller-driven airplane and  $(C_L^{1/2}/C_D)_{\max}$  dictates maximum range for a jet airplane. However, the geometric and aerodynamic features of an airplane that maximize  $C_L/C_D$  will also maximize  $C_L^{1/2}/C_D$  and  $C_L^{3/2}/C_D$ , as seen in Eqs. (6.85) through (6.87). To obtain maximum values of these aerodynamic ratios, Eqs. (6.85) through (6.87) clearly indicate that the airplane designer should, as much as possible,

1. Reduce the zero-lift drag coefficient  $C_{D,0}$ .


2. Increase the Oswald efficiency factor  $e$ .
3. Increase the aspect ratio AR.

Of course, this last point—increasing the aspect ratio—makes sense only for subsonic flight. We have discussed previously that for transonic and supersonic airplanes, wave drag is dominant, and wave drag can be somewhat reduced by using low-aspect-ratio wings. For high-speed airplanes designed for cruising at supersonic speeds, the design wing aspect ratio is driven by considerations other than those for maximum range in subsonic flight. The low-aspect-ratio, Mach 2, Lockheed F-104 shown in Fig. 4.52 is a case in point.

The value of  $(L/D)_{\max}$  is fixed by the aerodynamics and geometry of the given airplane configuration via  $C_{D,0}$ ,  $e$ , and AR. Hence,  $(L/D)_{\max}$  does not change with altitude. However, the *velocity* at which the airplane must fly to achieve  $(L/D)_{\max}$  does vary with altitude. To explain why this is so, first recall that  $L/D$  is a function of the airplane's angle of attack. For example, the variation of  $L/D$  versus  $\alpha$  for the special-purpose F-111 TACT aircraft (illustrated in Fig. 5.33) is shown in Fig. 6.47. Note that  $(L/D)_{\max}$  occurs at an angle of attack of  $6^\circ$ ; at this angle of attack,  $C_L = 0.44$ . If the airplane is flying at sea level, in order to fly at  $(L/D)_{\max}$ , it must be flying at  $\alpha = 6^\circ$  with  $C_L = 0.44$ . For the given weight, this condition fixes the velocity at which the airplane must fly via the relation  $W = q_\infty SC_L$ , or

$$V_\infty = \sqrt{\frac{2W}{\rho_\infty SC_L}} \quad (6.88)$$

To fly at  $(L/D)_{\max}$  higher altitude, the airplane must still fly at  $\alpha = 6^\circ$  with  $C_L = 0.44$ . However, because  $\rho_\infty$  has decreased,  $V_\infty$  must be larger, as given by Eq. (6.88). That is,  $V_\infty$  must be increased to just the right value so that the lift remains equal to the weight for the fixed  $C_L$  at  $\alpha = 6^\circ$ . As a result, the velocity required to fly at  $(L/D)_{\max}$  increases with altitude.

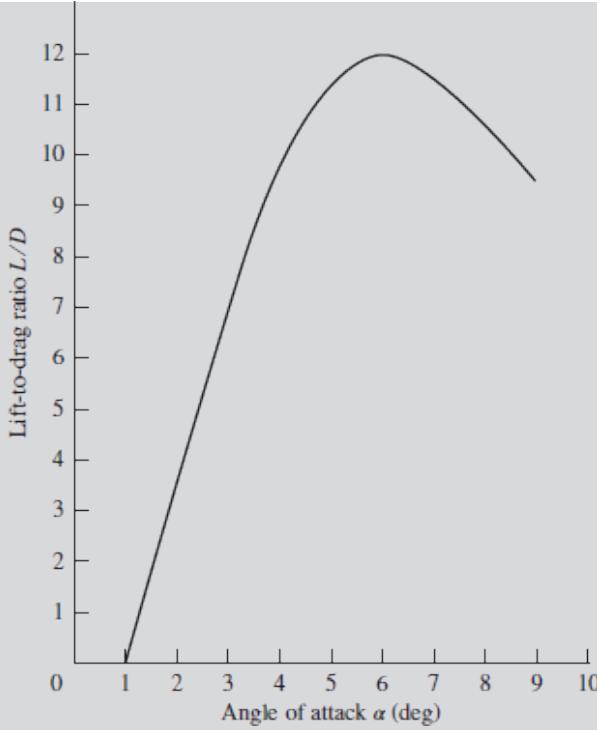

**Figure 6.47** Flight data for lift-to-drag ratio versus angle of attack for the F-111 TACT airplane shown in Fig. 5.33.  $M_\infty = 0.7$ . Wing sweep angle =  $26^\circ$ .

(Source: Data from Baldwin *et al.*, Symposium on Transonic Aircraft Technology (TACT), *Air Force Flight Dynamics Laboratory Technical Report AFFDL-TR-78-100*, Wright-Patterson Air Force Base, Ohio, 1978.)

Although the value of  $(L/D)_{\max}$  is very important in airplane design, *flight* at  $(L/D)_{\max}$  is not always the holy grail of aeronautical engineering that it may seem. As usual, the airplane designer is faced with a compromise, this time involved with  $V_{\max}$  relative to the velocity for  $(L/D)_{\max}$ . The velocity for  $(L/D)_{\max}$  can be substantially *smaller* than the maximum velocity. For example, from Fig. 6.46, the velocity at sea level for  $(L/D)_{\max}$  for the CJ-1 is about 300 ft/s, whereas from Fig. 6.26,  $V_{\max} = 975$  ft/s—a considerable difference. For the CP-1 at sea level, from Fig. 6.44 the velocity for  $(L/D)_{\max}$  is about 150 ft/s, whereas from Fig. 6.21a,  $V_{\max} = 265$  ft/s at sea level. If the pilot of the CP-1 chooses to fly very efficiently by flying at  $V_\infty = 150$  ft/s so that  $L/D$  is at its maximum value, then the flight will take almost 75 percent longer to go from point *A* to *B* compared to flying at  $V_{\max}$ . Because time is valuable (indeed, most

page 522

passengers fly to save time), the design cruise speed for a given airplane may not correspond to  $(L/D)_{\max}$ . The airplane designer must be ready to accept a higher-speed cruise with an  $(L/D)_{\max}$  that is less than the value of  $(L/D)_{\max}$ . However, this does not diminish the importance of  $(L/D)_{\max}$  as a design parameter. For example, an airplane with a high value of  $(L/D)_{\max}$  will still have comparatively high values of  $(L/D)_{\max}$  while flying at velocities other than that for  $(L/D)_{\max}$ . Also, the late Bernard Carson, a professor of aerospace engineering at the U.S. Naval Academy, suggested a rational compromise that combines the concept of long range obtained by flying at the slower velocity for  $(L/D)_{\max}$  and the shorter flight times obtained by flying at higher speeds. His analysis leads to an optimum compromise for flight velocity called the *Carson speed*, which can be shown to be a factor of 1.32 higher than the velocity for  $(L/D)_{\max}$ . The details can be found in Anderson, *Aircraft Performance and Design*, McGraw-Hill, New York, 1999.

and

$$\begin{aligned} (R/C)_{\max} &= \left[ \frac{(62.31)(2.038)}{3(4.754 \times 10^{-5})} \right]^{1/2} (0.3684)^{3/2} \left[ 1 - \frac{2.038}{6} - \frac{3}{2(0.3684)^2(16.9)^2(2.038)} \right] \\ &= 135.28 \text{ ft/s} \end{aligned}$$

or  $(R/C)_{\max} = 135.28(60) = 8117 \text{ ft/min}$

This is to be compared with  $(R/C)_{\max} = 8100 \text{ ft/min}$  read from the peak of the graph in Fig. 6.33 from Example 6.10.

### EXAMPLE 6.24

Consider an airplane with  $C_{D,0} = 0.025$ ,  $AR = 7.37$ , and  $e = 0.80$ . The page 523 airplane is flying at conditions such that its lift coefficient is  $C_L = 0.228$ . Calculate the ratio of lift to drag at this condition.

#### ■ Solution

$$C_D = C_{D,0} + \frac{C_L^2}{\pi e AR}$$

Thus

$$\frac{C_L}{C_D} = \frac{C_L}{C_{D,0} + \frac{c_L^2}{\pi e AR}} = \frac{0.228}{0.025 + \frac{(0.228)^2}{\pi(0.80)(7.37)}}$$

$$\frac{C_L}{C_D} = 8.2$$


We make two points about this example:

1. The design characteristics of  $C_{D,0}$ , AR, and  $e$  are identical to those of the CP-1 given in Example 6.1. So we can check our answer, obtained here analytically, with the numerical calculations of Example 6.1. Specifically, in the tabulation given in Example 6.1, listed explicitly for a flight velocity of 250 ft / s is the value of  $C_L = 0.228$  (the same as stipulated here) and the resulting calculated value of  $L / D = 8.21$  (the same as obtained here, within roundoff accuracy).
  2. For a given airplane,  $L / D$  is a function of  $C_L$  only. Of course, because  $C_L$  is a function of angle of attack only, this is the same as stating that  $L / D$  is a function of  $\alpha$  only, as illustrated in Fig. 6.7. The point made by the present example is that for a given airplane, if you have a given  $C_L$ , you can calculate directly the corresponding value of  $L / D$ , as shown here.
- 

## 6.15 TAKEOFF PERFORMANCE

Up to this point in our discussion of airplane performance, we have assumed that all accelerations are zero; that is, we have dealt with aspects of *static* performance as defined in Sec. 6.2. For the remainder of this chapter, we relax this restriction and consider several aspects of airplane performance that involve finite acceleration, such as takeoff and landing runs, turning flight, and accelerated rate of climb. With this we move to the right column on our chapter road map, shown in Fig. 6.4. We now take up the study of dynamic performance.

To begin we ask: What is the running length along the ground required by an airplane, starting from zero velocity, to gain flight speed and lift from the ground? This length is defined as the *ground roll*, or *liftoff distance*,  $s_{LO}$ .

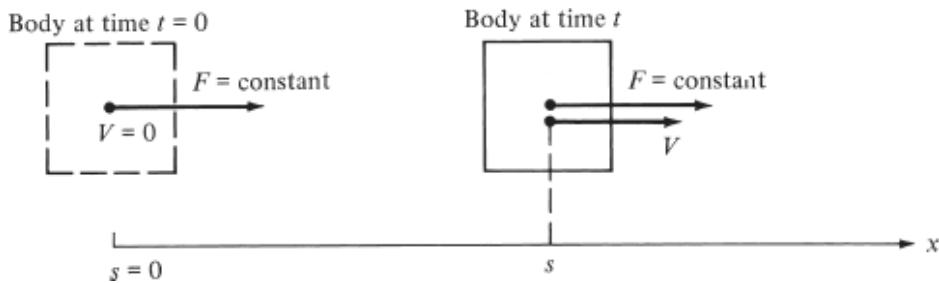

**Figure 6.48** Sketch of a body moving under the influence of a constant force  $F$ , starting from rest ( $V = 0$ ) at  $s = 0$  and accelerating to velocity  $V$  at distance  $s$ .

To address this question, let us first consider the accelerated page 524 rectilinear motion of a body of mass  $m$  experiencing a constant force  $F$ , as sketched in Fig. 6.48. From Newton's second law,

$$\begin{aligned} F &= ma = m \frac{dV}{dt} \\ \text{or} \quad dV &= \frac{F}{m} dt \end{aligned} \quad (6.89)$$

Assume that the body starts from rest ( $V = 0$ ) at location  $s = 0$  at time  $t = 0$  and is accelerated to velocity  $V$  over distance  $s$  at time  $t$ . Integrating Eq. (6.89) between these two points and remembering that both  $F$  and  $m$  are constant, we have

$$\begin{aligned} \int_0^V dV &= \frac{F}{m} \int_0^t dt \\ \text{or} \quad V &= \frac{F}{m} t \end{aligned} \quad (6.90)$$

Solving for  $t$ , we get

$$t = \frac{Vm}{F} \quad (6.91)$$

Considering an instant when the velocity is  $V$ , the incremental distance  $ds$  covered during an incremental time  $dt$  is  $ds = V dt$ . From Eq. (6.90) we have

$$ds = V dt = \frac{F}{m} t dt \quad (6.92)$$

Integrating Eq. (6.92) gives

$$\int_0^s ds = \frac{F}{m} \int_0^t t dt \quad (6.93)$$

or

$$s = \frac{F t^2}{m 2}$$

Substituting Eq. (6.91) into (6.93), we obtain

$$s = \boxed{\frac{V^2 m}{2F}} \quad (6.94)$$

Equation (6.94) gives the distance required for a body of mass  $m$  to accelerate to velocity  $V$  under the action of a constant force  $F$ .

Now consider the force diagram for an airplane during its ground [page 525](#) roll, as illustrated in Fig. 6.49. In addition to the familiar forces of lift, drag, thrust, and weight, the airplane experiences a resistance force  $R$  due to rolling friction between the tires and the ground. This resistance force is given by

$$R = \mu_r (W - L) \quad (6.95)$$


where  $W - L$  is the net normal force exerted between the tires and the ground and  $\mu_r$  is the coefficient of rolling friction. Summing forces parallel to the ground and employing Newton's second law, we have

$$F = T - D - R = T - D - \mu_r (W - L) = m \frac{dV}{dt} \quad (6.96)$$

Let us examine Eq. (6.96) more closely. It gives the local instantaneous acceleration of the airplane  $dV/dt$  as a function of  $T$ ,  $D$ ,  $W$ , and  $L$ . For takeoff, over most of the ground roll,  $T$  is reasonably constant (this is particularly true for a jet-powered airplane). Also,  $W$  is constant. However, both  $L$  and  $D$  vary with velocity because

$$L = \frac{1}{2} \rho_\infty V_\infty^2 S C_L \quad (6.97)$$

$$\text{and} \quad D = \frac{1}{2} \rho_\infty V_\infty^2 S \left( C_{D,0} + \phi \frac{C_L^2}{\pi e A R} \right) \quad (6.98)$$

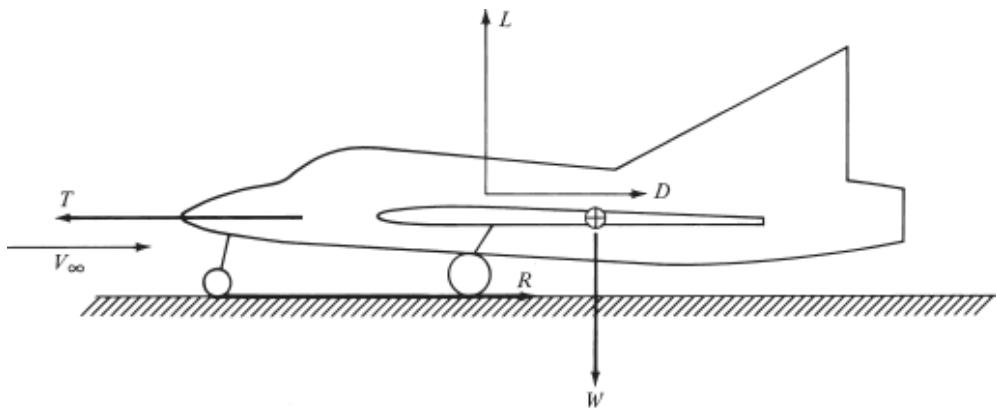

**Figure 6.49** Forces acting on an airplane during takeoff and landing.

The quantity  $\phi$  in Eq. (6.98) requires some explanation. When an airplane is flying close to the ground, the strength of the wing-tip vortices is somewhat diminished because of interaction with the ground. Because these tip vortices induce downwash at the wing (see Sec. 5.13), which, in turn, generates induced drag (see Sec. 5.14), the downwash and hence induced drag are reduced when the airplane is flying close to the ground. This phenomenon is called *ground effect* and is the cause of the tendency for an airplane to flare, or “float,” above the ground near the instant of landing. The reduced drag in the presence of ground effect is accounted for by  $\phi$  in Eq. (6.98), where  $\phi \leq 1$ . An approximate expression for  $\phi$ , based on aerodynamic theory, is given by McCormick (see the bibliography at the end of this chapter) as

$$\phi = \frac{(16h/b)^2}{1 + (16h/b)^2} \quad (6.99) \text{ page 526}$$

where  $h$  is the height of the wing above the ground and  $b$  is the wingspan.


In light of the preceding, to accurately calculate the variation of velocity with time during the ground roll, and ultimately the distance required for liftoff, we must integrate Eq. (6.96) numerically, taking into account the proper velocity variations of  $L$  and  $D$  from Eqs. (6.97) and (6.98), respectively, as well as any velocity effect on  $T$ . A typical variation of these forces with distance along the ground during takeoff is sketched in Fig. 6.50. Note from Eq. (6.94) that  $s$  is proportional to  $V^2$ , so the horizontal axis in Fig. 6.50 could just as well be  $V^2$ . Because both  $D$  and  $L$  are proportional to the dynamic pressure  $q_\infty = \frac{1}{2}\rho_\infty V_\infty^2$ , they appear as linear variations in Fig. 6.50. Also, Fig. 6.50 is drawn for a jet-propelled airplane; hence  $T$  is relatively constant.

A simple but approximate expression for the liftoff distance  $s_{LO}$  can be obtained as follows. Assume that  $T$  is constant. Also assume an *average value* for the sum of drag and resistance forces,  $[D + \mu_r(W - L)]_{av}$ , such that this average value, taken as a constant force, produces the proper liftoff distance  $s_{LO}$ . Then we consider an effective constant force acting on the airplane during its takeoff ground roll as

$$F_{\text{eff}} = T - [D + \mu_r(W - L)]_{av} = \text{const} \quad (6.100)$$

These assumptions are fairly reasonable, as seen from Fig. 6.50. Note that the sum of  $D + \mu_r(W - L)$  versus distance (or  $V^2$ ) is reasonably constant, as shown by the dashed line in Fig. 6.50. Hence, the accelerating force  $T - [D + \mu_r(W - L)]$ , which is illustrated by the difference between the thrust curve and the dashed line in Fig. 6.50, is also reasonably constant. Now return to Eq. (6.94). Considering  $F$  given by Eq. (6.100),  $V = V_{LO}$  (the liftoff velocity), and  $m = W/g$ , where  $g$  is the acceleration of gravity, Eq. (6.94) yields

$$s_{LO} = \frac{(V_{LO}^2)(W/g)}{2\{T - [D + \mu_r(W - L)]_{av}\}} \quad (6.101)$$

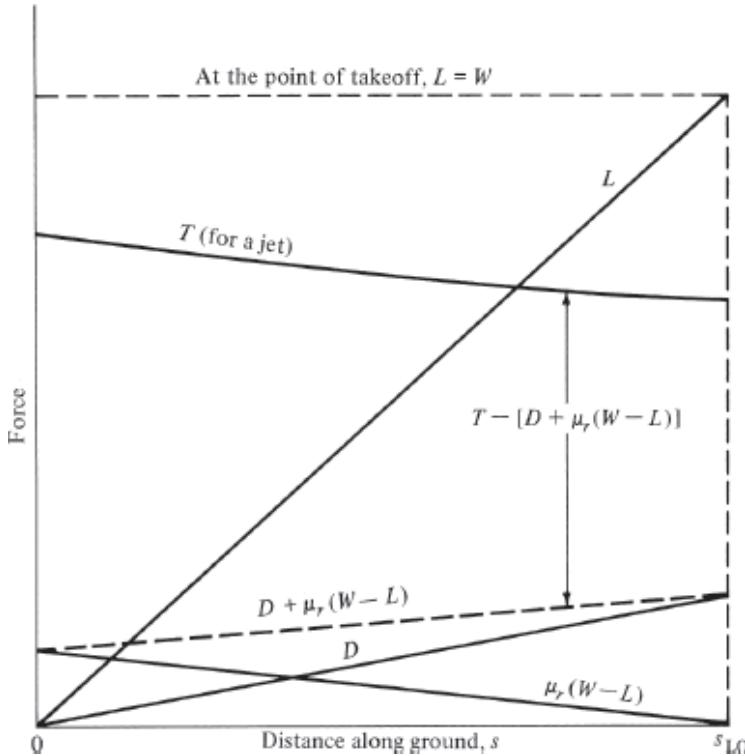

**Figure 6.50** Schematic of a typical variation of forces acting on an airplane during takeoff.

To ensure a margin of safety during takeoff, the liftoff velocity is [page 527](#) typically 20 percent higher than the stalling velocity. Hence, from Eq. (5.71) we have

$$V_{LO} = 1.2V_{stall} = 1.2\sqrt{\frac{2W}{\rho_\infty SC_{L,max}}} \quad (6.102)$$

Substituting Eq. (6.102) into (6.101), we obtain

$$s_{LO} = \frac{1.44 W^2}{g \rho_\infty SC_{L,max} \{T - [D + \mu_r(W - L)]_{av}\}} \quad (6.103)$$

To make a calculation using Eq. (6.103), Shevell (see the bibliography at the end of this chapter) suggests that the average force in Eq. (6.103) be set equal to its instantaneous value at a velocity equal to  $0.7V_{LO}$ ; that is,

$$[D + \mu_r(W - L)]_{av} = [D + \mu_r(W - L)]_{0.7V_{LO}}$$

Also, experience has shown that the coefficient of rolling friction  $\mu_r$  in Eq. (6.103) varies from 0.02 for a relatively smooth, paved surface to 0.10 for a grass field.

We can simplify further by assuming that thrust is much larger than either  $D$  or  $R$  during takeoff. Refer to the case shown in Fig. 6.50; this simplification is not unreasonable. Hence, ignoring  $D$  and  $R$  compared to  $T$ , Eq. (6.103) becomes simply

$$s_{LO} = \frac{1.44 W^2}{g \rho_\infty SC_{L,max} T} \quad (6.104)$$

Equation (6.104) illustrates some important physical trends:

1. Liftoff distance is very sensitive to the weight of the airplane, varying directly as  $W^2$ . If the weight is doubled, the ground roll of the airplane is quadrupled.
2. Liftoff distance is dependent on the ambient density  $\rho_\infty$ . If we [page 528](#) assume that thrust is directly proportional to  $\rho_\infty$ , as stated in Sec. 6.7 (that is,  $T \propto \rho_\infty$ ), then Eq. (6.104) demonstrates that

$$s_{LO} \propto \frac{1}{\rho_\infty^2}$$

This is why on hot summer days, when the air density is less than that on cooler days, a given airplane requires a longer ground roll to get off

the ground. Also, longer liftoff distances are required at airports that are located at higher altitudes (such as at Denver, Colorado, a mile above sea level).

3. The liftoff distance can be decreased by increasing the wing area, increasing  $C_{L,\max}$ , and increasing the thrust, all of which simply make common sense.

The total takeoff distance, as defined in the Federal Aviation Requirements (FAR), is the sum of the ground roll distance  $s_{LO}$  and the distance (measured along the ground) to clear a 35-ft height (for jet-powered civilian transports) or a 50-ft height (for all other airplanes). A discussion of these requirements, as well as more details regarding the total takeoff distance, can be found in Anderson, *Aircraft Performance and Design*, McGraw-Hill, New York, 1999. Also see the books by Shevell and McCormick listed in the bibliography at the end of this chapter for more information about this topic.

### EXAMPLE 6.25

Estimate the liftoff distance for the CJ-1 at sea level. Assume a paved runway:  $\mu_r = 0.02$ . During the ground roll, the angle of attack of the airplane is restricted by the requirement that the tail not drag the ground; so assume that  $C_{L,\max}$  during ground roll is limited to 1.0. Also, when the airplane is on the ground, the wings are 6 ft above the ground.

#### ■ Solution

Use Eq. (6.103). To evaluate the average force in Eq. (6.103), first obtain the ground effect factor from Eq. (6.99), where  $h/b = 6/53.3 = 0.113$ :

$$\phi = \frac{(16h/b)^2}{1 + (16h/b)^2} = 0.764$$

page 529

From Eq. (6.102),

$$V_{LO} = 1.2V_{stall} = 1.2\sqrt{\frac{2W}{\rho_\infty SC_{L,\max}}} = 1.2\sqrt{\frac{2(19,815)}{0.002377(318)(1.0)}} = 230 \text{ ft/s}$$

Hence,  $0.7V_{LO} = 160.3$  ft/s. The average force in Eq. (6.103) should be evaluated at a velocity of 160.3 ft/s. To do this, from Eq. (6.97) we get

$$L = \frac{1}{2} \rho_{\infty} V_{\infty}^2 S C_L = \frac{1}{2} (0.002377) (160.3)^2 (318) (1.0) = 9712 \text{ lb}$$

Equation (6.98) yields

$$\begin{aligned} D &= \frac{1}{2} \rho_{\infty} V_{\infty}^2 S \left( C_{D,0} + \phi \frac{C_L^2}{\pi e AR} \right) \\ &= \frac{1}{2} (0.002377) (160.3)^2 (318) \left[ 0.02 + 0.764 \frac{1.0^2}{\pi (0.81)(8.93)} \right] = 520.7 \text{ lb} \end{aligned}$$

Finally, from Eq. (6.103),

$$\begin{aligned} s_{LO} &= \frac{1.44 W^2}{g \rho_{\infty} S C_{L,\max} \{ T - [D + \mu_r (W - L)]_{av} \}} \\ &= \frac{1.44 (19,815)^2}{32.2 (0.002377) (318) (1.0) \{ 7300 - [520.7 + (0.02)(19,815 - 9712)] \}} \\ &= \boxed{3532 \text{ ft}} \end{aligned}$$

Note that  $[D + \mu_r (W - L)]_{av} = 722.8 \text{ lb}$ , which is about 10 percent of the thrust. Hence, the assumption leading to Eq. (6.104) is fairly reasonable; that is,  $D$  and  $R$  can sometimes be ignored compared with  $T$ .

---

## 6.16 LANDING PERFORMANCE

Consider an airplane during landing. After the airplane has touched the ground, the force diagram during the ground roll is exactly the same as that given in Fig. 6.49, and the instantaneous acceleration (negative in this case) is given by Eq. (6.96). However, we assume that to minimize the distance required to come to a complete stop, the pilot has decreased the thrust to zero at touchdown, and therefore the equation of motion for the landing ground roll is obtained from Eq. (6.96) with  $T = 0$ :

$$-D - \mu_r (W - L) = m \frac{dV}{dt} \quad (6.105)$$

A typical variation of the forces on the airplane during landing is sketched in Fig. 6.51. Designate the ground roll distance between touchdown at velocity  $V_T$  and a complete stop by  $s_L$ . An accurate calculation of  $s_L$  can be obtained by numerically integrating Eq. (6.105) along with Eqs. (6.97) and (6.98).

However, let us develop an approximate expression for  $s_L$  that page 530 parallels the philosophy used in Sec. 6.15. Assume an average constant value for  $D + \mu_r (W - L)$  that effectively yields the correct ground roll

distance at landing  $s_L$ . Once again we can assume that  $[D + \mu_r(W - L)]_{av}$  is equal to its instantaneous value evaluated at  $0.7V_T$ :


$$F = -[D + \mu_r(W - L)]_{av} = -[D + \mu_r(W - L)]_{0.7V_T} \quad (6.106)$$

[Note from Fig. 6.51 that the net decelerating force  $D + \mu_r(W - L)$  can vary considerably with distance, as shown by the dashed line. Hence, our assumption here for landing is more tenuous than for takeoff.] Returning to Eq. (6.92), we integrate between the touchdown point, where  $s = s_L$  and  $t = 0$ , and the point where the airplane's motion stops, where  $s = 0$  and time equals  $t$ :

$$\int_{s_L}^0 ds = \frac{F}{m} \int_0^t t dt \quad (6.107)$$

or  $s_L = -\frac{F t^2}{m 2}$

Note that from Eq. (6.106),  $F$  is a negative value; hence  $s_L$  in Eq. (6.107) is positive.

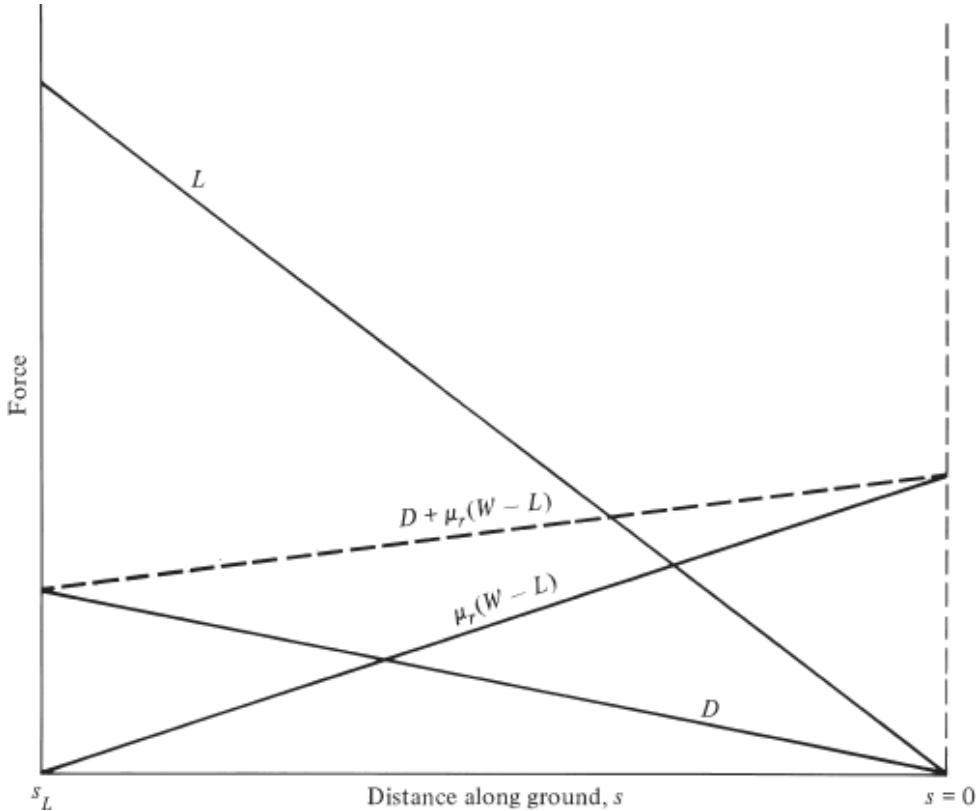

**Figure 6.51** Schematic of a typical variation of forces acting on an airplane during landing.

Combining Eqs. (6.91) and (6.107), we obtain

$$s_L = -\frac{V^2 m}{2F} \quad (6.108)$$

Equation (6.108) gives the distance required to decelerate from an initial velocity  $V$  to zero velocity under the action of a constant force  $F$ . In Eq. (6.108)  $F$  is given by Eq. (6.106), and  $V$  is  $V_T$ . Thus, Eq. (6.108) becomes

$$s_L = \frac{V_T^2 (W/g)}{2[D + \mu_r(W - L)]_{0.7V_T}} \quad (6.109) \quad \text{page 531}$$

To maintain a factor of safety,

$$V_T = 1.3 V_{\text{stall}} = 1.3 \sqrt{\frac{2W}{\rho_\infty SC_{L,\max}}} \quad (6.110)$$

Substituting Eq. (6.110) into (6.109), we obtain

$$s_L = \frac{1.69 W^2}{g \rho_\infty SC_{L,\max} [D + \mu_r(W - L)]_{0.7V_T}} \quad (6.111)$$

During the landing ground roll, the pilot is applying brakes; hence in Eq. (6.111) the coefficient of rolling friction is that during braking, which is approximately  $\mu_r = 0.4$  for a paved surface.

Modern jet transports utilize thrust reversal during the landing ground roll. Thrust reversal is created by ducting air from the jet engines and blowing it in the upstream direction, opposite to the usual downstream direction when normal thrust is produced. As a result, with thrust reversal, the thrust vector in Fig. 6.49 is reversed and points in the drag direction, thus aiding the deceleration and shortening the ground roll. Designating the reversed thrust as  $T_r$ , we see that Eq. (6.105) becomes

$$-T_r - D - \mu_r(W - L) = m \frac{dV}{dt} \quad (6.112)$$

Assuming that  $T_r$  is constant, Eq. (6.111) becomes

$$s_L = \frac{1.69 W^2}{g \rho_\infty SC_{L,\max} \{T_r + [D + \mu_r(W - L)]_{0.7V_T}\}} \quad (6.113)$$

Another ploy to shorten the ground roll is to decrease the lift to near zero, hence imposing the full weight of the airplane between the tires and the ground and increasing the resistance force due to friction. The lift on an airplane wing can be destroyed by spoilers, which are simply long, narrow surfaces along the span of the wing, deflected directly into the flow, thus causing massive flow separation and a striking decrease in lift.

The total landing distance, as defined in FAR, is the sum of the ground roll distance and the distance (measured along the ground) to achieve touchdown in a glide from a 50-ft height. Such details are beyond the scope of this book; see the books by Shevell and McCormick (listed in the bibliography at the end of this chapter) and by Anderson, *Aircraft Performance and Design*, McGraw-Hill, New York, 1999, for more information.

### EXAMPLE 6.26

Estimate the landing ground roll distance at sea level for the CJ-1. No thrust reversal is used; however, spoilers are employed so that  $L = 0$ . The spoilers increase the zero-lift drag coefficient by 10 percent. The fuel tanks are essentially empty, so neglect the weight of any fuel carried by the airplane. The maximum lift coefficient, with flaps fully deployed at touchdown, is 2.5.

#### ■ Solution

The empty weight of the CJ-1 is 12,352 lb. Hence

$$V_T = 1.3V_{\text{stall}} = 1.3 \sqrt{\frac{2W}{\rho_\infty SC_{L,\max}}} = 1.3 \sqrt{\frac{2(12,352)}{0.002377(318)(2.5)}} = 148.6 \text{ ft/s}$$

Thus  $0.7V_T = 104$  ft /s. Also,  $C_{D,0} = 0.02 + 0.1(0.02) = 0.022$ . From Eq. (6.98), with  $C_L = 0$  (remember, spoilers are deployed, destroying the lift),

$$D = \frac{1}{2}\rho_\infty V_\infty^2 SC_{D,0} = \frac{1}{2}(0.002377)(104)^2(318)(0.022) = 89.9 \text{ lb}$$

From Eq. (6.111), with  $L = 0$ ,

$$\begin{aligned} s_L &= \frac{1.69W^2}{g\rho_\infty SC_{L,\max}(D + \mu_r W)_{0.7V_T}} \\ &= \frac{1.69(12,352)^2}{32.2(0.002377)(318)(2.5)[89.9 + 0.4(12,352)]} = 842 \text{ ft} \end{aligned}$$


## 6.17 TURNING FLIGHT AND THE $V$ - $N$ DIAGRAM


Up to this point in our discussion of airplane performance, we have [page 533](#) considered rectilinear motion. Our static performance analyses dealt with zero acceleration leading to constant velocity along straight-line paths. Our

discussion of takeoff and landing performance involved rectilinear acceleration, also leading to motion along a straight-line path. Let us now consider some cases involving *radial* acceleration, which leads to *curved* flight paths; that is, let us consider the turning flight of an airplane. In particular, we examine three specialized cases: a level turn, a pull-up, and a pull-down. A study of the generalized motion of an airplane along a three-dimensional flight path is beyond the scope of this book.

A level turn is illustrated in Fig. 6.52. Here the wings of the [page 534](#) airplane are banked through angle  $\phi$  hence the lift vector is inclined at angle  $\phi$  to the vertical. The bank angle  $\phi$  and the lift  $L$  are such that the component of the lift in the vertical direction exactly equals the weight:

$$L \cos \phi = W$$

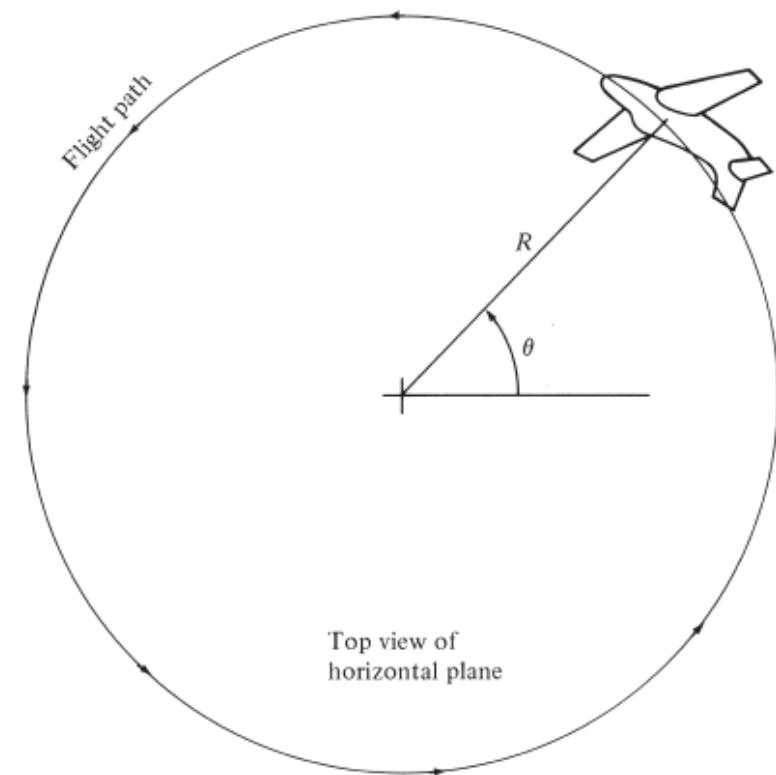

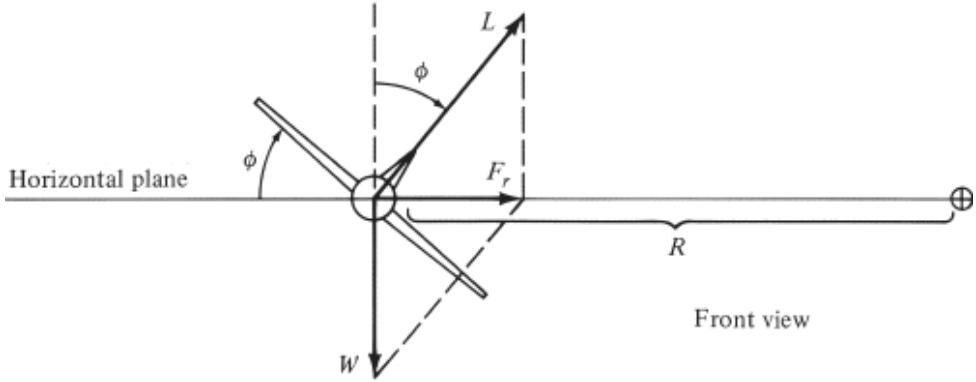

**Figure 6.52** An airplane in a level turn.

Therefore, the airplane maintains a constant altitude, moving in the same horizontal plane. However, the resultant of  $L$  and  $W$  leads to a resultant force  $F_r$ , which acts in the horizontal plane. This resultant force is perpendicular to the flight path, causing the airplane to turn in a circular path with a radius of curvature equal to  $R$ . We wish to study this turn radius  $R$  as well as the turn rate  $d\theta/dt$ .

From the force diagram in Fig. 6.52, the magnitude of the resultant force is

$$F_r = \sqrt{L^2 - W^2} \quad (6.114)$$

We introduce a new term, the *load factor*  $n$ , defined as

$$n \equiv \frac{L}{W} \quad (6.115)$$

The load factor is usually quoted in terms of “g’s”; for example, an airplane with lift equal to 5 times the weight is said to be experiencing a load factor of 5 g’s. Hence, Eq. (6.114) can be written as

$$F_r = W \sqrt{n^2 - 1} \quad (6.116)$$

The airplane is moving in a circular path at velocity  $V_\infty$ ; therefore the radial acceleration is given by  $V_\infty^2/R$ . From Newton’s second law,

$$F_r = m \frac{V_\infty^2}{R} = \frac{W V_\infty^2}{g R} \quad (6.117)$$

Combining Eqs. (6.116) and (6.117) and solving for  $R$ , we have

$$R = \frac{V_\infty^2}{g \sqrt{n^2 - 1}}$$

(6.118)

The angular velocity, denoted by  $\omega \equiv d\theta/dt$ , is called the *turn rate* and is given by  $V_\infty/R$ . Thus, from Eq. (6.118) we have

$$\boxed{\omega = \frac{g\sqrt{n^2 - 1}}{V_\infty}} \quad (6.119)$$

For the maneuvering performance of an airplane, military or civil, it is frequently advantageous to have the smallest possible  $R$  and the largest possible  $\omega$ . Equations (6.118) and (6.119) show that to obtain both a small turn radius and a large turn rate, we want

1. The highest possible load factor (that is, the highest possible  $L/W$ ).
2. The lowest possible velocity.

Consider another case of turning flight, in which an airplane initially in straight, level flight (where  $L = W$ ) suddenly experiences an increase in lift. Because  $L > W$ , the airplane will begin to turn upward, as sketched in Fig. 6.53. For this pull-up maneuver, the flight path becomes curved in the vertical plane, with a turn rate  $\omega = d\theta/dt$ . From the force diagram in Fig. 6.53, the resultant force  $F_r$  is vertical and is given by

$$F_r = L - W = W(n - 1) \quad (6.120) \quad \underline{\text{page 536}}$$

From Newton's second law,


$$F_r = m \frac{V_\infty^2}{R} = \frac{W V_\infty^2}{g R} \quad (6.121)$$

Combining Eqs. (6.120) and (6.121) and solving for  $R$  give

$$\boxed{R = \frac{V_\infty^2}{g(n - 1)}} \quad (6.122)$$

and because  $\omega = V_\infty/R$ ,

$$\boxed{\omega = \frac{g(n - 1)}{V_\infty}} \quad (6.123)$$

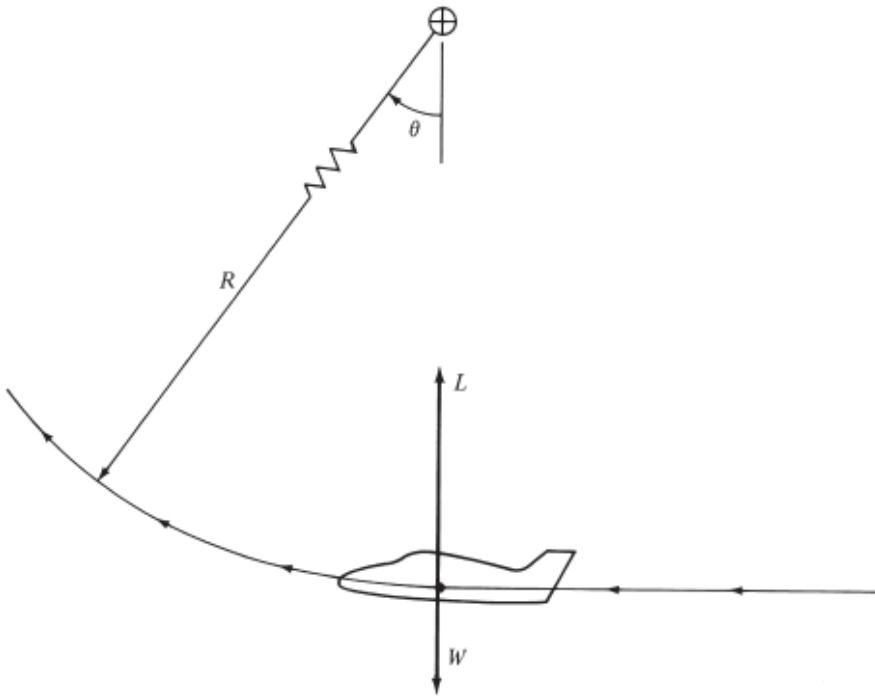

**Figure 6.53** The pull-up maneuver.

A related case is the pull-down maneuver, illustrated in Fig. 6.54. Here an airplane in initially level flight suddenly rolls to an inverted position, so that both  $L$  and  $W$  are pointing downward. The airplane will begin to turn downward in a circular flight path with a turn radius  $R$  and turn rate  $\omega = d\theta/dt$ . By an analysis similar to those preceding, the following results are easily obtained:

$$R = \frac{V_\infty^2}{g(n + 1)} \quad (6.124) \text{ page 537}$$

$$\omega = \frac{g(n + 1)}{V_\infty} \quad (6.125)$$


Prove this to yourself.

Considerations of turn radius and turn rate are particularly important to military fighter aircraft; everything else being equal, airplanes with the smallest  $R$  and largest  $\omega$  will have definite advantages in air combat. High-performance fighter aircraft are designed to operate at high load factors—typically from 3 to 10. When  $n$  is large, then  $n + 1 \approx n$  and  $n - 1 \approx n$ ; for such cases Eqs. (6.118), (6.119), and (6.122) to (6.125) reduce to

$$R = \frac{V_\infty^2}{gn} \quad (6.126)$$

and

$$\omega = \frac{gn}{V_\infty} \quad (6.127)$$

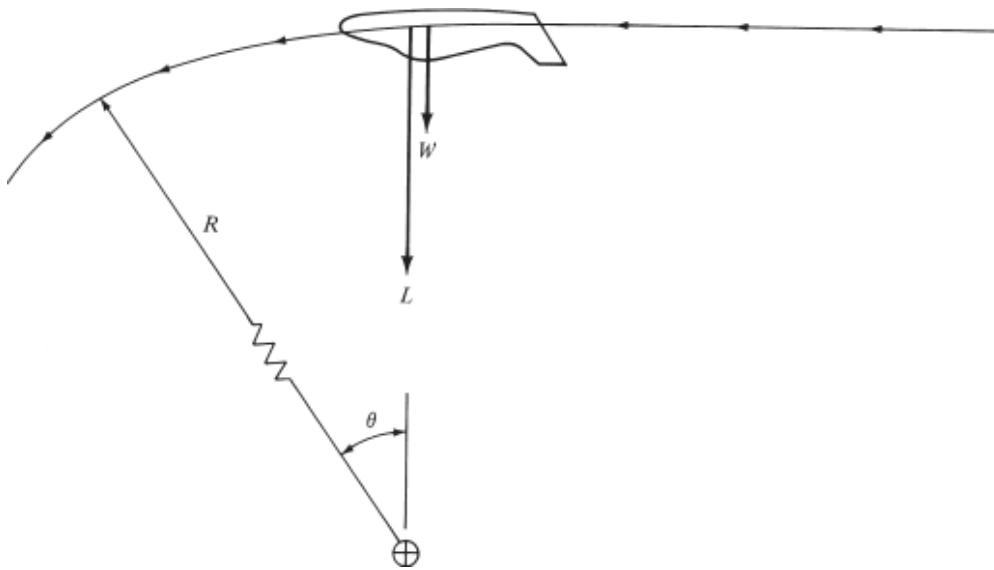

**Figure 6.54** The pull-down maneuver.

Let us work with these equations further. Because

$$L = \frac{1}{2} \rho_\infty V_\infty^2 S C_L \quad (6.128)$$

then

$$V_\infty^2 = \frac{2L}{\rho_\infty S C_L}$$

Substituting Eqs. (6.128) and (6.115) into Eqs. (6.126) and (6.127), we obtain

$$R = \frac{2L}{\rho_\infty S C_L g (L/W)} = \frac{2}{\rho_\infty C_L g} \frac{W}{S} \quad (6.129)$$

and

$$\omega = \frac{gn}{\sqrt{2L/(\rho_\infty S C_L)}} \quad (6.130)$$

$$= \frac{gn}{\sqrt{[2n/(\rho_\infty C_L)](W/S)}} = g \sqrt{\frac{\rho_\infty C_L n}{2(W/S)}}$$

Note that in Eqs. (6.129) and (6.130), the factor  $W/S$  appears. As we have discussed in previous sections, this factor occurs frequently in airplane performance analyses and is labeled

$$\frac{W}{S} \equiv \text{wing loading}$$

Equations (6.129) and (6.130) clearly show that airplanes with lower wing loadings will have smaller turn radii and larger turn rates, everything else

being equal. However, the design wing loading of an airplane is usually determined by factors other than maneuvering, such as payload, range, and maximum velocity. As a result, wing loadings for light, general aviation aircraft are relatively low, but those for high-performance military aircraft are relatively large. Wing loadings for some typical airplanes are listed here:

Airplane	W/S, lb/ft <sup>2</sup>	page 538
Wright Flyer (1903)	1.2	
Beechcraft Bonanza	18.8	
McDonnell Douglas F-15	66	
General Dynamics F-16	74	

From this table we conclude that a small, light aircraft such as the Beechcraft Bonanza can outmaneuver a larger, heavier aircraft such as the F-16 because of smaller turn radius and larger turn rate. However, this is really comparing apples and oranges. Instead, let us examine Eqs. (6.129) and (6.130) for a *given* airplane with a given wing loading and ask: For this specific airplane, under what conditions will  $R$  be minimum and  $\omega$  maximum? From these equations, clearly  $R$  will be minimum and  $\omega$  will be maximum when both  $C_L$  and  $n$  are maximum. That is,

$$R_{\min} = \frac{2}{\rho_{\infty} g C_{L,\max}} \frac{W}{S} \quad (6.131)$$

$$\omega_{\max} = g \sqrt{\frac{\rho_{\infty} C_{L,\max} n_{\max}}{2(W/S)}} \quad (6.132)$$

Also note from Eqs. (6.131) and (6.132) that best performance will occur at sea level, where  $\rho_{\infty}$  is maximum.

There are some practical constraints on the preceding [page 539](#) considerations. First, at low speeds,  $n_{\max}$  is a function of  $C_{L,\max}$  itself because


$$n = \frac{L}{W} = \frac{\frac{1}{2} \rho_{\infty} V_{\infty}^2 S C_L}{W}$$

hence

$$n_{\max} = \frac{1}{2} \rho_{\infty} V_{\infty}^2 \frac{C_{L,\max}}{W/S} \quad (6.133)$$

At higher speeds,  $n_{\max}$  is limited by the structural design of the airplane. These considerations are best understood by examining Fig. 6.55, which is a diagram showing load factor versus velocity for a given airplane: the *V-n diagram*. Here curve *AB* is given by Eq. (6.133). Consider an airplane flying

at velocity  $V_1$ , where  $V_1$  is shown in Fig. 6.55. Assume that the airplane is at an angle of attack such that  $C_L < C_{L,\max}$ . This flight condition is represented by point 1 in Fig. 6.55. Now assume that the angle of attack is increased to that for obtaining  $C_{L,\max}$ , keeping the velocity constant at  $V_1$ . The lift increases to its maximum value for the given  $V_1$ , and hence the load factor  $n = L/W$  reaches its maximum value  $n_{\max}$  for the given  $V_1$ . This value of  $n_{\max}$  is given by Eq. (6.133), and the corresponding flight condition is given by point 2 in Fig. 6.55. If the angle of attack is increased further, the wing stalls and the load factor drops. Therefore, point 3 in Fig. 6.55 is unobtainable in flight. Point 3 is in the *stall region* of the  $V-n$  diagram. Consequently, point 2 represents the highest possible load factor that can be obtained at the given velocity  $V_1$ . Now as  $V_1$  is increased, say, to a value of  $V_4$ , then the maximum possible load factor  $n_{\max}$  also increases, as given by point 4 in Fig. 6.55 and as calculated from Eq. (6.133). However,  $n_{\max}$  cannot be allowed to increase indefinitely. Beyond a certain value of load factor, defined as the *positive limit load factor* and shown as the horizontal line  $BC$  in Fig. 6.55, structural damage may occur to the aircraft. The velocity corresponding to point  $B$  is designated as  $V^*$ . At velocities higher than  $V^*$ , say  $V_5$ , the airplane must fly at values of  $C_L$  less than  $C_{L,\max}$  so that the positive limit load factor is not exceeded. If flight at  $C_{L,\max}$  is obtained at velocity  $V_5$ , corresponding to point 5 in Fig. 6.55, then structural damage will occur. The right side of the  $V-n$  diagram, line  $CD$ , is a high-speed limit. At velocities greater than this, the dynamic pressure becomes so large that again structural damage may occur to the airplane. (This maximum velocity limit is, by design, much larger than the level-flight  $V_{\max}$  calculated in Secs. 6.4 to 6.6. In fact, the structural design of most airplanes is such that the maximum velocity allowed by the  $V-n$  diagram is sufficiently greater than the maximum diving velocity for the airplane.) Finally, the bottom part of the  $V-n$  diagram, given by curves  $AE$  and  $ED$  in Fig. 6.55, corresponds to negative absolute angles of attack—that is, negative load factors. Curve  $AE$  defines the stall limit. (At absolute angles of attack less than zero, the lift is negative and acts in the downward direction. If the wing is pitched downward to a large enough negative angle of attack, the flow will separate from the bottom surface of the wing and the downward-acting lift will decrease in magnitude; that is, the wing *stalls*.) Line  $ED$  gives the *negative limit load factor*, beyond which structural damage will occur.

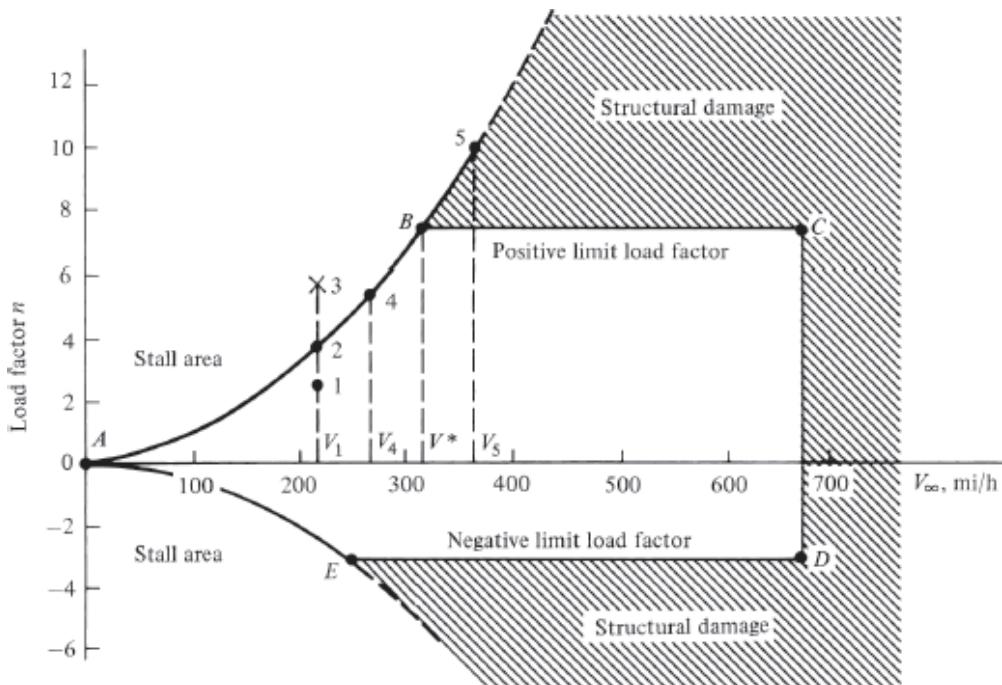

**Figure 6.55** The  $V$ - $n$  diagram for a typical jet trainer aircraft.

(Source: U.S. Air Force Academy.)

As a final note concerning the  $V$ - $n$  diagram, consider point  $B$  in Fig. 6.55. This point is called the *maneuver point*. At this point both  $C_L$  and  $n$  are simultaneously at their highest possible values that can be obtained anywhere throughout the allowable flight envelope of the aircraft. Consequently, from Eqs. (6.131) and (6.132), this point corresponds simultaneously to the smallest possible turn radius and the largest possible turn rate for the airplane. The velocity corresponding to point  $B$  is called the *corner velocity* and is designated by  $V^*$  in Fig. 6.55. We can obtain the corner velocity by solving Eq. (6.133) for velocity, yielding

$$V^* = \sqrt{\frac{2n_{\max}}{\rho_\infty C_{L,\max}} \frac{W}{S}} \quad (6.134)$$

In Eq. (6.134), the value of  $n_{\max}$  corresponds to that at point  $B$  in Fig. 6.55. The corner velocity is an interesting dividing line. At flight velocities less than  $V^*$ , it is not possible to structurally damage the airplane owing to the generation of too much lift. In contrast, at velocities greater than  $V^*$ , lift can be obtained that can structurally damage the aircraft (such as at point 5 in Fig. 6.55), and the pilot must make certain to avoid such a case.

**EXAMPLE**  
**6.27**

Consider the CJ-1 (Example 6.1) in a level turn at sea level. Calculate [page 541](#) the minimum turn radius and the maximum turn rate. The maximum load factor and lift coefficient (with no flap deflection) are 5 and 1.4, respectively.

■ **Solution**

The minimum turn radius and maximum turn rate are obtained when the flight velocity is the corner velocity,  $V^*$ , given by Eq. (6.134):

$$V^* = \sqrt{\frac{2n_{\max} \left(\frac{W}{S}\right)}{\rho_{\infty} C_{L,\max}}} \quad (6.134)$$

The wing loading for the CJ-1 with a full fuel load is

$$\frac{W}{S} = \frac{19,815}{318} = 62.3 \text{ lb/ft}^2$$

Thus, from Eq. (6.134),

$$V^* = \sqrt{\frac{2n_{\max} \left(\frac{W}{S}\right)}{\rho_{\infty} C_{L,\max}}} = \sqrt{\frac{2(5)(62.3)}{(0.002377)(1.4)}} = 432.7 \text{ ft/s}$$

From Eq. (6.118), with  $V_{\infty} = V^*$  and  $n = n_{\max}$ , we have

$$R_{\min} = \frac{(V^*)^2}{g\sqrt{n_{\max}^2 - 1}} = \frac{(432.7)^2}{32.2\sqrt{(5)^2 - 1}} = 1186 \text{ ft}$$

and from Eq. (6.119) we have

$$\omega_{\max} = \frac{g\sqrt{n_{\max}^2 - 1}}{V^*} = \frac{32.2\sqrt{(5)^2 - 1}}{432.7} = 0.365 \text{ rad/s}$$

In terms of degrees, recalling that  $1 \text{ rad} = 57.3^\circ$ , we have

$$\omega_{\max} = 20.9 \text{ deg/s}$$

**6.18 ACCELERATED RATE OF CLIMB (ENERGY METHOD)1**

Modern high-performance airplanes, such as the supersonic [page 542](#) Lockheed Martin F-22 Raptor and F-15 Eagle shown in Fig. 6.56, are capable of highly accelerated rates of climb. Therefore, the performance analysis of such airplanes requires methods that go beyond the static rate-of-climb considerations given in Secs. 6.8 to 6.11. The purpose of this section is to introduce one such method of dealing with the *energy* of an airplane. This is in contrast to our previous discussions that have dealt explicitly with forces on the airplane.

Consider an airplane of mass  $m$  in flight at some altitude  $h$  and with some velocity  $V$ . Due to its altitude, the airplane has *potential energy* PE equal to  $mgh$ . Due to its velocity, the airplane has *kinetic energy* KE equal to  $\frac{1}{2}mV^2$ . The total energy of the airplane is the sum of these energies:

$$\text{Total aircraft energy} = \text{PE} + \text{KE} = mgh + \frac{1}{2}mV^2 \quad (6.135)$$

The energy per unit weight of the airplane is obtained by dividing Eq. (6.135) by  $W = mg$ . This yields the *specific energy*, denoted by  $H_e$ :

$$H_e \equiv \frac{\text{PE} + \text{KE}}{W} = \frac{mgh + \frac{1}{2}mV^2}{mg}$$

or

$$H_e = h + \frac{V^2}{2g} \quad (6.136)$$

The specific energy  $H_e$  has units of height and is therefore also called the *energy height* of the aircraft. Thus, let us become accustomed to quoting the energy of an airplane in terms of the energy height  $H_e$ , which is simply the sum of the potential and kinetic energies of the airplane per unit weight. Contours of constant  $H_e$  are illustrated in Fig. 6.57, which is an altitude–Mach number map. Here the ordinate and abscissa are altitude  $h$  and Mach number  $M$ , respectively, and the dashed curves are lines of constant energy height.

To obtain a feeling for the significance of Fig. 6.57, consider two airplanes, one flying at an altitude of 30,000 ft at Mach 0.81 (point  $A$  in Fig. 6.57) and the other flying at an altitude of 10,000 ft at Mach 1.3 (point  $B$ ). Both airplanes have the same energy height, 40,000 ft (check this yourself by calculation). However, airplane  $A$  has more potential energy and less kinetic energy (per unit weight) than airplane  $B$ . If both airplanes maintain their same states of total energy, then both are capable of “zooming” to an altitude of 40,000 ft at zero velocity (point  $C$ ) simply by trading all their kinetic energy for potential energy. Consider another airplane, flying at an altitude of 50,000 ft at Mach 1.85, denoted by point  $D$  in Fig. 6.57. This airplane will have an

energy height of 100,000 ft and is indeed capable of zooming to an actual altitude of 100,000 ft by trading all its kinetic energy for potential energy. Airplane *D* is in a much higher energy state ( $H_e = 100,000$  ft) than airplanes *A* and *B* (which have  $H_e = 40,000$  ft). Therefore, airplane *D* has a much greater capability for speed and altitude performance than airplanes *A* and *B*. In air combat, everything else being equal, it is advantageous to be in a higher energy state (have a larger  $H_e$ ) than your adversary.

---


page 543

<sup>1</sup>This section is based in part on material presented by the faculty of the department of aeronautics at the U.S. Air Force Academy at its annual aerodynamics workshop, held each July at Colorado Springs. This author has had the distinct privilege to participate in this workshop since its inception in 1979. Special thanks for this material go to Col. James D. Lang, Major Thomas Parrot, and Col. Daniel Daley.



**Figure 6.56** Lockheed Martin F-22 Raptor and F-15 Eagle in 90° vertical accelerated climb.

(Source: U.S. Air Force photo/Master Sgt. Kevin J. Gruenwald.)

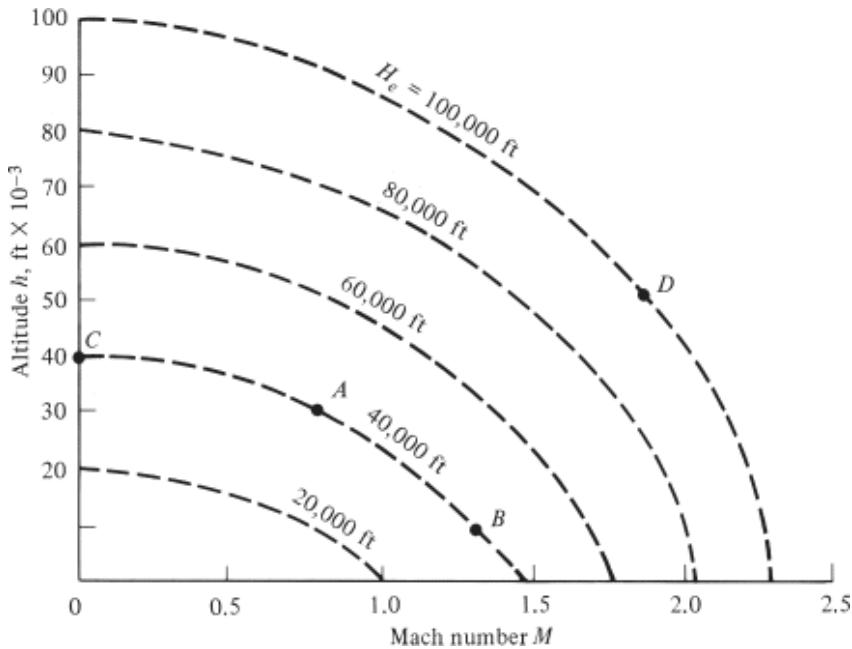

**Figure 6.57** Altitude–Mach number map showing curves of constant energy height. These are universal curves that represent the variation of kinetic and potential energies per unit weight. They do not depend on the specific design factors of a given airplane.

How does an airplane change its energy state? For example, in Fig. 6.57, how could airplanes *A* and *B* increase their energy heights to equal that of *D*? To answer this question, return to the force diagram in Fig. 6.5 and the resulting equation of motion along the flight path, given by Eq. (6.7). Assuming that  $\alpha_T$  is small, Eq. (6.7) becomes

$$T - D - W \sin \theta = m \frac{dV}{dt} \quad (6.137) \text{ page 544}$$

Recalling that  $m = W/g$ , we can rearrange Eq. (6.137) as

$$T - D = W \left( \sin \theta + \frac{1}{g} \frac{dV}{dt} \right)$$

Multiplying by  $V/W$ , we obtain

$$\frac{TV - DV}{W} = V \sin \theta + \frac{V}{g} \frac{dV}{dt} \quad (6.138)$$

Examining Eq. (6.138) and recalling some of the definitions from Sec. 6.8, we observe that  $V \sin \theta = R/C = dh/dt$  and that

$$\frac{TV - DV}{W} = \frac{\text{excess power}}{W} \equiv P_s$$

where the excess power per unit weight is defined as the *specific excess power* and is denoted by  $P_s$ . Hence, Eq. (6.138) can be written as

$$P_s = \frac{dh}{dt} + \frac{V dV}{g dt} \quad (6.139)$$

Equation (6.139) states that an airplane with excess power can use this excess for rate of climb ( $dh/dt$ ) or to accelerate along its flight path ( $dV/dt$ ) or for a combination of both. For example, consider an airplane in level flight at a velocity of 800 ft/s. Assume that when the pilot pushes the throttle all the way forward, excess power is generated in the amount  $P_s = 300$  ft/s. Equation (6.139) shows that the pilot can choose to use all this excess power to obtain a maximum unaccelerated rate of climb of 300 ft/s ( $dV/dt = 0$ , hence  $P_s = dh/dt = R/C$ ). In this case the velocity along the flight path stays constant at 800 ft/s. Alternatively, the pilot may choose to maintain level flight ( $dh/dt = 0$ ) and to use all this excess power to accelerate at the rate of  $dV/dt = gP_s/V = 32.2(300)/800 = 12.1$  ft/s<sup>2</sup>. On the other hand, some combination could be achieved, such as a rate of climb  $dh/dt = 100$  ft/s along with an acceleration along the flight path of  $dV/dt = 32.2(200)/800 = 8.1$  ft/s<sup>2</sup>. [Note that Eqs. (6.138) and (6.139) are generalizations of Eq. (6.50). In Sec. 6.8 we assumed that  $dV/dt = 0$ , which resulted in Eq. (6.50) for a steady climb. In the present section we are treating the more general case of climb with a finite acceleration.] Now return to Eq. (6.136) for the energy height. Differentiating with respect to time, we have

$$\frac{dH_e}{dt} = \frac{dh}{dt} + \frac{V}{g} \frac{dV}{dt} \quad (6.140)$$


The right sides of Eqs. (6.139) and (6.140) are identical; hence we see that

$$P_s = \frac{dH_e}{dt} \quad (6.141)$$

That is, the *time rate of change of energy height is equal to the specific excess power*. This is the answer to the question at the beginning of this paragraph. An airplane can increase its energy state simply by the application of excess power. In Fig. 6.57 airplanes *A* and *B* can reach the energy state of airplane *D* if they have enough excess power to do so.

This immediately leads to the next question: How can we ascertain whether a given airplane has enough  $P_s$  to reach a certain energy height? To address

this question, recall the definition of excess power as illustrated in Fig. 6.29—that is, the difference between power available and power required. For a given altitude, say  $h$ , the excess power (hence  $P_s$ ) can be plotted versus velocity (or Mach number). For a subsonic airplane below the drag-divergence Mach number, the resulting curve will resemble the sketch shown in Fig. 6.58a. At a given altitude  $h_1$ ,  $P_s$  will be an inverted, U-shaped curve. (This is essentially the same type of plot shown in Figs. 6.32 and 6.33.) For progressively higher altitudes, such as  $h_2$  and  $h_3$ ,  $P_s$  becomes smaller, as also shown in Fig. 6.58a. Hence, Fig. 6.58a is simply a plot of  $P_s$  versus Mach number with altitude as a parameter. These results can be cross-plotted on an altitude–Mach number map using  $P_s$  as a parameter, as illustrated in Fig. 6.58b. For example, consider all the points on Fig. 6.58a where  $P_s = 0$ ; these correspond to points along a horizontal axis through  $P_s = 0$ , such as points  $a, b, c, d, e$ , and  $f$  in Fig. 6.58a. Now replot these points on the altitude–Mach number map in Fig. 6.58b. Here points  $a, b, c, d, e$ , and  $f$  form a bell-shaped curve along which  $P_s = 0$ . This curve is called the  $P_s$  contour for  $P_s = 0$ . Similarly, all points with  $P_s = 200$  ft/s are on the horizontal line  $AB$  in Fig. 6.58a, and these points can be cross-plotted to generate the  $P_s = 200$  ft/s contour in Fig. 6.58b. In this fashion an entire series of  $P_s$  contours can be generated in the altitude–Mach number map.

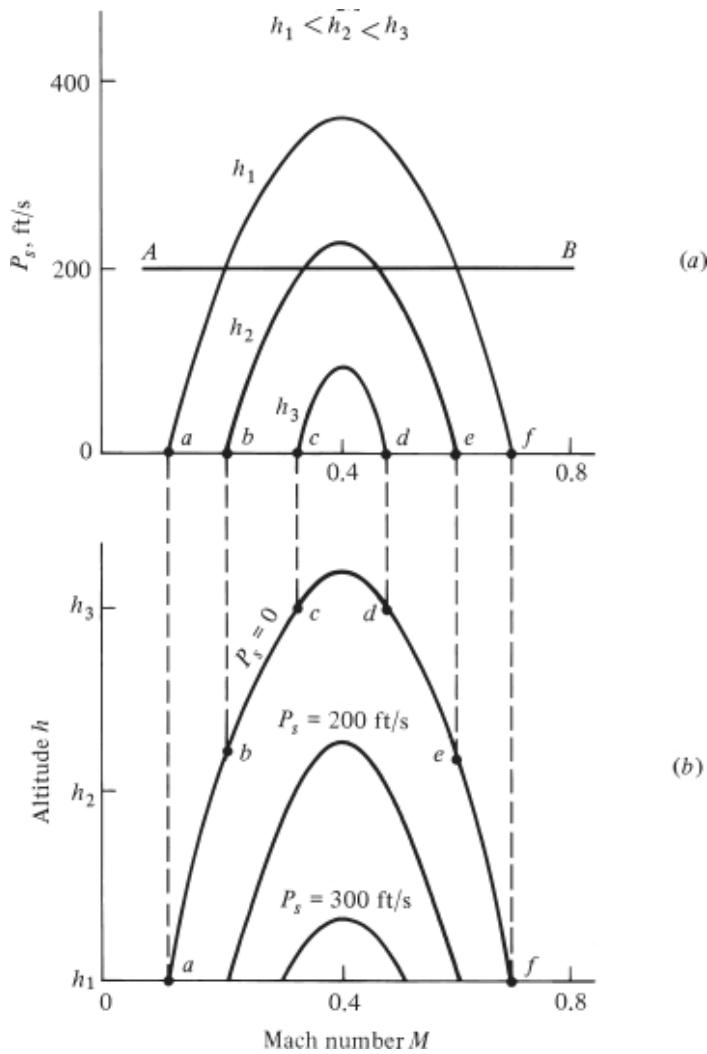

**Figure 6.58** Construction of the specific excess-power contours in the altitude–Mach number map for a subsonic airplane below the drag–divergence Mach number. These contours are constructed for a fixed load factor; if the load factor is changed, the  $P_s$  contours will shift.


For a supersonic airplane, the  $P_s$  versus Mach number curves at different altitudes will appear as sketched in Fig. 6.59a. The “dent” in the U-shaped curves around Mach 1 is due to the large drag increase in the transonic flight regime (see Sec. 5.10). In turn, these curves can be cross-plotted on the altitude–Mach number map, producing the  $P_s$  contours illustrated in Fig. 6.59b. Due to the double-humped shape of the  $P_s$  curves in Fig. 6.59a, the  $P_s$  contours in Fig. 6.59b have different shapes in the subsonic and supersonic

regions. The shape of the  $P_s$  contours shown in Fig. 6.59b is characteristic of most supersonic aircraft.


---

page 547

---

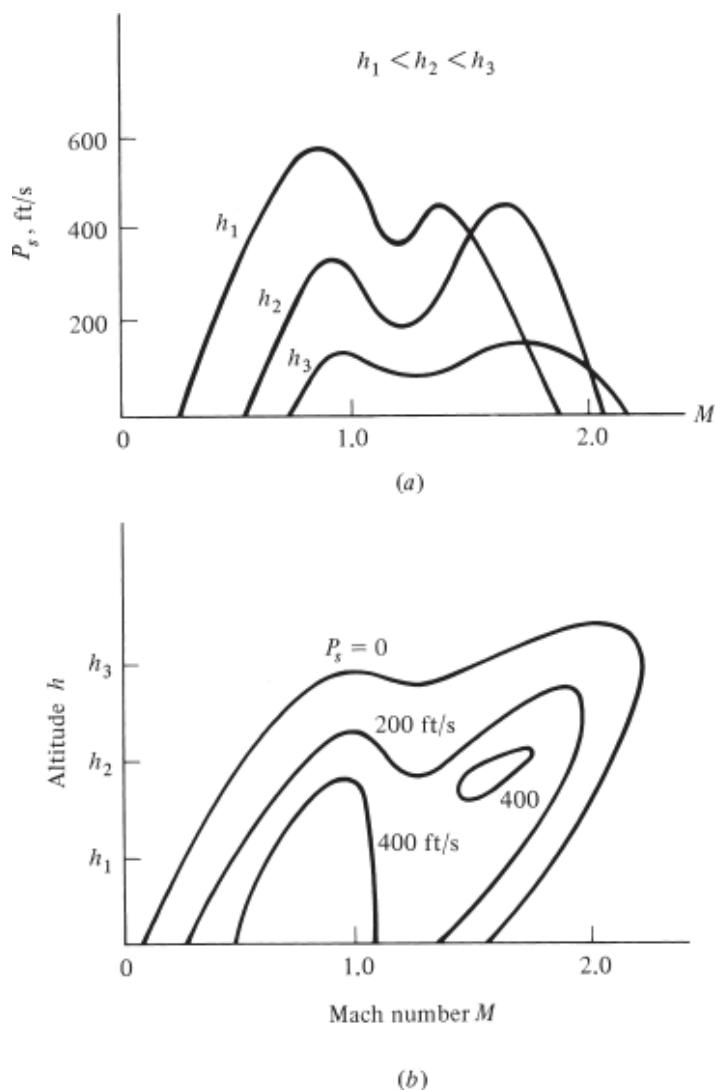

**Figure 6.59** Specific excess-power contours for a supersonic airplane.

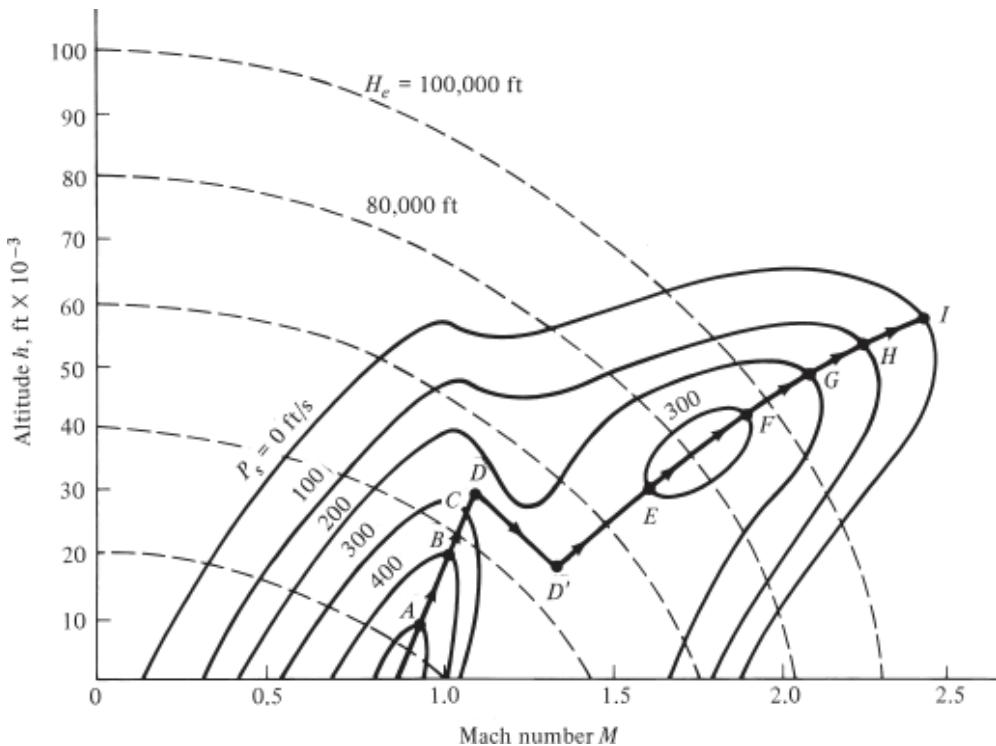

**Figure 6.60** Overlay of  $P_s$  contours and specific energy states on an altitude–Mach number map. The  $P_s$  values shown here approximately correspond to a Lockheed F-104G supersonic fighter. Load factor  $n = 1$ .  $W = 18,000$  lb. The airplane is at maximum thrust. The path given by points  $A$  through  $I$  is the flight path for minimum time to climb.

Now we are close to the answer to our question at the beginning of [page 548](#) this section. Let us overlay the  $P_s$  contours, say, from Fig. 6.59b, and the energy states illustrated in Fig. 6.57—all on an altitude–Mach number map. We obtain a diagram like Fig. 6.60. In this figure, note that the  $P_s$  contours always correspond to a given airplane at a given load factor, whereas the  $H_e$  lines are universal fundamental physical curves that have nothing to do with any given airplane. The usefulness of Fig. 6.60 is that it clearly establishes what energy states are obtainable by a given airplane. The regime of sustained flight for the airplane lies *inside* the envelope formed by the  $P_s = 0$  contour. Hence, all values of  $H_e$  inside this envelope are obtainable by the airplane. A comparison of figures like Fig. 6.60 for different airplanes will clearly show in what regions of altitude and Mach number an airplane has maneuverability advantages over another.

Figure 6.60 is also useful for representing the proper flight path to achieve minimum time to climb. For example, consider two energy heights  $H_{e,1}$  and

$H_e,2$ , where  $H_e,2 > H_e,1$ . The time to move between these energy states can be obtained from Eq. (6.141), written as

$$dt = \frac{dH_e}{P_s}$$

Integrating between  $H_{e,1}$  and  $H_{e,2}$ , we have

$$t_2 - t_1 = \int_{H_{e,1}}^{H_{e,2}} \frac{dH_e}{P_s} \quad (6.142)$$

From Eq. (6.142), the time to climb will be a minimum when  $P_s$  is a [page 549](#) maximum. Looking at Fig. 6.60, for each  $H_e$  curve, we see there is a point where  $P_s$  is a maximum. Indeed, at this point, the  $P_s$  curve is tangent to the  $H_e$  curve. Such points are illustrated by points *A* to *I* in Fig. 6.60. The arrowed line through these points illustrates the variation of altitude and Mach number along the flight path for minimum time to climb. The segment of the flight path between *D* and *D'* represents a constant-energy dive to accelerate through the drag–divergence region near Mach 1.

As a final note, analyses of modern high-performance airplanes make extensive use of energy concepts such as those previously described. Military pilots actually fly with  $P_s$  diagrams in the cockpit. Our purpose here has been to simply introduce some of the definitions and basic ideas involved in these concepts. A more extensive treatment is beyond the scope of this book.

## 6.19 SPECIAL CONSIDERATIONS FOR SUPERSONIC AIRPLANES


The physical characteristics of subsonic flow and supersonic flow are totally-different—a contrast as striking as that between day and night. We have already addressed some of these differences in Chs. 4 and 5. However, these differences do not affect the airplane performance techniques discussed in this chapter. These techniques are general, and they apply to both subsonic and supersonic airplanes. The only way our performance analysis knows that the airplane is subsonic or supersonic is through the drag polar and the engine characteristics. Recall from our discussion in Sec. 5.3 that  $C_L$  and  $C_D$  are functions of free-stream Mach number; hence the drag polar is a function of  $M_\infty$ . A given drag polar pertains to a specified Mach number; for example, the drag polar for the Lockheed C-141A shown in Fig. 6.2 pertains to low-speed flow  $M_\infty \leq 0.3$ . A generic comparison between the drag polars for a given

subsonic Mach number and a given supersonic Mach number for the same airplane is sketched in Fig. 6.61. For a given  $C_L$ ,  $C_D$  is much larger at supersonic speeds than at subsonic speeds because of the presence of supersonic wave drag. Therefore, the supersonic drag polar is displaced to the right of the subsonic drag polar and is a more tightly shaped parabola, as sketched in Fig. 6.61.

Consider an arbitrary point on the drag polar, such as point 1 shown in Fig. 6.61. A straight line  $O-1$  drawn from the origin to point 1 will have a slope equal to  $C_{L,1}/C_{D,1}$ ; that is, the slope is equal to the lift-to-drag ratio associated with flight at point 1. As we move point 1 up the drag polar, the slope of line  $O-1$  will increase, associated with increased values of  $L/D$ . Let point  $A$  be the point where the straight line becomes tangent. Hence, the slope of the straight line  $OA$  is the maximum possible slope. This slope is equal to  $(L/D)_{\max}$ , and point  $A$  corresponds to flight at maximum lift-to-drag ratio. This demonstrates the graphical construction from which  $(L/D)_{\max}$  can be obtained from the drag polar. Simply draw a straight line from the origin tangent to the drag polar; the slope of this line is equal to  $(L/D)_{\max}$ .

---


page 550

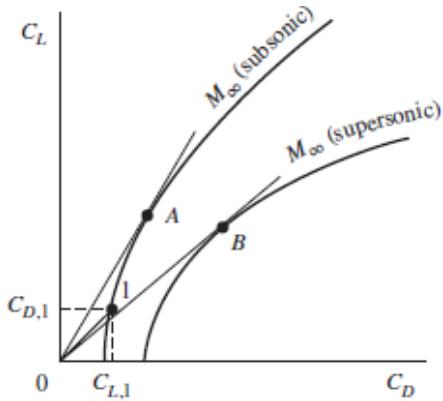

**Figure 6.61** Generic comparison of a subsonic drag polar with a supersonic drag polar for the same airplane.

With this in mind, let us compare the two drag polars in Fig. 6.61. Line  $OA$  is drawn tangent to the subsonic drag polar, and its slope gives  $(L/D)_{\max}$  at the given subsonic Mach number. Line  $OB$  is drawn tangent to the supersonic drag polar, and its slope gives  $(L/D)_{\max}$  at the given supersonic Mach number. Clearly, the slope of  $OB$  is smaller than the slope of  $OA$ . *The values of  $(L/D)_{\max}$  at supersonic speeds are smaller than at subsonic speeds.* This is

dramatically shown in Fig. 6.62. As an airplane accelerates through Mach 1, there is a considerable drop in its  $(L/D)_{\max}$ .

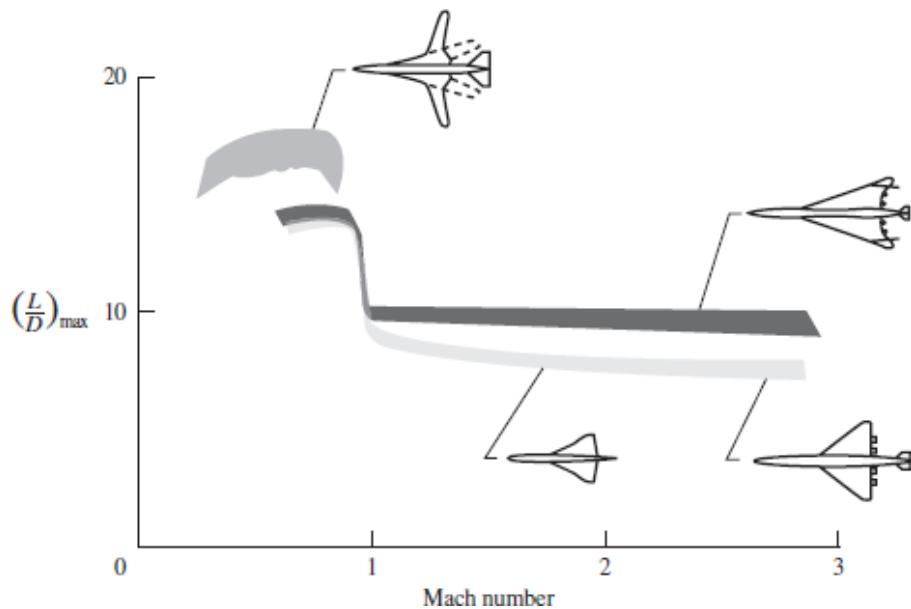

**Figure 6.62** Variation of  $(L/D)_{\max}$  with Mach number for several generic airplane configurations.

(Source: From M. R. Nichols, A. L. Keith, and W. E. Foss, “The Second-Generation Supersonic Transport,” in *Vehicle Technology for Civil Aviation: The Seventies and Beyond*. NASA SP-292, pp. 409–428.)

page 551

## DESIGN BOX

Based on the preceding discussion, the designer of a supersonic cruise airplane, such as a civil supersonic transport, must live with the realities embodied in Eq. (6.143). For example, during the 1990s an extended study of a second-generation supersonic transport, labeled the *high-speed civil transport (HSCT)*, was carried out by industry in the United States, supported by the high-speed research (HSR) program carried out by NASA. (By comparison, the Anglo-French Concorde designed in the 1960s, shown in Fig. 5.66, is a first-generation supersonic transport.) The baseline design specifications for the HSCT called for cruise at Mach 2.4 with a range of 5000 mi, carrying 300 passengers. This is an extreme design challenge, on the cutting edge of modern aeronautical technology. From Eq. (6.143), a few percent shortfall in  $L/D$  could prevent the achievement of the specified range. This underscores the importance of supersonic aerodynamic research

aimed at improving supersonic  $L/D$ . The engine must produce the lowest possible thrust-specific fuel consumption while at the same time producing an environmentally acceptable low value of atmospheric pollutants in the jet exhaust to protect the atmospheric ozone layer. Moreover, the engine noise must be an acceptably low value during takeoff and landing; that is a major challenge for jet engines designed for supersonic flight, for which the exhaust jet velocities are large and hence very noisy. Therefore, the design of engines for the HSCT is a massive challenge in itself. There are major structural and materials challenges as well. The design goal of the HSCT is a structural weight fraction (weight of the structure divided by the gross takeoff weight) of 0.2, which is considerably smaller than the more typical value of 0.25 and higher for conventional subsonic transports. With the smaller structural weight fraction, the HSCT can carry more fuel and/or more passengers to meet its other design specifications. And if this were not enough, the size of the baseline HSCT is so large, with a length longer than a football field, that there is a problem with elastic bending of the fuselage (in the longitudinal direction); as a result, stability and control are severely compromised. This problem is compounded by the interaction of the aerodynamic force, the propulsive thrust, and the real-time control inputs. Called the APSE (aeropropulsiveservoelastic) effect, this is a problem that affects the HSCT in flight and on the ground. (For more details on the HSCT design challenges, see *U.S. Supersonic Commercial Aircraft: Assessing NASA's High-Speed Research Program*, National Research Council Report, National Academy Press, Washington, DC, 1997.) Note that the sonic boom is not considered to be a problem for the HSCT because of the up-front decision that it would fly subsonically over land—the same restriction imposed on the Concorde SST. At the time of writing, work on the HSCT has been discontinued, mainly for economic reasons. However, NASA still maintains a low-level research program on the technical problems associated with supersonic commercial airplanes in general, looking to the time when a second-generation supersonic transport becomes a reality.

In short, the design of an environmentally acceptable, economically viable supersonic transport is a major aeronautical technological problem that has yet to be solved. It will be one of the most challenging aeronautical endeavors in the early 21st century, and perhaps many readers of this book will have a hand in meeting this challenge.

Perhaps the most severe effect on airplane performance associated with the decrease in  $(L/D)_{\max}$  at supersonic speeds is that on range. From Eq. (6.77) we saw that range for a jet airplane is proportional to  $C_L^{V^2}/C_D$ . is smaller for a given supersonic Mach number, then so will be the value of  $(C_L^{V^2}/C_D)_{\max}$ . This is the primary reason why the range of a given airplane cruising at supersonic speed is smaller than that at subsonic speed, everything else being equal.

Let us return to Eq. (6.75), repeated here:

$$R = \int_{W_1}^{W_0} \frac{V_\infty}{c_t} \frac{C_L}{C_D} \frac{dW}{W} \quad (6.75)$$

This is the equation from which Eq. (6.77) was derived. Assuming flight at constant  $V_\infty$ ,  $c_t$ , and  $C_L/C_D$ , Eq. (6.75) becomes

$$R = \frac{V_\infty L}{c_t D} \ln \frac{W_0}{W_1} \quad (6.143)$$

You will frequently see Eq. (6.143) in the literature as the equation [page 552](#) for range for a jet airplane. Note that Eq. (6.143) shows that maximum range is obtained *not* with maximum  $L/D$  but rather with the maximum value of the *product*  $V_\infty(L/D)$ . This product is maximum when  $C_L^{V^2}/C_D$  is maximum, as shown through the derivation of Eq. (6.77). Nevertheless, Eq. (6.143) is a useful expression for the range for a jet airplane.

Equations (6.77) and (6.143) both indicate the obvious ways to compensate for the loss of  $(L/D)_{\max}$ , and hence  $C_L^{V^2}/C_D$ , in the range for a supersonic-airplane:


1. Decrease the thrust-specific fuel consumption  $c_t$ .
2. Increase the fuel weight  $W_f$  thereby increasing the ratio  $W_0/W_1$  in Eq. (6.143) and increasing the difference  $W_0^{1/2} - W_1^{1/2}$  in Eq. (6.77).

Increasing the fuel weight is usually not a desirable design solution because the additional fuel usually means a smaller useful payload for the airplane. Also, for turbojet and low-bypass-ratio turbofans (see Ch. 9)), the thrust-specific fuel consumption increases with an increase in Mach number for supersonic speeds, further compounding the degradation of range.


## 6.20 UNINHABITED AERIAL VEHICLES (UAVS)

After the Wright brothers worked so hard to put humans in the air in flying machines, a hundred years later some aerospace engineers are working hard to take humans out of flying machines. *Uninhabited aerial vehicles (UAVs)* are airplanes that have no humans on board, but rather are flown remotely by pilots on the ground or in other airplanes. Such vehicles came on the scene in the 1950s with the introduction of the remotely controlled Ryan Firebee for reconnaissance, which was used extensively in Vietnam. In the early days of their use, these types of aircraft were labeled *remotely piloted vehicles (RPVs)*. Israel is the first nation to have used RPVs in a combat situation, arguing that for reconnaissance missions a loss of a relatively inexpensive RPV was better than the loss of a pilot and a multimillion-dollar airplane. In the later part of the 20th century, RPVs matured and were redesignated UAVs, which at the time stood for “unmanned” aerial vehicles. The term *unmanned* is, however, a misnomer because such aircraft are manned remotely by a human pilot even though that pilot is not physically in the aircraft. This led to the recent use of the term *uninhabited aerial vehicle*, a more proper description of the case.

At the time of writing, UAVs and their spinoff, *uninhabited* page 553 *combat aerial vehicles (UCAVs)*, are becoming a more important part of aerospace engineering. In the United States alone, at least five dozen UAV design programs are underway, with many more throughout Europe, the Middle East, and Asia. It is already a multibillion-dollar business and growing rapidly. In terms of airplane design, UAVs offer a widely expanded design space, in part because the pilot, passengers, and related life support and safety and comfort equipment are no longer needed, thereby saving weight and complexity. Moreover, the physical constraints imposed by the limits of the human body, such as losing consciousness when exposed to accelerations around and above 9 g's even for a few seconds, are removed. Uninhabited aerial vehicles present new and exciting design challenges to aerospace engineers; such vehicles offer the chance for greatly improved performance and many new and unique applications. Because of their growing importance, we devote this section to UAVs as part of our overall introduction to flight.

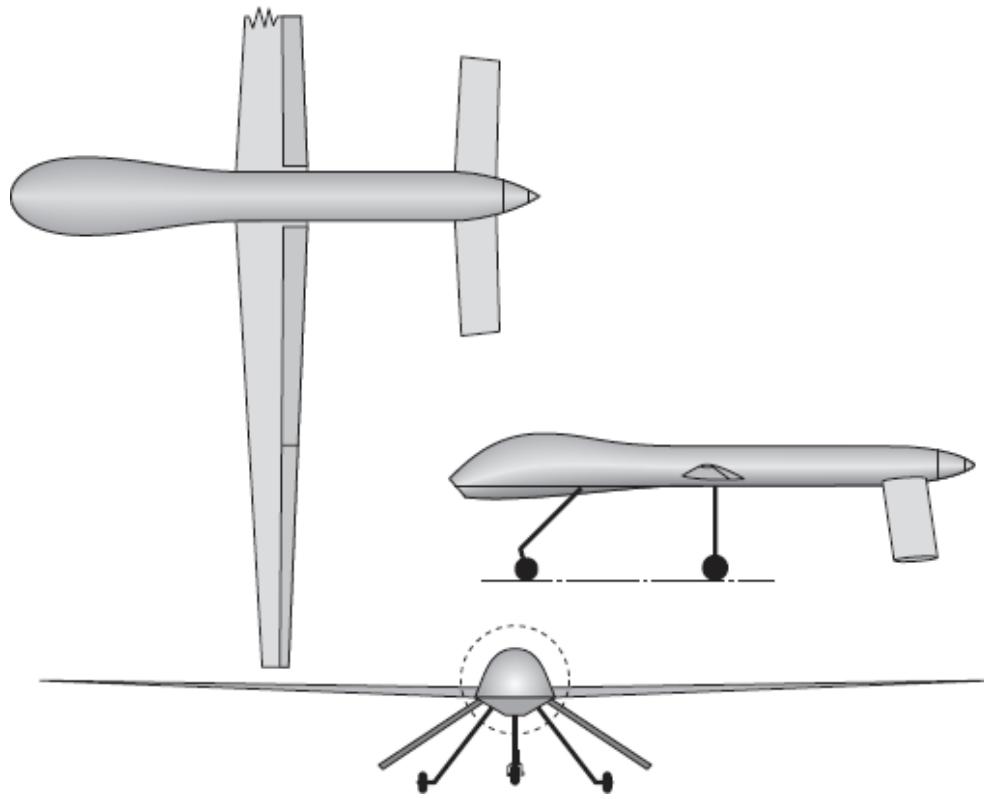


**Figure 6.63** Three-view of the General Atomics Predator endurance UAV.

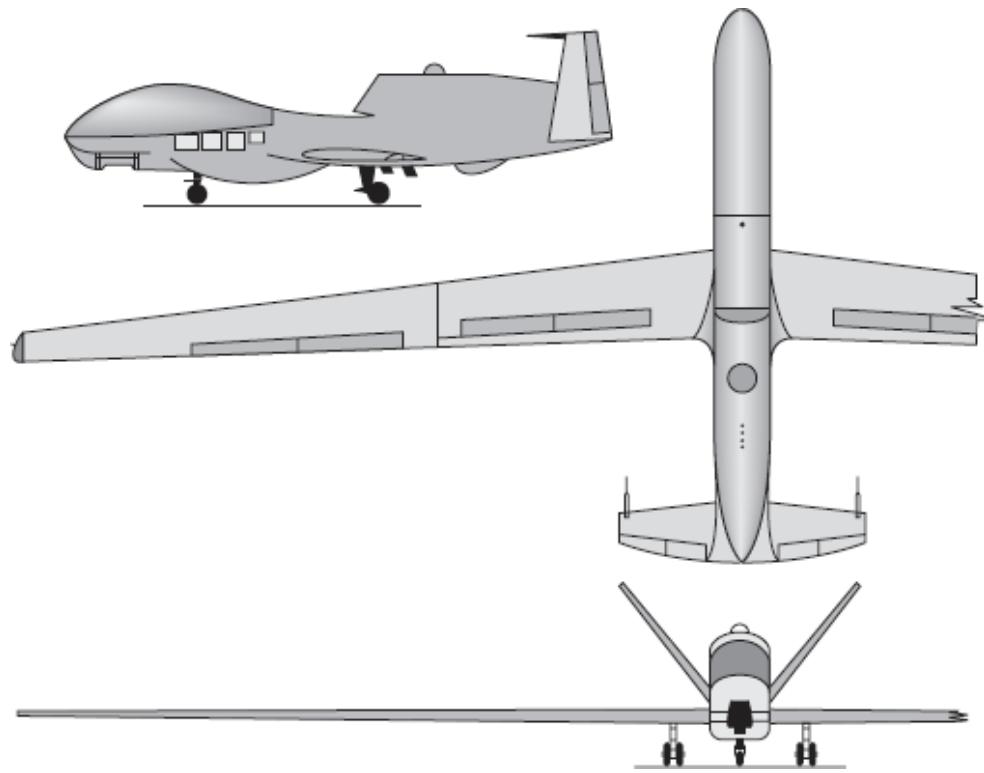

**Figure 6.64** Three-view of the Global Hawk high-altitude endurance UAV.

Let us take a look at a few examples of existing UAVs. To date the primary mission for UAVs has been reconnaissance. One of the best-known UAVs is the General Atomics Predator, shown in the three-view in Fig. 6.63. This aircraft has been used in campaigns in Bosnia, Afghanistan, and Iraq. The Predator has a wingspan of 14.85 m (48.7 ft), a high aspect ratio of 19.3, and a maximum takeoff weight of 1020 kg<sub>f</sub> (2250 lb). It is powered by a 105-hp Rotax four-cylinder reciprocating engine driving a two-blade, variable-pitch pusher propeller. Because it is a reconnaissance vehicle, the Predator is designed to stay in the air for a long time; its maximum endurance is greater than 40 hours. (If a human pilot were on board, such a long endurance would not be practical.) The high aspect ratio is one of the design features allowing such a long endurance. Endurance at low altitude is the primary performance characteristic of this airplane; its maximum speed is a slow 204 km/h (127 mi/h), its loiter speed is between 111 and 130 km/h (69 and 81 mi/h), and its service ceiling is a low 7.925 km (26,000 ft). The Predator has recently been used successfully as a UCAV in Afghanistan, launching missiles at targets on the ground.

In contrast to the low-altitude Predator, the Northrop Grumman [page 554](#) Global Hawk, shown in Fig. 6.64, is a high-altitude surveillance UAV. As seen in Fig. 6.64, the Global Hawk has an exceptionally high aspect ratio of 25, providing the same beneficial aerodynamic characteristics as that for the high-aspect-ratio wing used for the Lockheed high-altitude U-2 described in detail in the design box in Sec. 5.15. The Global Hawk is much larger than the Predator, with a 35.42-m (116.2 ft) wingspan and weighing 11,612 kg (25,600 lb) at takeoff. Its service ceiling is 19.8 km (65,000 ft), and it is designed for a loiter speed of 635 km/h (395 mi/h) at a loiter altitude of 15.2 to 19.8 km (50,000 ft to 65,000 ft). Its maximum endurance is 42 hours. In contrast to the piston-engine Predator, the Global Hawk is powered by a Rolls-Royce Allison AE 300 7H turbofan engine, producing 7600 lb of thrust at standard sea level.

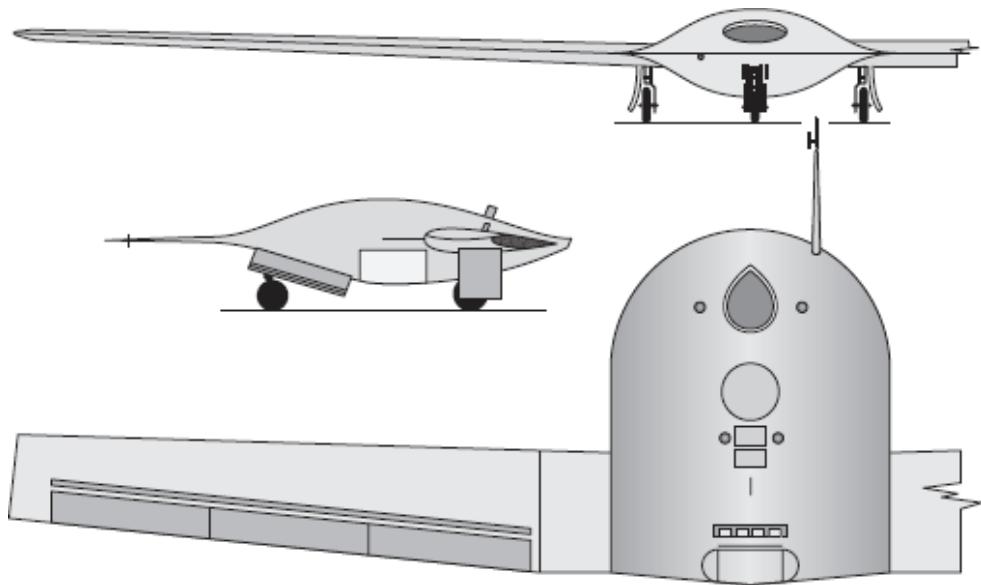

**Figure 6.65** Three-view of the DarkStar stealth UAV.

Among its many applications, the Global Hawk has become an instrument for atmospheric science research. On April 7, 2010, engineers at the NASA Dryden Research Center flew a Global Hawk for 14.1 hours, covering 4500 miles over the Pacific Ocean, taking it as far north as Alaska's Kodiak Island at altitudes up to 69,900 ft, much higher than could be attained by conventional piloted aircraft (only the U-2 shown in Fig. 5.52 could fly as high, and the U-2 can hardly be classified as “conventional”). Stuffed with 11 instruments to measure the chemical composition of the earth’s atmosphere, the dynamics of the atmosphere, and the distribution of clouds and aerosol particles, the Global Hawk is earmarked by NASA engineers and scientists (in collaboration with others from the National Oceanic and Atmospheric Administration) to fly from the equator to the Arctic Circle, and west of Hawaii. Moreover, on May 27, 2010, NASA planned to fly two Global Hawks over the Atlantic Ocean from its Wallops Flight Facility in Virginia during the 2012–2014 Atlantic hurricane seasons to study the nature of hurricanes, their energy processes, and their changes in velocity.

There are stealth UAVs. An example is the Lockheed Martin DarkStar, shown in Fig. 6.65. This was an experimental vehicle, and the program was terminated in 1999 after two prototypes were produced. The DarkStar nevertheless represents the design of a low-observable, high-altitude endurance UAV. Its size is midway between the Predator and the Global Hawk. The wingspan is 21.03 m (69 ft) with an aspect ratio of 14.8. Its

takeoff weight is 3901 kg (8600 lb). It was designed for a loiter altitude of 13.7 to 19.8 km (45,000 ft to 65,000 ft), with a cruising speed of 463 km/h (288 mi/h) at 13.7 km (45,000 ft). Maximum endurance was approximately 12 hours, lower than that for the Predator and the Global Hawk—possibly reflecting poorer aerodynamic characteristics that usually plague any airplane designed primarily for stealth.

page 556



**Figure 6.66** Some UAV designs.

(Source: U.S. Navy photo by Photographers Mate 2nd Class Daniel J. McLain.)

Additional UAV aircraft are shown in Fig. 6.66. These reflect a few of the hundreds of UAV designs at present.

**Uninhabited Combat Aerial Vehicles** The UAVs discussed in the preceding section were not designed to carry; they are noncombat vehicles for reconnaissance, command and control, and the like. In contrast, specialized uninhabited aerial vehicles are being designed for direct air-to-air and air-to-ground combat. These vehicles are called *uninhabited combat aerial vehicles (UCAVs)*, and they form a distinct and different class of vehicles. By taking the pilot out of a fighter or bomber, UVACs can be optimized for combat performance with greatly increased accelerations and maneuverability at g-forces (load factors) much higher than a human can tolerate. The design space for UCAVs is greatly expanded compared to airplanes occupied by humans, and combat tactics can be much more aggressive than those intended to protect the lives of the occupants.

An example of a UCAV is the Boeing X-45, shown in Fig. 6.67. This is an experimental vehicle intended to pave the way to future operational UCAVs. As shown in Fig. 6.67, the X-45 is a stealth configuration; a low-radar cross section will be absolutely necessary for operational UCAVs. The wingspan of the X-45 is 33.75 ft, and its gross weight is 15,000 lb. Powered by one Honeywell F-124 turbofan engine, the X-45 can achieve Mach 0.95. The X-45, and the design space it represents, is a paradigm shift for military aircraft. It represents the future.

---

page 557




**Figure 6.67** The X-45 stealth UCAV.

(Source: NASA Photo/Jim Ross.)

**Comment** Examine again Figs. 6.63 through 6.67. What you see are configurations that are *unconventional* compared to ordinary airplanes but that are conventional for the current generation of UAVs and UCAVs. These are just the beginning. Twenty years from now you will look back at the configurations in Figs. 6.63 through 6.67 and view them as the “Wright Flyers” of uninhabited aerial vehicles.

**Design Process for UAVs** The philosophy of conceptual airplane design is discussed in Sec. 6.22. A UAV is an airplane, and hence its conceptual design follows the seven-step process outlined in Sec. 6.22. The requirements (Step One) for a new UAV design are frequently driven by payload (based on the instruments and/or weapons required for its mission), range, endurance, and altitude. Because UAVs are relatively new, there is not the same depth of historical data on vehicle weights (Step Two) as in the case of conventional

airplanes. However, a first weight estimate might be obtained from data similar to that shown in Fig. 6.68 for previous UAVs. From the requirements, the weight of the payload (electronic instruments, etc.) and the range might be known. The abscissa in Fig. 6.68 is (range)  $\times$  (payload weight). The first estimate for takeoff weight can then be obtained from the ordinate of Fig. 6.68. This allows the conceptual design process to follow the remaining steps outlined in Sec. 6.22.

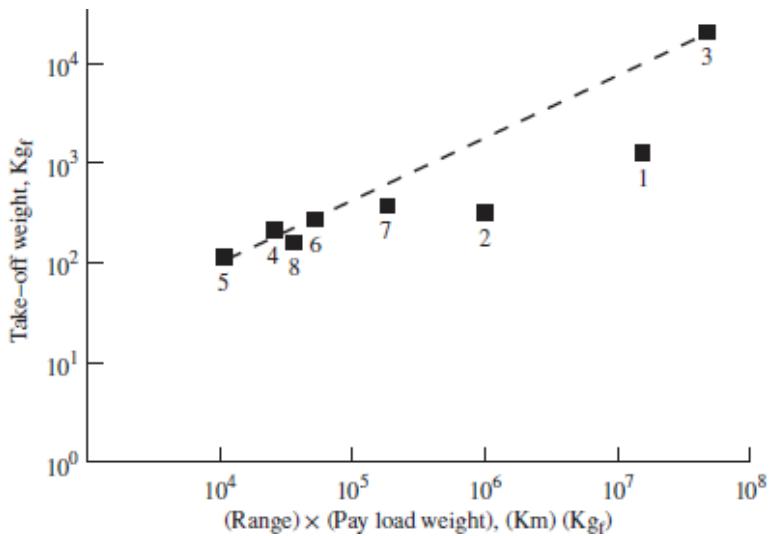

**Figure 6.68** Graph for initial weight estimate in the design process for a UAV. Data points: (1) General Atomics RQ-1A Predator, (2) Lockheed Martin/Boeing RQ-3A DarkStar, (3) Northrop Grumman RQ-4A Global Hawk, (4) BAE Systems Phoenix, (5) Meggitt ASR-4 Spectre, (6) IAI Searcher, (7) Silver Arrow Hermes 450, (8) AAI/IAI RQ-2 Pioneer.

### EXAMPLE 6.28

Consider the CP-1 airplane of our previous examples. Let us examine [page 558](#) the change in performance of this airplane if the pilot, passengers, seats, and instrument panel are removed and if we convert the CP-1 to a UAV. This is purely an academic exercise. In reality a UAV is point-designed from the beginning to optimize its performance; it is not simply the stripped-down CP-1 that we are considering in this example. Nevertheless, there is some value to examining the change in performance of the CP-1 when humans and related equipment are taken out of the airplane but the rest of the airplane is kept the

same. In this case, calculate (a)  $V_{\max}$  at sea level, (b) the maximum rate of climb at sea level, (c) the maximum range, and (d) the maximum endurance at sea level. The weights of the removed people and equipment include the following: four people (including the pilot) at 180 lb each, 720 lb total; four seats at 30 lb each, 120 lb total; and the instrument panel at 40 lb. The total weight decrease is 880 lb.

## ■ Solution

From our previous examples dealing with the CP-1, we note that the fuel empty weight is 2583 lb, and the weight of the fuel is 367 lb. For the “UAV version” of the CP-1, the fuel empty weight is

$$W_1 = 2583 - 880 = 1703 \text{ lb}$$

The gross weight is

$$W_0 = W_1 + W_f = 1703 + 367 = 2070 \text{ lb}$$

$$\text{Also, } AR = 7.37, C_{D,0} = 0.025, e = 0.8, \text{ and } S = 174 \text{ ft}^2$$

a. We could find  $V_{\max}$  by constructing the power-required curve and finding the intersection of this curve with the power-available curve, as discussed in Secs. 6.5 and 6.6. Instead, let us take the following analytical approach. Repeating Eq. (6.42),

$$T = q_{\infty} S \left( C_{D,0} + \frac{W^2}{q_{\infty}^2 S^2 \pi e AR} \right)$$

page 559

Multiplying by  $V_{\infty}$ , and noting that  $TV_{\infty} = P_A$ , we have

$$\begin{aligned} TV_{\infty} &= P_A = q_{\infty} V_{\infty} S \left( C_{D,0} + \frac{W^2}{q_{\infty}^2 S^2 \pi e AR} \right) \\ P_A &= \frac{1}{2} \rho_{\infty} V_{\infty}^3 S C_{D,0} + \frac{W^2}{\frac{1}{2} \rho_{\infty} V_{\infty} S \pi e AR} \end{aligned} \quad (\text{E 6.27.1})$$

From Example 6.4 for the CP-1,

$$P_A = \eta(\text{bhp}) = (0.80)(230) = 184 \text{ hp}$$

or  $P_A = (184)(550) = 1.012 \times 10^5 \text{ ft} \cdot \text{lb/s}$

Also,  $\frac{1}{2}\rho_\infty SC_{D,0} = \frac{1}{2}(0.002377)(174)(0.025) = 5.17 \times 10^{-3}$

$$\frac{W^2}{\frac{1}{2}\rho_\infty S\pi e AR} = \frac{(2080)^2}{\frac{1}{2}(0.002377)(174)\pi(0.8)(7.37)} = 1.119 \times 10^6$$

Hence Eq. (E 6.27.1) becomes

$$1.012 \times 10^5 = 5.17 \times 10^{-3}V_\infty^3 + \frac{1.119 \times 10^6}{V_\infty} \quad (\text{E 6.27.2})$$

Solving Eq. (E 6.27.2) for  $V_\infty$ ,

$$V_\infty = 266 \text{ ft/s}$$

Because  $P_A$  in Eq. (E 6.27.1) is the maximum power available, then  $V_\infty = V_{\max}$ .

Thus

$$V_{\max} = 266 \text{ ft/s}$$

Compare this result with that for the CP-1 obtained in Example 6.4, where  $V_{\max} = 265 \text{ ft/s}$ . There is virtually no change! Simply reducing the weight and keeping everything else the same did not materially influence  $V_{\max}$ . In particular, the wing area was kept the same, resulting in a lower wing loading than for the CP-1. The new wing loading is

$$\text{UAV: } \frac{W}{S} = \frac{2070}{174} = 11.9 \text{ lb/ft}^2$$

compared to

$$\text{CP-1: } \frac{W}{S} = \frac{2950}{174} = 17 \text{ lb/ft}^2$$

Maximum velocity depends on  $W/S$ ; in the design box in Sec. 6.8, we [page 560](#) see that  $V_{\max}$  increases as  $W/S$  increases. Even though the power-to-weight ratio was increased for our UAV, which would increase  $V_{\max}$ , the reduced wing loading negated the increased power-to-weight ratio. If we reduced the wing area of our sample UAV to keep  $W/S$  the same as for the CP-1,  $V_{\max}$  would increase noticeably. This illustrates the importance of point-designing a UAV from the beginning to take advantage of the new design space.

b. From Eq. (6.53), repeated here,

$$(R/C)_{\max} = \left(\frac{\eta P}{W}\right)_{\max} - 0.8776 \sqrt{\frac{W/S}{\rho_{\infty} C_{D,0}}} \frac{1}{(L/D)_{\max}^{3/2}}$$

From Eq. (6.85),

$$\begin{aligned} \left(\frac{C_L}{C_D}\right)_{\max} &= \left(\frac{L}{D}\right)_{\max} = \frac{\sqrt{C_{D,0}\pi e A R}}{2C_{D,0}} \\ &= \frac{\sqrt{(0.025)\pi(0.8)(7.37)}}{2(0.025)} = 13.6 \end{aligned}$$

Also,

$$\frac{W}{S} = \frac{2070}{174} = 11.9 \text{ lb/ft}^2$$

and

$$\left(\frac{\eta P}{W}\right)_{\max} = \frac{(0.8)(230)(550)}{2070} = 48.9 \text{ ft/s}$$

Hence, Eq. (6.53) yields

$$\begin{aligned} (R/C)_{\max} &= 48.9 - 0.8776 \sqrt{\frac{11.9}{(0.002377)(0.025)}} \frac{1}{(13.6)^{3/2}} \\ &= 48.9 - 7.8 = 41.1 \text{ ft/s} \end{aligned}$$

or

$$(R/C)_{\max} = (41.1)(60) = \boxed{2466 \text{ ft/min}}$$

Compare this result with that for the CP-1 from Example 6.10. The value of  $(R/C)_{\max}$  for the CP-1 at sea level is 1494 ft/min. By taking the humans and associated equipment out of the CP-1, we increase the maximum rate of climb by 65 percent—a dramatic increase.

c. The maximum range is obtained from Eq. (6.67), repeated here:

[page 561](#)

$$R = \frac{\eta}{c} \frac{C_L}{C_D} \ln \frac{W_0}{W_1}$$

where  $\eta = 0.8$ ,  $c = 2.27 \times 10^{-7} \text{ ft}^{-1}$  (from Example 6.19),  $(C_L/C_D)_{\max} = 13.6$ , and  $W_0/W_1 = 2070/1703 = 1.216$ . Equation (6.67) yields

$$R = \frac{0.8}{2.27 \times 10^{-7}} (13.6) \ln(1.216) = 9.37 \times 10^6 \text{ ft}$$

or

$$R = \frac{9.37 \times 10^6}{5280} = \boxed{1775 \text{ miles}}$$

Compare this with the maximum range of the CP-1 obtained in Example 6.19, where  $R = 1207$  miles. By taking the humans and associated equipment out of

the airplane, we increase the maximum range by 47 percent.

*d.* The maximum endurance at sea level is obtained from Eq. (6.68), repeated here:

$$E = \frac{\eta}{c} \frac{C_L^{3/2}}{C_D} (2\rho_\infty S)^{1/2} (W_1^{-1/2} - W_0^{-1/2})$$

From Eq. (6.87),

$$\begin{aligned} \left( \frac{C_L^{3/2}}{C_D} \right)_{\max} &= \frac{(3C_{D,0}\pi e AR)^{3/4}}{4C_{D,0}} \\ &= \frac{[3(0.025)\pi(0.8)(7.37)]^{3/4}}{4(0.025)} = 12.8 \\ E &= \frac{(0.8)(12.8)}{2.27 \times 10^{-7}} \sqrt{2(0.002377)(174)} [(1703)^{-1/2} - (2070)^{-1/2}] \\ E &= 9.24 \times 10^4 \text{ s} = \frac{9.24 \times 10^4}{3600} = \boxed{25.7 \text{ h}} \end{aligned}$$

Compare this with the maximum endurance of the CP-1 obtained in Example 6.19, where  $E = 14.4$  hours. By taking the humans and associated equipment out of the airplane, we increase the maximum endurance by 78 percent!

*Note:* This example demonstrates the substantial increases in maximum rate of climb, range, and endurance that can be obtained simply by taking the humans and associated equipment out of an existing airplane. Imagine the even larger increases in performance that can be obtained by point-designing the UAV from the beginning rather than just modifying an existing airplane.

### EXAMPLE 6.29

Consider two military airplanes: one a conventional piloted airplane limited to a maximum load factor of 9, and the other a UCAV designed for a maximum load factor of 25. At the same flight velocity, compare the turn radius and the turn rate for these two aircraft.

#### ■ Solution

Repeating Eq. (6.118), the turn radius  $R$  is

$$R = \frac{V_\infty^2}{g\sqrt{n^2 - 1}}$$

Letting  $R_1$  denote the turn radius for the UCAV and  $R_2$  denote the turn radius for the conventional airplane, we have from Eq. (6.118) for the same  $V_\infty$ ,

$$\frac{R_1}{R_2} = \sqrt{\frac{n_2^2 - 1}{n_1^2 - 1}} = \sqrt{\frac{(9)^2 - 1}{(25)^2 - 1}} = 0.36$$

page 562

Repeating Eq. (6.119) for turn rate  $\omega$ ,

$$\omega = \frac{g\sqrt{n^2 - 1}}{V_\infty}$$

Letting  $\omega_1$  and  $\omega_2$  denote the turn rates for the UCAV and conventional airplane, respectively, we have from Eq. (6.119) for the same  $V_\infty$ ,

$$\frac{\omega_1}{\omega_2} = \sqrt{\frac{n_1^2 - 1}{n_2^2 - 1}} = \sqrt{\frac{(25)^2 - 1}{(9)^2 - 1}} = 2.8$$

*Note:* The UCAV can turn in a circle almost one-third the radius of the conventional airplane and do it at almost three times the turn rate—a spectacular increase in maneuverability.

---

## 6.21 MICRO AIR VEHICLES


A special type of very small UAVs, with wingspans on the order of 15 cm or less and weights less than 0.09 kg, came onto the aeronautical scene beginning in the 1990s. Called *micro air vehicles*, their missions are often for the sensing of biological agents, chemical compounds, and nuclear materials within a localized area. They can be used for anti-crime and anti-terrorist surveillance. They can be made as small as large insects, and can fly through corridors and around corners in buildings. They are growing in importance, and therefore justify some mention here. For a review of micro air vehicle design, see Tom Mueller et al., *Introduction to the Design of Fixed-Wing Micro Air Vehicles*, American Institute of Aeronautics and Astronautics, Reston, VA, 2007.

A baseline configuration for one type of micro air vehicle is shown in Fig. 6.69, and a photograph of a similar vehicle appears in Fig. 6.70. The small size and low speed of these micro air vehicles place them squarely into a low Reynolds number aerodynamic regime, with  $Re < 100,000$ . All of the

conventional aircraft treated in this book, and indeed in everyday use, fly at Reynolds numbers in the millions. The low Reynolds number associated with micro air vehicles is arguably the biggest challenge in their design. The aerodynamics of airfoils and wings at low Reynolds numbers is quite different than that at high Reynolds numbers.

---

page 563

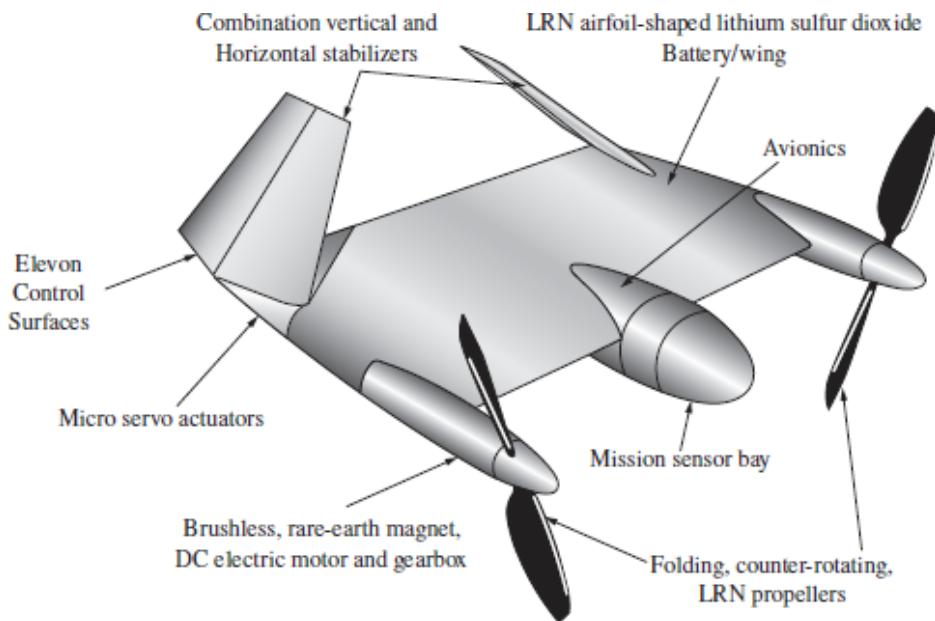

**Figure 6.69** Conceptual micro air vehicle as designed by R. J. Foch, Naval Research Laboratory.

For example, Fig. 6.71 shows the streamlines over an airfoil at  $Re = 100,000$ , as obtained from a computational fluid dynamics (CFD) computer program. At this low Reynolds number, the flow over the airfoil is laminar (Fig. 6.71a). A region of flow separation occurs over this airfoil even at a zero angle of attack, as seen in Fig. 6.71a. This is caused by a laminar separation bubble that occurs just downstream of the leading edge of the airfoil. Such laminar separation bubbles, with the ensuing separated flow, are characteristic of low-Reynolds-number flow over an airfoil with normal thickness. The consequence of this separated flow (which is analogous to the stall phenomena for airfoils at high angles of attack) is that the lift dramatically decreases, the drag skyrockets, and the all-important  $L/D$  for the airfoil is materially reduced. In contrast, if the flow is artificially made turbulent in the same CFD computer calculation, attached flow is obtained, as seen in Fig. 6.71b. The lift coefficient for the turbulent attached flow is 0.45 compared to 0.05 for the laminar separated flow. (See A. P. Kothari & J. D. Anderson, Jr.,


“Flows over Low Reynolds Number Airfoils—Compressible Navier-Stokes Numerical Solutions,” AIAA Paper 85-0107, presented at the AIAA 23rd-Aerospace Sciences Meeting, Reno, Nevada, January 14–17, 1985.)

Also, note that the aspect ratios of the micro air vehicles shown in Figs. 6.69 and 6.70 are low, on the order of 1 to 2. Thus, the aerodynamic characteristics of micro air vehicles are those of low-Reynolds-number flow over low-aspect wings—both conspiring to decrease lift and increase drag. Maximum lift-to-drag ratios on the order of 4 to 6 are typical.




**Figure 6.70** A Battlefield Airman Targeting Micro Air Vehicle is recovered after it successfully lands during Exercise Bold Quest at Eglin Air Force Base, July 2008.

(Source: *U.S. Air Force photo/Casey Bain.*)

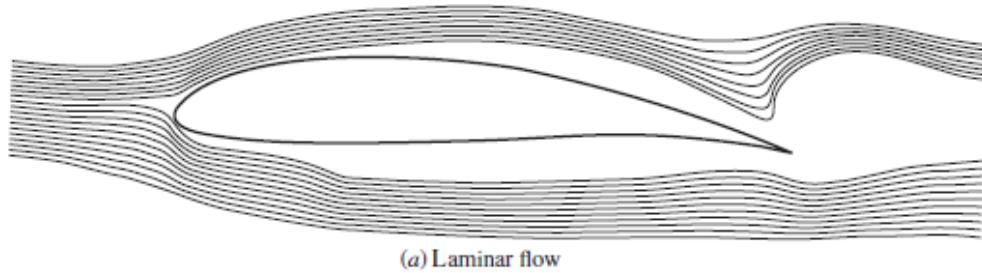

(a) Laminar flow

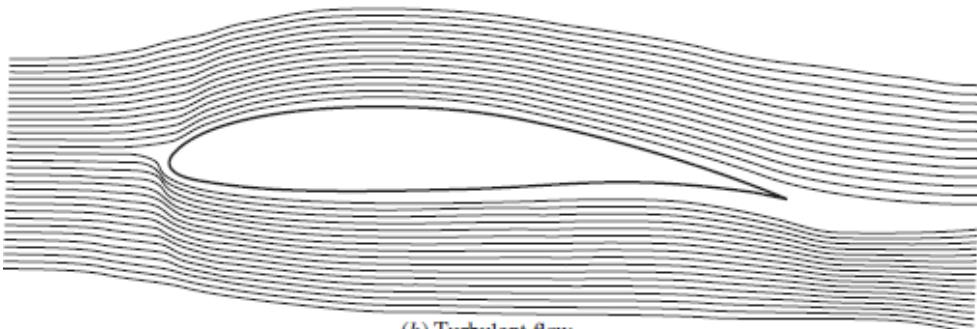

(b) Turbulent flow

**Figure 6.71** Computational fluid dynamic calculations of the flow over a Wortmann FX63-137 airfoil.  $Re = 100,000$ ,  $M = 0.5$ . (a) Laminar flow. (b) Turbulent flow.

(Source: *Calculations by the author and Dr. A. J. Kothari.*)

[page 564](#)

[page 565](#)

Once the aerodynamic properties of a given micro air vehicle are known, as well as the thrust or power from the miniature engines, its performance can be calculated using the techniques and equations developed in this chapter. The performance calculation “sees” the aerodynamics, and the aerodynamics “sees” the low-Reynolds-number, low-aspect-ratio configuration.

## 6.22 QUEST FOR AERODYNAMIC EFFICIENCY

Faster and higher—that has been the clarion call of airplane design throughout the 20th century, as described in detail in Sec. 1.11. In that section, however, we noted that today the philosophy of higher and faster in airplane design is now mitigated by other considerations such as safer, cheaper, more reliable, quieter, and more environmentally acceptable. One approach toward obtaining these goals is to improve the airplane efficiency, both the aerodynamic efficiency and the engine efficiency. In this section we will discuss the quest for improving aerodynamic efficiency, and in Ch. 9) we will consider the matter of improving engine efficiency.

### 6.22.1 Measure of Aerodynamic Efficiency

The principal measure of aerodynamic efficiency for an airplane is its lift-to-drag ratio,  $L/D$ . The higher the value of  $L/D$ , the higher is the rate of climb (see Sec. 6.8). For gliding flight,  $L/D$  is everything—completely dictating the glide angle, and hence the gliding distance covered over the ground (see Sec. 6.9). The higher the  $L/D$ , the smaller is the glide angle and hence the larger is the distance covered over the ground. But the most powerful impact of the lift-to-drag ratio on airplane efficiency is through range and endurance as discussed in detail in Secs. 6.12 and 6.13. The higher the  $L/D$ , the higher are both range and endurance for both propeller-driven and jet-propelled airplanes. Specifically, for a propeller-driven airplane, range is directly proportional to  $C_L/C_D$ , and endurance is directly proportional to  $C_L^{3/2}/C_D$ . For a jet-propelled airplane, range is directly proportional to  $C_L^{1/2}/C_D$  and endurance is directly proportional to  $C_L/C_D$ . These are no small consequences;  $L/D$  has a first-order effect on both range and endurance, which in turn are an important bell wether of airplane efficiency.

*Special Note:* The equation for the range of a jet-propelled airplane is derived in Sec. 6.13.2, where the result is given as Eq. (6.77), indicating that range varies explicitly with  $C_L^{1/2}/C_D$ . However, this does not diminish the importance of  $L/D$  for a jet airplane. Intermediate in the derivation of Eq. (6.77) is Eq. (6.75), which shows that

$$R \propto V_\infty \frac{C_L}{C_D} = V_\infty \frac{L}{D}$$

Recalling that  $V_\infty = a_\infty M_\infty$  where  $a_\infty$  is the speed of sound and  $M_\infty$  is the flight Mach number, and noting that the derivation assumes flight at constant standard altitude, where  $a_\infty$  is constant, the above relation for range shows

$$R \propto M_\infty \frac{L}{D}$$

Thus, for a jet airplane, maximum range is obtained by flying at

page 566

$$\left( M_\infty \frac{L}{D} \right)_{\max}$$

This result explicitly demonstrates the importance of  $L/D$  for the efficiency of a jet-propelled airplane.

The basic significance of the lift-to-drag ratio can easily be seen by the following thought experiment. Imagine that you are flying cross-country, or across an ocean, in a large wide-body commercial transport such as a Boeing 747 or an Airbus 380. For these large airplanes, the Reynolds number based on length is very large, and from our discussion on skin friction in Ch. 4), both the overall laminar and turbulent skin friction coefficients are correspondingly smaller than they would be for a smaller airplane. As a result, the lift-to-drag ratio for such large airplanes can be a relatively high value, say on the order of  $L/D = 20$ . What does this value really mean? It simply says that for every 20 pounds of lift produced by the airplane, it costs only one pound of drag. Taking a cue from basic physics, this is a tremendous “lever.” How are we paying the cost of this one pound of drag? In steady level flight, thrust equals drag, so we are paying the cost of producing 20 pounds of lift through the cost of the fuel consumed by the engine to produce one pound of the thrust to counter the one pound of drag. If indeed the lift-to-drag ratio were further increased, the required 20 pounds of lift (this requirement stays the same because in steady level flight, the lift must remain fixed, equal to the weight of the airplane) would be produced at a cost of *less* than one pound of drag, allowing the airplane to fly further and/or faster. This is why the lift-to-drag ratio is the measure of aerodynamic efficiency for the airplane.

### 6.22.2 What Dictates the Value of $L/D$ ?

Intuitively, you might think that the value of  $L/D$  can be increased simply by increasing the numerator—by increasing the lift. However, again we are reminded that for an airplane in steady, level flight, the lift must be equal to the *weight*, which is a design parameter for the airplane. For a given airplane in steady, level flight, the necessary value of lift is *fixed* by the weight. Hence, the value of  $L/D$  can be increased only by decreasing the denominator—*by decreasing drag*. The quest to increase aerodynamic efficiency, i.e., to increase the ratio of lift-to-drag, is the quest to *decrease drag*.

### 6.22.3 Sources of Aerodynamic Drag; Drag Reduction

Let us review our previous discussions in Chs. 4 and 5 about the sources and causes of aerodynamic drag, and examine how such drag can be reduced. Paramount in these discussions is the single, unifying thought that any aerodynamic force exerted on any object moving through air or any other gas or liquid medium is due to the two hands of nature that reach out and grab


hold of the object. These two hands are (1) the pressure distribution, and (2) the skin friction (shear stress) distribution, both exerted simultaneously over every square meter of the body surface exposed to the flow. The sum (in mathematical terms, the surface integral) of the pressure and shear stress distributions is the net aerodynamic force exerted by nature on the body. The component of this aerodynamic force acting along the direction of the relative wind is, of course, the drag. Therefore, drag is caused both by the pressure distribution (pressure drag) and the shear stress distribution (skin-friction drag), and nothing else. Throughout the evolution of the airplane since the beginning of the twentieth century, various types of drag have been identified by the aeronautics community, sometimes causing some confusion and unnecessary complication among students and the general aviation public, but in reality each type fundamentally is due to the surface pressure distribution, or the surface shear stress distribution, or both acting simultaneously.

Beginning with the *Wright Flyer* in 1903, and continuing with the [page 567](#) rather box-like biplane configurations with all its interwing struts and wires through the 1920s, the major source of drag was *pressure drag due to flow separation*, sometimes called “form drag.” The way to reduce such form drag is simply to *streamline* the entire airplane configuration in order to reduce, or in some cases, almost eliminate flow separation on the surface. This feature, however, was not appreciated by most airplane designers until the famous British aeronautical engineer Sir B. Melvill Jones gave a lecture at the Royal Aeronautical Society in London in 1929 entitled “The Streamline Airplane.” Jones was a professor of aeronautical engineering at Cambridge University and his analysis of the advantages of streamlining was so compelling that airplane designers were shocked into greater awareness of the value of streamlining. Jones led off his discussion with the following thought:

Ever since I first began to study aerodynamics, I have been annoyed by the vast gap which existed between the power actually expended on mechanical flight and the power ultimately necessary for flight in a correct shaped aeroplane. Every year, during my summer holiday, this annoyance is aggravated by contemplating the effortless flight of the sea birds and the correlated phenomena of the beauty and grace of their forms.

Jones went on to define the ideal airplane simply as one with no form drag, and to describe what would be necessary to achieve that lofty goal:



Unless bodies are “carefully shaped,” they do not necessarily generate streamline flow, but shed streams of eddies from various parts of their surface. The power absorbed by these eddies may be, and often is, many times greater than the sum of the powers absorbed by skin friction and induced drag. The drag of a real aeroplane therefore exceeds the sum of the induced power and skin friction drag by an amount which is a measure of *defective streamlining*.

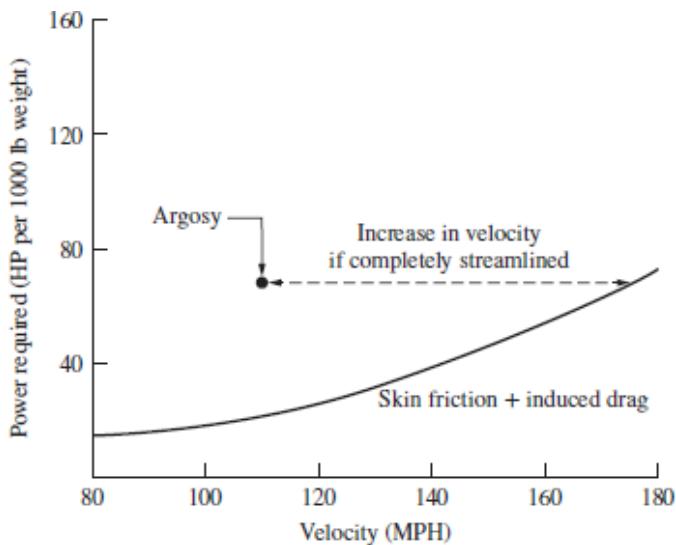

**Figure 6.72** Illustration of the velocity increase for a totally streamlined airplane.

Jones’ ideal airplane was one with no pressure drag due to flow separation, achieved by perfect streamlining. He illustrated his point with a graph of power required versus velocity for the ideal airplane with zero form drag, and then for comparison put on this graph a number of data points for the maximum velocity of actual airplanes existing at that time. A sample of his presentation is sketched in Fig. 6.72, which is a plot of power required versus velocity at sea level for the Armstrong-Whitworth Argosy, a large tri-motored biplane for commercial transport in the 1920s. The single data point represents the Argosy at its maximum velocity of 110 mi/h. The lower curve is the power-required curve for the Argosy assuming only skin friction drag and induced drag; this would be the power-required curve for a totally streamlined Argosy, i.e., no pressure drag due to flow separation—no form drag. The vertical distance between the lower curve and the real Argosy data point is the contribution due to form drag when the Argosy is at its maximum velocity; form drag contributes more than two-thirds of the total drag at

maximum velocity. The most important message in this figure, however, is the horizontal distance between the Argosy data point and the power-required curve for the ideal airplane. If the actual Argosy were transformed into Jones' ideal airplane with complete streamlining, its maximum velocity would increase dramatically from 110 mi/h to almost 180 mi/h. This was Melvill Jones' message to the airplane designers of that day, and it virtually knocked their socks off. The airplane designer's embracing of streamlining initiated the "design revolution" that took place in the 1930s. This evolution is illustrated in Fig. 6.73, from a presentation by the British engineer William S. Farren in 1944, which shows the box-like shape of the World War I British S.E.5 pursuit airplane morphing into the beautifully streamlined British Spitfire fighter of World War II.

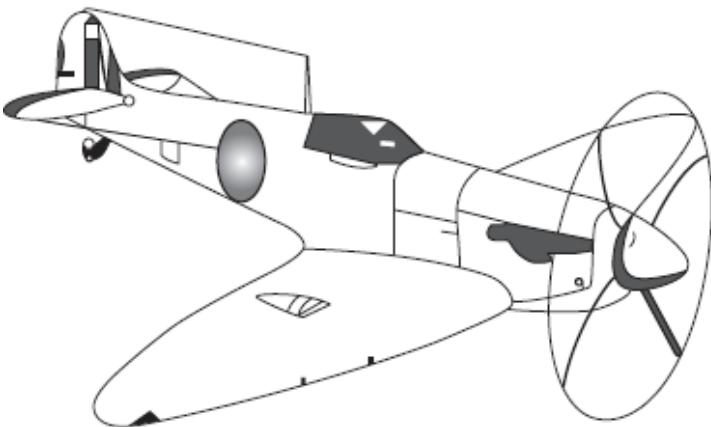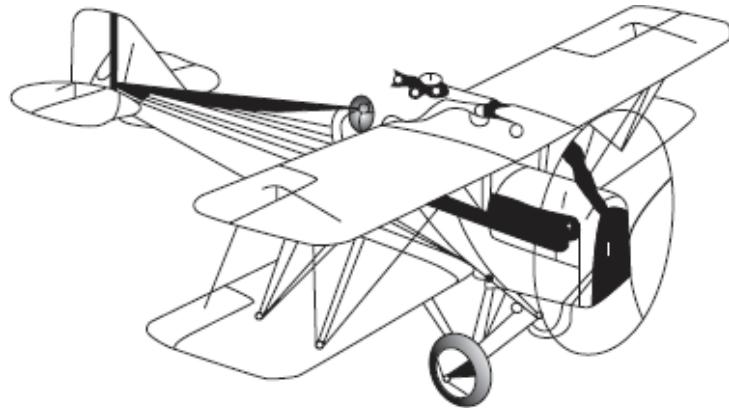

**Figure 6.73**

Airplanes have protuberances that stick out into the airflow, such as Pitot tubes, antennas, turrets, extended landing gear, etc. The flow over these protuberances is usually separated, and hence they are a source of pressure drag due to flow separation; this drag by itself is frequently identified

page 569

as *protuberance drag*, although it is nothing more than part of the overall pressure drag. It can be minimized by careful streamlining of the protuberance itself, and/or minimizing the amount of frontal area projecting into the flow. In the 1930s, the design of retractable landing gear that disappeared inside the wing, nacelle, or fuselage after takeoff and before landing went a long way to reduce protuberance drag. A little appreciated but important source of protuberance drag was round-head rivets used in the early days of all-metal airplane construction. The heads protruded into the airflow over the metal surface, causing an increase in drag. This extra drag was virtually eliminated when flush-riveting came into use in the 1930s.

*Cooling drag* is a term sometimes used when part of the airflow over a piston-engine powered airplane is used to cool the engine. For air-cooled radial engines, the airflow is passed directly over the cylinders with attendant high form drag. A properly designed cowling wrapped around the cylinders, however, can channel this airflow in an efficient manner to both enhance the cooling of the cylinders and greatly reduce the form drag, as discussed in Sec. 6.24. The development of the NACA cowling in the 1920s and early 1930s led to a dramatic reduction in drag for airplanes powered by air-cooled radial piston engines, and in some sense might be regarded as part of the streamlining of the airplane. For a liquid-cooled piston engine, the coolant that circulates through the engine is itself cooled by circulating through a radiator which in turn is cooled by airflow passing through the radiator, with an attendant increase in pressure drag—also labeled as cooling drag. Finally, for some airplanes, external vents are used for conducting part of the outside air for cooling the cockpit and cabin. The attendant pressure drag is also labeled cooling drag.

*Induced drag* is due to a redistribution of the surface pressure over a finite wing caused by the creation of wing tip vortices. Therefore, induced drag is a type of pressure drag. As noted in Ch. 5), induced drag can be dramatically reduced by increasing the aspect ratio of the wing. There is, however, a structural consideration that limits the aspect ratio. In airplane design, everything else being equal, increasing the wing aspect ratio necessitates a stronger and consequently a heavier wing structure. Winglets at the tips of the wing also serve to reduce induced drag.

*Wave drag* came into the aeronautical lexicon with the advent of supersonic flight. The source of wave drag on supersonic bodies is discussed in Sec. 5.11. In summary, shock waves press against the forward projecting areas of the vehicle, causing a substantial increase in pressure drag. This increase is

labeled wave drag because it is totally associated with the presence of shock waves. Hence, wave drag is a type of pressure drag. Standard techniques for reducing supersonic wave drag are the use of wing sweep (Sec. 5.16), thin wings with sharp leading edges (Sec. 5.11), and judicious tailoring of the fuselage.

Returning to the message contained in Fig. 6.72, the only way to [page 570](#) further increase the lift-to-drag ratio of the perfectly streamlined airplane is to *reduce skin-friction drag*. A comparison of Secs. 4.16 and 4.17 clearly demonstrates that turbulent skin friction is considerably higher than laminar skin friction drag. Unfortunately, nature tends to favor a state of maximum disorder, and hence the boundary layers in most aeronautical applications are turbulent. In Fig. 6.72 the skin friction drag for the Argosy was turbulent skin friction. The obvious approach to reducing skin-friction drag is to encourage the growth of laminar boundary layers over the surface. This has been a never-ending quest by aerodynamicists over the past century —fighting mother nature all the way.


Some progress has been made. The shape of an airfoil and other parts of an airplane can be optimized to create a favorable pressure gradient over larger distances along the surface. A favorable pressure gradient encourages laminar flow. The NACA laminar flow airfoils were an early case in point; however, as noted in Sec. 4.15, the realities of manufacturing and field use resulted in a surface rougher than the finely polished surfaces of the wind tunnel models used for the NACA experiments, and the hoped-for results from the NACA laminar flow airfoils were not realized in actual service. More recent NASA research on laminar flow airfoil shapes designed by the use of modern computational fluid dynamics in conjunction with the use of smooth composite surfaces has shown some promise, with running lengths of laminar flow over 50 percent of the surface, or more. The quest goes on, driven by the holy grail of higher and higher values of  $L/D$ .

Efforts to obtain higher values of  $L/D$  by means of shape change and the use of very smooth surfaces are identified as *passive* techniques; the work is done by humans “upfront,” and then nature takes over and does the rest. In contrast, a great deal of research has been done on the use of “flow control,” sucking the boundary layer off the surface through many thousands of pinholes in the surface in order to greatly reduce skin friction. Such techniques are called *active* techniques, because nature is being actively modified by continuous mechanical action. To date, such boundary-layer suction techniques have not been utilized on any production aircraft; the

reductions in skin friction can be considerable, but the aerodynamic advantage so far has been negated by the extra power requirements and the weight of the machinery needed to create the vacuum for the sucking action. Again, however, the quest goes on.

#### 6.22.4 Some Innovative Aircraft Configurations for High $L/D$

The conventional aircraft shape for the past one hundred years has been essentially a tube (fuselage) with wings. The tube carries the payload (people, freight, etc.). New, innovative ideas for different configurations that might have substantially higher lift-to-drag ratios are being encouraged by NASA, and are taking form on the “drawing boards” (so to speak) in government laboratories, industry, and universities. A few examples are discussed here.

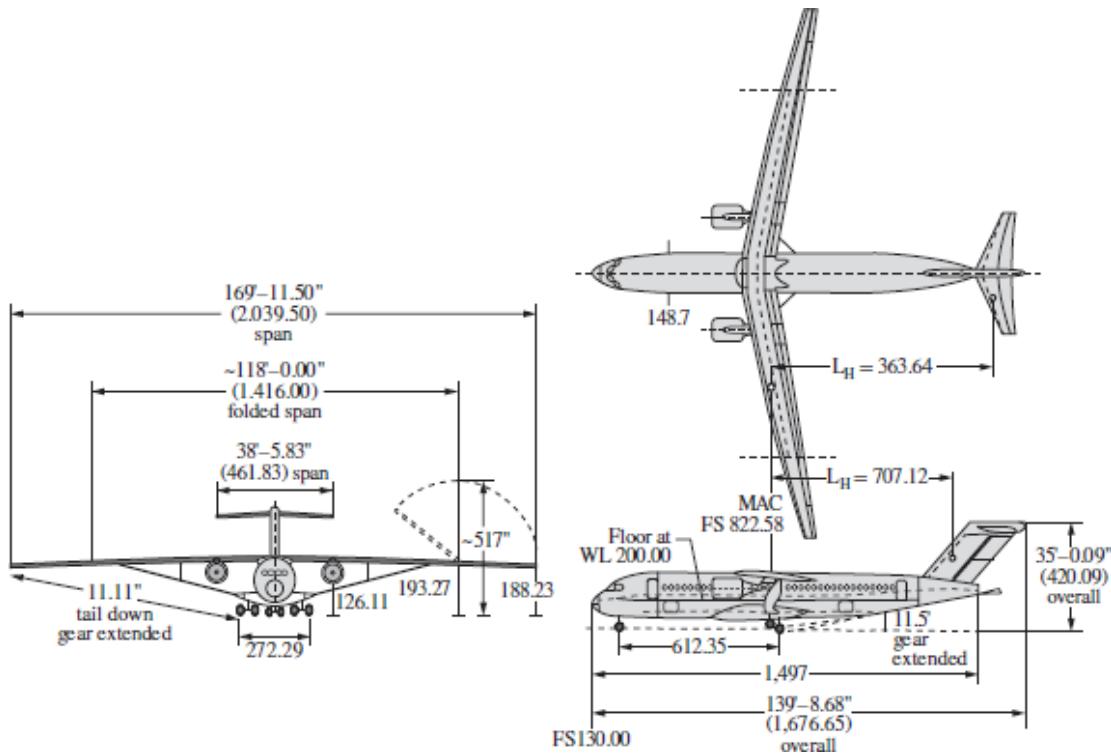


**Figure 6.74** A truss-braced wing configuration based on NASA studies.

A configuration which still incorporates the tube-and-wing [page 571](#) concept, but is innovative in regard to the wing aerodynamics and structural support, is shown in Fig. 6.74. Called a truss-braced wing configuration, it allows the use of a very high aspect ratio wing, and circumvents the heavy internal structure that would ordinarily be necessary with the high aspect ratio wing by supporting the wing with an external truss

anchored at the bottom of the fuselage and attaching to the bottom of the high-mounted wing, as shown in the three-view in Fig. 6.74. The aerodynamically designed truss contributes marginally to the lift and adds little to the drag, while at the same time making possible the very high aspect ratio wing. The net result is an airplane with a lift-to-drag ratio of about 26, more than twenty-five percent higher than that for existing conventional aircraft.

The blended wing body shown in Fig. 6.75 is yet a more innovative configuration. It is essentially a flying wing merged with a center body that is a thick airfoil shape with a bullet nose. By replacing the conventional tube fuselage with a center body that itself is an efficient lifting surface, the spanwise lift distribution from one wing tip to the other is closer to the ideal elliptical distribution (see Sec. 5.14). The lift-to-drag ratio of a blended wing body can be on the order of 30, about 50% higher than a conventional configuration.

Innovative configurations designed to achieve high lift-to-drag ratios such as those described above point the way to the future. For young airplane designers, perhaps this is the ultimate quest.

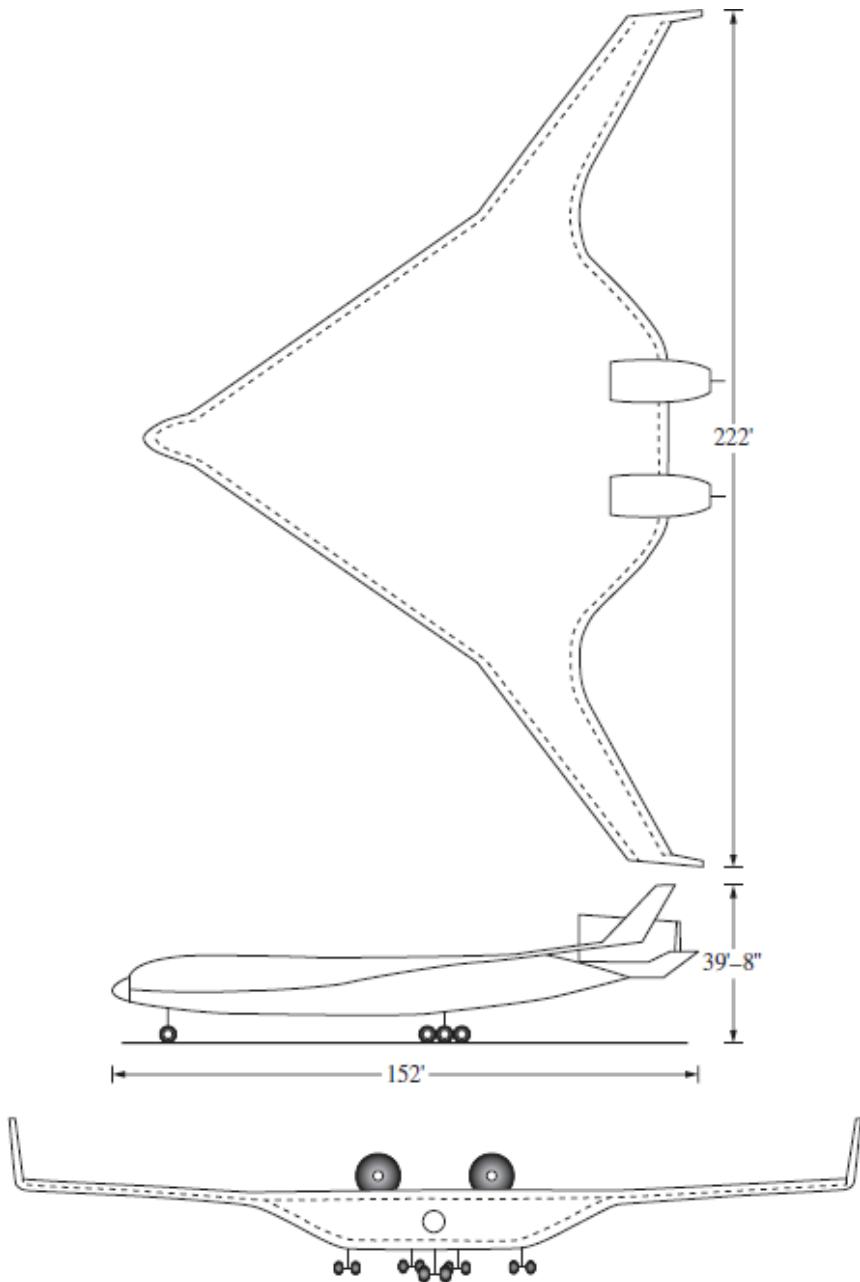

**Figure 6.75** A generic blended wing body configuration.

---

page 572

## 6.23 A COMMENT

We end the technical portion of this chapter by noting that detailed computer programs now exist within NASA and the aerospace industry for the accurate estimation of airplane performance. These programs are usually geared to specific types of airplanes—for example, general aviation aircraft (light single- or twin-engine private airplanes), military fighter aircraft, and

commercial transports. Such considerations are beyond the scope of this book. However, the principles developed in this chapter are stepping-stones to more advanced studies of airplane performance; the bibliography at the end of this chapter provides some suggestions for such studies.

---


page 573

## 6.24 HISTORICAL NOTE: DRAG REDUCTION—THE NACA COWLING AND THE FILLET


The radial piston engine came into wide use in aviation during and after World War I. As described in Ch. 9), a radial engine has its pistons arranged in a circular fashion about the crankshaft, and the cylinders themselves are cooled by airflow over the outer finned surfaces. Until 1927 these cylinders were generally directly exposed to the main airstream of the airplane, as sketched in Fig. 6.76. As a result, the drag on the engine–fuselage combination was inordinately high. The problem was severe enough that a group of aircraft manufacturers met at Langley Field on May 24, 1927, to urge NACA to investigate means of reducing this drag. Subsequently, under the direction of Fred E. Weick, an extensive series of tests was conducted in the Langley 20-ft propeller research tunnel using a Wright Whirlwind J-5 radial engine mounted to a conventional fuselage. In these tests, various types of aerodynamic surfaces, called *cowlings*, were used to cover, partly or completely, the engine cylinders, directly guiding part of the airflow over these cylinders for cooling but at the same time not interfering with the smooth primary aerodynamic flow over the fuselage. The best cowling, illustrated in Fig. 6.77, completely covered the engine. The results were dramatic: Compared with the uncowed fuselage, a full cowling reduced the drag by a stunning 60 percent! This is illustrated in Fig. 6.78, taken directly from Weick’s report, titled “Drag and Cooling with Various Forms of Cowling for a Whirlwind Radial Air-Cooled Engine,” NACA Technical Report No. 313, published in 1928. Virtually all radial engine–equipped airplanes since 1928 have been designed with a full NACA cowling. The development of this cowling was one of the most important aerodynamic advancements of the 1920s; it led the way to a major increase in aircraft speed and efficiency.

---


page 574

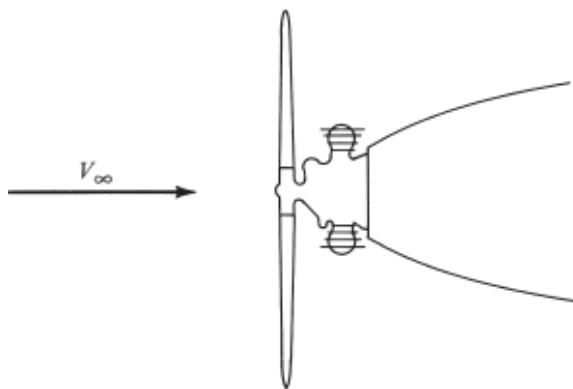

**Figure 6.76** Engine mounted with no cowling.

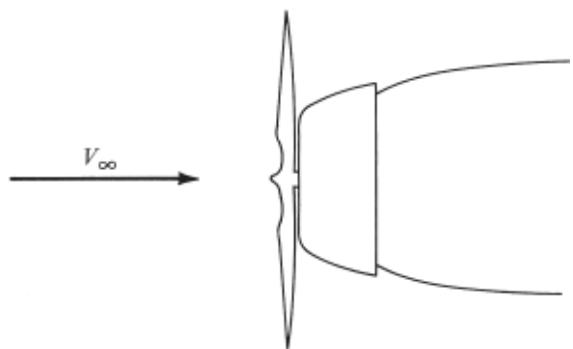


**Figure 6.77** Engine mounted with full cowling.

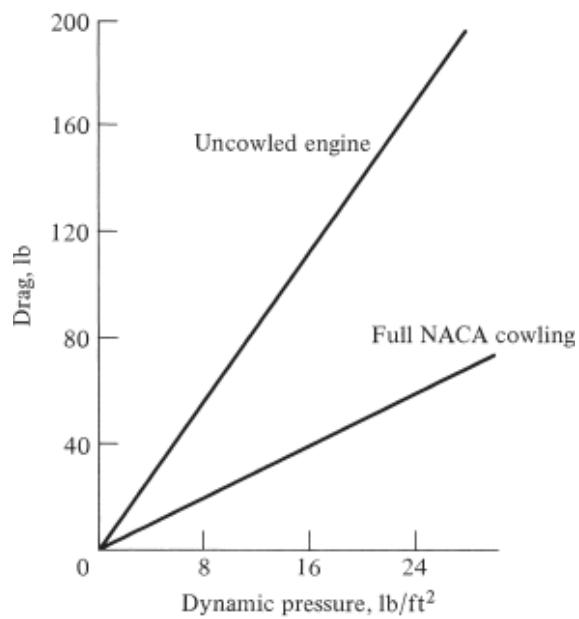

**Figure 6.78** Reduction in drag due to a full cowling.

A few years later a second major advancement was made by a completely different group and on a completely different part of the airplane. In the early 1930s the California Institute of Technology at Pasadena, California, established a program in aeronautics under the direction of Theodore von Karman. Von Karman, a student of Ludwig Prandtl, became probably the leading aerodynamicist of the 1920–1960 period. At Caltech, von Karman established an aeronautical laboratory of high quality, which included a large subsonic wind tunnel funded by a grant from the Guggenheim Foundation. The first major experimental program in this tunnel was a commercial project for Douglas Aircraft Company. Douglas was designing the DC-1, the forerunner of a series of highly successful transports (including the famous DC-3, which revolutionized commercial aviation in the 1930s). The DC-1 was plagued by unusual buffeting in the region where the wing joined the fuselage. The sharp corner at the juncture caused severe flow field separation, which resulted in high drag as well as shed vortices that buffeted the tail. The Caltech solution, which was new and pioneering, was to fair the trailing edge of the wing smoothly into the fuselage. These fairings, called *fillets*, were empirically designed and were modeled in clay on the DC-1 wind tunnel models. The best shape was found by trial and error. The addition of a fillet (see Fig. 6.79) solved the buffeting problem by smoothing out the separated flow and hence also reduced the interference drag. Since that time, fillets have become a standard airplane design feature. Moreover, the fillet is an excellent example of how university laboratory research in the 1930s contributed directly to the advancement of practical airplane design.

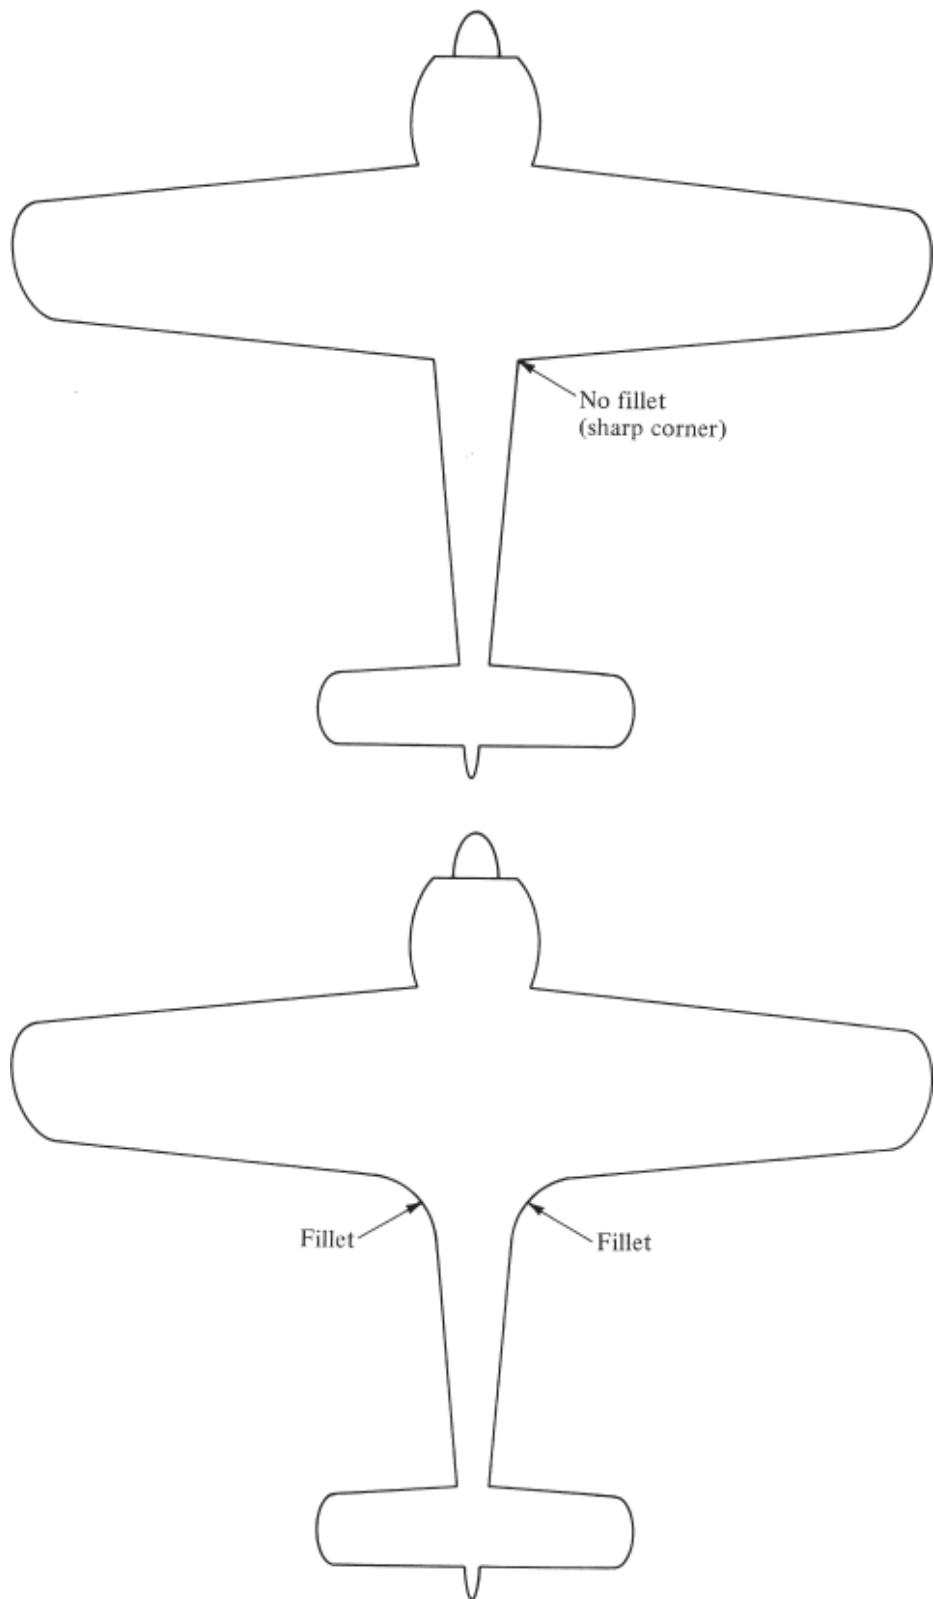

**Figure 6.79** Illustration of the wing fillet.

In Chs. 5 and 6 we have underscored the importance of the wing aspect ratio in airplane design. In particular, for subsonic flight we have noted that by increasing the aspect ratio, we can obtain a lower induced drag coefficient and hence a higher maximum  $L/D$  ratio. Now that we are at the end of our discussions of airplane aerodynamics and performance, it is worthwhile to expand this consideration by asking: For an airplane in steady, level flight, what design parameter dictates the induced *drag* itself (as contrasted with the induced drag *coefficient*)? Is it the aspect ratio, as intuition might indicate, or is it another design parameter? The answer is developed in the following discussion, which will help to expand our understanding of induced drag and will provide an enhanced physical understanding of the definition of aspect ratio.

From Eq. (6.1c), the *coefficient* of drag due to lift (which for subsonic flight at normal angles of attack is mainly due to the induced drag coefficient) is given by

$$C_{D,i} = \frac{C_L^2}{\pi e AR} \quad (6.144)$$

In turn, the *drag* due to lift is

$$D_i = q_\infty S C_{D,i} = q_\infty S \frac{C_L^2}{\pi e AR} \quad (6.145)$$

For steady, level flight,  $L = W$ . Hence

$$C_L^2 = \left( \frac{L}{q_\infty S} \right)^2 = \left( \frac{W}{q_\infty S} \right)^2 \quad (6.146)$$

Substituting Eq. (6.146) into (6.145), we have

$$D_i = q_\infty S \left( \frac{W}{q_\infty S} \right)^2 \frac{1}{\pi e AR} \quad (6.147)$$

Because  $AR = b^2/S$ , Eq. (6.147) can be written as

$$D_i = \frac{1}{\pi e} q_\infty S \left( \frac{W}{q_\infty S} \right)^2 \left( \frac{S}{b^2} \right) \quad (6.148)$$

Note that the wing area cancels out of Eq. (6.148), and we are left with

$D_i = \frac{1}{\pi e q_\infty} \left( \frac{W}{b} \right)^2$

(6.149)

This is a revealing result! The drag due to lift in steady, level flight—the force itself—depends explicitly not on the aspect ratio, but rather on

another design parameter,  $W/b$ , called the *span loading*:

$$\text{Span loading} \equiv \frac{W}{b} \quad (6.150)$$

The drag due to lift varies with the square of the span loading.

From Eq. (6.149), we see that the drag due to lift, for a given weight airplane, can be reduced simply by increasing the wingspan. In so doing, the wing-tip vortices (the physical source of induced drag) are simply moved farther away, hence lessening their effect on the rest of the wing and, in turn, reducing the induced drag. This makes good intuitive sense.

In light of this, the span loading  $W/b$  takes its place as yet another design parameter that airplane designers can adjust during the conceptual design process for a new airplane. Of course the span loading and the aspect ratio are related via

$$\frac{W}{b} = \left( \frac{W}{S} \right) \frac{b}{\text{AR}} \quad (6.151)$$

where  $W/S$  is the familiar wing loading.

Let us return to the concept of aspect ratio, which now takes on enhanced significance. First note that the zero-lift drag, which we denoted by  $D_0$ , is given by  $q_\infty S C_{D,0}$  and hence is proportional to the wing area, whereas the drag due to lift for steady, level flight is proportional to the square of the span loading via Eq. (6.149). The *ratio* of these two drags is

$$\frac{D_i}{D_0} = \left[ \frac{1}{\pi e q_\infty} \left( \frac{W}{b} \right)^2 \right] \quad (6.152)$$

In Eq. (6.152), the ratio  $(W/b)^2/S$  can be cast as

$$\frac{(W/b)^2}{S} = \frac{(W/S)^2}{b^2/S} \frac{(W/S)^2}{\text{AR}} \quad (6.153)$$

Substituting Eq. (6.153) into (6.152), we have

$$\frac{D_i}{D_0} = \frac{1}{\pi e q_\infty^2 C_{D,0}} \frac{(W/S)^2}{\text{AR}} \quad (6.154)$$

From Eq. (6.154), we can make the following statement: For specified values of the design parameters  $W/S$  and  $C_{D,0}$ , increasing the design aspect ratio will decrease the drag due to lift relative to the zero-lift drag. So the aspect ratio predominantly controls the *ratio* of lift-induced drag to the zero-lift drag, whereas the span loading controls the actual *value* of the lift-induced drag.

## 6.25 HISTORICAL NOTE: EARLY PREDICTIONS OF AIRPLANE PERFORMANCE

The airplane of today is a modern work of art and engineering. In turn, the prediction of airplane performance as described in this chapter is sometimes viewed as a relatively modern discipline. However, contrary to intuition, some of the basic concepts have roots deep in history; indeed, some of the very techniques detailed in previous sections were being used in practice only a few years after the Wright brothers' successful first flight in 1903. This section traces a few historic paths for some of the basic ideas of airplane performance:

1. Some understanding of the *power required*  $P_R$  for an airplane [page 577](#) was held by George Cayley. He understood that the rate of energy lost by an airplane in a steady glide under gravitational attraction must be essentially the power supplied by an engine to maintain steady, level flight. In 1853 Cayley wrote,

The whole apparatus when loaded by a weight equal to that of the man intended ultimately to try the experiment, and with the horizontal rudder [the elevator] described on the essay before sent, adjusted so as to regulate the oblique descent from some elevated point, to its proper pitch, it may be expected to skim down, with no force but its own gravitation, in an angle of about 11 degrees with the horizon; or possibly, if well executed, as to direct resistance something less, at a speed of about 36 feet per second, if loaded 1 pound to each square foot of surface. This having by repeated experiments, in perfectly calm weather, been ascertained, for both the safety of the man, and the datum required, let the wings be plied with the man's utmost strength; and let the angle measured by the greater extent of horizontal range of flight be noted; when this point, by repeated experiments, has been accurately found, we shall have ascertained a sound practical basis for calculating what engine power is necessary under the same circumstances as to weight and surface to produce horizontal flight. . . .

2. The *drag polar*, a concept introduced in Secs. 5.14 and 6.1, sketched in Figs. 5.49 and 6.1 and embodied in Eq. (6.1a), represents simply a plot of  $C_D$  versus  $C_L$ , illustrating that  $C_D$  varies as the square of  $C_L$ . A knowledge of the drag polar is essential to the calculation of airplane performance. It is interesting that the first drag polars were drawn and

published by Otto Lilienthal (see Sec. 1.5) in 1889, although he did not call them such. The term *polar* for these diagrams was introduced by Gustave Eiffel in 1909. Eiffel, the designer of the Eiffel Tower in Paris, built two wind tunnels and carried out extensive aerodynamic testing from 1909 to the time of his death in 1923.

3. Some understanding of the requirements for *rate of climb* page 578 existed as far back as 1913, when in an address by Granville E. Bradshaw before the Scottish Aeronautical Society in Glasgow in December, the following comment was made: “Among the essential features of all successful aeroplanes [is that] it shall climb very quickly. This depends almost entirely on the weight efficiency of the engine. The rate of climb varies directly as the power developed and indirectly as the weight to be lifted.” This is essentially a partial statement of Eq. (6.50).
4. No general understanding of the prediction of *airplane performance* existed before the 20th century. The excellent summary of aeronautics written by Octave Chanute in 1894, *Progress in Flying Machines*, does not contain any calculational technique even remotely resembling the procedures set forth in this chapter. At best it was understood by that time that lift and drag varied as the first power of the area and as the second power of velocity, but this does not constitute a performance calculation. However, this picture radically changed in 1911. In that year the Frenchman Duchène received the Monthyon Prize from the Paris Academy of Sciences for his book titled *The Mechanics of the Airplane: A Study of the Principles of Flight*. Captain Duchène was a French engineering officer, born in Paris on December 27, 1869, educated at the famous École Polytechnique, and later assigned to the fortress at Toul, one of the centers of “aerostation” in France. It was in this capacity that Captain Duchène wrote his book during 1910–1911. In this book the basic elements of airplane performance, as discussed in this chapter, are put forth for the first time. Duchène gives curves of power required and power available, as we illustrated in Fig. 6.21a; he discusses airplane maximum velocity; he also gives the same relation as Eq. (6.50) for rate of climb. Thus, some of our current concepts for the calculation of airplane performance date back as far as 1910–1911—four years before the beginning of World War I and only seven years after the Wright brothers’ first flight in 1903. Later, in 1917, Duchène’s book was translated into English by John Ledebour and T. O’B.

Hubbard (see the bibliography at the end of this chapter). Finally, during 1918–1920, three additional books about airplane performance were written (again see the bibliography), the most famous being the authoritative *Applied Aerodynamics* by Leonard Bairstow. By this time the foundations discussed in this chapter had been well set.

---

page 579

## 6.26 HISTORICAL NOTE: BREGUET AND THE RANGE FORMULA

Louis-Charles Breguet was a famous French aviator, airplane designer, and industrialist. Born in Paris on January 2, 1880, he was educated in electrical engineering at the Lycée Condorcet, the Lycée Carnot, and the École Supérieure d'Électricité. After graduation he joined the electrical engineering firm of his father, Maison Breguet. However, in 1909 Breguet built his first airplane and then plunged his life completely into aviation. During World War I his airplanes were mass-produced for the French air force. In 1919 he founded a commercial airline company that later grew into Air France. His airplanes set several long-range records during the 1920s and 1930s. Breguet was active in his own aircraft company until his death on May 4, 1955, in Paris. His name is associated with a substantial part of French aviation history.

The formula for range of a propeller-driven airplane given by Eq. (6.67) has also become associated with Breguet's name; it is commonly called the *Breguet range equation*. However, the reason for this association is historically obscure. In fact, the historical research of the present author can find no substance to Breguet's association with Eq. (6.67) until a presentation by Breguet to the Royal Aeronautical Society in London in 1922. On one hand, we find absolutely no reference to airplane range or endurance in any of the airplane performance literature before 1919, least of all a reference to Breguet. The authoritative books by Cowley and Levy (1918), Judge (1919), and Bairstow (1920) (see the bibliography at the end of this chapter) amazingly enough do not discuss this subject. On the other hand, in 1919 NACA Report No. 69, titled "A Study of Airplane Ranges and Useful Loads," by J. G. Coffin, gives a complete derivation of the formulas for range, Eq. (6.67), and endurance, Eq. (6.68). But Coffin, who was director of research for Curtiss Engineering Corporation at that time, gives absolutely no references to *anybody*. Coffin's work appears to be original and clearly seems to be the first presentation of the range and endurance formulas in the literature. However, to confuse matters, we find a few years later, in NACA Report No. 173, titled "Reliable Formulae for Estimating Airplane

Performance and the Effects of Changes in Weight, Wing Area or Power," by Walter S. Diehl (we have met Diehl before in Sec. 3.6), the following statement: "The common formula for range, usually credited to Breguet, is easily derived." Diehl's report then goes on to use Eq. (6.67), with no further reference to Breguet. This report was published in 1923, four years after Coffin's work.

Consequently, to say the least, the proprietorship of Eq. (6.67) is not clear. It appears to this author that, in the United States at least, there is plenty of documentation to justify calling Eq. (6.67) the Coffin–Breguet range equation. However, it has come down to us through the ages simply as Breguet's equation, apparently without documented substance.

## 6.27 HISTORICAL NOTE: AIRCRAFT DESIGN—EVOLUTION AND REVOLUTION

Sit back for a moment and think about the evolution of the airplane,[page 580](#) beginning with Sir George Cayley's 1804 hand-launched glider. Indeed, Fig. 1.8 (Cayley's own sketch of this aircraft) shows the first airplane with a modern configuration. Now jump ahead a century in the design of the airplane to Fig. 1.2, the Wright brothers' historic photograph of their first successful flight in 1903; this is the true beginning of the practical airplane. Finally, jump another 80 years to Fig. 6.11, which shows a modern jet aircraft. Put these three aircraft side by side in your mind: Cayley's glider, the *Wright Flyer*, and the Cessna Citation 3. What a testimonial to the evolution of airplane design! Each machine is totally different, each being the product of three different worlds of scientific and engineering understanding and practice. One must marvel at the rapid technical progress, especially in the 20th century, that brings us to the present status of airplane design represented by the modern, fast, high-flying jet aircraft shown in Fig. 6.11. What were the major technical milestones in this progress? What were the evolutionary (and sometimes revolutionary) developments that swept us from Cayley's seminal concepts to the modern airplane? The eye-opening and exciting answers to these questions would require a separate book to relate, but in this section we highlight a few aspects of the technical progression of airplane design, using some of the technology we have covered in this chapter about airplane performance.

To provide a technical focus for our discussion, we chose two aerodynamic parameters as figures of merit to compare and evaluate different airplane designs. The first is the zero-lift drag coefficient  $C_{D,0}$ , an important characteristic of any airplane because it has a strong effect on the maximum

flight speed. Recall that at  $V_{\max}$  for an airplane, because the angle of attack (and hence the induced drag) is small, the total drag given by the drag polar in Eq. (6.1c) is dominated by  $C_{D,0}$  at high speeds. Everything else being equal, the lower the  $C_{D,0}$ , the faster the airplane. The other aerodynamic figure of merit highlighted here is the lift-to-drag ratio and especially its maximum value  $(L/D)_{\max}$ . As we have already seen,  $L/D$  is a measure of the aerodynamic efficiency of an airplane, and it affects such flight characteristics as endurance and range. We will use both  $C_{D,0}$  and  $(L/D)_{\max}$  to illustrate the historical progress in airplane design.


We start with the airplanes of Cayley early in the 19th century because they were the first designs to exemplify the fixed-wing heavier-than-air aircraft we know today. Return again to Fig. 1.8, showing the first airplane with a modern configuration, with a fixed wing for lift, a tail for stability, and a fuselage connecting the two. The mechanism of propulsion (in this case a hand launch) is separate from the mechanism of lift. The amount of technical knowledge Cayley was able to incorporate in his design is best reflected in his famous “triple paper” of 1809–1810 (see Sec. 1.3). The technical concepts of  $C_{D,0}$  and  $L/D$  did not exist in Cayley’s day, but he reflects a basic intuition about these quantities in his triple paper. For example, Cayley used a method called *Newtonian theory* (which will be derived in Ch. 10) to estimate the aerodynamic force on an inclined plane (the wing). This theory takes into account only the pressure acting on the surface; surface shear stress and hence friction drag were not fully appreciated in Cayley’s time, and there were no methods for such prediction. Newtonian theory predicts a net force perpendicular to the inclined plane and therefore contains a component of drag. Cayley makes reference to this “retarding force” due to the component of the aerodynamic pressure force acting along the flow direction. In modern terms, we call this component of drag the *drag due to lift*. Cayley goes on to say (in discussing the flight of birds), “In addition to the retarding force thus received is the direct resistance, which the bulk of the bird opposes to the current. This is a matter to be entered into separately from the principle now under consideration.” Here Cayley is discussing what we would today call the *zero-lift drag* (the sum of pressure drag due to separation and skin friction drag) due primarily to the body of the bird. Although Cayley was on the right track conceptually, he had no method of calculating the zero-lift drag, and measurements (made with a whirling arm such as sketched in Fig. 1.7) were wholly unreliable. Therefore, we have no value of  $C_{D,0}$  for Cayley’s 1804 glider in Fig. 1.8.

Although Cayley did not identify and use the concept of  $L/D$  page 581 directly, in his triple paper he refers to his glider sailing “majestically” from the top of a hill, descending at an angle of about  $18^\circ$  with the horizon. Using the results of Sec. 6.9 dealing with a power-off glide, we can today quickly calculate that the  $L/D$  ratio for the glider was 3.08—not a very impressive value. Typical values of  $L/D$  for modern airplanes are 15 to 20, and for modern gliders, greater than 40. Cayley did not have an efficient airplane, nor did he know about aspect ratio effects. Today we know that low-aspect-ratio wings such as used by Cayley (aspect ratio about 1) are very inefficient because they produce large amounts of induced drag.

The technical evolution of airplane design after Cayley was gradual and evolutionary during the remainder of the 19th century. The change that occurred with the *Wright Flyer* (Figs. 1.1 and 1.2) was revolutionary (1) because the Wrights ultimately relied on virtually no previous data, doing everything themselves (see Sec. 1.8); and (2) because it was the first successful flying machine. The aerodynamic quality of the *Wright Flyer* is discussed by Culick and Jex, who report modern calculations and measurements of the drag polar for the *Wright Flyer* (Fig. 6.80). The experimental data were obtained from a model of the *Wright Flyer* mounted in a wind tunnel at the California Institute of Technology. The theoretical data are supplied by a modern vortex-lattice computer program for calculating low-speed incompressible inviscid flow. (Because these methods do not include the effects of friction, they cannot be used to predict flow separation.) The data in Fig. 6.80 show that  $C_{D,0}$  is about 0.10 and the maximum lift coefficient nearly 1.1. Moreover, drawing a straight line from the origin tangent to the drag polar curve, we see that the value of  $(L/D)_{\max}$  is about 5.7. By present standards the *Wright Flyer* was not an aerodynamic masterpiece; but in 1903 it was the only successful flying machine in existence. Moreover, compared with Cayley’s airplanes, the *Wright Flyer* was a *revolutionary* advancement in design.


After the *Wright Flyer*, advances in airplane design grew almost page 582 exponentially in the last half of the 20th century. Using our two figures of merit,  $C_{D,0}$  and  $(L/D)_{\max}$ , we can identify three general periods of progress in airplane design during the 20th century, as shown in Figs. 6.81 and 6.82. Values of  $C_{D,0}$  (Fig. 6.81) and  $(L/D)_{\max}$  (Fig. 6.82) for representative airplanes are shown versus time in years. These data are obtained from Loftin, an authoritative publication that the interested reader is encouraged to examine; it contains detailed case studies of the technical designs of many

famous aircraft. The data for  $C_{D,0}$  in Fig. 6.81 suggest that airplane design has gone through three major evolutionary periods, distinguished from one another by a dramatic change. For example, the period of strut-and-wire biplanes (such as the SPAD XIII, shown in Fig. 6.83) extends from the *Wright Flyer* to the middle or end of the 1920s. Here values of  $C_{D,0}$  are typically on the order of 0.04: a high value due to the large form drag (pressure drag due to flow separation) associated with the bracing struts and wires between the two wings of a biplane. In the late 1920s a revolution in design came with the adoption of the monoplane configuration coupled with the NACA cowl (see Sec. 6.24). The resulting second period of design evolution (exemplified by the DC-3 shown in Fig. 6.84) is characterized by  $C_{D,0}$  values on the order of 0.027. In the mid-1940s the major design revolution was the advent of the jet-propelled airplane. This period, which we are still in today (reflected in the famous F-86 of the Korean war era, shown in Fig. 6.85), is represented by  $C_{D,0}$  values on the order of 0.015.

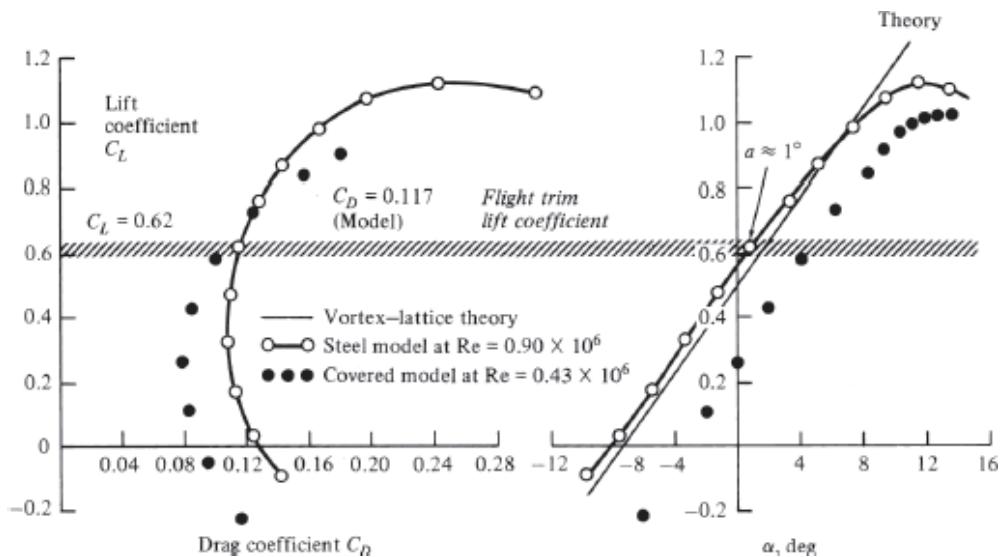


**Figure 6.80** Drag polar and lift curve for the 1903 *Wright Flyer*. Experimental data are from modern experiments using models of the *Wright Flyer* in modern wind tunnels. The vortex-lattice theory is a modern computer calculation. The values of  $\hat{C}^L$ ,  $\hat{C}^D$ , and  $\hat{\alpha}$  correspond to equilibrium trimmed-flight conditions (see Ch. 7)), highlighted by the horizontal bar across the figure.

(Source: F.E.C. Culick and H. R. Jex. “*Aerodynamics, Stability, and Control of the 1903 Wright Flyer;*” *The Wright Flyer: An Engineering Perspective*, pp. 19–43. 1987. Copyright © 1987 by the Smithsonian Institution.)

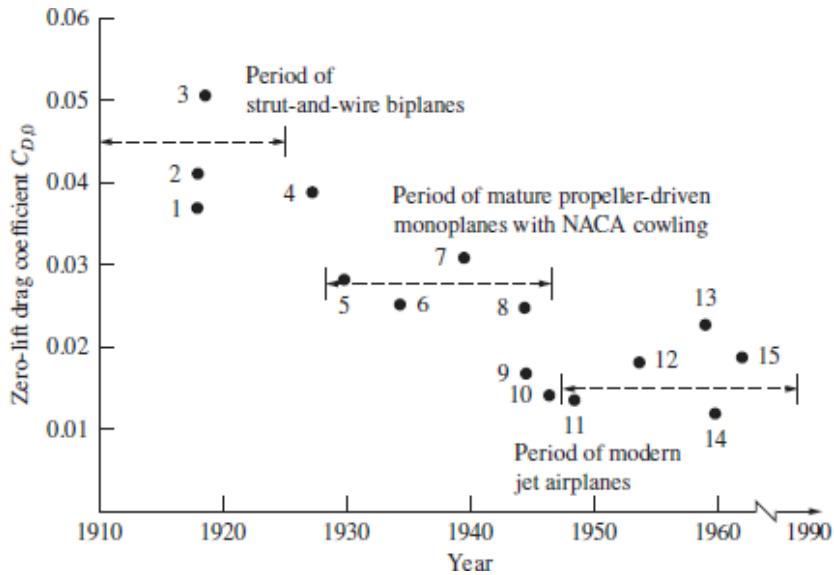

**Figure 6.81** Use of zero-lift drag coefficient to illustrate three general periods of 20th-century airplane design. The numbered data points correspond to the following aircraft: (1) SPAD XIII, (2) Fokker D-VII, (3) Curtiss JN-4H Jenny, (4) Ryan NYP (*Spirit of St. Louis*), (5) Lockheed Vega, (6) Douglas DC-3, (7) Boeing B-17, (8) Boeing B-29, (9) North American P-51, (10) Lockheed P-80, (11) North American F-86, (12) Lockheed F-104, (13) McDonnell F-4E, (14) Boeing B-52, (15) General Dynamics F-111D.

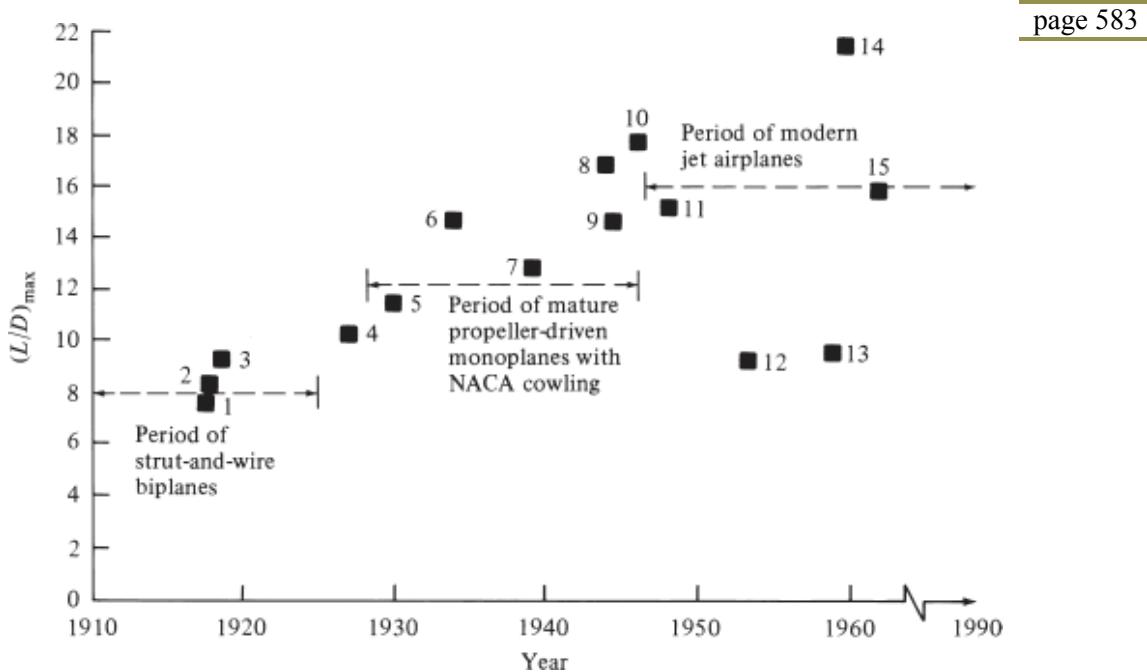

**Figure 6.82** Use of lift-to-drag ratio to illustrate three general periods of 20th-century airplane design.

page 584



**Figure 6.83** The French SPAD XIII, an example of the strut-and-wire biplane period. Captain Eddie Rickenbacker is shown at the front of the airplane.

(Source: *U.S. Air Force*.)



**Figure 6.84** The Douglas DC-3, an example of the period of mature propeller-driven monoplanes with the NACA cowling and wing fillets.

(Source: *U.S. Air Force*.)



**Figure 6.85** The North American F-86, one of the most successful modern jet airplanes from the early 1950s.

(Source: *U.S. Air Force*.)

The use of  $(L/D)_{\max}$  as an aerodynamic figure of merit has been discussed in previous sections. As shown in Fig. 6.82, where  $(L/D)_{\max}$  is plotted versus years, the data points for the same airplanes as in Fig. 6.81 group themselves in the same three design periods deduced from Fig. 6.81. Note that compared with the value of 5.7 for the *Wright Flyer*, the average value of  $(L/D)_{\max}$  for World War I airplanes was about 8—not a great improvement. After the introduction of the monoplane with the NACA cowling, typical  $(L/D)_{\max}$  values averaged substantially higher, on the order of 12 or sometimes considerably greater. [The Boeing B-29 bomber of World War II fame had an  $(L/D)_{\max}$  value of nearly 17, the highest for this period. This was in part due to the exceptionally large wing aspect ratio of 11.5 in a period when wing aspect ratios were averaging on the order of 6 to 8.] Today  $(L/D)_{\max}$  values for modern aircraft range over the whole scale, from 12 or 13 for high-performance military jet fighters to nearly 20 and above for large jet bombers and civilian transports such as the Boeing 747.


This section has given you the chance to think about the progress [page 585](#) in aircraft design in terms of some of the aerodynamic performance parameters discussed in this chapter.

## 6.28 SLEEKER AND FASTER AIRPLANES: THE NACA'S DRAG CLEANUP STUDIES IN THE FULL SCALE TUNNEL

In Sec. 4.24, an historical note on the first wind tunnels, the NACA Langley Full Scale Wind Tunnel is briefly mentioned. Over most of the 20th century, this wind tunnel played an important role in the improvement of airplane-performance, the subject of the current chapter. The most significant contribution was the historic “Drag Cleanup Program” that took place in the Full Scale Tunnel in the period just before, during, and after World War II. Therefore, because of its relevance to the present chapter, in this section we take a closer look at the Full Scale Tunnel, its significance, and this drag cleanup program.

This story begins in the year 1929, a full 12 years before the [page 586](#) United States is plunged into the maelstrom of World War II. In that year the air just north of the tidewater town of Hampton, Virginia, was filled with the sound of saws, loud hammering, and heavy construction equipment. Early that year, the National Advisory Committee for Aeronautics (NACA) authorized the construction of a massive wind tunnel to be located at the NACA Langley Memorial Aeronautical Laboratory in Hampton. Becoming operational in May 1931 this wind tunnel had a test section 60 feet in width and 30 feet high, large enough to mount not just a model of an airplane but rather the whole airplane itself, the reason that the tunnel was called the **NACA Full Scale Wind Tunnel** (FST). At the time, the FST was the largest wind tunnel in the world—a stunning facility for aerodynamic testing.

But why a wind tunnel of this huge size? Wind tunnels had existed since 1870, when the English inventor Francis Wenham designed and built at Greenwich the first wind tunnel in history. By 1929 scores of wind tunnels had been built world-wide for aerodynamic testing, including one by the Wright brothers. However, all these tunnels were small and were limited to testing relatively small models. The NACA's Full Scale Tunnel was the first facility large enough to test a whole airplane. A picture of the first airplane to be tested in the FST, the Vought O3U-1, in 1931 is shown in Fig. 6.86.

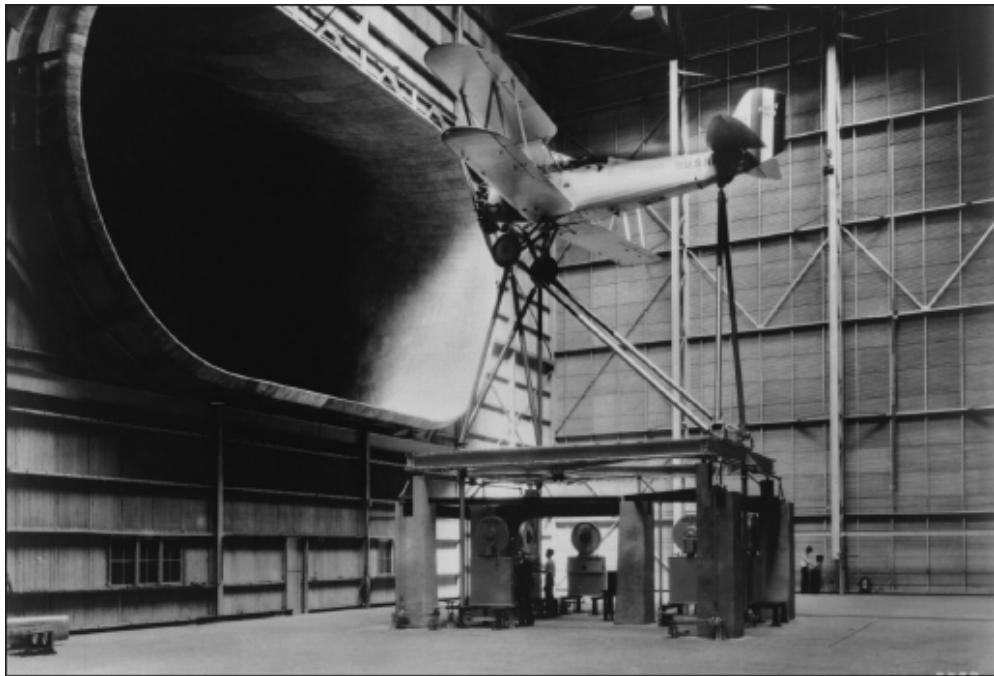

**Figure 6.86** An early test in the newly completed Full Scale Tunnel, 1931.

(Source: NASA.)


page 587

But why was the testing of a whole airplane in a wind tunnel so important as opposed to testing a smaller model? Unfortunately, there are scale effects in applying aerodynamic data obtained on small models that compromise the data when applied to the “real thing.” This is especially true with the data for aerodynamic drag, which is a strong function of the Reynolds number. In the Full Scale Tunnel, testing at full scale Reynolds numbers was available.

Why are drag measurements so important? Everything else being equal, the maximum velocity of a given airplane in level flight depends strongly on drag—the lower the drag, the faster the maximum speed of the airplane. In particular, for new airplanes coming off the drawing boards at the beginning of World War II, the maximum speed of combat fighter aircraft became a major design criterion. Therefore, the accurate prediction of aerodynamic drag was critical to the success of these new designs. However, as any design engineer knows, many compromises go into the design of a given airplane. In terms of drag, there are necessary appendages, accessory equipment, protuberances, holes, etc., on the surface of an operational aircraft that tend to destroy the sleekness of an otherwise low drag streamlined configuration. The identification of how much extra drag was due to these “blemishes” became

important, with an eye toward decreasing this drag. The question became just how to carry out this identification.

The answer surfaced rather abruptly in April 1938, when the Navy was having a major problem with a new fighter design, the Brewster XF2A Buffalo. The 250 mile-per-hour speed of this fighter was disappointingly low, and yet it was already starting to come off the production line. The Navy needed help immediately, and it came in the form of the NACA Full Scale Tunnel and its engineering staff. The Navy Bureau of Aeronautics quickly arranged to have the Buffalo tested in the Full Scale Tunnel at Langley. Even before the ink was dry on the paperwork, the Navy flew an XF2A-1 to Langley, and within days the NACA engineers mounted the airplane on the stilt-like balance in the FST. A photograph of the airplane in the wind tunnel is in Fig. 6.87. (In this photograph, note that the massive size of the tunnel test section is illustrated by the man standing inside the nozzle exit and another standing beside the balance.) Recognizing that the deficit in top speed for the Buffalo was most likely due to a higher than expected aerodynamic drag, the FST team conceived a brilliant and perfectly logical test procedure to identify the sources of the extra drag. They removed protuberances such as the radio antenna, smoothed irregular surfaces such as the cockpit canopy, used putty or tape to cover holes and smooth the bays for storing the retracted landing gear. Attention was paid to the exhaust stacks, the machine gun installation, and gun sights that projected into the airflow outside the airplane. When the airplane was perfectly smooth and aerodynamically clean, the drag of this faired and sealed airplane was then measured in the FST. This was the baseline drag measurement. Next, one of the protuberances was added back to the smooth configuration, and the drag was measured again, thus identifying the increase in drag due just to this addition. The tests continued by adding one-by-one each of the extra drag-causing items, measuring the airplane drag after each addition, until the airplane configuration was fully restored to its original condition. In this fashion a detailed test base was acquired identifying what items increased the drag, and by how much. The design of airplanes was not the primary role of the NACA, so these test results were then reported to the manufacturer, giving Brewster the necessary information to modify the design of the airplane in order to reduce its drag. Amazingly, the top speed of the modified Buffalo was increased to 281 miles per hour, a meaningful 10 percent increase.

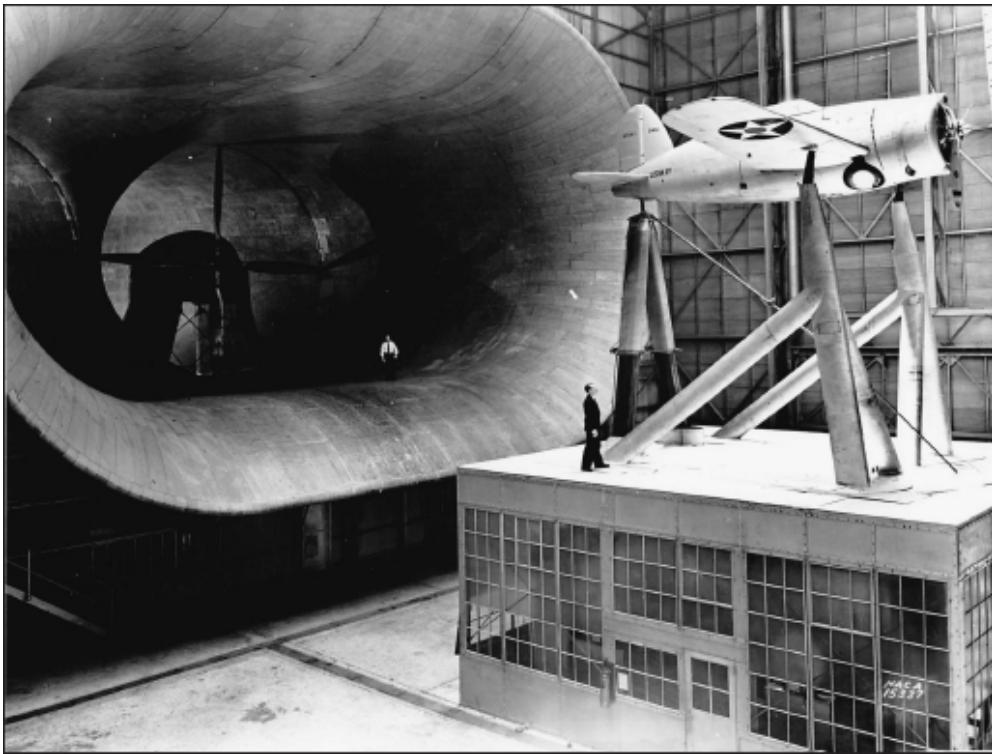

**Figure 6.87** A Brewster Buffalo mounted in the Full Scale Tunnel, 1938. The large size of the wind tunnel is dramatically emphasized by comparison with the engineer in a white shirt standing inside the nozzle exit.

(Source: NASA.)

What a wake-up call to the airplane industry! The Army and Navy suddenly stood in line for such drag testing in the Full Scale Tunnel on other new aircraft designs. The pioneering test procedure developed by the NACA engineers was labeled drag cleanup. Over the next two-and-a-half years, eighteen new prototype military airplanes were thoroughly run through this drag cleanup test procedure, each design benefiting to a greater or lesser extent by the tests.

One of the more telling stories that came out of the drag cleanup program was its effect on the P-39, a beautifully sleek but somewhat unconventional airplane, shown in Fig. 6.88.



**Figure 6.88** The Bell P-39, one of the many World War II airplanes benefitting from the Drag Cleanup Study Program in the Full Scale Tunnel.

(Source: NASA Langley Research Center.)

The P-39 Airacobra had its engine mounted behind the cockpit at [page 589](#) the airplane's center of gravity (note the air scoop at the back of the cockpit windshield), and a cannon in the nose. Designed by Bell Aircraft, the Army had expectations for the P-39 to be its first fighter to exceed 400 miles per hour in level flight. Indeed, the prototype XP-39 had reached 390 miles per hour during early tests at the Army's Wright Field near Dayton, Ohio. Production airplanes, however, were expected to weigh about 2000 pounds more than the 5550 pounds of the prototype, a weight increase that was predicted to bring its top speed to barely 340 miles per hour. This did not make General Henry H. "Hap" Arnold, the iconic commander of the U.S. Army Air Corps, happy, and certainly did not satisfy the Bell Aircraft designers. Hence, the P-39 was quickly inserted into the NACA Full Scale Tunnel Drag Cleanup program. Testing began on June 8, 1939. The tests showed that the completely faired P-39 had a drag that was about 50% that of the original value, a dramatic decrease. In addition to these drag cleanup tests, the P-39 also went through a series of flight tests at Langley. Ultimately, the heavier production models of the P-39 never achieved the desired 400 mile-

per-hour maximum speed, and the Army seemed to accept this situation. The Airacobra went on to become a successful ground attack aircraft, with over 700 sent to Great Britain and the Soviet Union under the Lend-Lease agreement. The ultimate success of the P-39 would not have been possible without the benefit of the Langley FST Drag Cleanup tests.

The FST continued its contributions to America's aerospace [page 590](#) industry for the next half-century, testing such modern jet fighters as the F-22, until it was finally decommissioned in 2010. The Drag Cleanup studies from World War II, however, remain as one of its finest hours.

For additional reading on this subject, see the books by James R. Hansen, *Engineer in Charge*, NASA SP-4305, 1987, and John D. Anderson, Jr., *The Airplane: A History of Its Technology*, American Institute of Aeronautics and Astronautics, 2002.

xw

## 6.29 SUMMARY AND REVIEW

The first part of this chapter deals with the *static* performance of an airplane; that is, its performance when the acceleration is zero. With this assumption, the forces acting on the airplane are in balance. In other words, in steady, level flight, lift equals weight, and thrust equals drag. Using this simple approach, it is amazing how much information we can obtain about the performance of an airplane. We have seen how to calculate the maximum and minimum velocities for a given airplane flying at a given altitude. For an airplane in climbing flight, lift is smaller than the weight, namely  $L = W \cos \theta$  where  $\theta$  is the climb angle; also, thrust is larger than the drag, namely  $T = D + W \sin \theta$ . However, for the assumption of no acceleration, the forces acting on the airplane in climbing flight are again in balance, and this allows us to calculate the rate of climb for a given airplane at a given altitude. Gliding flight, where the thrust is zero, is handled in the same fashion. Is it not interesting that the glide angle is simply dependent on the lift-to-drag ratio? This is not necessarily intuitive, but yet our static performance analysis for the glide angle yields the formula  $\tan \theta = (L / D)^{-1}$ . The assumption of static performance also yields important results and relations for maximum range and endurance.

Takeoff distance, landing distance, and turning flight must be analyzed from a dynamic point of view, because the acceleration of the airplane is *not* zero. The latter part of this chapter deals with the performance of the airplane with finite acceleration. This is the essence of *dynamic* performance. Here, we

use Newton's second law,  $F = ma$ , to obtain results for takeoff and landing performance, and the equivalent equation dealing with radial acceleration for the analysis of turning flight. Lastly, we see that dynamic performance calculations can be made on the basis of energy considerations rather than forces. This is the essence of the energy method used for dynamic rate-of-climb calculations.

Finally, keep in mind that we have taken two approaches to the calculation of airplane performance in this chapter: a graphical approach and an analytical approach. In the graphical approach, we deal with numbers for such quantities as lift, drag, thrust, and weight. The manipulation of these numbers over ranges of flight velocities yields graphs that give us results for maximum velocity, rate of climb, absolute ceiling, and so forth. In contrast, the analytical approach yields closed-form equations for the performance characteristics of the airplane. Moreover, these formulas reveal that airplane performance does not depend on just lift, drag, thrust, and weight independently, but rather on some important *ratios* that combine these forces. For example, maximum velocity depends primarily on the thrust-to-weight ratio ( $T/W$ ), wing loading ( $W/S$ ), and zero-lift drag coefficient,  $C_{D,0}$  [see Eq. (6.44)]. Maximum rate of climb depends primarily on thrust-to-weight ratio (or power loading,  $P/W$ ), wing loading, maximum lift-to-drag ratio, and zero-lift drag coefficient [see Eqs. (6.52) and (6.53)]. The quantities basically dictate the performance of an airplane. They are some of the most important-design parameters for an airplane. They are easily identified through an analytical approach yielding closed-form equations for the performance of an airplane, but are not so easily seen from a purely graphical analysis.

$$\frac{T}{W}, \frac{W}{S}, \frac{P}{W}, \frac{L}{D}, \text{ and } C_{D,0}$$

---

page 591

A few of the important aspects of this chapter are listed here:

1. For a complete airplane, the drag polar is given as

$$C_D = C_{D,0} + \frac{C_L^2}{\pi e AR} \quad (6.1c)$$

where  $C_{D,0}$  is the zero-lift drag coefficient and the term  $C_L^2/(\pi e AR)$  includes both induced drag and the contribution of parasite drag due to lift.

2. Thrust required for level, unaccelerated flight is

$$T_R = \frac{W}{L/D} \quad (6.16)$$

Thrust required is a minimum when  $L/D$  is a maximum.

3. Power required for level, unaccelerated flight is

$$P_R = \sqrt{\frac{2W^3 C_D^2}{\rho_\infty S C_L^3}} \quad (6.27)$$

Power required is a minimum when  $C_L^{3/2}/C_D$  is a maximum.

4. The rate of climb  $R/C = dh/dt$  is given by

$$\frac{dh}{dt} = \frac{TV - DV}{W} - \frac{V dV}{g dt} \quad (6.139)$$

where  $(TV - DV)/W = P_s$ , the specific excess power. For an unaccelerated climb,  $dV/dt = 0$ ; hence

$$R/C = \frac{dh}{dt} = \frac{TV - DV}{W} \quad (6.50)$$

5. In a power-off glide, the glide angle is given by

$$\tan \theta = \frac{1}{L/D} \quad (6.56)$$

6. The absolute ceiling is defined as the altitude where maximum  $R/C = 0$ . The service ceiling is the altitude where maximum  $R/C = 100$  ft/min.

7. For a propeller-driven airplane, range  $R$  and endurance  $E$  are given by

$$R = \frac{\eta}{c} \frac{C_L}{C_D} \ln \frac{W_0}{W_1} \quad (6.67) \text{ page 592}$$

$$\text{and} \quad E = \frac{\eta}{c} \frac{C_L^{3/2}}{C_D} (2\rho_\infty S)^{1/2} (W_1^{-1/2} - W_0^{-1/2}) \quad (6.68)$$

Maximum range occurs at maximum  $C_L/C_D$ . Maximum endurance occurs at sea level with maximum  $C_L^{3/2}/C_D$ .

8. For a jet-propelled airplane, range and endurance are given by

$$R = 2\sqrt{\frac{2}{\rho_\infty S}} \frac{1}{c_t} \frac{C_L^{1/2}}{C_D} (W_0^{1/2} - W_1^{1/2}) \quad (6.77)$$

$$\text{and} \quad E = \frac{1}{c_t} \frac{C_L}{C_D} \ln \frac{W_0}{W_1} \quad (6.72)$$

9. At maximum  $C_L^{3/2}/C_D$ ,  $C_{D,0} = \frac{1}{3} C_{D,i}$ . For this case,

$$\left( \frac{C_L^{3/2}}{C_D} \right)_{\max} = \frac{(3C_{D,0}\pi e AR)^{3/4}}{4C_{D,0}} \quad (6.87)$$

At maximum  $C_L/C_D$ ,  $C_{D,0} = C_{D,i}$ . For this case,

$$\left( \frac{C_L}{C_D} \right)_{\max} = \frac{(C_{D,0}\pi e AR)^{1/2}}{2C_{D,0}} \quad (6.85)$$

At maximum  $C_L^{1/2}/C_D$ ,  $C_{D,0} = 3C_{D,i}$ . For this case,

$$\left(\frac{C_L^{1/2}}{C_D}\right)_{\max} = \frac{\left(\frac{1}{3}C_{D,0}\pi e AR\right)^{1/4}}{\frac{4}{3}C_{D,0}} \quad (6.86)$$

10. Takeoff ground roll is given by

$$s_{LO} = \frac{1.44W^2}{g\rho_\infty Sc_{L,\max} [T - [D + \mu_r(W - L)]_{av}]} \quad (6.103)$$

11. The landing ground roll is

$$s_L = \frac{1.69W^2}{g\rho_\infty SC_{L,\max} [D + \mu_r(W - L)]_{0.7V_T}} \quad (6.111)$$

12. The load factor is defined as

$$n \equiv \frac{L}{W} \quad (6.115)$$

13. In *level turning flight*, the turn radius is

$$R = \frac{V_\infty^2}{g\sqrt{n^2 - 1}} \quad (6.118)$$

$$\text{and the turn rate is} \quad \omega = \frac{g\sqrt{n^2 - 1}}{V_\infty} \quad (6.119)$$

14. The  $V-n$  diagram is illustrated in Fig. 6.55. It is a diagram showing load factor versus velocity for a given airplane, along with the constraints on both  $n$  and  $V$  due to structural limitations. The  $V-n$  diagram illustrates some particularly important aspects of overall airplane performance.
15. The energy height (specific energy) of an airplane is given by page 593

$$H_e = h + \frac{V^2}{2g} \quad (6.136)$$

This, in combination with the specific excess power

$$P_s = \frac{TV - DV}{W}$$

leads to the analysis of accelerated-climb performance using energy considerations only.

## Bibliography

Anderson, J. D., Jr. *Aircraft Performance and Design*. McGraw-Hill, New York, 1999.

- \_\_\_\_\_. *The Airplane: A History of Its Technology*. American Institute of Aeronautics and Astronautics, Reston, VA, 2002.
- Bairstow, L. *Applied Aerodynamics*. Longmans, London, 1920.
- Cowley, W. L., and H. Levy. *Aeronautics in Theory and Experiment*. E. Arnold, London, 1918.
- Culick, F. E. C., and H. R. Jex. "Aerodynamics, Stability, and Control of the 1903 Wright Flyer," pp. 19–43 in Howard Wolko (ed.), *The Wright Flyer: An Engineering Perspective*. Smithsonian Press, Washington, 1987.
- Dommash, D. O., S. S. Sherbey, and T. F. Connolly. *Airplane Aerodynamics*, 3rd ed. Pitman, New York, 1961.
- Duchène, Captain. *The Mechanics of the Airplane: A Study of the Principles of Flight* (transl. by J. H. Ledebour and T. O'B. Hubbard). Longmans, London, 1917.
- Hale, F. J. *Introduction to Aircraft Performance, Selection, and Design*. Wiley, New York, 1984.
- Judge, A. W. *Handbook of Modern Aeronautics*. Appleton, London, 1919.
- Loftin, L. *Quest for Performance: The Evolution of Modern Aircraft*. NASA SP-468, 1985.
- McCormick, B. W. *Aerodynamics, Aeronautics, and Flight Mechanics*. Wiley, New York, 1979.
- Perkins, C. D., and R. E. Hage. *Airplane Performance, Stability, and Control*. Wiley, New York, 1949.
- Raymer, D. P. *Aircraft Design: A Conceptual Approach*, 4th ed. American Institute of Aeronautics and Astronautics, Reston, VA, 2006.
- Shevell, R. S. *Fundamentals of Flight*. Prentice-Hall, Englewood Cliffs, NJ, 1983.

---

page 594

## Problems

- 6.1** Consider an airplane patterned after the twin-engine Beechcraft Queen Air executive transport. The airplane weight is 38,220 N, wing area is 27.3 m<sup>2</sup>, aspect ratio is 7.5, Oswald efficiency factor is 0.9, and zero-lift drag coefficient is  $C_{D_0} = 0.03$ . Calculate the thrust required to fly at a velocity of 350 km/h at (a) standard sea level and (b) an altitude of 4.5 km.
- 6.2** An airplane weighing 5000 lb is flying at standard sea level with a velocity of 200 mi/h. At this velocity the *L/D* ratio is a maximum. The

wing area and aspect ratio are  $200 \text{ ft}^2$  and 8.5, respectively. The Oswald efficiency factor is 0.93. Calculate the total drag on the airplane.

- 6.3** Consider an airplane patterned after the Fairchild Republic A-10, a twin-jet attack aircraft. The airplane has the following characteristics: wing area =  $47 \text{ m}^2$ , aspect ratio = 6.5, Oswald efficiency factor = 0.87, weight = 103,047 N, and zero-lift drag coefficient = 0.032. The airplane is equipped with two jet engines with 40,298 N of static thrust *each* at sea level.

- a. Calculate and plot the power-required curve at sea level.
- b. Calculate the maximum velocity at sea level.
- c. Calculate and plot the power-required curve at 5-km altitude.
- d. Calculate the maximum velocity at 5-km altitude. (Assume the engine thrust varies directly with free-stream density.)

- 6.4** Consider an airplane patterned after the Beechcraft Bonanza V-tailed, single-engine light private airplane. The characteristics of the airplane are as follows: aspect ratio = 6.2, wing area =  $181 \text{ ft}^2$ , Oswald efficiency factor = 0.91, weight = 3000 lb, and zero-lift drag coefficient = 0.027. The airplane is powered by a single piston engine of 345 hp maximum at sea level. Assume that the power of the engine is proportional to free-stream density. The two-blade propeller has an efficiency of 0.83.

- a. Calculate the power required at sea level.
- b. Calculate the maximum velocity at sea level.
- c. Calculate the power required at 12,000-ft altitude.
- d. Calculate the maximum velocity at 12,000-ft altitude.

- 6.5** From the information generated in Prob. 6.3, calculate the maximum rate of climb for the twin-jet aircraft at sea level and at an altitude of 5 km.

- 6.6** From the information generated in Prob. 6.4, calculate the maximum rate of climb for the single-engine light plane at sea level and at 12,000-ft altitude.

- 6.7** From the rate-of-climb information for the twin-jet aircraft in Prob. 6.5, estimate the absolute ceiling of the airplane. (*Note:* Assume

maximum  $R/C$  varies linearly with altitude—not a precise assumption, but not bad either.)

- 6.8** From the rate-of-climb information for the single-engine light plane in Prob. 6.6, estimate the absolute ceiling of the airplane. (Again make the linear assumption described in Prob. 6.7.)
- 6.9** The maximum lift-to-drag ratio of the World War I *Sopwith Camel* was 7.7. If the aircraft is in flight at 5000 ft when the engine fails, how far can it glide in terms of distance measured along the ground?
- 6.10** For the *Sopwith Camel* in Prob. 6.9, calculate the page 595 equilibrium glide velocity at 3000 ft, corresponding to the minimum glide angle. The aspect ratio of the airplane is 4.11, the Oswald efficiency factor is 0.7, the weight is 1400 lb, and the wing area is 231 ft<sup>2</sup>.
- 6.11** Consider an airplane with a zero-lift drag coefficient of 0.025, an aspect ratio of 6.72, and an Oswald efficiency factor of 0.9. Calculate the value of  $(L/D)_{\max}$ .
- 6.12** Consider the single-engine light plane described in Prob. 6.4. If the specific fuel consumption is 0.42 lb of fuel per horsepower per hour, the fuel capacity is 44 gal, and the maximum gross weight is 3400 lb, calculate the range and endurance at standard sea level.
- 6.13** Consider the twin-jet airplane described in Prob. 6.3. The thrust-specific fuel consumption is 1.0 N of fuel per newton of thrust per hour, the fuel capacity is 1900 gal, and the maximum gross weight is 136,960 N. Calculate the range and endurance at a standard altitude of 8 km.
- 6.14** Derive Eqs. (6.80) and (6.81).
- 6.15** Derive Eqs. (6.86) and (6.87).
- 6.16** Estimate the sea-level liftoff distance for the airplane in Prob. 6.3. Assume a paved runway. Also, during the ground roll, the angle of attack is restricted by the requirement that the tail not drag the ground. Hence, assume that  $C_L,\max$  during the ground roll is limited to 0.8. When the airplane is on the ground, the wings are 5 ft above the ground.
- 6.17** Estimate the sea-level liftoff distance for the airplane in Prob. 6.4. Assume a paved runway, and  $C_L,\max = 1.1$  during the ground roll. When the airplane is on the ground, the wings are 4 ft above the ground.

- 6.18** Estimate the sea-level landing ground roll distance for the airplane in Prob. 6.3. Assume that the airplane is landing at full gross weight. The maximum lift coefficient with flaps fully employed at touchdown is 2.8. After touchdown, assume zero lift.
- 6.19** Estimate the sea-level landing ground roll distance for the airplane in Prob. 6.4. Assume that the airplane is landing with a weight of 2900 lb. The maximum lift coefficient with flaps at touchdown is 1.8. After touchdown, assume zero lift.
- 6.20** For the airplane in Prob. 6.3, the sea-level corner velocity is 250 mi/h, and the maximum lift coefficient with no flap deflection is 1.2. Calculate the minimum turn radius and maximum turn rate at sea level.
- 6.21** The airplane in Prob. 6.3 is flying at 15,000 ft with a velocity of 375 mi/h. Calculate its specific energy at this condition.
- 6.22** Derive Eq. (6.44).
- 6.23** From the data shown in Fig. 6.2, estimate the value of the Oswald efficiency factor for the Lockheed C-141A. The wing aspect ratio of the C-141A is 7.9.
- 6.24** Since the end of World War II, various claims have appeared in the popular aviation literature of instances where powerful propeller-driven fighter airplanes from that period have broken the speed of sound in a vertical, power-on dive. The purpose of this problem is to show that such an event is technically not possible. Consider, for example, the Grumman F6F-3 Hellcat, a typical fighter from World War II. For this airplane the zero-lift drag coefficient (at low speeds) is 0.0211, the wing planform area is  $334 \text{ ft}^2$ , and the gross weight is 12,441 lb. It is powered by a Pratt and Whitney R-2800 reciprocating engine that, with supercharging to an altitude of 17,500 ft, produces 1500 horsepower. Consider this airplane in a full-power vertical dive at (a) 30,000 ft and then (b) 20,000 ft. Prove that at these two altitudes the airplane cannot reach Mach 1.

*Note:* The aerodynamic characteristics of this airplane at Mach [page 596](#) 1 have not been measured. So you will have to make some reasonable assumptions. For example, what is the zero-lift drag coefficient at Mach 1? As an estimate, we can obtain from NACA TR 916 a zero-lift drag coefficient for the North American P-51 Mustang, which, when

extrapolated to Mach 1, shows an increase of 7.5 over its low-speed value. For the more blunt configuration of the F6F, let us assume that  $C_{D,0}$  (at  $M = 1$ ) is 10 times larger than  $C_{D,0}$  (low speed). Also, at Mach 1 the propeller efficiency would be almost zero (indeed, the propeller might even be producing a net drag rather than any thrust). To be conservative, let us assume the propeller efficiency at Mach 1 to be 0.3.

**6.25** The Predator UAV (see Fig. 6.63) has the following characteristics: wingspan = 14.85 m, wing area = 11.45 m<sup>2</sup>, maximum weight = 1020 kg<sub>f</sub>, and fuel weight = 295 kg<sub>f</sub>. The power plant is a Rotax four-cylinder, four-stroke engine of 85 horsepower driving a two-blade, variable-pitch pusher propeller. Assume that the Oswald efficiency factor is 0.7, the zero-lift drag coefficient is 0.03, the propeller efficiency is 0.9, and the specific fuel consumption is 0.2 kg<sub>f</sub> of fuel per horsepower per hour. Calculate the maximum velocity of the Predator at sea level.

**6.26** For the Predator UAV given in Prob. 6.25, calculate the maximum range.

**6.27** For the Predator UAV given in Prob. 6.25, calculate the maximum endurance at sea level.

**6.28** For the special case of an airplane in subsonic steady, level flight, the drag *force* due to lift,  $D_l$ , depends directly on the square of the design parameter,  $W/b$ , called the *span loading*, through the relation

$$D_l = \frac{1}{\pi e q_\infty} \left( \frac{W}{b} \right)^2$$

Derive this relation.

**6.29** Consider the North American P-51D Mustang shown in Fig. 4.46. Its wingspan is 37 ft, wing area is 233.6 ft<sup>2</sup>, and gross weight is 10,100 lb. Assume that the Oswald efficiency factor is 0.8. The airplane is flying in steady, level flight at a velocity of 300 mi/h at a standard altitude of 5000 ft. Calculate the drag due to lift using (a) the result of Problem 6.28, and (b) the *coefficient* of drag due to lift,  $C_{D,l}$ . The two results should be the same.

**6.30** In the design of a civil jet transport, such as the Boeing 777 shown in Fig. 6.27, the choice of engine size is usually based on having a 300 feet per minute rate-of-climb capability at the top of climb to cruising

altitude. This is a safety margin. Assume the following cruise conditions at top of climb for the Boeing 777:  $L/D = 18$ , altitude = 31,000 ft,  $M_\infty = 0.085$ ,  $W = 550,000$  lb. (a) Obtain an equation for the required engine thrust, assuming that the climb angle is so small that  $L = W$ . (b) Calculate the required engine size (in terms of sea-level static thrust), and compare your result with the designers' engine choice for the Boeing 777, which is two engines of the Rolls-Royce Trent type with a sea-level static thrust of 34,000 lb each.

*Note:* Intuition might tell you that, for a new airplane design, [page 597](#) the engine should be sized to provide enough takeoff thrust to get the airplane off the ground in a specified takeoff distance. However, using the top-of-climb criteria discussed here, the resulting engine thrust is usually quite ample for takeoff.

**6.31** The Lockheed-Martin F-16 is shown in Fig. 6.56 in a vertical accelerated climb. Some characteristics of this airplane from Jane's *All the World Aircraft* are: Wing area = 27.87 m<sup>2</sup>, typical combat weight = 8,273 kg, sea-level static thrust from the single GE F110 jet engine = 131.6 kN. (Note that Jane's quotes the weight in units of kilogram force; see Sec. 2.4 for a discussion of this unit.) Assume that the subsonic value of the zero-drag coefficient is 0.016 (consistent with the data shown in Fig. 6.81). Also assume that the transonic value of the zero-lift drag coefficient at Mach one is 2.3 times its subsonic value, a typical increase that occurs in the drag-divergence transonic flight region. For these conditions, is it possible for the F-16 to break the speed of sound going straight up?

**6.32** Consider the Lockheed-Martin F-16 described in Prob. 6.31. Assume that the photograph in Fig. 6.56 was taken when the airplane is climbing vertically at the instant it is passing through an altitude of 2000 m with a velocity of 100 m/s. Calculate the maximum acceleration of the airplane at that instant.

**6.33** The thrust-specific fuel consumption, TSFC, for a jet engine is defined in Sec. 6.13. Engine manufacturers are constantly trying to reduce TSFC in order to reduce the weight of fuel consumed for a given flight of given time duration. By reducing the fuel weight, the payload weight can be correspondingly increased. However, design changes that result in reductions in TSFC also frequently result in slight increases in

the engine weight itself, which will then reduce the payload weight. The break even point is where the decrease in fuel weight is exactly cancelled out by the increase in engine weight, giving no increase in the payload weight. Designating the new reduced thrust-specific fuel consumption by  $(\text{TSFC})_{\text{new}} = (\text{TSFC})(1 - \varepsilon_f)$  and the new weight of the airplane increased by the increase in engine weight by  $W_{\text{new}} = W(1 + \varepsilon_w)$ , where  $\varepsilon_f$  and  $\varepsilon_w$  are small fractional values, prove that the break even point for changes in engine weight and TSFC are given by

$$\varepsilon_f = \varepsilon_w \left( 1 + \frac{W}{W_f} \right) = \varepsilon_w [1 + (L/D)/(\text{TSFC})t]$$

where  $W$  and  $W_f$  are the average weight of the airplane during, cruise and the weight of fuel used during cruise, respectively, both *before* any design perturbation in engine weight or TSFC, and  $t$  is the total cruising time of flight.

- 6.34** Consider a large four-engine jet transport with a takeoff weight of 1,350,000 lb. By the end of the flight, 500,000 lb of fuel has been burned. Assume that the engines are now improved to obtain a 1% reduction in TSFC. Using the results of Prob. 6.33, calculate the maximum allowable increase in weight of each engine for no change in takeoff weight.
- 6.35** Examine Eq. (6.44) in the text. This equation is an explicit relation for  $V_{\max}$  in terms of the thrust-to-weight ratio for the airplane, and hence allows a quick analytical calculation of  $V_{\max}$  for jet-propelled airplanes. Derive an analogous relation for  $V_{\max}$  for a propeller-driven airplane in terms of the power-to-weight ratio (power loading). *Note:* You will find a relation that relates power loading and  $V_{\max}$ , but you will also discover that it is not possible to solve this relation *explicitly* for  $V_{\max}$ . Even so, this relation still allows a quicker solution for  $V_{\max}$  for propeller-driven airplanes in comparison to the numerical solution discussed in Sec. 6.6.
- 6.36** Using your result from Prob. 6.35, calculate the maximum velocity of the CP-1 at sea level, and compare your result with the numerical solution in Sec. 6.6.
- 6.37** Calculate analytically the maximum velocity of the CJ-1 at sea level, and compare your result with the numerical solution in Sec. 6.4.

- 6.38** Calculate analytically the maximum rate of climb for the CP-1 at 12,000 ft and compare your result with the numerical solution in Sec. 6.10.
- 6.39** Calculate analytically the maximum rate of climb for the CJ-1 at 24,000 ft and compare your result with the numerical solution in Sec. 6.10.
- 6.40** The Douglas DC-3 (Fig. 6.84) has a maximum velocity of 229 mi/h at an altitude of 7500 ft. Each of its two engines provides a maximum of 1200 hp. Its weight is 25,000 lb, aspect ratio is 9.14, and wing area is  $987 \text{ ft}^2$ . Assume that the propeller efficiency is 0.8, and the Oswald efficiency factor is 0.7. Calculate the zero-lift drag coefficient for the DC-3.

## Principles of Stability and Control

An important problem to aviation is . . . improvement in the form of the aeroplane leading toward natural inherent stability to such a degree as to relieve largely the attention of the pilot while still retaining sufficient flexibility and control to maintain any desired path, without seriously impairing the efficiency of the design.

From the First Annual Report of the NACA, 1915

### 7.1 INTRODUCTION


*The scene:* A French army drill field at Issy-les-Moulineaux just outside Paris. *The time:* The morning of January 13, 1908. *The character:* Henri Farman, a bearded, English-born but French-speaking aviator who had flown for his first time just four months earlier. *The action:* A delicately constructed Voisin-Farman I-bis biplane (see Fig. 7.1) is poised, ready for takeoff in the brisk Parisian wind, with Farman seated squarely in front of the 50-hp Antoinette engine. The winds ripple the fabric on the Voisin's box-kite-shaped tail as Farman powers to a bumpy liftoff. Fighting against a head wind, he manipulates his aircraft to a marker 1000 m from his takeoff point. In a struggling circular turn, Farman deflects the rudder and mushes the biplane around the marker, the wings remaining essentially level to the ground. Continuing in its rather wide and tenuous circular arc, the airplane heads back. Finally Farman lands at his original takeoff point, amid cheers from the crowd that had gathered for the occasion. Farman has been in the air for 1 min 28 s—the longest flight in Europe to that date—and has just performed the first circular flight of 1-km extent. For this he is awarded the Grand Prix d'Aviation. (Coincidentally in the crowd is a young Hungarian engineer, Theodore von Karman, who is present only due to the insistence of his female companion—waking at 5:00 AM to see history made. However, von Karman is mesmerized by the flight, and his interest in aeronautical science is catalyzed. Von Karman will go on to become a leading aerodynamic genius of the first half-century of powered flight.)

## PREVIEW BOX

Imagine that you have designed your own airplane and you are ready to fly it for the first time. You have followed the principles laid out in the previous chapters of this book, and you are confident that your airplane will fly as fast, as high, as far, and as long as you have planned. With confidence, you take off and begin the first flight of your new design. Within moments after takeoff, you hit a gust of wind that momentarily pitches the airplane up, literally rotating the airplane to a higher-than-intended angle of attack. Now what? Are you going to have to fight to bring your airplane under control, or will it automatically return to its previous orientation after a few moments? Have you properly designed your airplane so that it will return to its original orientation? How do you do that? That is, how do you ensure that your airplane, when disturbed by a gust of wind, will not continue to pitch up and completely go out of control? These are truly important questions, and you will find answers in this chapter. The questions and answers have to do with airplane *stability*, a major subject of this chapter.

Assume that your airplane is stable; that is, it will automatically return to its original orientation after experiencing some type of disturbance. As you are flying, you wish to speed up but also maintain level flight. You know from our conversations in Ch. 6) that you must correspondingly reduce the angle of attack. This can be accomplished by changing the elevator deflection on the tail. But how much do you need to deflect the elevator? And how much force must you exert on the elevator to get it to deflect the proper amount? These questions may seem somewhat mundane; but if you do not know the proper answers and you did not properly account for them in your design, most likely you will not be able to control your airplane. The second major subject of this chapter is airplane *control*, where you will find answers to these questions.

If airplanes are unstable or uncontrollable, they will most likely crash. This is serious business. This is a serious chapter. Please read it with some care. At the same time, however, I predict that you will enjoy reading this chapter because it takes you into new territory associated with the flight of airplanes, with some different physics and different mathematics than we have previously considered.

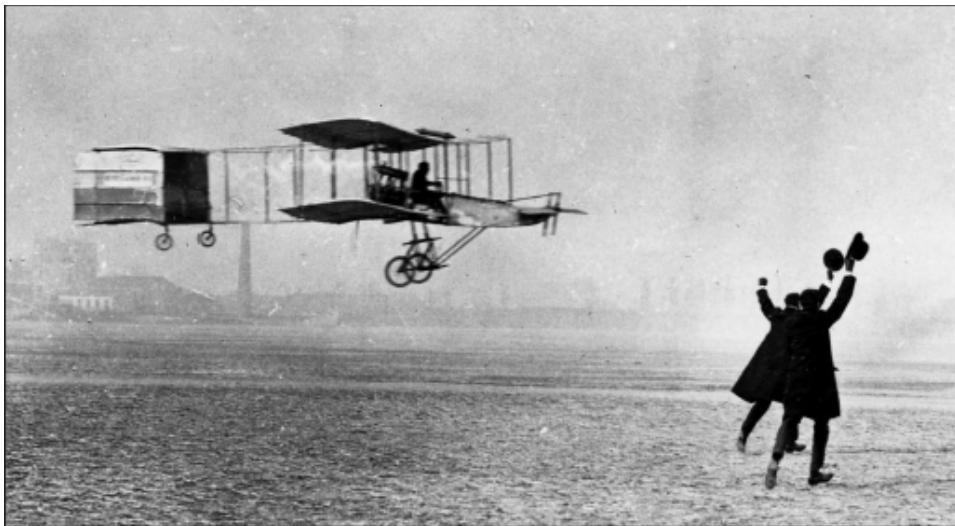

**Figure 7.1** The Voisin-Farman I-bis plane.

(Source: *Science and Society/SuperStock.*)


The scene shifts to a small racetrack near Le Mans, France. *The time:* Just seven months later, August 8, 1908. *The character:* Wilbur Wright, intense, reserved, and fully confident. *The action:* A new Wright type A biplane (see Fig. 1.25), shipped to France in crates and assembled in a friend's factory near Le Mans, is ready for flight. A crowd is present, enticed to the field by much advance publicity and an intense curiosity to see if the rumors about the Wright brothers' reported success were really true. Wilbur takes off. Using the Wrights' patented concept of twisting the wing tips (*wing warping*), Wilbur is able to bank and turn at will. He makes two graceful circles and then effortlessly lands after 1 min 45 s of flight. The crowds cheer. The French press is almost speechless but then heralds the flight as epoch-making. European aviators who witness this demonstration gaze in amazement and then quickly admit that the Wrights' airplane is far advanced over the best European machines of that day. Wilbur goes on to make 104 flights in France before the end of the year and in the process transforms the direction of aviation in Europe.

The distinction between these two scenes, and the reason for Wilbur's page 600mastery of the air in comparison to Farman's struggling circular flight, involve stability and control. The Voisin aircraft of Farman, which represented the state of the art in Europe at the time, had only rudder control and could make only a laborious flat turn by simply swinging the tail around. In contrast, the Wright airplane's wing-twisting mechanism provided control of roll, which when combined with rudder control allowed effortless turning and banking flight, figure-eights, and so on. The Wright brothers were *airmen* (see Ch. 1) who

concentrated on designing total control into their aircraft before adding an engine for powered flight. Since those early days, airplane stability and control have been dominant aspects of airplane design. They are the subject of this chapter.

Airplane performance, as discussed in Ch. 6), is governed by forces (along and perpendicular to the flight path), with the translational motion of the airplane as a response to these forces. In contrast, airplane stability and control, discussed in this chapter, are governed by moments about the center of gravity, with the rotational motion of the airplane as a response to these moments. Therefore, moments and rotational motion are the main focus of this chapter.


Consider an airplane in flight, as sketched in Fig. 7.2. The center of gravity (the point through which the weight of the complete airplane effectively acts) is denoted as  $\text{cg}$ . The  $xyz$  orthogonal axis system is fixed relative to the airplane; the  $x$  axis is along the fuselage, the  $y$  axis is along the wingspan perpendicular to the  $x$  axis, and the  $z$  axis is directed downward, perpendicular to the  $xy$  plane. The origin is at the center of gravity. The translational motion of the airplane is given by the velocity components  $U$ ,  $V$ , and  $W$  along the  $x$ ,  $y$ , and  $z$  directions, respectively. (Note that the resultant free-stream velocity  $V_\infty$  is the vector sum of  $U$ ,  $V$ , and  $W$ .) The rotational motion is given by the angular velocity components  $P$ ,  $Q$ , and  $R$  about the  $x$ ,  $y$ ,  $z$  axes, respectively. These rotational velocities are due to the moments  $L'$ ,  $M$ , and  $N$  about the  $x$ ,  $y$ , and  $z$  axes, respectively. (The prime is put by the symbol  $L$  so that the reader will not confuse it with lift.) Rotational motion about the  $x$  axis is called *roll*;  $L'$  and  $P$  are the *rolling* moment and velocity, respectively. Rotational motion about the  $y$  axis is called *pitch*;  $M$  and  $Q$  are the *pitching* moment and velocity, respectively. Rotational motion about the  $z$  axis is called *yaw*;  $N$  and  $R$  are the *yawing* moment and velocity, respectively.

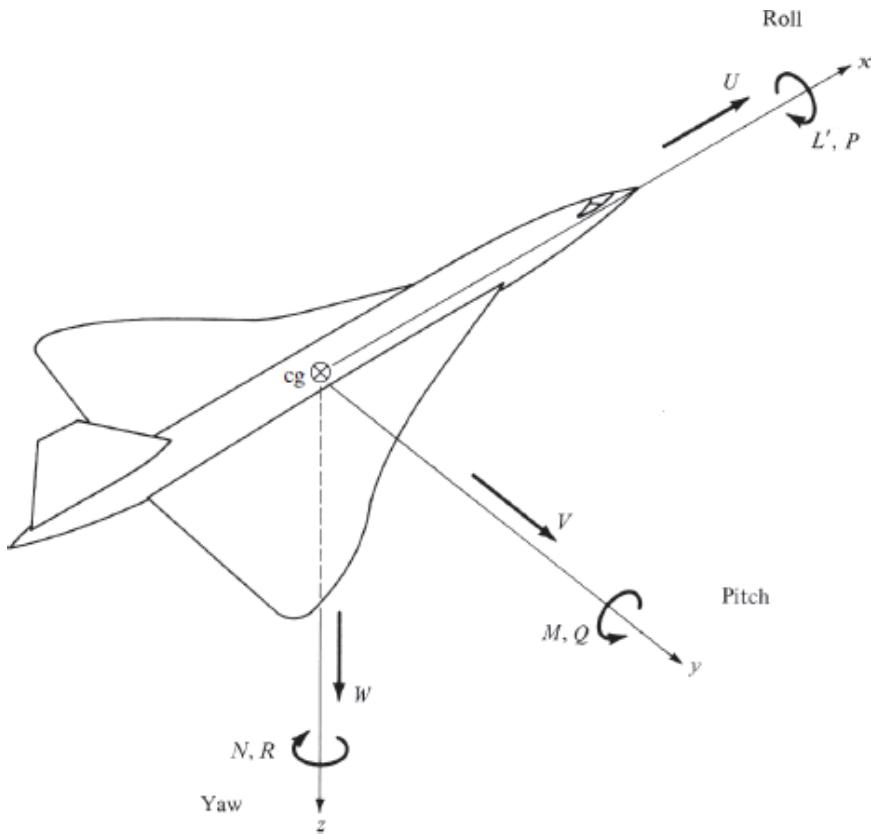

**Figure 7.2** Definition of the airplane's axes along with the translational and rotational motion along about these axes.


The three basic controls on an airplane—the ailerons, elevator, and rudder—are designed to change and control the moments about the  $x$ ,  $y$ , and  $z$  axes. These control surfaces are shown in Fig. 2.14 and repeated in Fig. 7.3; they are flaplike surfaces that can be deflected back and forth at the command of the pilot. The ailerons are mounted at the trailing edge of the wing, near the wing tips. The elevators are located on the horizontal stabilizer. In some modern aircraft, the complete horizontal stabilizer is rotated instead of just the elevator (so-called flying tails). The rudder is located on the vertical stabilizer at the trailing edge. Just as in the case of wing flaps discussed in Sec. 5.17, a downward deflection of the control surface will increase the lift of the wing or tail. In turn, the moments will be changed, as sketched in Fig. 7.4. Consider Fig. 7.4a. One aileron is deflected up and the other down, creating a differential lifting force on the wings, thus contributing to the rolling moment  $L'$ . In Fig. 7.4b the elevator is deflected upward, creating a negative lift at the tail and thus contributing to the pitching moment  $M$ . In Fig. 7.4c the rudder is deflected to the right, creating a leftward aerodynamic force on the tail and thus contributing to the yawing moment  $N$ .

page 601

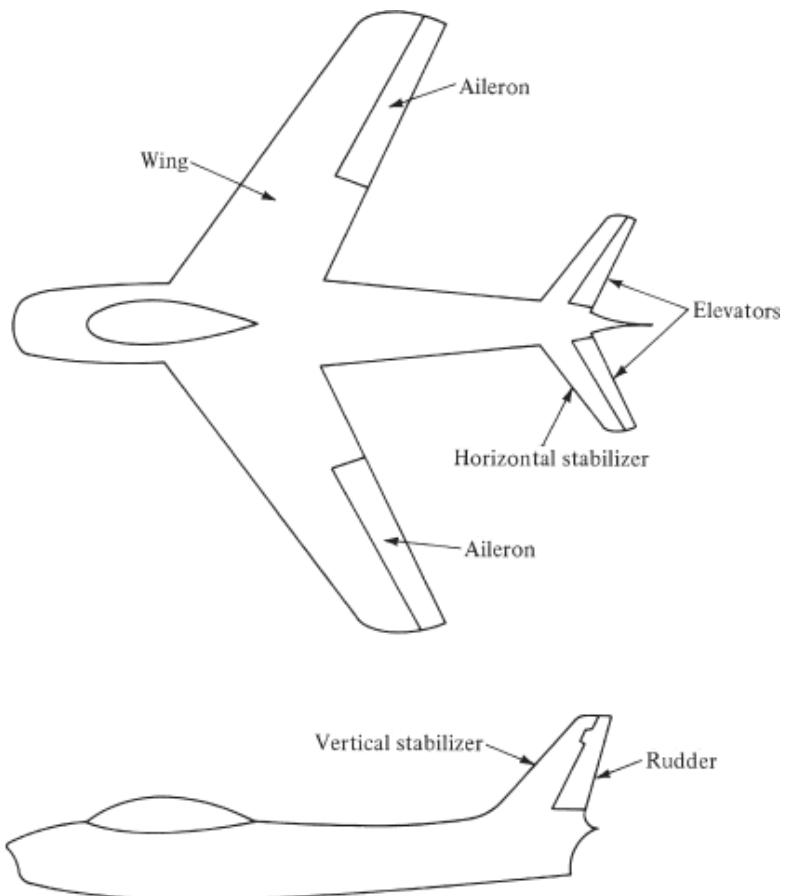


**Figure 7.3** Some airplane nomenclature.


Rolling (about the  $x$  axis) is also called *lateral motion*. Referring to Fig. 7.4a, we see that ailerons control roll; hence they are known as *lateral controls*. Pitching (about the  $y$  axis) is also called *longitudinal motion*. In Fig. 7.4b we see that elevators control pitch; hence they are known as *longitudinal controls*. Yawing (about the  $z$  axis) is also called *directional motion*. Figure 7.4c shows that the rudder controls yaw; hence it is known as the *directional control*.

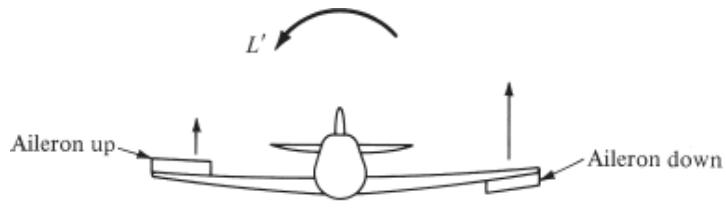

(a)

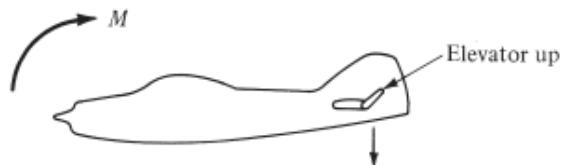


(b)

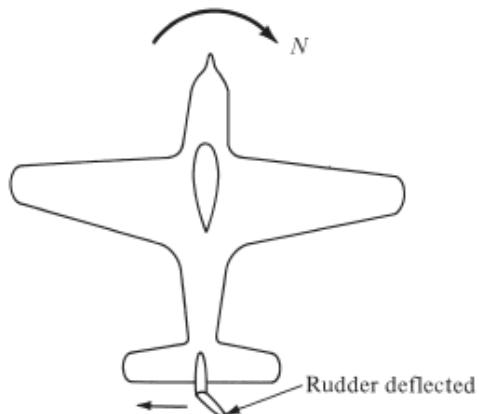

(c)

**Figure 7.4** Effect of control deflections on roll, pitch, and yaw. (a) Effect of aileron deflection; lateral control. (b) Effect of elevator deflection; longitudinal control. (c) Effect of rudder deflection; directional control.

All these definitions and concepts are part of the basic language of airplane stability and control; they should be studied carefully. In the process, the following question emerges: What is meant by the words *stability* and *control* themselves? This question is answered in Sec. 7.2.

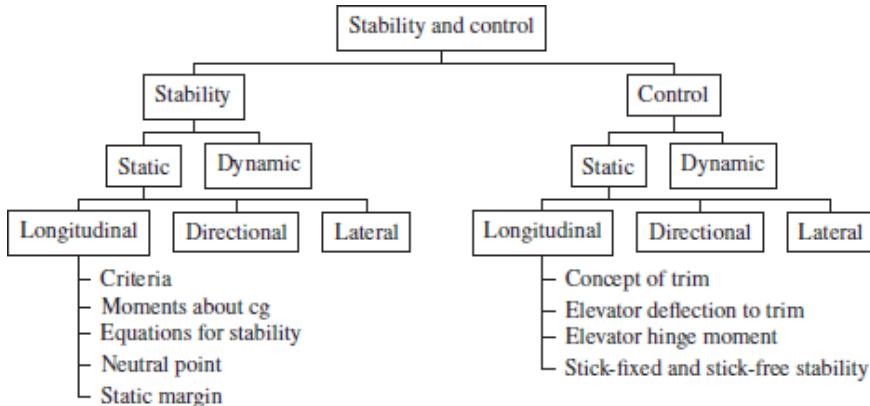


**Figure 7.5** Road map for Chapter 7.


Return to the general road map for this book, shown in Fig. 2.1. With page 604 this chapter we are still dealing with the overall subject of flight mechanics; but now we are concentrating on the second box under flight mechanics—namely stability and control. The road map for the present chapter is shown in Fig. 7.5. Two general routes are shown, that for stability in the left column and that for control in the right column. The subjects of both stability and control can be subdivided into categories labeled *static* and *dynamic*, as shown in Fig. 7.5. We define the difference between these categories in the next section. In this chapter we concentrate primarily (though not exclusively) on longitudinal stability and control. We deal with such considerations of static longitudinal stability as the calculation of longitudinal moments about the center of gravity, equations that can be used to help us determine whether an airplane is stable; and we define two concepts used to describe the stability characteristics: the neutral point and the static margin. For the latter part of this chapter, we run down the right side of the road map in Fig. 7.5, dealing primarily with static longitudinal control. Here we examine the concept of *trim* in greater detail, and we look at elevator deflections necessary to trim and the associated hinge moments for the elevator. We also look at the differences between *stick-fixed* and *stick-free* stability. Many of the terms used may seem unfamiliar and somewhat strange. However, we spend the rest of this chapter helping you to learn these concepts and making you more familiar with the language of airplane stability and control. It will be useful for you to frequently return to Fig. 7.5 as we proceed through this chapter to help orient yourself about the details and where they fit into the bigger picture.

## 7.2 DEFINITION OF STABILITY AND CONTROL


There are two types of stability: static and dynamic. They can be visualized as follows.

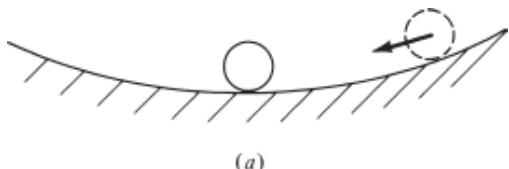

(a)

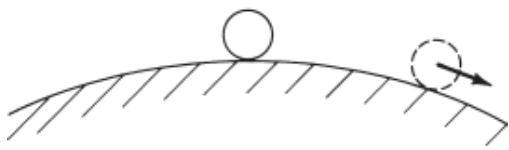

(b)

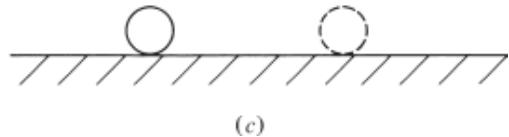

(c)

**Figure 7.6** Illustration of static stability. (a) Statically stable system. (b) Statically unstable system. (c) Statically neutral system.

### 7.2.1 Static Stability

Consider a marble on a curved surface, such as a bowl. Imagine that the [page 605](#) bowl is upright and the marble is resting inside, as shown in Fig. 7.6a. The marble is stationary; it is in a state of *equilibrium*, which means that the moments acting on the marble are zero. If the marble is disturbed (moved to one side, as shown by the dotted circle in Fig. 7.6a) and then released, it will roll back toward the bottom of the bowl to its original equilibrium position. Such a system is *statically stable*. In general, we can state that

If the forces and moments on the body caused by a disturbance tend initially to return the body toward its equilibrium position, the body is statically stable. The body has *positive* static stability.

Now imagine that the bowl is upside down, with the marble at the crest, as shown in Fig. 7.6b. If the marble is placed precisely at the crest, the moments will be zero, and the marble will be in equilibrium. However, if the marble is disturbed (as shown by the dotted circle in Fig. 7.6b), it will tend to roll down the side, away from its equilibrium position. Such a system is *statically unstable*. In general, we can state that


If the forces and moments are such that the body continues to move *away* from its equilibrium position after being disturbed, the body is *statically unstable*. The body has *negative static stability*.

Finally, imagine the marble on a flat horizontal surface as shown in [page 606](#) Fig. 7.6c. Its moments are zero; it is in equilibrium. If the marble is disturbed to another location, the moments will still be zero, and it will still be in equilibrium. Such a system is *neutrally stable*. This situation is rare in flight vehicles, and we will not be concerned with it here.


We emphasize that static stability (or the lack of it) deals with the *initial* tendency of a vehicle to return to equilibrium (or to diverge from equilibrium) after being disturbed. It says nothing about whether it ever reaches its equilibrium position or how it gets there. Such matters are the realm of dynamic stability.

### 7.2.2 Dynamic Stability


Dynamic stability deals with the *time history* of the vehicle's motion after it initially responds to its static stability. For example, consider an airplane flying at an angle of attack  $\alpha_e$  such that its moments about the center of gravity are zero. The airplane is therefore in equilibrium at  $\alpha_e$ ; in this situation it is *trimmed*, and  $\alpha_e$  is called the *trim angle of attack*. Now assume that the airplane is disturbed (say by encountering a wind gust) to a new angle of attack  $\alpha$ , as shown in Fig. 7.7. The airplane has been pitched through a *displacement*  $\alpha - \alpha_e$ . Let us observe the subsequent pitching motion after the airplane has been disturbed by the gust. We can describe this motion by plotting the instantaneous displacement versus time, as shown in Fig. 7.8. Here  $\alpha - \alpha_e$  is given as a function of time  $t$ . At  $t = 0$  the displacement is equal to that produced by the gust. If the airplane is statically stable, it will *initially* tend to move back toward its equilibrium position; that is,  $\alpha - \alpha_e$  will initially decrease. Over time the vehicle may monotonically "home in" to its equilibrium position, as shown in Fig. 7.8a. Such motion is called *aperiodic*. Alternatively, it may first overshoot the equilibrium position and approach  $\alpha_e$  after a series of oscillations with decreasing amplitude, as shown in Fig. 7.8b. Such motion is described as *damped oscillations*. In both situations, Figs. 7.8a and 7.8b, the airplane eventually returns to its equilibrium position after some interval of time. These two situations are examples of *dynamic stability* in an airplane. Thus we can state that

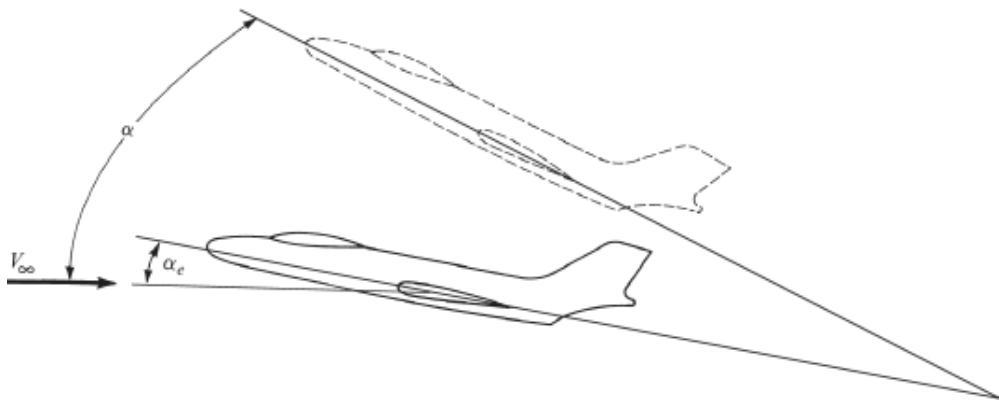

**Figure 7.7** Disturbance from the equilibrium angle of attack.

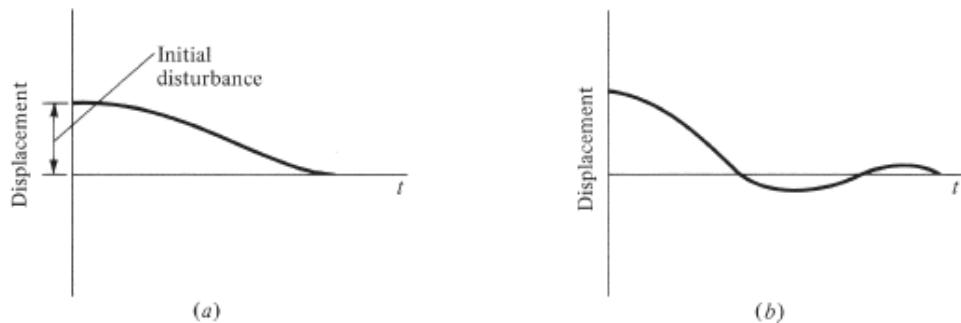

**Figure 7.8** Examples of dynamic stability. (a) Aperiodic. (b) Damped oscillations.

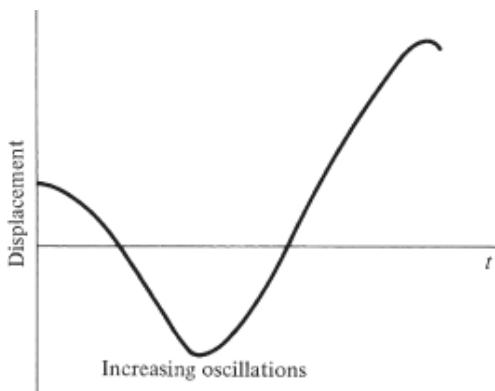

**Figure 7.9** An example of dynamic instability.

A body is dynamically stable if, of its own accord, it eventually returns to and remains at its equilibrium position over time.

In contrast, after initially responding to its static stability, the airplane may oscillate with increasing amplitude, as shown in Fig. 7.9. Here the equilibrium

position is never maintained for any period, and the airplane eventually diverges completely; the airplane in this case is *dynamically unstable* (even though it is statically stable). Also, it is theoretically possible for the airplane to pitch back and forth with constant-amplitude oscillations. This is an example of a *dynamically neutral* body; such a case is of little practical interest here.

It is important to observe from the preceding examples that a dynamically stable airplane must always be statically stable. However, static stability is *not* sufficient to ensure dynamic stability. Nevertheless, static stability is usually the first stability characteristic to be designed into an airplane. (There are some exceptions, to be discussed later.) Such considerations are of paramount importance in conventional airplanes, and therefore most of this chapter will address *static* stability and control. A study of dynamic stability, although of great importance, requires advanced analytical techniques beyond the scope of this book.

### 7.2.3 Control

The conventional control surfaces (elevators, ailerons, and rudder) on an [page 608](#) airplane were discussed in Sec. 7.1 and sketched in Figs. 7.3 and 7.4. Their function is usually (1) to change the airplane from one equilibrium position to another and (2) to produce nonequilibrium accelerated motions such as maneuvers. The study of the *deflections* of the ailerons, elevators, and rudder necessary to make the airplane do what we want and of the amount of *force* that must be exerted by the pilot (or the hydraulic boost system) to deflect these controls is part of a discipline called *airplane control*, to be discussed later in this chapter.

### 7.2.4 Partial Derivative

Some physical definitions associated with stability and control have been given in Secs. 7.2.1 through 7.2.3. In addition, a mathematical definition—that of the partial derivative—will be useful in the equations developed later, not only in this chapter but in our discussion of astronautics (Ch. 8) as well. For readers having only a nodding acquaintance with calculus, this section should be self-explanatory; for those with a deeper calculus background, it should serve as a brief review.

Consider a function, say  $f(x)$ , of a single variable  $x$ . The derivative of  $f(x)$  is defined from elementary calculus as

$$\frac{df}{dx} \equiv \lim_{\Delta x \rightarrow 0} \left[ \frac{f(x + \Delta x) - f(x)}{\Delta x} \right]$$

Physically this limit represents the instantaneous rate of change of  $f(x)$  with respect to  $x$ .

Now consider a function that depends on more than one variable, such as the function  $g(x, y, z)$ , which depends on the three independent variables  $x$ ,  $y$ , and  $z$ . Let  $x$  vary while  $y$  and  $z$  are held constant. Then the instantaneous rate of change of  $g$  with respect to  $x$  is given by

$$\frac{\partial g}{\partial x} \equiv \lim_{\Delta x \rightarrow 0} \left[ \frac{g(x + \Delta x, y, z) - g(x, y, z)}{\Delta x} \right]$$

Here  $\partial g / \partial x$  is the *partial derivative* of  $g$  with respect to  $x$ . Now let  $y$  vary while  $x$  and  $z$  remain constant. The instantaneous rate of change of  $g$  with respect to  $y$  is given by

$$\frac{\partial g}{\partial y} \equiv \lim_{\Delta y \rightarrow 0} \left[ \frac{g(x, y + \Delta y, z) - g(x, y, z)}{\Delta y} \right]$$

Here  $\partial g / \partial y$  is the *partial derivative* of  $g$  with respect to  $y$ . An analogous definition holds for the partial derivative with respect to  $z$ , denoted by  $\partial g / \partial z$ .

In this book we use the concept of the partial derivative as a definition [page 609](#) only. The calculus of partial derivatives is essential to the advanced study of virtually any field of engineering, but such considerations are beyond the scope of this book.

### EXAMPLE 7.1

If  $g = x^2 + y^2 + z^2$ , calculate  $\partial g / \partial z$ .

#### ■ Solution

From the definition given in the preceding discussion, the partial derivative is taken with respect to  $z$ , holding  $x$  and  $y$  constant:

$$\frac{\partial g}{\partial z} = \frac{\partial(x^2 + y^2 + z^2)}{\partial z} = \frac{\partial x^2}{\partial z} + \frac{\partial y^2}{\partial z} + \frac{\partial z^2}{\partial z} = 0 + 0 + 2z = 2z$$

## 7.3 MOMENTS ON THE AIRPLANE

A study of stability and control is focused on moments: moments on the airplane and moments on the control surfaces. At this stage it would be helpful for the reader to review the discussion of aerodynamically produced moments in Sec. 5.2. Recall that the pressure and shear stress distributions over a wing produce a


pitching moment. This moment can be taken about any arbitrary point (the leading edge, the trailing edge, the quarter chord, or elsewhere). However, there exists a particular point about which the moments are independent of the angle of attack. This point is defined as the *aerodynamic center* for the wing. The moment and its coefficient about the aerodynamic center are denoted by  $M_{ac}$  and  $C_{M,ac}$ , respectively, where  $C_{M,ac} \equiv M_{ac}/(q_\infty Sc)$ .

Reflecting again on Sec. 5.2, consider the force diagram of Fig. 5.5. Assume that the wing is flying at zero lift; hence  $F_1$  and  $F_2$  are equal and opposite forces. Thus, the moment established by these forces is a pure couple, which we know from elementary physics can be translated anywhere on the body at constant value. Therefore, at *zero lift*  $M_{ac} = M_c/4 = M_{\text{any point}}$ . In turn,

$$C_{M,ac} = (C_{M,c/4})_{L=0} = (C_{M,\text{any point}})_{L=0}$$

This says that the value of  $C_{M,ac}$  (which is constant for angles of attack) can be obtained from the value of the moment coefficient about any point when the wing is at the zero-lift angle of attack  $\alpha_L = 0$ . For this reason  $M_{ac}$  is sometimes called the *zero-lift moment*.

The aerodynamic center is a useful concept for the study of stability and control. In fact, the force and moment system on a wing can be completely specified by the lift and drag acting through the aerodynamic center, plus the moment about the aerodynamic center, as sketched in Fig. 7.10. We adopt this convention for the remainder of this chapter.

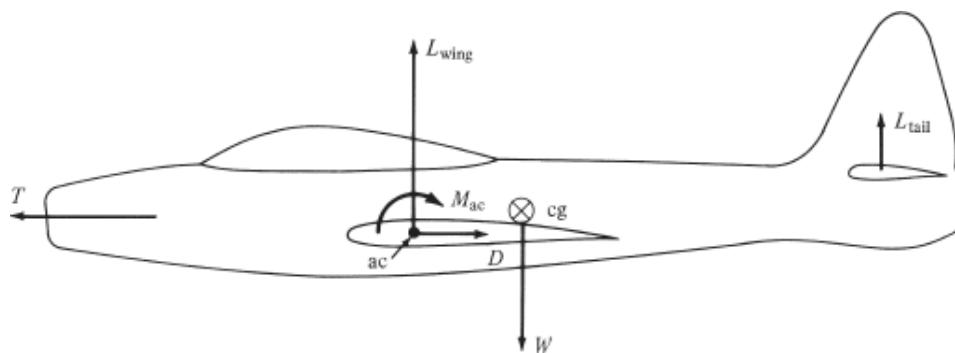

**Figure 7.10** Contributions to the moment about the center of gravity of the airplane.

Now consider the complete airplane, as sketched in Fig. 7.10. Here page 610 we are most concerned with the pitching moment about the center of gravity of the airplane  $M_{cg}$ . We see clearly, by examination of Fig. 7.10, that  $M_{cg}$  is created by (1)  $L$ ,  $D$ , and  $M_{ac}$  of the wing; (2) lift of the tail; (3) thrust; and (4)

aerodynamic forces and moments on other parts of the airplane, such as the fuselage and engine nacelles. (Note that weight does not contribute, because it acts through the center of gravity.) These contributions to  $M_{cg}$  will be treated in detail later. The purpose of Fig. 7.10 is simply to illustrate the important conclusion that a moment does exist about the center of gravity of an airplane, and this moment is fundamental to the stability and control of the airplane.

The moment coefficient about the center of gravity is defined as


$$C_{M,CG} = \frac{M_{cg}}{q_{\infty} Sc} \quad (7.1)$$

Combining the preceding concept with the discussion of Sec. 7.2, we find that an airplane is in equilibrium (in pitch) when the moment about the center of gravity is zero; that is, when  $M_{cg} = C_{M,CG} = 0$ , the airplane is said to be *trimmed*.


## 7.4 ABSOLUTE ANGLE OF ATTACK

Continuing with our collection of tools with which to analyze stability and control, we consider a wing at an angle of attack such that lift is zero; that is, the wing is at the zero-lift angle of attack  $\alpha_L=0$ , as shown in Fig. 7.11a. With the wing in this orientation, draw a line through the trailing edge parallel to the relative wind  $V_{\infty}$ . This line is defined as the *zero-lift line* for the airfoil. It is a fixed line; visualize it frozen into the geometry of the airfoil, as sketched in Fig. 7.11a. As discussed in Ch. 5), conventional cambered airfoils have slightly negative zero-lift angles; therefore the zero-lift line lies slightly above the chord line, as shown (with overemphasis) in Fig. 7.11a.

Now consider the wing pitched to the geometric angle of attack  $\alpha$  so that lift is generated, as shown in Fig. 7.11b. (Recall from Ch. 5) that the geometric angle of attack is the angle between the free-stream relative wind and the chord line.) In the same configuration, Fig. 7.11b demonstrates that the angle between the zero-lift line and the relative wind is equal to the sum of  $\alpha$  and the absolute value of  $\alpha_L=0$ . This angle is defined as the *absolute angle of attack*  $\alpha_a$ . From Fig. 7.11b,  $\alpha_a = \alpha + \alpha_L=0$  (using  $\alpha_L=0$  in an absolute sense). Study the geometry of Figs. 7.11a and 7.11b carefully.

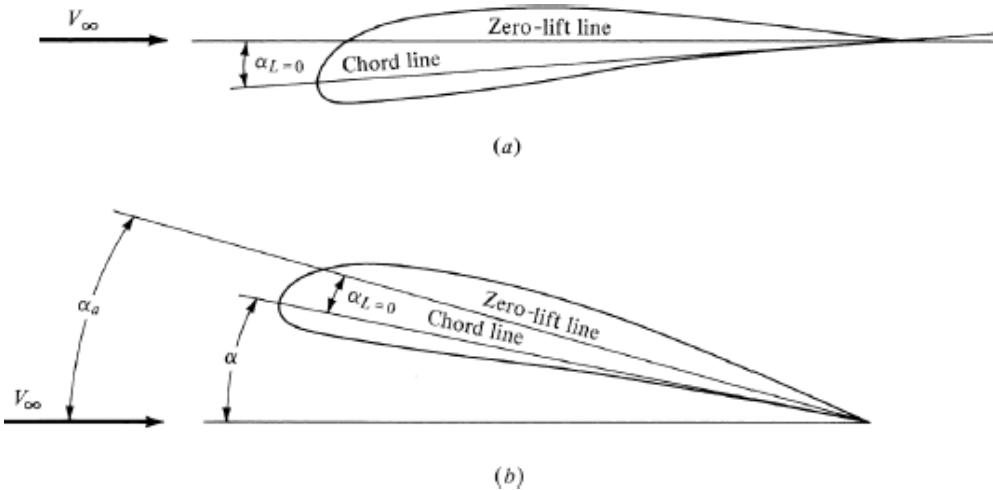

**Figure 7.11** Illustration of the zero-lift line and absolute angle of attack. (a) No lift; (b) with lift.

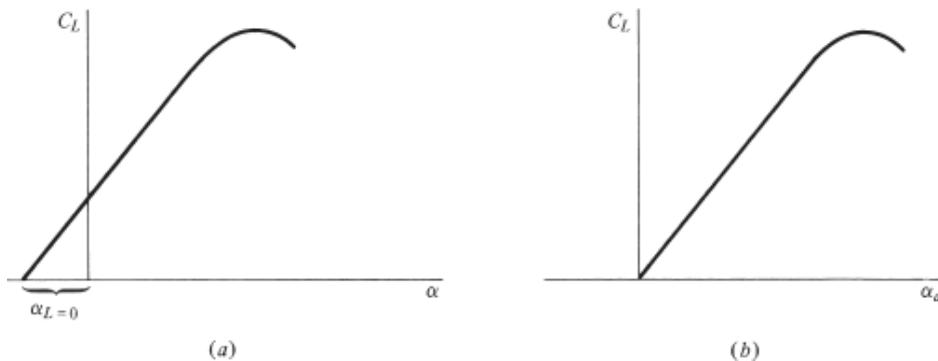

**Figure 7.12** Lift coefficient versus (a) geometric angle of attack and (b) absolute angle of attack.

The definition of the absolute angle of attack has a major advantage. When  $\alpha_a = 0$ , then  $L = 0$ , no matter what the camber of the airfoil. To further illustrate, consider the lift curves sketched in Fig. 7.12. The conventional plot (discussed in detail in Ch. 5)),  $C_L$  versus  $\alpha$ , is shown in Fig. 7.12a. Here the lift curve does not go through the origin, and of course  $\alpha_{L=0}$  is different for different airfoils. In contrast, when  $C_L$  is plotted versus  $\alpha_a$ , as sketched in Fig. 7.12b, the curve always goes through the origin (by definition of  $\alpha_a$ ). The curve in Fig. 7.12b is identical to that in Fig. 7.12a, but the abscissa has been translated by the value  $\alpha_{L=0}$ .

The use of  $\alpha_a$  in lieu of  $\alpha$  is common in studies of stability and control. We adopt this convention for the remainder of this chapter.

## 7.5 CRITERIA FOR LONGITUDINAL STATIC STABILITY


Static stability and control about all three axes shown in Fig. 7.2 are [page 612](#) usually a necessity in the design of conventional airplanes. However, a complete description of all three types—lateral, longitudinal, and directional static stability and control (see Fig. 7.4)—is beyond the scope of this book. The intent here is to provide only the flavor of stability and control concepts, and to this end, only the airplane's longitudinal motion (pitching motion about the  $y$  axis) is considered in detail. This pitching motion is illustrated in Fig. 7.4b. It takes place in the plane of symmetry of the airplane. Longitudinal stability is also the most important static stability mode; in airplane design, wind tunnel testing, and flight research, it usually receives more attention than lateral or directional stability.

Consider a rigid airplane with fixed controls, such as the elevator in some fixed position. Assume that the airplane has been tested in a wind tunnel or free flight and that its variation of  $M_{cg}$  with angle of attack has been measured. This variation is illustrated in Fig. 7.13, where  $C_{M,cg}$  is sketched versus  $\alpha_a$ . For many conventional airplanes, this curve is nearly linear, as shown in Fig. 7.13. The value of  $C_{M,cg}$  at zero lift (where  $\alpha_a = 0$ ) is denoted by  $C_{M,0}$ . The value of  $\alpha_a$  where  $M_{cg} = 0$  is denoted by  $\alpha_e$ ; as stated in Sec. 7.3, this is the equilibrium, or trim, angle of attack.


Consider the airplane in steady, equilibrium flight at its trim angle of attack  $\alpha_e$ , as shown in Fig. 7.14a. Suddenly the airplane is disturbed by hitting a wind gust, and the angle of attack is momentarily changed. There are two possibilities: an increase or a decrease in  $\alpha_a$ . If the airplane is pitched upward, as shown in Fig. 7.14b, then  $\alpha_a > \alpha_e$ . From Fig. 7.13, if  $\alpha_a > \alpha_e$ , the moment about the center of gravity is negative. As discussed in Sec. 5.4, a negative moment (by convention) is counterclockwise, tending to pitch the nose downward. Hence, in Fig. 7.14b the airplane will initially tend to move back toward its equilibrium position after being disturbed. In contrast, if the plane is pitched downward by the gust, as shown in Fig. 7.14c, then  $\alpha_a < \alpha_e$ . From Fig. 7.13, the resulting moment about the center of gravity will be positive (clockwise) and will tend to pitch the nose upward. Thus we again have the situation in which the airplane will initially tend to move back toward its equilibrium position after being disturbed. From Sec. 7.2, this is precisely the definition of static stability. Therefore, we conclude that an airplane that has a  $C_{M,cg}$ -versus- $\alpha_a$  variation like that shown in Fig. 7.13 is *statically stable*. Note from Fig. 7.13 that  $C_{M,0}$  is positive and that the slope of the curve  $\partial C_{M,cg} / \partial \alpha_a$  is negative. Here the partial derivative, defined in Sec. 7.2.4, is used for the slope of the moment coefficient curve. This is because (as we will see)  $C_{M,cg}$  depends on a number of other variables in addition to  $\alpha_a$ , and therefore

it is mathematically proper to use  $\partial C_{M,\text{cg}}/\partial \alpha_a$  rather than  $dC_{M,\text{cg}}/d\alpha_a$  to represent the slope of the line in Fig. 7.13. As defined in Sec. 7.2.4,  $\partial C_{M,\text{cg}}/\partial \alpha_a$  symbolizes the instantaneous rate of change of  $C_{M,\text{cg}}$  with respect to  $\alpha_a$ , with all other variables held constant.

page 613

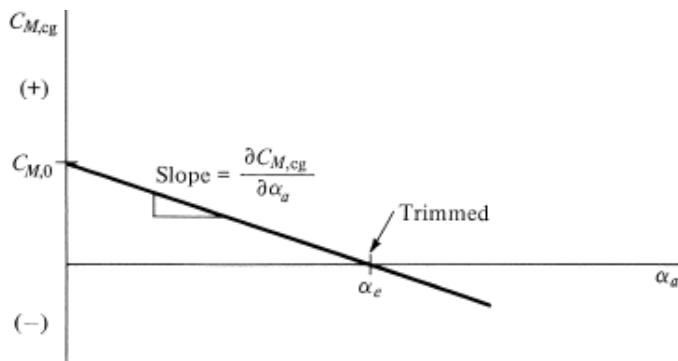

**Figure 7.13** Moment coefficient curve with a negative slope.

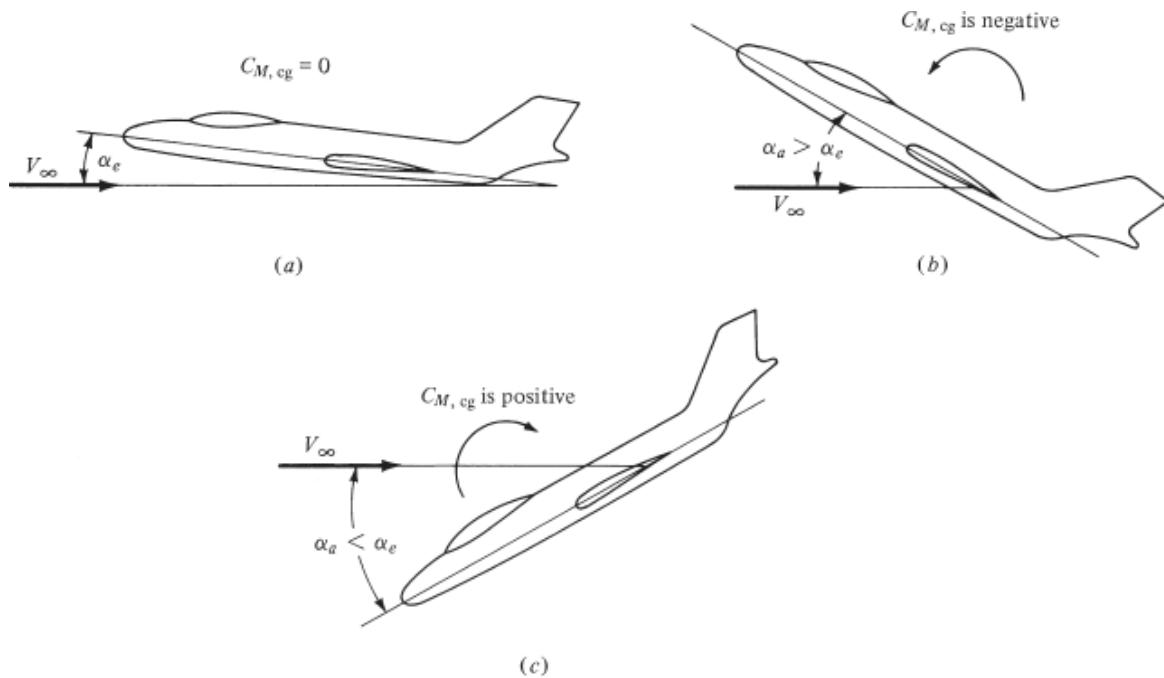


**Figure 7.14** Illustration of static stability. (a) Equilibrium position (trimmed). (b) Pitched upward by disturbance. (c) Pitched downward by disturbance. In both (b) and (c) the airplane has the initial tendency to return to its equilibrium position.


Consider now a different airplane with a measured  $C_{M,\text{cg}}$  variation as shown in Fig. 7.15. Imagine that the airplane is flying at its trim angle of attack  $\alpha_e$ , as shown in Fig. 7.16a. If it is disturbed by a gust, pitching the nose upward as

shown in Fig. 7.16b, then  $\alpha_a > \alpha_e$ . From Fig. 7.15, this results in a positive (clockwise) moment, which tends to pitch the nose even further from its equilibrium position. Similarly, if the gust pitches the nose downward (Fig. 7.16c), a negative (counterclockwise) moment results, which also tends to pitch the nose further from its equilibrium position. Therefore, because the airplane always tends to diverge from equilibrium when disturbed, it is *statically unstable*. Note from Fig. 7.15 that  $C_{M,0}$  is negative and  $\partial C_{M, cg} / \partial \alpha_a$  is positive for this airplane.

page 614

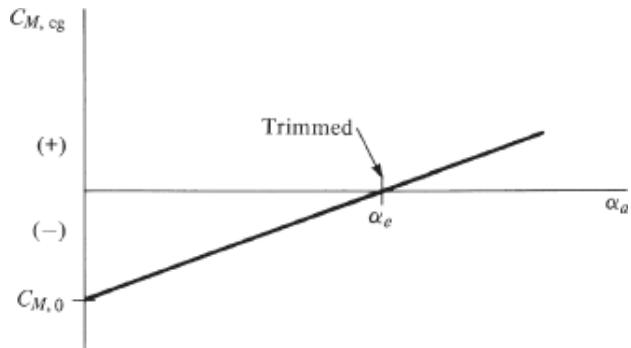

**Figure 7.15** Moment coefficient curve with a positive slope.

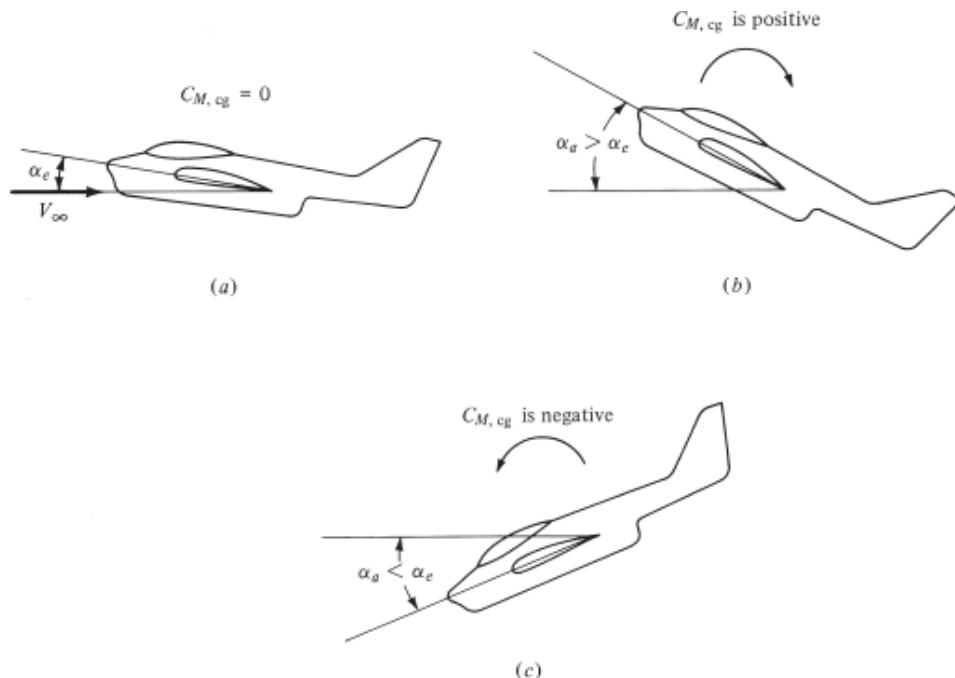

**Figure 7.16** Illustration of static instability. (a) Equilibrium position (trimmed). (b) Pitched upward by disturbance. (c) Pitched downward by disturbance. In both

(b) and (c) the airplane has the initial tendency to diverge further from its equilibrium position.

For both airplanes, Figs. 7.13 and 7.15 show a positive value of  $\alpha_e$ . Recall from Fig. 6.8 that an airplane moves through a range of angle of attack as it flies through its velocity range from  $V_{\text{stall}}$  (where  $\alpha_a$  is the largest) to  $V_{\max}$  (where  $\alpha_a$  is the smallest). The value of  $\alpha_e$  must fall within this flight range of angle of attack, or else the airplane cannot be trimmed for steady flight. (Remember that we are assuming a fixed elevator position: We are discussing stick-fixed stability.) When  $\alpha_e$  does fall within this range, the airplane is *longitudinally balanced*.

From the preceding considerations, we conclude the following. The [page 615](#) necessary criteria for longitudinal balance and static stability are

1.  $C_{M,0}$  must be positive.
2.  $\partial C_{M,\text{cg}} / \partial \alpha_a$  must be negative.

That is, the  $C_{M,\text{cg}}$  curve must look like Fig. 7.13. Of course, implicit in these criteria is that  $\alpha_e$  must also fall within the flight range of angle of attack for the airplane.

We can now explain why a conventional airplane has a horizontal tail (the horizontal stabilizer shown in Fig. 7.3). First consider an ordinary wing (by itself) with a conventional airfoil, say an NACA 2412 section. Note from the airfoil data in App. D that the moment coefficient about the aerodynamic center is negative. This is characteristic of all airfoils with positive camber. Now assume that the wing is at zero lift. In this case the only moment on the wing is a pure couple, as explained in Sec. 7.3; hence, at zero lift, the moment about one point is equal to the moment about any other point. In particular,

$$C_{M,\text{ac}} = C_{M,\text{cg}} \quad \text{for zero lift (wing only)} \quad (7.2)$$

However, examination of Fig. 7.13 shows that  $C_{M,0}$  is, by definition, the moment coefficient about the center of gravity at zero lift (when  $\alpha_a = 0$ ). Hence, from Eq. (7.2),



$$C_{M,0} = C_{M,\text{ac}} \quad \text{wing only} \quad (7.3)$$

Equation (7.3) demonstrates that for a wing with positive camber ( $C_{M,\text{ac}}$  negative),  $C_{M,0}$  is also negative. Such a wing by itself is *unbalanced*. To rectify this situation, a horizontal tail must be added to the airplane, as shown in Figs. 7.17a and 7.17b. If the tail is mounted behind the wing, as shown in Fig. 7.17a, and if it is inclined downward to produce a negative tail lift as shown, then a clockwise moment about the center of gravity will be created. If this clockwise

moment is strong enough, it will overcome the negative  $C_{M,ac}$ , and  $C_{M,0}$  for the wing-tail combination will become positive. The airplane will then be balanced.

The arrangement shown in Fig. 7.17a is characteristic of most conventional airplanes. However, the tail can also be placed ahead of the wing, as shown in Fig. 7.17b; this is called a *canard configuration*. For a canard, the tail is inclined upward to produce a positive lift, hence creating a clockwise moment about the center of gravity. If this moment is strong enough, then  $C_{M,0}$  for the wing-tail combination will become positive, and again the airplane will be balanced. Unfortunately, the forward-located tail of a canard interferes with the smooth aerodynamic flow over the wing. For this and other reasons, canard-configurations have not been popular. A notable exception were the *Wright Flyers*, which were canards. In fact, it was not until 1910 that the Wright brothers went to a conventional arrangement. Using the word *rudder* to mean elevator, Orville wrote to Wilbur in 1909 that “the difficulty in handling our machine is due to the rudder being in front, which makes it hard to keep on a level course. . . . I do not think it is necessary to lengthen the machine, but to simply put the rudder behind instead of before.” Originally the Wrights thought the forward-located elevator would help protect them from the type of fatal crash encountered by Lilienthal. This rationale persisted until the design of their model B in 1910. Finally, a modern example of a canard is the North American XB-70, an experimental supersonic bomber developed for the Air Force in the 1960s. The canard surfaces ahead of the wing are clearly evident in the photograph shown in Fig. 7.18. In recent years canards have come back on the aeronautical scene for some high-performance military airplanes and special general aviation designs. The X-29 shown in Fig. 5.64 is a canard.

page 616

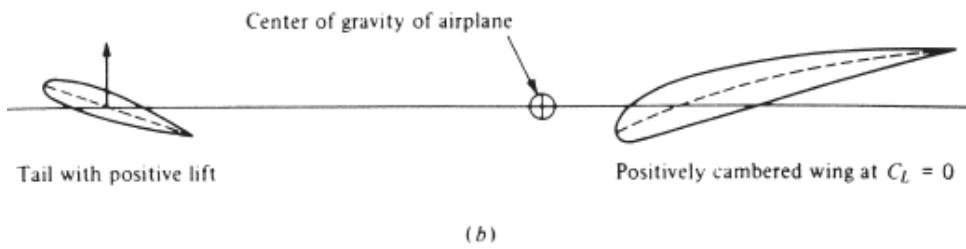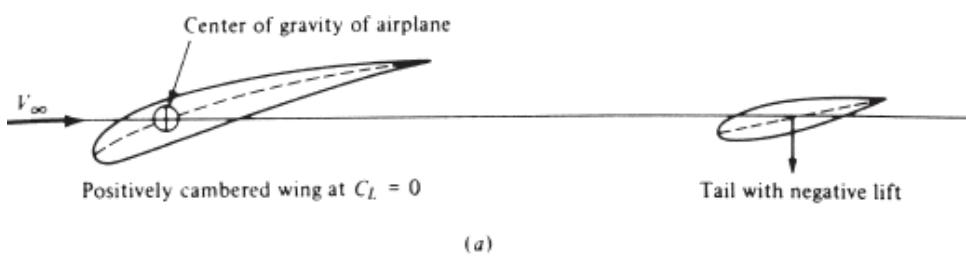

**Figure 7.17** (a) Conventional wing–tail combination. The tail is set at such an angle as to produce negative lift, thus providing a positive  $C_{M,0}$ . (b) Canard wing–tail combination. The tail is set at such an angle as to produce positive lift, thus providing a positive  $C_{M,0}$ .

In retrospect, using essentially qualitative arguments based on physical reasoning and without resort to complicated mathematical formulas, we have developed some fundamental results for longitudinal static stability. Indeed, it is somewhat amazing how far our discussion has progressed on such a qualitative basis. However, we now turn to some quantitative questions. For a given airplane, how far should the wing and tail be separated to obtain stability? How large should the tail be made? How do we design for a desired trim angle  $\alpha_e$ ? These and other such questions are addressed in the remainder of this chapter.



**Figure 7.18** The North American XB-70. Note the canard surfaces immediately behind the cockpit.


(Source: *NASA Dryden Flight Research Center*.)

## 7.6 QUANTITATIVE DISCUSSION: CONTRIBUTION OF THE WING TO $M_{cg}$

The calculation of moments about the center of gravity of the airplane [page 617](#)  $M_{cg}$  is critical to a study of longitudinal static stability. The previous sections

have already underscored this fact. Therefore, we now consider individually the contributions of the wing, fuselage, and tail to moments about the center of gravity of the airplane, in the end combining them to obtain the total  $M_{cg}$ .

Consider the forces and moments on the wing only, as shown in Fig. 7.19. Here the zero-lift line is drawn horizontally for convenience; hence the relative wind is inclined at the angle  $\alpha_w$  with respect to the zero-lift line, where  $\alpha_w$  is the absolute angle of attack of the wing. Let  $c$  denote the mean zero-lift chord of the wing (the chord measured along the zero-lift line). The difference between the zero-lift chord and the geometric chord (as defined in Ch. 5) is usually insignificant and will be ignored here. The center of gravity for the airplane is located a distance  $hc$  behind the leading edge and  $zc$  above the zero-lift line, as shown. Hence  $h$  and  $z$  are coordinates of the center of gravity in fractions of chord length. The aerodynamic center is a distance  $h_{ac_w}c$  from the leading edge. The moment of the wing about the aerodynamic center of the wing is denoted by  $M_{ac_w}$ , and the wing lift and drag are  $L_w$  and  $D_w$ , respectively, as shown. As usual,  $L_w$  and  $D_w$  are perpendicular and parallel, respectively, to the relative wind.

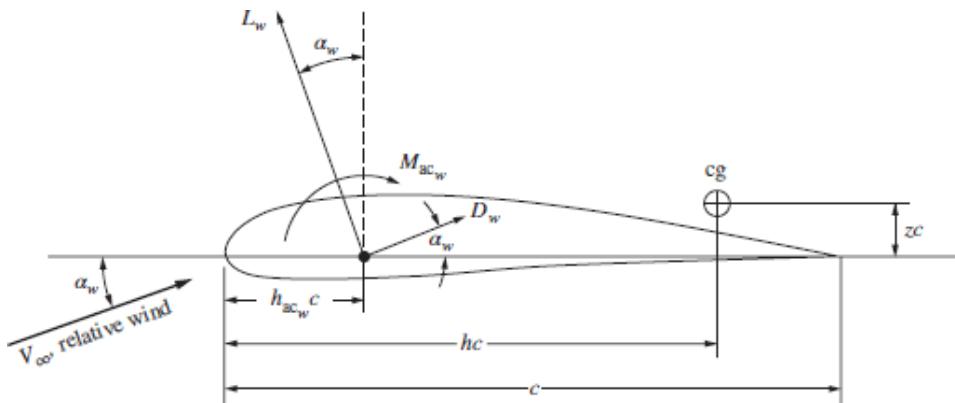

**Figure 7.19** Airfoil nomenclature and geometry.

We wish to take moments about the center of gravity with pitch-up [page 618](#) moments positive as usual. Clearly, from Fig. 7.19,  $L_w$ ,  $D_w$ , and  $M_{ac_w}$  all contribute to moments about the center of gravity. For convenience, split  $L_w$  and  $D_w$  into components perpendicular and parallel to the chord. Then, referring to Fig. 7.19, we find that the moments about the center of gravity of the airplane due to the wing are

$$M_{cg_w} = M_{ac_w} + L_w \cos \alpha_w (hc - h_{ac_w}c) + D_w \sin \alpha_w (hc - h_{ac_w}c) + L_w \sin \alpha_w z c - D_w \cos \alpha_w z c \quad (7.4)$$

[Study Eq. (7.4) and Fig. 7.19 carefully, and make certain that you understand each term before progressing further.] For the normal flight range of a

conventional airplane,  $\alpha_w$  is small; hence the approximation is made that  $\cos \alpha_w \approx 1$  and  $\sin \alpha_w \approx \alpha_w$  (where  $\alpha_w$  is in radians). Then Eq. (7.4) becomes

$$M_{cg_w} = M_{ac_w} + (L_w + D_w \alpha_w)(h - h_{ac_w})c + (L_w \alpha_w - D_w)z c \quad (7.5)$$

Dividing Eq. (7.5) by  $q_\infty Sc$  and recalling that  $C_M = M/(q_\infty Sc)$ , we obtain the moment coefficient about the center of gravity as

$$C_{M,cg_w} = C_{M,ac_w} + (C_{L,w} + C_{D,w} \alpha_w)(h - h_{ac_w}) + (C_{L,w} \alpha_w - C_{D,w})z \quad (7.6)$$

For most airplanes the center of gravity is located close to the zero-lift line; hence  $z$  is usually small ( $z \approx 0$ ) and will be neglected. Furthermore,  $\alpha_w$  (in radians) is usually much less than unity, and  $C_{D,w}$  is usually less than  $C_{L,w}$ ; hence the product  $C_{D,w} \alpha_w$  is small in comparison to  $C_{L,w}$ . With these assumptions, Eq. (7.6) simplifies to

$$C_{M,cg_w} = C_{M,ac_w} + C_{L,w}(h - h_{ac_w}) \quad (7.7)$$

Referring to Fig. 7.12b, we find  $C_{L,w} = (dC_{L,w}/d\alpha)\alpha_w = a_w \alpha_w$ , where  $a_w$  is the *lift slope of the wing*. Thus, Eq. (7.7) can be written as

$$C_{M,cg_w} = C_{M,ac_w} + a_w \alpha_w(h - h_{ac_w}) \quad (7.8)$$

Equations (7.7) and (7.8) give the contribution of the wing to moments about the center of gravity of the airplane, subject of course to the previously discussed assumptions. Closely examine Eqs. (7.7) and (7.8) along with Fig. 7.19. On a physical basis, they state that the wing's contribution to  $M_{cg}$  is essentially due to two factors: the moment about the aerodynamic center  $M_{ac_w}$  and the lift acting through the moment arm  $(h - h_{ac_w})c$ .

These results are slightly modified if a fuselage is added to the wing. [page 619](#)  
Consider a cigar-shaped body at an angle of attack to an airstream. This fuselage-type body experiences a moment about its aerodynamic center plus some lift and drag due to the airflow around it. Now consider the fuselage and wing joined together: a *wing–body combination*. The airflow about this wing–body combination is different from that over the wing and body separately; aerodynamic interference occurs where the flow over the wing affects the fuselage flow, and vice versa. Due to this interference, the moment due to the wing–body combination is *not* simply the sum of the separate wing and fuselage moments. Similarly, the lift and drag of the wing–body combination are affected by aerodynamic interference. Such interference effects are extremely difficult to predict theoretically. Consequently the lift, drag, and moments of a wing–body combination are usually obtained from wind tunnel measurements. Let  $C_{L_{wb}}$  and  $C_{M,ac_{wb}}$  be the lift coefficient and moment coefficient about the aerodynamic

center, respectively, for the wing–body combination. Analogous to Eqs. (7.7) and (7.8) for the wing only, the contribution of the wing–body combination to  $M_{cg}$  is

$$\boxed{\begin{aligned} C_{M,CG_{wb}} &= C_{M,ac_{wb}} + C_{L_{wb}}(h - h_{ac_{wb}}) \\ C_{M,CG_{wb}} &= C_{M,ac_{wb}} + a_{wb}\alpha_{wb}(h - h_{ac_{wb}}) \end{aligned}} \quad (7.9)$$

where  $a_{wb}$  and  $\alpha_{wb}$  are the slope of the lift curve and absolute angle of attack, respectively, for the wing–body combination. In general, adding a fuselage to a wing shifts the aerodynamic center forward, increases the lift curve slope, and contributes a negative increment to the moment about the aerodynamic center. We emphasize again that the aerodynamic coefficients in Eqs. (7.9) and (7.10) are almost always obtained from wind tunnel data.

### EXAMPLE 7.2

For a given wing–body combination, the aerodynamic center lies 0.05 chord length ahead of the center of gravity. The moment coefficient about the aerodynamic center is  $-0.016$ . If the lift coefficient is  $0.45$ , calculate the moment coefficient about the center of gravity.

#### ■ Solution

From Eq. (7.9),

$$C_{M,CG_{wb}} = C_{M,ac_{wb}} + C_{L_{wb}}(h - h_{ac_{wb}})$$

where

$$\begin{aligned} h - h_{ac_{wb}} &= 0.05 \\ C_{L_{wb}} &= 0.45 \\ C_{M,ac_{wb}} &= -0.016 \end{aligned}$$

Thus

$$C_{M,CG_{wb}} = -0.016 + 0.45(0.05) = \boxed{0.0065}$$

### EXAMPLE 7.3

A wing–body model is tested in a subsonic wind tunnel. The lift is found to be zero at a geometric angle of attack  $\alpha = -1.5^\circ$ . At  $\alpha = 5^\circ$  the lift coefficient is measured as  $0.52$ . Also, at  $\alpha = 1.0^\circ$  and  $7.88^\circ$ , the moment coefficients about the center of gravity are measured as  $-0.01$  and  $0.05$ , respectively. The center of gravity is located at  $0.35c$ . Calculate the location of the aerodynamic center and the value of  $C_{M,ac_{wb}}$ .

#### ■ Solution

First calculate the lift slope:

$$a_{wb} \equiv \frac{dC_L}{d\alpha} = \frac{0.52 - 0}{5 - (-1.5)} = \frac{0.52}{6.5} = 0.08 \text{ per degree}$$

Write Eq. (7.10),

$$C_{M,CG_{wb}} = C_{M,ac_{wb}} + a_{wb} \alpha_{wb} (h - h_{ac_{wb}})$$

evaluated at  $\alpha = 1.0^\circ$  [remember that  $\alpha$  is the geometric angle of attack, whereas in Eq. (7.10),  $\alpha_{wb}$  is the absolute angle of attack]:

$$-0.01 = C_{M,ac_{wb}} + 0.08(1 + 1.5)(h - h_{ac_{wb}})$$

Then evaluate it at  $\alpha = 7.88^\circ$ :

$$0.05 = C_{M,ac_{wb}} + 0.08(7.88 + 1.5)(h - h_{ac_{wb}})$$

The preceding two equations have two unknowns,  $C_{M,ac_{wb}}$  and  $h - h_{ac_{wb}}$ . They can be solved simultaneously.

Subtracting the second equation from the first, we get

$$\begin{aligned} -0.06 &= 0 - 0.55(h - h_{ac_{wb}}) \\ h - h_{ac_{wb}} &= \frac{-0.06}{-0.55} = 0.11 \end{aligned}$$

The value of  $h$  is given:  $h = 0.35$ . Thus

$$h_{ac_{wb}} = 0.35 - 0.11 = \boxed{0.24}$$

In turn,

$$-0.01 = C_{M,ac_{wb}} + 0.08(1 + 1.5)(0.11)$$

$$C_{M,ac_{wb}} = \boxed{-0.032}$$

## 7.7 CONTRIBUTION OF THE TAIL TO $M_{CG}$

An analysis of moments due to an isolated tail taken independently of [page 621](#) the airplane would be the same as that just given for the isolated wing. However, in real life the tail is obviously connected to the airplane itself; it is not isolated. Moreover, the tail is generally mounted behind the wing; hence it feels the wake of the airflow over the wing. As a result, two interference effects influence the tail aerodynamics:


1. The airflow at the tail is deflected downward by the *downwash* due to the finite wing (see Secs. 5.13 and 5.14); that is, the relative wind seen by the

tail is not in the same direction as the relative wind  $V_\infty$  seen by the wing.


2. Because of the retarding force of skin friction and pressure drag over the wing, the airflow reaching the tail has been slowed. Therefore the velocity of the relative wind seen by the tail is less than  $V_\infty$ . In turn, the dynamic pressure seen by the tail is less than  $q_\infty$ .

These effects are illustrated in Fig. 7.20. Here  $V_\infty$  is the relative wind as seen by the wing, and  $V'$  is the relative wind at the tail, inclined below  $V_\infty$  by the downwash angle  $\varepsilon$ . The tail lift  $L_t$  and drag  $D_t$  are (by definition) perpendicular and parallel, respectively, to  $V'$ . In contrast, the lift and drag of the complete airplane are always (by definition) perpendicular and parallel, respectively, to  $V_\infty$ . Therefore, considering components of  $L_t$  and  $D_t$  perpendicular to  $V_\infty$ , we demonstrate in Fig. 7.20 that the tail contribution to the total airplane lift is  $L_t \cos \varepsilon - D_t \sin \varepsilon$ . In many cases  $\varepsilon$  is very small, and thus  $L_t \cos \varepsilon - D_t \sin \varepsilon \approx L_t$ . Hence, for all practical purposes it is sufficient to add the tail lift directly to the wing-body lift to obtain the lift of the complete airplane.

Consider the tail in relation to the wing-body zero-lift line, as illustrated in Fig. 7.21. It is useful to pause and study this figure. The wing-body combination is at an absolute angle of attack  $\alpha_{wb}$ . The tail is twisted downward to provide a positive  $C_{M,0}$ , as discussed at the end of Sec. 7.5. Thus, the zero-lift line of the tail is intentionally inclined to the zero-lift line of the wing-body combination at the *tail-setting angle*  $i_t$ . (The airfoil section of the tail is generally symmetric, for which the tail zero-lift line and the tail chord line are the same.) The absolute angle of attack of the tail  $\alpha_t$  is measured between the local relative wind  $V'$  and the tail zero-lift line. The tail has an aerodynamic center, about which there is a moment  $M_{act}$  and through which  $L_t$  and  $D_t$  act perpendicular and parallel, respectively, to  $V'$ . As before,  $V'$  is inclined below  $V_\infty$  by the downwash angle  $\varepsilon$ ; hence  $L_t$  makes an angle  $\alpha_{wb} - \varepsilon$  with the vertical. The tail aerodynamic center is located a distance  $l_t$  behind and  $z_t$  below the center of gravity of the airplane. Make certain to carefully study the geometry shown in Fig. 7.21; it is fundamental to the derivation that follows.

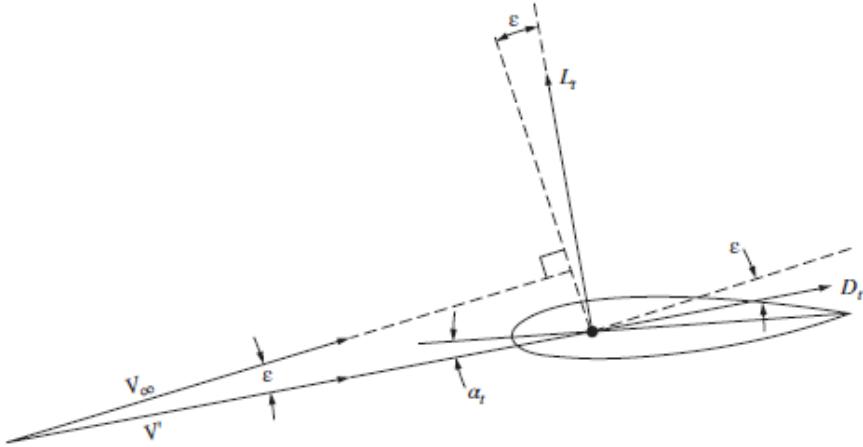

**Figure 7.20** Flow and force diagram in the vicinity of the tail.

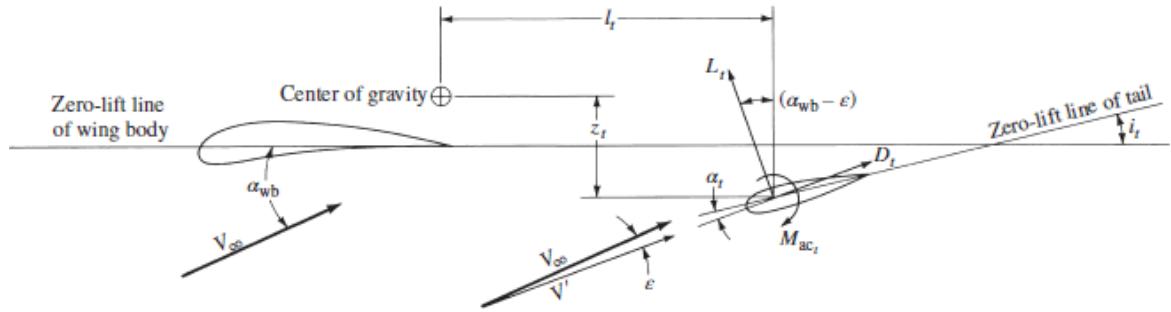

**Figure 7.21** Geometry of wing-tail combination.

Split  $L_t$  and  $D_t$  into their vertical components  $L_t \cos(\alpha_{wb} - \varepsilon)$  and  $D_t \sin(\alpha_{wb} - \varepsilon)$  and their horizontal components  $L_t \sin(\alpha_{wb} - \varepsilon)$  and  $D_t \cos(\alpha_{wb} - \varepsilon)$ . By inspection of Fig. 7.21, the sum of moments about the center of gravity due to  $L_t$ ,  $D_t$ , and  $M_{ac_t}$  of the tail is

$$M_{cg_t} = -l_t [L_t \cos(\alpha_{wb} - \varepsilon) + D_t \sin(\alpha_{wb} - \varepsilon)] + z_t L_t \sin(\alpha_{wb} - \varepsilon) - z_t D_t \cos(\alpha_{wb} - \varepsilon) + M_{ac_t} \quad (7.11)$$

Here  $M_{cg_t}$  denotes the contribution to moments about the airplane's center of gravity due to the horizontal tail.

In Eq. (7.11) the first term on the right side,  $l_t L_t \cos(\alpha_{wb} - \varepsilon)$ , is by far the largest in magnitude. In fact, for conventional airplanes, the following simplifications are reasonable:

1.  $z_t \ll l_t$
2.  $D_t \ll L_t$
3. The angle  $\alpha_{wb} - \varepsilon$  is small; hence  $\sin(\alpha_{wb} - \varepsilon) \approx 0$  and  $\cos(\alpha_{wb} - \varepsilon) \approx 1$ .

4.  $M_{cg_t}$  is small in magnitude.

With the preceding approximations, which are based on experience, Eq. (7.11) is dramatically simplified to

$$M_{cg_t} = -l_t L_t \quad (7.12)$$

Define the *tail lift coefficient*, based on free-stream dynamic pressure  $q_\infty = \frac{1}{2}\rho_\infty V_\infty^2$  and the tail planform area  $S_t$ , as

$$C_{L,t} = \frac{L_t}{q_\infty S_t} \quad (7.13)$$

Combining Eqs. (7.12) and (7.13), we obtain

$$M_{cg_t} = -l_t q_\infty S_t C_{L,t} \quad (7.14)$$

Dividing Eq. (7.14) by  $q_\infty Sc$ , where  $c$  is the wing chord and  $S$  is the wing planform area, gives

$$\frac{M_{cg_t}}{q_\infty Sc} \equiv C_{M,cg_t} = -\frac{l_t S_t}{c S} C_{L,t} \quad (7.15)$$

Examining the right side of Eq. (7.15), we note that  $l_t S_t$  is a *volume* page 623 characteristic of the size and location of the tail and that  $cS$  is a *volume* characteristic of the size of the wing. The ratio of these two volumes is called the *tail volume ratio*  $V_H$ , where

$$V_H \equiv \frac{l_t S_t}{c S} \quad (7.16)$$

Thus Eq. (7.15) becomes

$$C_{M,cg_t} = -V_H C_{L,t} \quad (7.17)$$

The simple relation in Eq. (7.17) gives the total contribution of the tail to moments about the airplane's center of gravity. With the preceding simplifications and by referring to Fig. 7.21, Eqs. (7.12) and (7.17) say that the moment is equal to tail lift operating through the moment arm  $l_t$ .

It will be useful to couch Eq. (7.17) in terms of angle of attack, as was done in Eq. (7.10) for the wing–body combination. Keep in mind that the stability criterion in Fig. 7.13 involves  $\partial C_{M,cg_t}/\partial \alpha_a$ ; hence equations in terms of  $\alpha_a$  are directly useful. Specifically, referring to the geometry of Fig. 7.21, we see that the angle of attack of the tail is

$$\alpha_t = \alpha_{wb} - i_t - \varepsilon \quad (7.18)$$

Let  $a_t$  denote the lift slope of the tail. Thus, from Eq. (7.18),

$$C_{L,t} = a_t \alpha_t = a_t (\alpha_{wb} - i_t - \varepsilon) \quad (7.19)$$

The downwash angle  $\varepsilon$  is difficult to predict theoretically and is usually obtained from experiment. It can be written as

$$\varepsilon = \varepsilon_0 + \frac{\partial \varepsilon}{\partial \alpha} \alpha_{wb} \quad (7.20)$$

where  $\varepsilon_0$  is the downwash angle when the wing–body combination is at zero lift. Both  $\varepsilon_0$  and  $\partial \varepsilon / \partial \alpha$  are usually obtained from wind tunnel data. Thus, combining Eqs. (7.19) and (7.20) yields

$$C_{L,t} = a_t \alpha_{wb} \left( 1 - \frac{\partial \varepsilon}{\partial \alpha} \right) - a_t (i_t + \varepsilon_0) \quad (7.21)$$

Substituting Eq. (7.21) into (7.17), we obtain

$$C_{M,cg} = -a_t V_H \alpha_{wb} \left( 1 - \frac{\partial \varepsilon}{\partial \alpha} \right) + a_t V_H (\varepsilon_0 + i_t) \quad (7.22)$$

Equation (7.22), though lengthier than Eq. (7.17), contains the explicit dependence on angle of attack and will be useful for our subsequent discussions.

page 624

## 7.8 TOTAL PITCHING MOMENT ABOUT THE CENTER OF GRAVITY

Consider the airplane as a whole. The total  $M_{cg}$  is due to the contribution of the wing–body combination plus that of the tail:

$$C_{M,cg} = C_{M,cg_{wb}} + C_{M,cg_t} \quad (7.23)$$

Here  $C_{M,cg}$  is the total moment coefficient about the center of gravity for the complete airplane. Substituting Eqs. (7.9) and (7.17) into (7.23), we have

$$C_{M,cg} = C_{M,ac_{wb}} + C_{L_{wb}} (h - h_{ac_{wb}}) - V_H C_{L,t} \quad (7.24)$$


In terms of angle of attack, an alternative expression can be obtained by substituting Eqs. (7.10) and (7.22) into Eq. (7.23):

$$C_{M,cg} = C_{M,ac_{wb}} + a_{wb} \alpha_{wb} \left[ h - h_{ac_{wb}} - V_H \frac{a_t}{a_{wb}} \left( 1 - \frac{\partial \varepsilon}{\partial \alpha} \right) \right] + V_H a_t (i_t + \varepsilon_0) \quad (7.25)$$

The angle of attack requires further clarification. Referring again to Fig. 7.13, we find that the moment coefficient curve is usually obtained from wind tunnel data, preferably for a model of the complete airplane. Hence,  $\alpha_a$  in Fig. 7.13 should be interpreted as the absolute angle of attack referenced to the zero-lift line of the *complete airplane*, which is not necessarily the same as the zero-lift line for the wing–body combination. This comparison is sketched in Fig. 7.22. However, for many conventional aircraft, the difference is small. Therefore, in the remainder of this chapter we assume the two zero-lift lines in Fig. 7.22 to be

the same. Thus,  $\alpha_{wb}$  becomes the angle of attack of the complete airplane  $\alpha_a$ . Consistent with this assumption, the total lift of the airplane is due to the wing–body combination with the tail lift neglected. Hence,  $C_{L_{wb}} = C_L$  and the lift slope  $a_{wb} = a$ , where  $C_L$  and  $a$  are for the complete airplane. With these interpretations, Eq. (7.25) can be rewritten as

page 625

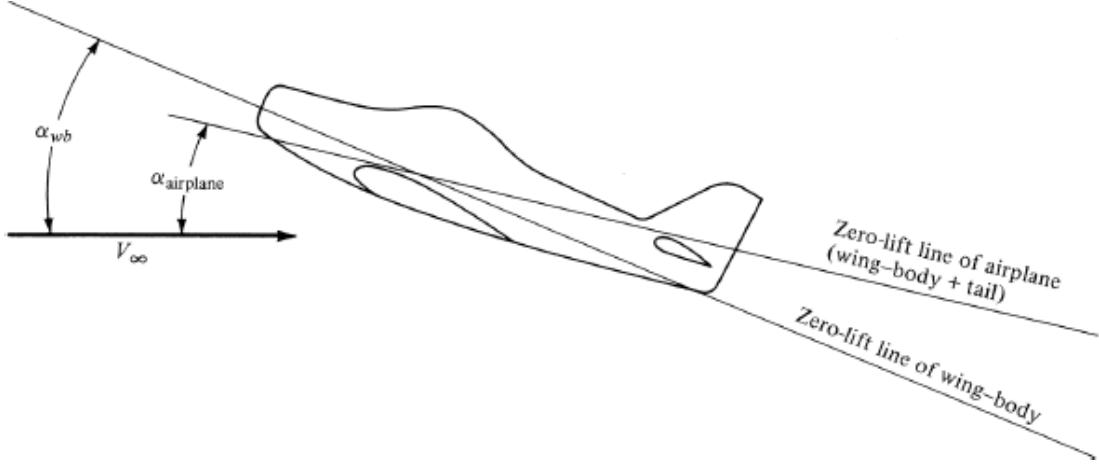

**Figure 7.22** Zero-lift line of the wing–body combination compared with that of the complete airplane.

$$C_{M,cg} = C_{M,ac_{wb}} + a\alpha_a \left[ h - h_{ac_{wb}} - V_H \frac{a_t}{a} \left( 1 - \frac{\partial \varepsilon}{\partial \alpha} \right) \right] + V_H a_t (i_t + \varepsilon_0) \quad (7.26)$$

Equation (7.26) is the same as Eq. (7.25) except that the subscript *wb* on some terms has been dropped in deference to properties for the whole airplane.

#### EXAMPLE 7.4

Consider the wing–body model in Example 7.3. The area and chord of the wing are  $0.1 \text{ m}^2$  and  $0.1 \text{ m}$ , respectively. Now assume that a horizontal tail is added to this model. The distance from the airplane’s center of gravity to the tail’s aerodynamic center is  $0.17 \text{ m}$ ; the tail area is  $0.02 \text{ m}^2$ ; the tail-setting angle is  $2.7^\circ$ ; the tail lift slope is  $0.1$  per degree; and from experimental measurement,  $\varepsilon_0 = 0$  and  $\partial \varepsilon / \partial \alpha = 0.35$ . If  $\alpha = 7.88^\circ$ , calculate  $C_{M,cg}$  for the airplane model.

#### ■ Solution

From Eq. (7.26),

$$C_{M,CG} = C_{M,ac_{wb}} + \alpha \alpha_a \left[ h - h_{ac_{wb}} - V_H \frac{a_t}{\alpha} \left( 1 - \frac{\partial e}{\partial \alpha} \right) \right] + V_H a_t (i_t + \varepsilon_0)$$

where

$C_{M,ac_{wb}} = -0.032$	(from Example 7.3)
$\alpha = 0.08$	(from Example 7.3)
$\alpha_a = 7.88 + 1.5 = 9.38^\circ$	(from Example 7.3)
$h - h_{ac_{wb}} = 0.11$	(from Example 7.3)
$V_H = \frac{l_t S_t}{cS} = \frac{0.17(0.02)}{0.1(0.1)} = 0.34$	
$a_t = 0.1$ per degree	
$\frac{\partial e}{\partial \alpha} = 0.35$	
$i_t = 2.7^\circ$	
$\varepsilon_0 = 0$	

Thus

$$\begin{aligned} C_{M,CG} &= -0.032 + 0.08(9.38) \left[ 0.11 - 0.34 \left( \frac{0.1}{0.08} \right) (1 - 0.35) \right] \\ &\quad + 0.34(0.1)(2.7 + 0) \\ &= -0.032 - 0.125 + 0.092 = \boxed{-0.065} \end{aligned}$$


---

## 7.9 EQUATIONS FOR LONGITUDINAL STATIC STABILITY

The criteria necessary for longitudinal balance and static stability were [page 626](#) developed in Sec. 7.5: (1)  $C_{M,0}$  must be positive and (2)  $\partial C_{M,CG}/\partial \alpha_a$  must be negative, both conditions with the implicit assumption that  $\alpha_e$  falls within the practical flight range of angle of attack; that is, the moment coefficient curve must be similar to that sketched in Fig. 7.13. In turn, the ensuing sections developed a quantitative formalism for static stability culminating in Eq. (7.26) for  $C_{M,CG}$ . The purpose of this section is to combine the preceding results to obtain formulas for the direct calculation of  $C_{M,0}$  and  $\partial C_{M,CG}/\partial \alpha_a$ . We will then be able to make a quantitative assessment of the longitudinal static stability of a given airplane, as well as point out some basic philosophy of airplane design.

Recall that, by definition,  $C_{M,0}$  is the value of  $C_{M,CG}$  when  $\alpha_a = 0$ —that is, when the lift is zero. Substituting  $\alpha_a = 0$  into Eq. (7.26), we directly obtain

$$C_{M,0} \equiv (C_{M,CG})_{L=0} = C_{M,ac_{wb}} + V_H a_t (i_t + \varepsilon_0) \quad (7.27)$$

Examine Eq. (7.27). We know that  $C_{M,0}$  must be positive to balance the airplane. However, the previous sections have pointed out that  $C_{M,ac_{wb}}$  is negative for conventional airplanes. Therefore,  $V_H a_t (i_t + \varepsilon_0)$  must be positive and large enough to more than counterbalance the negative  $C_{M,ac}$ . Both  $V_H$  and  $a_t$  are positive quantities, and  $\varepsilon_0$  is usually so small that it exerts only a minor effect.

Thus,  $i_t$  must be a positive quantity. This verifies our previous physical arguments that the tail must be set at an angle relative to the wing in the manner shown in Figs. 7.17a and 7.21. This allows the tail to generate enough negative lift to produce a positive  $C_{M,0}$ .

Consider now the slope of the moment coefficient curve. Differentiating Eq. (7.26) with respect to  $\alpha_a$ , we obtain

$$\frac{\partial C_{M,CG}}{\partial \alpha_a} = a \left[ h - h_{ac_{wb}} - V_H \frac{a_t}{a} \left( 1 - \frac{\partial \epsilon}{\partial \alpha} \right) \right] \quad (7.28)$$

This equation clearly shows the powerful influence of the location  $h$  of the center of gravity and the tail volume ratio  $V_H$  in determining longitudinal static stability.

Equations (7.27) and (7.28) allow us to check the static stability of a given airplane, assuming we have some wind tunnel data for  $a$ ,  $a_t$ ,  $C_{M,ac_{wb}}$ ,  $\epsilon_0$ , and  $\partial \epsilon / \partial \alpha$ . They also establish a certain philosophy in the design of an airplane. For example, consider an airplane where the location  $h$  of the center of gravity is essentially dictated by payload or other mission requirements. In that case the desired amount of static stability can be obtained simply by designing  $V_H$  large enough via Eq. (7.28). Once  $V_H$  is fixed in this manner, the desired  $C_{M,0}$  (or the desired  $\alpha_e$ ) can be obtained by designing  $i_t$  appropriately via Eq. (7.27). Thus, the values of  $C_{M,0}$  and  $\partial C_{M,CG} / \partial \alpha_a$  basically dictate the design values of  $i_t$  and  $V_H$ , respectively (for a fixed center-of-gravity location).

### EXAMPLE 7.5

---

Consider the wing–body–tail wind tunnel model of Example 7.4. Does this model have longitudinal static stability and balance?

#### ■ Solution

From Eq. (7.28),

$$\frac{\partial C_{M,CG}}{\partial \alpha_a} = a \left[ h - h_{ac_{wb}} - V_H \frac{a_t}{a} \left( 1 - \frac{\partial \epsilon}{\partial \alpha} \right) \right]$$

where, from Examples 7.3 and 7.4,

$$\begin{aligned}
a &= 0.08 \\
h - h_{ac_{wb}} &= 0.11 \\
V_H &= 0.34 \\
a_t &= 0.1 \text{ per degree} \\
\frac{\partial e}{\partial \alpha} &= 0.35
\end{aligned}$$

Thus  $\frac{\partial C_{M,CG}}{\partial \alpha_a} = 0.08 \left[ 0.11 - 0.34 \frac{0.1}{0.08} (1 - 0.35) \right] = -0.0133$

The slope of the moment coefficient curve is negative; hence the airplane model is statically stable.

However, is the model longitudinally balanced? To answer this, we must find  $C_{M,0}$ , which in combination with the preceding result for  $\partial C_{M,CG}/\partial \alpha$  will yield the equilibrium angle of attack  $\alpha_e$ . From Eq. (7.27),

$$C_{M,0} = C_{M,ac_{wb}} + V_H a_t (i_t + e_0)$$

where from Examples 7.3 and 7.4,

$$\begin{aligned}
C_{M,ac_{wb}} &= -0.032 \\
i_t &= 2.7^\circ
\end{aligned}$$

Thus  $C_{M,0} = -0.032 + 0.34(0.1)(2.7) = 0.06$

From Fig. 7.13, the equilibrium angle of attack is obtained from

$$0 = 0.06 - 0.0133 \alpha_e$$

Thus  $\alpha_e = 4.5^\circ$

Clearly this angle of attack falls within the reasonable flight range. So the airplane is longitudinally balanced as well as statically stable.

## 7.10 NEUTRAL POINT

Consider the situation where the location  $h$  of the center of gravity is allowed to move with everything else remaining fixed. In fact, Eq. (7.28) indicates that static stability is a strong function of  $h$ . Indeed, the value of  $\partial C_{M,CG}/\partial \alpha_a$  can always be made negative by properly locating the center of gravity. In the same vein, there is one specific location of the center of gravity such that  $\partial C_{M,CG}/\partial \alpha_a = 0$ . The value of  $h$  when this condition holds is defined as the *neutral*

*point*, denoted by  $h_n$ . When  $h = h_n$ , the slope of the moment coefficient curve is zero, as illustrated in Fig. 7.23.


The location of the neutral point is readily obtained from Eq. (7.28) by setting  $h = h_n$  and  $\partial C_{M,\text{cg}} / \partial \alpha_a = 0$ , as follows:

$$0 = a \left[ h_n - h_{\text{ac}_{\text{wb}}} - V_H \frac{a_t}{a} \left( 1 - \frac{\partial \epsilon}{\partial \alpha} \right) \right] \quad (7.29)$$

Solving Eq. (7.29) for  $h_n$ , we have

$$h_n = h_{\text{ac}_{\text{wb}}} + V_H \frac{a_t}{a} \left( 1 - \frac{\partial \epsilon}{\partial \alpha} \right) \quad (7.30)$$

Examine Eq. (7.30). The quantities on the right side are, for all practical purposes, established by the design configuration of the airplane. Thus, for a *given* airplane design, the neutral point is a *fixed quantity*—that is, a point that is frozen somewhere on the airplane. It is quite independent of the actual location  $h$  of the center of gravity.

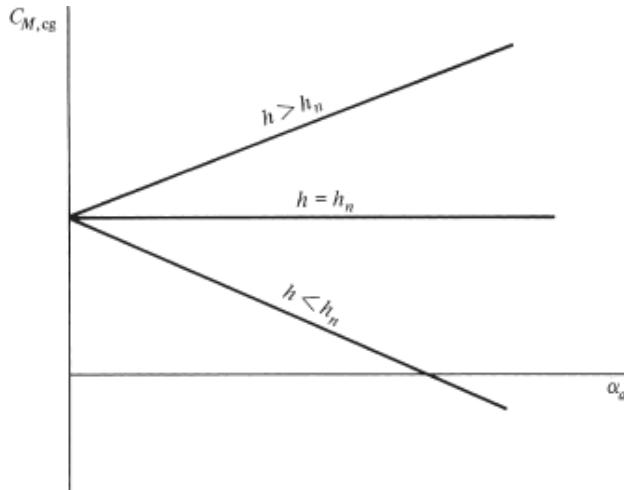

**Figure 7.23** Effect of the location of the center of gravity, relative to the neutral point, on static stability.

The concept of the neutral point is introduced as an alternative page 629 stability criterion. For example, inspection of Eqs. (7.28) and (7.30) shows that  $\partial C_{M,\text{cg}} / \partial \alpha_a$  is negative, zero, or positive depending on whether  $h$  is less than, equal to, or greater than  $h_n$ . These situations are sketched in Fig. 7.23. Remember that  $h$  is measured from the leading edge of the wing, as shown in Fig. 7.19. Hence,  $h < h_n$  means that the center of gravity is located *forward* of the neutral point. Thus, an alternative stability criterion is as follows:

For longitudinal static stability, the position of the center of gravity must always be forward of the neutral point.

Recall that the definition of the aerodynamic center for a wing is that point about which moments are independent of the angle of attack. This concept can now be extrapolated to the whole airplane by considering again Fig. 7.23. Clearly, when  $h = h_n$ ,  $C_{M,CG}$  is independent of the angle of attack. Therefore, the neutral point might be considered the aerodynamic center of the complete airplane.

Again examining Eq. (7.30), we see that the tail strongly influences the location of the neutral point. *By proper selection of the tail parameters, principally  $V_H$ ,  $h_n$  can be located at will by the designer.*

### EXAMPLE 7.6

---

For the wind tunnel model of Examples 7.3 to 7.5, calculate the neutral point location.

#### ■ Solution

From Eq. (7.30),

$$h_n = h_{ac_{wb}} + V_H \frac{a_t}{a} \left( 1 - \frac{\partial \epsilon}{\partial \alpha} \right)$$

where  $h_{ac_{wb}} = 0.24$  (from Example 7.3). Thus

$$h_n = 0.24 + 0.34 \left( \frac{0.1}{0.08} \right) (1 - 0.35)$$

$$\boxed{h_n = 0.516}$$

Note from Example 7.3 that  $h = 0.35$ . Compare this center of gravity location with the neutral point location of 0.516. The center of gravity is comfortably *forward* of the neutral point; this again confirms the results of Example 7.5 that the airplane is statically stable.

---


## 7.11 STATIC MARGIN

A corollary to the preceding discussion can be obtained as follows. Solve Eq. (7.30) for  $h_{ac_{wb}}$ :

$$h_{ac_{wb}} = h_n - V_H \frac{a_t}{a} \left( 1 - \frac{\partial \epsilon}{\partial \alpha} \right) \quad (7.31)$$

Note that in Eqs. (7.29) to (7.31), the value of  $V_H$  is not precisely the same number as in Eq. (7.28). Indeed, in Eq. (7.28)  $V_H$  is based on the moment arm  $l$ , measured from the center of gravity location, as shown in Fig. 7.21. In contrast, in Eq. (7.29), the center of gravity location has been moved to the neutral point, and  $V_H$  is therefore based on the moment arm measured from the neutral point location. However, the difference is usually small, and this effect will be ignored here. Therefore, substituting Eq. (7.31) into Eq. (7.28) and canceling the terms involving  $V_H$ , we obtain

page 630

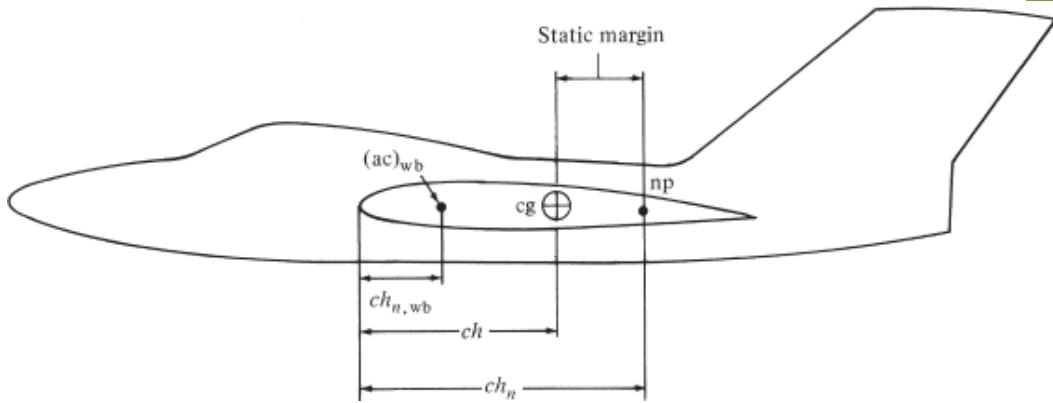

**Figure 7.24** Illustration of the static margin.

$$\frac{\partial C_{M,CG}}{\partial \alpha_a} = a(h_n - h) \quad (7.32)$$

The distance  $h_n - h$  is defined as the *static margin* and is illustrated in Fig. 7.24. Thus, from Eq. (7.32),

$$\frac{\partial C_{M,CG}}{\partial \alpha_a} = -a(h_n - h) = -a \times \text{static margin} \quad (7.33)$$

Equation (7.33) shows that the static margin is a direct measure of longitudinal static stability. For static stability, the static margin must be positive. Moreover, the larger the static margin, the more stable the airplane.

### EXAMPLE 7.7

For the wind tunnel model of the previous examples, calculate the static margin.

#### ■ Solution

From Example 7.6,  $h_n = 0.516$  and  $h = 0.35$ . Thus, by definition,

$$\text{Static margin} \equiv h_n - h = 0.516 - 0.35 = 0.166$$

For a check on the consistency of our calculations, consider Eq. (7.33).

$$\frac{\partial C_{M,CG}}{\partial \alpha_0} = -a \times \text{static margin} = -0.08(0.166) = -0.0133 \text{ per degree}$$

This is the same value as calculated in Example 7.5; our calculations are indeed consistent.

---

page 631

## DESIGN BOX


Let us boil down all the previous discussion to some plain speaking about the location of the lift force acting on the airplane relative to the center of gravity when the airplane is statically stable and when it is trimmed. Such plain speaking gives the airplane designer a clearer concept of how to design for a specified amount of stability (or instability).

A diagram that is frequently shown for a *statically stable* airplane is sketched in Fig. 7.25a. Here we see the lift acting through a point situated *behind* the center of gravity, and we say this is necessary for static stability. But what does this really mean? What is the real significance of Fig. 7.25a? Let us look at it more closely.

First recall that the lift of the airplane is due to the component of the net integrated pressure distribution exerted over the external surface of the airplane—the wings, fuselage, tail, and so on—acting perpendicular to the relative wind. This pressure distribution exerts a *distributed* load over the whole airplane. However, as is frequently done, we can conceptualize the mechanical effect of this distributed load by replacing it with a single concentrated force acting through an arbitrary point plus the moments acting about the same point. This is what is shown in Fig. 7.25a; we show the lift as a single concentrated force acting through a point, and we also indicate the moments about this point. The point that is chosen in Fig. 7.25a is the aerodynamic center of the airplane (the neutral point). In Fig. 7.25a the lift shown is the *total* lift of the airplane, including the contribution from the tail.

In Sec. 7.10 we demonstrated that the aerodynamic center (neutral [page 632](#) point) must be located behind the center of gravity if the airplane is to have static stability. We now have a simple picture in Fig. 7.25b that easily proves this. In Fig. 7.25a the airplane is trimmed; that is,  $M_{cg} = 0$ . Imagine that the airplane encounters a gust such that its angle of attack is momentarily increased. In turn, the lift will momentarily increase, as shown in Fig. 7.25b. Here  $L_1$  is the lift before the gust, and  $L_2$  is the increased lift in response to the gust. Because the lift is acting through a point *behind* the center of gravity, the

increased lift results in a negative (pitch-down) moment about the center of gravity, as shown in Fig. 7.25b. Hence the initial tendency after encountering the gust will be to pitch the nose down, reducing the angle of attack and restoring the airplane to its trimmed condition—the precise notion of static stability. It is clear from Fig. 7.25 that if the lift acting through the aerodynamic center is *behind* the center of gravity, the airplane will be statically stable.

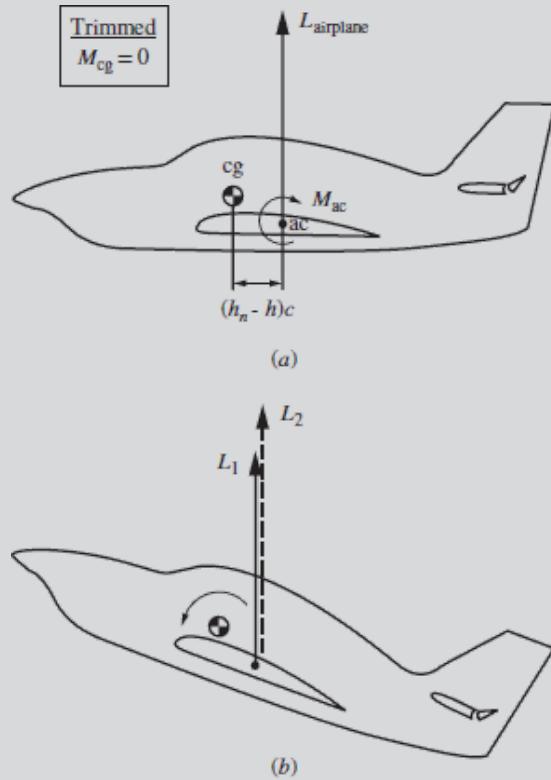


**Figure 7.25** A diagram of static stability with the lift acting behind the center of gravity.

We note in passing that for the airplane in Fig. 7.25a to be trimmed,  $M_{cg} = 0$ . The lift is shown acting through the moment arm  $(h_n - h)c$ , creating a pitch-down moment about the center of gravity equal to  $-[(h_n - h)cL]$ . In turn, the moment about the aerodynamic center of the airplane  $M_{ac}$  must be equal and opposite to have zero total moments about the center of gravity. That is,  $M_{ac}$  must be a positive (pitch-up) moment, as shown in Fig. 7.25a. Usually much of this pitch-up moment is due to a download on the tail, similar to that illustrated in Fig. 7.17a. If the airplane configuration were a canard, the positive  $M_{ac}$  would be due to an upload on the canard, similar to that illustrated

in Fig. 7.17b. Indeed, this situation is one advantage in favor of the canard. In Fig. 7.25 the lift shown is the *total* lift of the airplane, equal to the weight in steady, level flight. For a conventional rear-tail configuration, the download on the tail requires the wing to produce more lift in order for the total lift to equal the weight. In contrast, with the canard configuration, the upload on the canard contributes to the overall lift, hence requiring less lift from the wing. In turn, this reduces the induced drag generated from the wing.

Figure 7.25 reflects a commonly shown diagram illustrating longitudinal static stability, with the lift shown acting behind the center of gravity. An alternative picture illustrating static stability is shown in Fig. 7.26. This picture is not so commonly seen, but it is perhaps a “purer” explanation of the nature of longitudinal static stability. Recall that the lift of the airplane is due to the net integrated effect of the pressure distribution acting over the entire surface of the airplane. This pressure distribution has a *centroid* (analogous to the centroid of an area or a solid, which you calculate from differential calculus). The centroid of the pressure distribution is called the *center of pressure*. The center of pressure, being a centroid, is the point about which the net moment due to the distributed pressure is zero. Hence, when we simulate the mechanical effect of the pressure distribution by a single concentrated force, it is most natural to locate this concentrated force at the center of pressure. Indeed, the center of pressure can be thought of as “the point on the airplane through which the lift effectively acts.” To be more specific, we can simulate the mechanical effect of the distributed pressure loads on the airplane by first locating the center of pressure and then drawing the lift through this point, with zero moments about this point. This is the diagram shown in Fig. 7.26. Moreover, *when the airplane is trimmed, the center of pressure is precisely located at the center of gravity*. This is the case shown in Fig. 7.26a: With the lift acting through the center of pressure and with the center of pressure at the center of gravity, there is no moment about the center of gravity, and by definition, the airplane is trimmed. This is what nature does. When the airplane is trimmed, the pressure distribution over the airplane has been adjusted so that the center of pressure is precisely at the center of gravity.

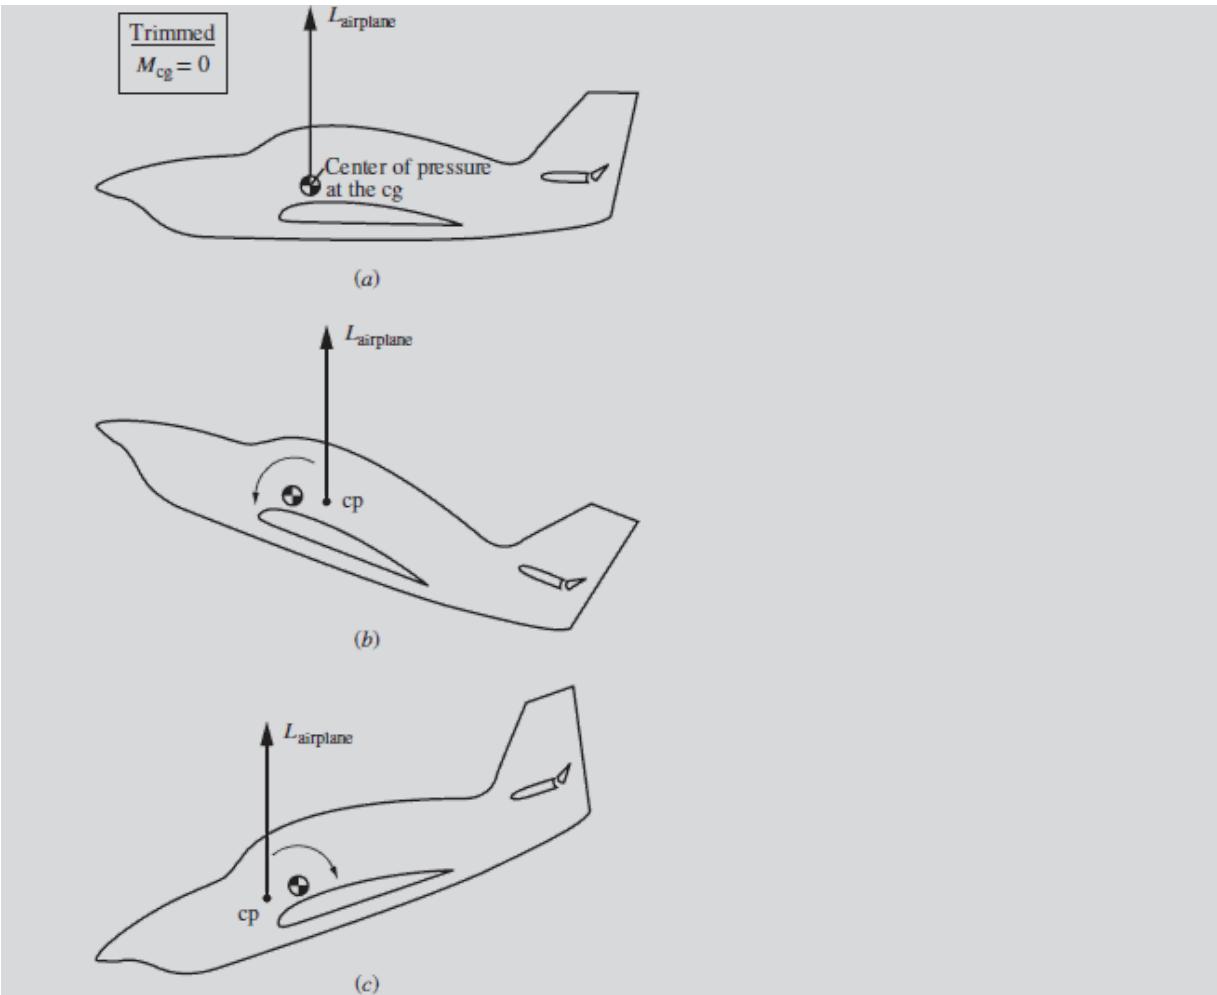

**Figure 7.26** A diagram of static stability with the lift acting at the center of pressure.

When the angle of attack of the airplane changes, the pressure distribution over the surface changes, and hence the center of pressure *shifts*—its location is a function of the angle of attack. For longitudinal static stability, the shift in the center of pressure must be in the direction shown in Fig. 7.26b. For static stability, the shift in the center of pressure must be *rearward* to create a restoring moment about the center of gravity, as shown in Fig. 7.26b. Similarly, consider the originally trimmed airplane encountering a gust that *decreases* the angle of attack, as shown in Fig. 7.26c. For static stability, the shift in the center of pressure must be *forward* to create a restoring moment about the center of gravity, as shown in Fig. 7.26c. Hence, a statically stable airplane must be designed to have the shifts of the center of pressure in the directions shown in Fig. 7.26b and c.

In summary, Figs. 7.25 and 7.26 are alternative but equally effective diagrams to illustrate the necessary condition for longitudinal static stability. These figures supplement, and are totally consistent with, the more detailed mathematical descriptions in Secs. 7.6 to 7.11.

## 7.12 CONCEPT OF STATIC LONGITUDINAL CONTROL

A study of stability and control is double-barreled. The first aspect—that of stability itself—has been the subject of the preceding sections. However, for the remainder of this chapter, the focus will turn to the second aspect: control. In regard to our road map in Fig. 7.5, we are moving to the right column.


Consider a statically stable airplane in trimmed (equilibrium) flight. Recalling Fig. 7.13, we see that the airplane must therefore be flying at the trim angle of attack  $\alpha_e$ . In turn, this value of  $\alpha_e$  corresponds to a definite value of lift coefficient: the trim lift coefficient  $C_{L_{\text{trim}}}$ . For steady, level flight, this corresponds to a definite velocity, which from Eq. (6.26) is

$$V_{\text{trim}} = \sqrt{\frac{2W}{\rho_\infty S C_{L_{\text{trim}}}}} \quad (7.34)$$


Now assume that the pilot wishes to fly at a lower velocity  $V_\infty < V_{\text{trim}}$ . At a lower velocity, the lift coefficient, and hence the angle of attack, must be increased to offset the decrease in dynamic pressure (remember from Ch. 6) that the lift must always balance the weight for steady, level flight). However, from Fig. 7.13, if  $\alpha$  is increased,  $C_{M,\text{cg}}$  becomes negative (the moment about the center of gravity is no longer zero), and the airplane is no longer trimmed. Consequently, if nothing else is changed about the airplane, it cannot achieve steady, level, equilibrium flight at any other velocity than  $V_{\text{trim}}$  or at any other angle of attack than  $\alpha_e$ .

Obviously this is an intolerable situation—an airplane must be able to change its velocity at the will of the pilot and still remain balanced. The only way to accomplish this is to effectively change the moment coefficient curve for the airplane. Perhaps the pilot wishes to fly at a *faster* velocity but still remain in steady, level, balanced flight. The lift coefficient must decrease, so a new angle of attack  $\alpha_n$  must be obtained where  $\alpha_n < \alpha_e$ . At the same time, the moment coefficient curve must be changed so that  $C_{M,\text{cg}} = 0$  at  $\alpha_n$ . Figures 7.27 and 7.28 demonstrate two methods of achieving this change. In Fig. 7.27 the slope is made more negative so that  $C_{M,\text{cg}}$  goes through zero at  $\alpha_n$ . From Eq. (7.28) or (7.32), the slope can be changed by shifting the center of gravity. In our example the center of gravity must be shifted forward. Otto Lilienthal (see Sec. 1.5) used this method in his gliding flights. Figure 1.15 shows Lilienthal hanging loosely

below his glider; by simply swinging his hips he was able to shift the center of gravity and change the stability of the aircraft. This principle is carried over today to modern hang gliders for sport use.

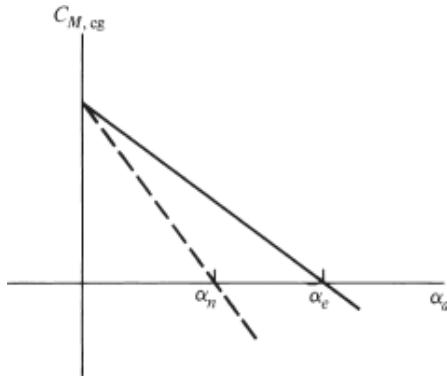

**Figure 7.27** Change in trim angle of attack due to change in slope of moment coefficient curve.

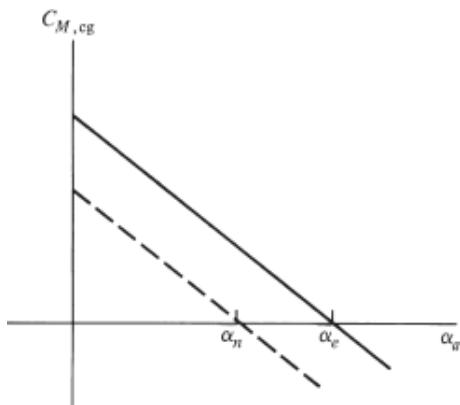


**Figure 7.28** Change in trim angle of attack due to change in  $C_{M,0}$ .

However, for a conventional airplane, shifting the center of gravity is highly impractical. Therefore, another method for changing the moment curve is employed, as shown in Fig. 7.28. Here the slope remains the same, but  $C_{M,0}$  is changed so that  $C_{M,0} = 0$  at  $\alpha_n$ . This is accomplished by deflecting the elevator on the horizontal tail. Hence, we have arrived at a major concept of static, longitudinal control: The elevator deflection can be used to control the trim angle of attack and thus to control the equilibrium velocity of the airplane.


Consider Fig. 7.28. We stated earlier, without proof, that a translation [page 634](#) of the moment curve without a change in slope can be obtained simply by deflecting the elevator. But *how* and *to what extent* does the elevator

deflection change  $C_{M,cg}$ ? To provide some answers, first consider the horizontal tail with the elevator fixed in the neutral position (that is, no elevator deflection), as shown in Fig. 7.29. The absolute angle of attack of the tail is  $\alpha_t$ , as defined earlier. The variation of tail lift coefficient with  $\alpha_t$  is also sketched in Fig. 7.29; note that it has the same general shape as the airfoil and wing lift curves discussed in Ch. 5). Now assume that the elevator is deflected downward through angle  $\delta_e$ , as shown in Fig. 7.30. This is the same picture as a wing with a deflected flap, as discussed in Sec. 5.17. Consequently, just as in the case of a deflected flap, the deflected elevator causes the tail lift coefficient curve to shift to the left, as shown in Fig. 7.30. By convention (and for convenience later), a downward elevator deflection is positive. Therefore, if the elevator is deflected by an angle of, say,  $5^\circ$  and then held fixed as the complete tail is pitched through a range of  $\alpha_t$ , the tail lift curve is translated to the left. If the elevator is then deflected further, say to  $10^\circ$ , the lift curve is shifted even further to the left. This behavior is clearly illustrated in Fig. 7.30. Note that for all the lift curves, the slope  $\partial C_{L,t} / \partial \alpha_t$  is the same.


page 635

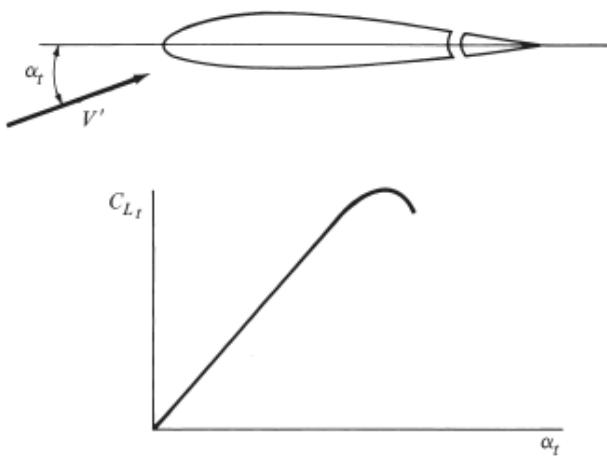

**Figure 7.29** Tail lift coefficient curve with no elevator deflection.

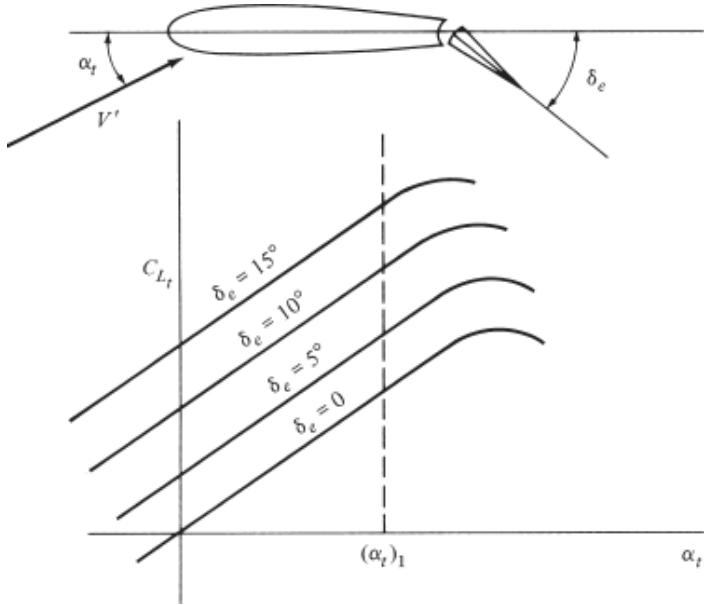

**Figure 7.30** Tail lift coefficient with elevator deflection.

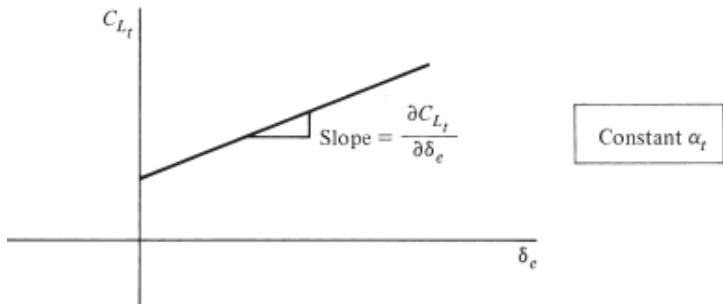

**Figure 7.31** Tail lift coefficient versus elevator deflection at constant angle of attack; a cross-plot of Fig. 7.30.

With the preceding discussion in mind, now consider the tail at a fixed angle of attack—say  $(\alpha_t)_1$ . If the elevator is deflected from, say, 0 to  $15^\circ$ , then  $C_{L_t}$  will increase along the vertical dashed line in Fig. 7.30. This variation can be cross-plotted as  $C_{L_t}$  versus  $\delta_e$ , as shown in Fig. 7.31. For most conventional airplanes the curve in Fig. 7.31 is essentially linear, and its slope  $\partial C_{L_t} / \partial \delta_e$  is called the *elevator control effectiveness*. This quantity is a direct measure of the “strength” of the elevator as a control; because  $\delta_e$  has been defined as positive for downward deflections,  $\partial C_{L_t} / \partial \delta_e$  is *always positive*.

Consequently, the tail lift coefficient is a function of *both*  $\alpha_t$  and  $\delta_e$  (page 636) (hence the partial derivative notation is used, as discussed earlier). Keep in mind that physically,  $\partial C_{L_t} / \partial \alpha_t$  is the rate of change of  $C_{L_t}$  with respect to  $\alpha_t$ ,

keeping  $\delta_e$  constant; similarly,  $\partial C_{L,t} / \partial \delta_e$  is the rate of change of  $C_{L,t}$  with respect to  $\delta_e$ , keeping  $\alpha_t$  constant. Hence, on a physical basis,

$$C_{L,t} = \frac{\partial C_{L,t}}{\partial \alpha_t} \alpha_t + \frac{\partial C_{L,t}}{\partial \delta_e} \delta_e \quad (7.35)$$

Recalling that the tail lift slope is  $a_t = \partial C_{L,t} / \partial \alpha_t$ , we see that Eq. (7.35) can be written as

$$C_{L,t} = a_t \alpha_t + \frac{\partial C_{L,t}}{\partial \delta_e} \delta_e \quad (7.36)$$

Substituting Eq. (7.36) into (7.24), we have for the pitching moment about the center of gravity

$$C_{M,CG} = C_{M,ac_{wb}} + C_{L,wb}(h - h_{ac}) - V_H \left( a_t \alpha_t + \frac{\partial C_{L,t}}{\partial \delta_e} \delta_e \right) \quad (7.37)$$

Equation (7.37) explicitly gives the effect of elevator deflection on moments about the center of gravity of the airplane.

The rate of change of  $C_{M,CG}$  due *only* to elevator deflection is, by definition,  $\partial C_{M,CG} / \partial \delta_e$ . This partial derivative can be found by differentiating Eq. (7.37) with respect to  $\delta_e$ , keeping everything else constant:

$$\frac{\partial C_{M,CG}}{\partial \delta_e} = -V_H \frac{\partial C_{L,t}}{\partial \delta_e} \quad (7.38)$$


Note that from Fig. 7.31,  $\partial C_{L,t} / \partial \delta_e$  is constant; moreover,  $V_H$  is a specific value for the given airplane. Thus, the right side of Eq. (7.38) is a constant. Therefore, on a physical basis, the increment in  $C_{M,CG}$  due *only* to a given elevator deflection  $\delta_e$  is

$$\Delta C_{M,CG} = -V_H \frac{\partial C_{L,t}}{\partial \delta_e} \delta_e \quad (7.39)$$


Equation (7.39) answers the questions asked earlier concerning how and to what extent the elevator deflection changes  $C_{M,CG}$ . Consider the moment curve labeled  $\delta_e = 0$  in Fig. 7.32. This is the curve with the elevator fixed in the neutral position; it is the curve we originally introduced in Fig. 7.13. If the elevator is deflected through a positive angle (downward), Eq. (7.39) states that all points on this curve will be shifted down by the constant amount  $\Delta C_{M,CG}$ . Hence the slope of the moment curve is preserved; only the value of  $C_{M,0}$  is changed by elevator deflection. This proves our earlier statement made in conjunction with Fig. 7.28.

For emphasis, we repeat the main thrust of this section. The elevator page 637 can be used to change and control the trim of the airplane. In essence,

this controls the equilibrium velocity of the airplane. For example, by a downward deflection of the elevator, a new trim angle  $\alpha_n$  smaller than the original trim angle  $\alpha_e$  can be obtained. (This is illustrated in Fig. 7.32.) This corresponds to an increase in velocity of the airplane.

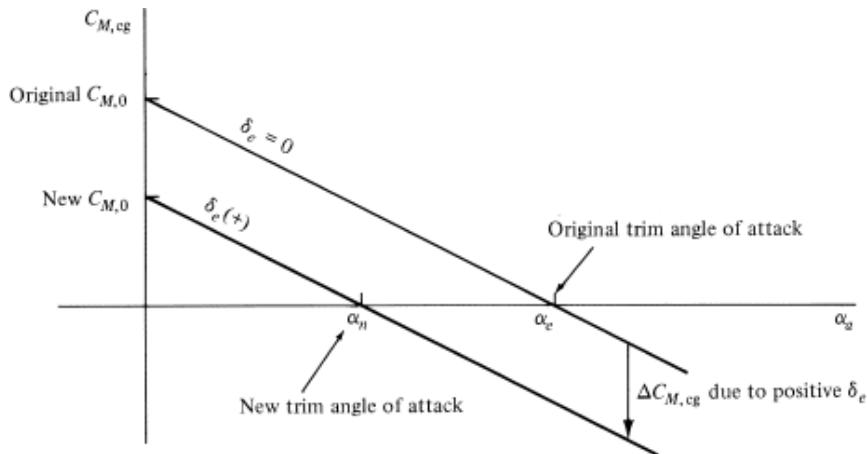

**Figure 7.32** Effect of elevator deflection on moment coefficient.

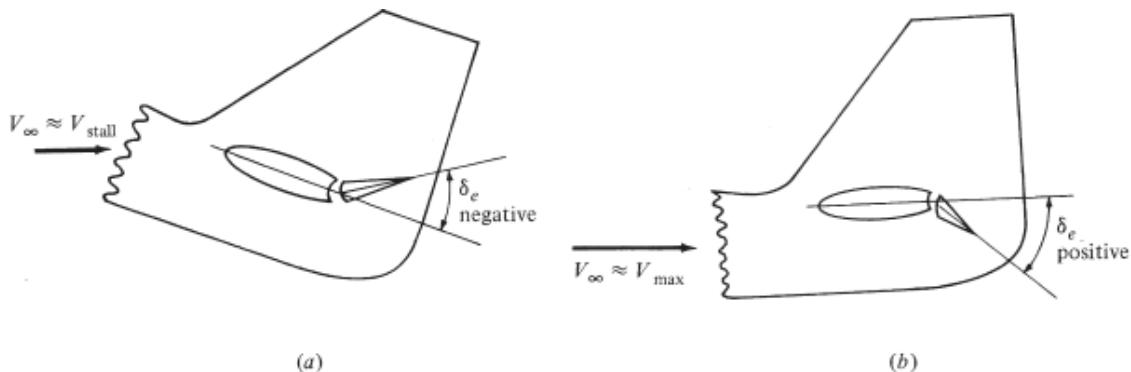

**Figure 7.33** Elevator deflection required for trim at (a) low flight velocity and (b) high flight velocity.

As another example, consider the two velocity extremes—stalling velocity and maximum velocity. Figure 7.33 illustrates the elevator deflection necessary to trim the airplane at these two extremes. First consider Fig. 7.33a, which corresponds to an airplane flying at  $V_\infty \approx V_{\text{stall}}$ . This would be the situation on a landing approach, for example. The airplane is flying at  $V_\infty \approx V_{\text{stall}}$ , hence the angle of attack is large. Therefore, from our previous discussion, the airplane must be trimmed by an *up-elevator* position—that is, by a negative  $\delta_e$ . In contrast, consider Fig. 7.33b, which corresponds to an airplane flying at  $V_\infty \approx V_{\text{max}}$  (near full throttle). Because  $q_\infty$  is large, the airplane requires only a small  $C_L$  to

generate the required lift force; hence the angle of attack is small. Thus, the airplane must be trimmed by a *down-elevator* position—that is, by a positive  $\delta_e$ .

page 638

## 7.13 CALCULATION OF ELEVATOR ANGLE TO TRIM


The concepts and relations developed in Sec. 7.12 allow us to calculate the precise elevator deflection necessary to trim the airplane at a given angle of attack. Consider an airplane with its moment coefficient curve given as in Fig. 7.34. The equilibrium angle of attack with no elevator deflection is  $\alpha_e$ . We wish to trim the airplane at a new angle of attack  $\alpha_n$ . What value of  $\delta_e$  is required for this purpose?

To answer this question, first write the equation for the moment curve with  $\delta_e = 0$  (the solid line in Fig. 7.34). This is a straight line with a constant slope equal to  $\partial C_{M,\text{cg}} / \partial \alpha_a$  and intercepting the ordinate at  $C_{M,0}$ . Hence, from analytic geometry the equation of this line is

$$C_{M,\text{cg}} = C_{M,0} + \frac{\partial C_{M,\text{cg}}}{\partial \alpha_a} \alpha_a \quad (7.40)$$

Now assume that the elevator is deflected through an angle  $\delta_e$ . The value of  $C_{M,\text{cg}}$  will change by the increment  $\Delta C_{M,\text{cg}}$ , and the moment equation given by Eq. (7.40) is now modified as

$$C_{M,\text{cg}} = C_{M,0} + \frac{\partial C_{M,\text{cg}}}{\partial \alpha_a} \alpha_a + \Delta C_{M,\text{cg}} \quad (7.41)$$

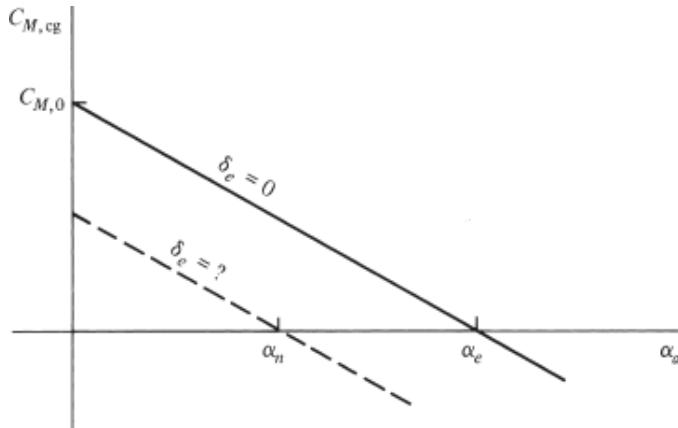

**Figure 7.34** Given the equilibrium angle of attack at zero elevator deflection, what elevator deflection is necessary to establish a given new equilibrium angle of attack?

The value of  $\Delta C_{M,CG}$  was obtained earlier as Eq. (7.39). Substituting Eq. (7.39) into (7.41), we obtain

$$C_{M,CG} = C_{M,0} + \frac{\partial C_{M,CG}}{\partial \alpha_a} \alpha_a - V_H \frac{\partial C_{L,t}}{\partial \delta_e} \delta_e \quad (7.42)$$

Equation (7.42) lets us calculate  $C_{M,CG}$  for any arbitrary angle of attack  $\alpha_a$  and any arbitrary elevator deflection  $\delta_e$ . However, we are interested in the specific situation where  $C_{M,CG} = 0$  at  $\alpha_a = \alpha_n$  and where the value of  $\delta_e$  necessary to obtain this condition is  $\delta_e = \delta_{\text{trim}}$ . That is, we want to find the value of  $\delta_e$  that gives the dashed line in Fig. 7.34. Substituting the preceding values into Eq. (7.42), we have

$$0 = C_{M,0} + \frac{\partial C_{M,CG}}{\partial \alpha_a} \alpha_n - V_H \frac{\partial C_{L,t}}{\partial \delta_e} \delta_{\text{trim}} \quad \text{page 639}$$

and solving for  $\delta_{\text{trim}}$ , we obtain

$$\delta_{\text{trim}} = \frac{C_{M,0} + (\partial C_{M,CG}/\partial \alpha_a) \alpha_n}{V_H (\partial C_{L,t}/\partial \delta_e)} \quad (7.43)$$

Equation (7.43) is the desired result. It gives the elevator deflection necessary to trim the airplane at a given angle of attack  $\alpha_n$ . In Eq. (7.43)  $V_H$  is a known value from the airplane design, and  $C_{M,0}$ ,  $\partial C_{M,CG} / \partial \alpha_a$ , and  $\partial C_{L,t} / \partial \delta_e$  are known values usually obtained from wind tunnel or free-flight data.

### EXAMPLE 7.8

Consider a full-size airplane with the same aerodynamic and design characteristics as the wind tunnel model of Examples 7.3 to 7.7. The airplane has a wing area of  $19 \text{ m}^2$ , a weight of  $2.27 \times 10^4 \text{ N}$ , and an elevator control effectiveness of 0.04. Calculate the elevator deflection angle necessary to trim the airplane at a velocity of 61 m/s at sea level.

#### ■ Solution

First we must calculate the angle of attack for the airplane at  $V_\infty = 61 \text{ m/s}$ . Recall that

$$C_L = \frac{2W}{\rho_\infty V_\infty^2 S} = \frac{2(2.27 \times 10^4)}{1.225(61)^2(19)} = 0.52 \quad \text{page 640}$$

From Example 7.3, the lift slope is  $a = 0.08$  per degree. Hence, the absolute angle of attack of the airplane is

$$\alpha_a = \frac{C_L}{a} = \frac{0.52}{0.08} = 6.5^\circ$$

From Eq. (7.43), the elevator deflection angle required to trim the airplane at this angle of attack is

$$\delta_{\text{trim}} = \frac{C_{M,0} + (\partial C_{M,\text{cg}}/\partial \alpha_a) \alpha_n}{V_H (\partial C_{L,t}/\partial \delta_e)}$$

where  $C_{M,0} = 0.06$  (from Example 7.5)

$$\frac{\partial C_{M,\text{cg}}}{\partial \alpha_a} = -0.0133 \quad (\text{from Example 7.5})$$

$$\alpha_n = 6.5^\circ \quad (\text{this is the } \alpha_a \text{ calculated previously})$$

$$V_H = 0.34 \quad (\text{from Example 7.4})$$

$$\frac{\partial C_{L,t}}{\partial \delta_e} = 0.04 \quad (\text{given in the preceding information})$$

Thus, from Eq. (7.43),

$$\delta_{\text{trim}} = \frac{0.06 + (-0.0133)(6.5)}{0.34(0.04)} = \boxed{-1.94^\circ}$$

Recall that positive  $\delta$  is downward. So, to trim the airplane at an angle of attack of  $6.5^\circ$ , the elevator must be deflected *upward* by  $1.94^\circ$ .

---

## 7.14 STICK-FIXED VERSUS STICK-FREE STATIC STABILITY

The second paragraph of Sec. 7.5 initiated our study of a rigid airplane with *fixed controls*—for example, the elevator *fixed* at a given deflection angle. The ensuing sections developed the static stability for such a case, always assuming that the elevator can be deflected to a desired angle  $\delta_e$  but held fixed at that angle. This is the situation when the pilot (human or automatic) moves the control stick to a given position and then rigidly holds it there. Consequently, the static stability that we have discussed to this point is called *stick-fixed static stability*. Modern high-performance airplanes designed to fly near or beyond the speed of sound have hydraulically assisted power controls, so a stick-fixed static stability analysis is appropriate for such airplanes.

But consider a control stick connected to the elevator via wire cables [page 641](#) without a power boost of any sort. This was characteristic of most early airplanes until the 1940s and is representative of many light, general aviation, private aircraft of today. In this case, to hold the stick fixed in a given position, the pilot must continually exert a manual force. This is uncomfortable and impractical. Thus, in steady, level flight the control stick is left essentially free;

in turn, the elevator is left free to float under the influence of the natural aerodynamic forces and moments at the tail. The static stability of such an airplane is therefore called *stick-free static stability*. This is the subject of Secs. 7.15 and 7.16.

## 7.15 ELEVATOR HINGE MOMENT


Consider a horizontal tail with an elevator that rotates about a hinge axis, as shown in Fig. 7.35. Assume that the airfoil section of the tail is symmetric, which is almost always the case for both the horizontal and vertical tails. First consider the tail at zero angle of attack, as shown in Fig. 7.35a. The aerodynamic pressure distribution on the top and bottom surfaces of the elevator will be the same—that is, symmetric about the chord. Hence, no moment will be exerted on the elevator about the hinge line. Now assume that the tail is pitched to the angle of attack  $\alpha_t$ , but the elevator is not deflected; that is,  $\delta_e = 0$ . This is illustrated in Fig. 7.35b. As discussed in Ch. 5), there will be a low pressure on the top surface of the airfoil and a high pressure on the bottom surface. The aerodynamic force on the elevator will not be balanced, and there will be a moment about the hinge axis tending to deflect the elevator upward. Finally, consider the horizontal tail at zero angle of attack but with the elevator deflected downward and held fixed at the angle  $\delta_e$ , as shown in Fig. 7.35c. Recall from Sec. 5.17 that a flap deflection effectively changes the camber of the airfoil and alters the pressure distribution. Therefore, in Fig. 7.35c there will be low and high pressures on the top and bottom elevator surfaces, respectively. As a result, a moment will again be exerted about the hinge line, tending to rotate the elevator upward. Thus we see that both the tail angle of attack  $\alpha_t$  and the elevator deflection  $\delta_e$  result in a moment about the elevator hinge line; such a moment is defined as the *elevator hinge moment*. It is the governing factor in stick-free static stability, as discussed in Sec. 7.16.

Let  $H_e$  denote the elevator hinge moment. Also, referring to Fig. 7.36, we see that the chord of the tail is  $c_t$ ; the distance from the leading edge of the elevator to the hinge line is  $c_b$ ; the distance from the hinge line to the trailing edge is  $c_e$ ; and the portion of the elevator planform area that lies *behind* (aft of) the hinge line is  $S_e$ . The *elevator hinge moment coefficient*  $C_{h_e}$  is then defined as


$$C_{h_e} = \frac{H_e}{\frac{1}{2} \rho_\infty V_\infty^2 S_e c_e} \quad (7.44)$$

where  $V_\infty$  is the free-stream velocity of the airplane.

Recall that the elevator hinge moment is due to the tail angle of attack and the elevator deflection. Hence,  $C_{h_e}$  is a function of both  $\alpha_t$  and  $\delta_e$ . Moreover, experience has shown that at both subsonic and supersonic speeds,  $C_{h_e}$  is approximately a linear function of  $\alpha_t$  and  $\delta_e$ . Thus, recalling the definition of the partial derivative in Sec. 7.2.4, we can write the hinge moment coefficient as

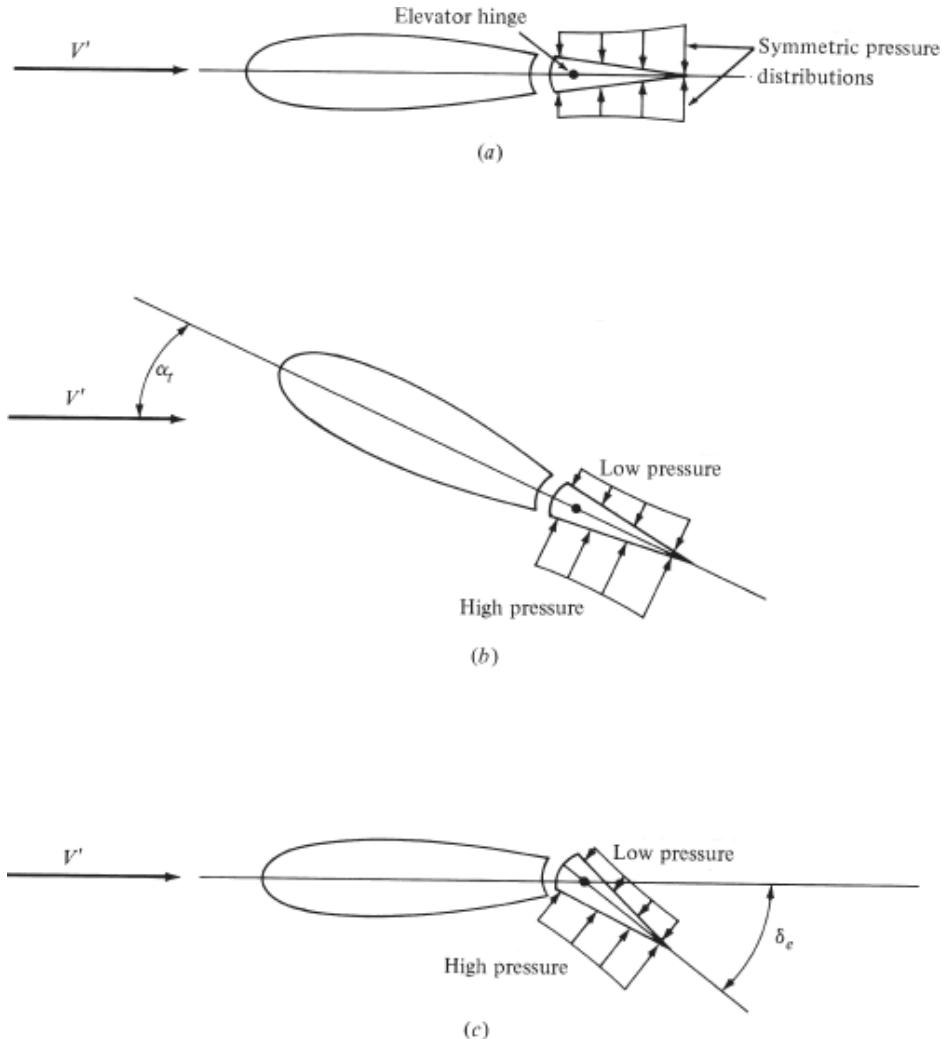

**Figure 7.35** Illustration of the aerodynamic generation of elevator hinge moment. (a) No hinge moment; (b) hinge moment due to angle of attack; (c) hinge moment due to elevator deflection.

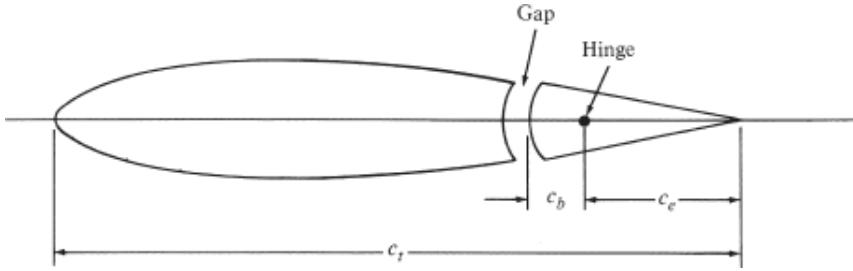

**Figure 7.36** Nomenclature and geometry for hinge moment coefficient.

$$C_{h_e} = \frac{\partial C_{h_e}}{\partial \alpha_t} \alpha_t + \frac{\partial C_{h_e}}{\partial \delta_e} \delta_e \quad (7.45)$$

where  $\partial C_{h_e} / \partial \alpha_t$  and  $\partial C_{h_e} / \partial \delta_e$  are approximately constant. However, the actual magnitudes of these constant values depend in a complicated way on  $c_e/c_t$ ,  $c_b/c_e$ , the elevator nose shape, the gap, the trailing-edge angle, and the planform. Moreover,  $H_e$  is very sensitive to local boundary layer separation. As a result, the values of the partial derivatives in Eq. (7.45) must almost always be obtained empirically (such as from wind tunnel tests) for a given design.


Consistent with the convention that downward elevator deflections [page 643](#) are positive, hinge moments that tend to deflect the elevator downward are also defined as positive. Note from Fig. 7.35b that a positive  $\alpha_t$  physically tends to produce a negative hinge moment (tending to deflect the elevator upward). Hence  $\partial C_{h_e} / \partial \delta_t$  is usually negative. (However, if the hinge axis is placed very far back, near the trailing edge, the sense of  $H_e$  may become positive. This is usually not done for conventional airplanes.) Also, note from Fig. 7.35c that a positive  $\delta_e$  usually produces a negative  $H_e$ ; hence  $\partial C_{h_e} / \partial \delta_e$  is also negative.

## 7.16 STICK-FREE LONGITUDINAL STATIC STABILITY

Let us return to the concept of stick-free static stability introduced in Sec. 7.14. If the elevator is left free to float, it will always seek some equilibrium deflection angle such that the hinge moment is zero; that is,  $H_e = 0$ . This is obvious because as long as there is a moment on the free elevator, it will always rotate. It will come to rest (equilibrium) only in the position where the moment is zero.

Recall our qualitative discussion of longitudinal static stability in Sec. 7.5. Imagine that an airplane is flying in steady, level flight at the equilibrium angle of attack. Now assume that the airplane is disturbed by a wind gust and is momentarily pitched to another angle of attack, as sketched in Fig. 7.14. If the airplane is statically stable, it will initially tend to return toward its equilibrium position. In subsequent sections we saw that the design of the horizontal tail was a powerful mechanism governing this static stability. However, until now, the

elevator was always considered fixed. But if the elevator is allowed to float freely when the airplane is pitched by some disturbance, the elevator will seek some momentary equilibrium position different from its position before the disturbance. This deflection of the free elevator will change the static stability characteristics of the airplane. In fact, such stick-free stability is usually less than stick-fixed stability. For this reason it is usually desirable to design an airplane so that the difference between stick-free and stick-fixed longitudinal stability is small.

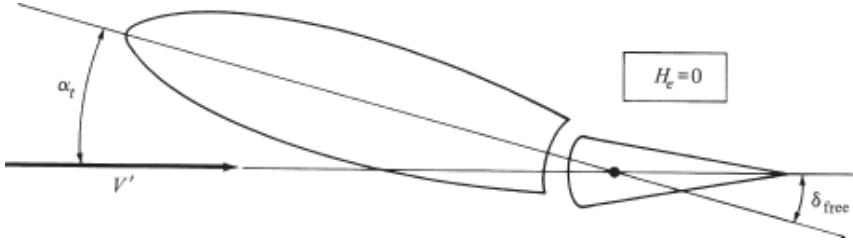

**Figure 7.37** Illustration of free elevator deflection.

With this in mind, consider the equilibrium deflection angle of a free elevator. Denote this angle by  $\delta_{\text{free}}$ , as sketched in Fig. 7.37. At this angle,  $H_e = 0$ .

Thus, from Eq. (7.45),

$$C_{h_e} = 0 = \frac{\partial C_{h_e}}{\partial \alpha_t} \alpha_t + \frac{\partial C_{h_e}}{\partial \delta_e} \delta_{\text{free}} \quad (7.46)$$

Solving Eq. (7.46) for  $\delta_{\text{free}}$  gives

$$\boxed{\delta_{\text{free}} = -\frac{\partial C_{h_e}/\partial \alpha_t}{\partial C_{h_e}/\partial \delta_e} \alpha_t} \quad (7.47)$$

Equation (7.47) gives the equilibrium, free-floating angle of the elevator as a function of tail angle of attack. As stated earlier, both partial derivatives in Eq. (7.47) are usually negative; hence a positive  $\alpha_t$  yields a negative  $\delta_{\text{free}}$  (an upward deflection). This is intuitively correct, as verified by Fig. 7.37, which shows a negative  $\delta_{\text{free}}$ .

Obviously  $\delta_{\text{free}}$  affects the tail lift coefficient, which in turn affects the static stability of the airplane. The tail lift coefficient for angle of attack  $\alpha_t$  and fixed elevator deflection  $\delta_e$  was given in Eq. (7.36), repeated here:

$$C_{L,t} = a_t \alpha_t + \frac{\partial C_{L,t}}{\partial \delta_e} \delta_e$$

page 644

However, for a free elevator,  $\delta_e = \delta_{\text{free}}$ . Denoting the tail lift coefficient for a free elevator as  $C'_{L,t}$ , we see that a substitution of Eq. (7.47) into (7.36) gives

$$\begin{aligned} C'_{L,t} &= a_t \alpha_t + \frac{\partial C_{L,t}}{\partial \delta_e} \delta_{\text{free}} \\ C'_{L,t} &= a_t \alpha_t - \frac{\partial C_{L,t}}{\partial \delta_e} \frac{\partial C_{h_e}/\partial \alpha_t}{\partial C_{h_e}/\partial \delta_e} \alpha_t \\ \text{or} \quad C'_{L,t} &= a_t \alpha_t F \end{aligned} \quad (7.48)$$

where  $F$  is the *free elevator factor*, defined as

$$F = 1 - \frac{1}{a_t} \frac{\partial C_{L,t}}{\partial \delta_e} \frac{\partial C_{h_e}/\partial \alpha_t}{\partial C_{h_e}/\partial \delta_e}$$

The free elevator factor is a number usually less than unity and usually on the order of 0.7 to 0.8. It represents a reduction in the tail's contribution to static stability when the elevator is free. The magnitude of this reduction is developed in the following.

Consider now the moment about the center of gravity of the airplane. [page 645](#)  
For a fixed elevator, the moment coefficient is given by Eq. (7.24):

$$C_{M,\text{cg}} = C_{M,\text{ac}_{wb}} + C_{L_{wb}} + (h - h_{\text{ac}_{wb}}) - V_H C_{L,t}$$

For a free elevator, the tail lift coefficient is now changed to  $C'_{L,t}$ . Hence, the moment coefficient for a free elevator  $C'_{M,\text{cg}}$  is

$$C'_{M,\text{cg}} = C_{M,\text{ac}_{wb}} + C_{L_{wb}}(h - h_{\text{ac}_{wb}}) - V_H C'_{L,t} \quad (7.49)$$

Substituting Eq. (7.48) into (7.49), we get

$$C'_{M,\text{cg}} = C_{M,\text{ac}_{wb}} + C_{L_{wb}}(h - h_{\text{ac}_{wb}}) - V_H a_t \alpha_t F \quad (7.50)$$

Equation (7.50) gives the final form of the moment coefficient about the center of gravity of the airplane with a free elevator.

By using Eq. (7.50), we can use the same analyses as given in Sec. 7.9 to obtain equations for stick-free longitudinal static stability. The results are as follows:

$$C'_{M,0} = C_{M,\text{ac}_{wb}} + FV_H a_t (i_t + e_0) \quad (7.51)$$

$$h'_n = h_{\text{ac}_{wb}} + FV_H \frac{a_t}{a} \left( 1 - \frac{\partial \epsilon}{\partial \alpha} \right) \quad (7.52)$$

$$\frac{\partial C'_{M,\text{cg}}}{\partial \alpha} = -a(h'_n - h) \quad (7.53)$$

Equations (7.51), (7.52), and (7.53) apply for stick-free conditions, denoted by the prime notation. They should be compared with Eqs. (7.27), (7.30), and (7.33), respectively, for stick-fixed stability. Note that  $h'_n - h$  is the stick-free static margin; because  $F < 1.0$ , this is smaller than the stick-fixed static margin.

It is clear from Eqs. (7.51) to (7.53) that a free elevator usually decreases the static stability of the airplane.

### EXAMPLE 7.9

Consider the airplane of Example 7.8. Its elevator hinge moment derivatives are  $\partial C_{h_e} / \partial \alpha_t = -0.008$  and  $\partial C_{h_e} / \partial \delta_e = -0.013$ . Assess the *stick-free* static stability of this airplane.

#### ■ Solution

First obtain the free elevator factor  $F$ , defined from Eq. (7.48):

$$F = 1 - \frac{1}{a_t} \frac{\partial C_{L_d}}{\partial \delta_e} \frac{\partial C_{h_e} / \partial \alpha_t}{\partial C_{h_e} / \partial \delta_e}$$

where

$$a_t = 0.1 \quad (\text{from Example 7.4})$$

$$\frac{\partial C_{L_d}}{\partial \delta_e} = 0.04 \quad (\text{from Example 7.8})$$

$$F = 1 - \frac{1}{0.1} (0.04) \left( \frac{-0.008}{-0.013} \right) = 0.754$$

The stick-free static stability characteristics are given by Eqs. (7.51) to (7.53). First, from Eq. (7.51),

$$C'_{M,0} = C_{M,ac_{wb}} + F V_H a_t (i_t + e_0)$$

page 646

where

$$C_{M,ac_{wb}} = -0.032 \quad (\text{from Example 7.3})$$

$$V_H = 0.34 \quad (\text{from Example 7.4})$$

$$i_t = 2.7^\circ \quad (\text{from Example 7.4})$$

$$e_0 = 0 \quad (\text{from Example 7.4})$$

Thus

$$C'_{M,0} = -0.032 + 0.754(0.34)(0.1)(2.7)$$

$$\boxed{C'_{M,0} = 0.037}$$

This is to be compared with  $C_{M,0} = 0.06$  obtained for stick-fixed conditions in Example 7.5.

From Eq. (7.52),

$$h'_n = h_{ac_{wb}} + FV_H \frac{a_t}{a} \left( 1 - \frac{\partial e}{\partial \alpha} \right)$$

where

$$h_{ac_{wb}} = 0.24 \quad (\text{from Example 7.3})$$

$$\frac{\partial e}{\partial \alpha} = 0.35 \quad (\text{from Example 7.4})$$

$$a = 0.08 \quad (\text{from Example 7.4})$$

$$h'_n = 0.24 + 0.754(0.34) \left( \frac{0.1}{0.08} \right) (1 - 0.35)$$

$$h'_n = 0.448$$

This is to be compared with  $h_n = 0.516$  obtained for stick-fixed conditions in Example 7.6. Note that the neutral point has moved forward for stick-free conditions, decreasing the stability. In fact, the stick-free static margin is

$$h'_n - h = 0.448 - 0.35 = 0.098$$

This is a 41 percent decrease in comparison with the stick-fixed static margin from Example 7.7. Finally, from Eq. (7.53),

$$\frac{\partial C'_{M,CG}}{\partial \alpha} = -a(h'_n - h) = -0.08(0.098) = -0.0078$$

Thus, as expected, the slope of the stick-free moment coefficient curve, although still negative, is small in absolute value.

In conclusion, this example indicates that stick-free conditions cut the [page 647](#) static stability of our hypothetical airplane by nearly half. This helps to dramatize the differences between stick-fixed and stick-free considerations.


---

## 7.17 DIRECTIONAL STATIC STABILITY


Returning to Fig. 7.2, we note that the preceding sections have dealt with longitudinal stability and control, which concerns angular motion about the  $y$  axis—pitching motion. In this section we briefly examine the stability associated with angular motion about the  $z$  axis—yawing motion. Stability in yaw is called *directional stability*. In regard to our road map in Fig. 7.5, we are moving to the second box at the bottom of the left column.

Examining Fig. 7.3, we see that the vertical stabilizer (vertical fin or vertical tail) is the conventional mechanism for directional stability. Its function is easily seen in Fig. 7.38. Consider an airplane in equilibrium flight with no yaw, as sketched in Fig. 7.38a. The vertical tail, which is designed with a symmetric airfoil section, is at a zero angle of attack to the free stream, and it experiences no net aerodynamic force perpendicular to  $V_\infty$ . Assume that the airplane is

suddenly yawed to the right by a disturbance, as shown in Fig. 7.38b. The vertical tail is now at an angle of attack  $\theta$  and experiences an aerodynamic force  $F_{vt}$  perpendicular to  $V_\infty$ . This force creates a restoring yawing moment about the center of gravity that tends to rotate the airplane back toward its equilibrium position. The same situation prevails when the airplane is yawed to the left by a disturbance, as sketched in Fig. 7.38c.

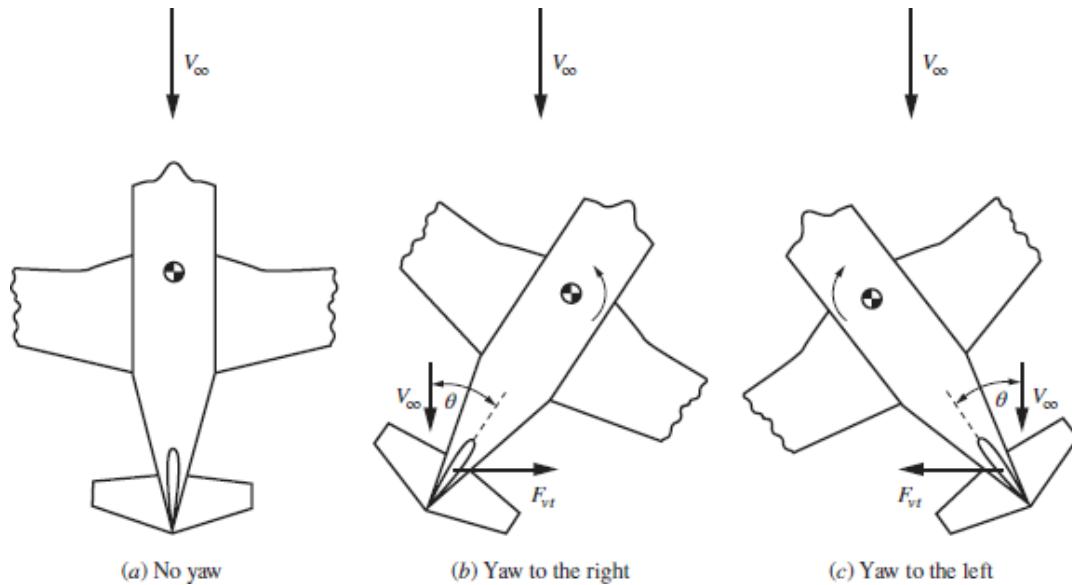

**Figure 7.38** Effect of the vertical stabilizer on directional stability.

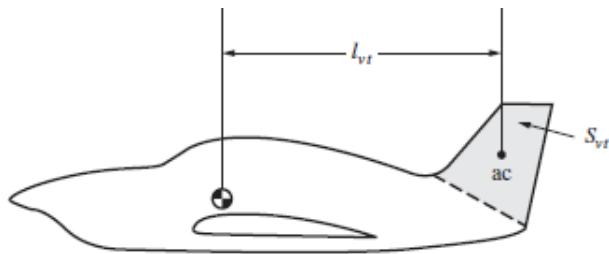

**Figure 7.39** Moment arm of the vertical tail.

## DESIGN BOX

For conventional airplanes, typical values of  $V_{vt}$  are given by Raymer (see the bibliography) as follows:

	$V_{vt}$
General aviation, single-engine	0.04
Twin turboprop	0.08
Jet fighter	0.07
Jet transport	0.09

These numbers are considerably smaller than typical values of  $V_H$ , which range from 0.4 to 1.0 (in Example 7.4, we used  $V_H = 0.34$ ), because of the use of  $b$  rather than  $c$  in the definition of  $V_{vt}$ .

The magnitude of the restoring moment in yaw is equal to  $F_{vt}l_{vt}$ , where  $l_{vt}$  is the moment arm from the aerodynamic center of the vertical tail to the airplane's center of gravity, as shown in Fig. 7.39. Because the aerodynamic force on the vertical tail  $F_{vt}$  is proportional to the area of the vertical tail  $S_{vt}$ , shown as the shaded area in Fig. 7.39, the design parameter governing directional stability can be shown to be the vertical tail volume ratio, defined as



$$\text{Vertical tail volume ratio} \equiv V_{vt} \equiv \frac{l_{vt}S_{vt}}{bS} \quad (7.54)$$

where  $b$  is the wingspan and  $S$  is the wing planform area. The definition of  $V_{vt}$  in Eq. (7.54) is similar to the definition of the horizontal tail volume ratio  $V_H$  defined by Eq. (7.16), except that  $V_{vt}$  uses  $b$  rather than the chord  $c$  as the nondimensionalizing length in the denominator.



## 7.18 LATERAL STATIC STABILITY

Return to Fig. 7.2. In this section we briefly examine the stability associated with angular motion about the  $x$  axis—rolling motion. Stability in roll is called *lateral stability*. In regard to our road map in Fig. 7.5, we are moving to the third box at the bottom of the left column.

Consider an airplane in steady, level flight. Let us take a view of this airplane from behind, looking in the direction of flight, as sketched in Fig. 7.40a. The lift equals the weight. They act equal and opposite to each other; there is no net side force. The airplane is suddenly perturbed by a gust that causes the right wing to dip; that is, a roll to the right ensues. This is sketched in Fig. 7.40b. The lift vector is now rotated from the vertical through angle  $\phi$ , called the *bank angle*. The vector resolution of  $L$  and  $W$  results in a side force  $F$ , which causes the airplane to accelerate in the direction of  $F$ . This sidewise motion of the airplane is called a *slideslip*. Relative to the airplane, there appears a slideslip velocity  $V_s$ , shown in Fig. 7.40b.

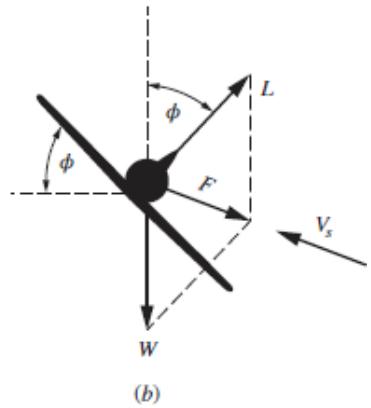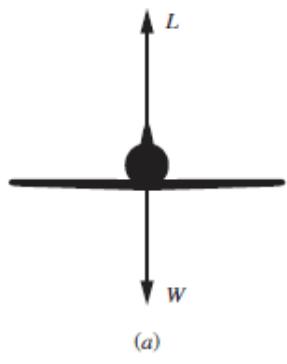

**Figure 7.40** Generation of slideslip.

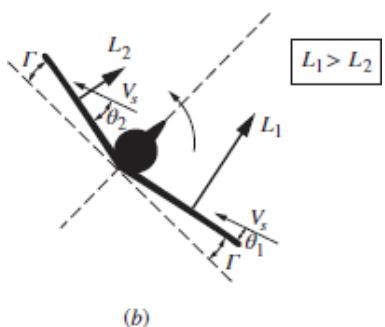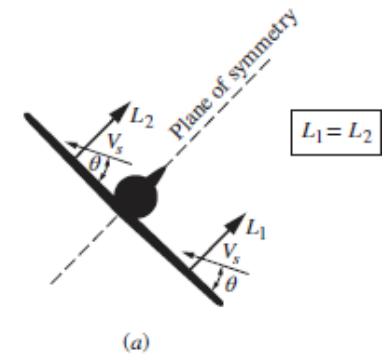

**Figure 7.41** Effect of dihedral.

Consider the effect of this slideslip velocity on the lift generated by the right and left wings. This is illustrated in Fig. 7.41. In Fig. 7.41a the airplane is shown with the right and left wings in the same plane, perpendicular to the plane of symmetry of the fuselage. Let  $L_1$  and  $L_2$  be the lift generated by the right and left wings, respectively. The slideslip velocity  $V_s$  will affect the lift generated by each wing; but because the two wings are in the same plane,  $V_s$  makes the same angle  $\theta$  with respect to both wings; therefore  $L_1 = L_2$ , as shown in Fig. 7.41a. As a result, there is no restoring moment to return the airplane to its original equilibrium position, shown in Fig. 7.40a. However, consider the case where both wings are bent upward through angle  $\Gamma$ , as shown in Fig. 7.41b; that is, the wings are designed with a V shape. This is called *dihedral*, and  $\Gamma$  is the dihedral angle. Here the slideslip velocity makes an angle  $\theta_1$  with respect to the right wing and a larger angle  $\theta_2$  with respect to the left wing. As a result, the lift on the left wing  $L_2$  is smaller than the lift on the right wing, and this creates a restoring rolling moment that tends to return the airplane to its equilibrium position, as shown in Fig. 7.41b. Hence, *dihedral is the design feature of the airplane that provides lateral stability.*

There are more sophisticated explanations of the dihedral effect. Also, there is always a coupling between yawing and rolling motion, so one does not occur without the other. It is beyond the scope of this book to go into these matters further. You will examine these effects when you embark on a more advanced study of stability and control. The function of this section and Sec. 7.17 has been only to introduce some of the most basic thoughts about directional and lateral stability.

## DESIGN BOX

For a given airplane design, the amount of dihedral depends on the location of the wing relative to the fuselage—that is, low-wing, midwing, or high-wing location. The schematics in Figs. 7.40 and 7.41 show a low-wing design. More dihedral is needed for a low-wing position than for a midwing or high-wing position. Also, a swept-back wing requires less dihedral than a straight wing. Some degree of lateral stability is usually necessary in conventional airplanes, but too much makes the airplane very sluggish to aileron control inputs. Indeed, the combination of mid- or high-wing location along with sweepback may have too much inherent lateral stability, and *anhedral* (negative dihedral) must be used to counteract some of this. Raymer (see the bibliography) gives the following typical values of dihedral (and anhedral) angle (in degrees) for various classes of airplanes:

	Wing Position		
	Low	Middle	High
Unswept (civil)	5 to 7	2 to 4	0 to 2
Subsonic swept wing	3 to 7	-2 to 2	-5 to -2
Supersonic swept wing	0 to 5	-5 to 0	-5 to 0

page 650

The amount of dihedral shown in Fig. 7.41b is greatly exaggerated for illustration. The amount of dihedral (or anhedral) for some actual airplanes can be seen from the three-views shown earlier in this book: the F-86 (Fig. 2.15), the F4U Corsair (Fig. 2.16), the X-29 (Fig. 2.19), the F3F (Fig. 2.20), the F-104 (Fig. 4.52), the X-1 (Fig. 5.30), the U-2 (Fig. 5.52), the English Electric Lightning (Fig. 5.61), the Mirage C (Fig. 5.65), the Concorde (Fig. 5.66), and the P-38 (Fig. 7.42).

## 7.19 A COMMENT

This brings to a close our technical discussion of stability and control. The preceding sections constitute an introduction to the subject; however, we have just scratched the surface. There are many other considerations: control forces, dynamic stability, and so on. Such matters are the subject of more advanced studies of stability and control and are beyond the scope of this book. However, this subject is a fundamental pillar of aeronautical engineering, and the interested reader can find extensive presentations in books such as those of Perkins and Hage and Etkin (see the bibliography at the end of this chapter).

## 7.20 HISTORICAL NOTE: THE WRIGHT BROTHERS VERSUS THE EUROPEAN PHILOSOPHY OF STABILITY AND CONTROL

The two contrasting scenes depicted in Sec. 7.1—the lumbering, belabored flight of Farman versus the relatively effortless maneuvering of Wilbur Wright—underscore two different schools of aeronautical thought during the first decade of powered flight. One school, consisting of virtually all early European and U.S. aeronautical engineers, espoused the concept of inherent stability (statically stable aircraft); the other, consisting solely of Wilbur and Orville Wright, practiced the design of statically unstable aircraft that had to be controlled every instant by the pilot. Both philosophies have advantages and disadvantages; and because they have an impact on modern airplane design, we examine their background more closely.

The basic principles of airplane stability and control began to evolve [page 651](#) at the time of George Cayley. His glider of 1804, sketched in Fig. 1.8,

incorporated a vertical and horizontal tail that could be adjusted up and down. In this fashion the complete tail unit acted as an elevator.

The next major advance in airplane stability was made by Alphonse Penaud, a brilliant French aeronautical engineer who committed suicide in 1880 at the age of 30. Penaud built small model airplanes powered by twisted rubber bands, a precursor of the flying balsa-and-tissue paper models of today. Penaud's design had a fixed wing and tail like Cayley's, even though at the time Penaud was not aware of Cayley's work. Of particular note was Penaud's horizontal tail design, which was set at a negative  $8^\circ$  with respect to the wing chord line. Here we find the first true understanding of the role of the tail-setting angle  $i_t$  (see Secs. 7.5 and 7.7) in the static stability of an airplane. Penaud flew his model in the Tuileries Gardens in Paris on August 18, 1871, before members of the Société de Navigation Aérienne. The aircraft flew for 11 s, covering 131 ft. This event, along with Penaud's theory for stability, remained branded on future aeronautical designs right down to the present.

After Penaud's work, the attainment of "inherent" (static) stability became a dominant feature in aeronautical design. Lilienthal, Pilcher, Chanute, and Langley all strived for it. However, static stability has one disadvantage: The more stable the airplane, the harder it is to maneuver. An airplane that is highly stable is also sluggish in the air; its natural tendency to return to equilibrium somewhat defeats the purpose of the pilot to change its direction by means of control deflections. The Wright brothers recognized this problem in 1900. Because Wilbur and Orville were *airmen* in the strictest meaning of the word, they aspired for quick and easy maneuverability. Therefore, they discarded the idea of inherent stability that was entrenched by Cayley and Penaud. Wilbur wrote that "we . . . resolved to try a fundamentally different principle. We would arrange the machine so that it would not tend to right itself." The Wright brothers designed their aircraft to be statically unstable! This feature, along with their development of lateral control through wing warping, is primarily responsible for the fantastic aerial performance of all their airplanes from 1903 to 1912 (when Wilbur died). Of course this design feature heavily taxed the pilot, who had to keep the airplane under control at every instant, continuously operating the controls to compensate for the unstable characteristics of the airplane. Thus, the Wright airplanes were difficult to fly, and long periods were required to train pilots for these aircraft. In the same vein, such unstable aircraft were more dangerous.

These undesirable characteristics were soon to become compelling. [page 652](#)  
After Wilbur's dramatic public demonstrations in France in 1908 (see Sec. 1.8), the European designers quickly adopted the Wrights' patented concept of combined lateral and directional control by coordinated wing warping (or by

ailers) and rudder deflection. But they rejected the Wrights' philosophy of static instability. By 1910 the Europeans were designing and flying aircraft that properly mated the Wrights' control ideas with the long-established static stability principles. However, the Wrights stubbornly clung to their basic unstable design. As a result, by 1910 the European designs began to surpass the Wrights' machines, and the lead in aeronautical engineering established in the United States in 1903 swung to France, England, and Germany, where it remained for almost 20 years. In the process, static stability became an unquestioned design feature in all successful aircraft up to the 1970s.

It is interesting that very modern airplane design has returned full circle to the Wright brothers' original philosophy, at least in some cases. Recent lightweight military fighter designs, such as the F-16 and F-18, are statically unstable in order to obtain dramatic increases in maneuverability. At the same time, the airplane is instantaneously kept under control by computer-calculated and electrically adjusted positions of the control surfaces—the *fly-by-wire* concept. In this fashion, the maneuverability advantages of static instability can be realized without heavily taxing the pilot: The work is done by electronics! Even when maneuverability is not a prime feature, such as in civil transport airplanes, static instability has some advantages. For example, the tail surfaces for an unstable airplane can be smaller, with subsequent savings in structural weight and reductions in aerodynamic drag. Hence, with the advent of the fly-by-wire system, the cardinal airplane design principle of static stability may be somewhat relaxed in the future. The Wright brothers may indeed ride again!

## 7.21 HISTORICAL NOTE: THE DEVELOPMENT OF FLIGHT CONTROLS

Figure 7.3 illustrates the basic aerodynamic control surfaces on an airplane—the ailerons, elevator, and rudder. They have been an integral part of airplane designs for most of the 20th century, and we take them almost for granted. But where are their origins? When did such controls first come into practical use? Who had the first inspirations for such controls?

In Sec. 7.20 we already mentioned that by 1804 George Cayley employed a movable tail in his designs—the first effort at some type of longitudinal control. Cayley's idea of moving the complete horizontal tail to obtain such control persisted through the first decade of the 20th century. Henson, Stringfellow, Penaud, Lilienthal, and the Wright brothers all envisioned or utilized movement of the complete horizontal tail surface for longitudinal control. It was not until 1908 to 1909 that the first “modern” tail control configuration was put into practice. This was achieved by the French designer Levavasseur on his famous

Antoinette airplanes, which had fixed vertical and horizontal tail surfaces with movable, flaplike rudder and elevator surfaces at the trailing edges. So the configuration for elevators and rudders shown in Fig. 7.3 dates back to 1908, five years after the dawn of powered flight.


The origin of ailerons (a French word for the extremity of a bird's [page 653](#) wing) is steeped in more history and controversy. It is known that the Englishman M. P. W. Boulton patented a concept for lateral control by ailerons in 1868. Of course at that time no practical aircraft existed, so the concept could not be demonstrated and verified, and Boulton's invention quickly retreated to the background and was forgotten. Ideas of warping the wings or inserting vertical surfaces (spoilers) at the wing tips cropped up several times in Europe during the late 19th century and into the first decade of the 20th century, but always in the context of a braking surface that would slow one wing down and pivot the airplane about a vertical axis. The true function of ailerons or wing warping—for lateral control for banking and consequently turning an airplane—was not fully appreciated until Orville and Wilbur incorporated wing warping on their *Flyers* (see Ch. 1)). The Wright brothers' claim that they were the first to invent wing warping may not be historically precise, but clearly they were the first to demonstrate its function and to obtain a legally enforced patent on its use (combined with simultaneous rudder action for total control in banking). The early European airplane designers did not appreciate the need for lateral control until Wilbur's dramatic public flights in France in 1908. This is in spite of the fact that Wilbur had fully described the wing-warping concept in a paper at Chicago on September 1, 1901, and again on June 24, 1903; indeed, Octave Chanute clearly described the Wrights' concept in a lecture to the Aero Club de France in Paris in April 1903. Other aeronautical engineers at that time, if they listened, did not pay much heed. As a result, European aircraft before 1908, even though they were making some sustained flights, were awkward to control.

However, the picture changed after 1908, when in the face of the indisputable superiority of the Wrights' control system, virtually everybody turned to some type of lateral control. Wing warping was quickly copied and was employed on numerous different designs. Moreover, the idea was refined to include movable surfaces near the wing tips. These were first separate "winglets" mounted either above, below, or between the wings. But in 1909 Henri Farman (see Sec. 7.1) designed a biplane named the *Henri Farman III* that included a flaplike aileron at the trailing edge of all four wing tips; this was the true ancestor of the conventional modern aileron, as sketched in Fig. 7.3. Farman's design was soon adopted by most designers, and wing warping quickly became passé. Only the Wright brothers clung to their old concept; a Wright airplane did not incorporate ailerons until 1915, six years after Farman's development.

## 7.22 HISTORICAL NOTE: THE “TUCK-UNDER” PROBLEM

A quick examination of Fig. 7.21, and the resulting stability equations such as Eqs. (7.26), (7.27), and (7.28), clearly underscores the importance of the downwash angle  $\varepsilon$  in determining longitudinal static stability. Downwash is a rather skittish aerodynamic phenomenon, very difficult to calculate accurately for real airplanes and therefore usually measured in wind tunnel tests or in free flight. A classic example of the stability problems that can be caused by downwash, and how wind tunnel testing can help, occurred during World War II, as described in the following.

In numerous flights during 1941 and 1942, the Lockheed P-38, a [page 654](#) twin-engine, twin-boomed, high-performance fighter plane (see Fig. 7.42), went into sudden dives from which recovery was exceptionally difficult. Several pilots were killed in this fashion. The problem occurred at high subsonic speeds, usually in a dive, when the airplane had a tendency to nose over, putting the plane in yet a steeper dive. Occasionally the airplane would become locked in this position, and even with maximum elevator deflection, a pullout could not be achieved. This “tuck-under” tendency could not be tolerated in a fighter aircraft that was earmarked for a major combat role.

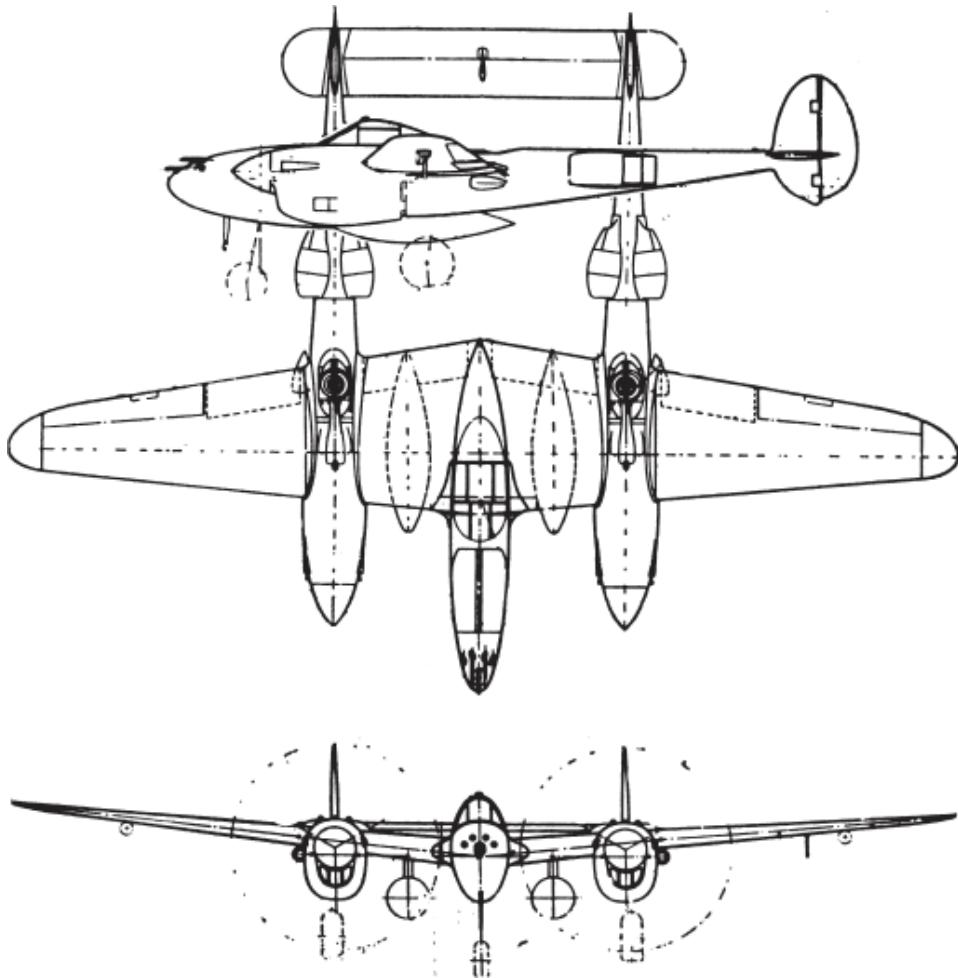

**Figure 7.42** The Lockheed P-38 of World War II fame.

Therefore, with great urgency NACA was asked to investigate the [page 655](#) problem. Because the effect occurred only at high speeds, usually above Mach 0.6, compressibility appeared to be the culprit. Tests in the Langley 30-ft by 60-ft low-speed tunnel and in the 8-ft high-speed tunnel (see Sec. 4.24) correlated the tuck-under tendency with the simultaneous formation of shock waves on the wing surface. Such compressibility effects were discussed in Secs. 5.9 and 5.10, where it was pointed out that beyond the critical Mach number for the wing, shock waves will form on the upper surface, encouraging flow separation far upstream of the trailing edge. The P-38 was apparently the first operational airplane to encounter this problem. The test engineers at Langley made several suggestions to rectify the situation, but all involved major modifications of the airplane. For a model already in production, a quicker fix was needed.

Next, the 16-ft high-speed wind tunnel at the NACA Ames Aeronautical Laboratory in California (see again Sec. 4.24) was pressed into service for the P-

38 problem. Here further tests indicated that the shock-induced separated flow over the wing was drastically reducing the lift. In turn, because downwash is directly related to lift, as discussed in Secs. 5.13 and 5.14, the downwash angle  $\varepsilon$  was greatly reduced. Consequently (see Fig. 7.21), the tail angle of attack  $\alpha_t$  was markedly increased. This caused a sharp increase in the positive lift on the tail, creating a strong pitching moment, nosing the airplane into a steeper dive. After the series of Ames tests in April 1943, Al Erickson of NACA suggested the addition of flaps on the lower surface of the wing at the  $0.33c$  point in order to increase the lift and hence increase the downwash. This was the quick fix that Lockheed was looking for, and it worked.

## 7.23 SUMMARY AND REVIEW

Being a free body, an airplane experiencing lift, drag, thrust, and moments in flight will want to rotate about its center of gravity. Only when the location and magnitude of these forces and moments are such as to add up to a net zero moment about the center of gravity will the airplane not rotate. For most applications in flight, we want the airplane to translate in flight, but not rotate all the time. When the forces and moments on the airplane are all adjusted so that the moment about the center of gravity is zero, the airplane is said to be *trimmed*.

If the airplane is designed to be statically and dynamically stable, and if it is flying trimmed at a given velocity, nature will make certain to more or less keep the airplane trimmed. If a statically stable airplane encounters a disturbing influence such as a gust that momentarily rotates the airplane away from its equilibrium position, then it will have an initial tendency to rotate back toward its equilibrium (trimmed) position. If it is also dynamically stable, it will actually sooner or later arrive back at its equilibrium position. Clearly, static stability is a necessary but not sufficient condition for dynamic stability. If, either intentionally or by mistake, the airplane is designed to be statically and/or dynamically unstable, then either a human or (more likely) a computer-run automatic pilot takes over by properly deflecting the control surfaces (ailerons, rudder, elevator) so as to restore a zero moment about the center of gravity.

This chapter examined the nature of static stability and control; [page 656](#) dynamic stability analyses are beyond our scope. Moreover, we concentrated on longitudinal stability (pitching motion). We have seen that for static longitudinal stability, the aerodynamic center (the neutral point) must be located behind the center of gravity. These same equations give us pertinent information on how to design an airplane to be statically stable.

We have also looked into the longitudinal control of an airplane via deflection of the elevator. We calculated the amount of elevator deflection necessary to trim

the airplane when the flight velocity changes, and we examined the forces necessary to rotate the elevator to its new setting. All in all, in this chapter we have opened the door into the basic aspects of static stability and control.

Some of the important points of this chapter are given as follows:

1. If the forces and moments on a body caused by a disturbance tend *initially* to return the body *toward* its equilibrium position, the body is statically stable. In contrast, if these forces and moments tend *initially* to move the body *away from* its equilibrium position, the body is *statically unstable*.
2. The necessary criteria for longitudinal balance and static stability are (a)  $C_{M,0}$  must be positive, (b)  $\partial C_{M,CG}/\partial \alpha_a$  must be negative, and (c) the trim angle of attack  $\alpha_e$  must fall within the flight range of angle of attack for the airplane. These criteria may be evaluated quantitatively for a given airplane from

$$C_{M,0} = C_{M,ac_{wb}} + V_H a_t (i_t + e_0) \quad (7.27)$$

$$\text{and} \quad \frac{\partial C_{M,CG}}{\partial \alpha_a} = a \left[ h - h_{ac_{wb}} - V_H \frac{a_t}{a} \left( 1 - \frac{\partial e}{\partial \alpha} \right) \right] \quad (7.28)$$

where the tail volume ratio is given by

$$V_H = \frac{l_t S_t}{c S}$$

3. The neutral point is the location of the center of gravity where  $\partial C_{M,CG}/\partial \alpha_a = 0$ . It can be calculated from

$$h_n = h_{ac_{wb}} + V_H \frac{a_t}{a} \left( 1 - \frac{\partial e}{\partial \alpha} \right) \quad (7.30)$$

4. The static margin is defined as  $h_n - h$ . For static stability, the location of the center of gravity must be ahead of the neutral point; that is, the static margin must be positive.
5. The effect of elevator deflection  $\delta_e$  on the pitching moment about the center of gravity is given by

$$C_{M,CG} = C_{M,ac_{wb}} + C_{L,wb}(h - h_{ac}) - V_H \left( a_t \alpha_t + \frac{\partial C_{L,t}}{\partial \delta_e} \delta_e \right) \quad (7.37)$$

6. The elevator deflection necessary to trim an airplane at a given angle of attack  $\alpha_n$  is

$$\delta_{trim} = \frac{C_{M,0} + (\partial C_{M,CG}/\partial \alpha_a) \alpha_n}{V_H (\partial C_{L,t}/\partial \delta_e)} \quad (7.43) \quad \underline{\text{page 657}}$$

## Bibliography

- Etkin, B. *Dynamics of Flight*. Wiley, New York, 1959.
- Gibbs-Smith, C. H. *Aviation: An Historical Survey from Its Origins to the End of World War II*. Her Majesty's Stationery Office, London, 1970.
- Perkins, C. D., and R. E. Hage. *Airplane Performance, Stability, and Control*. Wiley, New York, 1949.
- Raymer, D. P. *Aircraft Design: A Conceptual Approach*, 4th ed. American Institute of Aeronautics and Astronautics, Reston, VA, 2006.

## Problems

- 7.1** For a given wing–body combination, the aerodynamic center lies 0.03 chord length ahead of the center of gravity. The moment coefficient about the center of gravity is 0.0050, and the lift coefficient is 0.50. Calculate the moment coefficient about the aerodynamic center.
- 7.2** Consider a model of a wing–body shape mounted in a wind tunnel. The flow conditions in the test section are standard sea-level properties with a velocity of 100 m/s. The wing area and chord are  $1.5 \text{ m}^2$  and 0.45 m, respectively. Using the wind tunnel force and moment-measuring balance, the moment about the center of gravity when the lift is zero is found to be  $-12.4 \text{ N} \cdot \text{m}$ . When the model is pitched to another angle of attack, the lift and moment about the center of gravity are measured to be 3675 N and  $20.67 \text{ N} \cdot \text{m}$ , respectively. Calculate the value of the moment coefficient about the aerodynamic center and the location of the aerodynamic center.
- 7.3** Consider the model in Prob. 7.2. If a mass of lead is added to the rear of the model so that the center of gravity is shifted rearward by a length equal to 20 percent of the chord, calculate the moment about the center of gravity when the lift is 4000 N.
- 7.4** Consider the wing–body model in Prob. 7.2. Assume that a horizontal tail with no elevator is added to this model. The distance from the airplane's center of gravity to the tail's aerodynamic center is 1.0 m. The area of the tail is  $0.4 \text{ m}^2$ , and the tail-setting angle is  $2.0^\circ$ . The lift slope of the tail is 0.12 per degree. From experimental measurement,  $\varepsilon_0 = 0$  and  $\partial\varepsilon/\partial\alpha = 0.42$ . If the absolute angle of attack of the model is  $5^\circ$  and the lift at this angle of attack is 4134 N, calculate the moment about the center of gravity.

- 7.5** Consider the wing–body–tail model of Prob. 7.4. Does this model have longitudinal static stability and balance?
- 7.6** For the configuration of Prob. 7.4, calculate the neutral point and static margin if  $h = 0.26$ .
- 7.7** Assume that an elevator is added to the horizontal tail of the configuration given in Prob. 7.4. The elevator control effectiveness is 0.04. Calculate the elevator deflection angle necessary to trim the configuration at an angle of attack of  $8^\circ$ .
- 7.8** Consider the configuration of Prob. 7.7. The elevator hinge moment derivatives are  $\partial C_{h_e} / \partial \alpha_t = -0.007$  and  $\partial C_{h_e} / \partial \delta_e = -0.012$ . Assess the stick-free static stability of this configuration.
- 7.9** Consider the canard configuration as illustrated in Fig. 7.17b and represented by the XB-70 shown in Fig. 7.18. You will sometimes encounter a statement, either written or verbal, that the canard configuration is inherently statically unstable. This is absolutely not true. Prove that the canard configuration can be made statically stable. What design condition must hold to ensure its stability?

## Space Flight (Astronautics)

It is difficult to say what is impossible, for the dream of yesterday is the hope of today and the reality of tomorrow.

Robert H. Goddard at his high-school graduation, 1904

Houston, Tranquillity Base here. The Eagle has landed.

Neil Armstrong in a radio transmission to Mission Control at the instant of the first manned landing on the moon, July 20, 1969

### 8.1 INTRODUCTION

Space—that final frontier, that limitless expanse that far outdistances the reach of our strongest telescopes, that region that may harbor other intelligent civilizations on countless planets; space—whose unknown secrets have attracted the imagination of humanity for centuries and whose technical conquest has labeled the latter half of the 20th century as the *Space Age*; space—that is the subject of this chapter.

To this point in our introduction to flight, we have emphasized *aeronautics*: the science and engineering of vehicles that are designed to move within the atmosphere and that depend on the atmosphere for their lift and propulsion. However, as presented in Section 1.11, the driving force behind the advancement of aviation has always been the desire to fly higher and faster. The ultimate, of course, is to fly so high and so fast that you find yourself in outer space, beyond the limits of the sensible atmosphere. Here motion of the vehicle takes place only under the influence of gravity and possibly some type of propulsive force; however, the mode of propulsion must be entirely independent of external atmosphere for its thrust. Therefore, the physical fundamentals and engineering principles associated with space vehicles are somewhat different from those associated with

airplanes. The purpose of this chapter is to introduce some basic concepts of space flight—that is, to introduce the discipline of *astronautics*.

page 660

## PREVIEW BOX

Imagine you are in a vehicle that flies so fast and so high that you suddenly find yourself outside the earth's atmosphere—you are in space. There is no air in space, so your vehicle has no aerodynamic lift or drag. What keeps you up there? Also, obviously you have no air-breathing propulsion—no propeller or jet engine to keep you going. Rocket engines may have boosted you into space, but those engines have now burned out. What keeps you going? Moreover, you are not standing still in space; you are moving—at this point in time, your vehicle has a certain speed and direction. Where is your vehicle taking you? That is, what is your flight path in space? These are absolutely fundamental questions about space flight, and you will find the answers in this chapter.

Once in space, you will have the option of staying close to Earth, heading out to other parts of the solar system or beyond. Space travel generally involves huge “astronomical” distances, tremendously fast velocities, awesome amounts of energy, and other challenges beyond any we have seen so far. This is what makes space travel so exciting and so difficult, especially when humans undertake the journey. Spacecraft have been launched into space for over 60 years now, but yet we are just at the beginning of establishing a permanent human presence in space and finding ways that this presence can be used to improve life on earth. Your mission in space may be for scientific observations, or perhaps it is a planetary exploration mission, or you may be investigating commercial uses of space or enabling space tourism. Regardless, the feasibility and timeline of your mission can be estimated using the techniques presented in this chapter.

At some stage of your flight through space, you are likely to want to come home, to return to the surface of the earth. This is not going to be easy. As you leave space and enter the outer edge of the atmosphere, you will be traveling at a speed of at least 26,000 ft/s (about 8 km/s) and quite possibly much faster. (How do you know you'll be traveling at this speed? Keep on reading.) As you penetrate the atmosphere at such speeds, the aerodynamic drag on your vehicle, and especially its

aerodynamic heating, will build enormously. Indeed, such aerodynamic heating is so high that it becomes the primary consideration that drives the design of any space vehicle that will enter any atmosphere—the Earth's or that of any other planet.


After dealing with airplanes and atmospheric flight in Chs. 1 through 7, here is your chance to get into space. This chapter and the next will give you the tools to plan out a mission in space and perform the preliminary design of your launch vehicle and spacecraft. Read on, and may the Force be with you.

Before a vehicle can be designed to fly in space, it is important page 661 to first understand the vast distances and high velocities that characterize space travel, as well as the unique features of the space environment that make it so different from the lower regions of our atmosphere where airplanes fly. After covering these topics in the initial section of this chapter, the basic physics of space flight are presented, followed by a discussion of orbital maneuvers that allow a space vehicle to precisely control its trajectory in space. Some spacecraft must face the additional challenge of entering a planetary atmosphere at very high velocities, either for landing on a planet such as Mars or for returning home to Earth. A later section of this chapter covers the basics of atmospheric entry, even though this topic generally requires an advanced understanding of high-speed, high-temperature aerodynamics which is beyond the scope of this textbook. Finally, the chapter ends with some historical notes about the development of astronautics and the explosive growth of space exploration, space commercialization, and human space flight in the last 70 years. A road map for this chapter is shown in Fig. 8.1.

The Space Age formally began on October 4, 1957, when the Soviet Union launched Sputnik I, the first artificial satellite to go into orbit around the earth. Unlike the first flight of the Wright brothers in 1903, which took years to have any impact on society, the effect of Sputnik I on the world was immediate. Within 12 years people had walked on the moon; after another 7 years instrumented probes were resting on the surface of Venus and Mars. A huge variety of different space vehicles designed for different missions have been launched since 1957. Most of these vehicles fall into three main categories:

1. *Earth satellites*, which are launched with enough velocity to successfully orbit the Earth but yet are trapped by Earth's gravity to follow a circular or elliptical path around the planet. Some orbit very close to the surface of the Earth, at altitudes between a few hundred and a few thousand kilometers, such as earth observation spacecraft and spy satellites; others are lofted to much higher altitudes such as navigation or communication spacecraft, which may need to be placed in orbits periodically overflying the same regions of the Earth, or even remaining stationary over a given location on the Earth. The most desirable location for many satellites is geostationary orbit, a circular orbit 36,000 km above the Earth's equator. There has been a steady increase in the number of earth-orbiting satellites in recent years, in large part due to the many commercial uses of space, such as for radio, telephone, TV, internet, imagery, and navigation, or for more experimental purposes such as small-scale cubesats and microsats.

page 662

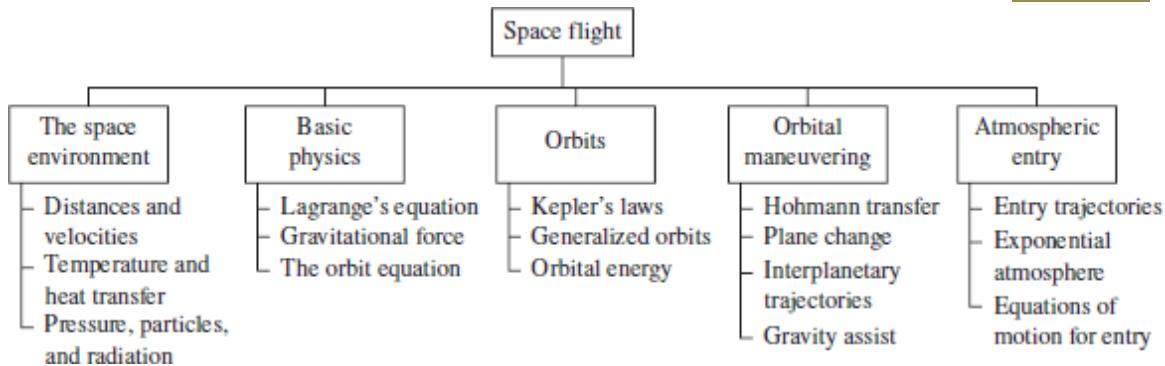

**Figure 8.1** Road map for Ch. 8).

2. *Exploration spacecraft*, which are accelerated to a high enough velocity that they can escape the gravitational pull of the earth and head to other parts of the solar system, most often for scientific exploration. These spacecraft generally travel along a series of orbital trajectories until they arrive at their destination, which could be the Moon, Mars, or any of the other planets or moons. Some, as in the case of the Voyager spacecraft, will ultimately head out of the solar system into interstellar space. Some scientific spacecraft have also been sent to observe comets, or asteroids (particularly those called near-Earth objects), or have been placed at theoretical points in space

where they are able to establish a stable orbit such as the Lagrange points of the Earth–Sun system (for example, the James Webb Space Telescope which will be placed at L2).

3. *Crewed spacecraft*, which have the unique feature that they must carry all the life-support systems necessary to keep a human crew alive and well during their entire mission in space. Other than the Apollo missions, all crewed spacecraft so far have been in low-altitude Earth orbits in order to minimize exposure of the crew to harmful radiation in space which tends to be far worse in high-altitude orbits and away from the Earth. In the USA, Apollo was followed by the Skylab program, and then the Space Shuttle program, which flew for thirty years. Russia developed seven successive crewed space stations before it teamed up with the USA, Europe, Canada, and Japan to create the International Space Station, which has been continually occupied for two decades. The International Space Station has enabled humans to spend time in space performing scientific experiments, demonstrating engineering technologies, and developing possible commercial applications of the space environment. China has independently developed human spacecraft and space stations, and India has announced its intention to develop its own human space flight program. At the start of 2018, 553 people from 37 countries had experienced life in Earth orbit.

One feature that all types of spacecraft share is that their motion through space is governed by the same physics regardless of their size, complexity, cost, national origin, or mission. A discussion of the physics of space travel, even the present introductory one, requires slightly greater mathematical depth than just basic differential and integral calculus. Therefore, this chapter will incorporate more mathematical rigor than other parts of this book. In particular, some concepts from differential equations and, in fact, partial differential equations must be employed. Before taking on the physics of space travel, however, let's first take a look at the environment through which these spacecraft need to travel.


---

page 663

## 8.2 THE SPACE ENVIRONMENT

Before tackling the detailed design of an aircraft, it was important to first understand the characteristics of the atmosphere through which it flies. In a

similar manner, let us now consider the characteristics of the space environment, particularly those characteristics which most strongly govern the design of space vehicles. Some quantities, like pressure and temperature, have to be considered in a new way, while some additional quantities, like particles and radiation, now become important, too. In addition, space has a characteristic that fundamentally differentiates it from earth's atmosphere: it is, for all intents and purposes, infinite. To early explorers setting out in vessels on the oceans of the world, the oceans probably seemed infinite. Then, as travel became faster and new technologies were developed, our understanding of the globe became more complete, and all distances on the surface of the earth were recognized as attainable in terms of human travel. While the goal of making space more accessible to humans drives many astronautics professionals, we have to recognize that there will always be a further frontier in the universe beyond our grasp.

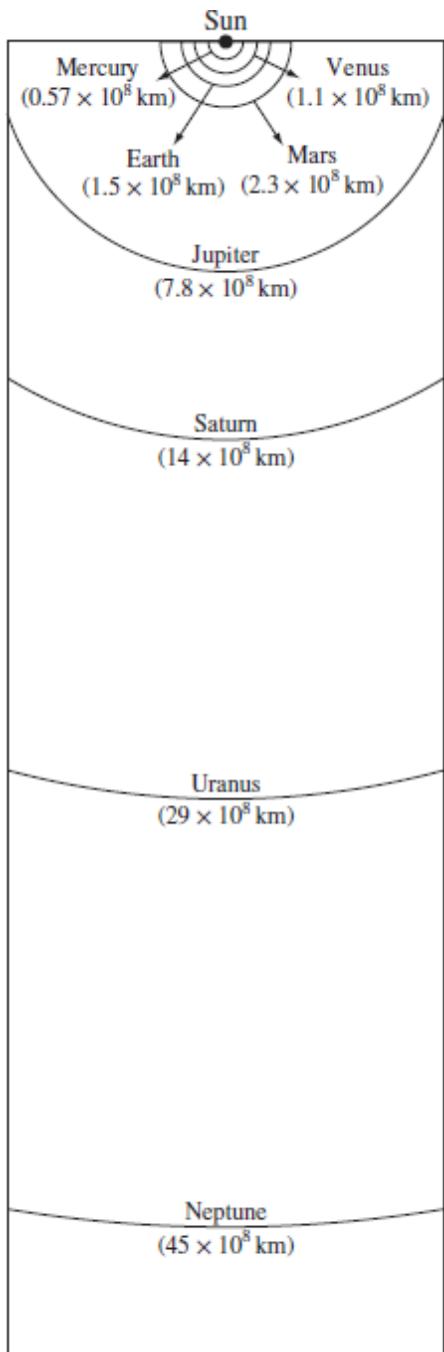

**Figure 8.2** Scale of the Solar System.

(Source: *Shikha Redhal*.)

### 8.2.1 Distances and Velocities

One of the exciting and challenging, yet confounding, things about space flight is that even though the velocities at which spacecraft travel are

extremely high by earth-based standards, it is still very difficult to get anywhere very fast because travel distances are also extremely large. It is important now to be more aware of how we fit into the larger context of the universe. Probably most, if not all, of the spaceflight that will happen during the course of your lifetime will remain in or near our solar system. But it is certainly in our nature to contemplate the possibility of interstellar probes or even starships. Indeed, we have already breached the edge of our solar system with the Voyager spacecraft, which have now cruised out of the heliosphere and are traveling outbound to places unknown, but they will not, unfortunately, be capable of returning data indefinitely.

The thing to realize is that the Solar System is *very* big: distances between planets are, quite literally, “astronomical.” To get a feel for these distances, there is a scale model of the solar system that has been constructed in Eugene, Oregon that is a billion times smaller than the actual size. The interesting thing is that while all the inner planets (Mercury, Venus, Earth, Mars) are within 800 feet of each other in this model, Neptune, the outermost planet in our solar system, is almost 3 miles away. Figure 8.2 is an attempt to illustrate this same concept without having to travel to Oregon.

In Fig. 8.2, the Sun and all the inner planets are contained within [page 664](#) a 0.3-inch circle that represents the orbital radius at which Mars circles the Sun. This distance, while clearly quite small, allows us to draw the orbit of Neptune on the same page at approximately 6 inches from the Sun. Arcs are drawn in this figure representing the orbital distances of all the outer planets, but one of the most telling parts of this diagram is to recognize that if the diameter of the orbit of the Moon around the Earth were drawn at this scale, it would be 30 times smaller than the period at the end of this sentence—and that is as far as humans have traveled away from their home planet at this point in time. Take this as a challenge: look how much more we have to explore, and that is only in our own solar system. And, when our descendants have explored all of the bodies of the solar system, at this scale Alpha Centauri, the nearest star to our Sun, is only about 0.8 miles away.

This should also make us reflect on the fact that what we refer to as “space exploration” is only the continuation of centuries of exploration using remote sensing such as human eyes and, later, telescopes. Although humans have only reached the Moon so far, automated probes have orbited

or passed close by every planet in the solar system, and many minor bodies such as asteroids, comets, and moons. Human exploration will be the “third wave” of exploration, following remote imaging and automated probes into the solar system.

The fact that these distances are so incredibly large can be mitigated to some extent by the fact that spacecraft tend to travel *very* fast, at least compared to speeds commonly experienced on Earth. What really may be more meaningful than either talking about distance or speed is focusing on duration: how long it would take to go from one location in the solar system to another using propulsion technologies available today. Typical travel times from the Earth to various locations in the universe are tabulated below. These are very approximate travel times that have been calculated assuming a minimum energy transfer from one planet to another and similarly for the time to get to Alpha Centauri. In reality, traveling in space is a bit more complicated as will be explained in the next couple of paragraphs and the rest of this chapter.

Travel Time	
Earth to Moon	5 days
Earth to Mercury	3.5 months
Earth to Mars	8.5 months
Earth to Jupiter	2.7 years
Earth to Neptune	31 years
Earth to Alpha Centauri	600,000 years

#### Typical Travel Times to Various Destinations

The most important characteristic of space that determines travel [page 665](#) times, among many other things, is gravity. Every body interacts with every other body due to a gravitational force which we know (thanks to Sir Isaac Newton) is proportional to the product of their masses and inversely proportional to the square of the distance between them. Bodies traveling through space are technically attracted to all other bodies in space, although, because distances are so large, we generally only have to worry about one at a time—the *gravitating body*, or body that has the predominant gravitational attraction on the orbiting body. For a spacecraft in low Earth orbit, the gravitating body is, of course, the Earth; while, for a spacecraft traveling to Mars that spends most of its time in solar orbit, the Sun is the primary gravitating body.

All trajectories in space are actually curved orbital paths, i.e., sections of a circle, an ellipse, or a hyperbola, continually bent into this curved shape by the gravity of the body being orbited. This is why you cannot travel along a straight line in space. The situation is further complicated if you are trying to, for example, travel to Mars: it will not work if you accelerate directly toward the planet, or even (as is often explained erroneously) *lead* the planet like you might kick a leading pass in soccer to a sprinting teammate. The challenge is to understand the mathematics of the underlying physics so you can predict both the trajectory of the spacecraft and the orbit of Mars, in order to select a path for the spacecraft that has it arriving at the same point in space as Mars at the same time. Fortunately, the motion of most things in space is very predictable, so the calculation of what your trajectory should be can generally be performed with great accuracy, and, if necessary, adjustments can be made on the way. The field of orbital mechanics is rich with both history and “elegant” mathematics, and will be explained in greater detail later in this chapter.

### 8.2.2 Temperature and Heat Transfer in Space

In the earlier chapters of this textbook, temperature was one of the primary variables, along with pressure, density, and velocity, that characterized the nature of the flow around a vehicle. For aircraft, it was implicitly assumed that the temperature of at least the skin of the aircraft was generally the same as that of the air that flowed along its surface. In contrast, it is normally of little interest to know the temperature of the ambient environment in space, because the molecules, the motion of which determine temperature, are so few and far between that we are usually justified in thinking of space as a vacuum, devoid of matter. Of far more concern are the temperatures of the various surfaces of the spacecraft exposed to the space environment, particularly since these temperatures can be quite extreme. For a spacecraft in orbit, there is no surrounding fluid with which to be in thermal equilibrium, and therefore different heat transfer mechanisms are at play in determining the temperature of the various parts of the vehicle.

There are three fundamental forms of heat transfer: convection, conduction, and radiation. Each of these will be discussed briefly below. Before we get into the descriptions, it is important to point out that heat energy always flows down a *gradient*: heat travels from a warmer object or

environment to a colder one, and substantial work is required if it is necessary to “pump” heat from a cold environment to a warmer one.

- *Convection* is the transport of thermal energy away from a surface by movement of a fluid that is initially in contact with the surface. Natural convection occurs if the surface heats the fluid it contacts, thereby lowering its local density, so the fluid then flows upward because its density is less than that of the ambient fluid, thus allowing the cooler ambient fluid to reach the surface and continue the heat transfer process. This motion continually transfers heat from the surface to the fluid. This process, whether heating or cooling the fluid, only works in a gravitational field: in weightlessness, the motion of the fluid due to a density difference would not occur. Forced convection, where the fluid is mechanically forced to flow by a fan, however, can still be used to cool a surface inside a pressurized cabin or volume in space. Obviously, convection is not an option outside the spacecraft where there is no fluid to transport the heat.
- *Conduction* of heat occurs in exactly the same manner in [page 666](#) space as it does on earth. Physical contact between any two solid objects that are thermally conductive results in heat transfer across the surfaces in contact until the two objects attain thermal equilibrium. This mode of heat transfer can be used very beneficially when mounting electronics to a heat sink, for example, to conduct waste heat away; or it can be used to minimize heat transfer, as in the use of thermally insulating heat shield tiles on the space shuttle or other entry vehicle. These conduction (or lack of conduction) methods can be used just as effectively on the outside of a spacecraft as inside a pressurized cabin.
- *Radiation* is the third and, from the viewpoint of a spacecraft designer, most important form of heat transfer that tends to determine the steady-state temperature of most surfaces on the outside of a space vehicle, especially those made of low conductivity material. Radiative heat transfer occurs when a surface absorbs incoming radiation, such as sunlight, and when it emits radiation, usually at infrared frequencies, due to its thermal energy, and all surfaces have both of these processes going on at the same time.

For external surfaces of a spacecraft and, in fact, for all objects in space, radiative thermal balance is generally the dominant phenomenon determining its steady-state temperature. This phenomenon therefore deserves further discussion. In order to understand how to estimate the temperature of an object in space, we must first introduce the concept of a *black body*. The term “black body” describes an ideal physics concept (not seen in the actual universe) of an object that is perfectly conductive internally so that it is a constant temperature throughout, i.e., isothermal. It is also perfectly radiating, so it captures all radiation which impinges on its surface, and radiates outward based on its internal temperature at perfect efficiency. This radiative transfer of heat energy occurs according to the Stefan–Boltzmann equation:

$$P_{\text{rad}} = \sigma T^4 \quad \text{where } \sigma = 5.67 \times 10^{-8} \frac{\text{W}}{\text{m}^2 \text{K}^4} = \text{Stefan–Boltzmann constant} \quad \underline{\text{page 667}}$$

This equation quantifies the energy radiated outward by a black body per unit time and per unit area, integrated over the full spectrum of wavelengths to get the total power radiated,  $P_{\text{rad}}$ , which is only a function of the temperature of the body to the fourth power ( $\sim T^4$ ). Since nothing in the real world is perfectly efficient, if the full radiating surface area is  $S_{\text{out}}$ , the total radiated power is:

$$P_{\text{out}} = \epsilon S_{\text{out}} \sigma T^4 \quad \text{where } \epsilon = \text{emissivity of the body}$$

Note that the emissivity of a body is a measure of how effective the surface is at radiating energy; it is a number between 0 and 1 and is generally a function of the surface finish, which includes color, material, and physical parameters of the surface such as surface roughness and coatings.

The other side of the energy balance is the amount of power absorbed due to incoming solar radiation. Assuming the effective area facing the sun (perpendicular to the incoming sunlight) is  $S_{\text{in}}$ , this incoming power can be calculated as

$$P_{\text{in}} = S_{\text{in}} \alpha I_{\text{sun}} \quad \text{where } \alpha = \text{absorptivity of the body}$$

In this expression,  $I_{\text{sun}}$  is the total insolation flux from the Sun, which is essentially a constant at Earth’s orbital distance from the Sun:  $I_{\text{sun}} = 1394 \text{ W/m}^2$ . Be aware, though, that as you travel through the solar system, the amount of sunlight that hits a unit area is going to decrease proportional to

$1/R^2$  as your distance from the sun,  $R$ , changes. So  $I_{\text{sun}}$  changes significantly from one planet to the next. The absorptivity  $\alpha$  is a measure of how well the surface absorbs radiation; it is a non-dimensional number between 0 and 1, just like emissivity  $\varepsilon$ , and is likewise a function of surface coatings and properties.

Why do we differentiate between the area receiving sunlight ( $S_{\text{in}}$ ) and the area radiating thermal power ( $S_{\text{out}}$ )? The sunlight illuminating the spacecraft hits the cross-section of the spacecraft perpendicular to the sun's rays, while the entire external surface area of the body is radiating the thermal energy. So, for example, a spherical body would intercept the sun's energy on a circular disk area based on its radius ( $\pi r^2$ ), but would radiate from the entire surface area of the sphere ( $4\pi r^2$ ). This ratio between illuminated area and radiated area is a significant factor in the final temperature of a body in space.

The body is in thermal equilibrium at its steady-state temperature when these two energies  $P_{\text{in}}$  and  $P_{\text{out}}$  exactly balance each other:

$$P_{\text{in}} = P_{\text{out}} \quad \text{or} \quad \varepsilon S_{\text{out}} \sigma T^4 = S_{\text{in}} \alpha I_{\text{sun}}$$

Thus, solving for temperature, we obtain an expression for the steady-state temperature of a passive body in radiative equilibrium with the sun:

$$T = \sqrt[4]{\frac{\alpha}{\varepsilon} \frac{S_{\text{in}}}{S_{\text{out}}} \frac{I_{\text{sun}}}{\sigma}} \quad (8.2) \quad \underline{\text{page 668}}$$

We should note that the incoming sunlight may not be the only source of internal heat in a spacecraft that needs to be radiated away. We used the term “passive” in the previous paragraph because a spacecraft with, say, powered electronics on board would also have to reject waste heat equivalent to the electrical power used. A crewed spacecraft would add approximately 100 W of internal power for each crew member to account for the metabolic processes of the human body. Like many of the topics in this chapter, a full accounting of spacecraft thermal analysis and control is by itself the subject of many graduate-level engineering courses; we only have room in this textbook to introduce the topic and provide enough information to allow some top-level estimates of spacecraft temperatures as shown in the following examples.

## EXAMPLE 8.1

Consider a spacecraft in orbit around the Earth with a flat rectangular solar array that is always pointed such that the side covered with solar cells is facing the sun and the side without solar cells is facing deep space. If the solar array is 1 m wide by 3 m long, with  $\alpha = 0.92$  and  $\epsilon = 0.85$ , determine the steady-state temperature of the solar panel modeled as a black body.

### ■ Solution

In order to apply the formula:  $T = \sqrt[4]{\frac{\alpha S_{in} I_{sun}}{\epsilon S_{out} \sigma}}$

remember that  $I_{sun} = 1394 \text{ W/m}^2$  in earth orbit, and the Stefan–Boltzmann constant is

$$\sigma = 5.67 \times 10^{-8} \frac{\text{W}}{\text{m}^2 \text{K}^4}$$

The surface area that is facing the sun and thus receiving incoming radiation is

$$S_{in} = (1 \text{ m})(3 \text{ m}) = 3 \text{ m}^2$$

while the surface area radiating energy outward includes both sides of the solar array

$$S_{out} = 2(1 \text{ m})(3 \text{ m}) = 6 \text{ m}^2$$

Using these values, the temperature of the solar panel is

$$T = \sqrt[4]{\frac{0.92 \cdot 3}{0.85 \cdot 6} \frac{1394}{5.67 \times 10^{-8}}} = 340 \text{ K}$$

## EXAMPLE 8.2

Consider the same solar array as that described in Example 8.1 above and determine the steady-state temperature it would attain if it were in orbit around Mars instead of Earth.

## ■ Solution

page 669

The only quantity that changes in the expression for  $T$  is the amount of incoming sunlight that shines on the surface area of the solar cells. This is because  $I_{\text{sun}}$  changes inversely proportional to  $R^2$ , the distance from the sun. Knowing that  $R_{\text{Earth}} = 1.496 \times 10^8 \text{ km}$  and  $R_{\text{Mars}} = 2.279 \times 10^8 \text{ km}$ , the value of  $I_{\text{sun}}$  can be adjusted as follows:

$$I_{\text{Sun}}(\text{at Mars}) = I_{\text{Sun}}(\text{at Earth}) \frac{(1.496 \times 10^8)^2}{(2.279 \times 10^8)^2} = 600.2 \text{ W/m}^2$$

Using this value of  $I_{\text{sun}}$ , the new steady-state temperature of the solar panel becomes


$$T = \sqrt[4]{\frac{0.923}{0.856} \frac{600.2}{5.67 \times 10^{-8}}} = 275 \text{ K} \text{ (considerably cooler)}$$

### 8.2.3 Pressure, Particles, and Radiation

For an aircraft flying through the atmosphere, pressure is an essential enabling characteristic that allows that aircraft to stay aloft and move forward in the air. Pressure, whether related to the random motion of molecules in the air (ambient pressure) or to the directed impact of a flow of molecules (total pressure), is very much a function of the number of molecules per unit volume. In space, this number, which is essentially the density, is extremely small and pressures are so low as to be negligible in most circumstances. Typical values of ambient pressure are on the order of  $10^{-8} \text{ N/m}^2$  in low earth orbit (at an altitude of 500 km), and the pressure drops orders of magnitude lower in higher altitude orbits and in interplanetary space.

Nevertheless, even very slight pressures of this order can have a long-term effect on spacecraft in low earth orbit, particularly those that are lightweight or have large surface areas such as deployed solar panels. The effect is orbital drag that tends to slow the spacecraft down, which decreases its orbital altitude, resulting in a slight increase in ambient pressure; the process continues until ultimately the spacecraft enters the upper atmosphere and most likely burns up during entry. As a result of this effect, most spacecraft in low earth orbit have to actively re-boost themselves on a regular basis to stay in a stable orbit. Alternately, this effect

can actually be used to intentionally de-orbit spacecraft at the end of their useful life. There is, in fact, an international requirement that all spacecraft must be designed to actively or passively deorbit and self-destruct in the atmosphere no more than 25 years after their mission is completed. This requirement is likely to be shortened considerably in the near future because space debris (e.g., defunct satellites and space junk) is becoming a more significant problem.

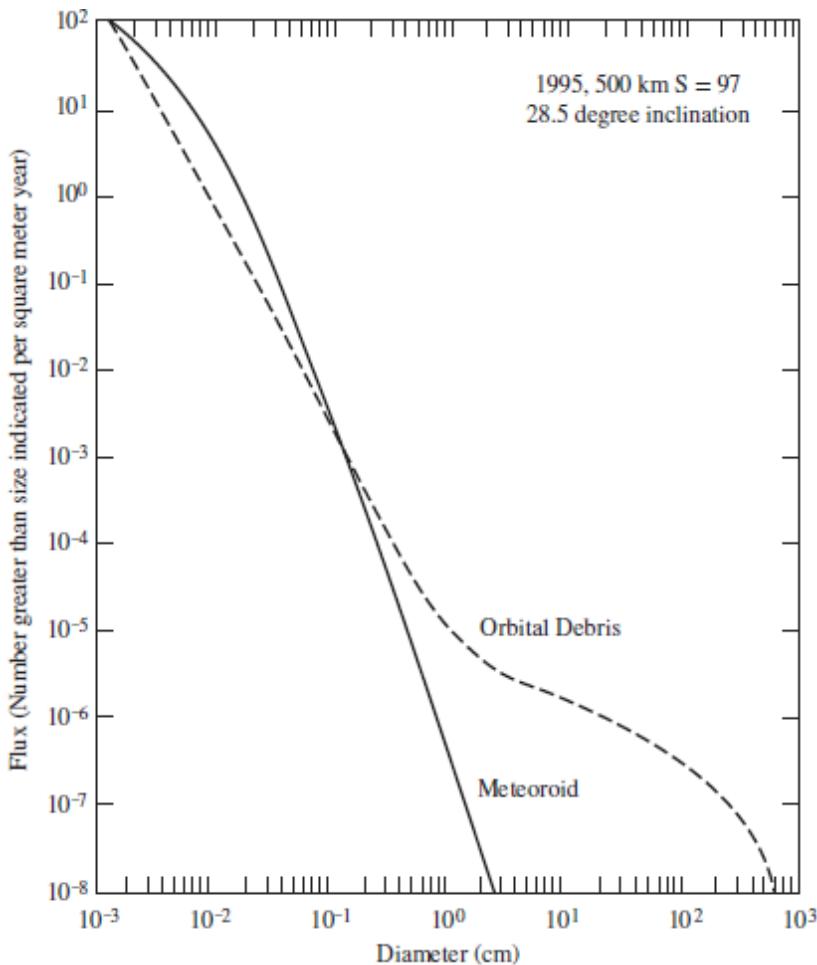

**Figure 8.3** MM and OD Flux versus size at altitudes below 600 km.

(Source: National Research Council 2011. *Limiting Future Collision Risk to Spacecraft: An Assessment of NASA's Meteoroid and Orbital Debris Programs*. Washington, DC: The National Academies Press. <https://doi.org/10.17226/13244>.)

The particle environment in space is often referred to as the *micrometeoroid and orbital debris* (MMOD) environment. Micrometeoroids are the naturally occurring particles that exist in space, while orbital debris is

the term used to describe human-made objects that remain in orbit. The size of these objects varies from rather large and not very numerous, like old spacecraft and upper stages which can generally be tracked, to small nuts or washers or flecks of paint, to microscopic size particles which tend to be quite numerous. Figure 8.3 shows a graph of the flux of these particles (number per surface area per year) as a function of the particle size. The common characteristic of all these particles is that they travel extremely fast. Whether they come from collisions between spacecraft or sources elsewhere in the solar system or even from outside the solar system, their closing velocity toward an active spacecraft can easily be on the order of 10 to 20 km/sec. Not surprisingly, when a collision at this velocity occurs, it can be very damaging especially if it impacts a critical component such as a fuel tank or a window.

The micrometeoroid flux is somewhat independent of orbit and [page 670](#) orbital altitude because the source of these particles is interplanetary space and thus fairly evenly distributed throughout. There is a small gravitational effect that tends to draw MM particles toward the mass of the Earth, but this is somewhat mitigated by the fact that in low earth orbit, the spacecraft is shielded at least on one side by the presence of the Earth which blocks particles coming from that side.

The orbital debris environment, on the other hand, is very much [page 671](#) a function of the orbital altitude, with the highest flux values in the most popular low earth orbits, and especially those high enough not to be brought down by atmospheric drag. One significant concern for the future is whether a popular orbital region may become so cluttered with debris that it becomes too dangerous to use; this problem could be exacerbated if there is some sort of collision chain reaction, started perhaps by a spacecraft explosion or a collision between major spacecraft, that would then throw out pieces that hit other spacecraft and so on. One could envision this happening until there is a major swath of earth orbital space that becomes unusable for many years unless something is done to actively clean it up.


A final important aspect of the space environment is radiation in space which comes in many forms: electromagnetic radiation (light) and ionized solar flare radiation (electrons and protons), as well as higher energy particle radiation (protons and heavy ions) that are called galactic cosmic rays (GCR). It is important to differentiate between electromagnetic radiation, such as radio and light waves, and ionizing radiation, such as

high-energy charged particles. Radiation of the latter sort can damage electronics and may also cause a build-up of charge on a spacecraft unless this is mitigated in some way. Another concern is the effect ionizing radiation exposure can have on human health. Generally speaking, any spacecraft that houses humans for any length of time must have sufficient shielding to limit the radiation dose to which humans are exposed. Inevitably, this adds weight to the vehicle, because the effectiveness of any shielding is a strong function of its mass. The mass of a spacecraft is perhaps the most important parameter that determines the cost (or even feasibility) of launching it into space, so shielding is an essential feature that needs to be considered early on in the design process for any crewed vehicle.

Each of these aspects of the space environment will affect the design, operation, and mission success of a space vehicle, and must therefore be fully evaluated. However, as mentioned earlier, the overriding aspect of the space environment is gravity which governs the analysis of spacecraft trajectories and orbital maneuvering. This topic is so critical to any successful space mission that it will be discussed in much greater detail in the sections that follow.

### 8.3 LAGRANGE'S EQUATION

In physical science, a study of the forces and motion of bodies is called *mechanics*. If the body is motionless, this study is further identified as *statics*; if the body is moving, the study is one of *dynamics*. In this chapter we are concerned with the *dynamics* of space vehicles.

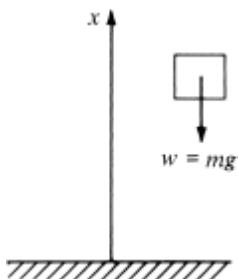

**Figure 8.4** Falling body.

Problems in dynamics usually involve the use of Newton's second law,  $F = ma$ , where  $F$  is force,  $m$  is mass, and  $a$  is acceleration. Perhaps the reader

is familiar with various applications of  $F = ma$  from basic physics; indeed, we applied this law in Ch. 4) to obtain the momentum equation in aerodynamics and again in Ch. 6) to obtain the equations of motion for an airplane. However, in this section we introduce *Lagrange's equation*, which is essentially a corollary to Newton's second law. The use of Lagrange's equation represents an alternative approach to the solution of dynamics problems in lieu of  $F = ma$ ; in the study of space vehicle orbits and trajectories, Lagrange's equation greatly simplifies the analysis. We do not derive Lagrange's equation; we simply introduce it by way of an example and then, in Sec. 8.4, apply it to obtain the orbit equation. A rigorous derivation of Lagrange's equation is left to more advanced studies of mechanics.

Consider the following example. A body of mass  $m$  is falling [page 672](#) freely in the earth's gravitational field, as sketched in Fig. 8.4. Let  $x$  be the vertical distance of the body from the ground. If we ignore drag, the only force on the body is its weight  $w$  directed downward. By definition, the weight of a body is equal to its mass  $m$  times the acceleration of gravity  $g$ , or  $w = mg$ . From Newton's second law,

$$\mathbf{F} = m\mathbf{a} \quad (8.3)$$

The force is weight, directed downward. Because the direction of positive  $x$  is upward, a downward-acting force is negative. Hence

$$\mathbf{F} = -w = -mg \quad (8.4)$$

Now, for convenience, we introduce the “dot” notation, representing the time derivative of a variable:

$$v = \frac{dx}{dt} = \dot{x}$$

and

$$a = \frac{d^2x}{dt^2} = \ddot{x} \quad (8.5)$$

Substituting Eqs. (8.4) and (8.5) into Eq. (8.3) yields

$$\begin{aligned} -mg &= m\ddot{x} \\ \boxed{\ddot{x}} &= -g \end{aligned} \quad (8.6)$$

Equation (8.6) is the equation of motion for the body in our example. It is a differential equation whose solution will yield  $x = f(t)$ . Moreover, Eq. (8.6)

was obtained by the application of Newton's second law.

Now consider an alternative formulation of this example using Lagrange's equation. This will serve as an introduction to Lagrange's equation. Let  $T$  denote the *kinetic energy* of the body, where by definition

$$T = \frac{1}{2}mV^2 = \frac{1}{2}m(\dot{x})^2 \quad (8.7)$$

Let  $U$  denote the potential energy of the body. By definition, the potential energy of a body referenced to the earth's surface is the weight of the body times the distance above the surface:

$$U = wx = mgx \quad (8.8) \quad \text{page 673}$$

Now define the *Lagrangian function*  $B$  as the difference between kinetic and potential energy:

$$B \equiv T - U \quad (8.9)$$

For our example, combining Eqs. (8.7) to (8.9), we get

$$B = \frac{1}{2}m(\dot{x})^2 - mgx \quad (8.10)$$

We now write *Lagrange's equation*, which will have to be accepted without proof; it is simply a corollary to Newton's second law:

$$\frac{d}{dt}\left(\frac{\partial B}{\partial \dot{x}}\right) - \frac{\partial B}{\partial x} = 0 \quad (8.11)$$

In Lagrange's equation, recall the definition of the partial derivative given in Sec. 7.2.4. For example,  $\partial B / \partial \dot{x}$  with respect to  $\dot{x}$ , holding everything else constant. Hence from Eq. (8.10),

$$\frac{\partial B}{\partial \dot{x}} = m\ddot{x} \quad (8.12)$$

$$\text{and} \quad \frac{\partial B}{\partial x} = -mg \quad (8.13)$$

Substituting Eqs. (8.12) and (8.13) into Eq. (8.11), we have

$$\frac{d}{dt}(m\ddot{x}) - (-mg) = 0$$

or because  $m$  is a constant,

$$\begin{aligned} m \frac{d}{dt}(\dot{x}) - (-mg) &= 0 \\ m\ddot{x} + mg &= 0 \end{aligned}$$

$$\boxed{\ddot{x} = -g} \quad (8.14)$$

Compare Eqs. (8.14) and (8.6); they are identical equations of motion. Therefore, we see that Lagrange's equation and Newton's second law are equivalent mechanical relations and lead to the same equations of motion for a mechanical system. In the preceding example, the use of Lagrange's equation resulted in a slightly more complicated formulation than the direct use of  $F = ma$ . However, in the analysis of space vehicle orbits and trajectories, Lagrange's equation is the most expedient formulation, as will be detailed in Sec. 8.4.

With the preceding example in mind, we can give a more [page 674](#) general formulation of Lagrange's equation. Again, no direct proof is given; the reader must be content with the "cookbook" recipe given in the following, using the preceding example as a basis for induction. Consider a body moving in three-dimensional space, described by some generalized spatial coordinates  $q_1$ ,  $q_2$ , and  $q_3$ . (These may be  $r$ ,  $\theta$ , and  $\phi$  for a spherical coordinate system;  $x$ ,  $y$ , and  $z$  for a rectangular coordinate system; or the like.) Set up the expression for the *kinetic energy* of the body, which may depend on the coordinates  $q_1$ ,  $q_2$ , and  $q_3$  themselves as well as the velocities  $\dot{q}_1$ ,  $\dot{q}_2$ , and  $\dot{q}_3$ :

$$T = T(q_1, q_2, q_3, \dot{q}_1, \dot{q}_2, \dot{q}_3) \quad (8.15)$$

Then set up the expression for the *potential energy* of the body, which depends only on spatial location:

$$U = U(q_1, q_2, q_3) \quad (8.16)$$

Now form the *Lagrangian function*

$$B = T - U \quad (8.17)$$


Finally, obtain three equations of motion (one along each coordinate direction) by writing Lagrange's equation for each coordinate:

$q_1$ coordinate: $\frac{d}{dt} \left( \frac{\partial B}{\partial \dot{q}_1} \right) - \frac{\partial B}{\partial q_1} = 0$	(8.18)
$q_2$ coordinate: $\frac{d}{dt} \left( \frac{\partial B}{\partial \dot{q}_2} \right) - \frac{\partial B}{\partial q_2} = 0$	
$q_3$ coordinate: $\frac{d}{dt} \left( \frac{\partial B}{\partial \dot{q}_3} \right) - \frac{\partial B}{\partial q_3} = 0$	

Let us now apply this formalism to obtain the orbit or trajectory equations for a space vehicle.

## 8.4 ORBIT EQUATION

Space vehicles are launched from a planet's surface by rocket boosters. The rocket engines driving these boosters are discussed in Ch. 9). Here we are concerned with the motion of the vehicle after all stages of the booster have burned out and the satellite, interplanetary probe, or other object is smoothly moving through space under the influence of gravitational forces. At the instant the last booster stage burns out, the space vehicle is at a given distance from the center of the planet, moving in a specific direction at a specific velocity. Nature prescribes a specific path (a specific orbit about the planet or possibly a specific trajectory away from the planet) for these given conditions at burnout. The purpose of this section is to derive the equation that describes this path.

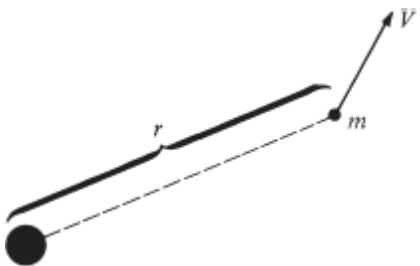

**Figure 8.5** Movement of a small mass in the gravitational field of a large mass.

### 8.4.1 Force and Energy

Consider a vehicle of mass  $m$  moving with velocity  $V$  in the vicinity of a planet of large mass  $M$ , as sketched in Fig. 8.5. The distance between the centers of the two masses is  $r$ . In a stroke of genius during the last quarter of the 17th century, Isaac Newton uncovered the law of universal gravitation, which states that the gravitational force between two masses varies inversely as the square of the distance between their centers. In particular, this force is given by

$$F = \frac{GmM}{r^2} \quad (8.19)$$

where  $G$  is the universal gravitational constant,  $G = 6.67 \times 10^{-11} \text{ m}^3/(\text{kg}\cdot\text{s})^2$ .

Lagrange's equation deals with energy, both potential and kinetic. First consider the potential energy of the system shown in Fig. 8.5. Potential energy is always based on some reference point; and for gravitational problems in astronautics, it is conventional to establish the potential energy as zero at  $r$  equal to infinity. Hence, the potential energy at a distance  $r$  is defined as the work done in moving the mass  $m$  from infinity to the location  $r$ . Let  $U$  be the potential energy. If the distance between  $M$  and  $m$  is changed by a small increment  $dr$ , then the work done in producing this change is  $F dr$ . This is also the change in potential energy  $dU$ . Using Eq. (8.19) we obtain


$$dU = F dr = \frac{GmM}{r^2} dr$$

Integrating from  $r$  equals infinity, where  $U$  by definition is 0, to  $r = r$ , where the potential energy is  $U = U$ , we get

$$\int_0^U dU = \int_{\infty}^r \frac{GmM}{r^2} dr \quad (8.20)$$

or

$$U = \frac{-GmM}{r}$$

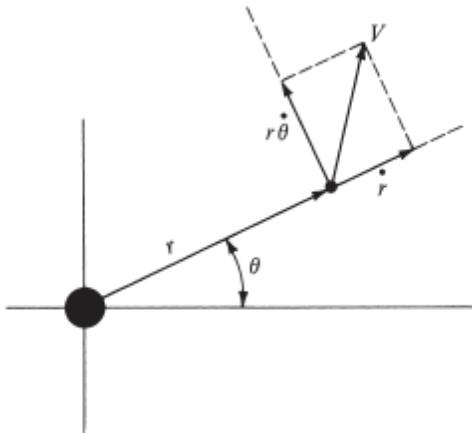

**Figure 8.6** Polar coordinate system.

Equation (8.20) gives the potential energy of small mass  $m$  in the gravitational field of large mass  $M$  at distance  $r$ . The potential energy at  $r$  is a negative value owing to our choice of  $U = 0$  at  $r$  going to infinity. However, if the idea of a negative energy is foreign to you, do not be concerned. In mechanical systems we are usually concerned with *changes*

in energy, and such changes are independent of our choice of reference for potential energy.

Now consider the kinetic energy. Here we need to more [page 676](#) precisely establish our coordinate system. In more advanced studies of mechanics, it can be proved that the motion of a body in a central force field (such as we are dealing with here) takes place in a plane. Hence, we need only two coordinates to designate the location of mass  $m$ . Polar coordinates are particularly useful in this case, as shown in Fig. 8.6. Here the origin is at the center of mass  $M$ ,  $r$  is the distance between  $m$  and  $M$ , and  $\theta$  is the angular orientation of  $r$ . The velocity of the vehicle of mass  $m$  is  $V$ . The velocity component parallel to  $r$  is  $V_r = dr/dt = \dot{r}$ . The velocity component perpendicular to  $r$  is equal to the radius vector  $r$  times the time rate of change of  $\theta$ —that is, times the angular velocity;  $V_\theta = r(d\theta/dt) = r\dot{\theta}$ . Therefore, the kinetic energy of the vehicle is

$$T = \frac{1}{2}mV^2 = \frac{1}{2}[r^2 + (r\dot{\theta})^2]m \quad (8.21)$$

### 8.4.2 Equation of Motion

From Eqs. (8.17), (8.20), and (8.21), the Lagrangian function is

$$B = T - U = \frac{1}{2}m[r^2 + (r\dot{\theta})^2] + \frac{GmM}{r} \quad (8.22)$$

In orbital analysis it is common to denote the product  $GM$  by  $k^2$  or, more commonly,  $\mu$ . If we are dealing with the earth, where  $M = 5.98 \times 10^{24}$  kg, then

$$\mu = k^2 \equiv GM = 3.986 \times 10^{14} \text{ m}^3/\text{s}^2$$

Equation (8.22) then becomes

$$B = \frac{1}{2}m[r^2 + (r\dot{\theta})^2] + \frac{mk^2}{r} \quad (8.23)$$

Now invoke Lagrange's equation, Eq. (8.18), where  $q_1 = \theta$  and  $q_2 = r$ . First, the  $\theta$  equation is

$$\frac{d}{dt}\left(\frac{\partial B}{\partial \dot{\theta}}\right) - \frac{\partial B}{\partial \theta} = 0 \quad (8.24)$$

From Eq. (8.23),

$$\frac{\partial B}{\partial \dot{\theta}} = mr^2\dot{\theta} \quad (8.25)$$

and  $\frac{\partial B}{\partial \theta} = 0$  (8.26)

Substituting Eqs. (8.25) and (8.26) into Eq. (8.24), we obtain

$$\frac{d}{dt}(mr^2\dot{\theta}) = 0 \quad (8.27)$$

Equation (8.27) is the equation of motion of the space vehicle in the  $\theta$  direction. It can be immediately integrated as

$$mr^2\dot{\theta} = \text{const}$$

From elementary physics, linear momentum is defined as mass [page 677](#) times velocity. Analogously, for angular motion, *angular momentum* is defined as  $I\dot{\theta}$ , where  $I$  is the moment of inertia and  $\dot{\theta}$  is the angular velocity. For a point mass  $m$ ,  $I = mr^2$ . Hence, the product  $mr^2\dot{\theta}$  is the *angular momentum of the space vehicle*, and thus we have developed a very important fact:

$mr^2\dot{\theta} = \text{angular momentum} = \text{const}$

(8.28)

In a central force field, Eq. (8.28) demonstrates that the angular momentum of a non-thrusting spacecraft is conserved.

Now consider the  $r$  equation. From Eq. (8.18), where  $q_2 = r$ ,

$$\frac{d}{dt}\frac{\partial B}{\partial \dot{r}} - \frac{\partial B}{\partial r} = 0 \quad (8.29)$$

From Eq. (8.23),

$$\frac{\partial B}{\partial \dot{r}} = m\dot{r} \quad (8.30)$$

$$\frac{\partial B}{\partial r} = -\frac{mk^2}{r^2} + mr\dot{\theta}^2 \quad (8.31)$$

Substituting Eqs. (8.30) and (8.31) into Eq. (8.29), we get

$$\frac{d}{dt}m\dot{r} + \frac{mk^2}{r^2} - mr\dot{\theta}^2 = 0 \quad (8.32)$$

or  $m\ddot{r} - mr\dot{\theta}^2 + \frac{mk^2}{r^2} = 0$  (8.33)

Equation (8.28) demonstrated that because  $m$  is constant,  $r^2\dot{\theta}$  is constant. Denote this quantity by  $h$ :

$$r^2 \dot{\theta} \equiv h = \text{angular momentum per unit mass}$$

Multiplying and dividing the second term of Eq. (8.33) by  $r^3$  and canceling  $m$  yield

$$\begin{aligned} m\ddot{r} - m \frac{r^4 \dot{\theta}^2}{r^3} + \frac{mk^2}{r^2} &= 0 \\ \text{or} \quad \boxed{\ddot{r} - \frac{h^2}{r^3} + \frac{k^2}{r^2} &= 0} \end{aligned} \quad (8.34)$$

Equation (8.34) is the equation of motion for the space vehicle in the  $r$  direction. Note that both  $h^2$  and  $k^2$  are constants, and Eq. (8.34) is a differential equation. Its solution will provide a relation for  $r$  as the function of time; that is,  $r = f(t)$ .

However, examine Fig. 8.6. The equation of the *path* of the page 678 vehicle in space should be geometrically given by  $r = f(\theta)$ , not  $r = f(t)$ . We are interested in this path; that is, we want the equation of the space vehicle motion in terms of its geometric coordinates  $r$  and  $\theta$ . Therefore, Eq. (8.34) must be reworked as follows.

Let us transform Eq. (8.34) to a new dependent variable  $u$ , where

$$r = \frac{1}{u} \quad (8.35)$$

$$\text{Then} \quad h \equiv r^2 \dot{\theta} = \frac{\dot{\theta}}{u^2} \quad (8.36)$$

$$\begin{aligned} \text{Hence} \quad \dot{r} &\equiv \frac{dr}{dt} = \frac{d(1/u)}{dt} = -\frac{1}{u^2} \frac{du}{dt} \\ &= -\frac{1}{u^2} \frac{du}{d\theta} \frac{d\theta}{dt} = -\frac{\dot{\theta}}{u^2} \frac{du}{d\theta} = -h \frac{du}{d\theta} \end{aligned} \quad (8.37)$$

Differentiating Eq. (8.37) with respect to  $t$ , we get

$$\begin{aligned} \ddot{r} &= -h \frac{d}{dt} \frac{du}{d\theta} = -h \left( \frac{d}{d\theta} \frac{du}{d\theta} \right) \frac{d\theta}{dt} \\ &= -h \left( \frac{d^2 u}{d\theta^2} \right) \frac{d\theta}{dt} = -h \frac{d^2 u}{d\theta^2} \dot{\theta} \end{aligned} \quad (8.38)$$

But from Eq. (8.36),  $\dot{\theta} = u^2 h$ . Substituting into Eq. (8.38), we obtain

$$\ddot{r} = -h^2 u^2 \frac{d^2 u}{d\theta^2} \quad (8.39)$$

Substituting Eqs. (8.39) and (8.35) into Eq. (8.34) yields

$$-\mathbf{h}^2 u^2 \frac{d^2 u}{d\theta^2} - h^2 u^3 + k^2 u^2 = 0$$

or by dividing by  $h^2 u^2$ ,

$$\frac{d^2 u}{d\theta^2} + u - \frac{k^2}{h^2} = 0 \quad (8.40)$$

Equation (8.40) is just as valid an equation of motion as the original Eq. (8.34). Equation (8.40) is a differential equation, and its solution gives  $u = f(\theta)$ . Specifically, a solution of Eq. (8.40) is

$$u = \frac{k^2}{h^2} + c \cos(\theta - \phi) \quad (8.41) \quad \text{page 679}$$

where  $c$  and  $\phi$  are constants (essentially constants of integration). You should satisfy yourself that Eq. (8.41) is indeed a solution of Eq. (8.40) by substitution of (8.41) into (8.40).

Return to the original transformation, Eq. (8.35). Substituting  $u = 1/r$  into Eq. (8.41) yields

$$r = \frac{1}{k^2/h^2 + c \cos(\theta - \phi)} \quad (8.42)$$

Multiply and divide Eq. (8.42) by  $h^2/k^2$ :

$$r = \frac{h^2/k^2}{1 + c(h^2/k^2) \cos(\theta - \phi)} \quad (8.43)$$

Equation (8.43) is the desired equation that fully determines the path, i.e., the orbit or trajectory, that the space vehicle will follow. It is an algebraic equation,  $r = f(\theta)$ , sometimes generically called the *orbit equation*, that allows one to plot the coordinates of the vehicle as a function of the constants contained in this expression, namely  $h^2$  (the constant value of angular momentum),  $k^2$  (or  $\mu = GM$ , the universal gravitational constant times the mass of the planet or body about which the spacecraft is orbiting), and  $c$  and  $\phi$  (both basically constants of integration, dependent on the initial magnitude and direction of the velocity vector).

The orbit equation applies equally to the open trajectory of a space vehicle escaping from the gravitational field of a planet, or to the closed orbit of a satellite around a planet. There are actually a number of different orbital paths that are possible depending on the relative values of the various constants described above; these orbital shapes will be studied in more detail in Secs. 8.5 and 8.6.

## 8.5 KEPLER'S LAWS AND ELLIPTICAL ORBITS

All of the preceding analysis and results were derived for a small mass, like a spacecraft, orbiting about a larger mass, like a planet. These results actually hold in general for a mass of any size in a central gravitational force field. The most familiar natural example of this motion is our solar system—that is, the orbits of the planets about the Sun. Such motion has held people's attention since the early days of civilization. Early observations and mapping of planetary motion evolved over millennia, passing from the Babylonians to the Egyptians to the Greeks to the Romans, carried throughout the dark ages by Arabian scholars, and reaching Copernicus in the 15th century. However, at this time, astronomical observations were still inaccurate and uncertain. Then from 1576 to 1597, Tycho Brahe, a Danish noble, made a large number of precise astronomical observations that improved the accuracy of existing tables by a factor of 50. Near the end of his life, Brahe was joined by Johannes Kepler, a young German astronomer and mathematician, who further improved these observations. Moreover, Kepler drew some pioneering conclusions about the geometry of planetary motion. From 1609 to 1618, Kepler conceived and published three laws of planetary motion, obtained strictly from an exhaustive examination of the astronomical data. Kepler did not have the advantage of Newton's law of universal gravitational or Newtonian mechanics, which came three-quarters of a century later. Nevertheless, Kepler's conceptualizations were essentially correct, and his classical three laws are as important today for understanding artificial satellite motion as they were in the 17th century for understanding planetary motion. We will take advantage of our previous derivations of orbital motion to derive Kepler's laws, a luxury Kepler himself did not have.

---

page 680

### 8.5.1 Kepler's First Law

*A satellite describes an elliptical path around its center of attraction.*

Let us rewrite the orbit equation as follows:

$$r = \frac{p}{1 + e \cos \theta} \quad (8.44)$$


where  $p = h^2/k^2 = h^2/\mu =$  parameter of the orbit

$e = c(h^2/k^2) =$  eccentricity of the orbit

and  $\phi$  from Eq. (8.43) can be set equal to zero by choosing to measure  $\theta$  as the angle between the radius vector and the major axis of the ellipse. With this definition,  $\theta$  is known as the *true anomaly*.

If  $e$ , the eccentricity, has a value between 0 and 1, the shape described by this equation is indeed an ellipse. If this is not familiar to you, pick a dozen or more values of  $\theta$ , between 0 and  $2\pi$ , calculate the corresponding values of  $r$ , plot the resulting points in a polar coordinate system, and you will see an ellipse appear. Figure 8.7 is a diagram of such an ellipse showing all the key geometric quantities that determine its shape as well as typical quantities that may be known for a body orbiting on an elliptical path. The nomenclature for all of these quantities is listed below:

page 681

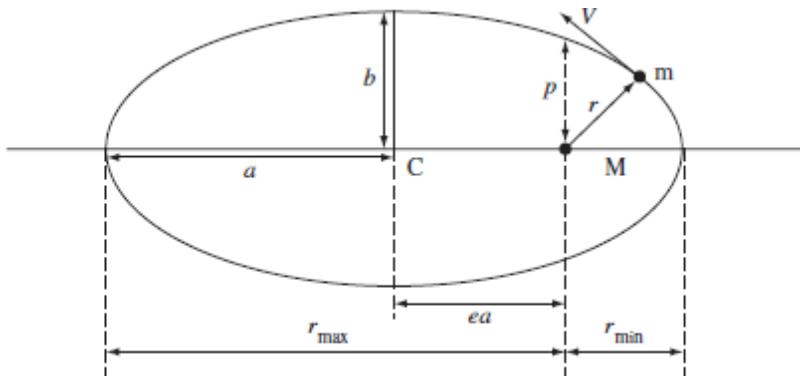

**Figure 8.7** Geometry and nomenclature for an elliptical orbit.

(Source: Shikha Redhal.)

$a$  = semimajor axis

$b$  = semiminor axis

C = center of ellipse

$r_{\min}$  = periapsis distance

$r_{\max}$  = apoapsis distance

M = location of central body (at focus of ellipse)

m = representative location of orbiting body

$r$  = distance from central body to orbiting body

$p$  = semilatus rectum = parameter

$ea$  = eccentricity  $\times$  semimajor axis

Note that the central body, or gravitating body, is not located at the center of the ellipse but rather at one of the foci, and  $r$  is the distance from this focus to the orbiting body as it travels along its elliptical path. The point of closest approach on this path, where  $r$  is at its minimum value ( $r_{\min}$ ), is defined as the *periapsis* of the orbit (or more specifically perigee if the central body is the Earth or perihelion if the central body is the Sun). Similarly, the point farthest away from the central body, where  $r$  is at its maximum value ( $r_{\max}$ ), is defined as the *apoapsis* of the orbit (or apogee for Earth orbits or aphelion for Sun orbits). The major axis of the ellipse is the

distance from periapsis to apoapsis, and half this distance is called the semimajor axis,  $a$ . The semiminor axis,  $b$ , is similarly half the length of the minor axis which is perpendicular to the major axis at the center C of the ellipse.

Based on these definitions, one can easily establish a number of very useful formulas simply by substituting different values of  $\theta$  into the orbit equation:

$$\bullet \text{ for } \theta = 0, \quad r_{\min} = \frac{p}{1 + e} \quad (8.45)$$

$$\bullet \text{ for } \theta = \pi, \quad r_{\max} = \frac{p}{1 - e} \quad (8.46)$$

$$\bullet \text{ for } \theta = \pi/2, \quad r = p \text{ (radial distance directly above M)} \quad (8.47)$$

This last expression, for  $\theta = \pi/2$ , shows that the parameter of the orbit,  $p$ , is actually half the width of the ellipse at the location of the focus where the central body is located. An additional relationship between  $p$  and  $e$  and the geometry of the ellipse can be derived as follows:

$$a = \frac{1}{2}(r_{\min} + r_{\max}) = \frac{1}{2}p \left[ \frac{1}{1 + e} + \frac{1}{1 - e} \right] = \frac{p}{1 - e^2} \quad (8.48) \text{ page 682}$$

$$\text{or} \quad p = a(1 - e^2) \quad (8.49)$$

The eccentricity of the orbit is a measure of how far the focus is from the center of the ellipse, and this distance, as shown in Fig. 8.7, is the product of the semimajor axis  $a$  times the eccentricity  $e$  (so  $ae$ ). For an ellipse,  $e$  can be calculated from any of the following expressions:

$$e = \sqrt{1 - \left(\frac{b}{a}\right)^2} = 1 - \left(\frac{r_{\min}}{a}\right) = \left(\frac{r_{\max}}{a}\right) - 1 \quad (8.50)$$

Note that the dimensions of the ellipse, such as  $a$ ,  $b$ , and  $p$ , have units of length (most often m or km), while eccentricity is a non-dimensional number. In addition, since  $b$  is always less than or equal to  $a$ ,  $e$  must be a number between 0 and 1. To get a feeling for the eccentricity of an orbit, consider the following two cases:

- a highly eccentric orbit, for which  $a \gg b$ , would have a value of  $e$  nearing 1, and the orbital shape would be a long and skinny ellipse;
- a low eccentricity orbit tends toward a circular shape for which  $a = b = p = r$  and  $e = 0$ .

The circular orbit is really just a special case of the elliptical orbit.

## EXAMPLE 8.3

A Canadian spacecraft used for TV communications has been put into a highly elliptical orbit, called a Molniya orbit, with the following characteristics: the minimum orbital altitude (at perigee) is 400 km, the maximum orbital altitude (at apogee) is 41,800 km, and the eccentricity is 0.75. Determine the orbital parameters for this orbit, specifically  $a$ ,  $b$ , and  $p$ .

### ■ Solution

It is very important to recognize that “orbital altitude” refers to the height of the spacecraft above the surface of the gravitating body, but “orbital radius” refers to the distance from the center of the body; for an Earth orbiting spacecraft, they differ by the radius of the Earth. So first, we calculate the orbital radius at perigee and that at apogee, approximating the radius of the Earth as  $R_{\text{Earth}} = 6400$  km:

$$r_{\min} = r_{\text{peri}} = R_{\text{Earth}} + h_{\text{peri}} = 6400 + 400 = 6800 \text{ km}$$

similarly,

$$r_{\max} = r_{\text{apo}} = R_{\text{Earth}} + h_{\text{apo}} = 6400 + 41,800 = 48,200 \text{ km}$$

Using the formula established above, we can now calculate  $a$ :

$$a = \frac{1}{2}(r_{\min} + r_{\max}) = \frac{1}{2}(6800 + 48,200) = 27,500 \text{ km}$$

To find  $b$ , use the relationship for  $e$  in terms of  $a/b$  ratio, and solve for  $b$ :

$$b = a\sqrt{1 - e^2} = (27,500)\sqrt{1 - 0.75^2} = 18,200 \text{ km}$$

And, finally, the parameter  $p$  of the orbit can be found from

$$p = r_{\min}(1 + e) = (6800)(1 + 0.75) = 11,900 \text{ km}$$

---

### 8.5.2 Kepler's Second Law

*In equal times, the areas swept out by the radius vector of a satellite are the same.*


To prove Kepler's second law, recall from Eq. (8.28) that the [page 683](#) angular momentum of a satellite,  $mr^2\dot{\theta}$ , is constant. Consider Fig. 8.8, which shows the radius vector  $r$  sweeping through an infinitesimally small angle  $d\theta$ . The area of the small triangle swept out is  $dA = \frac{1}{2}r^2 d\theta$ . But  $ds$  can be written as  $r d\theta$ , and thus  $dA = \frac{1}{2}r^2 d\theta$ . The time rate of change of the area swept out by the radius vector is then:

$$\frac{dA}{dt} = \frac{\frac{1}{2}r^2 d\theta}{dt} = \frac{1}{2}r^2 \dot{\theta} \quad (8.51)$$

Since the angular momentum  $mr^2\dot{\theta}$  is constant and  $m$  is constant, clearly  $r^2\dot{\theta}$  must be constant. Hence, Eq. (8.51) shows that:  $\frac{dA}{dt} = \text{constant}$ , which proves Kepler's second law.

One clear conclusion that can be drawn from this law is that since the distance  $r$  is changing continually as the satellite follows this elliptical path, the velocity must also be changing continually. In fact, the velocity must be increasing as the spacecraft nears its point of closest approach at periapsis, and the velocity must be decreasing as the spacecraft departs from periapsis and heads toward apoapsis. At these two points in particular, periapsis and apoapsis, the velocity of the satellite is perpendicular to the radius vector, so we can write

[page 684](#)

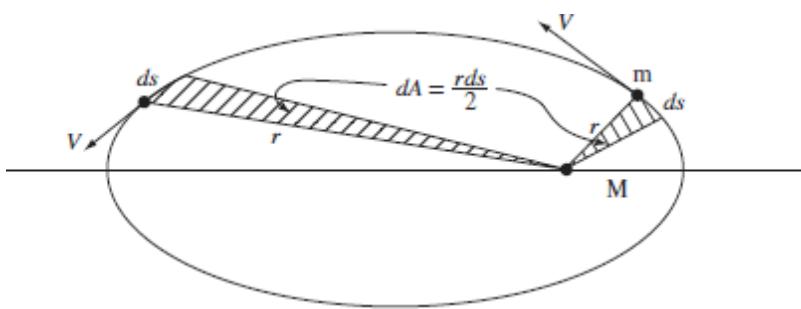

**Figure 8.8** Area swept out by radius vector.

(Source: Shikha Redhal.)

$$r^2 \dot{\theta} = r(r\dot{\theta}) = rV$$

This is only true at the two apsides, as they are called, and leads to a very convenient formula that shows the relationship between the velocity at

periapsis and the velocity at apoapsis:

$$r_{\min} V_{\max} = r_{\max} V_{\min} \quad \text{or} \quad r_{\min} V_{\text{peri}} = r_{\max} V_{\text{apo}} \quad (8.52)$$

### EXAMPLE 8.4

For the spacecraft considered in Example 8.3, the velocity at perigee of the Molniya orbit is measured to be 10.14 km/s. What is its velocity at apogee?

#### ■ Solution

Recall that  $r_{\min}$  and  $r_{\max}$  were given in the statement of the problem in Example 8.3, so to determine  $V_{\text{apo}}$ , simply use Eq. (8.52), to get

$$V_{\text{apo}} = \frac{r_{\min}}{r_{\max}} V_{\text{peri}} = \frac{6800}{48,200} (10.14) = 1.43 \text{ km/s}$$

Note that the orbit of this spacecraft is purposely chosen so that its apogee is located over Canada, as that will be when it has the maximum land area within view of the satellite and when the satellite will be travelling the slowest, making the tracking problem easier for antennas on the ground.

### 8.5.3 Kepler's Third Law

*The periods of any two satellites about the same planet are related to their semimajor axes as  $\frac{\tau_1^2}{\tau_2^2} = \frac{a_1^3}{a_2^3}$*

$$\text{axes as } \frac{\tau_1^2}{\tau_2^2} = \frac{a_1^3}{a_2^3}$$

To prove this relationship, we start by writing the area of an ellipse in terms of  $a$  and  $e$  only:

$$A = \pi ab = \pi a(a\sqrt{1 - e^2}) = \pi a^2 \sqrt{1 - e^2} \quad (8.52)$$

Now return to Eq. (8.51):

$$dA = \frac{1}{2} r^2 \dot{\theta} dt = \frac{1}{2} h dt \quad (8.53)$$

We can now obtain the area of the ellipse by integrating Eq. (8.53) [page 685](#) around the complete orbit. That is, imagine the satellite starting at periapsis at time = 0. Now allow the satellite to move around one complete orbit and return to periapsis. The area swept out by the radius vector is the full area

of the ellipse  $A$ . The time taken by the satellite to travel the complete orbit is defined as the period and is denoted by  $\tau$ . Thus, integrating Eq. (8.53) around the complete orbit, we have

$$\int_0^A dA = \int_0^\tau \frac{1}{2} h dt \quad \text{or} \quad A = \frac{1}{2} h \tau \quad (8.54)$$

We now have two independent expressions for  $A$ : Eq. (8.52) from geometry and Eq. (8.54) from orbital mechanics. Equating these two relations, we have

$$\frac{1}{2} h \tau = \pi a^2 \sqrt{1 - e^2} \quad (8.55)$$

Going back to an expression obtained earlier, Eq. (8.49), and remembering that  $p = h^2/k^2$ , we can solve for  $h$  as follows:

$$h = k \sqrt{a(1 - e^2)}$$

Substituting this expression for  $h$  into Eq. (8.55) above yields

$$\frac{1}{2} \tau k \sqrt{a(1 - e^2)} = \pi a^2 \sqrt{1 - e^2}$$

Squaring this expression, simplifying, and solving for  $\tau$ , gives us a formula for calculating the period of an orbit:

$$\tau^2 = \frac{4\pi^2}{k^2} a^3 \quad \text{or} \quad \frac{4\pi^2}{\mu} a^3$$

Since the term  $(4\pi^2/\mu)$  is a constant, this expression clearly shows that the square of the period is proportional to the cube of the semimajor axis. Not only does this relationship prove Kepler's third law, it also provides an expression that can be used to calculate the period numerically (in seconds) if you know the length of the semimajor axis,  $a$ , and the value of the gravitational constant  $k^2 = \mu = GM$  for the planet in question.

### EXAMPLE 8.5

---

Determine the period of the spacecraft described in Examples 8.3 and 8.4 as it circles the Earth in its highly elliptical Molniya orbit.

## ■ Solution

All we need to know in order to calculate the period of an orbit is the gravitational constant,  $\mu$ , for the central body which in this case is the Earth, and the length of the semimajor axis which has already been calculated in Example 8.3:

$$\begin{aligned}\mu \text{ for Earth} &= 3.986 \times 10^{14} \text{ m}^3/\text{s}^2 \\ a &= 27,500 \text{ km} = 27.5 \times 10^6 \text{ m}\end{aligned}$$

Using these values, the period can be calculated as

$$\tau = \sqrt{\frac{4\pi^2}{\mu} a^3} = \sqrt{\frac{4\pi^2}{3.986 \times 10^{14}} (27.5 \times 10^6)^3} = 45,380 \text{ s} = 756 \text{ min} = 12.6 \text{ hr}$$

---

**EXAMPLE  
8.6**

---

The period of revolution of the Earth about the Sun is 1 year or [page 686](#) 365.256 days. The semimajor axis of the Earth's orbit is  $1.49527 \times 10^{11}$  m. The semimajor axis of the orbit of Mars is  $2.2783 \times 10^{11}$  m. Calculate the period of Mars.

## ■ Solution

From Kepler's third law, we have

$$\tau_2 = \tau_1 \left( \frac{a_2}{a_1} \right)^{\frac{3}{2}} = 365.256 \left( \frac{2.2783}{1.49527} \right)^{\frac{3}{2}} = 686.96 \text{ days}$$

So a year on Mars is roughly 687 earth days or about 1.88 earth years.

---

## 8.6 ORBITAL ENERGY AND THE VIS-VIVA EQUATION

### 8.6.1 Orbital Shapes

Kepler's study of planetary motion allowed him to induce the elliptical shape of the paths that all planets in our solar system follow and the velocity variation along their trajectories. These characteristics were

discussed in Sec. 8.5 by relying on the mathematical formula called the orbit equation (Eq. 8.44) that was derived previously using basic physics. The amazing thing is that this orbit equation, though it was inspired by and certainly describes an elliptical orbit perfectly, also defines all the other types of orbits that can occur in a central gravitational field.

The orbit equation in its simplest form is repeated here:

$$r = \frac{p}{1 + e \cos\theta} \quad (8.44)$$

where  $p$  is the parameter of the orbit and  $e$  is the eccentricity. This allows one to calculate the orbital radius  $r$  at any angular position  $\theta$ . The mathematical beauty of this equation comes from the fact that there are actually four different orbital shapes and all four can be obtained, simply by varying the value of the eccentricity  $e$ :


If  $e = 0$ , the path is a circle.

If  $e < 1$ , the path is an ellipse.

If  $e = 1$ , the path is a parabola.

If  $e > 1$ , the path is a hyperbola.

Geometric details for these four different shapes are shown in Fig. 8.9. In each case,  $M$  is the central gravitating body located at the focus of the orbit, and  $m$  is the orbiting body shown at a representative position displaced an angle  $\theta$  away from the major axis. As the value of  $e$  changes from 0 through 1 to larger and larger values, the shape evolves from a circle, to an ellipse, to a longer thinner ellipse, to an open parabola, and finally to a hyperbola that gets wider and wider. This progression happens consistent with the growth of the semimajor axis  $a$ , from a positive value, to an “infinite” value for the parabola, to a negative value for the hyperbola. While this may seem surprising, it should be noted that in all cases,  $a$  is the distance from the center of the *conic section* to the periapsis of the orbit. This will be discussed in more detail further on.

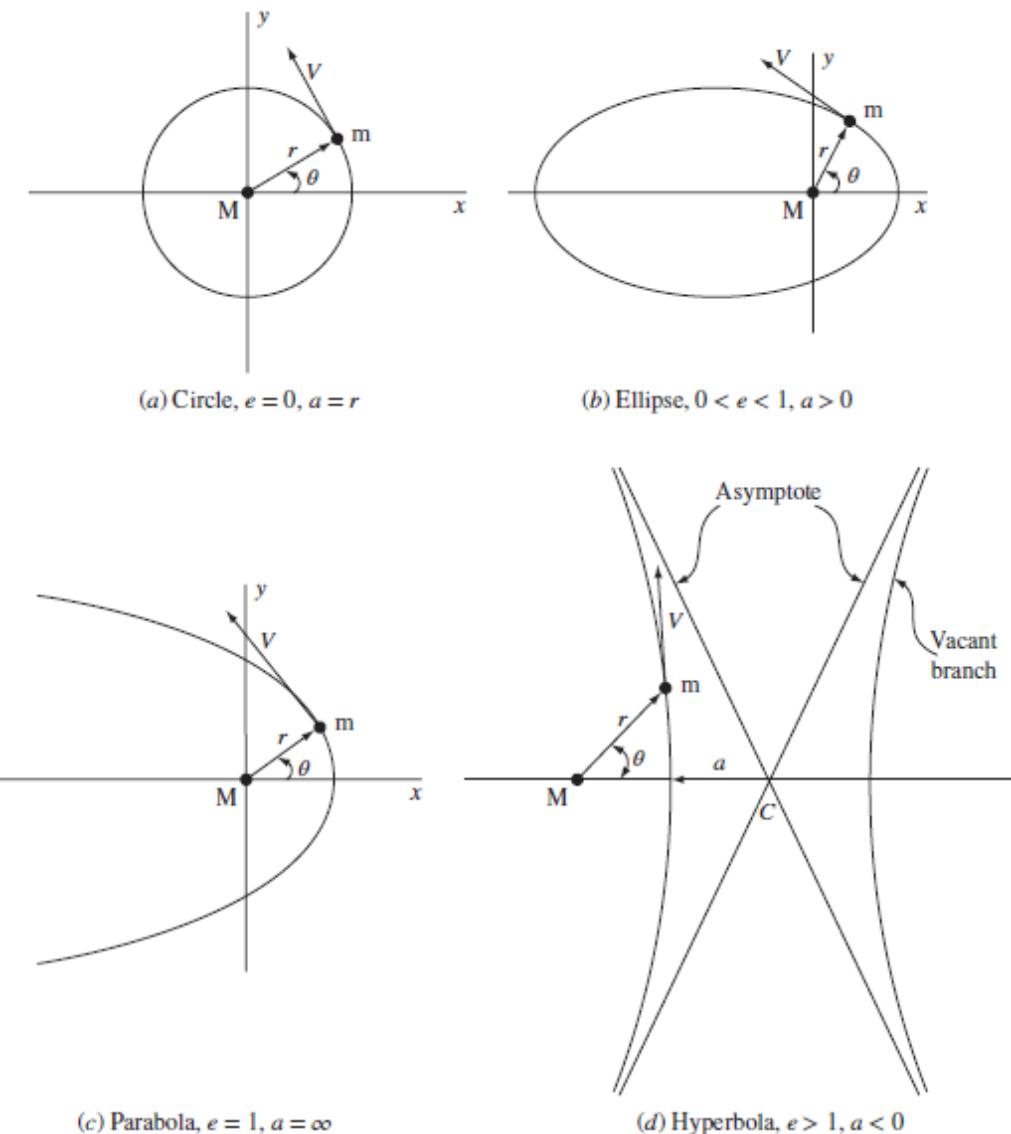

**Figure 8.9** The four types of orbital trajectories.

(Source: *Shikha Redhal.*)

There is a vast amount of information contained in these diagrams, but one of the most important things to recognize is that a very fundamental transformation happens when  $e$  transits through the value 1: for all values of  $e < 1$ , the orbits are closed (circles and ellipses); while for all values of  $e \geq 1$ , the orbits are open (parabolas and hyperbolas). This is important because for any closed orbit, the orbiting body will eventually come back around, while for an open orbit, the orbiting body will never be seen again.

## EXAMPLE 8.7

Consider the following four orbits that all have the same perigee [page 688](#) altitude of 1200 km, but have the following different values of eccentricity  $e$ : (a)  $e = 0.0$ ; (b)  $e = 0.5$ ; (c)  $e = 1.0$ ; (d)  $e = 1.5$ . For each orbit, calculate the parameter and sketch the orbital shape.

### ■ Solution

The radius of perigee in all cases is  $r_{\min} = R_{\text{Earth}} + 1200 \text{ km} = 7600 \text{ km}$ . Knowing this, the parameter  $p$  of the orbit can be calculated, regardless of the shape of the orbit, using the orbit equation with  $\theta = 0$ :

$$r_{\min} = \frac{p}{1 + e \cos 0} = \frac{p}{1 + e}$$

Solving for  $p$  and substituting in the 4 values of  $e$ , we get:


$$(a) p_a = r_{\min} = 7600 \text{ km}$$

$$(b) p_b = r_{\min}(1 + e) = 7600(1 + 0.5) = 11,400 \text{ km}$$

$$(c) p_c = r_{\min}(1 + e) = 7600(1 + 1.0) = 15,200 \text{ km}$$

$$(d) p_d = r_{\min}(1 + e) = 7600(1 + 1.5) = 19,000 \text{ km}$$

Note that these distances are now very helpful for drawing the four orbits because in all cases,  $p$  is the distance between the central body and the orbit itself at  $\theta = \pi/2$ . See Fig 8.10, which shows the four orbits with the same perigee radius but different parameter distances.

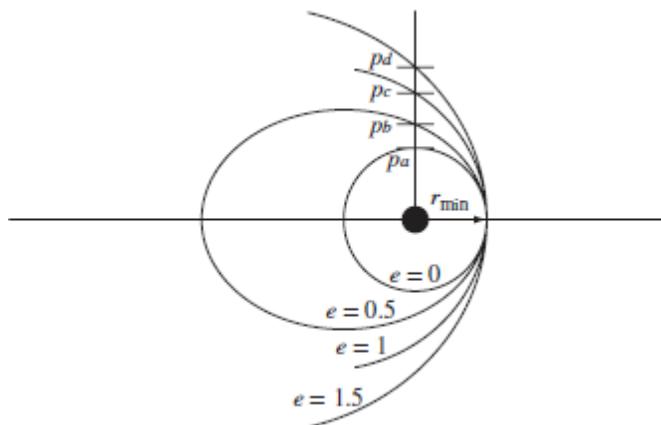

**Figure 8.10** Orbits for Example 8.7.

(Source: *Shikha Redhal*.)

---

## 8.6.2 Orbital Energy

Basic physics would indicate that the type of path a spacecraft follows, and thus the value of  $e$ , is governed by the difference between the kinetic energy of the vehicle and its potential energy, with the expectation that if kinetic energy is too high (vehicle going very fast), it is likely to escape the gravitational pull of the planet. To prove this, we will derive an expression for kinetic energy based on the velocity of the vehicle, and an expression for potential energy based on the position of the vehicle in the gravitational field. We will then calculate the difference between these two quantities, and obtain an expression for  $e$ .

Consider first the kinetic energy,  $T$ , of the spacecraft:

page 689

$$T = \frac{1}{2}mV^2 = \frac{1}{2}m[\dot{r}^2 + (r\dot{\theta})^2] \quad (8.57)$$

In order to further develop this expression, we need to determine  $r \cdot$  which can be found by differentiating Eq. (8.44):

$$\frac{dr}{dt} = \dot{r} = r \frac{e \sin \theta}{1 + e \cos \theta} \dot{\theta} \quad (8.58)$$

Substituting this expression for  $r \cdot$  into Eq. (8.57), we get the following

$$T = \frac{1}{2}m \left\{ \frac{(r^2 e^2 \sin^2 \theta) \dot{\theta}^2}{(1 + e \cos \theta)^2} + r^2 \dot{\theta}^2 \right\} \quad (8.59)$$

Now recall that  $r^2 \dot{\theta} \stackrel{\text{def}}{=} h$ ; hence  $\dot{\theta}^2 = h^2/r^4$ . Thus Eq. (8.59) becomes

$$T = \frac{1}{2}m \left\{ \frac{(h^2 e^2 \sin^2 \theta)}{r^2(1 + e \cos \theta)^2} + \frac{h^2}{r^2} \right\} \quad (8.60)$$

The bracket on the right side of this equation can be simplified by using a common denominator and remembering from Eq. (8.44) that

$$r^2(1 + e \cos \theta)^2 = \left( \frac{h^2}{k^2} \right)^2 = p^2 \quad (8.61)$$

With these substitutions and using the more common notation  $\mu = k^2 = GM$ ,

$$T = \frac{1}{2}m \frac{\mu}{p} (1 + 2e \cos \theta + e^2) \quad (8.62)$$

Now that we have an expression for kinetic energy in terms of  $e$ , we need to consider the potential energy of the orbiting body. It should be noted at this point that kinetic energy is always positive (being proportional to  $m$  and  $V^2$ ), but potential energy is defined as negative as discussed in Sec. 8.4. This is convenient because if we define total energy,  $H$ , as the sum of kinetic and potential energy, the sign of  $H$  will be an indicator of which of these two quantities is larger in absolute value.

The potential energy, denoted as  $U$ , can be written in terms of  $e$  using Eqs. (8.20) and (8.44):

$$U = \frac{-GMm}{r} = \frac{-\mu m}{r} = \frac{-\mu m}{p}(1 + e \cos \theta) \quad (8.63)$$

The sum of kinetic energy and potential energy, i.e., the total energy  $H$ , can thus be written

$$H = T + U = \frac{1}{2}m \frac{\mu}{p}(1 + 2e \cos \theta + e^2) - m \frac{\mu}{p}(1 + e \cos \theta) \quad (8.64) \quad \text{page 690}$$

With a bit of manipulation, Eq. (8.64) becomes

$$H = -\frac{1}{2}m \frac{\mu}{p}(1 - e^2) \quad (8.65)$$

And solving Eq. (8.65) for  $e$ , we get

$$e = \sqrt{1 + \frac{2p}{m\mu} H} \quad (8.66)$$

This expression is the desired result, giving the eccentricity  $e$  in terms of the total energy  $H$ . If we now recognize that the constant  $\left(\frac{2p}{m\mu}\right)$  is always positive, then the second term under the radical has the same sign as  $H$ . As a result, if the kinetic energy is less than the potential energy, then  $H < 0$  and  $e < 1$ . If the kinetic and potential energies are equal, then  $H = 0$  and  $e = 1$ . And if the kinetic energy is larger than the potential energy, then  $H > 0$  and  $e > 1$ . This is consistent with what we expected and consistent with the orbital shapes discussed above: for  $e < 1$ , the orbit is closed and the orbiting body remains trapped in the gravitational well of the central body; while for  $e \geq 1$ , the orbit is open and the orbiting body is going fast enough that it can escape. These relationships are summarized in the following table:

Type of Trajectory	Eccentricity $e$	Energy Relation	Result
Ellipse (closed)	$e < 1$	$\frac{1}{2}mV^2 < \frac{GMm}{r}$	Not enough kinetic energy to escape ( $H < 0$ )
Parabola (open)	$e = 1$	$\frac{1}{2}mV^2 = \frac{GMm}{r}$	Exactly enough kinetic energy to escape ( $H = 0$ )
Hyperbola (open)	$e > 1$	$\frac{1}{2}mV^2 > \frac{GMm}{r}$	Plenty of kinetic energy to escape ( $H > 0$ )

From this, we draw the important conclusion that a vehicle intended to escape from the gravitational well of the Earth and travel into deep space on a parabolic or hyperbolic trajectory must be launched so that its kinetic energy after burnout of the last stage of the launch vehicle is equal to or greater than its potential energy—a conclusion that makes intuitive sense even without the preceding derivation.

### 8.6.3 Orbital Velocities

A spacecraft designed for planetary exploration, heading toward the moons of Jupiter, for example, would most likely be launched on a multistage launch vehicle that would accelerate the spacecraft at least to escape velocity,  $V_{\text{esc}}$ , so that it can depart the Earth and travel through interplanetary space. This necessary velocity can actually be calculated quite easily simply by setting the kinetic energy of the vehicle equal to its potential energy, as discussed above:

$$\frac{1}{2}mV^2 = \frac{GMm}{r} \quad (8.67) \quad \underline{\text{page 691}}$$

Solving for  $V$  from this equation, we obtain  $V_{\text{esc}}$ :

$$V_{\text{esc}} = \sqrt{2 \frac{GM}{r}} = \sqrt{2 \frac{\mu}{r}} \quad (8.68)$$

Note that this velocity is independent of the mass of the spacecraft itself, and in fact only depends on the gravitational constant of the planet from which it is escaping, and the initial distance,  $r$ , away from that planet. It makes sense that the further away from the planet you are initially, the lower the velocity you need to escape. Achieving exactly this velocity would put the spacecraft on a parabolic trajectory away from the Earth, while any velocity greater than this would result in a hyperbolic trajectory.

Consider now the case of a spacecraft designed to orbit the Earth at a constant altitude, perhaps for the purpose of obtaining precise

meteorological data on cloud heights, for example. This would necessitate a circular orbit, and the required velocity can be determined simply by setting the eccentricity  $e$  equal to zero in Eq. (8.65) for  $H$ :

$$H = -\frac{1}{2}m \frac{\mu}{p}(1 - e^2) = -\frac{1}{2}m \frac{\mu}{p} \quad (8.69)$$

Notice that for a circular orbit, the orbit equation, Eq. (8.44), just becomes  $r = p$  when a value of  $e = 0$  is used. In other words, it is a statement that the orbital radius is constant and equal in value to the parameter  $p$ . But  $H$  is also, by definition, the difference between kinetic energy and potential energy:

$$H = \frac{1}{2}mV^2 - \frac{GMm}{r} = \frac{1}{2}mV^2 - \frac{\mu m}{r} \quad (8.70)$$

Equating these two expressions and recognizing again that  $GM = \mu$ , we can solve for  $V_{\text{circ}}$ :

$$V_{\text{circ}} = \sqrt{\frac{\mu}{r}} \quad (8.71)$$

This expression clearly shows that circular orbit velocity is less than escape velocity, which certainly makes sense, and the difference is exactly a factor of  $(1/\sqrt{2})$ . If a spacecraft is in a circular orbit around the earth and it quickly increases its velocity by firing its engine, that velocity change will alter the orbit to an ellipse with the apogee further and further away until, as  $V_{\text{esc}}$  is achieved, the apogee distance goes to infinity.

### EXAMPLE 8.8

Determine the necessary circular orbit velocity and orbital radius for a spacecraft to orbit the earth in exactly 24 hours. This is called geosynchronous orbit. Determine also how much additional velocity would be required to escape from this orbit.

#### ■ Solution

[page 692](#)

First, it is important to recognize that a spacecraft in circular orbit has a constant velocity throughout its orbit, so we can write that velocity as the circumference of the circle divided by the period of the orbit:

$$V_{\text{circ}} = \frac{2\pi R_{\text{geo}}}{\tau_{\text{geo}}}$$

We can set this equal to the expression derived above for circular orbit velocity, Eq. (8.71):

$$V_{\text{circ}} = \sqrt{\frac{\mu}{R_{\text{geo}}}} = \frac{2\pi R_{\text{geo}}}{\tau_{\text{geo}}}$$

Solving for  $R_{\text{geo}}$  from this last equality, we find

$$R_{\text{geo}} = \sqrt[3]{\frac{\mu}{4\pi^2} \tau_{\text{geo}}^2} = \sqrt[3]{\frac{3.986 \times 10^5}{4\pi^2} (24 \times 3600)^2} = 42,200 \text{ km}$$

*Note:* Alternately, we could have used Kepler's third law, as discussed in Sec. 8.5.3, relating the orbital period to the semimajor axis of the orbit, which in this case is the radius, and we would have found the same expression for  $R_{\text{geo}}$ .

Given this value of  $R_{\text{geo}}$ , the velocity of the spacecraft can now be calculated:

$$V_{\text{circ}} = \sqrt{\frac{\mu}{R_{\text{geo}}}} = \sqrt{\frac{3.986 \times 10^5}{42,200}} = 3.07 \text{ km/s}$$

At this orbital distance, escape velocity would be

$$V_{\text{esc}} = \sqrt{\frac{2\mu}{R_{\text{geo}}}} = \sqrt{\frac{2(3.986 \times 10^5)}{42,200}} = 4.35 \text{ km/s}$$

To get on an escape trajectory, the spacecraft would therefore have to make up the difference between these two velocities:

$$\text{Velocity difference} = \Delta V = 4.35 - 3.07 = 1.28 \text{ km/s}$$


---

In both cases discussed above, the goal is for the velocity at burnout of the last stage of the launch vehicle to be exactly the required orbital velocity; to ensure this, many spacecraft have on-board thrusters to make at least small velocity corrections after delivery on orbit. Reality is actually a bit more complicated, though, because the direction of the velocity vector at burnout is just as important as the magnitude. For example, the velocity

vector has to be perpendicular to the radius vector and have exactly the right magnitude ( $\sqrt{\mu/r}$ ) in order to continue in a stable circular orbit. Otherwise, the orbit will be elliptical, and the orbital parameters ( $p$ ,  $e$ , and a possible angular offset,  $\phi$ ) can be determined from knowledge of the actual velocity magnitude and direction. Example 8.9 to follow will illustrate this technique using the more general formulation of the orbit equation, Eq. (8.43) as derived in Sec. 8.4, and reproduced here:

$$r = \frac{h^2/k^2}{1 + c(h^2/k^2)\cos(\theta - \phi)} \quad (8.43) \quad \text{page 693}$$

### EXAMPLE 8.9

---

At the end of the launch sequence for a low earth orbit spacecraft, the burnout velocity is 9 km/s in a direction due north and  $3^\circ$  above the local horizontal. The altitude above sea level is 800 km. The burnout point is located at the 27th parallel ( $27^\circ$ ) above the equator. Calculate and plot the resulting trajectory of the spacecraft.

#### ■ Solution


The burnout conditions are sketched in Fig. 8.11.

The distance from the center of the earth to the burnout point, i.e., the orbital radius, is:

$$r_b = R_{\text{Earth}} + \text{altitude} = 6400 + 800 = 7200 \text{ km} = 7.2 \times 10^6 \text{ m}$$

To calculate the parameter of the orbit, we first determine the angular momentum  $h$ :

$$h = r^2\dot{\theta} = r(r\dot{\theta}) = rV_a$$

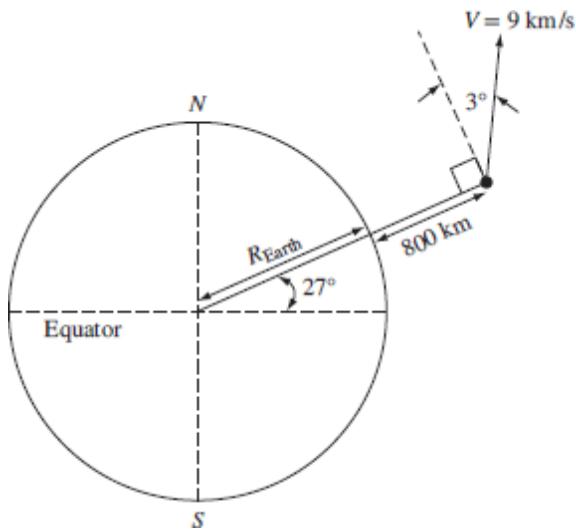

**Figure 8.11** Diagram of burnout conditions for spacecraft of Example 8.9.

(Source: *Shikha Redhal.*)

where  $V_\theta$  is the velocity component perpendicular to the radius vector  $r$ .  
Thus

$$h = rV_\theta = r_b V \cos \gamma_b = (7.2 \times 10^6)(9000) \cos 3^\circ = 6.47 \times 10^{10} \text{ m}^2/\text{s}$$

page 694

and

$$h^2 = 4.188 \times 10^{21} \frac{\text{m}^4}{\text{s}^2}$$

$$\text{Hence } p = \frac{h^2}{k^2} = \frac{h^2}{\mu} = \frac{4.188 \times 10^{21}}{3.986 \times 10^{14}} = 1.05 \times 10^7 \text{ m} = 10,500 \text{ km}$$

The trajectory equation is given by Eq. (8.43), where the above value of  $p$  is the numerator of the right side. To proceed further, we need to determine  $[c(h^2/k^2)]$  which is the eccentricity  $e$ . This can be obtained from Eq. (8.66) derived above:

$$e = \sqrt{1 + \frac{2p}{m\mu} H}$$

where  $H/m = (T - U)/m = T/m - U/m$ , and

$$\frac{T}{m} = \frac{V^2}{2} = \frac{9000^2}{2} = 4.05 \times 10^7 \frac{\text{m}^2}{\text{s}^2}$$

$$\frac{U}{m} = \frac{GM}{r_b} = \frac{\mu}{r_b} = \frac{3.986 \times 10^{14}}{7.2 \times 10^6} = 5.54 \times 10^7 \frac{\text{m}^2}{\text{s}^2}$$

Hence  $\frac{H}{m} = (4.05 - 5.54) \times 10^7 = -1.49 \times 10^7 \frac{\text{m}^2}{\text{s}^2}$

Thus  $e = \sqrt{1 + \frac{2pH}{\mu m}} = \sqrt{1 + \frac{2(1.05 \times 10^7)}{3.986 \times 10^{14}}(-1.49 \times 10^7)} = 0.464$

Immediately, we recognize that the trajectory is an elliptical orbit because  $e < 1$  and  $H < 0$ . From Eq. (8.43), we can now write

$$r = \frac{p}{1 + e \cos(\theta - \phi)} = \frac{1.05 \times 10^7}{1 + 0.464 \cos(\theta - \phi)}$$

To find the phase angle  $\phi$ , we simply substitute the burnout location,  $r_b$  at  $\theta = 0^\circ$ , into the preceding equation. Note that  $\theta = 0^\circ$  at burnout in this version of the orbit equation and hence  $\theta$  is measured relative to the radius vector at burnout, with increasing  $\theta$  taken in the direction of motion. This is sketched in Fig. 8.12 shown below.


$$r_b = 7.2 \times 10^6 = \frac{1.05 \times 10^7}{1 + 0.464 \cos(-\phi)}$$

Solving for  $\phi$ , we find that  $\cos(-\phi) = 0.988$  so  $\phi = -8.96^\circ$ .

The complete equation for this elliptical orbit is thus:

$$r = \frac{1.05 \times 10^7}{1 + 0.464 \cos(\theta + 8.96^\circ)} \quad \text{where } \theta \text{ is in degrees and } r \text{ is in meters.}$$

This orbit is now fully defined, and it is drawn in Fig. 8.12. Note that  $b$  designates the burnout point, which is  $27^\circ$  above the equator. The  $x$  axis is the axis of symmetry for the ellipse, and the  $y$  axis is an orthogonal axis through the central body, the Earth, at the focus of the ellipse. The phase angle  $\phi$  orients the  $x$  axis at  $8.96^\circ$  below (because  $\phi$  is negative) the radius through point  $b$ . The angle  $\theta$  is measured relative to this radius through  $b$  with positive  $\theta$  in the counterclockwise direction indicating the direction of travel of the spacecraft.

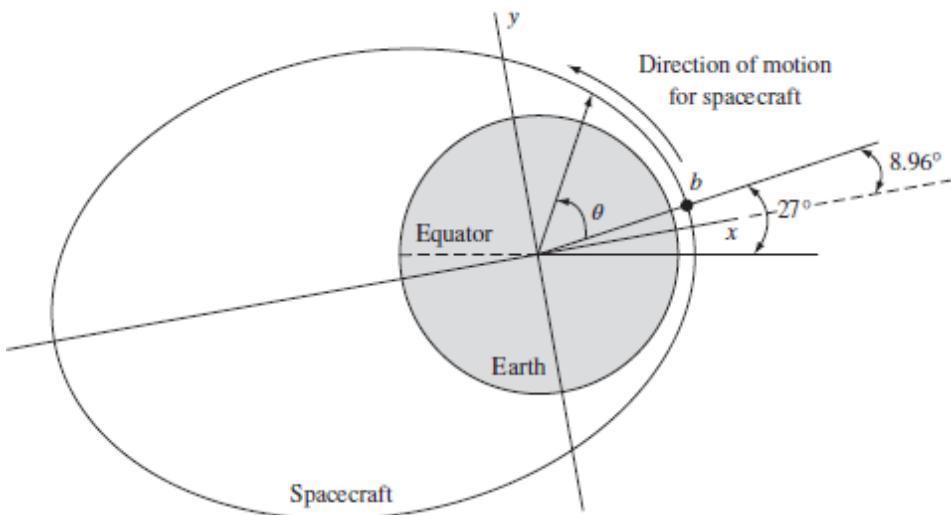

**Figure 8.12** Spacecraft orbit determined for Example 8.9.

(Source: *Shikha Redhal.*)

---

### 8.6.4 The Vis-Viva Equation

Perhaps the most important characteristic of an object moving through space, at least in terms of trajectory determination, is its velocity, a quantity closely related to its total energy. In this section, we will derive the *vis-viva equation* which provides a simple means of calculating velocity anywhere along a trajectory, knowing only the distance from the central body and the shape of the orbit. The name of this equation comes from the Latin words “vis” meaning “force” and “viva” meaning “live,” so named because the equation quantifies the motion of a body presumably being acted on by “live forces” moving it. These forces were considered fundamentally different from “vis mortua,” “dead forces” that when acting on a body would produce no active work but only pressure, such as “dead weight,” a term that is still in use today. We now know, of course, that the force that moves the planets through the sky is exactly the same as that which produces dead weight, and that force is gravity. Nevertheless, the name of the equation remains.

Remember first that the total energy of a body in a central gravitational field is the sum of its kinetic and potential energies as discussed above, and this total energy is  $H$ :

$$H = T + U = \frac{1}{2}mv^2 - \frac{GMm}{r} \quad (8.72)$$

Let us now define the *specific energy*,  $E_t$ , which is the total energy per unit mass,  $H/m$ :

$$E_t = \frac{H}{m} = \frac{1}{2} V^2 - \frac{GM}{r} = \frac{1}{2} V^2 - \frac{\mu}{r} \quad (8.73)$$

For motion in a central force field,  $E_t$  is constant and has the same sign as  $H$  used previously. Thus, the following statements are true:

- if  $E_t < 0$ , the orbit is an ellipse (or a circle);
- if  $E_t = 0$ , the orbit is a parabola;
- if  $E_t > 0$ , the orbit is a hyperbola.

One of the more surprising aspects of spacecraft motion along a *conic section* is that the specific energy  $E_t$  is fully defined by the semimajor axis of the orbital path. To prove this, recall Eq. (8.65) written in terms of specific energy,  $E_t = H/m$ :

$$E_t = -\frac{1}{2} \frac{\mu}{p} (1 - e^2) \quad (8.74) \quad \text{page 696}$$

And from Sec. 8.5, Eq. (8.48) stated:

$$a = \frac{p}{1 - e^2}$$

Inverting this expression and substituting it in Eq. (8.74) yields:

$$E_t = -\frac{1}{2} \frac{\mu}{a} \quad (8.75)$$

This result shows that the semimajor axis  $a$  is an exclusive measure of the specific energy of the orbiting body.

Equating these two expressions for  $E_t$ , Eq. (8.73) and Eq. (8.75), we have

$$\frac{1}{2} V^2 - \frac{\mu}{r} = -\frac{1}{2} \frac{\mu}{a}$$

or

$$V^2 = \mu \left( \frac{2}{r} - \frac{1}{a} \right)$$

or

$$v = \sqrt{\mu \left( \frac{2}{r} - \frac{1}{a} \right)} \quad (8.76)$$

This is the *vis-viva equation* or the energy equation. When an orbiting body is at a location specified by  $r$  on a given orbital trajectory, the magnitude of the velocity can be calculated directly at that location—and this tremendously useful result applies to all four types of orbits.

In order to apply this formula, the semimajor axis  $a$  must be known. In all cases,  $a$  is the distance from the center of the conic section to the periapsis point. For a circular orbit,  $a$  is simply the radius. For an elliptical orbit,  $a$  can be calculated a number of ways, knowing the eccentricity and parameter of the orbit, or knowing the periapsis and apoapsis radii, for example. The semimajor axis for a parabola is infinite, which may seem like a problem but actually results in a finite and correct expression in Eq. (8.76) above. Finally, for the hyperbolic orbit, there are actually two mirror-image hyperbolas, and the center lies between them, as shown in Fig. 8.9, such that the distance from the center to the periapsis is negative.

---

page 697

## EXAMPLE 8.10

---

Consider the orbit determined in Example 8.9 above. Calculate the spacecraft's velocity at (a) perigee and apogee and (b) a true anomaly of  $120^\circ$ .

### ■ Solution

(a) The perigee and apogee radii can be determined using Eqs. (8.45) and (8.46), and knowing the eccentricity ( $e = 0.464$ ) and parameter ( $p = 1.05 \times 10^7$  m) of the orbit:

$$\text{perigee } r_{\min} = \frac{p}{1 + e} = \frac{1.05 \times 10^7}{1 + 0.464} = 7.17 \times 10^6 \text{ m}$$

$$\text{apogee } r_{\max} = \frac{p}{1 - e} = \frac{1.05 \times 10^7}{1 - 0.464} = 19.6 \times 10^6 \text{ m}$$

The semimajor axis of the elliptical orbit is then

$$a = \frac{1}{2}(r_{\min} + r_{\max}) = 13.4 \times 10^6 \text{ m}$$

We can now calculate the perigee and apogee velocities using the vis-viva Equation (8.76):

$$v_p = \sqrt{\mu \left( \frac{2}{r_{\min}} - \frac{1}{a} \right)} = \sqrt{3.986 \times 10^{14} \left( \frac{2}{7.17 \times 10^6} - \frac{1}{13.4 \times 10^6} \right)} = 9.03 \text{ km/s}$$

$$v_a = \sqrt{\mu \left( \frac{2}{r_{\max}} - \frac{1}{a} \right)} = \sqrt{3.986 \times 10^{14} \left( \frac{2}{19.6 \times 10^6} - \frac{1}{13.4 \times 10^6} \right)} = 3.29 \text{ km/s}$$

(b) Recall that the true anomaly, by definition, is the angle between the radius to the spacecraft and the major axis of the ellipse. Since we know  $p$  and  $e$  for this orbit, we can calculate the orbital radius at a true anomaly of  $\theta = 120^\circ$  using the orbit equation:

$$r = \frac{p}{1 + e \cos \theta} = \frac{1.05 \times 10^7}{1 + 0.464 \cos(120^\circ)} = 13.7 \times 10^6 \text{ m}$$

and now use the vis-viva equation to determine velocity at this point in the orbit:

$$v = \sqrt{\mu \left( \frac{2}{r} - \frac{1}{a} \right)} = \sqrt{3.986 \times 10^{14} \left( \frac{2}{13.7 \times 10^6} - \frac{1}{13.4 \times 10^6} \right)} = 5.34 \text{ km/s}$$

This seems reasonable since it is a velocity that is between the minimum velocity at apogee and the maximum velocity at perigee, and at  $\theta = 120^\circ$ , it is closer to the apogee velocity (at  $\theta = 180^\circ$ ) than to the perigee velocity (at  $\theta = 0^\circ$ ).

---

### EXAMPLE 8.11

Suppose the spacecraft discussed in the last couple examples is [page 698](#) actually an interplanetary probe that after orbiting the Earth a few times to deploy antennas and solar arrays and check out all systems, now must be inserted into a hyperbolic escape orbit to head toward the outer solar system. An upper stage motor will be fired to achieve this new orbit when the spacecraft is at a true anomaly of  $120^\circ$ , and the hyperbolic orbit is defined by a value of  $a = -11,500$  km. How much change in velocity is necessary for the spacecraft to achieve its new orbit?

#### ■ Solution

From Example 8.10 above, we know that the spacecraft will be starting the insertion burn traveling at an initial velocity of 5.34 km/s at  $\theta = 120^\circ$ .

The final velocity that the spacecraft needs to achieve at the end of the burn can be calculated using the vis-viva equation with the same orbital radius  $r$  but changing the value of  $a$  to be that for the desired hyperbolic orbit:

$$v = \sqrt{\mu \left( \frac{2}{r} - \frac{1}{a} \right)} = \sqrt{3.986 \times 10^{14} \left( \frac{2}{13.7 \times 10^6} - \frac{1}{(-11.5 \times 10^6)} \right)} = 9.63 \text{ km/s}$$

The necessary change in velocity that the upper stage has to produce is therefore

$$\Delta V = v_{\text{final}} - v_{\text{initial}} = 9.63 - 5.34 = 4.39 \text{ km/s}$$

Note that to do this calculation, we have assumed that the entire burn is done at  $r = 13.7 \times 10^6$  m; in other words, the change in velocity is instantaneous. This is generally a good assumption.


---

## 8.7 ORBITAL MANEUVERING

Travel in space generally requires piecing together a series of orbital trajectories, each segment of which is a section of one of the orbits that we have discussed in the previous parts of this chapter. Orbital maneuvering is the process of transferring from one trajectory segment to the next; in all cases a change in velocity is needed to accomplish this transfer. It is critical for mission planning to be able to calculate well ahead of time exactly how much change in velocity is needed for each maneuver, because every change in velocity requires expending some amount of fuel, and all necessary fuel must be loaded and launched with the spacecraft, at least at this current time. When there are fuel depots in orbit where a spacecraft can refuel, this may become less critical but for the moment, there are no gas stations in space.

The “cost” of every maneuver is therefore measured in terms of how much change in velocity, often referred to as “delta- $V$ ” (or  $\Delta V$ ), is needed. This section will discuss the process and necessary  $\Delta V$  to accomplish two types of maneuvers: a transfer between two coplanar orbits, and a change of inclination of an orbit (a plane change). While these are both very useful

orbital maneuvers, we are only touching the surface of the complexity and variety of types of maneuvers that can be performed in space.

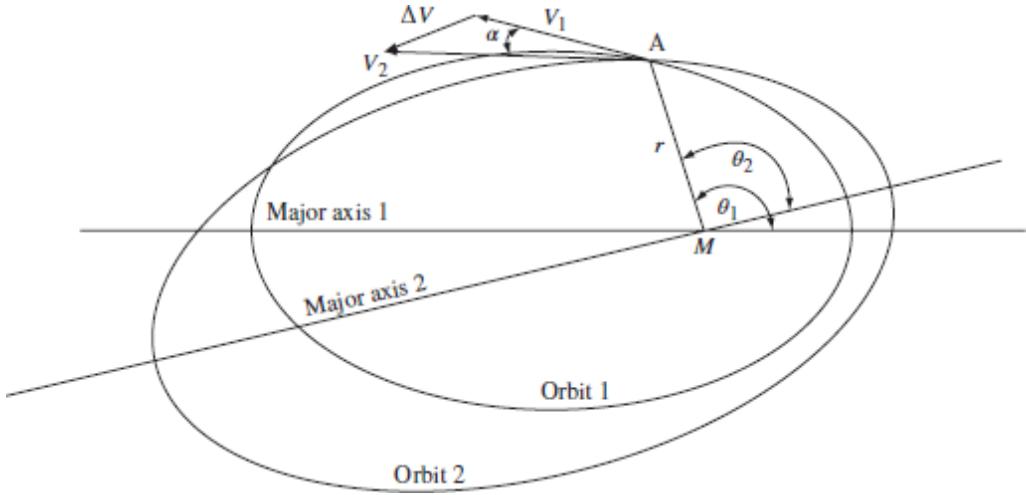

**Figure 8.13** Diagram of a coplanar orbital transfer between two intersecting orbits.

(Source: *Shikha Redhal.*)

### 8.7.1 Coplanar Orbital Maneuvers and the Hohmann Transfer

Consider a spacecraft in a given initial elliptical orbit, labeled orbit [page 699](#) 1 in Fig. 8.13, with a major axis as shown. The goal is to put this spacecraft on a new orbital path, labeled orbit 2 and defined by major axis 2. The two orbits intersect at Point A, so it is at this point that the orbit change maneuver will occur when the spacecraft fires its maneuvering engine and produces the necessary  $\Delta V$ . Conceptually the process is quite simple: if the spacecraft comes into Point A with an initial velocity vector  $\mathbf{V}_1$ , tangent to orbit 1, it must change to a new velocity  $\mathbf{V}_2$ , tangent to orbit 2 at this same point. We are making the assumption that the velocity change can occur instantaneously by applying a single impulsive  $\Delta \mathbf{V}$  at that point. Writing this in terms of vectors:

$$\Delta \mathbf{V} = \mathbf{V}_2 - \mathbf{V}_1 \quad (8.77)$$

If we now assume that the angle between the two velocity vectors (i.e., between the tangents to the two orbits at Point A) is  $\alpha$ , we can write the following scalar equation using the law of cosines:

$$(\Delta V)^2 = V_1^2 + V_2^2 - 2V_1 V_2 \cos \alpha \quad (8.78)$$

To fully determine this maneuver, one would need to know all the characteristics of the initial orbit and all the characteristics of the final orbit (especially, for example, their semimajor axes,  $a_1$  and  $a_2$ ), as well as the exact location of the point of intersection A. If we knew all this, it would be quite straightforward to calculate the magnitudes of the two velocity vectors, using the vis-viva equation:

$$v_i = \sqrt{\mu \left( \frac{2}{r} - \frac{1}{a_i} \right)} \quad (8.79)$$

Note that  $r$  is the distance from the central body to the point of intersection A, and is thus the same whether you are calculating  $V_1$  or  $V_2$ —the only difference in this formula is the magnitude of  $a_i$ .

The more difficult part of evaluating the expression for  $\Delta V$  shown in Eq. (8.78) is figuring out  $\alpha$ , the angle between the two velocity vectors. Rest assured that if the semimajor axis and eccentricity of both the initial and final orbits are known,  $\alpha$  can be determined, with a bit of work, as the difference between the flight path angles of the two orbits at Point A. However, let us assume for this discussion that  $\alpha = 0^\circ$ , which physically means that the two orbits are tangent to each other at the point of intersection. While this will not generally be the case in real-world applications, it is a situation that arises often enough to be quite useful and it certainly simplifies the calculation.

The assumption that  $\alpha = 0^\circ$  results in a much simpler expression for  $\Delta V$ :

$$\Delta V = V_2 - V_1 \quad \text{or} \quad \Delta V = V_{\text{Final}} - V_{\text{Initial}} \quad (8.88)$$

Notice, though, that not only is this expression simpler, it is also a minimum value for  $\Delta V$ : for any value of  $\alpha$  different than  $0^\circ$ , the resulting value for  $\Delta V$  is larger. Another way of interpreting this fact then is to recognize that to minimize the  $\Delta V$  necessary to accomplish an orbital transfer, the maneuver should ideally be performed where the two orbits are tangent. This is not an unusual occurrence, for example, if one were to transfer from a circular orbit to an elliptical orbit at either the periapsis or apoapsis of the elliptical orbit. Example 8.12 illustrates a situation where a satellite is inserted into an elliptical orbit at its perigee.

### EXAMPLE 8.12

A scientific satellite designed to monitor sea level rise is launched into a circular orbit at 250 km altitude above sea level. Unfortunately, due to a software glitch, the third stage motor fires for an additional few seconds longer than it should to achieve circularization. This results in a  $\Delta V$  of 150 m/s over and above the velocity needed for circular orbit at 250 km altitude. Determine how non-circular the resulting orbit is (i.e., determine the eccentricity of the elliptical orbit), and calculate how much higher the apogee of the orbit is compared to the desired circular orbit.

## ■ Solution

The desired circular orbit is at  $r_p = R_{\text{Earth}} + 250 \text{ km} = 6650 \text{ km}$ . The elliptical orbit is the one that results from firing the motor too long, which would accelerate the spacecraft tangent to the circular orbit and in its direction of flight (so  $\alpha = 0^\circ$ ). Notice that no matter where along this circular orbit  $\Delta V$  occurs, that point automatically becomes the perigee of the elliptical orbit.


To determine the eccentricity of the elliptical orbit, let us first calculate  $V_1$  and  $V_2$ .

$$V_1 = \sqrt{\frac{\mu}{r}} = \sqrt{\frac{3.986 \times 10^{14}}{6.65 \times 10^6}} = 7740 \text{ m/s}$$

and       $V_2 = V_1 + 150 = 7890 \text{ m/s}$

The vis-viva equation, Eq. (8.76), can now be used to determine  $a$ , the semimajor axis of the elliptical orbit:

$$v = \sqrt{\mu \left( \frac{2}{r} - \frac{1}{a} \right)}$$

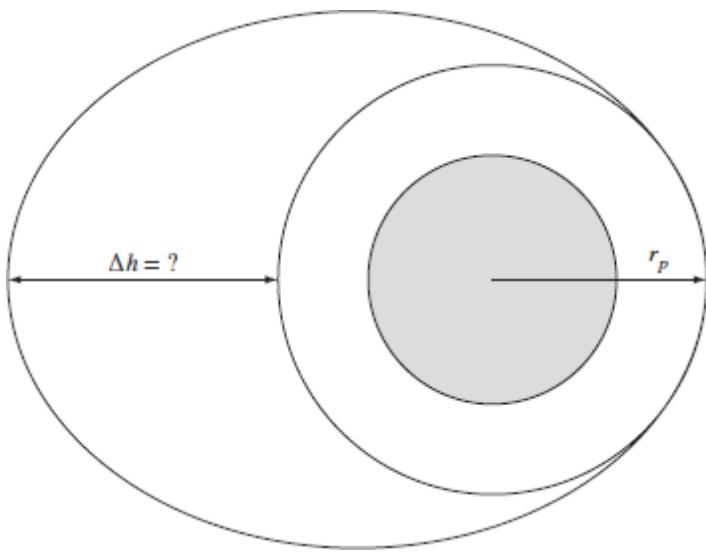

**Figure 8.14** Diagram of problem statement for Example 8.12.

(Source: *Shikha Redhal.*)

So

$$a = \left( \frac{2}{r} - \frac{v^2}{\mu} \right)^{-1} = \left( \frac{2}{6.65 \times 10^6} - \frac{7890^2}{3.986 \times 10^{14}} \right)^{-1} = 6.917 \times 10^6 \text{ m} = 6917 \text{ km}$$

Knowing the periapsis distance  $r$ , and the semimajor axis  $a$ , we can determine the eccentricity  $e$ :

$$\begin{aligned} r_p &= r_{\min} = r = a(1 - e) \\ \text{so} \quad e &= 1 - \frac{r}{a} = 1 - \frac{6.65 \times 10^6}{6.917 \times 10^6} = 0.038 \end{aligned}$$

Thus, while this is clearly a non-circular orbit (for which  $e$  would [page 701](#) be 0), it is still a low eccentricity orbit. To obtain a better physical understanding of how non-circular this orbit is, let us also calculate the apogee radius and compare it to the desired circular radius:


$$r_{\max} = a(1 + e) = (6.917 \times 10^6)(1 + 0.038) = 7.18 \times 10^6 \text{ m} = 7180 \text{ km}$$

$$\text{or} \quad \Delta r = 7180 - 6650 = 530 \text{ km}$$

So while the eccentricity of the orbit is quite small, the satellite may be higher than its desired location by as much as 530 km, which is quite significant for a spacecraft nominally in a 250 km altitude orbit. The operational requirements for this scientific satellite would determine

whether this much eccentricity and variation in orbital altitude is a problem for the mission or not, but clearly the takeaway is that  $\Delta V$  requirements must be precisely determined and executed because even seemingly small inaccuracies can lead to large offsets in location.

---

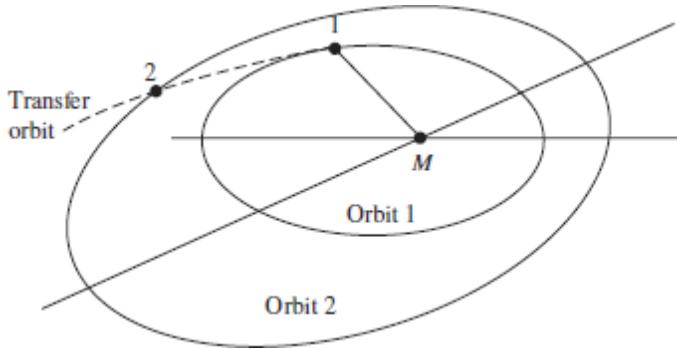


**Figure 8.15** Diagram of a coplanar orbital transfer between two non-intersecting orbits.

The above discussion addressed the transfer between two page 702 intersecting orbits (and, in fact, further specialized that the two orbits shall be tangent at their point of intersection). Let us now consider the necessary maneuvers that would need to be executed to transfer from an orbit to another non-intersecting orbit, as illustrated in Fig. 8.15. In this figure, we are again considering a transfer from one elliptical orbit to another elliptical orbit, but not only is there no point of tangency, there is actually no point of intersection at all. So the procedure would require identifying a transfer trajectory shown notionally as the dotted path from point 1 to point 2. To follow this path would require first an impulsive change in velocity,  $\Delta V_1$  at point 1, to get on the transfer trajectory, and then a second impulsive  $\Delta V_2$  at point 2, to get on orbit 2 instead of continuing along the transfer path. Note that  $\Delta V$ , which is the magnitude of the vector  $\Delta \mathbf{V}$ , is always a positive number regardless of the direction of that vector. So the total  $\Delta V$  is simply the sum of these two magnitudes,  $\Delta V_1 + \Delta V_2$ . To calculate the total fuel requirements for a mission, it is this sum of all necessary  $\Delta V$ 's that is used. The sign or direction of an impulsive thrust maneuver is determined by the orientation of the spacecraft during the burn, which can be precisely controlled. Thus to speed up, for example, the engine would be pointed

back along the flight path when firing, while to slow down, the vehicle would be rotated  $180^\circ$  so the engine can fire into the flight path direction.

Determining the two  $\Delta V$ 's for this generic transfer is beyond the scope of this textbook, and also does not necessarily represent a minimum required  $\Delta V$ . So, again both for simplicity and because we are trying to calculate a minimum  $\Delta V$ , let's consider the special case of transferring from one circular orbit to another coplanar circular orbit about the same central body. This minimum-energy maneuver is called a *Hohmann transfer* and has the following characteristics if the transfer is from a lower circular orbit (radius  $r_1$ ) to a higher circular orbit (radius  $r_2$ )—see Fig. 8.16:

- depart the first circular orbit tangentially at  $r_1$  (point 1);
- as soon as  $\Delta V_1$  is applied, this departure point becomes the periapsis of the elliptical transfer orbit;

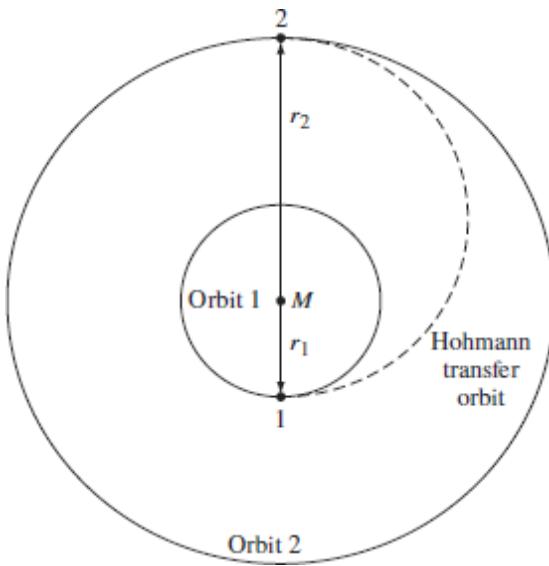

**Figure 8.16** Hohmann transfer from orbit 1 (at  $r_1$ ) to orbit 2 (at  $r_2$ ).

- coast for half a period on the elliptical orbit (dotted line) until apoapsis is reached at  $r_2$  (point 2);
- apply  $\Delta V_2$  at apoapsis to circularize orbit at  $r_2$ .

page 703

The total  $\Delta V$  can thus be calculated as the sum of  $\Delta V_1$  and  $\Delta V_2$ :

$$\Delta V_{\text{total}} = \Delta V_1 + \Delta V_2 \quad (8.81)$$

where

$$\Delta V_1 = V_p - V_1$$

and

$$\Delta V_2 = V_2 - V_a$$

All of these velocities are fairly straightforward to calculate using the formula for circular orbit velocity, Eq. (8.71):

$$V_i = \sqrt{\frac{\mu}{r_i}} \quad (8.82)$$

and the vis-viva equation, Eq. (8.76), for the velocities on the elliptical transfer orbit:

$$\text{at perigee: } V_p = \sqrt{\mu \left( \frac{2}{r_1} - \frac{1}{a} \right)} \quad (8.83)$$

$$\text{and at apogee: } V_a = \sqrt{\mu \left( \frac{2}{r_2} - \frac{1}{a} \right)} \quad (8.84)$$

In these latter two expressions, it is assumed that we know  $\mu$ , the gravitational constant GM for the central body, and  $a$ , the semimajor axis of the elliptical transfer orbit:

$$a = (r_1 + r_2)/2$$

Putting all this together, the total  $\Delta V$  for a Hohmann transfer is

$$\boxed{\Delta V = \Delta V_1 + \Delta V_2 = \left| \sqrt{\mu \left( \frac{2}{r_1} - \frac{1}{a} \right)} - \sqrt{\frac{\mu}{r_1}} \right| + \left| \sqrt{\frac{\mu}{r_2}} - \sqrt{\mu \left( \frac{2}{r_2} - \frac{1}{a} \right)} \right|} \quad (8.85)$$

Interestingly, both  $\Delta V_1$  and  $\Delta V_2$ , as calculated above, are positive and thus indicate that the spacecraft needs to be accelerated at point 1 and then again at point 2; yet, when all is done and the vehicle is traveling in its destination circular orbit at  $r_2$ , its final velocity  $V_2$  will be less than its starting velocity  $V_1$  (i.e.,  $V_2 < V_1$ ). This may seem surprising (or wrong), but there is actually a very simple explanation for why this is—we will leave it to the interested reader to ponder.

Note that a Hohmann transfer can also be used to maneuver [page 704](#) from a higher circular orbit to a lower one, but in this case both  $\Delta V$ 's will need to be applied to slow down the spacecraft at point 2 and then at point 1, rather than to accelerate it. Nevertheless, expression (8.85) above includes absolute value signs on each  $\Delta V$  calculation, resulting in a positive total  $\Delta V$  again.

Another nice feature of a Hohmann transfer is that it is quite easy to calculate the time it takes for a spacecraft to perform this maneuver, because the distance traveled along the elliptical transfer orbit is exactly half of a full elliptical orbit. As a result, the time required is half of the orbital period for the ellipse, which is as shown in Eq. (8.56):

$$\text{Transit time for Hohmann transfer} = \frac{1}{2}\tau = \frac{1}{2}\sqrt{\frac{4\pi^2}{\mu}a^3} = \pi\sqrt{\frac{1}{\mu}a^3} \quad (8.86)$$

### EXAMPLE 8.13

The Space Shuttle Orbiter is delivering a geosynchronous satellite to low earth orbit at an altitude of 200 km above sea level. Once in orbit, an upper stage will boost the satellite into geosynchronous circular orbit at an altitude of 35,700 km above sea level. If a Hohmann transfer is used, calculate the total  $\Delta V$  required from the upper stage. Also, determine how long this transfer trajectory will take.

#### ■ Solution

The initial circular orbit radius and velocity are:

$$r_1 = 6400 + 200 = 6600 \text{ km} = 6.6 \times 10^6 \text{ m}$$

and

$$V_1 = \sqrt{\frac{\mu}{r_1}} = \sqrt{\frac{3.986 \times 10^{14}}{6.6 \times 10^6}} = 7771 \text{ m/s}$$

The final circular orbit radius and velocity are

$$r_2 = 6400 + 35,700 = 42,100 \text{ km} = 4.21 \times 10^7 \text{ m}$$

and

$$V_2 = \sqrt{\frac{\mu}{r_2}} = \sqrt{\frac{3.986 \times 10^{14}}{4.21 \times 10^7}} = 3077 \text{ m/s}$$

The semimajor axis of the Hohmann transfer ellipse is simply

$$a = \frac{r_1 + r_2}{2} = \frac{6.6 \times 10^6 + 4.21 \times 10^7}{2} = 2.435 \times 10^7 \text{ m}$$

page 705

We now have everything we need to calculate the two  $\Delta V$ 's:

$$\Delta V_1 = \sqrt{\mu \left( \frac{2}{r_1} - \frac{1}{a} \right)} - V_1 = \sqrt{3.986 \times 10^{14} \left( \frac{2}{6.6 \times 10^6} - \frac{1}{2.435 \times 10^7} \right)} - 7771$$

or  $\Delta V_1 = 10,220 - 7771 = 2448 \text{ m/s}$

Similarly for  $\Delta V_2$ :

$$\Delta V_2 = V_2 - \sqrt{\mu \left( \frac{2}{r_2} - \frac{1}{a} \right)} = 3077 - \sqrt{3.986 \times 10^{14} \left( \frac{2}{4.21 \times 10^7} - \frac{1}{2.435 \times 10^7} \right)}$$

or  $\Delta V_2 = 3077 - 1602 = 1475 \text{ m/s}$

The total impulse required for the Hohmann is therefore

$$\Delta V = \Delta V_1 + \Delta V_2 = 2448 + 1475 = 3923 \text{ m/s}$$

The time it takes for the spacecraft to travel from low earth orbit to geosynchronous is found as half the period of the elliptical orbit:

$$\frac{1}{2}\tau = \sqrt{\frac{\pi^2}{\mu} a^3} = \sqrt{\frac{\pi^2}{3.986 \times 10^{14}} (2.435 \times 10^7)^3} = 18,907 \text{ s} = 5.25 \text{ hr}$$


---


### 8.7.2 Plane Change Maneuver

Spacecraft are most easily launched due east into an orbital plane that is at the same inclination as the latitude of the launch site: eastward, because this takes maximum advantage of the eastward rotational velocity of the Earth; and inclination equal to the latitude of the launch site because the orbital plane has to include both the center of the earth and the launch site itself. Any launch azimuth other than due east results in an orbit with a higher inclination than the launch site latitude. The higher the inclination, the smaller the benefit of the Earth's rotation, so launching to a higher inclination requires more energy and results in smaller payloads. But, without a specific plane change maneuver, nothing can be launched into an orbital inclination lower than the latitude of the launch site.

For example, when the United States first started collaborating with Russia on building the International Space Station (ISS), one of the early discussions was the question of what the orbital inclination of the ISS should be. Payloads launched from Kennedy Space Center at Cape Canaveral, Florida, are maximized if they go into an orbit at a  $28.5^\circ$  inclination, matching the latitude of Cape Canaveral. From Baikonur,

Kazakhstan, the Russian launch site, payloads must be launched into a high inclination orbit at  $51.6^\circ$  or higher; nothing launched from there could be inserted into a lower inclination orbit directly. Thus, the decision was made to put ISS at an orbital inclination of  $51.6^\circ$ , so that both nations could launch components, supplies and crew, although the U.S. payload sizes would be reduced due to the higher inclination launches.

page 706

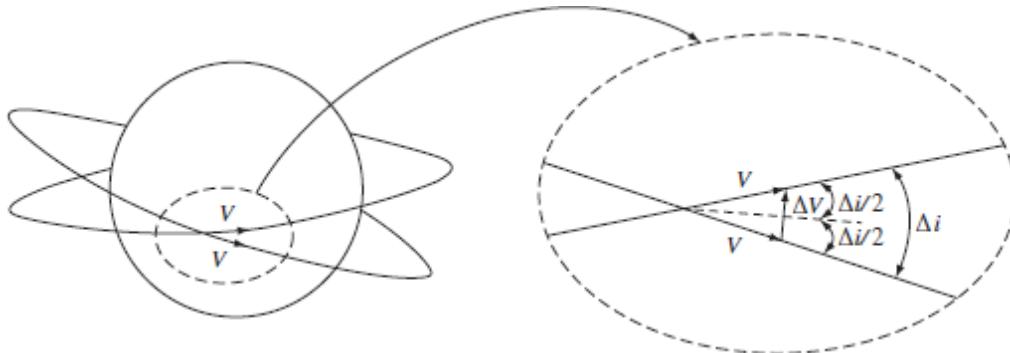

**Figure 8.17** Diagram of circular orbit inclination change.

(Source: Shikha Redhal.)

To determine the  $\Delta V$  necessary for a plane change maneuver, first consider the case of a spacecraft in a circular orbit that needs to transfer to an identical circular orbit but at a different inclination, where the change in inclination is an angle  $\Delta i$ . Independent of where along the orbit the impulse  $\Delta V$  is applied, the geometry of this situation is as shown in Fig. 8.17. Notice that the magnitude of the velocity is the same at Point A whether you are on orbit 1 or orbit 2, because the two orbits have the same orbital radius and thus the same velocity. The direction of the two velocity vectors is different, of course, and the difference is the vector  $\Delta V$ . Notice that if you split the angle  $\Delta i$  into two half angles  $\Delta i/2$ , as shown by the dotted line, and consider one of the two triangles thus formed, you can easily write the following expression:

$$\frac{\Delta V}{2} = V \sin\left(\frac{\Delta i}{2}\right) \quad \text{or} \quad \Delta V = 2V \sin\left(\frac{\Delta i}{2}\right) \quad (8.87)$$

This expression, which was obtained for circular orbits, has to be slightly modified in order to calculate the  $\Delta V$  necessary to transfer from an elliptical orbit to an identical elliptical orbit at a different inclination:

$$\boxed{\Delta V = 2V_\theta \sin\left(\frac{\Delta i}{2}\right)} \quad \text{where } V_\theta = \text{component of } V \text{ perpendicular to } r \text{ vector} \quad (8.88)$$

The qualitative reason for this modification is that the angular momentum,  $h$ , of the orbit only depends on the component of orbital velocity in the  $\theta$  direction ( $h = rV_\theta$ ), and when the orbital inclination is changed, it is actually the momentum vector  $\mathbf{h}$  that must be rotated.

One clear result of this boxed expression is that in order to minimize the  $\Delta V$  necessary to perform a plane change maneuver, the impulse should be applied at the point along the orbit where  $V_\theta$  is minimum. For a circular orbit,  $V_\theta = V$  throughout the orbit so it does not matter where a plane change maneuver is executed. For an elliptical orbit, however, the velocity changes dramatically from periapsis to apoapsis, and  $V_\theta$  is at a minimum at apoapsis. Because the  $\Delta V$  for a plane change maneuver tends to be substantial, and this is minimized at apoapsis, that is routinely where the maneuver is performed.

[page 707](#)

### EXAMPLE 8.14

A satellite launched from Cape Canaveral (at  $28^\circ$  latitude) is boosted to geosynchronous orbit first, and then moved to geostationary orbit (over the equator at  $0^\circ$ ). [Note: The difference in nomenclature is due to the fact that a geosynchronous satellite at some non-zero inclination will remain above a certain longitude as the Earth rotates but it will describe a repeating pattern in the sky over a 24-hour period, most often a figure-8. When that satellite is moved to geostationary orbit at  $0^\circ$ , it will instead stay fixed at a certain point in the sky.] How much  $\Delta V$  is required to achieve this change in inclination?

#### ■ Solution

The circular orbital velocity for a geosynchronous satellite is (as calculated for a different spacecraft in Example 8.13):

$$V = V_\theta = 3077 \text{ m/s}$$

and

$$\Delta i = 28^\circ$$

The  $\Delta V$  formula for this plane change can now be applied:

$$\Delta V = 2V_\theta \sin\left(\frac{\Delta i}{2}\right) = 2(3077) \sin\left(\frac{28}{2}\right) = 1490 \text{ m/s}$$

Note that while this is a fairly large number (almost half as much  $\Delta V$  as it took to get from LEO to GEO), it is still considerably less than the  $\Delta V$  that would have been required to change the orbital inclination in LEO (because  $V$  is so much greater in LEO).

### EXAMPLE 8.15

A planetary probe is launched into an elliptical orbit around the Earth with semimajor axis  $a = 16,000$  km, and apogee distance  $r_a = 24,000$  km. In order to study Pluto, the satellite will perform a plane change maneuver at apogee from  $28^\circ$  to  $17^\circ$ , and then accelerate to escape velocity. What total  $\Delta V$  is required for this?

#### ■ Solution

The initial orbital velocity of the satellite at apogee can be found using the vis-viva equation:

$$V_a = \sqrt{\mu\left(\frac{2}{r_a} - \frac{1}{a}\right)} = \sqrt{3.986 \times 10^{14} \left(\frac{2}{2.4 \times 10^7} - \frac{1}{1.6 \times 10^7}\right)} = 2881 \text{ m/s}$$

At apogee, the velocity vector is perpendicular to the radius vector, so  $V_a = V_\theta$  here. We can now calculate the necessary  $\Delta V$  for the plane change:

$$\Delta V_{\text{plane change}} = 2V_\theta \sin\left(\frac{\Delta i}{2}\right) = 2(2881) \sin\left(\frac{28 - 17}{2}\right) = 552 \text{ m/s}$$

After applying this  $\Delta V$  perpendicular to the direction of travel, the satellite is now traveling in an elliptical orbit at  $17^\circ$  inclination, but with the same velocity as on the previous elliptical orbit,  $V_a$ .

Escape velocity at this radial distance from the Earth is

[page 708](#)

$$V_{\text{esc}} = \sqrt{\frac{2\mu}{r_a}} = \sqrt{\frac{2(3.986 \times 10^{14})}{2.4 \times 10^7}} = 5763 \text{ m/s}$$

The  $\Delta V$  necessary to get to this velocity is therefore

$$\Delta V_{\text{escape}} = V_{\text{esc}} - V_a = 5763 - 2881 = 2882 \text{ m/s}$$

And the total  $\Delta V$  to first perform the plane change and then escape earth gravity is

$$\Delta V_{\text{Total}} = \Delta V_{\text{plane change}} + \Delta V_{\text{escape}} = 552 + 2882 = 3434 \text{ m/s}$$

Note that this is an overly conservative approximation of how much  $\Delta V$  would really be necessary to send a spacecraft on an escape trajectory at a different inclination, because the two maneuvers can actually be combined and initiated earlier with significantly less  $\Delta V$  than that calculated using the two-step process described above.

---

## 8.8 INTERPLANETARY TRAJECTORIES

The only way that a spacecraft launched from the earth can fly in interplanetary space is for it to achieve escape velocity, given by Eq. (8.68) and repeated here:

$$v = \sqrt{\frac{2k^2}{r}} \quad (8.68)$$


If the burnout velocity of the upper stage is exactly equal to the escape velocity, the spacecraft's trajectory will be a parabola; but for all other situations where the burnout velocity is larger than that given by Eq. (8.68), the trajectory will be a hyperbola. Almost all interplanetary space vehicles are initially launched in hyperbolic trajectories. In this section we are interested in the flight path taken by a space vehicle launched from the earth with a mission to visit one or more planets in the solar system. Because the initial trajectory after launch is hyperbolic, we need to pause and examine some of the features of a hyperbolic trajectory.

### 8.8.1 Hyperbolic Trajectories

The pertinent geometry of a hyperbola is drawn in Fig. 8.18. The periapsis radius,  $r_p$ , is as usual the distance of closest approach to the central body,  $M$ . The asymptotes are shown as dashed lines in Fig. 8.18; they intersect at the center,  $C$ . The semimajor axis of the hyperbola,  $a$ , is the distance from the center to the periapsis; note that unlike an ellipse,  $a$  is not contained within the concave region of the hyperbola and hence is treated as a negative value for a hyperbola. The velocity of a spacecraft moving along a

hyperbolic flight path is given by the vis-viva equation, Eq. (8.76) repeated here:

page 709

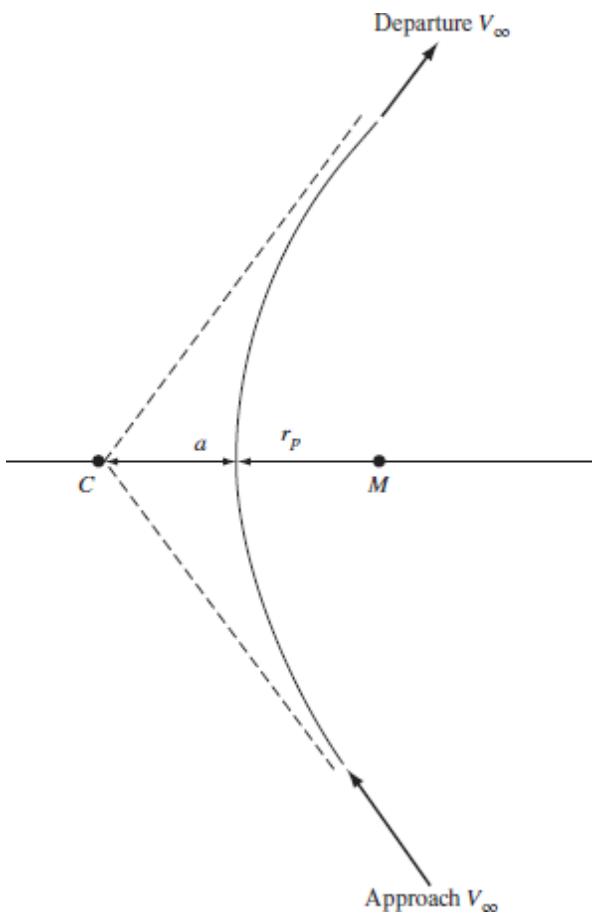

**Figure 8.18** Hyperbolic trajectory.

$$V = \sqrt{\frac{2k^2}{r} - \frac{k^2}{a}} \quad (8.76)$$

For a hyperbolic flight path,  $a$  is a negative number.

The threshold of an escape trajectory from a planet is a parabolic trajectory; for a parabola, the semimajor axis is infinite, and Eq. (8.76) becomes

$$V = \sqrt{\frac{2k^2}{r}} = V_{\text{esc}}$$

which is precisely the escape velocity defined by Eq. (8.68). Hence, in Eq. (8.76) the first term under the radical is the square of the escape velocity, and Eq. (8.76) can be written as

$$V = \sqrt{V_{\text{esc}}^2 - \frac{k^2}{a}} \quad (8.89)$$

Therefore, in Eq. (8.89) the term  $-k^2/a$  is associated with the excess energy of the spacecraft on a hyperbolic flight path above and beyond the energy that is just sufficient to escape from the planet. For escape from the earth, we introduce the velocity  $V_{\text{HE}}$ :

$$V_{\text{HE}}^2 = -\frac{k^2}{a} \quad (8.90) \quad \underline{\text{page 710}}$$

Here  $V_{\text{HE}}$  is the velocity *in excess* of the escape velocity and is called the *hyperbolic excess velocity*. With this definition, Eq. (8.76) can be written as

$$V = \sqrt{\frac{2k^2}{r} + V_{\text{HE}}^2} \quad (8.91)$$

Let  $r$  go to infinity in Eq. (8.91). The velocity at infinity is denoted by  $V_\infty$ . From Eq. (8.91),

$$V_\infty = V_{\text{HE}}$$

The terms  $V_\infty$  and  $V_{\text{HE}}$  are synonymous. For the case of a planet other than the earth,  $V_\infty$  is used for the hyperbolic excess velocity.  $V_\infty$  is illustrated in Fig. 8.18. At the bottom of Fig. 8.18,  $V_\infty$  is the approach velocity, and at the top of Fig. 8.18,  $V_\infty$  is the departure velocity. The magnitude of  $V_\infty$  is the same for approach and departure; however, the directions are different.

### EXAMPLE 8.16

The initial hyperbolic trajectory of the *Viking I* Mars Lander upon departure from the earth had a semimajor axis of  $-1.885 \times 10^4$  km. Calculate the hyperbolic excess velocity provided by the space vehicle's *Titan IIIE* launch vehicle.

#### ■ Solution

From Eq. (8.90),

$$V_{\text{HE}} = \sqrt{-\frac{k^2}{a}} = \sqrt{-\frac{3.986 \times 10^{14}}{(-1.885 \times 10^7)}} = \sqrt{2.115 \times 10^7}$$

$$V_{\text{HE}} = 4598 \text{ m/s} = 4.598 \text{ km/s}$$

Recall that escape velocity from the Earth is 11.2 km/s. To initiate the Lander's flight path to Mars, the *Titan* launch vehicle gave the Lander an extra boost of 4.598 km/s.

---

### 8.8.2 Sphere of Influence

The hyperbolic flight path discussed in Sec. 8.8.1 assumes that the space vehicle is moving under the gravitational attraction of a single planet. This is called the *two-body problem*, with motion of the spacecraft of mass  $m$  in the vicinity of the planet of mass  $M$  where the only force acting on the spacecraft is the gravitational force between  $m$  and  $M$ . The additional gravitational forces between the spacecraft and the sun, the moon, or other planets are neglected. This is a reasonable assumption as long as the spacecraft is within the *sphere of influence* of the planet of mass  $M$ . For space flight within our solar system, the gravitational attraction of the sun can play a major role. A conventional definition of the sphere of influence for a planet is the region where the gravitational force of the planet is greater than that of the sun. For example, the radius of the sphere of influence of the Earth is  $9.25 \times 10^5$  km; this is much larger than the radius of the Earth, which is  $6.4 \times 10^3$  km, but much smaller than the distances between the orbits of the planets, such as the distance of  $4.19 \times 10^7$  km between the orbits of the Earth and Venus and  $7.77 \times 10^7$  km between the orbits of the Earth and Mars. For an extensive discussion of the sphere of influence and a tabulation of sphere of influence radii for all the planets in our solar system, see the book by Griffin and French (listed in this chapter's bibliography).

---


page 711

### 8.8.3 Heliocentric Trajectories

Once a space vehicle launched from a planet (labeled the *departure planet*) leaves the sphere of influence of that planet, the vehicle moves primarily under the gravitational attraction of the sun. If the mission of the space vehicle is to travel to another planet (labeled the *target planet*), it enters a

transfer orbit between the respective orbits of the two planets around the sun. This flight path is sketched in Fig. 8.19. The motion of the planets and the space vehicle illustrated in Fig. 8.19 is *relative to the sun*—in contrast to our previous discussions of motion along elliptical and hyperbolic flight paths taken relative to a planet (such as an orbit around the Earth). The transfer orbit shown in Fig. 8.19 is an orbit *about the sun*. The space vehicle enters this transfer orbit at point 1 with a velocity  $\mathbf{V}_1$  relative to the sun that is the vector sum of the velocity of the departure planet in its orbit around the sun,  $\mathbf{V}_{dp}$ , and the hyperbolic excess velocity  $\mathbf{V}_\infty$  relative to the departure planet:

page 712

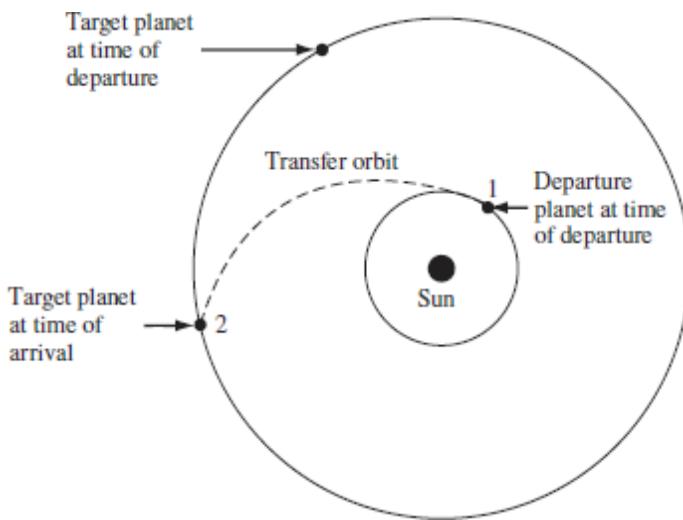

**Figure 8.19** Heliocentric transfer orbit.

$$\mathbf{V}_1 = \mathbf{V}_{dp} + \mathbf{V}_\infty \quad (8.92)$$

Similarly, the velocity of the space vehicle relative to the sun upon arrival at the target planet at point 2 on the transfer orbit,  $\mathbf{V}_2$ , is the vector sum of the velocity of the target planet in its orbit around the sun,  $\mathbf{V}_{tp}$ , and the hyperbolic excess velocity on arrival at the target planet,  $\mathbf{V}_{\infty, tp}$ :

$$\mathbf{V}_2 = \mathbf{V}_{tp} + \mathbf{V}_{\infty, tp} \quad (8.93)$$

In the preliminary design of an interplanetary space mission, the transfer orbit shown in Fig. 8.19 is frequently taken as a minimum-energy Hohmann transfer (see Sec. 8.7.1), although it does not have to be so restricted. The heliocentric transfer trajectory can be tailored to whatever the mission designer wants. It does not even have to be coplanar with the orbits of the departure or arrival planets. See the books by Griffin and French and by

Brown (listed in this chapter's bibliography) for in-depth discussion of such matters.

### 8.8.4 Method of Patched Conics

The detailed design of an interplanetary mission involves a numerical solution for the space vehicle flight path, solving the equations of motion and taking into account the multibody problem of the simultaneous influence of the gravitational fields of the sun, planets, and various moons. Such matters are well beyond the scope of this book. For the preliminary design of an interplanetary mission, however, a much simpler approach, called the *method of patched conics*, is used frequently. This method is carried out in three steps:

1. The heliocentric transfer orbit is computed first. The spheres of influence of both the departure and arrival planets are so small compared to the distance between the planets that the computation of the heliocentric transfer orbit simply ignores these planets.
2. The hyperbolic trajectory at the departure planet then defines the value of  $\mathbf{V}_\infty$  required at the departure end of the transfer trajectory (at point 1 in Fig. 8.19). See Eq. (8.92).
3. The spacecraft moving along its transfer orbit arrives at the target planet at point 2 in Fig. 8.19 with a hyperbolic excess velocity  $\mathbf{V}_\infty \mathbf{tp}$  relative to the target planet [see Eq. (8.93)]. The resulting hyperbolic trajectory about the target planet is then calculated for this  $\mathbf{V}_\infty \mathbf{tp}$ .

We have discussed the essential aspects of the trajectories identified in Steps 1–3 in previous sections, so no further elaboration will be given here.

The method of patched conics is only an approximate preliminary design method. It assumes an abrupt change from one conic flight path to another at the sphere of influence radius, thus ignoring the gradual transition from one flight path to another. It gives reasonable predictions of  $\Delta V$  for the mission but frequently leads to errors of hours or even days in the flight time. It can be made by hand calculations, however, which is a tremendous advantage for quick feasibility assessments. For our purposes in this chapter, it illustrates the essential elements of the flight path of a spacecraft on an interplanetary mission.


### 8.8.5 Gravity-Assist Trajectories

page 713

Consider the case where a space vehicle in a heliocentric orbit, such as the dashed curve in Fig. 8.19, flies into the sphere of influence of an intermediate planet different from the final target planet. The resulting hyperbolic encounter relative to the intermediate planet is sketched in Fig. 8.20. The approach asymptote has a true anomaly of  $-\theta a$ , and the departure asymptote has a true anomaly of  $\theta a$ , as shown in Fig. 8.20. The trajectory of the space vehicle is turned through the angle  $\psi$  relative to the planet as a result of the encounter. The magnitudes of the approach and departure velocities are the same value,  $V_\infty$ ; but the direction of the velocity vector is changed.

Now focus on this event as seen in the heliocentric frame of reference (such as in Fig. 8.19). Because the intermediate planet has a velocity in its orbit around the sun, the departure velocity of the space vehicle in the heliocentric system is the vector sum of the departure velocity from the planet and the velocity of the planet itself. Therefore, the *magnitude* of the velocity of the space vehicle in the heliocentric system after encounter with the planet will be different than before—that is, *the energy of the space vehicle changes* as a result of this encounter. When the space vehicle gains energy, it does so at the expense of the energy of the planet, which is of little consequence because the mass of the planet  $M$  is much larger than that of the space vehicle  $m$ . The reverse occurs when the space vehicle loses energy to the planet.

page 714

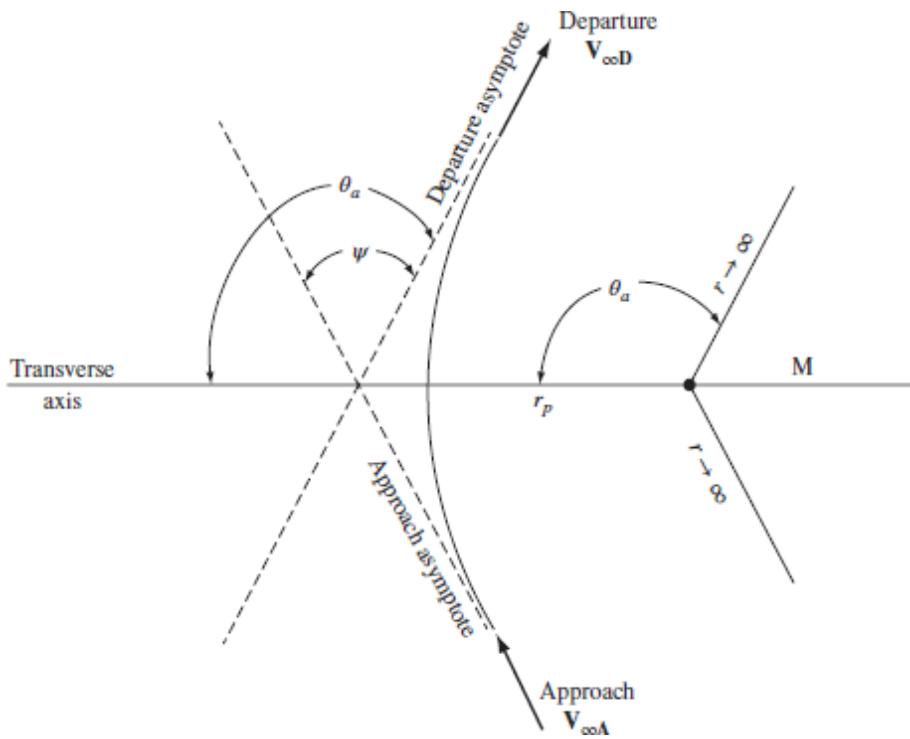

**Figure 8.20** Geometry for a gravity-assist maneuver: hyperbolic approach and departure trajectory of a spacecraft.

(Source: Shikha Redhal.)

The maneuver discussed here is called a *gravity-assist maneuver*, and the resulting trajectory is a gravity-assist trajectory. You might say that the planet acts as a slingshot to change the energy of the space vehicle. Gravity assist is vital to a deep-space mission where the initial impulse  $\Delta V$  required to launch the space vehicle directly from the earth to its intended target planet is prohibitively large. An example is the *Galileo* mission to Jupiter, which involved a gravity-assist flyby of Venus, then two gravity-assist flybys of the earth before the spacecraft had enough energy to get to Jupiter. The two *Voyager* spacecraft also used the gravity-assist maneuver many times during their outbound exploration of the solar system. Their mission is described in detail in Sec. 8.8.6.

The effect of the gravity-assist maneuver on the velocity of the space vehicle is illustrated vectorially in Fig. 8.21. In Fig. 8.21a the arrival and departure velocities of the space vehicle relative to the planet are shown. The departure velocity  $\mathbf{V}_{\infty D}$  is the vector sum of the arrival velocity  $\mathbf{V}_{\infty A}$  and the change in velocity  $\Delta \mathbf{V}$  due to the turning angle  $\psi$ :


$$\mathbf{V}_{\infty D} = \mathbf{V}_{\infty A} + \Delta \mathbf{V} \quad (8.94)$$

The heliocentric velocities are shown in Fig. 8.21b. The velocity of the planet in the heliocentric system is  $\mathbf{V}_p$ . The approach velocity of the space vehicle relative to the planet is  $\mathbf{V}_{\infty A}$ . Hence, the approach velocity of the space vehicle in the heliocentric systems is  $\mathbf{V}_{SA}$ :

$$\mathbf{V}_{SA} = \mathbf{V}_p + \mathbf{V}_{\infty A} \quad (8.95)$$

After the encounter with the planet, the departure velocity of the space vehicle in the heliocentric system is  $\mathbf{V}_{SD}$ :

$$\mathbf{V}_{SD} = \mathbf{V}_p + \mathbf{V}_{\infty D} \quad (8.96)$$

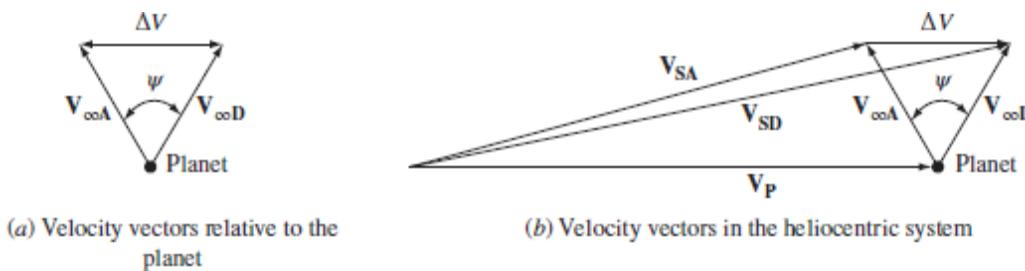

**Figure 8.21** Velocity vectors for the gravity-assist maneuver.

(Source: Shikha Redhal.)

Alternatively,

$$\mathbf{V}_{SD} = \mathbf{V}_{SA} + \Delta \mathbf{V} \quad (8.97)$$

Clearly, the *magnitude* of the velocity of the space vehicle after encounter in the heliocentric system is different from that before encounter; the gravity-assist maneuver has changed the energy of the space vehicle. For the case shown in Fig. 8.20, the gravity-assist maneuver has increased the energy of the space vehicle. On a qualitative basis this makes sense. In Fig. 8.21b the planet is moving from left to right with velocity  $\mathbf{V}_p$ . In Fig. 8.20, which is drawn relative to the planet, we note that the spacecraft is arriving with the arrival velocity  $\mathbf{V}_{\infty A}$  to the *left* side of the planet, which is the back or retreating side of the planet. As a result, when the spacecraft's velocity is bent around to the departure velocity  $\mathbf{V}_{\infty D}$ , the impulse  $\Delta \mathbf{V}$  is in the same general direction as the velocity of the planet, and hence the spacecraft's velocity (energy) in the heliocentric system is increased. You might say that the planet is dragging the spacecraft along with it for a while. The opposite would happen if the spacecraft arrived in front of the planet (to the right of

$M$  in Fig. 8.20); in this case the hyperbolic trajectory would curve in the opposite direction as that shown in Fig. 8.20, and the planet's motion would slow down the spacecraft's velocity, causing a loss of spacecraft energy. This is what is used for inner planetary missions such as to Mercury with a gravity-assist maneuver performed at Venus.

---

page 715

### 8.8.6 An Application: The Voyager Spacecraft—Their Design, Flight Trajectories, and Historical Significance

The Voyager 2 spacecraft is shown in Fig. 2.25 as an example of a classic spacecraft arrangement. The two almost identical spacecraft, Voyager 1 and Voyager 2, were designed, built, and operated by NASA's Jet Propulsion Laboratory (JPL) in Pasadena, California. The Jet Propulsion Laboratory is owned and managed by the California Institute of Technology on behalf of NASA. The Voyager missions are part of NASA's Heliophysics System Observatory, sponsored by the Heliophysics Division of the Science Mission Directorate at NASA Headquarters in Washington, D.C. Although similar, the two Voyagers were sent on different flight paths through the solar system and into deep space. This section details those different trajectories and discusses some of the design aspects and historical significance of the Voyagers.

The design of the Voyager spacecraft was driven by one primary requirement—the acquisition of new scientific data. In essence, the spacecraft were a type of space truck whose single purpose was to carry a load of specialized instruments, shown and identified in Fig. 2.25, along with the small vernier rockets needed for mid-course corrections in the flight trajectory. Because the flight trajectories would take the Voyagers to various planets and their moons, it was necessary to mount the instruments on an articulated instrument platform shown on the right side of the spacecraft in Fig. 2.25. On this articulated platform, the instruments had an unobstructed view of each planet with the planet at any position with respect to the spacecraft. The high gain antenna through which information and data is sent to and from the spacecraft, as seen at the top of the spacecraft in Fig. 2.25, is constantly pointing to the Earth.

The original mission of both Voyagers was to conduct close-up page 716 studies of Jupiter and Saturn, Saturn's rings, and the larger moons of the two planets. For this two-planet mission the Voyagers were built to

last five years. However, the mission to Jupiter and Saturn was so successful that Voyager 2 was re-programmed remotely to last 12 years in order to fly past Uranus and Neptune as well. This extension was made possible by using *gravity-assist* maneuvers which allowed each spacecraft to swing from one planet to the other, picking up energy and velocity from each planet, and allowing the spacecraft to move to the next planet without using the onboard propulsion system.

Both spacecraft are on hyperbolic trajectories away from the sun, which have now carried them into the beginning of interstellar space. For this reason NASA renamed the project as the Voyager Interstellar Mission. Various instruments that earlier had been turned off were turned back on, and by judicious use of power, the lifetime of the two spacecraft has been extended. The radioisotope thermoelectric generators powering the instruments on both Voyagers 1 and 2 have been running down since their launch in 1977. By 2020, the instruments on Voyager 1 must share power by rotating on and off. By 2025, its last instrument will be shut down for good.

To track the flight paths of both Voyagers 1 and 2 we start with their launch from the NASA Kennedy Space Center at Cape Canaveral, Florida —Voyager 2 on August 20, 1977, and Voyager 1 just 15 days later, on September 5, 1977. The Voyager missions were named based on which would arrive at Jupiter first, rather than which was launched first. Both were launched on Titan-Centaur booster rockets. The flight trajectories of both Voyagers are sketched (not to scale) in Fig. 8.22. Examining the trajectory of *Voyager 1*, we have:


<i>Earth to Jupiter:</i>	elliptical trajectory relative to the sun, eccentricity = 0.7978.
<i>Jupiter-centered:</i>	hyperbolic trajectory relative to Jupiter, eccentricity = 1.3190. Picks up energy due to gravity assist.
<i>Jupiter to Saturn:</i>	hyperbolic trajectory relative to the sun, eccentricity = 2.3027.
<i>Saturn-centered:</i>	hyperbolic trajectory relative to Saturn, eccentricity = 2.1076. Picks up energy due to gravity assist.
<i>Post-Saturn:</i>	hyperbolic trajectory relative to the sun, eccentricity = 3.7247. Stays on this trajectory while traveling into interstellar space.

Examining the trajectory of *Voyager 2*, we have

- Earth to Jupiter:* elliptical trajectory relative to the sun, eccentricity = 0.7244.
- Jupiter-centered:* hyperbolic trajectory relative to Jupiter, eccentricity = 1.3303. Picks up energy due to gravity assist.
- Jupiter to Saturn:* hyperbolic trajectory relative to the sun, eccentricity = 1.3383.
- Saturn-centered:* hyperbolic trajectory relative to Saturn, eccentricity = 1.4826. Picks up energy due to gravity assist.
- Saturn to Uranus:* hyperbolic trajectory relative to the sun, eccentricity = 3.4802.
- Uranus-centered:* hyperbolic trajectory relative to Uranus, eccentricity = 5.0142. Picks up energy due to gravity assist.
- Uranus to Neptune:* hyperbolic trajectory relative to the sun, eccentricity = 5.8068.
- Neptune-centered:* hyperbolic trajectory relative to Neptune, eccentricity = 2.1945. Picks up energy due to gravity assist.
- Post-Neptune:* hyperbolic trajectory relative to the sun, eccentricity = 6.2846. Stays on this trajectory while traveling into interstellar space.

A tabulation of the launch and destination dates for both Voyager-spacecraft is given below:

<i>Voyager 2</i>	<i>Voyager 1</i>	
August 20, 1977	September 5, 1977	Launch
July 9, 1979	March 5, 1979	Jupiter
August 25, 1981	November 12, 1980	Saturn
January 24, 1986	—	Uranus
August 25, 1989	—	Neptune
August 2007 (84 AU)	December 2004 (94 AU)	Termination shock

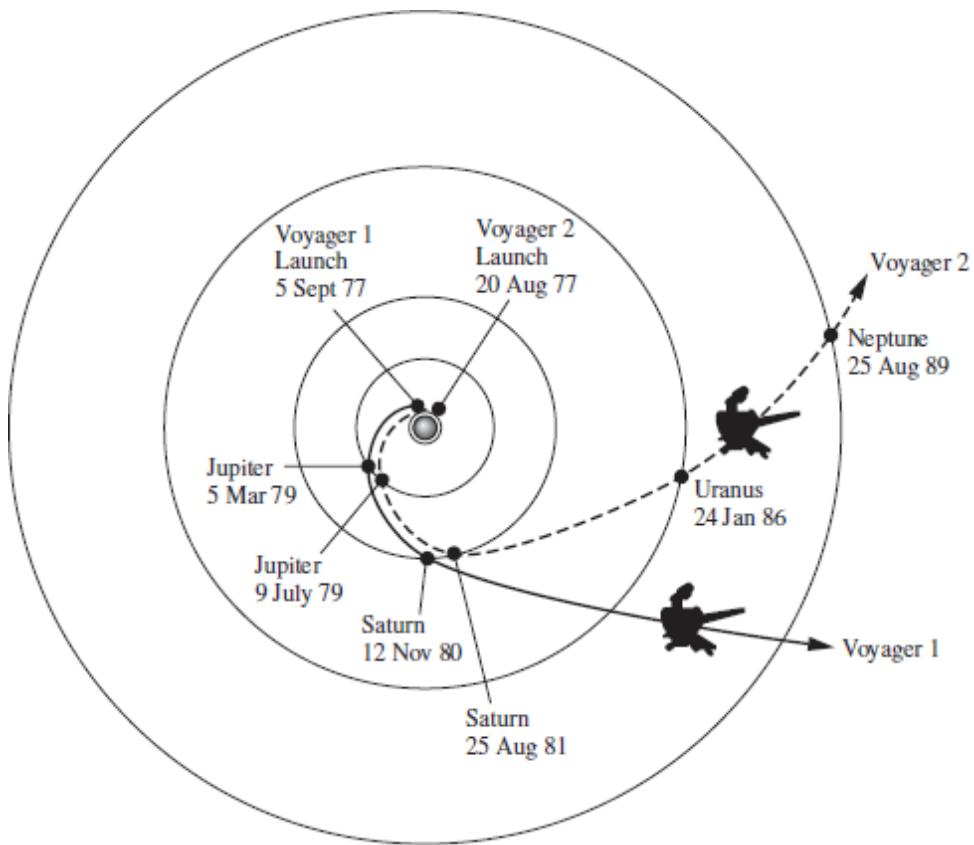

**Figure 8.22** Flight trajectories for Voyagers 1 and 2 (not to scale).

[page 717](#)

The last entry in the tabulation above is the month when the two Voyagers crossed the *termination shock*, a term that requires some explanation. The sun is surrounded by a large region called the *heliosphere*, which contains the solar wind, made up of plasma blown out from the sun. The heliosphere is a kind of “bubble” that contains the solar wind against the somewhat constant outside pressure of the interstellar medium, the hydrogen and helium gas and other matter that makes up our galaxy. Close to the sun, the solar wind is supersonic, at velocities from 300 to 800 km/s relative to the sun. (The speed of sound in the interstellar medium is approximately 100 km/s.) As the solar wind propagates away from the sun, its velocity steadily decreases, and its pressure decreases with the square of the distance from the sun. Far enough away from the sun, the pressure from the interstellar medium is sufficient to slow the solar wind to the speed of sound, where a shock wave occurs. This shock is called the *termination shock*, across which there is compression, heating, and a change in the magnetic field. Voyager 1 encountered the termination shock in December

2004 at a distance of 94 astronomical units (AU) from the sun. (An astronomical unit is the average distance from the earth to the sun, equal to roughly 150 million km.) Almost three years later, in August 2007, Voyager 2 passed through the termination shock. The other side of the termination shock, where the solar wind is subsonic and strongly interacts with the interstellar medium, is called the *heliosheath*. In turn, the outer surface of the heliosheath is the *heliopause*, beyond which there is just the interstellar medium. On August 25, 2012, an instrument on Voyager 1 recorded a sharp drop in cosmic rays that are produced inside the heliosphere. After much scientific debate, that date is now accepted as the exit of Voyager 1 from the heliosphere and its entry into interstellar space. (See Kerr, “It’s Official—Voyager Has Left The Solar System,” Sept. 13, 2013, pp. 1158–1159.) At that time, running out of power with its instruments failing, Voyager 1 became the first human-made object to enter interstellar space. Voyager 2 was not far behind and itself entered interstellar space on Nov. 5, 2018.

This section describing the flight of the Voyagers is intended to page 718 show the application of our discussions in earlier sections of Ch. 8) on the motion of spacecraft in space, where such motion is driven by the force of gravity only, whether it be the gravitational field from the sun, from the earth, or from other planets in our solar system. The physics and mathematics of flight through space is one of the most important aspects of the study of aerospace engineering, and the flight of the Voyager spacecraft is a stellar example of how careful and clever trajectory planning can enhance the scientific data return from interplanetary spacecraft with very little additional fuel. This historical account of the Voyager “Grand Tour” of our solar system represents just the beginning of space exploration and discovery.

## 8.9 INTRODUCTION TO ATMOSPHERIC ENTRY<sup>1</sup>

In all cases of contemporary crewed space vehicles, and with many uncrewed vehicles, it is necessary to terminate the orbit or trajectory at some time and return to the earth. Obviously this necessitates negotiating the atmosphere at high velocities. An orbital vehicle will enter the outer regions of the atmosphere at a velocity close to 26,000 ft/s; a vehicle returning from a moon mission (such as an *Apollo* vehicle) will enter at an even higher velocity—nearly 36,000 ft/s. These velocities correspond to


flight Mach numbers of 30 or more! Such hypersonic flight conditions are associated with several uniquely difficult aerodynamic problems—so unique and difficult that they dominated the research efforts of aerodynamicists during the late 1950s and throughout the 1960s. The successful manned entries of the *Mercury*, *Gemini*, and *Apollo* vehicles were striking testimonials to the success of this hypersonic research. Some aspects of hypersonic vehicles are discussed in Ch. 10).

Consider a space vehicle in orbit about the earth, as shown in [page 719](#) Fig. 8.23. We wish to terminate this orbit and land the vehicle somewhere on the earth's surface. First the path of the vehicle is changed by firing a retrorocket, decreasing the vehicle's velocity. In terms of the orbit equation, Eq. (8.43) or (8.44), the retrorocket's firing effectively changes the values of  $h$  and  $e$  so that the vehicle curves toward the earth. When the vehicle encounters the outer region of the atmosphere (portrayed by the dashed circle in Fig. 8.23), three types of entry paths are possible:

1. *Ballistic entry.* Here the vehicle has little or no aerodynamic lift. It falls through the atmosphere under the influence of drag and gravity, striking the surface at point  $a$ . The impact point is predetermined by the conditions at first entry to the atmosphere. The pilot has no control over his or her landing position during this ballistic trajectory. It literally is the same as *falling* to the surface. Before the Space Shuttle, virtually all entries of existing space vehicles were ballistic. (A slight exception might be the *Apollo* capsule, which at an angle of attack could generate a small lift-to-drag ratio,  $L/D < 1$ . However, for all practical purposes, this is still a ballistic entry vehicle.)

---

<sup>1</sup>In much of the literature you will find references to earth *reentry* rather than earth *entry*. The word *reentry* implies that the space vehicle had entered the atmosphere before and now is doing so again. This is usually not true except for the Space Shuttle. So we will use the word *entry* here; it seems grammatically more correct, and it is in keeping with modern use.

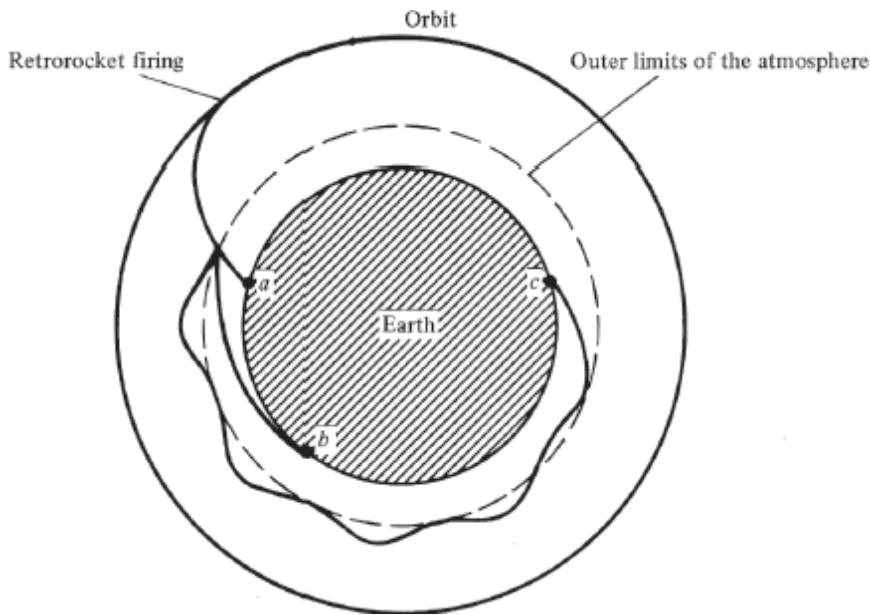


**Figure 8.23** Three types of entry paths: (a) ballistic; (b) glide; (c) skip.

2. *Glide entry.* Here the vehicle is essentially an airplane, generating a lift-to-drag ratio of 4 or larger. The vehicle enters the atmosphere at a high angle of attack ( $30^\circ$  or more) and flies to the surface, landing at point *b* in Fig. 8.23. An example of such a lifting entry vehicle is Space Shuttle Orbiter, as shown in Fig. 2.22, for which the pilot can, in principle, choose the landing site and the vehicle can be landed intact, to be used again.
3. *Skip entry.* Here the vehicle generates a value of  $L/D$  page 720 between 1 and 4 and uses this lifting ability to first graze the atmosphere, then slow down a bit, then pitch up so that the lift carries it back out of the atmosphere. This is repeated several times, much like a flat stone skipping over the surface of a pond, until finally the vehicle is slowed down appropriately and penetrates the atmosphere, landing at point *c* in Fig. 8.23. Unfortunately the aerodynamic heating of a skip entry vehicle is inordinately large, and therefore such an entry mode has never been used and is not contemplated in the future.

All these entry modes present two overriding technical concerns: maximum deceleration and aerodynamic heating. For the safety and comfort of the occupants of a crewed entry vehicle, the maximum deceleration should not exceed 5 times the acceleration of gravity—that is,

5 g's. Furthermore, the aerodynamic heating of the vehicle should be low enough to maintain tolerable temperatures inside the capsule; if the vehicle is uncrewed, it still must be kept from burning up in the atmosphere.

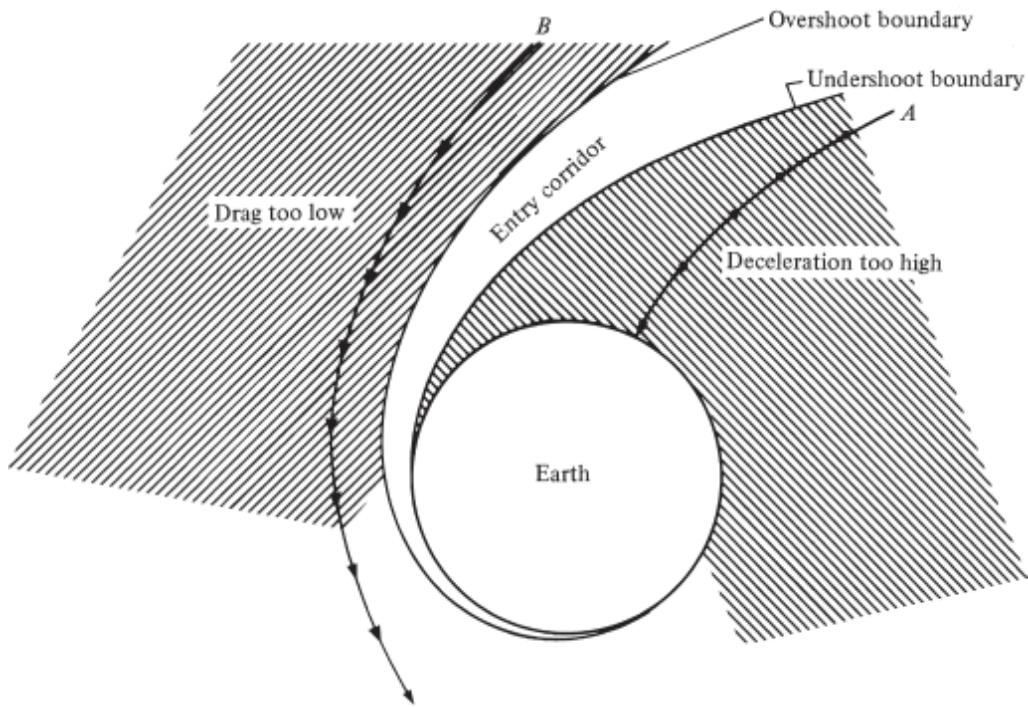

**Figure 8.24** Illustration of the entry corridor.

Additionally, there is another consideration in regard to the entry of crewed space vehicles returning from lunar or planetary missions. Such vehicles will approach the earth with parabolic or hyperbolic trajectories, as shown in Fig. 8.24. If the vehicle is traveling along path *A* in Fig. 8.24, penetration of the atmosphere will be too rapid, and the maximum deceleration will be too large. In contrast, if the vehicle is traveling along path *B*, it will not penetrate the atmosphere enough; the drag will be too low, the velocity will not decrease enough for the vehicle to be captured by the earth, and it will go shooting past, back into outer space, never to return again. Consequently, there is a narrow *entry corridor* into which the vehicle must be guided for a successful return to the earth's surface. This entry corridor is shown in Fig. 8.24, bounded above by the *overshoot boundary* and below by the *undershoot boundary*.

page 721

### 8.9.1 Exponential Atmosphere

Because entry involves motion through the atmosphere, it is reasonable to expect entry performance to depend on the physical properties of the atmosphere. Such properties have been discussed in Ch. 3), where the atmospheric temperature distribution is given in Fig. 3.4. Detailed entry trajectory calculations made on computers take into account the precise variation of the standard atmosphere as given in Ch. 3). However, for a first approximation, a completely isothermal atmosphere with a constant temperature equal to some mean of the variation shown in Fig. 3.4 can be assumed. In this case the density variation with altitude is a simple exponential, as given by Eq. (3.10). [At this point the reader should review the derivation of Eq. (3.10).] Writing Eq. (3.10) with point 1 at sea level, we obtain

$$\boxed{\frac{\rho}{\rho_0} = e^{-g_0 h/(RT)}} \quad (8.98)$$

Equation (8.98) establishes the *exponential model atmosphere*. It agrees reasonably well with the actual density variation of the earth's standard atmosphere up to about 450,000 ft (about 140 km); above this height, the air is so thin that it has no meaningful influence on the entry trajectory. The exponential model atmosphere was used by NASA and other laboratories in the early studies of earth entry during the 1950s and early 1960s. We will adopt it here for the remainder of this chapter.


---

page 722


### 8.9.2 General Equations of Motion for Atmospheric Entry

Consider a space vehicle entering the atmosphere, as sketched in Fig. 8.25. At a given altitude  $h$ , the velocity of the vehicle is  $V$ , inclined at the angle  $\theta$  below the local horizontal. The weight  $W$  is directed toward the center of the earth, and drag  $D$  and lift  $L$  are parallel and perpendicular, respectively, to the flight path, as usual. Summing forces parallel and perpendicular to the flight path and using Newton's second law, we obtain, respectively,

$$-D + W \sin \theta = m \frac{dV}{dt} \quad (8.99)$$

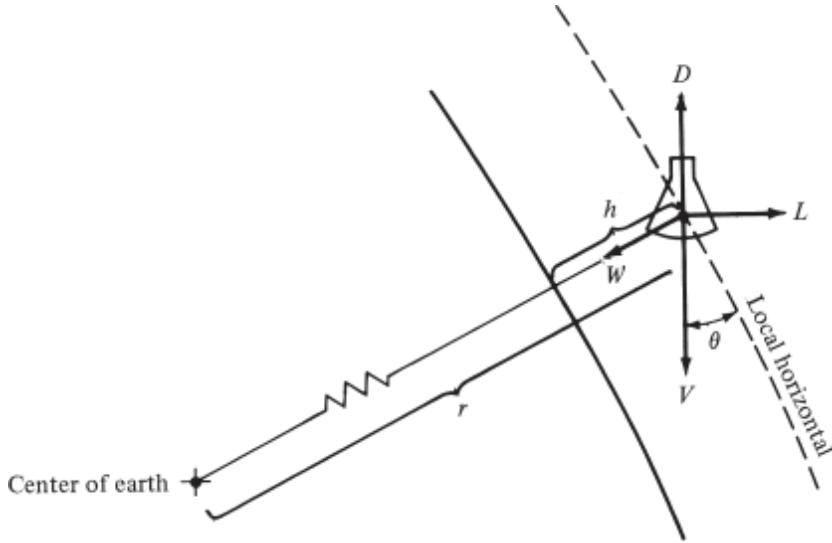

**Figure 8.25** Geometry of entry vehicle forces and motion.

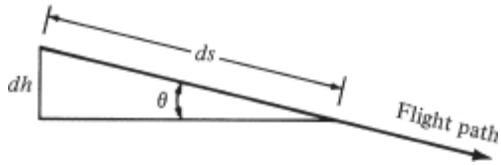

**Figure 8.26** Flight path geometry.

$$\text{and} \quad L - W \cos \theta = m \frac{V^2}{r_c} \quad (8.100)$$

where  $r_c$  is the radius of curvature of the flight path. Equations (8.99) and (8.100) are identical to the equations of motion obtained in Ch. 6), specifically Eqs. (6.7) and (6.8), with  $T = 0$  and  $\theta$  measured below rather than above the horizontal.

We wish to establish an analysis that will yield velocity  $V$  as a function of altitude  $h$ . Dealing first with the drag equation, Eq. (8.99), we have

$$-D + W \sin \theta = m \frac{dV}{dt} = m \frac{dV}{ds} \frac{ds}{dt} = mV \frac{dV}{ds} \quad (8.101) \quad \underline{\text{page 723}}$$

$$-D + W \sin \theta = \frac{1}{2} m \frac{dV^2}{ds}$$

where  $s$  denotes distance along the flight path. From the definition of drag-coefficient,

$$D = \frac{1}{2} \rho V^2 S C_D \quad (8.102)$$

Also, from the geometry shown in Fig. 8.26,

$$ds = -\frac{dh}{\sin \theta} \quad (8.103)$$

Substitute Eqs. (8.102) and (8.103) into Eq. (8.101):

$$-\frac{1}{2}\rho V^2 S C_D + W \sin \theta = -\frac{1}{2}m \sin \theta \frac{dV^2}{dh} \quad (8.104)$$

We are interested in obtaining  $V$  as a function of  $h$ . However, recall from Eq. (8.98) that  $\rho = f(h)$ :

$$\frac{\rho}{\rho_0} = e^{-g_0 h / (RT)} = e^{-Zh} \quad (8.105)$$

Here  $Z \equiv g_0/RT$  for simplicity of notation. Therefore, if we instead had a relation between velocity and density  $V = f(\rho)$ , we could still find the variation of  $V$  with  $h$  by using Eq. (8.105) as an intermediary. Let us take this approach and seek an equation relating  $V$  to  $\rho$ , as follows.

Differentiating Eq. (8.105), we obtain

$$\frac{d\rho}{\rho_0} = e^{-Zh} (-Z dh) = \frac{\rho}{\rho_0} (-Z dh) \quad (8.106)$$

$$\text{or} \quad dh = -\frac{d\rho}{Z\rho}$$

Substitute Eq. (8.106) into Eq. (8.104):

$$-\frac{1}{2}\rho V^2 S C_D + W \sin \theta = -\frac{1}{2}m \sin \theta \frac{dV^2}{d\rho} (-Z\rho) \quad (8.107)$$

Divide Eq. (8.107) by  $(-\frac{1}{2}\rho Z m \sin \theta)$ :

$$\frac{V^2 S C_D}{Z m \sin \theta} - \frac{2mg}{Z\rho m} = -\frac{dV^2}{d\rho}$$

or	$\frac{dV^2}{d\rho} + \frac{1}{m/(C_D S)} \frac{V^2}{Z \sin \theta} = \frac{2g}{Z\rho}$	(8.108)
----	---	---------


Equation (8.108) is an exact equation of motion for a vehicle entering the atmosphere—the only approximation it contains is the exponential model atmosphere. Also note that the parameter  $m/(CDS)$ , which appears in the second term in Eq. (8.108), is essentially a constant for a given space vehicle; it is identified as

$$\frac{m}{C_D S} \equiv \text{ballistic coefficient} = \beta \quad (8.109) \quad \underline{\text{page 724}}$$

The value of  $m/(CDS)$  strongly governs the entry trajectory.

Equation (8.108) is also a differential equation, and in principle it can be solved to obtain  $V=f(\rho)$  and hence  $V=f(h)$  through Eq. (8.105). However, in general, the angle  $\theta$  in Eq. (8.108) also varies with altitude  $h$ , and this variation must be obtained before Eq. (8.108) can be solved. This is the role of our second equation of motion, Eq. (8.100)—the lift equation. Equation (8.100) can be reworked to obtain a differential equation in terms of  $d\theta/d\rho$ , which can then be solved simultaneously with Eq. (8.108) to obtain an explicit relation for  $V$  as a function of  $\rho$  for a vehicle with a given  $m/(CDS)$  and  $L/D$ . The details will not be given here; our intent has been simply to map out an approach to calculating a lifting entry path, as given in the preceding. The reader can obtain more details from the NACA and NASA reports given in the bibliography at the end of this chapter.

After the preceding analysis is completed, what does the actual entry path look like? An answer is given in Fig. 8.27, which illustrates the variation of velocity (the abscissa) with density (the ordinate). Because  $\rho$  is a function of altitude,  $h$  is also given on the ordinate. Thus Fig. 8.27 shows the entry path in terms of velocity versus altitude—a so-called *velocity–altitude map* for entry. Such velocity–altitude maps are frequently used in entry vehicle design and analysis. Examine Fig. 8.27 more closely. Imagine an entry vehicle just beginning to penetrate the atmosphere. It is at a very high altitude and velocity, such as point *a* in Fig. 8.27. During the early portion of entry, the atmospheric density is so low that the drag is virtually insignificant; the vehicle penetrates the upper region of the atmosphere with only a small decrease in velocity, as shown from point *a* to point *b*. However, below the altitude denoted by point *b*, the air density rapidly increases, with an attendant marked increase in drag, causing the velocity to decrease rapidly. This is the situation at point *c* in Fig. 8.27. Finally the vehicle reaches the surface at point *d*. In Fig. 8.27 the path *a*–*b*–*c*–*d* is for a given ballistic coefficient. If  $m/(CDS)$  is made larger, the vehicle penetrates more deeply into the atmosphere before slowing down, as illustrated by path *a*–*b*–*e*–*f*. Thus, as suspected from an examination of Eq. (8.108), the ballistic coefficient is an important design aspect of entry vehicles.

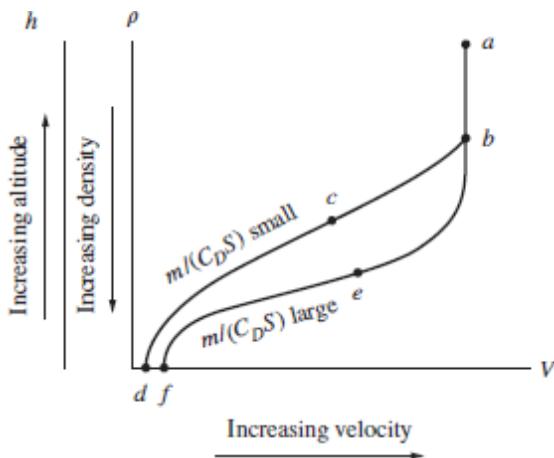

**Figure 8.27** Entry trajectory on a velocity– altitude map.

The ballistic coefficient of an entry vehicle of a certain mass is determined primarily by its shape and surface area. An object that is dense and presents a small frontal area like an asteroid would have a relatively high ballistic coefficient, which is why such objects entering our atmosphere tend to maintain very high velocities, and often burn up before hitting the ground. A lighter weight vehicle with a large blunt frontal area, like the Apollo capsule, on the other hand, would have a lower ballistic coefficient designed in such a way that it decelerates more gradually and sustains a lower heat load during entry. The equations that allow one to calculate these parameters quantitatively are included on the web site, but qualitatively there are a few important concepts that are worth recognizing. The deceleration and the heat transfer rate of an entry vehicle are a function of both the atmospheric density, which is increasing during descent, and the velocity of the vehicle, which is decreasing during descent. Because of this tradeoff and because deceleration is proportional to velocity squared, while heat load is proportional to velocity cubed, the altitude at which the maximum deceleration occurs tends to be different from that where the maximum heating occurs. Additionally, there are a few fundamentals that a mission designer should know:

- more than anything else, the entry velocity,  $V_E$ , will [page 726](#) determine how stressful the entry trajectory is on the spacecraft and its occupants, in terms of both structural loading and heat transfer;
- the parameter that a pilot has the most control over during entry is the flight path angle,  $\gamma$ , which can also very strongly affect the

deceleration and heat load;

- entry heating is inversely related to the radius of the leading edge of the entry capsule, so to minimize entry heating, the vehicle must have a blunt nose.

## 8.10 HISTORICAL NOTE: KEPLER

The 16th century was a period of quandary for astronomy. The conservative line of scientific thought held the earth as the center of the universe, with the sun, planets, and stars revolving about it on various celestial spheres. This *geocentric* system was popular among the Greeks. Put into a somewhat rational form by Claudius Ptolemy in the second century AD, this earth-centered system was adopted as the truth by the Church in western Europe and was carried through to the 16th century. However, about the time that Columbus was discovering America, a Polish scientist by the name of Nicolaus Copernicus was beginning to develop different ideas. Copernicus reasoned that the earth as well as all the other planets revolved around the sun in a *heliocentric* system. He established his line of thought in a main work titled *Six Books Concerning the Revolutions of the Heavenly Spheres*, published in the year of his death, 1543. Here Copernicus was diplomatic with regard to Church dogma. He stated that his heliocentric theory was not new, having been held by a few early Greek astronomers, and also that he was just “postulating and theorizing,” not necessarily speaking the absolute truth. However, it was clear that Copernicus personally believed in what he wrote. Another astronomer, Giordano Bruno, who evangelized Copernicus’s theory, was not so diplomatic and was burned at the stake in 1600. Galileo Galilei took up the heliocentric banner in 1632 and was ultimately exiled under guard for his heresy. Finally the Danish astronomer Tycho Brahe, while shunning a direct association with the controversial heliocentric theory, spent virtually his complete life from 1546 to 1602 making astronomical observations of planet and star movements, resulting in spectacular improvements in the precision of existing knowledge.

Into this tenuous time Johannes Kepler was born in Württemberg, Germany, on December 27, 1571. By winning scholarships, he was able to finish elementary school and go on to the University of Tübingen. There he was converted to the heliocentric theory by Michael Mastlin, a professor of

astronomy. Later Kepler became a teacher of mathematics and an ardent astronomer. Through his writings about celestial motion, Kepler came to the attention of Tycho Brahe, who was now living in Prague. In 1599 Kepler went to Prague to work under Brahe, who died just two years later. Kepler stayed in Prague, extending and improving the existing tables of celestial movement. In 1627 he published his *Rudolphine Tables*, which were much more accurate than any existing tables at that time.

However, Kepler was also thinking and theorizing about his page 727 observations, attempting to bring reason and order to the movement of the heavenly bodies. For example, the heliocentric system of Copernicus assumed circular orbits of the planets about the sun, but Kepler's accurate observations did not precisely fit circular motion. In 1609 he found that elliptical orbits fit his measurements exactly, giving rise to *Kepler's first law* (see Sec. 8.6). In the same year he induced that a line drawn from the sun to a planet sweeps out equal areas in equal times—*Kepler's second law*. His first and second laws were published in his book *New Astronomy* in 1609. Nine years later he discovered that the square of the period of planetary orbits was proportional to the cube of the semimajor axis of the elliptical orbit—*Kepler's third law*. This was published in 1618 in his book *Epitome of the Copernican Astronomy*.

Kepler's impact on astronomy was massive; in fact, his work was the founding of modern astronomy. His contributions are all the more stunning because his laws were induced from empirical observation. Kepler did not have the tools developed later by Newton. Therefore, he could not derive his laws with the same finesse as we did in Sec. 8.5.

It is interesting to note that Kepler also wrote science fiction. In his book *Somnium* (Dream), Kepler describes a trip from the earth to the moon. Recognizing that the void of space would not support flight by wings, he had to resort to demons as a supernatural mode of propulsion. These demons would carry along humans, suitably anesthetized to survive the rigors of space travel. He described the moon in as much astronomical detail as was possible in that age, but he imagined moon creatures that lived in caves. Modern historians of science fiction literature believe that Kepler's *Somnium* was really a vehicle to present his serious scientific ideas about the moon while attempting to avoid religious persecution. *Somnium* was published in 1634, four years after Kepler's death.

Kepler spent his later life as a professor of mathematics in Linz. He died in Regensburg on November 15, 1630, leaving a legacy that reaches across the centuries to the astronautics of the present day.

## 8.11 HISTORICAL NOTE: NEWTON AND THE LAW OF GRAVITATION

Newton's law of universal gravitation, Eq. (8.19), appears in every modern high school and college physics textbook; its existence is virtually taken for granted. Moreover, this equation is the very foundation for all modern astronautical calculations of motion through space, as discussed throughout this chapter. However, the disarming simplicity of Eq. (8.19) and its commonplace acceptance in classical physics belie the turmoil that swarmed about the concept of gravity before and during the 17th century, when Newton lived.

The earliest ideas about "gravity" were advanced by Aristotle [page 728](#) during the period around 350 BC. Believing that the four fundamental elements of the universe were earth, water, air, and fire, the Aristotelian school held that everything in the universe had its appointed station and tended to return to this station if originally displaced. Objects made from "earth" held the lowest station, and thus heavy material objects would fall to the ground, seeking their proper status. In contrast, fire and air held a high station and would seek this status by rising toward the heavens. These ideas persisted until the age of Copernicus, when people began to look for more substantial explanations of gravity.

In 1600 the English scientist William Gilbert suggested that magnetism was the source of gravity and that the earth was nothing more than a gigantic lodestone. Kepler adopted these views, stating that gravity was "a mutual affection between cognate bodies tending toward union or conjunction, similar in kind to magnetism." Kepler used this idea in an attempt to prove his laws of planetary motion (see Sec. 8.10) but was not successful in obtaining a quantitative law for the force of gravity. About the same time, the French scientist and mathematician René Descartes (who introduced the Cartesian coordinate system to the world of mathematics) proposed that gravity was the result of an astronomical fluid that was swirling in a vortex motion, pushing heavy objects toward the core of the vortex. Christian Huygens, a Dutch gentleman and amateur scientist,

seemed to confirm Descartes's theory in the laboratory; he set up a whirlpool of water in a bowl and observed that pebbles "gravitated" to the center of the bowl.

Into this confused state of affairs was born Isaac Newton at Woolsthorpe near Grantham, Lincolnshire, England, on December 25, 1642. Newton's father died a few months before he was born, and Newton was raised by his grandmother. His education ultimately led to studies at Trinity College, Cambridge University, in 1661, where he quickly showed his genius for mathematics. In 1666 he left Cambridge for his home in Woolsthorpe Manor to avoid the Great Plague of 1665–1666. It was here, at the fresh age of 24, that Newton made some of his discoveries and conclusions that were to revolutionize science and mathematics, not the least of which was the development of differential calculus. Also, Newton later maintained that during this stay in the country he deduced the law of centripetal force: that a body in circular motion experiences a radial force that varies inversely with the distance from the center. (In today's language, the centripetal acceleration due to circular motion is equal to  $V^2/r$ , as shown in all elementary physics books.) From this result applied to Kepler's third law, Newton further deduced that the force of gravity between two objects varies inversely as the square of the distance separating them, which led to the universal law of gravitation, as given by Eq. (8.19). However, Newton did not bother to publish immediately or otherwise announce his findings. The public was kept in the dark for another 30 years!

Throughout the history of science and engineering, there are numerous examples of ideas whose "time had come" and that were conceived by several different people almost simultaneously. The same Christian Huygens made experiments with pendulums and circular moving bodies that led to his discovery of the law of centripetal force in 1673. With this, Robert Hooke (of Hooke's law fame), Christopher Wren (later to become an internationally famous architect), and Edmund Halley (of Halley's comet fame) all deduced the inverse square law of gravity in 1679. Hooke wrote to Newton in the same year, telling him of the inverse square discovery and asking Newton to use it to prove that a planet revolves in an elliptical orbit. Newton did not reply. In 1685 the problem was again posed to Newton, this time by Halley. Newton sent back such a proof. Halley was much impressed and strongly encouraged Newton to publish all his discoveries and thinking as soon as possible. This lead to Newton's *Philosophiae Naturales*

*Principia Mathematica*—the famous *Principia*—which has become the foundation of classical physics. It is interesting to note that the *Principia* was originally to be published by the Royal Society. But Hooke, who laid claim to the prior discovery of the inverse square law and who was the curator of the Royal Society, apparently discouraged such publication. Instead the *Principia*, the most important scientific document of that time in history, was published at the personal expense of Halley.

---

page 729

## 8.12 HISTORICAL NOTE: LAGRANGE

In Sec. 8.3, a corollary to Newton's second law was introduced: Lagrange's equation. Lagrange came after Newton. He was one of the small group of European scientists and mathematicians who worked to develop and augment Newtonian (classical) physics during the 18th century; he was a contemporary of Laplace and a friend of Leonhard Euler.


Joseph L. Lagrange was born of French parents at Turin, Italy, on January 25, 1736. His father was an officer in the French army; hence it is no surprise that at the age of 19 Lagrange was appointed as professor of mathematics at the Turin Artillery School. Active in scientific thought, he helped to found the Turin Academy of Sciences. In 1756 he wrote to Euler (see Sec. 4.22) with some original contributions to the calculus of variations. This helped to establish Lagrange's reputation. In fact, in 1766 he replaced Euler as director of the Berlin Academy at the invitation of Frederick II (Frederick the Great) of Prussia. For the next 20 years, Lagrange was extremely productive in the field of mechanics. His work was analytical, and he endeavored to reduce the many aspects of mechanics to a few general formulas. This is clearly reflected in the formalism discussed in Sec. 8.3. Lagrange's equations used in Sec. 8.3 were published in an important book by Lagrange titled *Mécanique Analytique* in 1787. For these contributions, he is considered by some historians to be the greatest mathematician of the 18th century.

Lagrange moved to Paris in 1786. During the French Revolution, he was president of the committee for reforming weights and measures standards. At the time of his death in Paris on April 10, 1813, he was working on a revised version of his *Mécanique Analytique*.

## 8.13 HISTORICAL NOTE: UNMANNED SPACE FLIGHT

On the evening of October 4, 1957, the present author (Dr. Anderson) was a student of aeronautical engineering. The radio was on. Concentration on studies was suddenly interrupted by a news bulletin: The Soviet Union had just successfully launched the first artificial earth satellite in history. Labeled *Sputnik I* and shown in Fig. 8.28, this 184-lb sphere circled the earth in an elliptical orbit, with an apogee and perigee of 560 and 140 mi, respectively, and with a period of 1.5 h. The personal feeling of exhilaration that humanity had finally made the first great step toward space exploration was tempered by questions about the technical position of the United States in space flight relative to that of the Soviet Union. These feelings were to be reflected and amplified throughout the United States for weeks, months, and years to come. *Sputnik I* started a technological revolution that has influenced virtually all aspects of society, from education to business, from biology to philosophy. October 4, 1957, is a red-letter date in the history of humanity—the beginning of the space age.

Although the launching of *Sputnik I* came as a surprise to most page 730 of the general public, the technical community of the Western world had been given some clear hints by Russian scientists. For example, on November 27, 1953, at the World Peace Council in Vienna, the Soviet academician A. N. Nesmeyanov stated that “science had reached such a stage that . . . the creation of an artificial satellite of the earth is a real possibility.” Then, in April 1955, the U.S.S.R. Academy of Sciences announced the creation of the Permanent Interdepartmental Commission for Interplanetary Communications, with responsibility for developing artificial earth satellites for meteorological applications. In August of that year, the highly respected Russian scientist Leonid I. Sedov, at the Sixth International Astronautical Congress in Copenhagen, said, “In my opinion, it will be possible to launch an artificial satellite of the Earth within the next two years, and there is the technological possibility of creating artificial satellites of various sizes and weights.” Obviously the Russian program kept to its schedule. Indeed, in June 1957, just four months before *Sputnik I*, the same A. N. Nesmeyanov blatantly stated that both the rocket launch vehicle and the satellite were ready and would be launched in a few months. Clear signs and clear words—yet the launching of *Sputnik I* still fell like a ton of bricks on the Western world.

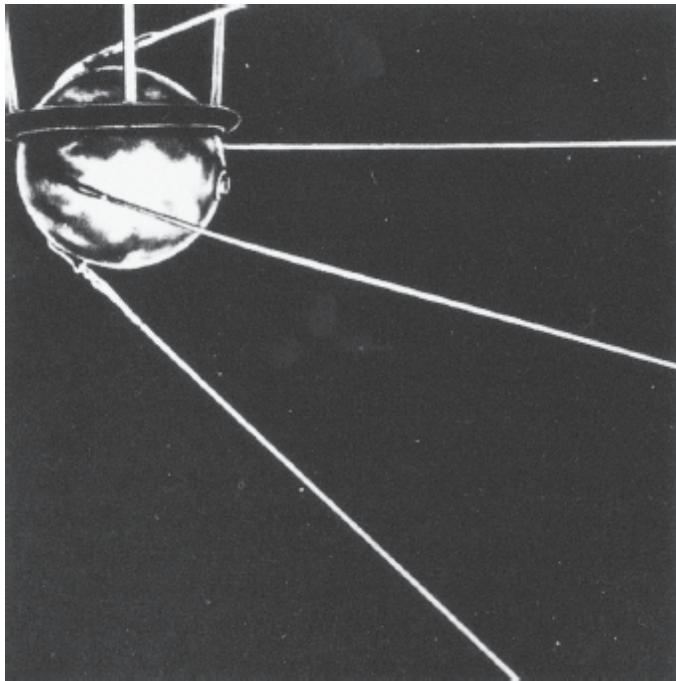

**Figure 8.28** The first artificial earth satellite—*Sputnik I*—launched on October 4, 1957.

(Source: Courtesy of John Anderson.)

In 1957 the United States was not new to the idea of artificial satellites. Indeed, some farsighted thinking and technical analyses of the prospects for launching such satellites were performed by the U.S. Navy and the U.S. Army Air Force beginning in 1945. Then, in May 1946 (just one year after Germany had been defeated in World War II), a Project RAND report titled “Preliminary Design of an Experimental World-Circling Spaceship” was submitted to Wright Field, Dayton, Ohio. This report showed the feasibility of putting a 500-lb satellite in orbit at around 300 mi high. Moreover, it outlined how this could be accomplished in a five-year time scale! The authors of this report made some prophetic statements:

Although the crystal ball is cloudy, two things seem clear—1. A satellite vehicle with appropriate instrumentation can be expected to be one of the most potent scientific tools of the Twentieth Century.

2. The achievement of a satellite craft by the United States would inflame the imagination of mankind, and would probably produce repercussions in the world comparable to the explosion of the atomic bomb. . . .

Then the authors went on to state,

Since mastery of the elements is a reliable index of material progress, the nation which first makes significant achievements in space travel will be acknowledged as the world leader in both military and scientific techniques. To visualize the impact on the world, one can imagine the consternation and admiration that would be felt here if the United States were to discover suddenly that some other nation had already put up a successful satellite.

These were indeed prophetic words, written fully 11 years before *Sputnik I*.

The 1946 RAND report, along with several contemporary technical reports from the Jet Propulsion Laboratory at the California Institute of Technology, established some fundamental engineering principles and designs for rocket launch vehicles and satellites. However, these ideas were not seized upon by the U.S. government. The period after World War II was one of shrinking defense budgets, and money was simply not available for such a space venture. Of probably greater importance was the lack of a mission. What if a satellite were launched? What benefits would it bring, especially military benefits? Keep in mind that this was in a period before miniaturized electronics and sophisticated sensing and telemetering equipment. Therefore, the first serious U.S. effort to establish a satellite program withered on the vine, and the idea lay essentially dormant for the next nine years.

Although upstaged by *Sputnik I*, the United States in 1957 page 732 finally did have an ongoing project to orbit an artificial satellite.

On July 29, 1955, President Dwight D. Eisenhower announced that the United States would orbit a small earth satellite in conjunction with the International Geophysical Year. Making use of 10 years of high-altitude sounding rocket technology, which started with a number of captured German V-2 rockets, the United States established the Vangard program, managed by the Office of Naval Research, to accomplish this goal. Martin Company in Baltimore, Maryland, was chosen as the prime contractor. During the next two years, a rocket booster was designed and built to launch a small, 3-lb experimental satellite. By government edict, the Vangard project was required not to draw upon or interface with the rapidly growing and high-priority ICBM program, which was developing large rocket engines for the military. Therefore, Dr. John P. Hagen, director of Project Vangard, and his small team of scientists and engineers had to struggle almost as second-class citizens to design the Vangard rocket in an

atmosphere of relatively low priority. (This is in sharp contrast to the Russian space program, which from the very beginning utilized and benefited from the Soviet military ICBM developments. Because Russian atomic warheads of that day were heavier than comparable U.S. devices, the Soviet Union had to develop more powerful rocket boosters. Their space program correspondingly benefited, allowing *Sputnik I* and *II* to be the surprisingly large weights of 184 and 1120 lb, respectively.)

By October 1957 two Vangard rockets had been successfully tested at Cape Canaveral, and the test program, which was aimed at putting a satellite into orbit before the end of 1958, was reasonably close to schedule. Then came *Sputnik I* on October 4. Not to be completely upstaged, the White House announced on October 11 that Project Vangard would launch a U.S. satellite "in the near future." Suddenly in the limelight of public attention, and now under intense political pressure, a third test rocket was successfully tested on October 23, carrying a 4000-lb dummy payload to an altitude of 109 and 335 mi downrange. Then, on December 6, 1957, in full view of the world's press, the first Vangard was prepared to put a small satellite into orbit. Unfortunately, the Vangard first-stage engine had its first (and last) failure of the program. With failing thrust, the rocket lifted a few feet off the launch pad and then fell back in a spectacular explosion. In Dr. Hagen's words, "Although we had three successful test launches in a row, the failure of TV-3 [the designation of that particular vehicle] was heard around the world."

Despite the original disadvantages of low priority, the emotional pressure after *Sputnik I*, and the inglorious failure of December 6, the Vangard project went on to be very successful. *Vangards I, II*, and *III* were put into orbit on March 17, 1958, February 17, 1959, and September 18, 1959, respectively, attributing to the fine efforts of Dr. Hagen and his group.

But *Vangard I* was not the first U.S. satellite. President Eisenhower's July 1955 announcement about U.S. plans to orbit a satellite was followed by much debate about whether military rocketry should be used. One proposal at the time was to use the rocket vehicles being developed at the Army's Redstone Arsenal at Huntsville, Alabama, under the technical direction of Dr. Wernher Von Braun. After the decision was made to go with the Vangard, the engineers at the Army Ballistic Missile Agency at Huntsville continued to propose a satellite program using the proven intermediate-range Jupiter C rocket. All such proposals were turned down.

However, the picture changed after *Sputnik*. In later October 1957, Von Braun's group was given the green light to orbit a satellite: the target date was January 30, 1958. A fourth stage was added to the Jupiter C rocket; this new configuration was labeled the Juno I. The target date was missed by only one day. On January 31, 1958, *Explorer I*, the first U.S. artificial satellite, was placed into orbit by Von Braun's team of scientists and engineers from Huntsville. *Explorer I*, shown in Fig. 8.29, weighed 18 lb, and its orbit had apogee and perigee of 957 and 212 mi, respectively; its period was 115 min. With the launchings of both *Sputnik I* and *Explorer I*, the two technological giants in the world—the United States and the Soviet Union—were now competing in the space arena.

---

page 733



**Figure 8.29** *Explorer I*, the first U.S. artificial earth satellite, launched on January 31, 1958.

(Source: NASA.)


## 8.14 HISTORICAL NOTE: HUMAN SPACE FLIGHT

---

page 734

As described in Sec. 8.13, both the Soviet Union and the United States had announced their intention to launch satellites as part of the International Geophysical Year—but what came as a shock was the breadth and depth of the reaction of the U.S. population to this first by a foreign power. U.S. national pride was wounded further a month later, when Sputnik 2 turned out to be a massive spacecraft carrying a small dog. This was a clear signal of their intent to launch humans into space, probably very soon.

One of the most direct reactions to the shock of Sputnik was the creation of the National Aeronautics and Space Administration, or NASA, which opened its doors on October 1, 1958. A week later, the U.S. officially started its first human spaceflight program—Project Mercury—although it would not be publicly announced until December of that year. A process was established to select the first set of astronauts, limited at the time to military test pilots, and the seven Mercury astronauts were announced in April 1959. The Mercury spacecraft, shown in Fig. 8.30, was the smallest spacecraft possible that could hold one crew for a mission of 3–6 orbits or 4–9 hours. It was designed to fly on three different launch vehicles: the Little Joe, a cobbled-together mixture of solid rocket motors used to validate the performance of the escape system in the event of a launch vehicle failure; a Redstone, a modified intermediate-range ballistic missile which could launch the capsule on a 15-minute parabolic trajectory about 300 miles from the launch site; and a modified Atlas intercontinental ballistic missile, which was capable of launching Mercury into low Earth orbit.

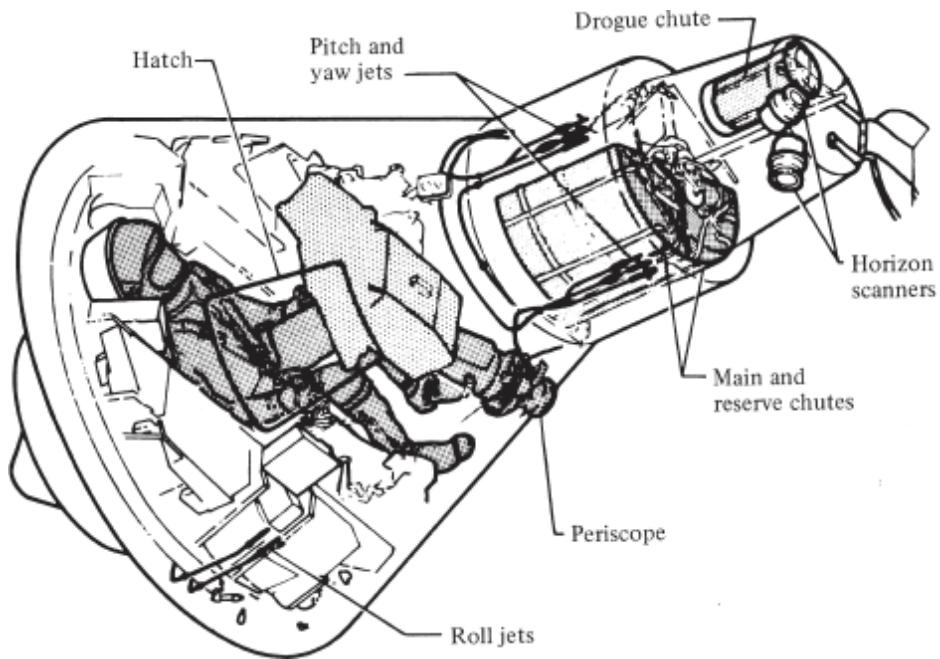

**Figure 8.30** The Mercury spacecraft.

(Source: NASA.)

At the same time, the Soviet Union was developing its own [page 735](#) human spacecraft: Vostok. Since Soviet ICBMs were larger than U.S. systems, reflecting the lack of miniaturization in their weapons payloads, Vostok was designed to launch on a modified R-7 ICBM. Unlike the Mercury capsule, which was designed to land in the ocean and use the water as a terminal deceleration system using a large air bag, the Soviet Union had little access to or infrastructure for extended operations in the major oceans, so Vostok was designed to come down on dry land. Since the parachute system did not slow the capsule down sufficiently to allow an acceptable ground impact, the crew of Vostok had to eject once the parachute had opened and land separately using their personal parachutes.

Having lost the race to put the first satellite in orbit, the U.S. wanted to be first to put a human into space. While NASA could have launched the first suborbital Mercury-Redstone mission in early 1961, conservatism for the upcoming crew launch led the NASA upper management to direct one last uncrewed launch of the Mercury-Redstone. Following this uneventful mission, the Soviet Union launched Yuri Gagarin into a one-orbit mission on April 12, 1961. Alan Shepard's suborbital mission the following month was perceived as a distant second to the full orbit of Gagarin.

John F. Kennedy was inaugurated as the President of the United States in January of 1961, having pushed a campaign promise of closing the “missile gap” with the Soviet Union. With the Soviet Union again appearing to be far in advance of the United States, Kennedy’s administration canvassed prominent scientists and engineers for a space program goal for which the United States had a decent chance of beating the Soviets. The consensus was that goal should be a human mission to the Moon. On May 25, 1961, with only 15 minutes of U.S. human spaceflight experience at that point, President Kennedy told a joint session of Congress that the nation should commit itself “to achieving the goal, before this decade is out, of landing a man on the moon and returning him safely to the Earth.” The Apollo program, started under the Eisenhower administration as a three-person successor to Mercury, was dedicated to the lunar mission. The “ultimate” space race was on.

In the following months, things continued to go less than perfectly for the U.S. human spaceflight program. Gus Grissom piloted the second suborbital Mercury-Redstone mission in July of 1961. While the mission itself was uneventful, Grissom nearly drowned when his capsule sank after landing in the Atlantic Ocean. The decision was made to forego any further suborbital Redstone missions, and proceed directly to orbital flight using the Atlas launch vehicle. Development issues with the human-rated version of Atlas took longer than expected, and John Glenn did not become the first U.S. astronaut in orbit until February 20, 1962. By that time, Gherman Titov had flown a day-long mission in Vostok 2, eclipsing the three-orbit mission of Glenn.

Scott Carpenter repeated Glenn’s three-orbit mission in May 1962, but the Soviet Union launched Vostoks 3 and 4 on simultaneous missions on August 15 of that year. Although not capable of changing their orbit for rendezvous or docking, the two missions were nearly three and four days in duration, again eclipsing the U.S. experience to date. In October, Wally Schirra flew a six-orbit (nine-hour) mission, and in May of 1963 Gordon Cooper flew the final Mercury mission of a full day’s duration. The Soviet Union was not finished with the Vostok program yet, however, wrapping up the program in June of 1963 with another dual-spacecraft mission. Valery Bykovsky set a new endurance record of nearly five days in orbit, but his mission is little remembered in comparison with the parallel mission of


Valentina Tereshkova, the first woman in space. Her three-day mission was designed to surpass the total orbital time of the entire Mercury program.

When it became clear that a gap of years would separate the end [page 736](#) of Mercury and the start of Apollo missions, NASA converted the “Mercury Mark II” concept (an expanded two-person Mercury spacecraft) into the Gemini spacecraft and program. Gemini was intended to be the program that would “teach NASA how to fly astronauts,” given its ability to perform orbital maneuvering, provide long-duration spaceflight, and allow for extravehicular activities (EVAs) or spacewalks: all capabilities required for successful Apollo lunar missions. Faced with the prospect of a U.S. first for multiperson space flight, the Soviets created the “Voskhod” spacecraft by removing the ejection seat from a Vostok capsule and shoehorning three seats in its place. Since there would no longer be the capability for the cosmonauts to land softly with their individual parachutes, Voskhod developed a deceleration system comprised of rocket engines firing briefly right before touchdown to slow the impact speed to a manageable level; a system like this is still used today in the Soyuz spacecraft. While Voskhod was quickly developed, it did allow the Soviet Union to fly three people in one spacecraft prior to the first crewed Gemini launch in March 1965. Despite accelerating the plans for Gemini spacewalks from later in the program to Gemini 4, the first spacewalk was also a Russian first, performed by Alexei Leonov on Voskhod 2, the last mission of that program.

Gemini went on for a total of ten crewed missions, successfully providing the United States with experience in spacewalks, orbital maneuvering, and long-duration spaceflight up to 14 days, sufficient for a full Apollo lunar mission. At the same time, work was proceeding in the United States on the Apollo program, and in the Soviet Union on Soyuz; both programs were aimed at landing humans on the Moon. Both programs had development problems, but in the race to make the goal of lunar flight in the decade of the 1960s (or the race to beat the United States to the Moon), pressure mounted to start the flight programs as soon as possible. On January 27, 1967, astronauts Gus Grissom, Ed White, and Roger Chaffee died in the Apollo 1 spacecraft when fire broke out in the pure oxygen atmosphere during a ground test. Three months later, Vladimir Komarov was launched on the first flight of the new Soyuz vehicle; the flight was riddled with problems, and Komarov was killed when the

parachute system failed on landing. Both programs were halted for accident analysis, redesigns, and testing. Apollo 7 was the first crewed mission, launched 19 months after the Apollo 1 fire and proving out the spacecraft fixes in low Earth orbit.

In a surprise move, NASA management changed the next [page 737](#) mission, the first to launch on the Saturn V booster, into a lunar orbital mission. Launching on December 21, 1968, Apollo 8 was the first time humans had entered the gravity field of a body other than the Earth. After 10 hours orbiting the moon on Christmas Eve and day, the crew returned to Earth, and great acclaim. Rehearsal missions in Earth and lunar orbits followed, before Apollo 11 successfully landed on the moon on July 20, 1969, and Neil Armstrong and Buzz Aldrin became the first humans to set foot on another celestial body (Fig. 8.31).

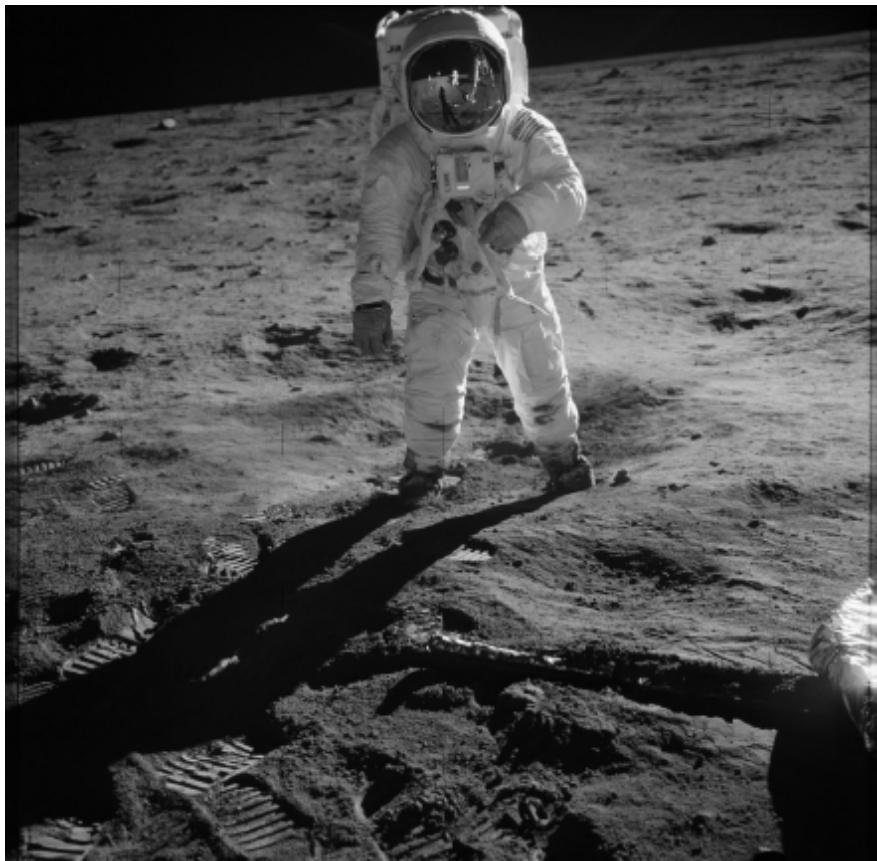

**Figure 8.31** Buzz Aldrin on the Moon, July 1969.

(Source: *NASA*.)

What do you do after you land on the Moon? The U.S. flew another six lunar missions, with five landing successfully and Apollo 13 deemed a “successful failure” because even though the lunar landing attempt was canceled, the crew returned safely to Earth. The Soyuz program flew missions in low Earth orbit, including the establishment of a series of Salyut space stations. The outcome of the great race to the Moon was largely determined by the success of the Saturn V launch vehicle in contrast with the repeated failure of the Soviet equivalent, the N-1 rocket: that story will be told in Ch. 9).



**Figure 8.32** *Skylab—the first U.S. space station.*

(Source: NASA.)

After Apollo 11, a high-level panel chaired by the Vice President [page 738](#) considered options for human space flight going forward. They proposed five possible future plans, the least ambitious of which included large space stations, a permanent base on the lunar surface, and an initial human mission to Mars by 1985. These visions did not take into account

the cost, though, and the U.S. administrations after Apollo were unwilling to continue supporting human space flight at 4% of the national budget, the peak reached during the Apollo program. (Today, NASA's budget is less than 1/2% of the national budget, 1/8 the effective size of Apollo.) The last three planned human missions to the moon were canceled, and the launch vehicles and spacecraft left over from those cancelations were used to create the Skylab program (Fig. 8.32), the first U.S. space station, and the Apollo–Soyuz Test Project, where Apollo and Soyuz spacecraft docked in orbit to demonstrate international cooperation and the potential for mutual rescue.

U.S. plans, greatly reduced in scope from the grandiose visions of the presidential commission, refocused on a long-term orbital space station in LEO and a reusable launch vehicle which could shuttle cargo and crew back and forth to this space station. When this proved to be more costly than available funding could support, NASA decided to focus on the two-stage fully reusable vehicle for low Earth orbit access, hoping to subsequently construct the space station. The fully reusable launch system became more expensive than the allocated funding, so NASA developed the Space Transportation System (STS), or Space Shuttle, a reusable winged orbiter carrying crews of up to eight and up to 32,000 kg of cargo in a 4.6-m diameter, 18.3-m long cylindrical payload bay (see Fig. 2.22). This system flew 135 times over 30 years, from 1981 to 2011, and carried hundreds of astronauts to and from orbit. Two missions failed: the Challenger failed in 1986 due to a problem with one of the solid rocket boosters during launch, and the Columbia broke apart in 2002 after atmospheric entry heating penetrated the damaged thermal protection system.

During the Shuttle program, the composition of the astronaut page 739 corps began to change with NASA's clearly expressed goal of having a diverse team, in terms of gender and race and background. Sally Ride became the first American woman to fly in space, as part of the STS-7 crew on June 18, 1983; and Guion Bluford was the first African-American to fly on the following shuttle mission, STS-8, also in 1983. Shuttle astronauts were no longer just test pilots, but rather selected from many different backgrounds, including medicine, science, and engineering, and this has continued as NASA selects astronauts not only to work on the ISS,

but also to crew return missions to the lunar surface, future operations on new space stations, and possible excursions as far as Mars.

As the shuttle program progressed, NASA started working on its goal for a permanently crewed space station in low Earth orbit. After a number of abortive attempts were canceled, it became clear that the key to success was to collaborate with a number of other nations, including Russia (no longer the Soviet Union by this time), Canada, Japan, and the European Union in what became the International Space Station, or ISS. Since June 25, 2000, the ISS (Fig. 8.33) has been crewed continuously by at least two people, and frequently with up to six astronauts and cosmonauts. It has been a shining example of the benefit of international cooperation, and, even though it was only designed for a 20-year life, it is expected to continue in orbit until at least 2028 and possibly beyond.

After the retirement of the space shuttles in 2011, the only means for humans to reach the ISS has been via the Russian Soyuz spacecraft, which has flown (at the time of writing) 144 human missions to orbit, 61 of which have been to ISS. The United States wanted, for a number of reasons, to have its own independent means of transporting people into space, but adopted a new paradigm for ISS: two commercial spaceflight companies (SpaceX and Boeing) have been selected to develop vehicles which could rotate crew to and from ISS, providing redundancy if one of the systems had a failure or other incident. The first commercial crew mission was the SpaceX Dragon spacecraft, launching on a Falcon 9 booster to ISS on May 30, 2020.

No one has walked on the moon (or, for that matter, been more than 350 kilometers above the surface of the Earth) since December 14, 1972. A number of presidential administrations have proposed ambitious programs to return to the lunar surface, or to voyage beyond to an asteroid or to Mars, but have not supported the higher budgets necessary to accomplish these missions. By allocating ISS cargo and crew resupply missions to commercial companies, NASA has focused its exploration budget in recent years on the development of the Orion capsule and the Space Launch System (SLS) to carry Orion to the vicinity of the moon. This program is active at the time of writing, and the vision is to include commercial providers for the human lunar landing and ascent vehicles, and a Gateway station near the Moon. Other countries, including Russia and China, have discussed plans for independent human lunar missions, and large aerospace

corporations such as SpaceX and Blue Origin have made no secret of their interest in human settlements in space and specifically on Mars. This is indeed an interesting time to be an aerospace engineer.

---

page 740



**Figure 8.33** The International Space Station in orbit.

(Source: *NASA/Roscosmos*.)

## 8.15 SUMMARY AND REVIEW

Spacecraft come in many different shapes and sizes determined primarily by the mission they are to accomplish. They all have to fly through the same space environment, however, and obey the same laws of physics. This chapter has been an overview of the space environment and the fundamental analytical tools needed to design a mission that would place a satellite in low circular orbit around the Earth, or in an elliptical orbit, or transfer it to a higher circular orbit, or have it follow a trajectory escaping from the gravitational pull of the Earth and heading out toward some other part of the solar system or even interstellar space. The first objective of any mission design is to calculate the necessary velocity a spacecraft would need to achieve at the end of its launch sequence so that it starts out on the correct initial path. Once in orbit, though, there may be any number of

trajectory corrections necessary to adjust this path—these are called orbital maneuvers and are characterized by how much the velocity of the spacecraft needs to change (in magnitude or direction) to start following the new desired path.

After describing the unique features of the space environment [page 741](#) that could affect the design of a space vehicle (distances, velocities, temperatures, pressures, and radiation), the mathematical formula for the trajectory of a spacecraft moving under the influence of gravity alone was derived. This formulation, called the orbit equation, defines the four possible shapes of orbits: circular, elliptical, parabolic, and hyperbolic. The orbital path for any particular spacecraft is determined by the balance between its kinetic energy ( $T$ ) and its potential energy ( $U$ ): if  $T < U$ , the orbit will be a closed circle or ellipse and the spacecraft will remain trapped by the gravitational pull of the planet; if  $T \geq U$ , the orbit will be open and the spacecraft will escape the gravitational pull on a parabolic or hyperbolic trajectory. A hyperbolic orbit would allow the spacecraft to travel to another planet, possibly to orbit that planet, to land on the planet, or to use the planet for a gravity assist maneuver that would change the spacecraft's velocity both in magnitude and direction.

If the spacecraft is to travel through a planetary atmosphere at some point in its mission, there are additional considerations for the design. In particular, the ballistic coefficient of the vehicle is a parameter that will partially determine how far the vehicle will penetrate into the atmosphere before slowing down. A spacecraft approaching a planetary atmosphere generally has a narrow corridor within which to enter, because either undershooting or overshooting could be catastrophic. In addition, the entry velocity and flight path angle are critical quantities that strongly affect the maximum deceleration that will occur during descent and the total amount of heating that the vehicle will experience.

Some of the most important formulas of this chapter are summarized as follows:

1. The steady-state temperature of a passive body in radiative equilibrium with the sun is:

$$T = \sqrt[4]{\frac{\alpha}{\epsilon} \frac{S_{\text{in}} I_{\text{sun}}}{S_{\text{out}} \sigma}} \quad (8.2)$$

where  $\alpha$  and  $\epsilon$  are the absorptivity and emissivity, respectively, of the body,  $S_{\text{in}}$  is the surface area of the body absorbing incoming radiation, and  $S_{\text{out}}$  is the area emitting radiation,  $I_{\text{sun}}$  is the solar insolation, and  $\sigma = 5.67 \times 10^{-8} \frac{\text{W}}{\text{m}^2 \text{K}^4}$  = Stefan–Boltzmann constant.

2. The equation of the orbit or trajectory of a spacecraft under the influence of a central, inverse-square gravitational force field is

$$r = \frac{p}{1 + e \cos \theta} \quad (8.44)$$

where  $r$  is the distance from the central body,  $\theta$  is the angle measured from the axis of symmetry of the orbit,  $p$  is the parameter of the orbit, and  $e$  is the eccentricity. If  $e = 0$ , the orbit a circle; if  $e < 1$ , the orbit is an ellipse; if  $e = 1$ , the orbit is a parabola; and if  $e > 1$ , the orbit is a hyperbola.

3. Kepler's laws are: (1) a satellite describes an elliptical path around its center of attraction; (2) in equal times, the areas swept out by the radius vector from the central body to the satellite are the same; (3) the periods of any two satellites about the same central body are related to their semimajor axes as

$$\tau_1^2 / \tau_2^2 = a_1^3 / a_2^3 \quad \text{or} \quad \tau^2 = \frac{4\pi^2}{\mu} a^3 \quad (8.56) \quad \underline{\text{page 742}}$$

Note that  $\mu = GM$ , where  $G$  is the gravitational constant and  $M$  is the mass of the central body.

4. The geometry of elliptical orbits leads to some useful formulas that relate all the key parameters defining that orbit (such as the periapsis distance  $r_{\min}$ , the apoapsis distance  $r_{\max}$ , and the semimajor axis  $a$  of the ellipse).

$$r_{\min} = \frac{p}{1 + e} \quad \text{and} \quad r_{\max} = \frac{p}{1 - e} \quad (8.45) \text{ and } (8.46)$$

$$a = \frac{1}{2} (r_{\min} + r_{\max}) = \frac{p}{1 - e^2} \quad \text{or} \quad p = a (1 - e^2) \quad (8.48) \text{ and } (8.49)$$

$$\text{and} \quad e = 1 - \left( \frac{r_{\min}}{a} \right) = \left( \frac{r_{\max}}{a} \right) - 1 \quad (8.50)$$

5. The vis-viva equation holds for all types of orbits and allows one to calculate the velocity at any point along the orbit knowing the radial distance and the semimajor axis:

$$V = \sqrt{\mu \left( \frac{2}{r} - \frac{1}{a} \right)} \quad (8.76)$$

6. Two velocities of particular interest are those for a circular orbit (for which  $r = a$ ) and for an escape orbit (for which  $a = \infty$ ). These are

$$V_{\text{circ}} = \sqrt{\frac{\mu}{r}} \quad \text{and} \quad V_{\text{esc}} = \sqrt{2 \frac{\mu}{r}}$$

7. A Hohmann transfer is a minimum energy maneuver that is used to transfer a spacecraft from one circular orbit (radius  $r_1$ ) to another circular orbit (radius  $r_2$ ) around the same central body. This maneuver requires two changes in velocity and the total  $\Delta V$  is

$$\Delta V = \Delta V_1 + \Delta V_2 = \left| \sqrt{\mu \left( \frac{2}{r_1} - \frac{1}{a} \right)} - \sqrt{\frac{\mu}{r_1}} \right| + \left| \sqrt{\frac{\mu}{r_2}} - \sqrt{\mu \left( \frac{2}{r_2} - \frac{1}{a} \right)} \right| \quad (8.85)$$

8. To accomplish a plane change maneuver which would change the orbital inclination by an angle  $\Delta i$ , the following  $\Delta V$  is needed:

$$\Delta V = 2V_\theta \sin\left(\frac{\Delta i}{2}\right) \quad \text{where } V_\theta = \text{component of } V \text{ perpendicular to } r \text{ vector} \quad (8.88)$$

9. Hyperbolic trajectories are characterized by a negative semimajor axis ( $a < 0$ ) and, as the distance away from the central body gets large, the velocity approaches  $V_{\text{HE}}$ , the hyperbolic excess velocity:

$$V_{\text{HE}} = \sqrt{-\frac{\mu}{a}} \quad \text{so} \quad V = \sqrt{\frac{2\mu}{r} + V_{\text{HE}}^2} \quad (8.91)$$

10. There are three types of atmospheric entry paths: ballistic entry (no lift, no thrust), glide entry ( $L/D > 4$ ), and skip entry (small  $L/D < 4$ , large aerodynamic heating). In all cases, the entry dynamics are strongly affected by the ballistic coefficient,  $\beta$ , of the vehicle:

$$\beta = \frac{m}{C_D S} \quad (8.109)$$

---

page 743

## Bibliography

Allen, H. J., and A. J. Eggers. *A Study of the Motion and Aerodynamic Heating of Missiles Entering the Earth's Atmosphere at High Supersonic Speeds*. NACA TR 1381, 1958.

Anderson, J. D., Jr. "An Engineering Survey of Radiating Shock Layers," *AIAA Journal*, vol. 7, no. 9, Sept. 1969, pp. 1665–1675.

- Bate, R. R., D. D. Mueller, and J. E. White. *Fundamentals of Astrodynamics*, Dover Publications, New York, 1971.
- Battin, R. H. *An Introduction to the Mathematics and Methods of Astrodynamics*. American Institute of Aeronautics and Astronautics, New York, 1987.
- Brown, C. D. *Elements of Spacecraft Design*. American Institute of Aeronautics and Astronautics, Reston, VA, 2002.
- Chapman, D. R. *An Approximate Analytical Method for Studying Entry into Planetary Atmospheres*. NASA TR R-11, 1959.
- Emme, E. M. *A History of Space Flight*. Holt, New York, 1965.
- Fortescue, P., G. Swinerd, and J. Stark, editors, *Spacecraft Systems Engineering*, 4th ed., John Wiley & Sons, United Kingdom, 2011.
- Griffin, M. D., and J. R. French. *Space Vehicle Design*, 2nd ed. American Institute of Aeronautics and Astronautics, Reston, VA, 2004.
- Hale, F. J. *Introduction to Space Flight*. Prentice Hall, New Jersey, 1994.
- Hartman, E. P. *Adventures in Research: A History of Ames Research Center 1940–1965*. NASA SP-4302, 1970.
- Kaplan, M. H. *Modern Spacecraft Dynamics and Control*. John Wiley & Sons, New York, 1976.
- Nelson, W. C., and E. E. Loft. *Space Mechanics*. Prentice Hall, New Jersey, 1962.
- Prussing, J. E., and B. A. Conway. *Orbital Mechanics*. Oxford University Press, New York, 1993.
- Von Braun, W., and F. I. Ordway. *History of Rocketry and Space Travel*, 3rd rev. ed. Crowell, New York, 1975.
- Wiesel, W. E. *Spacecraft Dynamics*, 2nd ed. McGraw-Hill, New York, 1997.

## Problems

- 8.1** At the end of a rocket launch of a space vehicle from earth, the burnout velocity is 13 km/s in a direction due south and  $10^\circ$  above the local horizontal. The burnout point is directly over the equator at an altitude of 400 mi above sea level. Calculate the trajectory of the space vehicle.
- 8.2** Calculate and compare the escape velocities from Venus, Earth, Mars, and Jupiter, given the following information:

	Venus	Earth	Mars	Jupiter
$k^2, \text{ m}^3/\text{s}^2$	$3.24 \times 10^{14}$	$3.96 \times 10^{14}$	$4.27 \times 10^{13}$	$1.27 \times 10^{17}$
$r, \text{ m}$	$6.16 \times 10^6$	$6.39 \times 10^6$	$3.39 \times 10^6$	$7.14 \times 10^7$

- 8.3** The mass and radius of the earth's moon are  $7.35 \times 10^{22}$  [page 744](#) kg and  $1.74 \times 10^6$  m, respectively. Calculate the orbital and escape velocities from the moon.
- 8.4** It is known that the period of revolution of the earth about the sun is 365.3 days and that the semimajor axis of the earth's orbit is  $1.495 \times 10^{11}$  m. An astronomer notes that the period of a distant planet is 29.7 earth years. What is the semimajor axis of the distant planet's orbit? Check in a reference source (encyclopedia, online, or the like) what planet of the solar system this might be.
- 8.5** The International Space Station (ISS) orbits the earth at an altitude of roughly 400 km. It is powered by 8 solar array wings, each of which supports 2 deployable rectangular solar arrays that measure approximately 34 m by 5 m. If the absorptivity to emissivity ratio for these solar arrays is 1.15, calculate their steady state temperature when pointed directly at the sun. Determine how this temperature changes as a function of the angle  $\theta$  between the normal to the array and the line to the Sun.
- 8.6** The Parker Solar Probe was launched on August 12, 2018, and inserted on a trajectory that will take it to within 6.2 million km of the Sun in order to study the solar corona. At this point of closest approach, the spacecraft will have its thermal protection shield pointed toward the Sun with an area of roughly  $7 \text{ m}^2$ . If you assume the spacecraft acts like a black body (not a very good assumption but okay for approximate calculations), and that the surface area that will be radiating outwards is  $20 \text{ m}^2$ , what  $\alpha/\varepsilon$  ratio is necessary in order to keep the temperature below 1600 K?
- 8.7** Consider a spherical asteroid entering the solar system and traveling in toward the Sun. Determine the variation of steady-state temperature of this body by comparing the temperature it would have at Pluto's orbit to that at the orbital distance of Mercury. You can assume the asteroid acts like a black body and that its  $\alpha/\varepsilon$  ratio is equal to 1.

- 8.8** There is a finite probability of an asteroid colliding with the earth in a cataclysmic event. Such collisions are known to have occurred over the history of the earth, and some responsible scientific and technical organizations, including the American Institute of Aeronautics and Astronautics (AIAA), have studied what measures could be taken if such an event were to threaten the earth in the foreseeable future. Consider the head-on collision of an asteroid with the earth. Assume that the asteroid's velocity (in a reference frame fixed on the sun) is equal to nine-tenths of the escape velocity from the sun. In the same reference frame, the velocity of the earth around the sun is 29.77 km/s. Calculate the velocity, relative to the earth, at which the asteroid would enter the earth's atmosphere. Assume that the earth is moving in a circular orbit about the sun, with a radius of  $147 \times 10^9$  m. *Note:* This problem represents a worst-case scenario where there is a head-on collision between the earth traveling in one direction and the asteroid traveling in the opposite direction.
- 8.9** The *LANDSAT C* earth resources satellite has a nearly circular orbit with an eccentricity of 0.00132. At perigee the satellite is at an altitude (measured from the earth's surface) of 417 km. Calculate its altitude at apogee.
- 8.10** For the orbital conditions of the *LANDSAT C* satellite described in Prob. 8.9, calculate its period.
- 8.11** Calculate the velocity of the *LANDSAT C* satellite at perigee, given the orbital conditions in Prob. 8.9.
- 8.12** The next five problems are based on the *Messenger* spacecraft launched from Earth on August 3, 2004. After gravity-assist maneuvers around the earth, Venus, and Mercury, *Messenger* went into orbit around Mercury on March 18, 2011. The radius and mass of Mercury are 2,440 km and  $3.3 \times 10^{23}$  kg, respectively. The orbit is designed to be highly elliptical, with the altitude of closest approach (periapsis) of 200 km, and the altitude of farthest distance (apoapsis) of 15,193 km. (*Note:* These are altitudes above the surface of Mercury, not the distances from the center of the planet.) Calculate the period of the *Messenger* orbit. Ignore the influence of the gravitational attraction of the sun on the spacecraft orbit.

- 8.13** For the *Messenger* spacecraft in orbit about Mercury [page 745](#) (see Prob. 8.12), calculate the spacecraft's velocity at periapsis and at apoapsis.
- 8.14** For the *Messenger* spacecraft in orbit about Mercury (see Probs. 8.12 and 8.13), calculate its angular momentum per unit mass.
- 8.15** What is the eccentricity of the *Messenger*'s orbit about Mercury?
- 8.16** From the characteristics and properties of the orbit, some of which are given in Prob. 8.12, it is not possible to extract the mass of the *Messenger* spacecraft. Why?
- 8.17** *Messenger*'s orbit was adjusted in March 2012 to have a lower eccentricity with a period of only 8 hours and a maximum altitude of 10,150 km (apoapsis) above the surface of Mercury. This resulted in more orbits per day and a lower altitude for most of the orbit, so additional coverage of the planet. Under these circumstances, determine the semimajor axis  $a$ , the eccentricity  $e$ , and the parameter  $p$  of this new orbit.
- 8.18** For the elliptical orbit described in Prob. 8.17, determine the velocity of the *Messenger* spacecraft at apoapsis and at periapsis.
- 8.19** Consider the Space Shuttle in a circular low earth orbit at an altitude of 200 km above sea level. It is desired to boost the Shuttle to a higher circular orbit at an altitude of 500 km above sea level by means of a Hohmann transfer. Calculate the total impulse  $\Delta V$  required for this maneuver.
- 8.20** Consider a Martian satellite in a circular orbit about Mars with an orbital radius of 15,000 km. It is desired to lower this satellite to a circular orbit of radius 8,000 km using a Hohmann transfer. Calculate the total impulse required for this maneuver.
- 8.21** Compare the  $\Delta V$  required to perform a plane change maneuver of  $12^\circ$  in low earth orbit at 400 km altitude, to that required to perform the same plane change maneuver at geosynchronous altitude. In both cases, you can assume that the orbit is circular.
- 8.22** Consider an alien spacecraft from another star entering our solar system and heading toward Earth with a hyperbolic excess velocity of

$V_{\text{HE}} = 17$  km/s. What is the semimajor axis  $a$  of this hyperbolic trajectory with respect to Earth, and what is its velocity at perigee if its distance at closest approach is 8,000 km?

## Propulsion

We have sought power in the same fire which serves to keep the vessel aloft. The first which presented itself to our imagination is the power of reaction, which can be applied without any mechanism, and without expense: it consists solely in one or more openings in the vessel on the side opposite to that in which one wishes to be conveyed.

Joseph Montgolfier, 1783—the first recorded technical statement in history on  
jet propulsion for a flight vehicle

I began to realize that there might be something after all to Newton's Laws.

Robert H. Goddard, 1902

### 9.1 INTRODUCTION

The old saying that “you cannot get something for nothing” is particularly true in engineering. For example, the previous chapters have discussed the aerodynamic generation of lift and drag; the performance, stability, and control of airplanes; and the motion of spacecraft. All of this takes the expenditure of *power*, or *energy*, which is supplied by an engine or propulsive mechanism of some type. The study of *propulsion* is the subject of this chapter. Here we examine what makes an airplane or space vehicle go.

#### PREVIEW BOX

In Chs. 1–8 of this book, we have dealt with aerodynamics and flight dynamics associated with airplanes in flight and some aspects of astronautics associated with a vehicle moving through outer space. We have taken for granted that the airplanes had engines to power themselves through the air—to keep them going—and that the space vehicles had engines to boost themselves from the earth's surface into space. Now is the time to look at the engines themselves—to venture into the discipline of *flight propulsion*.

We begin this chapter with the reciprocating engine–propeller combination, a historically classic propulsion device, the same type of power plant used by the Wright brothers for their 1903 *Flyer* (see Fig. 1.2), and virtually the only type of aircraft propulsion during the first half of the 20th century. Reciprocating engines and propellers are still used today for the vast majority of small general aviation airplanes. Reciprocating engines—these are the same type of engines used in automobiles today. How do they work? How do they produce power? For automobiles this power is used to turn wheels. For airplanes the power is used to turn a propeller, which in turn generates thrust, which in turn propels the airplane forward. How does all this happen? You will find the answers to this and the previous questions in this chapter.

By the mid-1940s, a propulsion revolution occurred—the development of the first practical jet engines. The jet engine revolutionized the world of atmospheric flight. Its invention is arguably the second most important milestone in the history of flight, the first being the Wright brothers' invention of the first practical airplane at the turn of the century. The jet engine made possible high-speed flight, near and beyond the speed of sound. It opened the world to safe, reliable, convenient, and rapid travel across oceans and between distant countries. Any study of flight propulsion today is dominated by the study of jet engines. This chapter is no exception.

What is so magical about jet engines? How can they produce so much thrust that they propel aircraft to Mach 1 and higher? There must be some interesting physics going on here. What is it? How can you calculate the thrust of a jet engine? You will find the answers in this chapter.

Jet engines and rocket engines are both members of the general family of *jet propulsion devices*. Rocket engines, however, by their very nature and in their specific design features, are different enough from jet engines to deserve a separate study all their own. Indeed, in some college curricula, air-breathing propulsion and rocket propulsion are two separate (but related) courses. What are the differences? The final third of this chapter is devoted to rocket engines, and it provides some explanation of the differences.

Rocket engines, with their tremendous thrust, and because they carry their own fuel and oxidizer and hence do not need air for their operation, are at present the only type of engines that can boost vehicles into space from the earth's surface. How do rocket engines produce so much thrust? How can you calculate the thrust of a rocket engine? Most space vehicles are boosted into space by not one, but rather two or more rocket engine stages that are mounted on top of each other, with each spent stage dropping away from the vehicle as the next stage is ignited. What is going on here? Why are most space vehicles boosted into space by multistage rocket boosters? Imagine that you are an

astronaut in the space vehicle and your final rocket stage burns out. How can you calculate the velocity of your space vehicle? Will it be enough to get you into space and on your way to accomplish your mission in space? You can certainly appreciate the importance of the answers to these questions. This chapter gives you some answers.

Remember that a flight vehicle is a system involving aerodynamics, flight dynamics, structures, and propulsion. All four of these disciplines must work successfully and synergistically for the flight vehicle to be a success. Propulsion is a particularly important element of the system, and therefore this chapter is a particularly important part of this book. In addition, propulsion is a particularly interesting subject involving the harnessing and conversion of sometimes huge amounts of energy to produce sometimes large amounts of thrust, involving intricate machines. A study of propulsion is fun. I hope you will find it that way as you read through this chapter. Strap yourself in, open the throttle, and enjoy.


Throughout Ch. 1), the dominant role played by propulsion in the advancement of manned flight is clearly evident. George Cayley was concerned in 1799, and he equipped his airplane designs with paddles. Henson and Stringfellow did better by considering “airscrews” powered by steam engines, although their efforts were unsuccessful. In 1874, Felix Du Temple momentarily hopped off the ground in a machine powered by an obscure type of hot-air engine; he was followed by Mozhaiski in 1884, who used a steam engine (see Figs. 1.13 and 1.14). By the late 19th century, the early aeronautical engineers clearly recognized that successful manned flight depended on the development of a lightweight but powerful engine. Fortunately, the advent of the first practical internal combustion engine in 1860 paved the way for such success. However, in spite of the rapid development of these gasoline-powered engines and their role in the early automobile industry, such people as Langley (Sec. 1.7) and the Wright brothers (Sec. 1.8) still were forced to design their own engines to obtain the high horsepower-to-weight ratio necessary for flight. Such internal combustion reciprocating engines driving a propeller ultimately proved to be a winning combination and were the only practical means of airplane propulsion up to World War II. In the process, such engines grew in horsepower from the 12-hp Wright-designed engine of 1903 to the 2200-hp radial engines of 1945, correspondingly pushing flight velocities from 28 to more than 500 mi/h.

Then a revolution in propulsion occurred. Frank Whittle took out a patent in Britain in 1930 for a jet-propelled engine and worked ceaselessly on its development for a decade. In 1939, the German Heinkel He 178 airplane flew with a turbojet engine developed by Dr. Hans von Ohain. It was the first

successful jet-propelled test vehicle. This led to the German Me 262 jet fighter late in World War II. Suddenly, jet engines became the dominant power plants for high-performance airplanes, pushing flight velocities up to the speed of sound in the 1950s and beyond in the 1960s and 1970s. Today the airplane industry rides on jet propulsion, and jet-propelled supersonic flight for military airplanes is a regular occurrence.

Meanwhile, another revolution of even greater impact occurred: the advent of the successful rocket engine. Pioneered by Konstantin Tsiolkovsky (1857–1935) in Russia, Robert H. Goddard (1882–1945) in the United States, and Hermann Oberth (b. 1894–1989) in Germany, the rocket engine first became operational in 1944 with the German V-2 missile. Being the only practical means of launching a vehicle into space, the rocket engine soon proved itself during the space age, allowing people to go to the moon and to probe the deep unknown regions of our solar system.

It is clear from these brief historical sketches that propulsion has led the way for all major advancements in flight velocities. Propulsion is one of the major disciplines of aerospace engineering; therefore, in the following sections, some of the basic principles of propellers, reciprocating engines, turbojets, ramjets, and rockets will be examined. Such propulsion devices are highly aerodynamic. Thus, a firm understanding of the aerodynamic and thermodynamic fundamentals presented in Chs. 4 and 5 will help you grasp the propulsion concepts discussed in this chapter.

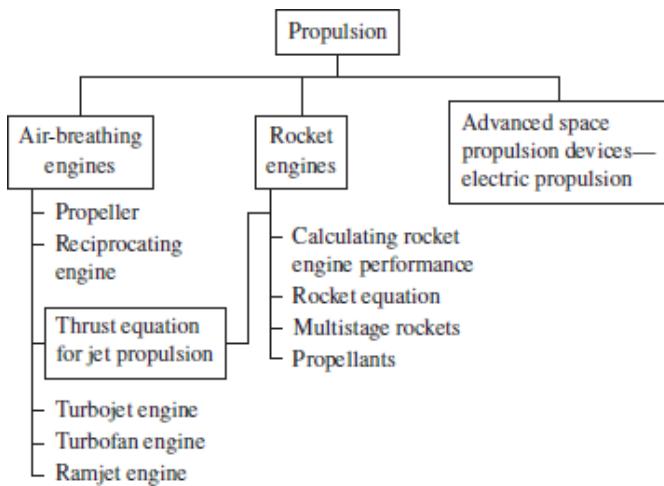

**Figure 9.1** Road map for Ch. 9).


page 749

The road map for this chapter is shown in Fig. 9.1. Flight propulsion devices for aerospace vehicles can be categorized into the three main columns in Fig. 9.1: air-breathing engines, rocket engines, and advanced space propulsion devices.

Air-breathing engines constitute the left column in Fig. 9.1; from their name, it is clear that they are designed to use the oxygen in the atmosphere for an oxidizer. We begin this chapter by discussing the propeller and the reciprocating engine, the combination of which was the main power plant for the first 50 years of successful powered flight. We then examine the principle of jet propulsion, and we derive the thrust equation for jet propulsion devices (which include both jet and rocket engines). With this, we tour down the remainder of the left column and examine the three main types of air-breathing jet engines: the turbojet, turbofan, and ramjet. The middle column in Fig. 9.1 deals with rocket engines—propulsion devices that carry their own fuel and oxidizer and therefore are independent of the atmosphere. We examine how the performance of a rocket engine (thrust and efficiency) can be calculated and how we can predict what weight of payload can be accelerated to what velocity by a rocket (the rocket equation). The performance of a multistage rocket vehicle (as opposed to a single large rocket) is calculated and discussed. Also, the important aspects of chemical rocket engine propellants are mentioned. Finally, we examine some of the basic concepts for advanced space propulsion (the right column in Fig. 9.1).

## 9.2 PROPELLER

Airplane wings and propellers have something in common: They are both made up of airfoil sections designed to generate an aerodynamic force. The wing force provides lift to sustain the airplane in the air; the propeller force provides thrust to push the airplane through the air. A sketch of a simple three-blade propeller is given in Fig. 9.2, illustrating that a cross section is indeed an airfoil shape. However, unlike a wing, where the chord lines of the airfoil sections are essentially all in the same direction, a propeller is twisted so that the chord line changes from being almost parallel to  $V_\infty$  at the root to almost perpendicular at the tip. This is illustrated in Fig. 9.3, which shows a side view of the propeller, as well as two sectional views, one at the tip and the other at the root. Study this figure carefully. The angle between the chord line and the propeller's plane of rotation is defined as the *pitch angle*  $\beta$ . The distance from the root to a given section is  $r$ . Note that  $\beta = \beta(r)$ .

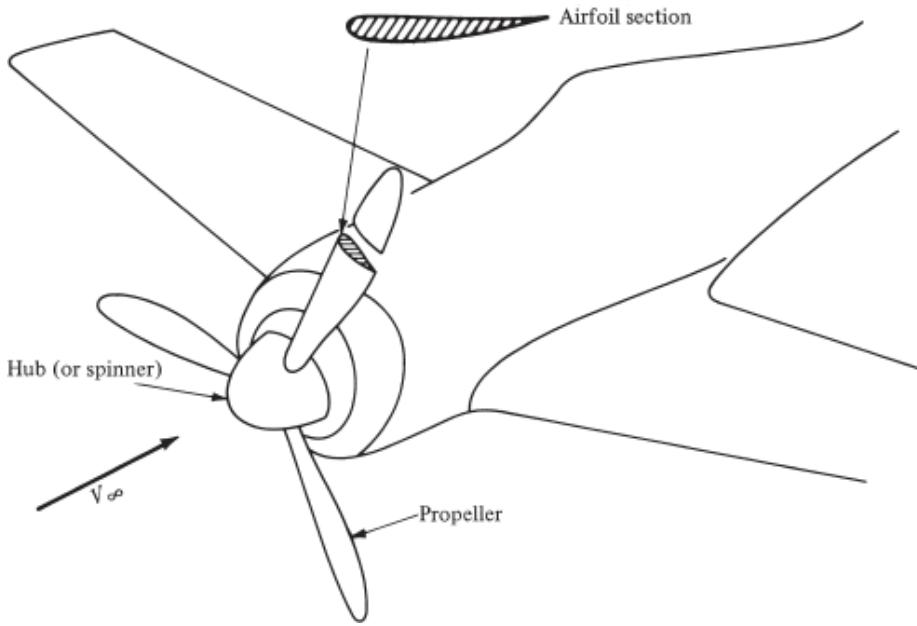


**Figure 9.2** The airplane propeller, emphasizing that a propeller cross section is an airfoil shape.

The airflow seen by a given propeller section is a combination of the page 750 airplane's forward motion and the rotation of the propeller itself. This is sketched in Fig. 9.4a, where the airplane's relative wind is  $V_\infty$  and the speed of the blade section due to rotation of the propeller is  $r\omega$ . Here  $\omega$  denotes the angular velocity of the propeller in radians per second. Hence, *the relative wind seen by the propeller section is the vector sum of  $V_\infty$  and  $r\omega$* , as shown in Fig. 9.4b.


Clearly, if the chord line of the airfoil section is at an angle of attack  $\alpha$  with respect to the local relative wind  $V$ , then lift and drag (perpendicular and parallel to  $V$ , respectively) are generated. In turn, as shown in Fig. 9.5, the components of  $L$  and  $D$  in the direction of  $V_\infty$  produce a net *thrust*  $T$ :

$$T = L \cos \phi - D \sin \phi \quad (9.1)$$

where  $\phi = \beta - \alpha$ . This thrust, when summed over the entire length of the propeller blades, yields the net thrust available ( $T_A$  as defined in Ch. 6)), which drives the airplane forward.

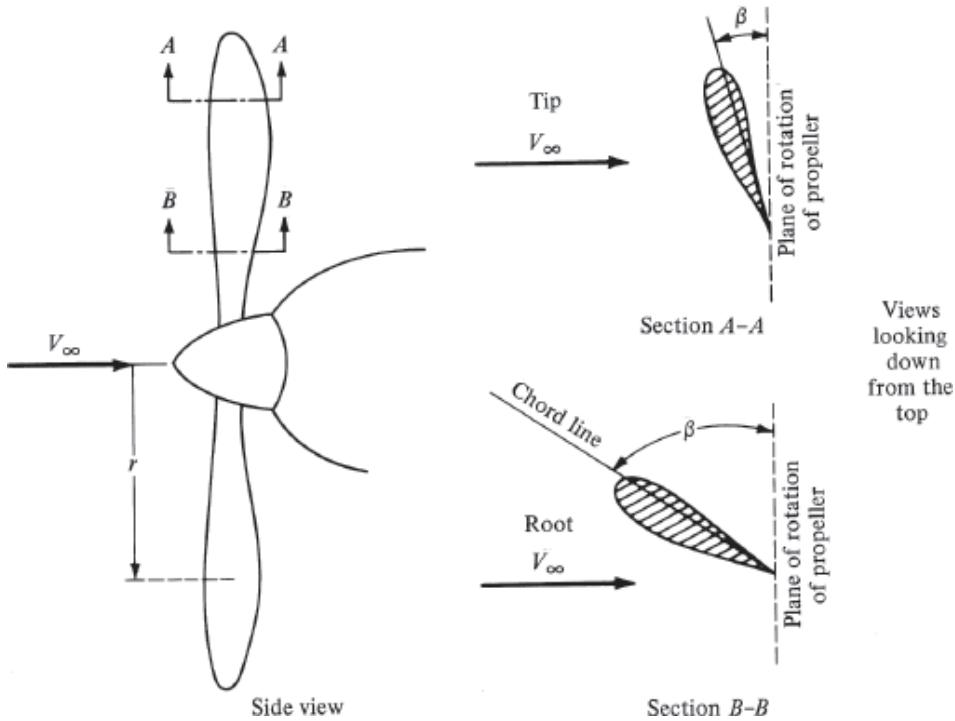


**Figure 9.3** Illustration of propeller, showing variation of pitch along the blade.

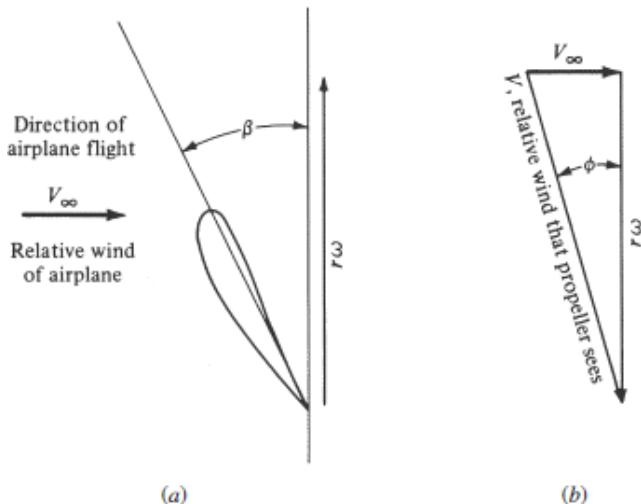

**Figure 9.4** Velocity diagram for the flow velocity relative to the propeller.

This simple picture is the essence of how a propeller works. However, the actual prediction of propeller performance is more complex. The propeller is analogous to a finite wing that has been twisted. Therefore, the aerodynamics of the propeller are influenced by the same induced flow due to tip vortices as was described for the finite wing in Secs. 5.13 and 5.14. Moreover, due to the propeller twist and rotational motion, the aerodynamic theory is even more

complicated. However, propeller theory has been extensively developed, and more details can be found in the books by Dommasch et al. and Glauret (see the bibliography at the end of this chapter). Such theory is beyond the scope of this book.

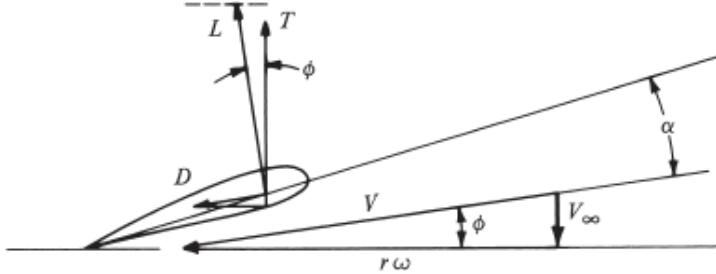

**Figure 9.5** Generation of propeller thrust.

page 752

Instead, let us concentrate on understanding the propeller efficiency  $\eta$  introduced in Sec. 6.6. From Eq. (6.30), the propeller *efficiency* is defined as

$$\eta = \frac{P_A}{P} \quad (9.2)$$

where  $P$  is the shaft brake power (the power delivered to the propeller by the shaft of the engine) and  $P_A$  is the power available from the propeller. As given in Eq. (6.31),  $P_A = T_A V_\infty$ . Hence Eq. (9.2) becomes

$$\eta = \frac{T_A V_\infty}{P} \quad (9.3)$$

As previously explained,  $T_A$  in Eq. (9.3) is basically an aerodynamic phenomenon that is dependent on the angle of attack  $\alpha$  in Fig. 9.5. In turn,  $\alpha$  is dictated by the pitch angle  $\beta$  and  $\phi$ , where  $\phi$  itself depends on the magnitudes of  $V_\infty$  and  $r\omega$ . The angular velocity  $\omega = 2\pi n$ , where  $n$  is the number of propeller revolutions per second. Consequently,  $T_A$  must be a function of at least  $\beta$ ,  $V_\infty$ , and  $n$ . Finally, the thrust must also depend on the size of the propeller, characterized by the propeller diameter  $D$ . In turn, the propeller efficiency, from Eq. (9.3), must depend on  $\beta$ ,  $V_\infty$ ,  $n$ , and  $D$ . Indeed, theory and experiment both show that for a fixed pitch angle  $\beta$ ,  $\eta$  is a function of the dimensionless quantity

$$J = \frac{V_\infty}{nD} \quad \text{advance ratio}$$


A typical variation of  $\eta$  with  $J$  for a fixed  $\beta$  is sketched in Fig. 9.6; three curves are shown corresponding to three different values of pitch. Figure 9.6 is

important; from such curves  $\eta$  is obtained for an airplane performance analysis, as described in Ch. 6).

Examine Fig. 9.6 more closely. Note that  $\eta < 1$ ; this is because some of the power delivered by the shaft to the propeller is always lost, and hence  $P_A < P$ . These losses occur because of several different effects. First imagine that you are standing in an open field. The air is still; it has no velocity. Then a propeller-driven vehicle goes zooming by you. After the propeller has passed, you will feel a stiff breeze moving in the direction opposite that of the vehicle. This breeze is part of the slipstream from the propeller; that is, the air is set into both translational and rotational motion by the passage of the propeller. Consequently, you observe some translational and rotational *kinetic energy* of the air where before there was none. This kinetic energy has come from part of the power delivered by the shaft to the propeller; it does no useful work and hence robs the propeller of some available power. In this fashion, the energy of the slipstream relative to the still air ahead of the vehicle is a source of power loss. Another source is frictional loss due to the skin friction and pressure drag (profile drag) on the propeller. Friction of any sort always reduces power. A third source is *compressibility* loss. The fastest-moving part of the propeller is the tip. For many high-performance engines, the propeller tip speeds result in a near-sonic relative wind. When this occurs, the same type of shock wave and boundary layer separation losses that cause the drag-divergence increase for wings (see Sec. 5.10) now rob the propeller of available power. If the propeller tip speed is supersonic,  $\eta$  drops dramatically. This is the primary reason why propellers have not been used for transonic and supersonic airplanes. (After World War II, the NACA and other laboratories experimented with swept-back propellers, motivated by the success obtained with swept wings for high-speed flight; but nothing came of these efforts.) As a result of all the losses described here, the propeller efficiency is always less than unity.

---


page 753

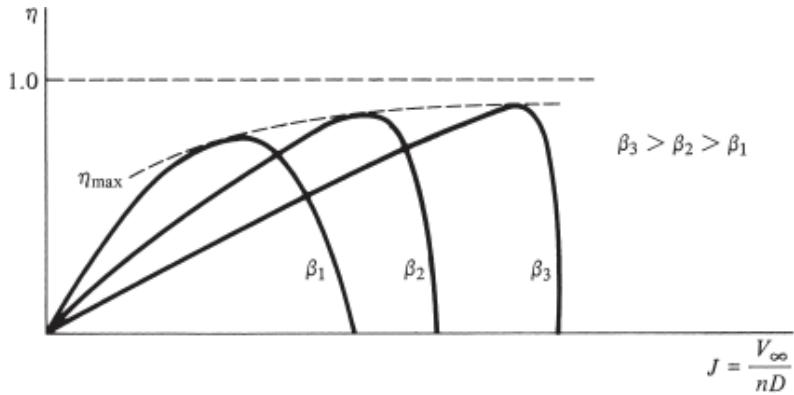

**Figure 9.6** Propeller efficiency versus advance ratio. Note that  $D$  denotes propeller diameter.

Return again to Fig. 9.6. Note that for a fixed  $\beta$ , the efficiency is zero at  $J = 0$ , increases as  $J$  increases, goes through a maximum, and then rapidly decreases at higher  $J$ , finally again going to zero at some large finite value of  $J$ . Why does  $\eta$  go to zero for the two different values of  $J$ ? At the origin, the answer is simple. Consider a propeller with given values of  $n$  and  $D$ ; hence  $J$  depends only on  $V_\infty$ . When  $V_\infty = 0$ , then  $J = 0$ . However, when  $V_\infty = 0$ , then  $P_A = T_A V_\infty = 0$ ; consequently  $\eta = P_A/P = 0$ . Thus, propeller efficiency is zero at  $J = 0$  because there is no motion of the airplane and hence no power available. At the other extreme, when  $V_\infty$ , and hence  $J$ , is made large, the propeller loses lift owing to small angles of attack. This is shown in Fig. 9.7. Consider a given propeller airfoil section at a distance  $r$  from the center. Assume  $\omega$ ; hence  $r\omega$  remains constant. If  $V_\infty$  is small, the relative wind will be as shown in Fig. 9.7a, where the airfoil section is at a reasonable angle of attack and therefore produces a reasonable lift. Now if  $V_\infty$  is increased, the relative wind approaches the chord line; hence  $\alpha$ , and therefore the lift coefficient, decreases. If the value of  $V_\infty$  is such that the relative wind corresponds to the zero-lift line, then the lift (and hence the thrust) is zero, and again  $\eta = T_A V_\infty / P = 0$ . In fact, if  $V_\infty$  is made even larger, the section will produce negative lift, and hence reverse thrust, as shown in Fig. 9.7b.

page 754

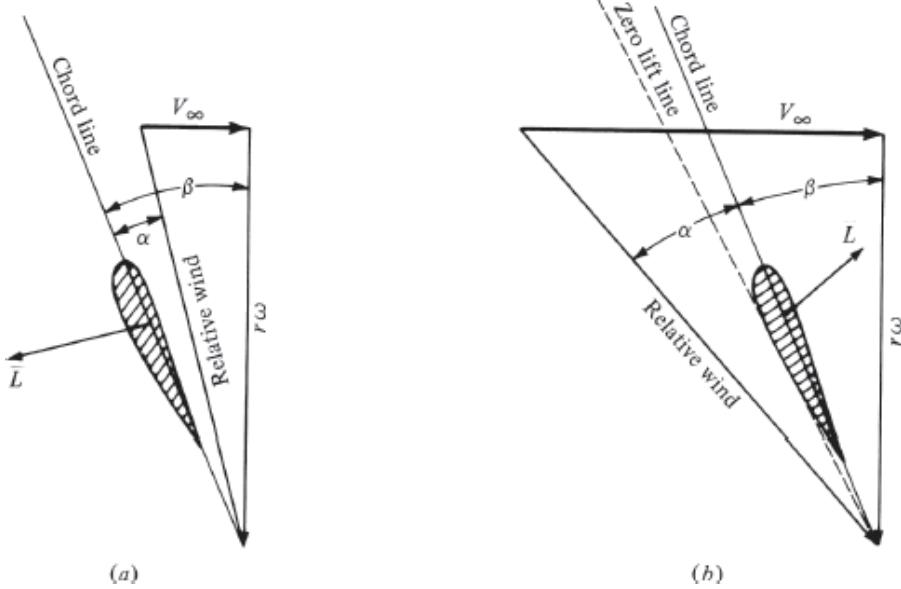


**Figure 9.7** Explanation of the variation of propeller efficiency with advance ratio. (a) Velocity diagram for low  $V_\infty$ . (b) Velocity diagram for high  $V_\infty$ .

A consideration of the relative wind also explains why a propeller blade is twisted, with a large  $\beta$  at the root and a small  $\beta$  at the tip, as was first sketched in Fig. 9.3. Near the root  $r$ , and hence  $r\omega$ , is small. Thus, as shown in Fig. 9.8a,  $\beta$  must be large to have a reasonable  $\alpha$ . In contrast, near the tip,  $r$ , and hence  $r\omega$ , is large. Thus, as shown in Fig. 9.8b,  $\beta$  must be smaller in order to have a reasonable  $\alpha$ .

Return again to Fig. 9.6. All early airplanes before 1930 had *fixed-pitch propellers*; that is, the values of  $\beta$  for all sections were geometrically fixed by the design and manufacture of the blades. Once the propeller was rigidly mounted on the engine shaft, the pilot could not change the blade angle. Thus, from the curves in Fig. 9.6, maximum propeller efficiency could be obtained only at a specific value of the advance ratio  $J$ . At other flight velocities, the propeller always operated at efficiencies less than maximum. This characteristic severely limited airplane performance. Some improvement, albeit small, was attempted in 1916 at the Royal Aircraft Factory at Farnborough, England, by a design of a two-pitch propeller. But the ultimate solution was the *variable-pitch propeller*, patented in 1924 by Dr. H. S. Hele-Shaw and T. E. Beacham in England and first introduced into practical production in 1932 in the United States. The variable-pitch propeller is fixed to a mechanical mechanism in the hub; the mechanism rotates the entire blade about an axis along the length of the blade. In this fashion, the propeller pitch can be continuously varied to maintain maximum efficiency at all flight velocities. This can be visualized as riding along the peaks of the propeller efficiency curves in Fig. 9.6, as shown by the dotted  $\eta_{\max}$  line. A further development of this concept was the introduction in 1935 of the *constant-speed propeller*, which allowed the pitch angle to be varied continuously and automatically to maintain the proper torque on the engine so that the engine revolutions per minute were constant over the range of flight velocities. This is advantageous because the brake power output of aircraft piston engines is usually optimized at a given number of revolutions per minute. Nevertheless, the introduction of the variable-pitch and constant-speed propellers in the 1930s was one of the most important developments in the history of aeronautical engineering. As a result, values of  $\eta$  range from about 0.83 to 0.90 for most modern propellers.


A comment is in order concerning airfoil sections used for propellers. [page 755](#)  
Early propellers from the World War I era typically utilized the RAF-6 airfoil; later the venerable Clark Y shape was employed. During the late 1930s, some of the standard NACA sections were used. However, as aircraft speeds

rapidly increased during World War II, special high-speed profiles were incorporated into propellers. The NACA developed a complete series, the 16 series, which found exclusive use in propellers. This series is different from the wing airfoil sections given in App. D; some typical shapes are sketched in Fig. 9.9. These are thin profiles, designed to minimize the transonic flow effects near the propeller tips. They should be compared with the more conventional shapes in App. D.

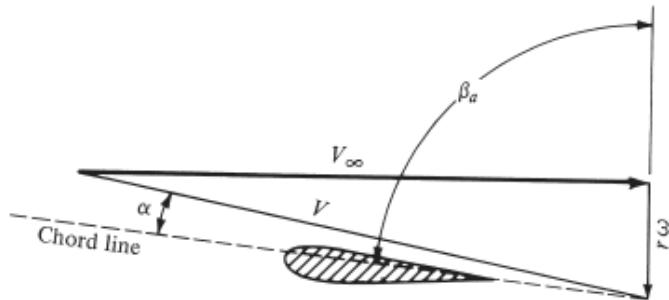


$$\beta_a > \beta_b$$

(a)

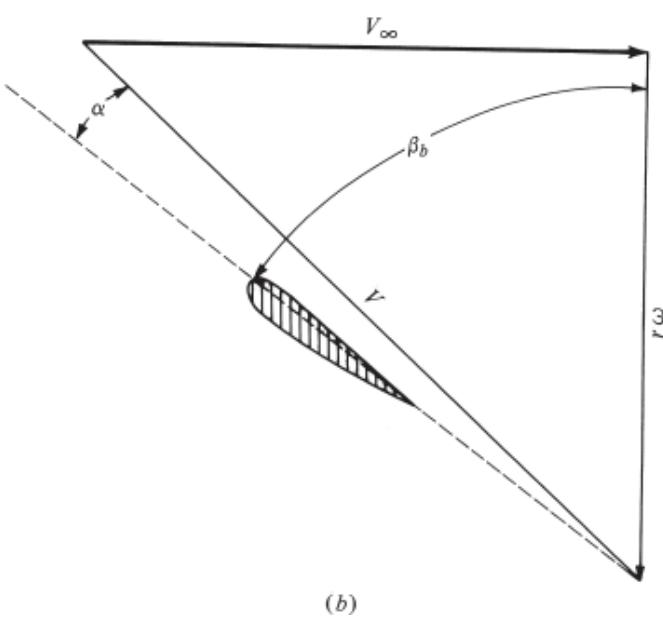

(b)

**Figure 9.8** Difference in the relative wind along the propeller blade. (a) Near the root; (b) near the tip.

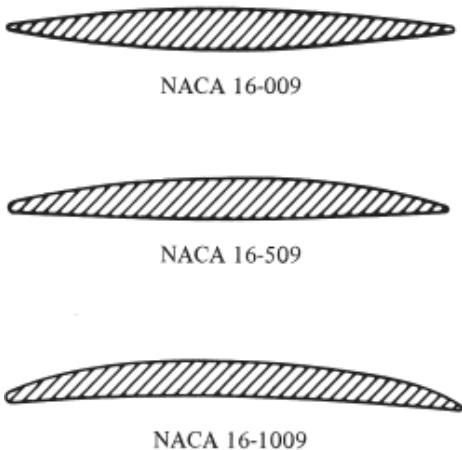

**Figure 9.9** Typical high-speed airfoil sections for propellers.

---


page 756

### 9.3 RECIPROCATING ENGINE


For the first 50 years of successful human flight, the internal combustion, reciprocating, gasoline-burning engine was the mainstay of aircraft propulsion. It is still used today in airplanes designed to fly at speeds less than 300 mi/h, the range for the vast majority of light, private, general aviation aircraft (such as the hypothetical CP-1 in the examples of Ch. 6)). A photograph of a typical internal combustion reciprocating engine is shown in Fig. 9.10.

The basic operation of these engines is a piston moving back and forth (reciprocating) inside a cylinder, with valves that open and close appropriately to let fresh fuel-air mixture in and burned exhaust gases out. The piston is connected to a shaft via a connecting rod that converts the reciprocating motion of the piston to rotational motion of the shaft. A typical four-stroke cycle is illustrated in Fig. 9.11. During the *intake* stroke (Fig. 9.11a), the piston moves downward, the intake valve is open, and a fresh charge of gasoline-air mixture is drawn into the cylinder. This process is sketched on the *p-V* diagram (a plot of pressure versus volume) in Fig. 9.11a. Here point 1 corresponds to the beginning of the stroke (where the piston is at the top, called *top dead center*), and point 2 corresponds to the end of the stroke (where the piston is at the bottom, called *bottom dead center*). The volume  $V$  is the total mixture volume between the top of the cylinder and the face of the piston. The intake stroke takes place at essentially constant pressure, and the total mass of fuel-air mixture inside the cylinder increases throughout the stroke. At the bottom of the intake stroke, the intake valve closes, and the *compression* stroke begins (Fig. 9.11b). Here the piston compresses the now-constant mass of gas from a low pressure  $p_2$  to a higher pressure  $p_3$ , as shown in the accompanying *p-V* diagram. If frictional



effects are ignored, the compression takes place isentropically (see Sec. 4.6) because no heat is added or taken away. At the top of the compression stroke, the mixture is ignited, usually by an electric spark. *Combustion* takes place rapidly before the piston has moved any meaningful distance. Hence, for all practical purposes, the combustion process is one of *constant volume* (Fig. 9.11c). Because energy is released, the temperature increases markedly; in turn, because the volume is constant, the equation of state, Eq. (2.9), dictates that pressure increases from  $p_3$  to  $p_4$ . This high pressure exerted over the face of the piston generates a strong force that drives the piston downward on the *power stroke* (Fig. 9.11d). Again, assuming that frictional and heat transfer effects are negligible, the gas inside the cylinder expands isentropically to the pressure  $p_5$ . At the bottom of the power stroke, the exhaust valve opens. The pressure inside the cylinder instantly adjusts to the exhaust manifold pressure  $p_6$ , which is usually about the same value as  $p_2$ . Then, during the *exhaust stroke*, Fig. 9.11e, the piston pushes the burned gases out of the cylinder, returning to conditions at point 1. Thus, the basic process of a conventional aircraft piston engine consists of a four-stroke cycle: intake, compression, power, and exhaust.

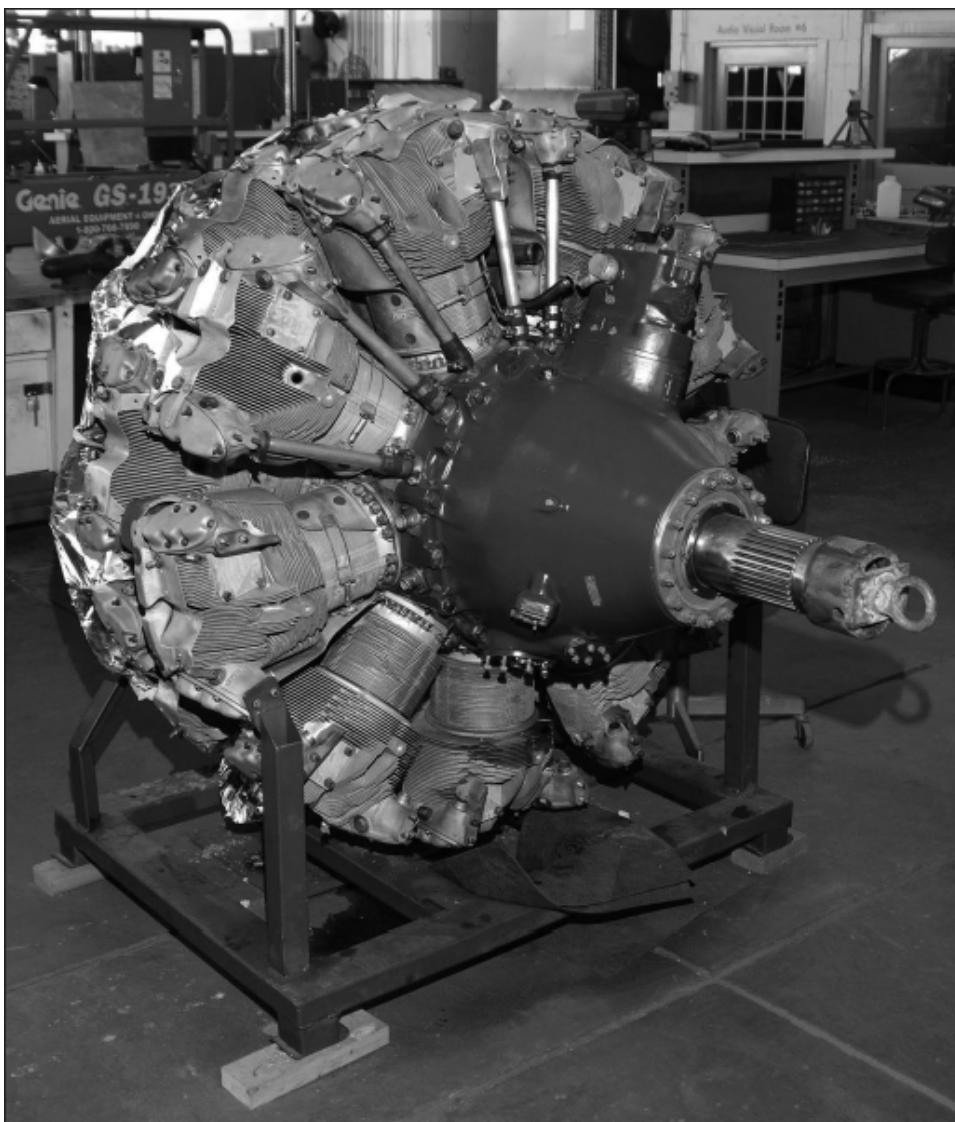



**Figure 9.10** A large radial air-cooled internal combustion aircraft engine.  
(Source: Ben Strasser/U.S. Air Force.)

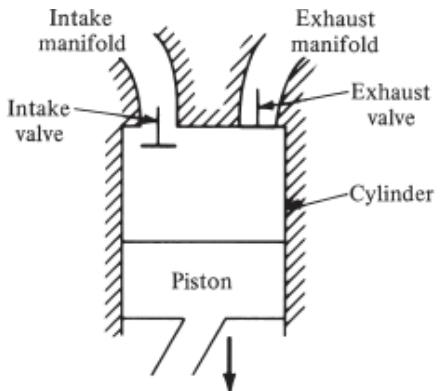


(a)

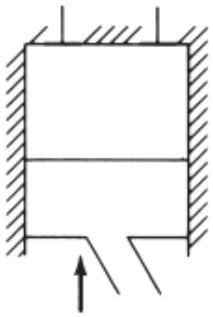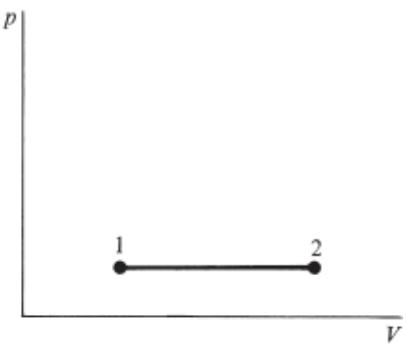

(b)

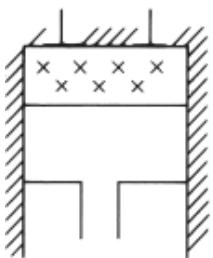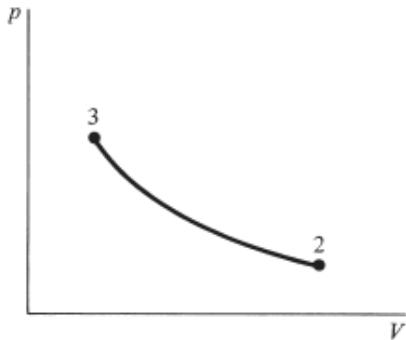

(c)

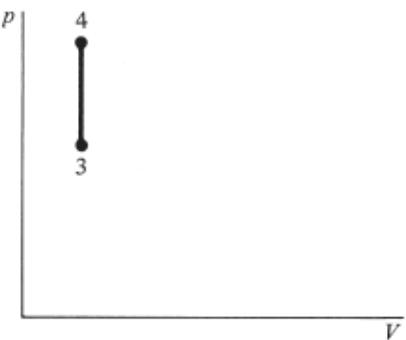

**Figure 9.11** Elements of the four-stroke, internal combustion, reciprocating engine cycle. (a) Intake stroke; (b) compression stroke; (c) constant-volume combustion. (*continued*)

Because of the heat released during the constant-volume combustion, [page 759](#) the cycle delivers a net amount of positive work to the shaft. This work

can be calculated by using the complete  $p$ - $V$  diagram for the cycle, as sketched in Fig. 9.12. Recall from Eq. (4.15) that the amount of work done on the gas due to a change in volume  $dV$  is  $\delta w = -p dV$ . In turn, the work done *by* the gas is simply


$$\delta w = p dV$$

For any part of the process, say during the power stroke, this is equivalent to the small sliver of area of height  $p$  and base  $dV$ , as shown in Fig. 9.12. In turn, the work done by the gas on the piston during the whole power stroke is

$$W_{\text{power stroke}} = \int_{V_4}^{V_5} p dV \quad (9.4)$$

This is given by the area under the curve from point 4 to point 5 in Fig. 9.12. Analogously, the work done by the piston on the gas during the compression stroke is

$$W_{\text{compression stroke}} = \int_{V_3}^{V_2} p dV \quad (9.5)$$

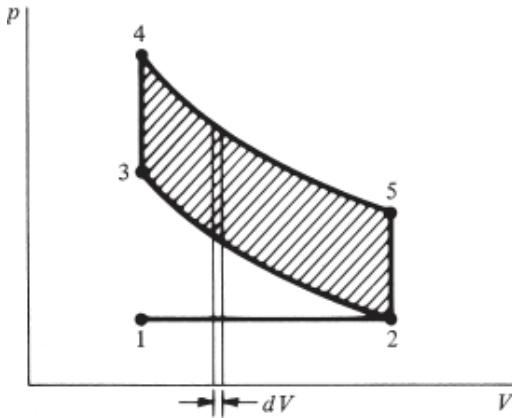

**Figure 9.12** The complete four-stroke cycle for a spark ignition internal combustion engine (the Otto cycle).

This is given by the area under the curve from point 2 to point 3. Consequently, the net work done during the complete cycle  $W$  is

$$W = W_{\text{power stroke}} - W_{\text{compression stroke}} \quad (9.6)$$

This is equal to the shaded area of the  $p$ - $V$  diagram shown in Fig. 9.12. [page 760](#) Thus we see the usefulness of  $p$ - $V$  diagrams in analyzing thermodynamic processes in closed systems: *The area bounded by the complete cycle on a  $p$ - $V$  diagram is equal to the work done during the cycle.*

The power output of this arrangement is the *work done per unit time*. Consider the engine shaft rotating at  $n$  revolutions per second (r/s). The piston goes up and

down once for each revolution of the shaft. Hence, the number of times the complete engine cycle is repeated in 1 s is  $n/2$ . The work output on each cycle is  $W$ , from Eq. (9.6). If the complete engine has  $N$  cylinders, then the power output of the engine is

$$IP = \frac{n}{2} NW \quad (9.7)$$

The symbol IP is used to signify *indicated power*. This is the power that is generated by the thermodynamic and combustion processes inside the engine. However, transmission of this power to the shaft takes place through mechanical linkages, which always generate frictional losses due to moving parts in contact. As a result, the power delivered to the shaft is less than IP. If the *shaft brake power* is  $P$  (see Sec. 6.6), then

$$P = \eta_{\text{mech}}(IP) \quad (9.8)$$

where  $\eta_{\text{mech}}$  is the mechanical efficiency that accounts for friction loss due to the moving engine parts. Then, from Eq. (6.30), the power available to propel the engine-propeller combination is

$$P_A = \eta \eta_{\text{mech}}(IP) \quad (9.9)$$

or from Eq. (9.7)


$$P_A = \eta \eta_{\text{mech}} \frac{n}{2} NW \quad (9.10)$$

If rpm denotes the revolutions per minute of the engine, then  $n = \text{rpm}/60$ , and Eq. (9.10) becomes

$$P_A = \frac{\eta \eta_{\text{mech}}(\text{rpm}) NW}{120} \quad (9.11)$$

Equation (9.11) proves the intuitively obvious fact that the *power available for a propeller-driven airplane is directly proportional to the engine rpm*.

The work per cycle  $W$  in Eq. (9.10) can be expressed in more detailed terms. Consider the piston shown in Fig. 9.13. The length of the piston movement is called the *stroke*  $s$ ; the diameter of the piston is called the *bore*  $b$ . The volume swept out by the piston is called the *displacement*, equal to  $(\pi b^2/4)s$ . Assume that a constant pressure  $p_e$  acts on the face of the piston during the power stroke;  $p_e$  is called the *mean effective pressure*. It is *not* the actual pressure acting on the piston, which in reality varies from  $p_4$  to  $p_5$  during the power stroke; rather,  $p_e$  is an artificially defined quantity that is related to the engine power output and that is an *average* representation of the actual pressure. Furthermore, assume that all the useful work is done on the power stroke. Thus  $W$  is equal to the force on the piston  $(\pi b^2/4)p_e$  times the distance through which the force moves  $s$ ; that is,

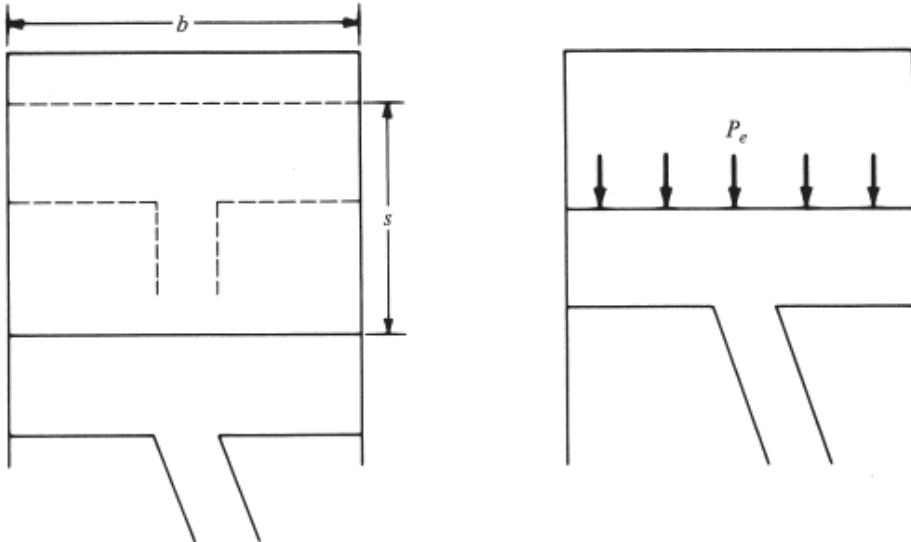

**Figure 9.13** Illustration of bore, stroke, and mean effective pressure.

$$W = \frac{\pi b^2}{4} s p_e \quad (9.12)$$

Combining Eqs. (9.11) and (9.12), we obtain

$$P_A = \eta \eta_{\text{mech}} (\text{rpm}) N \frac{\pi b^2}{4} \frac{s p_e}{120} \quad (9.13)$$

The total displacement of the engine  $d$  is equal to the displacement of each cylinder times the number of cylinders:

$$d = \frac{\pi b^2}{4} s N \quad (9.14)$$

Combining Eqs. (9.13) and (9.14) yields

$$P_A = \frac{\eta \eta_{\text{mech}} (\text{rpm}) d p_e}{120} \quad (9.15)$$

Equation (9.15) indicates that power available is directly proportional to engine rpm, displacement, and mean effective pressure.

In Ch. 6), the altitude effect on  $P_A$  for a reciprocating engine-propeller combination was assumed to be governed by ambient density; that is,  $P_A$  was assumed to be directly proportional to  $\rho_\infty$ . More credence can now be added to this earlier assumption in light of the preceding discussion. For example, Eq. (9.15) shows that  $P_A$  is proportional to  $p_e$ . However,  $p_e$  is representative of the mass of air originally obtained at ambient conditions, then mixed with a small amount of fuel in the intake manifold, and then sucked into the cylinder during the intake stroke. If this mass of air is reduced by flying at higher altitudes where  $\rho_\infty$  is lower, then  $p_e$  will be correspondingly lower. In turn, from Eq. (9.15),  $P_A$

will be correspondingly reduced. Therefore, the assumption that  $P_A \propto \rho_\infty$  is reasonable.

The reduction of  $P_A$  with altitude can be delayed if a *supercharger* is used on the engine. This is basically a pump, driven from the engine crankshaft (a geared supercharger) or driven by a small turbine mounted in the engine exhaust jet (a turbosupercharger). The supercharger compresses the incoming air before it reaches the intake manifold, increasing its density and thereby avoiding a loss in  $P_A$  at altitude. Early work on superchargers was performed in the 1920s by the NACA at Langley. This was important research because an unsupercharged airplane of that day was limited to altitudes on the order of 20,000 ft or less. However, on May 18, 1929, Navy Lt. Apollo Soueck, flying an Apache airplane powered by a supercharged Pratt & Whitney Wasp engine, reached 39,140 ft, an altitude record for that time. Subsequently a substantial portion of the NACA propulsion research was channeled into superchargers, which led to the high- performance engines used in military aircraft during World War II. For modern general aviation aircraft of today, supercharged engines are available as options on many designs and are fixed equipment on others.

A more extensive discussion of reciprocating internal combustion engines is beyond the scope of this book. However, such engines are important to the general aviation industry. In addition, their importance to the automobile industry goes without saying, especially in light of the modern demands of efficiency and low pollutant emissions. Therefore, the interested reader is strongly encouraged to study the subject more deeply; for example, more details can be found in the book by Obert (see the bibliography at the end of this chapter).

### EXAMPLE 9.1

Consider a six-cylinder internal combustion engine with a stroke of 9.5 cm and a bore of 9 cm. The compression ratio is 10. [Note that the *compression ratio* in internal combustion (IC) engine terminology is defined as the volume of the gas in the cylinder when the piston is at bottom dead center divided by the volume of the gas when the piston is at top dead center.] The pressure and temperature in the intake manifold are 0.8 atm and 250 K, respectively. The fuel-to-air ratio of the mixture is 0.06 (by mass). The mechanical efficiency of the engine is 0.75. If the crankshaft is connected to a propeller with an efficiency of 0.83, calculate the power available from the engine–propeller combination for 3000 rpm.

#### ■ Solution

Consider the ideal cycle as sketched in Fig. 9.12. We want to calculate the work done per cycle to ultimately obtain the total power output. To do this, we first need to find  $p_3$ ,  $p_4$ ,  $p_5$ ,  $V_2 = V_5$ , and  $V_3 = V_4$ . Because the compression stroke is isentropic, from Sec. 4.6,

page 763

$$\frac{p_3}{p_2} = \left(\frac{V_2}{V_3}\right)^r = 10^{1.4} = 25.1$$

$$p_3 = 25.1(0.8) = 20.1 \text{ atm}$$

$$\frac{T_3}{T_2} = \left(\frac{V_2}{V_3}\right)^{r-1} = (10)^{0.4} = 2.5$$

$$T_3 = 2.5(250) = 625 \text{ K}$$

Referring to Fig. 9.12, we see that the combustion process from point 3 to point 4 is at constant volume. The chemical energy release in 1 kg of gasoline is approximately  $4.29 \times 10^7 \text{ J}$ . Hence the heat released per kilogram of fuel-air mixture is (recalling that the fuel-to-air ratio is 0.06)

$$q = \frac{(4.29 \times 10^7)(0.06)}{1.06} = 2.43 \times 10^6 \text{ J/kg}$$

From the first law of thermodynamics, Eq. (4.16), and from Eq. (4.23) for a constant-volume process,

$$\delta q = de + pdv = de + 0 = c_v dT$$

Hence

$$q = c_v(T_4 - T_3)$$

or

$$T_4 = \frac{q}{c_v} + T_3$$

We can obtain the value of  $c_v$  from Eq. (4.68), recalling from Example 4.5 that  $c_p = 1008 \text{ J/(kg)(K)}$  for air. Assume that the specific heats and gas constant for the fuel-air mixture are approximated by the air values alone; this is reasonable because only a small amount of fuel is present in the mixture. Hence  $c_v = c_p - R = 1008 - 288 = 720 \text{ J/(kg)(K)}$ . Thus

$$T_4 = \frac{q}{c_v} + T_3 = \frac{2.43 \times 10^6}{720} + 625 = 4000 \text{ K}$$

From the equation of state, noting that  $V_4 = V_3$  and  $R$  is constant, we find  $p_4/p_3 = T_4/T_3$ . Thus

$$p_4 = p_3 \frac{T_4}{T_3} = 20.1 \frac{4000}{625} = 128.6 \text{ atm}$$

For the power stroke, the process is isentropic. Hence

page 764

$$\frac{p_5}{p_4} = \left(\frac{V_4}{V_5}\right)^\gamma = \left(\frac{1}{10}\right)^{1.4} = 0.0398$$

$$p_5 = 128.6(0.0398) = 5.12 \text{ atm}$$

We now have enough thermodynamic information to calculate the work done per cycle. From Eq. (9.5),

$$W_{\text{compression stroke}} = \int_{V_3}^{V_2} p \, dV$$

For an isentropic process,  $pV^\gamma = c$ , where  $c$  is a constant. Thus  $p = cV^{-\gamma}$  and

$$W_{\text{compression}} = c \int_{V_3}^{V_2} V^{-\gamma} dV = \frac{c}{1-\gamma} (V_2^{1-\gamma} - V_3^{1-\gamma})$$

Because

$$c = p_2 V_2^\gamma = p_3 V_3^\gamma$$

$$W_{\text{compression}} = \frac{p_2 V_2 - p_3 V_3}{1 - \gamma}$$

We need volumes  $V_2$  and  $V_3$  to proceed further. Consider Fig. 9.13. The stroke of the piston is 9.5 cm, and the compression ratio is 10. If  $x$  denotes the distance from the top of the cylinder to the piston top dead center position, then from the definition of compression ratio,

$$\frac{x + 9.5}{x} = 10$$

$$x = 1.055 \text{ cm}$$

$$V_2 = \frac{\pi b^2}{4} (9.5 + 1.05) \quad \text{where } b = \text{bore} = 9 \text{ cm}$$

$$= \pi(9)^2 \frac{9.5 + 1.05}{4} = 671.2 \text{ cm}^3$$

$$= 6.712 \times 10^{-4} \text{ m}^3 \quad (\text{remember consistent units})$$

$$V_3 = \frac{V_2}{10} = 0.6712 \times 10^{-4} \text{ m}^3$$

$$\begin{aligned} \text{Thus } W_{\text{compression}} &= \frac{p_2 V_2 - p_3 V_3}{1 - \gamma} \\ &= \frac{[0.8(6.712 \times 10^{-4}) - 20.1(0.6712 \times 10^{-4})]1.01 \times 10^5}{-0.4} = 205 \text{ J} \end{aligned}$$

Similarly, the work done by the power stroke from point 4 to point 5 page 765 (isentropic) is

$$W_{\text{power stroke}} = \int_{V_4}^{V_5} p dV$$

$$W_{\text{power}} = \frac{p_5 V_5 - p_4 V_4}{1 - \gamma}$$

$$= \frac{[5.12(6.712 \times 10^{-4}) - 128.6(0.6712 \times 10^{-4})]1.01 \times 10^5}{-0.4} = 1312 \text{ J}$$

Finally, from Eq. (9.6), the net work per cycle is

$$W = W_{\text{power}} - W_{\text{compression}} = 1312 - 205 = 1107 \text{ J}$$

The total power available from the engine–propeller combination is, from Eq. (9.11),

$$P_A = \frac{1}{120} \eta \eta_{\text{mech}}(\text{rpm}) N W = \frac{0.83(0.75)(3000)(6)(1107)}{120}$$

$$P_A = 1.034 \times 10^5 \text{ J/s}$$

From Sec. 6.6.1, we know that

$$1 \text{ hp} = 746 \text{ J/s}$$

Hence

$$\text{hp}_A = \frac{1.034 \times 10^5}{746} = [138.6 \text{ hp}]$$

*Note:* This example is rather long, with numerous calculations. However, it illustrates many aspects of our discussion on IC engines, and the reader should examine it closely.

## EXAMPLE 9.2

---

For the engine in Example 9.1, calculate the mean effective pressure.

### ■ Solution

From Eq. (9.15),

$$P_A = \frac{1}{120} \eta \eta_{\text{mech}}(\text{rpm}) dp_e$$

where  $d$  is the displacement and  $p_e$  is the mean effective pressure. From Eq. (9.14),

$$d = \frac{\pi b^2}{4} sN = \frac{\pi(9)^2(9.5)(6)}{4} = 3626 \text{ cm}^3 = 3.626 \times 10^{-3} \text{ m}^3$$

Hence from Eq. (9.15) and the results of Example 9.1,

$$1.034 \times 10^5 = \frac{1}{120}(0.83)(0.75)(3000)(3.626 \times 10^{-3})p_e$$


$$p_e = 1.83 \times 10^6 \text{ N/m}^2 = 18.1 \text{ atm}$$

---

page 766

## 9.4 JET PROPULSION—THE THRUST EQUATION

Sections 9.2 and 9.3 have discussed the production of thrust and power by a piston engine–propeller combination. Recall from Sec. 2.2 that the fundamental mechanisms by which nature communicates a force to a solid surface are by means of the surface pressure and shear stress distributions. The propeller is a case in point, where the net result of the pressure and shear stress distributions over the surface of the propeller blades yields an aerodynamic force, the thrust, that propels the vehicle forward. Another effect of this thrust on the propeller is an equal and opposite reaction that yields a force on the air itself, pushing it backward in the opposite direction of the propeller thrust; that is, a change in momentum is imparted to the air by the propeller, and an alternative physical explanation of the production of thrust is that  $T$  is equal to the time rate of change of momentum of the airflow. For a propeller, this change in momentum is in the form of a large mass of air being given a small increase in velocity (about 10 m/s). However, keep in mind that the basic mechanism producing thrust is still the distribution of pressure and shear stress over the surface. Also, as in the case of lift produced by a wing, the thrust is primarily due to just the pressure distribution [see Eq. (9.1) and Fig. 9.5]; the shear stress is predominantly a drag-producing mechanism that affects the torque of the propeller.

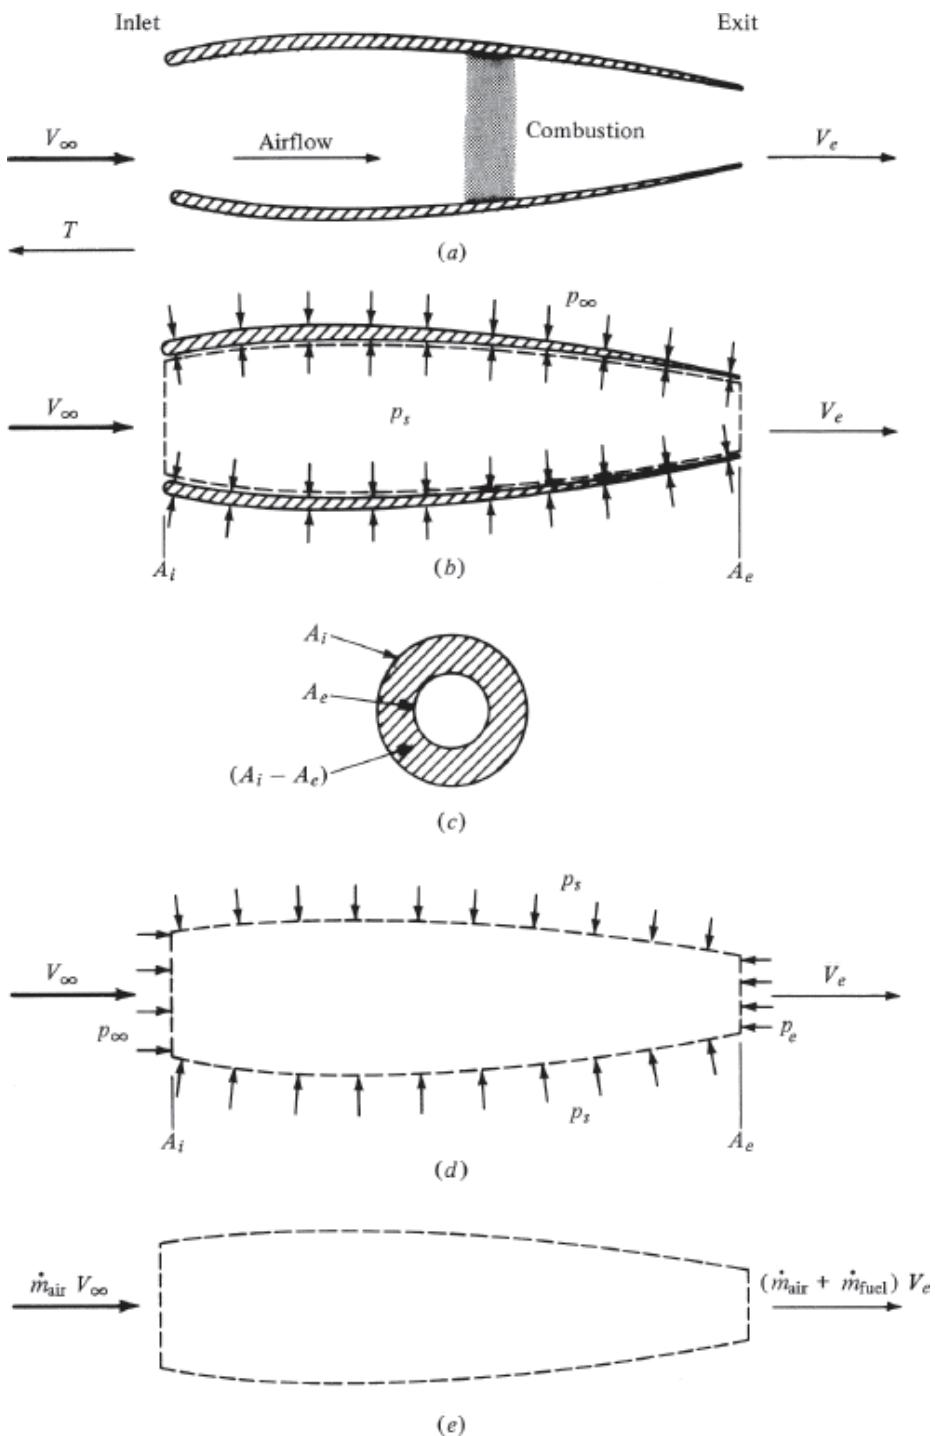

**Figure 9.14** Illustration of the principle of jet propulsion. (a) Jet [page 767](#) propulsion engine. (b) Surface pressure on inside and outside surfaces of duct. (c) Front view, illustrating inlet and exit areas. (d) Control volume for flow through duct. (e) Change in momentum of the flow through the engine.

These same principles carry over to jet propulsion. As sketched in Fig. 9.14a, the jet engine is a device that takes in air at essentially the free-stream velocity  $V_\infty$ , heats it by combustion of fuel inside the duct, and then blasts the hot mixture of air and combustion products out the back end at a much higher velocity  $V_e$ . (Strictly speaking, the air velocity at the inlet to the engine is slightly larger than  $V_\infty$ , but this is not important to the present discussion.) In contrast to a propeller, the jet engine creates a change in momentum of the gas by taking a small mass of air and giving it a large increase in velocity (hundreds of meters per second). By Newton's third law, the equal and opposite reaction produces a thrust. However, this reaction principle, which is commonly given as the basic mechanism for jet propulsion, is just an alternative explanation in the same vein as the discussion previously given. The true fundamental source of the thrust of a jet engine is the net force produced by the pressure and shear stress distributions exerted over the surface of the engine. This is sketched in Fig. 9.14b, which illustrates the distribution of pressure  $p_s$  over the internal surface of the engine duct, and the ambient pressure, essentially  $p_\infty$ , over the external engine surface. Shear stress, which is generally secondary in comparison to the magnitude of the pressures, is ignored here. Examining Fig. 9.14b, we let  $x$  denote the flight direction. The thrust of the engine in this direction is equal to the  $x$  component of  $p_s$  integrated over the complete internal surface, plus that of  $p_\infty$  integrated over the complete external surface. In mathematical symbols,

$$T = \int(p_s dS)_x + \int(p_\infty dS)_x \quad (9.16) \quad \text{page 768}$$

Because  $p_\infty$  is constant, the last term becomes

$$\int(p_\infty dS)_x = p_\infty \int(dS)_x = p_\infty(A_i - A) \quad (9.17)$$

where  $A_i$  and  $A_e$  are the inlet and exit areas, respectively, of the duct, as defined in Fig. 9.14b. In Eq. (9.17), the  $x$  component of the duct area,  $\int(dS)_x$ , is physically what you see by looking at the duct from the front, as shown in Fig. 9.14c. The  $x$  component of surface area is geometrically the projected frontal area shown by the crosshatched region in Fig. 9.14c. Thus, substituting Eq. (9.17) into (9.16), we obtain for the thrust  $T$  of the jet engine

$$T = \int(p_s dS)_x + p_\infty(A_i - A_e) \quad (9.18)$$

The integral in Eq. (9.18) is not particularly easy to handle in its present form. Let us couch this integral in terms of the velocity and mass flow of gas through the duct. Consider the volume of gas bounded by the dashed lines in Fig. 9.14b. This is called a *control volume* in aerodynamics. This control volume is sketched again in Fig. 9.14b. The frontal area of the volume is  $A_i$ , on which  $p_\infty$  is exerted.

The side of the control volume is the same as the internal area of the engine duct. Because the gas is exerting a pressure  $p_s$  on the duct, as shown in Fig. 9.14b, by Newton's third law, the duct exerts an equal and opposite pressure  $p_s$  on the gas in the control volume, as shown in Fig. 9.14d. Finally, the rear area of the control volume is  $A_e$ , on which  $p_e$  is exerted. The pressure  $p_e$  is the gas static pressure at the exit of the duct. With the preceding in mind, and with Fig. 9.14d in view, the  $x$  component of the force on the gas inside the control volume is

$$F = p_\infty A_i + \int(p_s dS)_x - p_e A_e \quad (9.19)$$

Now recall Newton's second law:  $F = ma$ . This can also be written as  $F = d(mV)/dt$ ; that is, the *force equals the time rate of change of momentum* (indeed, this is how Newton originally expressed his second law). What is the time rate of change of momentum of the air flowing through the control volume? The answer can be obtained from Fig. 9.14e. The mass flow of air (kg/s or slug/s) entering the duct is  $\dot{m}_{\text{air}}$ ; its momentum is  $\dot{m}_{\text{air}} V_\infty$ . The mass flow of gas leaving the duct (remember that fuel has been added and burned inside) is  $\dot{m}_{\text{air}} + \dot{m}_{\text{fuel}}$ ; its momentum is  $(\dot{m}_{\text{air}} + \dot{m}_{\text{fuel}}) V_e$ . Thus, the time rate of change of momentum of the airflow through the control volume is the difference between what comes out and what goes in:  $(\dot{m}_{\text{air}} + \dot{m}_{\text{fuel}}) V_e - \dot{m}_{\text{air}} V_\infty$ . From Newton's second law, this is equal to the force on the control volume:

$$F = (\dot{m}_{\text{air}} + \dot{m}_{\text{fuel}}) V_e - \dot{m}_{\text{air}} V_\infty \quad (9.20)$$

Combining Eqs. (9.19) and (9.20) yields

$$(\dot{m}_{\text{air}} + \dot{m}_{\text{fuel}}) V_e - \dot{m}_{\text{air}} V_\infty = p_\infty A_i + \int(p_s dS)_x - p_e A_e \quad (9.21)$$

Solving Eq. (9.21) for the integral term, we obtain

$$\int(p_s dS)_x = (\dot{m}_{\text{air}} + \dot{m}_{\text{fuel}}) V_e - \dot{m}_{\text{air}} V_\infty + p_e A_e - p_\infty A_i \quad (9.22)$$

We now have the integral in the original thrust equation, Eq. (9.18), in [page 769](#) terms of velocity and mass flow, as originally desired. The final result for the engine thrust is obtained by substituting Eq. (9.22) into Eq. (9.18):

$$T = (\dot{m}_{\text{air}} + \dot{m}_{\text{fuel}}) V_e - \dot{m}_{\text{air}} V_\infty + p_e A_e - p_\infty A_i + p_\infty (A_i - A) \quad (9.23)$$

The terms involving  $A_i$  cancel, and we have


$$T = (\dot{m}_{\text{air}} + \dot{m}_{\text{fuel}}) V_e - \dot{m}_{\text{air}} V_\infty + (p_e - p_\infty) A_e \quad (9.24)$$

Equation (9.24) is the fundamental *thrust equation* for jet propulsion. It is an important result and will be examined in greater detail in subsequent sections. Keep in mind the reasoning that led to this result. First the engine thrust was written down in purely mechanical terms; that is, the thrust is due to the pressure

distribution acting over the internal and external surfaces of the duct; this is the essence of Eq. (9.18). Then the internal pressure distribution acting over the internal surface was couched in terms of the change of momentum of the gas flowing through the duct; this is the essence of Eq. (9.22). Finally, the two lines of thought were combined to yield Eq. (9.24). You should reread the concepts presented in this section several times until you feel comfortable with the ideas and results. The preceding derivation of the thrust equation using the control volume concept is an example of a general method commonly used for the solution of many aerodynamic problems. You will see it again in more advanced studies in aerodynamics and propulsion.

## 9.5 TURBOJET ENGINE

In 1944, the first operational jet fighter in the world was introduced by the German air force: the ME 262. By 1950 jet engines were the mainstay of all high-performance military aircraft, and by 1958 the commercial airlines were introducing the jet-powered Boeing 707 and McDonnell-Douglas DC-8. Today the jet engine is the only practical propulsive mechanism for high-speed subsonic and supersonic flight. (Recall that our hypothetical CJ-1 in Ch. 6) was powered by two small jet engines.) A photograph of a typical turbojet engine is shown in Fig. 9.15.

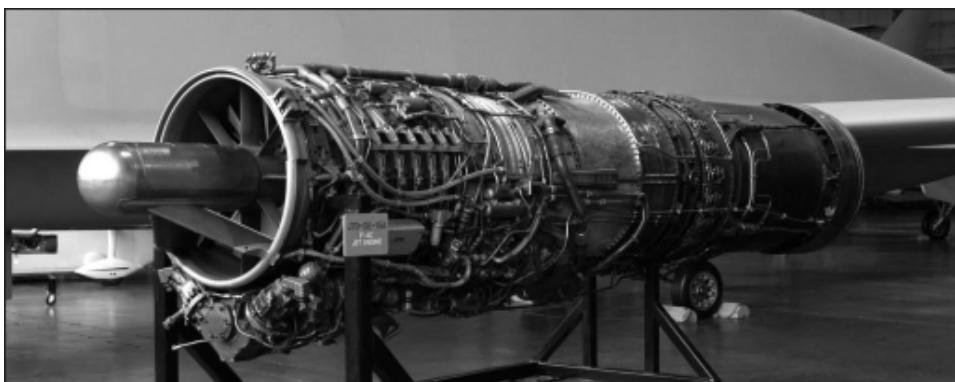

**Figure 9.15** The turbojet engine.

(Source: *U.S. Air Force.*)



The thrust of a turbojet engine is given directly by Eq. (9.24). The jet page 770 engine takes in a mass flow of cool air  $\dot{m}_{\text{air}}$  at a velocity essentially equal to  $V_\infty$  and exhausts a mass flow of hot air and combustion products  $\dot{m}_{\text{air}} + \dot{m}_{\text{fuel}}$ . This is illustrated in Fig. 9.16. The mass of fuel added is usually small compared to the mass of air:  $\dot{m}_{\text{fuel}}/\dot{m}_{\text{air}} \approx 0.05$ . Thus, Eq. (9.24) can be simplified by neglecting  $\dot{m}_{\text{fuel}}$ :

$$T = \dot{m}_{\text{air}}(V_e - V_\infty) + (p_e - p_\infty)A_e \quad (9.25)$$

Equation (9.25) explicitly shows that  $T$  can be increased by increasing  $V_e - V_\infty$ . Thus, the function of a jet engine is to exhaust the gas out the back end faster than it comes in through the front end. The conventional turbojet engine performs this function by inducting a mass of air through the *inlet* (location 1 in Fig. 9.16). The flow is reduced to a low subsonic Mach number,  $M \approx 0.2$ , in a *diffuser* (point 1 to point 2 in Fig. 9.16). This diffuser is directly analogous to the wind tunnel diffusers discussed in Ch. 4). If  $V_\infty$  is subsonic, then the diffuser must increase the flow area to decelerate the flow; that is, the diffuser is a *divergent duct* [see Eq. (4.83)]. If  $V_\infty$  is supersonic, the diffuser must be a convergent–divergent duct, and the decrease in flow velocity is accomplished partly through shock waves, as shown in Fig. 9.16. For such supersonic inlets, a centerbody is sometimes employed to tailor the strength and location of the shock waves and to help form the convergent–divergent stream tube seen by the decelerating flow. In the diffusion process, the static pressure is increased from  $p_1$  to  $p_2$ . After the diffuser, the flow is further compressed by a compressor (point 2 to point 3 in Fig. 9.16) from  $p_2$  to  $p_3$ . The compressor is usually a series of alternating rotating and stationary blades. The rotating sections are called *rotors*, and the stationary sections are *stators*. The rotor and stator blades are nothing more than airfoil sections that alternately speed up and slow down the flow; the work supplied by the compressor serves to increase the total pressure of the flow. The compressor sketched in Fig. 9.16 allows the flow to pass essentially straight through the blades without any major deviation in direction; thus such devices are called *axial flow compressors*. This is in contrast to the *centrifugal flow compressors* used in some early jet engines, where the air was sometimes turned more than  $90^\circ$ . After leaving the compressor, fuel is injected into the airstream and burned at essentially constant pressure in the *combustor* (point 3 to point 4 in Fig. 9.16), where the temperature is increased to about  $2500^\circ\text{R}$ . After combustion, the hot gas flows through the *turbine* (point 4 to point 5 in Fig. 9.16). The turbine is a series of rotating blades (again, basically airfoil sections) that extract work from the flowing gas. This work is then transmitted from the turbine through a shaft to the compressor; that is, the turbine drives the compressor. The flow through a turbine is an expansion process, and the pressure drops from  $p_4$  to  $p_5$ . However,  $p_5$  is still larger than the ambient pressure outside the engine. Thus, after leaving the turbine, the flow is expanded through a *nozzle* (point 5 to point 6 in Fig. 9.16) and is exhausted to the atmosphere at a high velocity  $V_e$  and at pressure  $p_6 = p_e$ . If the engine is designed for subsonic flight applications, the nozzle is usually convergent and  $V_e$  is subsonic, or at most

sonic. However, if the engine is intended for supersonic aircraft, the exhaust nozzle is usually convergent-divergent and  $V_e$  is supersonic.


page 771

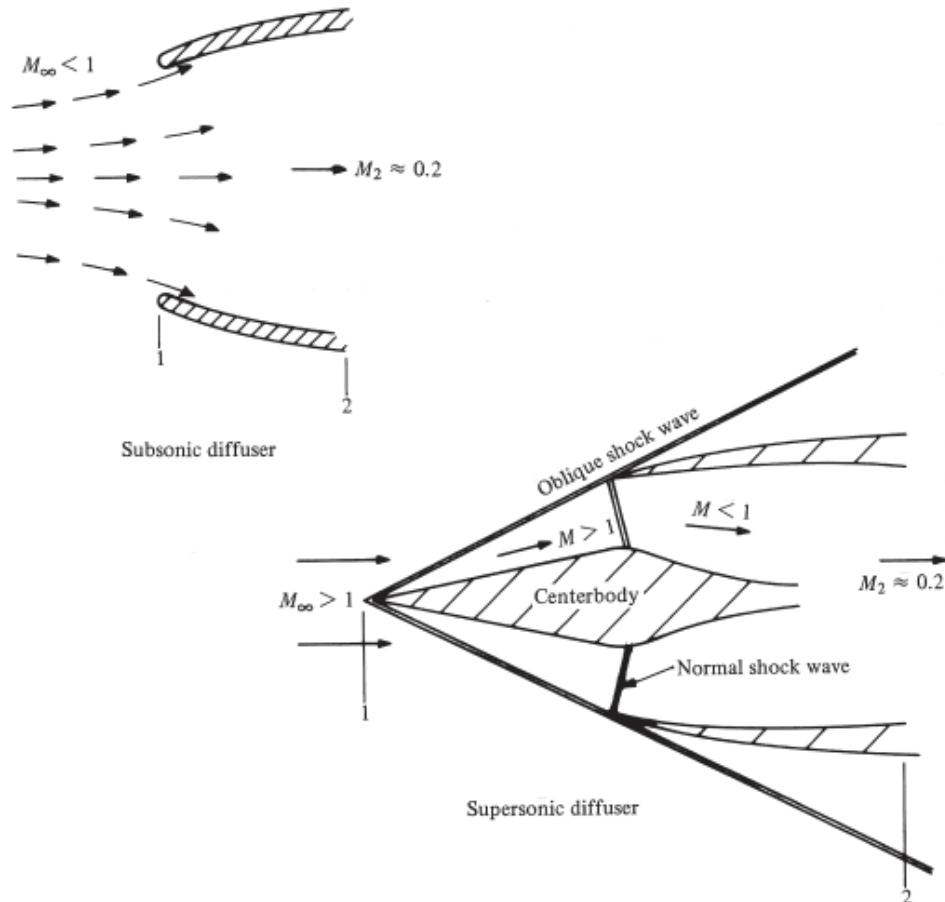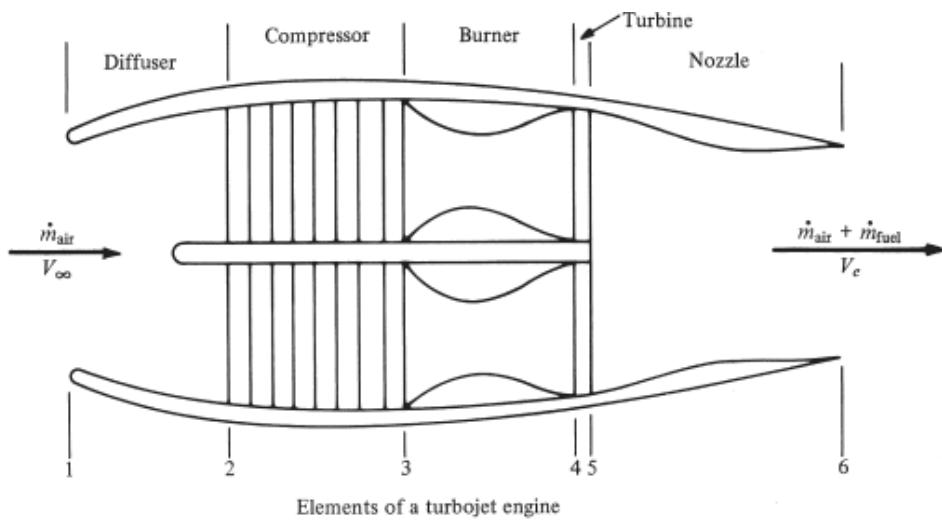

**Figure 9.16** Turbojet engine and diffuser configurations.

page 772

The thermodynamic process in an ideal turbojet engine is shown in the  $p$ - $v$  diagram of Fig. 9.17. The ideal process ignores the effects of friction and heat losses. Here the air is isentropically compressed from  $p_1$  to  $p_2$  in the inlet diffuser, and the pressure is further isentropically increased to  $p_3$  by the compressor. The process moves along the isentrope  $pv^\gamma = c_1$ , where  $c_1$  is a constant (see Sec. 4.6). In the burner, the combustion process takes place at constant pressure (in contrast to the combustion process in an internal combustion reciprocating engine, which takes place at constant volume, as explained in Sec. 9.3). Because the temperature is increased by combustion and the pressure is constant, the equation of state  $pv = RT$  dictates that  $v$  must increase from  $v_3$  to  $v_4$  in the burner. Expansion through the turbine isentropically drops the pressure to  $p_5$ , and further isentropic expansion through the nozzle decreases the pressure to  $p_6$ . The turbine and nozzle expansions follow the isentrope  $pv^\gamma = c_2$ , where  $c_2$  is a constant different from  $c_1$ . The ideal engine process further assumes that the nozzle expands the gas to ambient pressure, such that  $p_e = p_6 = p_1 = p_\infty$ . In the real engine process, of course, there will be frictional and heat losses. The diffuser, compressor, turbine, and nozzle processes will not be exactly isentropic; the combustion process is not precisely at constant pressure; and the nozzle exit pressure  $p_e$  will be something different from  $p_\infty$ . However, the ideal turbojet shown in Fig. 9.17 is a reasonable first approximation to the real case. The accounting of nonisentropic process in the engine is the subject for more advanced studies of propulsion.

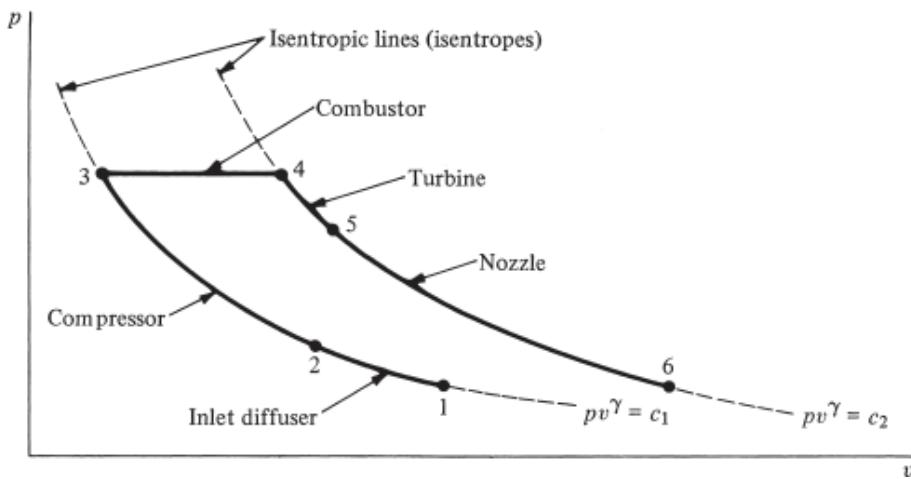

**Figure 9.17** Pressure-specific volume diagram for an ideal turbojet.

Return again to the turbojet engine thrust equation, Eq. (9.25). We are [page 773](#) now in a position to understand some of the assumptions made in Ch. 6)

concerning thrust available  $T_A$  for a turbojet. In our performance analysis of the CJ-1, we assumed that (1) thrust did not vary with  $V_\infty$  and (2) the altitude effect on thrust was simply proportional to  $\rho_\infty$ . From the continuity equation, Eq. (4.2), applied at the inlet, we find that  $\dot{m}_{\text{air}} = \rho_\infty A_i V_\infty$ . Hence, as  $V_\infty$  increases,  $V_e - V_\infty$  increases. From Eq. (9.25), this tends to increase  $T$ . However, as  $V_\infty$  increases, the factor  $V_e - V_\infty$  decreases. This tends to decrease  $T$ . The two effects tend to cancel each other, and the net result is a relatively constant thrust at subsonic speeds. With regard to altitude effects,  $\dot{m}_{\text{air}} = \rho_\infty A_i V_\infty$  decreases proportionately with a decrease in  $\rho_\infty$ ; the factor  $V_e - V_\infty$  is relatively unaffected. The term  $(p_e - p_\infty)A_e$  in Eq. (9.25) is usually much smaller than much smaller than hence, even though  $p_e$  and  $p_\infty$  change with altitude, this pressure term will not have a major effect on  $T$ . Consequently, the primary consequence of altitude is to decrease  $\rho_\infty$ , which proportionately decreases  $\dot{m}_{\text{air}}$ , which proportionately decreases  $T$ . So our assumption in Ch. 6) that  $T \propto \rho_\infty$  is reasonable.

### EXAMPLE 9.3

Consider a turbojet-powered airplane flying at a standard altitude of 30,000 ft at a velocity of 500 mi/h. The turbojet engine itself has inlet and exit areas of 7 and  $4.5 \text{ ft}^2$ , respectively. The velocity and pressure of the exhaust gas at the exit are 1600 ft/s and 640 lb/ $\text{ft}^2$ , respectively. Calculate the thrust of the turbojet.

#### ■ Solution

At a standard altitude of 30,000 ft, from App. B,  $p_\infty = 629.66 \text{ lb}/\text{ft}^2$ , and  $\rho_\infty = 8.9068 \times 10^{-4} \text{ slug}/\text{ft}^3$ . The free-stream velocity is  $V_\infty = 500 \text{ mi/h} = 500(88/60) = 733 \text{ ft/s}$ . Thus, the mass flow through the engine is

$$\dot{m}_{\text{air}} = \rho_\infty V_\infty A_i = (8.9068 \times 10^{-4})(733)(7) = 4.57 \text{ slugs/s}$$

From Eq. (9.25), the thrust is

$$\begin{aligned} T &= \dot{m}_{\text{air}}(V_e - V_\infty) + (p_e - p_\infty)A_e \\ &= 4.57(1600 - 733) + (640 - 629.66)(4.5) \\ &= 3962 + 46.5 = \boxed{4008.5 \text{ lb}} \end{aligned}$$


---

page 774

#### 9.5.1 Thrust Buildup for a Turbojet Engine


The thrust of a jet propulsion device is fundamentally the result of the pressure distribution integrated over every square meter of surface area in contact with the

gas flow through and over the device. We used this fundamental idea to derive the thrust equation in Sec. 9.4. To emphasize the nature of the pressure distribution through a turbojet engine, and to better understand how the pressure distribution exerts the thrust on the engine, consider Fig. 9.18. Figure 9.18a shows a schematic of a turbojet identifying the diffuser, compressor, burner, turbine, and nozzle sections. The variation of static pressure with axial distance through each section is shown schematically in Fig. 9.18b. (In reality, there is a complex three-dimensional variation of pressure through each section; the pressure shown in Fig. 9.18b is the variation of the mean pressure, averaged over each local cross section.) Figure 9.18c illustrates how each component of the turbojet contributes to the thrust; this figure is essentially a picture of the thrust buildup for the engine. The internal duct of the diffuser and compressor has a component of surface area that faces in the thrust direction (toward the left in Fig. 9.18). The increasing high pressure in the diffuser and especially in the compressor, acting on this forward-facing area, creates a large force in the thrust direction. Note in Fig. 9.18c that the accumulated thrust  $F$  grows with distance along the diffuser (1–2) and the compressor (2–3). This high pressure also acts on the component of the forward-facing area in the burner, so that the accumulated value of thrust,  $F$ , continues to increase with distance through the burner (3–4), as shown in Fig. 9.18c. However, in the turbine and the convergent nozzle, the net surface area has a component that faces rearward, and the pressure acting on this rearward-facing area creates a force in the negative thrust direction (to the right in Fig. 9.18). Thus, the accumulated thrust  $F$  decreases through the turbine (4–5) and the nozzle (5–6), as shown in Fig. 9.18c. However, by the time the nozzle exit is reached (location 6), the *net* accumulated thrust  $F_{\text{net}}$  is still a positive value, as shown in Fig. 9.18c. This is the net thrust produced by the engine—that is,  $T = F_{\text{net}}$ . This is the thrust calculated in Eq. (9.25).

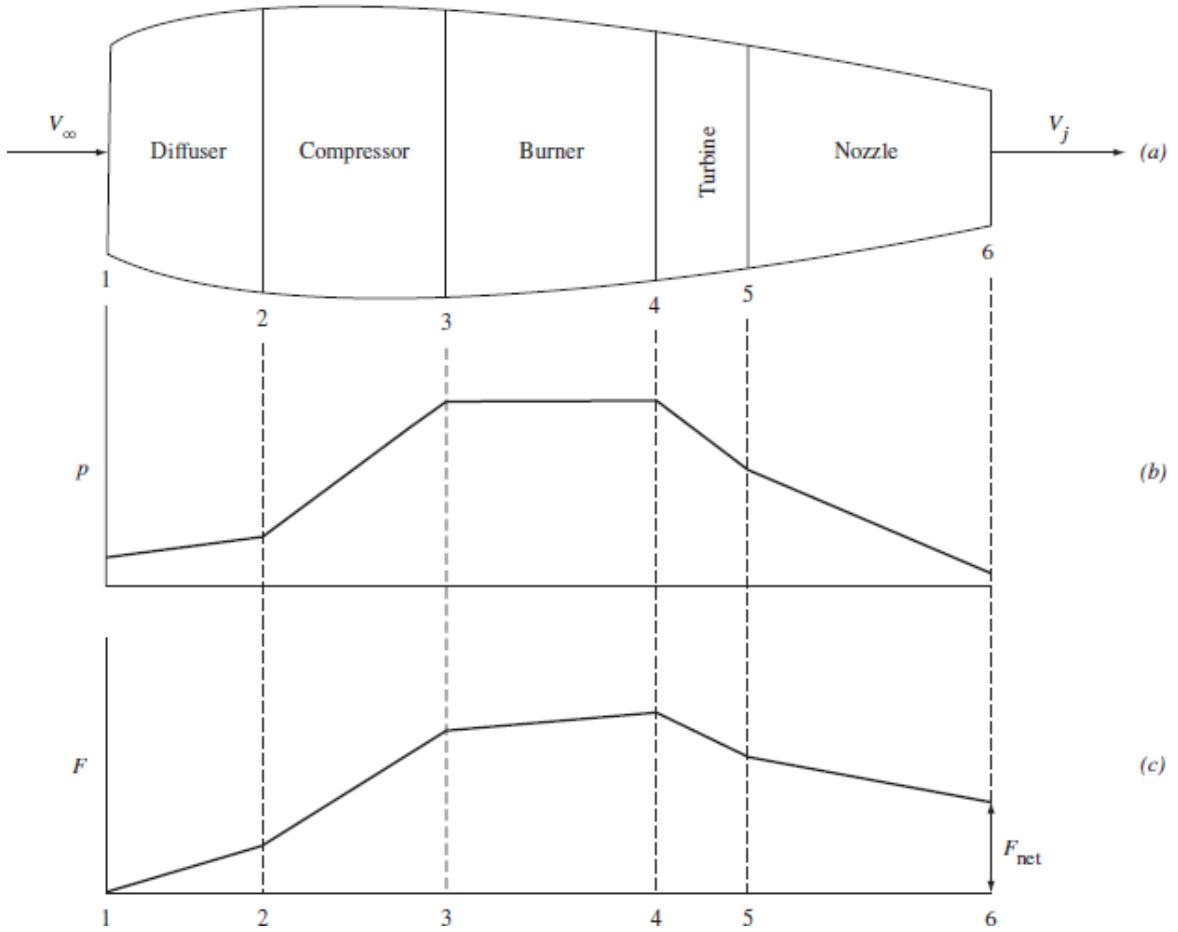

**Figure 9.18** Sketches of the mean pressure distribution and the accumulated thrust through a generic turbojet engine.

An illustration of the thrust buildup exerted on a generic turbojet is shown in Fig. 9.19. The forward-facing components of thrust are depicted by the white arrows and the rearward-facing components by the black arrows. Note the large contributions provided by the compressor and combustion chamber in the forward thrust direction, and the counterforces in the negative thrust direction created in the turbine and exhaust nozzle. For the case shown here, the pressure distribution acting over the internal surfaces of the various components of the engine generates a force of 57,836 lb toward the left and 46,678 lb toward the right, resulting in a net forward thrust of 11,158 lb.

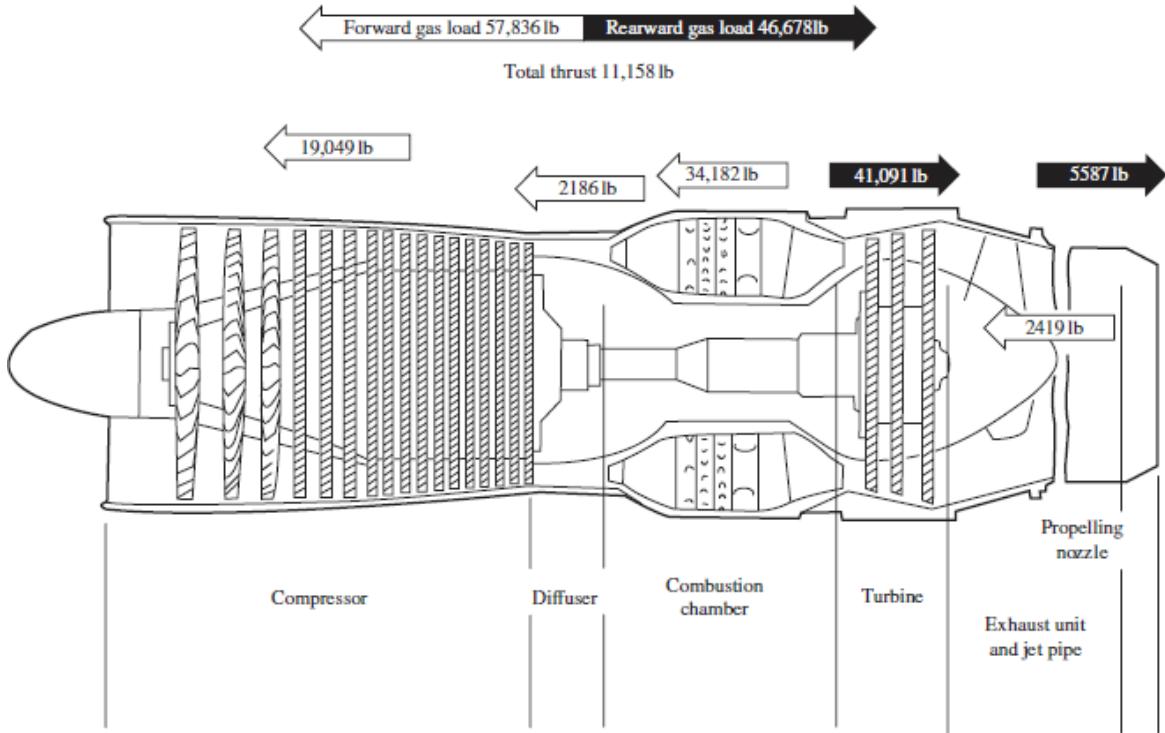

**Figure 9.19** Thrust distribution of a typical single-spool axial flow jet engine.

(Source: Courtesy of Rolls-Royce PLC, Derby, England.)

The detailed calculation of the pressure distribution over the complete [page 776](#) internal surface of an engine is a herculean task, even in the present day of sophisticated computational fluid dynamics (CFD). However, the major jet engine manufacturers, such as Rolls-Royce, Pratt and Whitney, and General Electric, are developing the CFD expertise that will eventually allow such a calculation. Fortunately, the calculation of jet engine thrust is carried out infinitely more simply by drawing a control volume around the engine, looking at the time rate of change of momentum of the gas flow through the engine, and using Newton's second and third laws to obtain the thrust. We did precisely that in Sec. 9.4, obtaining a straightforward algebraic equation for the thrust—namely Eq. (9.24).

In the popular literature, the thrust from a jet propulsion device is frequently attributed to the exhaust nozzle and the high velocity of the exhaust gas exiting the nozzle. However, Figs. 9.18c and 9.19 clearly show that the nozzle itself makes a negative contribution to the net thrust; the nozzle itself does not produce the thrust. Neither does the high velocity of the exhaust gas coming out of the nozzle. The high exit velocity is the *effect* of the production of thrust, not the fundamental cause of thrust. The gas inside the engine exerts the pressure distribution on the solid surface of the engine, creating a net force acting in the

forward direction. From Newton's third law, the solid surface of the engine exerts an equal and opposite reaction on the gas, creating a force on the gas acting in the rearward direction that accelerates the gas in the rearward direction. The larger the thrust generated by the engine, the larger the equal and opposite force on the gas accelerating it to even higher exit velocities. This is the connection between the high exhaust velocity and the generation of thrust. Note the analogy between this discussion and that in Sec. 5.19 on the production of lift. The time rate of change of momentum of the airflow over a wing and the downward component of the airflow over the wing shown in Fig. 5.77 are the *effects* of the production of lift, not the fundamental cause of lift. The pressure distribution acting over the surface of the wing is the fundamental cause of lift.

#### EXAMPLE 9.4

---

The thrust distribution diagram in Fig. 9.19 emphasizes the contribution of each major component of the engine to the production of the total engine thrust. Knowledge of the thrust load on each component is essential for the design and placement of structural attachment points within and outside the engine, and for the ultimate transmission of the engine thrust to the airframe of the airplane. The text discussion surrounding Fig. 9.19 emphasizes the role of the internal pressure distribution exerted by the gas on each square inch of metal surface in contact with the flow. This is how nature transmits the thrust force from the gas to the solid surface. In principle, we could obtain the thrust contribution of each component by integrating the detailed pressure distribution exerted on each component. To obtain this detailed internal pressure distribution by experimental measurements or from computational fluid dynamics is a herculean task, and at present is not practical. However, if we know the average flow properties at the *exit* of each component in Fig. 9.19, we can use the type of control volume analysis used in Sec. 9.4 that allowed us to obtain the thrust equation, Eq. (9.24), but where a control volume is drawn first around just the compressor in Fig. 9.19, then a second control volume drawn around the compressor-diffuser section in Fig. 9.19, and then a third control volume drawn around the compressor-diffuser-combustion chamber, etc. Using this approach, calculate the thrust contribution of each component of the jet engine in Fig. 9.19. The following detailed data for the flow conditions at the exit of each engine component are given by Rolls-Royce in the booklet *The Jet Engine*, Rolls Royce plc, 4th ed., 1986, pp. 209–213.

*Compressor exit:*

$$\begin{aligned}A_e &= 1.2639 \text{ ft}^2 \\p_e - p_\infty &= 13536 \text{ lb/ft}^2 \\V_e &= 406 \text{ ft/s}\end{aligned}$$

*Diffuser exit:*

$$\begin{aligned}A_e &= 1.4236 \text{ ft}^2 \\p_e - p_\infty &= 13680 \text{ lb/ft}^2 \\V_e &= 368 \text{ ft/s}\end{aligned}$$

*Combustion chamber exit*

$$\begin{aligned}A_e &= 4.0278 \text{ ft}^2 \\p_e - p_\infty &= 13392 \text{ lb/ft}^2 \\V_e &= 309 \text{ ft/s}\end{aligned}$$

*Turbine exit*

$$\begin{aligned}A_e &= 3.333 \text{ ft}^2 \\p_e - p_\infty &= 3024 \text{ lb/ft}^2 \\V_e &= 888 \text{ ft/s}\end{aligned}$$

*Exhaust unit and jet pipe exit*

$$\begin{aligned}A_e &= 4.5208 \text{ ft}^2 \\p_e - p_\infty &= 3024 \text{ lb/ft}^2 \\V_e &= 643 \text{ ft/s}\end{aligned}$$

*Propelling nozzle exit*

$$\begin{aligned}A_e &= 2.3056 \text{ ft}^2 \\p_e - p_\infty &= 864 \text{ lb/ft}^2 \\V_e &= 1,917 \text{ ft/s}\end{aligned}$$

The mass flow of air through the engine is 4.78 slug/ft<sup>3</sup>. From these data, calculate the thrust contributed by *each one* of the six components of the engine as shown in Fig. 9.19.

## ■ Solution

The thrust of a jet engine is given by Eq. (9.24), repeated here.

$$T = (\dot{m}_{\text{air}} + \dot{m}_{\text{fuel}})V_e - \dot{m}_{\text{air}}V_\infty + (p_e - p_\infty)A_e$$

This equation is written between the inlet and exit of the complete engine, thus it gives the total thrust of the engine. Recall that it was derived in Sec. 9.4 using a control volume that enclosed the complete engine. Simplifying Eq. (9.24) by ignoring  $\dot{m}_{\text{air}}$ , and recalling that the engine is stationary on the ground, hence  $V_\infty = 0$ , we have

$$T = \dot{m}_{\text{air}}V_e + (p_e - p_\infty)A_e \quad (\text{E 9.4.1}) \quad \underline{\text{page 778}}$$

We now go step-by-step through the engine in Fig. 9.19, first applying Eq. (E 9.4.1) to a control volume wrapped just around the compressor, then next a

control volume wrapped around the compressor–diffuser combination, then next a control volume wrapped around the compressor–diffuser–combustion chamber combination, etc. At each step we will extract the thrust generated individually in each component. Also, let  $m_{air} = m$ .

### STEP 1: Compressor

Applying the given data at the exit of the compressor to Eq. (E 9.4.1), where the control volume is wrapped around just the compressor, we have from Eq. (E 9.4.1)

$$\begin{aligned} T_{\text{compressor}} &= \dot{m}V_e + (p_e - p_\infty)A_e \\ &= 4.78(406) + (15,536)(1.2369) \\ &= 1940.68 + 17,108.2 = 19,049 \text{ lb} \end{aligned}$$

### STEP 2: Diffuser

By drawing a control volume around the compressor–diffuser combination, and using the flow properties at the exit of the diffuser, Eq. (E 9.4.1) gives the thrust obtained from the compressor–diffuser combination.

$$T_{\text{compressor}} + T_{\text{diffuser}} = \dot{m}V_e + (p_e - p_\infty)A_e$$

or,

$$T_{\text{diffuser}} = \dot{m}V_e + (p_e - p_\infty)A_e - T_{\text{compressor}}$$

where the exit properties are those at the exit of the diffuser, and  $T_{\text{compressor}}$  has already been obtained in Step 1. Hence

$$\begin{aligned} T_{\text{diffuser}} &= (4.78)(368) + (13680)(1.4236) - 19,049 \\ T_{\text{diffuser}} &= 1759 + 19475 - 19,049 = 2185 \text{ lb} \end{aligned}$$

This corresponds, within round-off error, to the thrust value shown for the diffuser in Fig. 9.19.

### STEP 3: Combustion Chamber

By drawing a control volume around the compressor–diffuser–combustion chamber combination, and using the flow properties at the exit of the combustion chamber, Eq. (E 9.4.1) gives the thrust obtained from the compressor–diffuser–combustion chamber combination.

$$T_{\text{compressor}} + T_{\text{diffuser}} + T_{\text{combustion chamber}} = \dot{m}_{\text{air}}V_e + (p_e - p_\infty)A_e$$

$$\text{or, } \begin{aligned} T_{\text{combustion chamber}} &= \dot{m}V_e + (p_e - p_\infty)A_e - T_{\text{compressor}} - T_{\text{diffuser}} \\ T_{\text{combustion chamber}} &= (4.78)(309) + (13,392)(4.0278) - 19,049 - 2,185 \\ &= 1477 + 53,940 - 19,049 - 2185 = 34,183 \text{ lb} \end{aligned}$$

This corresponds within round-off error to the thrust value shown for the [page 779](#) combustor in Fig. 9.19.

#### Step 4: Turbine

Drawing a control volume around the compressor–diffuser–combustion chamber–turbine combination, and applying Eq. (E 9.4.1), we have

$$\begin{aligned} T_{\text{turbine}} &= \dot{m}V_e + (p_e - p_\infty)A_e - T_{\text{compressor}} + T_{\text{diffuser}} - T_{\text{combustion chamber}} \\ T_{\text{turbine}} &= (4.78)(888) + (3024)(3.333) - 19049 - 2185 - 34,183 \\ &= 4245 + 10079 - 19049 - 2185 - 34,183 = -41,093 \text{ lb} \end{aligned}$$

This corresponds within round-off error to the rearward facing (negative) thrust shown for the turbine in Fig. 9.19.

#### STEP 5: Exhaust Unit and Jet Pipe

Drawing a control volume around the compressor–diffuser–combustion chamber–turbine–exhaust unit and jet pipe combination, and applying Eq (E 9.4.1), we have

$$\begin{aligned} T_{\text{exhaust unit and jet pipe}} &= \dot{m}V_e + (p_e - p_\infty)A_e - T_{\text{compressor}} - T_{\text{diffuser}} - T_{\text{combustion chamber}} - T_{\text{turbine}} \\ &= (4.78)(643) + (3024)(4.5208) - 19049 - 2185 - 34,183 - (-41,093) \\ &= 3074 + 13671 - 19049 - 2185 - 34,183 + 41,093 = 2421 \text{ lb} \end{aligned}$$

This corresponds within round-off error to the thrust value shown for the exhaust unit and jet pipe in Fig. 9.19.

#### STEP 6: Propelling Nozzle

Finally, drawing a control volume around the compressor–diffuser–combustion chamber–turbine–exhaust unit and jet pipe–propelling nozzle combination, and applying Eq. (E 9.4.1), we have

$$\begin{aligned} T_{\text{propelling nozzle}} &= \dot{m}V_e + (p_e - p_\infty)A_e - T_{\text{compressor}} - T_{\text{diffuser}} - T_{\text{combustion chamber}} - T_{\text{turbine}} - T_{\text{exhaust unit and jet pipe}} \\ &= (4.78)(1917) + (864)(2.3056) - 19049 - 2185 - 34,183 - (-41,093) - 2421 \\ &= 9163 + 1992 - 19049 - 2185 - 34,183 - (-41,093) - 2421 = -5590 \text{ lb} \end{aligned}$$

This corresponds within round-off error to the rearward facing (negative) thrust value shown for the propelling nozzle in Fig. 9.19.

*Comment:* The pressure distribution exerted over the inside surface of the nozzle creates a force in the direction *opposite* to the net thrust, as calculated here. So

the “propelling” nozzle, as it is frequently called in the popular literature, does *not* “propel” at all. To label the nozzle as a “propelling” nozzle is a *misnomer*. However, the nozzle is essential to the overall smooth flow process through the engine. The flow at the exit of the nozzle is the downstream boundary condition for the flow through the complete engine. This exit flow interfaces with the external atmosphere. The flow through the nozzle takes the higher pressure air from the turbine and expands it to match the proper boundary condition at the exit, thus insuring smooth flow through the entire engine. In this sense the nozzle is essential to the overall production of thrust by the engine, although the nozzle itself feels an internal pressure distribution that creates a force opposite to the direction of thrust.


---

## 9.6 TURBOFAN ENGINE


Section 9.4 established the relation between thrust and rate of change of [page 780](#) momentum of a mass of air. In the turbojet engine (see Sec. 9.5), all this mass flows through the engine itself, and all of it is accelerated to high velocity through the exhaust nozzle. Although this creates a large thrust, the *efficiency* of the process is adversely affected by the high exhaust velocities. Recall in Sec. 9.2 that one of the losses that reduces propeller efficiency is the kinetic energy remaining in the wake relative to the ambient air. In the case of the turbojet, the kinetic energy left in the jet exhaust is also a loss, and the high exhaust velocities produced by a jet engine just exacerbate the situation. This is why a piston engine–propeller combination is basically a more efficient device than a turbojet. (Remember, do not get efficiency and thrust confused—they are different things. A jet produces high thrust but at a relatively low efficiency.) Therefore, the concepts of the pure turbojet and the propeller are combined in the *turbofan* engine. As sketched in Fig. 9.20, a turbofan engine is a turbojet engine that has a large ducted fan mounted on the shaft ahead of the compressor. The turbine drives both the fan and the compressor. The ducted fan accelerates a large mass of air that flows between the inner and outer shrouds; this unburned air then mixes with the jet exhaust downstream of the nozzle. The thrust of the turbofan is a combination of the thrust produced by the fan blades and jet from the exhaust nozzle. Consequently, the efficiency of a turbofan engine is better than that of a turbojet. This efficiency is denoted by the thrust-specific fuel consumption TSFC (see Sec. 6.12). For a typical turbojet,  $\text{TSFC} = 1.0 \text{ lb of fuel per pound of thrust per hour}$ ; for a typical turbofan,  $\text{TSFC} = 0.6 \text{ lb of fuel per pound of thrust per hour}$ , a much better figure. This is why all modern commercial jet transports, such as the Boeing 747 and the McDonnell-Douglas MD-11, are equipped with

turbofan engines. A photograph of a turbofan is given in Fig. 9.21a. A cutaway view of the Pratt and Whitney JT9D turbofan engine is shown in Fig. 9.21b.


page 781

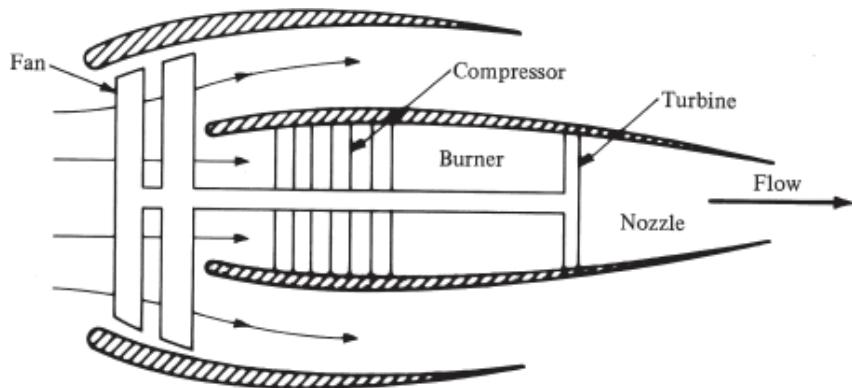

**Figure 9.20** A turbofan engine.

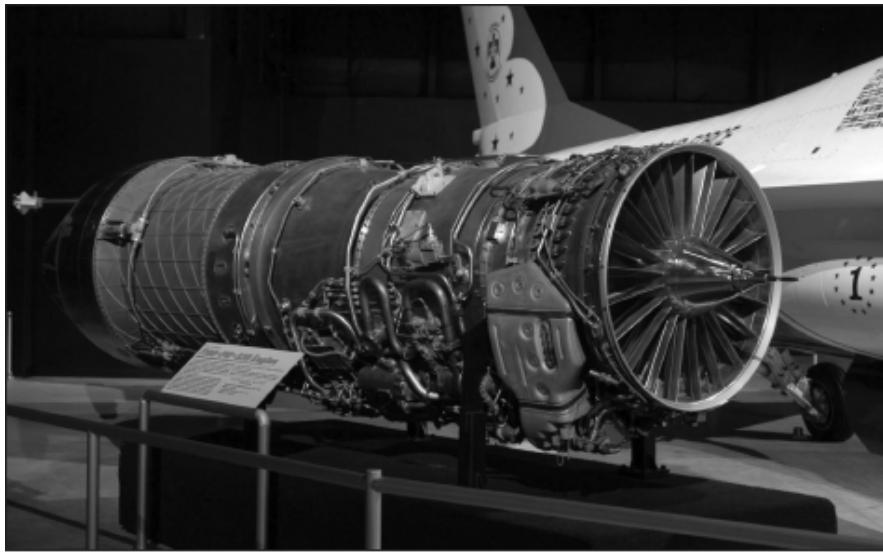

(a)

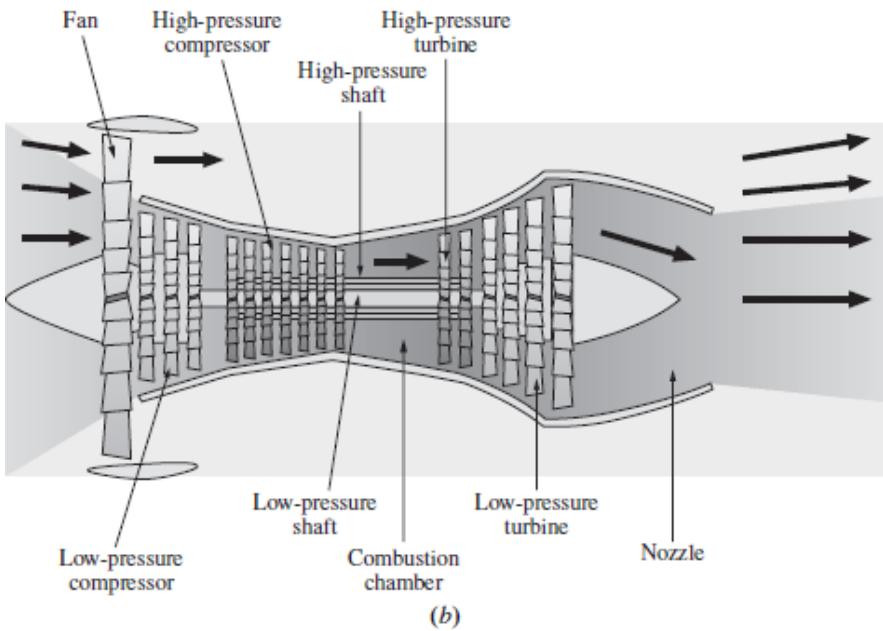

(b)

**Figure 9.21** (a) A turbofan engine. (Source: U.S. Air Force.) (b) A cutaway view.

(Source: *Pratt and Whitney*.)

Of course, a further extension of this concept replaces the ducted fan and outer shroud with an out-and-out propeller, with the turbine driving both the compressor and the propeller. Such a combination is called a *turboprop*, where approximately 85 percent of the thrust comes from the propeller and the remaining 15 percent comes from the jet exhaust. Turboprops are efficient power

plants that have found application in the range of 300 to 500 mi/h; one prime example is the Lockheed Electra transport of the 1950s.

---

page 782

## 9.7 RAMJET ENGINE

Let us now move in the opposite direction from Sec. 9.6. Instead of adding fans and propellers to a turbojet, let us get rid of *all* rotating machinery; that is, consider the straight-through duct sketched in Fig. 9.22, where air is inducted through the inlet at velocity  $V_\infty$ , decelerated in the diffuser (point 1 to point 2), burned in a region where fuel is injected (point 2 to point 3), and then blasted out the exhaust nozzle at very high velocity  $V_e$  (point 3 to point 4). Such a simple device is called a *ramjet* engine. A cutaway drawing of a ramjet engine is shown in Fig. 9.23. Because of their simplicity and high thrust, ramjets have always tickled the imaginations of aerospace engineers. However, because of some serious drawbacks, they have not yet been used as a prime propulsive mechanism on a manned aircraft. But they are used on numerous guided missiles, and they appear to be the best choice for future hypersonic airplanes. For these reasons, let us examine ramjets more closely.


The ideal ramjet process is shown in the  $p$ - $v$  diagram of Fig. 9.24. All the compression from  $p_1$  to  $p_2$  takes place in the diffuser; that is, a ramjet compresses the air by simply “ramming” through the atmosphere. Obviously the compression ratio  $p_2/p_1$  is a function of flight Mach number. In fact, to enhance combustion, the airflow entering the combustion zone is at a low subsonic Mach number; hence, assuming that  $M_2 \approx 0$ , then  $p_2 \approx p_0$  (total pressure), and from Eq. (4.74),

$$\frac{p_2}{p_1} \approx \left(1 + \frac{\gamma - 1}{2} M_\infty^2\right)^{\frac{\gamma(\gamma-1)}{2}} \quad (9.26)$$


The air decelerates isentropically in the diffuser; hence the compression from  $p_1$  to  $p_2$  follows the isentrope shown in Fig. 9.24. Fuel is injected into the air at the end of the diffuser, and combustion takes place, stabilized by mechanical flame holders. This combustion is at constant pressure, so the specific volume increases from  $v_2$  to  $v_3$ . Then the hot, high-pressure gas is expanded isentropically through the exhaust nozzle, with the pressure dropping from  $p_3$  to  $p_4$ .

---

page 783

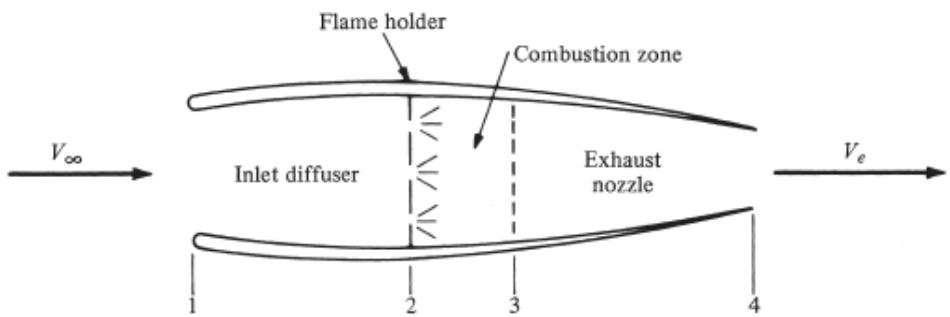


**Figure 9.22** Ramjet engine.

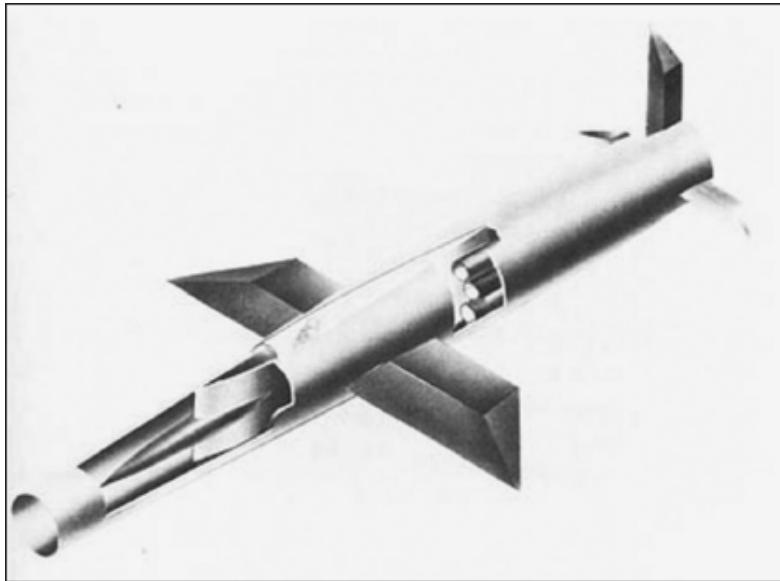

**Figure 9.23** A typical ramjet engine.

(Source: *NASA Image Collection/Alamy Stock Photo.*)

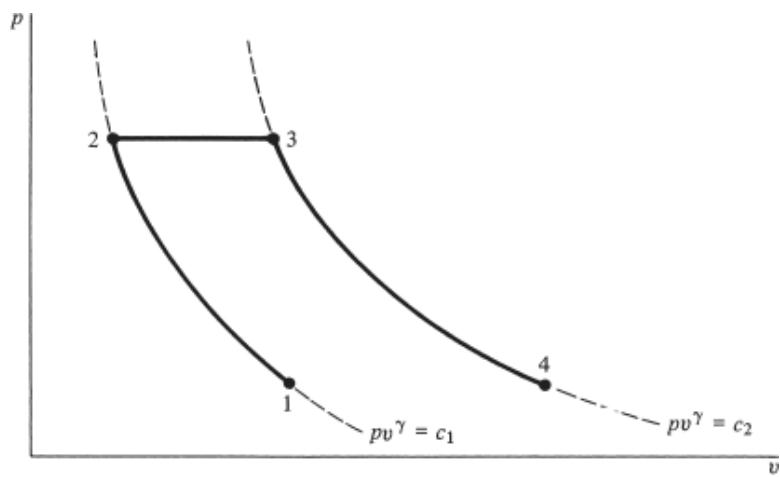


**Figure 9.24** Pressure-specific volume diagram for an ideal ramjet.

One disadvantage of a ramjet is immediately obvious from the preceding discussion, and especially from Eq. (9.26): To start and operate, the ramjet must already be in motion. Otherwise there would be no compression in the diffuser; that is, from Eq. (9.26),  $p_2/p_1 = 1$  when  $M_\infty = 0$ . Therefore, all ramjet-powered vehicles must be launched by some independent mechanism (a catapult or rockets) or must have a second engine of another type to develop enough flight speed to start the ramjet. At subsonic flight speeds, ramjets have another-disadvantage. Although they produce high thrust, their subsonic efficiency is very low—typically  $\text{TSFC} \approx 3$  to 4 lb of fuel per pound of thrust per hour for ramjets at subsonic speeds. However, as shown in Fig. 9.25, TSFC decreases to 2 or less at supersonic speeds.

Indeed, Fig. 9.25 implicitly shows an advantage of ramjets for [page 784](#) supersonic flight. At supersonic Mach numbers, TSFCs for turbojets and ramjets are somewhat comparable. Moreover, the curve for turbojets in Fig. 9.25 is terminated at Mach 3 for a specific reason. To operate at higher Mach numbers, the turbojet must increase its combustion temperature. However, there is a material limitation. If the gas temperature leaving the turbojet combustor and entering the turbine is too hot, the turbine blades will melt. This is a real problem: The high-temperature material properties of the turbine blades limit the conventional turbojet to comparatively low to moderate supersonic Mach numbers. But a ramjet has no turbine; therefore, its combustion temperatures can be much higher, and a ramjet can zip right into the high-Mach number regime. Therefore, for sustained and efficient atmospheric flight at Mach numbers above 3 or 4, a ramjet is virtually the only choice, given our present technology.

Starting with Fig. 9.22, we have described a conventional ramjet as a device that takes in the air at the inlet and diffuses it to a low subsonic Mach number before it enters the combustion zone. Consider this ramjet flying at  $M_\infty = 6$ . As a companion to Eq. (9.26), the temperature ratio  $T_2/T_1$  can be estimated from Eq. (4.73) as

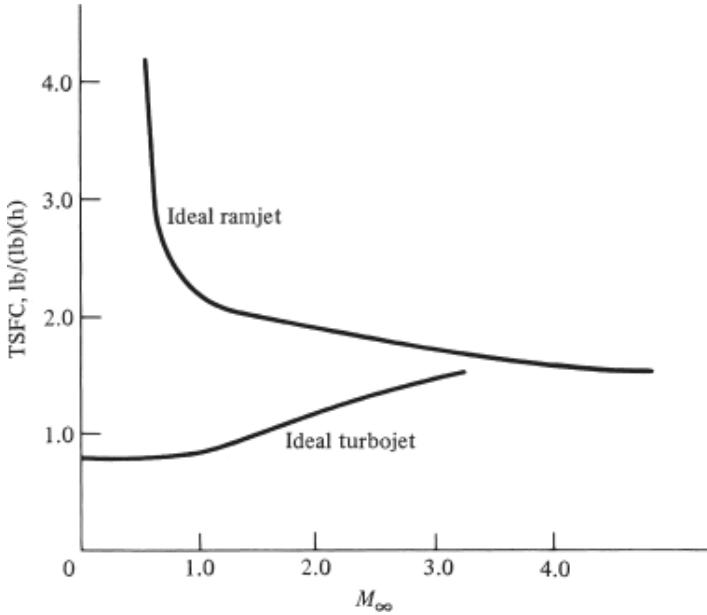


**Figure 9.25** Comparison of thrust-specific fuel consumption for ideal ramjet and turbojet engines.

$$\frac{T_2}{T_1} \approx 1 + \frac{\gamma - 1}{2} M_\infty^2 \quad (9.27)$$

(Note that the symbol  $T$  is used for both thrust and temperature; however, from the context, there should be no confusion.) If  $M_\infty = 6$ , Eq. (9.27) gives  $T_2/T_1 \approx 7.9$ . If the ambient temperature  $T_\infty = T_1 = 300$  K, then  $T_2 = 2370$  K = 4266°R. At such high temperatures, the walls of the ramjet will tend to fail structurally. Thus, like turbojets, conventional ramjets are also limited by material problems, albeit at higher flight Mach numbers. Moreover, if the temperature of the air entering the combustor is too high, when the fuel is injected, it will be decomposed by the high temperatures rather than being burned; that is, the fuel will absorb rather than release energy, and the engine will become a drag machine rather than a thrust-producing device. Clearly, for hypersonic flight at very high Mach numbers, something else must be done.

This problem has led to the concept of a *supersonic combustion* [page 785](#) *ramjet*, the *SCRAMjet*. Here the flow entering the diffuser is at high Mach number, say  $M_1 = M_\infty = 6$ . However, the diffuser decelerates the airflow only enough to obtain a reasonable pressure ratio  $p_2/p_1$ ; the flow is still supersonic upon entering the combustor. Fuel is added to the supersonic stream, where *supersonic combustion* takes place. In this way, the flow field throughout the SCRAMjet is completely supersonic; in turn, the static temperature remains relatively low, and the material and decomposition problems associated with the conventional ramjet are circumvented. Therefore, the power plant for a

hypersonic transport in the future will most likely be a SCRAMjet. Research on such devices is now in process. Indeed, SCRAMjet research constitutes the very frontier of propulsion research today. One such example is the SCRAMjet design concept pioneered by the NASA Langley Research Center since the mid-1960s. Intended for application on a hypersonic transport, the Langley SCRAMjet consists of a series of side-by-side modules blended with the underside of the airplane, as sketched in the upper right corner of Fig. 9.26. The forward portion of the underside of the airplane acts as a compression surface; that is, the air flowing over the bottom surface is compressed (pressure is increased) when it passes through the shock wave from the nose of the vehicle. The configuration of an individual module is shown in the middle of Fig. 9.26. The compressed air from the bottom surface enters an inlet, where it is further compressed by additional shock waves from the leading edge of the inlet. This compressed air, still at supersonic velocity, subsequently flows over three struts, where  $H_2$  is injected into the supersonic stream. A cross section of the struts is shown at the bottom left of Fig. 9.26. Combustion takes place downstream of the struts. The burned gas mixture is then expanded through a nozzle at the rear of each module. The flow is further expanded over the smooth underbody at the rear of the airplane, which is intentionally contoured to act as an extension of the engine nozzles. For all practical purposes, the entire undersurface of the complete airplane represents the whole SCRAMjet engine—hence the concept is called an *airframe-integrated* SCRAMjet.

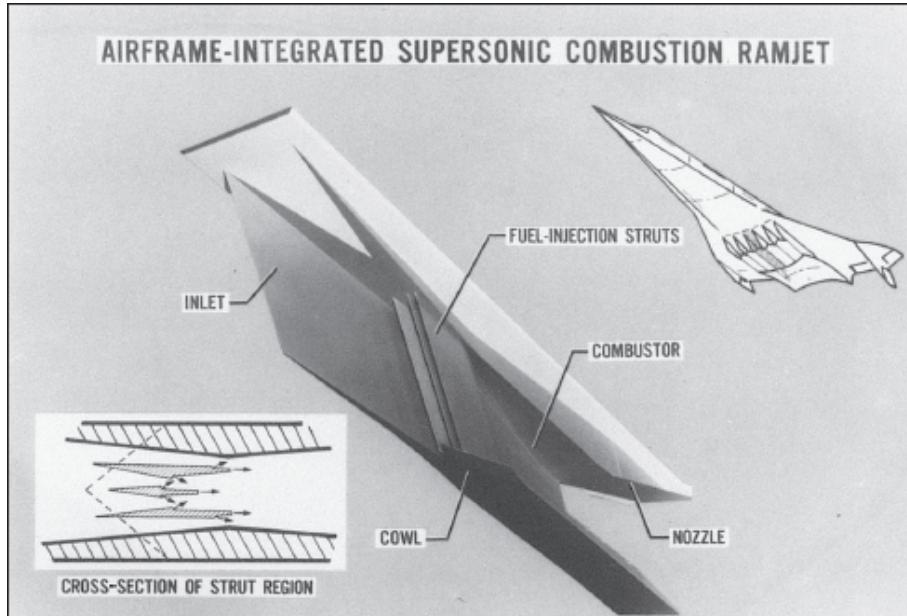


**Figure 9.26** A concept for an airframe-integrated SCRAMjet engine, developed at NASA Langley Research Center.

(Source: NASA.)

## 9.8 ROCKET ENGINE

With the launching of *Sputnik I* on October 4, 1957, and with the [page 786](#) subsequent massive space programs of the United States and the Soviet Union, the rocket engine came of age. The rocket is the ultimate high-thrust propulsive mechanism. With it people have gone to the moon, and space vehicles weighing many tons have been orbited about the earth or sent to other planets in the solar system. Moreover, rockets have been used on experimental aircraft; the rocket-powered Bell X-1 was the first manned airplane to break the sound barrier (see Sec. 5.22), and the rocket-powered North American X-15 was the first crewed hypersonic aircraft (see Sec. 5.23). Finally, almost all types of guided missiles, starting with the German V-2 in World War II, have been rocket-powered. With this in mind, let us examine the characteristics of a rocket engine.

All the propulsion engines discussed in previous sections have been air-breathing; the piston engine, turbojet, ramjet—all depend on the combustion of fuel with air, where the air is obtained directly from the atmosphere. In contrast, as sketched in Fig. 9.27, the rocket engine carries both its fuel and oxidizer and is completely independent of the atmosphere for its combustion. Thus the rocket can operate in the vacuum of space, where obviously the air-breathing engines cannot. In Fig. 9.27, fuel and oxidizer are sprayed into the combustion chamber, where they burn, creating a high-pressure, high-temperature mixture of combustion products. The mixture velocity is low, essentially zero. Therefore, the combustion chamber in a rocket engine is directly analogous to the reservoir of a supersonic wind tunnel (see Sec. 4.13). Hence, the temperature and pressure in the combustion chamber are the total values  $T_0$  and  $p_0$ , respectively. Also directly analogous to a supersonic wind tunnel, the products of combustion expand to supersonic speeds through the convergent-divergent rocket nozzle, leaving with an exit velocity  $V_e$ . This exit velocity is considerably higher than that for jet engines; hence, by comparison, rocket thrusts are higher, but efficiencies are lower. Figure 9.28 shows a large rocket engine, one of the main engines of the Space Shuttle. Clearly, there is more complexity to the actual system than is represented in the diagram of Fig. 9.27.

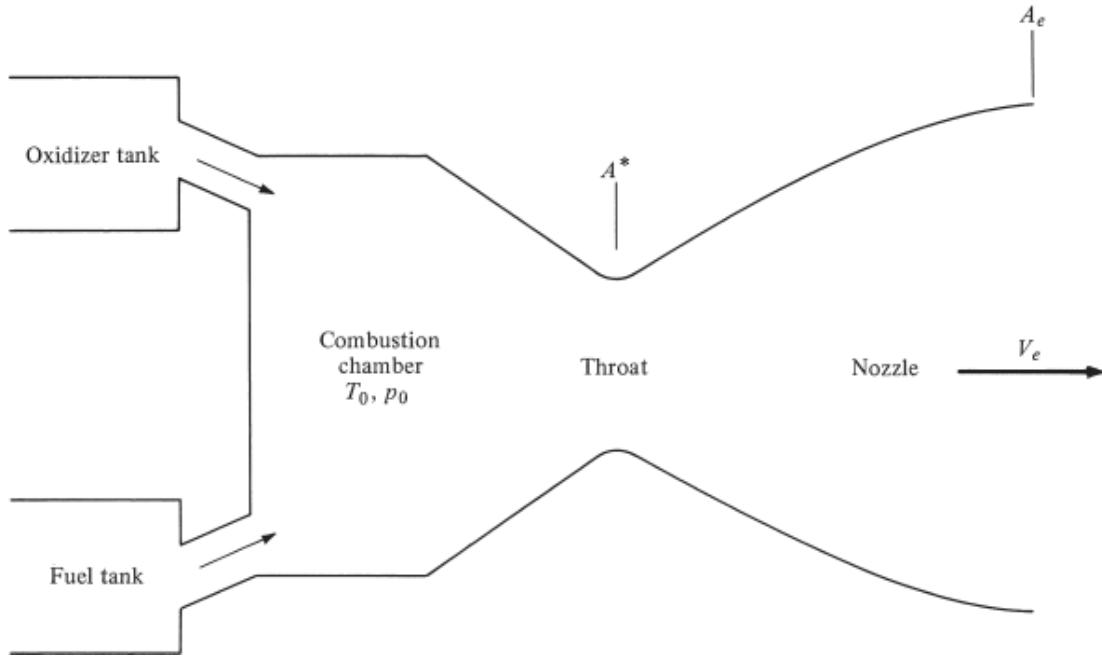

**Figure 9.27** Schematic of a rocket engine.


The thrust of a rocket engine is obtained from Eq. (9.24), where  $\dot{m}_{\text{air}} = 0$  and  $\dot{m}$  is the total mass flow of the products of combustion. Hence, for a rocket engine,

$$T = \dot{m} V_e + (p_e - p_{\infty}) A_e \quad (9.28)$$

$$\text{where} \quad \dot{m} = \dot{m}_{\text{fuel}} + \dot{m}_{\text{oxidizer}} \quad (9.29)$$

The exit velocity  $V_e$  is readily obtained from the aerodynamic relations in Ch. 4). Write the energy equation, Eq. (4.42), between the combustion chamber and the nozzle exit:

$$c_p T_0 = c_p T_e + \frac{V_e^2}{2} \quad (9.30)$$

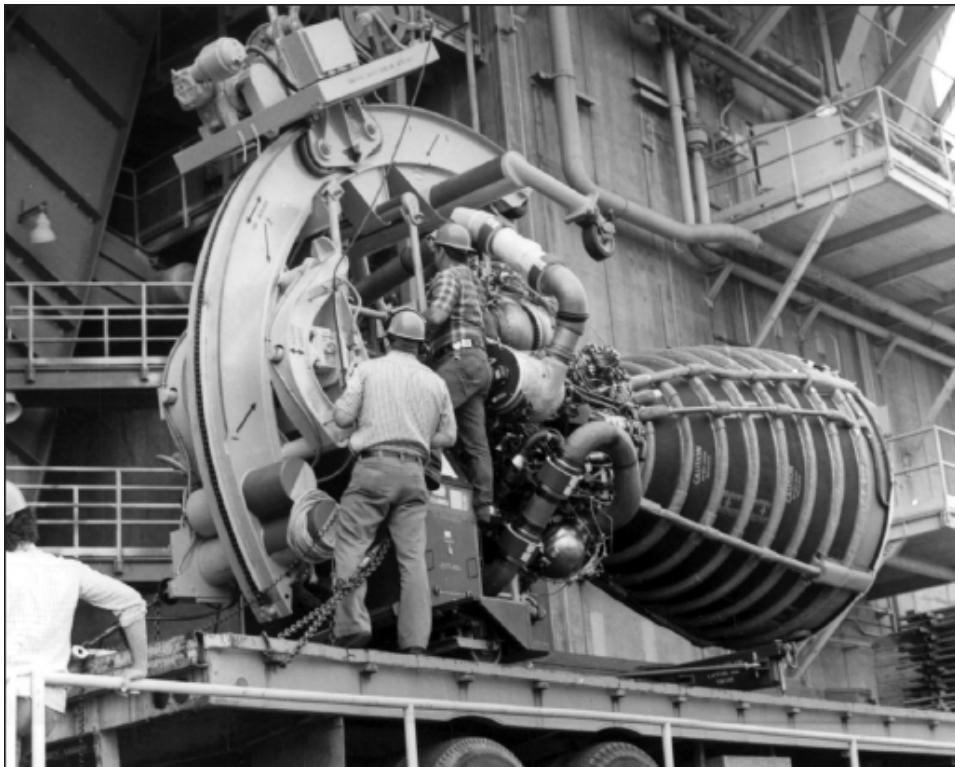

**Figure 9.28** The main rocket engine for the Space Shuttle.

(Source: NASA.)

Solve Eq. (9.30) for  $V_e^2$ :

$$V_e^2 = 2c_p(T_0 - T_e) = 2c_pT_0\left(1 - \frac{T_e}{T_0}\right) \quad (9.31)$$

The expansion through the nozzle is isentropic. Hence, from Eq. (4.36),  $T_e/T_0 = (p_e/p_0)^{(\gamma-1)/\gamma}$ . Also, from Eq. (4.69),  $c_p = \gamma R/(\gamma - 1)$ . Thus Eq. (9.31) becomes

$$V_e = \left\{ \frac{2\gamma RT_0}{\gamma - 1} \left[ 1 - \left( \frac{p_e}{p_0} \right)^{(\gamma-1)/\gamma} \right] \right\}^{1/2} \quad (9.32)$$

A comparative measure of the efficiency of different rocket engines can be obtained from the *specific impulse*  $I_{sp}$ , defined as the thrust per unit weight flow at sea level:

$$I_{sp} \equiv \frac{T}{\dot{w}} \quad (9.33) \quad \text{page 788}$$

where  $\dot{w} = g_0 \dot{m}$ . (Recall that the weight is equal to the acceleration of gravity at sea level times the mass.) With this definition, the unit of  $I_{sp}$  in any consistent system of units is simply seconds. Furthermore, assume that the nozzle exit-

pressure is the same as the ambient pressure. Combining Eqs. (9.28) and (9.33), we get

$$I_{sp} = \frac{T}{\dot{w}} = \frac{T}{g_0 \dot{m}} = \frac{\dot{m} V_e}{g_0 \dot{m}} = \frac{V_e}{g_0} \quad (9.34)$$

Alternately, this relationship can be written as

$$V_e = g_0 I_{sp}$$

This is important because it means that if you know the exhaust velocity of a rocket engine, you know its specific impulse, and conversely, of course, if you know specific impulse, you know exhaust velocity. The factor that relates these two quantities is  $g_0$ , the gravitational acceleration on the surface of the earth which is a constant. Note that if gravity is input in English units ( $\text{ft/s}^2$ ) then the resulting velocity is in ft/s, while if gravity is input in metric units ( $\text{m/s}^2$ ), velocity will be in m/s. In all cases, regardless of the system of units, specific impulse is measured in seconds. One final comment is that this relationship is entirely independent of where the rocket engine is actually being used. Whether it is used to boost off the surface of the Earth, to maneuver in geosynchronous orbit, to orbit the moon, or to land on Mars, earth gravity,  $g_0$ , is the conversion factor relating  $V_e$  to  $I_{sp}$ .

Substitute Eq. (9.32) into Eq. (9.34), and note from chemistry that the [page 789](#) specific gas constant  $R$  is equal to the universal gas constant  $R$  divided by the molecular weight  $M$ ;  $R = \bar{R}/\bar{M}$ .

$$I_{sp} = \frac{1}{g_0} \left\{ \frac{2\gamma RT_0}{\gamma - 1} \left[ 1 - \left( \frac{p_e}{p_0} \right)^{\frac{(\gamma-1)\gamma}{\gamma}} \right] \right\}^{1/2} \quad (9.35)$$

Equation (9.35) is important. It tells what is necessary to have a high-specific impulse: The combustion temperature  $T_0$  should be high, and the molecular weight  $M$  should be low. The combustion temperature is primarily dictated by the chemistry of the oxidizer and fuel; a given combination, say oxygen and hydrogen, will burn at a specific  $T_0$  called the *adiabatic flame temperature*, and this value of  $T_0$  will be determined by the heat of reaction. The more highly reacting the propellants, the higher the  $T_0$ .  $M$  is also a function of the chemistry. If lightweight propellants are used, then  $M$  will be small. Therefore, outside of adjusting the oxidizer-to-fuel ratio (the O/F ratio), there is not much the engineer can do to radically change the  $I_{sp}$  for a given propellant combination: It depends primarily on the propellants themselves. However, Eq. (9.35) certainly tells us to

choose a very energetic combination of lightweight propellants, as dramatized by the following tabulation:

Fuel–Oxidizer Combination	Adiabatic Flame Temperature, K	Average Molecular Weight of Combustion Products	$I_{sp}$ , s
Kerosene–oxygen	3144	22	240
Hydrogen–oxygen	3517	16	360
Hydrogen–fluorine	4756	10	390

The kerosene–oxygen combination was used in the first stage of the *Saturn V* launch vehicle, which sent the *Apollo* astronauts to the moon; hydrogen–oxygen was used for the *Saturn V* second and third stages. However, the best combination is hydrogen–fluorine, which gives a specific impulse of 390 s, about the most we can expect from any propellant combination. Unfortunately, fluorine is extremely poisonous and corrosive and is therefore difficult to handle. Nevertheless, rocket engines using hydrogen–fluorine have been built.

Consider again the rocket engine schematic in Fig. 9.27. We [page 790](#) discussed earlier that  $T_0$  in the combustion chamber is essentially a function of the heat of reaction of the propellants, a chemical phenomenon. But what governs the chamber pressure  $p_0$ ? The answer is basically the mass flow of propellants being pumped into the chamber from the fuel and oxidizer tanks, and the area of the nozzle throat  $A^*$ . Moreover, we are in a position to prove this. From the continuity equation evaluated at the throat,

$$\dot{m} = \rho^* A^* V^* \quad (9.36)$$

Here the superscript \* denotes conditions at the throat. Recall from Ch. 4) that the velocity is sonic at the throat of a convergent–divergent supersonic nozzle; that is,  $M^* = 1$ . Thus  $V^*$  is the speed of sound, obtained from Eq. (4.54) as

$$V^* = \sqrt{\gamma RT^*} \quad (9.37)$$

Also, from the equation of state,

$$\rho^* = \frac{p^*}{RT^*} \quad (9.38)$$

Substitute Eqs. (9.37) and (9.38) into Eq. (9.36):

$$\dot{m} = \frac{p^*}{RT^*} A^* \sqrt{\gamma RT^*} = \frac{p^* A^*}{\sqrt{RT^*}} \sqrt{\gamma} \quad (9.39)$$

Write Eqs. (4.73) and (4.74) between the combustion chamber and the throat:

$$\frac{T_0}{T^*} = 1 + \frac{\gamma - 1}{2} M^{*2} = 1 + \frac{\gamma - 1}{2} = \frac{\gamma + 1}{2} \quad (9.40)$$

$$\frac{p_0}{n^*} = \left(1 + \frac{\gamma - 1}{2} M^{*2}\right)^{\gamma/(\gamma-1)} = \left(\frac{\gamma + 1}{2}\right)^{\gamma/(\gamma-1)} \quad (9.41)$$

Substitute Eqs. (9.40) and (9.41) into Eq. (9.39):

$$\dot{m} = \sqrt{\frac{\gamma}{R}} A^* \left(\frac{\gamma + 1}{2}\right)^{-(\gamma+1)\gamma/[2(\gamma-1)]} \frac{p_0}{\sqrt{T_0}} \quad (9.42)$$

or

$$\dot{m} = \frac{p_0 A^*}{\sqrt{T_0}} \sqrt{\frac{\gamma}{R}} \left(\frac{2}{\gamma + 1}\right)^{(\gamma+1)\gamma/(\gamma-1)}$$

Equation (9.42) is important. It states that the mass flow through a nozzle that is choked (that is, when sonic flow is present at the throat) is *directly proportional to  $p_0$  and  $A^*$  and inversely proportional to the square root of  $T_0$* . Moreover, Eq. (9.42) answers the previous question about how  $p_0$  is governed in a rocket engine combustion chamber. For a given combination of propellants,  $T_0$  is fixed by the chemistry. For a fixed nozzle design,  $A^*$  is a given value. Hence, from Eq. (9.42),

$$p_0 = (\text{const})(\dot{m})$$

page 791

If  $\dot{m}$  is doubled, then  $p_0$  is doubled, and so on. In turn, because mass is conserved,  $\dot{m}$  through the nozzle is precisely equal to  $\dot{m}_{\text{fuel}} + \dot{m}_{\text{oxidizer}}$  being fed into the chamber from the propellant tanks. So we repeat again the conclusion that  $p_0$  is governed by the mass flow of propellants being pumped into the chamber from the fuel and oxidizer tanks and the area of the nozzle throat.

Before we leave this discussion of rocket engines, we note the very restrictive assumption incorporated in such equations as Eqs. (9.32), (9.35), and (9.42)—namely that  $\gamma$  is constant. The real flow through a rocket engine is chemically reacting and is changing its chemical composition throughout the nozzle expansion. Consequently,  $\gamma$  is really a variable, and the preceding equations are not strictly valid. However, they are frequently used for preliminary design estimates of rocket performance, and  $\gamma$  is chosen as some constant mean value, usually between 1.2 and 1.3, depending on the propellants used. A more accurate solution of rocket nozzle flows taking into account the variable specific heats and changing composition must be made numerically and is beyond the scope of this book.

### EXAMPLE 9.5

Consider a rocket engine burning hydrogen and oxygen; the combustion chamber pressure and temperature are 25 atm and 3517 K, respectively. The area of the rocket nozzle throat is  $0.1 \text{ m}^2$ . The area of the exit is designed so that the exit

pressure exactly equals ambient pressure at a standard altitude of 30 km. For the gas mixture, assume that  $\gamma = 1.22$  and the molecular weight  $M = 16$ . At a standard altitude of 30 km, calculate the (a) specific impulse, (b) thrust, (c) area of the exit, and (d) flow Mach number at exit.

### ■ Solution

a. The universal gas constant, in SI units, is  $\bar{R} = 8314 \text{ J/(kg mol)(K)}$ . Hence, the specific gas constant is

$$R = \frac{\bar{R}}{M} = \frac{8314}{16} = 519.$$

Thus, from Eq. (9.35),

$$\begin{aligned} I_{sp} &= \frac{1}{g_0} \left\{ \frac{2\gamma \bar{R} T_0}{(\gamma - 1)M} \left[ 1 - \left( \frac{p_e}{p_0} \right)^{(\gamma-1)/\gamma} \right] \right\}^{1/2} \\ &= \frac{1}{9.8} \left\{ \frac{2(1.22)(8314)(3517)}{0.22(16)} \left[ 1 - \left( \frac{1.174 \times 10^{-2}}{25} \right)^{0.22/1.22} \right] \right\}^{1/2} \end{aligned}$$

$$I_{sp} = 397.9 \text{ s}$$

Note that this value is slightly higher than the number tabulated in the previous discussion of specific impulse. The difference is that the tabulation gives  $I_{sp}$  for expansion to sea-level pressure, not the pressure at 30-km altitude as in this example.

b. From Eq. (9.28),

page 792

$$T = \dot{m} V_e + (p_e - p_\infty) A_e$$

In this equation, at 30 km,  $p_e = p^\infty$ . Hence

$$T = \dot{m} V_e \quad \text{at 30-km altitude}$$

To obtain  $\dot{m}$ , use Eq. (9.42):

$$\begin{aligned} \dot{m} &= \frac{p_0 A^*}{\sqrt{T_0}} \sqrt{\frac{\gamma}{R} \left( \frac{2}{\gamma + 1} \right)^{(\gamma+1)\gamma/(\gamma-1)}} \\ &= \frac{25(1.01 \times 10^5)(0.1)}{\sqrt{3517}} \sqrt{\frac{1.22}{519.6} \left( \frac{2}{2.22} \right)^{2.22/0.22}} = 121.9 \text{ kg/s} \end{aligned}$$

To obtain  $V_e$ , recall that the nozzle flow is isentropic. Hence

$$\frac{T_e}{T_0} = \left(\frac{p_e}{p_0}\right)^{\gamma-1}\gamma$$

$$T_e = 3517 \left(\frac{1.174 \times 10^{-2}}{25}\right)^{0.22/1.22} = 3517(0.2517) = 885.3 \text{ K}$$

Also, from Eq. (4.69),

$$c_p = \frac{\gamma R}{\gamma - 1} = \frac{1.22(519.6)}{0.22} = 2881.4 \text{ J/(kg)(K)}$$

From the energy equation, Eq. (4.42),

$$c_p T_0 = c_p T_e + \frac{V_e^2}{2}$$

$$V_e = \sqrt{2c_p(T_0 - T_e)} = \sqrt{2(2881.4)(3517 - 885.3)} = 3894 \text{ m/s}$$

Thus the thrust becomes

$$T = \dot{m} V_e = 121.9(3894) = [4.75 \times 10^5 \text{ N}]$$

Note that 1 N = 0.2247 lb. Hence

$$T = (4.75 \times 10^5)(0.2247) = [1.07 \times 10^5 \text{ lb}]$$

c. To obtain the exit area, use the continuity equation:

$$\dot{m} = \rho_e A_e V_e$$

page 793

To obtain the exit density, use the equation of state:

$$\rho_e = \frac{p_e}{RT_e} = \frac{1.1855 \times 10^3}{519.6(885.3)} = 2.577 \times 10^{-3} \text{ kg/m}^3$$

$$A_e = \frac{\dot{m}}{\rho_e V_e} = \frac{121.9}{(2.577 \times 10^{-3})(3894)}$$

$$A_e = 12.14 \text{ m}^2$$

d. To obtain the exit Mach number,

$$a_e = \sqrt{\gamma RT_e} = \sqrt{1.22(519.6)(885.3)} = 749 \text{ m/s}$$

$$M_e = \frac{V_e}{a_e} = \frac{3894}{749} = [5.2]$$

## 9.9 ROCKET PROPELLANTS—SOME CONSIDERATIONS

Recall from elementary chemistry that to produce a flame (such as on a gas stove) you need fuel (such as natural gas or propane) and an oxidizer (such as the oxygen in air). The burning process in the combustion chamber of a rocket engine is the same: it requires the burning of a fuel and oxidizer. The fuel and oxidizer together are called the *rocket propellants*. The choice of propellants is such a serious consideration in the design of rocket engines that we devote this section to some basic discussion of rocket propellants. For example, the value of specific impulse for a rocket engine is mainly a function of the propellants used. The specific impulse, from its definition in Eq. (9.33), can be thought of as the number of seconds after which 1 pound of propellants will produce 1 pound of thrust, and this number of seconds is critically dependent on the propellants themselves. The multiple choices of possible rocket propellants, and their combustion chemistry, are a subject in itself for which whole books have been written. Here we just introduce some of the basic aspects of propellants.

In the most general sense, there are two different classifications of chemical propellants: liquid propellants and solid propellants. Let us examine each in turn.


### 9.9.1 Liquid Propellants

Here both the fuel and oxidizer are carried aboard the rocket in liquid form, and they are injected under pressure as a spray into the combustion chamber. This was illustrated schematically in Fig. 9.27, where the oxidizer and fuel are shown as separate sources being injected and mixed in the combustion chamber. The propellants are injected at high pressure. For example, in the Space Shuttle main engine (Fig. 9.28), the propellants are injected at a pressure of 440 atm—an extremely high pressure. Historically, the engineering design of the mechanisms to pressurize the propellants has been a challenge. There are two basic approaches to this problem as described in the following.

Mechanically, the simplest is the *pressure-fed system*, shown [page 794](#) schematically in Fig. 9.29a. Here both the liquid fuel and oxidizer are placed under high pressure in their respective tanks by a high-pressure inert gas such as helium (He), which is carried in separate (usually spherical) tanks. When valves connecting the propellant tanks to the combustion chamber are opened, the propellants, which are already under high pressure in their tanks, are forced into the combustion chamber. The advantage of this system is its relative simplicity. The disadvantage is that the propellant tanks must have thick walls to withstand the high pressure, so the tanks are heavy. For this reason, pressure-fed systems are usually used for small rocket engines (thrust levels of 1000 lb or less) that operate for only short durations. Such engines are used as attitude control jets on spacecraft; they are usually not used as the primary rocket thrust-

producing power plant. (An exception to this was the XLR11 rocket engine that powered the Bell X-1 to its historic first supersonic flight, as described in Sec. 5.22. Because no reliable fuel pump existed at the time of this flight, although one was feverishly being designed for the engine, the Bell and Reaction Motors-engineers had to depend on a pressure-fed system for the rocket engine.)

page 795

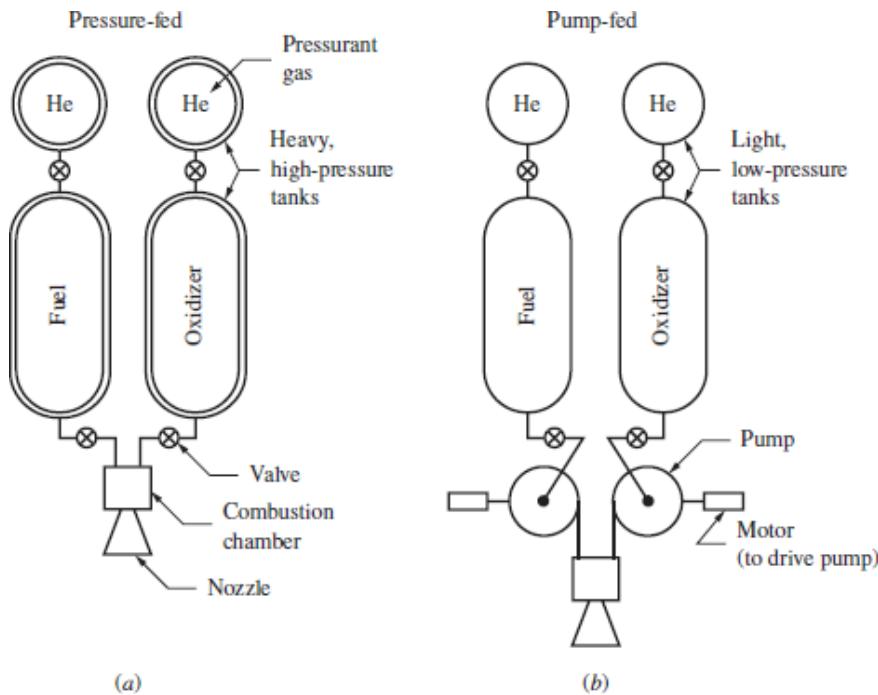

**Figure 9.29** (a) Pressure-fed rocket engine. (b) Pump-fed rocket engine.

The second type of mechanism is the *pump-fed system*, illustrated in Fig. 9.29b. Here the propellants are stored at relatively low pressure in thin-walled (hence lighter) tanks, and their pressure is increased by pumps before injection into the combustion chamber. In turn, the pumps can be driven by electric motors and batteries or, more usually, by turbines that are themselves powered by burning a small amount of propellant. For the Space Shuttle main engine (Fig. 9.28), two low-pressure turbopumps boost the inlet pressure for two high-pressure turbopumps, which feed the propellants into the combustion chamber at a pressure of 440 atm or higher. Dual preburners generate the gases that power the high-pressure turbopumps. The combustion chamber pressure is about 210 atm; the difference between the 440-atm propellant injection pressure and the 210-atm combustion chamber pressure enhances the propellant spray and mixing process.

Liquid propellants come in different categories, some of which are itemized next.

**Cryogenic Propellants** The Space Shuttle main engine utilized hydrogen ( $H_2$ ) for the fuel and oxygen ( $O_2$ ) for the oxidizer. Because  $H_2$  must be at or below 20 K (36°R or  $-253^{\circ}C$  or  $-424^{\circ}F$ ) to be a liquid and  $O_2$  must be at or below 135 K (243°R or  $-138^{\circ}C$  or  $-217^{\circ}F$ ), they are examples of cryogenic propellants—chemicals that must be stored at extremely low temperatures to remain in liquid form. At the launch pads for the Space Shuttle, liquid oxygen (LOX) was stored in a giant insulated sphere holding 900,000 gal, and liquid hydrogen ( $LH_2$ ) was contained in a separate insulated sphere with an 850,000-gal capacity. These cryogenic temperatures must be maintained during fueling and launch of the shuttle. However, it was worth all the trouble to do this because the  $H_2-O_2$  propellant combination yields a high specific impulse. For the Space Shuttle, the vacuum  $I_{sp} = 455$  s. The combustion process in the rocket engine was started with an igniter, and the burning was self-sustaining after that.

**Bipropellants and Monopropellants** The  $H_2-O_2$  combination just described is an example of a *bipropellant* combination—two chemicals used for the combustion process. Other chemicals exist in which chemical energy can be released simply by decomposing the molecules; these are called *monopropellants*. Usually a solid catalyst is used to promote the decomposition. Monopropellants usually have a smaller  $I_{sp}$  than bipropellant combinations, but they are easier to deal with simply because only one chemical propellant is being used. This reduces weight, simplifies the fuel system, and usually increases reliability. Monopropellants find use in small rocket engines for spacecraft attitude control. Hydrazine ( $N_2H_4$ ) is an extensively used monopropellant.

**Hypergolic Propellants** As mentioned previously, the  $H_2-O_2$  system used for the Space Shuttle main engine required the combustion process to be initiated by an igniter (a type of “spark plug”), after which combustion was self-sustaining. However, some propellant combinations ignite simply on contact with one-another. These are called *hypergolic propellants*. Because of this feature, there is an added danger in handling the propellants. However, they have the advantage of eliminating the need for a separate ignition system. Fluorine ( $F_2$ ) is hypergolic with most fuels, but  $F_2$  is among the most dangerous of all rocket propellants and therefore is not frequently used. Hypergolic propellants were used on two propulsion subsystems on the Space Shuttle—the orbital maneuvering subsystem (OMS) used for orbital insertion and the reaction control subsystem (RCS) used for attitude control. The fuel is monomethylhydrazine (MMH), and the oxidizer is nitrogen tetroxide ( $N_2O_4$ ). As one NASA Space Shuttle engineer has glibly stated, “Because of the eagerness of these two propellants to ignite

spontaneously, their storage facilities are widely separated on Complex 39's launch pads" (NASA Fact Sheet KSC 191-80, November 1980). This hypergolic MMH/N<sub>2</sub>O<sub>4</sub> system is not as energetic as the H<sub>2</sub>-O<sub>2</sub> system used for the main engines; its  $I_{sp}$  ranges from 260 to 280 s in the RCS and 313 s in the OMS. The higher efficiency of the OMS was due to a higher expansion ratio in that rocket engine nozzle.

---

page 796

### 9.9.2 Solid Propellants

So far in this section, we have discussed *liquid* rocket propellants. These propellants usually require large tanks (especially H<sub>2</sub>, which is a light, high-volume chemical). Consider Fig. 9.43, which is a picture of the Shuttle Transportation System, and note the large single tank on which the winged shuttle orbiter is mounted. This is the tank for the liquid propellants. But note the two smaller cylinders on each side of the big tank; these are the strap-on twin solid rocket boosters that help the main shuttle engines lift the entire shuttle system off the ground. These two rocket engines use *solid propellants* in contrast to the liquid propellants discussed earlier. Solid propellants are completely different from liquid propellants in both their nature and behavior. This is why the first and primary distinction made between rocket propellants is that of liquid versus solid propellants, as we are making here.

Historically, the first rockets used solid propellants (see Sec. 9.16 on the history of rockets); these were black-powder rockets used more than 1300 years ago in China. In contrast, the first successful liquid propellant rocket was a product of the 20th century, developed by Robert H. Goddard in 1926.


Solid rocket fuels are just that—the fuel and oxidizer are premixed and cast in solid form. The two solid rocket boosters of the Space Shuttle used a solid propellant consisting of atomized aluminum powder (16 percent) as a fuel and ammonium perchlorate (69.93 percent) as an oxidizer. The remainder was iron oxide powder (0.7 percent) as a catalyst and polybutadiene acrylic acid acrylonitrile (14 percent) as a rubber-based binder. The binder also burned as a fuel. The solid propellant was battleship gray and had the consistency of a hard rubber eraser.

Burning of a solid propellant is initiated by an igniter on the surface of the propellant grain. Then the surface burns and recedes away, much like a Fourth of July sparkler. Some propellant grains are designed to be end burners (one end is ignited and burns away, as a cigarette does), as shown in Fig. 9.30a. Others have an inner cylindrical bore, where the inner surface is ignited, and the propellant grain burns outward toward the motor case, as shown in Fig. 9.30b. Such solid rockets are called *internal burners*. For the cylindrical bore shown in Fig. 9.30b,

as the burning surface recedes, the burning surface area increases, increasing the mass flow of burned gases. In turn, because rocket thrust is proportional to mass flow [see Eq. (9.28)], the thrust will increase with time. Another internal burning configuration is a solid propellant grain with a star-shaped internal hollow channel, as sketched in Fig. 9.30c. With this configuration, ignition takes place on the star-shaped internal surface, and then the surface recedes, becoming more circular in time. Because the star-shaped internal surface presents the maximum burning surface, which decreases with time, the thrust of this shape of grain is maximum at the beginning of burning and decreases with time. In essence, the timewise variation of the thrust of a solid rocket engine can be tailored via the shape of the solid propellant grain. For the Space Shuttle's solid rocket booster, the internal cavity was an 11-point star, which provided maximum thrust at liftoff. Note that the solid propellant grain configurations shown in Fig. 9.30a to c are literally housed in the combustion chamber and that the burned gases from these propellants are expanded through a convergent-divergent supersonic nozzle, the same as in a liquid propellant rocket, as sketched in Fig. 9.30d.

---

page 797

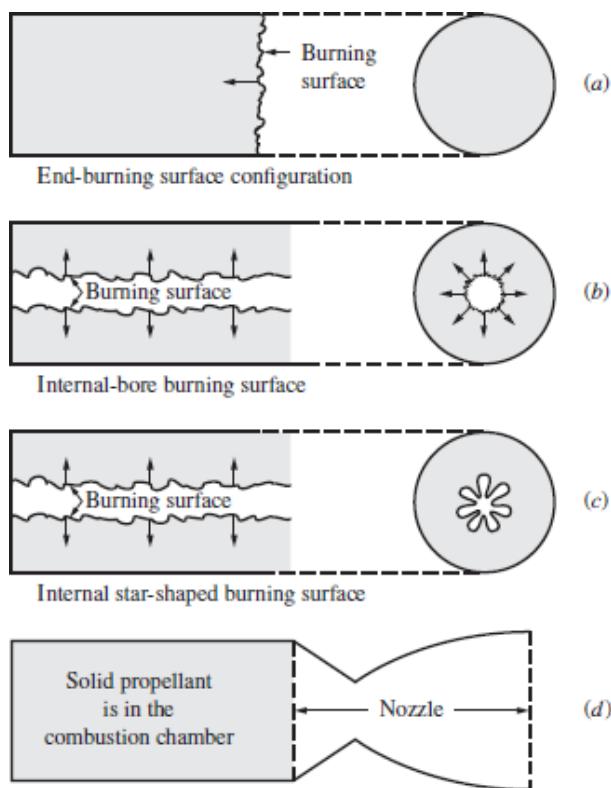

**Figure 9.30** Some solid propellant burning configurations.

---

page 798

One of the important physical characteristics of a solid propellant is the *linear burning rate*  $r$ , which is the time rate at which the burning surface of

the propellant recedes normal to itself. The burning rate is a function mainly of the combustion chamber pressure  $p_0$  and the initial temperature of the propellant. The pressure variation of  $r$  is given by

$$r = ap_0^n \quad (9.43)$$

where  $r$  is the linear burning rate,  $p_0$  is the combustion chamber pressure, and  $a$  and  $n$  are constants that are determined by experiment for a given propellant. For most propellants,  $n$  has a value between 0.4 and 0.8, where  $r$  is in units of inches per second and  $p_0$  in pounds per square inch.

In comparison to liquid propellants, solid propellants have the following advantages and disadvantages:

### ***Advantages***

1. Solid rockets are simpler, safer, and more reliable. There is no need for pumps and complex propellant feed systems.
2. Solid propellants are more storable and stable. Some solid rockets can be stored for decades before use.
3. Solid propellants are dense; hence the overall volume of solid rockets is smaller. Compare the smaller size of the twin solid boosters on the Space Shuttle to the larger size of the main liquid propellant tank in Fig. 9.43.

### ***Disadvantages***

1. The specific impulse of solid propellants is considerably less than that of liquid propellants. For the Space Shuttle's solid rocket boosters,  $I_{sp} = 242$  s at sea level. In general, the specific impulse of solid rockets ranges from 200 to 300 s.
2. Once a solid rocket is ignited, it usually cannot be turned off. Also, it is difficult to throttle a solid rocket to vary the thrust. In contrast, liquid rockets are easily throttled, and the thrust can be cut off whenever desired just by manipulating the fuel and oxidizer valves.

### **9.9.3 A Comment**

The choice of liquid versus solid propellants in the design of a new rocket engine depends on the design specifications, including engine performance, cost, reliability, maintainability, and so forth. However, the differences between liquid and solid propellants are so well defined that the engineering design choice is usually straightforward. We end this section by noting that the concept of hybrid rockets has been examined in recent years. Hybrid rockets are part solid and part

liquid. The oxidizer may be solid and the fuel a liquid, or vice versa, in such hybrid rockets. Hybrid rockets are an attempt to combine the advantages of both solid and liquid propellants; but of course, as is true of any design compromise, hybrid rockets are just that—a compromise. At the time of writing, hybrid rockets are still in the experimental stage.



## 9.10 ROCKET EQUATION

In Sec. 9.8, we discussed some of the performance characteristics of a [page 799](#) rocket engine, such as the thrust, as determined by Eq. (9.28), and its relationship to specific impulse,  $I_{sp}$ . In this section, we develop another extremely important performance characteristic of a rocket, which is how much change in velocity,  $\Delta V$ , it can impart to the spacecraft. You might remember from Ch. 8) that all of the orbital maneuvers discussed are ultimately defined in terms of how much  $\Delta V$  is needed to achieve that maneuver. Whether you are considering a Hohmann transfer, a plane change, or an escape trajectory from a planet, the determining characteristic is the  $\Delta V$  requirement, because your vehicle will need to carry sufficient propellant to achieve this  $\Delta V$ . The rocket equation is exactly the relationship that will allow you to determine how much propellant you need for a given  $\Delta V$ , or alternately, how much  $\Delta V$  can be achieved with a given amount of propellant.

The rocket equation comes quite simply from a statement about conservation of momentum for the vehicle in flight. Consider a rocket of mass  $M$ , traveling at velocity  $V$ , at a given time  $t$ , as shown in Fig. 9.31a. The momentum of this vehicle is:

$$\text{Momentum at time } t = MV \quad (9.44)$$

This rocket is accelerating because the rocket engine in its tail is shooting out exhaust products at a high velocity,  $V_e$ . Consider now the vehicle at a time increment later,  $t + \Delta t$ : the velocity of the vehicle has gotten slightly faster so it is now traveling at  $V + \Delta V$ ; the mass of the vehicle is slightly lighter because some amount of propellant has been used up, so it is now  $M - |\Delta M|$ ; this amount of propellant  $|\Delta M|$  that has been ejected at velocity  $V_e$  *relative to the rocket*, is actually traveling at  $(V - V_e)$  relative to space (because it, too, was initially moving forward with the vehicle at  $V$ ). This situation is shown in Fig. 9.31b. Taking all this into account, we can now write the new momentum of the vehicle as:

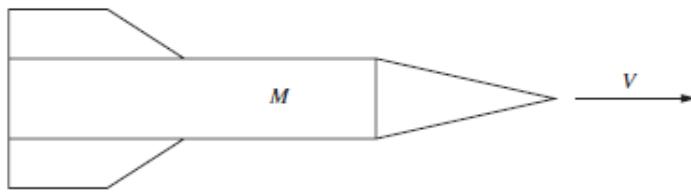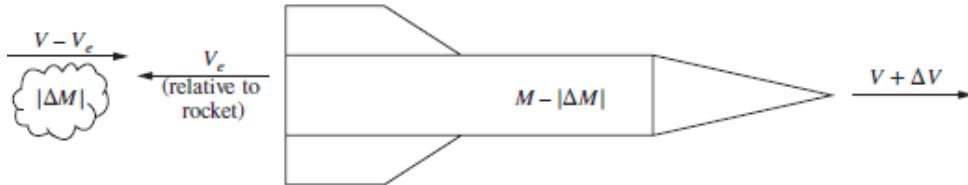(a) Time =  $t$ (b) Time =  $t + \Delta t$ **Figure 9.31** Rocket accelerating forward due to rocket engine firing.

$$\text{Momentum at time } (t + \Delta t) = (M - |\Delta M|)(V + \Delta V) + |\Delta M|(V - V_e) \quad (9.45)$$

The next step is to convert (9.45) to its differential form, by taking the time interval  $\Delta t$  to its infinitesimal form  $dt$ . Before working through the algebra of this expression, it should be noted that the absolute value of  $\Delta M$ , i.e.,  $|\Delta M|$ , has been used in the discussion above. This is because, as the propellant is being used up, the mass of the vehicle is decreasing, and therefore  $\Delta M$  must actually be negative. Since this incremental chunk of mass was visualized as a positive quantity,  $|dm|$ , it is now necessary to perform the following substitution in Eq. (9.45):

$$|\Delta M| = -dM \text{ in the limit}$$

resulting in the following:

$$\begin{aligned} \text{Momentum at time } (t + dt) &= (M + dM)(V + dV) - dM(V - V_e) \\ &= M V + dM V + M dV + dM dV \\ &\quad - dM V + dM V_e \\ &= M V + M dV + dM V_e \end{aligned} \quad (9.46)$$

In this expression, the term  $(dM dV)$ , being the product of two very small-numbers, is considered negligible and was therefore removed.

Applying conservation of momentum by setting Eq. (9.44) equal to Eq. (9.46), yields the following expression:

$$\begin{aligned} M V &= M V + M dV + dM V_e \\ \text{or} \quad M dV &= -dM V_e \\ \text{or} \quad dV &= -V_e \frac{dM}{M} \end{aligned} \quad (9.47)$$

If we now assume that  $V_e$  is a constant, which is a good approximation during most of the burn time of a rocket, this expression can be integrated from an initial time to a final time, to give:

$$\boxed{\Delta V = -V_e \ln\left(\frac{M_{\text{final}}}{M_{\text{initial}}}\right)} \quad \text{or} \quad \Delta V = V_e \ln\left(\frac{M_{\text{initial}}}{M_{\text{final}}}\right) \quad (9.48)$$

This expression, generally referred to as “the rocket equation,” can now be applied in many instances, but two situations of particular interest are: (1) to calculate the final velocity at burnout of a booster launched from the Earth; and (2) to calculate how much propellant is needed to perform a given maneuver in space.

(1) Assume that booster starts on the surface of the Earth at zero velocity with an initial total mass  $M_0$ . Part of this mass is the mass of propellant,  $M_{\text{pr}}$ , including both oxidizer and fuel, which will be expelled during the launch trajectory to get the vehicle into orbit. The rocket equation gives us the following:

$$\Delta V = V_b - 0 = V_b = -V_e \ln\left(\frac{M_0 - M_{\text{pr}}}{M_0}\right) \quad (9.49) \quad \underline{\text{page 801}}$$

So, knowing the mass of propellant and the exhaust velocity of propellant from the rocket engine (or the  $I_{\text{sp}}$ ), the burnout velocity can be calculated.

Note that for the booster to actually get into orbit, the thrust must be greater than the weight of the vehicle or it will never leave the pad, and the burnout velocity must be greater than orbital velocity at the altitude where burnout occurs. A launch from the surface of the Earth is hampered by having to work against both gravity and atmospheric drag on the vehicle during ascent, but it is helped to some extent by the rotation of the Earth which can impart its velocity to the vehicle if it is launching eastward.

(2) Suppose you are designing a spacecraft that at some point during its mission will need to change its orbital inclination or perform some other orbital maneuver using on-board thrusters. The equations presented in Sec. 8.7.2 of Ch. 8) will allow you to calculate the necessary  $\Delta V$  for the maneuver in question. Knowing that  $\Delta V$ , you can now determine how much extra propellant will need to be carried in the tanks of the spacecraft to accomplish the maneuver:

$$\Delta V = -V_e \ln\left(\frac{M_0 - M_{\text{pr}}}{M_0}\right) \quad \text{so} \quad M_{\text{pr}} = M_0 \left(1 - e^{-\frac{\Delta V}{V_e}}\right) \quad (9.50)$$

Example 9.6 illustrates the use of this equation.

### EXAMPLE 9.6

Suppose you are designing a mission to explore the moons of Mars, Phobos and Deimos, and you need to know how much propellant it will take to perform a Hohmann transfer from the orbit of Phobos ( $R_p = 9400$  km) to that of Deimos ( $R_D = 23,500$  km). Determine the proportion of the vehicle mass that must be propellant to perform this maneuver, assuming the specific impulse of the engine is 350 s.

### ■ Solution

First calculate  $\Delta V$  necessary to perform the Hohmann transfer from one circular Mars orbit to the other using Eq. (8.85) of Sec. 8.7:

$$\Delta V = \Delta V_1 + \Delta V_2 = \left( \sqrt{\mu \left( \frac{2}{r_1} - \frac{1}{a} \right)} - \sqrt{\frac{\mu}{r_1}} \right) + \left( \sqrt{\frac{\mu}{r_2}} - \sqrt{\mu \left( \frac{2}{r_2} - \frac{1}{a} \right)} \right)$$

In this expression,  $r_1 = R_p$ ,  $r_2 = R_D$ , and  $\mu = GM_{\text{Mars}} = 4.27 \times 10^{13}$  m<sup>3</sup>/s<sup>2</sup>.

Also:  $a = (r_1 + r_2)/2 = (9400 + 23,500)/2 = 16,450$  km

Substituting these numbers into the expression above yields:

page 802

$$\Delta V = 745 \text{ m/s}$$

Using the second form of Eq. (9.50) with this  $\Delta V$ , the mass ratio  $\left(\frac{M_{\text{pr}}}{M_0}\right)$  can be solved for:

$$\frac{M_{\text{pr}}}{M_0} = 1 - e^{-\frac{\Delta V}{V_e}} = 1 - e^{-\frac{\Delta V}{g_0 I_{\text{sp}}}} = 1 - e^{-\frac{745}{(9.81)(350)}} = 0.19$$

Thus, no matter how big or how small this Mars exploration vehicle is, it will have to reserve almost 20 percent of its mass just for this one maneuver.

## 9.11 ROCKET STAGING


In Sec. 9.10 the rocket equation was developed, which allows one to calculate the  $\Delta V$  achieved by a vehicle firing its engines and expelling propellant. What if this  $\Delta V$  is insufficient to get the payload into orbit—can one just add more propellant to the rocket and expect it to do better? It turns out there are diminishing returns with this technique, because adding more propellant means the vehicle has to lift that propellant nearly to orbital altitude and velocity before being able to use it, and this requires more propellant to lift the propellant. Qualitatively, it should make sense that there are limits to what can be launched from the surface of the Earth, constrained primarily by the performance, i.e.,  $I_{\text{sp}}$ ,

of modern day rocket engines. Fortunately, there is a common technique which allows launch vehicles to boost even very massive payloads into orbit: this is called *staging*.

A multistage rocket is essentially a vehicle composed of multiple rockets placed one on top of the other, tip to tail, such that the bottom one fires first until depleted and then drops off, then the next one fires and drops off, until they are all expended. The lowest rocket is called the first stage, the next is the second stage, and so on until you reach the top of the rocket where the payload is located. This configuration is shown schematically in Fig. 9.32. The final velocity of a multistage vehicle is simply the sum of the velocities imparted to the vehicle by each stage:

$$\Delta V_{\text{total}} = \Sigma \Delta V_n \quad (9.51)$$

Staging works because the empty structure of each stage needs to be carried no further than the point where its propellant is expended.

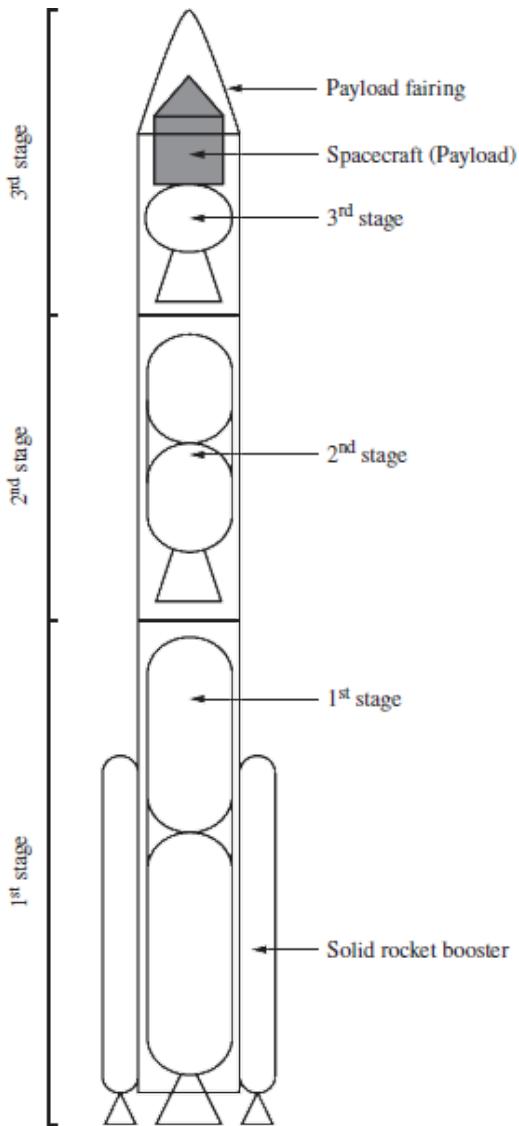

**Figure 9.32** A multistage rocket.

### 9.11.1 Comparison of Single-Stage and Two-Stage Vehicle

It may not immediately be obvious why staging works or how much it [page 803](#) will help, but the following comparison of one stage versus two identical stages illustrates how the numbers work out.

Consider a single stage launch vehicle, sitting on the pad, fully fueled, just prior to launch. The initial or “gross” mass of the full vehicle,  $M_0$ , can be divided into 3 component masses:

$M_{PL}$  = mass of the payload

$M_{PR}$  = mass of all the propellant (fuel and oxidizer)

$M_{IN}$  = inert mass = mass of everything other than propellant and payload  
(structure, engines, skirts and fairings, avionics, etc. . .)

With these definitions, we can write:

$$M_0 = M_{PL} + M_{PR} + M_{IN} \quad (9.52)$$

Applying the rocket equation to this configuration yields the  $\Delta V$  achievable with this vehicle:

$$\Delta V = -V_e \ln\left(\frac{M_0 - M_{PR}}{M_0}\right) = -V_e \ln\left(\frac{M_{PL} + M_{IN}}{M_0}\right) \quad (9.53)$$


To be able to compare this configuration with a two-stage vehicle more quantitatively, let us use some representative numbers for the masses and exhaust velocity of the vehicle. Assume:

$$\begin{aligned} M_0 &= 20,000 \text{ kg} & M_{PR} &= 17,000 \text{ kg} \\ M_{PL} &= 1000 \text{ kg} & M_{IN} &= 2000 \text{ kg} \\ V_e &= 4500 \text{ m/s} \end{aligned}$$

$$\text{Then } \Delta V = -V_e \ln\left(\frac{M_{PL} + M_{IN}}{M_0}\right) = -4500 \ln\left(\frac{1000 + 2000}{20000}\right) = 8540 \frac{\text{m}}{\text{s}}$$

This single stage vehicle is illustrated in Fig. 9.33a and should be compared to Fig. 9.33b showing a two-stage vehicle. For comparison purposes, the total mass of the two vehicles will be assumed to be equal as well as the mass of the payload and, even though this is not entirely realistic, the mass distribution in the two stages will be equal to each other and will each have half the propellant and inert mass of the single stage vehicle:

$$\begin{aligned} M_{PR1} &= 8500 \text{ kg} & M_{PR2} &= 8500 \text{ kg} \\ M_{IN1} &= 1000 \text{ kg} & M_{IN2} &= 1000 \text{ kg} \end{aligned}$$

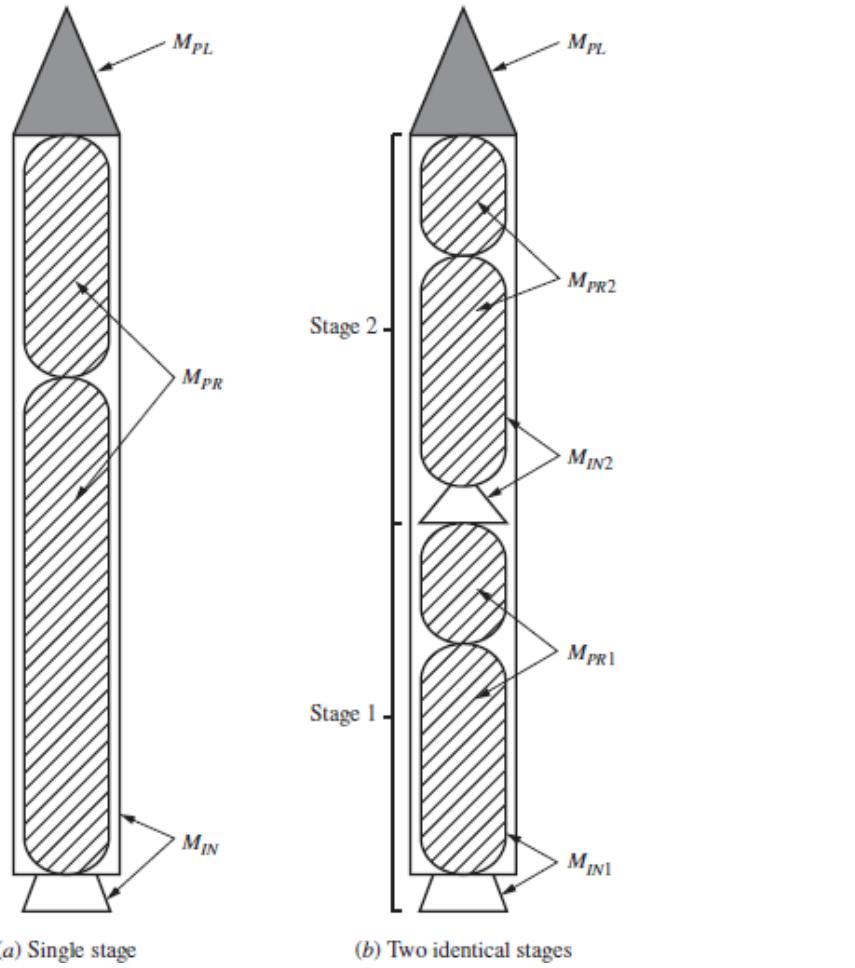

**Figure 9.33** Comparison of single-stage and two-stage vehicles.

Using these numbers, and assuming the two stages have engines with page 804  
the same  $V_e$ :

$$\Delta V = \Delta V_1 + \Delta V_2 = -V_e \ln\left(\frac{M_{\text{final1}}}{M_0}\right) - V_e \ln\left(\frac{M_{\text{final2}}}{M_{\text{init2}}}\right) \quad (9.54)$$

$$\Delta V = -V_e \ln \left( \frac{M_0 - M_{PR1}}{M_0} \times \frac{M_{PL} + M_{IN2}}{M_{PL} + M_{IN2} + M_{PR2}} \right)$$

$$\Delta V = -4500 \ln\left(\frac{20000 - 8500}{20000} \times \frac{1000 + 1000}{1000 + 1000 + 8500}\right) = 9950 \frac{\text{m}}{\text{s}}$$

The single-stage vehicle configuration was insufficient to get the 1000 kg payload into earth orbit (which would require a  $\Delta V$  on the order of 9500 m/s), but by splitting the same propellant and inert masses into two stages, the resulting vehicle has ample margin to take the payload to orbit. This example, which assumes that the two stages are identical in design, is actually suboptimal; typically, the stage sizes get smaller as they are higher on the vehicle, which can

be shown to produce maximum payload in orbit. Nevertheless, even this crude assumption shows that staging can get payloads to orbits that would be infeasible with a single-stage vehicle, and the performance shown here can be improved significantly with additional stages and by carefully picking the relative size of the stages, the types of propellant used in each stage, and the corresponding engines.

---

page 805

## 9.11.2 Mass Ratios

As so often happens when designing aerospace vehicles, it is convenient to define some non-dimensional parameters: ratios that can simplify the analysis and allow parametric studies of vehicle design. The nomenclature and exact definition of these various ratios differ from one textbook or paper to another, but generally speaking the most useful parameters are:

$$\begin{aligned} MR &= \text{Mass ratio} = \frac{M_{\text{final}}}{M_{\text{initial}}} \\ \lambda &= \text{Payload mass fraction} = \frac{M_{PL}}{M_0} \\ \delta &= \text{Inert mass fraction} = \frac{M_{IN}}{M_0} \\ \text{Velocity ratio} &= \frac{\Delta V}{V_e} \end{aligned}$$

The following useful relationships can now be written:

$$MR = \frac{M_{\text{initial}} - M_{PR}}{M_{\text{initial}}} = 1 - \frac{M_{PR}}{M_0} = 1 - \text{Propellant mass fraction} \quad (9.55)$$

$$MR = \frac{M_{PL} + M_{IN}}{M_0} = \lambda + \delta \quad (9.56)$$

And the rocket equation becomes:


$$\frac{\Delta V}{V_e} = -\ln(\lambda + \delta) \quad \text{or} \quad \lambda = e^{-\Delta V/V_e} - \delta \quad (9.57)$$

Figure 9.34 is a graph of velocity ratio,  $\Delta V/V_e$ , versus payload mass fraction,  $\lambda$ , with the inert mass fraction,  $\delta$ , as a parameter. There are a couple clear concepts to draw from this graph:

- the higher the payload fraction, the lower the achievable  $\Delta V$
- the higher the inert mass fraction, the lower the achievable  $\Delta V$

Both of these statements are somewhat self-evident, because either payload mass or inert mass will offset propellant mass directly and thus affect  $\Delta V$ , but it is striking to note that each curve quickly approaches an asymptote which

represents how much velocity that vehicle can achieve in the limit carrying no payload.

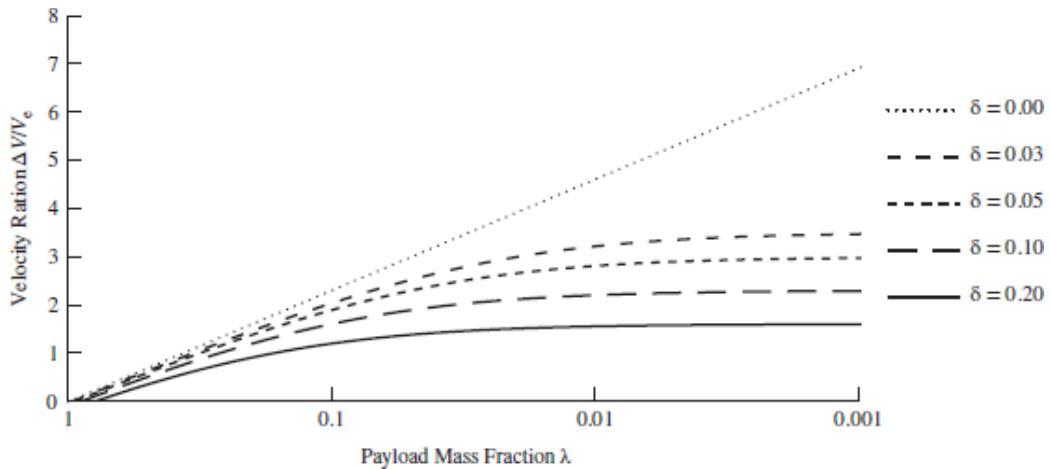

**Figure 9.34** Velocity ratio as a function of payload mass fraction.

Additionally, the necessary  $\Delta V$  to reach earth orbit from launch is [page 806](#) approximately 9.5 km/s, which is roughly 2 to 3 times the exit velocity for most liquid-fueled rocket engines. In order to achieve the velocity ratio ( $\Delta V/V_e$ ) needed for Earth launch to orbit, relatively low inert mass fractions will be required. In other words, the structural mass of the full vehicle needs to be on the order of 10 percent or less of the takeoff mass ( $\delta < 0.1$ ) in order to achieve orbit with a payload. This makes launch vehicle design very challenging, with every additional kg of mass included only if absolutely necessary. For example, after the second flight of the Space Shuttle, external tanks were no longer painted white in order to save hundreds of pounds that would otherwise have to be carried all the way to orbit. Note, too, that a  $\delta$  of 0 is actually impossible because this would require designing a vehicle with no structure or engines—that line is included on the graph only to show the limiting case.

[page 807](#)

Estimate the total mass,  $M_0$ , of a Single Stage to Orbit (SSTO) vehicle which uses liquid oxygen/liquid hydrogen (LOX/LH<sub>2</sub>) engines with an  $I_{sp} = 408$  s, if it must deliver a 1000 kg payload to LEO ( $\Delta V = 9.5$  km/s). Assume  $\delta = 0.07$  for this vehicle.

### ■ Solution

First recognize that  $V_e = g_0 I_{sp} = (9.81 \text{ m/s}^2)(408 \text{ s}) = 4000 \text{ m/s}$

Using the modified rocket equation, Eq. (9.57), solve first for  $\lambda$ , the payload mass fraction:

$$\lambda = e^{-\Delta V/V_e} - \delta = e^{-9500/4000} - 0.07 = 0.0230$$

The definition of payload mass fraction can now be used to solve for  $M_0$ :

$$\lambda \stackrel{\text{def}}{=} \frac{M_{PL}}{M_0} \quad \text{so} \quad M_0 = \frac{M_{PL}}{\lambda} = \frac{1000}{0.0230} = 43,450 \text{ kg}$$


---

### EXAMPLE 9.8

Estimate the total mass,  $M_0$ , of a two-stage vehicle which uses liquid oxygen/liquid hydrogen (LOX/LH<sub>2</sub>) engines with an  $I_{sp} = 408$  s, if it must deliver a 1000 kg payload to LEO ( $\Delta V = 9.5$  km/s). Assume  $\delta = 0.07$  for each stage of this vehicle, and assume that each stage contributes the same  $\Delta V$  to the booster.

#### ■ Solution

First recognize again that  $V_e = g_0 I_{sp} = (9.81 \text{ m/s}^2)(408 \text{ s}) = 4000 \text{ m/s}$

To solve this more complicated problem, start with the second stage and figure out its initial mass,  $M_{0,2}$ , recognizing that the second stage must produce  $\Delta V_2 = \Delta V/2 = 4750 \text{ m/s}$ . So,

$$\lambda_2 = e^{-\Delta V_2/V_e} - \delta = e^{-4750/4000} - 0.07 = 0.235$$

$$\text{and} \quad M_{0,2} = \frac{M_{PL}}{\lambda_2} = \frac{1000}{0.235} = 4256 \text{ kg}$$

This mass just calculated is the initial mass of the second stage and it is also the “payload” mass for the first stage. With that in mind, we can now determine the initial mass of the first stage, i.e., the initial mass of the whole vehicle:

$$\begin{aligned} \lambda_1 &= e^{-\Delta V_1/V_e} - \delta = e^{-4750/4000} - 0.07 = 0.235 \\ \text{so} \quad M_{0,1} &= M_0 = \frac{M_{PL}}{\lambda_1} = \frac{4256}{0.235} = 18,100 \text{ kg} \end{aligned}$$

Compare this, the total mass for the two-stage vehicle, 18,100 kg, to the total mass for the single-stage vehicle calculated above, 43,450 kg, and the benefit gained by having two stages is immediately obvious: the initial mass of the vehicle has been cut by almost 60 percent.

Note that these two problems are similar to the example worked out in Sec. 9.11.1 above, comparing a single-stage vehicle to a two-stage vehicle for lofting

a given payload to orbit, but in this case, instead of requiring that the total mass of the two vehicles be the same with equal mass in each stage, the goal was to make the  $\Delta V$  contributed by each stage equal and see how much total vehicle mass was saved. This latter example is a much more realistic approach, and in fact represents a design that is close to the optimum for a two-stage vehicle with a given payload.

---

### 9.11.3 Multistage Vehicles

There are different ways to optimize a multistage vehicle, governed primarily by how the optimum is defined. One could design a staging sequence to maximize the payload mass delivered to orbit or maximize the burnout velocity of the last stage (which is basically the same thing), or perhaps the optimum is defined by lowest cost, which might involve incorporating reusability or taking advantage of flight-proven hardware. In most cases, there is not a closed-form analytical solution for determining the optimum staging characteristics; instead, it is often necessary to use numerical methods that iteratively find good, if not optimal, configurations. A typical vehicle design for earth launch will usually consist of at least two stages, with the first stage primarily responsible for penetrating the atmosphere and overcoming the highest gravity component, and the second stage responsible for accelerating the vehicle to orbital velocity and performing the orbit insertion of the payload. Generally, these stages are not equal and in fact, each stage is progressively smaller than the previous one and often has different engine and propellant characteristics.

The performance of a launch vehicle can sometimes be upgraded by [page 808](#) using strap-on boosters. These are usually solid rocket boosters that are attached to the first stage of the vehicle to provide extra thrust right at liftoff and usually during a significant part of the first-stage burn. This technique is called *parallel staging*, and can be analyzed by considering the time during which the strap-ons are burning the “zeroth” stage of the launch process, followed by the first stage after the strap-ons are dropped. Analysis of this type of configuration is beyond the scope of this textbook but it is well worth mentioning since many launch vehicles rely on this method. The Space Shuttle, for example, would start up all three main engines to make sure they were working first, and then ignite the two solid rocket boosters on either side of the external tank before actually lifting off from the pad. The solids, once lit, could not be turned off or even throttled so this led to a wild ride but was entirely necessary for getting the orbiter into orbit successfully.

Once in orbit, after all the launch stages have been depleted, most spacecraft must still have some maneuvering capability. It is not unusual, for example, to first place a spacecraft in a “parking orbit” while it is being checked out and configured, and then have an upper-stage motor move it to its operational orbit, such as geosynchronous orbit or an interplanetary trajectory perhaps. A spacecraft that is in its final operational orbit still needs on-boards thrusters though these would not be considered a stage at this point. Thrusters may be needed for fine-tuning the orbit, for attitude control, possibly for providing spacing between satellites in a constellation, for re-boosting a spacecraft in low earth orbit if atmospheric drag is causing its orbit to decay, or sometimes for a final impulse to deorbit the satellite at the end of its life.

## 9.12 ELECTRIC PROPULSION

The chemical rockets discussed in Secs. 9.8 to 9.11 are the “brute-force” propulsion devices for space vehicles—high thrust but relatively low  $I_{sp}$ . Their high thrust is absolutely necessary for ascent from the earth’s surface to space. However, once in space, a space vehicle could take advantage of a propulsive device that produces much less thrust but has a much greater  $I_{sp}$  and that could provide a sustained thrust for very long times, perhaps indefinitely. Uncrewed missions to deep space especially would benefit from such devices. This has spawned a class of propulsion systems under the generic label of *advanced space propulsion*. In this section we discuss only one type of advanced space propulsion—electric propulsion—and that only briefly. Our purpose is to give you the flavor of such a device so you know that other propulsive mechanisms for space vehicles are feasible besides chemical rockets.


Electric propulsion describes the generic class of propulsion devices page 809 that use *electric power* to generate thrust. The idea is coupled with the fact that low-molecular-weight propellants have high values of  $I_{sp}$  [recall the discussion surrounding Eq. (9.35) that  $I_{sp}$  varies inversely with molecular weight]. Electric propulsion concepts use electricity in various forms to accelerate a low-molecular-weight gas, hence creating thrust and at the same time achieving a high  $I_{sp}$ . Some of the types of electric propulsion devices are discussed in Secs. 9.12.1 to 9.12.4.

### 9.12.1 Electron-Ion Thruster


The electron-ion thruster produces thrust by accelerating positively charged ions in an electrostatic field. The basic concept is sketched in Fig. 9.35. A propellant (such as mercury, or an inert gas such as helium or argon) is fed into a chamber.

Inside the chamber is an anode and a cathode. A beam of electrons is generated between the anode and cathode. The high-speed electrons collide with the atoms of the propellant, stripping off other electrons and leaving behind positively charged ions in the chamber. These ions then pass through a separately applied electrostatic field and are accelerated out of the device in the form of an ion beam. If nothing else were done, there would be a rapid buildup of negative charge in the chamber because of the flux of positively charged propellant leaving the device. In turn, the positively charged ion beam would be retarded by the massive negative charge in the chamber. Therefore, it is necessary to make the beam of particles exiting the chamber electrically neutral. This can be achieved by feeding electrons into the exhaust beam. Being neutral, the beam will not be retarded by the negative charge in the chamber.

page 810

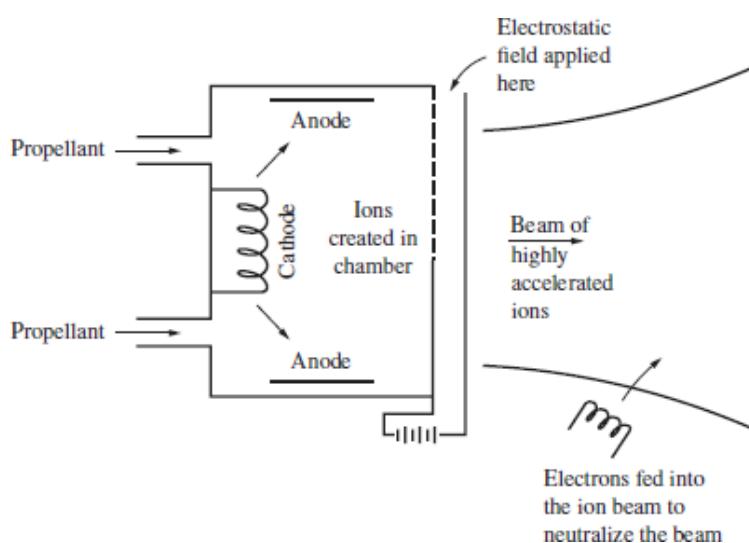

**Figure 9.35** Schematic of an electron-ion thruster.

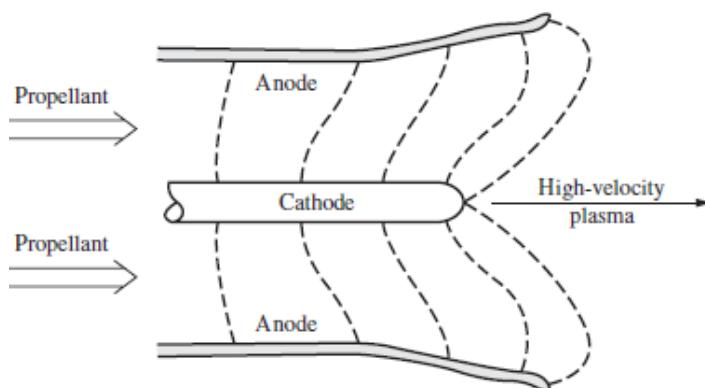

**Figure 9.36** Schematic of a magnetoplasmadynamic (MPD) thruster.  
Electron-ion thrusters have specific impulses from 3000 to 5000 s.

## 9.12.2 Magnetoplasmadynamic Thruster

The magnetoplasmadynamic (MPD) thruster uses a self-induced magnetic field to accelerate positive ions. The basic concept is sketched in Fig. 9.36. Here a powerful pulse of electric current surges from a central cathode to the anode on the walls of a chamber. The propellant is ionized by the electric current. The current paths are illustrated by the dashed lines in Fig. 9.36. The electric current sets up an induced magnetic field in the chamber (recall that an electric current in a wire sets up an induced magnetic field about the wire), which then accelerates the plasma out the back end of the chamber.

Magnetoplasmadynamic thrusters can potentially create more thrust than an electron-ion thruster with approximately the same specific impulse.

## 9.12.3 Arc-Jet Thruster

An arc-jet thruster is fundamentally simple, and is more closely related to chemical rockets than the other electric propulsion devices previously discussed. In the arc-jet thruster, hydrogen is heated in a reservoir by an electric arc, and then the hot, low-molecular weight gas expands through a conventional-convergent-divergent nozzle, as sketched in Fig. 9.37. There are no electromagnetic forces on the hot gas; the electric arc is simply a mechanism to create a hot gas in the reservoir, akin to the energy release during combustion of chemical rocket propellants in the combustion chamber.

The arc-jet thruster has a specific impulse on the order of 800 to 1200 s, due mainly to the low molecular weight of hydrogen.

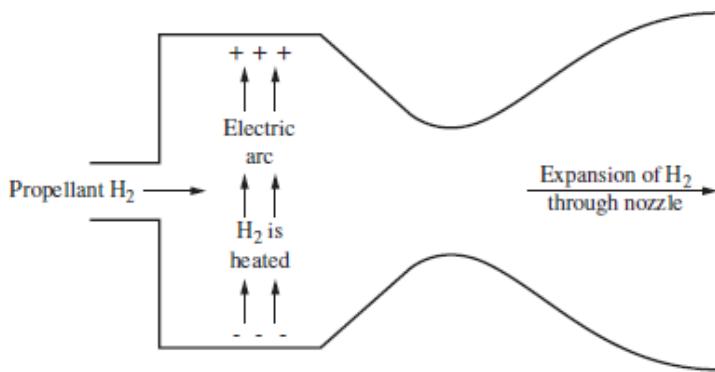


Figure 9.37 Arc-jet thruster.

## 9.12.4 A Comment

All electric propulsion devices require a separate power source to drive [page 811](#) their electromagnetic functions. The power supplies for electric propulsion

devices can be solar cells, nuclear reactors, or other advanced energy sources that can be converted to electricity. Such matters are beyond the scope of our discussion.

For a more extensive but still fundamental discussion of advanced space propulsion, see the article by Frisbee listed in the bibliography; this article is a primary reference source for this section.

The first ion engine to be employed on a deep-space probe was launched on October 24, 1998, from Cape Canaveral. Appropriately named *Deep Space 1*, the space vehicle has the mission to test new, advanced technologies. On November 10, NASA engineers powered up the engine. It ran for 4.5 min before shutting itself off. On November 24, in response to commands sent to the spacecraft, the ion engine came to life again and, over the course of the next few years successfully performed a fly-by of a near-earth asteroid and of a comet before being shut off at the end of 2001. At full throttle the ion engine, which was powered by solar cells, consumed about 2500 W of electric power and produced 0.02 lb of thrust—a force equal to the weight of a sheet of paper in the palm of your hand. Even though this may seem like a minuscule force, by applying it continuously over a long duration (months and years), it was able to accelerate the vehicle to a significant velocity.

## **9.13 HISTORICAL NOTE: EARLY PROPELLER DEVELOPMENT**

The ancestry of the airplane propeller reaches as far back as the 12th century, when windmills began to dot the landscape of western Europe. The blades of these windmills, which were essentially large wood-and-cloth paddles, extracted energy from the wind to power mechanical grinding mills. Only a small intellectual adjustment was necessary to think of this process in reverse—to mechanically power the rotating paddles in order to add energy to the air and produce thrust. Indeed, Leonardo da Vinci developed a helical screw for a 16th-century helicopter top. Later, a year after the first successful balloon flight in 1783 (see Ch. 1), a hand-driven propeller was mounted to a balloon by J. P. Blanchard. This was the first propeller to be truly airborne, but it did not succeed as a practical propulsive device. Nevertheless, numerous other efforts to power hot-air balloons with hand-driven propellers followed, all unsuccessfully. It was not until 1852 that a propeller connected to a steam engine was successfully employed in an airship. This combination, designed by Henri Giffard, allowed him to guide his airship over Paris at a top speed of 5 mi/h.

As mentioned in Ch. 1), the parent of the modern airplane, George page 812Cayley, eschewed the propeller and instead put his faith mistakenly in

oarlike paddles for propulsion. However, Henson's aerial steam carriage (see Fig. 1.11) envisioned two pusher propellers for a driving force; after that, propellers became the accepted propulsion concept for heavier-than-air vehicles. Concurrently, in a related fashion, the marine propeller was developed for use on steamships beginning in the early 19th century. Finally, toward the end of that century, the propeller was employed by Du Temple, Mozhaiski, Langley, and others in their faltering efforts to get off the ground (see Figs. 1.13, 1.14, and 1.18).

However, a close examination of these 19th-century aircraft reveals that the propellers were crude, wide, paddlelike blades that reflected virtually no understanding of propeller aerodynamics. Their efficiencies must have been exceedingly low, which certainly contributed to the universal failure of these machines. Even marine propellers, which had been extensively developed by 1900 for steamships, were strictly empirical in their design and at best had efficiencies on the order of 50 percent. There existed no rational hydrodynamic or aerodynamic theory for propeller design at the turn of the century.

This was the situation when Wilbur and Orville Wright returned from Kill Devil Hills in the fall of 1902, flushed with success after more than 1000 flights of their number 3 glider (see Ch. 1)) and ready to make the big step to a powered machine. Somewhat naively, Wilbur originally expected this step to be straightforward; the engine could be ordered from existing automobile companies, and the propeller could be easily designed from existing marine technology. Neither proved to be the case. After spending several days in Dayton libraries, Wilbur discovered that a theory for marine propellers did not exist and that even an appreciation for their true aerodynamic function had not been developed. So once again the Wright brothers, out of necessity, had to plunge into virgin engineering territory. Throughout the winter of 1902–1903, they wrestled with propeller concepts to provide accurate calculations for design. And once again they demonstrated that without the benefit of formal engineering education, they were the premier aeronautical engineers of history. For example, by early spring of 1903 they were the first to recognize that a propeller is basically a rotating wing, made up of airfoil sections that generate an aerodynamic force normal to the propeller's plane of rotation. Moreover, they made use of their wind tunnel data, obtained the previous year for several hundred different airfoil shapes, and chose a suitably cambered shape for the propeller section. They reasoned the necessity for twisting the blade to account for the varying relative airflow velocity from the hub to the tip. Indeed, in Orville's words,

It is hard to find even a point from which to start, for nothing about a propeller, or the medium in which it acts, stands still for a moment. The thrust depends upon the speed and the angle at which the blade strikes the air; the angle at which the blade strikes the air depends upon the speed at which the propeller is turning, the speed the machine is traveling forward, and the speed at which the air is slipping backward; the slip of the air backward depends upon the thrust exerted by the propeller and the amount of air acted upon. When any of these changes, it changes all the rest, as they are all interdependent upon one another. But these are only a few of the factors that must be considered. . . .

By March of 1903 Wilbur had completed his theory to the extent that a propeller could be properly designed. Using a hatchet and drawknife, he carved two propellers out of laminated spruce and surfaced them with aluminum paint. Excited about their accomplishment, Orville wrote, "We had been unable to find anything of value in any of the works to which we had access, so we worked out a theory of our own on the subject, and soon discovered, as we usually do, that all the propellers built heretofore are *all wrong*, and then built a pair . . . based on our theory, which are *all right!*"

The propeller designed by the Wright brothers, principally by Wilbur, achieved the remarkably high efficiency of 70 percent and was instrumental in their successful flight on December 17, 1903, and in all flights thereafter. Moreover, their propellers remained the best in aviation for almost a decade. Indeed, until 1908 all competitors clung to the older, paddlelike blades, both in the United States and in Europe. Then, when Wilbur made his first dramatic public flight on August 8, 1908, at Hunaudières, France, the impact of his highly efficient propeller on the European engineers was almost as great as that of the Wrights' control system, which allowed smoothly maneuverable flight. As a result, subsequent airplanes in Europe and elsewhere adopted the type of aerodynamically designed propeller introduced by the Wrights.

Consequently, credit for the first properly designed propeller, along with the associated aerodynamic theory, must go to the Wright brothers. This fact is not often mentioned or widely recognized; however, this propeller research in 1903 represented a quantum jump in a vital area of aeronautical engineering, without which practical powered flight would have been substantially delayed.

The final early cornerstone in the engineering theory and design of airplane propellers was laid by William F. Durand about a decade after the Wright brothers' design was adopted. Durand was a charter member of NACA and became its chairman in 1916 (see Sec. 2.8). Durand was also the head of the mechanical engineering department at Stanford University at that time; and

during 1916–1917 he supervised the construction of a large wind tunnel on campus designed purely for the purpose of experimenting with propellers. Then, in 1917, he published NACA Report No. 14, titled “Experimental Research on Air Propellers.” This report was the most extensive engineering publication on propellers to that date; it contained experimental data on numerous propellers of different blade shapes and airfoil sections. It is apparently the first technical report to give extensive plots of propeller efficiency versus advance ratio. Hence, the type of efficiency curve sketched in Fig. 9.6 dates back as far as 1917! Moreover, the values of maximum efficiency of most of Durand’s model propellers were 75 to 80 percent, a creditable value for that point in history. It is interesting to note that almost 90 years later, modern propeller efficiencies are not that much better, running between 85 and 90 percent. To Durand must also go the credit for the first dimensional analysis in propeller theory; in the same NACA reports he shows by dimensional analysis that propeller efficiency must be a function of advance ratio, Reynolds number, and Mach number, and he uses these results to help correlate his experimental data. This early NACA report was an important milestone in the development of the airplane propeller. Indeed, a copy of the report itself is enshrined behind glass and is prominently displayed in the lobby of the Durand Engineering Building on the Stanford campus.

---

page 814

## **9.14 HISTORICAL NOTE: EARLY DEVELOPMENT OF THE INTERNAL COMBUSTION ENGINE FOR AVIATION**

The pivotal role of propulsion in the historical quest for powered flight was discussed in Ch. 1). The frustrating lack of a suitable prime mover was clearly stated as far back as 1852 by George Cayley, who wrote about his trials with a “governable parachute” (glider): “It need scarcely be further remarked, that were we in possession of a sufficiently light first mover to propel such vehicles by waftage, either on the screw principle or otherwise, with such power as to supply that force horizontally, which gravitation here supplies in the descent, mechanical aerial navigation would be at our command without further delay.”

Indeed, Cayley devoted a great deal of thought to the propulsion problem. Before 1807 he had conceived the idea for a hot-air engine, in which air is drawn from the atmosphere, heated by passing it over a fire, and then expanded into a cylinder, doing work on a piston. This was to be an alternative to steam power. Considering his invention in a general sense, and not mentioning any possible application to flight, Cayley wrote in the October 1807 issue of Nicholson’s *Journal* that “the steam engine has hitherto proved too weighty and cumbrous for most purposes of locomotion; whereas the expansion of air seems calculated to supply a mover free from these defects.” In 1843 Cayley summarized his work

on aeronautical propulsion in a type of letter to the editor in *Mechanics' Magazine*:

The real question rests now, as it did before, on the possibility of providing a sufficient power with the requisite lightness. I have tried many different engines as first movers, expressly for this purpose [flight]. Gun powder is too dangerous, but would, at considerable expense, effect the purpose: but who would take the double risk of breaking their neck or being blown to atoms? Sir Humphrey Davy's plan of using solid carbonic acid, when again expanded by heat, proved a failure in the hands of our most ingenious engineer, Sir M. Isambard Brunel.

As all these processes require nearly the same quantity of caloric to generate the same degree of power, I have for some time turned my own attention to the use, as a power, of common atmospheric air expanded by heat, and with considerable success. A five-horse engine of this sort was shown at work to Mr. Babbage, Mr. Rennie, and many other persons capable of testing its efficiency, about three years ago. The engine was only an experimental one, and had some defects, but each horse power was steadily obtained by the combustion of about 6½ pounds of coke per hour, and this was the whole consumption of the engine, no water being required. Another engine of this kind, calculated to avoid the defects of the former one, is now constructing, and may possibly come in aid of balloon navigation—for which it was chiefly designed—or the present project, if no better means be at hand.

Thus, in keeping with his remarkable and pioneering thinking on all page 815 aspects of aviation, George Cayley stated the impracticality of steam power for flight and clearly experimented with some forerunners of the IC engine. However, his thoughts were lost to subsequent aeronautical engineers of the 19th century, who almost universally attempted steam-powered flight (see Ch. 1)).

The development of IC engines gained momentum with Lenoir's two-cycle gas-burning engine in 1860. Then, in 1876, Nikolaus August Otto designed and built the first successful four-stroke IC engine, the same type of engine discussed in Sec. 9.3. Indeed, the thermodynamic cycle illustrated in Fig. 9.12, consisting of isentropic compression and power strokes with constant-volume combustion, is called the *Otto cycle*. Although Otto worked in Germany, strangely enough, in 1877 he took out a U.S. patent on his engine. Otto's work was soon applied to land vehicle propulsion, heralding the birth of the automobile industry before 1900.

But automobiles and airplanes are obviously two different machines, and IC engines used in automobiles in 1900 were too heavy per horsepower for aeronautical use. One man who squarely faced this barrier was Samuel Pierpont Langley (see Sec. 1.7). He correctly recognized that the gasoline-burning IC engine was the appropriate power plant for an airplane. To power the newer versions of his Aerodromes, Langley contracted with Stephen M. Balzer of New York in 1898 for an engine of 12 hp weighing no more than 100 lb. Unfortunately Balzer's delivered product, which was derived from the automobile engine, could produce only 8 hp. This was unacceptable, and Charles Manly, Langley's assistant, took the responsibility for a complete redesign of Balzer's engine in the laboratory of the Smithsonian Institution in Washington,

District of Columbia. The net result was a power plant, finished in 1902, that could produce 52.4 hp while weighing only 208 lb. This was a remarkable achievement; it was not bettered until the advent of “high-performance” aircraft toward the end of World War I, 16 years later. Moreover, Manly’s engine was a major departure from existing automobile engines of the time. It was a radial engine, with five cylinders equally spaced in a circular pattern around a central crankshaft. It appears to be the first aircraft radial engine in history, and certainly the first successful one. Unfortunately, the failure of Langley’s Aerodromes in 1903 obscured the quality of Manly’s engine, although the engine was in no way responsible for these failures.

Five hundred miles to the west, in Dayton, Ohio, the Wright brothers page 816 also originally planned to depend on a standard automobile engine for the power plant for their *Flyer*. In the fall of 1902, after their stunning success with their number 3 glider at Kill Devil Hills, the Wrights were rudely surprised to find that no automobile engine existed that was light enough to meet their requirement. Because Wilbur had taken the prime responsibility of developing a propeller (see Sec. 9.14) during this time, he assigned Orville the task of designing and building a suitable engine. It is interesting to note that Wilbur correctly considered the propeller to be a more serious problem than the engine. With the help of Charles Taylor, a mechanic who worked in the Wrights’ bicycle shop, and using as a model the car engine of a Pope-Toledo (long since defunct), Orville expeditiously completed his engine design and construction in less than six weeks. In its first test in February 1903, the aluminum crankcase cracked. Two months later a local foundry finished casting a second case, and the engine was finally successfully tested in May.

The engine was a four-cylinder in-line design. It had only one speed, about 100 rpm, and could be stopped only by cutting off the supply of gasoline, which was fed to the cylinders by gravity. The engine produced 12 hp and weighed (without oil and fuel) about 100 lb. Although the Wrights’ engine produced far less horsepower per pound of engine weight than Manly’s design, it was nevertheless adequate for its purpose. The Wright brothers had little experience with IC engines before 1903, and their successful design is another testimonial to their unique engineering talents. In Orville’s words, “Ignorant of what a motor this size ought to develop, we were greatly pleased with its performance. More experience showed us that we did not get one-half the power we should have had.”

The Wright brothers’ engine was obviously the first successful aircraft power plant to fly, by virtue of their history-making flight of December 17, 1903 (see Sec. 1.1). Subsequent development of the IC engine for airplanes came slowly.

Indeed, nine years later Captain H. B. Wild, speaking in Paris, gave the following pilot-oriented view of the aircraft engine:

The comparatively crude and unreliable motor that we have at our disposal at the present time [1912] is no doubt the cause of many of the fatalities and accidents befalling the aeroplane. If one will look over the accessories attached to the aero engine of today, it will be noted that it is stripped clean of everything possible which would eliminate what he deems unnecessary parts in order to reduce the weight of the engine, and in doing so he often takes away the parts which help to strengthen the durability and reliability of the motor.

The eventual successful development of efficient, reliable, and long-endurance aircraft power plants is now a fact of history. However, it was accomplished only by an intensive and continuous engineering effort. Various reports about engine development—carburetors, valves, radiators, and so forth—perfuse the early NACA literature. The recognition of the importance of propulsion was made clear in 1940 with the establishment of a complete laboratory for its research and development: the NACA Lewis Flight Propulsion Laboratory in Cleveland, Ohio.

The internal combustion reciprocating engine has now been page 817 supplanted by the gas turbine jet engine as the main form of aeronautical propulsion. However, IC engines are still the most appropriate choice for general aviation aircraft designed for speeds of 300 mi/h or less, so their continued development and improvement will remain an important part of aerospace engineering.

## 9.15 HISTORICAL NOTE: INVENTORS OF EARLY JET ENGINES

By the late 1920s, the reciprocating engine–propeller combination was so totally accepted as *the* means of airplane propulsion that other concepts were generally discounted. In particular, jet propulsion was viewed as technically infeasible. For example, NACA reported in 1923 that jet propulsion was “impractical,” but its studies were aimed at flight velocities of 250 mi/h or less, where jet propulsion is truly impractical. Eleven years later the British government still held a similar opinion.


Into this environment came Frank Whittle (now Sir Frank Whittle). Whittle was an Englishman, born on June 1, 1907, in Coventry. As a young boy he was interested in aviation, and in 1923 he enlisted in the Royal Air Force. Showing much intelligence and promise, he soon earned a coveted student’s slot at the RAF technical college at Cranwell. It was here that Whittle became interested in the possibilities of gas turbine engines for propelling airplanes. In 1928 he wrote a senior thesis at Cranwell titled “Future Developments in Aircraft Design,” in

which he expounded the virtues of jet propulsion. It aroused little interest. Undaunted, Whittle went on to patent his design for a gas turbine engine in January 1930. For the next five years, in the face of polite but staunch disinterest, Whittle concentrated on his career in the RAF and did little with his ideas about jet propulsion. However, in 1935, with the help of a Cranwell classmate, a firm of bankers agreed to finance a private company named Power Jets Ltd., specifically to develop the Whittle jet engine. So, in June 1935 Frank Whittle and a small group of colleagues plunged into the detailed design of what they thought would be the first jet engine in the world. The engine was finished in less than two years and was started up on a test stand on April 12, 1937—the first jet engine in the world to successfully operate in a practical fashion.

However, it was not the first to fly. Quite independently, and completely without knowledge of Whittle's work, Hans von Ohain in Germany developed a similar gas turbine engine. Working under the private support of the famous airplane designer Ernst Heinkel, von Ohain started his work in 1936. (As in the United States and England, the German government showed little initial interest in jet propulsion.) Three years after his work began, von Ohain's engine was mated with a specially designed Heinkel airplane. Then, on August 28, 1939, the He 178 (see Fig. 9.38) became the first gas-turbine-powered, jet-propelled airplane in history to fly. It was strictly an experimental aircraft, but von Ohain's engine with 838 lb of thrust pushed the He 178 to a maximum speed of 435 mi/h. Later, after the beginning of World War II, the German government reversed its lack of interest in jet propulsion, and soon Germany was to become the first nation in the world with operational military jet aircraft.

---

page 818

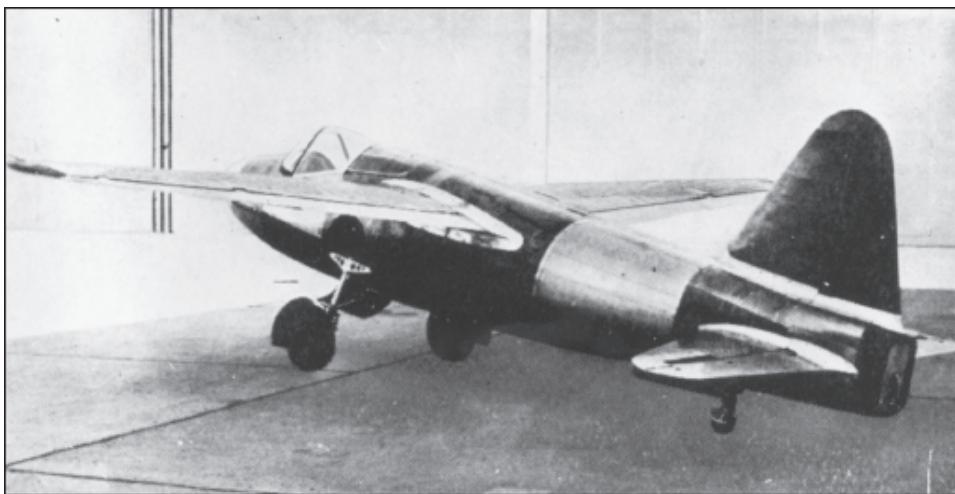

**Figure 9.38** The German He 178—the first jet-propelled airplane in the world to fly successfully.

(Source: *U.S. Air Force.*)

Meanwhile, in England, Whittle's success in operating a jet engine on a test stand finally overcame the Air Ministry's reluctance, and in 1938 a contract was let to Power Jets Ltd. to develop a revised power plant for installation in an airplane. Simultaneously, Gloster Aircraft received a contract to build a specially designed jet-propelled aircraft. Success was obtained when the Gloster E.28/39 airplane (see Fig. 9.39) took off from Cranwell on May 15, 1941, the first airplane to fly with a Whittle jet engine. The engine produced 860 lb of thrust and powered the Gloster airplane to a maximum speed of 338 mi/h. The Gloster E.28/39 now occupies a distinguished berth in the Science Museum in London, hanging prominently from the top-floor ceiling of the massive brick building in South Kensington, London. The technology gained with the Whittle engine was quickly exported to the United States and eventually fostered the birth of the highly successful Lockheed P-80 Shooting Star, the first U.S. production-line jet airplane.

---

page 819



**Figure 9.39** The Gloster E.28/39—the first British airplane to fly with jet propulsion.

(Source: *SSPL/Getty Images.*)

In 1948 Frank Whittle retired from the RAF as an air commodore and was knighted for his contributions to British aviation. In 1976 he moved to the United States, where he worked and taught at the U.S. Naval Academy in Annapolis, Maryland. On August 8, 1996, he died at his home in Columbia, Maryland.

Hans von Ohain was among the large group of German scientists and engineers who were brought to the United States at the end of World War II. He pursued a distinguished career at the Air Force's Aeronautical Research Laboratory at Wright-Patterson Air Force Base, Ohio, where he led a propulsion group doing research on advanced concepts. Indeed, the present author had the

privilege of working for three years in the same laboratory with von Ohain and shared numerous invigorating conversations with this remarkable man. Later von Ohain became affiliated with the U.S. Air Force Aeropropulsion Laboratory at Wright Field, from which he retired in 1980. He remained active after retirement as a tireless spokesman for aeronautics. In 1984 he served a year at the National Air and Space Museum of the Smithsonian Institution in the prestigious Charles Lindbergh Chair (a chair that the present author was honored to occupy two years after von Ohain). Hans von Ohain died at his home in Melbourne, Florida, on March 13, 1998. He is buried in Dayton, Ohio. Within a span of two years, the world lost the two coinventors of the jet engine. History has already shown that these two men created a revolution in aeronautics—the jet revolution—perhaps on a par with the invention of the practical airplane by the Wright brothers.

## **9.16 HISTORICAL NOTE: EARLY HISTORY OF ROCKET ENGINES**

“When it was lit, it made a noise that resembled thunder and extended 100 li [about 24 km]. The place where it fell was burned, and the fire extended more than 2000 feet. . . . These iron nozzles, the flying powder halberds that were hurled, were what the Mongols feared most.” These words were written by Father Antonine Gaubil in 1739 in conjunction with his book about Genghis Khan; they describe how a Chinese town in 1232 successfully defended itself against 30,000 invading Mongols by means of rocket-propelled fire arrows. They are an example of the evidence used by most historians to show that rocketry was born and developed in Asia many centuries ago. It is reasonably clear that the Chinese manufactured black powder at least as early as 600 AD and subsequently used this mixture of charcoal, sulfur, and saltpeter as a rocket propellant. Over the centuries, the rocket slowly spread to the West as a military weapon and was much improved as a barrage missile by Sir William Congreve in England in the early 1800s. (The “rockets’ red glare” observed by Francis Scott Key in 1812 at Fort McHenry was produced by a Congreve rocket.) However, not until the end of the 19th century and the beginning of the 20th century was the rocket understood from a technical viewpoint and was its true engineering development begun.

The Soviet Union was first into space, both with an artificial satellite [page 820](#) (*Sputnik I* on October 4, 1957) and with a human in orbit (Yuri Gagarin on April 12, 1961). Thus, in historical perspective it is fitting that the first true rocket scientist was a Russian: Konstantin Eduardovitch Tsiolkovsky, born in September 1857 in the town of Izhevskoye. As a young student, he absorbed

physics and mathematics and was tantalized by the idea of interplanetary space travel. In 1876 he became a schoolteacher in Borovsk, and in 1882 he moved to the village of Kaluga. There, in virtual obscurity, he worked on theories of space flight, hitting upon the idea of reactive propulsion in March 1883. Working without any institutional support, Tsiolkovsky gradually solved some of the theoretical problems of rocket engines. Figure 9.40 shows his design of a rocket, fueled with liquid hydrogen ( $H_2$ ) and liquid oxygen ( $O_2$ ), which was published in the Russian magazine *Science Survey* in 1903 (the same year as the Wright brothers' successful first powered airplane flight). The fact that Tsiolkovsky knew to use the high-specific impulse combination of  $H_2$ - $O_2$  testifies to the sophistication of his rocket theory. Tsiolkovsky was neither an experimentalist (it took money that he did not have to develop a laboratory) nor an engineer. Therefore, he conducted no practical experiments and generated no design data. Nevertheless, Tsiolkovsky was the first true rocket scientist, and he worked incessantly on his theories until his death on September 19, 1935, at the age of 78 years. In his later life, his contributions were finally recognized, and he became a member of the Socialist Academy (forerunner of the U.S.S.R. Academy of Science) in 1919, with a subsequent grant of a government pension.

At the turn of the century, progress in rocketry arrived in the United States in the form of Dr. Robert H. Goddard. Goddard was born at Worcester, Massachusetts, on October 5, 1882. His life had many parallels to Tsiolkovsky's: He too was an avid physicist and mathematician; he too was convinced that rockets were the key to space flight; and he too worked in virtual obscurity for most of his life. But there was one sharp difference. Whereas Tsiolkovsky's contributions were purely theoretical, Goddard successfully molded theory into practice and developed the world's first liquid-fueled rocket that worked.

---

page 821



**Figure 9.40** Tsiolkovsky's rocket design of 1903, burning liquid hydrogen ( $H$ ) and liquid oxygen ( $O$ ).

Goddard was educated completely at Worcester, graduating from South High School in 1904, obtaining a bachelor's degree from Worcester Polytechnic Institute in 1908, and earning a doctorate in physics at Clark University in 1911.

Subsequently he became a professor of physics at Clark, where he began to apply science and engineering to his childhood dreams of space flight. He too determined that liquid H<sub>2</sub> and O<sub>2</sub> would be very efficient rocket propellants, and he pursued these ideas during a leave of absence at Princeton University during 1912–1913. In July 1914 he was granted patents on rocket combustion chambers, nozzles, propellant feed systems, and multistage rockets. In 1917 he obtained a small grant (\$5000) from the Smithsonian Institution in Washington, which permanently entrenched him in a career of rocketry. This grant led to one of the most historic documents of rocket engine history, a monograph titled *A Method of Reaching Extreme Altitudes*, published as part of the Smithsonian Miscellaneous Collections in 1919. This book was a scholarly and authoritative exposition of rocket principles; at that time, though, few people seized upon Goddard's ideas.

Goddard increased his laboratory activities back at Worcester in the early 1920s. Here, after many tests and much engineering development, Goddard successfully launched the world's first liquid-fuel rocket on March 16, 1926. A picture of Goddard standing beside this rocket is shown in Fig. 9.41. The vehicle was 10 ft long; the motor itself was at the very top (far above Goddard's head in Fig. 9.41) and was fed liquid oxygen and gasoline through two long tubes that led from the propellant tanks at the rear of the vehicle (below Goddard's arm level in the figure). The conical nose on the fuel tanks was simply a deflector to protect the tanks from the rocket nozzle exhaust. This rocket reached a maximum speed of 60 mi/h and flew 184 ft. Although modest in performance, this flight on March 16, 1926, was to rocketry what the Wright brothers' December 17, 1903, flight was to aviation.

This work ultimately brought Goddard to the attention of Charles A. Lindbergh, who now had considerable stature because of his 1927 trans-Atlantic flight. Lindbergh was subsequently able to convince the Daniel Guggenheim Fund for the Promotion of Aeronautics to give Goddard a \$50,000 grant to further pursue rocket engine development. Suddenly Goddard's operation magnified, and in 1930 he and his wife moved to a more suitable testing location near Roswell, New Mexico. Here, for the next 11 years, Goddard made bigger and better rockets, although still in an atmosphere of obscurity. The government was simply not interested in any form of jet propulsion research during the 1930s. Also, Goddard was cast somewhat from the same mold as the Wright brothers: he imposed a blanket of secrecy on his data for fear of others pirating his designs. However, at the beginning of World War II, the government's interest in Goddard's work turned from cold to hot; his complete operation, personnel, and facilities, was moved to the Naval Engineering Experiment Station at Annapolis, Maryland. There, until July 1945, this group developed jet-

assisted takeoff units for seaplanes and worked on a variable-thrust rocket engine.



**Figure 9.41** Robert H. Goddard and his first successful liquid-fuel rocket. This rocket made the world's first successful flight on March 16, 1926.

(Source: NASA.)

On August 10, 1945, Dr. Robert H. Goddard died in Baltimore. Recognition for his contributions and realization of their importance to the development of modern rocketry came late. Indeed, only in the political heat of the post-*Sputnik* years did the United States really pay homage to Goddard. In 1959 he was honored by Congress; that same year, he received the first Louis W.

Hill Space Transportation Award of the Institute of Aeronautical Sciences (now the American Institute of Aeronautics and Astronautics). Also, on May 1, 1959, the new NASA Goddard Space Flight Center at Greenbelt, Maryland, was named in his honor. Finally, in 1960 the Guggenheim Foundation and Mrs. Goddard were given \$1,000,000 by the government for use of hundreds of Goddard's patents.

During the 1930s, and completely independent of Goddard's <sup>page 823</sup> operation, another small group in the United States developed rockets. This was the American Rocket Society (ARS), originally founded in March 1930 as the American Interplanetary Society and changing its name in 1934. This small group of scientists and engineers believed in the eventual importance of rocketry. The society not only published technical papers, but also built and tested actual vehicles. Its first rocket, burning liquid oxygen and gasoline, was launched on May 14, 1933, at Staten Island, New York, and reached 250 ft. Following this, and up to World War II, the ARS was a public focal point for small rocket research and development, all without government support. After the beginning of the war, much of the ARS experimental activity was splintered and absorbed by other activities around the country. However, as an information dissemination society, the ARS continued until 1963, publishing the highly respected *ARS Journal*. Then the American Rocket Society and the Institute of Aeronautical (by that time, Aerospace) Sciences were merged to form the present American Institute of Aeronautics and Astronautics.

As a brief example of how the threads of the history of flight are woven together, in 1941 members of the ARS formed a company, Reaction Motors, Inc., which went on to design and build the XLR-11 rocket engine. This engine powered the Bell X-1 and pilot Chuck Yeager to the first manned supersonic flight on October 14, 1947 (see Sec. 5.22 and Fig. 5.88).

The early history of rocket engines forms a geographic triangle, with one vertex in Russia (Tsiolkovsky), the second in the United States (Goddard), and the third in Germany. Representing this third vertex is Hermann Oberth, born in Transylvania on July 25, 1894, to later become a German citizen. Like Tsiolkovsky and Goddard before him, Oberth found inspiration in the novels of Jules Verne and began a mental search for a practical means of reaching the moon. During World War I Oberth became interested in rockets, suggesting long-range liquid-fueled missiles to the German war department. In 1922 he combined these thoughts and suggested rockets for space flight. Oberth was at that time ignorant of the work of both Tsiolkovsky and Goddard. However, shortly thereafter, Goddard's work was mentioned in the German newspapers, and Oberth quickly wrote for a copy of the 1919 Smithsonian monograph. In 1923 Oberth published his own work on the theory of rocket engines, titled *The Rocket*.

*into Planetary Space.* This was a rigorous technical text, and it laid the basis for the development of rockets in Germany.

To foster Oberth's ideas, the German Society for Space Travel was formed in 1927 and began experimental work in 1929. (The American Rocket Society was subsequently patterned after the German society.) Oberth's ideas had a catalytic effect, especially on some of his students, such as Wernher Von Braun; and the 1930s found an almost explosive development of rocketry in Germany. This work, with Von Braun as the technical director, culminated in the development of the German V-2 rocket of World War II. Although an instrument of war, the V-2 was the first practical long-range rocket in history. Powered by liquid oxygen and alcohol, this rocket was 46.1 ft long, 65 in in diameter, and 27,000 lb in weight. It was the first vehicle made by humans to fly outside the sensible atmosphere (that is, in space), with altitudes above 50 mi and a range of 200 mi. The missile reached supersonic speeds during its flight within the atmosphere. During the closing phases of World War II, hundreds of production V-2s were captured by both Russian and U.S. forces and shipped back to their respective countries. As a result, all modern rockets today can trace their ancestry directly back to the V-2 and hence through Von Braun back to Hermann Oberth.

---

page 824

## **9.17 HISTORICAL NOTE: DEVELOPMENT OF THE SATURN V AND N-1 BOOSTERS**

Section 8.14 presented the development of human space flight from President Kennedy's challenge through to the first lunar landing, compressing eight years into a few paragraphs. But how do you design and develop a transportation system to carry humans to the moon and back? The straight-forward approach would be to build a rocket that would launch from the Earth, carry the crew to lunar landing, then lift off of the lunar surface and return to Earth. This approach was not feasible from a cost and schedule standpoint as will be explained in the following paragraphs.

Once you get to low Earth orbit, you can divide the rest of the mission into three phases: from LEO to low lunar orbit; from low lunar orbit to the lunar surface; and from the lunar surface back to Earth. Since all approaches assumed direct entry (using the Earth's atmosphere to slow down the spacecraft from its extremely high translunar approach speed to landing), each of the three phases require, very approximately, velocity changes in the range of 2–3 km/sec. Using the techniques discussed in this chapter, you can show that (again, approximately) it takes 4 kg of mass on the lunar surface to bring 1 kg of mass back to Earth; it takes 4 kg of mass in lunar orbit to land 1 kg on the moon; and it takes 4 kg of mass in low Earth orbit to bring 1 kg to lunar orbit. Concatenating

these results, every kilogram returned to Earth starts out as 64 kg in low Earth orbit. The U.S. concept for direct ascent was called “Nova”—a rocket as far beyond the Saturn V as the Saturn V was beyond the prototype Saturn I which was flying in the early 1960s when these design analyses were underway. Given that NASA would have to build two “superboosters”—both the Saturn V and Nova—there was no hope that this approach would result in landing humans on the moon before the end of the decade. (As an interesting side note, the Apollo command and service modules were under development in parallel with the launch vehicles which would carry them into space—see Fig. 2.26. If you have ever noticed that the rocket engine in the Apollo service module is far larger in scale than that for any other spacecraft ever used, then or now, it’s because it was sized to lift the entire spacecraft all the way from the lunar surface onto the trajectory back to Earth.)


The next logical step, if you can’t launch the components for the [page 825](#) entire mission all at once, would be to launch them in a few pieces and combine them in orbit before departing for the moon. This was termed “Earth orbit rendezvous,” and was the favored Apollo architecture for a time. This would reproduce the “direct ascent” mission from Earth orbit on, but it required two Saturn V vehicles for each lunar mission. While work proceeded on this approach, a few individuals took a fresh look at this architecture and started asking questions: “Why are we carrying a heat shield and parachutes to the lunar surface and back? And also, since the Apollo command module is designed for the crew to be lying on their backs for launch and atmospheric entry, how are they going to be able to see out well enough to land on the moon?”

John Houbolt at NASA Langley took the initiative to be a promoter of the approach that came to be called “lunar orbit rendezvous.” The concept was that the trip to and from the lunar surface is very costly in propellant, all of which has to be brought from Earth. Rather than land the Apollo command and service modules, a new, lightweight crewed spacecraft would be developed specifically for the lunar landing and ascent: the Apollo lunar module (LM). Two astronauts would transfer to the “LM” for the landing mission, while the third crew would stay in the command module in orbit. This approach allowed launching all of the mission components on a single Saturn V, and was instrumental in the successful completion of the Apollo goal of landing a human on the moon before the end of the 1960s.

At the same time, it wasn’t called the “Space Race” without reason, and the Soviet Union was also working to land a human on the Moon before the United States. They adopted the equivalent of lunar orbit rendezvous, albeit with only two crew in the Soyuz capsule for the mission, one of whom would make the descent to the lunar surface alone. To accomplish this, they were developing their

version of the Saturn V: an even larger vehicle called N-1. Like the Saturn V lunar version, N-1 was a three-stage vehicle, standing over 100 m tall with a liftoff mass of approximately 3000 tons. Figure 9.42 shows two N-1 vehicles in preparation on their launch pads. Whichever country would be the first to get their “superbooster” to fly would be the first on the moon.

The United States had two huge advantages in the race to develop superheavy launch vehicles. One was enough experience in liquid oxygen/liquid hydrogen rocket engines to use them in the second and third stages of the Saturn V, where their higher exhaust velocity would enhance the overall performance of the launch vehicle. The Soviet Union chose a more conservative path of using liquid oxygen and kerosene in all three stages of the N-1. But perhaps the pivotal advantage for the United States was that, even before NASA started the Apollo project, the Defense Department’s Advanced Research Projects Agency (ARPA, now known as DARPA) started funding the development of what would become the F-1 rocket engine, with a design goal of 1.5 million pounds of thrust. The Saturn V would use five F-1 engines in its first stage to produce more than 7.5 million pounds of thrust at liftoff. The N-1 would require 30 NK-15 rocket engines in the first stage, providing 30 different opportunities for engine failure during launch. In four launch attempts, the N-1 never made it all the way through first stage burn without a catastrophic failure, and the Soviet Union publicly denied it ever had lunar aspirations as it canceled the N-1 program around the time the United States completed the last Apollo lunar landing.

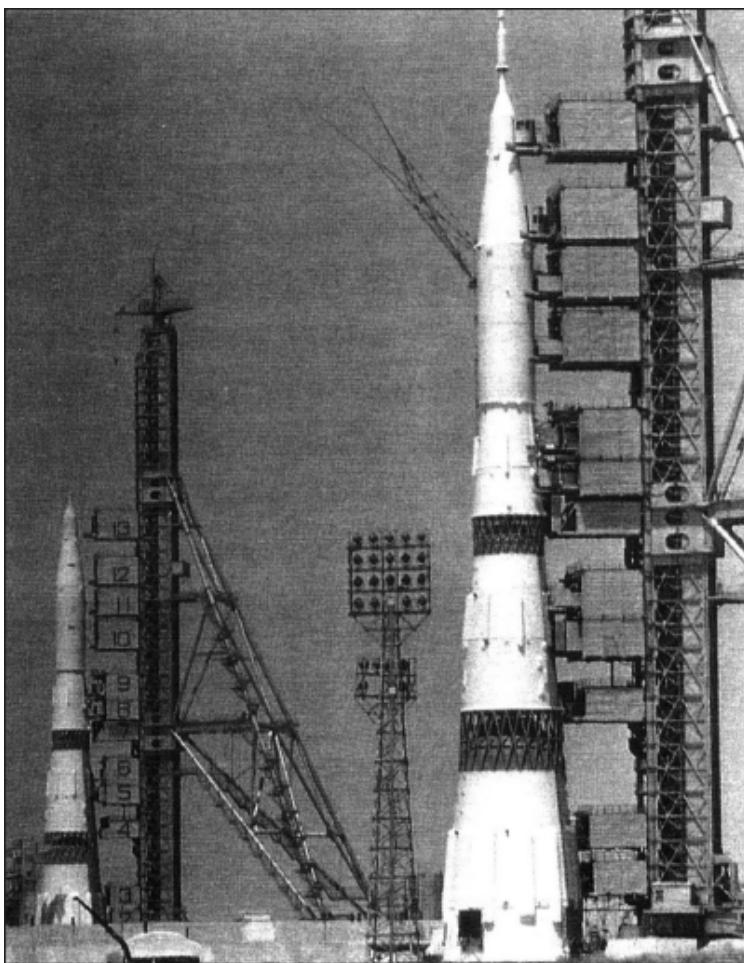

**Figure 9.42** The Soviet N-1 lunar launch rocket, 1969.

(Source: Sovfoto/Universal Images Group/Shutterstock.)

Despite the immense success of Apollo and the Saturn V launch vehicle, it proved a technology the United States was not prepared to continue and exploit. While the initial planning for the post-Apollo program incorporated the development of a 48-person Earth orbital space station, a permanent 12-person lunar surface base, and the first human landing on Mars by 1985, it became clear that the government was unwilling to continue to fund space exploration at a level of 4 percent of the national budget each year. (The current NASA allocation is closer to 0.5 percent of the U.S. budget.) Intent on maintaining routine human access to space, NASA turned its attention away from the Saturn V (at \$1.5–2B per launch) to what was hoped to be a lower-cost, reusable crewed launch system: the Space Transportation System, or Space Shuttle (see Fig. 9.43). But that is another story. . .



**Figure 9.43** The Space Shuttle lifting off from Cape Canaveral.

(Source: *NASA*.)

## 9.18 SUMMARY AND REVIEW

There are two primary propulsion devices used to provide thrust for flight vehicles: (1) a reciprocating engine–propeller combination, and (2) jet propulsion engines. Jet propulsion further subdivides into air-breathing engines (turbojets, fanjets, ramjets, SCRAMjets) and rocket engines. In this chapter we have progressively worked our way through different engines.

We started with the propeller (just as the Wright brothers did, and everybody else designing and building airplanes until the beginning of World War II). We discussed the qualitative aspects of how a propeller, which is essentially like a twisted wing, generates thrust. We studied aspects of the internal combustion reciprocating engine to which many propellers are fixed, and how the propeller transmits power from the engine to power available from the propeller, the ratio of which defines the propeller efficiency. Furthermore, we looked at the thermodynamic cycle that takes place in the reciprocating engine and used this to estimate the power output of the engine.

In terms of jet propulsion engines, we first derived the generalized thrust equation for such engines. Both the derivation of the equation and the equation

itself are very important. The derivation uses the control volume concept by which we related the pressure distribution exerted on every square centimeter of the engine (the fundamental source of the thrust) to the time rate of change of momentum of the flow through the engine from the inlet to the exit. The resulting thrust equation for jet propulsion is amazingly straightforward, and it provides a relatively simple means to calculate the thrust generated by air-breathing jet engines and rocket engines.

We then proceeded to look at the conventional turbojet engine with its [page 828](#) major components: inlet diffuser, compressor, burner, turbine, and exhaust nozzle. We examined the thermodynamic processes taking place in each of these components, and then noted how each component contributes to the thrust of the engine—the thrust buildup. We discussed how the addition of a large fan in front of the engine greatly increases the efficiency of the jet engine; the turbofan engine that is now used on the vast majority of jet engines. Then we looked at the advantages and disadvantages of getting rid of all the rotating machinery of a turbojet, and creating a straight flow path through the engine; the ramjet engine and, for hypersonic flight, the SCRAMjet engine.

We investigated the engine capable of generating the highest thrust of any practical jet propulsion device, the rocket engine. Using the thrust equation for a rocket engine, we defined an important figure of merit that characterizes the efficiency of the rocket: namely, the specific impulse, defined as the thrust per unit weight flow through the engine. We found that the specific impulse is mainly a function of what chemical propellants are used and is related directly to the exhaust velocity of the combustion products from the engine. Then we went on to obtain the “rocket equation,” which allows one to calculate the change in velocity of the rocket ( $\Delta V$ ) in terms of the specific impulse, and the initial and final mass of the vehicle (the difference being the mass of propellant burned). In addition, the concept of staging was discussed in which sections of inert mass are dropped off as the propellant is used, thus allowing higher  $\Delta V$ 's to be achieved. Finally, we took a brief look at some advanced systems proposed for propulsion in space, based on various forms of electric propulsion.

A few important aspects of the chapter are itemized as follows:

1. The cross section of a propeller is an airfoil shape designed to produce an aerodynamic force in the direction of motion of the airplane—that is, thrust. The efficiency of a propeller depends on the pitch angle and the advance ratio:

$$J = V_{\infty}/(nD)$$

2. The four strokes of an Otto cycle reciprocating internal combustion engine are intake, compression, power, and exhaust. Combustion takes place essentially at constant volume. The power generated by such an engine along with a propeller is the power available, expressed as

$$P_A = \eta\eta_{\text{mech}} \frac{n}{2} N \quad (9.10)$$

where  $\eta$  = propeller efficiency,  $\eta_{\text{mech}}$  = mechanical efficiency,  $n$  = revolutions per second of the engine shaft,  $N$  = number of cylinders, and  $W$  = work produced during the complete four-stroke cycle. The power available can also be expressed as

$$P_A = \frac{\eta\eta_{\text{mech}}(\text{rpm})dp_e}{120} \quad (9.15)$$

where rpm is the revolutions per minute of the engine shaft,  $d$  is the displacement, and  $p_e$  is the mean effective pressure.

3. The thrust equation for a jet propulsion device is

$$T = (\dot{m}_{\text{air}} + \dot{m}_{\text{fuel}}) V_e - \dot{m}_{\text{air}} V_\infty + (p_e - p_\infty) A_e \quad (9.24)$$

4. The turbojet engine process involves aerodynamic compression of the intake air in a diffuser, further compression in a rotating compressor, constant-pressure combustion in the burner, expansion through a turbine that drives the compressor, and further expansion through an exhaust nozzle. In a turbofan engine, a large ducted fan is mounted on the shaft ahead of the compressor, which accelerates a large mass of auxiliary air outside the core of the engine itself, thus producing more thrust with higher efficiency. The ramjet engine has no rotating machinery and produces its thrust by means of aerodynamic compression in an inlet diffuser of the incoming air, burned at constant pressure in the combustor and exhausted through a nozzle.

5. The thrust equation for a rocket engine is

---


$$T = \dot{m} V_e + (p_e - p_\infty) A_e \quad (9.28)$$

page 829

6. The specific impulse is a direct measure of the efficiency of a rocket engine-propellant combination:

$$I_{\text{sp}} = \frac{T}{\dot{w}} = \frac{1}{g_0} \left\{ \frac{2\gamma RT_0}{\gamma - 1} \left[ 1 - \left( \frac{p_e}{p_0} \right)^{\frac{\gamma-1}{\gamma}} \right] \right\}^{1/2} \quad (9.35)$$

$$\text{also } I_{\text{sp}} = \frac{V_e}{g_0}$$

For high specific impulse, the combustion temperature  $T_0$  should be high and the molecular weight of the combustion gas should be low.

7. The rocket equation relates change in velocity,  $\Delta V$ , of the spacecraft to the specific impulse and the final-to-initial mass ratio:

$$\Delta V = -g_0 I_{sp} \ln\left(\frac{M_{final}}{M_{initial}}\right) = -V_e \ln\left(\frac{M_{PL} + M_{IN}}{M_0}\right) = -V_e \ln(\lambda + \delta) \quad (9.48)$$

where payload mass fraction =  $\lambda = \frac{M_{PL}}{M_0}$  and inert mass fraction =  $\delta = \frac{M_{IN}}{M_0}$

8. Staging can be very beneficial for maximizing the mass of payload lifted into orbit:

$$\Delta V_{total} = \sum \Delta V_n \quad \text{for } n \text{ stages} \quad (9.51)$$

## Bibliography

- Dommasch, D. O., S. S. Sherbey, and T. F. Connolly. *Airplane Aerodynamics*, 3rd ed. Pitman, New York, 1961.
- Emme, E. M. *A History of Space Flight*. Holt, New York, 1965.
- Frisbee, R. H. "Spacecraft Propulsion Systems—What They Are and How They Work," *Foundation Astronautics Notebook-6*, World Space Foundation, Pasadena, CA, 1983, pp. 2–20.
- Glauret, H. *The Elements of Aerofoil and Airscrew Theory*. Macmillan, New York, 1943.
- Gray, G. W. *Frontiers of Flight*. Knopf, New York, 1948.
- Hale, F. J. *Introduction to Space Flight*. Prentice Hall, New Jersey, page 830 1994.
- Hill, P. G., and C. R. Peterson. *Mechanics and Thermodynamics of Propulsion*, 2nd ed. Addison-Wesley, Reading, MA, 1992.
- Obert, E. F. *Internal Combustion Engines and Air Pollution*. Intext, New York, 1973.
- Sutton, G. P. *Rocket Propulsion Elements*, 4th ed. Wiley, New York, 1976.
- Von Braun, W., and F. I. Ordway. *History of Rocketry and Space Travel*, 3rd rev. ed. Crowell, New York, 1975.
- Walsh, J. E. *One Day at Kitty Hawk*. Crowell, New York, 1975.
- Wiesel, W. E. *Spacecraft Dynamics*, 2nd ed. McGraw-Hill, New York, 1997.

## Problems

- 9.1** A reciprocating engine for light aircraft, modeled after the Avco Lycoming O-235 engine, has the following characteristics: bore = 11.1 cm, stroke = 9.84 cm, number of pistons = 4, compression ratio = 6.75, mechanical efficiency = 0.83. It is connected to a propeller with an efficiency of 0.85. If the fuel-to-air ratio is 0.06 and the pressure and temperature in the intake manifold are 1 atm and 285 K, respectively, calculate the power available from the engine-propeller combination at 2800 rpm.
- 9.2** For the engine in Prob. 9.1, calculate the mean effective pressure.
- 9.3** Consider a turbojet mounted on a stationary test stand at sea level. The inlet and exit areas are the same, both equal to  $0.45 \text{ m}^2$ . The velocity, pressure, and temperature of the exhaust gas are 400 m/s, 1.0 atm, and 750 K, respectively. Calculate the static thrust of the engine. (*Note:* Static thrust of a jet engine is the thrust produced when the engine has no forward motion.)
- 9.4** Consider a turbojet-powered airplane flying at a standard altitude of 40,000 ft at a velocity of 530 mi/h. The turbojet engine has inlet and exit areas of 13 and 10  $\text{ft}^2$ , respectively. The velocity and pressure of the exhaust gas at the exit are 1500 ft/s and 450 lb/ $\text{ft}^2$ , respectively. Calculate the thrust of the turbojet.
- 9.5** Consider a turbojet in an airplane flying at standard sea level with a velocity of 800 ft/s. The pressure ratio across the compressor is 12.5:1. The fuel-to-air ratio (by mass) is 0.05. If the nozzle exhausts the flow to ambient pressure, calculate the gas temperature at the exit. (In solving this problem, assume that the air in the diffuser is slowed to a very low velocity before entering the compressor. Also assume that the heat released per pound of fuel is  $1.4 \times 10^7 \text{ ft} \cdot \text{lb/lb}_m$ .)
- 9.6** A small ramjet engine is to be designed for a maximum thrust of 1000 lb at sea level at a velocity of 950 ft/s. If the exit velocity and pressure are 2000 ft/s and 1.0 atm, respectively, how large should the inlet be?
- 9.7** The mass flow through a rocket engine is 25 kg/s. If the exit area, velocity, and pressure are  $2 \text{ m}^2$ , 4000 m/s, and  $2 \times 10^4 \text{ N/m}^2$ , respectively, calculate the thrust at a standard altitude of 50 km.
- 9.8** Consider a rocket engine in which the combustion chamber pressure and temperature are 30 atm and 3756 K, respectively. The area of the rocket nozzle exit is  $15 \text{ m}^2$  and is designed so that the exit pressure exactly

equals ambient pressure at a standard altitude of 25 km. For the gas mixture, assume that  $\gamma = 1.18$  and the molecular weight is 20. At a standard altitude of 25 km, calculate the (a) specific impulse, (b) exit velocity, (c) mass flow, (d) thrust, and (e) throat area.

- 9.9** In a given rocket engine, a mass flow of propellants equal to  $87.6 \text{ lb}_m/\text{s}$  is pumped into the combustion chamber, where the temperature after combustion is  $6000^\circ\text{R}$ . The combustion products have mixture values of  $R = 2400 \text{ ft} \cdot \text{lb}/(\text{slug})(^\circ\text{R})$  and  $\gamma = 1.21$ . If the throat area is  $0.5 \text{ ft}^2$ , calculate the pressure in the combustion chamber.
- 9.10** Consider a rocket with kerosene–oxygen as the fuel–oxidizer [page 831](#) combination. The ratio of initial weight before blastoff to the final weight at burnout is 5.5. Calculate the burnout velocity.
- 9.11** A rocket using hydrogen–oxygen as the fuel–oxidizer combination has a specific impulse of 360 s. Calculate the ratio of propellant mass to initial mass required to achieve a burnout velocity equal to the escape velocity from the earth.
- 9.12** Consider a solid propellant rocket engine with an end-burning configuration as shown in Fig. 9.30a. The solid propellant is ammonium nitrate. The burning characteristics of this propellant when the initial grain temperature is  $60^\circ\text{F}$  are given by the following measured data: linear burning rate is  $0.04 \text{ in/s}$  at a combustion pressure of  $500 \text{ lb/in}^2$ , and  $0.058 \text{ in/s}$  at a combustion pressure of  $1000 \text{ lb/in}^2$ . The rocket engine is operating at a combustion pressure of  $1500 \text{ lb/in}^2$ . Calculate the distance the burning surface will recede in 5 s.
- 9.13** Consider a two-stage rocket with the following design characteristics. *First stage:* propellant mass = 7200 kg; structural mass = 800 kg. *Second stage:* propellant mass = 5400 kg; structural mass = 600 kg. The payload mass is 60 kg. The specific impulse for both stages is 275 s. Calculate the final burnout velocity.
- 9.14** Examine the control volume sketched in Fig. 9.14d. Although this control volume was used in Sec. 9.4 to obtain the thrust equation for a jet propulsion device, it can be used in general to examine any propulsive device that creates an increase in flow velocity through the control volume. For example, you could imagine a reciprocating engine–propeller combination inside the control volume, with air at velocity  $V_\infty$  coming into the control volume ahead of the propeller, and with velocity  $V_e$  leaving the

control volume behind the propeller. So the control volume in Fig. 9.14d is generic and can represent both propeller and jet engines.

Imagine that you are standing outside in the still air and the propulsive device represented by Fig. 9.14d flies past you at velocity  $V_\infty$ . The inlet and exit velocities,  $V_\infty$  and  $V_e$ , shown in Fig. 9.14d are relative to the *device*. The exhaust velocity exiting the device *relative to you* is not the same as  $V_e$  in Fig. 9.14d. Before the propulsive device entered your space, the air around you was still. After the device left your space, it left behind a jet of air moving in the opposite direction at a velocity different than  $V_e$ . This jet of air has energy, and that energy is wasted; it performs no useful work. Show that the energy wasted by this jet of air, per unit time, is

$$\frac{1}{2}\dot{m}(V_e - V_\infty)^2$$

where  $\dot{m}$  is the mass flow through the device.

- 9.15** Continuing the line of thought started in Prob. 9.14, the *propulsive efficiency*, denoted by  $\eta_p$ , is defined as

$$\eta_p \equiv \frac{\text{useful power available}}{\text{total power generated}}$$

Using the result obtained in Prob. 9.14 and recalling the definition [page 832](#) of power available from Ch. 6), show that

$$\eta_p \equiv \frac{2}{1 + V_e/V_\infty}$$

- 9.16** For the turbojet engine operating under the conditions given in Example 9.3, calculate the propulsive efficiency, as defined in Prob. 9.15.

- 9.17** Using the propulsive efficiency defined in Prob. 9.15, discuss why the propeller is the most efficient propulsion device, the rocket engine is the least efficient, and the gas turbine jet engine is in between.

- 9.18** The pressure ratio across the compressor of a given turbojet engine is 11.7. The temperature of the air entering the compressor is  $T_2 = 585^\circ\text{R}$ . The mass flow through the compressor is 200  $\text{lb}_m/\text{s}$ . Assume that the flow velocities entering and leaving the compressor are equal, that is,  $V_2 = V_3$ . Calculate the power (in horsepower) provided by the compressor. *Hint:* Because compressor work is done on the gas between the inlet (point 2) and exit (point 3) of the compressor, the energy equation given by Eq. (4.42) is modified to include the compressor work as follows:

$$c_p T_2 + V_2^2/2 + w_c = c_p T_3 + V_3^2/2$$

where  $w_c$  is the compressor work per unit mass of gas.

- 9.19** For the same engine in Prob. 9.18, fuel is injected and burned in the combustor. The gas temperature at the exit of the combustor is  $2110^\circ\text{R}$ . Assuming that the heat released per pound of fuel is  $1.4 \times 10^7 \text{ ft lb/lb}_m$ , calculate the fuel consumption in  $\text{lb}_m/\text{s}$ .
- 9.20** In a simple turbojet engine, the turbine provides the power that drives the compressor. For the same engine treated in Probs. 9.18 and 9.19, the temperature of the gas entering the turbine is the same as the temperature of the gas leaving the combustor, namely  $T_4 = 2110^\circ\text{R}$ . Assuming no mechanical losses, the work provided by the turbine is equal to the work done by the compressor. Assume that the flow velocity entering the turbine is equal to the velocity leaving the turbine, that is,  $V_4 = V_5$ . Calculate the gas temperature at the exit of the turbine.
- 9.21** For the same engine in Probs. 9.18–9.20, the pressure at the exit of the nozzle is  $2116 \text{ lb/ft}^2$ . The pressure at the inlet to the compressor is also  $2116 \text{ lb/ft}^2$ . The flow velocity entering the nozzle is  $1500 \text{ ft/s}$ . Calculate the flow velocity at the nozzle exit.
- 9.22** For the same engine in Prob. 9.21, calculate the Mach number at the nozzle exit. From this result, comment on the Mach number regime of the type of aircraft that might use this engine.
- 9.23** With Probs. 9.18–9.22, we have worked our way through the flow path through a given turbojet engine. Finally, consider this engine propelling a supersonic airplane at Mach 2 at a standard altitude of 36,000 ft. Calculate the thrust generated by the engine. The exit diameter of the nozzle is 28 inches. *Note:* The engine treated in Probs. 9.18–9.23 is hypothetical. However, it is somewhat based on the General Electric J79 turbojet used to power the F-4 Phantom II and the B-58 Hustler supersonic aircraft.
- 9.24** The specific thrust for a jet engine is defined as the thrust per unit weight flow of gas through the engine. (This is analogous to the definition of specific impulse for a rocket engine.) Calculate the specific thrust for the engine in Prob. 9.23. Neglect the weight flow of fuel, which is very small compared to the weight flow of air.
- 9.25** The entrance air temperature to the combustion chamber of a SCRAMjet engine is limited to  $2800 \text{ R}$ ; above this temperature, dissociation of the air and decomposition of the fuel in the combustion

chamber cause a loss of available energy and reduction of thrust. Consider a SCRAMjet powered hypersonic vehicle flying at Mach 10 at an altitude of 130,000 ft. Calculate the lowest Mach number to which the flow in the inlet can be slowed before entering the combustor.

- 9.26** Repeat Prob. 9.25 considering the hypersonic vehicle flying at Mach 20. Comment on the severity of the flow conditions to be encountered in the combustor at this flight condition (which reflects why, at the time of writing, the application of SCRAMjet engines at Mach 10 or higher faces severe technical problems).
- 9.27** After being launched into orbit, a spacecraft in low earth orbit has to correct its orbital inclination by an angle of  $2^\circ$ . The spacecraft is in a circular orbit at an orbital radius of 6900 km, and the exhaust velocity of the thruster is 3500 m/s. What propellant mass fraction is necessary to accomplish this orbital maneuver?
- 9.28** A geosynchronous satellite nearing the end of its life must keep a sufficient reserve of fuel to be able to boost itself to a higher “graveyard” orbit before it gets turned off. Assume the 5000 kg spacecraft is in a circular geosynchronous orbit at an altitude of 36,100 km, then performs a Hohmann transfer to a higher circular orbital altitude of 36,300 km, using thrusters with an  $I_{sp} = 310$  s. How much propellant must be kept in reserve in order to perform this maneuver?
- 9.29** The first crew to land on Mars will depart the planet at the end of their mission in a single stage vehicle with the following characteristics: inert mass fraction = 6%, propellant mass fraction = 87%, and  $I_{sp} = 380$  s. Determine the burnout velocity the pilot of the ascent vehicle can expect when she reaches orbit.
- 9.30** A newly formed company called SpaceY is designing a [page 834](#) reusable two stage launch vehicle with the following characteristics:  $\lambda = 0.09$  and  $\delta = 0.08$  in each stage, and the  $\Delta V$  is evenly split between the two stages. If the target orbit is circular at 400 km altitude, and the desired payload mass is 500 kg, how much mass must the initial vehicle have and what specific impulse is needed for the rocket engines?
- 9.31** There is potential cost savings to be had by building up a launch vehicle from many identical booster modules. Consider a vehicle made up of 4 modules in the first stage, 2 modules in the second stage, and 1 module in the third stage. Each module has the same engine ( $I_{sp} = 250$  s), the same inert mass (900 kg) and the same propellant mass (8100 kg). If

the payload mass is 200 kg, what is the maximum velocity ratio achievable with this vehicle?

**9.32** A spacecraft in low earth orbit is subjected to very small drag forces due to the low density remnants of the atmosphere at those altitudes. Over time, these forces can lower the orbital altitude of the spacecraft such that it needs to reboost itself on a regular basis. The spacecraft mass is 500 kg, and its thrusters have an exhaust velocity of 2900 m/s. If the spacecraft needs to raise its apogee every 3 months with a  $\Delta V$  impulse of 5 m/s, and the desired spacecraft lifetime is 20 years, how much propellant must it carry to perform these regular reboost operations?

## Hypersonic Vehicles


Within recent years the development of aircraft and guided missiles has brought a number of new aerodynamic problems into prominence. Most of these problems arise because of the extremely high flight velocities and are characteristically different in some way from the problems which arise in supersonic flight. The term "hypersonic" is used to distinguish flow fields, phenomena, and problems appearing at flight speeds far greater than the speed of sound from their counterparts appearing at flight speeds which are at most moderately supersonic. The appearance of new characteristic features in hypersonic flow fields justifies the use of a new term different from the well established term "supersonic."

Wallace D. Hayes and Ronald F. Probstein, 1959


### 10.1 INTRODUCTION

*The scene:* A conventional airport for large jet aircraft, anywhere in the United States. *The time:* The 21st century. *The characters:* A flight crew, poised and ready for business. *The action:* The aircraft is ready, brimming with liquid hydrogen as fuel, and parked at the edge of the runway. The flight crew is notified and is rapidly transported from the airport terminal to the sleek, dartlike vehicle waiting on the runway. Within 30 minutes, the aircraft takes off as a conventional airplane; but once in the air, the powerful air-breathing engines rapidly accelerate the vehicle through Mach 1. At Mach 5, supersonic combustion ramjet engines (Sec. 9.7 and Fig. 9.26) take over, and the aircraft continues to accelerate through the sensible atmosphere—Mach 10, Mach 15, Mach 20. When Mach 25 is reached, still within the sensible atmosphere at 200,000 ft, the vehicle has enough kinetic energy to coast into orbit around the earth. It has done so strictly under the power of air-breathing propulsion and in a single stage after

taking off from the airport. No rockets are used, and no intermediate propulsive stages were detached from the vehicle and dropped back to earth during the ascent. This airplane is simply a *single-stage-to-orbit vehicle*. A flight of fancy? A fantasy from the annals of science fiction? The author thinks not. The concept described is that of a *transatmospheric vehicle*. Such a concept at various recent times has been under active development in five different countries around the world, including a major program in the United States, where the vehicle was designated the *aerospace plane*. A general artist's concept of such an aerospace plane is shown in Fig. 10.1, and the flight trajectory of such a vehicle is depicted in Fig. 10.2 on a Mach number–altitude map (analogous to the velocity–altitude maps in Ch. 8). For comparison, the ascent and entry trajectories for the space shuttle are also shown in Fig. 10.2. Note that the ascent flight path for the aerospace plane takes place well below the shuttle ascent or entry, illustrating the need for the aerospace plane to stay within the sensible atmosphere so that the air-breathing engines can produce enough thrust to accelerate the vehicle to orbital velocity. (Some recent design concepts use air-breathing propulsion to reach Mach numbers of 12 to 14 and then use rocket propulsion to go the rest of the way to orbit.) This vehicle is a futuristic example of a *hypersonic airplane*—that is, an aircraft designed to fly faster than five times the speed of sound. Such hypersonic vehicles are the subject of this chapter.

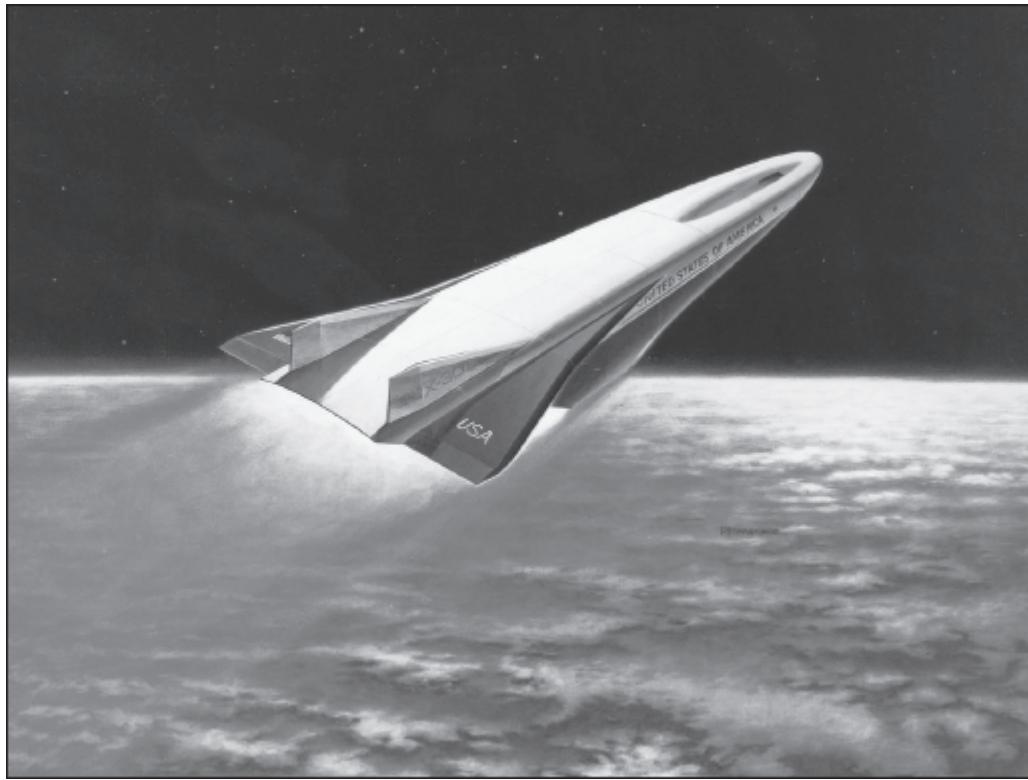

**Figure 10.1** Artist's concept of the National Aerospace Plane (NASP), a technology development program in the United States during 1985–1995.  
(Source: NASA.)

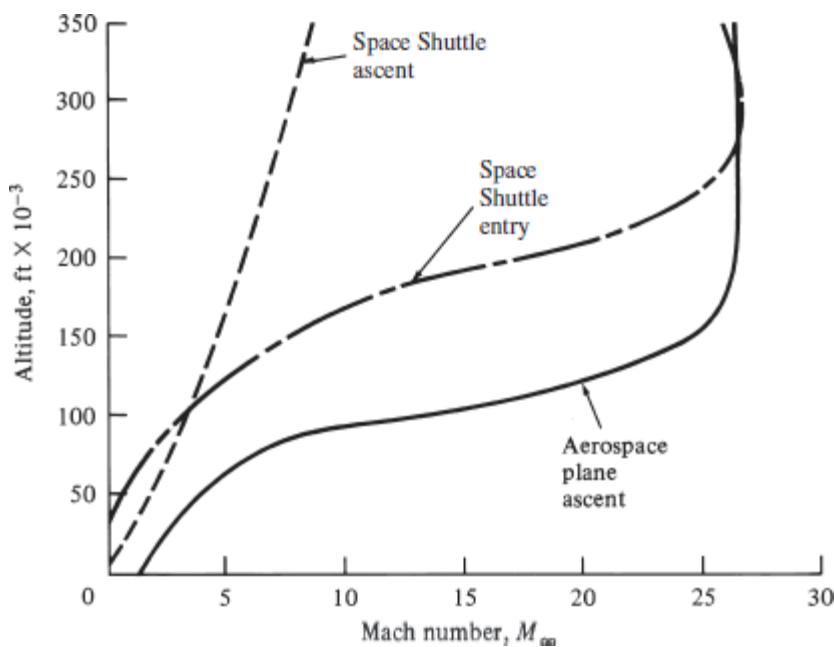

**Figure 10.2** Flight paths for the ascent and entry of the Space Shuttle compared with the ascent path of an aerospace plane.

page 837

## PREVIEW BOX

What is the future of flight? As we look back on the past century of flight, it is natural to look forward into the next century of flight. This author feels the future of flight is very bright indeed. What has been accomplished in flight to date is simply a springboard for even greater advances in technology and the design of flight vehicles in the future. The readers of this book will have many exciting challenges in the future, and many of you can look forward to contributing to futuristic airplanes and space vehicles the likes of which we cannot even imagine today.

One of these challenges is the development of practical hypersonic flight for sustained periods of cruise in the atmosphere. Hypersonic flight is loosely defined as flight at Mach 5 and higher. Hypersonics represent the final frontier of the human quest to fly faster, higher, and farther. They are a wave of the future, and many readers of this book will have the opportunity to ride this wave in the 21st century.

Dramatic changes occur in the aerodynamic flow over a vehicle flying at very high Mach numbers. The pressures exerted on the vehicle surface can be enormous. How enormous? How can you calculate the magnitudes of these pressures? Of equal or more importance are the very high temperatures that are encountered in many hypersonic flows. How hot is the flow? What do these high temperatures do to the flow field and to the vehicle? Does the chemistry of the air flow change at such high temperatures? Read on to find the answers.

The demands of aerodynamics, flight dynamics, propulsion, and structures associated with hypersonic vehicles are much more severe than for conventional airplanes. There remains a host of technical challenges and problems to be met and solved before sustained, practical hypersonic flight becomes a reality. But just as I am convinced, as I have mentioned earlier in this book, that readers of this book will have opportunities to help design a successful second-generation supersonic transport in the early 21st century, I am equally convinced that some of

you will help to solve the daunting technical problems of hypersonic flight in the same century and will participate in the design of practical hypersonic aircraft. I cannot believe that it will not happen. Read this chapter, and turn your eyes toward the future.

page 838

When such a transatmospheric vehicle flies successfully, it will by no means be the first hypersonic vehicle. The first time a piece of machinery flew faster than Mach 5 was on February 24, 1949, when a WAC Corporal second-stage rocket mounted on top of an old German V-2 rocket and launched from the White Sands proving ground in New Mexico achieved a top speed of 5150 mi/h as it entered the atmosphere. (See the book by Anderson listed in the bibliography for details.) By the 1950s, intercontinental ballistic missiles were flying at Mach 25 during entry tests of their nose cones. On April 12, 1961, the Russian astronaut Flight Major Yuri Gagarin became the first person to orbit the earth and hence to experience hypersonic flight at Mach 25 during entry. In the same year, on June 23, the X-15 hypersonic test aircraft (see Fig. 5.89) first exceeded Mach 5 in flight. In 1969 and the early 1970s, the *Apollo* lunar return vehicles reached Mach 36 during entry into the earth's atmosphere. Thus we can clearly state that hypersonic flight is a reality and has been so since 1949.

Hypersonic aerodynamics and the impact it will have on the configuration of hypersonic vehicles are distinctly different from the lower supersonic regime, as noted in the passage quoted at the beginning of this chapter. Our purpose in this chapter is to describe briefly the physical aspects of hypersonic flow, to develop a simple but approximate aerodynamic theory for predicting pressure distributions on hypersonic vehicles, and to examine some of the performance and design aspects of such vehicles. By including this chapter in an introduction to aerospace engineering, we are recognizing the importance of hypersonic flight in the past and assuming a continued growth of its importance in the future.

The road map for this chapter is shown in Fig. 10.3. It is a simple plan. First we examine some of the physical aspects of hypersonic flow, in keeping with the other chapters of this book where the fundamental physics of the given subjects are emphasized. Then we examine a particular result from Newtonian mechanics, based on Newton's study of fluid dynamics published in his *Principia* in 1687, called the *Newtonian sine-squared law*.

This law is useful for estimating pressure distributions on the surfaces of hypersonic vehicles. The chapter concludes with a discussion of some of the aerodynamic characteristics of hypersonic airplanes, including a presentation of a novel concept for the shape of such airplanes called the *wave rider*.

**Hypersonic vehicles**

- Physical aspects of hypersonic flow
- Newtonian sine-squared law
- Hypersonic airplanes
- Wave rider concept

page 839

**Figure 10.3** Road map for Ch. 10).

## 10.2 PHYSICAL ASPECTS OF HYPERSONIC FLOW


Although it is generally accepted that hypersonic aerodynamics is defined as that part of the high-speed flight spectrum above Mach 5, this is no more than a rule of thumb; when a flow accelerates from  $M = 4.99$  to  $M = 5.01$ , there is no clash of thunder or instant change of flow from green to red. No special flow phenomenon begins exactly at  $M = 5.0$ , in contrast to the distinct changes that occur when sonic flow,  $M = 1.0$ , is achieved. Instead, hypersonic flow is best defined as the high-Mach-number regime where certain physical flow phenomena become progressively more important as the Mach number is increased. In some cases, one or more of these phenomena become important above Mach 3, whereas in other cases they may not be compelling before Mach 7 or higher. Therefore, the designation of hypersonic flow as flow above Mach 5 is clearly just a convenient rule of thumb.

This section briefly describes the important physical aspects of hypersonic flow; in some sense, this entire section will constitute a definition of hypersonic flow. Five main aspects that distinguish hypersonic flow from the lower-speed supersonic regime are described in the following.

### 10.2.1 Thin Shock Layers

Consider flow over a sharp wedge at two different Mach numbers: (1) a supersonic flow at  $M_\infty = 2$  and (2) a hypersonic flow at  $M_\infty = 20$ . The shock

waves and flow streamlines for these two cases are sketched in Fig. 10.4a and b, respectively. In both cases a straight oblique shock wave will emanate from the leading edge of the wedge, as explained in Sec. 5.11. And in both cases the straight horizontal streamlines in the free stream ahead of the shock wave are discontinuously and uniformly bent in traversing the shock, the flow downstream consisting of straight uniform streamlines tangent to the wedge surface. However, at Mach 2 the shock wave angle is large ( $53.5^\circ$ ), whereas at Mach 20 the shock wave angle is much smaller ( $25^\circ$ ). The flow field between the shock wave and the body surface is called the *shock layer*, and we see from Fig. 10.4 that shock layers at hypersonic speeds are *thin*. A characteristic of hypersonic flow is that shock waves lie close to the surface, thus creating thin shock layers, which in turn can cause physical complications. For example, at low Reynolds number, the boundary layer on the body surface can grow quite thick, on the same order as the thickness of the thin shock layer itself. This leads to a merging of the shock wave with the boundary layer, constituting a *fully viscous shock layer*. However, the fact that the shock layer is thin allows the development of some simplified aerodynamic theories for the prediction of surface pressure at hypersonic speeds, one of which is described in Sec. 10.3.

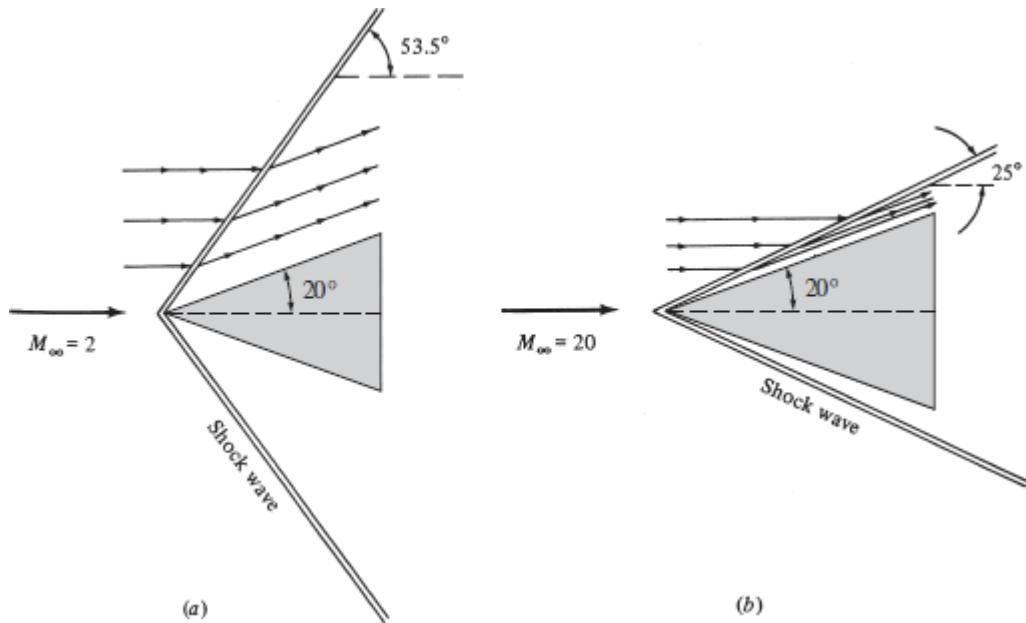

**Figure 10.4** Shock waves and streamlines over a  $20^\circ$  half-angle wedge, illustrating that hypersonic flows are characterized by thin shock layers.


## 10.2.2 Entropy Layer

page 840

Consider the hypersonic flow over a blunt-nosed body (Fig. 10.5). Consistent with the photographs in Fig. 4.28, the shock wave on a blunt-nosed body is slightly detached from the nose by the *shock detachment distance*  $d$  shown in Fig. 10.5. The shock wave curves downstream of the nose and at hypersonic speeds essentially wraps itself around the nose of the body. In the nose region, the shock layer is very thin, and the shock wave is highly curved. This strong shock curvature induces large velocity gradients in the flow behind the shock in the nose region. These large velocity gradients are accompanied by strong thermodynamic changes in the flow. This region of strong gradients, called an *entropy layer*,<sup>1</sup> extends downstream close to the body surface. Downstream of the nose, the entropy layer interacts with the boundary layer growing along the surface; this interaction increases aerodynamic heating of the surface, above and beyond that which would be predicted without the entropy layer. At supersonic speeds the shock wave at the nose is also curved, but the magnitude of the curvature is far less than at hypersonic speeds. Because the strength of the entropy layer is related to shock curvature, the entropy layer effect is primarily a hypersonic phenomenon.

---

<sup>1</sup>Entropy is a thermodynamic state variable alluded to in Sec. 4.6 but not defined in this book. Such matters are treated in the study of thermodynamics. Suffice it to say that the entropy varies greatly throughout the layer shown in Fig. 10.5.

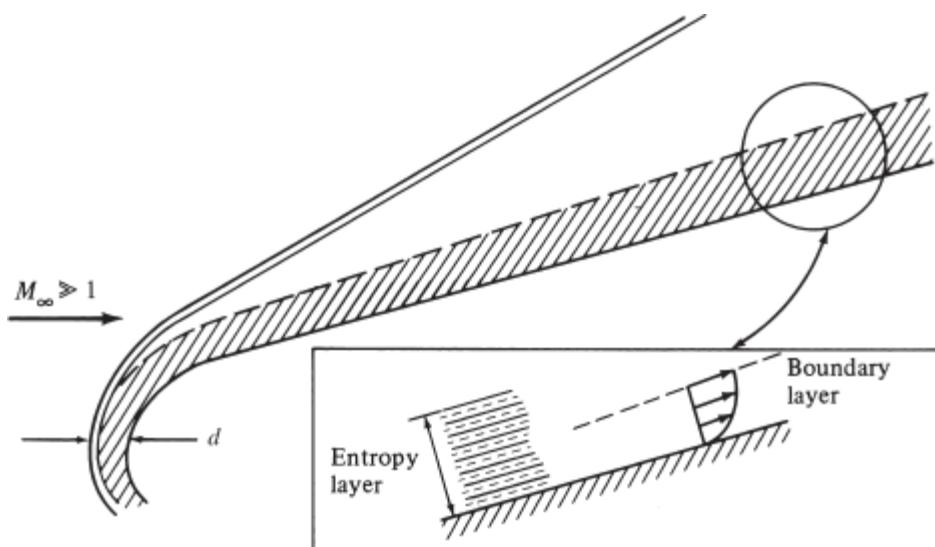

**Figure 10.5** Entropy layer on a blunt-nosed hypersonic body.


page 841

### 10.2.3 Viscous Interaction

In Sec. 4.16 we stated that the thickness of the laminar boundary layer is inversely proportional to the square root of the Reynolds number. In addition, results for compressible flow boundary layers show that the thickness is proportional to the Mach number squared. Hence

$$\delta \propto \frac{M^2}{\sqrt{\text{Re}}}$$

As a result, at the high Mach numbers associated with hypersonic flows,  $\delta$  can be very large. Indeed, for hypersonic vehicles flying at high altitudes and high Mach numbers (the upper right portion of the map in Fig. 10.2), the boundary layer thickness can become so large that the flow outside the boundary layer, called the *inviscid flow*, is greatly affected. This creates a *viscous interaction*: The thick boundary layer flow affects the outer inviscid flow, and the changes in the inviscid flow feed back and influence the boundary layer growth. The practical consequence of viscous interaction on hypersonic vehicles is an increase in surface pressure and skin friction, leading to increased drag and increased aerodynamic heating. For example, consider the hypersonic flow over a sharp, flat plate sketched in Fig. 10.6. If the flow were inviscid, the pressure distribution over the flat plate would be constant and equal to the free-stream pressure  $p_\infty$ , as shown by the dashed line in Fig. 10.6. However, in the real viscous flow over the flat plate, a boundary layer exists adjacent to the surface. At hypersonic speeds this boundary layer can be quite thick. In turn, the outer inviscid flow no longer sees a flat plate; instead, it sees a body with some effective thickness induced by the thick boundary layer. (In boundary layer language, the effective thickness the boundary layer adds to a surface is called the *displacement thickness*.) In turn, the actual pressures exerted on the flat plate are higher than  $p_\infty$ ; the pressure on the surface induced by viscous interaction can be very high near the leading edge and then decreases downstream, as sketched by the solid curve in Fig. 10.6. The difference between the two curves in Fig. 10.6 is called the *induced pressure increment*. Induced pressures near the leading edge of hypersonic vehicles generally tend to increase the drag.

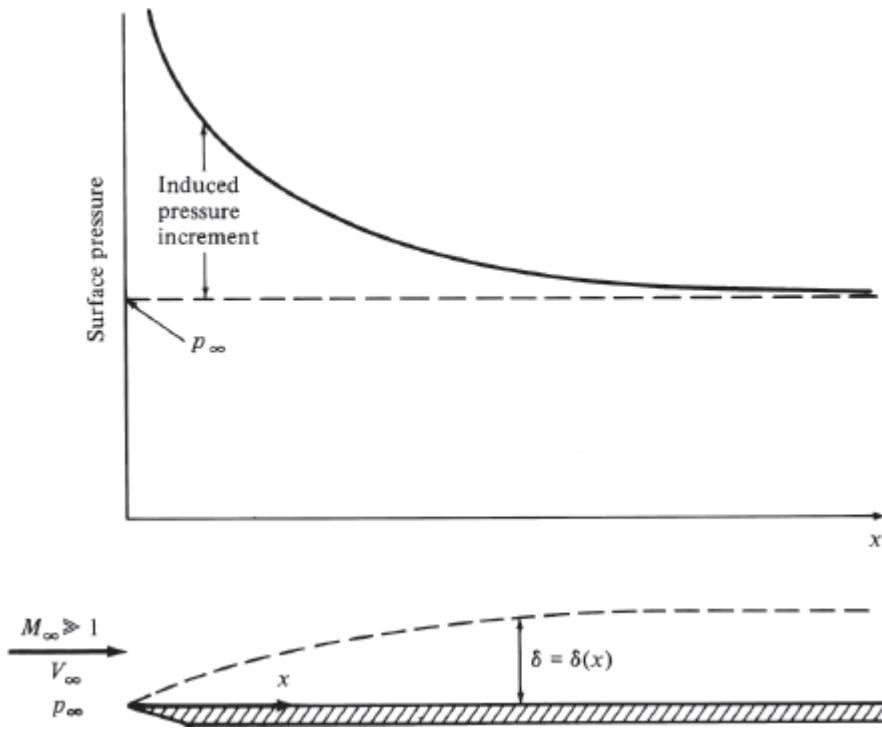

**Figure 10.6** Viscous interaction on a flat plate at hypersonic speeds.

#### 10.2.4 High-Temperature Effects


High-Mach-number flows are high-energy flows; the ratio of kinetic energy to the gas internal energy increases as the square of the Mach number. This is easily seen by forming the ratio of kinetic energy to internal energy per unit mass of gas:

$$\frac{V^2/2}{e} = \frac{V^2/2}{c_v T} = \frac{\gamma - 1}{2} \frac{V^2}{RT} = \frac{\gamma(\gamma - 1)}{2} \frac{V^2}{a^2} = \frac{\gamma(\gamma - 1)}{2} M^2 \quad (10.1)$$

Therefore, a hypersonic free stream at  $M_\infty = 20$  has a kinetic energy that is 112 times larger than its internal energy. However, when this flow enters a boundary layer (as in the flat plate in Fig. 10.6), it is slowed by the effects of friction. In such a case the kinetic energy decreases rapidly and is converted in part to internal energy, which zooms in value. Because the gas temperature is proportional to internal energy, it also increases rapidly. Hence, hypersonic boundary layers are high-temperature regions of the flow, due to viscous dissipation of the flow kinetic energy. Another region of high-temperature flow is the shock layer behind the strong bow shock wave shown in Fig. 10.5. In this case the flow velocity discontinuously

decreases as it passes through the shock wave; once again the lost kinetic energy reappears as an increase in internal energy and hence an increase in temperature behind the shock wave. Therefore, the portion of the shock layer behind a strong bow shock wave on a blunt-nosed body is a region of high-temperature flow.

High temperatures cause chemical reactions to occur in the [page 843](#) flow. For example, in air when  $T > 2000$  K, diatomic oxygen will dissociate:

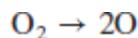


For  $T > 4000$  K, diatomic nitrogen will dissociate:



In this temperature range, nitric oxide will form



and will ionize:

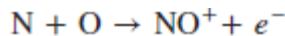

At higher temperatures the atoms will ionize; for example, for  $T > 9000$  K,



Clearly, a hypersonic flow can sometimes be a chemically reacting flow. In turn, these chemical reactions change the flow field properties and affect aerodynamic heating of the surface. Because these high-temperature aspects are perhaps one of the dominant characteristics of hypersonic flow, any detailed study and analysis of a hypersonic flow should take them into account.

To emphasize these points, the velocity–altitude map in Fig. 10.7 shows the flight trajectories for lifting entry vehicles. Superimposed on the map are the regions where various chemical reactions occur around the nose of the vehicles. Clearly, much of the entry flight path is characterized by chemically reacting flow fields.


A typical variation of chemical species in the flow field around a blunt-nosed body is shown in Fig. 10.8. The body shape, shock wave shape, and

two streamlines labeled *A* and *B* are shown in Fig. 10.8a for  $V_\infty = 23,000$  ft/s at an altitude of 250,000 ft. The nose radius of the body is about 0.5 ft. In Fig. 10.8b the variation in concentration of atomic oxygen and atomic nitrogen along streamlines *A* and *B* is shown as a function of distance  $s$  along the streamlines. Note that dissociation occurs rapidly behind the shock wave and that large amounts of oxygen and nitrogen atoms are formed in the shock layer.

### 10.2.5 Low-Density Flow


Throughout this book we have treated air as a continuous medium. If you wave your hand through the air around you, the air feels like a continuous substance; but if you could go to an altitude of 300,000 ft and wave your hand about, the air would not feel so continuous. Your hand would begin to feel the influence of individual molecular impacts on its surface, and the air would seem to consist of distinct particles (molecules, atoms, ions, and so on) widely separated from one another. In this case the air is no longer a continuous medium, but is a gas at low density that exhibits certain special behavior. Let us examine this picture more closely.

page 844

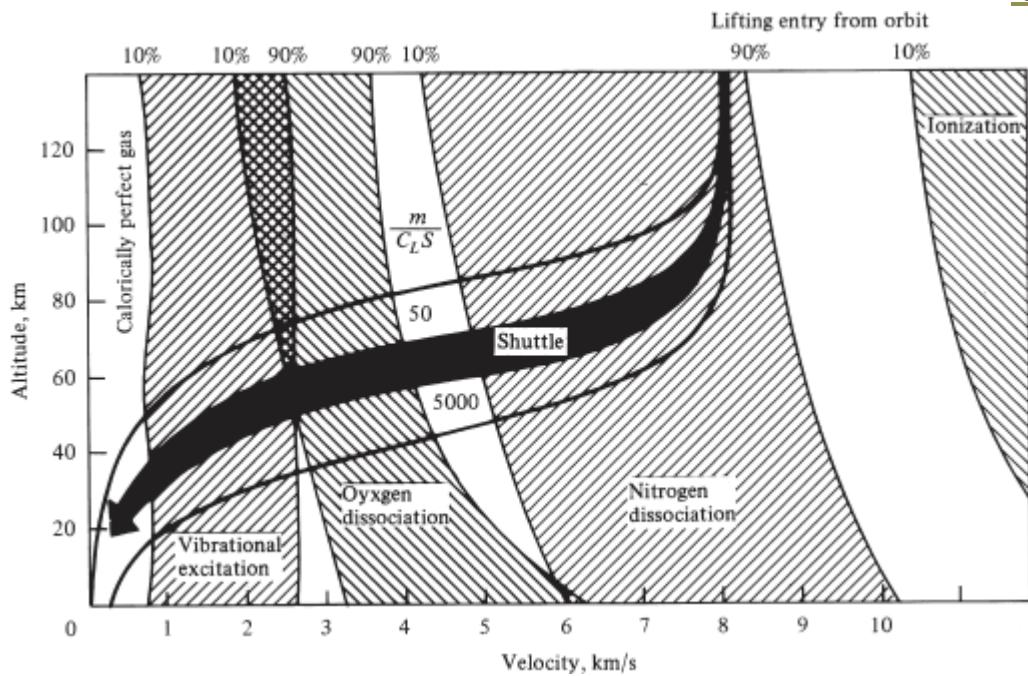


**Figure 10.7** Velocity–altitude map showing where various chemical reactions are important in the blunt-nosed region of a hypersonic vehicle.

The air around you is made up of individual molecules, principally oxygen and nitrogen, that are in random motion. Imagine that you can isolate one of these molecules and watch its motion. It will move a certain distance and then collide with one of its neighboring molecules. It will then move another distance and collide with another neighboring molecule, a process that will continue indefinitely. Although the distance between collisions is different, over time there will be some *average* distance that the molecule moves between successive collisions. This average distance is defined as the *mean free path*  $\lambda$ . At standard sea-level condition for air,  $\lambda = 2.176 \times 10^{-7}$  ft, a very small distance. This implies that at sea level when you wave your hand through the air, the gas itself “feels” like a continuous medium—a so-called *continuum*. Imagine now that we raise ourselves to an altitude of 342,000 ft, where the air density is much lower and consequently the mean free path much larger than at sea level (at 342,000 ft,  $\lambda = 1$  ft). Now when you wave your hand through the air, you are more able to perceive individual molecular impacts; instead of a continuous substance, the air feels like an open region punctuated by individual widely spaced particles of matter. Under these conditions the aerodynamic concepts, equations, and results based on the assumption of a continuum begin to break down, and we must approach aerodynamics from a different point of view, using concepts from kinetic theory. This regime of aerodynamics is called *low-density flow*.

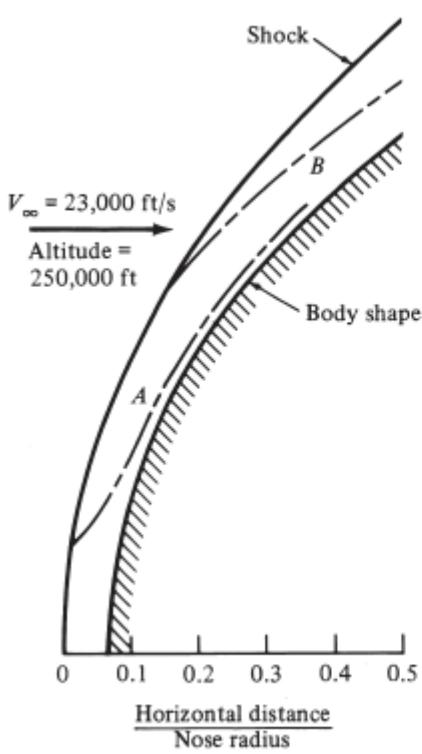

(a)

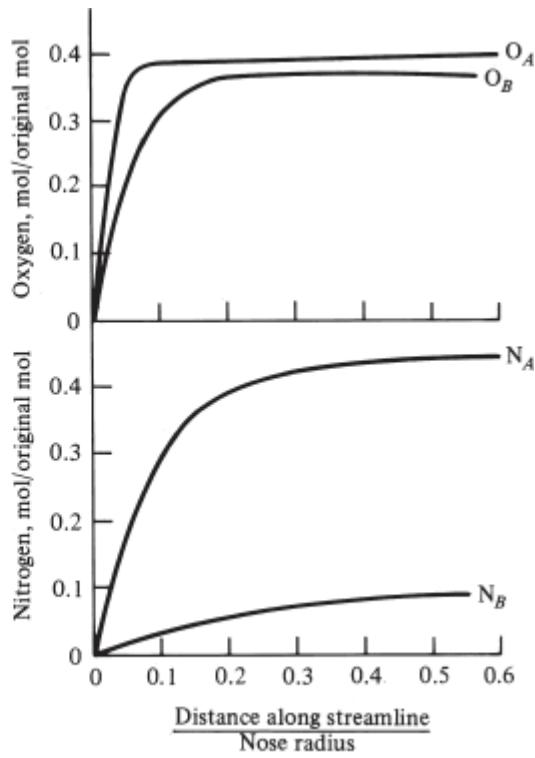

(b)

**Figure 10.8** (a) Hypersonic flow over a blunt-nosed body, showing the shock wave, the body, and the shape of two streamlines labeled *A* and *B*. (b) Variation of concentrations of atomic oxygen and atomic nitrogen along the two streamlines in (a). Concentrations are given on the ordinates as moles of nitrogen or oxygen per original mole of air upstream of the shock wave.

(Source: Hall, J. G., et al. “Blunt Nose Inviscid Airflows with Coupled Nonequilibrium Process.” Journal of the Aeronautical Sciences 29, no. 9 (1962): 1038–051. Copyright © 1962 by Rolls-Royce PLC. All rights reserved. Used with permission.)


Whether or not low-density effects prevail for a given aerodynamic problem depends on the value of a nondimensional parameter called the *Knudson number*  $K_n$ , defined as

$$K_n = \frac{\lambda}{l}$$

where  $l$  is a characteristic dimension of the flow—for example, the length of a hypersonic vehicle or the diameter of a sphere. Continuum flow conditions will exist when  $\lambda \ll l$ —that is, when  $K_n \ll 1$ . Typically  $K_n < 0.03$  for continuum conditions to hold. At the other extreme, when  $\lambda \gg l$ ,

we have *free-molecule flow*—that is, when  $K_n > 10$ . In free-molecule flow, a body surface feels only a small number of distinct molecular impacts. Moreover, the structure of the flow field becomes very blurred; for example, shock waves become very thick and essentially lose their identity. The aerodynamic force coefficients and surface heat transfer coefficients become strong functions of  $K_n$  (in addition to Mach number and Reynolds number), and the aerodynamic picture changes considerably. To illustrate such a change, recall from Example 8.3 that the drag coefficient for a sphere at hypersonic speeds is approximately 1. This is a continuum result, associated with  $K_n \ll 1$ . However, as  $K_n$  is increased,  $C_D$  progressively increases, as shown in Fig. 10.9, approaching a value of 2 for free-molecule conditions, where  $K_n > 10$ .

Because low-density flows are not an inherent part of [page 846](#) hypersonic flow, this discussion is not legitimately part of the definition of hypersonic flow. Nevertheless, hypersonic vehicles frequently fly at very high altitudes and therefore encounter low-density conditions. Hence, the design and analysis of hypersonic vehicles sometimes require consideration of low-density flow. For example, the nose radius of the Space Shuttle is approximately 1 ft; therefore, at an altitude of 342,000 ft, the value of the Knudsen number based on nose radius,  $K_n = \lambda/R$ , will be near unity. As a consequence, the flow in the nose region of the Space Shuttle encounters low-density effects at an altitude of approximately 300,000 ft, effects that are spread over the whole vehicle at higher altitudes. A glance at Fig. 10.2 shows that most of the important dynamics and aerodynamics for the entry of the Space Shuttle occur at altitudes below 300,000 ft, so low-density effects are not a driving force in the performance of the shuttle. However, new generations of hypersonic airplanes may spend a considerable portion of their mission at high altitudes, and for these vehicles, low-density effects will become more significant.

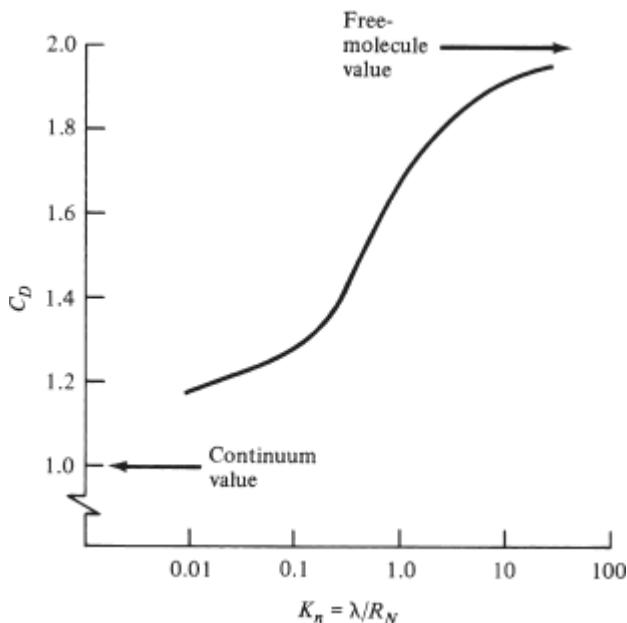

**Figure 10.9** Low-density effects on the drag coefficient of a sphere at hypersonic speeds; variation of  $C_D$  versus Knudsen number.

(Source: *The curve shown is from calculation made by Dr. James Moss at the NASA Langley Research Center.*)

### 10.2.6 Recapitulation


To repeat, hypersonic flow is best defined as the regime where all or some of the physical phenomena discussed in the preceding become important as the Mach number is increased to high values. For a vehicle of a given shape, some of these phenomena may begin to occur at Mach numbers below 5, whereas for other vehicles, the physical characteristics of hypersonic flow may not appear until Mach 7 or higher. We are therefore reminded once again that the definition of hypersonic flow as flight above Mach 5 is simply a convenient rule of thumb.

## 10.3 NEWTONIAN LAW FOR HYPERSONIC FLOW

In 1687 Newton published his famous *Principia*, which has formed the basis for all classical physics to the present. In the second book of the *Principia*, devoted to fluid mechanics, Newton postulated the following model of fluid flow. He considered a flow as a uniform rectilinear stream of particles, much like a cloud of pellets from a shotgun blast. As sketched in Fig. 10.10, Newton assumed that upon striking a surface inclined at an

angle  $\theta$  to the stream, the particles would transfer their normal momentum to the surface (thus exerting a force on it), but their tangential momentum would be preserved. Hence, the particles would move along the surface after colliding with it. For the inclined flat plate shown in Fig. 10.10, the force due to the loss of normal momentum by the impacting particles  $N$  is calculated as follows. The component of the free-stream velocity normal to the surface is  $V_\infty \sin \theta$ ; according to Newton's model, this is the velocity lost by the particle upon impact with the surface. The area of the inclined surface  $A$  projects a cross-sectional area perpendicular to the flow equal to  $A \sin \theta$ , as shown in Fig. 10.10. The mass flow across this area is the product of density, velocity, and projected area perpendicular to  $V_\infty$ , as described in Sec. 4.1 and given by the product  $\rho A V$  in Eq. (4.2). Therefore, we can write the following statement:

page 848

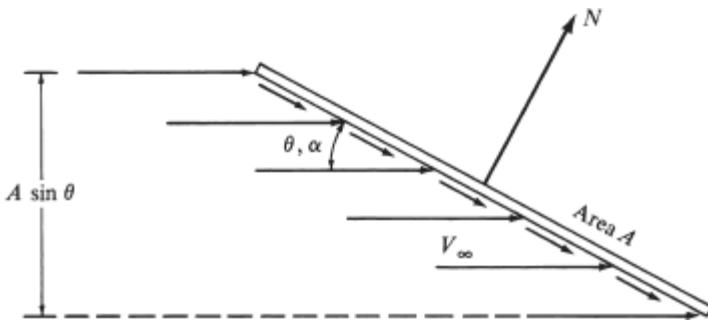

**Figure 10.10** Model for the derivation of the Newtonian sine-squared law.

The time rate of change of momentum due to particles striking the surface is equal to

$$(\text{Mass flow}) \times (\text{change in normal component of velocity})$$

$$\text{or } (\rho_\infty V_\infty A \sin \theta)(V_\infty \sin \theta) = \rho_\infty V_\infty^2 A \sin^2 \theta$$

In turn, from Newton's second law, the force on the surface is equal to the time rate of change of momentum:

$$N = \rho_\infty V_\infty^2 A \sin^2 \theta \quad (10.2)$$

The force acts normal to the surface. From Eq. (10.2), the normal force per unit area is

$$\frac{N}{A} = \rho_\infty V_\infty^2 \sin^2 \theta \quad (10.3)$$

Let us now interpret the physical meaning of  $N/A$ , the normal force per unit area in Eq. (10.3), in terms of our modern knowledge of aerodynamics. Newton's model assumes a stream of individual particles all moving in straight parallel paths toward the surface; that is, the particles have a completely directed rectilinear motion. There is no random motion of the particles, which simply form a stream like pellets from a shotgun. In terms of our modern concepts, we know that a moving gas has molecular motion (composed of random motion of the molecules) as well as a directed motion. Moreover, as stated in Sec. 4.11, the static pressure (in this case the static pressure of the free stream is  $p_\infty$ ) is simply a ramification of the purely *random* motion of the molecules. In Newton's model there is no random motion, only directed motion. Therefore, when the purely directed motion of the particles in Newton's model results in the normal force per unit area  $N/A$  in Eq. (10.3), this normal force per unit area must be construed as the *pressure difference* above  $p_\infty$ : namely  $p - p_\infty$  on the surface. Hence, Eq. (10.3) becomes

$$p - p_\infty = \rho_\infty V_\infty^2 \sin^2 \theta \quad (10.4)$$

This can be written in terms of the pressure coefficient  $C_p$ , defined by Eq. (5.27), as

$$\frac{p - p_\infty}{\frac{1}{2} \rho_\infty V_\infty^2} = 2 \sin^2 \theta$$

or


$C_p = 2 \sin^2 \theta$

(10.5)

which is the famous *sine-squared law* of Newton. It allows us to calculate the pressure coefficient at a point on a surface where the angle between a tangent to the surface at that point and the free-stream direction is  $\theta$ .

What does all this have to do with hypersonic flight or even with fluid mechanics in general? Equation (10.5) dates from the late 17th century, when hypersonic flight was not even a notion in anybody's mind. Newton's work on fluid mechanics was motivated by the need to calculate the resistance of bodies moving through fluids, such as a ship through water; and for that application, the Newtonian sine-squared law was woefully inaccurate. The problem starts with the flow model itself (Fig. 10.10). In reality, in the low-speed flow of air or the flow of a liquid, the streamlines are not straight and parallel until they impact the body, as sketched in Fig.

10.10; actually the streamlines begin to curve far ahead of the body and, in general, do not run into the surface of the body (usually only the single streamline through the stagnation point touches the body). Such real flow phenomena are clear in the smoke photograph shown in Fig. 2.6. Therefore, Eq. (10.5) is not expected to be an accurate result, and indeed our previous discussions of subsonic and supersonic aerodynamics have not used the Newtonian sine-squared law. Now, however, let us return to the hypersonic flow pictured in Fig. 10.4b. If we look at it from across the room, the shock layer is so thin that it appears as if the straight parallel streamlines ahead of the shock waves are literally hitting the surface and then running tangentially along it. This is precisely the model used by Newton, as described earlier. Therefore, actual hypersonic flows come close to matching the Newtonian model, with the result that the sine-squared law might be appropriate for estimating the pressure distributions over the surface of hypersonic vehicles. This indeed turns out to be the case, as shown in Fig. 10.11, where the surface pressure distribution is given for a parabolically shaped axisymmetric body at Mach 4 in air. The solid line is from the exact numerical solution of the flow field obtained by the author on a high-speed digital computer, and the small squares are from the sine-squared law, slightly modified from Eq. (10.5) as follows. In estimates of hypersonic pressure distributions, it is best to replace the pure number 2 in Eq. (10.5) with the value of the maximum pressure coefficient  $C_{p,\max}$ , which occurs at the stagnation point. That is, a *modified Newtonian law* is

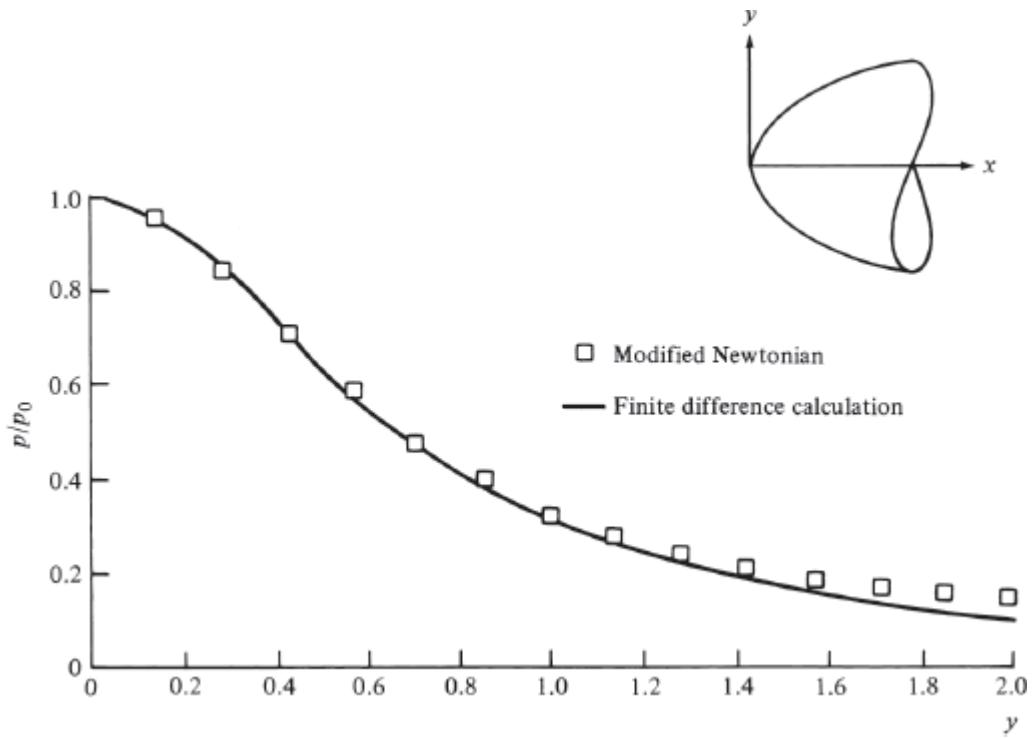

**Figure 10.11** Surface pressure distribution on an axisymmetric body of parabolic shape,  $M_\infty = 4$ . Comparison between modified Newtonian results and exact finite difference calculations made on a high-speed digital computer.

(Source: From Anderson, Modern Compressible Flow: With Historical Perspective, 4th ed.- McGraw-Hill, New York, 2021.)

$$C_p = C_{p,\max} \sin^2 \theta \quad (10.6)$$

where

$$C_{p,\max} = \frac{p_{0,2} - p_\infty}{\frac{1}{2} \rho_\infty V_\infty^2}$$

where  $p_{0,2}$  is the total pressure behind a normal shock wave, given by the Rayleigh Pitot tube formula, Eq. (4.79). The squares in Fig. 10.11 are obtained from Eq. (10.6). Because excellent agreement is obtained with the exact results, the Newtonian sine-squared law is useful for hypersonic applications.

Returning to Fig. 10.10, we calculate the lift and drag coefficients for the flat plate at an angle of attack  $\alpha$ , using Newtonian theory. For this case, because angle  $\theta$  in Fig. 10.10 is the angle of attack, we will use  $\alpha$  as usual to denote this angle,  $\theta = \alpha$ . From the geometry of Fig. 10.10,

$$L = N \cos \alpha \quad (10.7)$$

and  $D = N \sin \alpha \quad (10.8)$

Substituting Eq. (10.2) in Eqs. (10.7) and (10.8), we find that

$$L = \rho_{\infty} V_{\infty}^2 A \sin^2 \alpha \cos \alpha \quad (10.9)$$

and  $D = \rho_{\infty} V_{\infty}^2 A \sin^3 \alpha \quad (10.10)$


In terms of lift and drag coefficients, Eqs. (10.9) and (10.10) become

$$C_L = \frac{L}{\frac{1}{2} \rho_{\infty} V_{\infty}^2 A} = 2 \sin^2 \alpha \cos \alpha \quad (10.11)$$

and  $C_D = \frac{D}{\frac{1}{2} \rho_{\infty} V_{\infty}^2 A} = 2 \sin^3 \alpha \quad (10.12)$

The lift-to-drag ratio becomes

$$\frac{L}{D} = \cot \alpha \quad (10.13)$$

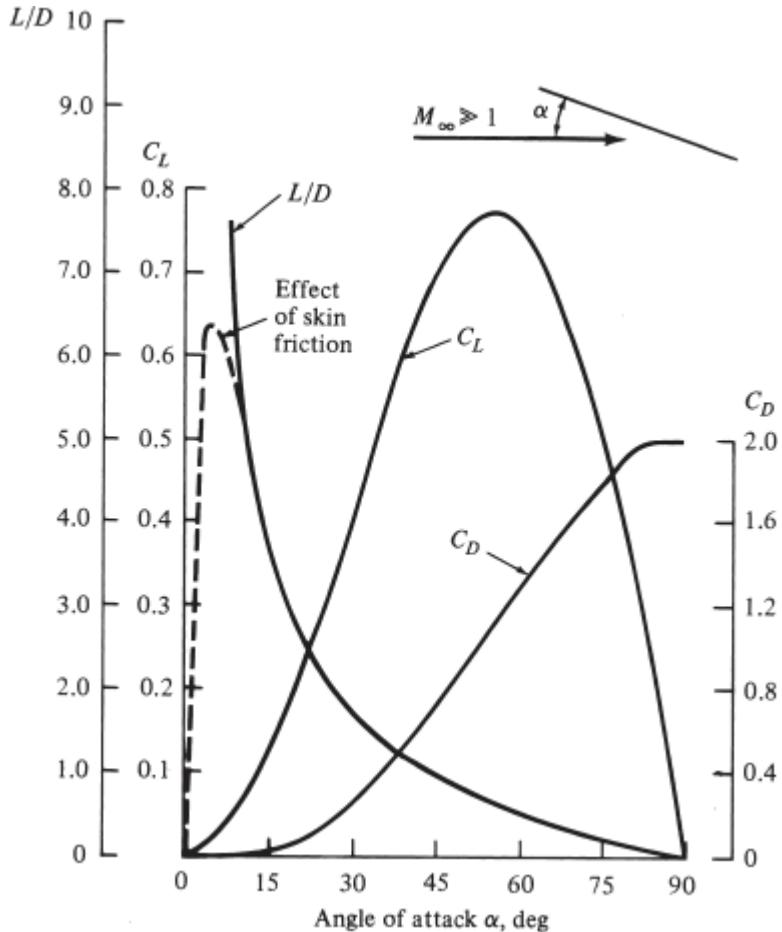

**Figure 10.12** Newtonian results for lift and drag coefficients and lift-to-drag ratio for a flat plate as a function of angle of attack.

The results of Eqs. (10.11) to (10.13) are plotted in Fig. 10.12 as functions of the angle of attack. From this figure, note the following important characteristics:

1. The lift coefficient increases gradually with angle of attack up to a high value of  $\alpha$ . Indeed, maximum  $C_L$  occurs at  $\alpha = 54.7^\circ$ , and  $C_L$  decreases for larger angles of attack. It is interesting to note that  $\alpha \approx 55^\circ$  for maximum lift is fairly realistic; the maximum lift coefficient for many practical hypersonic vehicles occurs at angles of attack in this neighborhood. The attainment of  $C_{L,\max}$  at such a high  $\alpha$  at hypersonic speeds is certainly in contrast to our lower-speed experience discussed in Ch. 5), where it was seen that  $C_{L,\max}$  for subsonic airplanes occurs at values of  $\alpha$  around  $14^\circ$  to  $16^\circ$ .
2. Another contrast between hypersonic conditions and our [page 850](#) low-speed experience discussed earlier in this book is the variation of  $C_L$  versus  $\alpha$  at low angle of attack, say in the range of  $\alpha$  from 0 to  $15^\circ$ . Note in Fig. 10.12 that the hypersonic  $C_L$  varies *nonlinearly* with  $\alpha$ , in direct contrast to the linear variations seen at subsonic and supersonic speeds. From the point of view of theoretical aerodynamics, hypersonic flow is a very *nonlinear* phenomenon.
3. The value of  $L/D$  increases monotonically as  $\alpha$  is [page 851](#) decreased. Indeed,  $L/D \rightarrow \infty$  as  $\alpha \rightarrow 0$ , but this is misleading. When skin friction is added to the picture,  $D$  becomes finite at  $\alpha = 0$  and  $L/D$  reaches a maximum at some small angle of attack and then decreases to zero at  $\alpha = 0$ , as shown by the dashed line in Fig. 10.12, where laminar skin friction at a Reynolds number of  $3 \times 10^6$  and a Mach number of 20 is assumed.

### EXAMPLE 10.1

Consider the hypersonic flow over a sphere at Mach 25. Let  $s$  denote distance along the sphere surface, measured from the stagnation point, and

let  $R$  denote the radius of the sphere. Point 1 is located a distance  $s/R = 0.6$  from the stagnation point. Estimate the pressure coefficient at point 1.

### ■ Solution

The location of point 1 is shown in Fig. 10.13; recalling that 1 rad is  $57.3^\circ$  and that  $\phi$  in radians is given by  $s/R$ , we have, in degrees,


$$\phi = 57.3 \frac{s}{R} = 57.3(0.6) = 34.38^\circ$$

In turn, the line tangent to the body at point 1 makes the angle  $\theta$  with respect to the free stream, where

$$\theta = 90^\circ - \phi = 55.61^\circ$$

From

$$\frac{p_{0,2}}{p_1} = \frac{p_{0,2}}{p_\infty} \left[ \frac{(\gamma + 1)^2 M_\infty^2}{4\gamma M_\infty^2 - 2(\gamma - 1)} \right]^{\gamma/(\gamma-1)} \left[ \frac{1 - \gamma + 2\gamma M_\infty^2}{\gamma + 1} \right] \quad (4.79)$$

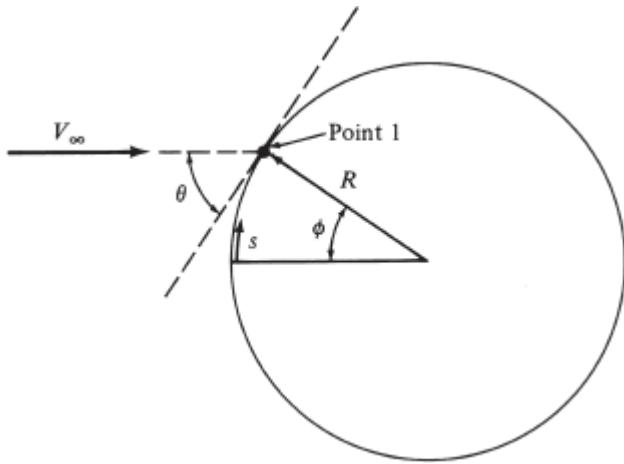

**Figure 10.13** Geometry for Example 10.1.

where  $p_{0,2}$  is the total pressure behind a normal shock wave (and hence the pressure at the stagnation point) and  $p_1$  is the static pressure in the free stream ahead of the shock (that is,  $p_1 = p_\infty$ ), we have for  $\gamma = 1.4$  and  $M_\infty = 25$

$$\frac{p_{0,2}}{p_\infty} = \left[ \frac{2.4^2(25)^2}{4(1.4)(25)^2 - 2(0.4)} \right]^{1.4/0.4} \left[ \frac{-0.4 + 2(1.4)}{2.4} \right]$$

or  $\frac{p_{0,2}}{p_\infty} = 1.1045(729) = 805.18$

To convert the preceding ratio to a pressure coefficient, first note that the dynamic pressure can be written, using Eq. (4.53), as

$$q_\infty = \frac{1}{2}\rho_\infty V_\infty^2 = \frac{\gamma}{2}p_\infty \frac{\rho_\infty}{\gamma p_\infty} V_\infty^2 = \frac{\gamma}{2}p_\infty \frac{V_\infty^2}{a_\infty^2} = \frac{\gamma}{2}p_\infty M_\infty^2$$

Thus, from the definition of pressure coefficient

$$C_p = \frac{p - p_\infty}{q_\infty} = \frac{2}{\gamma M_\infty^2} \left( \frac{p}{p_\infty} - 1 \right)$$

At the stagnation point  $p = p_{0,2}$ , and

$$C_{p,\max} = \frac{2}{\gamma M_\infty^2} \left( \frac{p_{0,2}}{p_\infty} - 1 \right) = \frac{2}{1.4(25)^2} (805.18 - 1)$$

or

$$C_{p,\max} = 1.838$$

From the modified Newtonian law, Eq. (10.6),

$$C_p = C_{p,\max} \sin^2 \theta$$

$$C_p = C_{p,\max} \sin^2 \theta = 1.838 \sin^2 55.62^\circ$$

$C_p = 1.25$

Evaluated at point 1,


---

## 10.4 SOME COMMENTS ABOUT HYPERSONIC-AIRPLANES

The infinitely thin, flat plate discussed in Sec. 10.3 is the most effective lifting surface at hypersonic speeds; the ratio of  $L/D$  from such a flat plate is the highest that can be expected at hypersonic flight conditions but the least effective in terms of volume capacity. It goes without saying that all

practical flight vehicles must have a finite volume to carry fuel, payload, people, and the like. Hence the flat-plate results, although instructive, are primarily of academic interest. This section briefly examines the characteristics of some more realistic hypersonic airplane configurations.

page 853

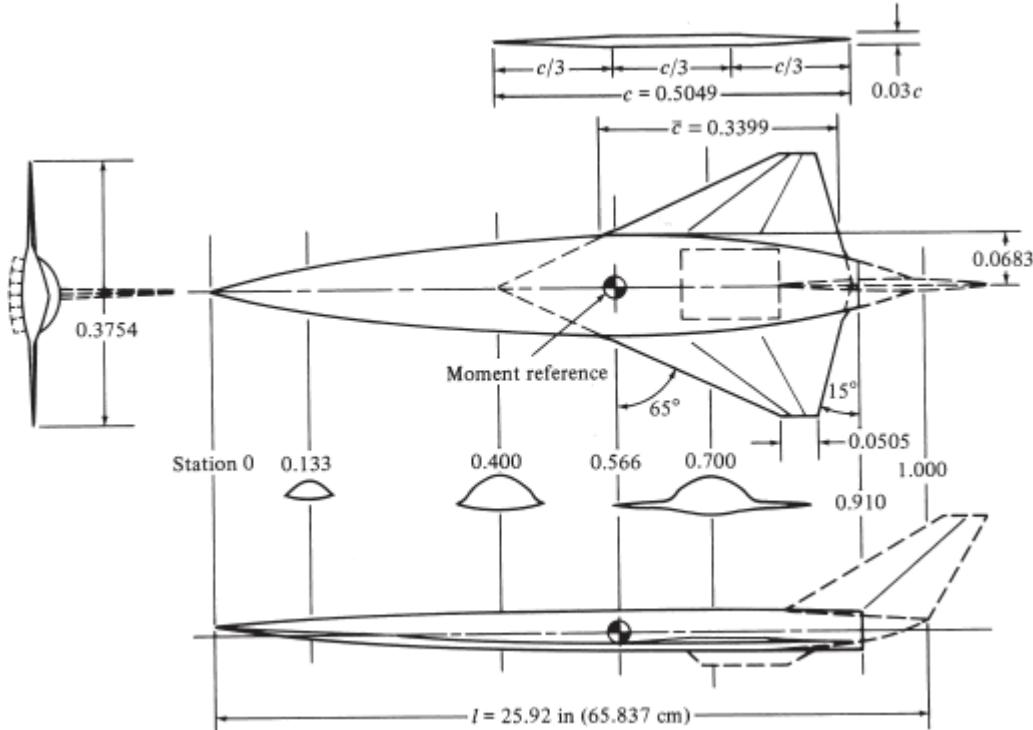


**Figure 10.14** A generic hypersonic transport configuration. The dimensions pertain to a wind tunnel model, the data for which are given in Figs. 10.15 to 10.17. Solid lines = wing–body model used for the wind tunnel tests; dashed lines = tail and propulsion modules for the complete configuration.

(Source: From J. A. Penlund et al., *Wall Temperature Effects on the Aerodynamics of a Hydrogen-Fueled Transport Concept in Mach 8 Blowdown and Shock Tunnels*, NASA TP 2159, July 1983.)

Figure 10.14 shows a three-view diagram of a conceptual hypersonic cruise aircraft, such as a hypersonic transport. This NASA concept, in existence since the early 1970s, is a typical example of a hypersonic airplane configuration. The solid lines show the wing–body combination, which was tested in a hypersonic wind tunnel; the dashed lines show the propulsion module and vertical tail surface, which are part of the airplane design but were not included in the wind tunnel model.

The variation of lift coefficient with angle of attack for this aircraft is shown in Fig. 10.15 for  $M_\infty = 8.0$ . The solid lines are theoretical results calculated at two different Reynolds numbers, and the symbols are wind tunnel data. Note the following:

1. The lift coefficient varies *nonlinearly* with angle of attack, exhibiting concave curvature—a trend consistent with the flat-plate results shown in Fig. 10.12.

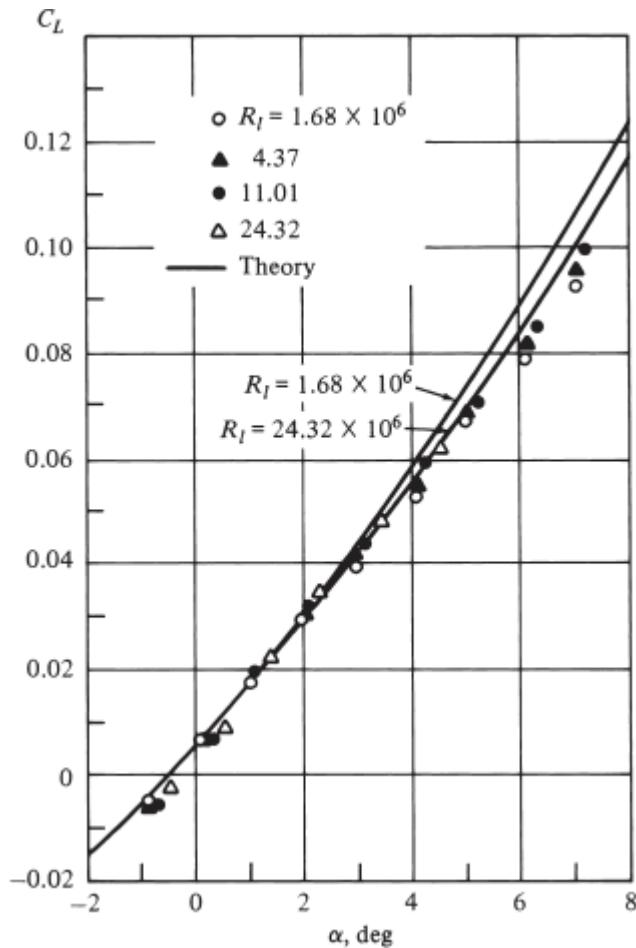

**Figure 10.15** Lift curve for the hypersonic transport configuration shown in Fig. 10.14.  $M_\infty = 8$ .

(Source: *Wind tunnel data and theoretical curves from J. A. Penlund et al., Wall Temperature Effects on the Aerodynamics of a Hydrogen-Fueled Transport Concept in Mach 8 Blowdown and Shock Tunnels, NASA TP 2159, July 1983.*)


2. The lift coefficient is very insensitive to Reynolds number—a fact consistent with the low-speed experience discussed throughout this

book.

The lift-to-drag ratio versus angle of attack is given in Fig. [page 854](#) 10.16. The two solid curves are theoretical results obtained assuming (1) turbulent flow at a high Reynolds number of  $24.32 \times 10^6$  and (2) laminar flow at a low Reynolds number of  $1.68 \times 10^6$ . The wind tunnel data are partially bracketed by the theoretical curves and indicate that the actual flow on the model was transitional; that is, the flow near the nose and leading edges was laminar, followed by transition to turbulent flow. At the lower Reynolds numbers, the flow was mainly laminar, whereas at the higher Reynolds numbers, the flow was mainly turbulent. At high Mach numbers, transition to turbulent flow is usually delayed; hence, hypersonic flight vehicles frequently experience much larger regions of laminar flow than those expected at low speeds at the same Reynolds number. Note from Fig. 10.16 that the value of  $(L/D)_{\max}$  is higher for turbulent flow than for laminar. At first this seems wrong; in Ch. 4) we said that skin friction drag for a turbulent flow is much larger than for a laminar flow, so  $L/D$  for turbulent flow should be much less. This would be true at the same Reynolds number. However, the two solid curves in Fig. 10.16 pertain to different Reynolds numbers. In Secs. 4.16 and 4.17 we saw that the skin friction coefficient decreases as the Reynolds number increases for both laminar and turbulent flows. Therefore, in Fig. 10.16 the turbulent curve corresponds to a lower skin friction drag coefficient  $C_F$  because the Reynolds number is so high ( $Re = 24.32 \times 10^6$ ), whereas the laminar curve is given for a much lower Reynolds number ( $Re = 1.68 \times 10^6$ ). In turn, the  $(L/D)_{\max}$  value is higher for the turbulent than for the laminar case. Note from Fig. 10.16 that

---

[page 855](#)

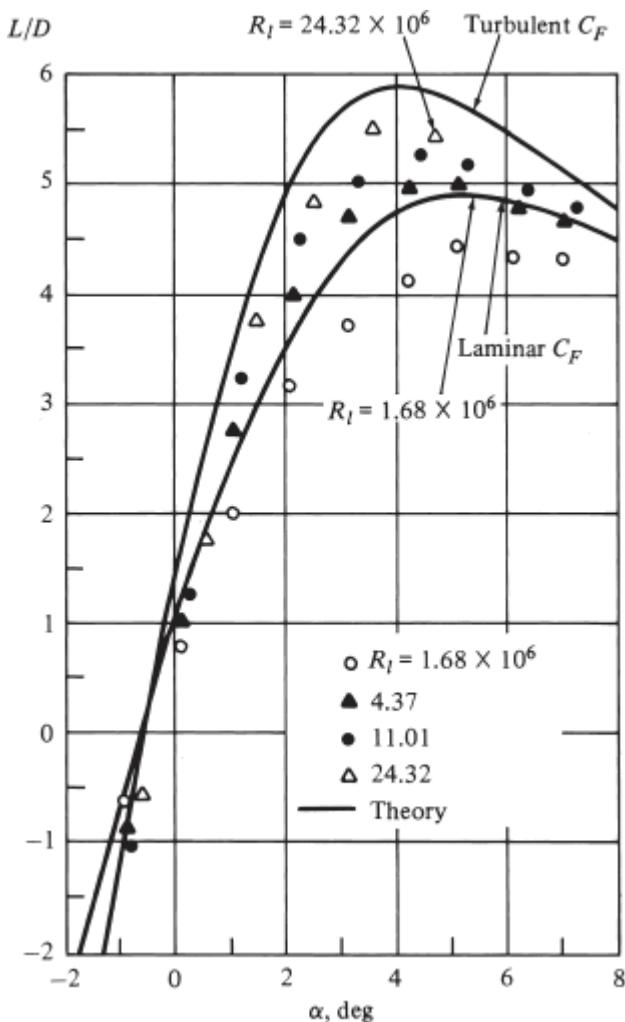

**Figure 10.16** Lift-to-drag ratio for the hypersonic transport configuration shown in Fig. 10.14.  $M_\infty = 8$ .


(Source: *Wind tunnel data and theoretical curves from J. A. Penlund et al., Wall Temperature Effects on the Aerodynamics of a Hydrogen-Fueled Transport Concept in Mach 8 Blowdown and Shock Tunnels, NASA TP 2159, July 1983.*)

1. The  $L/D$  value is greatly affected by the Reynolds number.
2. Maximum  $L/D$  occurs in the angle-of-attack range of  $3^\circ$  to  $5^\circ$ .
3. The values of  $(L/D)_{\max}$  range from 4.5 to about 6, depending on the Reynolds number.

A drag polar is given in Fig. 10.17, plotted in the less conventional form of  $C_D$  versus  $C_L^2$ , in which the experimental data are almost linear, indicating that the drag polar equation given by Eq. (6.1c) in the form of

$$C_D = C_{D,0} + r C_L^2 \quad (10.14)$$

is reasonably valid at hypersonic speeds as well.

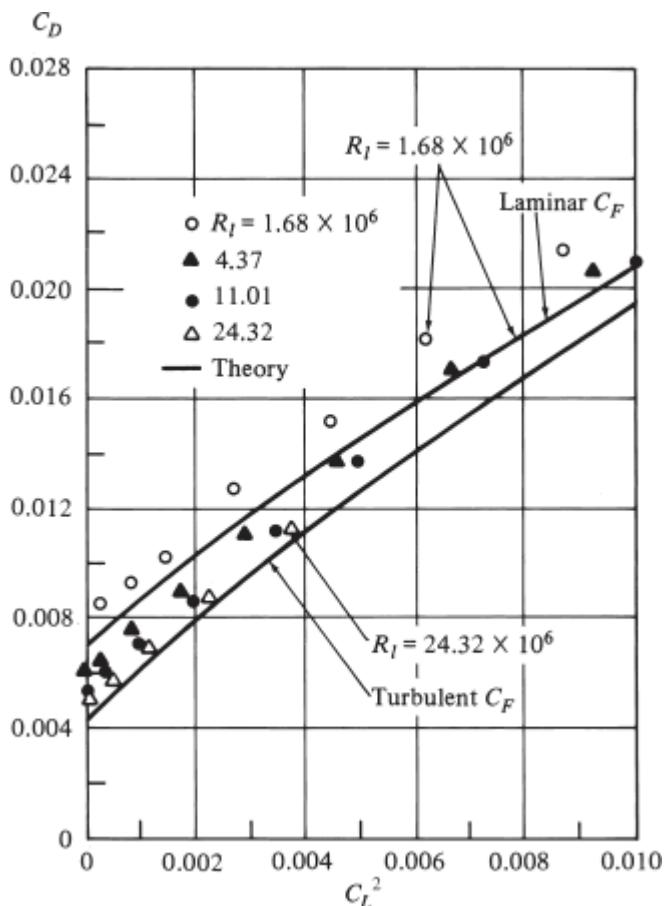

**Figure 10.17** Drag polar for the hypersonic transport configuration shown in Fig. 10.14.  $M_\infty = 8$ .

(Source: *Wind tunnel data and theoretical curves from J. A. Penlund et al., Wall Temperature Effects on the Aerodynamics of a Hydrogen-Fueled Transport Concept in Mach 8 Blowdown and Shock Tunnels, NASA TP 2159, July 1983.*)

**Table 10.1** Maximum lift-to-drag ratio for subsonic and supersonic aircraft

Airplane	$(L/D)_{\max}$
North American P-51	14.6
Grumman F6F Hellcat	12.6
Boeing B-29	16.8
Beech Bonanza	13.8
Grumman A-6E	15.2
North American F-86	15.1
General Dynamics F-111	15.8
Hypersonic transport	6.0

Let us return to a consideration of the lift-to-drag ratio  $L/D$  at [page 857](#) hypersonic speeds. Note from Fig. 10.16 that the value of  $(L/D)_{\max}$  for the hypersonic airplane at Mach 8 is almost 6. Compare this with the typical subsonic airplane values of 14 to 17 (for example, see the  $L/D$  values shown in Figs. 6.44 and 6.46). This is further dramatized by Table 10.1. It is a general trend that as the Mach number increases through the supersonic and hypersonic flight regimes,  $(L/D)_{\max}$  decreases. In fact, for  $M_{\infty} > 1$ , there is a general correlation for  $(L/D)_{\max}$  based on actual flight vehicle experience:


$$(L/D)_{\max} = \frac{4(M_{\infty} + 3)}{M_{\infty}} \quad (10.15)$$

This equation, which was first advanced in England by the famous airplane designer and aerodynamicist D. Kuchemann in 1978, is shown as the solid curve in Fig. 10.18, a plot of  $(L/D)_{\max}$  versus free-stream Mach number across the supersonic and hypersonic regimes. Figure 10.18 also shows a shotgunlike scatter of open-circle data points corresponding to a variety of hypersonic vehicle designs;  $(L/D)_{\max}$  was obtained from wind tunnel tests, actual flight data, or theory. Details about these data points can be obtained from the references by Bowcutt and Anderson and by Corda and Anderson, listed in the bibliography at the end of this chapter.

The message from the solid curve and the open-circle data points in Fig. 10.18 is that high  $L/D$  is difficult to obtain at hypersonic speeds and that  $L/D$  decreases as Mach number increases. This natural phenomenon is due to the high drag associated with the strong shock waves and strong viscous effects encountered at hypersonic speeds. In some sense, the solid curve in Fig. 10.18 might be construed as a type of  $L/D$  barrier that is hard to break at hypersonic speeds. Also note that although  $L/D$  decreases with Mach number, at high Mach numbers the rate of decrease becomes small; that is, the curve plateaus, and the variation of  $L/D$  with  $M_{\infty}$  becomes very

small. Thus, at high Mach number,  $L/D$  becomes almost independent of  $M_\infty$ . This *Mach number-independence principle*, a basic principle of hypersonic aerodynamics, describes the fact that certain aerodynamic coefficients, such as lift, drag, moment, and pressure coefficients, become relatively independent of Mach number when  $M_\infty$  is high enough ( $M_\infty$  greater than approximately 10). Mach number independence can be theoretically derived from the governing flow equations at hypersonic speeds; see the hypersonic text by Anderson listed in the bibliography.

page 858

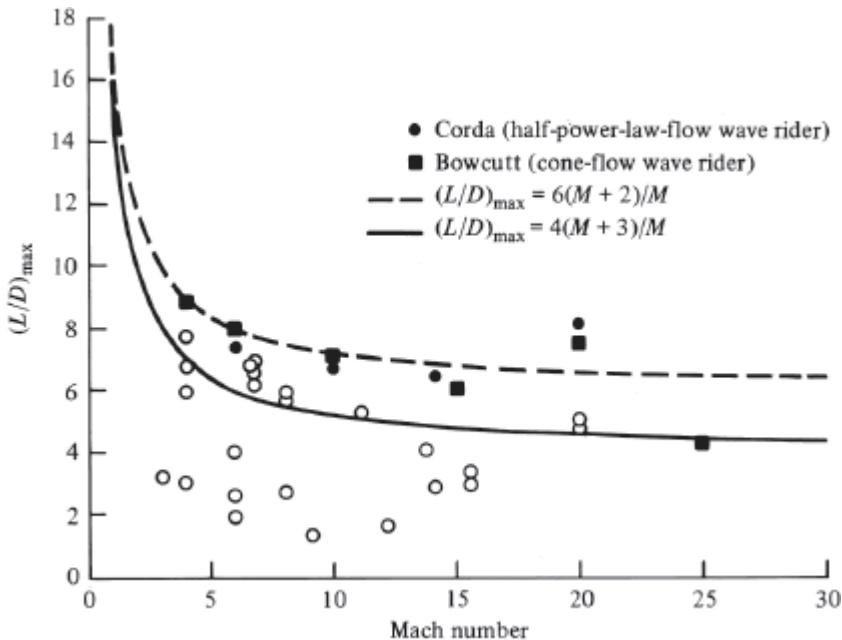

**Figure 10.18** Comparison of the maximum lift-to-drag ratios for various hypersonic configurations. Solid symbols correspond to hypersonic wave riders generated by Corda, Bowcutt, and Anderson (see the papers listed in the bibliography).

Returning to Fig. 10.18, we see that current research is aimed at breaking the  $L/D$  barrier discussed earlier. An example is a class of vehicles called *wave riders*, so named because they are designed to have an attached shock wave along their complete leading edge so that it appears as if the vehicle were riding on top of its shock wave. An example of a modern wave rider shape is shown in Fig. 10.19, generated from the works of Bowcutt, Corda, and Anderson listed in the bibliography. Although this rather complex and unusual shape is just an academic result today (no such


wave riders have actually flown), the high predicted values of  $(L/D)_{\max}$  for wave riders are given in Fig. 10.18 by the solid symbols. Clearly, these theoretical results break the  $L/D$  barrier shown in Fig. 10.18. They are discussed here only as an example of the novel vehicle configurations that must be considered for efficient flight at hypersonic speeds.

As a final note in this section, we mention an important characteristic of any hypersonic airplane design: the necessity to integrate the propulsion system fully with the airframe. For subsonic airplane design, some attention is always paid to the aerodynamic interaction between the engine nacelles and the rest of the airframe. However, this is not a driving aspect of airplane design, and in most subsonic airplanes the location of the engines is distinctly obvious; for example, in Fig. 6.11, the jet aircraft's engine nacelles are clearly evident and stand as a distinct component more or less by themselves. In contrast, at hypersonic speeds, extreme care must be taken to ensure that shock waves from one portion of the airplane, including the propulsion system, do not adversely impinge upon, and interact with, other portions of the airplane. Moreover, the flow that goes through the supersonic combustion ramjet engines has first passed through one or more shock wave systems from the forward portion of the vehicle, and it is necessary to tailor the aerodynamic properties of this air so as to encourage the most efficient engine performance. Therefore, for a hypersonic airplane, the propulsion system and the airframe must be highly integrated. An example appears in Fig. 9.24, which shows an airframe-integrated SCRAMjet engine. In the upper right corner is a hypersonic airplane; and as explained at the end of Sec. 9.7, the entire undersurface of the complete airplane represents the whole SCRAMjet engine. In another example (Fig. 10.20), three typical generic configurations are compared: a Mach 3 supersonic transport, a Mach 6 hypersonic transport, and a Mach 12 hypersonic cruise vehicle. Note that the supersonic airplane (Fig. 10.20a) still has fairly distinct propulsion nacelles and that none of the engine exhaust is designed to touch the airframe. In contrast, the Mach 6 hypersonic transport (Fig. 10.20b) has a more fully integrated propulsion system, where the rear part of the airframe acts as part of the engine nozzle expansion. Also, the wing and fuselage are more fully integrated, the wings being less distinct than for the Mach 3 airplane; that is, the Mach 6 airplane is more of a blended wing–body configuration than the supersonic airplane. At Mach 12 (Fig. 10.20c), these features are even more pronounced; the

undersurface area of the airframe exposed to the engine exhaust is much greater, and the engine is much more an integral part of the airframe. Because the wings have become much smaller, the Mach 12 vehicle is more like a *lifting body* than a wing–body combination. Obviously, the design of hypersonic vehicles is a marked departure from conventional airplane design, and this will pose many interesting challenges for the aerospace engineers of the future.


---

page 859

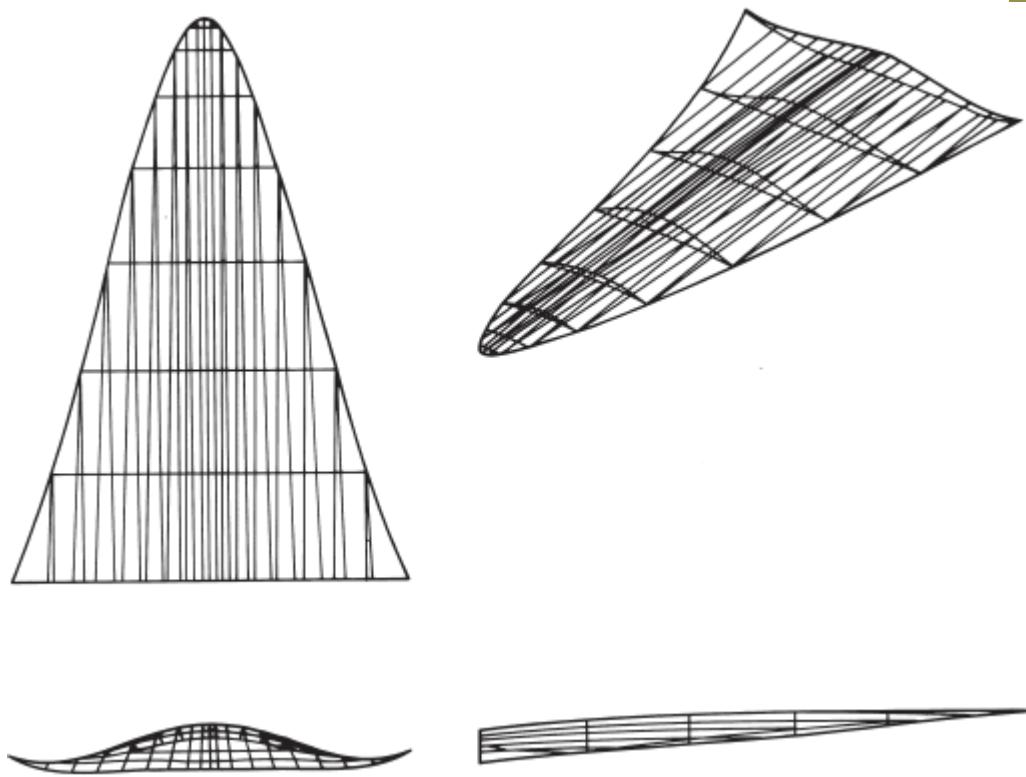

**Figure 10.19** A typical wave rider configuration, designed for  $M_\infty = 6$ .

(Source: Bowcutt and Anderson. Copyright © by AIAA. All rights reserved. Used with permission.)

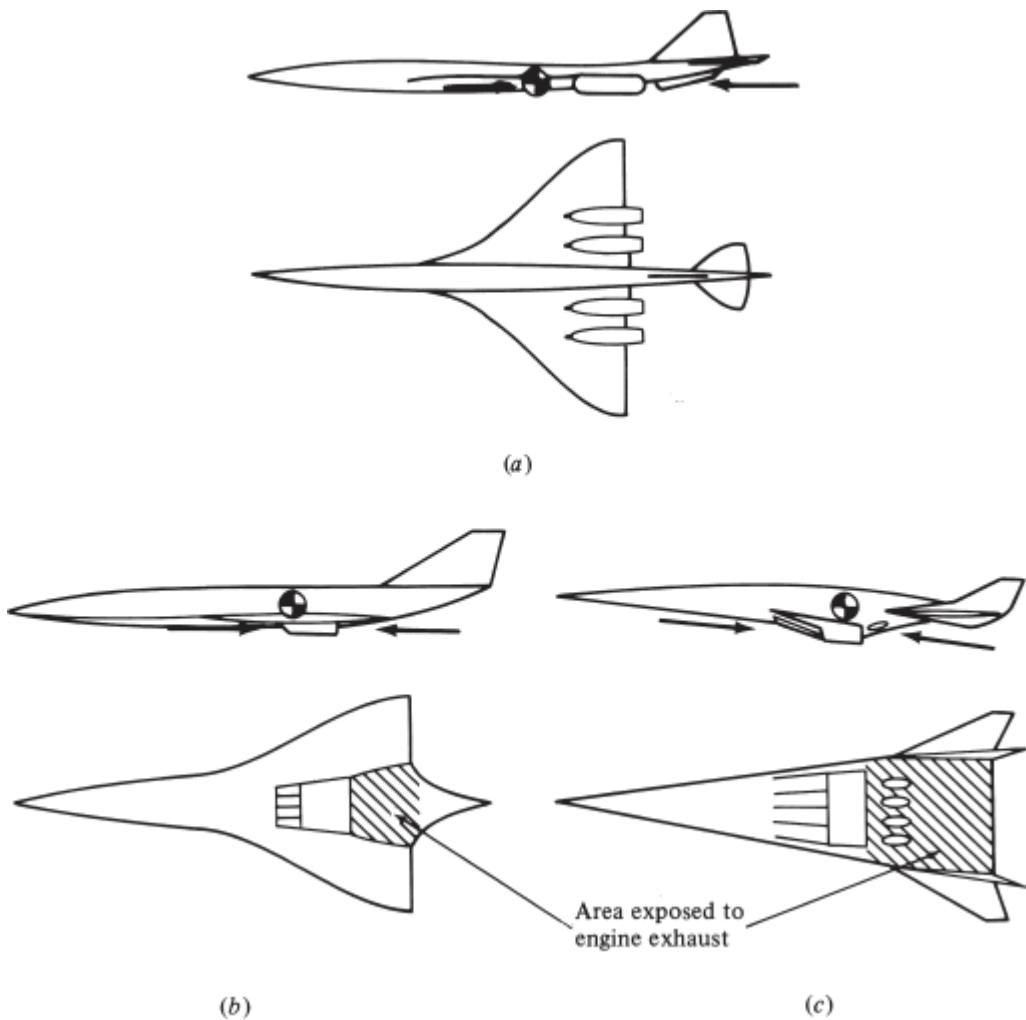

**Figure 10.20** Comparison of high-speed airplane design from Mach 3 to 12. (a) Supersonic transport ( $M = 3$ ), ram drag = 54,500 lb, gross thrust = 123,000 lb. (b) Hypersonic transport ( $M = 6$ ), ram drag = 220,000 lb, gross thrust = 330,000 lb. (c) Hypersonic cruise vehicle ( $M = 12$ ), ram drag = 1,950,000 lb, gross thrust = 2,100,000 lb.

(Source: Johnston et al. Copyright © by Aerospace America. All rights reserved. Used with permission.)

[page 860](#)

### EXAMPLE 10.2

On August 22, 1963, test pilot Joe Walker in the X-15 rocket-powered hypersonic research airplane (Fig. 5.92) set an altitude record of 354,200 ft. At the time of engine burnout, the airplane was climbing through 176,000

ft at a flight velocity of 5600 ft/s, a climb angle of  $32^\circ$ , and an angle of attack of 12 degrees. The aerodynamic lift and drag on the X-15 at these flight conditions were 572 lb and 251.6, respectively. Calculate the lift and drag coefficients at these conditions. Compare these values with typical values for subsonic and supersonic airplanes.

### ■ Solution

The altitude at burnout was 176,000 ft. The standard altitude table in Appendix B only goes to 161,000 ft. Use linear extrapolation to estimate  $\rho_\infty$  at 176,000 ft. From App. B, at 161,000 ft,  $\rho_\infty = 2.3462 \times 10^{-6}$  slug/ft<sup>3</sup>. At 151,000 ft,  $\rho_\infty = 3.4241 \times 10^{-6}$  slug/ft<sup>3</sup>. This gives for the rate of change of  $\rho_\infty$  per foot,

$$\frac{2.3462 \times 10^{-6} - 3.4241 \times 10^{-6}}{10,000} = -1.0778 \times 10^{-10} \text{ slug/ft}^3/\text{ft}$$

Using linear extrapolation from the 161,000 ft point, we have the density at 176,000 ft as

$$\begin{aligned}\rho_\infty &= 2.3462 \times 10^{-6} + (-1.0778 \times 10^{-10})(176,000 - 161,000) \\ &= 2.3462 \times 10^{-6} - 1.6167 \times 10^{-6} = 7.295 \times 10^{-7} \text{ slug/ft}^3\end{aligned}$$

Hence, at the given flight condition,

$$q_\infty = \frac{1}{2} \rho_\infty V_\infty^2 = \frac{1}{2} (7.295 \times 10^{-7}) (5600)^2 = 11.438 \text{ lb/ft}^2$$

Thus,

$$C_L = \frac{L}{q_\infty S} = \frac{572}{(11.438)(200)} = 0.25$$

and

$$C_D = \frac{D}{q_\infty S} = \frac{251.6}{(11.438)(200)} = 0.11$$

#### *Comparison with subsonic airplanes*

The X-15 airfoil is an NACA 66005. Although this airfoil is not included in App. D, data for the closely related NACA 65-006 airfoil are given in App. D. From these data, the subsonic lift slope of the airfoil is  $dC_L/d\alpha =$

0.1 per degree. Correcting the lift slope for the 2.5 aspect ratio finite wing of the X-15, we have from Eq. (5.65), assuming  $e1 = 0.9$

$$a = \frac{a_o}{1 + 57.3 a_o / (\pi e AR)} = \frac{0.1}{1 + 57.3(0.1) / (\pi)(0.9)(2.5)} = 0.055 \text{ per degree}$$

(Note: Equation (5.65) is less accurate as the aspect ratio becomes small. Nevertheless, it is a reasonable approximation for purposes of this example.) Both the NACA 66005 and 65006 airfoils are symmetric; hence, the lift coefficient at zero degrees angle of attack is zero. Thus for the finite wing at 12 degrees angle of attack, a reasonable approximation is

$$C_L = (0.055)12 = 0.66$$

Assume the wing lift coefficient is representative of the lift [page 861](#) coefficient for the airplane. We note that this approximate value of  $CL = 0.66$  is much larger than the hypersonic value of 0.25 obtained for the X-15. Clearly, the lift slope of hypersonic airplanes is greatly diminished compared to that for subsonic airplanes.

In terms of drag coefficient, a typical subsonic value of the zero-lift drag coefficient of a streamlined airplane is 0.015 (see Fig. 6.77). The induced drag coefficient for a subsonic airplane with  $CL = 0.66$  and aspect ratio of 2.5 is given by Eq. (5.57), assuming  $e = 0.9$ ,

$$C_{D,i} = \frac{C_L^2}{\pi e AR} = \frac{(0.66)^2}{\pi(0.9)(2.5)} = 0.062$$

Hence, the total drag coefficient at  $\alpha = 12^\circ$  is

$$C_D = C_{D,0} + C_{D,i} = 0.015 + 0.062 = 0.077$$

This value is considerably lower than that obtained above for the X-15. This result is to be expected; the strong shock waves that occur on the X-15 in hypersonic flight create substantial wave drag that is not physically present on subsonic aircraft.

### *Comparison with supersonic airplanes*

For the lift coefficient let us compare with the supersonic flat plate result given in Eq. (5.50). Assume  $M_\infty = 2.0$ . At the same 12 degree angle of attack used for the X-15, where  $\alpha = \frac{12}{57.3} = 0.21$  rad, we have from Eq. (5.50)

$$C_L = \frac{4\alpha}{(M_\infty^2 - 1)^{\frac{1}{2}}} = \frac{4(0.21)}{(4 - 1)^{\frac{1}{2}}} = \frac{0.84}{1.732}$$

$$C_L = 0.48$$

This supersonic value is larger than the hypersonic value of 0.25 for the X-15, but smaller than the subsonic value of 0.66 obtained earlier. This comparison is consistent with the general trend that the slope of the lift curve for aerodynamic vehicles decreases from the subsonic to the supersonic to the hypersonic flight regimes.

For the drag coefficient, let us compare with actual wind tunnel data for the Lockheed F-104, the Mach 2 fighter shown in Fig. 5.40. At the supersonic lift coefficient of 0.48 obtained above, the drag coefficient from wind tunnel data for the F-104 at Mach 2 is  $C_D = 0.145$ .

This supersonic value for  $CD$  is larger than the value of 0.077 for the subsonic case; this is totally consistent with the increase in drag coefficient caused by wave drag at supersonic speeds, which is not present at subsonic speeds. The supersonic value for  $CD$  is also larger than the value of 0.11 obtained for the hypersonic X-15. This is also consistent with the general trend that as the supersonic and hypersonic Mach number go up,  $CD$  goes down. (This does not mean that the actual drag *force* goes down, just the drag *coefficient*.) The following tabulation of the results helps to see these trends more clearly.

page 862

	Subsonic	Supersonic	Hypersonic
Lift coefficient	0.66	0.48	0.25
Drag coefficient	0.077	0.145	0.11

In the above table, the results tabulated under “hypersonic” are obtained from actual flight data for the X-15, and therefore constitute a solid baseline. The tabulations under “subsonic” and “supersonic,” however, are for the sake of general comparison only. These are given only for the purpose of providing a simple, but approximate comparison with the hypersonic case.

### EXAMPLE 10.3

Using Newtonian theory, calculate the hypersonic lift and drag coefficients for a flat plate at an angle of attack of 12 degrees. Compare with the lift and drag coefficients for the X-15 at the same angle of attack.

### ■ Solution

Equations (10.11) and (10.12) give the Newtonian results for lift and drag coefficients, respectively. From Eq. (10.11),

$$\begin{aligned} C_L &= 2 \sin^2 \alpha \cos \alpha = 2 \sin^2(12^\circ) \cos(12^\circ) \\ &= 2(0.2079)^2(0.9781) = 0.085 \end{aligned}$$

From Eq. (10.12)

$$\begin{aligned} C_D &= 2 \sin^3 \alpha = 2 \sin^3(12^\circ) = 2(0.2079)^3 \\ &= 0.018 \end{aligned}$$

In comparison with  $C_L$  and  $C_D$  for the X-15, we have

	X-15	Newtonian flat plate
$C_L$	0.25	0.085
$C_D$	0.11	0.018

The Newtonian flat plate results for both  $C_L$  and  $C_D$  are considerably lower than the corresponding value for the X-15. Examining Fig. 5.92, the geometry of the X-15 is a far cry from that of a flat plate. The X-15 is a much more blunt shape than a flat plate, with consequent stronger shock waves, and a much different pressure field over the surface of the body.

## 10.5 SUMMARY AND REVIEW

It is fitting to conclude this book on the introduction to flight with a short chapter on hypersonic aerodynamics and hypersonic vehicles because this author feels that hypersonics is going to be an important aspect of flight in the 21st century. Many of the young readers of this book will have the opportunity to participate in the research, design, and testing associated with the new, advanced hypersonic vehicles of the future. Hypersonic aerodynamics is usually presented as a graduate course in most universities, and for good reason: an understanding of the extreme natural phenomena that accompany hypersonic flows requires a certain maturity in aerodynamics certainly not expected at the level of this book. Nevertheless,

it is important to introduce some of the basic ideas of hypersonics in order to contrast this flight regime with others presented in this book. This is the purpose of the present chapter. Let us summarize, as follows.

Hypersonic flow is the region of the high-speed flight spectrum in which the following physical phenomena become important as the Mach number increases to large values:

1. Thin shock layers.
2. Entropy layers.
3. Viscous interactions.
4. High-temperature flow.
5. Low-density flow.

---

page 863

---

Depending on the vehicle size, shape, and altitude, some of these hypersonic phenomena may occur at Mach numbers less than 5, whereas others may occur at Mach numbers greater than 5. As a rule of thumb only, hypersonic flow may be considered as flow where  $M > 5$ .

A convenient and sometimes reasonably accurate formula for predicting pressure distribution on the surface of hypersonic vehicles is the Newtonian sine-squared law:

$$C_p = 2 \sin^2 \theta \quad \text{original form} \quad (10.5)$$

$$C_p = C_{p,\max} \sin^2 \theta \quad \text{modified form} \quad (10.6)$$

Here  $C_{p,\max}$  is the pressure coefficient at a stagnation point and  $\theta$  is the angle between a tangent at a given point on the surface and the free-stream direction.

Aerodynamic characteristics of hypersonic vehicles include the following:

1. Variation of  $C_L$  with angle of attack is nonlinear.
2. Maximum  $C_L$  usually occurs at a very high angle of attack,  $\alpha \approx 55^\circ$  or so.
3. Values of  $(L/D)_{\max}$  decrease as  $M_\infty$  increases. Hypersonic vehicles have lower values of  $(L/D)_{\max}$  than do subsonic and supersonic vehicles.

## Bibliography

- Anderson, John D., Jr. *Hypersonic and High Temperature Gas Dynamics*, 3rd ed. American Institute of Aeronautics and Astronautics, Reston, VA, 2019.
- Bowcutt, Kevin G., and John D. Anderson, Jr. *Viscous Optimized Hypersonic Waveriders*. AIAA Paper 87-0272, 1987.
- Corda, Stephen, and John D. Anderson, Jr. *Viscous Optimized Hypersonic Waveriders Designed from Axisymmetric Flow Fields*. AIAA Paper 88-0369, 1988.
- Hayes, Wallace D., and Ronald F. Probstein. *Hypersonic Flow Theory*. Academic Press, New York, 1959.
- Johnston, Patrick J., Allen H. Whitehead, Jr., and Gary T. Chapman. “Fitting Aerodynamic and Propulsion into the Puzzle.” *Aerospace America*, vol. 25, no. 9, September 1987, pp. 32–37.

## Problems

- 10.1** Consider a laminar boundary layer on a flat plate. At the trailing edge of the plate, with a free-stream Mach number of 2, the boundary layer thickness is 0.3 in. Assuming that the Reynolds number is held constant, calculate the boundary layer thickness for a Mach number of 20.
- 10.2** Consider a hypersonic vehicle flying at Mach 20 at a [page 864](#) standard altitude of 59 km. Calculate the air temperature at a stagnation point on this vehicle. Comment on the accuracy of your answer.
- 10.3** Assume that the nose of the Space Shuttle is spherical, with a nose radius of 1 ft. At Mach 18, calculate (a) the pressure coefficient at the stagnation point and (b) the pressure coefficient at a distance of 6 in away from the stagnation point measured along the surface.
- 10.4** Consider an infinitely thin, flat plate. Using Newtonian theory, show that  $C_L \max = 0.77$  and that it occurs at  $\alpha = 54.7^\circ$ .
- 10.5** Consider hypersonic flow over an infinitely thin, flat [page 865](#) plate. The zero-lift drag coefficient is denoted by  $C_D 0$ . (Note that the

zero-lift drag for a flat plate is entirely due to skin friction.) Consider that the wave drag coefficient is given by the Newtonian result for drag coefficient—that is, by Eq. (10.12). Also assume that the lift coefficient is given by the Newtonian result in Eq. (10.11). We wish to examine some results associated with  $(L/D)_{\max}$  for this flat plate. Because  $(L/D)_{\max}$  occurs at a small angle of attack, make the assumption of *small*  $\alpha$  in Eqs. (10.11) and (10.12). Under these conditions, show that at maximum  $L/D$ , (a)  $(L/D)_{\max} = 0.67/C_{D,0}^{1/3}$  and occurs at  $\alpha = C_{D,0}^{1/3}$ ; and (b) the wave drag coefficient =  $2C_{D,0}$ .

## Standard Atmosphere, SI Units

Altitude				
$h_G$ , m	$h$ , m	Temperature $T$ , K	Pressure $p$ , N/m <sup>2</sup>	Density $\rho$ , kg/m <sup>3</sup>
-5,000	-5,004	320.69	1.7761 + 5	1.9296 + 0
-4,900	-4,904	320.03	1.7587	1.9145
-4,800	-4,804	319.38	1.7400	1.8980
-4,700	-4,703	318.73	1.7215	1.8816
-4,600	-4,603	318.08	1.7031	1.8653
-4,500	-4,503	317.43	1.6848	1.8491
-4,400	-4,403	316.78	1.6667	1.8330
-4,300	-4,303	316.13	1.6488	1.8171
-4,200	-4,203	315.48	1.6311	1.8012
-4,100	-4,103	314.83	1.6134	1.7854
-4,000	-4,003	314.18	1.5960 + 5	1.7698 + 0
-3,900	-3,902	313.53	1.5787	1.7542
-3,800	-3,802	312.87	1.5615	1.7388
-3,700	-3,702	212.22	1.5445	1.7234
-3,600	-3,602	311.57	1.5277	1.7082
-3,500	-3,502	310.92	1.5110	1.6931
-3,400	-3,402	310.27	1.4945	1.6780
-3,300	-3,302	309.62	1.4781	1.6631
-3,200	-3,202	308.97	1.4618	1.6483
-3,100	-3,102	308.32	1.4457	1.6336
-3,000	-3,001	307.67	1.4297 + 5	1.6189 + 0
-2,900	-2,901	307.02	1.4139	1.6044
-2,800	-2,801	306.37	1.3982	1.5900
-2,700	-2,701	305.72	1.3827	1.5757
-2,600	-2,601	305.07	1.3673	1.5615
-2,500	-2,501	304.42	1.3521	1.5473
-2,400	-2,401	303.77	1.3369	1.5333
-2,300	-2,301	303.12	1.3220	1.5194
-2,200	-2,201	302.46	1.3071	1.5056
-2,100	-2,101	301.81	1.2924	1.4918

Altitude				
$h_G$ , m	$h$ , m	Temperature $T$ , K	Pressure $p$ , N/m <sup>2</sup>	Density $\rho$ , kg/m <sup>3</sup>
-2,000	-2,001	301.16	1.2778 + 5	1.4782 + 0
-1,900	-1,901	300.51	1.2634	1.4646
-1,800	-1,801	299.86	1.2491	1.4512
-1,700	-1,701	299.21	1.2349	1.4379
-1,600	-1,600	298.56	1.2209	1.4246
-1,500	-1,500	297.91	1.2070	1.4114
-1,400	-1,400	297.26	1.1932	1.3984
-1,300	-1,300	296.61	1.1795	1.3854
-1,200	-1,200	295.96	1.1660	1.3725
-1,100	-1,100	295.31	1.1526	1.3597
-1,000	-1,000	294.66	1.1393 + 5	1.3470 + 0
-900	-900	294.01	1.1262	1.3344
-800	-800	293.36	1.1131	1.3219
-700	-700	292.71	1.1002	1.3095
-600	-600	292.06	1.0874	1.2972
-500	-500	291.41	1.0748	1.2849
-400	-400	290.76	1.0622	1.2728
-300	-300	290.11	1.0498	1.2607
-200	-200	289.46	1.0375	1.2487
-100	-100	288.81	1.0253	1.2368
0	0	288.16	1.01325 + 5	1.2250 + 0
100	100	287.51	1.0013	1.2133
200	200	286.86	9.8945 + 4	1.2071
300	300	286.21	9.7773	1.1901
400	400	285.56	9.6611	1.1787
500	500	284.91	9.5461	1.1673
600	600	284.26	9.4322	1.1560
700	700	283.61	9.3194	1.1448
800	800	282.96	9.2077	1.1337
900	900	282.31	9.0971	1.1226
1,000	1,000	281.66	8.9876 + 4	1.1117 + 0
1,100	1,100	281.01	8.8792	1.1008
1,200	1,200	280.36	8.7718	1.0900
1,300	1,300	279.71	8.6655	1.0793
1,400	1,400	279.06	8.5602	1.0687
1,500	1,500	278.41	8.4560	1.0581
1,600	1,600	277.76	8.3527	1.0476
1,700	1,700	277.11	8.2506	1.0373
1,800	1,799	276.46	8.1494	1.0269
1,900	1,899	275.81	8.0493	1.0167
2,000	1,999	275.16	7.9501 + 4	1.0066 + 0
2,100	2,099	274.51	7.8520	9.9649 - 1
2,200	2,199	273.86	7.7548	9.8649
2,300	2,299	273.22	7.6586	9.7657
2,400	2,399	272.57	7.5634	9.6673
2,500	2,499	271.92	7.4692	9.5696

Altitude					
$h_G$ , m	$h$ , m	Temperature $T$ , K	Pressure $p$ , N/m <sup>2</sup>	Density $\rho$ , kg/m <sup>3</sup>	
2,600	2,599	271.27	7.3759	9.4727	
2,700	2,699	270.62	7.2835	9.3765	
2,800	2,799	269.97	7.1921	9.2811	
2,900	2,899	269.32	7.1016	9.1865	
3,000	2,999	268.67	7.0121 + 4	9.0926 – 1	
3,100	3,098	268.02	6.9235	8.9994	
3,200	3,198	267.37	6.8357	8.9070	
3,300	3,298	266.72	6.7489	8.8153	
3,400	3,398	266.07	6.6630	8.7243	
3,500	3,498	265.42	6.5780	8.6341	
3,600	3,598	264.77	6.4939	8.5445	
3,700	3,698	264.12	6.4106	8.4557	
3,800	3,798	263.47	6.3282	8.3676	
3,900	3,898	262.83	6.2467	8.2802	
4,000	3,997	262.18	6.1660 + 4	8.1935 – 1	
4,100	4,097	261.53	6.0862	8.1075	
4,200	4,197	260.88	6.0072	8.0222	
4,300	4,297	260.23	5.9290	7.9376	
4,400	4,397	259.58	5.8517	7.8536	
4,500	4,497	258.93	5.7752	7.7704	
4,600	4,597	258.28	5.6995	7.6878	
4,700	4,697	257.63	5.6247	7.6059	
4,800	4,796	256.98	5.5506	7.5247	
4,900	4,896	256.33	5.4773	7.4442	
5,000	4,996	255.69	5.4048 + 4	7.3643 – 1	
5,100	5,096	255.04	5.3331	7.2851	
5,200	5,196	254.39	5.2621	7.2065	
5,400	5,395	253.09	5.1226	7.0513	
5,500	5,495	252.44	5.0539	6.9747	
5,600	5,595	251.79	4.9860	6.8987	
5,700	5,695	251.14	4.9188	6.8234	
5,800	5,795	250.49	4.8524	6.7486	
5,900	5,895	249.85	4.7867	6.6746	
6,000	5,994	249.20	4.7217 + 4	6.6011 – 1	
6,100	6,094	248.55	4.6575	6.5283	
6,200	6,194	247.90	4.5939	6.4561	
6,300	6,294	247.25	4.5311	6.3845	
6,400	6,394	246.60	4.4690	6.3135	
6,500	6,493	245.95	4.4075	6.2431	
6,600	6,593	245.30	4.3468	6.1733	
6,700	6,693	244.66	4.2867	6.1041	
6,800	6,793	244.01	4.2273	6.0356	
6,900	6,893	243.36	4.1686	5.9676	

Altitude				
<i>h<sub>G</sub></i> , m	<i>h</i> , m	Temperature <i>T</i> , K	Pressure <i>p</i> , N/m <sup>2</sup>	Density <i>ρ</i> , kg/m <sup>3</sup>
7,000	6,992	242.71	4.1105 + 4	5.9002 – 1
7,100	7,092	242.06	4.0531	5.8334
7,200	7,192	241.41	3.9963	5.7671
7,300	7,292	240.76	3.9402	5.7015
7,400	7,391	240.12	3.8848	5.6364
7,500	7,491	239.47	3.8299	5.5719
7,600	7,591	238.82	3.7757	5.5080
7,700	7,691	238.17	3.7222	5.4446
7,800	7,790	237.52	3.6692	5.3818
7,900	7,890	236.87	3.6169	5.3195
8,000	7,990	236.23	3.5651 + 4	5.2578 – 1
8,100	8,090	235.58	3.5140	5.1967
8,200	8,189	234.93	3.4635	5.1361
8,300	8,289	234.28	3.4135	5.0760
8,400	8,389	233.63	3.3642	5.0165
8,500	8,489	232.98	3.3154	4.9575
8,600	8,588	232.34	3.2672	4.8991
8,700	8,688	231.69	3.2196	4.8412
8,800	8,788	231.04	3.1725	4.7838
8,900	8,888	230.39	3.1260	4.7269
9,000	8,987	229.74	3.0800 + 4	4.6706 – 1
9,100	9,087	229.09	3.0346	4.6148
9,200	9,187	228.45	2.9898	4.5595
9,300	9,286	227.80	2.9455	4.5047
9,400	9,386	227.15	2.9017	4.4504
9,500	9,486	226.50	2.8584	4.3966
9,600	9,586	225.85	2.8157	4.3433
9,700	9,685	225.21	2.7735	4.2905
9,800	9,785	224.56	2.7318	4.2382
9,900	9,885	223.91	2.6906	4.1864
10,000	9,984	223.26	2.6500 + 4	4.1351 – 1
10,100	10,084	222.61	2.6098	4.0842
10,200	10,184	221.97	2.5701	4.0339
10,300	10,283	221.32	2.5309	3.9840
10,400	10,383	220.67	2.4922	3.9346
10,500	10,483	220.02	2.4540	3.8857
10,600	10,582	219.37	2.4163	3.8372
10,700	10,682	218.73	2.3790	3.7892
10,800	10,782	218.08	2.3422	3.7417
10,900	10,881	217.43	2.3059	3.6946
11,000	10,981	216.78	2.2700 + 4	3.6480 – 1
11,100	11,081	216.66	2.2346	3.5932
11,200	11,180	216.66	2.1997	3.5371
11,300	11,280	216.66	2.1654	3.4820
11,400	11,380	216.66	2.1317	3.4277

Altitude					
<i>h<sub>G</sub></i> , m	<i>h</i> , m	Temperature <i>T</i> , K	Pressure <i>p</i> , N/m <sup>2</sup>	Density <i>ρ</i> , kg/m <sup>3</sup>	
11,500	11,479	216.66	2.0985	3.3743	
11,600	11,579	216.66	2.0657	3.3217	
11,700	11,679	216.66	2.0335	3.2699	
11,800	11,778	216.66	2.0018	3.2189	
11,900	11,878	216.66	1.9706	3.1687	
12,000	11,977	216.66	1.9399 + 4	3.1194 – 1	
12,100	12,077	216.66	1.9097	3.0707	
12,200	12,177	216.66	1.8799	3.0229	
12,300	12,276	216.66	1.8506	2.9758	
12,400	12,376	216.66	1.8218	2.9294	
12,500	12,475	216.66	1.7934	2.8837	
12,600	12,575	216.66	1.7654	2.8388	
12,700	12,675	216.66	1.7379	2.7945	
12,800	12,774	216.66	1.7108	2.7510	
12,900	12,874	216.66	1.6842	2.7081	
13,000	12,973	216.66	1.6579 + 4	2.6659 – 1	
13,100	13,073	216.66	1.6321	2.6244	
13,200	13,173	216.66	1.6067	2.5835	
13,300	13,272	216.66	1.5816	2.5433	
13,400	13,372	216.66	1.5570	2.5036	
13,500	13,471	216.66	1.5327	2.4646	
13,600	13,571	216.66	1.5089	2.4262	
13,700	13,671	216.66	1.4854	2.3884	
13,800	13,770	216.66	1.4622	2.3512	
13,900	13,870	216.66	1.4394	2.3146	
14,000	13,969	216.66	1.4170 + 4	2.2785 – 1	
14,100	14,069	216.66	1.3950	2.2430	
14,200	14,168	216.66	1.3732	2.2081	
14,300	14,268	216.66	1.3518	2.1737	
14,400	14,367	216.66	1.3308	2.1399	
14,500	14,467	216.66	1.3101	2.1065	
14,600	14,567	216.66	1.2896	2.0737	
14,700	14,666	216.66	1.2696	2.0414	
14,800	14,766	216.66	1.2498	2.0096	
14,900	14,865	216.66	1.2303	1.9783	
15,000	14,965	216.66	1.2112 + 4	1.9475 – 1	
15,100	15,064	216.66	1.1923	1.9172	
15,200	15,164	216.66	1.1737	1.8874	
15,300	15,263	216.66	1.1555	1.8580	
15,400	15,363	216.66	1.1375	1.8290	
15,500	15,462	216.66	1.1198	1.8006	
15,600	15,562	216.66	1.1023	1.7725	
15,700	15,661	216.66	1.0852	1.7449	
15,800	15,761	216.66	1.0683	1.7178	
15,900	15,860	216.66	1.0516	1.6910	

Altitude				
$h_G$ , m	$h$ , m	Temperature $T$ , K	Pressure $p$ , N/m <sup>2</sup>	Density $\rho$ , kg/m <sup>3</sup>
16,000	15,960	216.66	1.0353 + 4	1.6647 – 1
16,100	16,059	216.66	1.0192	1.6388
16,200	16,159	216.66	1.0033	1.6133
16,300	16,258	216.66	9.8767 + 3	1.5882
16,400	16,358	216.66	9.7230	1.5634
16,500	16,457	216.66	9.5717	1.5391
16,600	16,557	216.66	9.4227	1.5151
16,700	16,656	216.66	9.2760	1.4916
16,800	16,756	216.66	9.1317	1.4683
16,900	16,855	216.66	8.9895	1.4455
17,000	16,955	216.66	8.8496 + 3	1.4230 – 1
17,100	17,054	216.66	8.7119	1.4009
17,200	17,154	216.66	8.5763	1.3791
17,300	17,253	216.66	8.4429	1.3576
17,400	17,353	216.66	8.3115	1.3365
17,500	17,452	216.66	8.1822	1.3157
17,600	17,551	216.66	8.0549	1.2952
17,700	17,651	216.66	7.9295	1.2751
17,800	17,750	216.66	7.8062	1.2552
17,900	17,850	216.66	7.6847	1.2357
18,000	17,949	216.66	7.5652 + 3	1.2165 – 1
18,100	18,049	216.66	7.4475	1.1975
18,200	18,148	216.66	7.3316	1.1789
18,300	18,247	216.66	7.2175	1.1606
18,400	18,347	216.66	7.1053	1.1425
18,500	18,446	216.66	6.9947	1.1247
18,600	18,546	216.66	6.8859	1.1072
18,700	18,645	216.66	6.7788	1.0900
18,800	18,745	216.66	6.6734	1.0731
18,900	18,844	216.66	6.5696	1.0564
19,000	18,943	216.66	6.4674 + 3	1.0399 – 1
19,100	19,043	216.66	6.3668	1.0238
19,200	19,142	216.66	6.2678	1.0079
19,300	19,242	216.66	6.1703	9.9218 – 2
19,400	19,341	216.66	6.0744	9.7675
19,500	19,440	216.66	5.9799	9.6156
19,600	19,540	216.66	5.8869	9.4661
19,700	19,639	216.66	5.7954	9.3189
19,800	19,739	216.66	5.7053	9.1740
19,900	19,838	216.66	5.6166	9.0313
20,000	19,937	216.66	5.5293 + 3	8.8909 – 2
20,200	20,136	216.66	5.3587	8.6166
20,400	20,335	216.66	5.1933	8.3508
20,600	20,533	216.66	5.0331	8.0931
20,800	20,732	216.66	4.8779	7.8435
21,000	20,931	216.66	4.7274	7.6015

Altitude				
$h_G$ , m	$h$ , m	Temperature $T$ , K	Pressure $p$ , N/m <sup>2</sup>	Density $\rho$ , kg/m <sup>3</sup>
21,200	21,130	216.66	4.5816	7.3671
21,400	21,328	216.66	4.4403	7.1399
21,600	21,527	216.66	4.3034	6.9197
21,800	21,725	216.66	4.1706	6.7063
22,000	21,924	216.66	4.0420 + 3	6.4995 – 2
22,200	22,123	216.66	3.9174	6.2991
22,400	22,321	216.66	3.7966	6.1049
22,600	22,520	216.66	3.6796	5.9167
22,800	22,719	216.66	3.5661	5.7343
23,000	22,917	216.66	3.4562	5.5575
23,200	23,116	216.66	3.3497	5.3862
23,400	23,314	216.66	3.2464	5.2202
23,600	23,513	216.66	3.1464	5.0593
23,800	23,711	216.66	3.0494	4.9034
24,000	23,910	216.66	2.9554 + 3	4.7522 – 2
24,200	24,108	216.66	2.8644	4.6058
24,400	24,307	216.66	2.7761	4.4639
24,600	24,505	216.66	2.6906	4.3263
24,800	24,704	216.66	2.6077	4.1931
25,000	24,902	216.66	2.5273	4.0639
25,200	25,100	216.96	2.4495	3.9333
25,400	25,299	217.56	2.3742	3.8020
25,600	25,497	218.15	2.3015	3.6755
25,800	25,696	218.75	2.2312	3.5535
26,000	25,894	219.34	2.1632 + 3	3.4359 – 2
26,200	26,092	219.94	2.0975	3.3225
26,400	26,291	220.53	2.0339	3.2131
26,600	26,489	221.13	1.9725	3.1076
26,800	26,687	221.72	1.9130	3.0059
27,000	26,886	222.32	1.8555	2.9077
27,200	27,084	222.91	1.7999	2.8130
27,400	27,282	223.51	1.7461	2.7217
27,600	27,481	224.10	1.6940	2.6335
27,800	27,679	224.70	1.6437	2.5484
28,000	27,877	225.29	1.5949 + 3	2.4663 – 2
28,200	28,075	225.89	1.5477	2.3871
28,400	28,274	226.48	1.5021	2.3106
28,600	28,472	227.08	1.4579	2.2367
28,800	28,670	227.67	1.4151	2.1654
29,000	28,868	228.26	1.3737	2.0966
29,200	29,066	228.86	1.3336	2.0301
29,400	29,265	229.45	1.2948	1.9659
29,600	29,463	230.05	1.2572	1.9039
29,800	29,661	230.64	1.2208	1.8440

Altitude				
$h_G$ , m	$h$ , m	Temperature $T$ , K	Pressure $p$ , N/m <sup>2</sup>	Density $\rho$ , kg/m <sup>3</sup>
30,000	29,859	231.24	1.1855 + 3	1.7861 – 2
30,200	30,057	231.83	1.1514	1.7302
30,400	30,255	232.43	1.1183	1.6762
30,600	30,453	233.02	1.0862	1.6240
30,800	30,651	233.61	1.0552	1.5735
31,000	30,850	234.21	1.0251	1.5278
31,200	31,048	234.80	9.9592 + 2	1.4777
31,400	31,246	235.40	9.6766	1.4321
31,600	31,444	235.99	9.4028	1.3881
31,800	31,642	236.59	9.1374	1.3455
32,000	31,840	237.18	8.8802 + 2	1.3044 – 2
32,200	32,038	237.77	8.6308	1.2646
32,400	32,236	238.78	8.3890	1.2261
32,600	32,434	238.96	8.1546	1.1889
32,800	32,632	239.55	7.9273	1.1529
33,000	32,830	240.15	7.7069	1.1180
33,200	33,028	240.74	7.4932	1.0844
33,400	33,225	241.34	7.2859	1.0518
33,600	33,423	241.93	7.0849	1.0202
33,800	33,621	242.52	6.8898	9.8972 – 3
34,000	33,819	243.12	6.7007 + 2	9.6020 – 3
34,200	34,017	243.71	6.5171	9.3162
34,400	34,215	244.30	6.3391	9.0396
34,600	34,413	244.90	6.1663	8.7720
34,800	34,611	245.49	5.9986	8.5128
35,000	34,808	246.09	5.8359	8.2620
35,200	35,006	246.68	5.6780	8.0191
35,400	35,204	247.27	5.5248	7.7839
35,600	35,402	247.87	5.3760	7.5562
35,800	35,600	248.46	5.2316	7.3357
36,000	35,797	249.05	5.0914 + 2	7.1221 – 3
36,200	35,995	249.65	4.9553	6.9152
36,400	36,193	250.24	4.8232	6.7149
36,600	36,390	250.83	4.6949	6.5208
36,800	36,588	251.42	4.5703	6.3328
37,000	36,786	252.02	4.4493	6.1506
37,200	36,984	252.61	4.3318	5.9741
37,400	37,181	253.20	4.2176	5.8030
37,600	37,379	253.80	4.1067	5.6373
37,800	37,577	254.39	3.9990	5.4767
38,000	37,774	254.98	3.8944 + 2	5.3210 – 3
38,200	37,972	255.58	3.7928	5.1701
38,400	38,169	256.17	3.6940	5.0238
38,600	38,367	256.76	3.5980	4.8820

Altitude				
$h_G$ , m	$h$ , m	Temperature $T$ , K	Pressure $p$ , N/m <sup>2</sup>	Density $\rho$ , kg/m <sup>3</sup>
38,800	38,565	257.35	3.5048	4.7445
39,000	38,762	257.95	3.4141	4.6112
39,200	38,960	258.54	3.3261	4.4819
39,400	39,157	259.13	3.2405	4.3566
39,600	39,355	259.72	3.1572	4.2350
39,800	39,552	260.32	3.0764	4.1171
40,000	39,750	260.91	2.9977 + 2	4.0028 – 3
40,200	39,947	261.50	2.9213	3.8919
40,400	40,145	262.09	2.8470	3.7843
40,600	40,342	262.69	2.7747	3.6799
40,800	40,540	263.28	2.7044	3.5786
41,000	40,737	263.87	2.6361	3.4804
41,200	40,935	264.46	2.5696	3.3850
41,400	41,132	265.06	2.5050	3.2925
41,600	41,300	265.65	2.4421	3.2027
41,800	41,527	266.24	2.3810	3.1156
42,000	41,724	266.83	2.3215 + 2	3.0310 – 3
42,400	41,922	267.43	2.2636	2.9489
42,400	42,119	268.02	2.2073	2.8692
42,600	42,316	268.61	2.1525	2.7918
42,800	42,514	269.20	2.0992	2.7167
43,000	42,711	269.79	2.0474	2.6438
43,200	42,908	270.39	1.9969	2.5730
43,400	43,106	270.98	1.9478	2.5042
43,600	43,303	271.57	1.9000	2.4374
43,800	43,500	272.16	1.8535	2.3726
44,000	43,698	272.75	1.8082 + 2	2.3096 – 3
44,200	43,895	273.34	1.7641	2.2484
44,400	44,092	273.94	1.7212	2.1889
44,600	44,289	274.53	1.6794	2.1312
44,800	44,486	275.12	1.6387	2.0751
45,000	44,684	275.71	1.5991	2.0206
45,200	44,881	276.30	1.5606	1.9677
45,400	45,078	276.89	1.5230	1.9162
45,600	45,275	277.49	1.4865	1.8662
45,800	45,472	278.08	1.4508	1.8177
46,000	45,670	278.67	1.4162 + 2	1.7704 – 3
46,200	45,867	279.26	1.3824	1.7246
46,400	46,064	279.85	1.3495	1.6799
46,600	46,261	280.44	1.3174	1.6366
46,800	46,458	281.03	1.2862	1.5944
47,000	46,655	281.63	1.2558	1.5535
47,200	46,852	282.22	1.2261	1.5136
47,400	47,049	282.66	1.1973	1.4757
47,600	47,246	282.66	1.1691	1.4409
47,800	47,443	282.66	1.1416	1.4070

Altitude				
$h_G$ , m	$h$ , m	Temperature $T$ , K	Pressure $p$ , N/m <sup>2</sup>	Density $\rho$ , kg/m <sup>3</sup>
48,000	47,640	282.66	1.1147 + 2	1.3739 – 3
48,200	47,837	282.66	1.0885	1.3416
48,400	48,034	282.66	1.0629	1.3100
48,600	48,231	282.66	1.0379	1.2792
48,800	48,428	282.66	1.0135	1.2491
49,000	48,625	282.66	9.8961 + 1	1.2197
49,200	48,822	282.66	9.6633	1.1910
49,400	49,019	282.66	9.4360	1.1630
49,600	49,216	282.66	9.2141	1.1357
49,800	49,413	282.66	8.9974	1.1089
50,000	49,610	282.66	8.7858 + 1	1.0829 – 3
50,500	50,102	282.66	8.2783	1.0203
51,000	50,594	282.66	7.8003	9.6140 – 4
51,500	51,086	282.66	7.3499	9.0589
52,000	51,578	282.66	6.9256	8.5360
52,500	52,070	282.66	6.5259	8.0433
53,000	52,562	282.66	6.1493	7.5791
53,500	53,053	282.42	5.7944	7.1478
54,000	53,545	280.21	5.4586	6.7867
54,500	54,037	277.99	5.1398	6.4412
55,000	54,528	275.78	4.8373 + 1	6.1108 – 4
55,500	55,020	273.57	4.5505	5.7949
56,000	55,511	271.36	4.2786	5.4931
56,500	56,002	269.15	4.0210	5.2047
57,000	56,493	266.94	3.7770	4.9293
57,500	56,985	264.73	3.5459	4.6664
58,000	57,476	262.52	3.3273	4.4156
58,500	57,967	260.31	3.1205	4.1763
59,000	58,457	258.10	2.9250	3.9482
59,500	58,948	255.89	2.7403	3.7307

## APPENDIX B

page 877

### Standard Atmosphere, English Engineering Units

Altitude				
$h_G$ , ft	$h$ , ft	Temperature $T$ , °R	Pressure $p$ , lb/ft <sup>2</sup>	Density $\rho$ , slugs/ft <sup>3</sup>
-16,500	-16,513	577.58	3.6588 + 3	3.6905 - 3
-16,000	-16,012	575.79	3.6641	3.7074
-15,500	-15,512	574.00	3.6048	3.6587
-15,000	-15,011	572.22	3.5462	3.6105
-14,500	-14,510	570.43	3.4884	3.5628
-14,000	-14,009	568.65	3.4314	3.5155
-13,500	-13,509	566.86	3.3752	3.4688
-13,000	-13,008	565.08	3.3197	3.4225
-12,500	-12,507	563.29	3.2649	3.3768
-12,000	-12,007	561.51	3.2109	3.3314
-11,500	-11,506	559.72	3.1576 + 3	3.2866 - 3
-11,000	-11,006	557.94	3.1050	3.2422
-10,500	-10,505	556.15	3.0532	3.1983
-10,000	-10,005	554.37	3.0020	3.1548
-9,500	-9,504	552.58	2.9516	3.1118
-9,000	-9,004	550.80	2.9018	3.0693
-8,500	-8,503	549.01	2.8527	3.0272
-8,000	-8,003	547.23	2.8043	2.9855
-7,500	-7,503	545.44	2.7566	2.9443
-7,000	-7,002	543.66	2.7095	2.9035
-6,500	-6,502	541.88	2.6631 + 3	2.8632 - 3
-6,000	-6,002	540.09	2.6174	2.8233
-5,500	-5,501	538.31	2.5722	2.7838
-5,000	-5,001	536.52	2.5277	2.7448
-4,500	-4,501	534.74	2.4839	2.7061
-4,000	-4,001	532.96	2.4406	2.6679
-3,500	-3,501	531.17	2.3980	2.6301

page 878

Altitude				
$h_G$ , ft	$h$ , ft	Temperature $T$ , °R	Pressure $p$ , lb/ft <sup>2</sup>	Density $\rho$ , slugs/ft <sup>3</sup>
-3,000	-3,000	529.39	2.3560	2.5927
-2,500	-2,500	527.60	2.3146	2.5558
-2,000	-2,000	525.82	2.2737	2.5192
-1,500	-1,500	524.04	2.2335 + 3	2.4830 - 3
-1,000	-1,000	522.25	2.1938	2.4473
-500	-500	520.47	2.1547	2.4119
0	0	518.69	2.1162	2.3769
500	500	516.90	2.0783	2.3423
1,000	1,000	515.12	2.0409	2.3081
1,500	1,500	513.34	2.0040	2.2743
2,000	2,000	511.56	1.9677	2.2409
2,500	2,500	509.77	1.9319	2.2079
3,000	3,000	507.99	1.8967	2.1752
3,500	3,499	506.21	1.8619 + 3	2.1429 - 3
4,000	3,999	504.43	1.8277	2.1110
4,500	4,499	502.64	1.7941	2.0794
5,000	4,999	500.86	1.7609	2.0482
5,500	5,499	499.08	1.7282	2.0174
6,000	5,998	497.30	1.6960	1.9869
6,500	6,498	495.52	1.6643	1.9567
7,000	6,998	493.73	1.6331	1.9270
7,500	7,497	491.95	1.6023	1.8975
8,000	7,997	490.17	1.5721	1.8685
8,500	8,497	488.39	1.5423 + 3	1.8397 - 3
9,000	8,996	486.61	1.5129	1.8113
9,500	9,496	484.82	1.4840	1.7833
10,000	9,995	483.04	1.4556	1.7556
10,500	10,495	481.26	1.4276	1.7282
11,000	10,994	479.48	1.4000	1.7011
11,500	11,494	477.70	1.3729	1.6744
12,000	11,993	475.92	1.3462	1.6480
12,500	12,493	474.14	1.3200	1.6219
13,000	12,992	472.36	1.2941	1.5961
13,500	13,491	470.58	1.2687 + 3	1.5707 - 3
14,000	13,991	468.80	1.2436	1.5455
14,500	14,490	467.01	1.2190	1.5207
15,000	14,989	465.23	1.1948	1.4962
15,500	15,488	463.45	1.1709	1.4719
16,000	15,988	461.67	1.1475	1.4480
16,500	16,487	459.89	1.1244	1.4244
17,000	16,986	458.11	1.1017	1.4011
17,500	17,485	456.33	1.0794	1.3781
18,000	17,984	454.55	1.0575	1.3553

Altitude				
$h_G$ , ft	$h$ , ft	Temperature $T$ , °R	Pressure $p$ , lb/ft <sup>2</sup>	Density $\rho$ , slugs/ft <sup>3</sup>
18,500	18,484	452.77	1.0359 + 3	1.3329 – 3
19,000	18,983	450.99	1.0147	1.3107
19,500	19,482	449.21	9.9379 + 2	1.2889
20,000	19,981	447.43	9.7327	1.2673
20,500	20,480	445.65	9.5309	1.2459
21,000	20,979	443.87	9.3326	1.2249
21,500	21,478	442.09	9.1376	1.2041
22,000	21,977	440.32	8.9459	1.1836
22,500	22,476	438.54	8.7576	1.1634
23,000	22,975	436.76	8.5724	1.1435
23,500	23,474	434.98	8.3905 + 2	1.1238 – 3
24,000	23,972	433.20	8.2116	1.1043
24,500	24,471	431.42	8.0359	1.0852
25,000	24,970	429.64	7.8633	1.0663
25,500	25,469	427.86	7.6937	1.0476
26,000	25,968	426.08	7.5271	1.0292
26,500	26,466	424.30	7.3634	1.0110
27,000	26,965	422.53	7.2026	9.9311 – 4
27,500	27,464	420.75	7.0447	9.7544
28,000	27,962	418.97	6.8896	9.5801
28,500	28,461	417.19	6.7373 + 2	9.4082 – 4
29,000	28,960	415.41	6.5877	9.2387
29,500	29,458	413.63	6.4408	9.0716
30,000	29,957	411.86	6.2966	8.9068
30,500	30,455	410.08	6.1551	8.7443
31,000	30,954	408.30	6.0161	8.5841
31,500	31,452	406.52	5.8797	8.4261
32,000	31,951	404.75	5.7458	8.2704
32,500	32,449	402.97	5.6144	8.1169
33,000	32,948	401.19	5.4854	7.9656
33,500	33,446	399.41	5.3589 + 2	7.8165 – 4
34,000	33,945	397.64	5.2347	7.6696
34,500	34,443	395.86	5.1129	7.5247
35,000	34,941	394.08	4.9934	7.3820
35,500	35,440	392.30	4.8762	7.2413
36,000	35,938	390.53	4.7612	7.1028
36,500	36,436	389.99	4.6486	6.9443
37,000	36,934	389.99	4.5386	6.7800
37,500	37,433	389.99	4.4312	6.6196
38,000	37,931	389.99	4.3263	6.4629
38,500	38,429	389.99	4.2240 + 2	6.3100 – 4
39,000	38,927	389.99	4.1241	6.1608
39,500	39,425	389.99	4.0265	6.0150
40,000	39,923	389.99	3.9312	5.8727
40,500	40,422	389.99	3.8382	5.7338

Altitude				
$h_G$ , ft	$h$ , ft	Temperature $T$ , °R	Pressure $p$ , lb/ft <sup>2</sup>	Density $\rho$ , slugs/ft <sup>3</sup>
41,000	40,920	389.99	3.7475	5.5982
41,500	41,418	389.99	3.6588	5.4658
42,000	41,916	389.99	3.5723	5.3365
42,500	42,414	389.99	3.4878	5.2103
43,000	42,912	389.99	3.4053	5.0871
43,500	43,409	389.99	3.3248 + 2	4.9668 - 4
44,000	43,907	389.99	3.2462	4.8493
44,500	44,405	389.99	3.1694	4.7346
45,000	44,903	389.99	3.0945	4.6227
45,500	45,401	389.99	3.0213	4.5134
46,000	45,899	389.99	2.9499	4.4067
46,500	46,397	389.99	2.8801	4.3025
47,000	46,894	389.99	2.8120	4.2008
47,500	47,392	389.99	2.7456	4.1015
48,000	47,890	389.99	2.6807	4.0045
48,500	48,387	389.99	2.2173 + 2	3.9099 - 4
49,000	48,885	389.99	2.5554	3.8175
49,500	49,383	389.99	2.4950	3.7272
50,000	49,880	389.99	2.4361	3.6391
50,500	50,378	389.99	2.3785	3.5531
51,000	50,876	389.99	2.3223	3.4692
51,500	51,373	389.99	2.2674	3.3872
52,000	51,871	389.99	2.2138	3.3072
52,500	52,368	389.99	2.1615	3.2290
53,000	52,866	389.99	2.1105	3.1527
53,500	53,363	389.99	2.0606 + 2	3.0782 - 4
54,000	53,861	389.99	2.0119	3.0055
54,500	54,358	389.99	1.9644	2.9345
55,000	54,855	389.99	1.9180	2.8652
55,500	55,353	389.99	1.8727	2.7975
56,000	55,850	389.99	1.8284	2.7314
56,500	56,347	389.99	1.7853	2.6669
57,000	56,845	389.99	1.7431	2.6039
57,500	57,342	389.99	1.7019	2.5424
58,000	57,839	389.99	1.6617	2.4824
58,500	58,336	389.99	1.6225 + 2	2.4238 - 4
59,000	58,834	389.99	1.5842	2.3665
59,500	59,331	389.99	1.5468	2.3107
60,000	59,828	389.99	1.5103	2.2561
60,500	60,325	389.99	1.4746	2.2028
61,000	60,822	389.99	1.4398	2.1508
61,500	61,319	389.99	1.4058	2.1001
62,000	61,816	389.99	1.3726	2.0505
62,500	62,313	389.99	1.3402	2.0021
63,000	62,810	389.99	1.3086	1.9548

Altitude				
$h_G$ , ft	$h$ , ft	Temperature $T$ , °R	Pressure $p$ , lb/ft <sup>2</sup>	Density $\rho$ , slugs/ft <sup>3</sup>
63,500	63,307	389.99	1.2777 + 2	1.9087 - 4
64,000	63,804	389.99	1.2475	1.8636
64,500	64,301	389.99	1.2181	1.8196
65,000	64,798	389.99	1.1893	1.7767
65,500	65,295	389.99	1.1613	1.7348
66,000	65,792	389.99	1.1339	1.6938
66,500	66,289	389.99	1.1071	1.6539
67,000	66,785	389.99	1.0810	1.6148
67,500	67,282	389.99	1.0555	1.5767
68,000	67,779	389.99	1.0306	1.5395
68,500	68,276	389.99	1.0063 + 2	1.5032 - 4
69,000	68,772	389.99	9.8253 + 1	1.4678
69,500	69,269	389.99	9.5935	1.4331
70,000	69,766	389.99	9.3672	1.3993
70,500	70,262	389.99	9.1462	1.3663
71,000	70,759	389.99	8.9305	1.3341
71,500	74,256	389.99	8.7199	1.3026
72,000	71,752	389.99	8.5142	1.2719
72,500	72,249	389.99	8.3134	1.2419
73,000	72,745	389.99	8.1174	1.2126
73,500	73,242	389.99	7.9259 + 1	1.1840 - 4
74,000	73,738	389.99	7.7390	1.1561
74,500	74,235	389.99	7.5566	1.1288
75,000	74,731	389.99	7.3784	1.1022
75,500	75,228	389.99	7.2044	1.0762
76,000	75,724	389.99	7.0346	1.0509
76,500	76,220	389.99	6.8687	1.0261
77,000	76,717	389.99	6.7068	1.0019
77,500	77,213	389.99	6.5487	9.7829 - 5
78,000	77,709	389.99	6.3944	9.5523
78,500	78,206	389.99	6.2437 + 1	9.3271 - 5
79,000	78,702	389.99	6.0965	9.1073
79,500	79,198	389.99	5.9528	8.8927
80,000	79,694	389.99	5.8125	8.6831
80,500	80,190	389.99	5.6755	8.4785
81,000	80,687	389.99	5.5418	8.2787
81,500	81,183	389.99	5.4112	8.0836
82,000	81,679	389.99	5.2837	7.8931
82,500	82,175	390.24	5.1592	7.7022
83,000	82,671	391.06	5.0979	7.5053
83,500	83,167	391.87	4.9196 + 1	7.3139 - 5
84,000	83,663	392.69	4.8044	7.1277
84,500	84,159	393.51	4.6921	6.9467
85,000	84,655	394.32	4.5827	6.7706
85,500	85,151	395.14	4.4760	6.5994

Altitude				
$h_G$ , ft	$h$ , ft	Temperature $T$ , °R	Pressure $p$ , lb/ft <sup>2</sup>	Density $\rho$ , slugs/ft <sup>3</sup>
86,000	85,647	395.96	4.3721	6.4328
86,500	86,143	396.77	4.2707	6.2708
87,000	86,639	397.59	4.1719	6.1132
87,500	87,134	398.40	4.0757	5.9598
88,000	87,630	399.22	3.9818	5.8106
88,500	88,126	400.04	3.8902 + 1	5.6655 - 5
89,000	88,622	400.85	3.8010	5.5243
89,500	89,118	401.67	3.7140	5.3868
90,000	89,613	402.48	3.6292	5.2531
90,500	90,109	403.30	3.5464	5.1230
91,000	90,605	404.12	3.4657	4.9963
91,500	91,100	404.93	3.3870	4.8730
92,000	91,596	405.75	3.3103	4.7530
92,500	92,092	406.56	3.2354	4.6362
93,000	92,587	407.38	3.1624	4.5525
93,500	93,083	408.19	3.0912 + 1	4.4118 - 5
94,000	93,578	409.01	3.0217	4.3041
94,500	94,074	409.83	2.9539	4.1992
95,000	94,569	410.64	2.8878	4.0970
95,500	95,065	411.46	2.8233	3.9976
96,000	95,560	412.27	2.7604	3.9007
96,500	96,056	413.09	2.6989	3.8064
97,000	96,551	413.90	2.6390	3.7145
97,500	97,046	414.72	2.5805	3.6251
98,000	97,542	415.53	2.5234	3.5379
98,500	98,037	416.35	2.4677 + 1	3.4530 - 5
99,000	98,532	417.16	2.4134	3.3704
99,500	99,028	417.98	2.3603	3.2898
100,000	99,523	418.79	2.3085	3.2114
100,500	100,018	419.61	2.2580	3.1350
101,000	100,513	420.42	2.2086	3.0605
101,500	101,008	421.24	2.1604	2.9879
102,000	101,504	422.05	2.1134	2.9172
102,500	101,999	422.87	2.0675	2.8484
103,000	102,494	423.68	2.0226	2.7812
103,500	102,989	424.50	1.9789 + 1	2.7158 - 5
104,000	103,484	425.31	1.9361	2.6520
104,500	103,979	426.13	1.8944	2.5899
105,000	104,474	426.94	1.8536	2.5293
106,000	105,464	428.57	1.7749	2.4128
107,000	106,454	430.20	1.6999	2.3050
108,000	107,444	431.83	1.6282	2.1967
109,000	108,433	433.46	1.5599	2.0966
110,000	109,423	435.09	1.4947	2.0014
111,000	110,412	436.72	1.4324	1.9109

Altitude				
$h_G$ , ft	$h$ , ft	Temperature $T$ , °R	Pressure $p$ , lb/ft <sup>2</sup>	Density $\rho$ , slugs/ft <sup>3</sup>
112,000	111,402	438.35	1.3730 + 1	1.8247 - 5
113,000	112,391	439.97	1.3162	1.7428
114,000	113,380	441.60	1.2620	1.6649
115,000	114,369	443.23	1.2102	1.5907
116,000	115,358	444.86	1.1607	1.5201
117,000	116,347	446.49	1.1134	1.4528
118,000	117,336	448.11	1.0682	1.3888
119,000	118,325	449.74	1.0250	1.3278
120,000	119,313	451.37	9.8372 + 0	1.2697
121,000	120,302	453.00	9.4422	1.2143
122,000	121,290	454.62	9.0645 + 0	1.1616 - 5
123,000	122,279	456.25	8.7032	1.1113
124,000	123,267	457.88	8.3575	1.0634
125,000	124,255	459.50	8.0267	1.0177
126,000	125,243	461.13	7.7102	9.7410 - 6
127,000	126,231	462.75	7.4072	9.3253
128,000	127,219	464.38	7.1172	8.9288
129,000	128,207	466.01	6.8395	8.5505
130,000	129,195	467.63	6.5735	8.1894
131,000	130,182	469.26	6.3188	7.8449
132,000	131,170	470.88	6.0748 + 0	7.5159 - 6
133,000	132,157	472.51	5.8411	7.2019
134,000	133,145	474.13	5.6171	6.9020
135,000	134,132	475.76	5.4025	6.6156
136,000	135,119	477.38	5.1967	6.3420
137,000	136,106	479.01	4.9995	6.0806
138,000	137,093	480.63	4.8104	5.8309
139,000	138,080	482.26	4.6291	5.5922
140,000	139,066	483.88	4.4552	5.3640
141,000	140,053	485.50	4.2884	5.1460
142,000	141,040	487.13	4.1284 + 0	4.9374 - 6
143,000	142,026	488.75	3.9749	4.7380
144,000	143,013	490.38	3.8276	4.5473
145,000	143,999	492.00	3.6862	4.3649
146,000	144,985	493.62	3.5505	4.1904
147,000	145,971	495.24	3.4202	4.0234
148,000	146,957	496.87	3.2951	3.8636
149,000	147,943	498.49	3.1750	3.7106
150,000	148,929	500.11	3.0597	3.5642
151,000	149,915	501.74	2.9489	3.4241
152,000	150,900	503.36	2.8424 + 0	3.2898 - 6
153,000	151,886	504.98	2.7402	3.1613
154,000	152,871	506.60	2.6419	3.0382
155,000	153,856	508.22	2.5475	2.9202

Altitude				
$h_G$ , ft	$h$ , ft	Temperature $T$ , °R	Pressure $p$ , lb/ft <sup>2</sup>	Density $\rho$ , slugs/ft <sup>3</sup>
156,000	154,842	508.79	2.4566	2.8130
157,000	155,827	508.79	2.3691	2.7127
158,000	156,812	508.79	2.2846	2.6160
159,000	157,797	508.79	2.2032	2.5228
160,000	158,782	508.79	2.1247	2.4329
161,000	159,797	508.79	2.0490	2.3462

## APPENDIX C

page 885

### Symbols and Conversion Factors

#### SYMBOLS

meter, m
kilogram, kg
second, s
kelvin, K
foot, ft
pound force, lb or $lb_f$
pound mass, $lb_m$
degree rankine, °R
newton, N
atmosphere, atm

#### CONVERSION FACTORS

$$1 \text{ ft} = 0.3048 \text{ m}$$

$$1 \text{ slug} = 14.594 \text{ kg}$$

$$1 \text{ slug} = 32.2 \text{ } lb_m$$

$$1 \text{ } lb_m = 0.4536 \text{ kg}$$

$$1 \text{ lb} = 4.448 \text{ N}$$


$$1 \text{ atm} = 2116 \text{ lb/ft}^2 = 1.01 \times 10^5 \text{ N/m}^2$$

$$1 \text{ K} = 1.8^\circ\text{R}$$


## APPENDIX D


page 886


### Airfoil Data

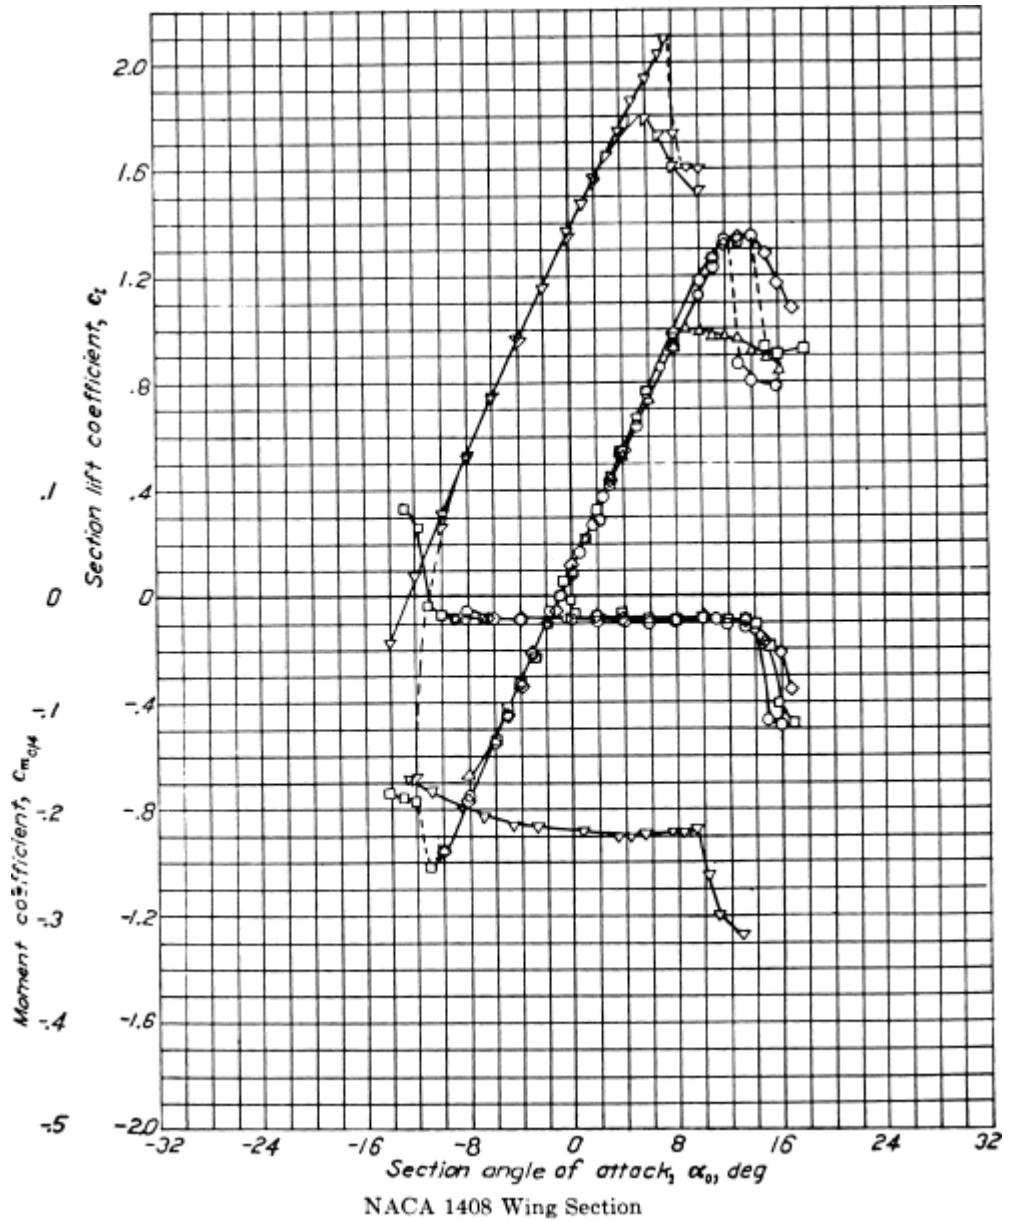


page 887

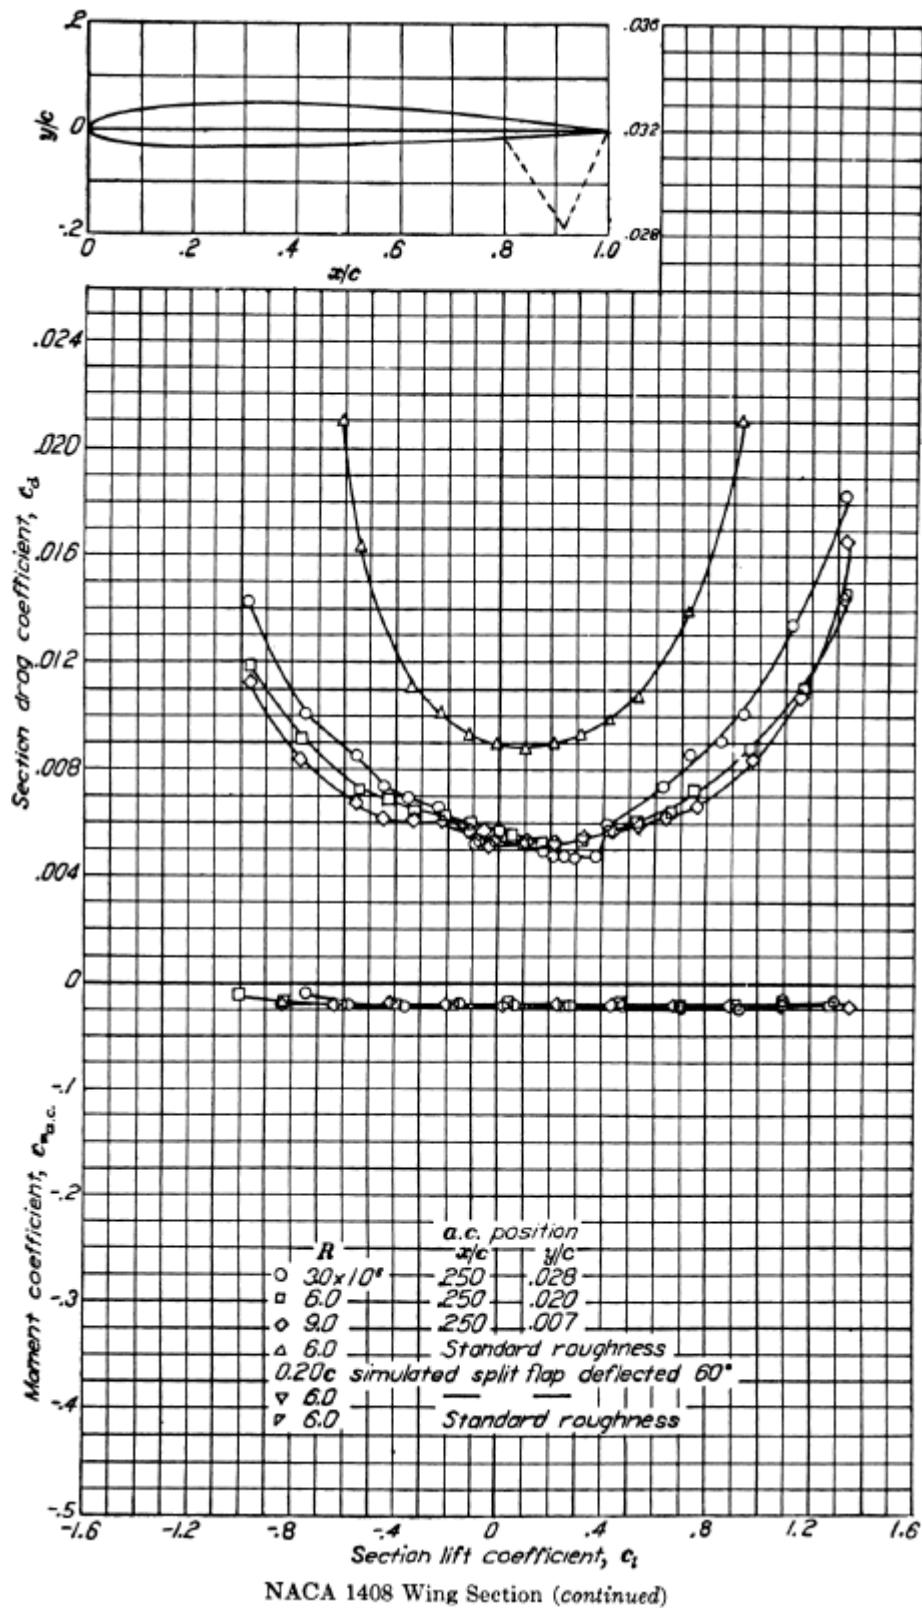


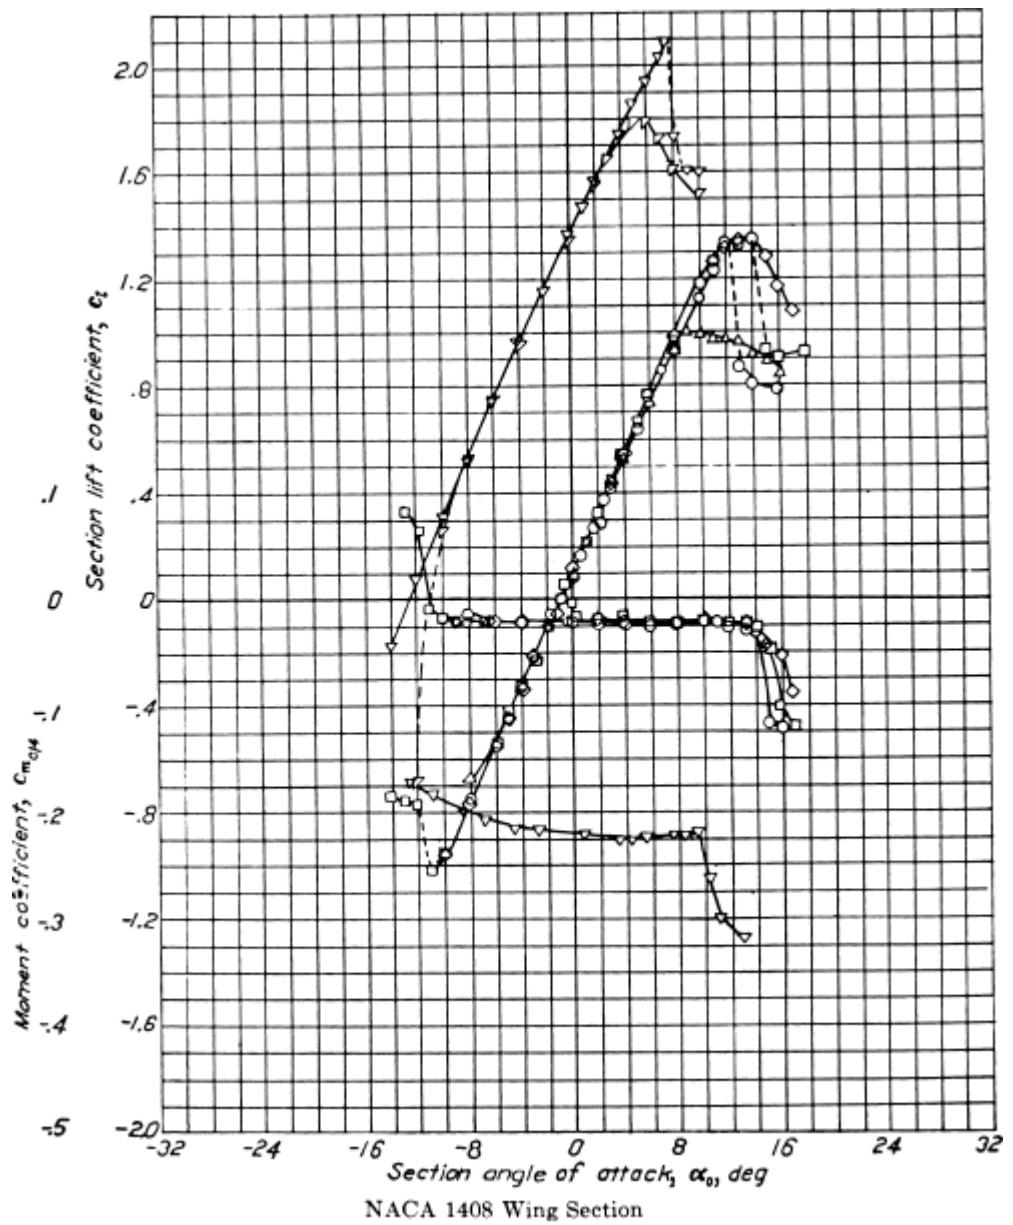


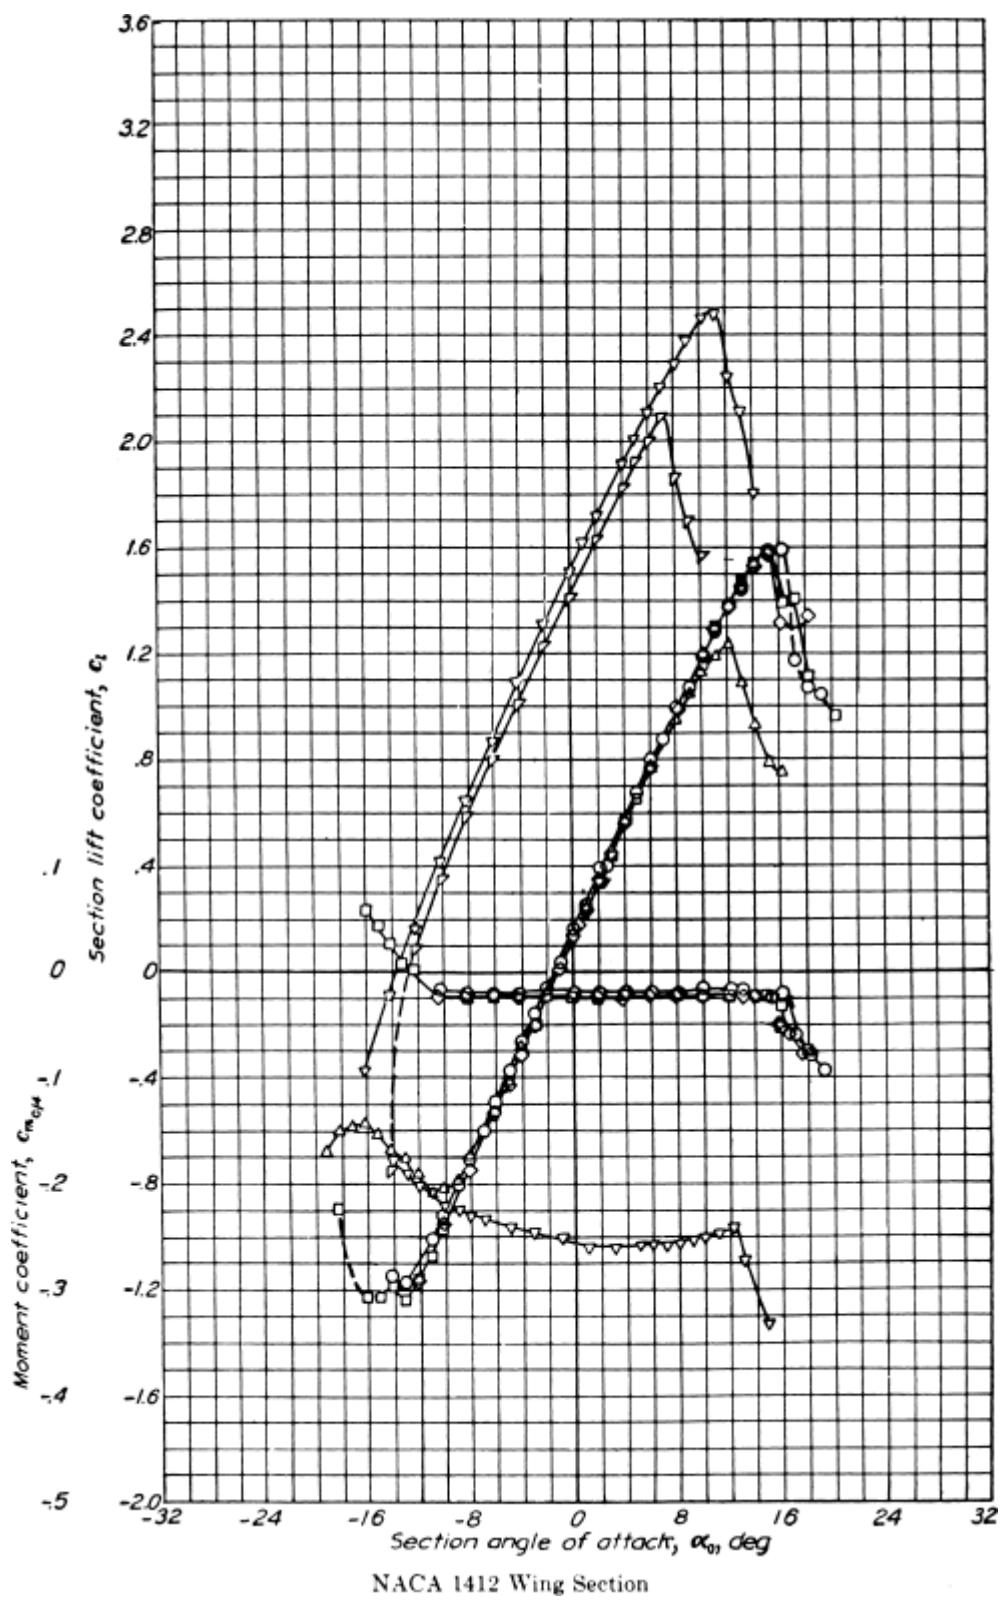


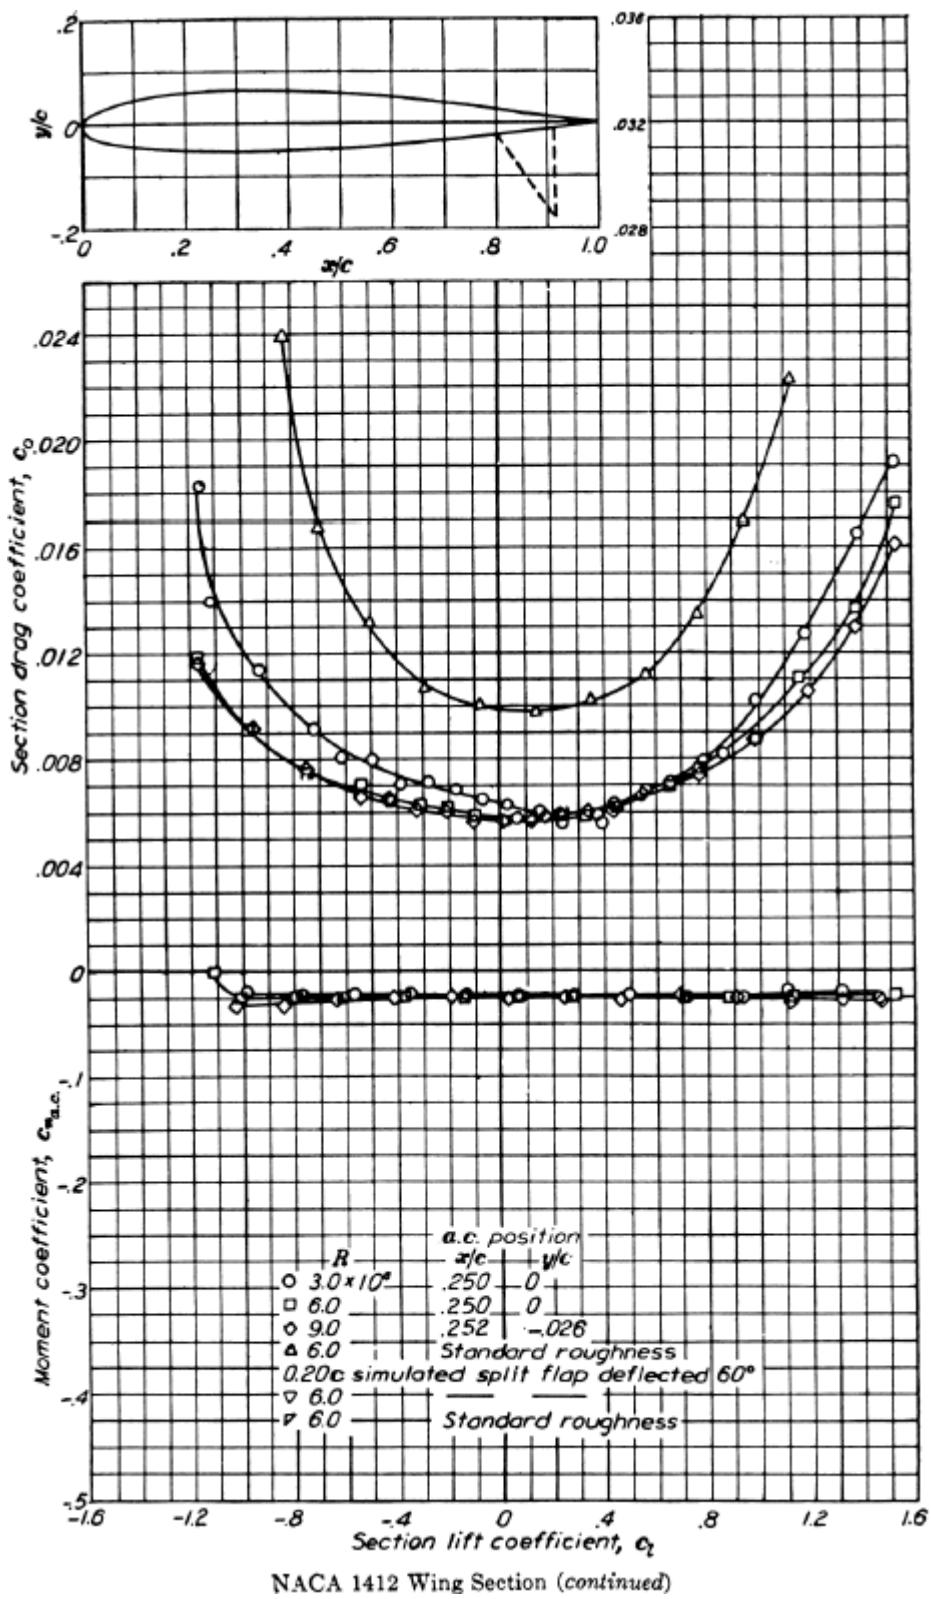



NACA 1412 Wing Section (continued)

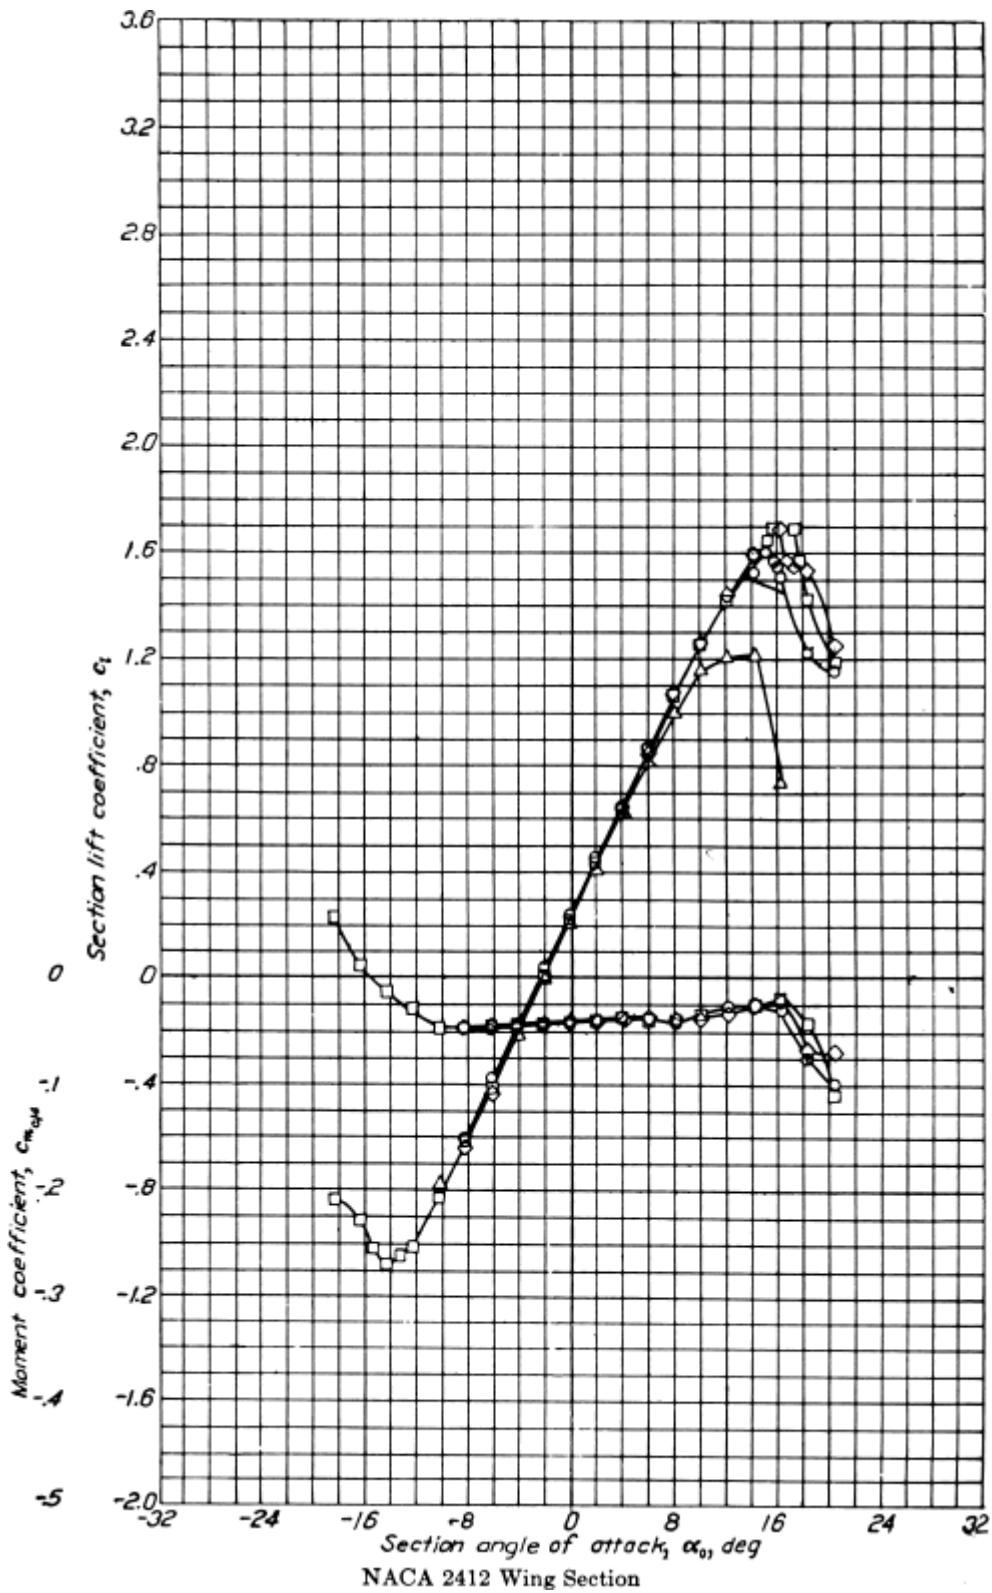


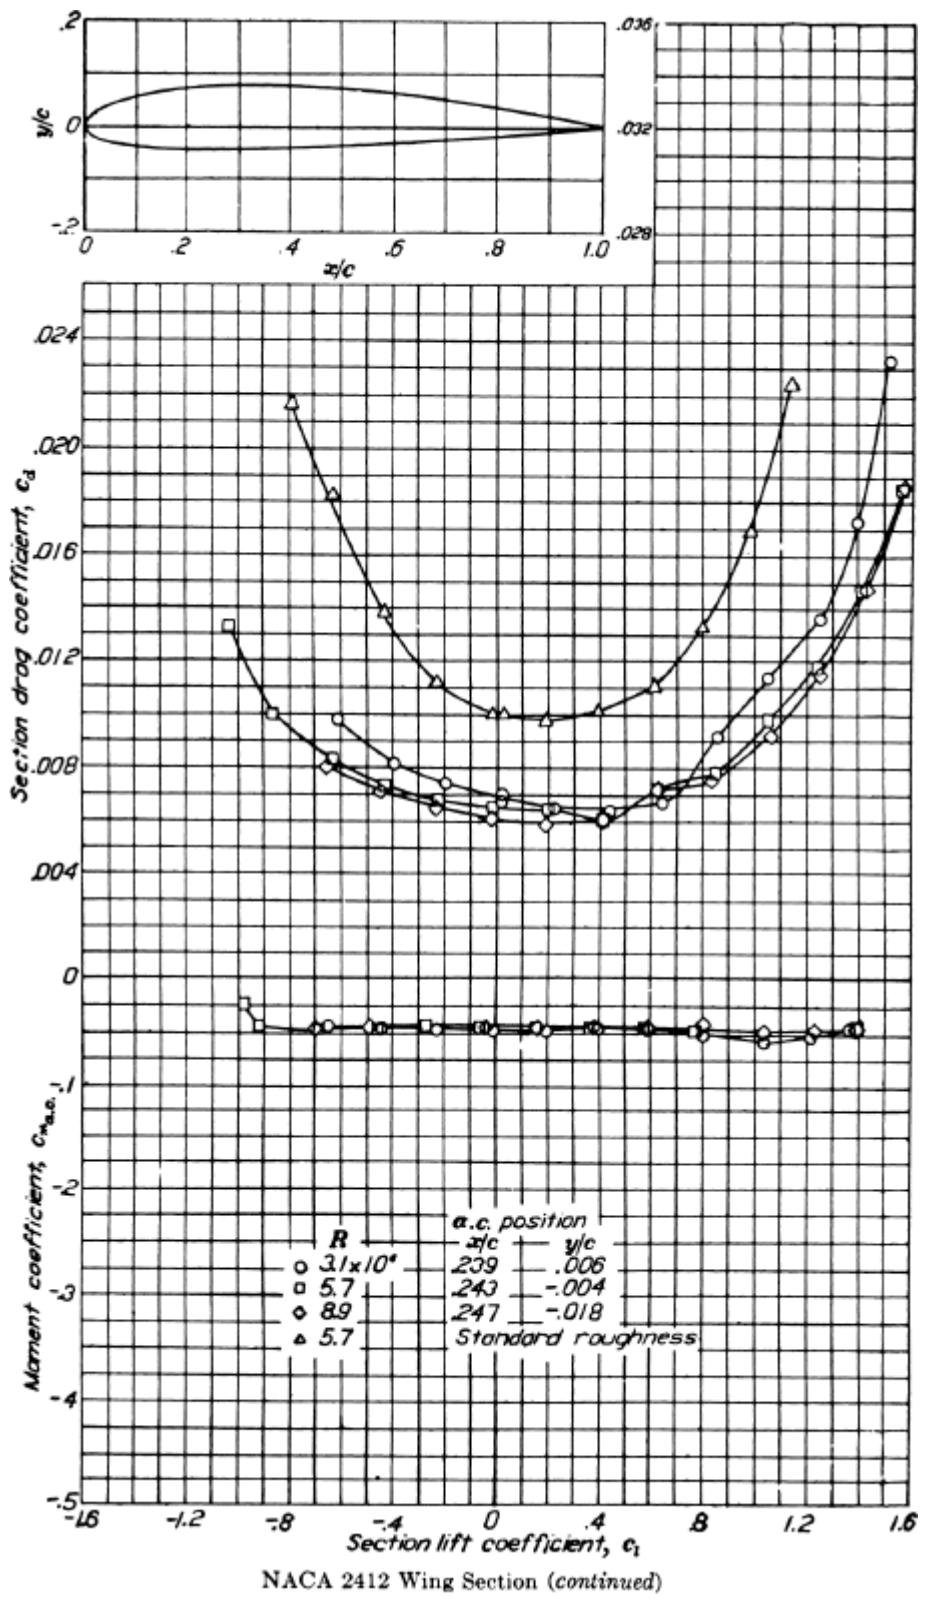


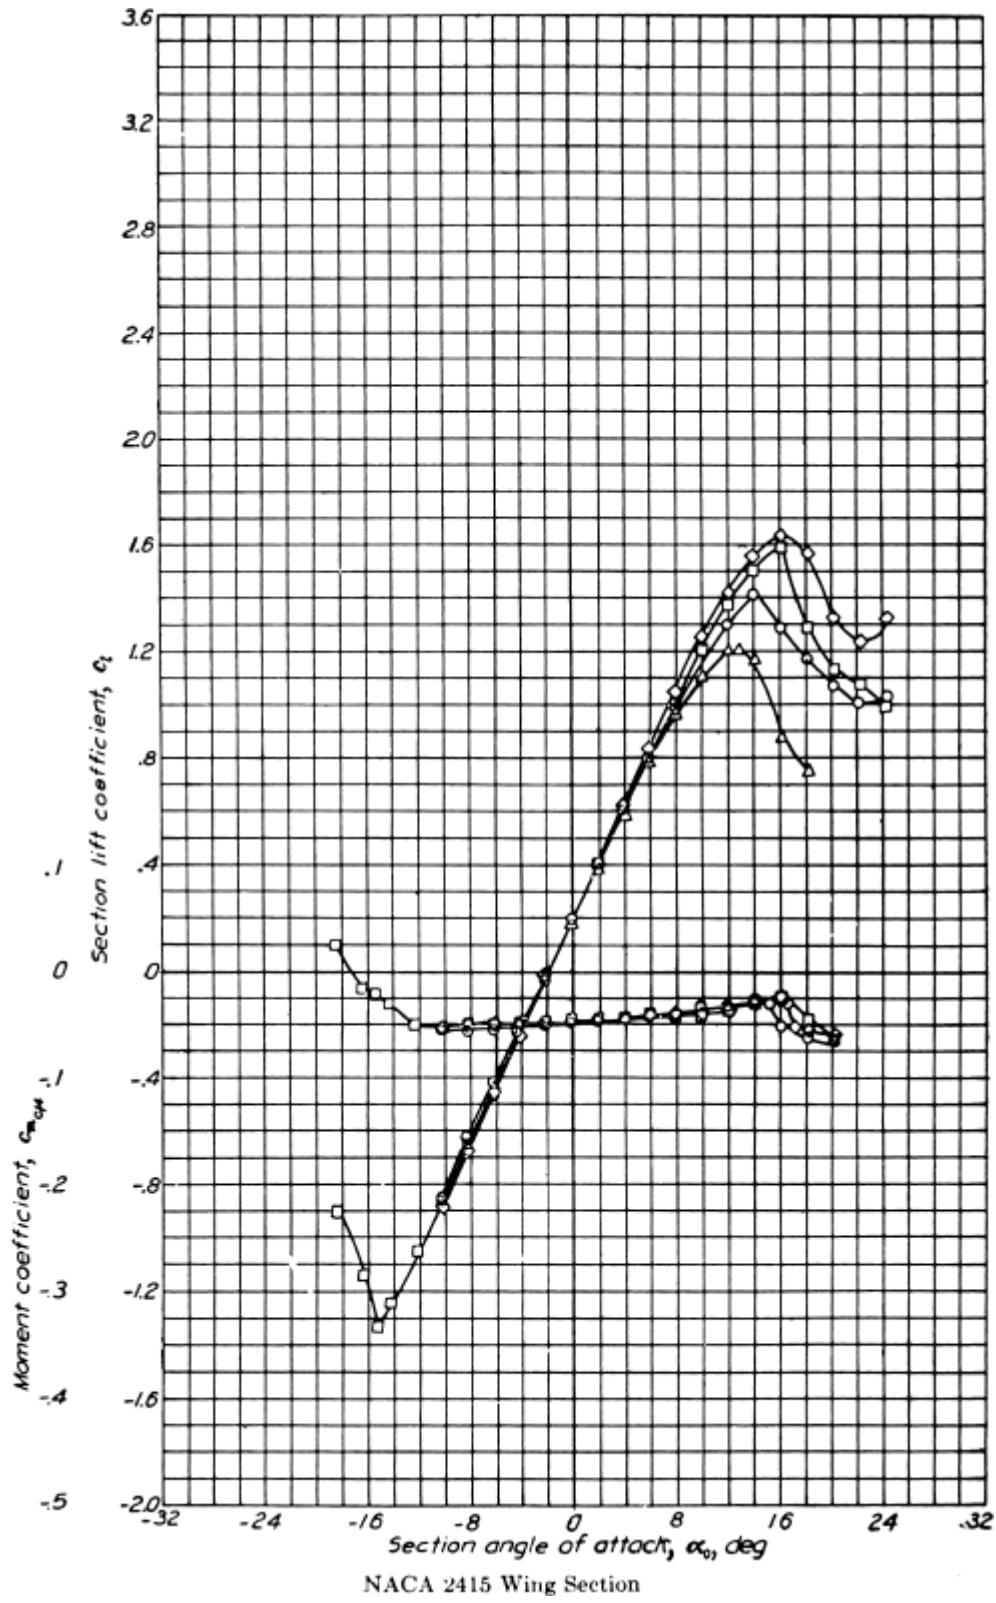


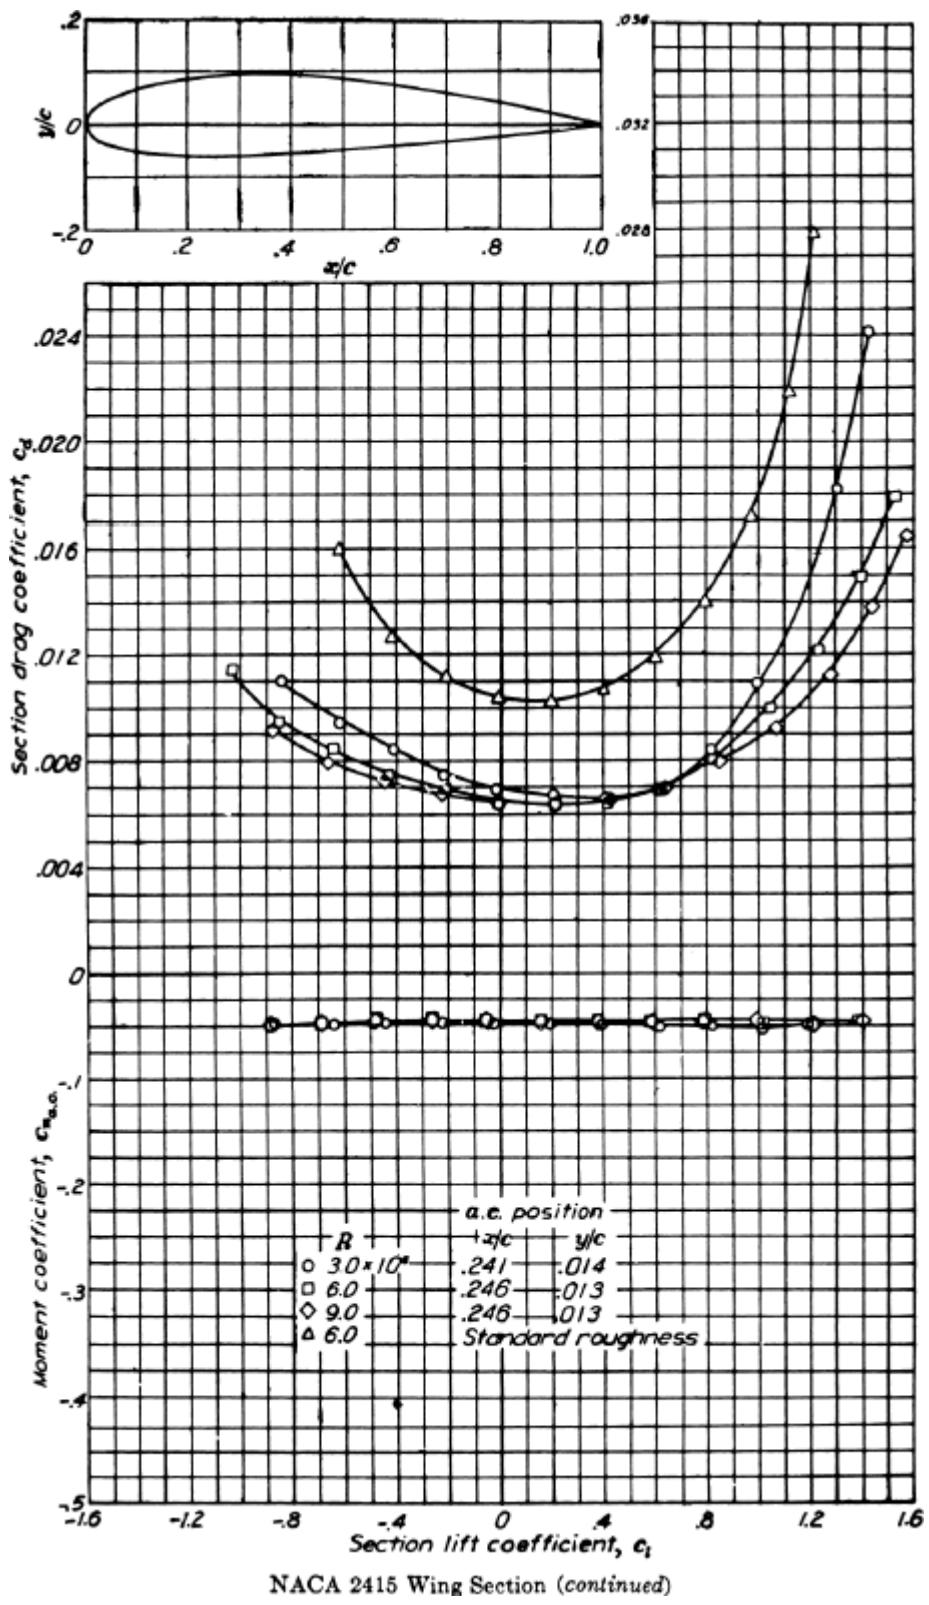

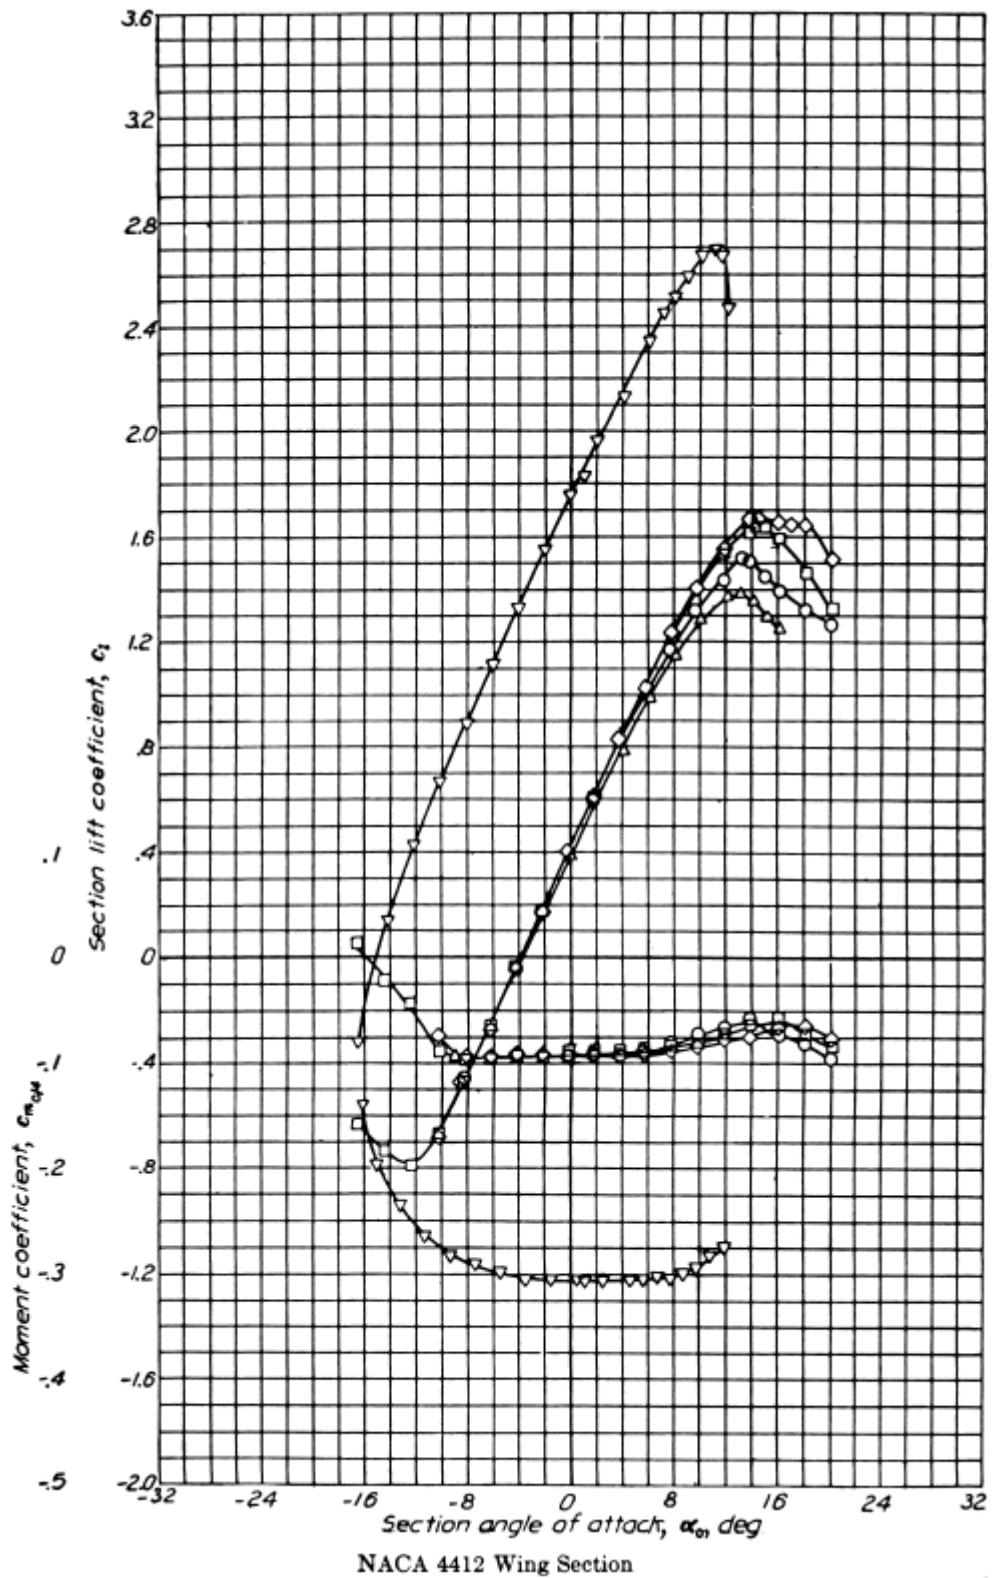


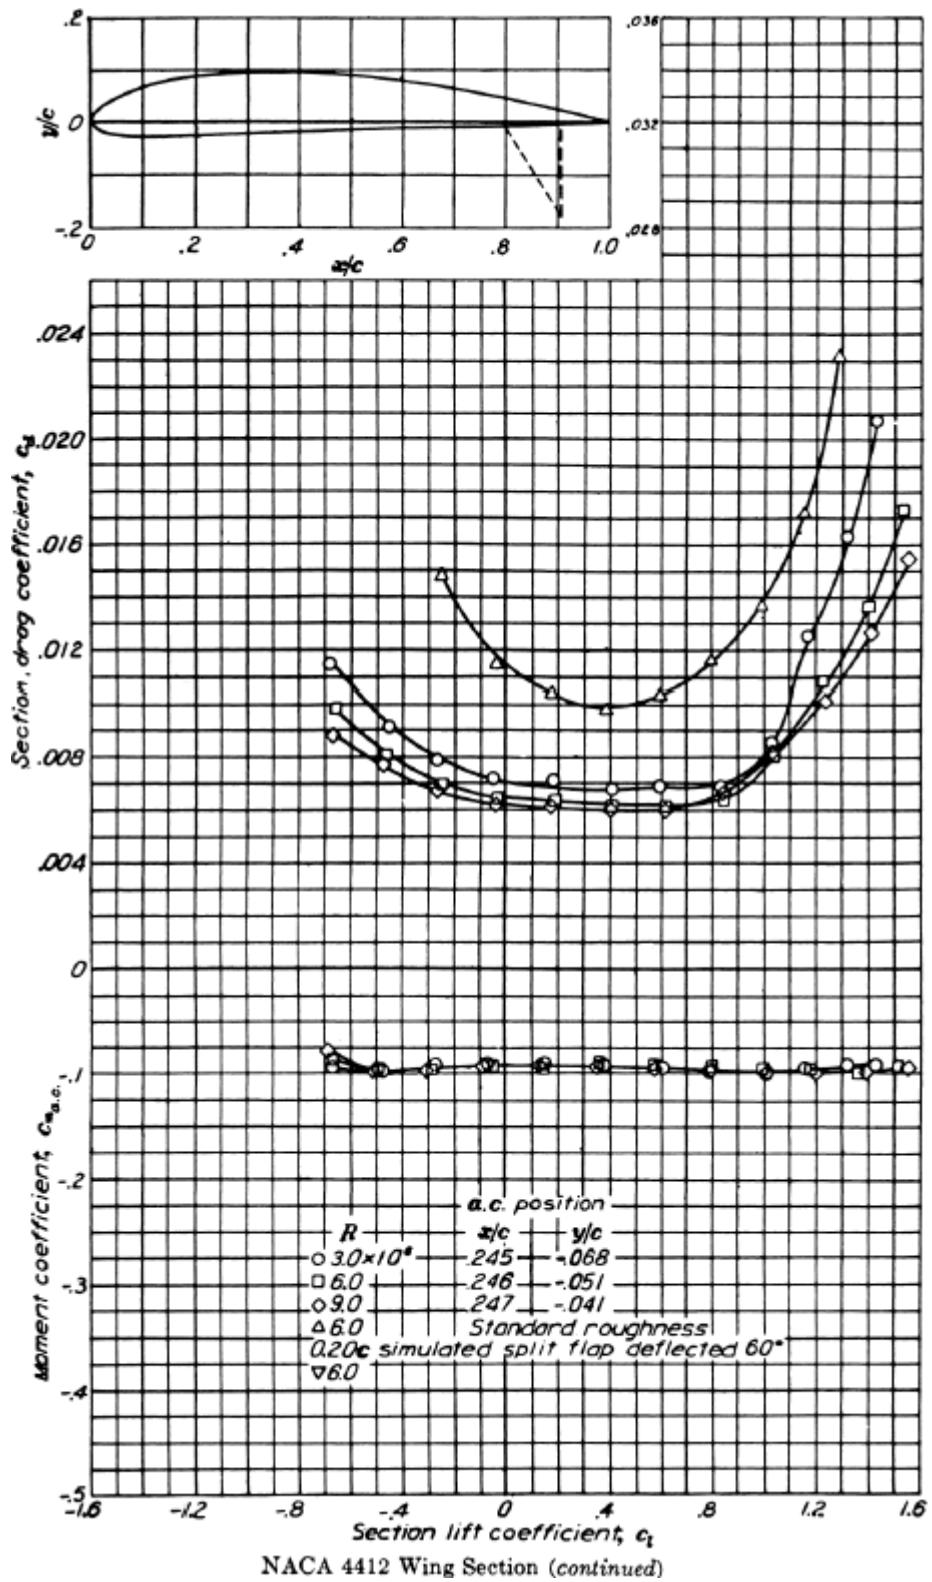


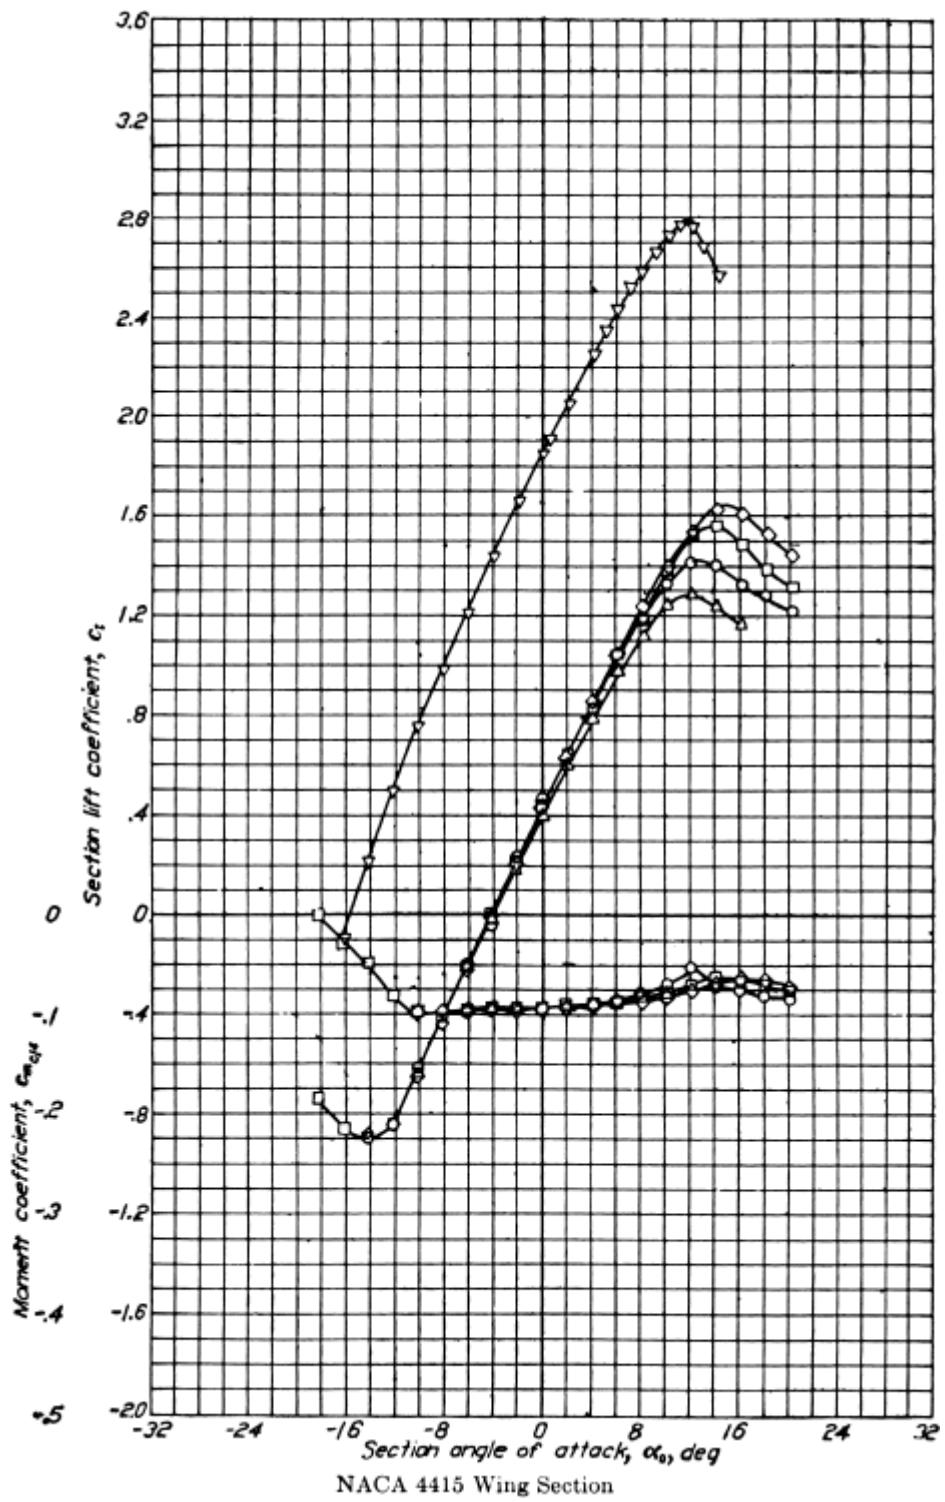


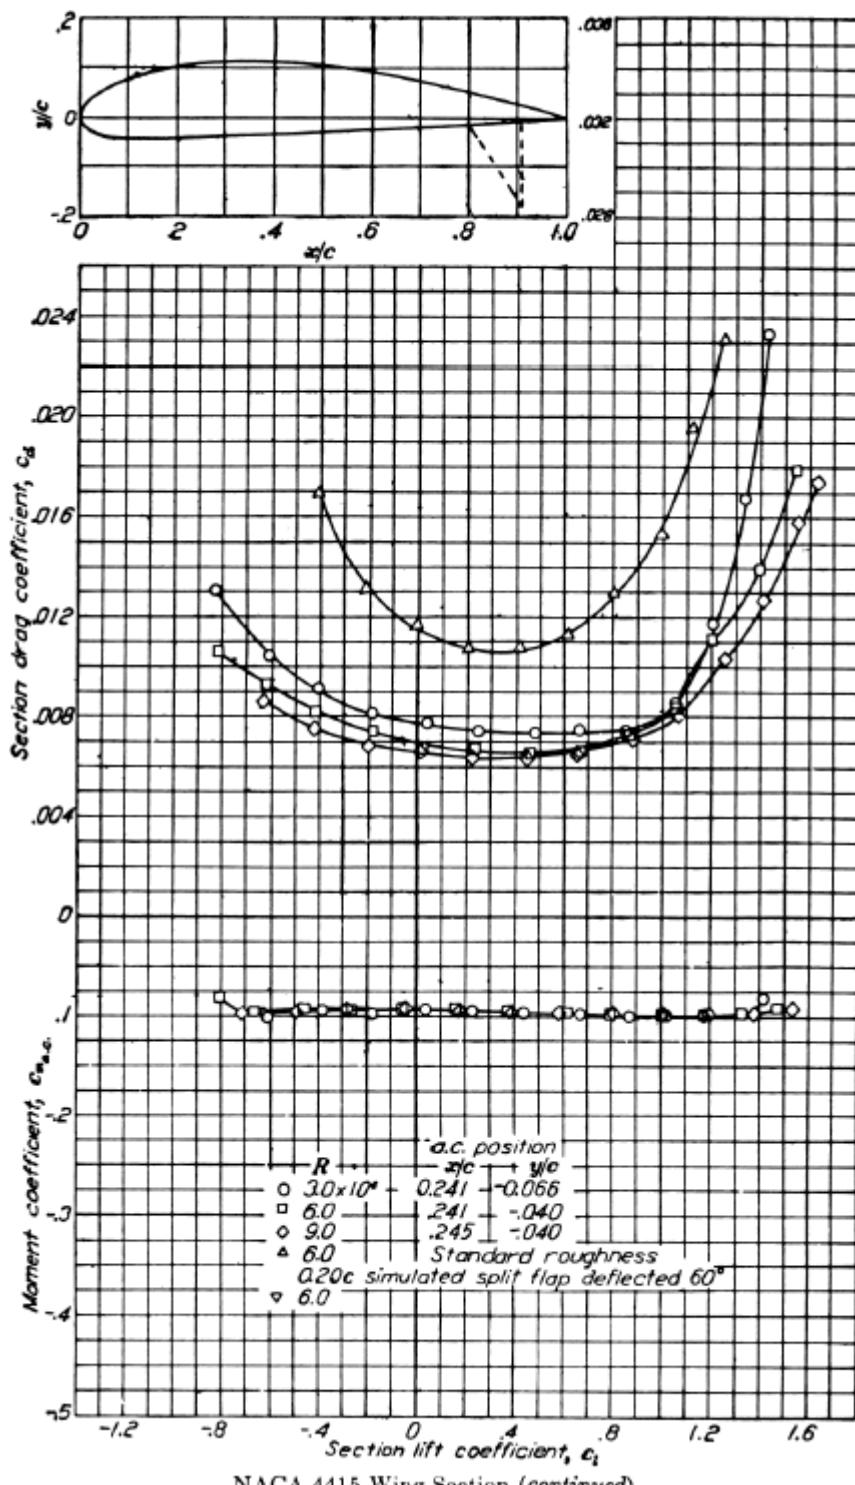



NACA 4415 Wing Section (continued)

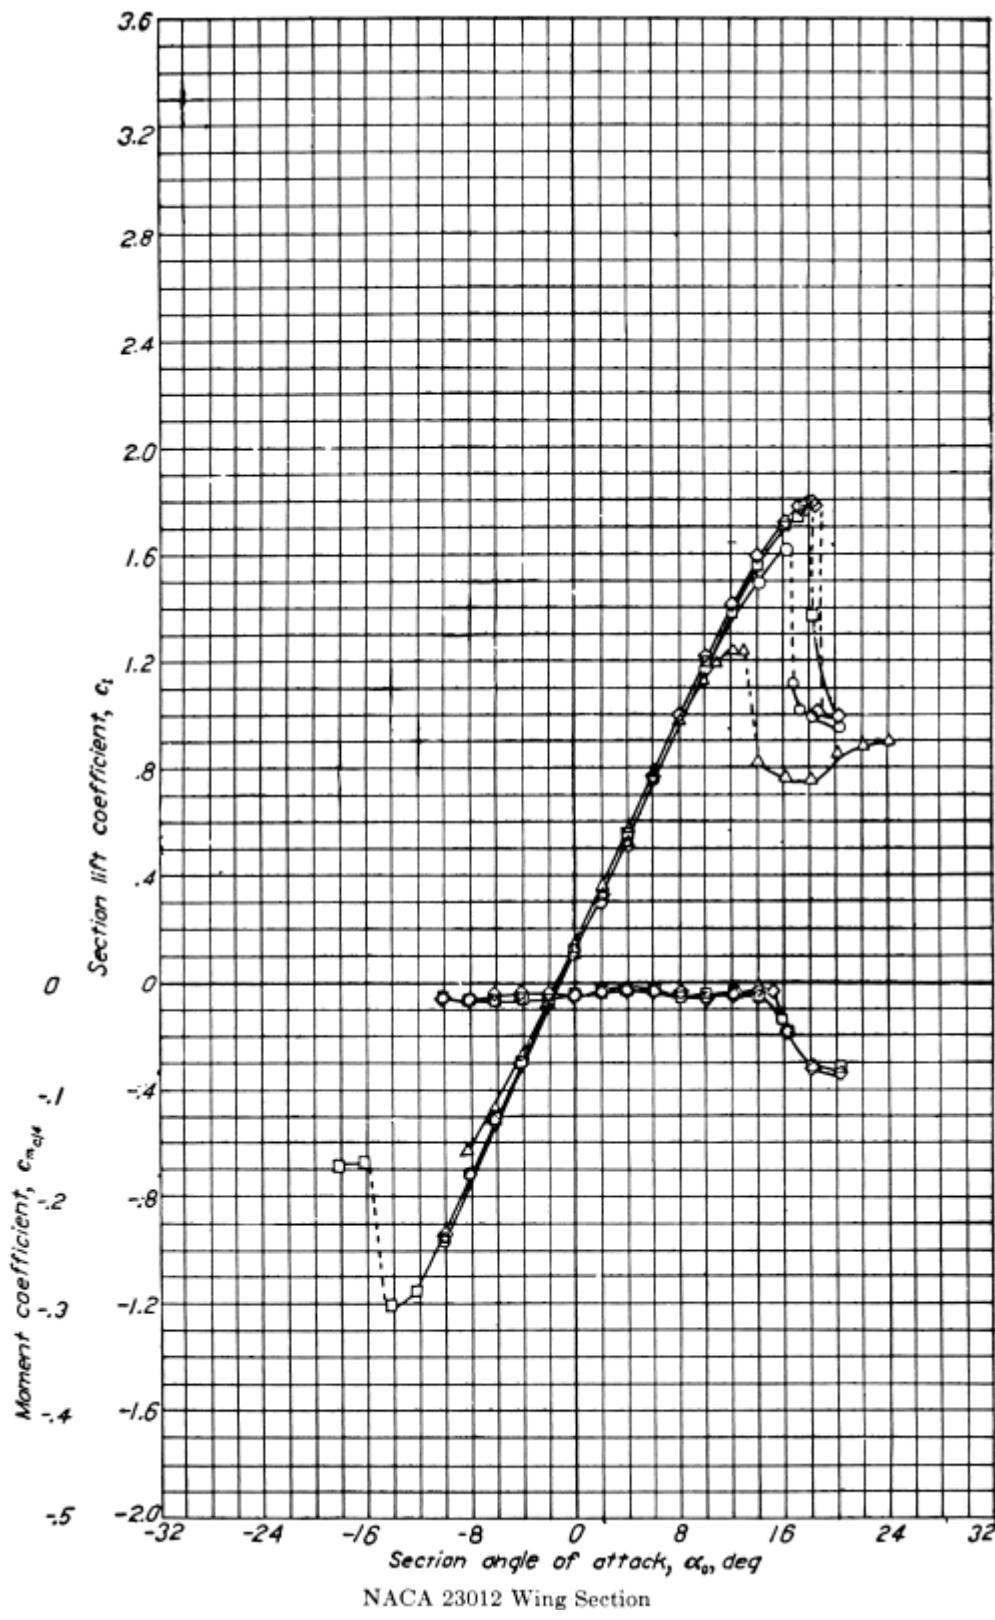


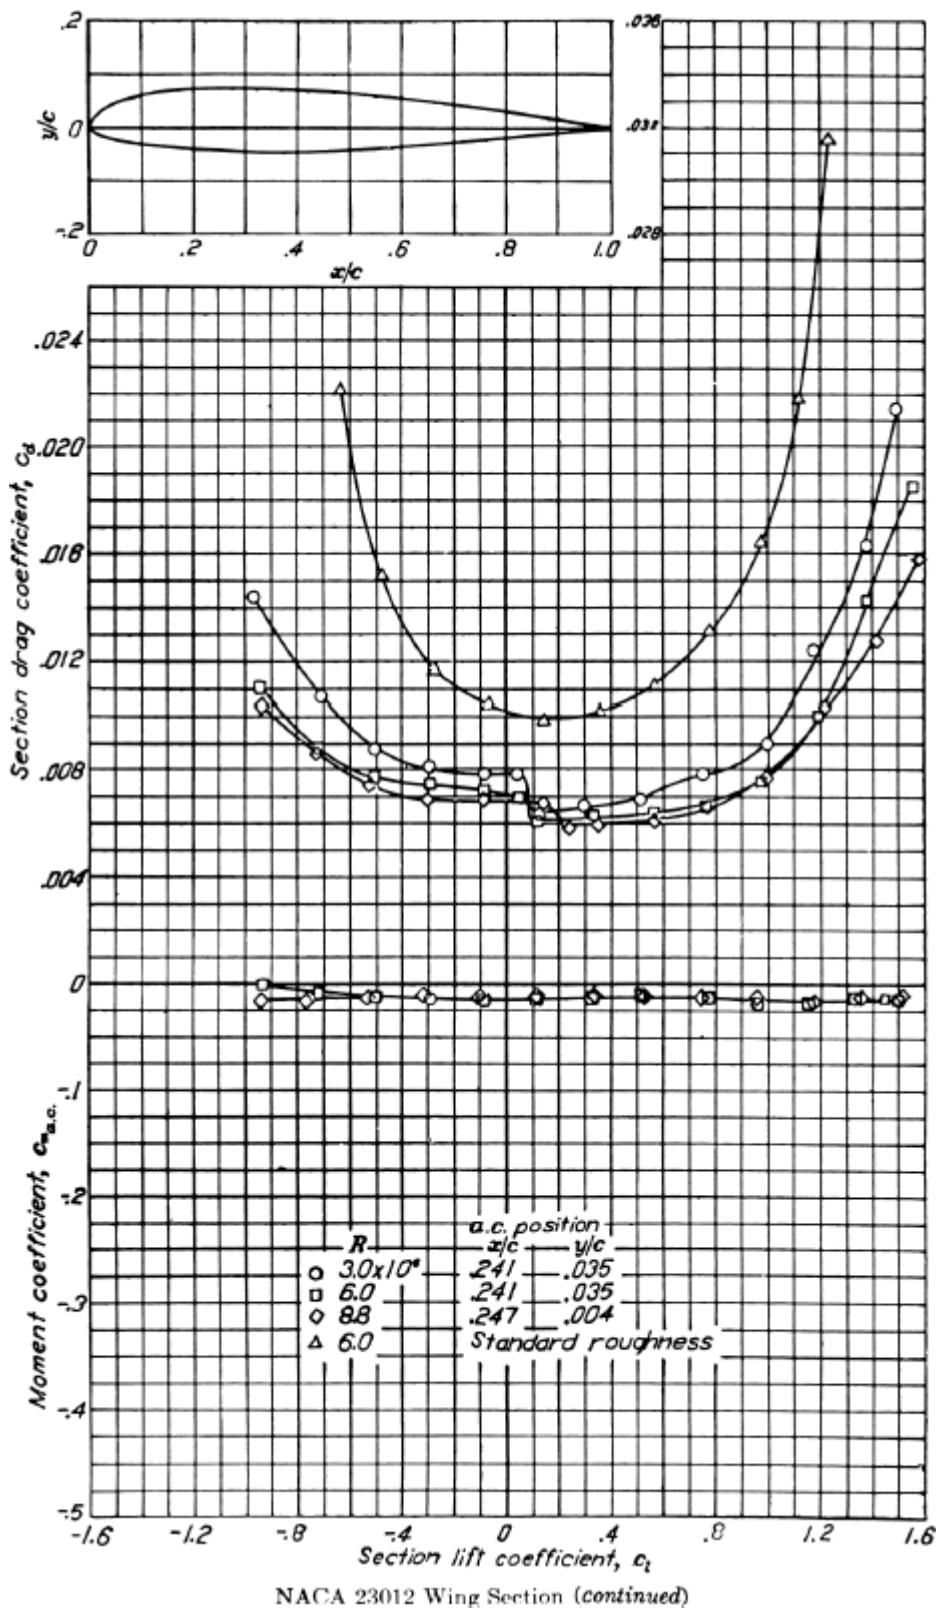


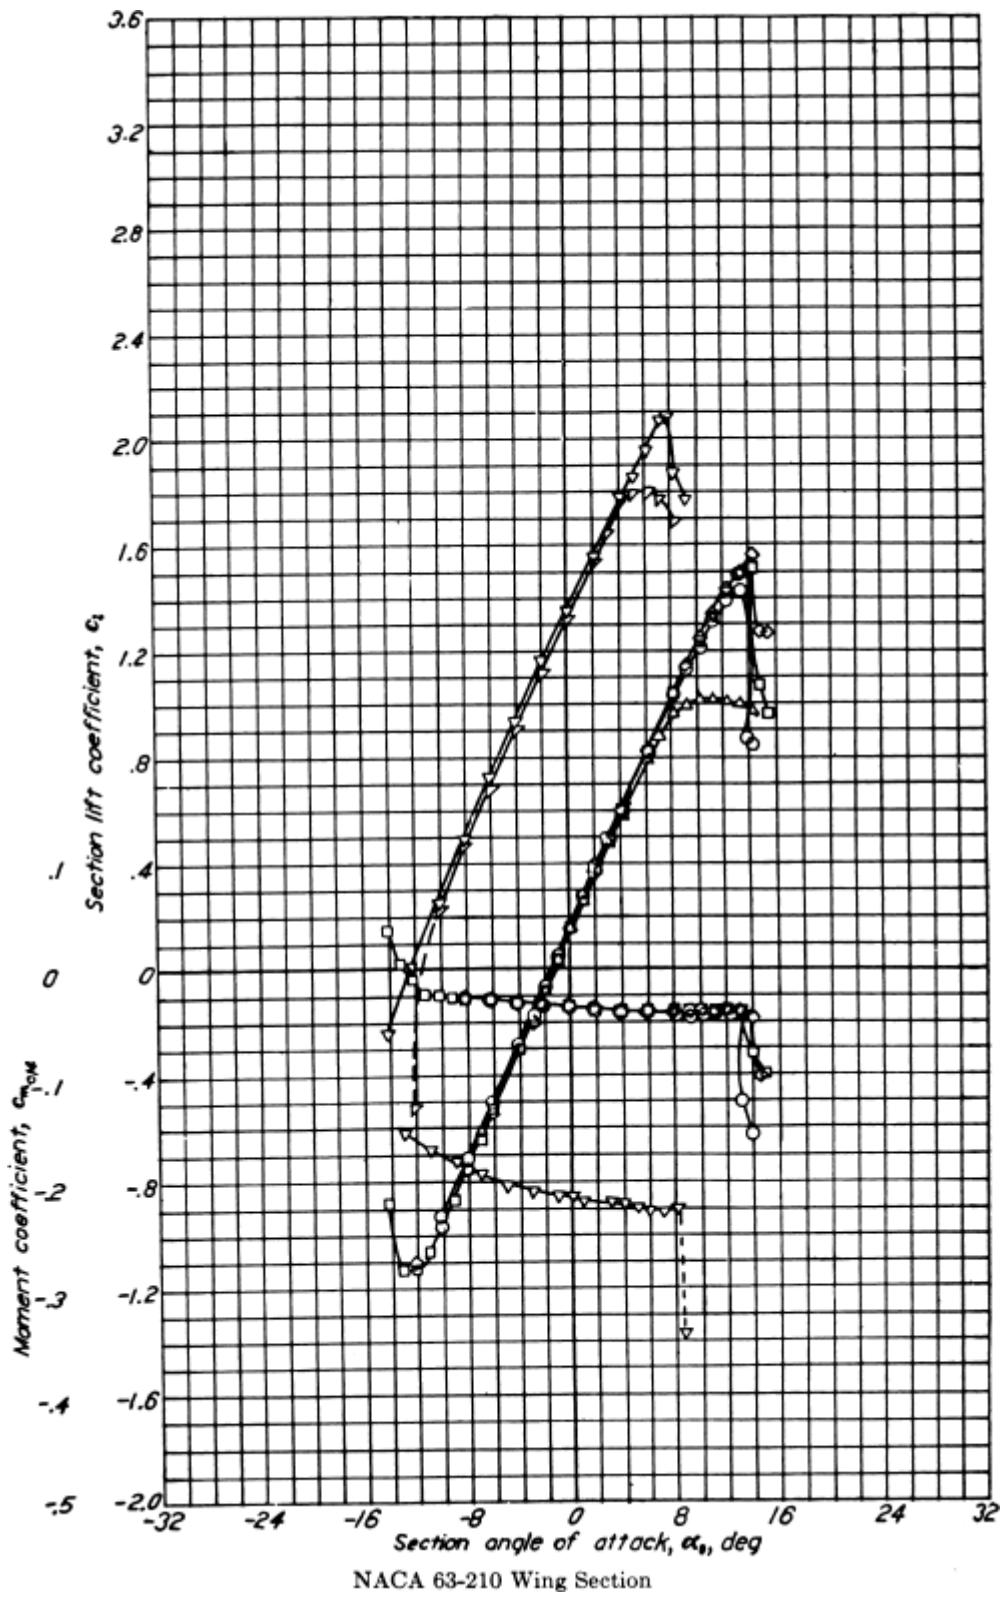


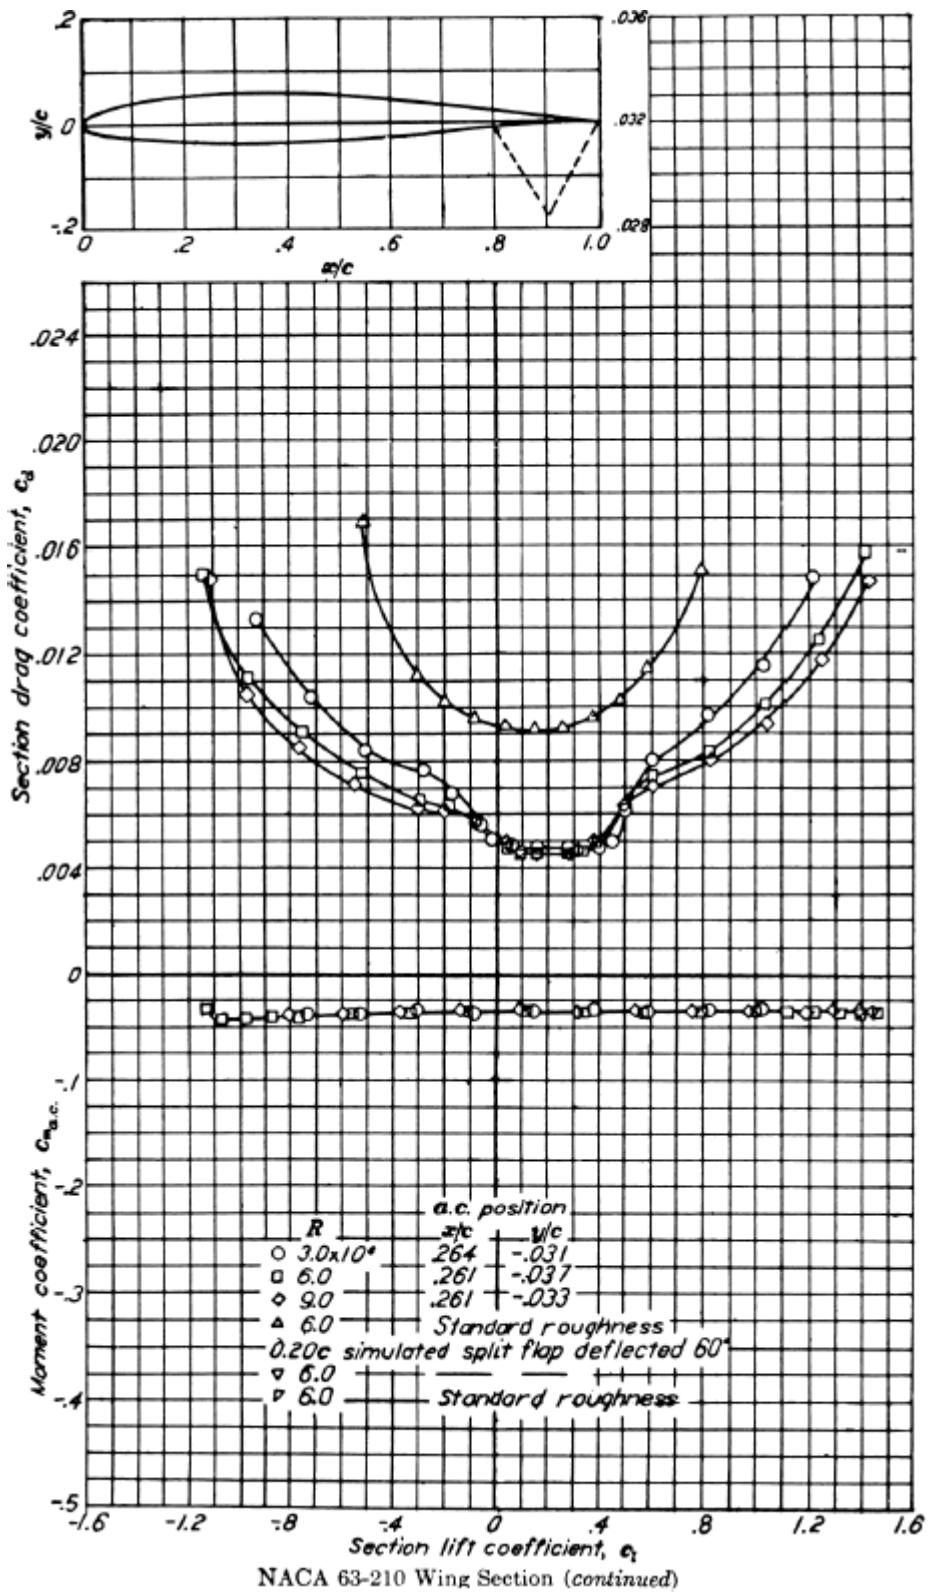

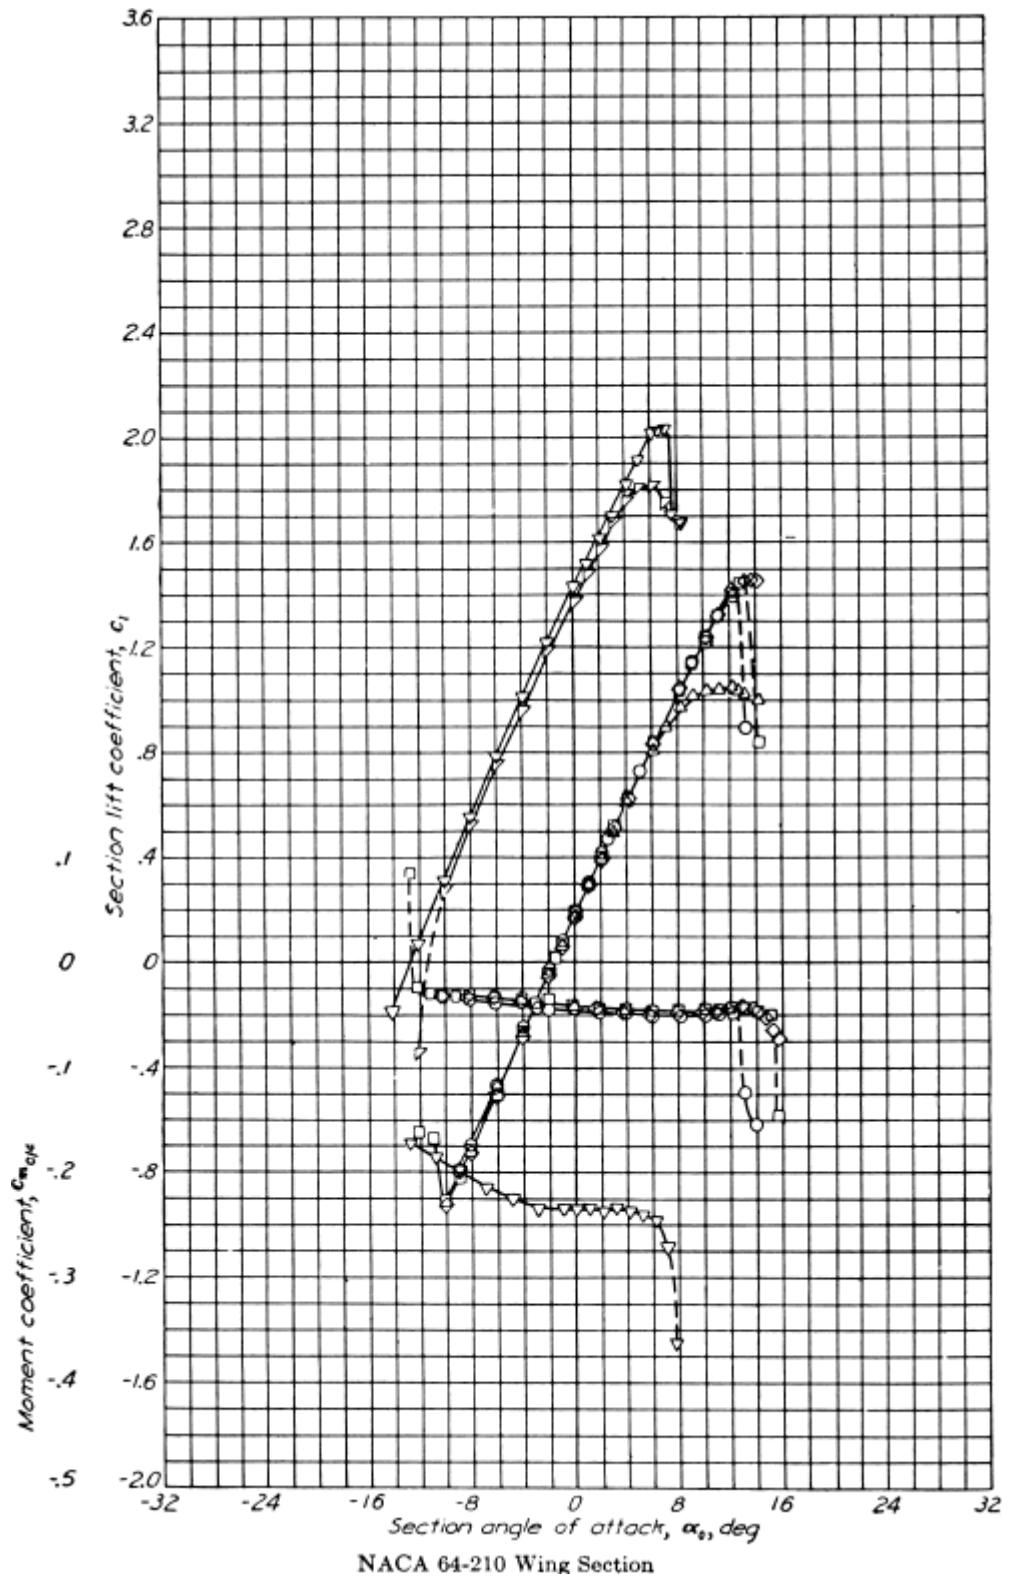


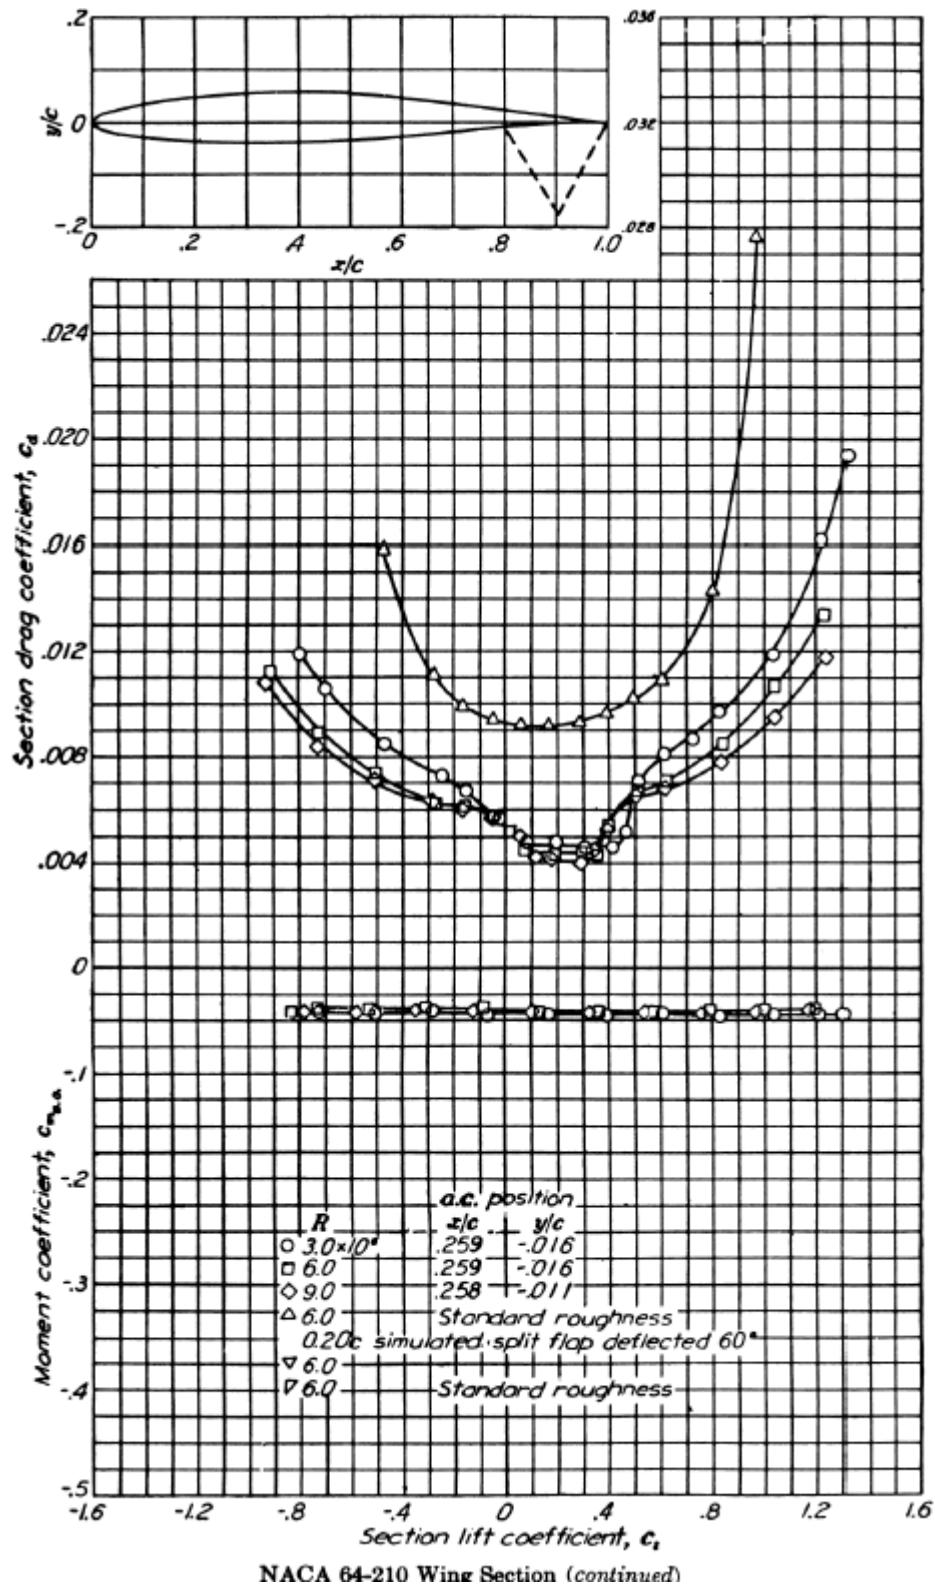


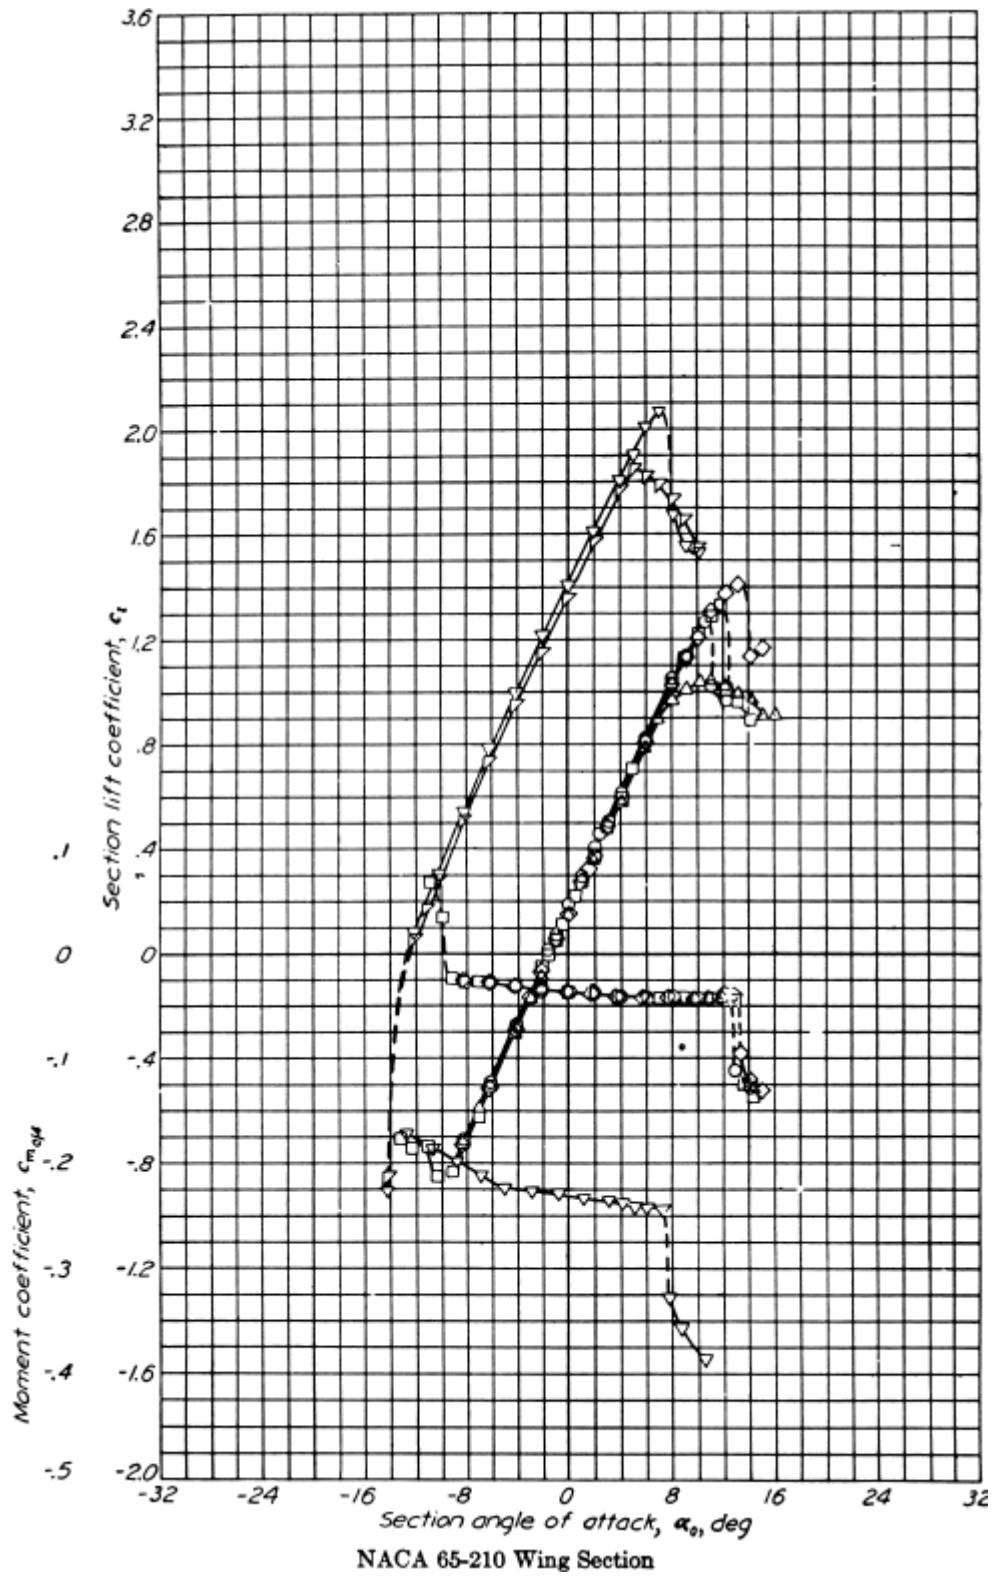

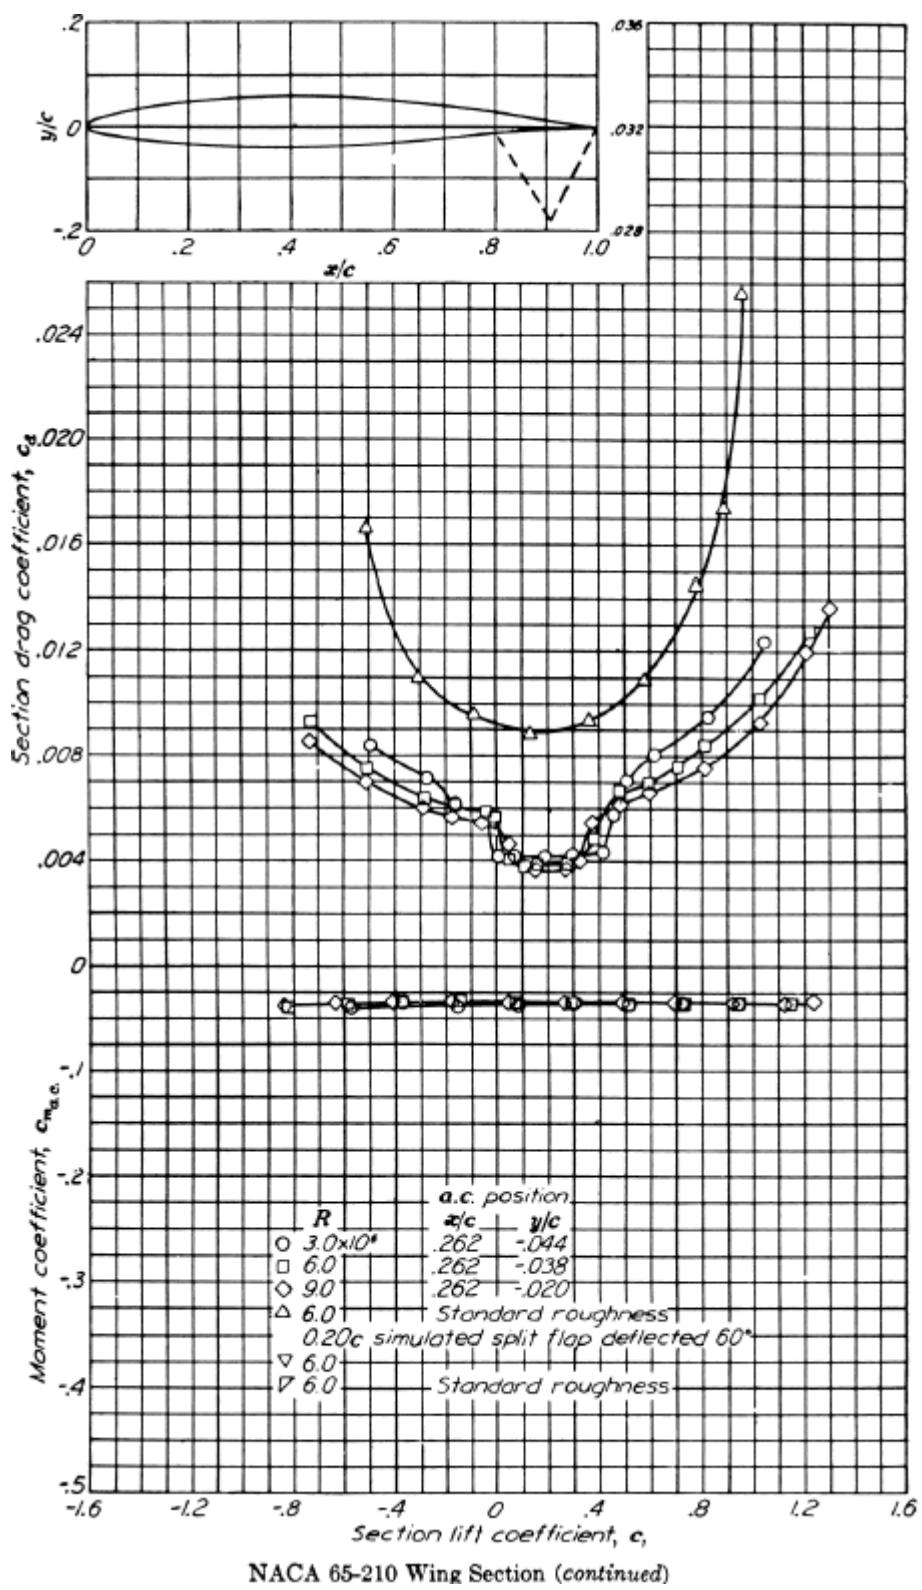


NACA 65-210 Wing Section (continued)

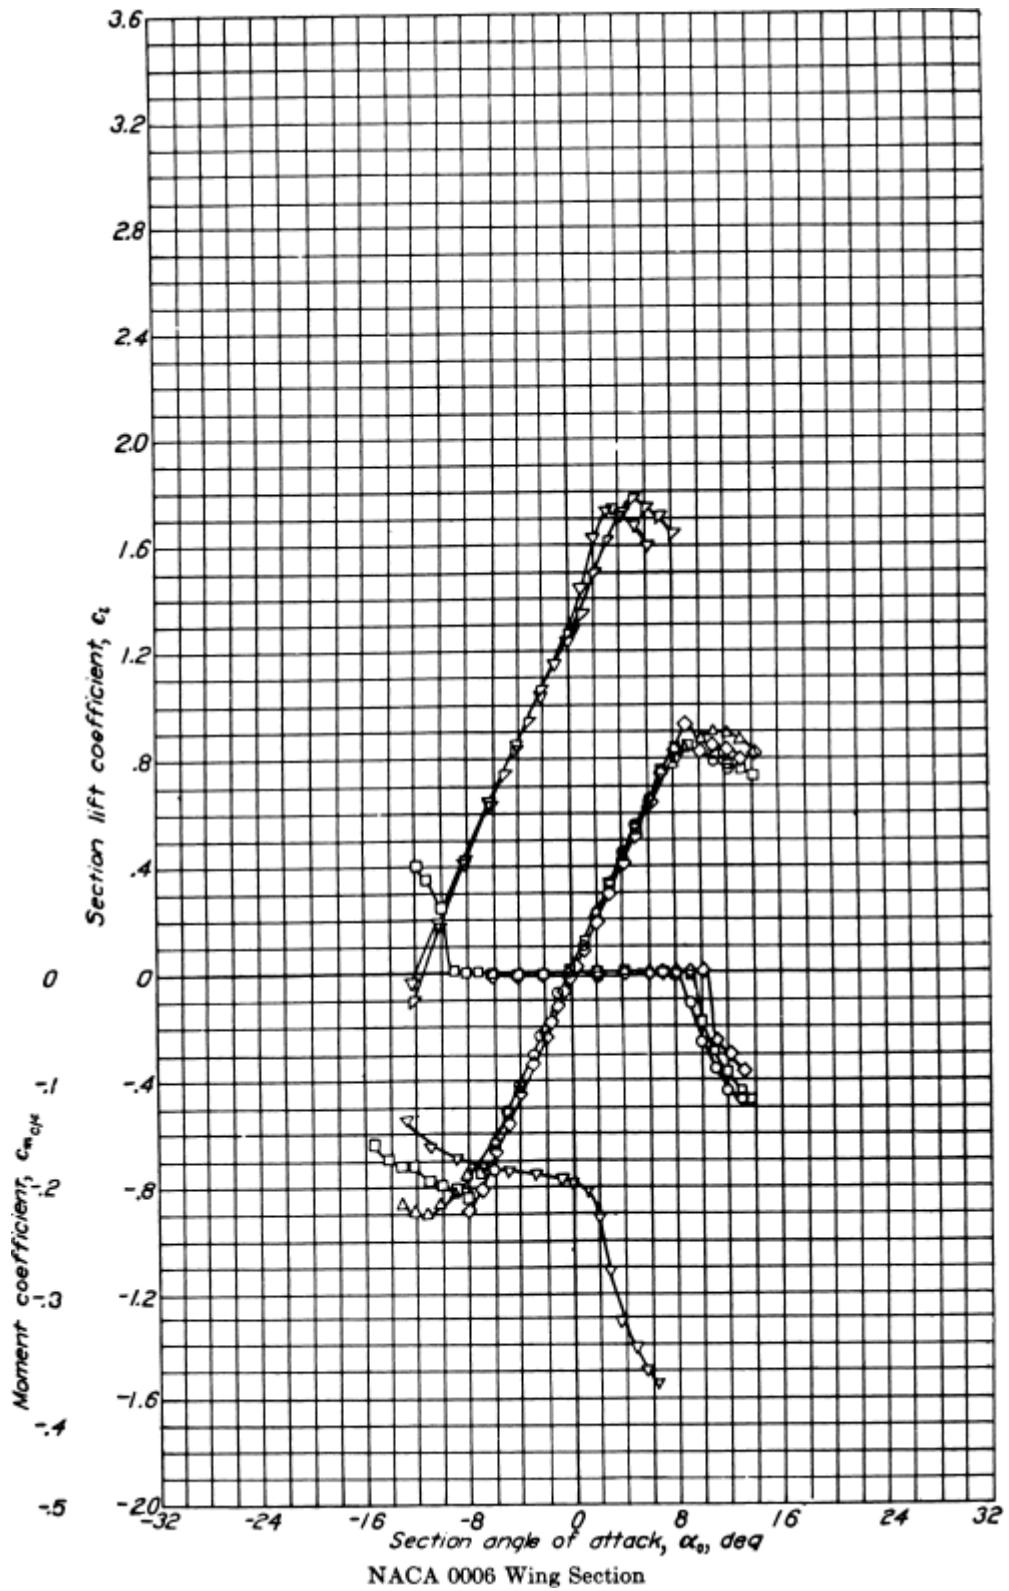


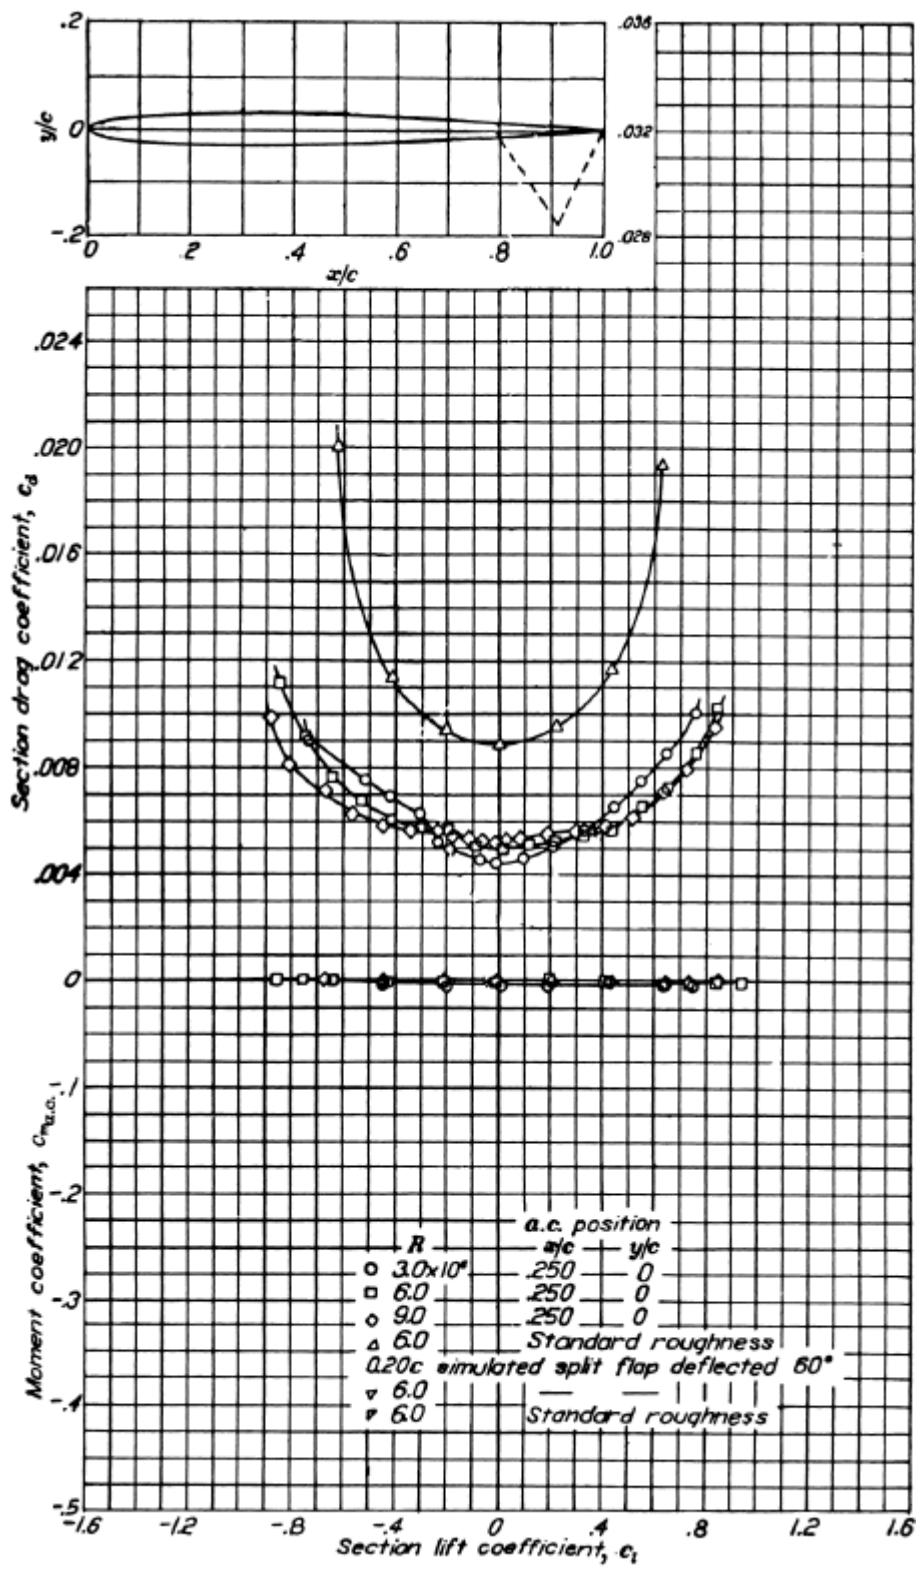



NACA 0006 Wing Section (continued)

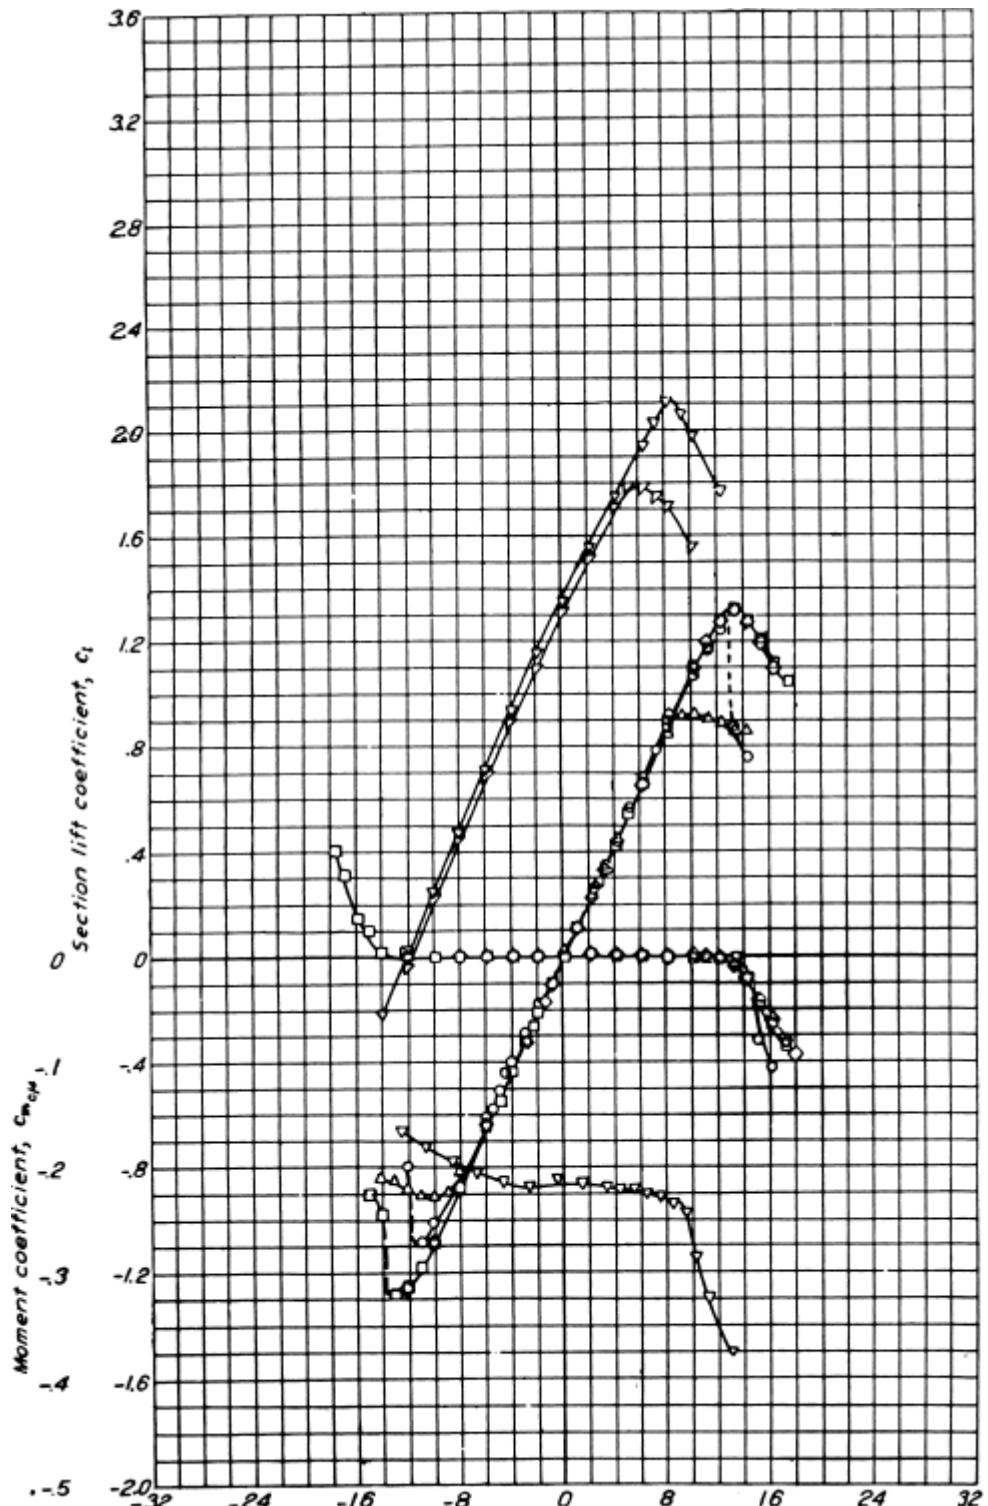



NACA 0009 Wing Section

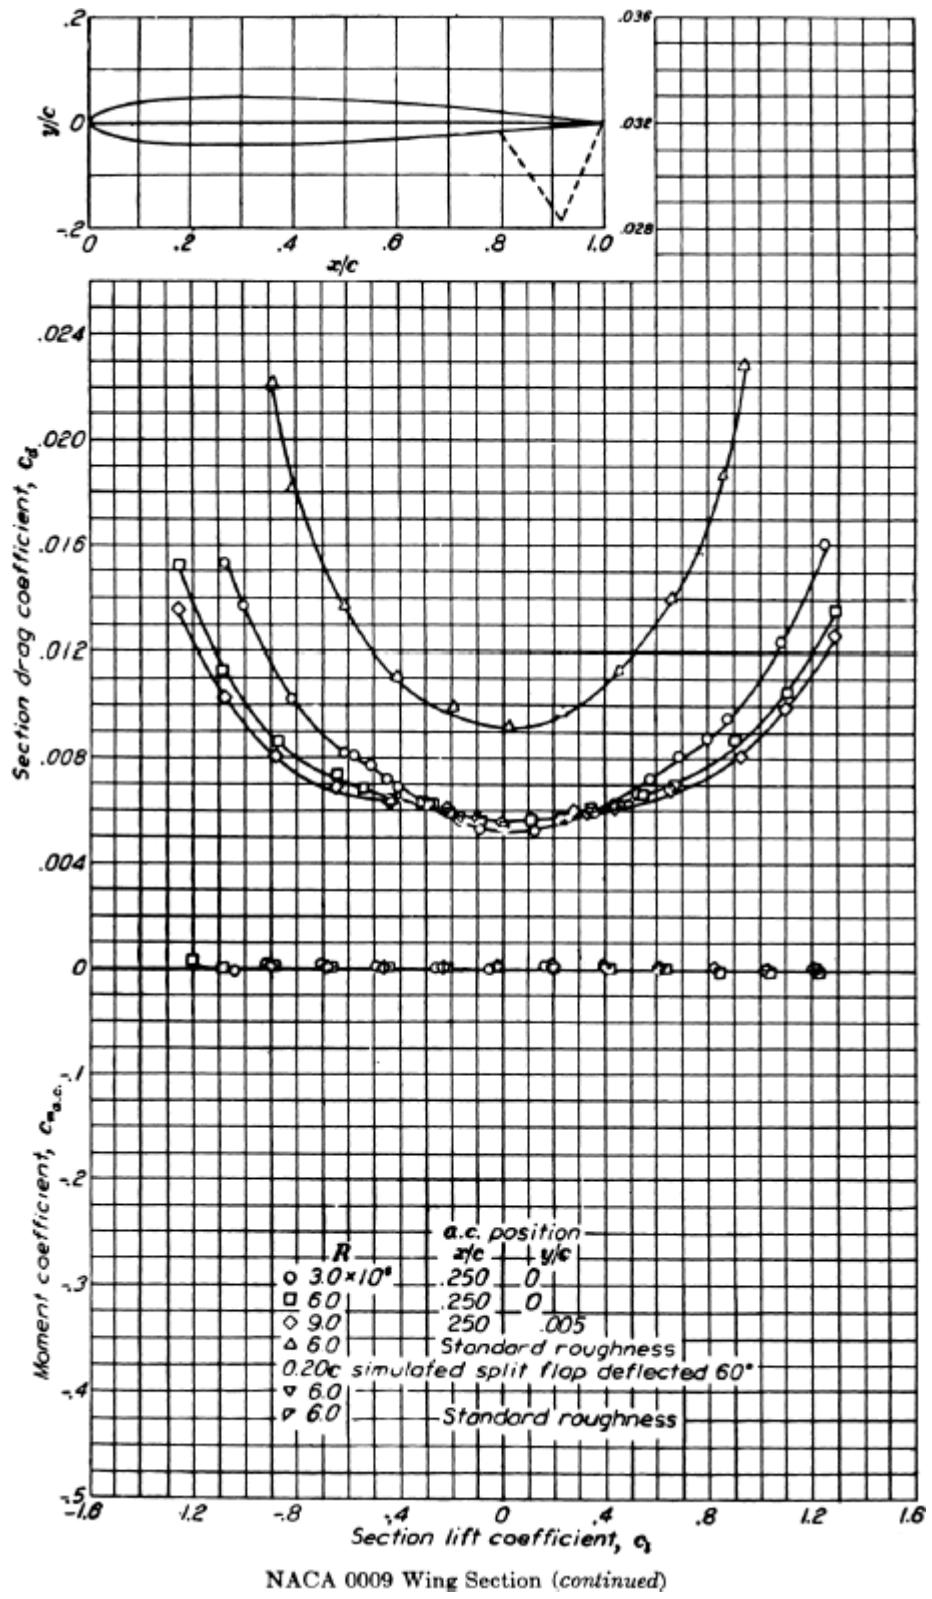

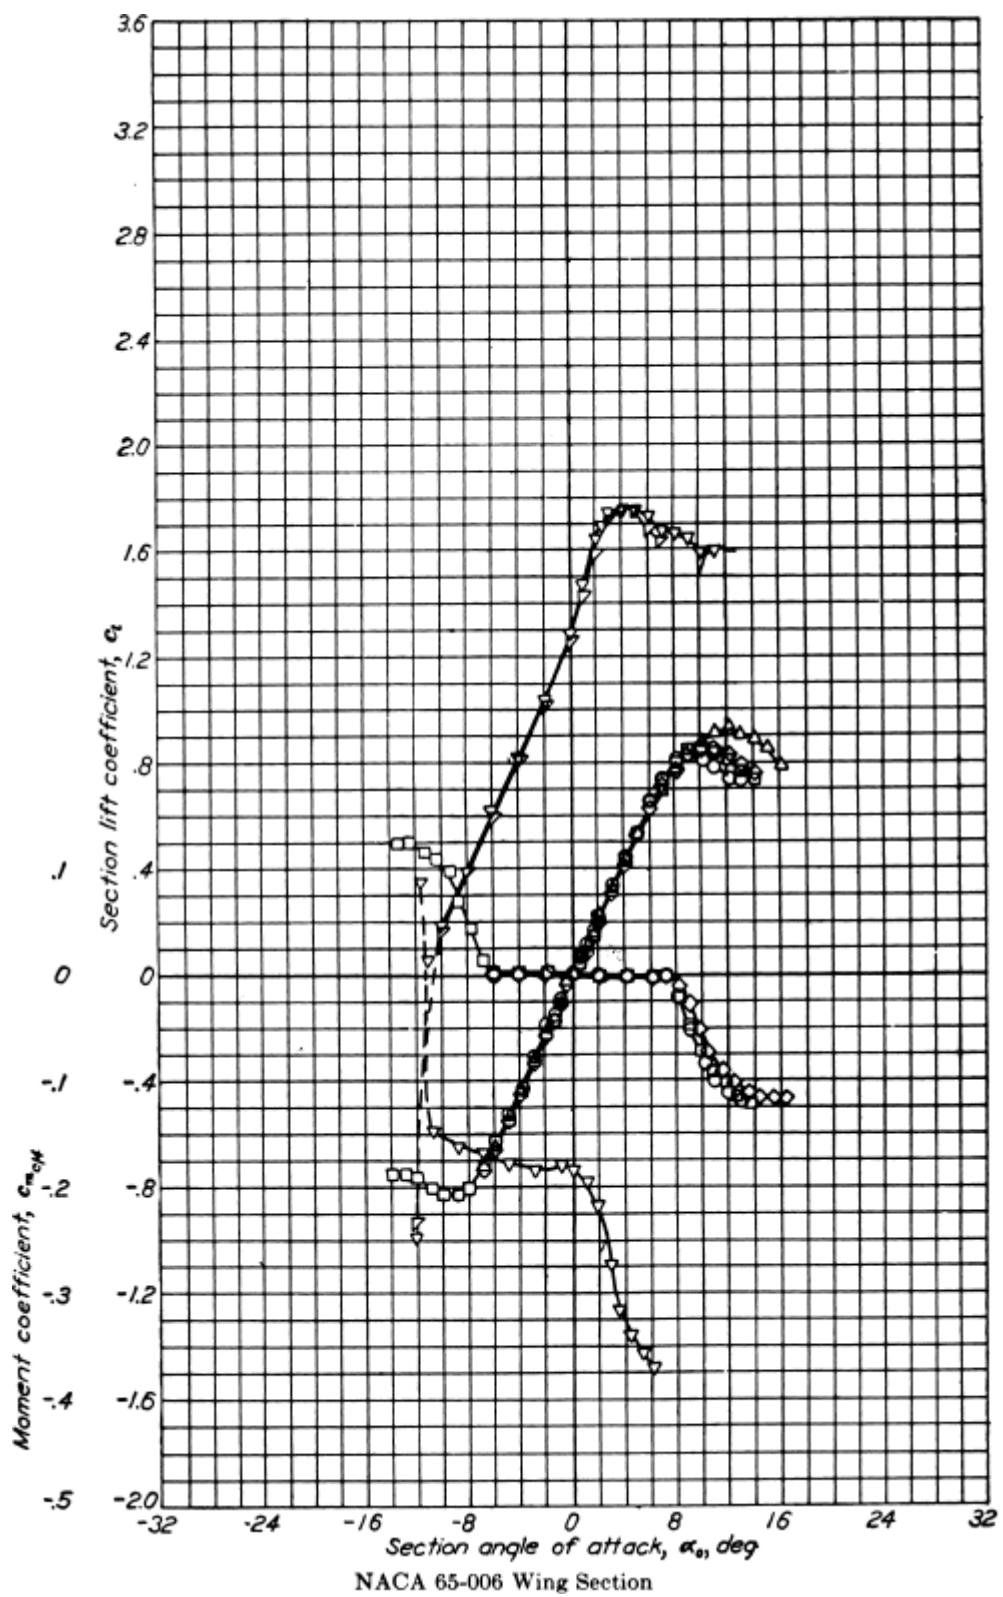

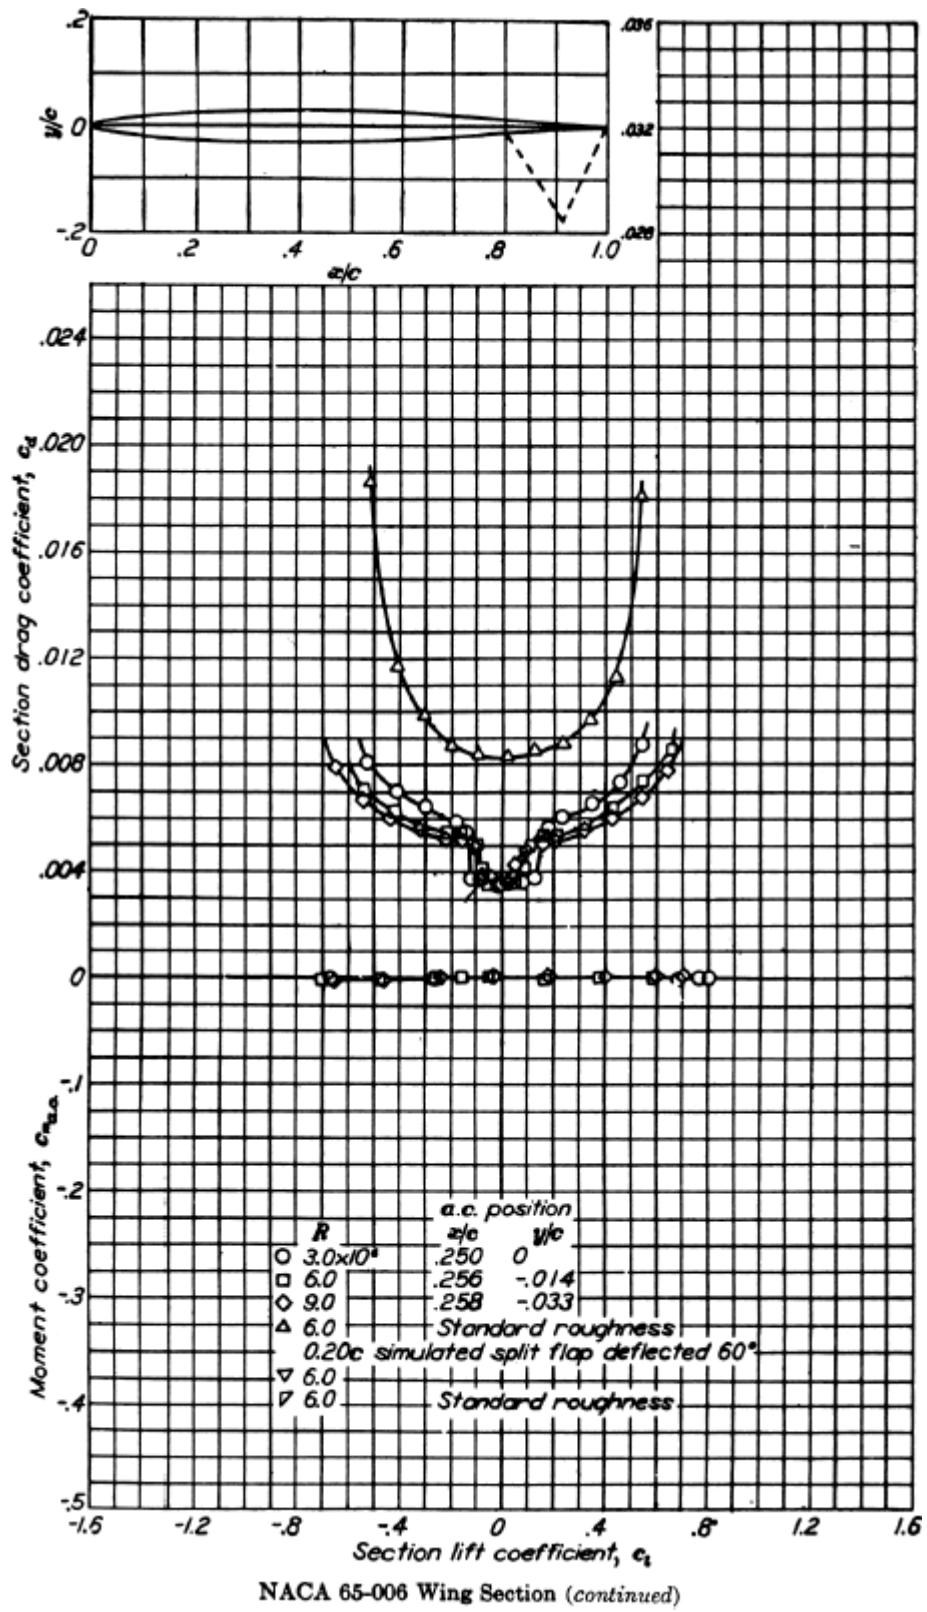

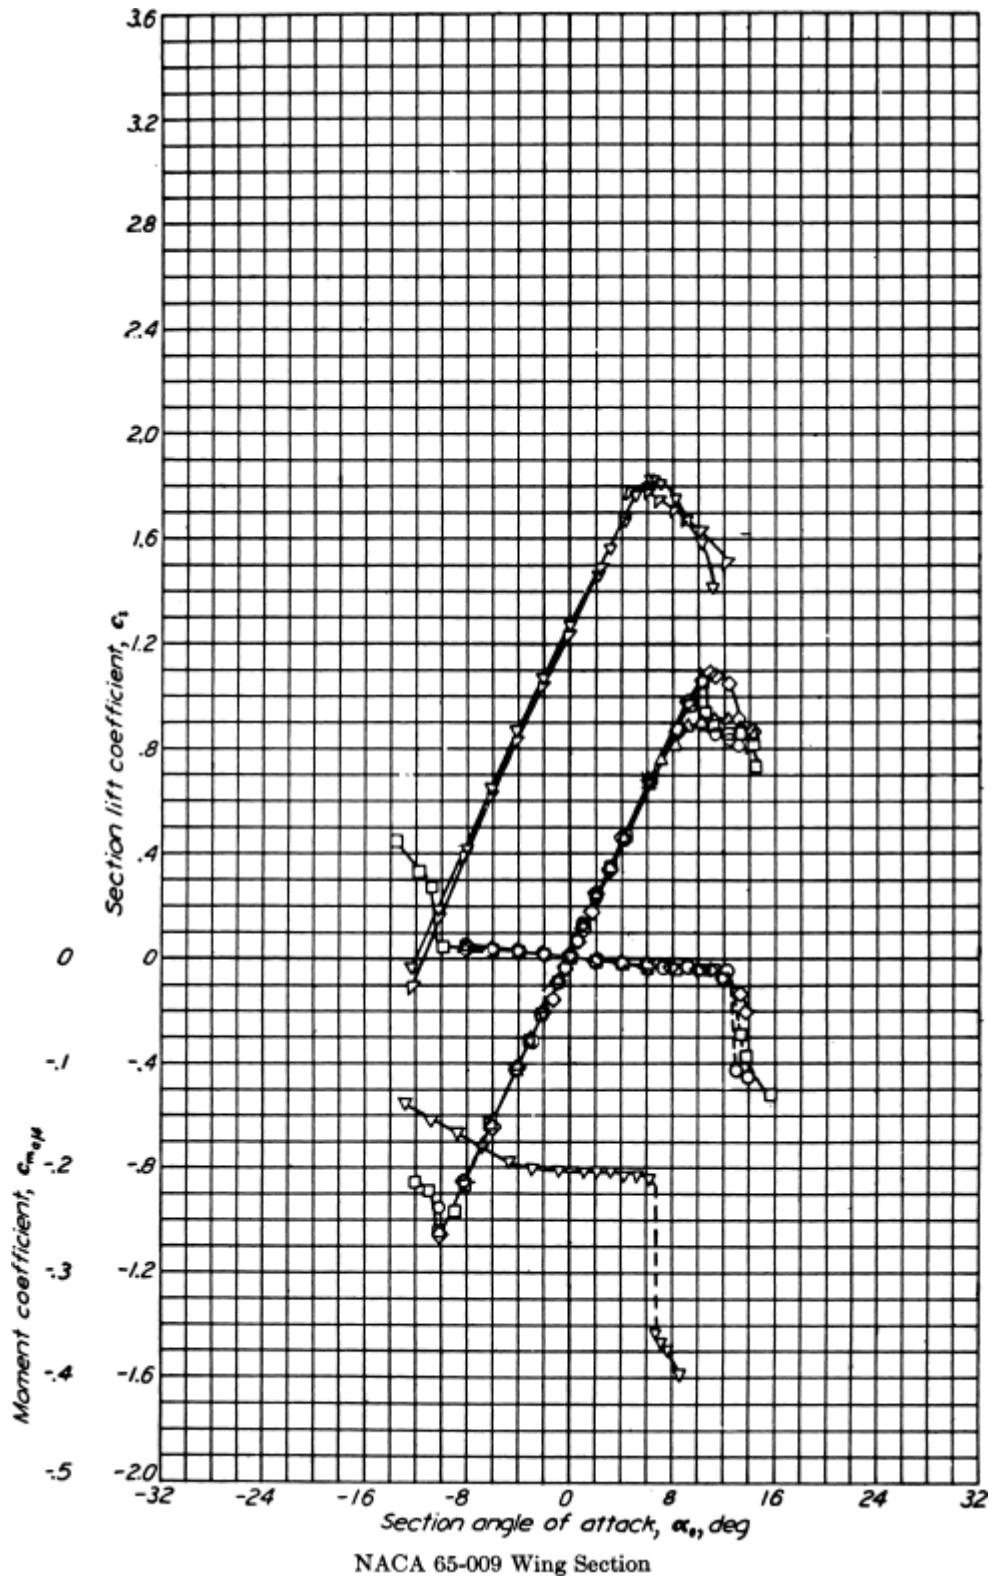

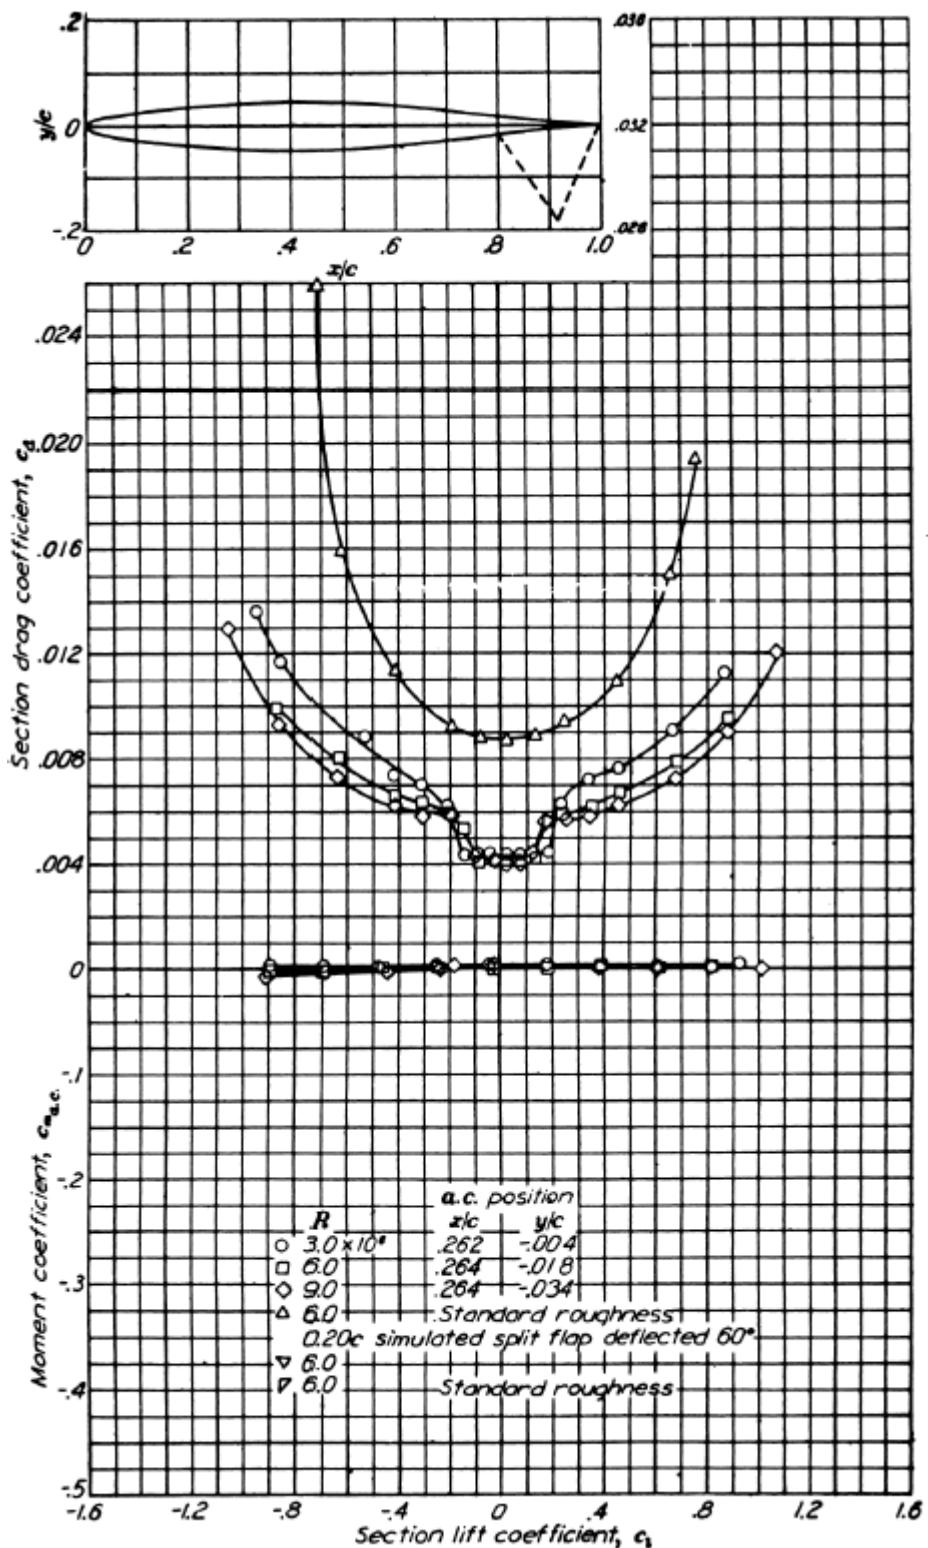

NACA 65-009 Wing Section (continued)

# ANSWER KEY

page 915

## Answer Key for the Even-Numbered Problems

### Chapter 2

- 2.2**  $1.558 \times 10^6$  J  
**2.4** 15.6%  
**2.6** 0.0076 atm/sec  
**2.8** 1.38 m<sup>3</sup>/kg  
**2.10** 0 mph, 127.5 mph  
**2.12** 129 atm  
**2.14** (a) 15.49 kg/m<sup>3</sup>, (b) 9.29 kg/m<sup>3</sup>  
**2.16** 1015 ft/sec, 309.3 m/sec  
**2.18** 43.35 lb/ft<sup>2</sup>, 211.8 kg<sub>f</sub>/m<sup>2</sup>  
**2.20** 7.925 km/sec  
**2.22** (a) 107.96 km, (b) 2020.4 m/sec  
**2.24** 1.68  
**2.26** (a)  $6.762 \times 10^6$  N, (b)  $1.5 \times 10^6$  lb

### Chapter 3

- 3.2** 9.88 km  
**3.4** 378°R  
**3.6**  $5.38 \times 10^4$  N/m<sup>2</sup>  
**3.8** -17.17 lb/(ft<sup>2</sup> sec)

- 3.10**      33,156 ft  
**3.12**       $2.03 \times 10^{-3} \text{ kg/m}^3$   
**3.14**      268.43 K,  $6.9807 \times 10^4 \text{ N/m}^2$ ,  $0.90599 \text{ kg/m}^3$   
**3.16**      0.34%  
**3.18**       $482.76^\circ\text{R}$   
**3.20**      724.5 m

---

page 916

## Chapter 4

- 4.2**       $22.7 \text{ lb/ft}^2$   
**4.4**      67 ft/sec  
**4.6**      216.8 ft/sec  
**4.8**      155 K,  $2.26 \text{ kg/m}^3$   
**4.10**       $4.19 \times 10^4 \text{ N/m}^2$   
**4.12**      6.3 ft/sec  
**4.14**      1.07  
**4.16**      2283 mi/h  
**4.18**      2.8 cm  
**4.20**       $2172 \text{ lb/ft}^2$   
**4.22**      56 m/sec  
**4.24**      0.801  
**4.26**       $614.3^\circ\text{R} = 154.3^\circ\text{F}$   
**4.28**       $q = (\gamma/2)pM^2$   
**4.30**       $p_0 = 1.656 \times 10^4 \text{ lb/ft}^2$ ,  $p_{02} = 1.193 \times 10^4 \text{ lb/ft}^2$ ;  
               Bernoulli's result =  $0.804 \times 10^4 \text{ lb/ft}^2$   
**4.32**      1.35  
**4.34**      540 N

- 4.36** 5452 N
- 4.38**  $4.555 \times 10^4 \text{ N/m}^2$
- 4.40** 535.9, 20.3 atm, 5791 K
- 4.42** 15,377, 3390 m/sec
- 4.44** [answer given in the problem statement]
- 4.46** (a) 340.2 m/sec, (b) 68 m and -68 m
- 4.48** 1.0184 kg/m<sup>3</sup> compared to 1.0066 kg/m<sup>3</sup>
- 4.50**  $0.99258 \times 10^5 \text{ N/m}^2$
- 4.52** 53.64 m/sec, 7.66 m/sec
- 4.54** (a)  $3.793 \times 10^3 \text{ N/m}^3$ , (b) 11.05 N/m<sup>3</sup>
- 4.56** 0.096 m
- 4.58** 0.309, 1709 lb/ft<sup>2</sup>
- 4.60** 2.00, 2817 lb/ft<sup>2</sup>
- 4.62** 0.4
- 4.64** 10.54 N/m

## Chapter 5

- 5.2** 23.9 lb, 0.25 lb, -2.68 ft lb
- 5.4**  $2^\circ$
- 5.6** 112
- 5.8** -0.27
- 5.10** -0.625
- 5.12** -0.129
- 5.14**  $2^\circ$
- 5.16** 0.68
- 5.18** 22.9 km

- 5.20** (a) 0.00462; (b) 0.0177
- 5.22** 1202 N
- 5.24** 0.11 per degree
- 5.26** 19.1 m/sec
- 5.28** 0.11, 0.329
- 5.30** 33.7
- 5.32** [The answer is given in the problem statement:  $f = C_D S$ ]
- 5.34** negligible (essentially zero)
- 5.36** 6.7%
- 5.38** 0.0055
- 5.40** 5.23 lb
- 5.42** (a)  $-0.5^\circ$ , (b) 7.05 lb
- 5.44** 100%

## Chapter 6

- 6.2** 98.1 lb
- 6.4** (a) sample point on curve; for  $V_\infty = 100$  ft/sec,  $P_R = 53.4$  hp; (b)  $V_{\max} = 201$  mph; (c) sample point on curve; for  $V_\infty = 300$  ft/sec,  $P_R = 360$  hp; (d) 198 mph
- 6.6** 42.5 ft/sec, 24.6 ft/sec
- 6.8** 28,500 ft
- 6.10** 97.2 ft/sec
- 6.12** 719 mi, 7.4 hr
- 6.14** [derivation]
- 6.16** 452 m
- 6.18** 268 m
- 6.20** 312 m, 0.358 rad/sec

- 6.22** [derivation]
- 6.24** In both cases the drag is higher than the sum of the weight and thrust.
- 6.26** 3440 km
- 6.28** [derivation]
- 6.30** 93,666 lb thrust from each engine at sea level
- 6.32** 5.84 m/sec<sup>2</sup>
- 6.34** 859 lb
- 6.36** 261.6 ft/sec
- 6.38** 754.4 ft/min
- 6.40** 0.0243

---

page 918

## Chapter 7

- 7.2** -0.003; 0.02 or 2% of the chord length ahead of the CG.
- 7.4** -215 Nm
- 7.6**  $h_n = 0.70$ , static margin = 0.44
- 7.8** static margin for stick-free is 79% of that for stick-fixed.

## Chapter 8

- 8.2** Venus, 10.3 km/sec; Earth, 11.3 km/sec; Mars, 5.02 km/sec; Jupiter, 59.6 km/sec
- 8.4**  $1.43 \times 10^{12}$  m
- 8.6** less than 1.3
- 8.8** 67.62 km/sec
- 8.10** 1.56 hr
- 8.12** 12.01 hr
- 8.14**  $1.00 \times 10^{10}$  m<sup>2</sup>/sec

**8.16** Discuss with professor, classmates, and/or colleagues.

**8.18** 805 m/s, 3534 m/s

**8.20** 608 m/s

**8.22** -1380 km, 19.7 km/s

## Chapter 9

**9.2** 17 atm

**9.4** 4587 lb

**9.6** 0.42 ft<sup>2</sup>

**9.8** (a) 375 sec; (b) 3678 m/sec; (c) 263.5 kg/sec; (d) 217,682 lb; (e)  
0.169 m<sup>2</sup>

**9.10** 4009.6 m/sec

**9.12** 0.36 in

**9.14** [derivation]

**9.16** 0.63

**9.18** 40,364 hp

**9.20** 1514°R

**9.22** 1.77

**9.24** 61.9 sec

**9.26** 7.9

**9.28** 11.8 kg

**9.30** 61,730 kg, 220 s

**9.32** 64.4 kg

## Chapter 10

**10.2** 20,906 K

**10.4** [derivation]

## A

- absolute ceilings, 493–498
- absolute viscosity coefficient, 230
- acceleration. *See also* propulsion; velocity of gravity, 69, 112–113, 121  
Newton’s second law, 67–68, 137, 143–144, 533, 672–673  
takeoff, 522–527
- Ackeret, Jacob, 424
- adiabatic flame temperature, 790
- adiabatic flow, 160–166, 199, 275
- advanced space propulsion, 810–812
- advance ratio, 752–753, 754, 815
- AEA. *See* Aerial Experiment Association
- AEDC. *See* Arnold Engineering Development Center
- Aerial Experiment Association (AEA), 39–44
- Aerial Locomotion (Wenham), 17, 420
- “aerial navigation,” 16–17
- aerial steam carriage, 13–14, 813
- Aero Club of America, 40, 42
- Aerodromes, 22–26, 36, 38–39, 40, 43, 44, 816
- aerodynamic center, 293–294, 609
- aerodynamic efficiency, 563–571, 579
  - design configurations for high  $L/D$ , 569–571
  - drag reduction, 564–569
  - lift-to-drag ratio in measuring, 563–564
  - propeller, 752–754
  - sources of drag, 564–569
- aerodynamic flow. *See* flow

aerodynamic forces. *See also* force measurement of, 8  
research on, 18  
sources of, 56–57, 62–64, 152, 442  
aerodynamic heating  
    Reynolds’s analogy, 268–270  
    atmospheric entry and, 720  
aerodynamicist, 57  
Aerodynamic Laboratory (France), 129  
aerodynamics, 55, 57, 134–278  
    aerodynamic center, 293–294, 609  
    airfoils, 290–294, 327–339. *See also* airfoils  
    airspeed, measurement of, 188–210  
    back face, 149, 151  
    Bernoulli and, 257–258  
    compressibility, 139–142, 226–227, 244–247  
    continuity equation, 137, 138–139, 174, 175, 215  
    control volume, 769  
    cylinders, 400–405  
    defined, 135  
    efficiency, 563–571  
    energy equation, 163, 166–173  
    entry heating, 725–726  
    Euler and, 258  
    flight dynamics, 55  
    flow, 57–62, 227–236. *See also* flow  
    from force, 147–153  
    free stream, 147–153  
    hypersonic, 835–865  
    incompressible/compressible flow, 139–142  
    isentropic flow, 160–166  
    laminar boundary layers, 236–241, 245–246  
    low-density flow, 843–847  
    momentum, 142–153  
    Newton’s second law, 143–144  
    Pitot tube, 57–58, 258–261. *See also* Pitot tube  
    pressure, 57–58

propellers, 749–756  
purposes of, 134  
Reynolds number, 267–271  
similarity parameters, 213  
speed of sound, 174–181, 343, 426–430  
spheres, 400–405  
streamlines, 60–62  
thermodynamics, 153–160  
velocity, 60–64  
wind tunnels, 182–187

*Aerodynamics* (Lanchester), 421

Aeronautical Research Laboratory, 820

Aeronautical Society of Great Britain, 14, 16–17, 21, 134, 420

aeronautical triangle, 35–44

aeronautics

- airspeed, 45–48
- arrival in the U.S., 21–26
- balloons, 4–6, 9–10, 38, 128, 813
- bird flight, 4, 18, 21, 27–28, 288, 294, 580
- developments, early, 1–26
- first powered takeoff and, 15
- flight altitude developments, 47, 48
- flight structures and. *See* flight structures
- flight velocity developments, 46–47, 141
- gliders. *See* gliders
- goals of, 45–48, 430, 659
- helicopters, 7, 112, 813
- kites, 38–39
- NASA, 101–104
- ornithopters, 4, 6, 18, 288
- powered flight, first, 1–3, 6, 15, 35
- propulsion. *See* propulsion
- public flight in the U.S., first, 39
- static stability, 35, 42

aero-propulsive-servo-elastic (APSE) effect, 549

aerospace plane, 836–838

Aerospatiale, 392

aerostatic machines. *See* balloons

AIAA. *See* American Institute of Aeronautics and Astronautics

ailerons, 27, 30, 34–35, 83, 601–603, 608, 653

*Aircraft Performance and Design* (Anderson), 85, 395, 489, 521, 527, 531

aircraft structures. *See* flight structures

Airey, John, 259–260

airfoils. *See also* wing(s)

- aerodynamic center, 293–294
- ailerons, 27, 30, 34–35, 83, 601–603, 608, 653
- air resistance, 9–10
- angle of attack, 251–254, 292, 293, 300–315
- aspect ratio, 13–14, 17, 376–379. *See also* aspect ratio
- bird flight, 18, 21, 290–291
- camber, 290–291
- chord line, 291–294
- critical Mach number for, estimation of, 332–334
- data on, 300–315, 886–913
- defined, 290
- dimensional analysis, 295–300
- drag, 244–257, 327–339. *See also* drag
- fixed, 6–8, 13–14, 288
- flaps, 35, 394–400
- flight structures. *See* flight structures
- flow separation, 250–255
- flow velocity, 60–62
- historical perspective, 415–422
- laminar flow, 312, 368–370, 569
- leading edge, 83, 250–255, 291, 313–314
- lift, 17, 294–298, 322–327. *See also* lift
- Mach number, 327–339
- nomenclature for, 290–294
- planform wing area, 73–75
- pressure, 63–64, 316–321, 327–339
- propellers, 749–756
- relative wind, 292
- shape of, 363
- shear stress, 63–64

stall, 302–305  
streamlines, 60–62  
supercritical, 342–346  
thin-airfoil theory, 301–302, 306–307, 329–330, 342–346, 381–393  
trailing edge, 83, 250–255, 291, 602  
upside-down orientation, 314–315, 412–415  
viscous flow, 136–137, 227–236, 244–257  
warping, 27–35  
wind tunnels, 29–30, 60–62, 182–187, 416–417  
wing loading, 73–75. *See also* wing(s)  
airframe-integrated SCRAMjet, 786, 787  
Air France, 392, 578  
“airmen,” 19, 600, 651–652  
*Airplane: A History of Its Technology, The* (Anderson), 35  
airplane control. *See* control  
airplane performance  
    absolute ceiling, 493–498  
    aerodynamic efficiency, 563–571, 579  
    airframe-associated phenomena, 458–460  
    altitude effects and, 470–479  
    Breguet and, 578  
    cowlings and, 568, 572–573  
    drag polar and, 441–447, 514–520, 547–550  
    early predictions of, 576–578  
    endurance and, 500–513  
    energy method and, 540–547  
    equations of motion and, 446, 448–450  
    fillets and, 573–576  
    gliding flight and, 489–492  
    historical perspective, 576–578  
    landing and, 13, 528–531  
    power and, 461–479  
    range and, 500–513, 578  
    rate of climb, 479–488, 489, 540–547  
    service ceilings and, 493–498  
    static, 449–450  
    vs. dynamic, 446–447

supersonic flight and, 547–550  
takeoff and, 522–528  
thrust, 450–460  
    level unaccelerated flight, 450–458, 461–466  
    maximum velocity, 458–460, 466–470  
    time to climb and, 499–500  
    turning flight and, 531–539  
    UAVs and, 550–559  
airplane(s). *See also* specific models  
    aerospace plane, 836–838  
    ailerons, 34–35, 83, 601–603, 608  
    airfoils and, 73–75. *See also* airfoils  
    anatomy of, 82–92  
    atmosphere and, 110–131  
    biplanes, 28–30, 34, 91–92, 580–581, 598–600  
    boy carrier and, 10, 12  
    canard configuration, 91, 615–616  
    Cayley and, 6–13  
    Chanute and, 21  
    control and, 633–640  
    conventional configuration, 85–89, 91  
    Curtiss and, 36–44  
    cutaway diagrams, 83–84, 89, 90  
    double-decker configuration, 91–92  
    Du Temple and, 15  
    energy height and, 540–547  
    experimental, 432  
    fins, 82  
    flight structures and, 82–92  
    form follows function, 85  
    fuselage, 82–83, 617–620  
    Henson and, 13–14  
    hopping of, 15–16, 416, 748  
    hypersonic, 47, 783–787, 835–865  
    internal structure, 83–84  
    jets. *See* jet airplanes  
    Langley and, 22–26, 35–36

monoplanes, 10, 15, 18, 19, 85, 91  
Mozhaiski and, 15–16  
nacelles, 82–83, 849–860  
pilots and, 10, 11, 15  
propellers and, 13, 466–467, 469. *See also* propellers/propeller-driven aircraft  
as single-stage-to-orbit vehicles, 836  
stabilizers, 82, 91  
stall and, 302–305  
static stability and, 35, 42  
Stringfellow and, 14–15  
supersonic. *See* supersonic flight  
three-view diagrams, 83, 84, 85  
triplanes, 10, 12, 14–15, 17, 21  
turboprops, 782–783  
airplane stability. *See* stability  
Air Research and Development Command (ARDC), 112, 130  
airspeed  
aeronautical goals of, 45–48  
Bernoulli’s equation and, 191–192, 200, 202  
compressible flow and, 197–204  
equivalent, 195, 213–214, 275  
incompressible flow and, 191–197  
isentropic flow and, 198–199  
Mach number and, 196–202  
measurement of, 188–210  
nonisentropic flow, 206  
Pitot tube and, 188–198, 258–261  
random molecular motion and, 189  
schlieren system and, 206–207  
shock waves and, 205–208, 209  
stagnation point and, 170–172, 190  
static pressure orifice, 190–191  
supersonic, 205–210. *See also* supersonic flight  
total values and, 188–189  
true, 195, 200  
wind tunnels and, 182–187. *See also* wind tunnels

airspeed, measurement of, 188–210  
Aldrin, Buzz, 737  
Aldrin, Edwin, 737  
Allegheny Observatory, 22  
altitude  
    absolute, 112  
    atmospheric entry and, 722–726  
    defined, 112–113  
    density, 125–128  
    geometric, 112, 115–116, 120–122  
    geopotential, 115–116, 120–122  
    gradient layers and, 116, 118–120, 122–123, 124–125  
    gravity and, 112–113  
    isothermal layers and, 116–121, 124–125  
    maximum velocity and, 480  
    power effects from, 470–479  
    pressure, 125–128  
    rate of climb and, 479–488, 540–547, 577  
    temperature, 125–128  
aluminum, 47  
American Institute of Aeronautics and Astronautics (AIAA), 17, 66–67, 66–67, 806–807, 823–824  
American Rocket Society (ARS), 17, 824  
Ames, Joseph S., 102  
Ames Aeronautical Laboratory, 103, 264, 266, 386, 655  
Ames Research Center, 207  
amphibious aircraft, 37–38  
Anderson, John D., 561, 818, 838  
    *Aircraft Performance and Design*, 85, 395, 489, 521, 527, 531  
    *The Airplane: A History of Its Technology*, 35, 588–589  
    *Fundamentals of Aerodynamics*, 324, 411, 412  
    *A History of Aerodynamics and Its Impact on Flying Machines*, 30, 131, 343, 403, 422, 520  
    *Hypersonic and High Temperature Gas Dynamics*, 171  
    *Modern Compressible Flow: With Historical Perspective*, 226, 426  
    “Research in Supersonic Flight and the Breaking of the Sound Barrier,” 343

*The World's Fastest Rocket Plane and the Pilot Who Ushered in the Space Age* (with Richard Passman), 487

- angle of attack, 292, 293, 599
  - absolute, 610–612
  - aerodynamic center and, 293–294
  - airfoil data and, 251–254, 292, 293, 300–315
  - atmospheric entry and, 719–720
  - canard configuration and, 615–616
  - change in lift slope and, 372–381
  - control and. *See* control
  - dimensional analysis and, 295–300
  - drag polar and, 295–300
  - effective, 364, 371–372, 381
  - equilibrium and, 604, 612–616
  - flaps and, 394–400
  - geometric, 364, 371–372
  - gliding and, 489–492
  - hypersonic vehicles and, 854–855
  - induced, 363–372
  - lift coefficient and, 294–298, 355–357
  - longitudinal control and, 633–638
  - stall and, 302–305
  - thin-airfoil theory and, 301–302
  - trim, 606, 612–616, 638–640
  - zero-lift, 301–302, 308–309, 610–612
- Apache, 763
- aperiodic motion, 606
- apogee, 681, 691, 730, 733
- Apollo* spacecraft, 719, 736–738
  - escape velocity and, 47
  - reentry velocity and, 182
  - space flight and, 661, 664
  - thermal barrier, 430
- Applied Aerodynamics* (Bairstow), 577–578
- APSE effect. *See* aero-propulsive-servo-elastic effect
- arc-jet thruster, 811–812
- ARDC. *See* Air Research and Development Command

area  
aerodynamic force and, 152  
area-velocity relation, 215–216

Argosy, 566, 569

Armstrong, Neil A., 659, 737

Armstrong-Whitworth Argosy, 566, 569

Army Ballistics Research Laboratory, 264

Arnold Engineering Development Center (AEDC), 264–265

ARS. *See American Rocket Society*

ascent phase, 662–663

aspect ratio, 13–14, 17  
design issues, 315–316, 359, 374, 376–379, 420, 431, 520, 575–576  
drag polar, 376–379, 420, 431, 514–522, 520, 575–576  
micro air vehicles, 561  
swept wings, 385–393

astronautics, 659, 660. *See also space flight*

*Astronautics and Aeronautics* (Pierpont), 420

astronomical units (AU), 718

astronomy, 22, 726–729

atmosphere  
aerodynamic center, 293–294  
altitude and, 110–113, 122–125  
ARDC model, 112  
atmospheric entry, 719–726  
as dynamic system, 110  
entry heating, 725–726  
equations of state, 116–125  
gradient layers, 116, 118–120, 122–123, 124–125  
gravity, 112–113  
historical research on, 128–130  
hydrostatic equation, 113–115  
hypersonic flow, 843–847  
isothermal layers, 116–121, 124–125  
lapse rate, 118–119  
non-Earth planets, 110, 111–112  
reference, 110–111, 121  
sea level, 112–113, 115–116

---

page 922

- sensible, 835–836
- speed of sound, 174–181
- standard model of, 110–131
  - English engineering units, 128–130, 877–884
  - standard (SI units), 128–130, 867–876
- atmospheric entry, 719–726
  - ballistic entry, 719–720
  - entry corridor, 721
  - equations of motion for, 722–726
  - exponential model atmosphere, 721–722
  - flight path geometry, 723
  - glide entry, 720
  - skip entry, 720
  - types of entry paths, 719–720
- automobiles, 44–45, 164–166, 748, 816–817
- Aviation: An Historical Survey from Its Origins to the End of World War II* (Gibbs-Smith), 14–15
- axial flow compressors, 771–774
- axial force, 294, 310–312, 322–326

## B

- back face, 149, 151
- Bairstow, Leonard, 577–578
- Baldwin, Frederick W., 39
- Baldwin, Thomas, 38
- ballistic coefficient, of entry vehicle, 725
- ballistic entry, 719–720
- balloons, 4–6, 9–10, 38, 128, 813
- Balzer, Stephen M., 23, 816
- bank angle, 649
- Beacham, T. E., 755
- Beasley, William, 309
- Beechcraft Bonanza, 536, 858
- Beech King Air, 419
- Bell, Alexander Graham, 38–39, 41, 43
- Bell Aircraft Corporation, 427–429
- Bell X-1, 342–343, 344, 787, 795–796, 824

Bell XS-1, 427–429, 430  
Bel P-39 Airacobra, 588–589  
Benz, Karl, 45  
Bernoulli, Daniel, 257–258, 259  
Bernoulli, Jakob, 257  
Bernoulli, Johann, 257, 258, 259  
Bernoulli effect, 408  
Bernoulli's equation, 137, 145–149, 150, 163, 173, 257, 258, 260, 407–408, 412  
    airspeed, 191–192, 200, 202  
    compressible flow, 170  
    Mach number, 332  
    viscous flow, 229  
    wind tunnels, 183, 186  
Berthelot equation, 65–66  
bicycles, 27, 29, 38  
biplanes, 28–30, 34, 91–92, 566, 580–581, 583  
bipropellants, 796  
bird flight, 4, 18, 21, 27–28, 288, 294, 580  
*Bird Flight as the Basis of Aviation* (Lilienthal), 18, 21, 294  
*The Bishop's Boys* (Crouch), 27  
Blanchard, J. P., 813  
Blasius, H., 273  
Bleriot, Louis, 34  
blunt bodies, 290  
Boeing, 93–94  
    B-29, 427–429, 584, 858  
    Boeing 707, 206, 770  
    Boeing 727, 398–400  
    Boeing 747, 152, 197, 520, 782  
    Boeing 777, 479, 481  
    Boeing B-17, 83–84, 89  
    787 Dreamliner, 47  
    Space Launch System, 93  
    X-45, 554–555  
Boltzmann constant, 59  
bottom dead center, 741

Boulton, M. P. W., 653  
boundary, 154–157  
boundary layers  
    area-velocity relation, 215–216  
    compressibility, 244–247  
    cylinders, 400–405  
    d'Alembert and, 271–272  
    dimensional analysis, 237  
    displacement thickness, 841–842  
    hypersonic flow, 835–865  
    laminar, 236–241, 245–246  
    Prandtl and, 271–274  
    pressure, 63–64. *See also* pressure  
    Reynolds number, 230–231, 236–237  
    shear stress, 63–64, 236–237, 240–241  
    skin friction, 244–247  
    spheres, 400–405  
    streamlining, 403  
    thickness, 229–230  
    transitional flow, 403  
    tripping, 404  
    turbulent, 241–244  
    viscous flow, 136–137, 229–236, 244–257

Bowcutt, Kevin G., 858, 859

boy carrier, 10, 12  
bracing struts, 581  
Bradshaw, Granville E., 577  
Brahe, Tycho, 680, 726  
Breguet, Louis-Charles, 578  
Breguet, Maison, 578  
Breguet formulas, 504–506, 578  
British Aircraft Corporation, 392  
British Airways, 392  
British Association for the Advancement of Science, 7  
British Broadcasting Corporation, 12  
Bruno, Giordano, 726  
Buckingham, E., 261

---

page 923

Bureau of Standards, 261  
burners, internal, 797–700  
burnout, 674, 690  
    velocity, 708  
Busemann, Adolf, 264, 266, 427  
Bykovsky, Valery, 736

## C

calculus, 257  
Caldwell, Frank, 343  
California Institute of Technology, 264, 573, 580, 715, 731  
camber, 290–291  
    flaps, 394–395  
    thin-airfoil theory, 301–302  
canard configuration, 91, 615–616  
canard surface, 91  
Cape Canaveral, 103, 134, 705, 716, 732, 795, 812, 828  
Carpenter, Scott, 735  
Carson, Bernard, 521  
Carson speed, 521  
Cartesian coordinates, 62–63, 728  
Cayley, George, 6–13, 21  
    airfoils, 415  
    background, 7  
    bird flight, 580  
    boy carrier, 10, 12  
    design evolution, 579–580  
    engines, 815–816  
    experiments, 261  
    as father of aerial navigation, 12–13, 14, 289  
    fixed wing, 6–8  
    funding for projects, 101  
    gliders, 8–13, 579–580, 651  
    helicopters, 7  
    lift, 6, 9, 288–289  
    power required, 576  
    propellers, 7, 813

propulsion, 6, 9, 288–289, 758  
stability/control issues, 651, 652–653  
whirling-arm apparatus, 7–8, 22

center of gravity  
canard configuration and, 615–616  
control and, 633–640  
moment coefficient at center of gravity, 610–627, 636–638, 644–645  
neutral point and, 628–629  
pitching and, 624–625  
stability and, 606, 617–627  
static margin and, 629–633  
tail and, 621–624  
total pitching moment and, 624–625  
wing contribution to, 617–620

centrifugal flow compressors, 773

centrifugal force, 449

centripetal force, 728, 729

Cessna Citation, 419, 456, 579

Cessna T-41A, 455–456

CFD (computational fluid dynamics), 561, 562, 777

Chaffee, Roger, 736

Chanute, Octave, 14–15, 21–22, 26, 27–29, 36, 577, 653

Charles, J. A. C., 5

Charles' gas law, 5

"chauffeurs," 19, 26

chemically reacting gas, 66

chemical reactions, 66, 843

chord line  
change in lift slope, 291–294  
chord length and skin friction drag, 256–257  
delta wings, 391–393  
virtual, 394–395

circulation equations, 411

circulation theory of lift, 410–412

Clark, L. R., 343

Clark University, 822

Clark Y shape, 756

climbing

- energy height, 540–547
- hodograph diagram, 483–485
- jet, 489
- kinetic energy, 540–541
- potential energy, 540–541
- power curves, 482–484
- rate of climb, 81–82, 479–488, 540–547
- time needed for, 499–500
- weight, 480, 481–482

clockworks, 15

Coffin, J. G., 578

Coffin-Breguet range equation, 578

*Columbia* space shuttle, 660, 662, 727

combustion, 759–760. *See also* engines

Goddard and, 822

supersonic, 786, 863–864

thrust-specific fuel consumption, 508, 785

combustors, 773

composite wings, 90–91

compressibility

adiabatic process, 160–166

airfoil data, 305–306

airspeed, 197–204

incompressible flow, 139–142, 364–365

isentropic flow, 211–213

lift coefficient, 326–327

Mach number, 226–227, 245–246

Pitot tube, 261

Prandtl-Glauert rule, 326

pressure coefficient, 318, 320–321

propellers, 753

Reynolds number, 244–247

skin friction, 244–247

compressibility corrections, 318, 326–327

compression ratio, 164–165, 763

compression stroke, 741, 742–743

computational fluid dynamics (CFD), 561, 562, 777  
Concorde, 47, 73, 171–172, 392–393, 549  
configuration layout, 85, 86–88  
Congreve, William, Sir, 820–821  
constant-pressure process, 158  
constant-volume process, 156–158  
continuity equation, 137, 138–139, 174, 175, 215  
continuum, 175, 215  
control, 595. *See also* stability  
    absolute angle of attack, 610–612  
    ailerons, 34–35, 83, 601–603, 608  
    center of gravity, 600–601, 617–627, 633–638  
    deflection, 608, 633–638  
    directional, 602–603, 647–648  
    elevator, 601–603, 608, 616, 636–638  
    European approach to, 651–652  
    historical perspective, 651–652  
    lateral, 34, 42, 648–650  
    longitudinal, 602–603, 633–638, 643–647  
    moments, 609–610, 624–625, 633–640  
    roll, 601–603  
    rudders, 601–603, 608, 616  
    stall, 637–638  
    static, 633–638  
    stick-fixed/stick-free, 633–638  
    trajectories. *See* trajectories  
    trim angle calculation, 638–640  
    wing warping, 653  
Wright brothers, 651–652  
control surfaces, 83  
control volume, 769–770  
Convair F-102A, 206–208, 209–210  
conventional configuration, 85–89, 91  
conversion factors, 68, 70, 75–77, 885  
cooling drag, 568  
Cooper, Gordon, 736  
Copernicus, Nicolaus, 680, 726, 728

heliocentric system of, 727  
coplanar orbital maneuvering, 699–705  
Corda, Stephen, 858, 859  
corner velocity, 538–539  
Corsair, 85, 86–88, 193, 370–371, 380–381  
Cowley, W. L., 578  
cowlings, 568, 572–573, 581, 583, 584  
crewed spacecraft, 98–100, 662  
critical Mach number, 327–339, 381–383, 419  
critical Reynolds number, 247–250, 401–402  
Crossfield, Scott, 431  
Crouch, Tom, 27  
cryogenic propellants, 796  
Culick, F. E. C., 580  
Curtiss, Glenn H., 36–44  
Aerial Experiment Association, 39–40  
aeronautical triangle, 35–44  
airplane manufacturing by, 41–44  
background, 37–38  
Bell and, 39–42  
Manly and, 43  
motorcycles, 38  
*Scientific American*, 40–41  
Wright brothers and, 38–44  
Curtiss Aeroplane and Motor Corporation, 43–44  
Curtiss Engineering Corporation, 578  
Curtiss-Wright Corporation, 44  
Curtiss-Wright P-40, 44  
curvilinear motion, 448–449  
cutaway diagrams, 83–84, 89, 90  
cylinders, 400–405

---

page 924

## D

Daedalus, 3–4  
Daimler, Gottlieb, 45  
d'Alembert, Jean le Rond, 271–272  
d'Alembert's paradox, 228, 271–272, 400

Daley, Daniel, 540*n*  
damped oscillations, 606–607  
Daniel Guggenheim Fund for the Promotion of Aeronautics, 822  
Daniels, John, 2  
d'Arlandes, Marquis, 4–5  
Dassault-Breguet Mirage 2000C, 391–392  
da Vinci, Leonardo, 4, 6, 261, 288, 426, 813  
*Deep Space I* spacecraft, 812  
defective streamlining, 565–566  
Degen, Jacob, 9  
de Havilland, Geoffrey, 101  
de Havilland, Geoffrey (son), 427  
Delagrange, Leon, 34  
de Laval, Carl G. P., 426  
Delta rocket booster, 93, 94  
Delta three-stage rocket, 93–94  
delta wings, 391–393  
Democritus, 53  
density. *See also* equations of state  
    aerodynamic force and, 152  
    ambient, 527, 763  
    compressibility and, 139–142  
    defined, 58–59, 71  
    flow field and, 63–64  
    hypersonic flow and, 843–847  
    isothermal layers and, 116–121, 124–125  
    Knudsen number and, 845–846  
    lift coefficient and, 294–298  
    shock waves and, 205–208  
    specific volume and, 71–82  
    speed of sound and, 174–181  
    standard atmosphere and, 110–131  
    stream tube and, 138–139  
    takeoff and, 527  
    thermodynamics and, 154–157  
density altitude, 125–128  
de Rozier, Pilatre, 4–5

*Der Vogelflug als Grundlage der Fliegekunst* (Lilienthal), 18, 21

Descartes, René, 728

design

airfoil shape, 363

airplane anatomy/three-view diagrams, 85

aspect ratio and, 315–316, 359, 374, 376–379, 420, 431, 520, 575–576

canard configuration and, 615–616

Cayley and, 579–580

configuration layout and, 570

cowlings and, 572–573, 581, 583, 584

dihedral angle, 650

energy height and, 540

evolution of, 579–584

fillets and, 573–576

flaps and, 394–400

flight structures and. *See* flight structures

form follows function in, 85

for high lift-to-drag ratio ( $L/D$ ), 569–571

high-speed civil transport (HSCT), 549

hypersonic vehicles and, 836–838, 853–864

lift-to-drag ratio, 520–521, 569–571

maximum rate of climb, 489

for maximum velocity at a given altitude, 480

micro air vehicles, 560–563

neutral point and, 628–629

Oswald efficiency factor and, 443–444

propellers and, 749–756

revolution in, 579–584

source of aerodynamic force, 152

specifications, 121

stall and, 302–305

static margin and, 631–633

streamlining and, 403

supercritical airfoil and, 342–346. *See also* airfoils

supersonic airplanes and, 547–550

supersonic swept wing, 385–393

supersonic wave drag, 358

- swept wings and, 381–393  
UAVs and, 550–559  
vertical tail volume ratio, 648  
viscous flow and, 235–236
- Design for Air Combat* (Whitford), 391
- detachment distance, 840
- D.H. 108 Swallow, 427
- diatomic oxygen, 843
- Diehl, Walter, 129–130, 578
- differential equations, 662, 672, 678, 724
- diffusers
- ramjets and, 783–787
  - turbojets and, 771–774, 775–781
  - wind tunnel, 182–183, 225
- dihedral angle, 649–650
- dimensional analysis, 237
- drag coefficient and, 298–300, 308–309
  - lift coefficient and, 295–300
  - moment coefficient and, 298–300
  - similarity parameters and, 298–300
- dirigibles, 38
- displacement
- displacement thickness, 841–842
  - dynamic stability, 606–608
  - engines and, 761–762
- Dollfus, Charles, 12–13
- Dommasch, D. O., 752
- double-decker configuration, 91–92
- Douglas Aircraft Company, 573
- Douglas DC, 573
- Douglas DC-3, 49, 403, 520, 573, 581, 583
- downwash, 361–362, 365, 525, 621, 623, 654–655
- 
- page 925
- Draft of Inter-Allied Agreement on Law Adopted for the Decrease of Temperature with Increase of Altitude, 129
- drag, 289
- atmospheric entry, 719–723, 725
  - axial force, 294, 310–312

boundary layers, 236–241. *See also* boundary layers  
calculation of induced, 363–372  
coefficient of, 298–300, 308–309, 575–576  
compressibility, 244–247  
cooling, 568  
cowlings, 568, 572–573, 581, 583, 584  
d'Alembert's paradox, 400  
defined, 292  
design evolution, 579–584  
dimensional analysis, 295–300  
drag-divergence Mach number, 339–346, 383  
due to lift, 444, 463–464, 514–515, 580  
equations of motion, 448–450  
fillets, 573–576  
finite wings, 359–381  
flow separation, 250–255, 565  
form, 45  
gases and, 180, 181, 183  
gliding and, 489–492  
hypersonic flow and, 850–852, 853–864  
incompressible flow theory, 365  
induced, 362, 363–372, 422, 525, 568  
landing and, 528–531  
methods of reducing, 564–569  
normal force, 294, 310–312, 322–326  
parasite, 443, 444  
per unit span, 306–307  
power and, 461–479  
pressure, 364  
profile, 256, 357–358, 362, 422  
protuberance, 568  
rate of climb, 479–488, 540–547, 577  
reduction of, 573–576  
relative wind, 292, 361–362  
Reynolds number, 230–231, 236–237  
skin friction, 230, 235–247, 256–257, 275, 569  
span efficiency factor, 366

stall and, 302–305  
streamlining and, 403  
supercritical airfoil, 342–346  
swept wings, 381–382  
takeoff performance, 522–528  
thrust and, 450–460  
total, 255  
total skin friction, 238–239  
transition and, 247–250  
types, 564–569  
viscous flow, 136–137, 227–236, 244–257  
wave, 347–357, 358, 568  
wind tunnels and, 262–267  
zero-lift, 343–346, 443–446, 453, 454, 463–465, 480, 489, 514, 520, 530, 575–576, 580, 582

drag-divergence Mach number, 339–346, 383  
drag polar, 366–367, 577  
airplane performance and, 441–447, 514–522, 547–550  
angle of attack and, 444–446  
hypersonic vehicle, 857–858  
lift slope change and, 372–381  
maximum lift and, 514–515  
Oswald efficiency factor and, 443–444  
parasite drag coefficient and, 443, 444  
supersonic flight and, 547–550  
zero lift and, 443–446

Duchène, Captain, 577  
Durand, William F., 102, 814  
Du Temple, Felix, 15, 21, 44, 748, 813  
dynamic performance, 446–447  
dynamics, 671  
dynamic similarity, 299–300

## E

*Eagle* spacecraft, 659, 741  
earth entry, 661–662, 719–721, 719n, 843–847  
earth satellites, 661–662

École Polytechnique, 577  
Edwards Air Force Base, 428, 431–432  
efficiency. *See* aerodynamic efficiency  
Eiffel, Gustave, 263, 417, 577  
Eiffel Tower, 577  
Einstein, Albert, 138n  
Eisenhower, Dwight D., 732, 733  
electric propulsion, 809–812  
    arc-jet thruster, 811–812  
    electron-ion thruster, 810–811  
        magnetoplasmadynamic thruster, 811  
    electron-ion thruster, 810–811  
elevators, 83, 601–603, 608, 616  
    elevator control effectiveness, 636–638  
    free elevator factor and, 644–645  
    hinge moment and, 641–643  
    longitudinal control and, 643–647  
    trim angle calculation and, 638–640  
Eleventh General Conference on Weights and Measures, 66  
elevons, 392  
elliptical orbits, 680–686. *See also* Kepler's laws  
    geometry and nomenclature for, 681  
elliptical trajectories, 687  
endurance  
    airplane weight and, 501–513  
    Breguet formulas and, 504–506  
    defined, 500–501  
    fuel and, 500–513  
    jets and, 508–513  
    physical considerations for, 501–502, 509–510  
    propeller-driven airplanes and, 500–508  
    quantitative formulation for, 502–504  
energy  
    accelerated rate of climb and, 540–547  
    conservation of, 137, 166  
    equation of, 163, 166–173  
    Euler's equation and, 163

internal, 154  
kinetic, 540–541. *See also* kinetic energy  
orbit equation and, 675–376  
potential, 540–541. *See also* potential energy  
propulsion and, 746. *See also* propulsion  
specific, 540  
thermodynamics and, 154–158  
total aircraft, 540  
energy height, 540–547  
engineering. *See also* design  
    basic terms, 53–57  
    partial derivatives and, 608–609  
    propulsion and, 746–749  
    units for, 66–71  
*Engineering News*, 260

## engines

air-breathing, 748  
altitude effects and, 527, 763  
ambient density and, 527, 745  
arc-jet thruster and, 811–812  
bottom dead center and, 759  
compression stroke, 759, 760–761  
displacement and, 761–762  
electric, 809–811  
electron-ion thruster and, 810–811  
exhaust stroke and, 760  
four-stroke cycle and, 757–761  
gas, 19, 23, 44–45, 748, 760–762  
historical perspective, 815–825  
hot-air, 15, 748  
indicated power, 761  
intake stroke and, 757–758, 763  
internal combustion, 44–45, 164–166, 748, 756–767, 815–818  
jet, early, 818–820  
mean effective pressure and, 761–762, 766–767  
Otto cycle and, 816  
Pilcher's, 20–21

---

page 926

power and, 461–479, 757–761  
power stroke, 760  
propulsion and, 746–749, 757–761. *See also* propulsion  
ramjet, 783–787, 835–836  
reciprocating, 466–467, 469, 472, 756–767  
reciprocating-propeller combination, 459  
rocket, 787–794  
    early history of, 820–825  
shaft brake power, 466–467, 761  
steam, 13–16, 22–23, 416, 748, 813, 815–816  
superchargers and, 763  
thrust and, 55, 450–460  
top dead center and, 759  
turbofan, 781–783, 829  
turbojet, 770–781  
two-cycle gas-burning, Lenoir’s, 816  
UAVs and, 551–554  
Wasp, 763  
work done by, 760–762

English Electric Lightning, 388–389, 391

English engineering system, 66–71, 128–130

- density units, 59, 877–884
- pressure units, 58, 877–884
- standard atmosphere and, 877–884
- temperature units, 60, 877–884

enthalpy, 156–159, 197–198

entropy, 160, 840–841

entropy layer, 840–841

entry corridor, 721

entry heating, 725–726. *See also* aerodynamic heating

*Epitome of the Copernican Astronomy* (Kepler), 727

equations

- acceleration, 69
- advance ratio, 752–753
- airspeed, 191–192, 196–204, 206
- aspect ratio, 315
- atmospheric entry, 722–726

axial forces, 323–324  
back-face pressure, 149, 151  
Bernoulli's. *See* Bernoulli's equation  
Berthelot, 65–66  
Breguet formulas, 504–506, 578  
circulation, 411  
compressibility, 140, 245  
continuity, 137, 138–139, 174, 175, 215  
density, 59  
differential, 662, 672, 678, 724  
drag, 255, 294, 298–299, 351, 365–366, 575–576  
drag-divergence Mach number, 340–341  
drag polar, 443, 446, 514–515  
dynamic pressure, 191–192  
elevator hinge moment, 655–657  
endurance, 502–506, 510–512  
energy, 163, 166–173  
energy height, 543  
Euler's, 137, 144–145, 146, 163, 166–167, 259, 407–408  
excess power, 81–82  
exponential model atmosphere, 721–722  
first law of thermodynamics, 154–160, 166  
flow transition, 248  
force, 67–71  
front-face pressure, 149–150  
geopotential/geometric altitudes, 115–116  
gliding flight, 489–492  
gravitational acceleration, 113  
high-temperature effects, 842–843  
hydrostatic, 113–115  
hypersonic flow, 841, 848, 857–858  
isentropic flow, 161–162  
isentropic relations, 174  
jet propulsion, 769–770, 783, 785  
Knudsen number, 845–846  
Lagrange's, 671–674, 729  
laminar boundary layer, 236–241, 245–246

landing, 528–530  
lift, 294–298, 299, 307, 326, 351, 359–360, 372–374, 394, 411  
linear burning rate, 799  
longitudinal static stability, 626–627  
low-speed subsonic wind tunnels, 182–184  
Mach angle, 348–349, 383  
modified Newtonian law, 830  
moment coefficient, 298–299  
at center of gravity, 610, 615, 619–620, 622–623, 626, 636–638, 644–645  
momentum, 142–153, 163, 176, 215  
motion, 446, 448–450, 676–679, 722–726  
Navier-Stokes, 272, 273  
neutral point, 626  
Newton’s second law, 67–71  
normal forces, 323–324  
orbit, 674–679, 686  
partial derivatives and, 608–609  
power available, 466–479, 557–558  
Prandtl-Glauert rule, 318  
pressure, 58, 316, 318, 330–331, 334  
propeller, 750, 752  
range, 502–506, 510–512  
rate of climb, 482–483, 540–543  
reciprocating engine, 760–762  
required power, 461–465, 470–471  
resultant aerodynamic force, 151–153  
Reynolds number, 230–231  
rocket equation, 800–803  
rocket propulsion, 788–792, 803–806  
sine-squared law, 848  
span efficiency factor, 366  
specific energy, 540  
specific excess power, 542–543  
specific heat, 157–158  
specific impulse, 789–790  
specific volume, 71

speed of sound, 175–178  
stall, 394  
standard atmosphere, 116–125  
static margin, 629–630  
subsonic compressible flow, 196–204  
supersonic flow, 206  
supersonic performance, 550  
supersonic wind tunnels, 215–216, 220  
tail lift coefficient, 634–638, 644  
takeoff, 523–527  
thermodynamic, 154–158  
thrust, 450–455, 480, 750, 770, 771, 774, 777, 778  
thrust-specific fuel consumption, 508  
time to climb, 499–500  
total aircraft energy, 540  
Toussaint, 129, 130  
trim, 633  
turbulent boundary layer, 243, 245–246  
turning flight, 533–538  
vertical tail volume ratio, 648  
viscous flow, 230–231  
viscous interaction, 841  
wing loading, 73–75  
work, 155–156  
equations of state, 174  
Berthelot, 65–66  
continuity equation, 146  
momentum equation and, 146  
perfect gas and, 64–66  
speed of sound and, 174–181  
standard atmosphere and, 116–128  
equilibrium, 605, 606–607  
angle of attack and, 606, 612–616  
dihedral angle and, 649–650  
longitudinal control and, 633–638, 643–647  
Erickson, Al, 655  
escape velocity, 690–692, 708–710

Eteve, A., 260  
Etkin, B., 650  
Euler, Leonhard, 258, 259, 729  
Euler's equation, 137, 144–145, 146, 163, 166–167, 259, 407–408  
exhaust stroke, 760  
expansion waves, 350–351  
expendable launch vehicles, 94  
exploration spacecraft, 661–662  
*Explorer I* satellite, 733  
exponential model atmosphere, 721–722  
*Extending the Frontiers of Flight* (Jenkins), 488

## F

Fales, Elisha, 343  
FAR. *See* Federal Aviation Requirements  
Farman, Henri, 34–35, 598–600, 651, 653  
Farren, William S., 566  
Federal Aviation Requirements (FAR), 527, 531  
fillets, 573–576  
finite wings, 289–290, 300, 316, 359–381, 420–422  
    change in lift slope and, 372–381  
    data for use with, 419  
    induced drag calculation and, 363–372  
    propellers as, 751–752  
    tip vortices and, 360–362, 421, 525  
fins, 82  
flappers, 9–10  
flaps, 35, 83. *See also* ailerons  
    angle of attack and, 394–400  
    camber and, 394–395  
    lift and, 394–400  
flight altitudes, 48. *See also* altitude  
flight dynamics, 443. *See also* control; stability  
    defined, 55  
flight mechanics. *See also* airplane performance; control; stability  
    overview, 446–447, 600  
flight path, 448–450

flight structures

- airplane anatomy, 82–92
- defined, 55–56
- fuselage, 82–83, 617–622
- space vehicle anatomy, 92–100
- flight velocities, 46. *See also* velocity
- float planes, 46–47
- flow, 57–62, 136–137, 227–236
  - adiabatic, 160–166, 199, 275
  - airspeed measurement and, 188–210
  - area-velocity relation and, 215–216
  - boundary layers and, 244–247. *See also* boundary layers
  - canard configuration and, 615–616
  - circulation theory and, 410–412
  - compressibility and, 139–142, 153, 170, 197–204, 226–227, 275. *See also* compressibility
  - cylinders and, 400–405
  - density and, 58–59, 843–847
  - direction and, 60–62
  - downwash angle and, 654–655
  - drag and. *See* drag
  - equations of motion and, 446, 448–450
  - finite wings and, 359–381
  - fixed path and, 60–62
  - free-molecule, 845–846
  - free stream and, 147–153
  - front face and, 147–153
  - hypersonic, 178, 839–853, 857–858
  - incompressible, 139–142, 191–197, 275
  - inviscid, 136–137, 841–842
  - isentropic, 160–166, 176–177, 198–199, 206, 211–213, 275, 331
  - jet propulsion and, 770–781
  - laminar, 137, 232–241, 270
  - lift and, 405–415. *See also* lift
  - low-density, 843–847
  - Mach number and, 327–339. *See also* Mach number
  - mass, 138–139, 275

- micro air vehicles and, 561–563  
momentum and, 57, 142–153  
Newtonian model and, 847–853  
nonadiabatic, 172  
nozzle, 216–226  
potential, 229, 411  
pressure and, 57–58  
propulsion and, 790–791  
quasi-one-dimensional, 188  
separation, 137, 250–255, 273, 565  
shear stress, 63  
shock waves, 205–208, 209  
similarity parameters, 298–300  
skin friction, 244–247  
sonic, 178, 275  
speed of sound and, 174–181  
spheres and, 400–405  
stall and, 302–305  
streamlines and, 60–62  
subsonic, 182–187, 196–204, 275, 339–340, 381–383  
subsonic compressible, 197–204  
supersonic, 178, 205–210, 205–210, 214–226, 275, 342–346, 350–351, 424, 426–430  
swept wings and, 381–393
- flow—*Contd.*
- temperature and, 59–60
- 
- page 928
- three-dimensional, 316  
transition and, 247–250, 270  
transonic, 178  
turbulent, 137, 232–236, 268–270  
two-dimensional, 315–316  
velocity and, 60–64. *See also* velocity
- wind tunnels and, 182–187, 214–226
- flow field, 62–64, 229
- defining, 62–63
- specifications of, 62
- flow velocity, 60–62

FLTSATCOM spacecraft, 96–97  
fluid dynamics, 267–274  
fly-by-wire concept, 35, 652  
force  
    aerodynamic center and, 609  
    centrifugal, 449  
    centripetal, 728, 729  
    control and, 608. *See also* control  
    dimensional analysis and, 295–300  
    equations of motion and, 446, 448–450  
    flight structures and. *See* flight structures  
    hypersonic flow and, 847–853  
    law of universal gravitation and, 728–729  
    moments and, 617–620. *See also* moments  
    Newton’s second law and, 143–144  
    orbit equation, 675–676  
    propellers and, 466–467, 469, 472, 489, 747, 748  
    thrust and, 767–770. *See also* thrust  
force diagrams, 448–449  
Ford 4-AT Trimotor, 45  
form drag, 445, 565–568  
Fort Myer, 34, 40–41  
Frederick the Great, King of Prussia, 729  
free-molecule flow, 845–846  
free stream, 294  
    airfoils and, 291–292  
    dimensional analysis and, 295–300  
    drag-divergence and, 339–346  
    front face and, 147–153  
    relative wind and, 291–292  
    supersonic, 383–393  
French Revolution, 729  
French SPAD XIII, 403, 520, 581, 583  
friction. *See also* boundary layers; shear stress  
    cylinders and, 400–405  
    d’Alembert’s paradox and, 400, 401  
    flow separation and, 250–255

spheres and, 400–405  
takeoff performance and, 524  
viscous flow and, 136–137, 227–236, 244–257, 841–842  
*From Engineering Science to Big Science* (Mack), 343  
front face, 147–153  
FST. *See* Full Scale Wind Tunnel  
fuel. *See also* engines  
    rocket propellants and, 794–799  
    supersonic flight and, 550  
    thrust-specific consumption of, 508, 781–782  
    weight of, 501–513, 550  
fuel-to-air ratio, 763  
Full Scale Wind Tunnel (FST)  
    Brewster Buffalo mounted in, 587  
    Tunnel Drag Cleanup program, 584–589  
fully viscous shock layer, 839  
*Fundamentals of Aerodynamics* (Anderson), 324, 411, 412  
fuselage, 82–83, 617–620  
future of flight, 820

## G

Gagarin, Yuri A., 735, 821  
galactic cosmic rays (GCR), 371  
Galilei, Galileo, 726  
Gargarin, Yuri, 735  
gas engines, 19, 23, 44–45, 748, 760–762  
gases, 57–62. *See also* atmosphere  
    atmosphere and, 57, 110–131. *See also* atmosphere  
    chemically reacting, 66, 843  
    control volume and, 769–770  
    density and, 58–59  
    drag and, 180, 181, 183  
    equation of state for perfect, 64–66  
    flow and, 136–137  
        fundamental physical quantities of, 57–62  
    flow velocity and, 60–62  
    fundamental physical quantities of, 57–62

jet propulsion and, 767–787  
kinetic theory of, 257–258  
pressure and, 57–58  
pressurized cabin calculations, 78–80  
shock waves and, 174–181, 205–208  
streamlines and, 60–62  
temperature and, 59–60  
thermodynamics and, 153–160  
viscous flow and, 227–236, 244–257

gas law, Charles', 5

Gaubil, Antonine, 820

GCR. *See* galactic cosmic rays

*Gemini* spacecraft, 719, 736

General Atomics Predator, 551–554

General Dynamics

- F-16, 536, 652
- F-18, 652
- F-111, 345–346, 858

General Electric, 777

General Motors, 45

geocentric system, 726

George C. Marshall Space Flight Center, 103

Geostationary Operational Environmental Satellites (GOES), 96

geostationary orbit, 96–97

German Society for Space Travel, 824

Gibbs-Smith, Charles H., 12, 14, 15–16, 19, 32

Gibson, A. H., 270

Giffard, Henri, 9–10, 813

Gilbert, William, 728

Glauert, Hermann, 426

*Gleanings in Bee Culture* (journal), 32

Glenn, John, 735

glide entry, 720

gliders

- Cayley and, 8–13, 579–580, 651
- Chanute and, 21–22
- Lilienthal and, 17–20, 27

Pilcher and, 20–21  
Wright brothers and, 28–31  
gliding flight, 489–492  
Global Hawk, 552–553, 554  
Gloster Aircraft, 819  
Gloster E. 28/39, 819–820  
Goddard, Robert H., 659, 746, 748, 797, 821–824  
Goddard Space Flight Center, 103, 824  
GOES. *See* Geostationary Operational Environmental Satellites  
*Golden Flyer*, 41–42  
golf balls, 404–405  
Golubev, I. N., 15  
Gordon Bennett Cup, 42  
Gorrell, Edgar S., 417–418  
gradient layers, 116, 118–120, 122–123, 124–125  
Grahame-White, Claude, 441  
gravity, 660  
    acceleration of, 69, 112–113, 121  
    altitude and, 110–113  
    atmospheric entry and, 719, 720  
    control and, 604  
    hydrostatic equation, 113–115  
    law of universal gravitation, 112–113, 680, 727–729  
    Newton’s second law and, 143–144  
    stability and, 600–601  
    takeoff and, 525  
    trajectories and. *See* trajectories  
gravity-assist trajectories, 713–715  
Great Plague, 728  
Greeks, 3–4, 53, 680, 726  
Gregg, Willis Ray, 129  
Grissom, Gus, 735, 736  
ground effect, 525  
ground roll, 522–523, 524–525  
    landing and, 528–531  
    takeoff and, 524–527  
Grumman

---

page 929

- A-6E, 858
- F3F-2, 92
- F6F Hellcat, 858
- X-29, 29, 391
- X-29A, 90–91
- Guggenheim Foundation, 573, 824
- Guy, A. E., 260

## H

- Hage, R. E., 650
- Hagen, John P., 732
- Halley, Edmund, 729
- Hallion, Richard, 429–430
- Hansen, James R.
  - Engineer in Charge*, 589
- Harvard Observatory, 22
- Hawk* hang glider, 20–21
- Hayes, Wallace D., 835
- heat transfer, in space, 665–669
- Heinkel, Ernst, 818
- Heinkel He 178, 748, 818
- Hele-Shaw, H. E., 755
- helicopters, 7, 112, 813
- heliocentric system, 727
- heliocentric trajectories, 711–712
- heliopause, 718
- heliosheath, 718
- heliosphere, 718
- Henri Farman III*, 34–35, 653
- Henson, William Samuel, 12, 13–14, 21, 441, 652–653, 748, 813
- Herschel, W. H., 261
- High-Speed Aerodynamics* (Hilton), 385
- high-speed civil transport (HSCT), 549
- high-speed float planes, 46–47
- high-speed research (HSR), 549
- A History of Aerodynamics and Its Impact on Flying Machines* (Anderson), 30, 131, 343, 403, 422, 520

Hitler, Adolf, 273–274  
hodograph diagram, 483–485  
Hohmann transfer, 699–705  
Hooke, Robert, 729  
hopping, 15–16, 416, 748  
horizontal stabilizer, 91, 602  
horsepower, 80–81, 460, 467, 468  
hot-air engines, 15, 748  
HSCT. *See* high-speed civil transport  
HSR. *See* high-speed research  
Hubbard, T. O'B., 577  
Huffman Prairie, 32  
human space flight, history of, 734–740  
Huygens, Christian, 728, 729  
hybrid rockets, 799  
*Hydrodynamica* (Bernoulli), 258, 259  
hydrogen  
    hydrogen-filled balloons, 5–6  
    hydrogen-fluorine rocket engines, 790  
    subsonic velocity of moving through, 180–181  
hydrostatic equation, 113–115  
hyperbolic excess velocity, 710  
hyperbolic trajectories, 687, 690, 708–710  
hypergolic propellants, 796–797  
*Hypersonic and High Temperature Gas Dynamics* (Anderson), 171, 838  
hypersonic flight, 47, 783–787  
    first manned, 430–432  
    records, 487  
    SCRAMjets, 786, 787, 858, 861–862  
    thermal barrier, 430  
    wind tunnels, 267  
hypersonic flow, 178, 835–865  
    chemical reactions, 843  
    detachment distance, 840  
    displacement thickness, 841–842  
    drag, 850–852, 853–864  
    entropy layer, 840–841

high-temperature effects, 842–843  
induced pressure increment, 842  
Knudsen number, 845–846  
lift, 850–852, 853–864  
low-density flow, 843–847  
Newtonian law, 847–853  
physical aspects, 839–847  
pressure, 864  
shock waves, 839–847, 859–860  
viscous interaction, 841–842  
hypersonic vehicles, 835–865  
aerospace plane, 836–838  
angle of attack, 854–855  
drag, 850–852, 853–864  
first, 838  
jets, 860–861  
lift, 850–852, 853–864  
Newtonian sine-squared law, 838  
propulsion integration, 860–861  
ramjets, 783–787, 855–856  
Reynolds number, 854–857  
transatmospheric, 836–838  
wave riders, 839, 859

## I

Icarus, 3–4  
ICBMs. *See* intercontinental ballistic missiles  
incompressible flow, 275, 365  
    airspeed, 191–197  
    properties, 139–142  
indicated power, 761  
induced drag, 362, 363–372, 422  
Industrial Revolution, 21  
infinite wings, 289–290, 300, 308, 315–316, 360  
inlets, turbojet engine, 771  
Institute of Aeronautical Sciences, 17, 823–824  
intake stroke, 757–758, 763

---

page 930

integral calculus, 257  
intercontinental ballistic missiles (ICBMs), 265–267, 705, 719, 732, 734, 735, 818  
intermolecular force field, 64  
internal burners, 797–798  
internal combustion engines, 44–45, 164–166, 748, 756–767, 815–818  
internal energy, 154, 159–160  
International Geophysical Year, 732  
International Space Station (ISS), 93, 100, 662, 705, 706, 740  
interplanetary trajectories. *See* trajectories  
*Introduction to the Design of Fixed-Wing Micro Air Vehicles* (Mueller et al.), 560, 563  
inviscid flow, 136–137, 841–842  
isentropic flow, 176–177, 198–199, 206, 275, 331  
    adiabatic flow, 160–166, 199, 275  
    compressibility, 211–213  
    supersonic wind tunnels, 214–226  
isothermal layers, 116–121, 124–125

## J

Jacobs, Eastman N., 418  
James, William, 423  
jet airplanes, 747, 748  
    hypersonic vehicles, 860–861  
    range of, 508–513  
    rate of climb, 489  
    turbojets, 770–781  
jet engines, 747, 748  
    engine efficiency, 785  
    historical perspective, 818–820  
    power available, 459–460, 468–470, 472, 473  
    propulsion of, 767–787  
    ramjets, 783–787  
    turbofan engines, 781–783  
    turbojet engines, 770–781  
jet propulsion, 468–470, 472, 473, 767–787  
    control volume, 769–770

historical perspective, 818–820  
ramjets, 783–787  
thrust equation, 767–770  
turbofan engines, 781–783  
turbojet engines, 770–781  
Jet Propulsion Laboratory (JPL), 54, 98–100, 715, 731  
Jex, H. R., 580  
John F. Kennedy Space Center, 103, 705, 716  
Johnson Spacecraft Center, 103  
Jones, B. Melville, 565–566  
Joukowski, Nikolai, 262  
*Journal of Natural Philosophy*, 8–9  
Judge, A. W., 578  
*June Bug*, 40, 41  
Junkers, Hugo, 91  
Jupiter, 663, 690, 714, 716–717  
Jupiter C rocket, 733

## K

Kennedy, John F., 735  
Kepler, Johannes, 680, 686, 726–727  
    *Epitome of the Copernican Astronomy*, 727  
    *Somnium*, 727  
Kepler's laws, 680–686  
    first law, 680–683, 727  
    second law, 683–684, 727  
    third law, 684–686, 727  
Key, Francis Scott, 721  
Khan, Genghis, 820  
Kill Devil Hills, North Carolina, 1–3, 26, 29–31, 36, 45, 813, 817  
kinetic energy, 257–258, 540–541  
    Boltzmann constant, 59  
    Lagrange's equation, 672–673, 674  
    propellers, 753  
    temperature, 59–60, 842–843  
kites, 38–39  
Kitty Hawk, North Carolina, 1–3, 6, 28–29, 289

Knight, Pete, 432, 487  
Knudsen number, 845–846  
Komarov, Vladimir, 736  
Korean War, 200, 581  
Kothari, A. P., 561  
Kuchemann, D., 858  
Kutta condition, 412  
Kutta-Joukowsky theorem, 411–412, 421

## L

Lagrange, Joseph L., 729  
Lagrange’s equation, 671–674, 675, 729  
Lagrangian function, 673, 674, 676  
Lamb, Horace, 270–271  
laminar flow airfoils, 312, 368–370, 569  
laminar shear stress, 232–236  
landing, 13, 528–531  
Lang, James D., 540n  
Langen, E., 45  
Langley, Samuel Pierpont, 22–26, 36, 748  
aeronautical triangle, 35–44  
background, 22  
as “chauffeur,” 26  
engines and, 798–799  
experiments, 22–26, 27–28, 29, 30–32, 35–36, 38–39, 103, 262  
Manly and, 23–26  
propellers, 813  
Langley Field, 102, 129, 572  
Langley Memorial Aeronautical Laboratory, 103, 263–264, 265, 267, 418, 419, 426  
Langley Research Center, 34, 343, 786  
lapse rate, 118–119  
Launch Operations Center, 103  
launch vehicles, 93–96, 93–100  
crewed spacecraft, 98–100  
uncrewed spacecraft, 96–98  
Laval nozzles, 264

- law of universal gravitation, 112–113, 727–729  
leading edge. *See* airfoils  
Leedeboer, John, 577  
Lenoir, Jean Joseph Etienne, 44, 816  
Levy, H., 578  
Lewis, George, 103  
Lewis Engine Research Laboratory, 103  
Lewis Flight Propulsion Laboratory, 817  
lift  
    aspect ratio, 376–379. *See also* aspect ratio  
    axial force, 294, 310–312  
    Cayley and, 6, 9, 288–289  
    change in slope of, 372–381  
    circulation theory of, 410–412  
    coefficient of, 294–298  
    defined, 292  
    design evolution, 579–584  
    dimensional analysis, 295–300  
    drag and, 363–372. *See also* drag; lift-to-drag ratio  
    equations, 294–298, 299, 307, 326, 351, 359–360, 372–374, 394, 411  
    equations of motion and, 448–450  
    flaps, 394–400  
    flow separation, 250–255  
    gliding, 489–492  
    hypersonic, 850–852, 853–854  
    Kutta-Joukowsky theorem, 411–412  
    landing, 528–531  
    Newton’s third law, 410  
    normal force, 294, 310–312  
    per unit span, 306–307  
    power, 461–479  
    production of, 290, 322–326, 405–415  
    propellers, 466–467, 469, 472, 493–494, 747, 748  
    rate of climb, 479–488, 540–547  
    stall, 302–305, 394  
    static margin, 629–633  
    supersonic, 383–393
- 
- page 931

- swept wings, 381–393
- tail, 621–624
- takeoff, 522–528
- thin-airfoil theory, 301–302, 306–307
- thrust, 450–460
- Toussaint and, 129
- Wenham and, 17
- zero. *See* zero lift
- lift coefficient
  - angle of attack, 294–298, 355–357
  - axial force, 322–326
  - compressibility correction, 326–327
  - defined, 297
  - dimensional analysis, 295–300
  - Mach number, 297–300
  - normal force, 322–326
  - pressure coefficient, 322–326
  - Reynolds number, 297–300
- lift-induced thrust required, 454
- lifting body, 861
- liftoff distance, 522–523, 524–525, 527–528
- lift-to-drag ratio ( $L/D$ ), 452–453, 490–491, 520–521, 563–571
  - design configurations for high, 569–571
  - in hypersonic flow, 850–852
  - importance of, 564
  - jet airplanes, 510–513, 563–564
  - as measure of aerodynamic efficiency, 563–564
  - propeller-driven planes, 502–504, 563–564
  - sources of drag, 564–569
  - value of, 564
- Lilienthal, Otto
  - aeronautics and, 17–20, 21, 27, 29, 30, 34
  - bird flight and, 18, 294
  - drag polar drawings, 577
  - gliders and, 17–20
  - stability/control issues, 634, 652–653
  - Wright brothers and, 294

- Lilienthal tables, 294  
Lindbergh, Charles A., 49, 500, 822  
linear burning rate ( $r$ ), 799  
liquid propellants, 794–797  
    bipropellants, 796  
    cryogenic propellants, 796  
    hypergolic propellants, 796–797  
    monopropellants, 796  
load factor, 533  
Lockheed C-141A, 445, 547  
Lockheed Electra, 783  
Lockheed F-80, 200, 201, 203–204  
Lockheed F-104 Starfighter, 50, 246–247, 352–355, 358, 386, 389, 395–398, 399  
Lockheed Martin DarkStar, 553–554  
Lockheed Martin F-16, 213–214  
Lockheed Martin F-22 Raptor, 35, 540, 541  
Lockheed Martin F-117A, 73–75, 77–78, 84, 90  
Lockheed P-38, 668–669  
Lockheed P-80 Shooting Star, 200, 840  
Lockheed Skunk Works, 386  
Lockheed SR-71 Blackbird, 422  
Lockheed U-2, 366, 377–378, 553  
Loftin, L., 581  
longitudinal controls, 602–603, 633–638  
Louden, F. A., 418  
Louis W. Hill Space Transportation Award, 823  
low-density flow, 843–847, 843–847

## M

- Mach, Ernst, 262, 422–425, 426  
Mach, Ludwig, 262  
Mach angle, 348–349, 383  
Mach cone, 383, 386–390  
Mach meter, 199–200  
machmeter, 429  
Mach number, 47, 178–181, 206, 208, 275

- accelerated rate of climb, 540–547
  - airspeed, 196–202
  - Bernoulli’s equation, 332
  - compressibility, 226–227, 245–246
  - critical, 327–339, 381–383, 419
  - drag-divergence, 339–346, 383
  - energy height, 540, 541
  - free-stream, 179–180, 211–212, 231, 239–240, 341
  - high-temperature effects, 842–843
  - historical perspective, 422–425
  - hypersonic flight, 430–432, 487, 836–865
  - lift coefficient, 297–300
  - local, 179
  - origins, 262
  - pressure coefficient, 318, 319–320
  - ramjets, 783, 785–786
  - similarity parameters, 298–300
  - sound barrier, 359, 427, 429
  - supercritical airfoil, 342–346
  - supersonic flight, 426–430, 547–550
  - swept wings, 381–393
  - thermodynamics, 153
  - transitional flow, 247–250
  - wave drag, 347–357
- Mach number-independence principle, 858–859
  - Mach wave, 348–351
  - Mack, Pamela, 343
  - magnetoplasmadynamic (MPD) thruster, 811
  - maneuvering, orbital, 698–708
  - maneuver point, 538
  - Manly, Charles, 23–26, 40, 43, 816, 817
  - Manned Spacecraft Center (now Johnson Spacecraft Center), 103
  - manned space flight, history of, 734–740
  - manometers, 183–185
  - Mariner* spacecraft, 97–98, 99
  - Mars, 675
  - Pathfinder* spacecraft, 97

- Mars Polar Lander, 54  
Martin, Glenn L., 303–304  
Martin, H. S., 417–418  
Martin Company, 750  
Marvin, C. F., 128–129  
mass  
    conservation of, 137, 138–139, 408  
    continuity, 406–407  
    continuity equation, 138–139  
    flow, 138–139  
    stream tube and, 138–139  
    as system, 154  
    thermodynamics, 154  
Mastlin, Michael, 726  
*McClure's Magazine*, 27  
McCook Field, 129, 343  
McCurdy, Douglas, 39–40  
McDonnell-Douglas, 93–94  
    DC-8, 770  
    DC-10, 197, 200–202  
    F-15, 536, 540, 541  
    MD-11, 782  
McFarland, Marvin W., 29  
McGhee, Robert, 309  
McKinley, William, 23  
ME 262 jet, 748, 770  
mean camber line, 290–291  
mean free path, 844  
*Mécanique Analytique* (Lagrange), 729  
mechanics, 671  
*Mechanics' Magazine*, 10–12, 815  
*The Mechanics of the Airplane: A Study of the Principles of Flight* (Duchène), 577  
Mercury-Redstone mission, 735  
Mercury spacecraft, 719, 734–736  
*Method of Reaching Extreme Altitudes* (Goddard), 822  
metric engineering system, 66–71

micro air vehicles, 560–563  
aspect ratio, 561  
flow and, 561–563  
Reynolds number, 560–561

micro-meteoroid and orbital debris (MMOD), 670–671

Milestones of Flight Gallery, National Air and Space Museum, 432

Miller, Arnold R., 181

MMOD. *See* micro-meteoroid and orbital debris

*Modern Compressible Flow: With Historical Perspective* (Anderson), 226, 426

modified Newtonian law

Moffett Field

moments

- aerodynamic center and, 609
- center of gravity and, 610–627, 636–638, 644–645
- chord line and, 293
- coefficient of, 298–300
- control and, 609–610, 624–625, 633–640. *See also* control creation of, 292–293
- dihedral angle and, 649–650
- dimensional analysis and, 295–300
- elevator hinge, 641–643
- equilibrium and, 605
- per unit span, 306–307
- stability and, 609–610, 624–625. *See also* stability
- tail and, 621–624
- total pitching moment and, 624–625
- trim angle calculation and, 638–640
- wings and, 617–620
- zero-lift, 609–610. *See also* zero lift

momentum

- Bernoulli's equation, 145–149, 150
- equation of, 142–153, 163, 176
- Euler's equation, 144–145, 146
- Newton's second law, 143–144
- pressure, 57, 142–153
- thrust, 767–770. *See also* thrust

momentum equation, 215  
Mongols, 820  
monoplanes, 10, 15, 18, 19, 85, 91  
monopropellants, 796  
Montgolfier brothers, 5–6, 21, 746  
Monthyon Prize, 577  
motion  
    control, 598–604. *See also* control  
    curvilinear, 448–449  
    damped oscillations, 606–607  
    equations of, 446, 448–450, 676–679, 722–726  
    landing, 528–531  
    lateral, 602–603  
    law of universal gravitation, 680, 727–729  
    longitudinal, 602–603  
    Newton’s second law, 446, 448–449. *See also* Newton’s second law  
    planetary, 680–686, 728  
    rectilinear, 448–449  
    roll, 597–599  
    takeoff, 524–527  
    trajectories. *See* trajectories  
motorcycles, 38, 42  
Mozhaiski, Alexander F., 15–16, 21, 44, 748, 813  
multistage rockets, 803–809  
Munk, Max, 422  
Munn, Charles A., 40  
Muroc Dry Lake, 428, 431

## N

NACA. *See* National Advisory Committee for Aeronautics  
nacelles, 82–83, 839–840  
NASA. *See* National Aeronautics and Space Administration  
NASP. *See* National Aerospace Plane  
National Advisory Committee for Aeronautics (NACA), 261, 417–420, 584–589, 669  
    airfoil data and, 300–315, 417–419, 886–913  
    cowlings and, 572–573, 581, 583, 584

- drag reduction and, 573–576  
engines and, 763, 817  
fillets and, 573–576  
five-digit system of, 419  
four-digit system of, 418  
historical perspective, 101–104, 128–130  
hypersonic flight and, 430  
propellers, early development, 753, 756, 814–815  
propulsion and, 763  
range and, 578  
sound barrier and, 427, 429  
stability and, 598  
standard atmosphere, 128–130  
wind tunnels and, 263–267, 418, 419
- National Aeronautics and Space Administration (NASA), 47  
airfoil data and, 300–315  
airfoil work, 418–420  
Goddard Space Flight Center, 103, 806  
high-speed research and, 549  
historical perspective, 101–104  
multistage rockets and, 783  
SCRAMjets and, 786, 787  
SI units and, 66–71  
supercritical airfoils and, 343–345
- National Aerospace Plane (NASP), 837
- National Air and Space Museum Smithsonian Institution, 3, 24, 35, 43, 49, 50, 289, 429–430, 432, 820
- National Oceanic and Atmospheric Administration (NOAA), 553
- National Physical Laboratory (NPL), 263, 417–418
- Naval Bureau of Aeronautics, 129–130
- Naval Ordnance Laboratory, 264, 267
- Navier, M., 272
- Navier-Stokes equations, 272, 273
- Nazi regime, 273–274
- near-sonic flight, 459. *See also* Mach number
- negative limit load factor, 538
- Neptune, 663, 664, 716, 717

---

page 933

Nesmeyanov, A. N., 730, 731  
net aerodynamic force, 238  
net thrust, 750  
neutral point, 624–625  
Newton, Isaac, 727–729  
    background, 728  
    boundary layers and, 271  
    hypersonic flow and, 847–853  
    law of universal gravitation, 112–113, 727–729  
    sine-squared law of, 838, 848–852  
Newton-Hooke law, 729  
Newtonian theory, 579–580  
Newton's second law, 137, 143–144, 406, 408, 446, 448–449, 533, 534, 769–770, 777, 800  
    dynamics, 672  
    Lagrange's equation, 672–674  
    takeoff performance, 523, 524  
    units for, 67–71  
Newton's third law, 410, 749, 751, 759  
Nicholson's *Journal*, 8–9, 815  
Nixon, Richard M., 431  
NOAA. *See* National Oceanic and Atmospheric Administration  
nonisentropic flow, 206  
normal force, 294, 310–312, 322–326  
North American F-86, 200, 581, 584, 858  
North American F-86H, 83, 84  
North American F-100, 194  
North American P-51 Mustang, 235–236, 368–370, 858  
North American P-51D Mustang, 76–77  
North American X-15, 430–432, 487, 787, 838, 863–864  
North American X-29, 616  
North American XB-70, 616, 617  
Northrop Grumman Global Hawk, 552–553, 554  
Northrop YB-49, 368  
nozzles, 216–226, 820, 822  
    ramjet engines, 783–787  
    rocket engines, 788–794

turbofan engines, 781–782  
turbojets, 772, 773–781  
wind tunnel, 183, 186–187, 264  
NPL. *See* National Physical Laboratory

## O

Obert, E. F., 763  
Oberth, Hermann, 721, 730, 807  
Office of Naval Research, 719  
Old Dominion University, 34  
orbital energy, 688–690  
orbital maneuvering, 698–708  
    change in velocity and, 698  
    coplanar orbital maneuvers, 699–705  
    Hohmann transfer, 699–705  
    plane change maneuver, 705–708  
orbital motion  
    elliptical trajectories, 687  
    geostationary, 96–97  
    orbit equation, 674–679, 686  
Orbital Sciences Pegasus, 94  
Orbital Sciences X-34, 94, 95  
orbital shapes, 686–688  
orbital trajectories. *See* trajectories  
orbital velocities, 690–695  
orbital velocity, 692, 706–707  
orbit equation, 674–679, 686  
    equation of motion, 676–679  
    force, 675  
    kinetic energy, 676  
    potential energy, 675–676  
ornithopters, 4, 6, 18, 288  
Oswald, W. Bailey, 443  
Oswald efficiency factor, 443–444  
Otto, Nikolaus August, 45, 816  
Otto cycle, 816  
oxidizer tanks, 795

oxygen, diatomic, 843

## P

paddles, 730

*The Papers of Wilbur and Orville Wright* (McFarland), 29

parabolic growth, 237

parabolic trajectories, 686–687, 708

parachutes, 10, 11

parasite drag coefficient, 443, 444

Paris Academy of Sciences, 577

Parrot, Thomas, 540n

partial derivatives, 608–609

Passman, Richard, 487

patents

Boulton, 653

Curtiss, 42

Goddard, 822

Hele-Shaw/Beecham, 755

Otto, 816

Phillips, 415–416

Whittle, 748, 818–820

Wright brothers, 32–34, 39–42, 91, 600, 651–652, 653

*Pathfinder* spacecraft, 97

payload, 96–100, 803–809

Penaud, Alphonse, 651, 652–653

perfect gas, 64–66

perigee, 681, 730, 733

period of orbit, 684–685, 727

Perkins, C. D., 650

Permanent Interdepartmental Commission for Interplanetary Communications, 731

Phillips, Horatio F., 262, 415–416

*Philosophiae Naturales Principia Mathematica* (Newton), 271, 715, 838, 847

photography, 19, 303–304, 423, 424

Pilcher, Percy, 20–21

pilots, 10, 11, 15

- “airmen,” 19, 600, 651–652  
“chauffeurs,” 19, 26  
Curtiss and, 39–40  
Lilienthal and, 20, 21  
pilots—*Contd.*
- Manly and, 24–26  
manned space flight, 734–740  
manned supersonic flight, 426–430  
Pilcher and, 20–21  
Wright brothers and, 28–30
- Pinkerton, Robert M., 418
- Piper Cub, 75–77
- pitch, 601–603
- pitch angle, 750, 751, 754–756
- Pitot, Henri, 259
- Pitot tube
- aircraft-mounted, 193, 195
  - airspeed and, 188–198
  - compressible flow and, 197–204
  - described, 189–190
  - historical perspective, 258–261
  - incompressible flow and, 191–197
  - Pitot-static tube, 191–195
  - shock waves and, 205–208, 850
  - static pressure orifice, 190–191
  - supersonic flow and, 205–210, 347
- plane change maneuvering, 705–708
- planetary entry. *See* atmospheric entry
- planetary motion, 684–685
- planform wing area, 73–75
- pontoons, 43
- Pope-Toledo, 817
- positive limit load factor, 537
- potential energy, 540–541, 688–690, 741
- Lagrange’s equation, 673–674
  - orbit equation, 675–676
- potential flow, 229, 411

---

page 934

power

- altitude effects, 470–479
  - available, 466–479, 761–766
  - Breguet formulas, 504–506
  - defined, 461
  - energy height, 540–547
  - engines, 461–479, 757–761
  - excess, 81–82
  - hodograph diagram, 483–485
  - horsepower unit, 80–81, 460, 467, 468
  - indicated, 761
  - maximum velocity, 466–470
  - propellers, 466–467, 469, 472, 493–494, 747, 748
  - propulsion, 746–749. *See also* propulsion
  - range, 500–513
  - rate of climb, 479–488, 540–547
  - required, 461–466, 470–479, 576
  - shaft brake, 466–467, 761
  - specific excess, 542–543
  - work, 461
- power-available curve, 467, 469
- powered flight, 30–31
- Power Jets Ltd., 818–820
- power-required curve, 462–466, 469, 471, 474–475
- power stroke, 760
- Prandtl, Ludwig, 426, 573
  - boundary layers, 229, 263, 264, 271–274
  - as father of aerodynamics, 273–274, 422
  - finite wing theory, 421–422
- Prandtl-Glauert rule, 318, 326, 327, 328, 426
- Pratt truss method, 21
- Pratt & Whitney, 763, 777, 782
- Predator, 551–554
- pressure. *See also* equations of state
  - airspeed measurement, 188–210
  - altitude, 114–115, 125–128
  - angle of attack, 251–254

back-face force, 149, 151  
center of, 633  
compressibility, 139–142  
cylinders, 400–405  
d'Alembert's paradox, 400  
defined, 57–58  
distribution of, 63–64, 152, 442  
drag-divergence Mach number, 339–346, 383  
dynamic, 191–192, 204, 213–214, 275, 297, 320  
flow field, 63–64  
flow separation, 250–255  
front-face force, 149–150  
hypersonic flow, 842, 848, 853  
induced pressure increment, 842  
isothermal layers, 116–121, 124–125  
jet propulsion, 775–781  
lift, 297, 405–415. *See also* lift  
location of point of minimum, 338–339  
Mach wave, 348–351  
manometers, 183–185  
mean effective, 761–762, 766–767  
moments, 292–293. *See also* moments  
momentum, 57, 142–153  
Pitot tube, 188–198  
reciprocating engine, 759–767  
sea level, 112–113, 115–116  
shear stress, 63–64  
shock waves, 205–208  
specific heat, 157–158  
specific volume, 71–82  
speed of sound, 174–181  
spheres, 400–405  
standard atmosphere, 110–131  
static, 188–191, 220, 629–633  
superchargers, 763  
thermodynamics, 153–160  
total, 204, 206, 221, 275

total values, 188–189  
turbojet engines, 775–781  
viscous flow, 136–137, 227–236, 244–257

pressure altitude, 114–115, 125–128  
pressure coefficient, 316–321  
    axial force, 322–326  
    compressibility, 318, 320–321  
    critical, 327–339  
    defined, 316  
    importance of, 317–321  
    lift coefficient, 322–326  
    Mach number, 318, 319–320  
    normal force, 322–326  
    Prandtl-Glauert rule, 318, 326, 327, 328, 426

pressure drag, 565

Princeton University, 822

Probstein, Ronald F., 835

*Proceedings of the Royal Society*, 268

process, 156–158

*Progress in Flying Machines* (Chanute), 21, 28, 577

propellants, 794–799

- bipropellants, 796
- black powder, 797, 820
- cryogenic, 796
- Goddard and, 822
- hypergolic, 796–797
- linear burning rate and, 799
- liquid, 794–797, 799, 821–825
- monopropellants, 796
- multistage rockets, 803–806
- pressure-fed, 795–796
- pump-fed, 796
- solid, 797–799
- spacecraft maneuvers, 803–806

propellers/propeller-driven aircraft, 13, 38–39, 747, 748, 749–756

- absolute ceiling, 493–498
- advance ratio, 752–753, 815

aerodynamics of, 749–756  
Breguet formula, 578  
Cayley and, 7–8, 9  
Clark Y shape, 756  
compressibility, 753  
constant-speed, 756  
efficiency, 752–753, 781–782  
endurance, 500–508  
fixed-pitch, 754–756  
helicopters, 7, 112, 813  
historical perspective, 812–815  
kinetic energy, 753  
pitch angle, 750, 751, 754–756  
power available, 761–766  
power loss, 752–753  
range, 500–508  
rate of climb, 489  
reciprocating engines, 459, 466–467, 469, 472, 738–749  
relative wind, 750, 754  
service ceiling, 493–498  
swept-back, 753  
three-blade, 749–750  
as twisted finite wing, 751–752  
variable-pitch, 755–756  
windmills, 812  
Wright brothers and, 34–35  
propulsion, 55, 746–830. *See also* velocity  
automobile industry, 816–817  
balloons, 38  
Cayley and, 6, 288–289, 748  
challenges of, 44–45  
electric, 809–812  
flappers, 9–10  
gas engines, 19, 23, 44–45  
hopping, 15–16, 748  
horsepower-to-weight ratio, 38, 44, 748  
hot-air engines, 15

hypersonic vehicles, 860–861  
internal combustion engines, 815–818  
jet engines, 767–787, 818–820  
motorcycles, 38  
power, 461–479  
problem of, 44–45  
propellers, 13, 466–467, 469, 472. *See also* propellers/propeller-driven aircraft  
propulsive efficiency, 815, 832  
ramjet engines, 783–787, 835–836  
range, 500–513  
rate of climb, 479–488  
reciprocating engine, 756–767  
revolution in, 747, 748  
rocket engines, 660, 787–812, 820–825  
steam engines, 13–16, 22–23, 416, 748, 813, 815. *See also* steam engines  
takeoff performance, 522–528  
thrust, 450–460, 767–770  
turbofan engines, 781–783  
Wright brothers and, 30–32  
protuberance drag, 568  
Ptolemy, Claudius, 726  
pull-down maneuver, 535  
pull-up maneuver, 533–534

## Q

quarter-chord point, 293–294  
quarter-scale model aircraft, by Langley, 23

## R

radiative heating, 666–667  
radiative thermal balance, 666  
RAE. *See* Royal Aircraft Establishment  
ramjets, 783–787, 835–836  
RAND report, 731  
range

airplane weight, 501–513  
Breguet formulas, 504–506, 578  
defined, 500  
fuel and, 500–513  
jets, 508–513  
physical considerations, 501–502, 509–510  
propeller-driven airplanes, 500–508  
quantitative formulation of, 502–504  
rate of climb, 479–488, 540–547, 577  
Rayleigh Pitot tube formula, 206, 850  
Raymer, D. P., 648, 650  
Reaction Motors, 427, 431, 796, 824  
reciprocating engines, 459, 466–467, 469, 472, 738–749  
recoverable launch vehicles, 94–96  
rectilinear motion, 448–449  
reduce skin-friction drag, 568  
*Red Wing*, 39–40  
Reichenbach, H., 425  
relative wind, 292, 361–362, 750, 754  
remotely piloted vehicles (RPVs), 550  
research facilities, 101–104  
reversible process, 160, 275  
Reynolds, Osborne, 267–271, 272  
Reynolds number, 146, 230–231, 275, 422  
    compressibility, 244–247  
    critical, 247–250, 401–402  
    cylinders, 401–405  
    dimensional analysis, 237  
    drag, 236–241, 263  
    hypersonic flow, 841–842, 854–857  
    lift coefficient, 297–300  
    micro air vehicle, 560–561  
    NACA airfoils, 419  
    origins, 267–271, 272  
    similarity parameters, 298–300  
    spheres, 401–405  
    stall, 305

transitional flow, 247–250  
Reynolds's analogy, 268–270, 703  
Rickenbacker, Eddie, 583  
Robins, Benjamin, 8  
rocket engines, 427, 560, 747, 748, 787–794  
    adiabatic flame temperature and, 790  
    boosters, 93–96  
    combustion chamber, 163–164, 787–794  
    early history of, 820–825  
    engine efficiency, 789–790  
    equations for, 800–803  
    first hypersonic vehicle, 838  
rocket engines—*Contd.*  
    hydrogen-fluorine, 790  
    hypersonic flight, 487  
    internal burners, 797–798  
    oxidizer tanks, 795  
    pressure-fed, 795  
    propellants, 790, 794–799. *See also* propellants  
    pump-fed, 795  
    specific impulse, 789–790  
    supersonic wind tunnels, 214–226  
*The Rocket into Planetary Space* (Oberth), 807  
rocket(s), 130, 264. *See also* rocket engines  
    equation, 800–803  
    Goddard and, 822–824  
    mass ratios, 806–808  
    as military weapons, 720–721  
    multistage, 803, 808–809  
    propellants, 794–799, 820, 822  
    single-stage *vs.* two-stage vehicle, 804–806  
    staging, 803–809  
        Tsiolkovsky and, 821–822  
    roll, 27, 83, 601–603  
    Rolls-Royce, 45, 553, 777, 778  
    Root, Amos L., 32  
    roughness, standard, 310

---

page 936

Royal Academy of Sciences, 258, 259  
Royal Aeronautical Society, 16–17, 565–566, 578  
Royal Aircraft Establishment (RAE), 101, 260  
Royal Aircraft Factory (RAF), 101, 417, 755, 756  
Royal Air Force (RAF), 818–820  
Royal Society, 268, 729  
RPVs. *See* remotely piloted vehicles  
rubber-band-powered models, 22  
rudders, 601–603, 608, 616  
*Rudolphine Tables* (Kepler), 727  
Ruskin, John, 110  
Ryan Firebee, 550

## S

satellites  
communications, 96–97  
Geostationary Operational Environmental Satellites, 96–97, 98  
space race and, 729–733  
*Sputnik*, 103, 431, 661, 730–732, 733, 734  
Saturn, 663, 716–717  
*Saturn 5* spacecraft, 791  
Schirra, Wally, 736  
schlieren system, 206–207  
Schneider, Jacques, 46–47  
Schneider Cup, 46–47  
Science Museum, London, 6, 8, 12, 35, 43, 820  
*Science Survey* magazine, 821  
*Scientific American*, 39, 40–41, 43  
SCRAMjet. *See* supersonic combustion ramjet  
seaplanes, 42, 43  
Sedov, Leonid I., 731  
Selfridge, Thomas E., 34, 39–40, 41  
semimajor axis, 681–682  
semiminor axis, 681–682  
service ceilings, 493–498  
SFC. *See* specific fuel consumption  
shadowgrams, 423–424

shadow graph system, 206  
shaft brake power, 466–467, 761  
shear stress, 63–64, 229–230  
    boundary layers, 235–247. *See also* boundary layers  
    distribution of, 63, 152, 442  
    flow separation, 250–255  
    jet propulsion, 767  
    lift, 405–415. *See also* lift  
    moments, 292–293. *See also* moments  
    parabolic growth, 237  
    Reynolds number, 236–237  
    viscous flow, 136–137, 227–236, 244–257  
Shepard, Alan, 735  
shock layers, 839–840  
shock stall pattern, 363  
shock waves, 205–208, 209  
    drag-divergence, 339–346  
    entropy layer, 840–841  
    hypersonic flow, 839–847, 859–860  
    Knudsen number, 845–846  
    low-density flow, 845–846  
    Mach angle, 348–349. *See also* Mach number  
    production of, 347–350  
    subsonic flow, 339–340  
    temperature effects, 842–843  
    transonic flow, 340–342, 344–345  
    wave drag, 347–357  
Signal Corps Aviation Service, 35  
Signal Corps Experimental Station, 102  
similarity parameters, 213, 298–300, 422  
sine-squared law, 838  
*Sir George Cayley's Aeronautics* (Gibbs-Smith), 12  
SI units. *See* Système International d'Unités  
*Six Books Concerning the Revolution of the Heavenly Spheres* (Copernicus), 712  
skin-friction drag, 230, 235–247, 256–257, 275, 569  
skip entry, 720

*The Sky* (Ruskin), 110  
*Skylab*, 662, 738  
slideslip, 649  
    velocity, 649–650  
Smeaton’s coefficient, 130–131  
Smithsonian Institution, 22–23, 27–28, 35–36, 43, 816, 820, 822. *See also*  
National Air and Space Museum Smithsonian Institution  
solid propellants, 797–799  
solid rocket boosters (SRBs), 94–96  
*Somnium* (Kepler), 727  
sonic flow, 178, 275  
Sopwith Snipe, 193–194  
Soueck, Apollo, 763  
sound barrier  
    Mach number, 359, 427, 429. *See also* Mach number  
    speed of sound, 174–181, 343, 426–430  
Soviet Union, former  
    space race, 730–740  
    *Sputnik* satellites, 103, 431, 661, 730–732, 733, 734  
spacecraft. *See* space vehicles  
space environment, for design of aircraft, 663–671  
    distances and velocities, 663–665  
    micro-meteoroid and orbital debris, 670–671  
    pressure, particles, and radiation in, 669–671  
    radiation in space, 371  
    solar system, scale of, 663  
    temperature and heat transfer in space, 665–669  
space flight, 659–742. *See also* space vehicles  
    aerospace plane, 836–838  
    *Apollo*, 47, 182, 675, 719, 725, 735–738, 791, 825–827  
    atmospheric entry, 719–726  
    ballistic entry, 719–720  
    crewed spacecraft, 662  
    earth satellites, 661–662  
    exploration spacecraft, 662  
    human, history of, 734–740  
    lifting entry, 720

mathematical level of, 662  
orbital maneuvering, 698–708  
orbit equation, 674–679, 686. *See also* orbit equation  
rocket engines, 93–96, 214–226. *See also* rocket engines  
space age, 103, 659  
space race, 730–740  
*Sputnik*, 103, 431, 661, 730–732, 733, 734  
trajectories, 679, 687, 708–719. *See also* trajectories  
unmanned, history of, 730–733  
unmanned vehicles, types of, 661–662  
*Voyager* spacecraft, 98–100, 715–719  
space shuttle, 94–96, 101, 116, 432, 837  
    atmospheric entry, 719–726  
    atmospheric entry of, 719–726, 846–847  
    *Columbia*, 739  
    lifting entry, 720  
    low-density conditions, 843–847  
    propellants, 796–797, 799  
    rocket staging, 803  
    stagnation point/stagnation streamline, 170–171  
Space Shuttle Orbiter, 720  
Space Transportation System (STS), 93, 95  
space vehicles. *See also* space flight; specific vehicles  
    anatomy of, 92–100  
    atmosphere and, 110, 111–112  
    design configurations, 92–100  
    lifting reentry, 720  
    payload, 96–98  
    rocket boosters, 93–96  
    satellites. *See* satellites  
SpaceX Falcon-Heavy, 93, 95  
SPAD XIII, 403, 520, 581, 583  
span efficiency factor, 366, 371, 376, 410, 419  
Spanish-American War, 23  
span loading, 575–576  
spars, 91  
specifications, 121

specific energy, 540  
specific fuel consumption (SFC), 501  
specific heat, 157–158, 161–162  
specific impulse, 789–790  
specific volume, 71–82  
speed. *See also* velocity  
    aeronautical goals of, 660  
    Carson, 521  
    Mach number and, 47  
    of sound, 174–181, 343, 426–430  
    stalling, 394, 398–400  
    transonic, 340–342, 344–345  
sphere of influence, 710–711  
spheres, 400–405  
*Spirit of St. Louis*, 49, 500  
Spitfire, 47, 363, 566–567  
spoilers, 530, 653  
*Sputnik* satellites, 103, 431, 661, 730–732, 733, 734  
SRBs. *See* solid rocket boosters  
stability, 599  
    airplane configuration, 91  
    angle of attack, absolute, 614–616  
    center of gravity, 600–601, 604, 617–627  
    directional, 647–648  
    downwash angle, 654–655  
    dynamic, 604, 606–610  
    equilibrium, 605, 612–616, 633–638  
    European approach to, 647–648  
    lateral, 648–650  
    longitudinal, 612–616, 626–638, 643–647  
    moment coefficient at center of gravity, 610–627, 636–638, 645  
    neutral, 606–607, 628–629  
    static, 35, 42, 604, 605–606, 612–616, 626–638, 640–650  
    stick-fixed, 604, 640–641  
    stick-free, 604, 640–641, 643–647  
    tail, 6, 621–624  
    time history, 606

tuck-under problem, 654–655  
wings, 617–620  
Wright brothers and, 651–652  
stabilizers, 82, 91  
    horizontal, 91, 602  
    vertical, 602  
staging, rocket, 803–809  
stagnation point, 170–172, 190  
stall  
    airfoil data, 302–305  
    aspect ratio, 376–379. *See also* aspect ratio  
    control, 633–634  
stalling speed, 394, 398–400  
stall region, 537, 538  
standard roughness, 310  
static margin, 629–633  
static performance, 446–447, 449–450  
static pressure, 190–191, 275  
statics, 671  
steam engines, 13–16, 22–23, 416, 748, 813, 815–816  
Stodola, A. B., 426  
Stokes, George, 272  
streamlines, 60–62, 138–139  
    adiabatic process, 160–166  
    Bernoulli’s equation, 145–149, 150  
    dividing, 409  
    hypersonic flow, 819–827  
    lift, 400–405. *See also* lift  
    micro air vehicles, 561  
    momentum, 142–153  
    stagnation, 170–172  
    viscous flow, 227–236, 244–257  
streamlining, 403  
    defective, 565–566  
    form drag, 565–568  
stream tube, 138–139  
Stringfellow, John, 14, 17, 21, 22–23

- subsonic compressible flow, 197–204
- subsonic flight
- compressible flow, 196–204
  - swept wings, 381–383
  - wind tunnels, 182–187
  - wing aspect ratio, 376–379
- sun, 680, 681, 711–712, 716–719, 726, 727
- superchargers, 763
- supercritical airfoil, 342–346
- Supermarine S.6B*, 47
- supersonic combustion ramjet (SCRAMjet), 786–787, 828, 829, 860, 863–864
- Supersonic Flight (Hallion), 429–430
- supersonic flight. *See also* airplane performance; Mach number
- Concorde, 547–550
  - fuel weight, 550
  - historical perspective, 426–430
  - SCRAMjets, 786, 787, 860, 863–864
  - swept wings, 383–393
  - wave drag, 347–357, 358
  - wind tunnels, 167–169, 214–226, 264–267
- supersonic flow, 178, 205–210, 205–210
- 
- page 938
- expansion waves, 350–351
  - first manned supersonic flight, 426–430
  - supercritical airfoils, 342–346
  - wind tunnels, 167–169, 214–226
- supersonic transport, 47, 73
- swept wings, 15, 85, 90–91
- aspect ratio, 385–393
  - delta wings, 391–393
  - design issues, 385–393
  - drag, 381–382
  - jet fighters, 200
  - Mach number, 381–393
  - subsonic flight, 381–383
  - supersonic flight, 383–393
  - swept-back, 90–91, 388, 390–391

swept-forward, 90–91, 388, 390–391  
symbols, 885  
Système International d’Unités (SI), 66–71, 128–130, 867–876  
coherence (consistency) of units, 67, 70  
density units, 59, 867–876  
pressure units, 58, 867–876  
standard atmosphere, 867–876  
temperature units, 60, 867–876

## T

TACT aircraft, 345, 346  
tails, 288  
    Cayley and, 6, 9  
    directional stability, 647–648  
    flight structures, 82. *See also* flight structures  
    lift coefficient, 622–623, 634–636, 644–645  
    moment coefficient at center of gravity, 616, 621–624  
    neutral point, 628–629  
    pitching, 624–625  
    volume ratio, 623  
tail-setting angle, 621–622  
takeoff, 522–528  
    acceleration of gravity, 523–527  
    ambient density, 527  
    ground roll, 524–527  
    Newton’s second law, 523, 524  
    resistance force to, 524  
    stall, 525–526  
    weight, 527  
Taylor, Charles, 817  
temperature. *See also* equations of state  
    absolute, 71  
    adiabatic flame, 790  
    altitude, 125–128  
    Boltzmann constant, 59  
    defined, 59  
    flow field, 63–64

hypersonic flow, 842–843  
isothermal layers, 116–121, 124–125  
Kelvin scale, 71  
kinetic energy, 59–60  
lapse rate, 118–119  
shock waves, 205–208  
specific heat, 157–158  
specific volume, 71–82  
speed of sound, 174–181  
standard atmosphere, 110–131  
static, 220  
temperature altitude, 125–128  
thermal barrier, 430  
thermodynamics, 153–160  
total, 221  
Toussaint and, 129, 130  
viscous flow, 230–231  
Tereshkova, Valentina, 736  
termination shock, 718  
*Theory of Wing Sections Including a Summary of Airfoil Data* (Abbott and von Doenhoff), 410  
thermal barrier, 430  
thermodynamics, 137, 153–160  
    adiabatic process, 160–166  
    aerodynamic heating, 720  
    enthalpy, 156–159, 197–198  
    entropy, 160, 840–841  
    entry heating, 725–726  
    first law of, 154–160, 166  
    hypersonic flow, 842–843  
    internal energy, 154  
    isentropic flow, 160–166  
    Mach number, 153  
    mass system, 154  
    processes, 156–163  
    reversible process, 160  
    specific heat, 157–158, 161–162

Stanton number, 702  
surface area, 155–156  
turbojet engines, 755–756  
work, 155–156  
thin-airfoil theory, 301  
    flow, 329–330  
    lift, 301–302, 306–307  
    supercritical airfoil, 342–346  
    swept wings, 381–393  
thin shock layers, 839–840  
Thomson, J. J., 270  
Thor missile, 94  
three-view diagrams, 83, 84, 85  
throat, 216–217, 222–225, 791  
thrust, 55, 450–460. *See also* propulsion  
    as airframe-associated phenomenon, 458–460  
    arc-jet thruster, 811–812  
    available, 458–460  
    buildup of, 775–781  
    drag polar, 514–522  
    electron-ion thruster, 810–811  
    engines and, 757–761. *See also* engines  
     hodograph diagram, 483–485  
    jet propulsion, 767–787  
    landing, 528–531  
    magnetoplasmadynamic thruster, 811  
    maximum velocity, 458–460  
    propellers, 466–467, 469, 472, 493–498, 747, 809  
    range, 500–513  
    rate of climb, 479–488, 540–547  
    required, 450–458  
    reversal, 530  
    rocket engine, 788  
    supersonic flight, 550  
    takeoff performance, 522–528  
    thrust equation, 770, 771, 774, 777, 778  
thrust-required curve, 451–453, 458, 459–460

thrust-specific fuel consumption (TSFC), 508, 781–782, 785  
time history, 606  
time to climb, 499–500  
tip vortices, 360–362, 421, 525  
titanium, 47  
Titov, Gherman, 735  
top dead center, 759  
Toussaint, A., 129, 130  
trailing edge. *See* airfoils  
trajectories, 679, 708–719  
    atmospheric entry, 719–726  
    elliptical, 687  
    gravity-assist, 713–715  
    heliocentric, 711–712  
    hyperbolic, 687, 690, 708–710  
    method of patched conics, 712–713  
    parabolic, 686–687, 708  
    sphere of influence, 710–711  
    types of, 687, 690  
    velocity-altitude map and, 725, 843, 844  
transatmospheric vehicles, 836–838  
transition, 247–250, 270  
transonic flight regime, 340–342, 345, 427  
transonic flow, 178  
trim, 604, 610  
    angle of attack, 606, 612–616, 638–640  
    dynamic stability and, 606  
    elevator angle calculation and, 638–640  
Trinity College, Cambridge, 728  
triplanes, 10, 12, 14–15, 17, 21  
tripping the boundary layer, 404  
TSFC. *See* thrust-specific fuel consumption  
Tsiolkovsky, Konstantin, 748, 821–822, 824  
tuck-under problem, 668–669  
turbines, 773–778, 780  
turbofan engines, 781–783  
turbojet engines, 770–781

axial flow compressors, 771–774  
centrifugal flow compressors, 773  
combustion chamber, 172–173  
combustor, 773  
diffusers, 771–774, 775–781  
divergent duct, 771  
nozzles, 773–781  
rotors, 771  
stators, 771  
thermodynamics of, 773–774  
thrust-available curves, 459  
thrust buildup, 775–781  
turbines, 773–774  
turboprop engines, 782–783  
turbosupercharger, 763  
turbulent shear stress, 232–236  
Turin Academy of Sciences, 729  
turning flight, 30, 32, 531–539, 598–600  
    angular velocity, 533  
    corner velocity, 538–539  
    load factor, 533  
    maneuver point, 538  
    pull-down maneuver, 535  
    pull-up maneuver, 533–534  
    structural design effects, 537–539  
    turn rate, 533  
    wing loading, 536  
turn rate, 533

## U

UAVs. *See* uninhabited aerial vehicles  
UCAVs. *See* uninhabited combat aerial vehicles  
uncrewed spacecraft, 96–98  
uninhabited aerial vehicles (UAVs), 550–559  
    design process for, 555–560  
    existing, 551–554  
    future designs for, 554–556

micro air vehicles, 560–563  
uninhabited combat aerial vehicles (UCAVs), 550–551, 554–555  
United States  
aeronautics arrives in, 21–26  
engineering units, 66–71  
first public flight, 39  
Industrial Revolution and, 21  
space program, 101–104, 730–740  
University of Graz, 423  
University of Salzburg, 423  
unmanned space flight, history of, 730–733  
Uranus, 663, 716, 717–718  
U.S. Air Force, 103, 265, 343–345, 428, 429–430, 432, 616, 731  
U.S. Air Force Aeropropulsion Laboratory, 820  
U.S. Air Force Research Laboratory, 112  
U.S. Army, 33–34, 40–41, 103, 264, 343, 428  
U.S. Army Air Force, 427, 731  
U.S. Naval Academy, 22, 820  
U.S. Navy, 42, 92, 96–97, 103, 264, 731  
U.S. War Department, 24–25, 36  
U.S. Weather Bureau, 28, 128–129

## V

Vanguard program, 732–733  
velocity, 60–64  
aerodynamic force, 152  
airspeed measurement, 188–210  
altitude, 480  
angular, 533  
area-velocity relation, 215–216  
atmospheric entry, 719–726  
continuity equation, 138–139  
control, 633–640  
corner, 538–539  
dihedral angle, 649–650  
dimensional analysis, 295–300  
drag, 339–346. *See also* drag

entry heating, 725–726  
equation of motion, 448–450  
escape, 47, 662–663  
flow field, 62–64  
hodograph diagram, 483–485  
hypersonic flow, 836–848  
landing, 528–531  
lift, 405–415. *See also* lift  
Mach number, 153, 178–181. *See also* Mach number  
manometers, 183–185  
maximum, 338–339, 458–460 466–470, 480, 637–638  
momentum, 142–153  
power, 461–479  
profile, 230  
propulsion, 767–770. *See also* propulsion  
rate of climb, 479–488, 540–547  
shear stress, 63–64  
shock waves, 205–208  
slideslip, 649–650  
space flight. *See* space flight  
speed of sound, 174–181  
stall, 302–305, 376–379  
stream tube, 138–139  
supersonic, 205–210, 214–226  
swept wings, 381–393  
takeoff, 522–528  
velocity—*Contd.*  
    thermal barrier, 430  
    thrust, 450–460  
    time to climb, 499–500  
    units for, 75–77  
    vertical, 482  
    viscous flow, 136–137, 227–236, 244–257  
    wind tunnels, 182–187  
velocity-altitude map, 725, 843, 844  
Venturi tube, 260  
Venus, 661, 663, 711, 714

---

page 940

Verne, Jules, 824  
vertical stabilizer, 602  
vertical velocity, 482  
Vincenti, Walter, 386, 387, 389  
viscous flow, 136–137, 255–257  
    absolute viscosity coefficient, 230  
    Bernoulli’s equation, 229  
    compressibility, 244–247  
    design issues, 235–236  
    drag, 136–137, 227–236, 244–257  
    flow fields, 229  
    flow separation, 250–255  
    friction, 136–137, 227–236, 244–257  
    fundamental behavior of, 228  
    hypersonic interaction, 821–822  
    laminar, 232–241  
    Reynolds number, 230–231  
    shear stress, 232–233  
    skin drag, 230, 235–236  
    temperature, 230–231  
    transition, 247–250  
    turbulent, 232–236, 241–244  
    velocity profile, 230  
vis-viva equation, 695–698  
*V-n* diagram, 537–539  
Voisin-Farman I-bis biplane, 598–600  
volume  
    compressibility and, 139–142  
    control, 751–752  
    specific, 71–82  
    tail, 623, 648  
    thermodynamics and, 153–160  
Von Braun, Wernher, 733, 824–825  
von Karman, Theodore, 134, 264, 273–274, 421, 573, 600  
von Mises, Richard, 424–425  
von Ohain, Hans, 748, 818, 820  
vortex, 360–362

*Vostok I* spacecraft, 735–736  
Vought F4U Corsair, 85, 86–88, 193, 370–371, 380–381  
*Voyager* spacecraft, 98–100, 714, 715–719  
V-2 rocket, 130, 264, 732, 787, 825

## W

Wagstaff, Patty, 413–414  
Walcott, Charles D., 43  
Walker, Joe, 487  
Ward, Kenneth E., 418  
*War of the Worlds* (Wells), 721  
Wasp engine, 745  
Watt, James, 80–81  
wave drag, 347–357, 358, 568  
wave riders, 839, 859  
waves  
    expansion, 350–351  
    Mach, 348–351  
    shock. *See* shock waves  
Weick, Fred E., 572  
weight  
    climbing, 480, 481–482  
    fuel, 501–513, 550  
    hydrostatic equation and, 113–115  
    takeoff and, 527  
Wells, Alfred J., 262  
Wells, H. G., 721  
Wenham, Francis, 17, 21, 145, 262, 420–421  
whirling-arm apparatus, 7–8, 22–23  
Whitcomb, Richard, 309, 343, 419  
White, Ed, 736  
White, Robert, 432  
*White Wing*, 39–40  
Whitford, Ray, 391  
Whittle, Frank, 748, 818–820  
Wild, H. B., 817  
windmills, 812

wind tunnels, 8, 102–103  
airfoils and, 29–30, 60–62, 182–187, 416–417  
airspeed measurement, 188–210  
Bernoulli's equation, 183, 186  
drag and, 262–267  
Eiffel and, 577  
flow velocity, 60–62  
historical perspective, 261–267  
hypersonic flight, 267  
lift coefficient, 297–300  
low-speed subsonic, 182–187  
manometers, 183–185  
NACA, 418, 419  
rocket engines, 214–226  
similarity parameters, 298–300  
specific volume calculations, 72–73  
stall, 302–306  
streamlines, 60–62  
supercritical airfoils, 345  
supersonic flight, 167–169, 214–226, 264–267  
wing-body combination, 619–625  
wing loading, 73–75, 492, 496–498, 536  
wing(s), 294. *See also* airfoils  
aerodynamic center, 609  
canard configuration, 615–616  
center of gravity, 617–620  
composite, 90–91  
delta, 391–393  
dimensional analysis, 295–300  
finite. *See* finite wings  
flaps, 394–400  
flight structures, 82. *See also* flight structures  
historical perspective, 415–422  
induced drag calculation, 363–372  
infinite, 289–290, 300, 308, 315–316, 360  
lift slope of, 372–381, 618–619  
moments, 292–293. *See also* moments

- propellers, 749–756  
rotation of, 292–293  
swept, 15, 85, 90–91, 381–393  
tip vortices, 360–362, 421, 525  
warping of, 27–35, 42, 600, 651–652
- wing-tail combination, 621–622  
geometry of, 622
- Winkelman, Allen, 303–304
- Wolko, Howard, 24
- work, 155–156, 461, 760–764
- World Peace Council, 730
- The World's Fastest Rocket Plane and the Pilot Who Ushered in the Space Age* (Anderson and Passman), 487
- The World's First Aeroplane Flights* (Gibbs-Smith), 15–16
- World War I, 42, 102, 343, 403, 578, 581
- page 941
- engines and, 818–819  
propellers and, 756  
rockets and, 824
- World War II, 731, 748
- engines and, 45, 763, 818–820  
German V-2 in, 787, 825  
Lockheed P-38 of, 654  
NACA and, 103  
rockets and, 824, 825  
Spitfire and, 47, 363, 566–567  
supersonic flight and, 427
- Wren, Christopher, 729
- Wright Aeronautical Corporation, 43–44
- Wright brothers, 26–45, 272
- accomplishments of, 35  
aeronautical triangle, 35–44  
airfoils, 416–417  
background, 27  
bird studies, 27–28  
canard configuration, 91, 616  
Chanute and, 21, 28–29  
Curtiss and, 36, 38–44

engines and, 817–818  
European approach to stability/control, 651–652  
experiments, 1–3, 6, 16, 21–22, 27–36  
forward elevator, 28–29  
France and, 34  
gliders, 28–31  
Langley and, 22, 23, 36  
Lilienthal and, 19, 294  
manned supersonic flight, 426, 429  
patents of, 32–34, 39–42, 91, 600, 651–652, 653  
propellers, 34–35, 813–814  
public flights, 33–35, 40–41, 101, 814  
records of, 31–32, 34  
*Scientific American* and, 40–41  
wind tunnels, 29–30, 182, 262–263, 416–417  
wing warping and, 27–35, 42, 600, 651–652, 653  
Wright Field, 731, 820  
*Wright Flyer* airplanes, 579  
airfoils, 416–417  
canard configuration, 91, 616  
compressibility, 141  
design evolution, 580–581, 584  
drag calculations, 249–250, 375–376, 379, 565  
early flying attempts, 1–3, 6, 26, 30–34, 35, 36, 43, 45  
engines, 45, 817–818  
lift and, 405, 520  
in National Air and Space Museum, 3, 35, 43, 289  
propulsion, 747, 748  
velocity of, 75, 141, 182  
wing loading, 536  
wing warping, 28–35, 42, 596, 651–652, 653  
Wright-Patterson Air Force Base, 32, 820  
Wright type A, 32–34, 41

## X

X-15, 430–432, 487, 787, 838, 863–864  
XLR-11 rocket engine, 488, 824

## **Y**

yaw/yawning, 83, 601–603, 647–648

Yeager, Charles E., 428–430, 824

## **Z**

Zahm, A. Heb, 262

zero lift

angle of attack and, 301–302, 308–309, 610–612

drag and, 343–346, 443–446, 453–454, 463–465, 480, 489, 514, 520, 530, 575–576, 580, 582

pitching and, 624–625

stability and, 621–624

tails and, 621–624

wings and, 617–620

zero-lift moment, 609

zero-lift thrust required, 454

zooming, 540–542

