


ELECTRICAL SYSTEM

Registration procedure when the ECM is replaced

- To replace the ECM with a new one, you need to register the immobilizer authentication ID number registered in the smart control unit to the ECM. The ID number is automatically registered.
- The immobilizer authentication ID number can be registered only once in the ECM. It cannot be deleted or changed.
- To replace the ECM with a known-good one (Immobilizer authentication ID number is already registered), confirm
 the registered immobilizer authentication ID number, follow the "Registration procedure when the smart control unit
 is replaced" and register the immobilizer authentication ID number that is registered in the ECM to the smart control
 unit.
- · Confirm that the Honda SMART Key ON/OFF buttons of the all Honda SMART Keys are set to OFF.
- Confirm that the seat is locked with the ignition switch set to OFF (the ignition switch is not turned).
- Operate the Honda SMART Key ON/OFF button within the communication range.

Register the immobilizer authentication ID number in the ECM:

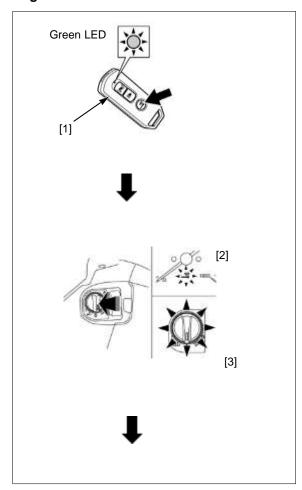

- Push and hold the ON/OFF button of the Honda SMART Key [1] to activate the system.
 - Red LED blinks five times and then Green LED blinks once.

- Press the knob switch.
 - The Honda SMART Key indicator [2] and ignition switch ring [3] come on. (Buzzer sounds twice)