
ELECTRICAL SYSTEM

Engine Starting Procedure in Emergency Mode:

- Check the ID number indicated on the ID tag of the Honda SMART Key registered in the vehicle.
- To input "0," do not press the ignition switch and wait until the Honda SMART Key indicator and ignition switch ring are blinking once.
- Emergency mode is released by the following condition:
 - Press the knob switch for more than 2 seconds when the ignition switch is not ON.
 - Leave for more than 6 minutes when the ignition switch is not ON.

How to input the 9-digit ID number to start the engine:

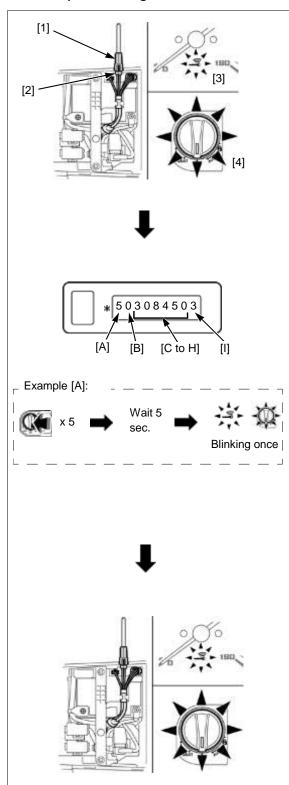

- Connect the EM connector [1] to the EM mode connector [2].
 - The Honda SMART Key indicator [3] and ignition switch ring [4] come on.

- Use the knob switch to input 9-digit ID number.
 - [A]:

Press 5 times, then wait 5 sec.

Honda SMART Key indicator and ignition switch ring blink once.

– [B]:

Do not press, then wait 5 sec.

Honda SMART Key indicator and ignition switch ring blink once.

- [C to H]:


Repeat the above procedure.

— [I]:


Press 3 times, then wait 5 sec.

After 9-digit ID number is input, the Honda SMART Key indicator and ignition switch ring start blinking as shown below.

Input completed:



Input failure:



- · Disconnect the EM connector.
 - Input completed:

The Honda SMART Key indicator and ignition switch ring come on. (Buzzer sounds twice)

The ignition switch unlocked.

Turn the ignition switch ON and start the engine.

- Input failure:

Try again from the beginning.