
## ANSWER BACK/ALARM SYSTEM

## **Setting the ANTI-THEFT ALARM SYSTEM**

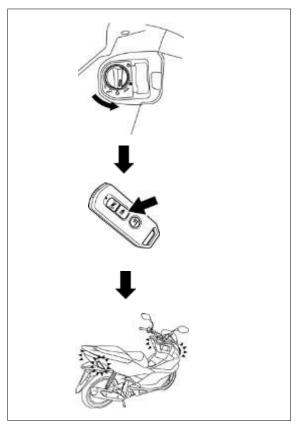


• Turn the ignition switch OFF or lock.

• Push the Honda SMART Key alarm button.

• The turn signal light blinks once (Buzzer sounds once). After 2 seconds, the buzzer sounds once. The ANTI-THIEF ALARM SYSTEM is activated.

## **Cancelling the ANTI-THEFT ALARM SYSTEM**

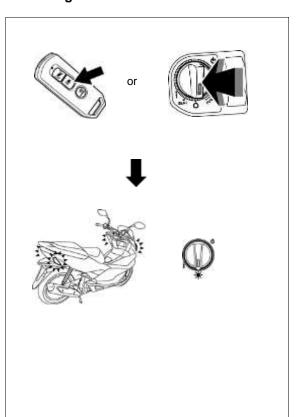

• Push the Honda SMART Key alarm button or press the knob switch.

- When the Honda SMART Key alarm button is pushed:
  - The turn signal light and alarm indicator blink twice (Buzzer sounds twice).

The ANTI-THIEF ALARM SYSTEM is cancelled.

- When the knob switch is pressed:
  - The turn signal light blinks twice (Buzzer sounds twice). (Alarm indicator goes off)
    The ANTI-THIEF ALARM SYSTEM is cancelled.