
HANDLEBAR Installation Notes


Handlebar grip

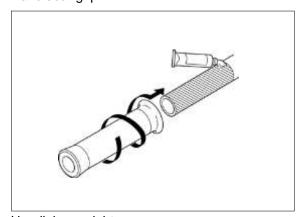

 If the handlebar grip was removed, apply Honda Bond A or equivalent to the inside of the grip and to the clean surfaces of the left handlebar.


Allow the adhesive to dry for 1 hour before using. Wait 3 – 5 minutes and install the grip. Rotate the grip for even application of the adhesive.

Handlebar weight

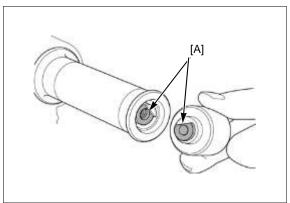


• Install the handlebar weight to both handlebars aligning each cutout [A].

Front brake master cylinder

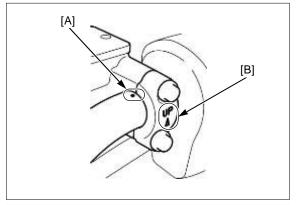



- Brake master cylinder (edge of the master cylinder with the punch mark [A] on the handlebar)
- Holder ("UP" mark [B] facing up)
- Bolts
 - Tighten the upper bolt first, then the lower bolt.

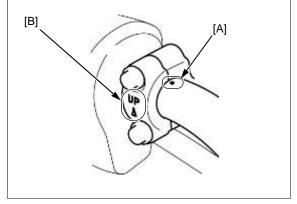



- Brake lever or clutch lever bracket (edge of the bracket with the punch mark [A] on the handlebar)
- Holder ("UP" mark [B] facing up)
- Bolts
 - Tighten the upper bolt first, then the lower bolt.