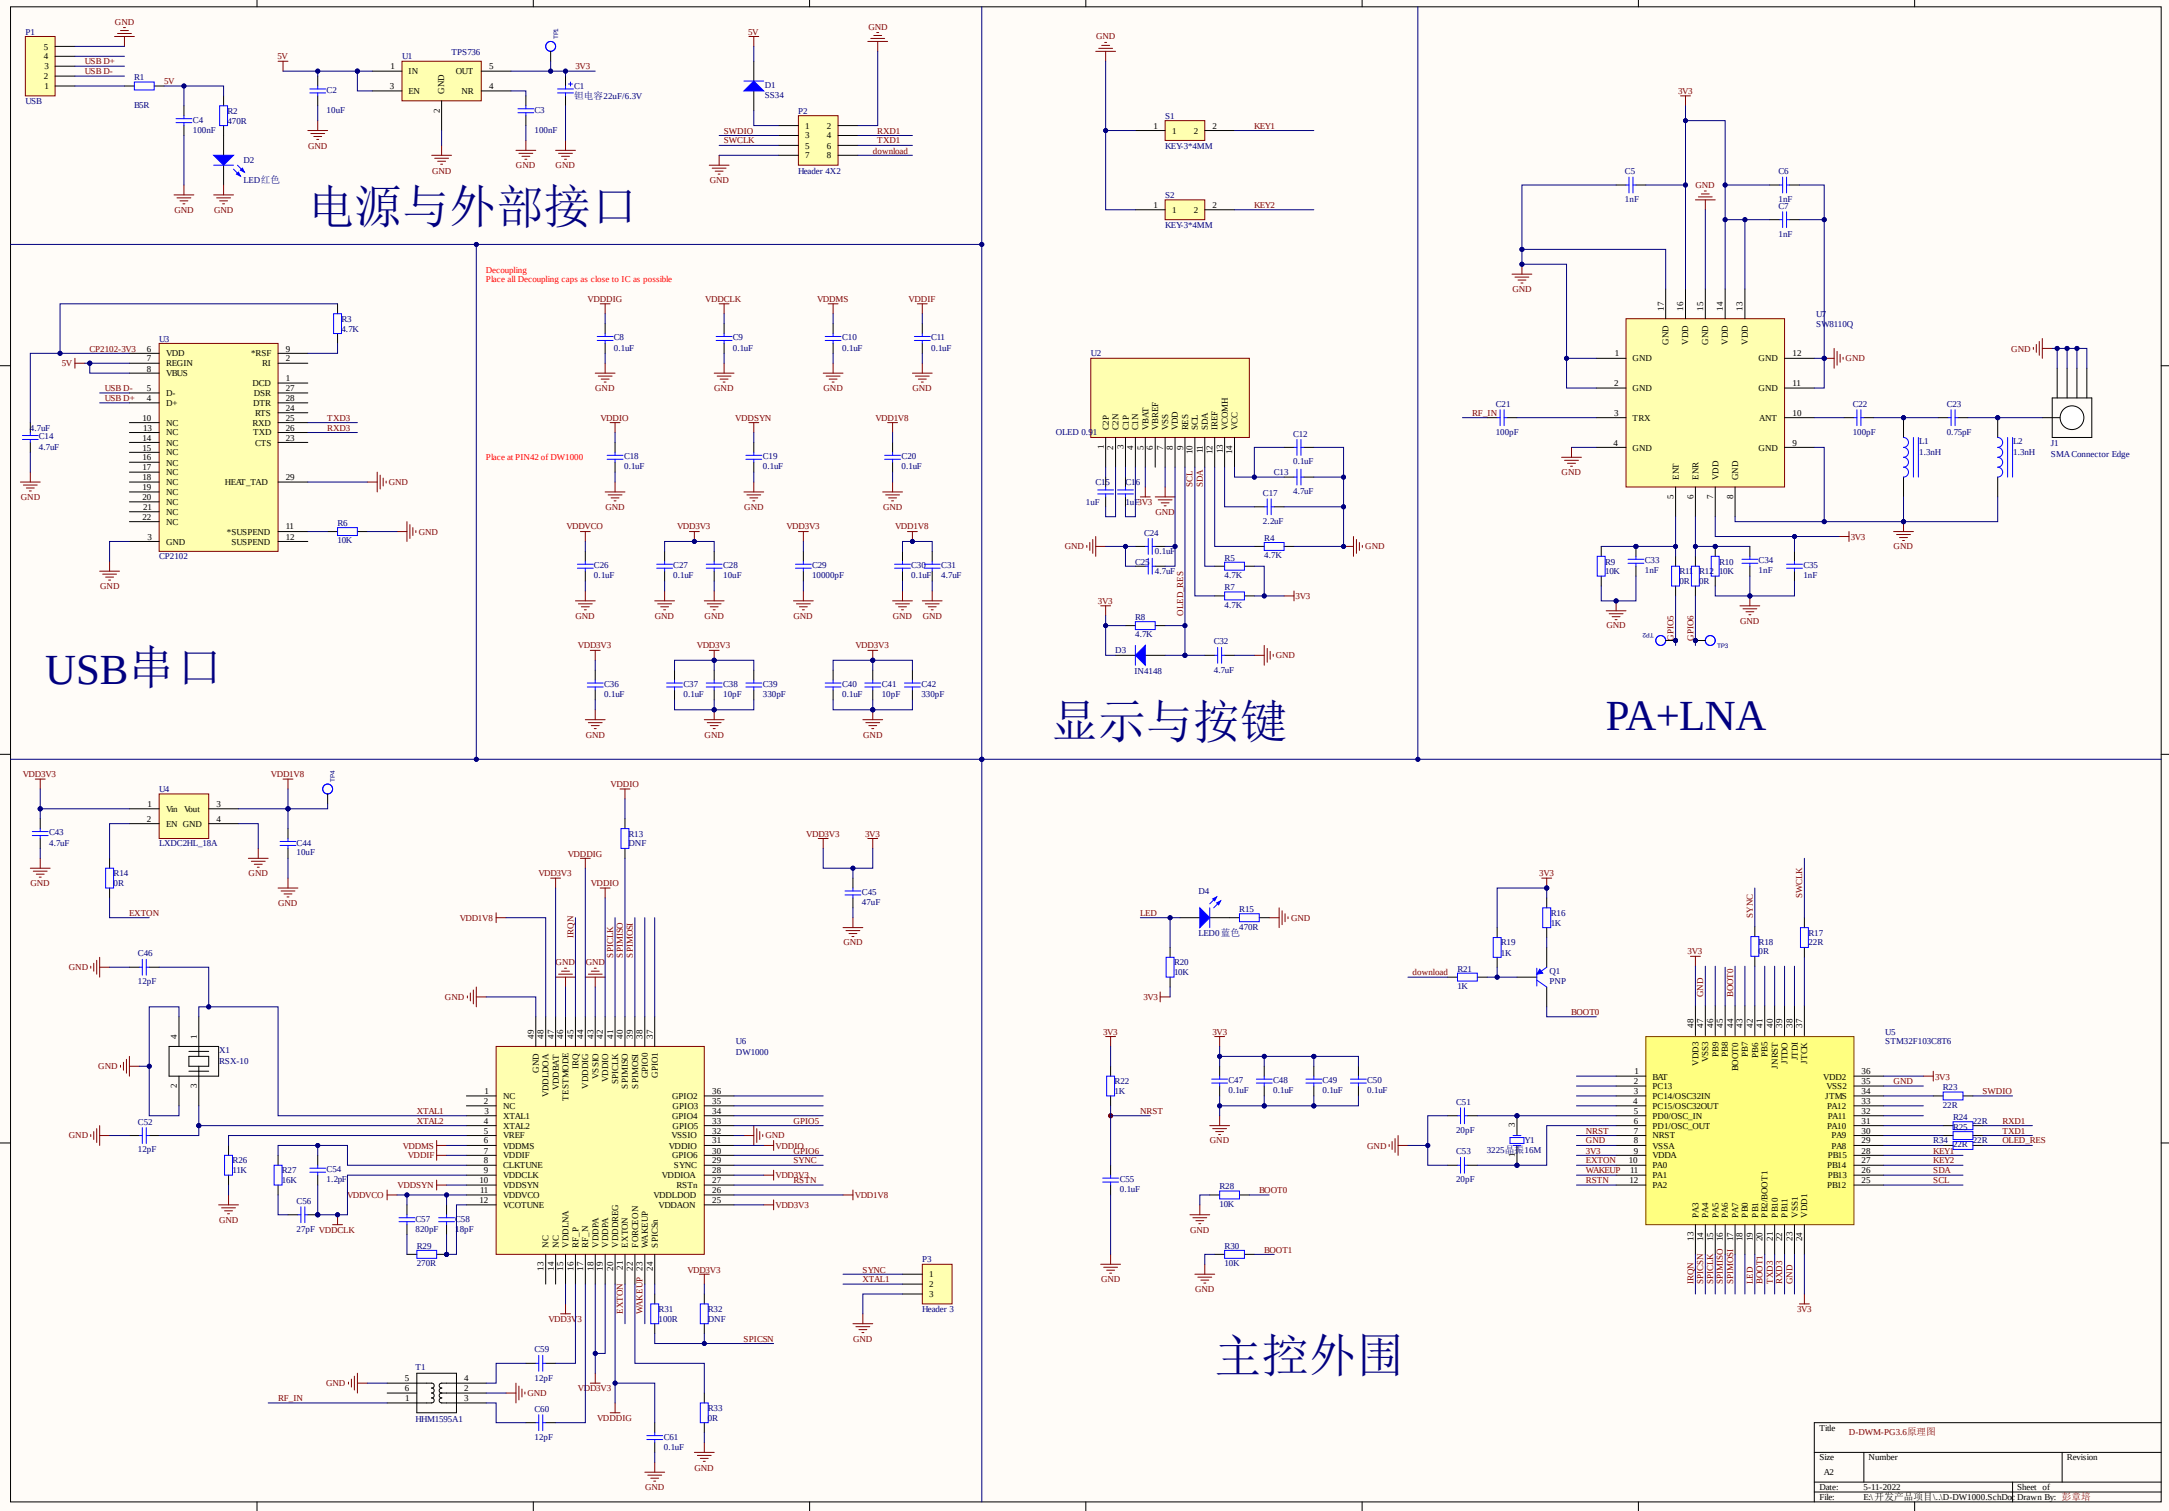
电源与外部接口
USB串口
显示与按键
PA+LNA
主控外围
U1 TPS736
U2 OLED 0.91
U3 CP2102
U4 LXDC2HL_18A
U5 STM32F103C8T6
U6 DW1000
U7 SWB110Q
J1 SMA Connector Edge
X1 RSX-10
T1 HHM1595A1
Decoupling
Place all Decoupling caps as close to IC as possible
Place at PIN42 of DW1000
Title D-DWM-PG3.6原理图
Size A2
Number
Revision
Date: 5-11-2022
Sheet of
File: E:\开发产品项目\D-DW1000.SchDoc
Drawn By: 彭章翊