Instrumentation

Flow Measurement

Course Instructor: Mohammad Reza Nayeri

Spring 2022

Flow Measurement

The *volumetric flow* rate (also known as volume flow rate, rate of fluid flow or volume velocity) is the volume of fluid which passes per unit time; usually represented by the symbol *Q*

$$Q = \mathbf{v} \cdot \mathbf{A}$$

Flow velocity

Cross-sectional area/surface

In physics and engineering, *mass flow* rate is the mass of a substance which passes per unit of time.

$$\boldsymbol{Q_m = Q \times \rho}$$

Volumetric flow

Density

Flow Measurement

Laminar flow of a liquid occurs when its average velocity is comparatively low and the fluid particles tend to move smoothly in layers

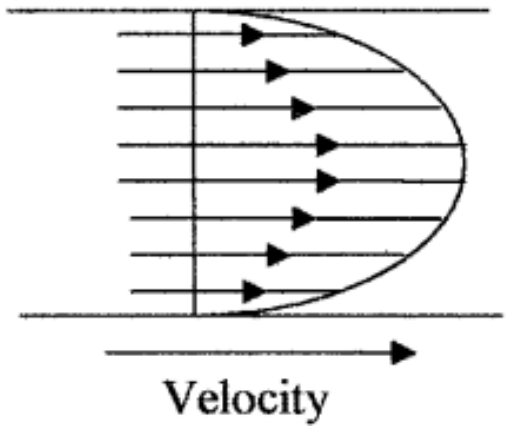

Turbulent flow occurs when the flow velocity is high and the particles no longer flow smoothly in layers and turbulence or a rolling effect occurs.

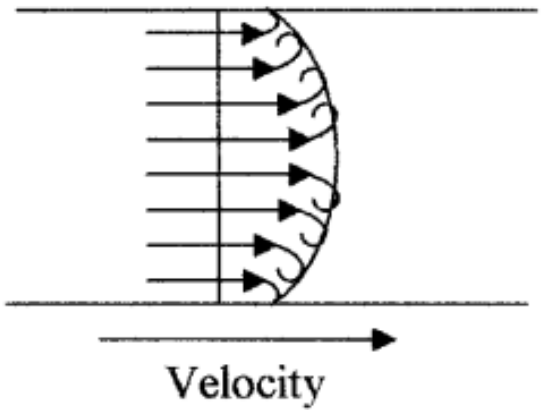

Reynold Number: $R = \frac{VD\rho}{\mu}$

where V = average fluid velocity
D = diameter of the pipe
ρ = density of the liquid
μ = absolute viscosity

$If \;\; R \leq 2000 \rightarrow$ *Laminar*
$If \; 2000 < R \leq 5000 \rightarrow$ *Mixture*
$If \;\; R > 5000 \rightarrow$ *Turbulent*

Pressure Based Flowmeter

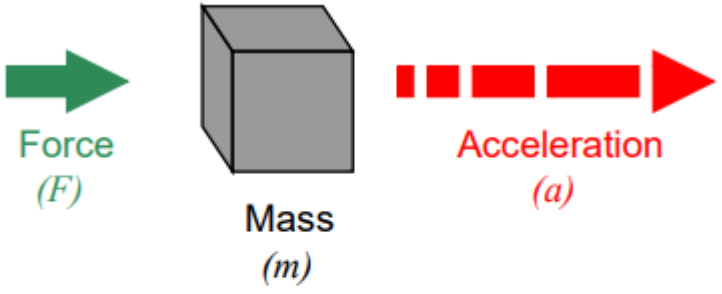

Newton's Second Law formula

$F = ma$

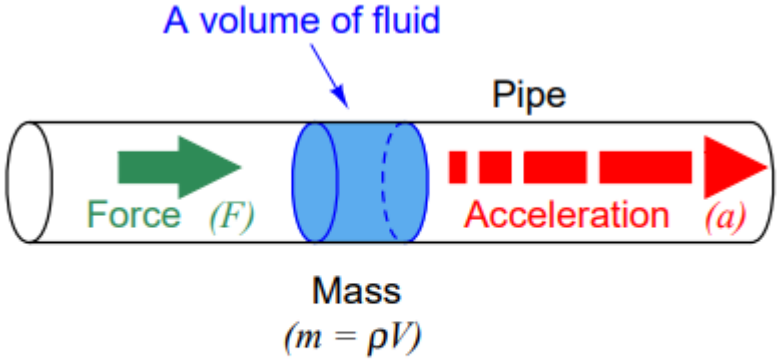

Newton's Second Law formula

$F = ma \qquad F = \rho V a$

$$F = \rho V a$$

$$\frac{F}{A} = \rho \frac{V}{A} a$$

$$P = \rho \frac{V}{A} a$$

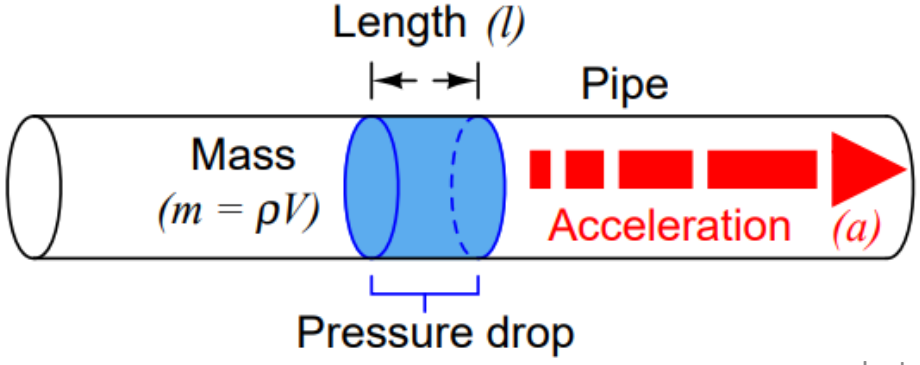

$$P = \rho l a$$

Venturi tubes and basic principles

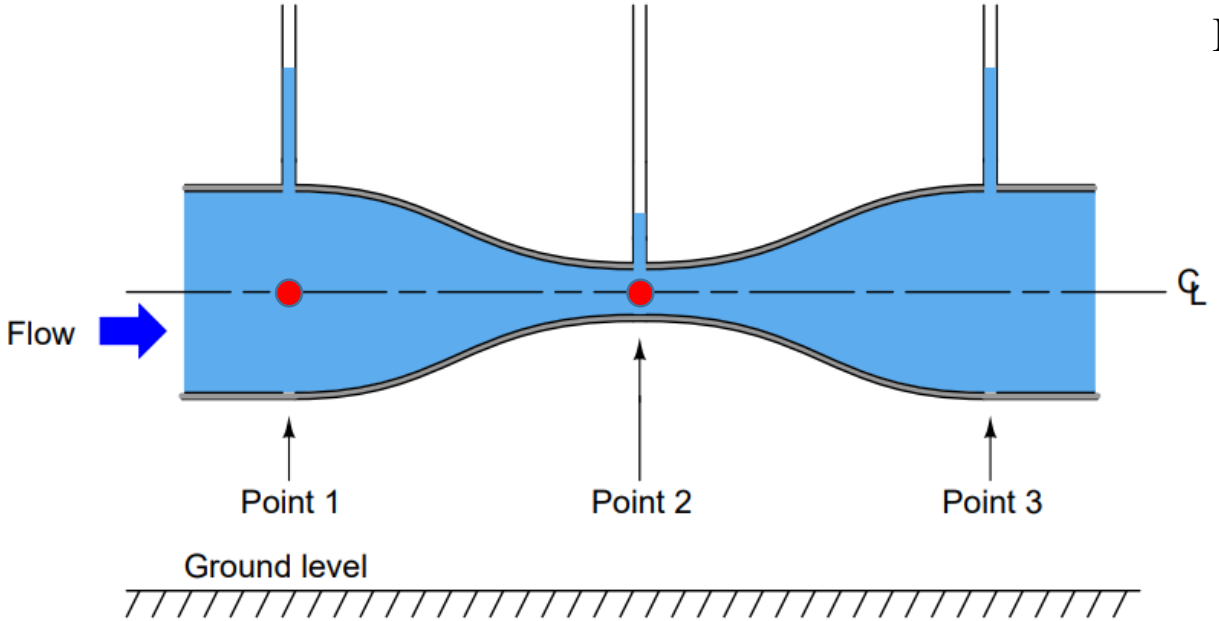

Bernoulli's Equation:

$$mgh_1 + \frac{1}{2}mv_1^2 + P_1V = mgh_2 + \frac{1}{2}mv_2^2 + P_2V$$

$$\rho gh_1 + \frac{1}{2}\rho v_1^2 + P_1 = \rho gh_2 + \frac{1}{2}\rho v_2^2 + P_2$$

$$h_1 = h_2 \rightarrow \frac{\rho}{2}(v_2^2 - v_1^2) = P_1 - P_2$$

$$Q_1 = Q_2 \rightarrow A_1v_1 = A_2v_2 \rightarrow v_1 = \left(\frac{A_2}{A_1}\right)v_2 \rightarrow$$

$$v_2 = \sqrt{2}\frac{1}{\sqrt{1-\left(\frac{A_2}{A_1}\right)^2}}\sqrt{\frac{P_1 - P_2}{\rho}} \xrightarrow{\times A_2} Q = \sqrt{2}\frac{A_2}{\sqrt{1-\left(\frac{A_2}{A_1}\right)^2}}\sqrt{\frac{P_1 - P_2}{\rho}} \rightarrow \boldsymbol{Q = k\sqrt{\frac{P_1 - P_2}{\rho}}}$$

Orifice plates

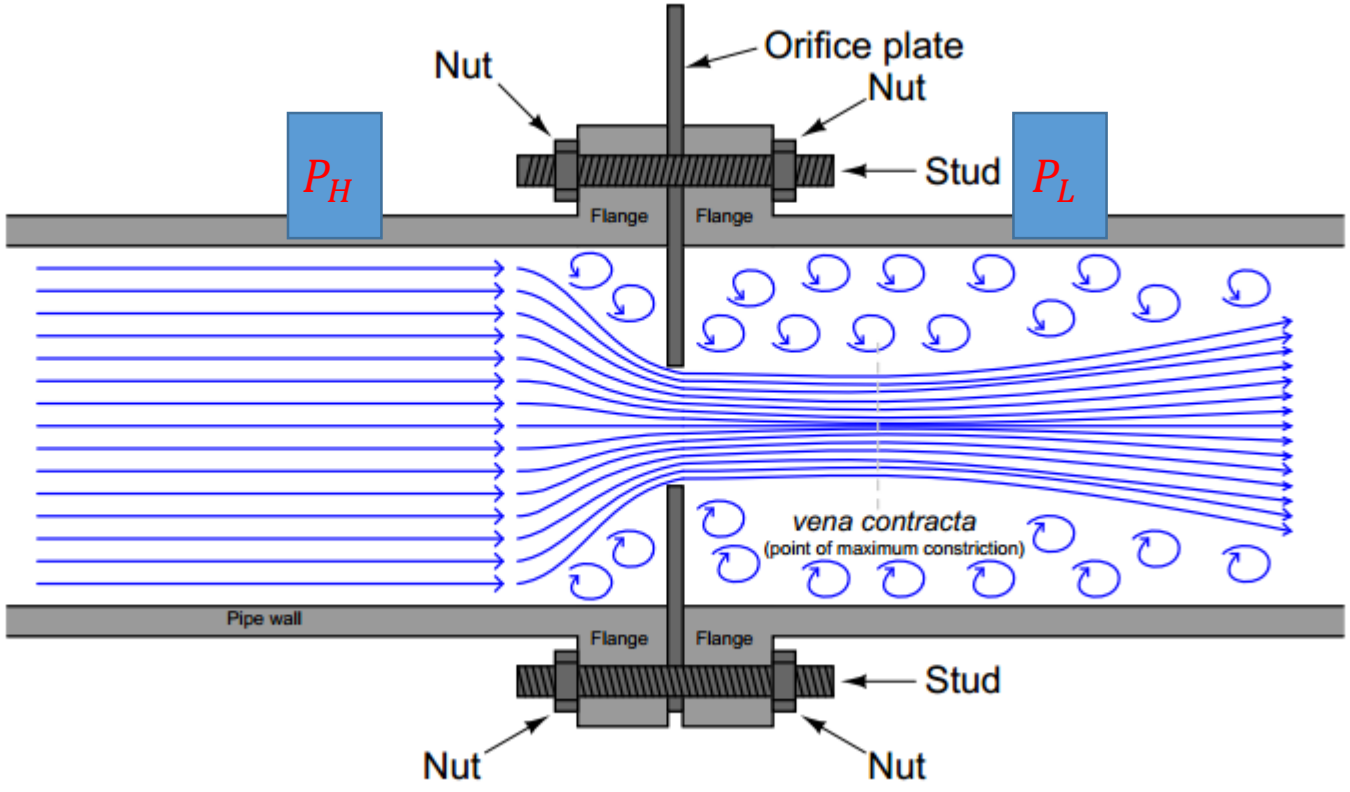

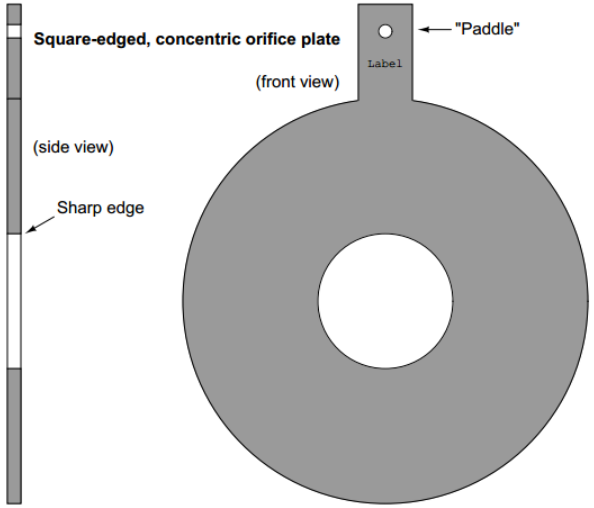

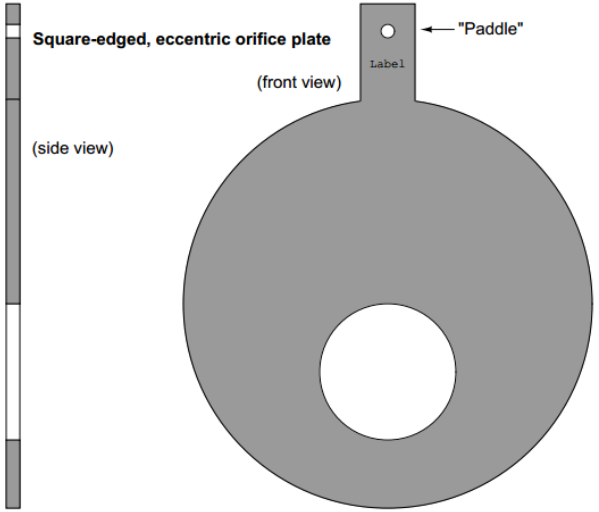

Orifice plates

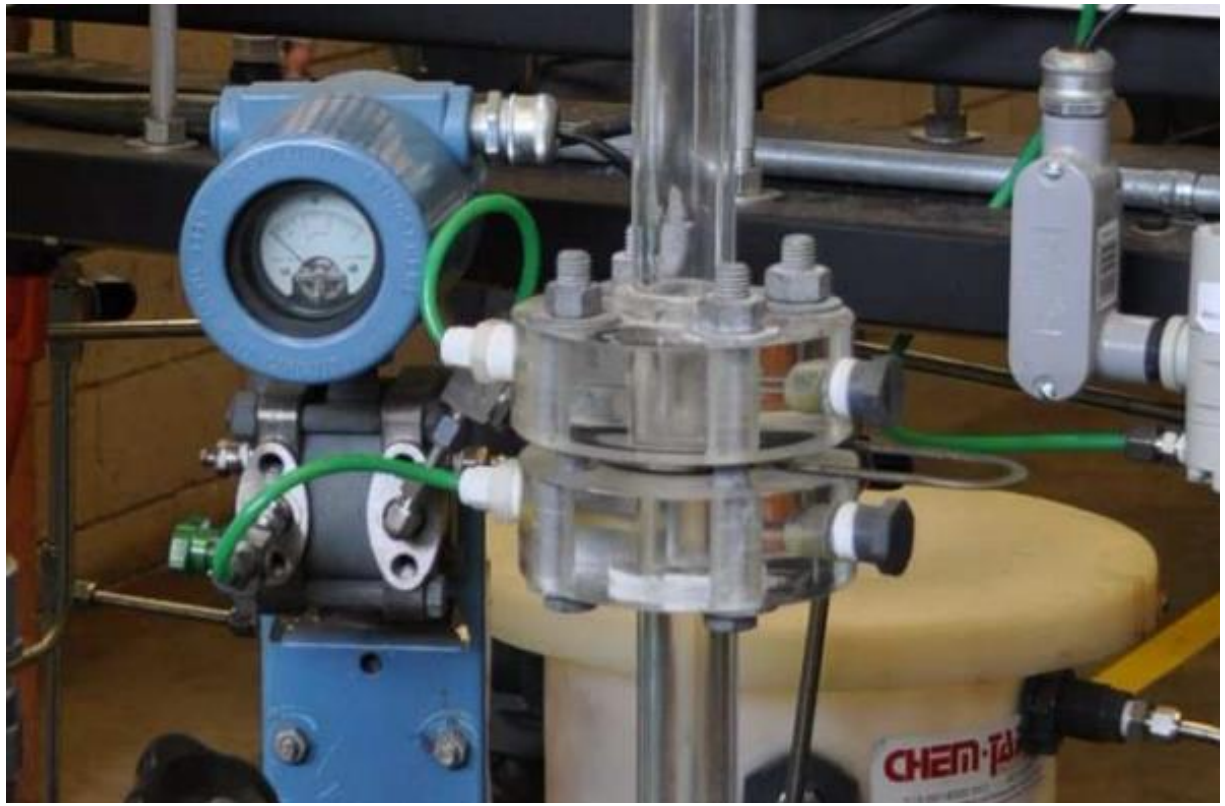

Pitot tube

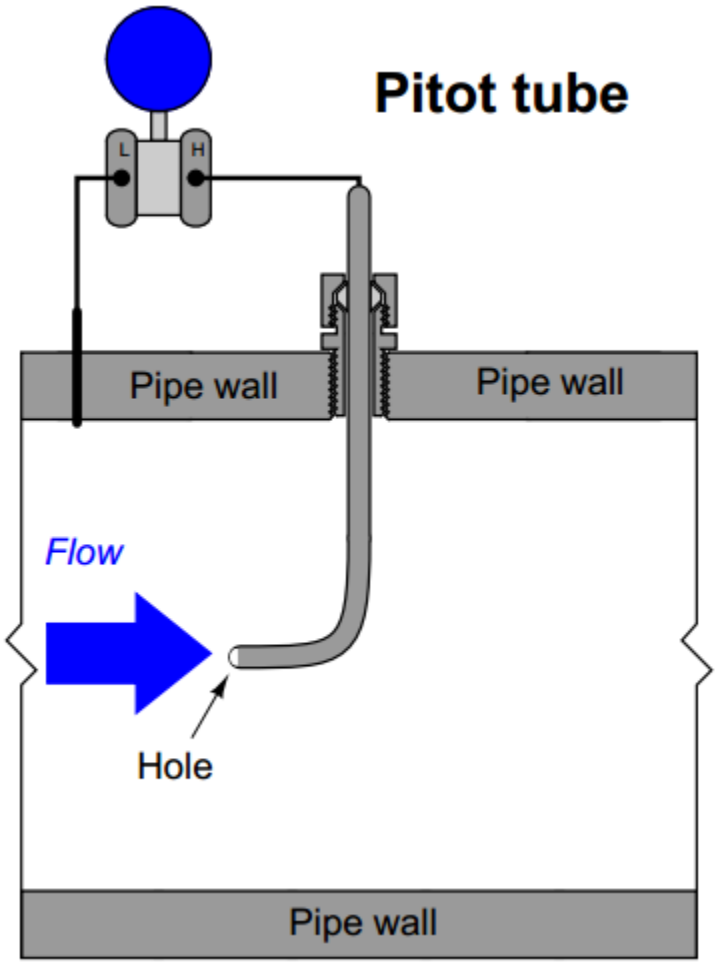
Pitot tube
L
H
Pipe wall
Pipe wall
Flow
Hole
Pipe wall

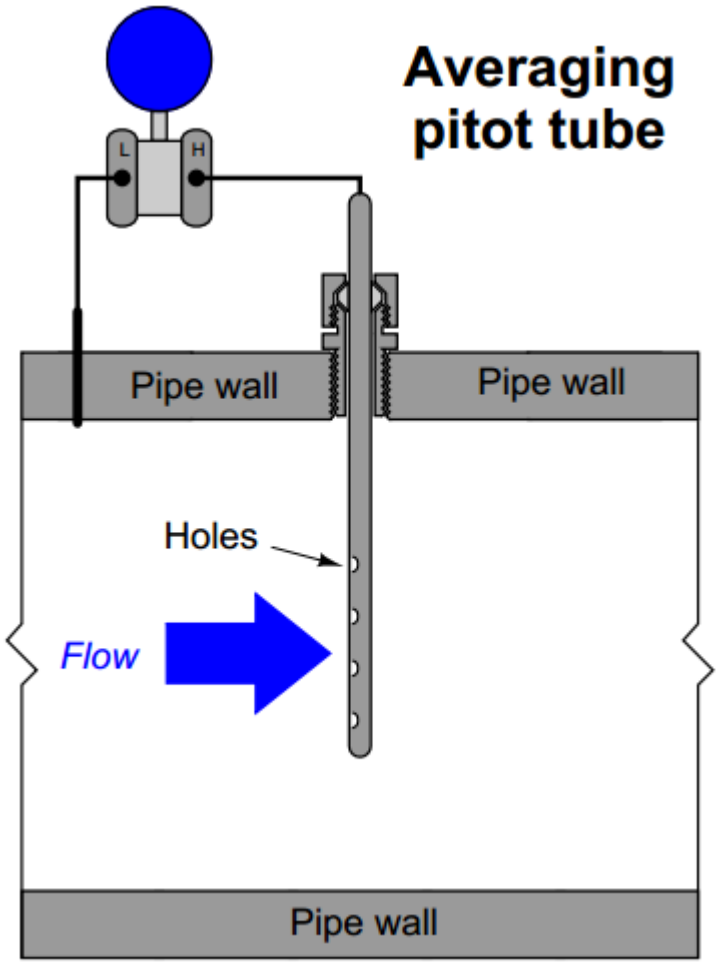
Averaging pitot tube
L
H
Pipe wall
Pipe wall
Holes
Flow
Pipe wall

Pitot tube

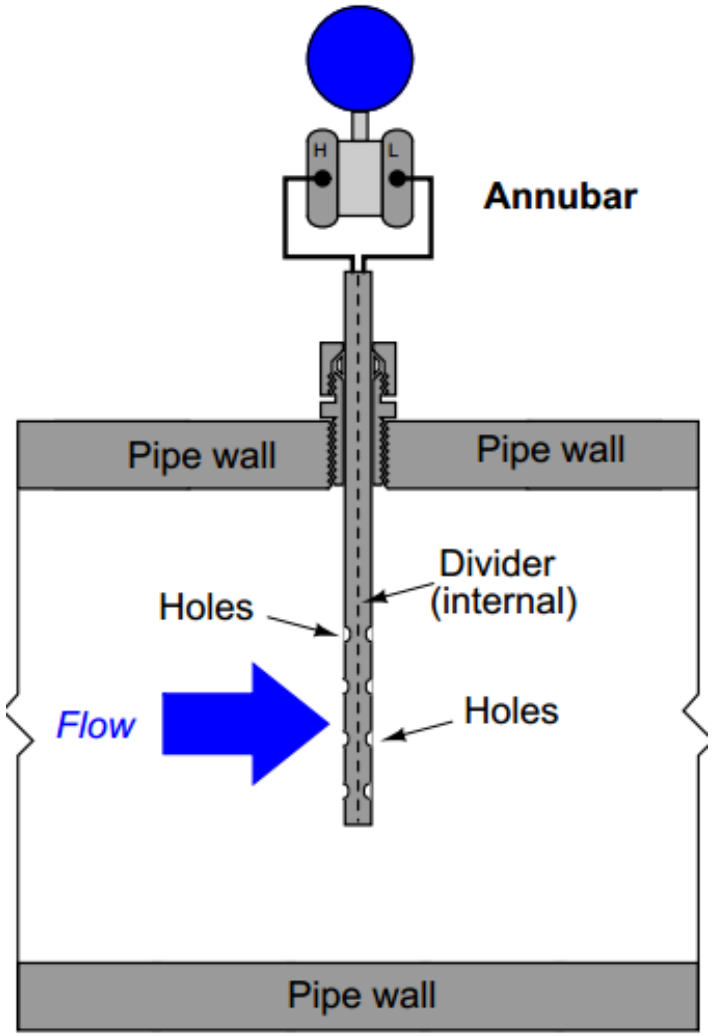
H
L
Annubar
Pipe wall
Pipe wall
Divider
(internal)
Holes
Flow
Holes
Pipe wall

DIAMOND II ANNUBAR
FLOW METER STATION
Dieterich Standard

Pitot tube

Drag disk

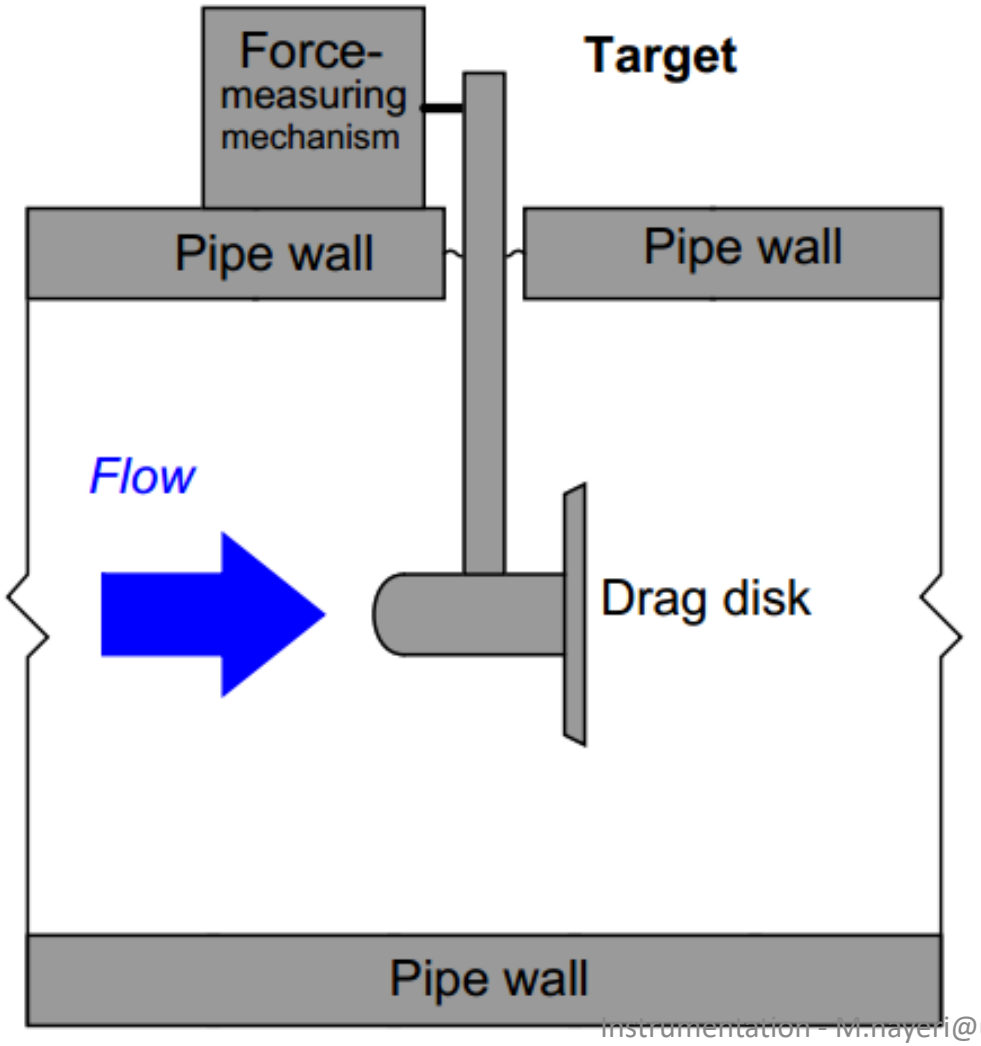
Force-
measuring
mechanism
Target
Pipe wall
Pipe wall
Flow
Drag disk
Pipe wall

FOXBORO
BCIT

Flow nozzle

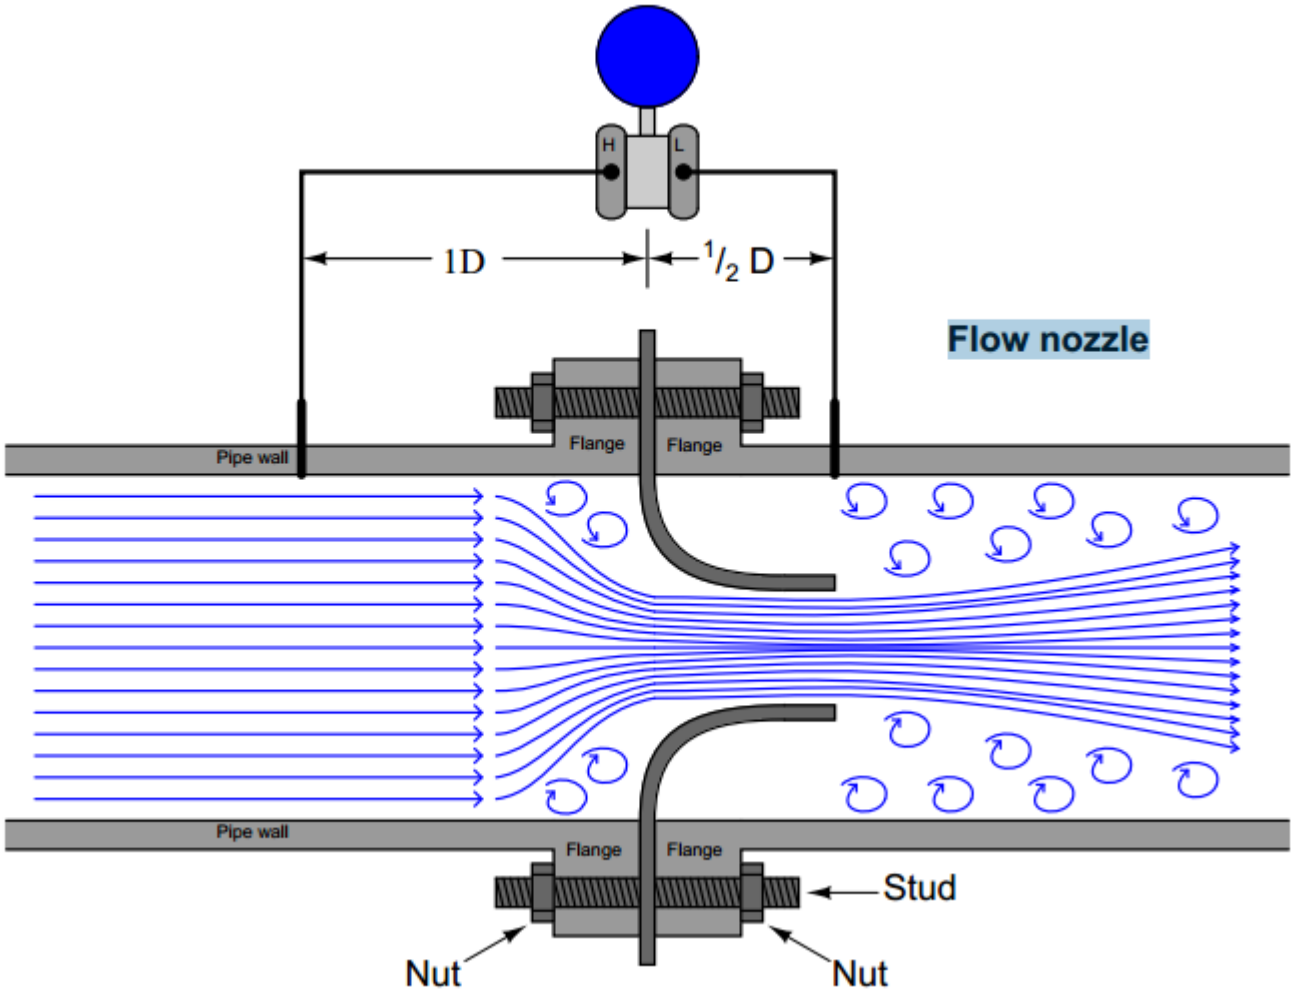
H
L
1D
1/2 D
Flow nozzle
Flange
Flange
Pipe wall
Pipe wall
Flange
Flange
Stud
Nut
Nut

V-cone

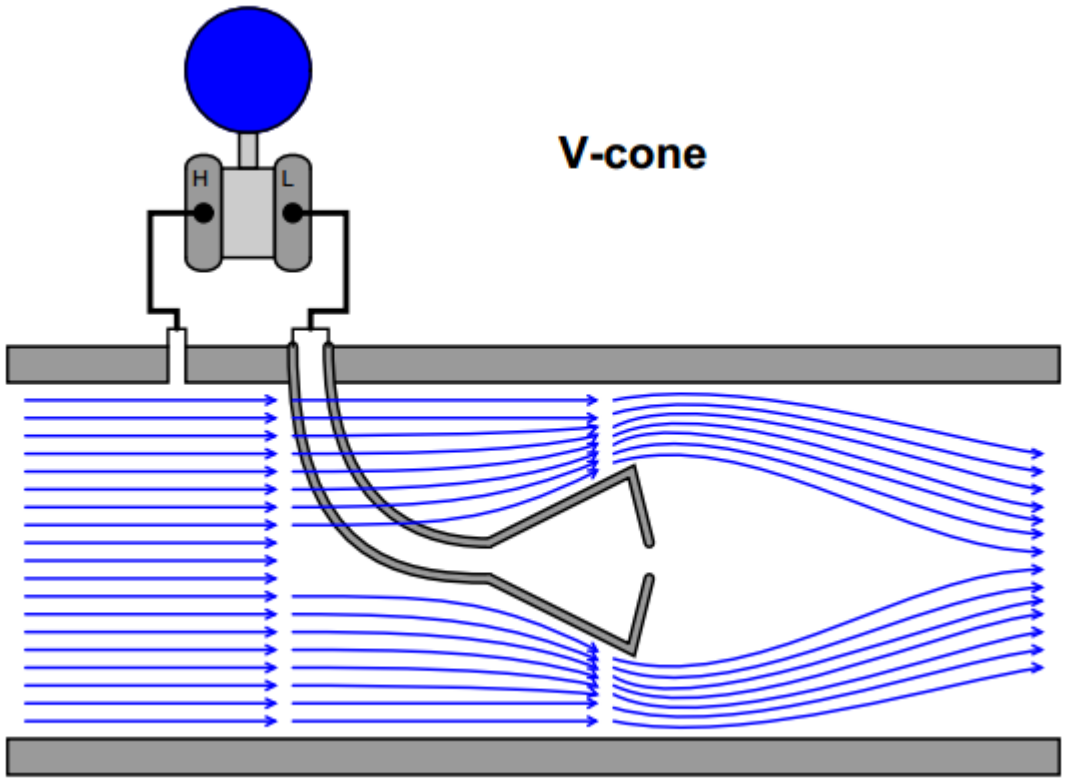

Segmental wedge

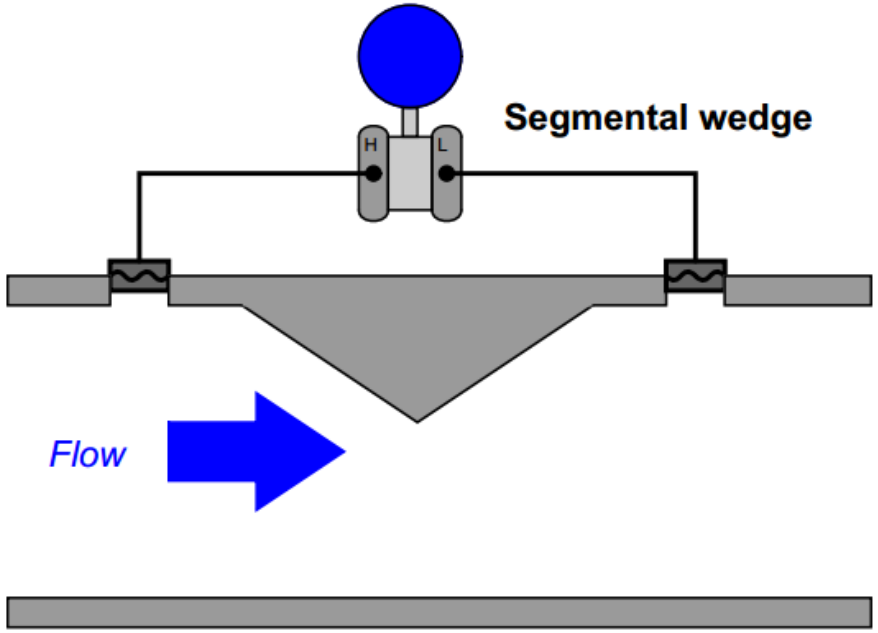

Pipe elbow

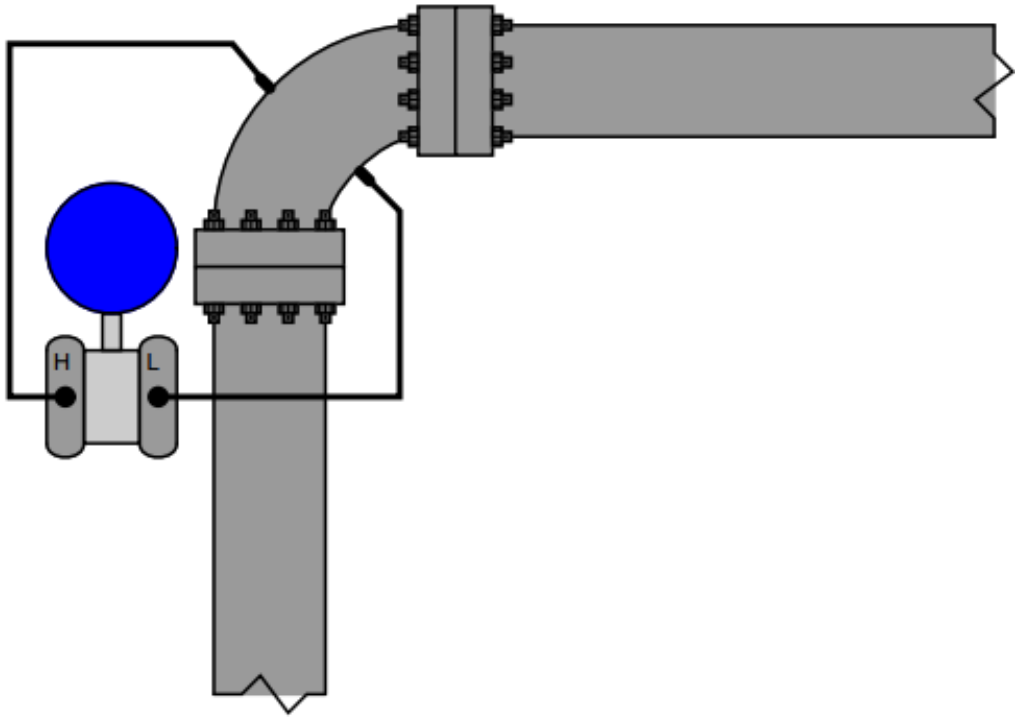

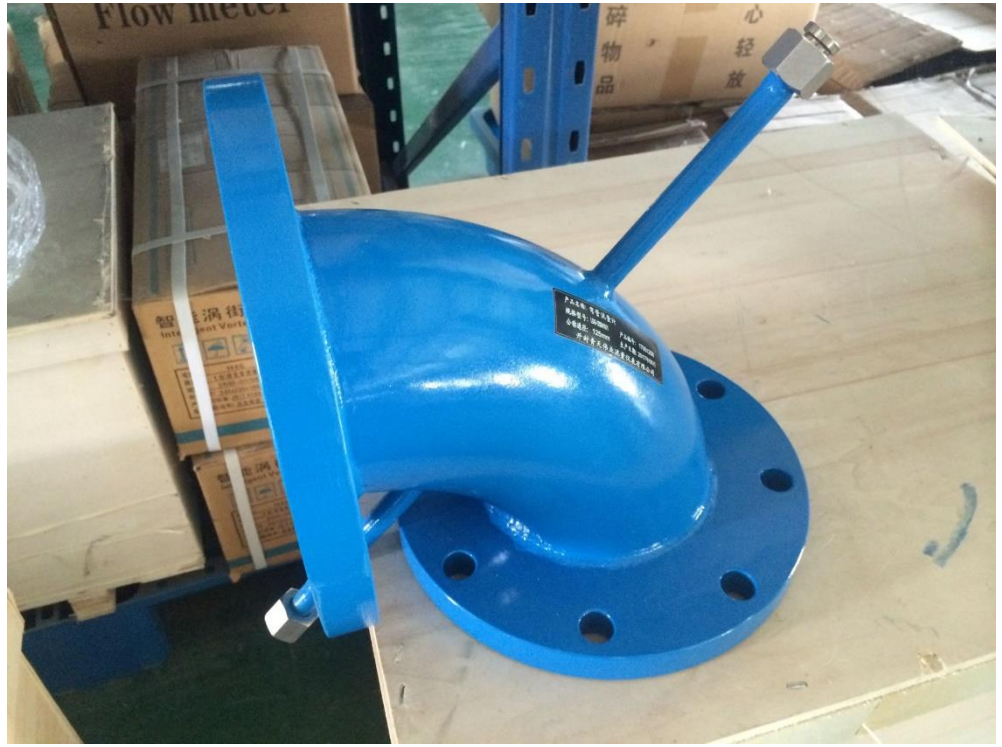

Installation

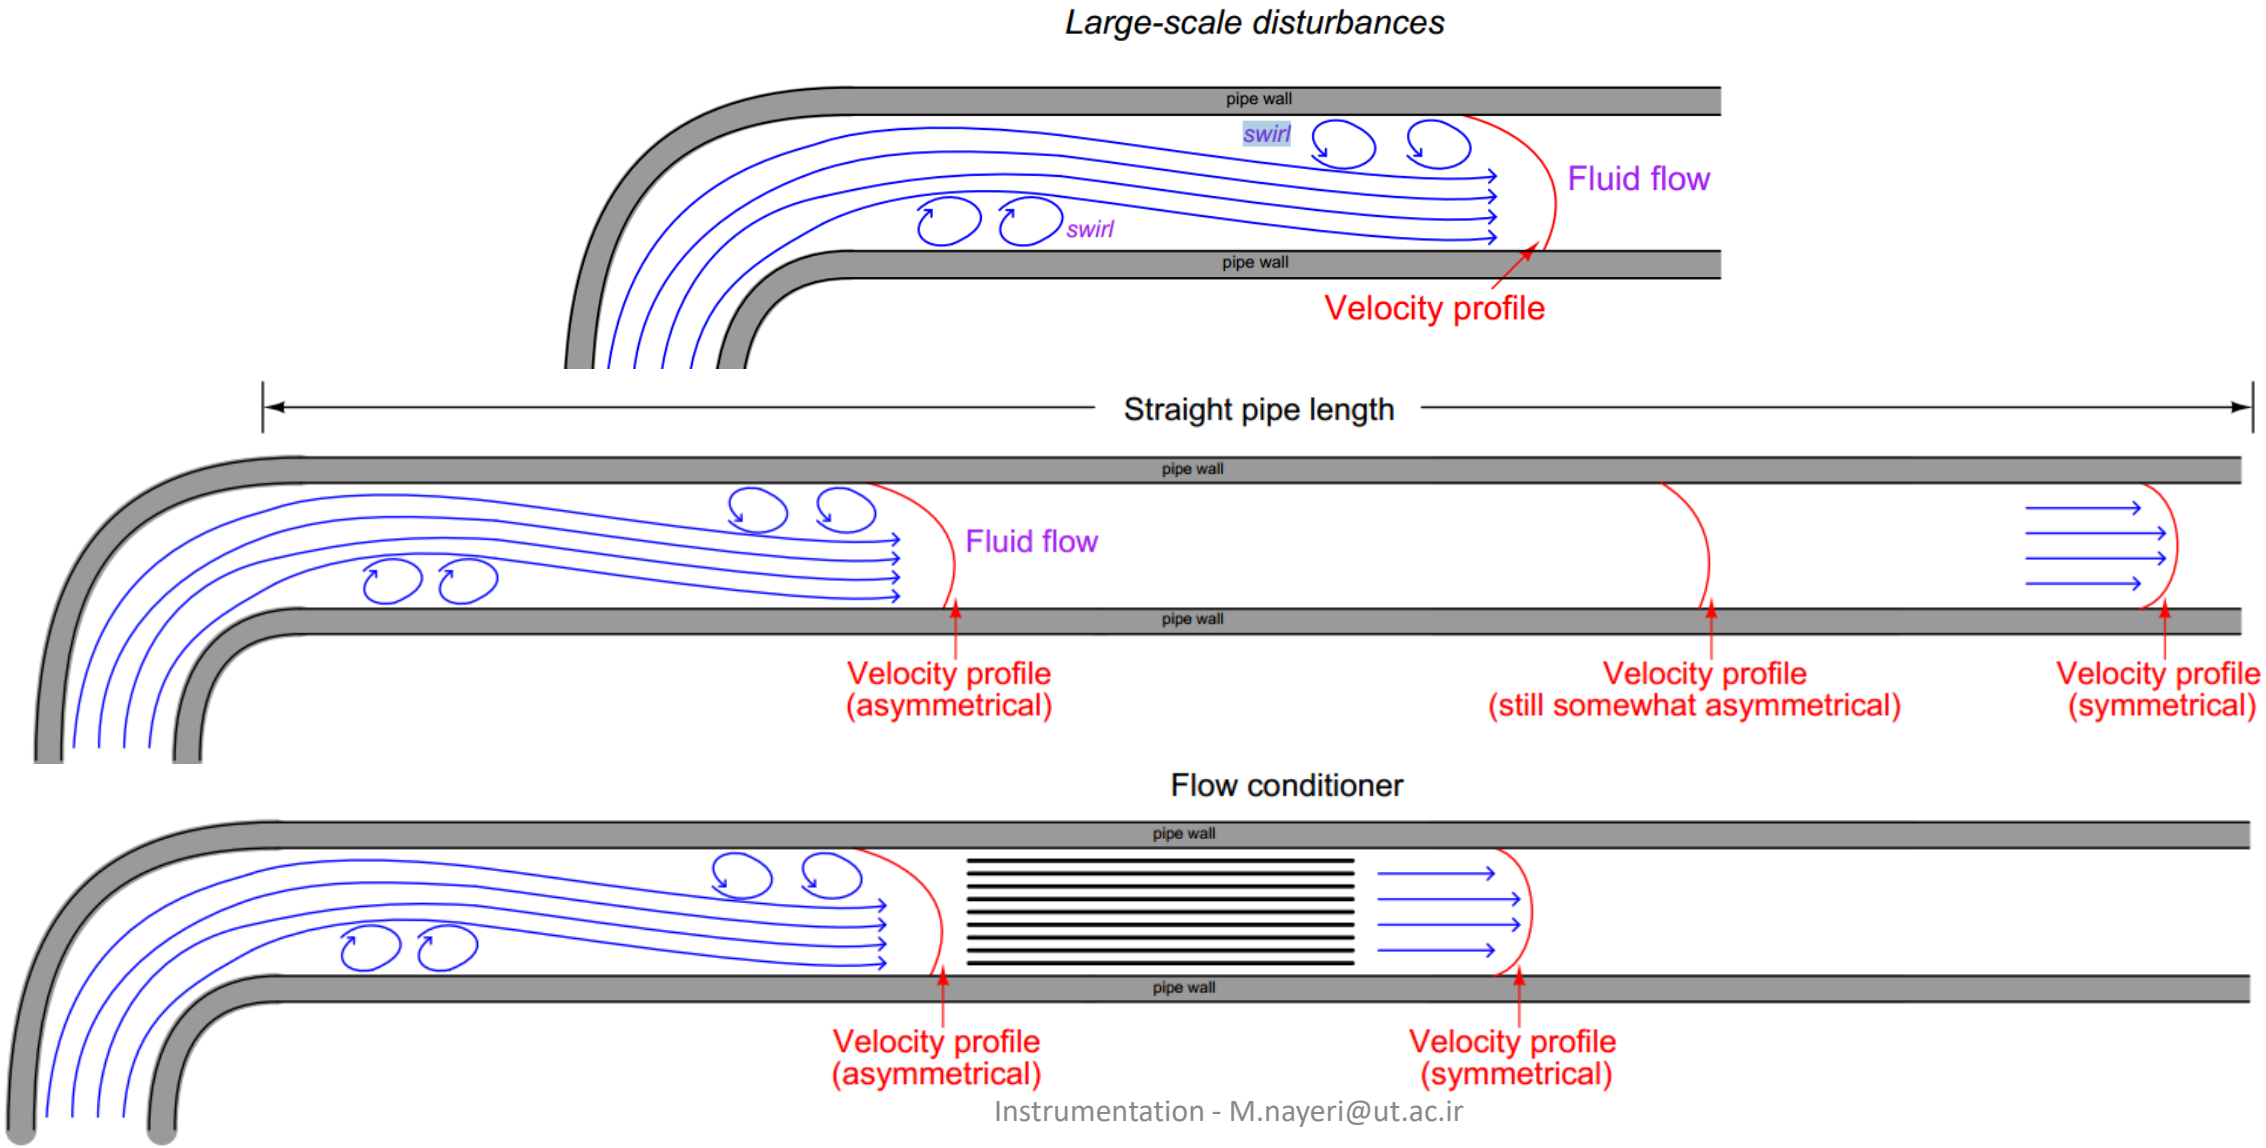

Installation

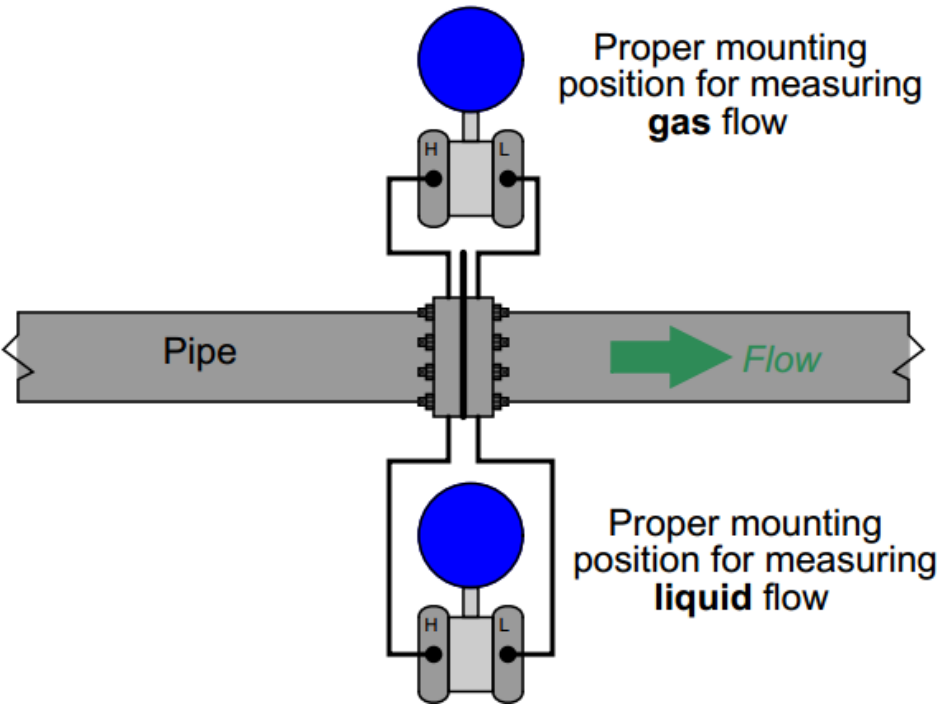

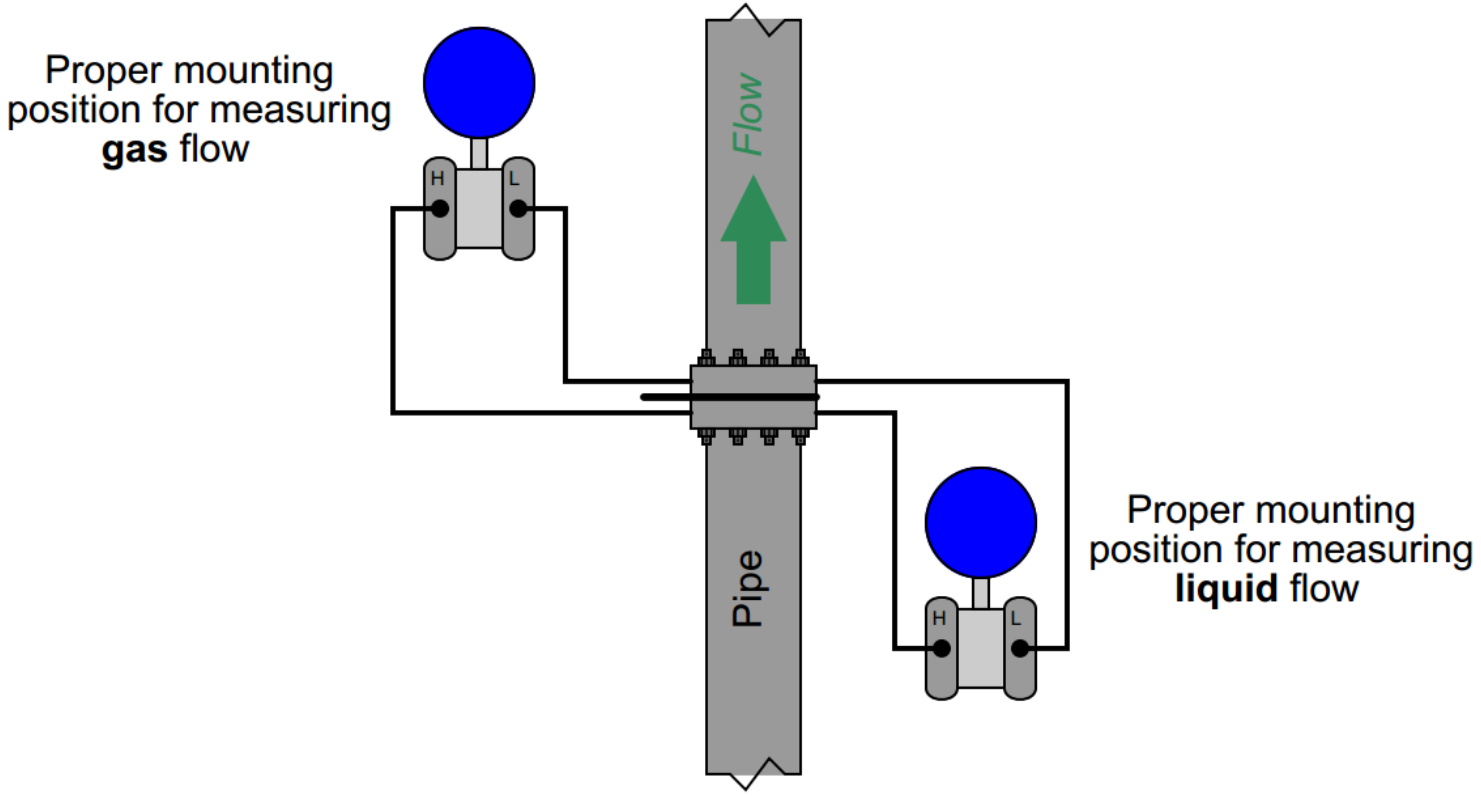

High-accuracy flow measurement

- Energy losses due to turbulence and viscosity
- Energy losses due to friction against the pipe and element surfaces
- Unstable location of *vena contracta* with changes in flow
- Uneven velocity profiles caused by irregularities in the pipe
- Fluid compressibility
- Thermal expansion (or contraction) of the element and piping
- Non-ideal pressure tap location(s)
- Excessive turbulence caused by rough internal pipe surfaces

$$C = \frac{\text{True flow}}{\text{Theoretical flow}} \qquad Y = \frac{C_{gas}}{C_{liquid}} \qquad Y = \frac{\left(\frac{\text{True gas flow}}{\text{Theoretical gas flow}}\right)}{\left(\frac{\text{True liquid flow}}{\text{Theoretical liquid flow}}\right)}$$

High-accuracy flow measurement

The American Gas Association (AGA) provides a formula for calculating volumetric flow of any gas using orifice plates

$$Q = N \frac{CYA_2}{\sqrt{1-\left(\frac{A_2}{A_1}\right)^2}} \sqrt{\frac{Z_s P_1 (P_1 - P_2)}{G_f Z_{f1} T}}$$

$$Q = k\sqrt{\frac{P_1 - P_2}{\rho}}$$

Where,

Q = Volumetric flow rate (SCFM = standard cubic feet per minute)

N = Unit conversion factor

C = Discharge coefficient (accounts for energy losses, Reynolds number corrections, pressure tap locations, etc.)

Y = Gas expansion factor

A_1 = Cross-sectional area of mouth

A_2 = Cross-sectional area of throat

Z_s = Compressibility factor of gas under standard conditions

Z_{f1} = Compressibility factor of gas under flowing conditions, upstream

G_f = Specific gravity of gas (density compared to ambient air)

T = Absolute temperature of gas

P_1 = Upstream pressure (absolute)

P_2 = Downstream pressure (absolute)

High-accuracy flow measurement

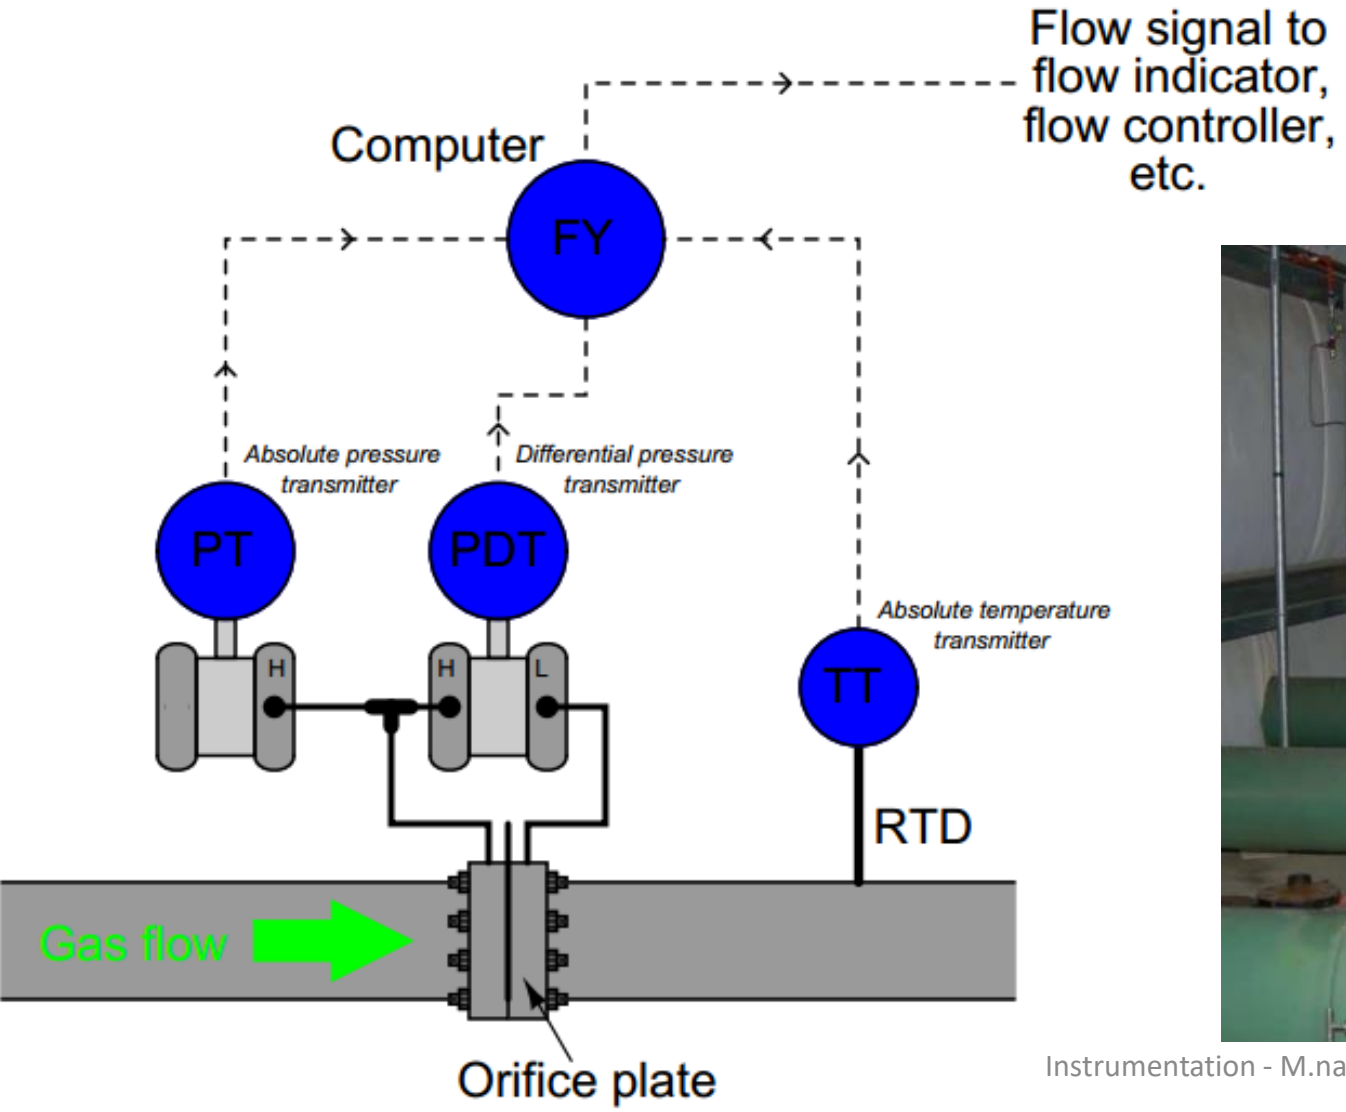

High-accuracy flow measurement

An alternative to multiple instruments (differential pressure, absolute pressure, and temperature) installed on each meter run is to use a single multi-variable transmitter capable of measuring gas temperature as well as both static and differential pressures. This approach enjoys the advantage of simpler installation over the multi-instrument approach.

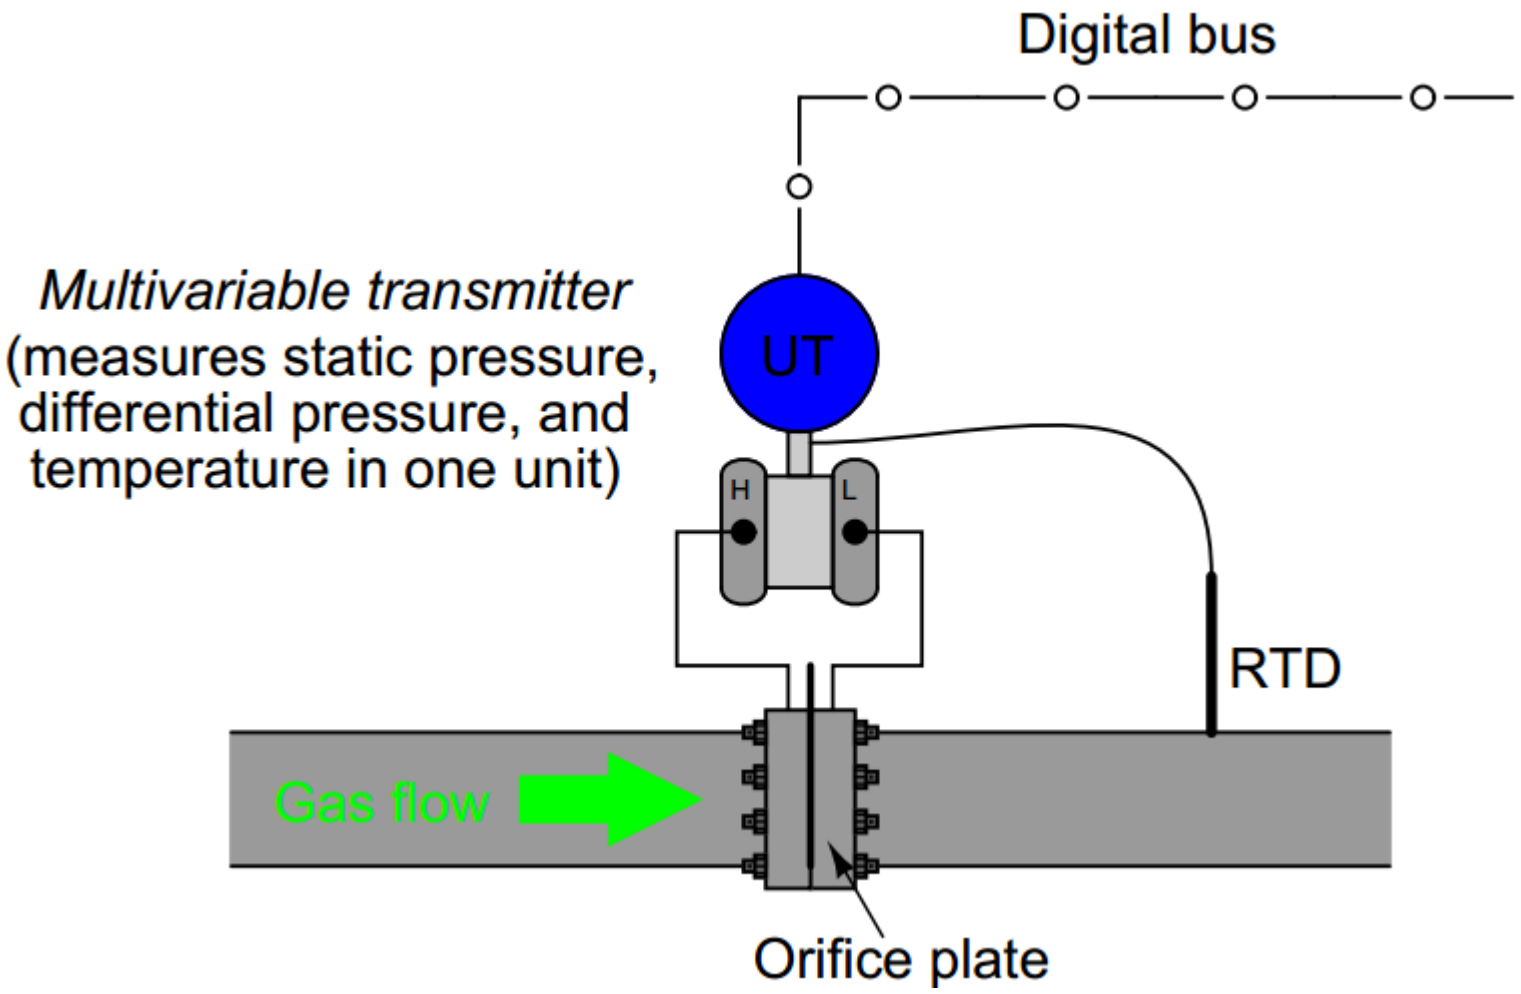

Laminar flow meters

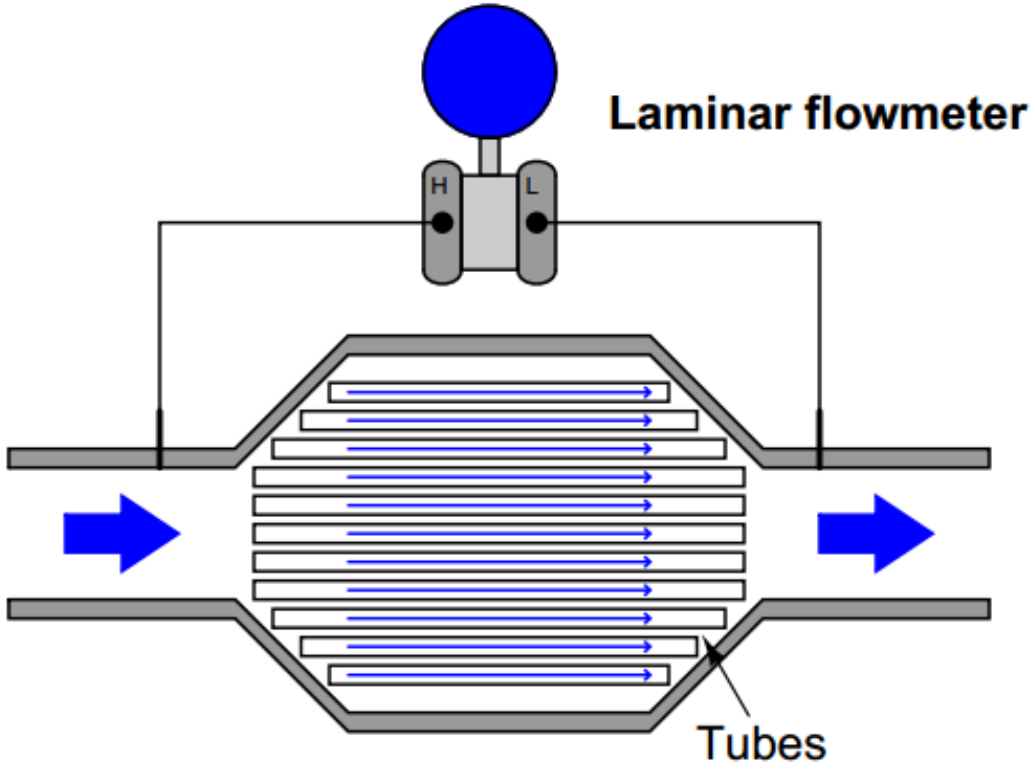

$$Q = k\left(\frac{\Delta P D^4}{\mu L}\right)$$

Q = Flow rate
ΔP = Pressure dropped across a length of pipe
D = Pipe diameter
μ = Fluid viscosity
L = Pipe length
k = Coefficient accounting for units of measurement

Rotameters

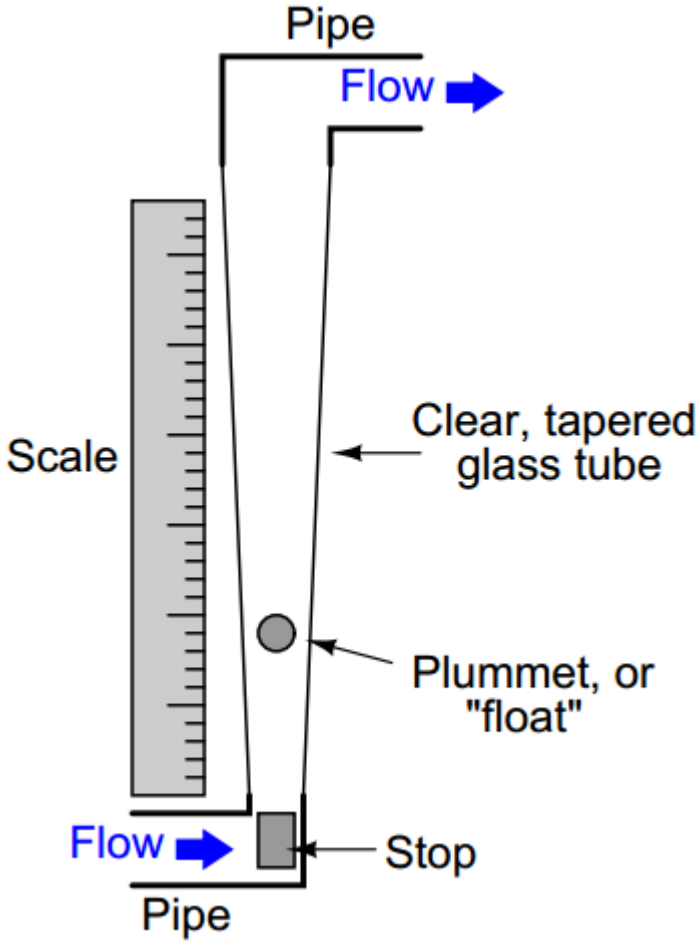

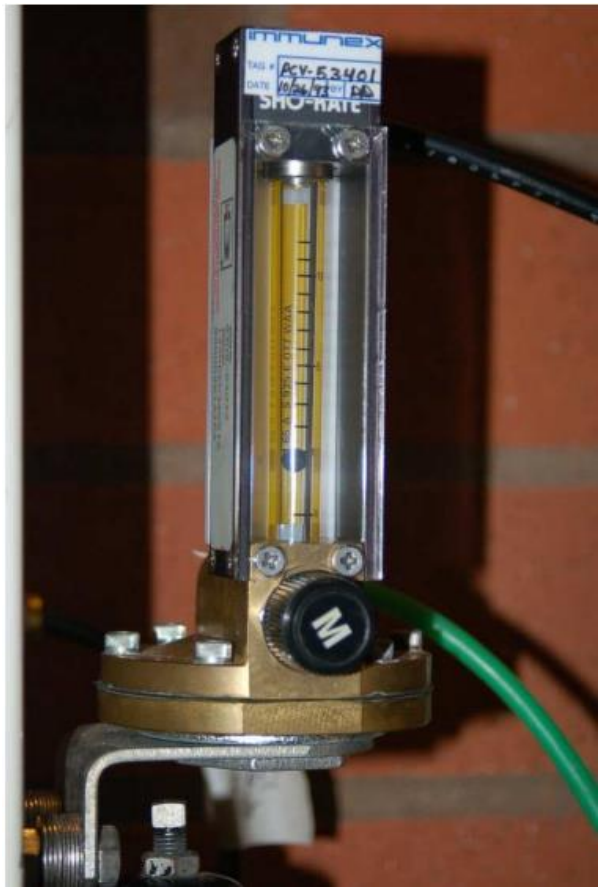

$$F = P\,A$$

Weirs

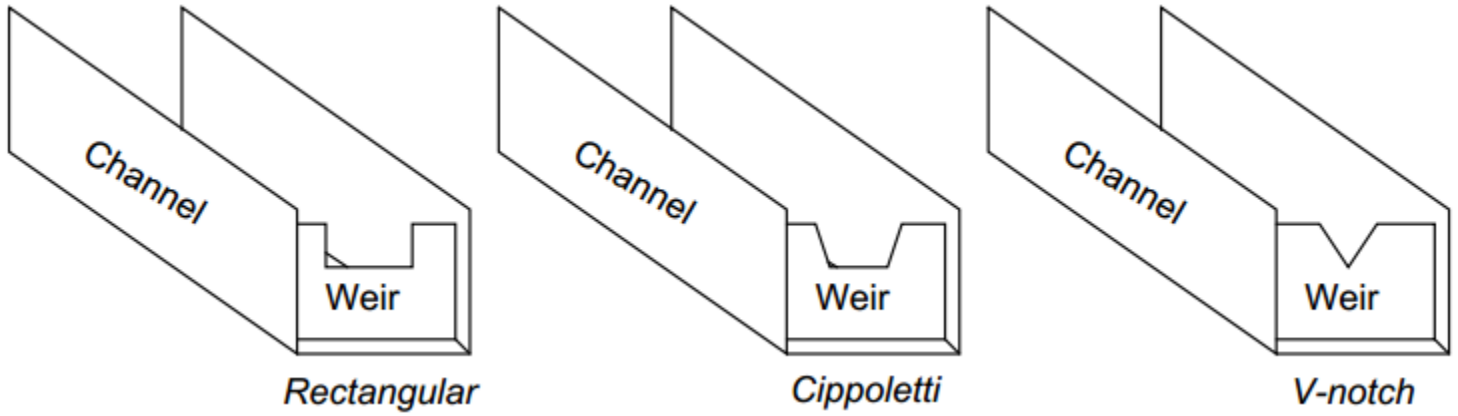

Rectangular *Cippoletti* *V-notch*

$$Q = 3.33(L - 0.2H)H^{1.5}$$

$$Q = 3.367LH^{1.5}$$

$$Q = 2.48\left(\tan\frac{\theta}{2}\right)H^{2.5}$$

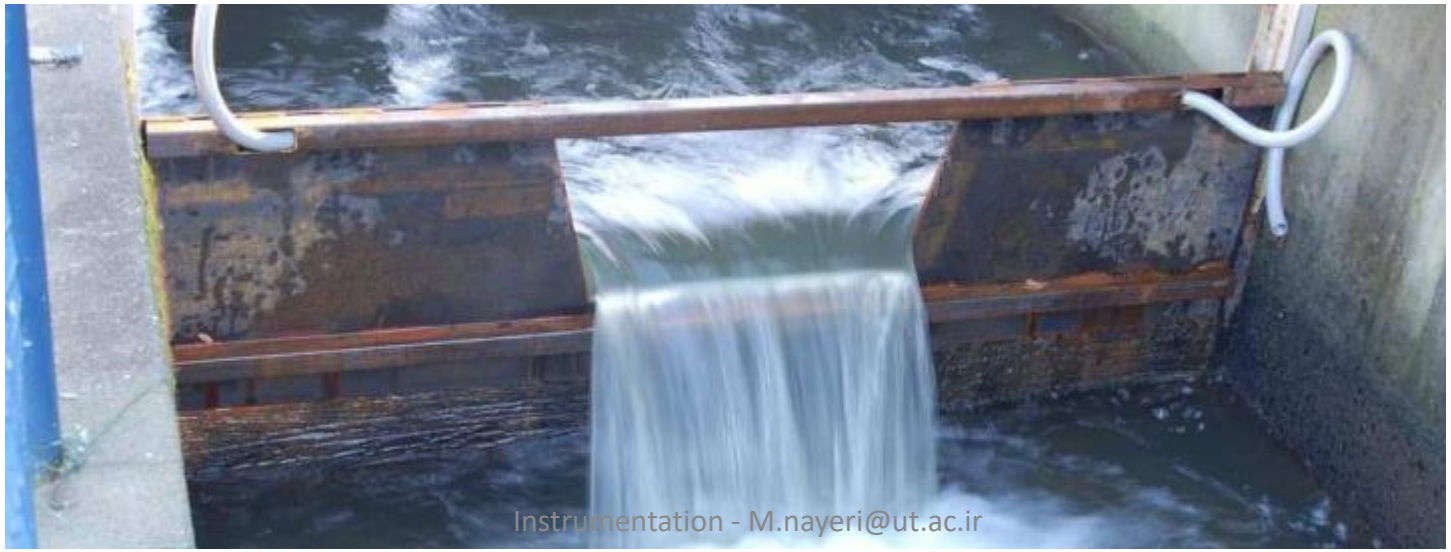

Weirs

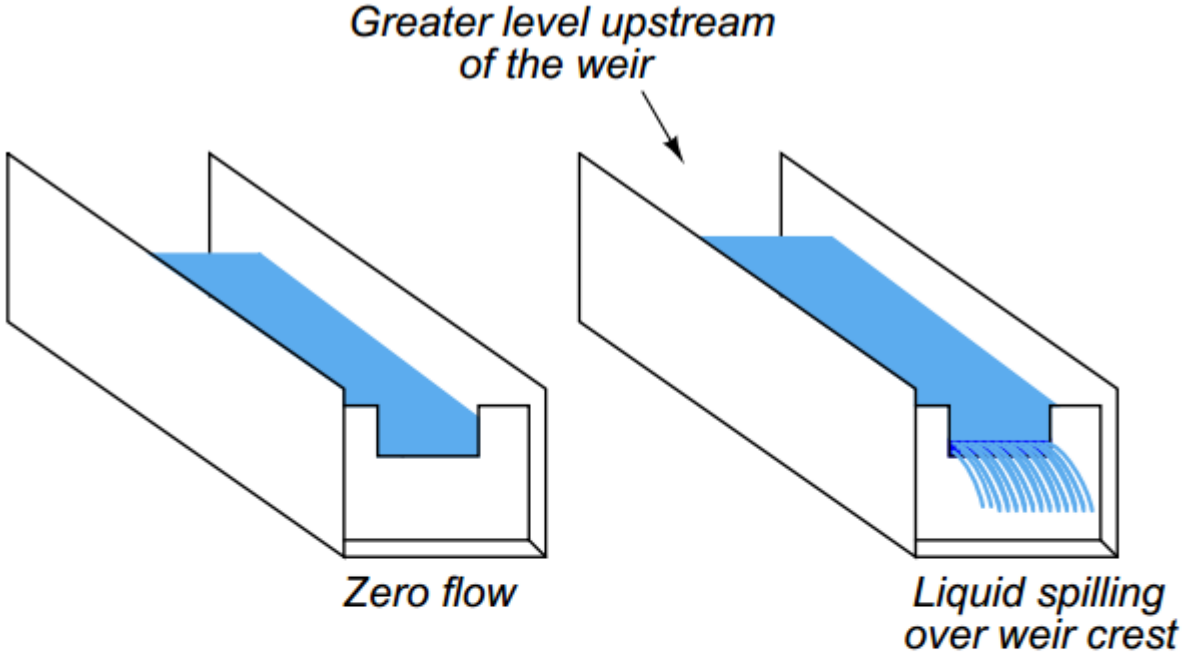
Greater level upstream
of the weir
Zero flow
Liquid spilling
over weir crest

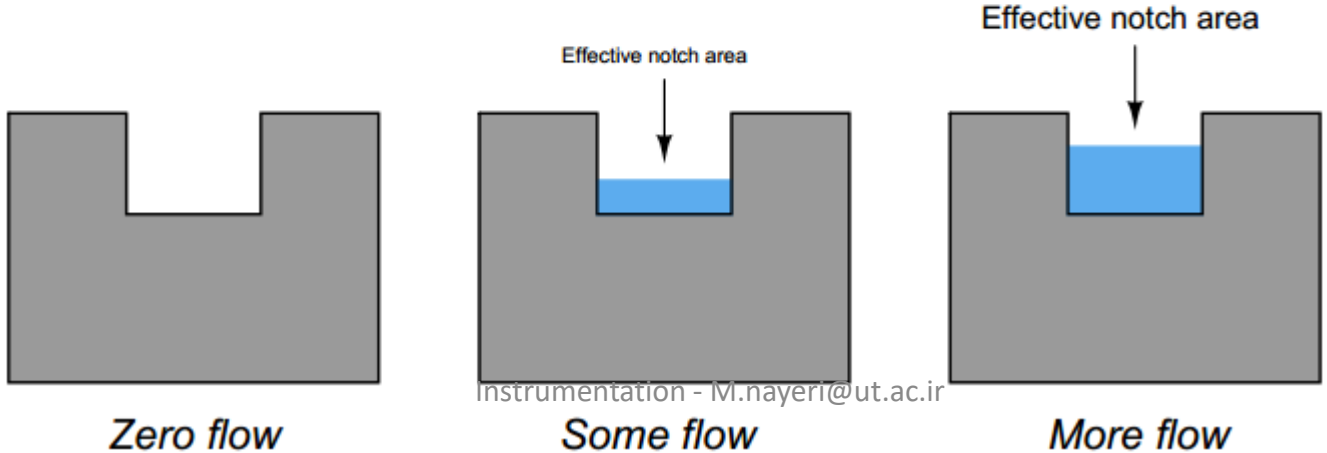
Effective notch area
Effective notch area
Zero flow
Some flow
More flow

Weirs

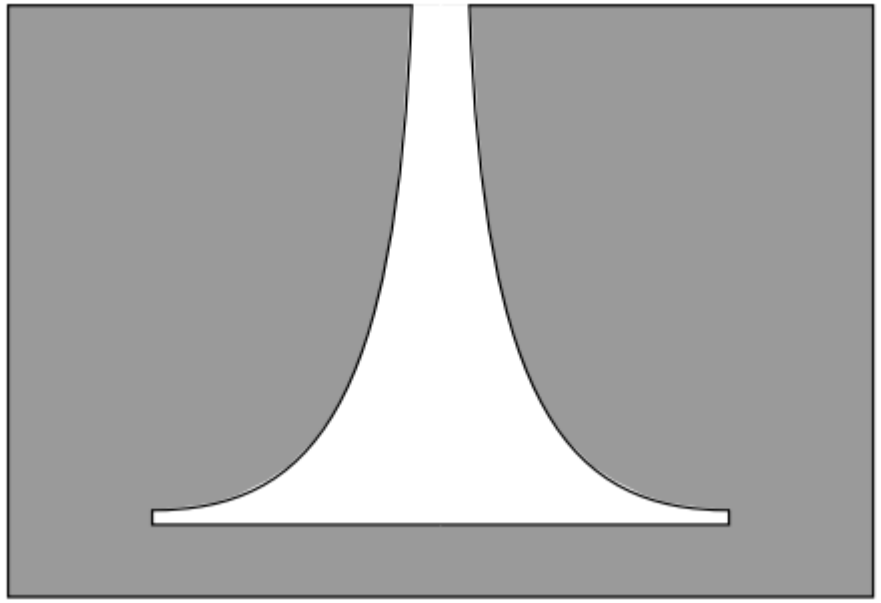

Proportional weir, which is designed to have a **linear relationship between head and flow rate.**

Flumes

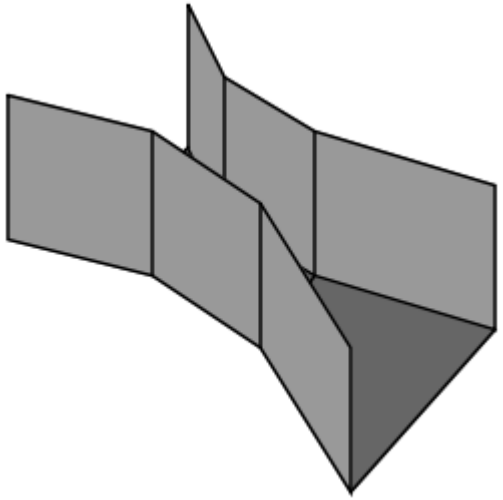

Flumes are generally **less accurate** than weirs, but they do enjoy the advantage of being inherently **self-cleaning**.

Weirs & Flumes

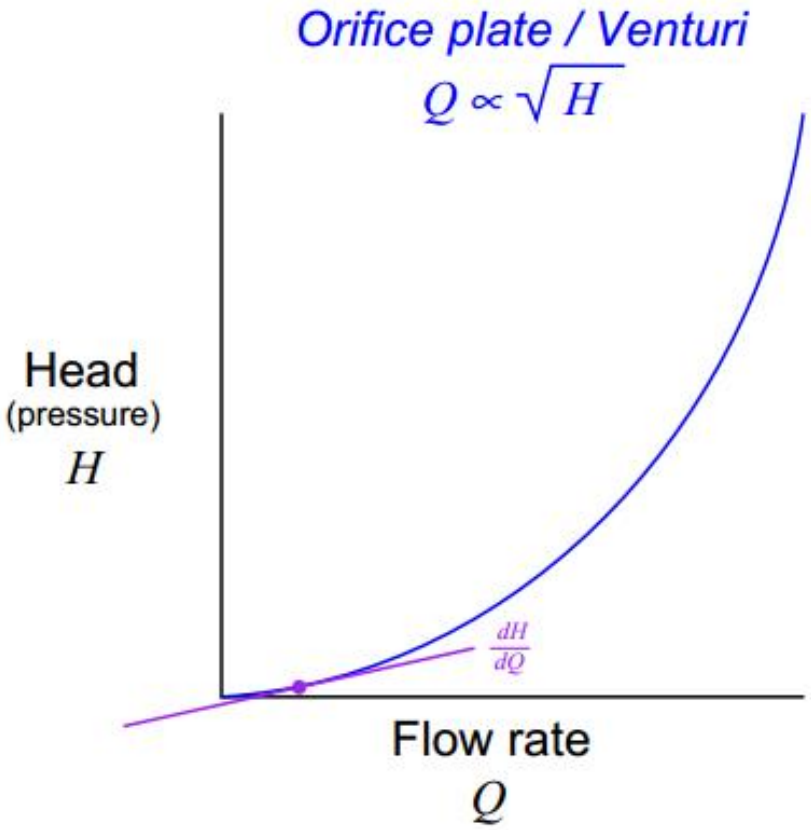

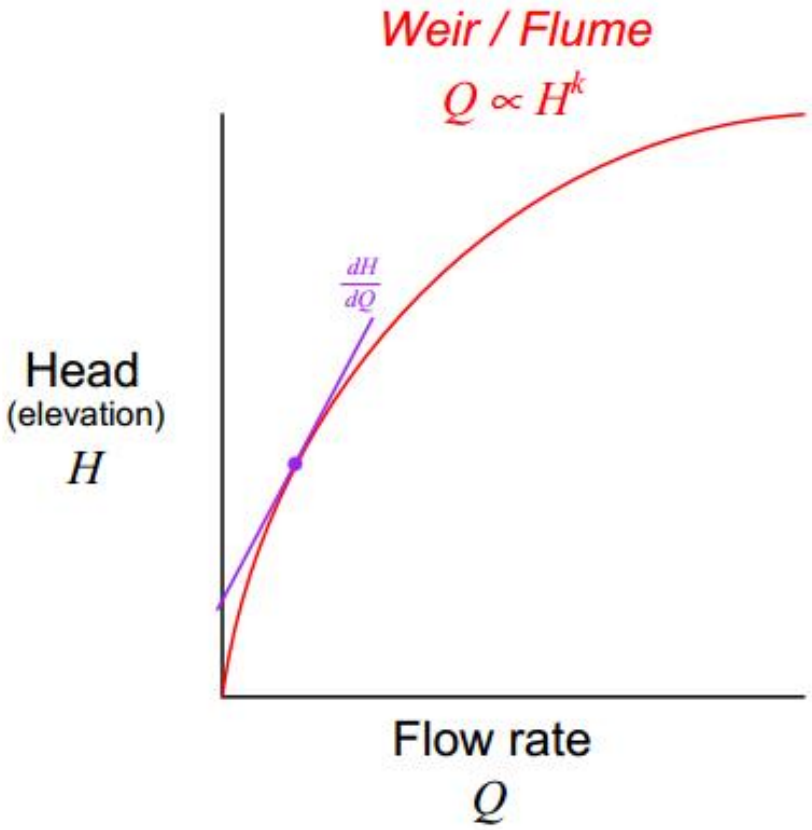

Flow Sensors

- **Turbine**

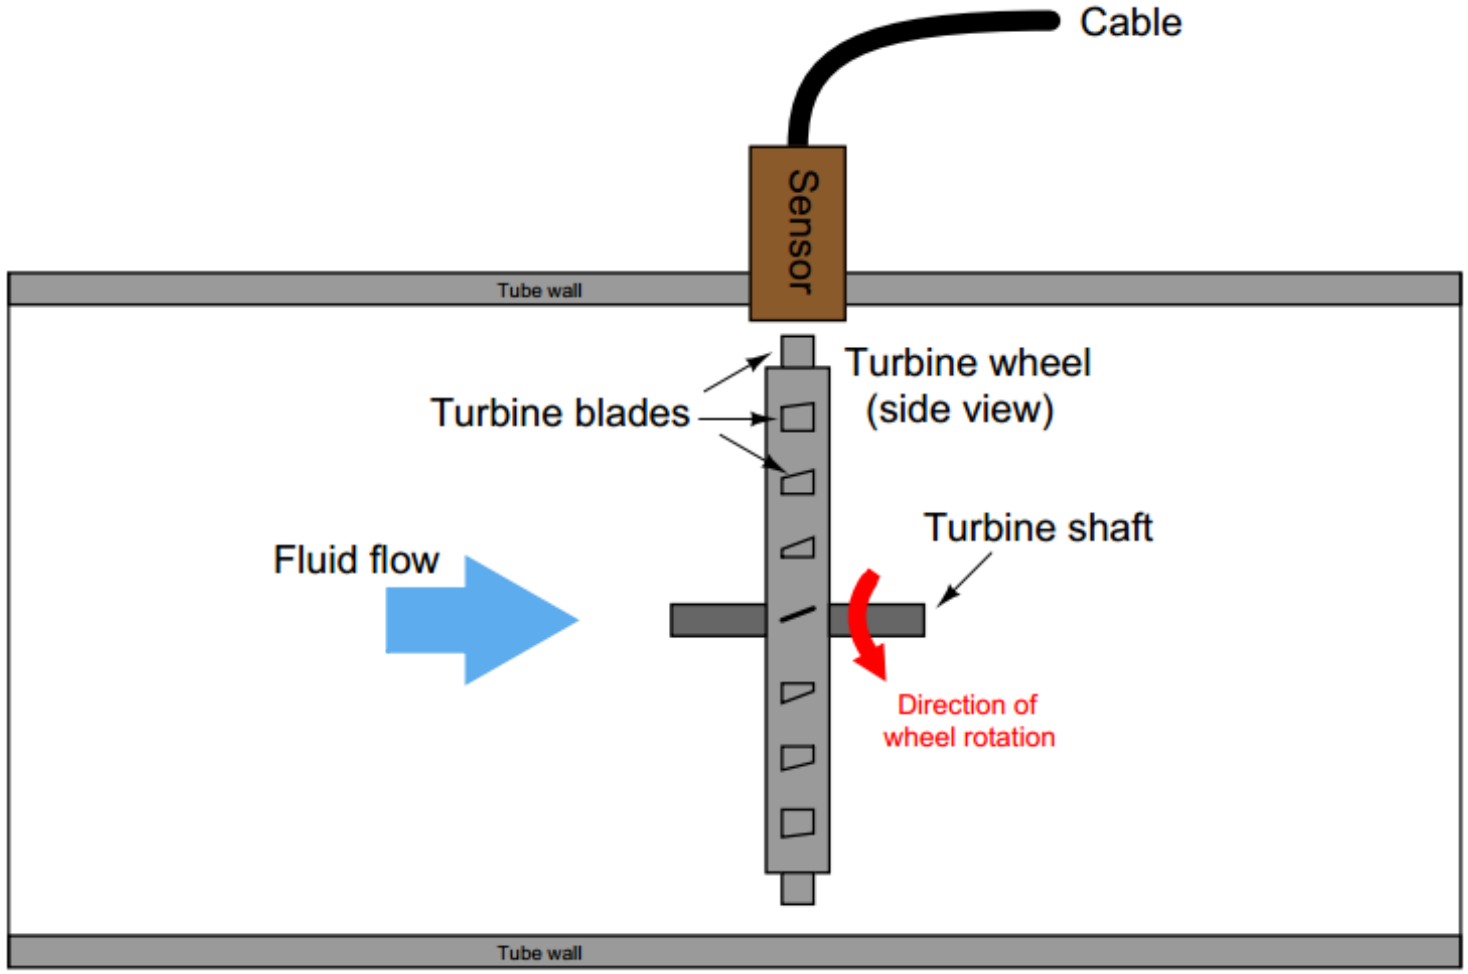

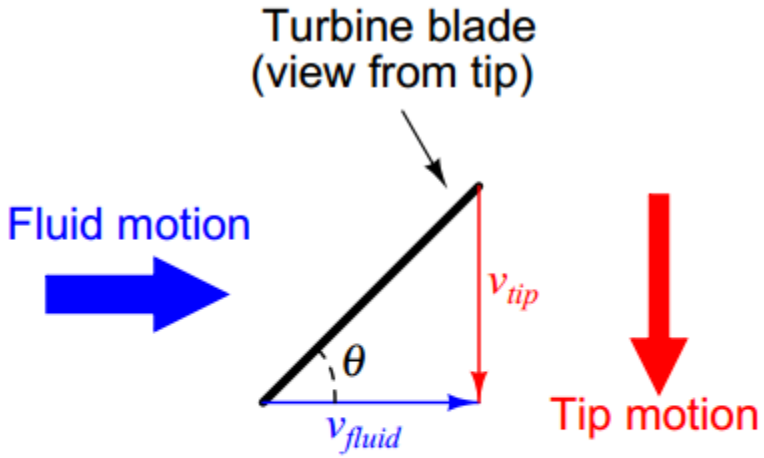

$$\tan\theta = \frac{v_{tip}}{v_{fluid}}$$

Flow Sensors

- **Turbine**

$$f = kQ$$

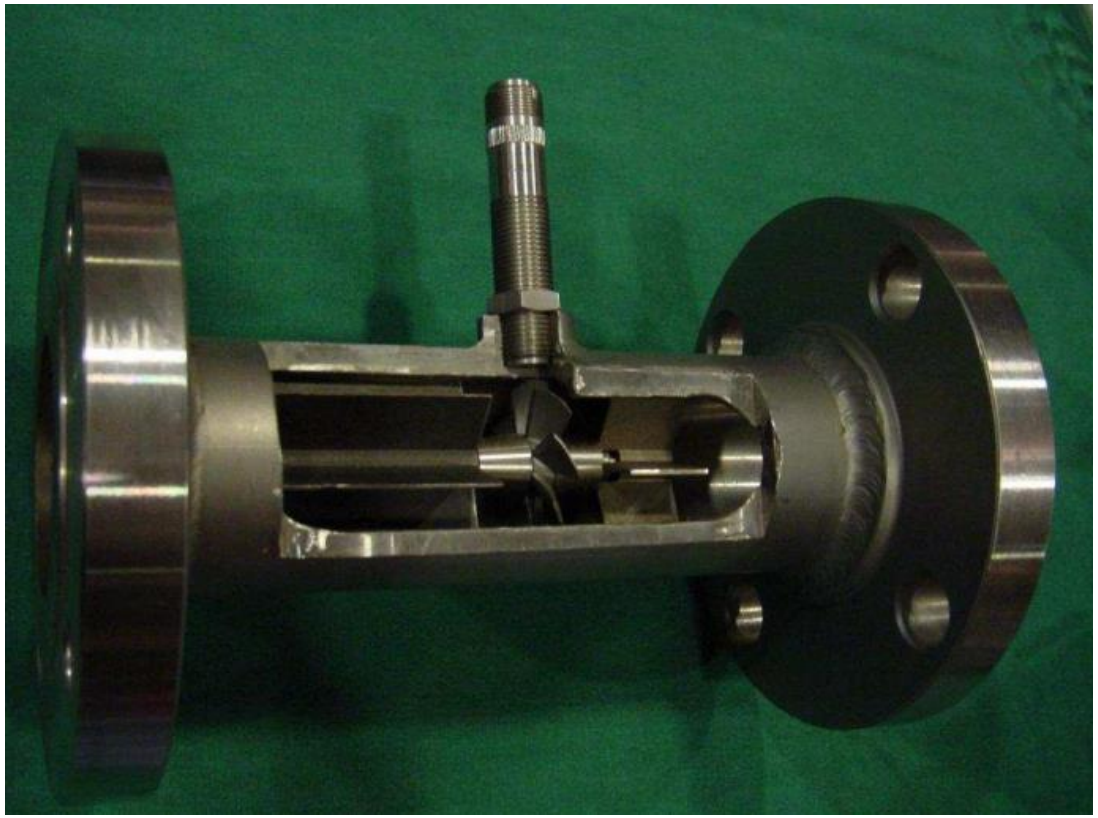

f = Frequency of output signal (Hz, equivalent to pulses per second)
Q = Volumetric flow rate (e.g. gallons per second)
k = "K" factor of the turbine element (e.g. pulses per gallon)

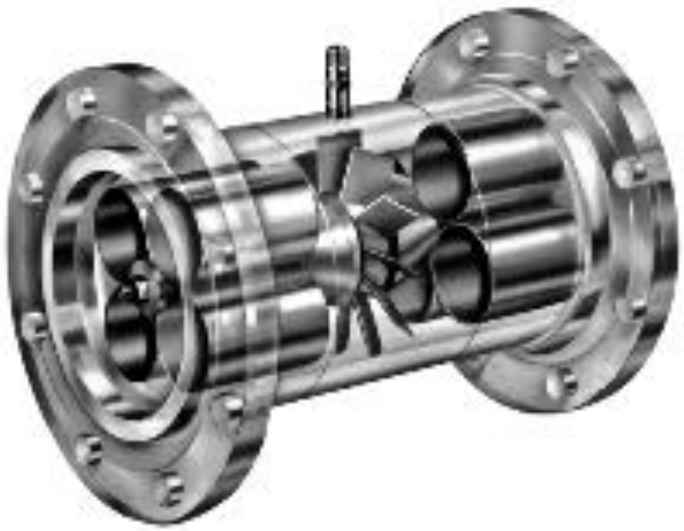

Vortex flowmeters

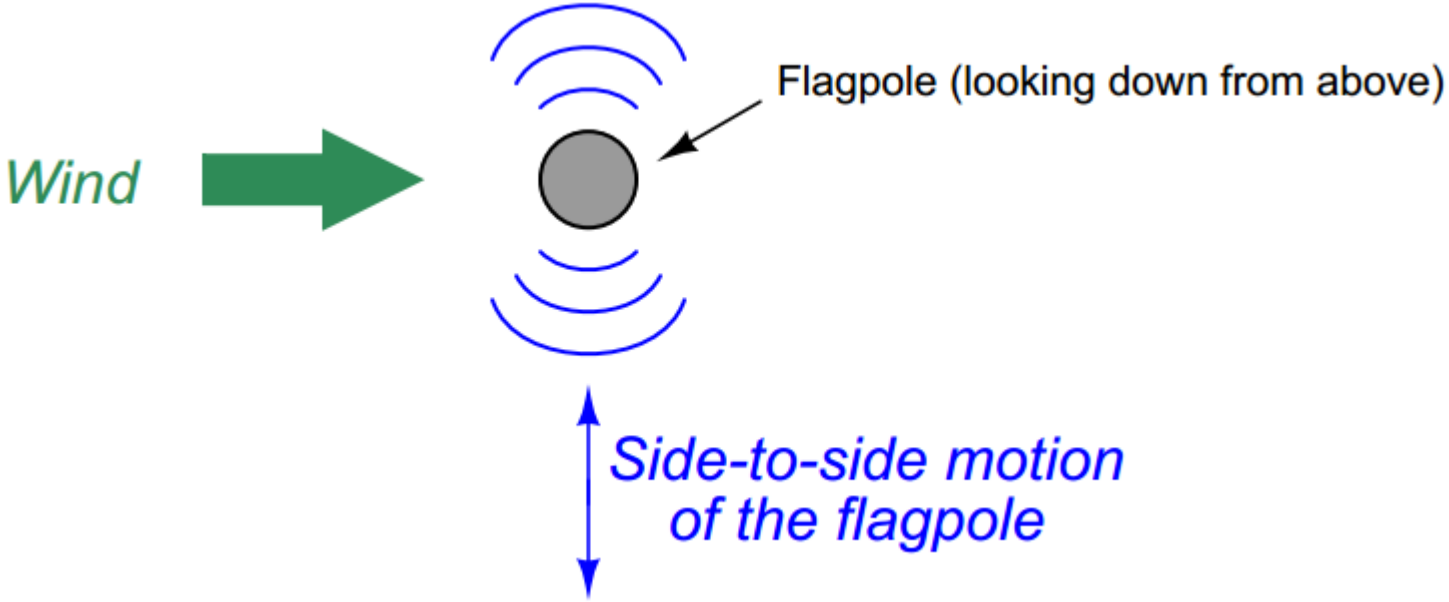

Vortex flowmeters

It was determined that the distance between **successive vortices** downstream of the stationary object is relatively constant, and directly **proportional to the width of the object**, for a **wide range of Reynolds number values**.

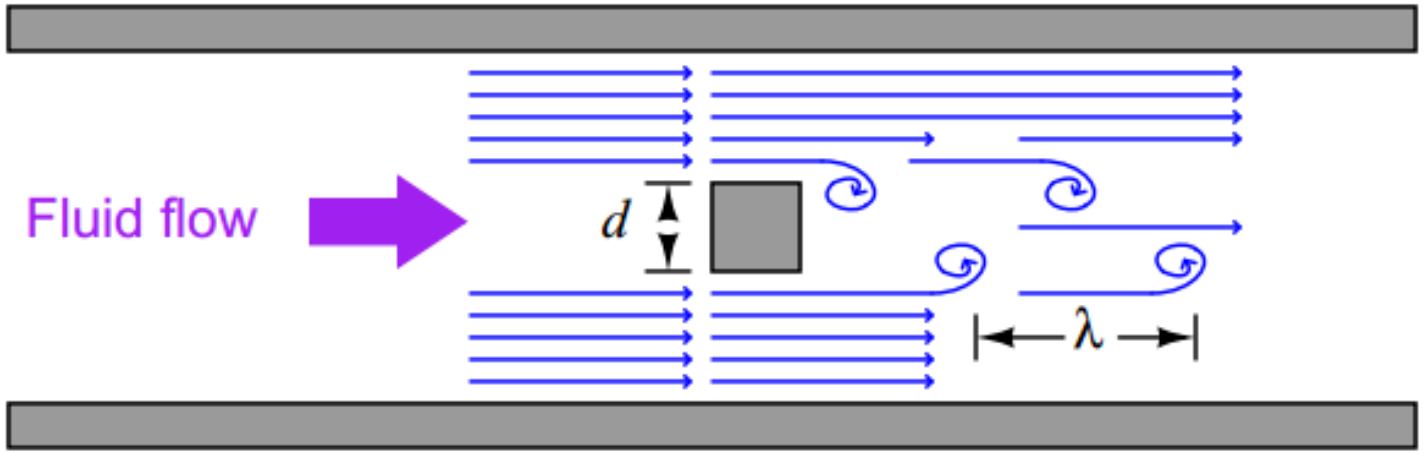

$$\lambda S = d \qquad \lambda \approx \frac{d}{0.17}$$

Strouhal number (S) approximately equal to 0.17

Vortex flowmeters

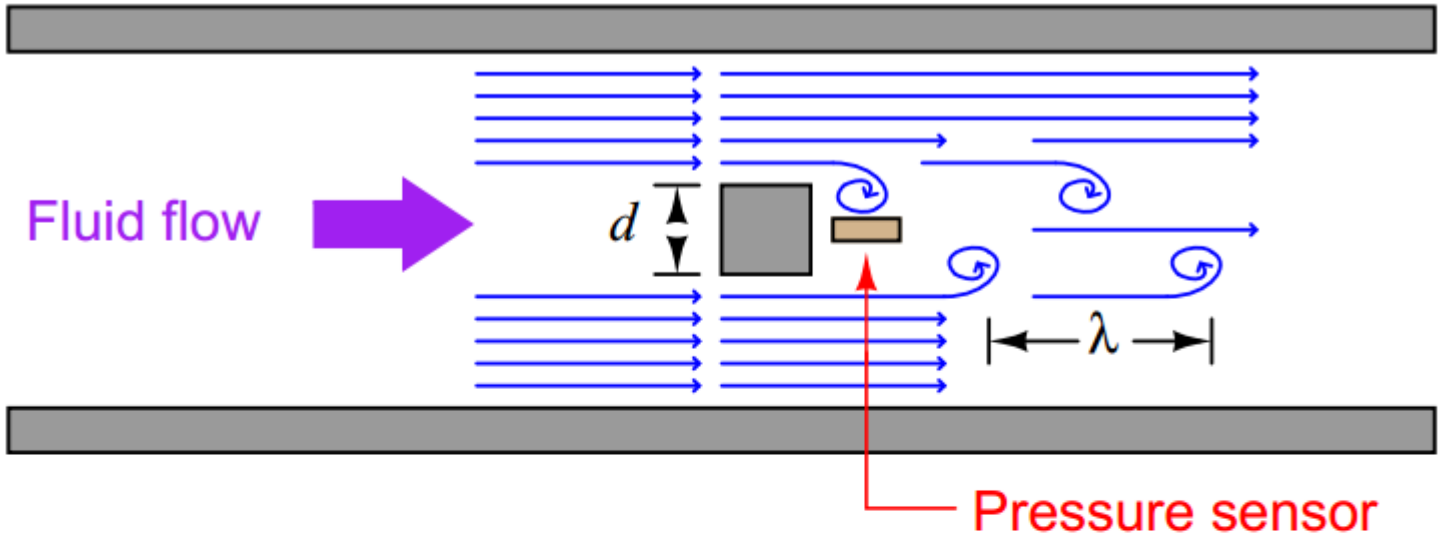

$$v = \lambda f$$

$$v = \frac{d}{0.17} f$$

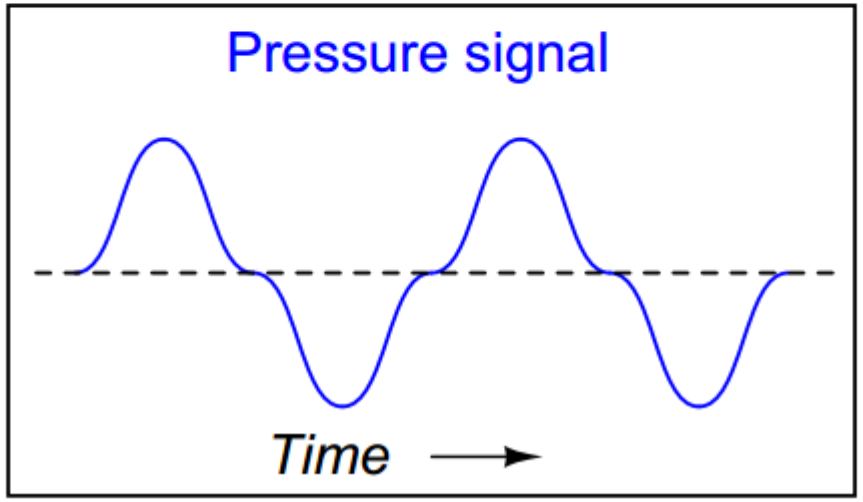

$$f = kQ$$

Vortex flowmeters

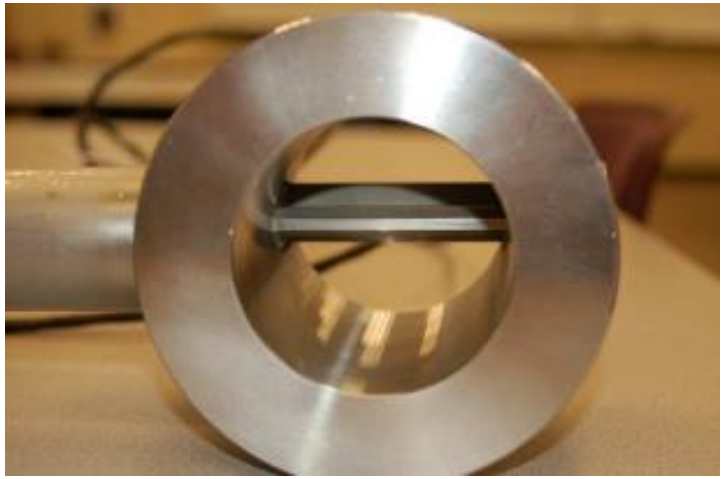

Flow Sensors

- **Magnetic**

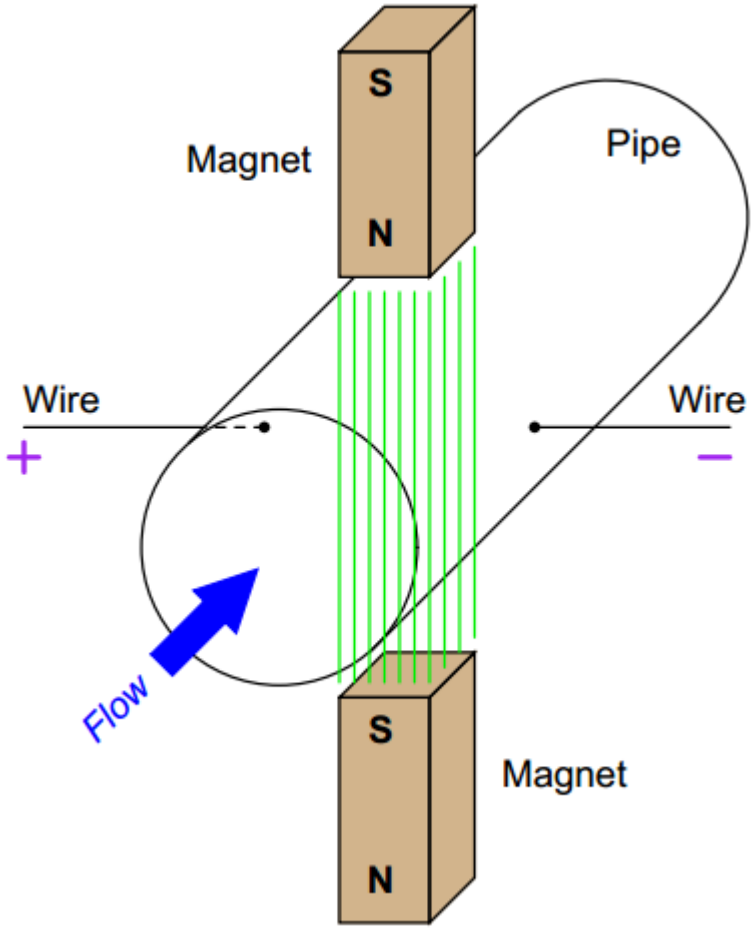

$$E = BDV$$

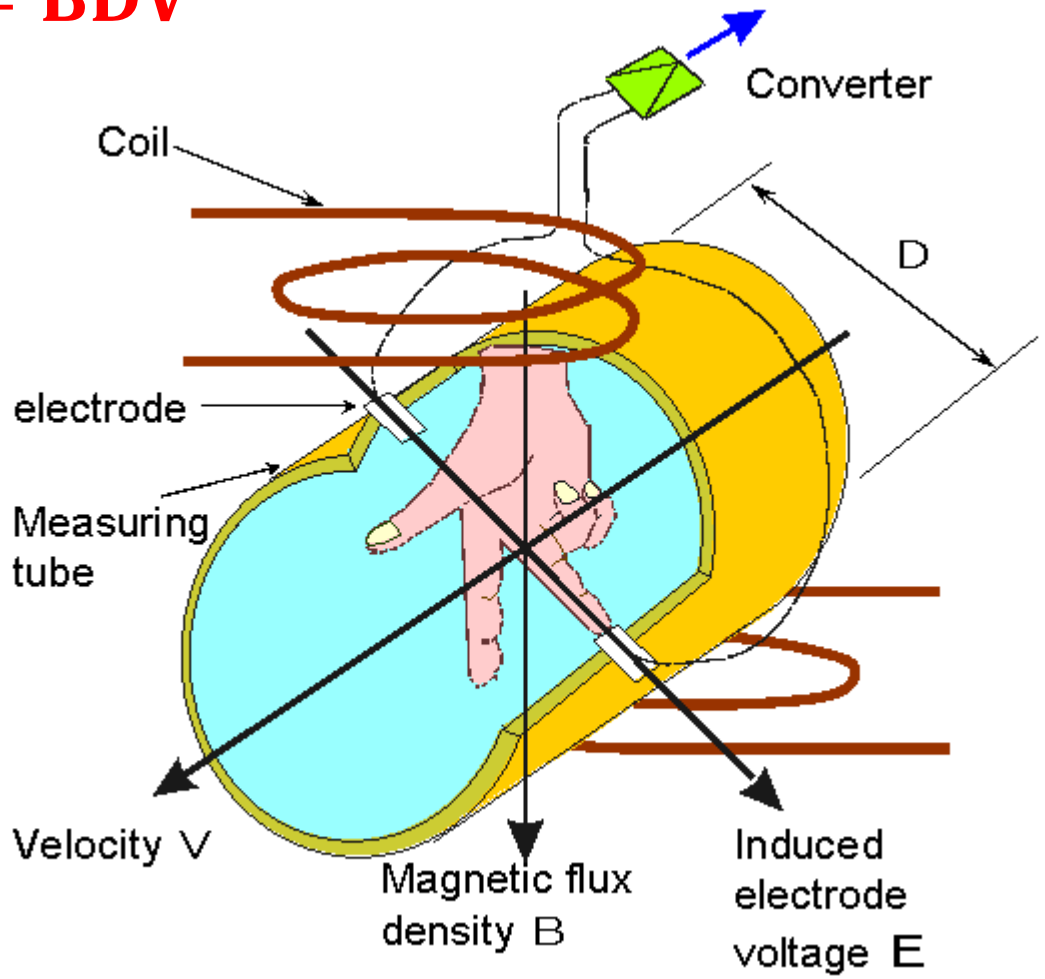

Magnetic flowmeters

- The liquid must be a reasonably good conductor of electricity .

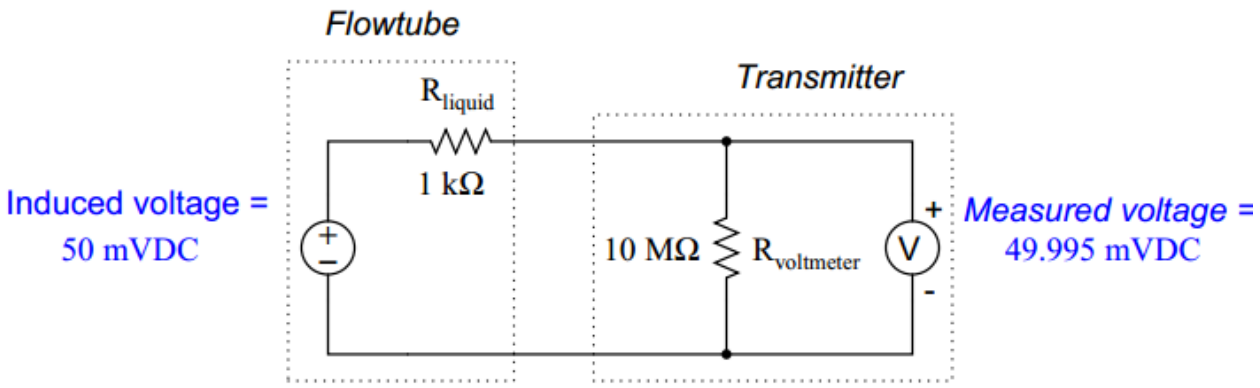

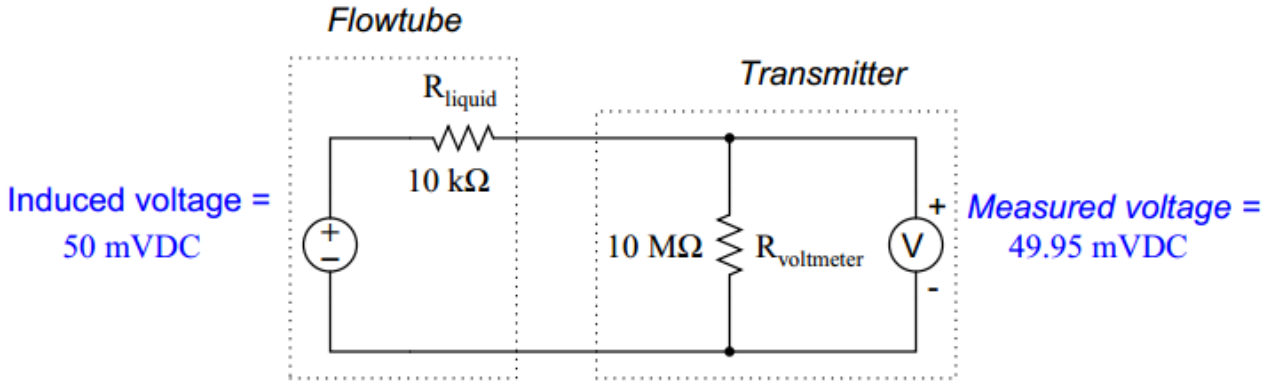

- The pipe must be completely filled with liquid to ensure contact with both probes as well as to ensure flow across the entire cross-section of the pipe.

- The flowtube must be properly grounded to avoid errors caused by stray electric currents in the liquid.

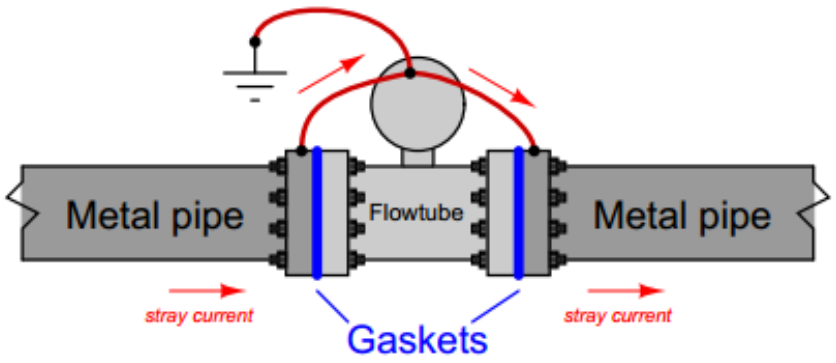

Flow Sensors

- **Magnetic**

Flow Sensors

- **Magnetic**

Flow Sensors

- **Doppler ultrasonic**

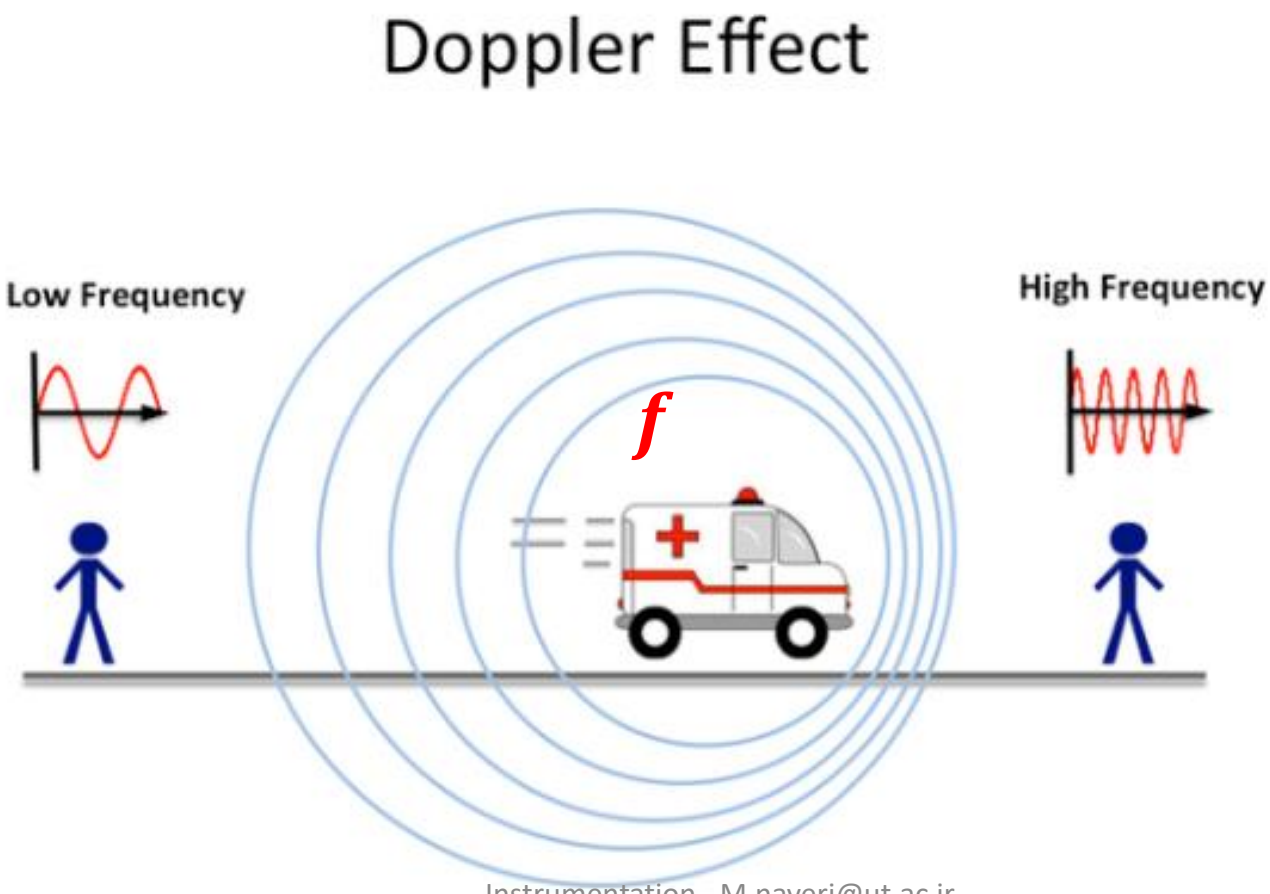

Flow Sensors

- **Doppler ultrasonic**

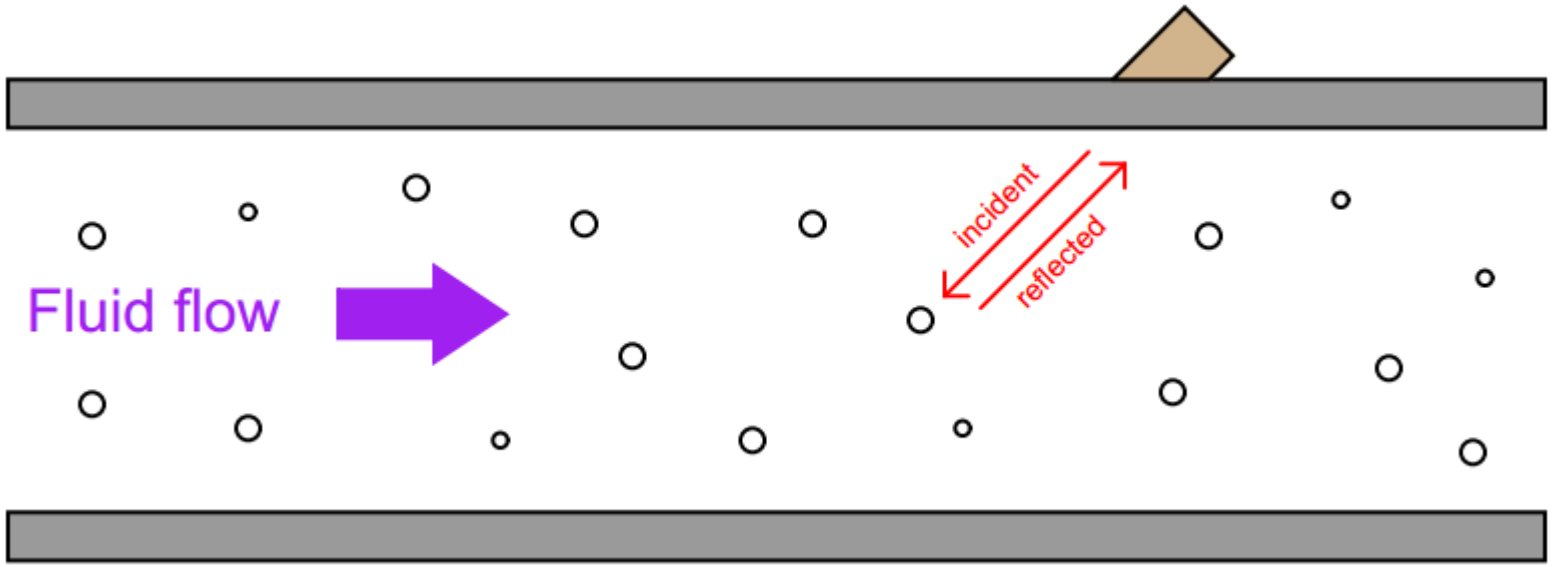

$$\Delta f = \frac{2vf\cos\theta}{c}$$

Δf = Doppler frequency shift
v = Velocity of fluid (actually, of the particle reflecting the sound wave)
f = Frequency of incident sound wave
θ = Angle between transducer and pipe centerlines
c = Speed of sound in the process fluid

limitation of Doppler ultrasonic flowmeters is their inability to measure flow rates of liquids that are too clean and too homogeneous. In such applications, the sound-wave reflections will be too weak to reliably measure.

Ultrasonic flowmeters

Transit-time flowmeters

$$Q = k\frac{t_{up} - t_{down}}{(t_{up})(t_{down})}$$

?

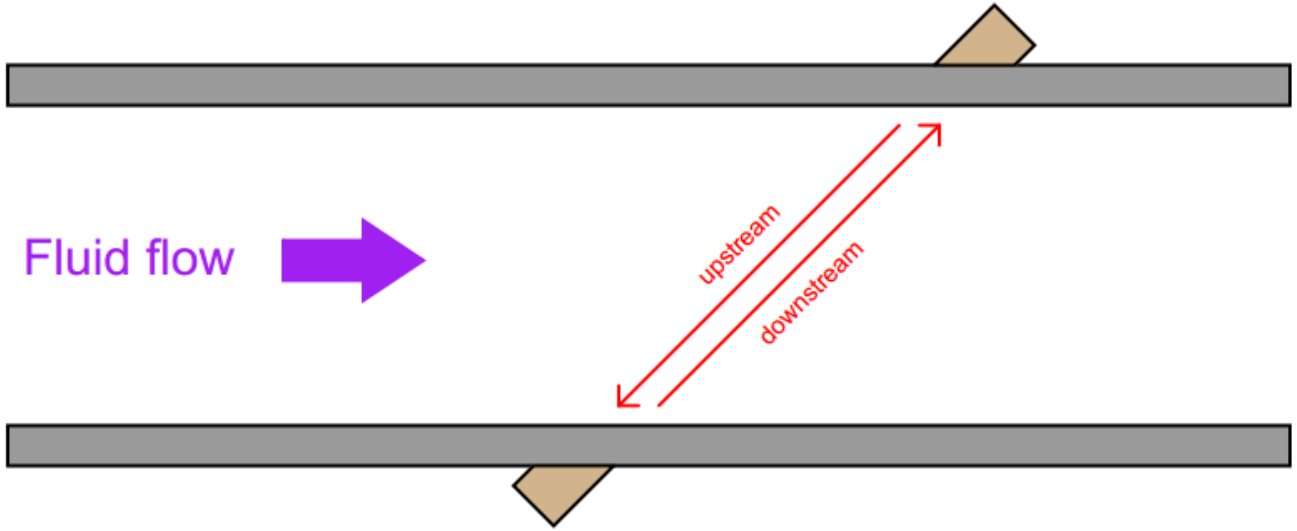

Q = Calculated volumetric flow rate
k = Constant of proportionality
t_{up} = Time for sound pulse to travel from downstream location to upstream location (upstream, against the flow)
t_{down} = Time for sound pulse to travel from upstream location to downstream location (downstream, with the flow)

Ultrasonic flowmeters

Laminar flow (low Re)

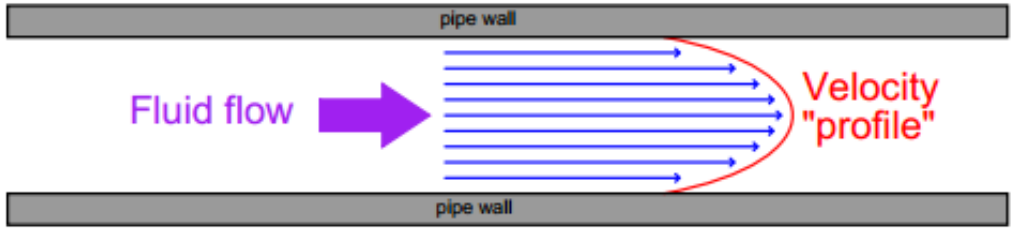

Turbulent flow (high Re)

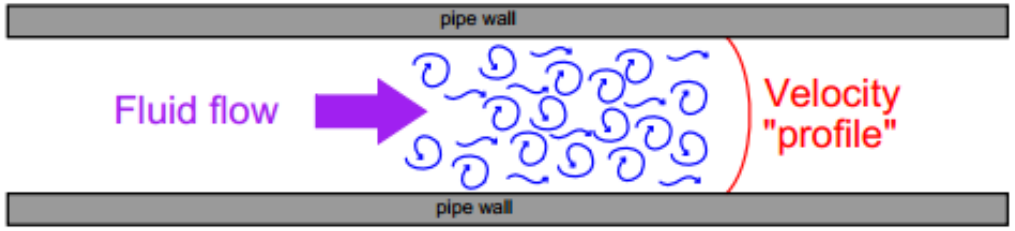

Daniel 4-chord ultrasonic flowmeter

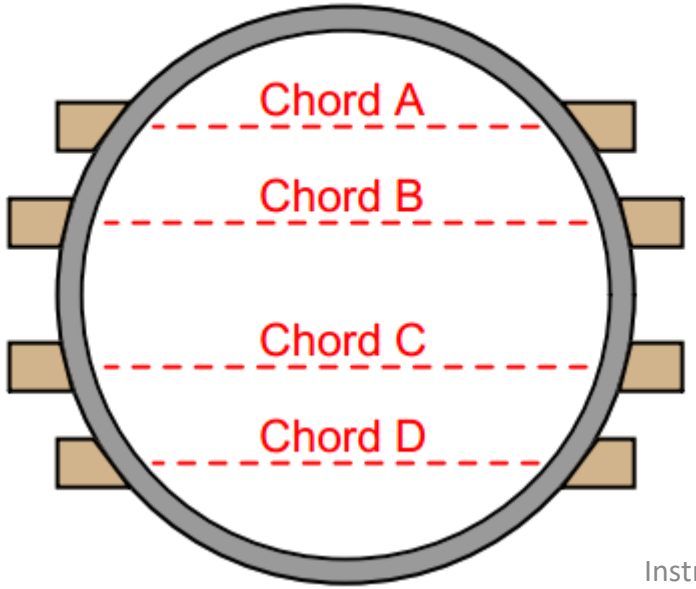

Optical flowmeters

Laser-Two-Focus (L2F)

$$v = \frac{d}{t}$$

v = Velocity of particle
d = Distance separating laser beams
t = Time difference between sensor pulses

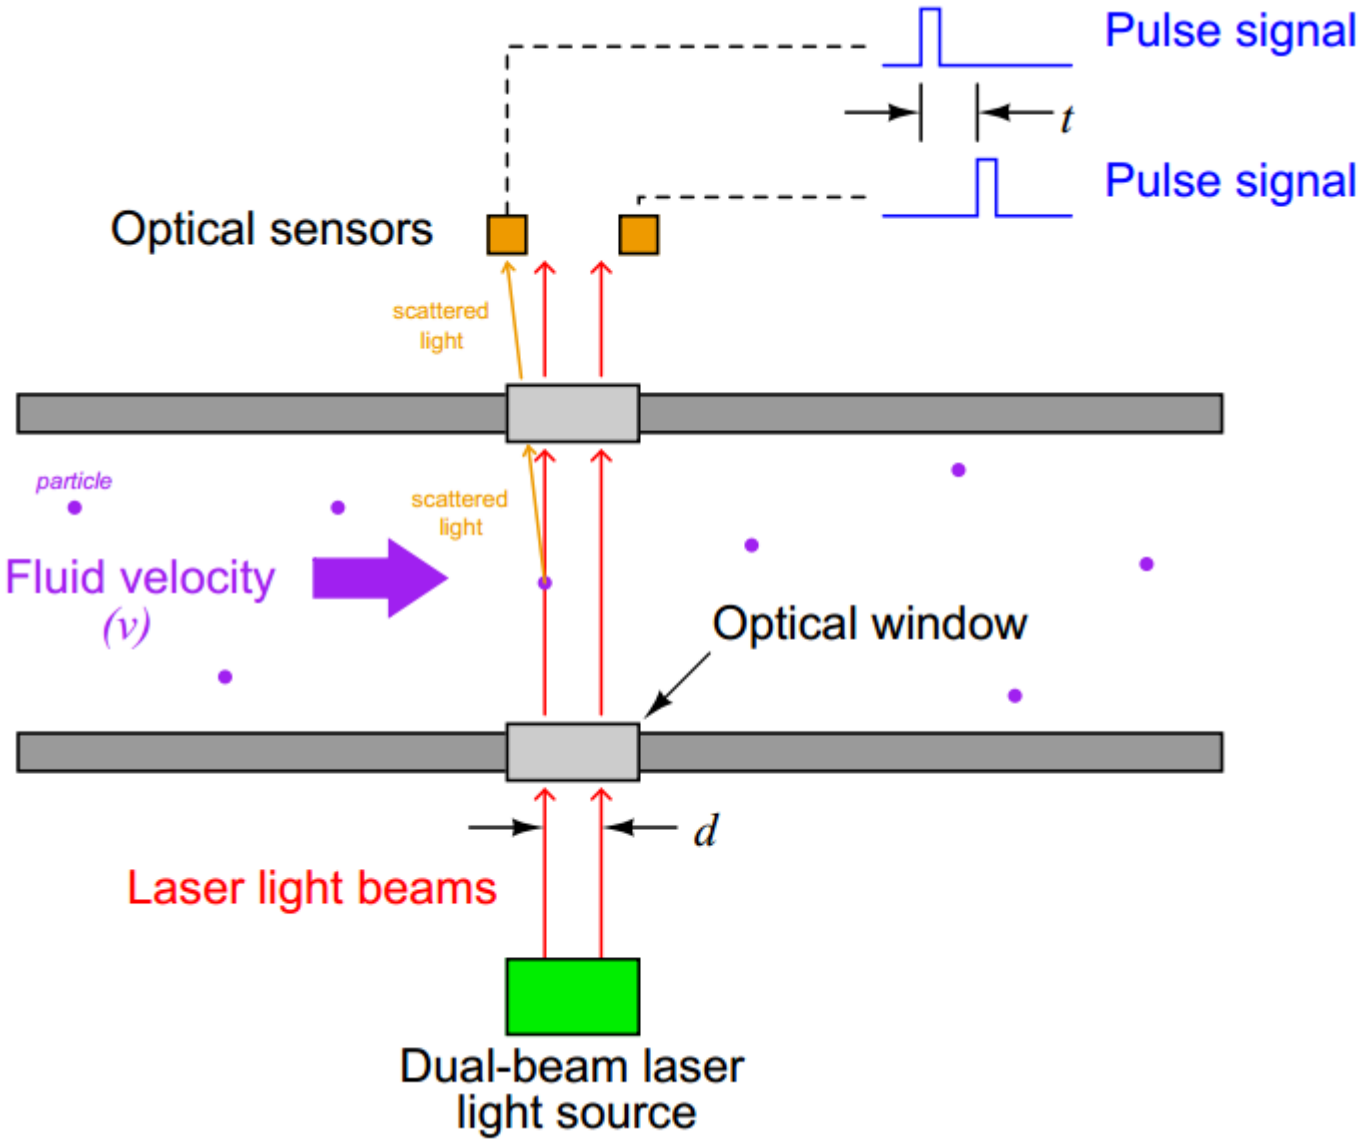

Optical flowmeters

Scintillation optical flowmeter

An interesting feature of this flowmeter technology is that it functions best when the flow regime is **highly turbulent**, since increased fluid turbulence leads to greater scintillation.

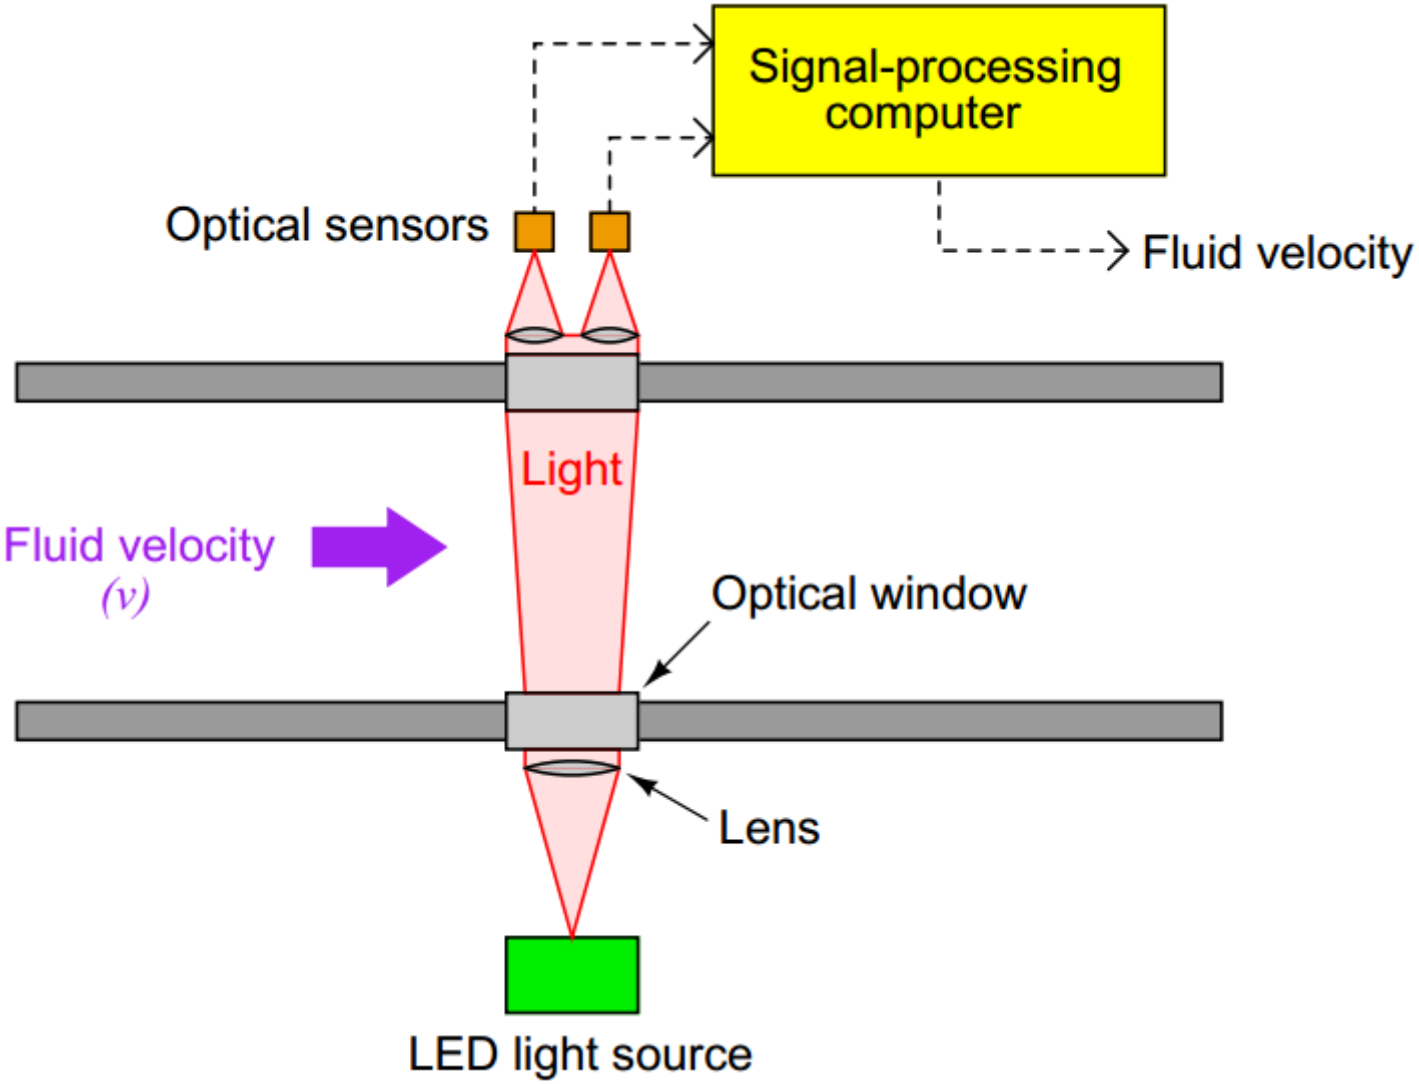

Positive displacement flow meter

A positive displacement flow meter is a cyclic mechanism built to pass a fixed volume of fluid through with every cycle

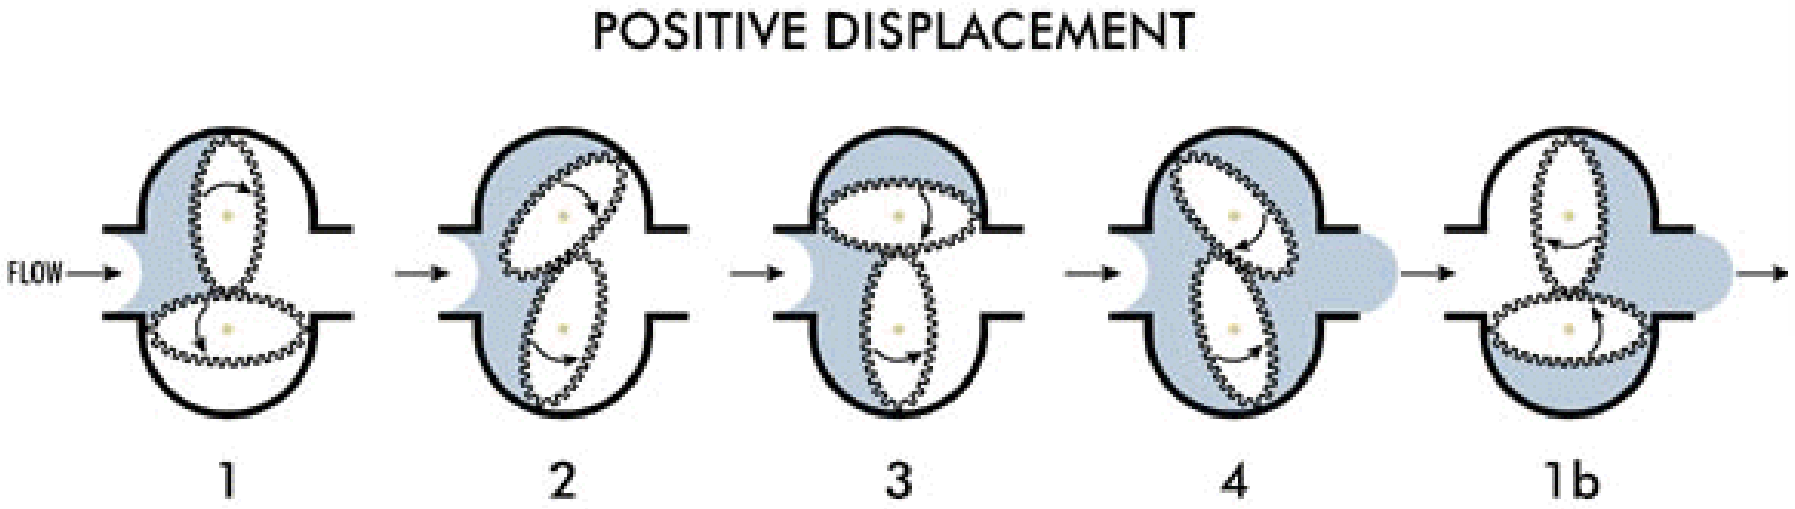

Thermal flowmeters

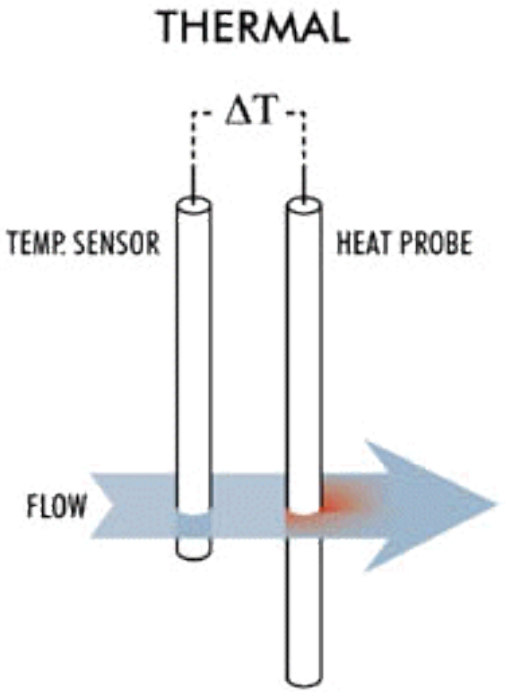

$$W = \frac{H}{\Delta T C_p}$$

where W = mass flow

H = heat (power) input

ΔT = temperature change

Cp = specific heat at constant pressure

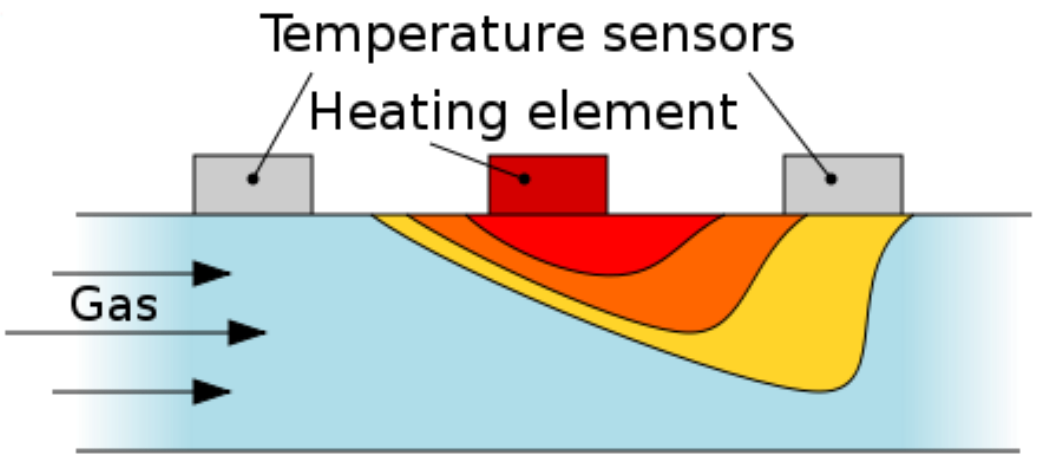

Weighfeeders

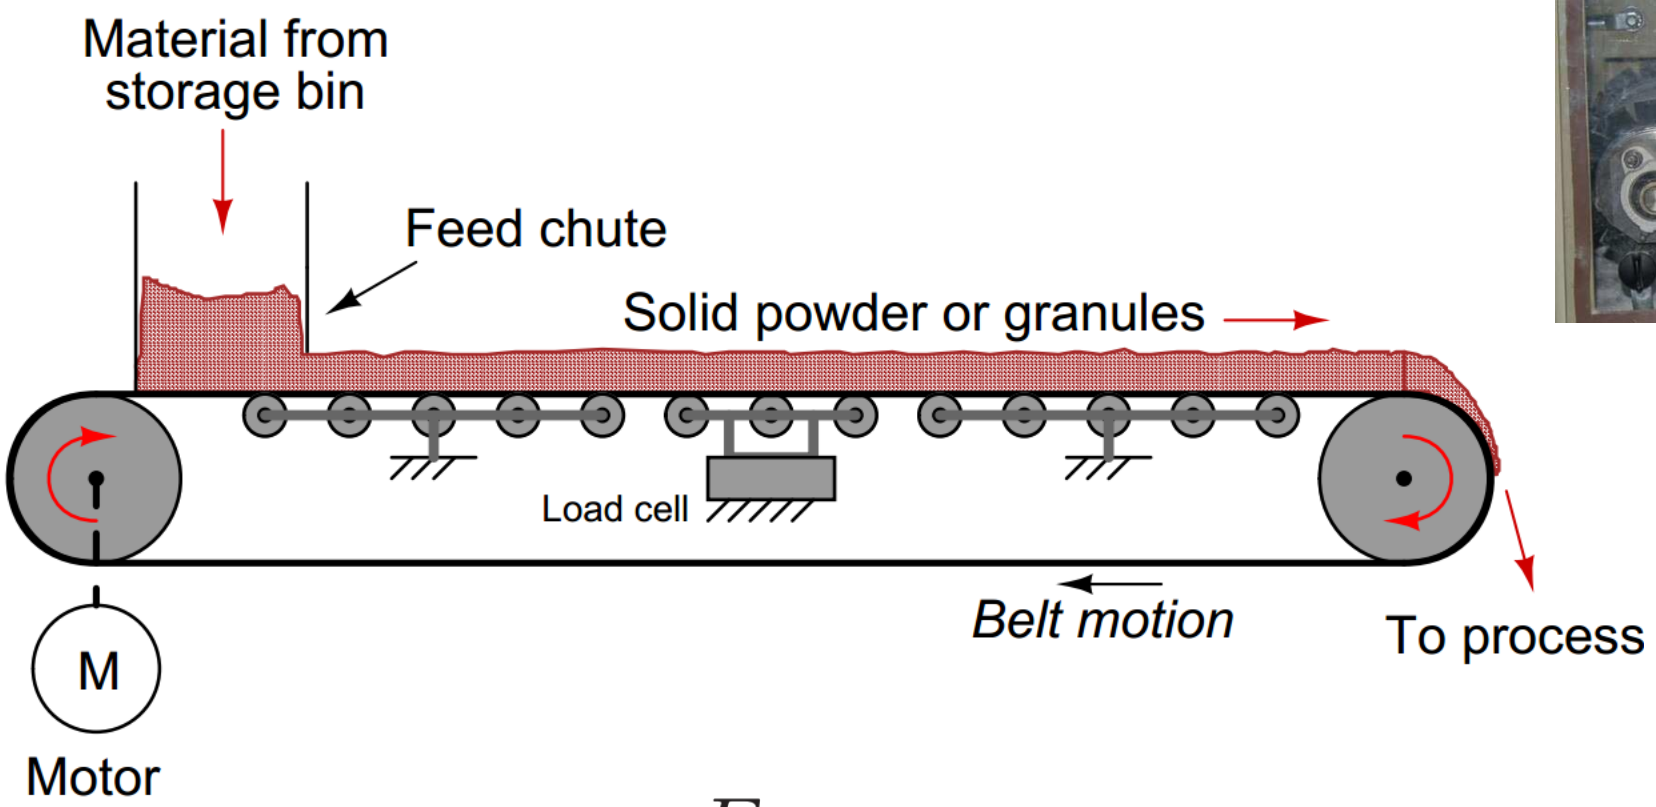

$$W = \frac{Fv}{d}$$

Coriolis flow meters

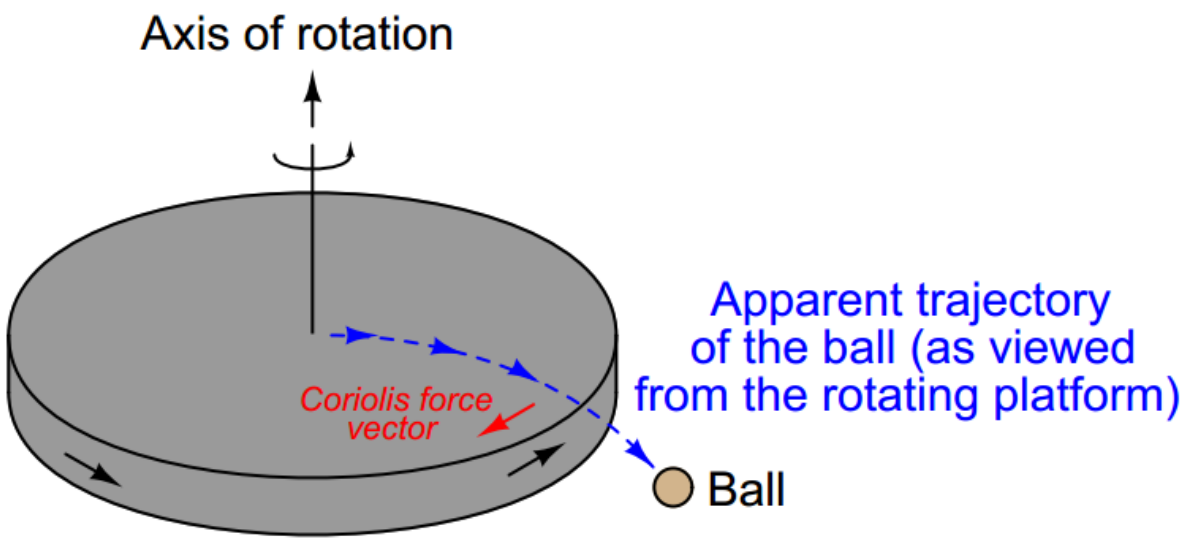

$$\vec{F}_c = -2\vec{\omega} \times \vec{v}' m$$

$\vec{F}_c$ = Coriolis force vector
$\vec{\omega}$ = Angular velocity (rotation) vector
$\vec{v}'$ = Velocity vector as viewed from the rotating reference frame
m = Mass of the object

Coriolis flow meters

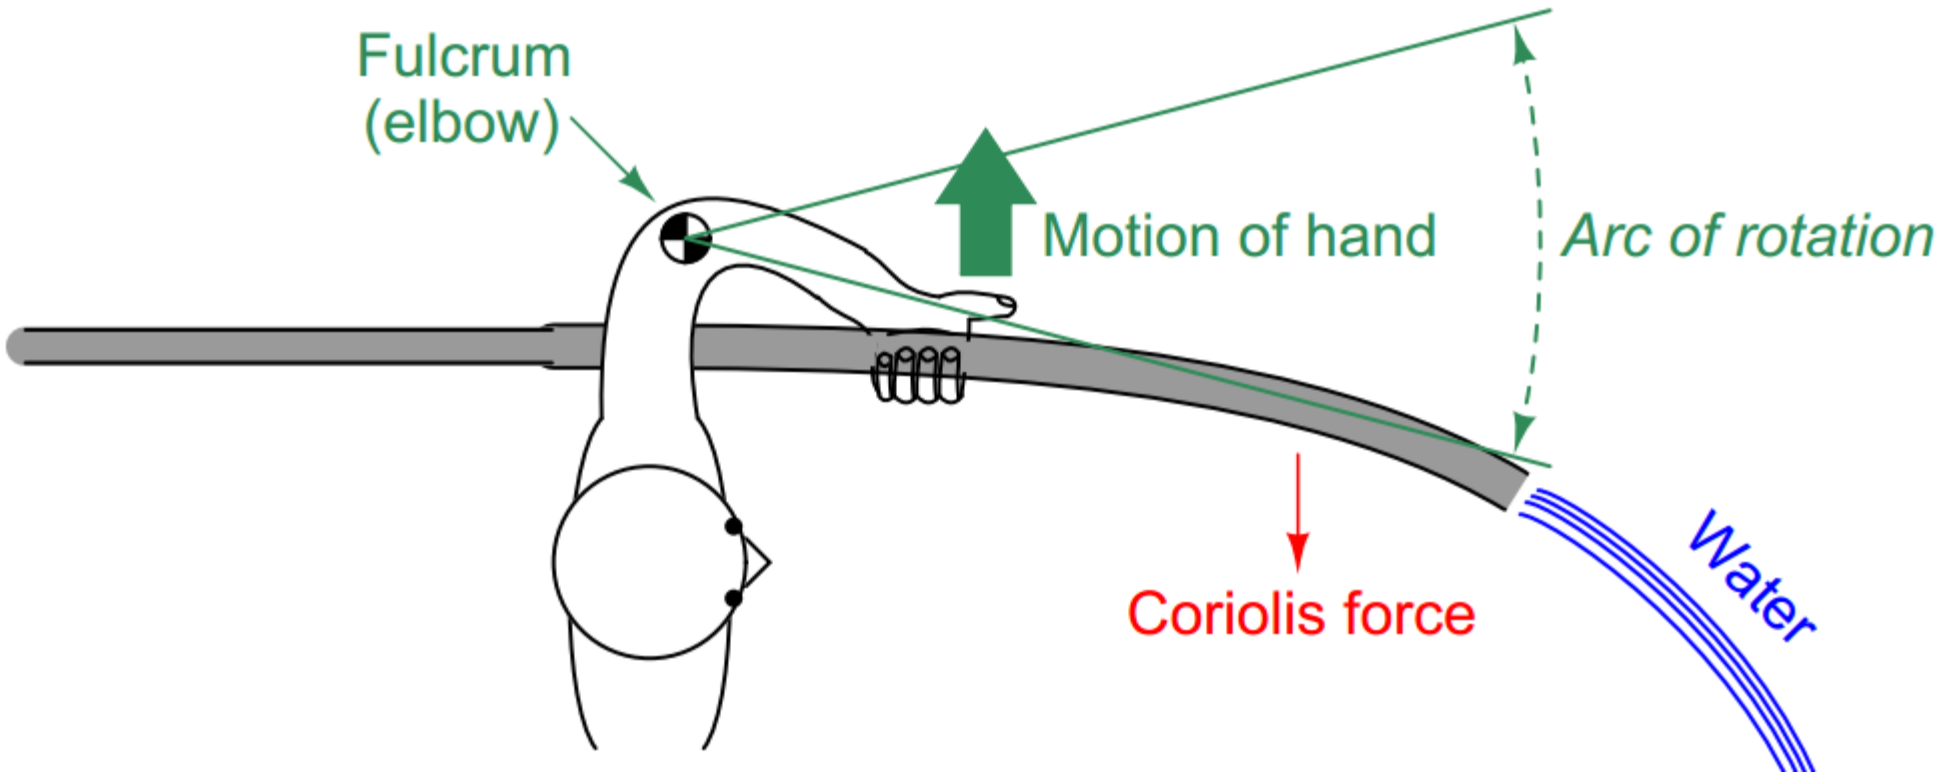

Coriolis flow meters

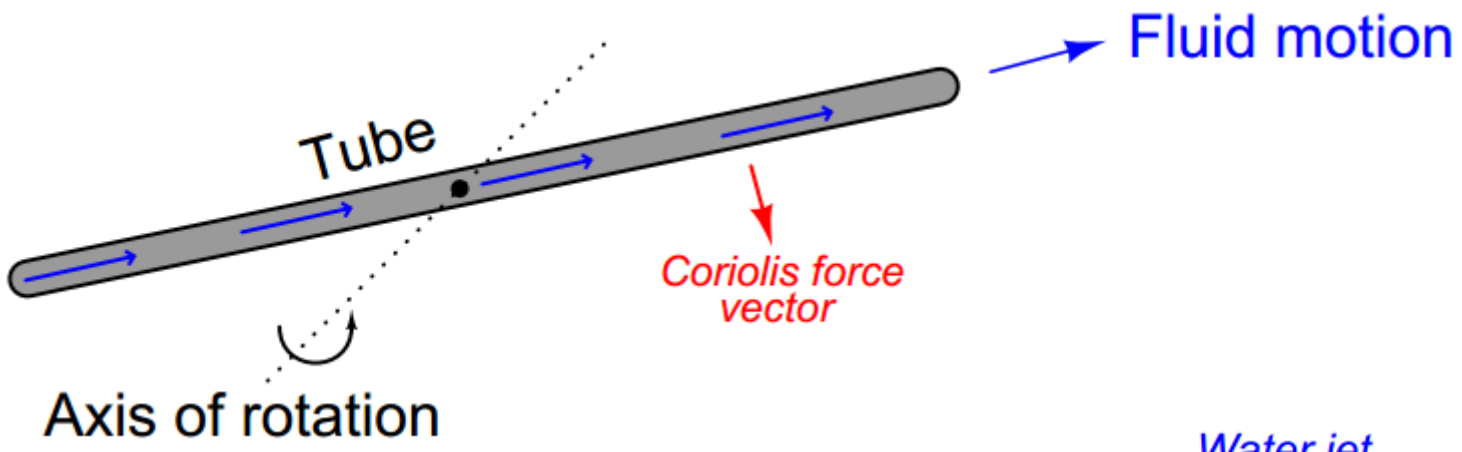

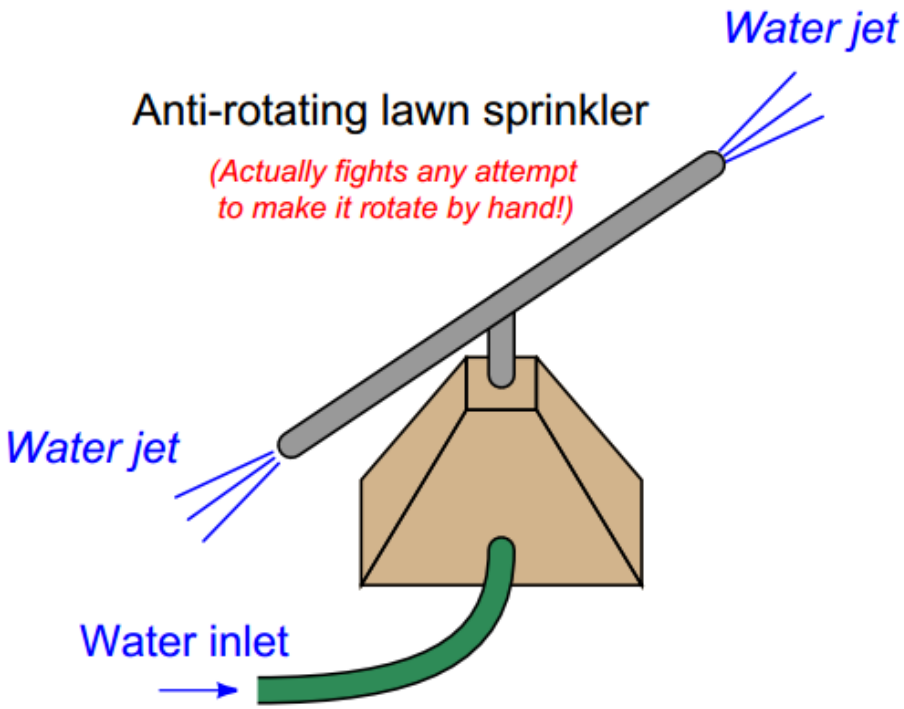

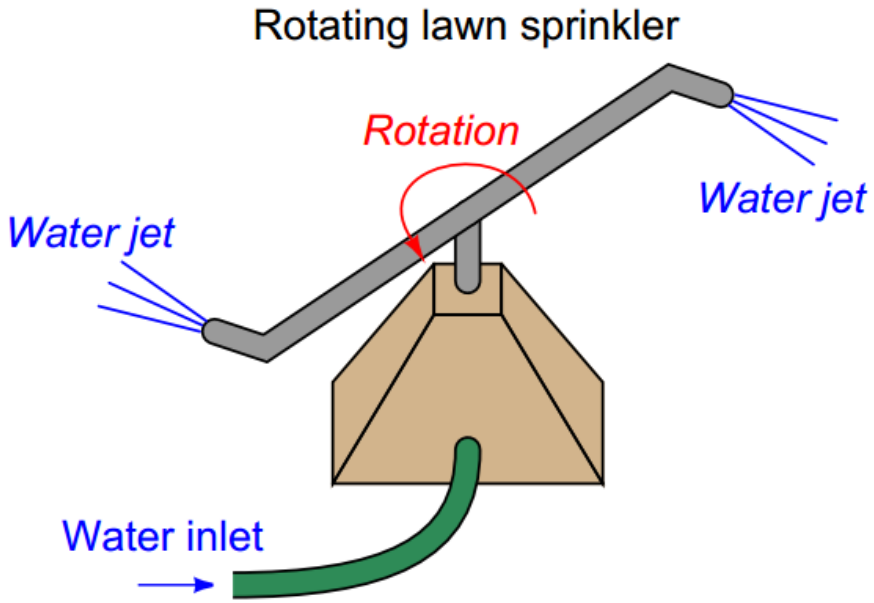

Coriolis flow meters

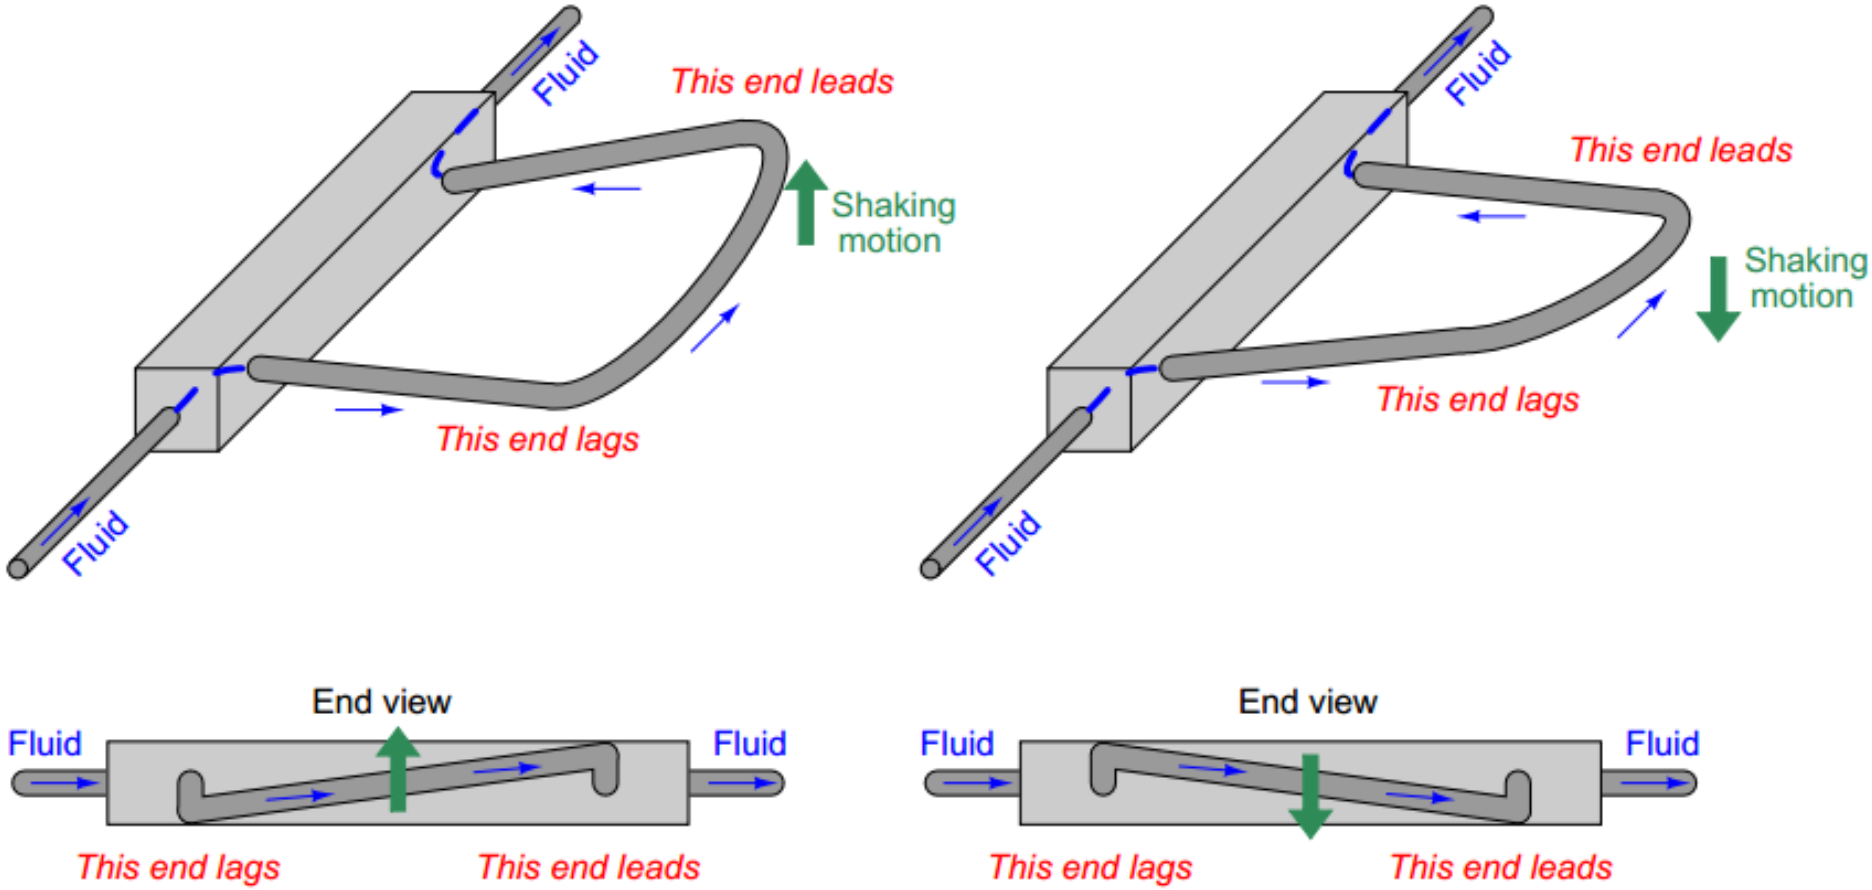

Coriolis flow meters

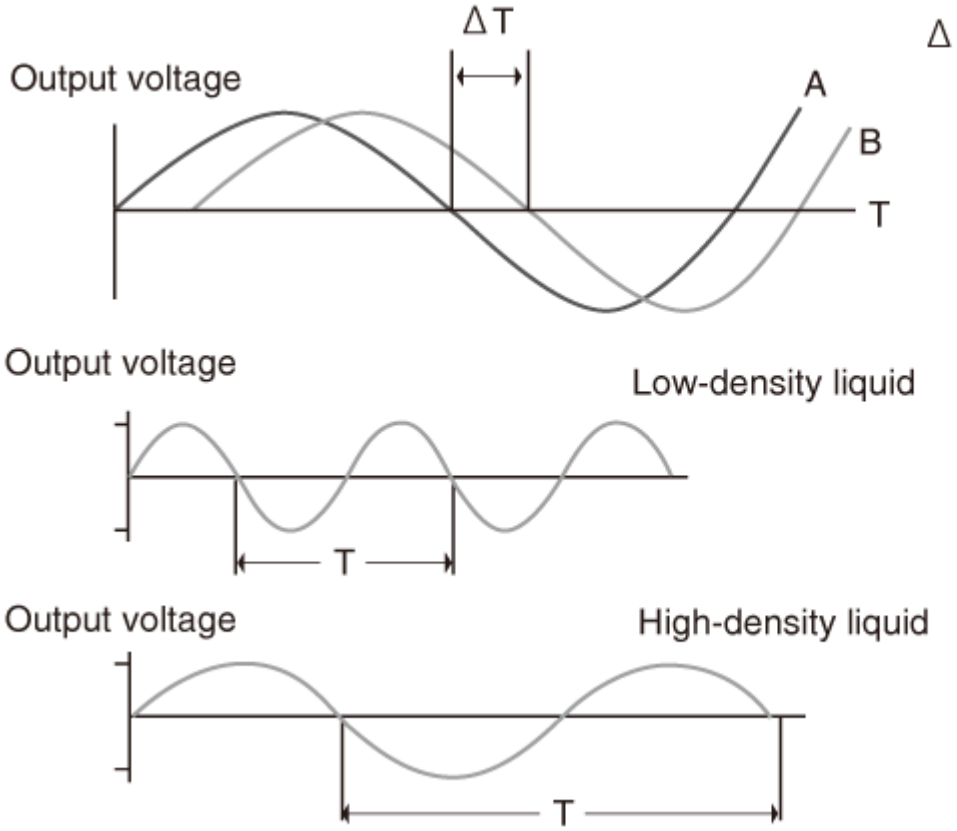

ΔT : Mass flow
A : Entrance-side output
B : Exit-side output

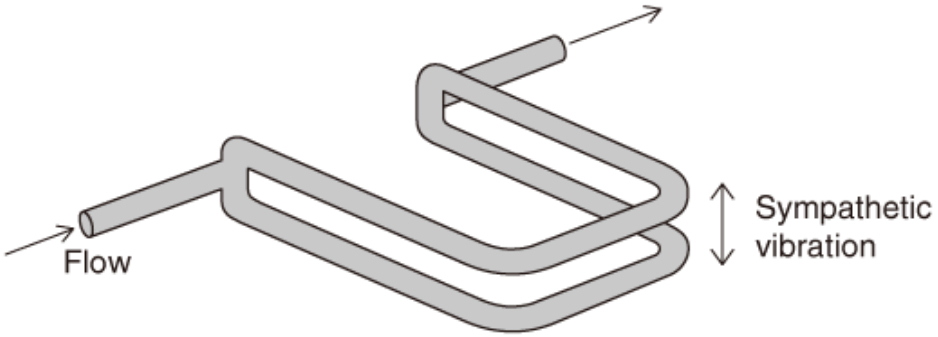

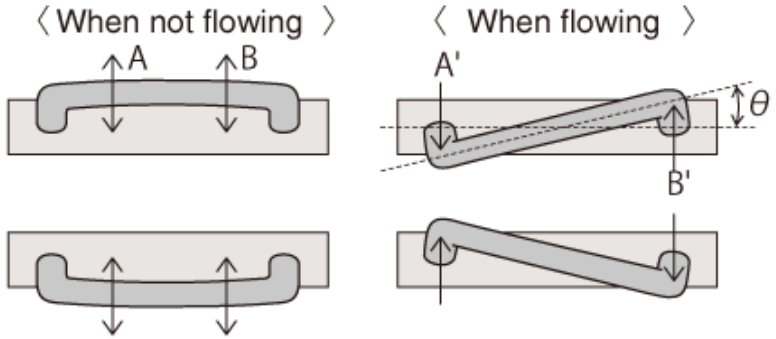

$$\text{Tube frequency} \propto \frac{1}{\text{Density}} \qquad f \propto \frac{1}{\rho}$$

$$\text{Tube twisting} \propto \text{Mass flowrate} \qquad \theta \propto W$$

Coriolis flow meters

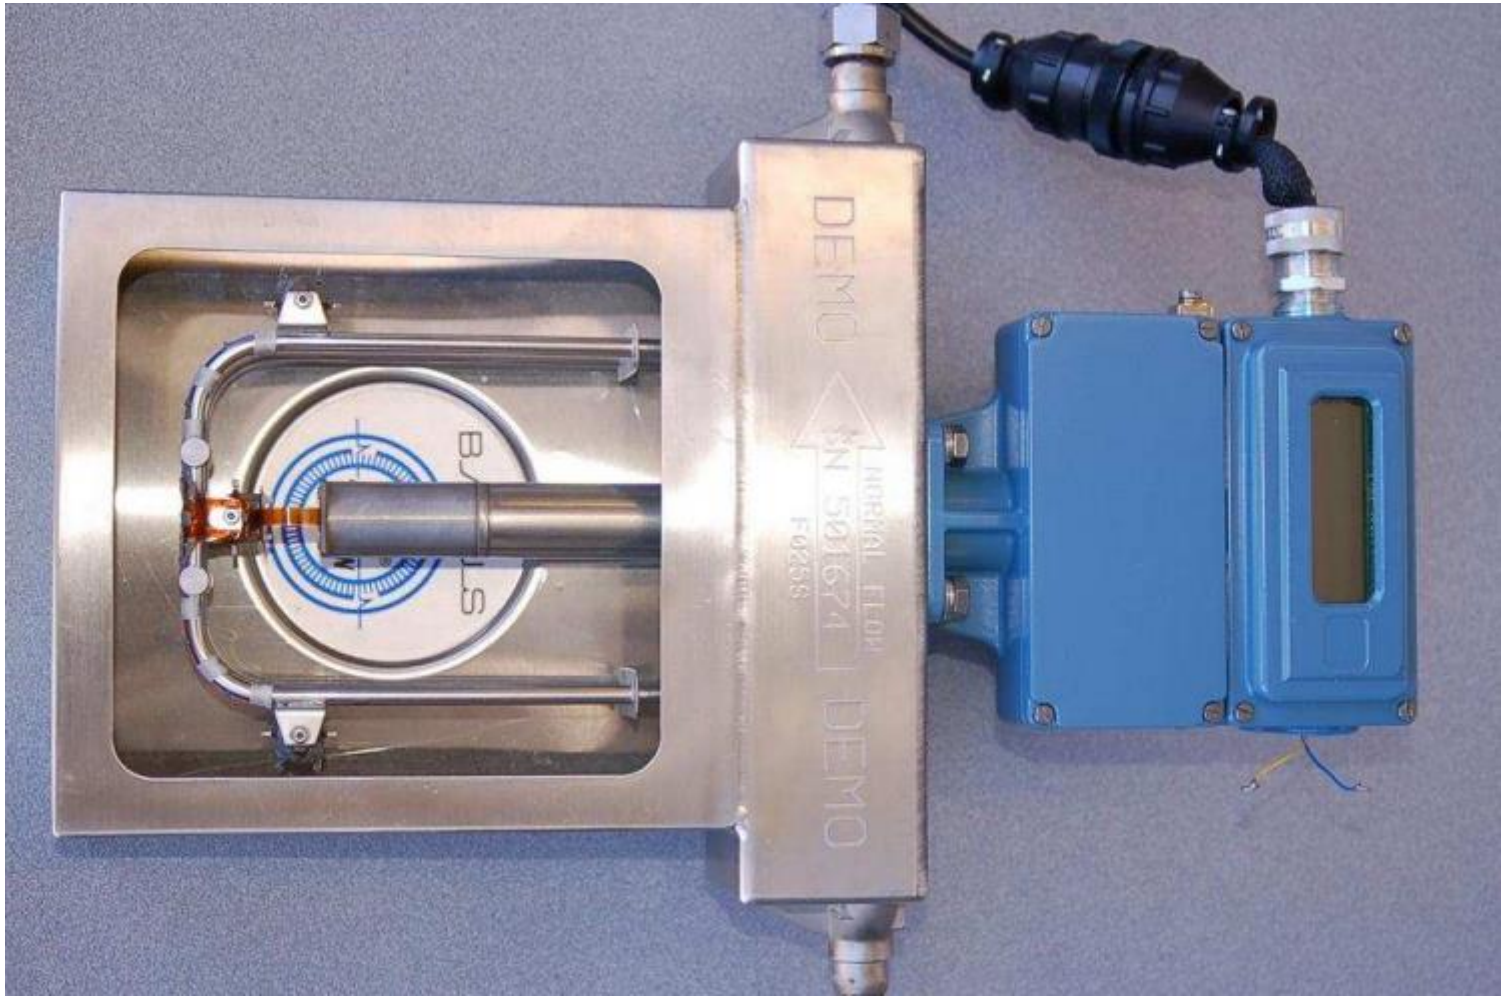

Coriolis flow meters

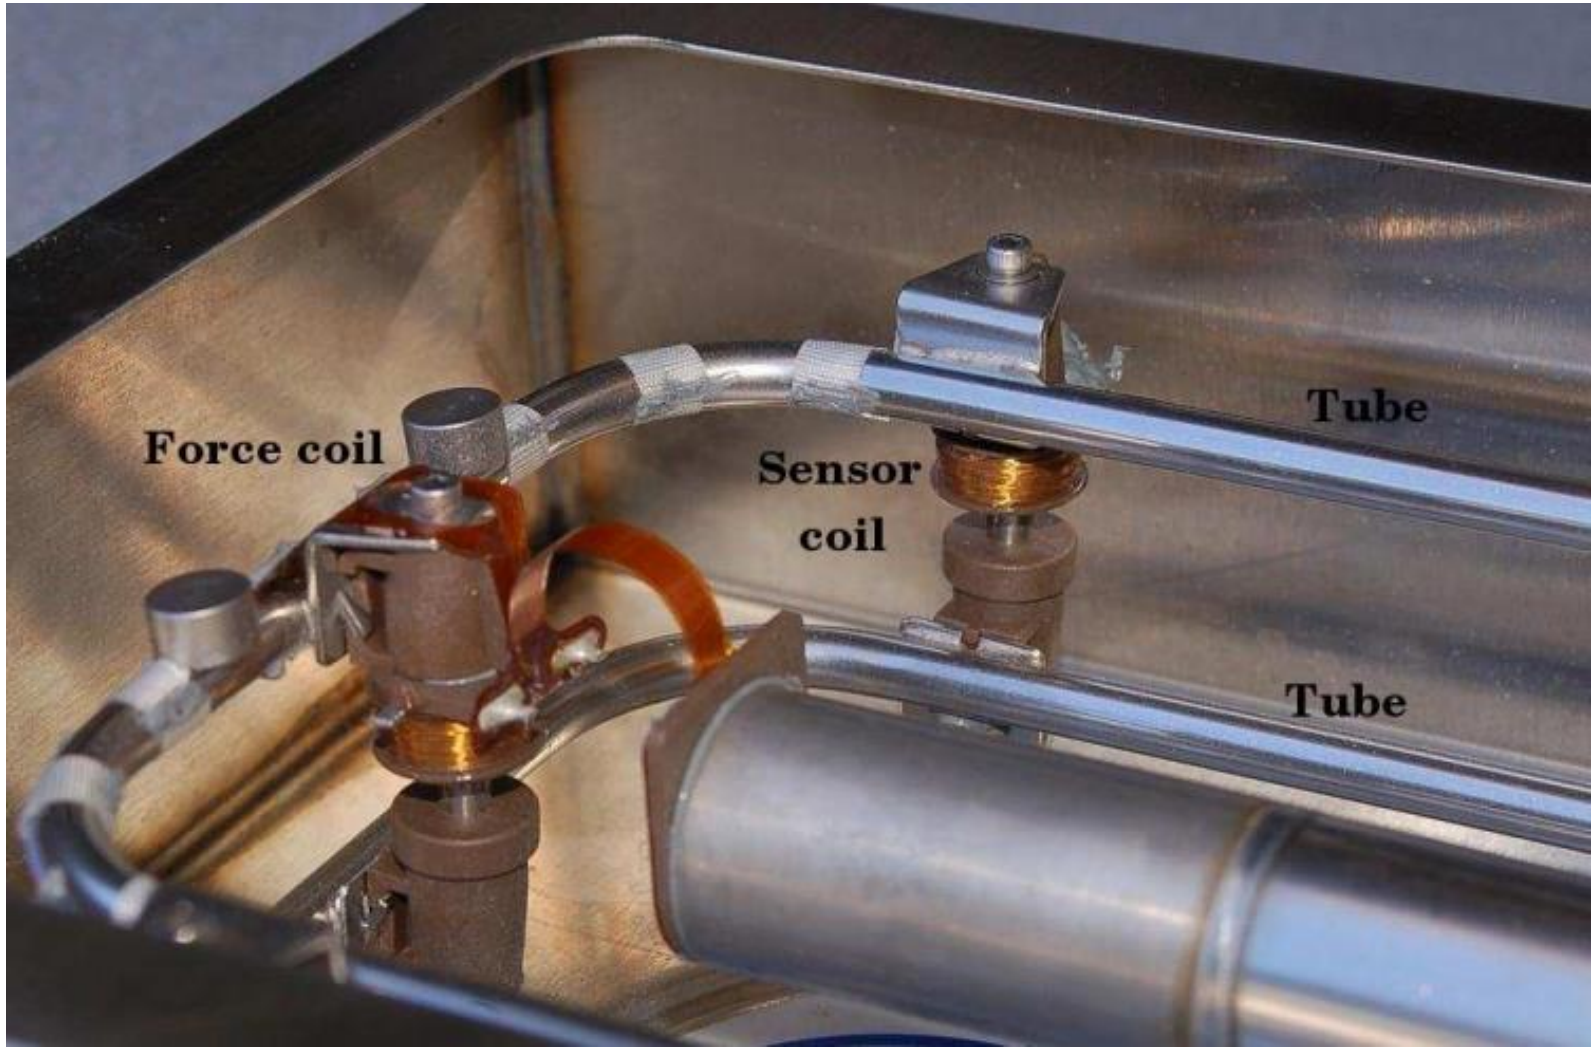

Coriolis flow meters

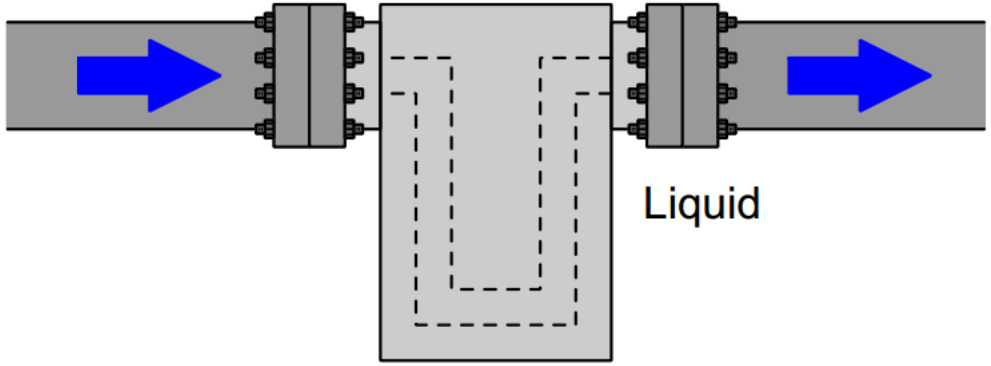

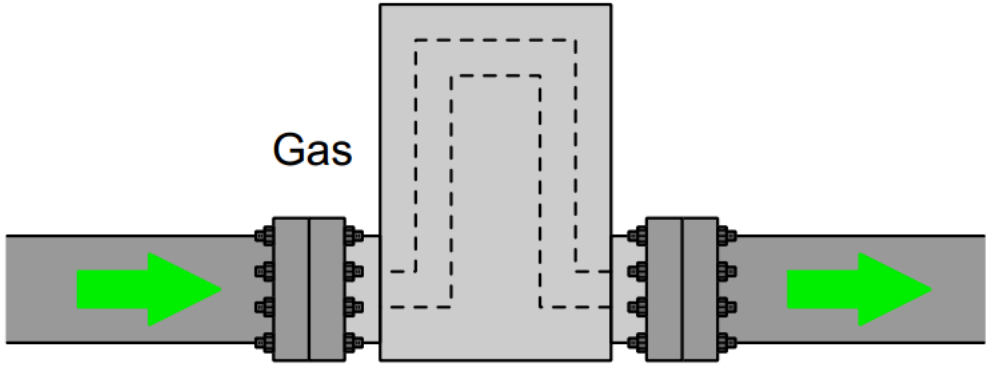

Change of quantity flow measurement

$$\overline{W} = \frac{\Delta m}{\Delta t} \qquad \overline{Q} = \frac{\Delta V}{\Delta t}$$
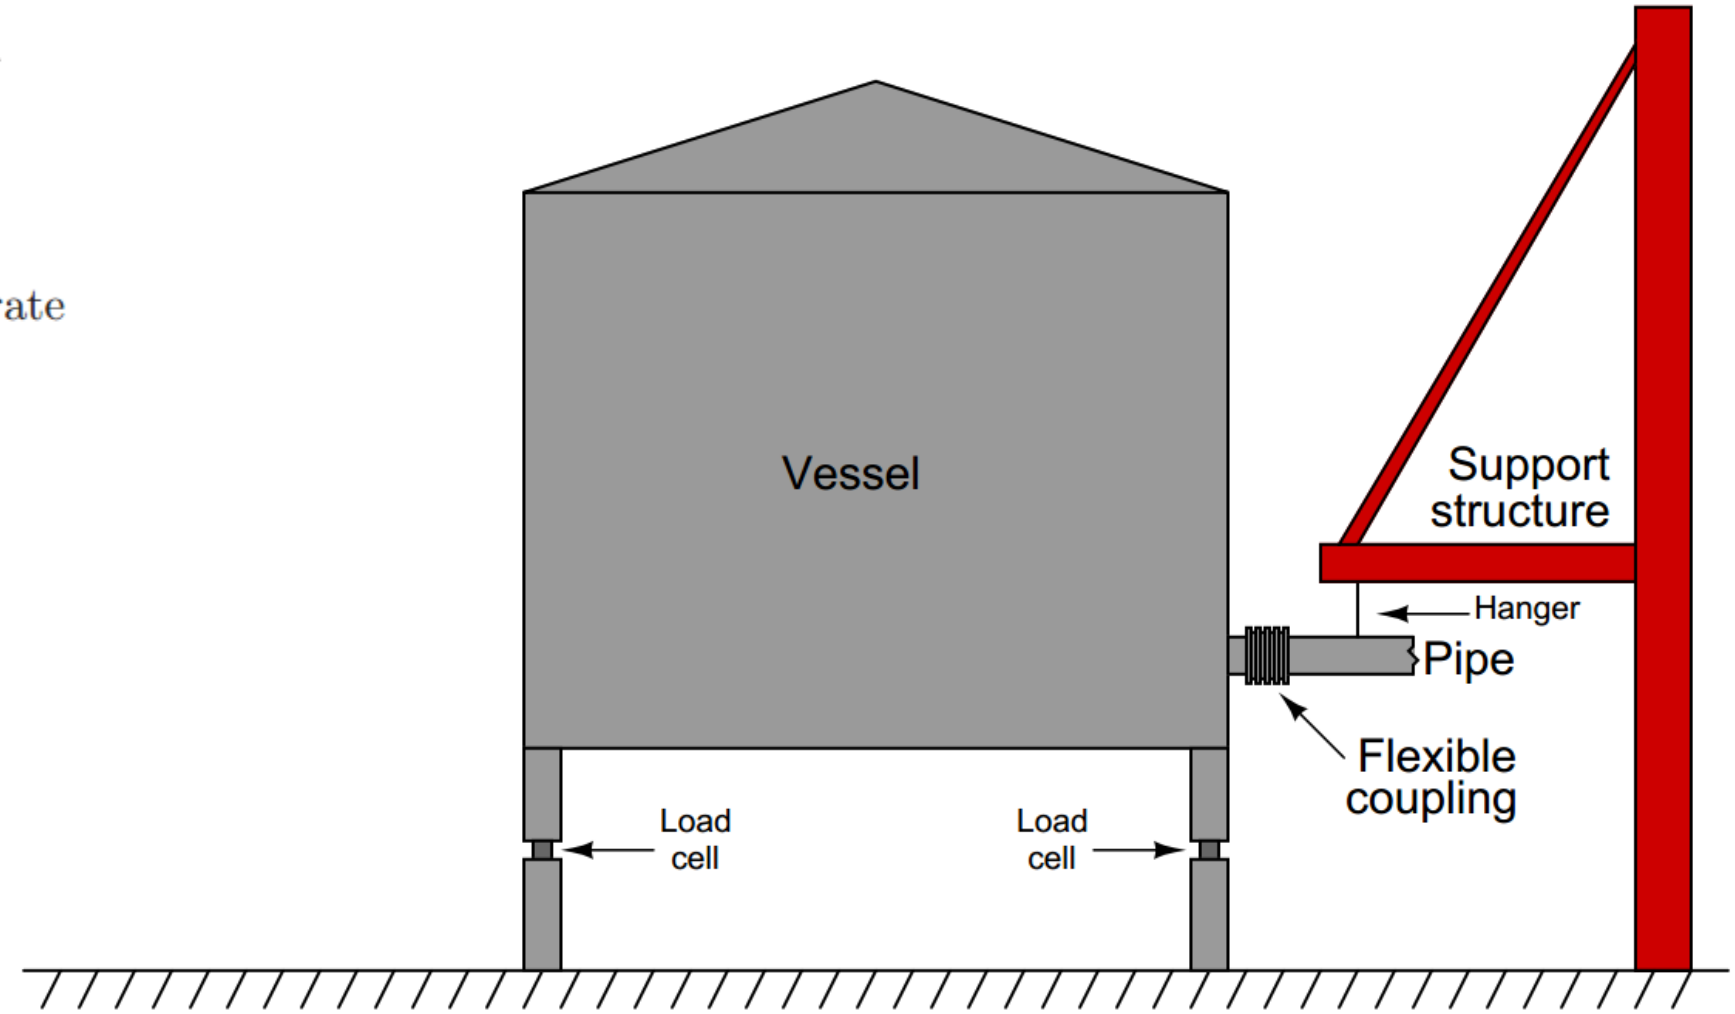
$\overline{W}$ = Average mass flow rate
$\overline{Q}$ = Average volumetric flow rate
Δm = Change in mass
ΔV = Change in volume
Δt = Change in time