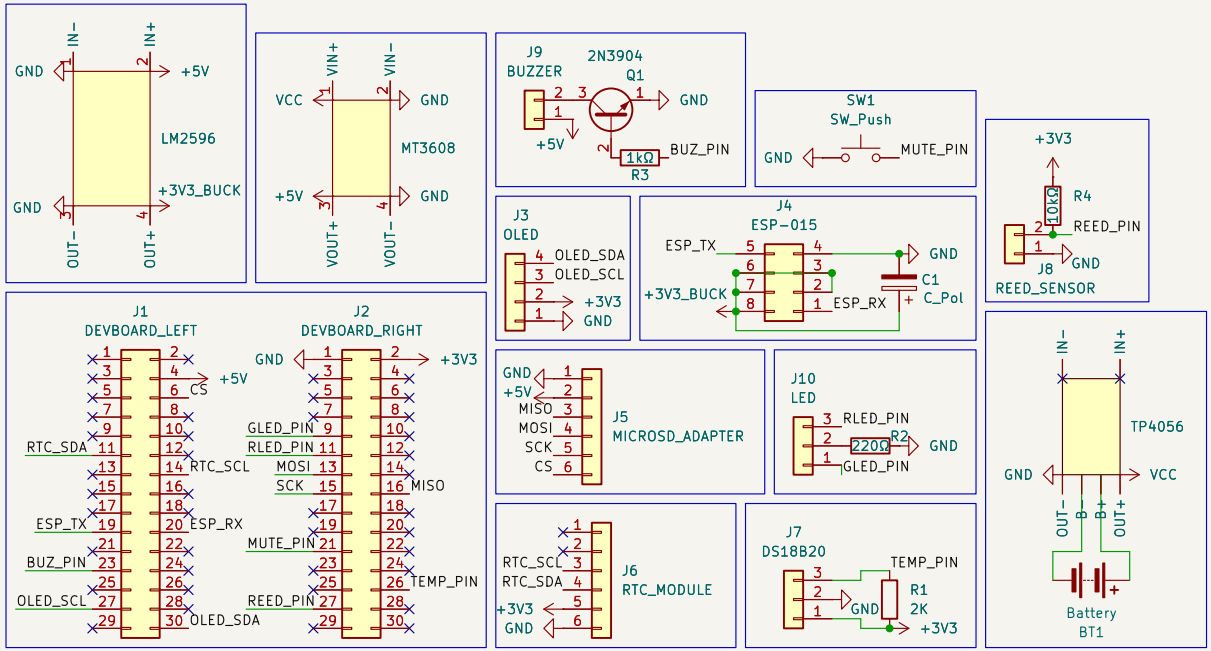


STM32F446RE (WeAct) — Freezer Temperature Monitor
Power: TP4056 charger → MT3608 boost (5 V) → LM2596 buck (3.3 V for ESP-01S)
Set MT3608 = 5.0 V and LM2596 = 3.3 V with a multimeter

Maxim Kisselev

Sheet: /
File: coldtrace.kicad_sch

Title: ColdTrace

Size: A4	Date: 2026-10-10	**Rev: 1**
KiCad E.D.A. 10.0.4		Id: 1/1