


# Air Cycle Elite

## Console Manual



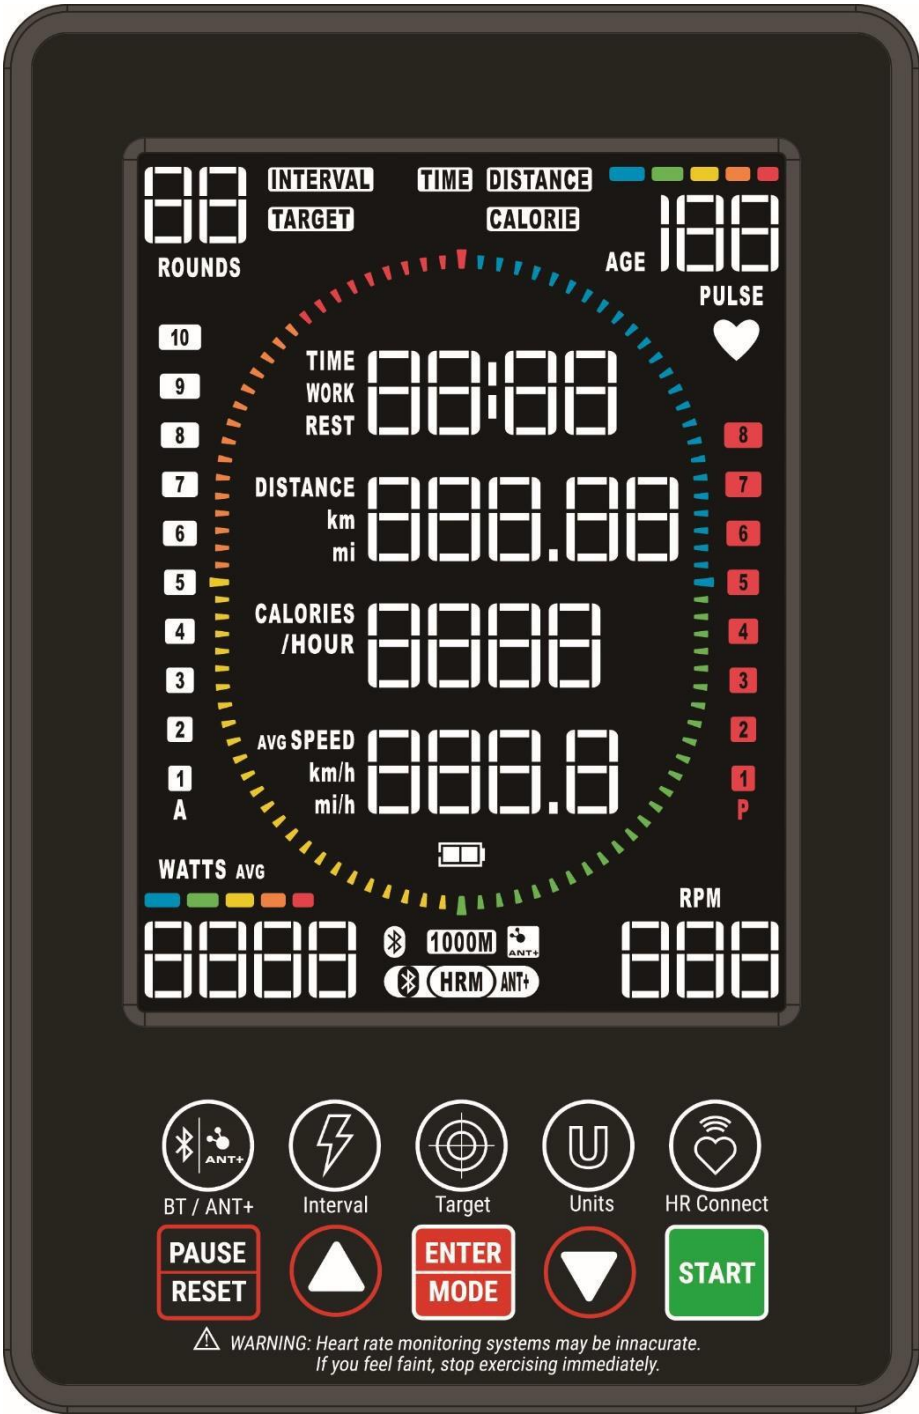

## Console Keys:

### 1. Units key: to switch between English Imperial (miles) and Metric units (km)



Just press **START** key or start pedaling to start the console. When time starts counting, press **UNITS** key to switch to km or mi for setting distance and speed calculation.

### Target key:



In standby mode, press the Target key to light up **TIME, DISTANCE, CALORIES, PULSE** in order and select the Target Program desired.

### Interval key:



In standby mode, press the Interval key to display **TIME, DISTANCE or CALORIES** and select the Interval Program needed.

### BT/ ANT+ key:



In standby mode, press the **BT/ ANT+** key once to turn on the **BT/ ANT+** display. Press the **BT/ ANT+** key the 2nd time to turn off the **BT/ANT+** display. Repeat the same steps to **ON/OFF** the **BT/ANT+** display.

### START key:



2. In standby mode, press the **START** key to enter the **QUICK START** program setting.
3. After program is selected, press **START** key again to begin the workout.

### DOWN key:



During **PROGRAM** setting, press the **DOWN** key to decrease the setting value.

### ENTER/ MODE key:



1. During **PROGRAM** setting, press the **ENTER/ MODE** key to confirm the setting.
2. During the workout, press the **ENTER/ MODE** key to switch display of **CALORIES/ CALORIES HOUR** and **WATTS/ WATTS AVG.**

### UP key:



During **PROGRAM** setting, press the **UP** key to increase the setting value.


**I. PAUSE/ RESET key:**

1. During the workout, press the **PAUSE/ RESET** key to stop the workout.
2. When the workout stops, press and hold the **PAUSE/ RESET** key for 3 seconds to **RESET** the console and erase all workout data.

**J. HR CONNECT key:**

1. In standby mode, press the **HR CONNECT** button to pair the serial number of Bluetooth chest strap or **ANT +** chest strap.
2. It is needed to press the **HR CONNECT** button every time when you turn on the power, if you want to use the Bluetooth chest strap or **ANT +** chest strap. If you don't use the Bluetooth chest strap or **ANT +** chest strap, then you don't need to press the **HR CONNECT** button.

1. Press **HR CONNECT KEY** – The LCD display that it is waiting for connection

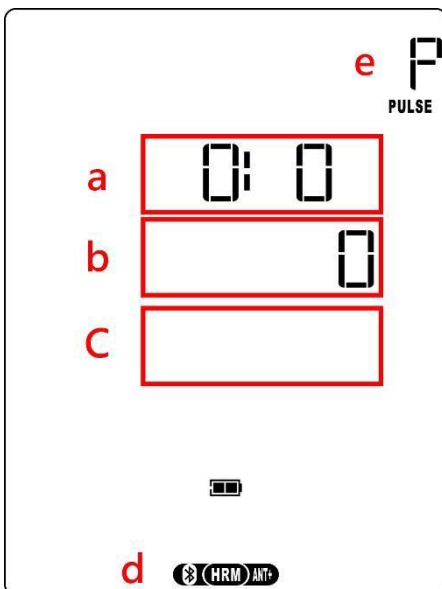

- a) Shows the selected Heart Rate Monitor (HRM) signal source : number of HRM signals currently received.
- b) Displays the selected HRM ID
- c) Displays the selected HRM Source as BLE or ANT
- d) Display the confirmed HRM Source (BLE or ANT+) after successful connection
- e) Displays the Pulse from HRM source



- a) Selected Heart Rate Monitor 1 : out of 2 HRM signals currently being received
- b) 12345 is the selected (1) HRM ID
- c) 12345 is a BLE HRM source
- d) Display the confirmed HRM Source (BLE or ANT+) after successful connection
- e) Displays the Pulse from HRM source

**QUICK START:**

1. In standby mode, when pressing the **START** key or when console receives the RPM signal, the **QUICK START** program will begin.
2. When console receives the RPM signal, **TIME/ DISTANCE/ CALORIES** will begin to count.
3. **A** for Air Resistance Level: White color display on the left side. By adjusting the damper to change the resistance level from Level 1 to Level 10.
4. **P** for Magnetic Resistance Level: Red color display on the right side. By adjusting the magnetic control knob to change the resistance level from Level 1 to Level 8.
5. User can press the **ENTER/ MODE** key to switch display of **CALORIES/ CALORIES HOUR** and **WATTS/ WATTS AVG.**
6. During the workout, press the **PAUSE/ RESET** key to pause the workout.
7. In pause mode, press and hold the **PAUSE/ RESET** key for 3 seconds to **RESET** the console.

**TARGET PROGRAM:**

In standby mode, press the Target key once to light up **TIME**, twice to light up **DISTANCE**, three times to light up **CALORIES**, four times to light up **PULSE**.

**(A) TARGET TIME:**

1. In standby mode, press the Target key once to light up **TIME**. Press the **ENTER/ MODE** key to confirm the selection. **TIME** will display 20:00 as initial value.
2. Press the **UP** and **DOWN** key to increase or decrease the desired workout time. Press **ENTER/ MODE** key to confirm the setting. When console receives the RPM signal, **TIME** will begin to count.
3. Start workout—
  - During workout, **TIME** display will count **DOWN**, but **DISTANCE/ CALORIES** will count UP.

**TARGET DISTANCE:**

1. In standby mode, press the Target key twice to light up **DISTANCE**. Press the **ENTER/ MODE** key to confirm the selection. **DISTANCE** will display 5.00 km or 3.10 ml as initial value.
2. Press the **UP** and **DOWN** key to increase or decrease the desired workout distance. Press **ENTER/ MODE** key to confirm the setting. When console receives the RPM signal, **DISTANCE** will begin to count.
3. Start workout—
  - During workout, **DISTANCE** display will count **DOWN**, but **TIME/ CALORIES** will count UP.

**(C) TARGET CALORIES:**

1. In standby mode, press the Target key three times to light up **CALORIES**. Press the **ENTER/ MODE** key to confirm the selection. **CALORIES** will display 200 as initial value.
2. Press the **UP** and **DOWN** key to increase or decrease the desired calories burn. Press **ENTER/ MODE** key to confirm the setting. When console receives the RPM signal, **CALORIES** will begin to count.
3. Start workout—
  - During workout, **CALORIES** display will count **DOWN**, but **TIME/ DISTANCE** will count UP.

**(D) TARGET PULSE:**

1. In standby mode, press the Target key four times to light up **PULSE**. Press the **ENTER/ MODE** key to confirm the selection. **AGE** will light up and display 30 as initial value.
2. Press the **UP** and **DOWN** key to increase or decrease the **AGE** setting. Press **ENTER/ MODE** key to confirm the setting. When console receives the RPM signal, program begins to work.
3. Start workout—
  - During workout, **TIME/ DISTANCE/ CALORIES** will all count **UP**.

**Interval Program:**

In standby mode, press the Interval key once to light up **INTERVAL TIME**, **WORK TIME** will flash. Press the Interval key twice to light up **INTERVAL DISTANCE**, **DISTANCE** will flash. Press the Interval key three times to light up **INTERVAL CALORIES**, **CALORIES** will flash.

**(A) INTERVAL TIME:**

In standby mode, press the Interval key once to light up **INTERVAL TIME**, **WORK TIME** will flash. Press the **ENTER/ MODE** key, **ROUNDS** will flash and display 10 as initial value.

**1. ROUNDS:**

Press the **UP** and **DOWN** key to increase or decrease the desired workout rounds. Press **ENTER/ MODE** key to go next to **WORK TIME**.

**2. WORK TIME:**

**WORK TIME** flash and display 1:00 as initial value. Press the **UP** and **DOWN** key to increase or decrease the desired workout time. Press **ENTER/ MODE** key to go next to **REST TIME**.

**3. REST TIME:**

**REST TIME** flash and display 0:30 as initial value. Press the **UP** and **DOWN** key to increase or decrease the desired rest time. Press **ENTER/ MODE** key to confirm the setting. When console receives the RPM signal, program begins to work.

**4. START:**

**ROUNDS** display will count **DOWN**. Workout ends up until it counts down to 0.

**WORK TIME**, **REST TIME** and **ROUNDS** will count **DOWN**, but **DISTANCE/ CALORIES** will count **UP**.

**(B) INTERVAL DISTANCE:**

In standby mode, press the Interval key twice to light up **INTERVAL DISTANCE**, **DISTANCE** will flash. Press the **ENTER/ MODE** key, **ROUNDS** will flash and display 10 as initial value.

**1. ROUNDS:**

Press the **UP** and **DOWN** key to increase or decrease the desired workout rounds. Press **ENTER/ MODE** key to go next to **WORK DISTANCE**.

**2. WORK DISTANCE:**

**WORK DISTANCE** will flash and display 5.00 km or 3.10 ml as initial value. Press the **UP** and **DOWN** key to increase or decrease the desired workout distance. Press **ENTER/ MODE** key to go next to **REST TIME**.

**3. REST TIME:**

**REST TIME** flash and display 0:30 as initial value. Press the **UP** and **DOWN** key to increase or decrease the desired rest time. Press **ENTER/ MODE** key to confirm the setting. When console receives the RPM signal, program begins to work.

**4. START:**

**ROUNDS** display will count **DOWN**. Workout ends up until it counts down to 0.

**(C) INTERVAL CALORIES:**

In standby mode, press the Interval key three times to light up **INTERVAL CALORIES**, **CALORIES** will flash. Press the **ENTER/ MODE** key, **ROUNDS** will flash and display 10 as initial value.

**1. ROUNDS:**

Press the **UP** and **DOWN** key to increase or decrease the desired workout rounds. Press **ENTER/ MODE** key to go next to **WORK CALORIES**.

**2. WORK CALORIES:**

**WORK CALORIES** will flash and display 200 as initial value. Press the **UP** and **DOWN** key to increase or decrease the desired workout calories. Press **ENTER/ MODE** key to go next to **REST TIME**.

**3. REST TIME:**

**REST TIME** flash and display 0:30 as initial value. Press the **UP** and **DOWN** key to increase or decrease the desired rest time. Press **ENTER/ MODE** key to confirm the setting. When console receives the RPM signal, program begins to work.

**4. START:**

- **ROUNDS** display will count **DOWN**. Workout ends up until it counts down to 0.