


STEP 1

Use a 3mm hex wrench to
remove the bolts

3mm

Bolt, M5×0.8×10L

Square Cover


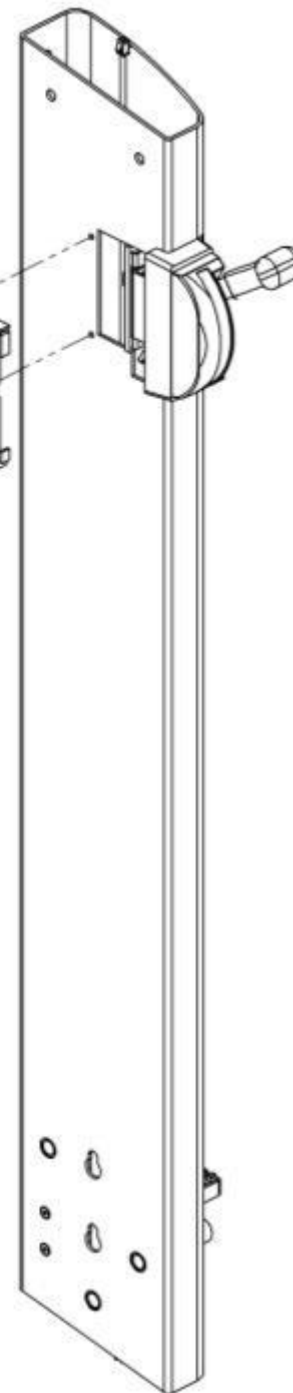


STEP 2

Customized 10mm



Use a 10mm open spanner (we special hand make and provided tool) to remove the nut at the lower end of the cable

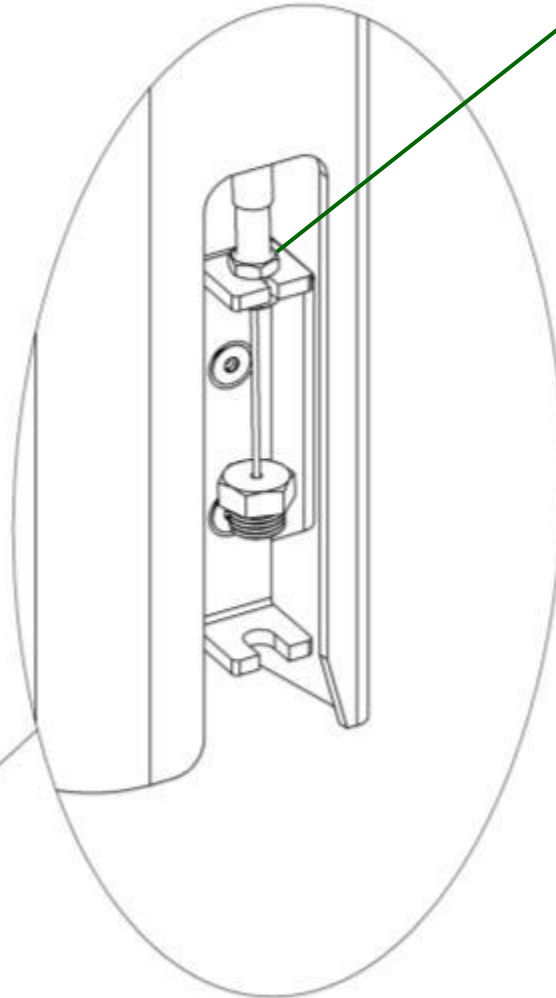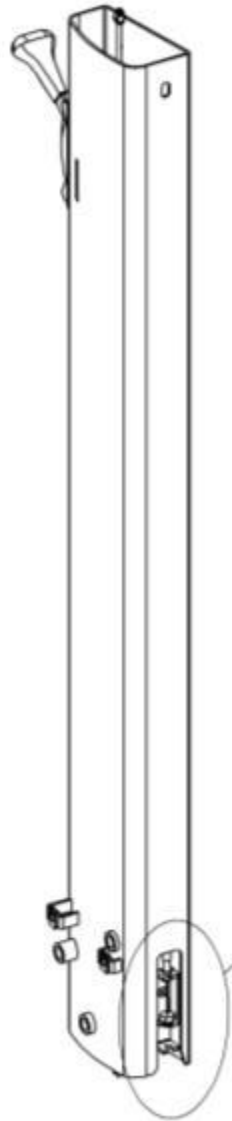

DETAIL B
SCALE 1 : 1



STEP 3

