




MASTERKRAFT

Assembly Instructions

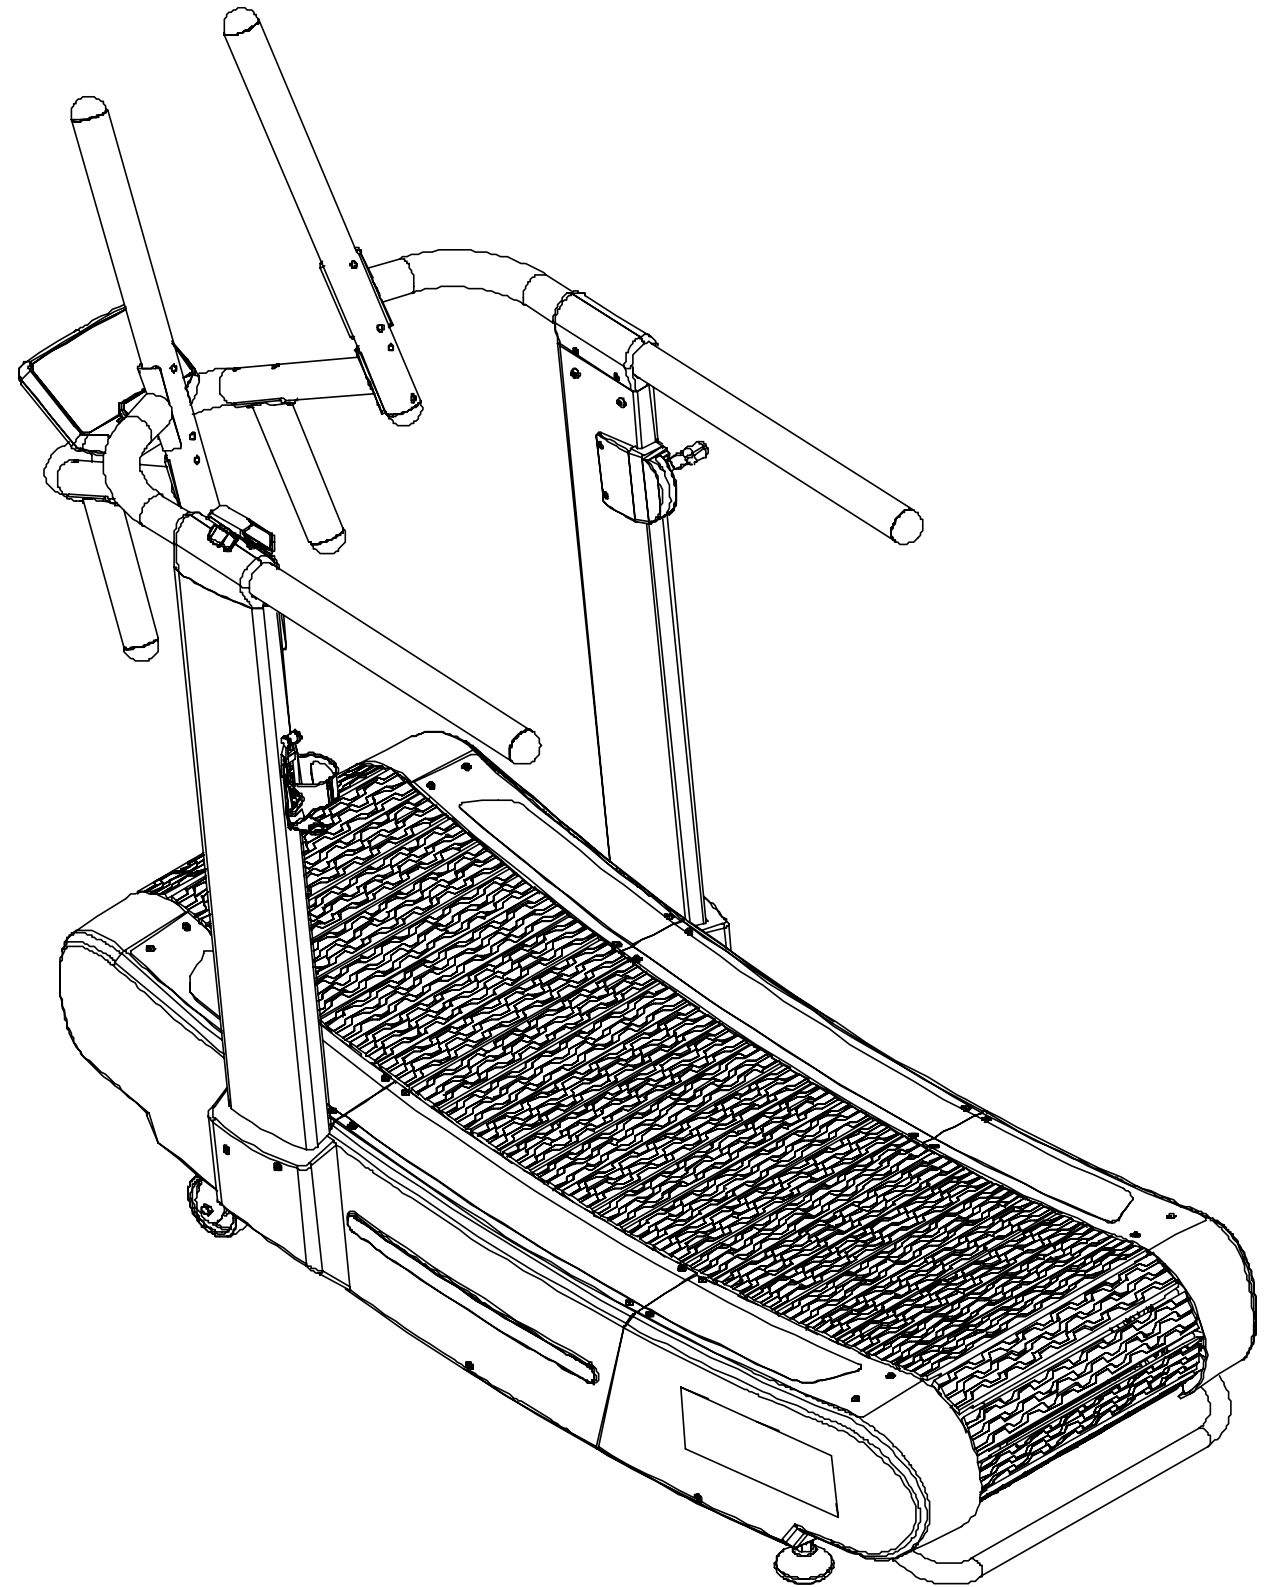


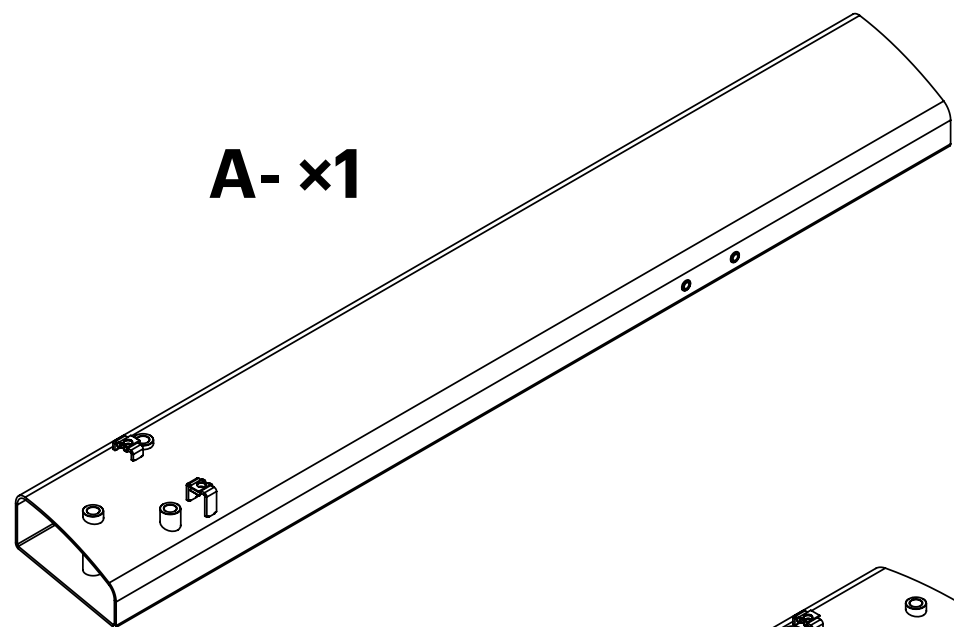


A- x1

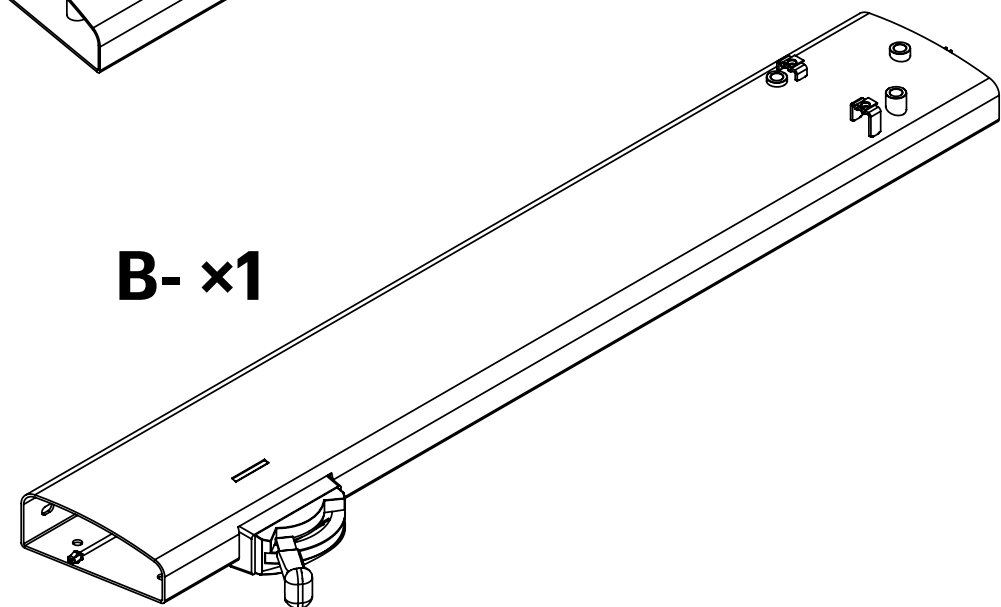


B- x1

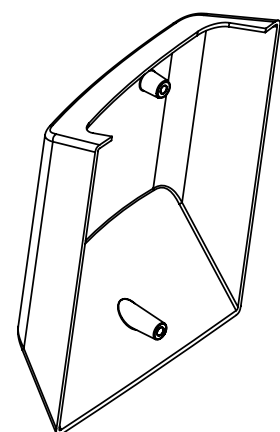


I- x1

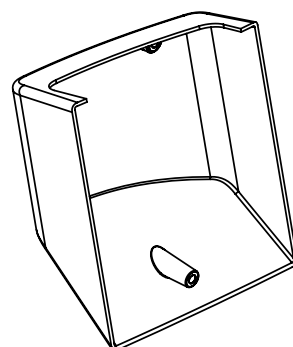


J- x1

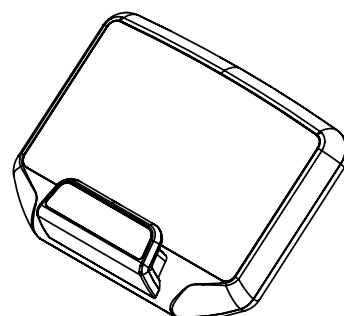


K- x1

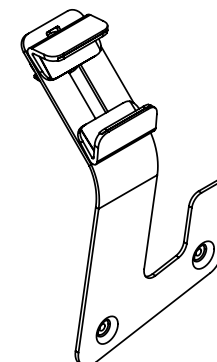


L- x1

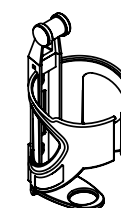


M- x1

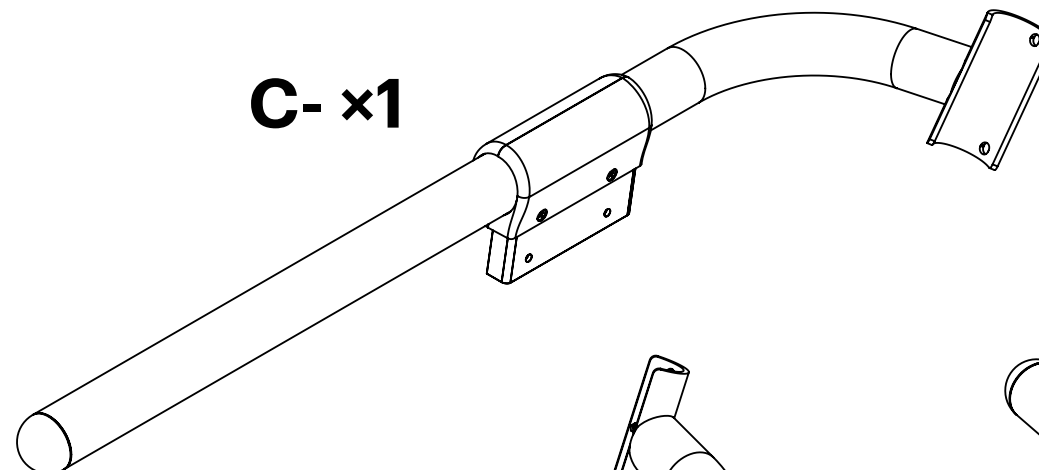


C- x1

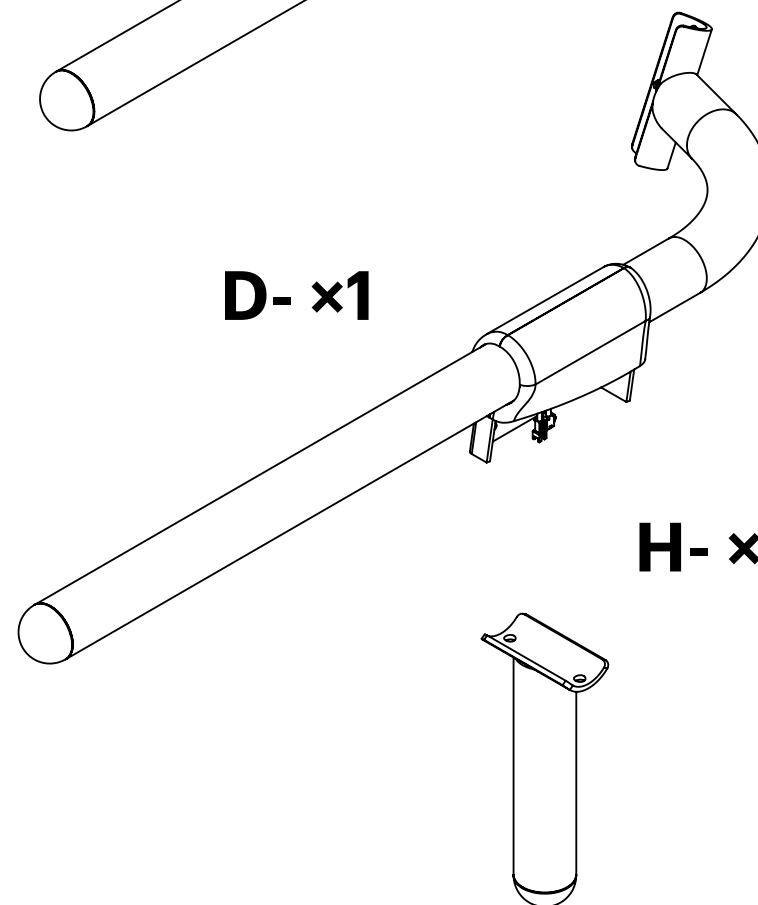


D- x1

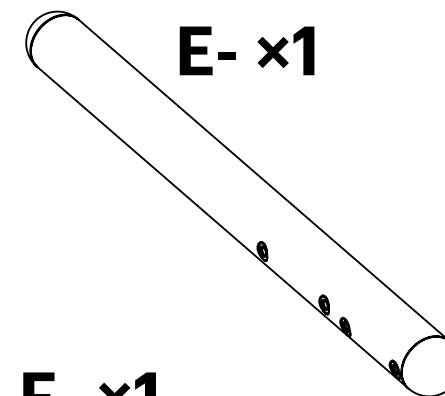


E- x1

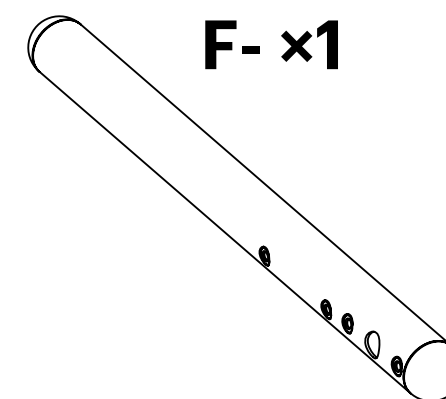

F- x1

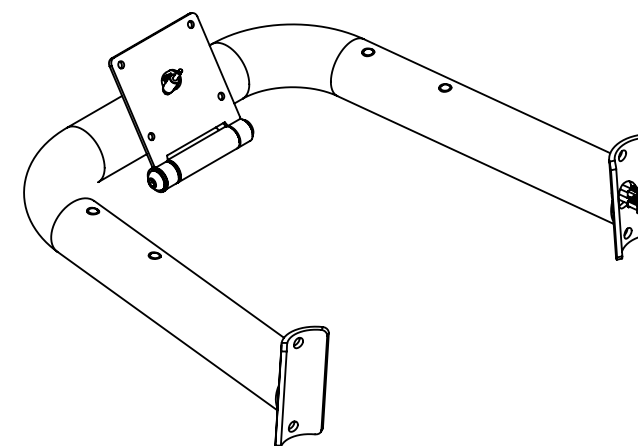


G- x1

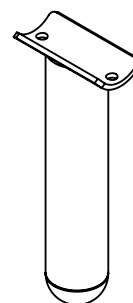

H- x2

6- M10×90L AA

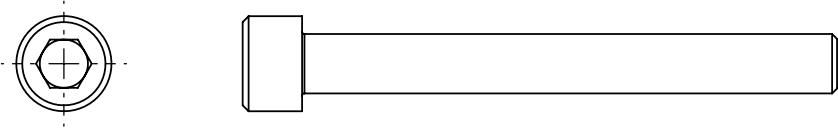

6- Ø18×Ø10.5×1.5t BB



8- Ø20×Ø8.3×2t CC



8- M8×20L DD



10- M8×12L EE




2- M5×16L FF



2- M5×25L GG



2- M5×30L HH



2- M5×16L II




6- M5×12L JJ



8MM PP



14/12MM QQ

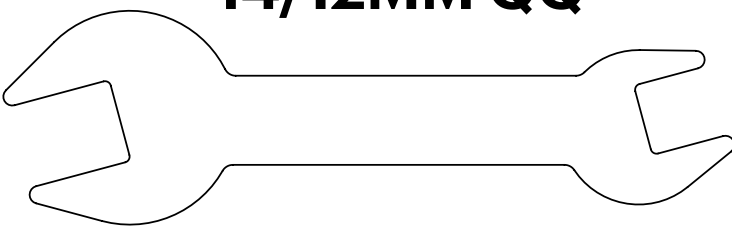

3MM OO




4MM NN



5MM MM





6MM LL

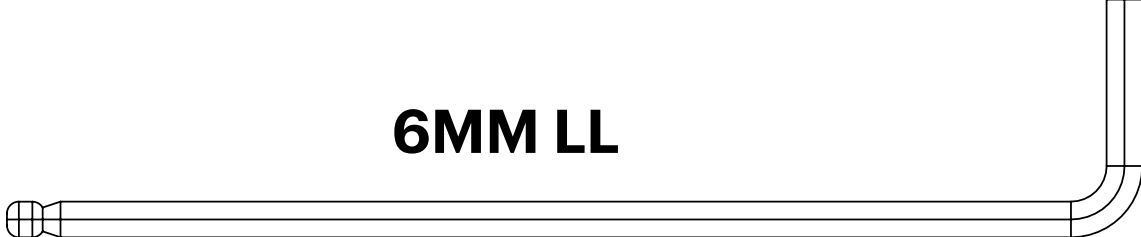

8MM KK




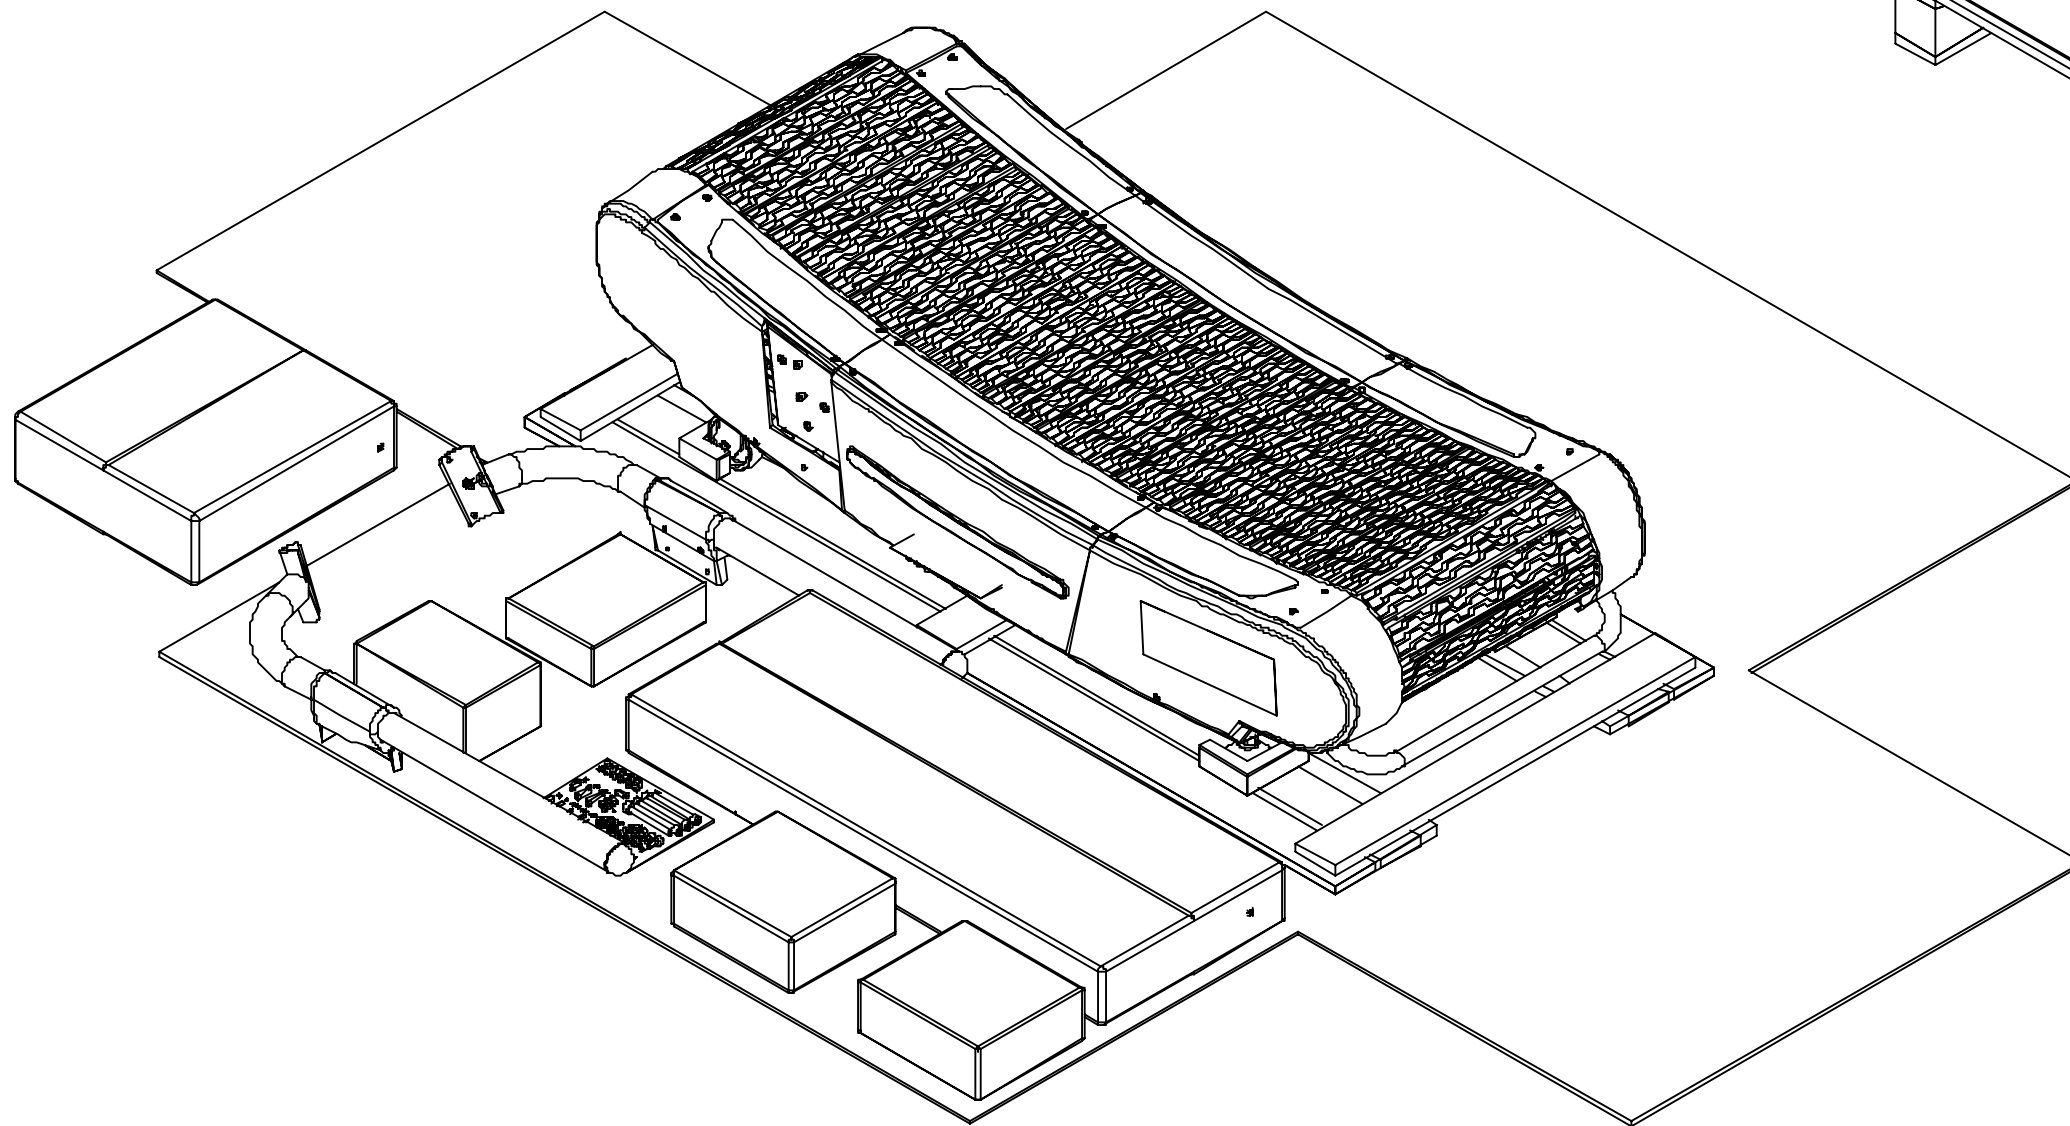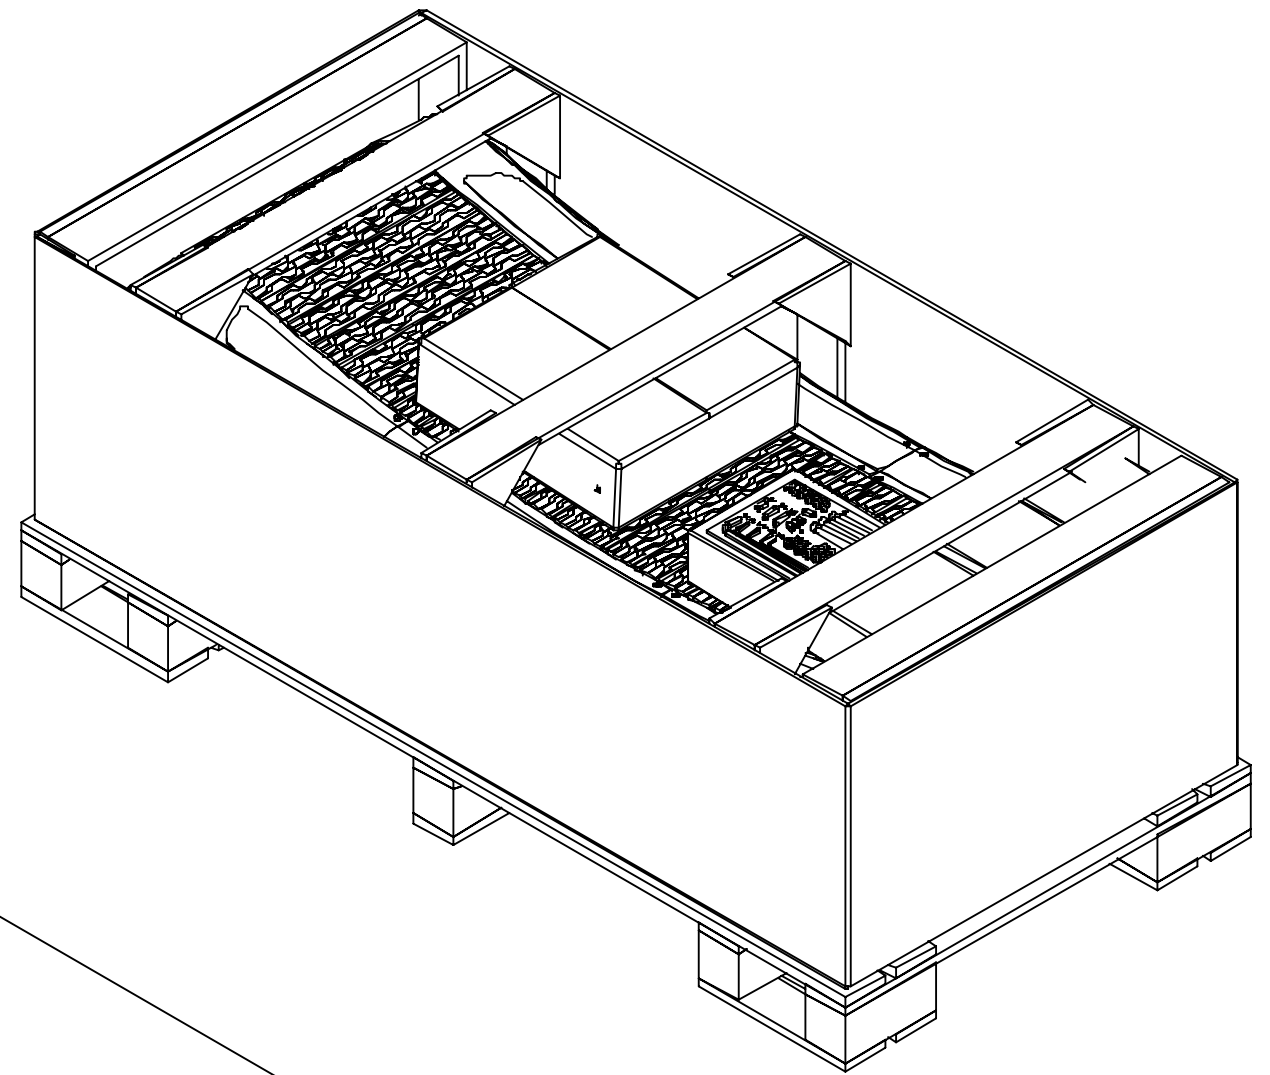


FRONT




8MM KK


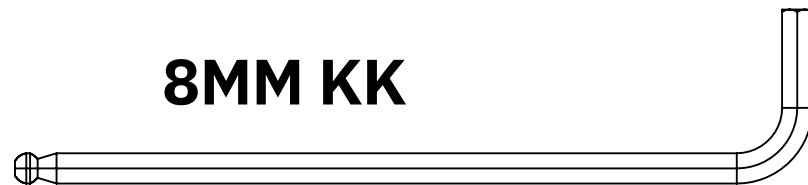


3- M10×90L AA



3- Ø18×Ø10.5×1.5t BB

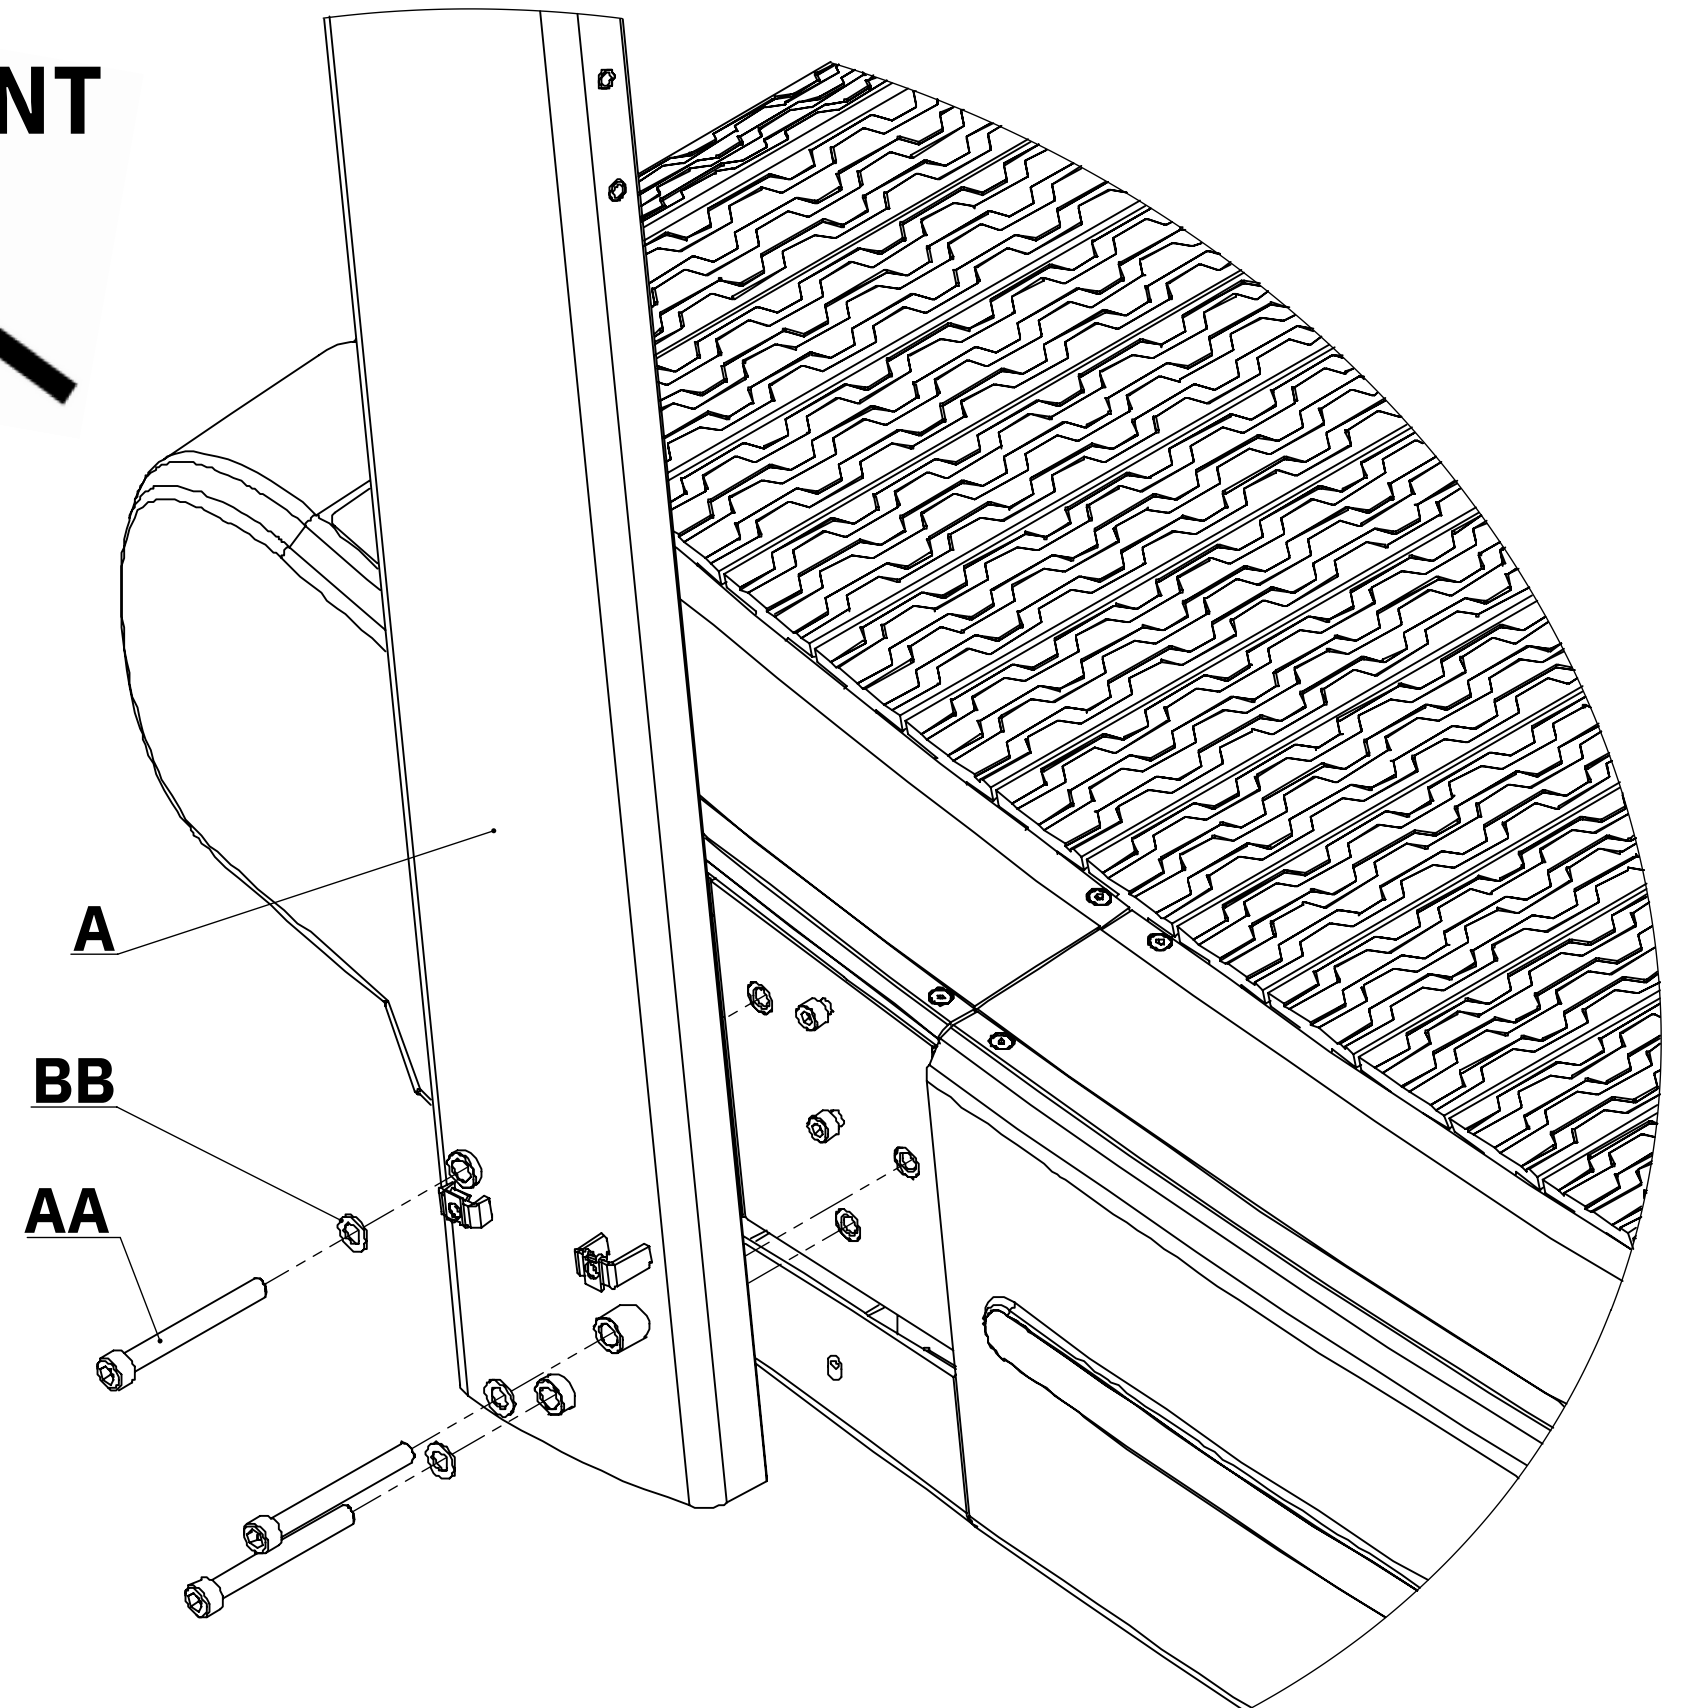

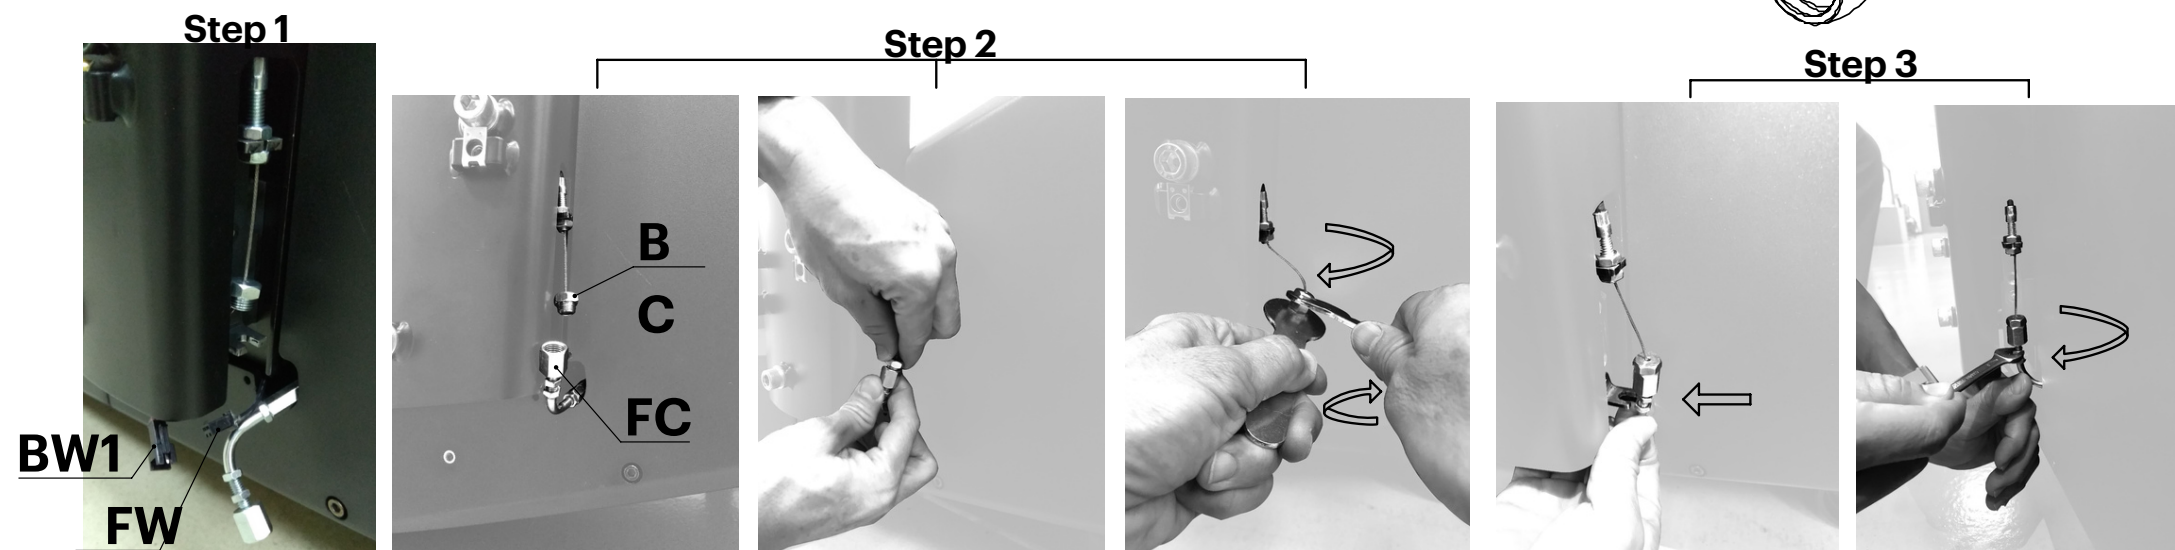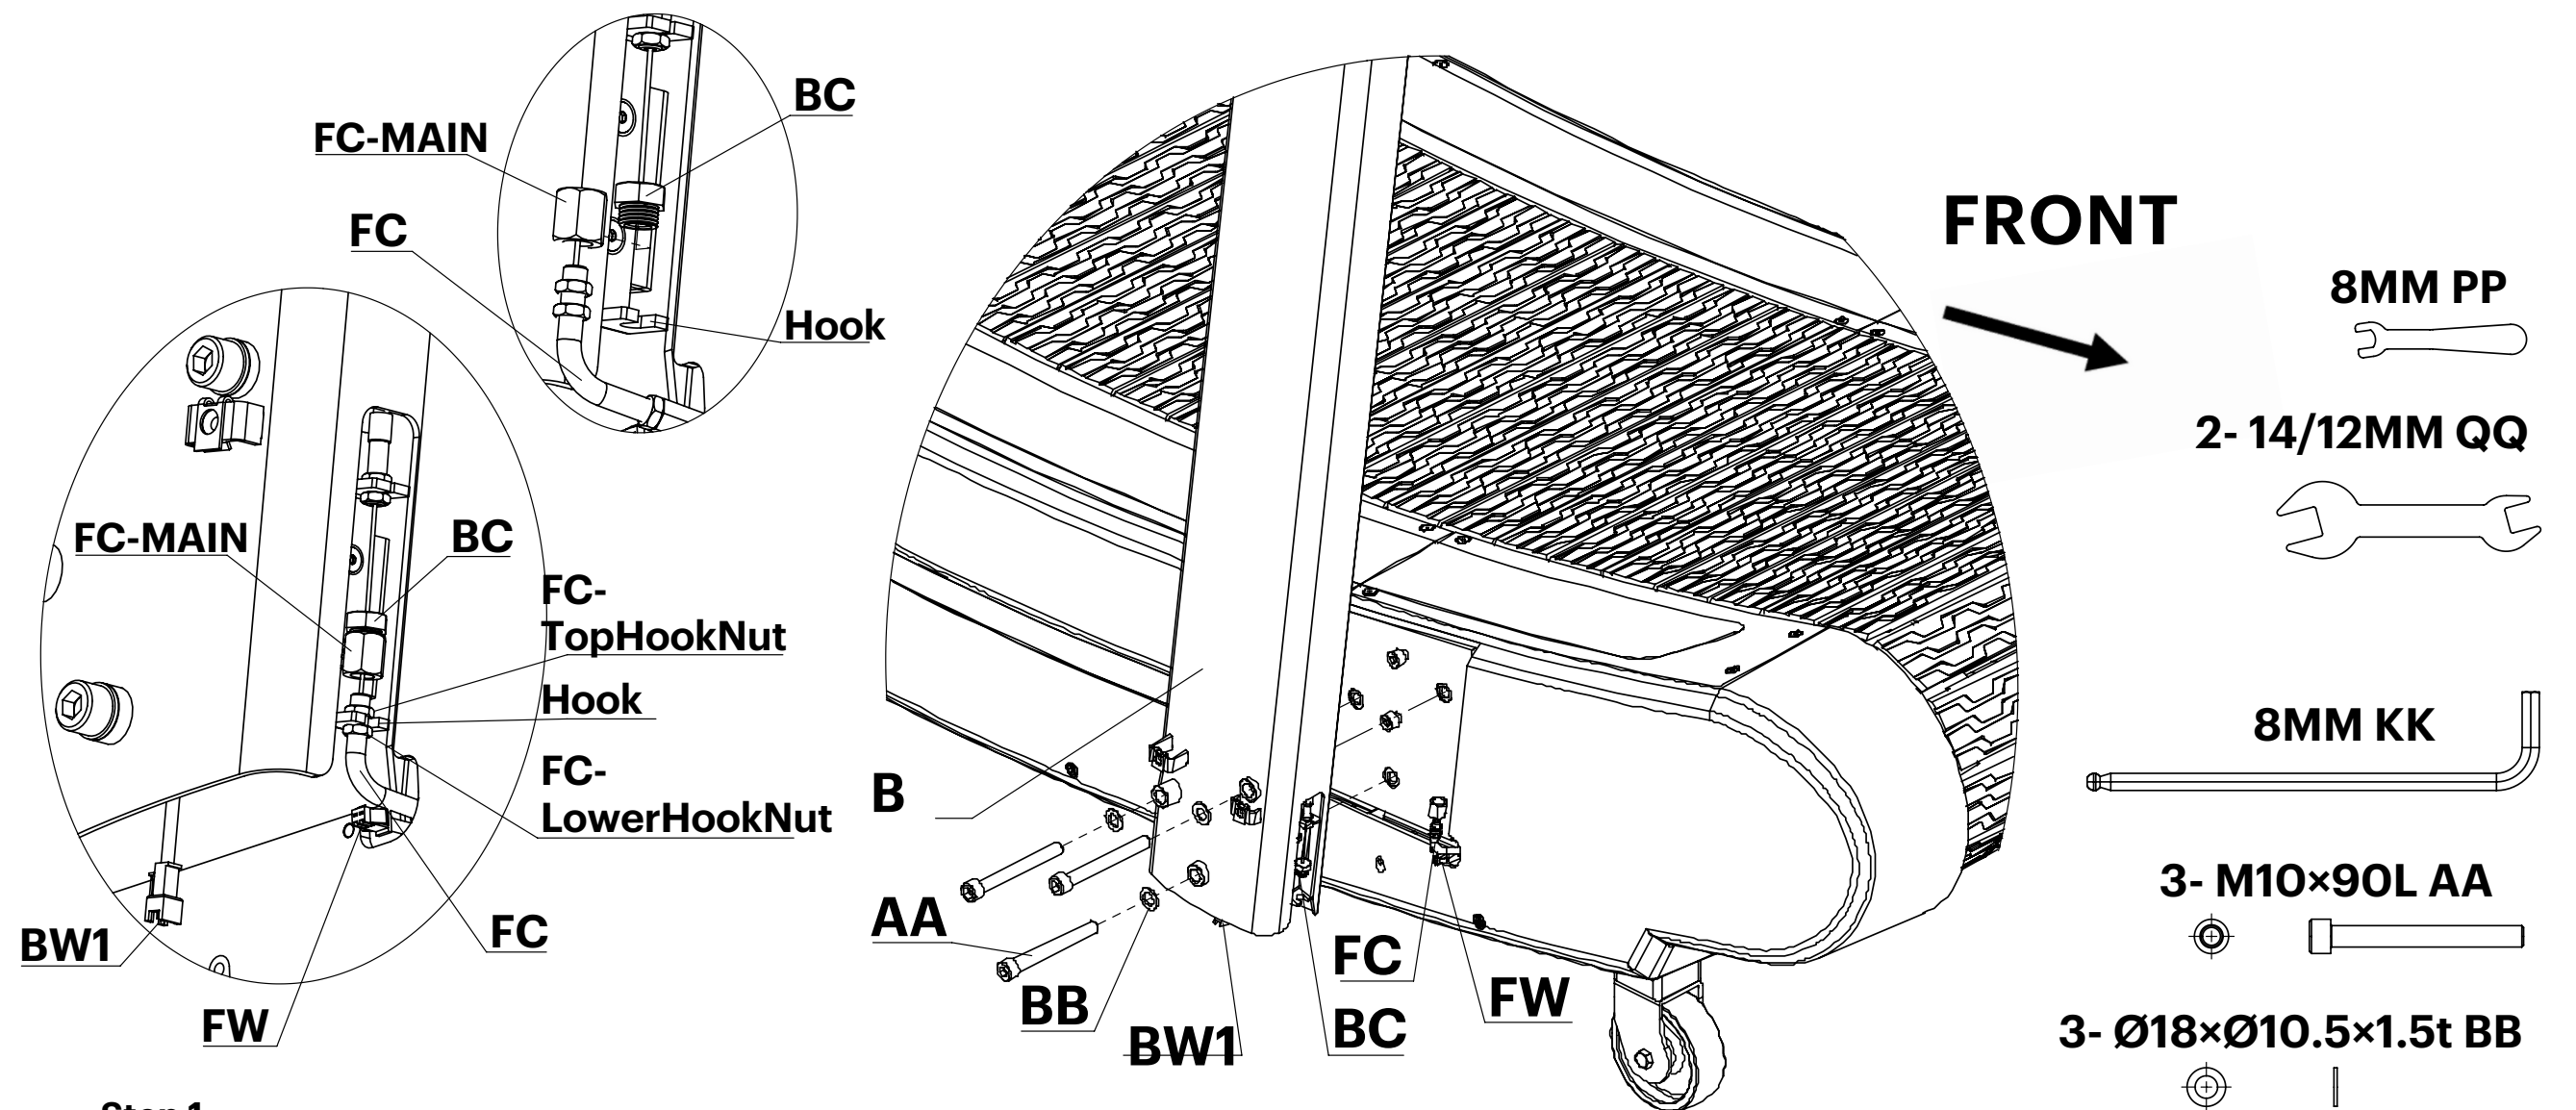


****Before These Steps - Make sure the AirPlus Lever on the (B) right handle tube is set to Level 1.**


Step 1 - Connect BW1 to FW.

Step 2 - Connect BC to FC and use both 12mm & 8mm wrench to tighten the FC-MAIN nut to the nut on BC.

Step 3 - Fix FC to Hook by placing FC-TopHookNut on top-side of Hook and FC-LowerHookNut on bottom-side of Hook. Then, use 8mm wrench to tighten FC-TopHookNut so that it's tightened and resting on top-side of Hook.

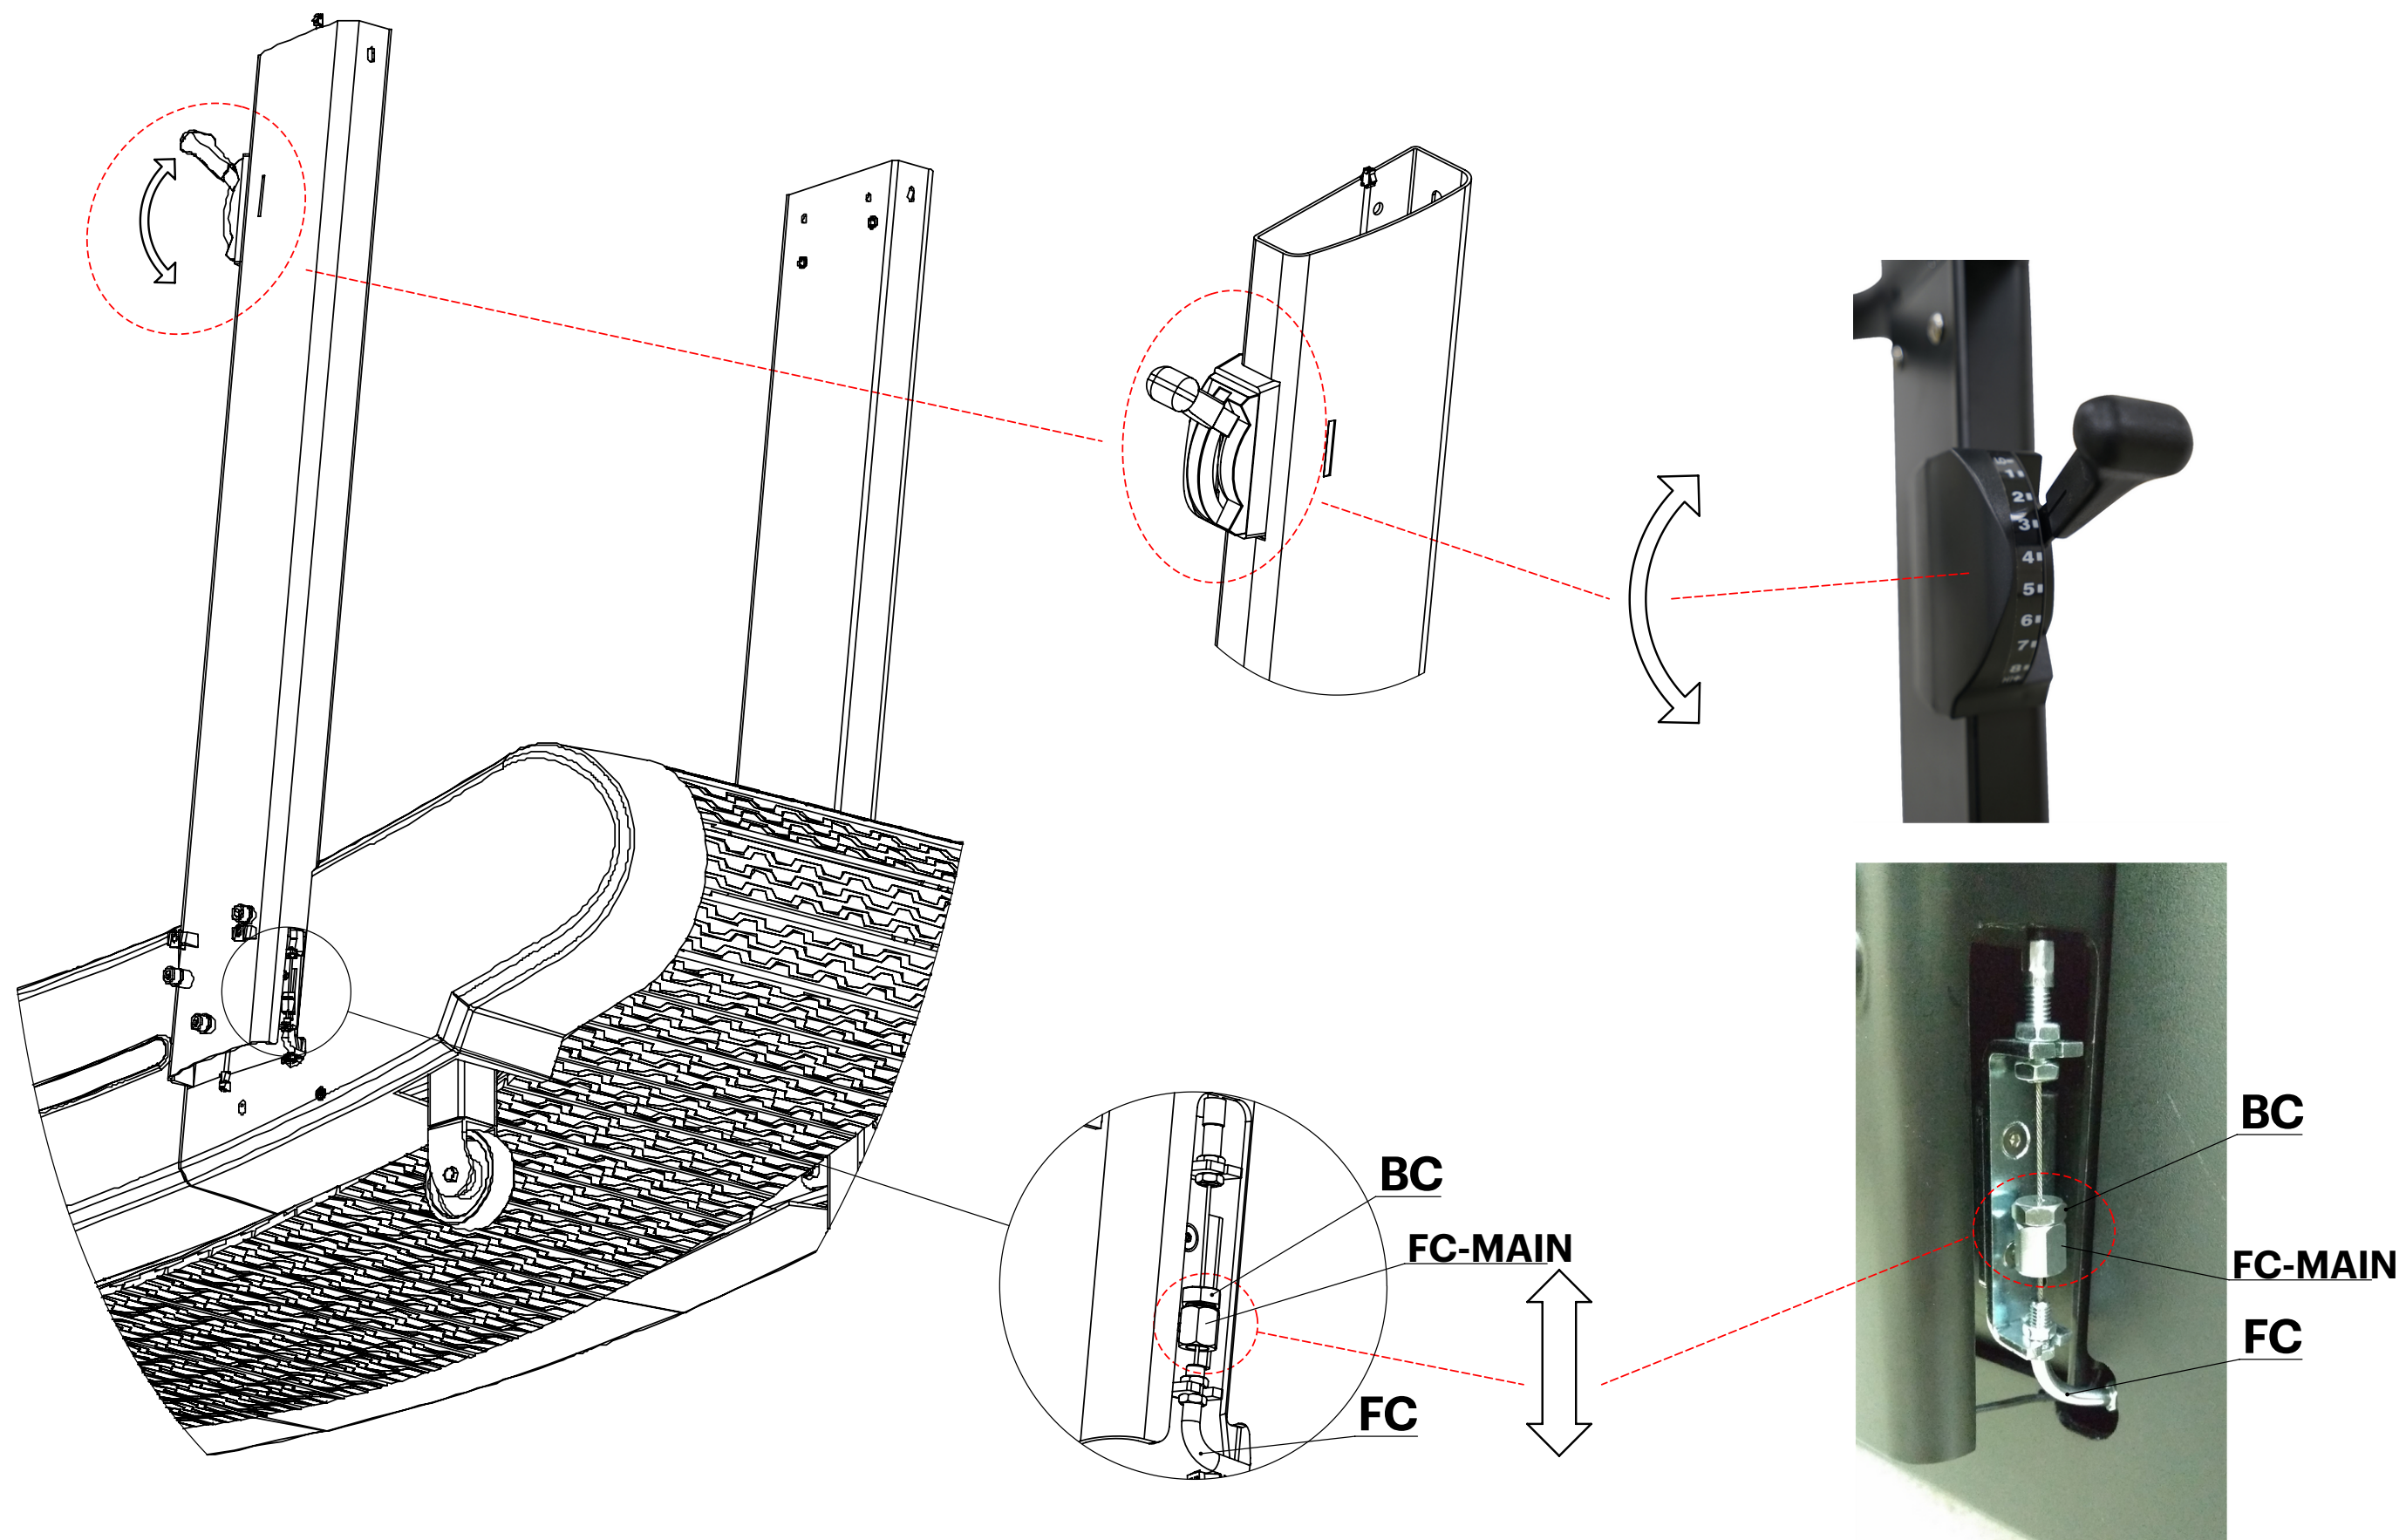

Once completed the connection of BC to FC and fixed FC to HOOK, make sure the resistance can be adjusted properly. Testing the resistance level from 1 to 8. If it's set-up properly, FC-TopHookNut and FC-LowerHookNut does not move when adjusting resistance, only BC/FC-MAIN moves up and down together.

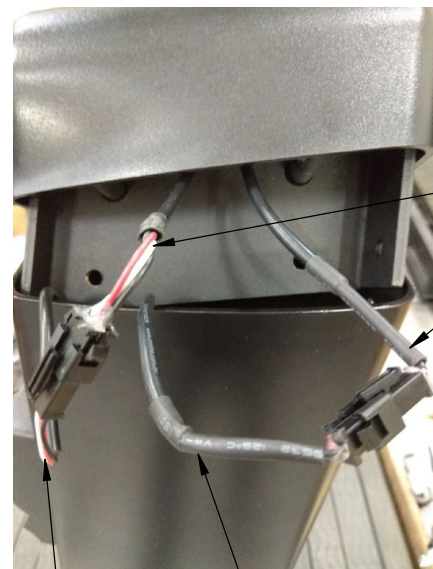

DW1

DW2

BW1

BW2

DW1

DW2

BW1

BW2

EE

D

C

EE

FRONT




5MM JJ



6- M8×12L EE



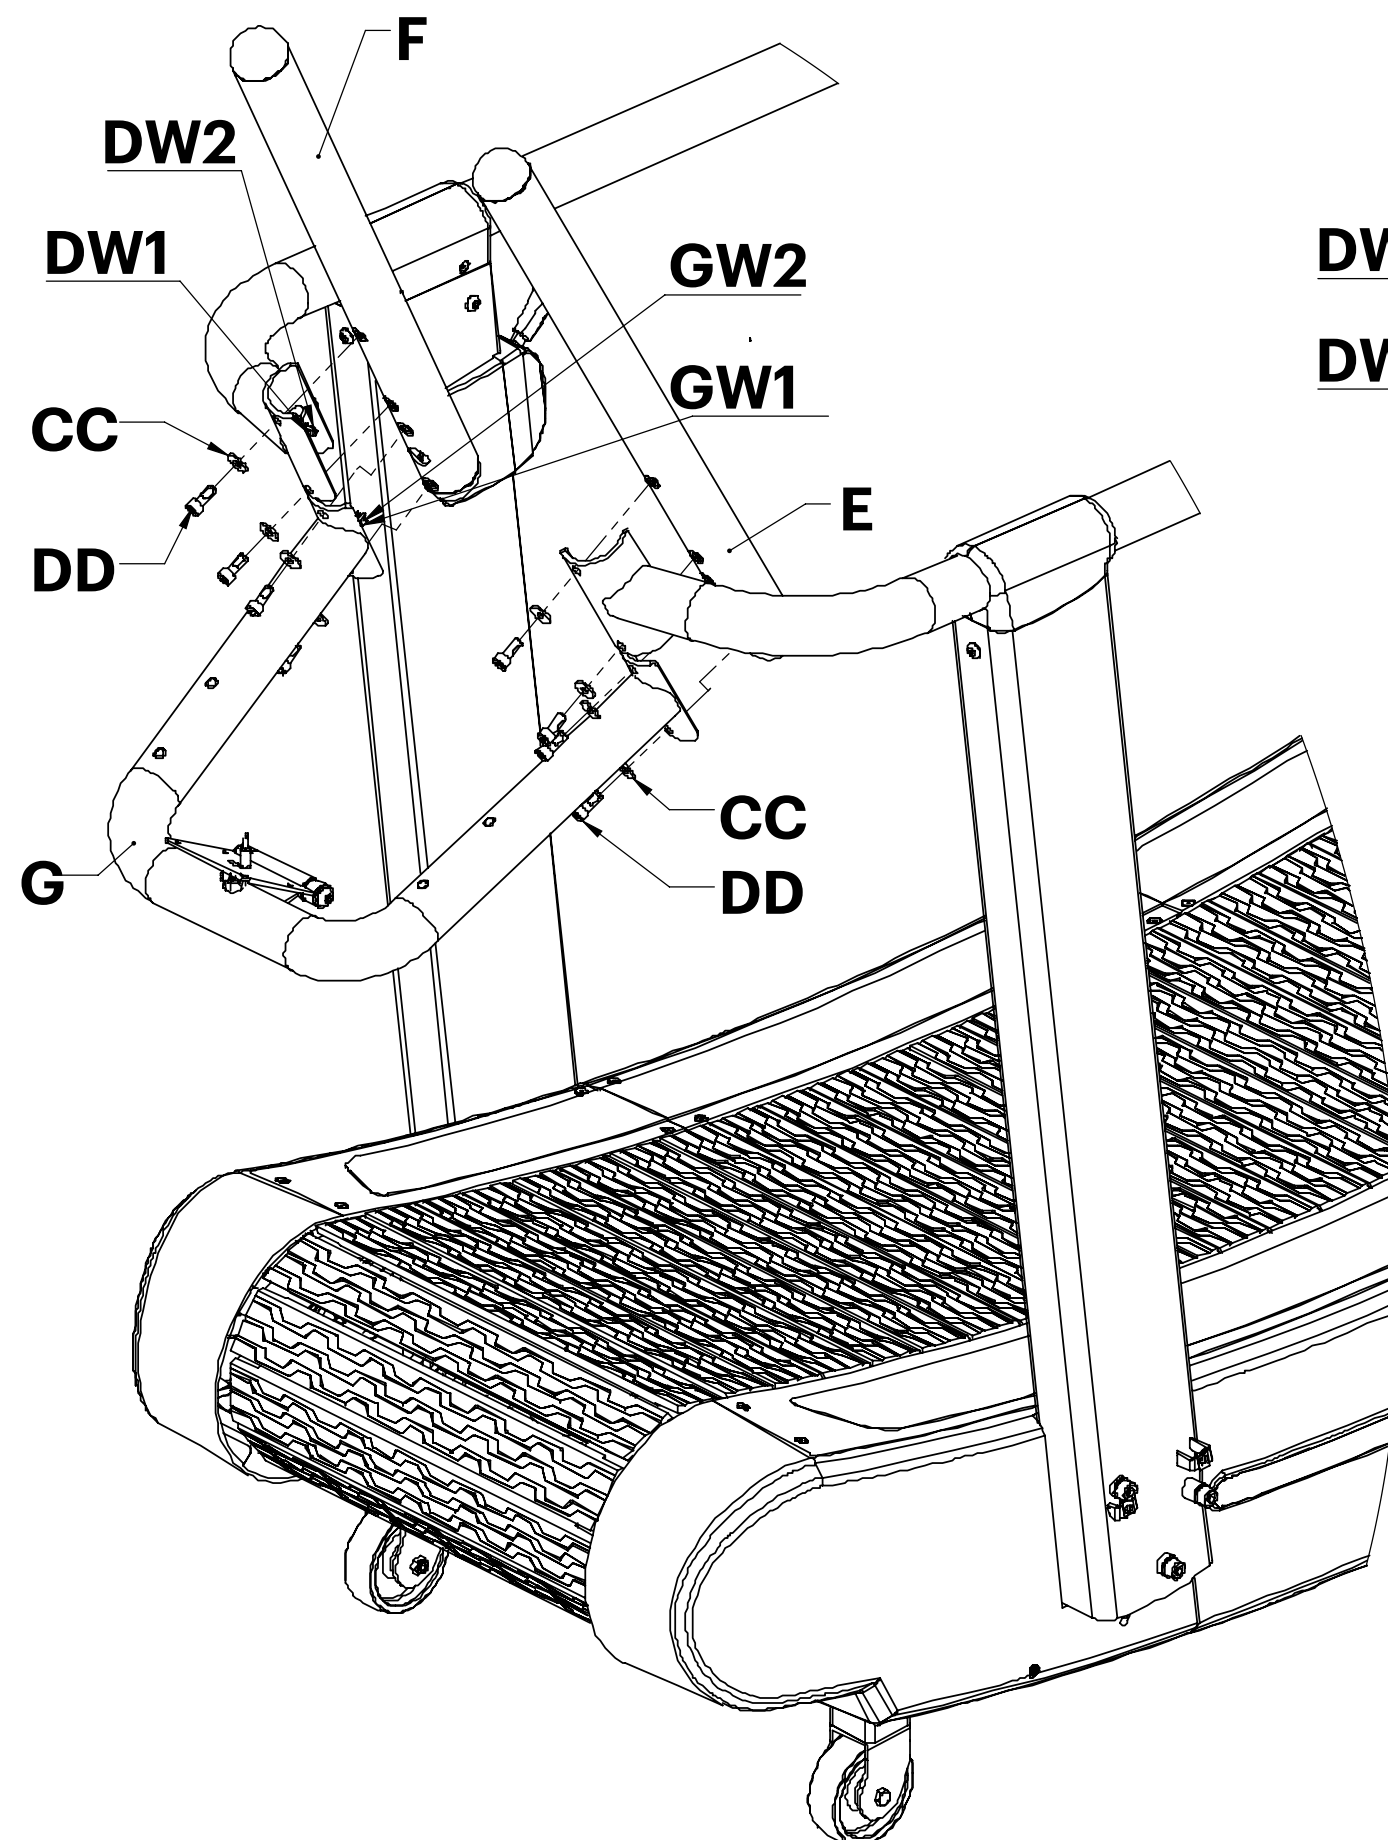

DW2

DW1



DW2

DW1



6MM LL



8- M8×20L DD



8- Ø20×Ø8.3×2t CC




DW1

DW2

GW2

GW1




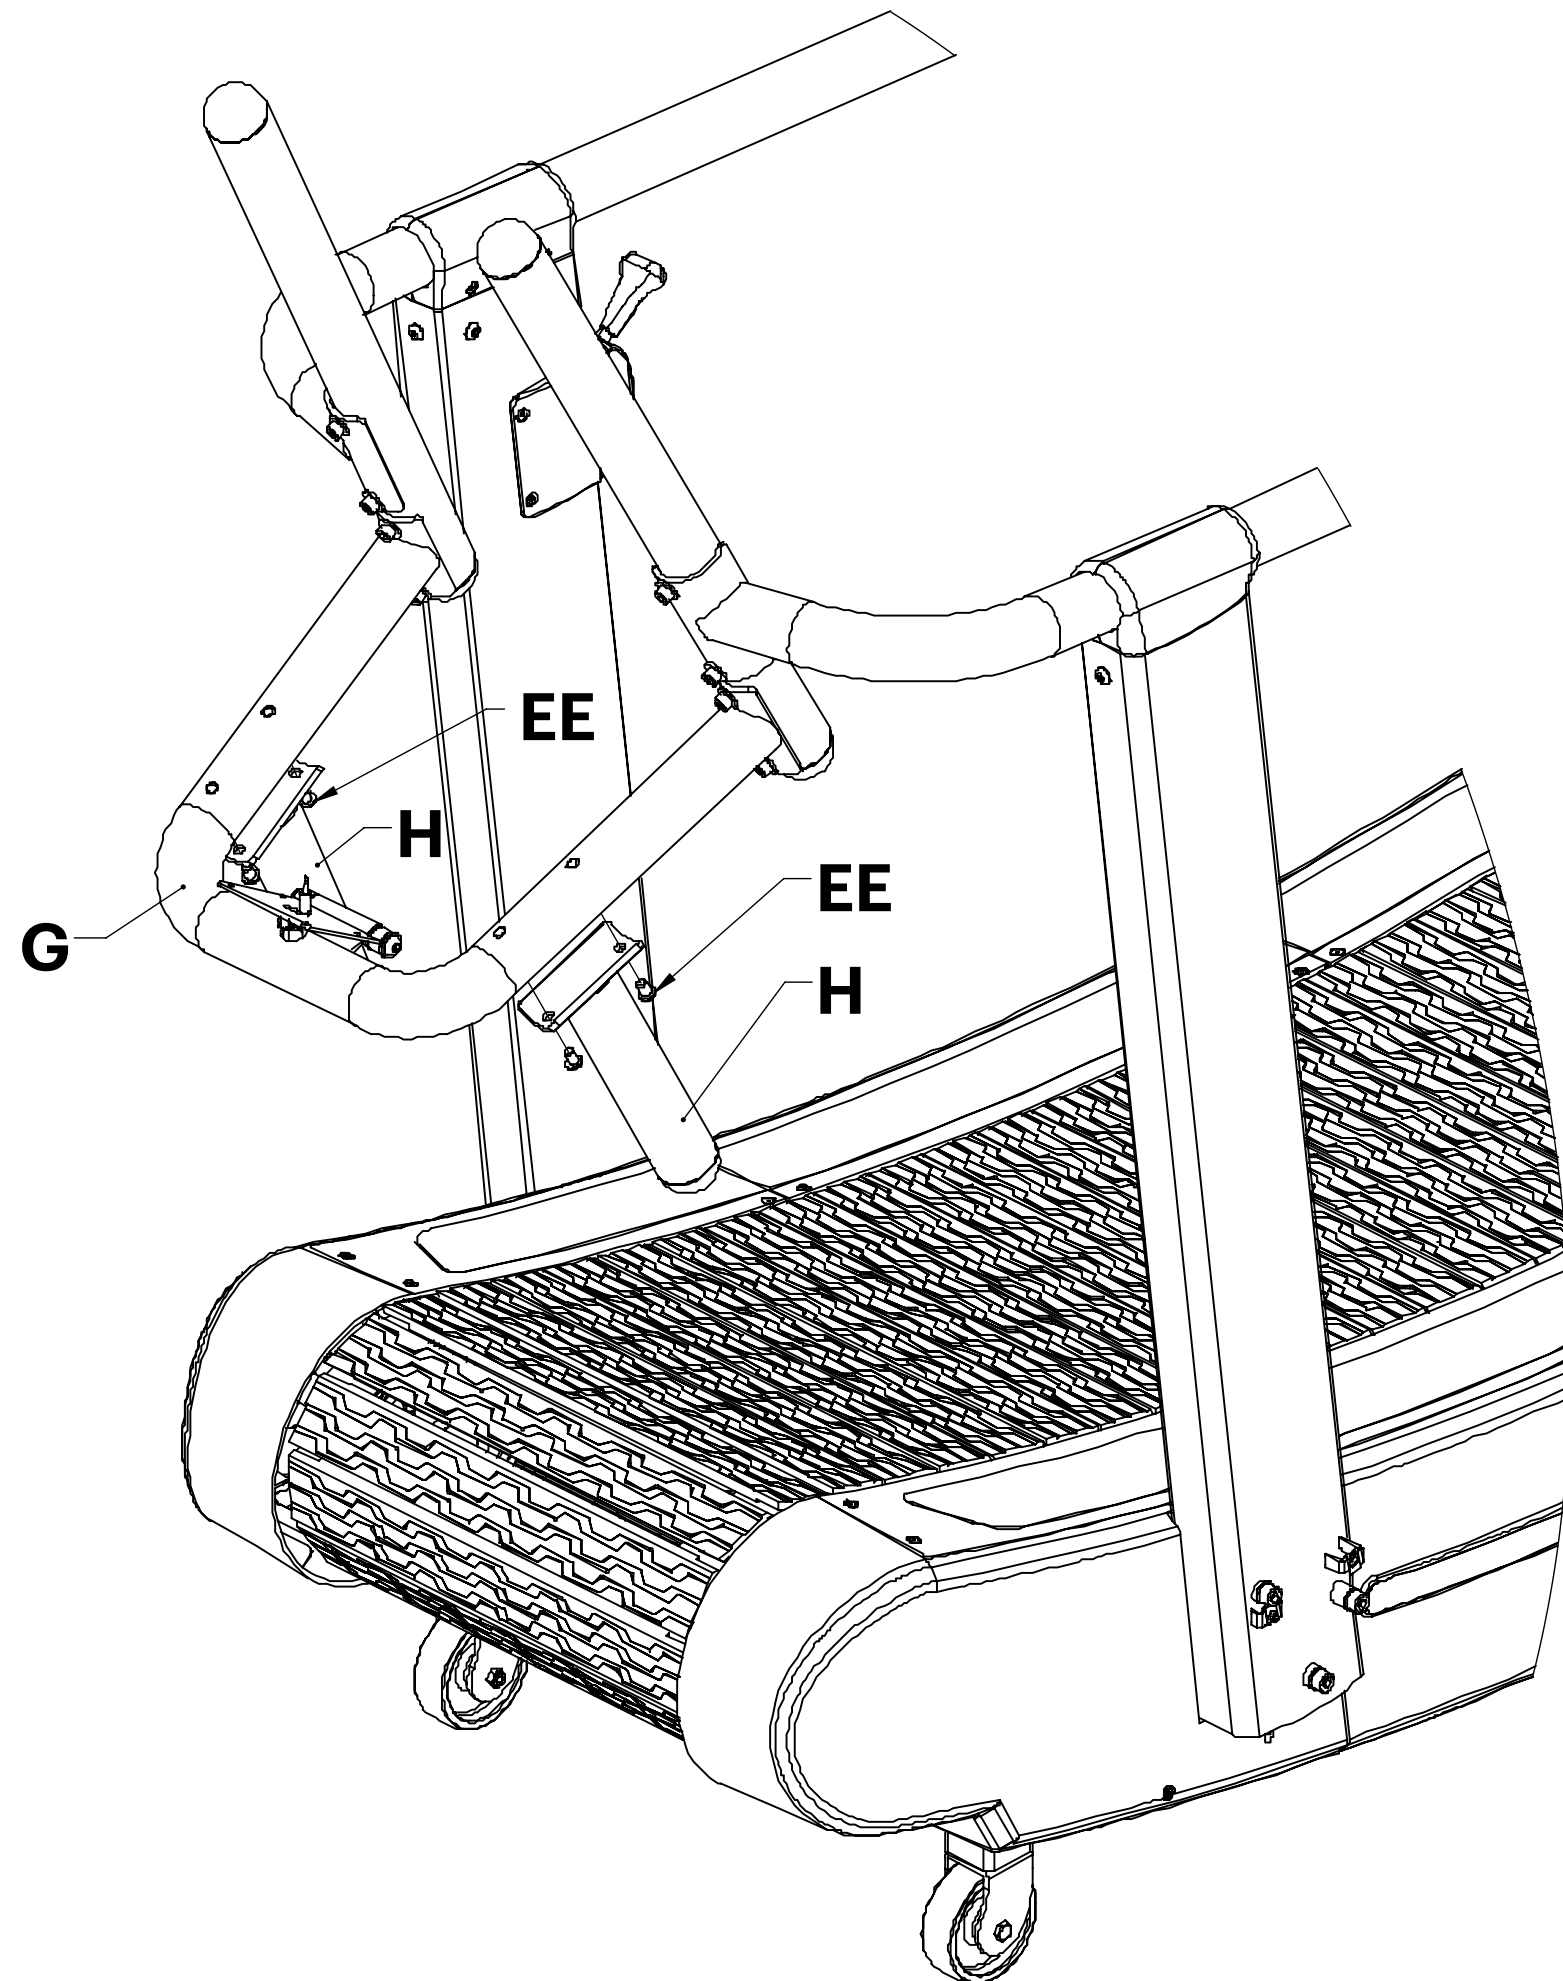


5MM MM



4- M8×12L EE



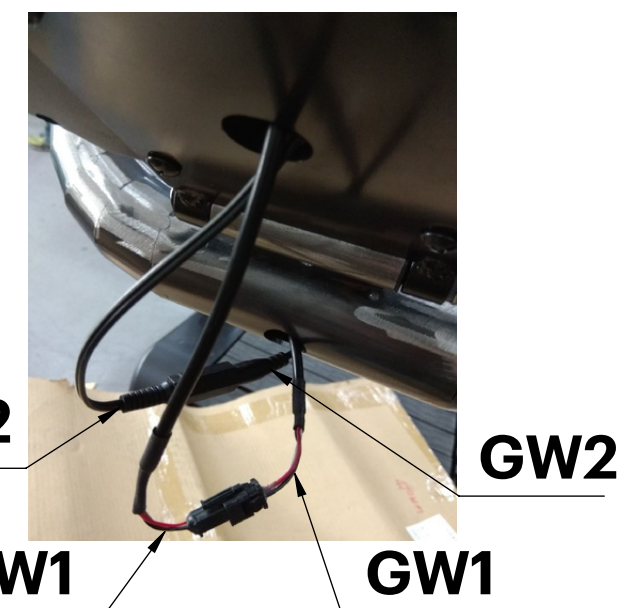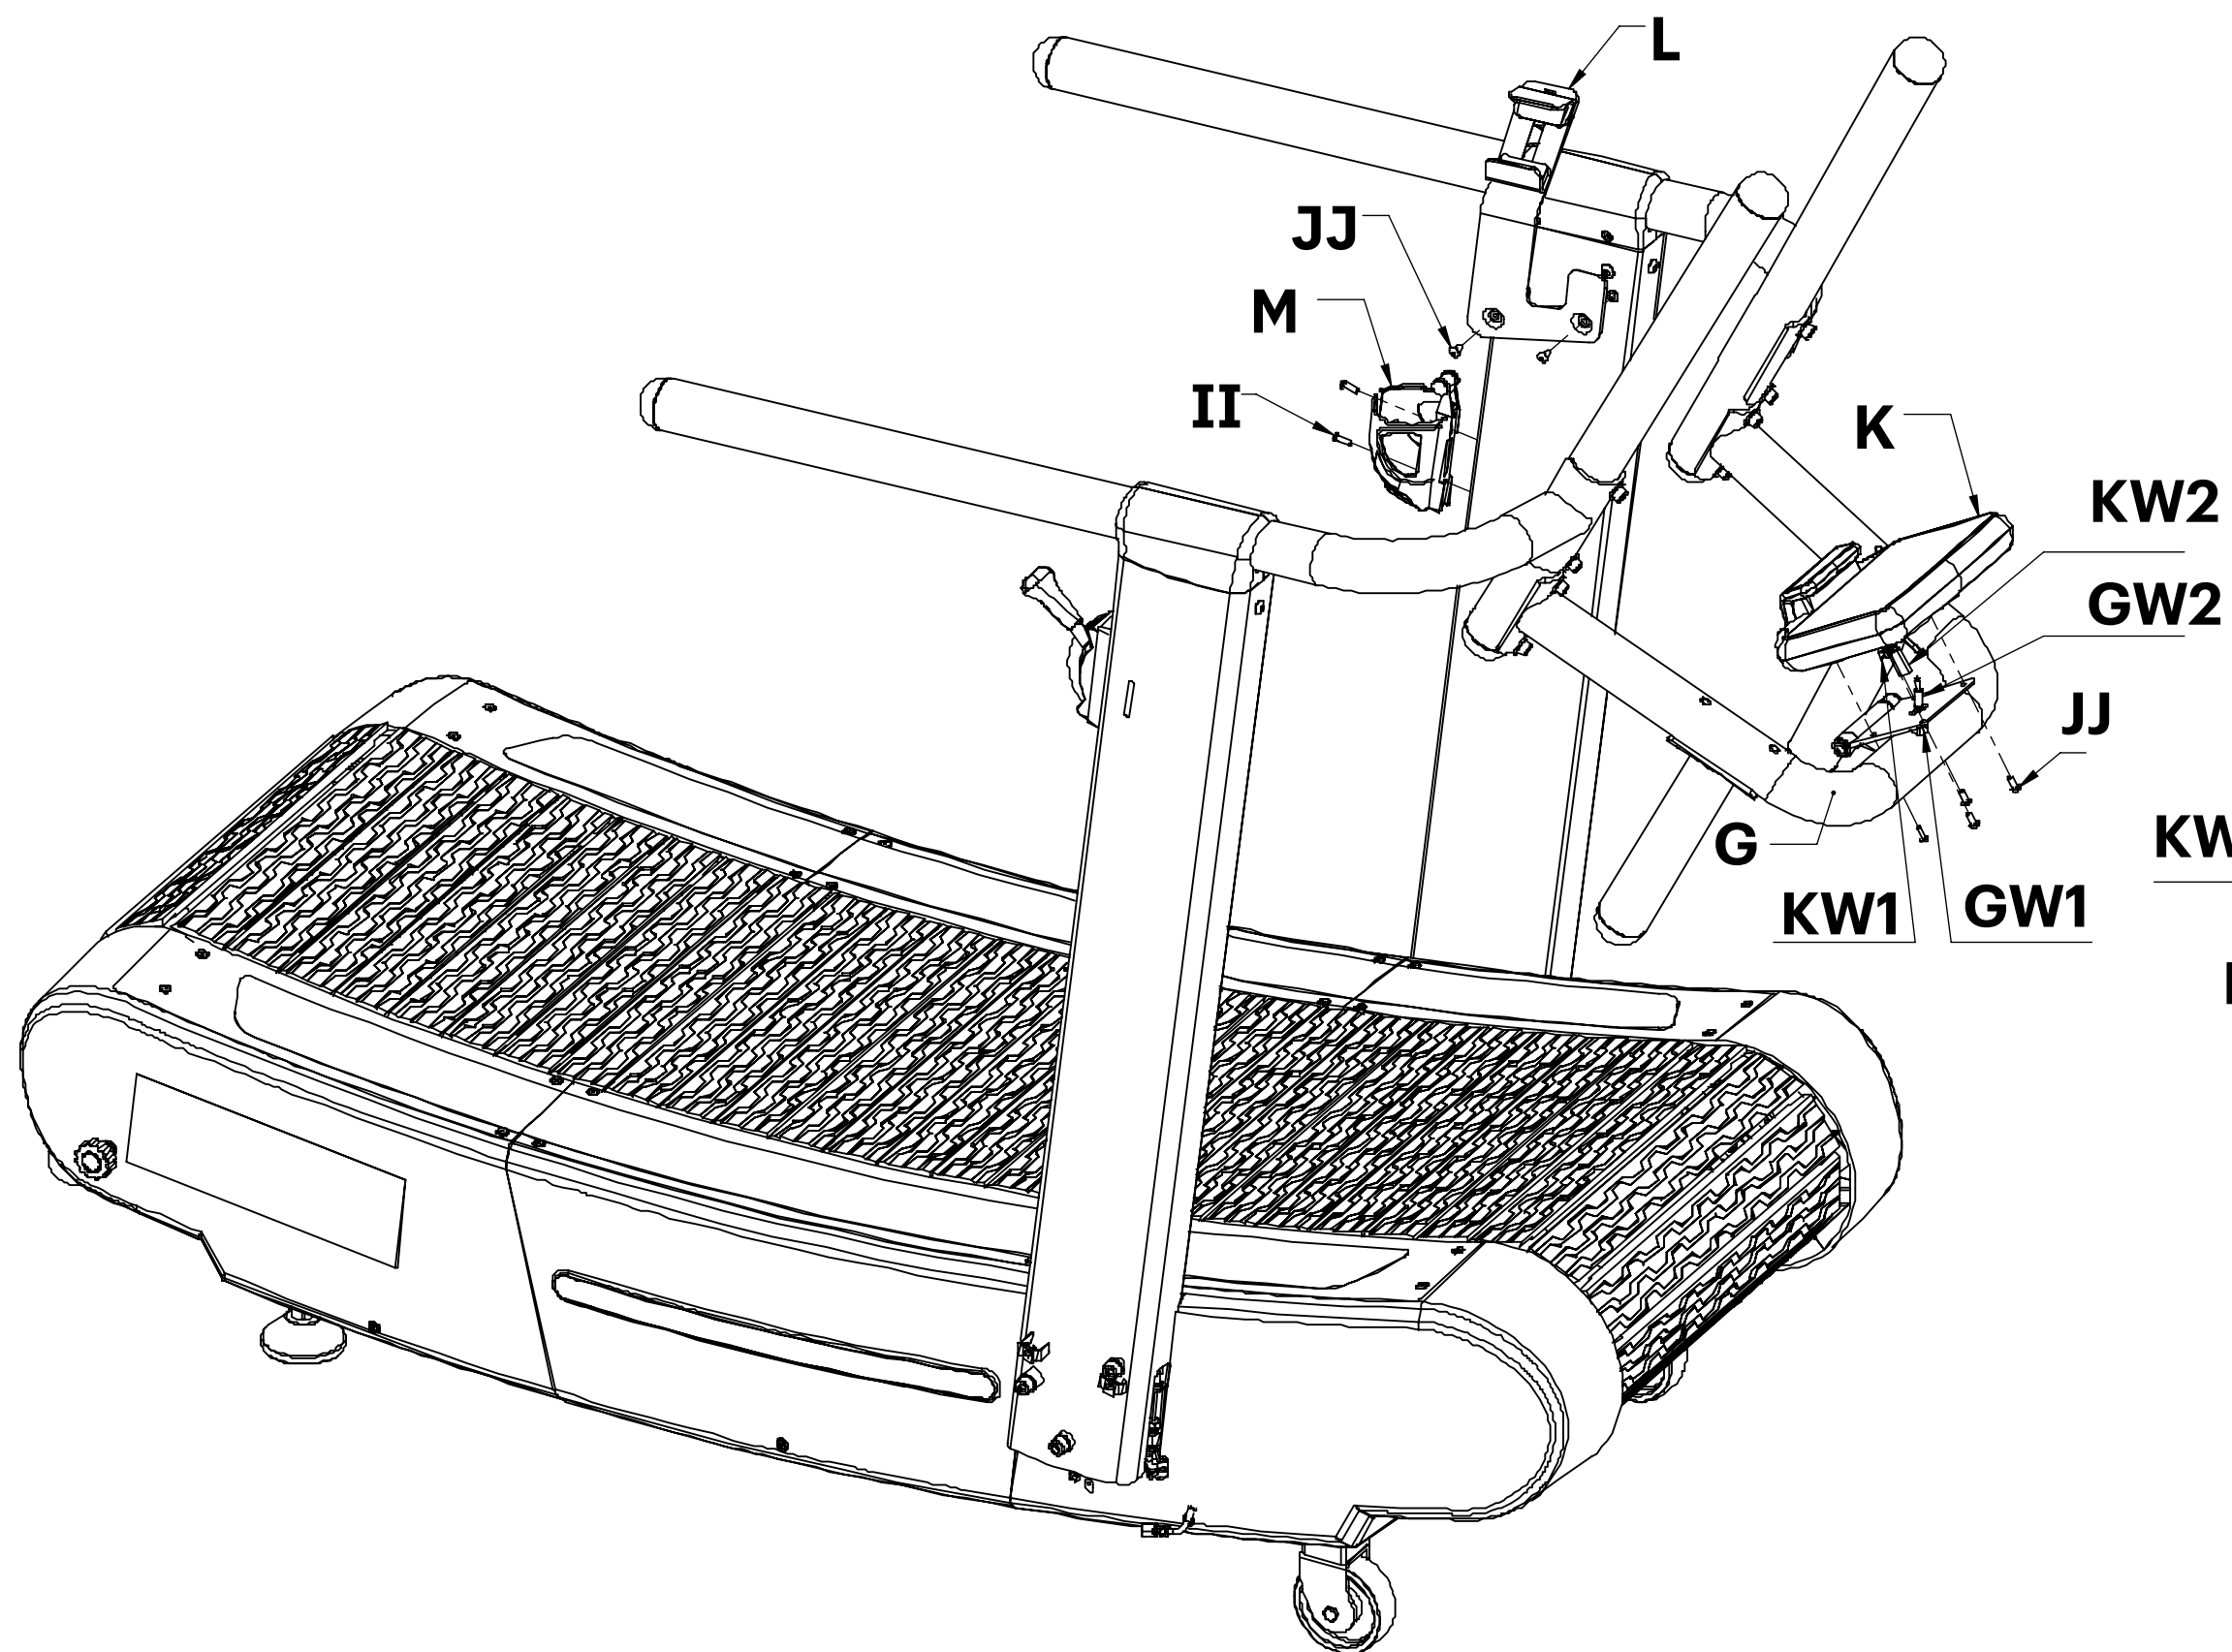

3MM OO



2- M5×16L II



6- M5×12L JJ



